Form Number 3358-419 Rev B

22in Recycler® Lawn Mower

Model No. 20089 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Deck, Side Chute and Rear Door Assembly	3
Front Axle Assembly	4
Rear Axle and Transmission Assembly	5
Transmission Assembly No. 106-3956	6
Engine and Blade Assembly	7
Handle Assembly	8
Electrical Assembly	9
Rear Bag Assembly	10
Cylinder Assembly Briggs and Stratton 126L05-0213-F1	11
Crankshaft Assembly Briggs and Stratton 126L05-0213-F1	12
Crankcase Assembly Briggs and Stratton 126L05-0213-F1	13
Carburetor Assembly Briggs and Stratton 126L05-0213-F1	14
Air Cleaner Assembly Briggs and Stratton 126L05-0213-F1	15
Governor Assembly Briggs and Stratton 126L05-0213-F1	16
Muffler and Fuel Tank Assembly Briggs and Stratton 126L05-0213-F1	17
Blower Housing Assembly Briggs and Stratton 126L05-0213-F1	18
Starter Assembly Briggs and Stratton 126L05-0213-F1	19
Engine Gasket Set Briggs and Stratton 126L05-0213-F1	20
Carburetor Overhaul Kit Briggs and Stratton 126L05-0213-F1	21
Attachments and Accessories List	22

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

❸ Obtain from your local Briggs & Stratton dealer

❹ Included in Carburetor Overhaul Kit (Ref. No. 121)

❺ Included in Engine Gasket Set (Ref. No. 358)


❻ Included in Carburetor Gasket Set (Ref. No. 977)

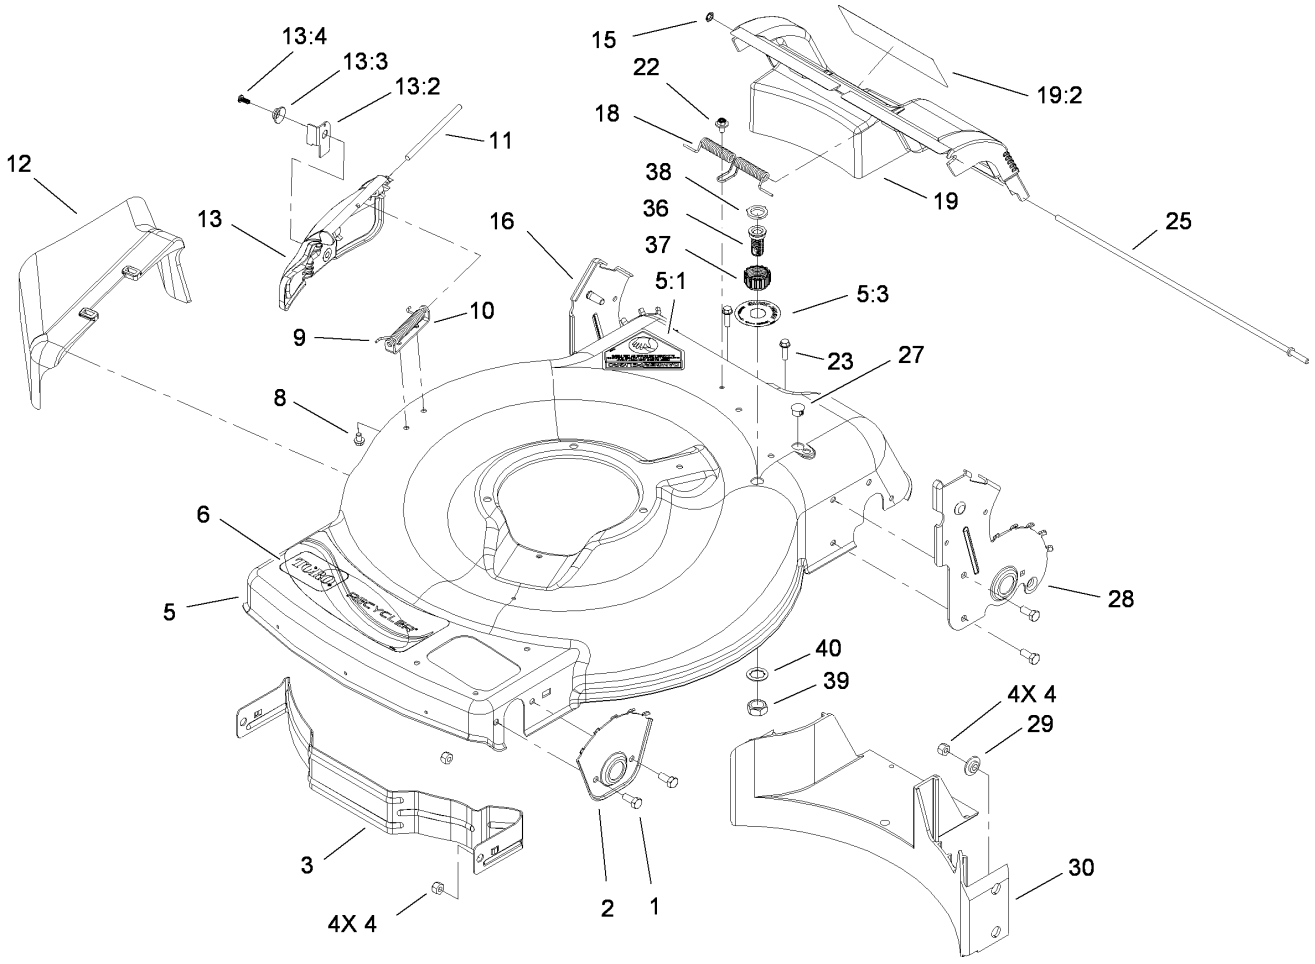

Deck, Side Chute and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-HOC, Front
3	104-8694-03	1	Baffle-Front
4	3296-29	8	Nut-Lock, NI
5	112-8850	1	Housing ASM
5:1	94-8072	1	Decal-Danger
5:3	112-8867	1	Decal
6	114-0321	1	Decal
8	99-8445	2	Screw-HWH
9	99-5293	1	Spring-Torsion
10	112-6416	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Discharge, Side
13	106-8376	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Nut-Push
16	112-6441	1	8 Inch RH HOC Plate ASM
18	105-3032	1	Spring-Door, Rear
19	112-8864	1	Rear Door ASM
19:2	112-8759	1	Decal-Warning
22	46-6810	1	Screw And Washer ASM
23	46-8091	2	Screw-HWH

Ref	Part No.	Qty.	Description
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	112-6443	1	8 Inch LH HOC Plate ASM
29	105-3006	4	Washer-Stepped
30	105-1834	1	Baffle-Rear
36	112-6400	1	Port-Washout
37	112-6401	1	Coupling-Hose, Washout Port
38	112-6438	1	Washer-Seal, Washout Port
39	3218-6	1	Nut-Jam
40	3254-5	1	Washer-Tooth

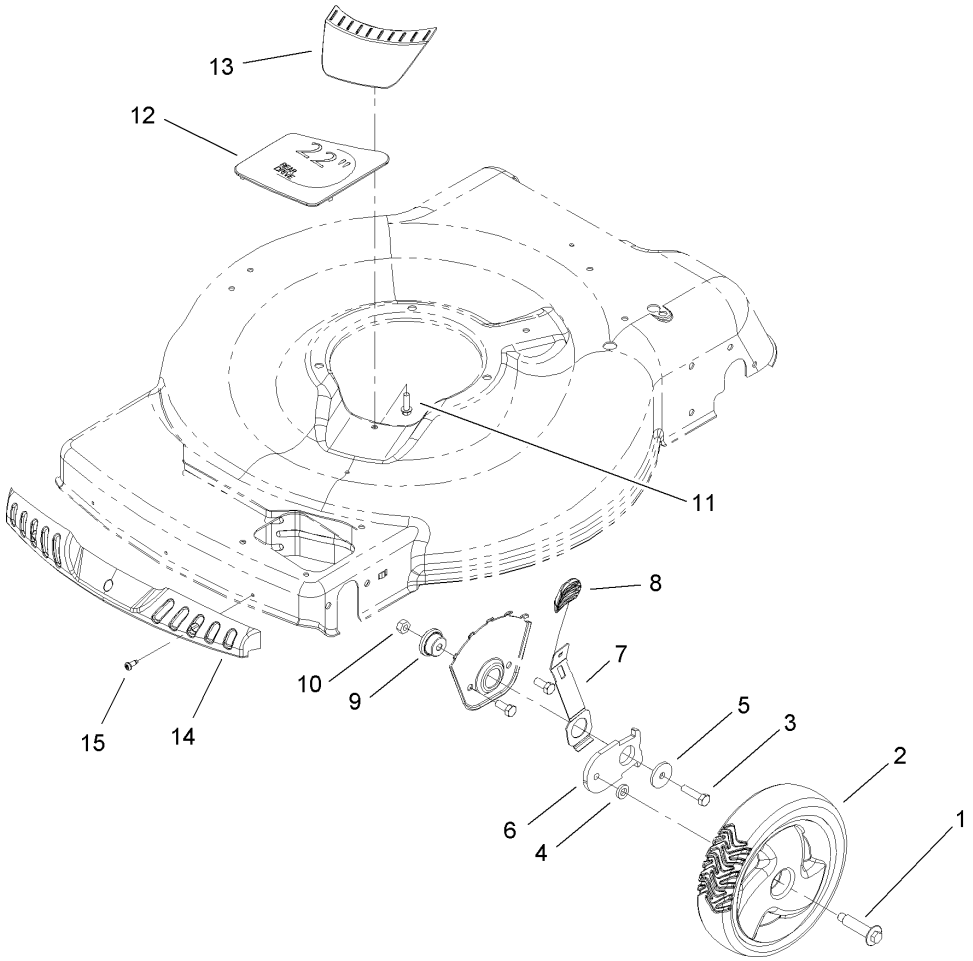

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	105-1814	2	Wheel ASM
3	322-6	2	Screw-HH
4	110-7466	2	Washer-Bolt, Wheel
5	105-3048	2	Washer-Flat
6	105-1807	2	Arm-Pivot, Front
7	105-1809	2	Arm-Spring
8	105-3042	2	Knob-Lever, HOC
9	105-1818	2	Bushing-Mount, HOC
10	3296-29	2	Nut-Lock, NI
11	46-8091	1	Screw-HWH
12	105-3004	1	Cover-Cutout
13	105-3005	1	Cover-Belt Opening
14	104-9359	1	Bumper-Mower
15	105-6849	3	Screw-Thread Forming

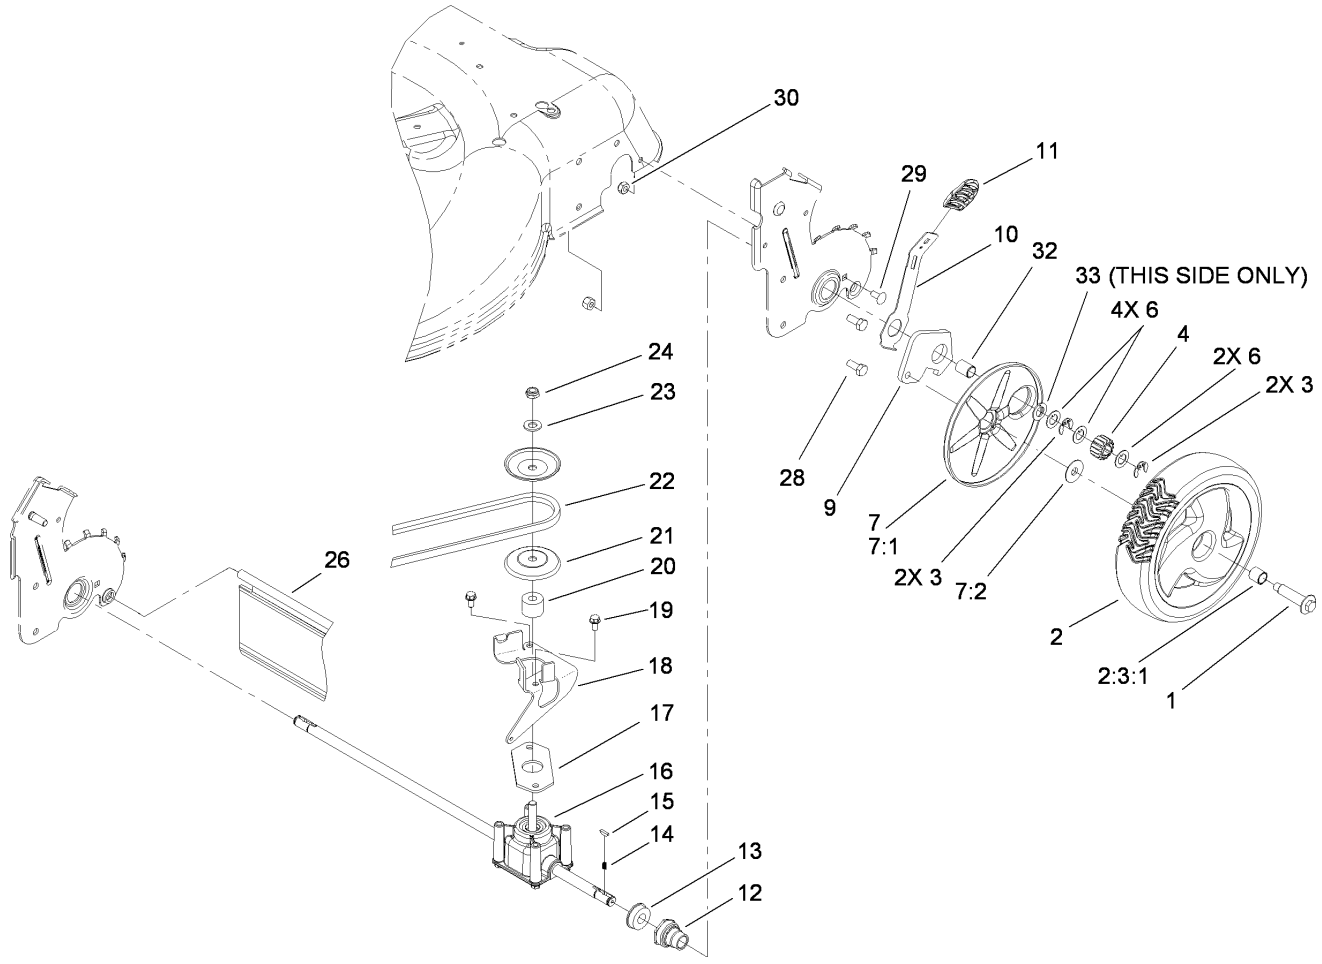

Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	105-3036	2	Wheel Gear ASM
❶❷2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Ring-Clip, Locking
4	105-3040	2	Gear-Pinion, 15T
6	105-6840	6	Washer-Thrust
7	110-1792	2	Wheel Cover ASM
❷7:1		1	Cover-Wheel
7:2	614426	1	Washer-Stepped
9	108-9781	2	Arm-Pivot, Rear
10	108-9780	2	Arm-Spring
11	105-3042	2	Knob-Lever, HOC
12	108-9779	2	Retainer-Bushing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	106-3956	1	Transmission ASM
17	108-9756	1	Gasket-Gearbox
18	106-6809-03	1	Bracket-Pivot
19	32144-4	2	Screw-HWH
20	92-5791	1	Spacer
21	100-1176	2	Pulley-Half
22	91-2258	1	V-Belt

Ref	Part No.	Qty.	Description
23	3256-24	1	Washer-Flat
24	3296-5	1	Nut-Lock
26	114-1585	1	Shield-Trailing
28	322-4	4	Screw-HH
29	3229-11	2	Screw-CARR
30	3296-16	2	Nut-Lock, NI
32	108-9782	2	Bushing-Sleeve
33	110-7191	1	Washer-Thrust

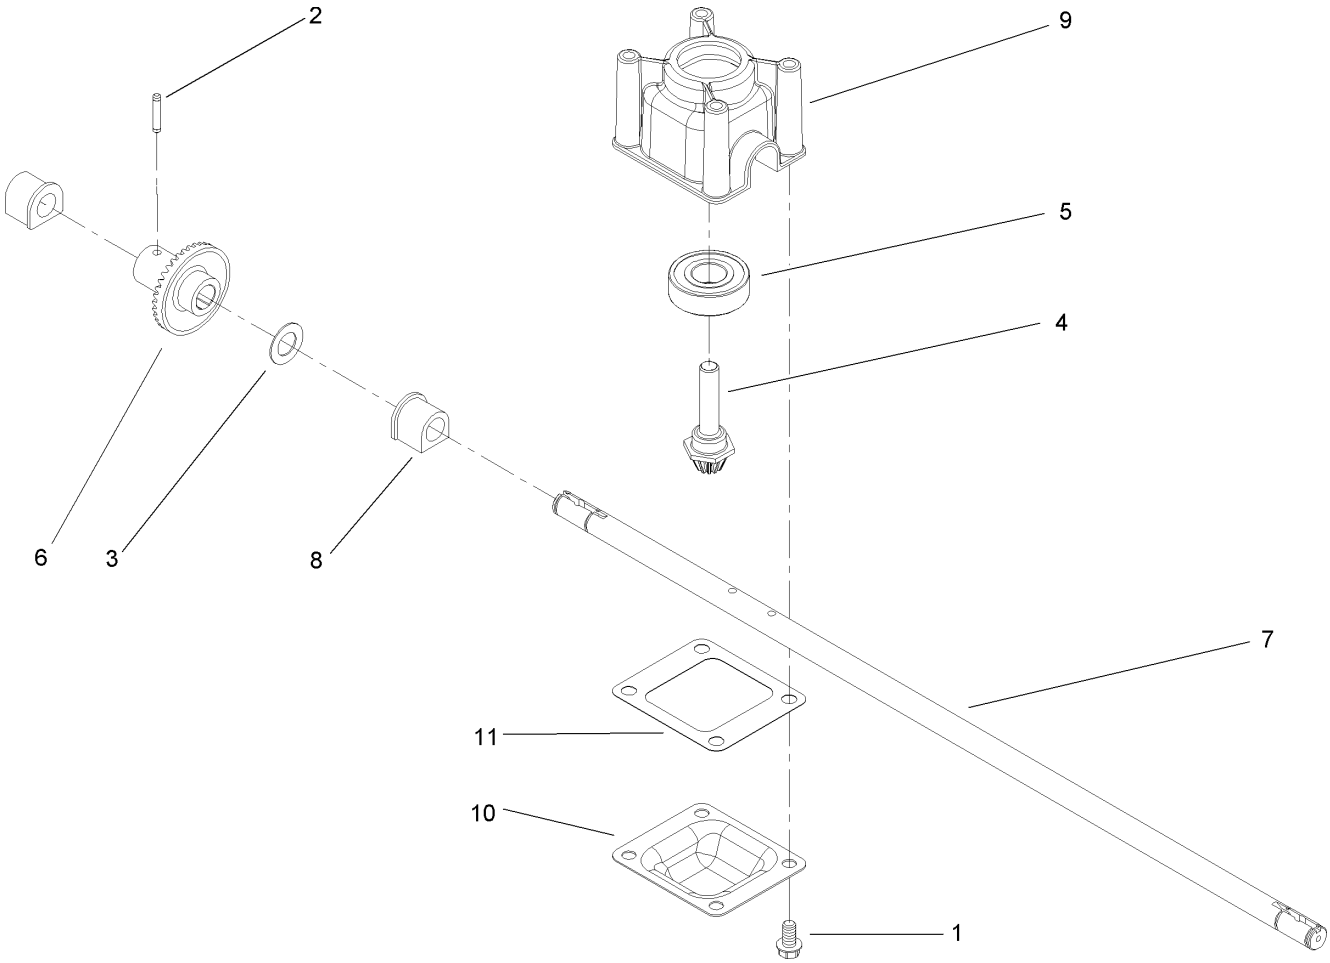


Transmission Assembly No. 106-3956

Ref	Part No.	Qty.	Description
1	32144-4	4	Screw-HWH
2	105-6817	1	Pin-Groove
3	36-4780	1	Washer-Plain
4	92-5790	1	Pinion
5	100-1048	1	Bearing-Ball
6	104-8671	1	Gear-Bevel, 37T
7	106-3957	1	Shaft-Output
8	104-8673	2	Bushing-Shaft, Output
9	104-8674	1	Gearcase-Upper
10	104-8675-03	1	Cover-Gearcase
11	105-6839	1	Gasket-Gearcase

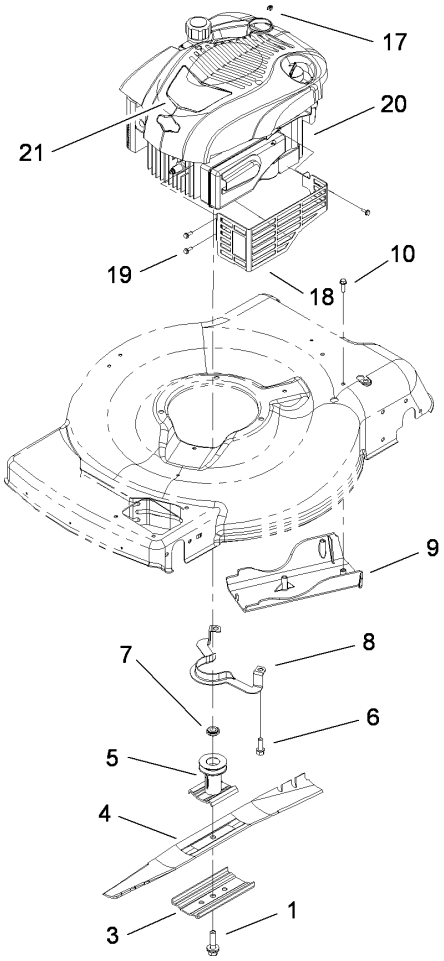


Engine and Blade Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
3	108-3766-03	1	Support-Blade
4	108-9764-03	1	Blade-22 Inch
5	106-3987	1	Blade Driver ASM
6	95-1726	3	Screw-Taptite
7	106-3999	1	Spacer-Driver
8	105-3030-03	1	Guide-Belt
9	105-1835	1	Cover-Belt, Rear
10	46-8091	3	Screw-HWH
17	2210-316	1	Stop-Rope
18	104-7577-03	1	Shield-Muffler
19	32144-1	3	Screw-Taptite
❷❸20		1	Engine-Briggs And Stratton, 126L05-0213-F1
21	115-1309	1	Decal

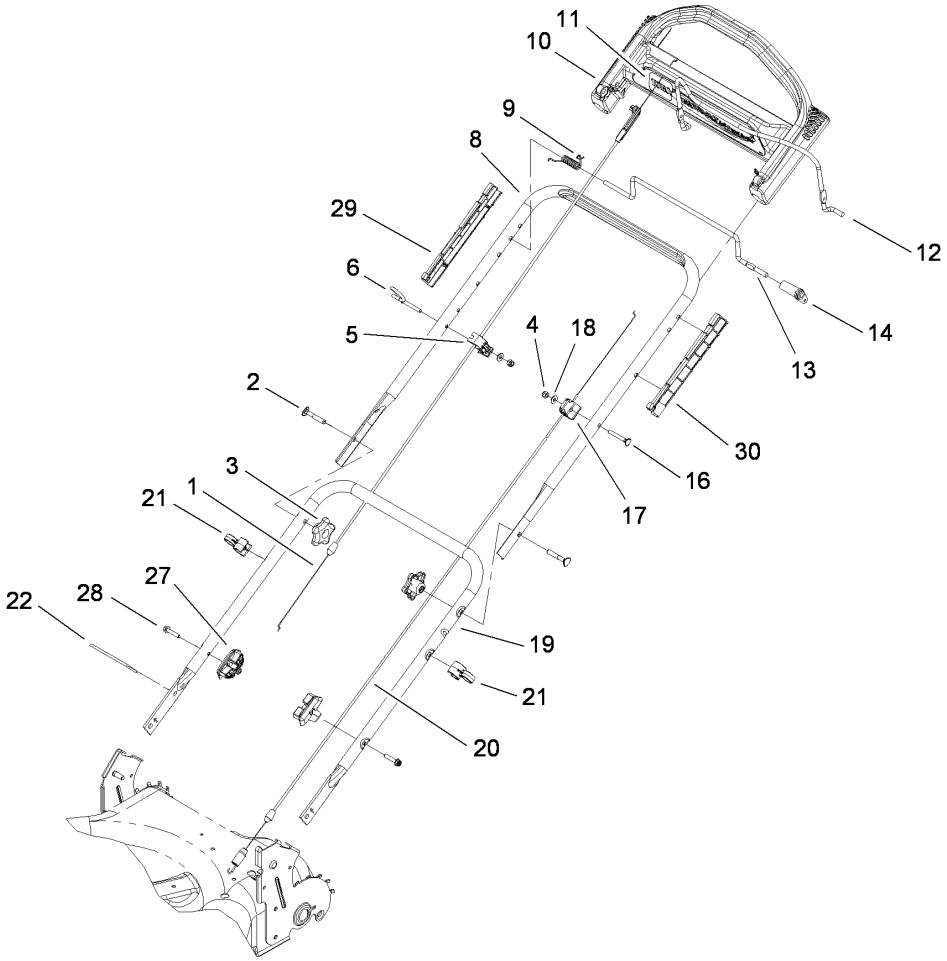


Handle Assembly

Ref	Part No.	Qty.	Description
1	104-8676	1	Cable-Brake
2	112-8876	2	Screw-Handle
3	108-8162	2	Knob-Locking
4	3296-73	2	Nut-Lock, NI
5	106-8331	1	Anchor-Cable
6	106-8330	1	Guide-Rope
8	104-8680-05	1	Handle-Upper
9	104-8690	1	Spring-Torsion
10	104-8678	1	Handle-Control
11	114-0338	1	Decal
12	104-8679-03	1	Bail-Brake
13	99-1588	1	Bar-Control, Traction
14	99-1589	1	Lever-Traction
16	321-50	1	Screw-HH
17	92-7729	1	Anchor-Cable, Upper
18	3256-1	2	Washer-Flat
19	112-6440-05	1	Handle-Lower
20	105-1844	1	Cable-Traction
21	106-6805	2	Guide-Cable
22	614249	1	Strap-Tie
27	108-9788	2	Anchor-Bag
28	32144-110	2	Screw-HWH
29	105-6841	1	Guide-RH
30	105-6842	1	Guide-LH

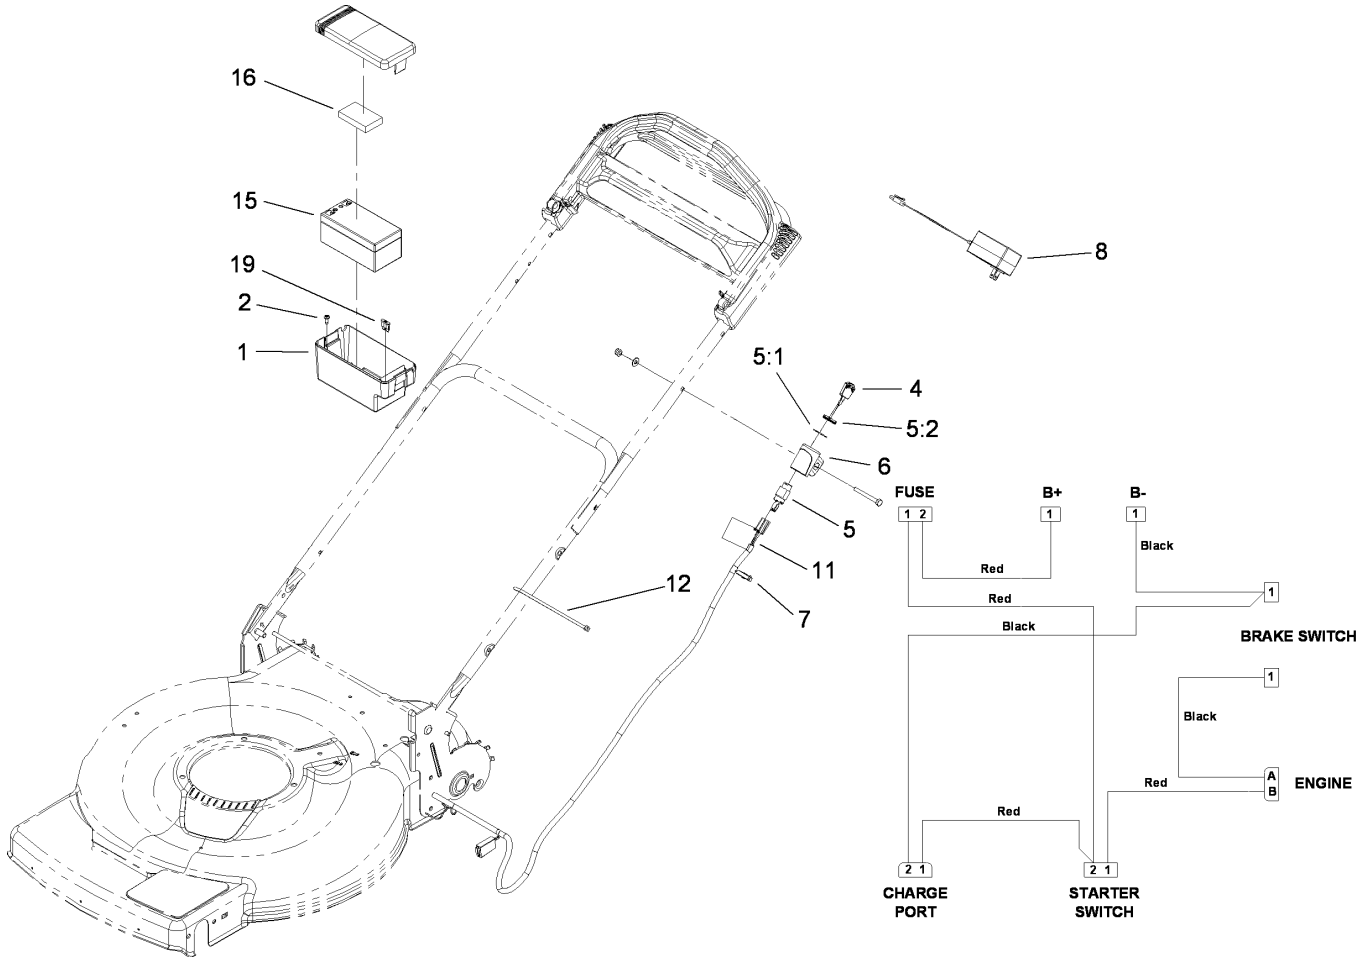


Electrical Assembly

Ref	Part No.	Qty.	Description
1	108-4844	1	Battery Box ASM
2	105-6849	2	Screw-Thread Forming
4	700918	1	Key
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	108-9760	1	Mount-Switch
7	106-8378	1	Harness-Wire
8	114-1588	1	Charger-Battery, Fujikon
11	104-7953	1	Decal-Harness
12	614249	3	Strap-Tie
15	106-8397	1	Battery-12 Volt
16	107-3774	1	Foam-Battery, Top
19	99-6124	2	Fuse-40 Amp

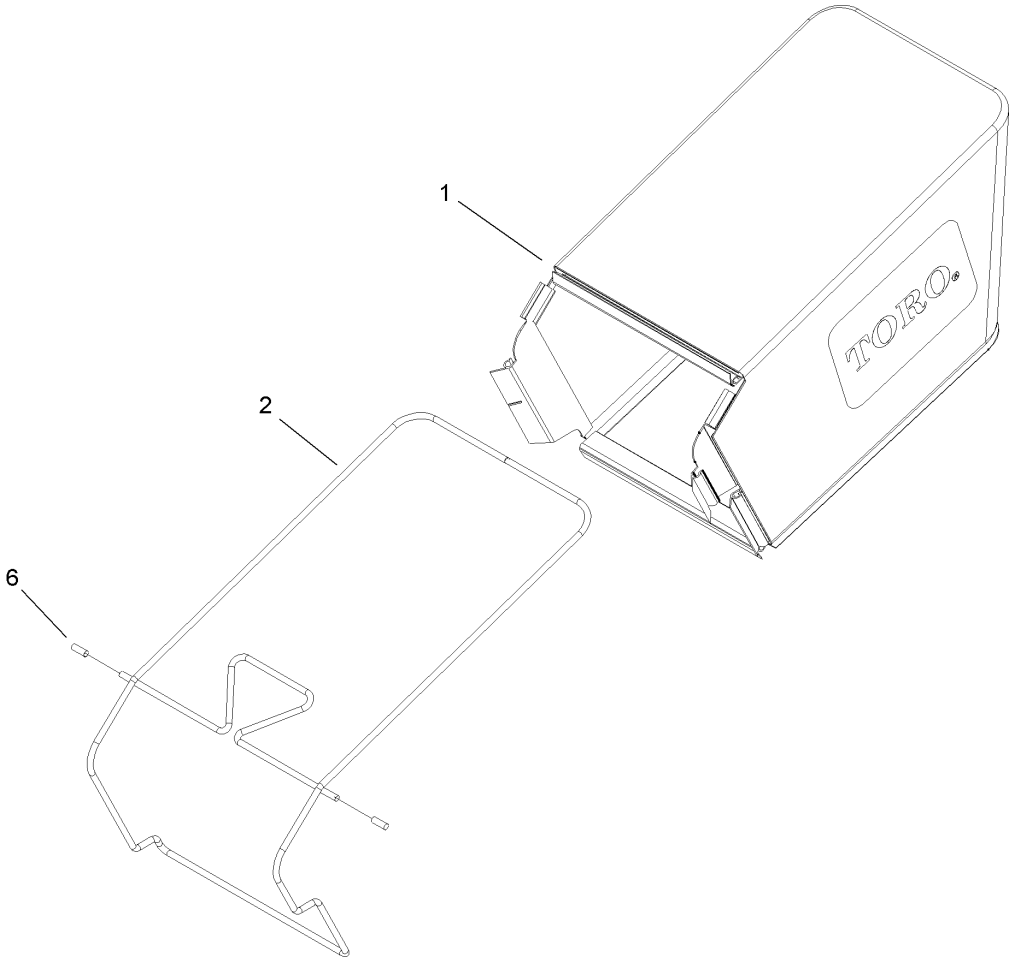

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	108-9792	1	Grass Bag ASM
2	108-9785-03	1	Frame-Bag
6	112-6439	2	Cap-End

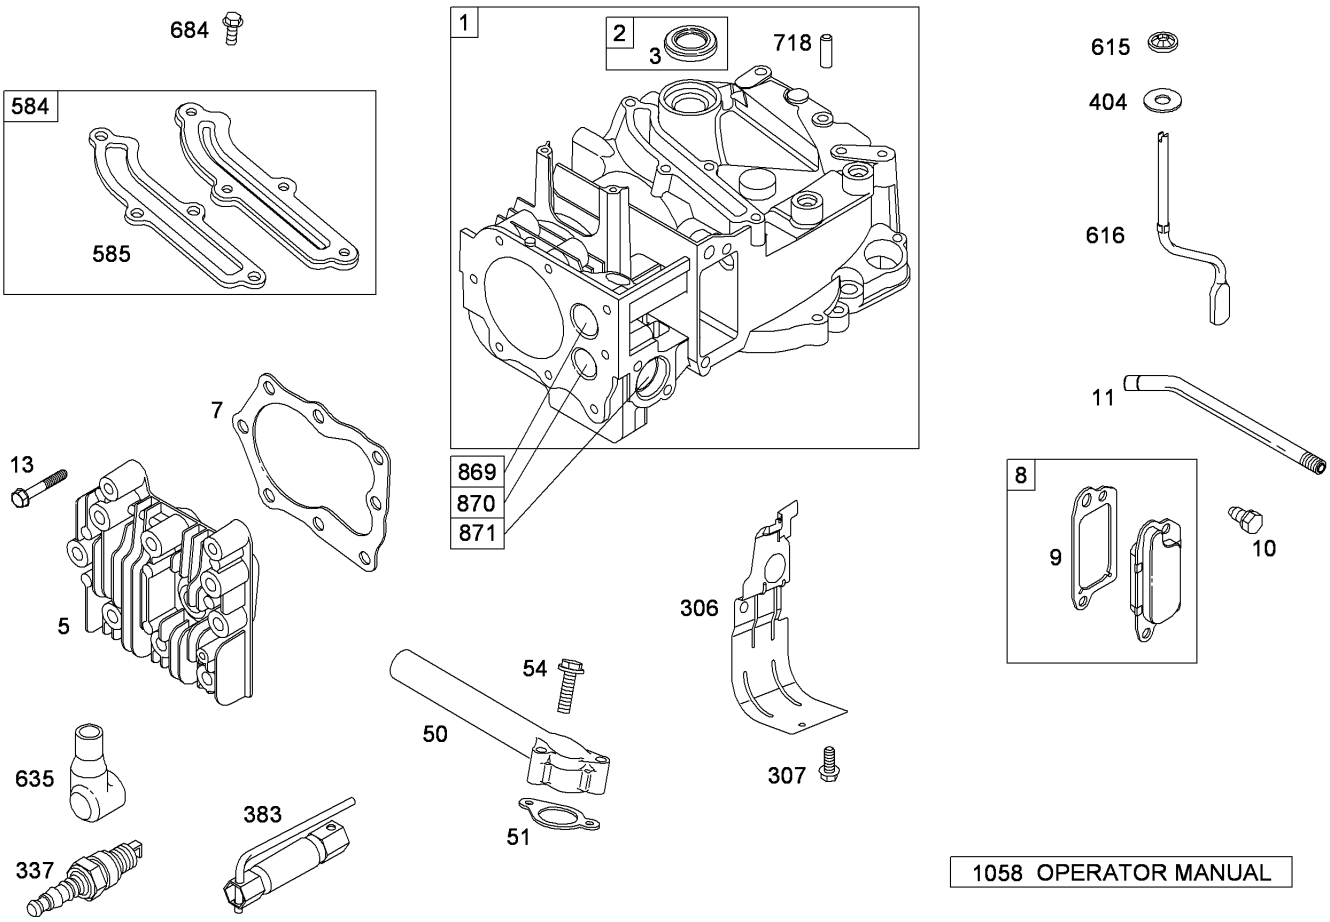


Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 126L05-0213-F1

Ref	Part No.	Qty.	Description
❸1	697322	1	Cylinder ASM
❸2	399269	1	Bushing And Seal Kit
❸❺3	299819s	1	Seal-Oil (Magneto Side)
❸5	691160	1	Head-Cylinder
❸❺7	692249	1	Gasket-Head, Cylinder
❸8	695250	1	Breather ASM
❸9	696125	1	Gasket-Breather
❸10	691125	1	Screw (Breather ASM)
❸11	691781	1	Tube-Breather
❸13	690912	1	Screw (Cylinder Head)
❸50	794305	1	Manifold-Intake
❸❺51	794306	1	Gasket-Intake
❸54	691650	1	Screw (Intake Manifold)
❸306	790836	1	Shield-Cylinder
❸307	690345	1	Screw (Cylinder Shield)
❸337	802592s	1	Plug-Spark
❸383	89838s	1	Wrench-Spark Plug
❸404	690272	1	Washer (Governor Crank)
❸584	697734	1	Cover-Passage, Breather
❸❺585	691879	1	Gasket-Passage, Breather
❸615	690340	1	Retainer-Shaft, Governor
❸616	698801	1	Crank-Governor
❸635	66538s	1	Boot-Spark Plug
❸684	690345	1	Screw (Breather Passage Cover)


Ref	Part No.	Qty.	Description
❸718	690959	1	Pin-Locating
❸869	691155	1	Seat-Valve (Intake)
❸870	690380	1	Seat-Valve (Exhaust)
❸871	262001	1	Bushing-Guide (Exhaust)
❸871	63709	1	Bushing-Guide (Intake)
❸1058	277039TRI	1	Operator Manual

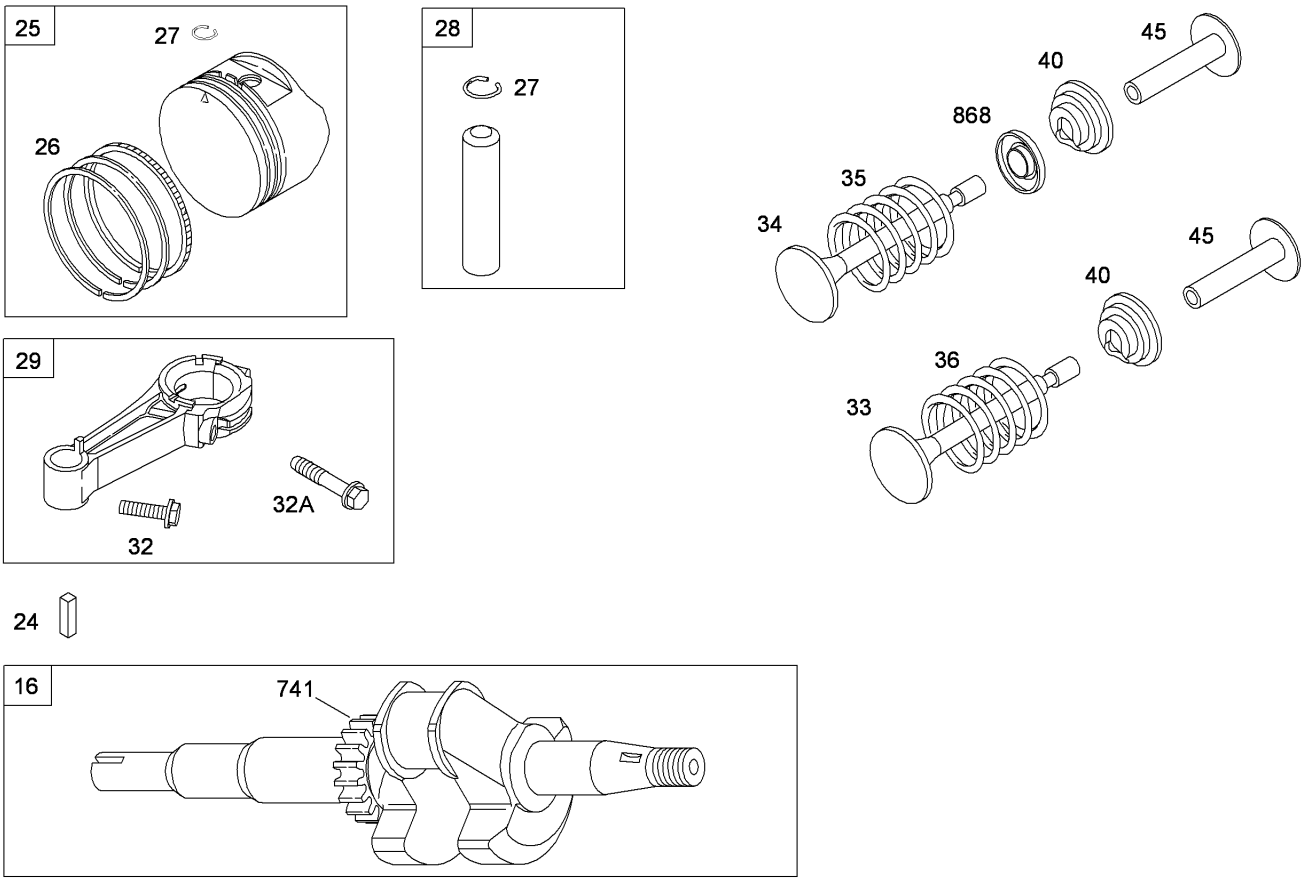

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton 126L05-0213-F1


Ref	Part No.	Qty.	Description
❸16	696009	1	Crankshaft
❸24	222698s	1	Key-Flywheel
❸25	791097	1	Piston ASM (STD)
❸25	791326	1	Piston ASM (.020 Oversize)
❸26	791098	1	Ring Set (STD)
❸26	791324	1	Ring Set (.020 Oversize)
❸27	691866	1	Lock-Pin, Piston
❸28	499423	1	Pin-Piston (STD)
❸29	499424	1	Rod-Connecting (STD)
❸32	691664	1	Screw (Connecting Rod)
❸32A	695759	1	Screw (Connecting Rod)
❸33	262651s	1	Valve-Exhaust
❸34	262652s	1	Valve-Intake
❸35	691270	1	Spring-Valve (Intake)
❸36	691270	1	Spring-Valve (Exhaust)
❸40	692194	1	Retainer-Valve
❸45	690548	1	Tappet-Valve
❸741	790345	1	Gear-Timing
❸868	697338	1	Seal-Valve

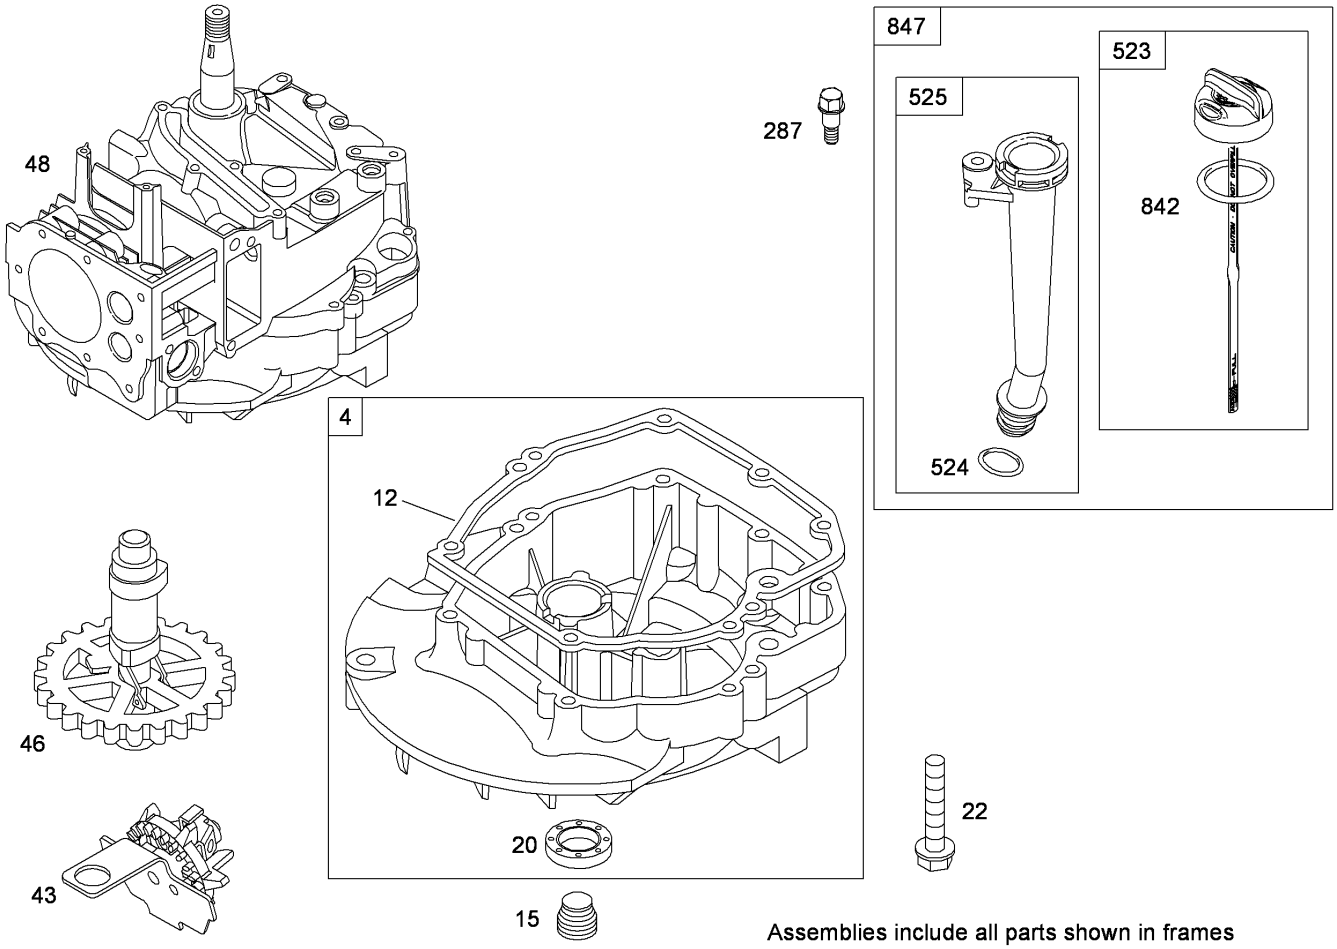

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 126L05-0213-F1


Ref	Part No.	Qty.	Description
❸4	493279	1	Sump-Engine
❸❺12	692232	1	Gasket-Crankcase (.015 STD)
❸15	691680	1	Plug-Drain, Oil
❸❺20	399781s	1	Seal-Oil (PTO Side)
❸22	691092	1	Screw (Engine Sump)
❸43	691997	1	Slinger-Oil, Governor
❸46	691449	1	Camshaft
❸48	792742	1	Block-Short
❸287	690940	1	Screw (Dipstick Tube)
❸523	499621	1	Dipstick
❸❺524	692296	1	Seal-O Ring (Dipstick Tube)
❸525	495265	1	Tube-Dipstick
❸❺842	691031	1	Seal-O Ring (Dipstick Tube)
❸847	692047	1	Dipstick Tube ASM

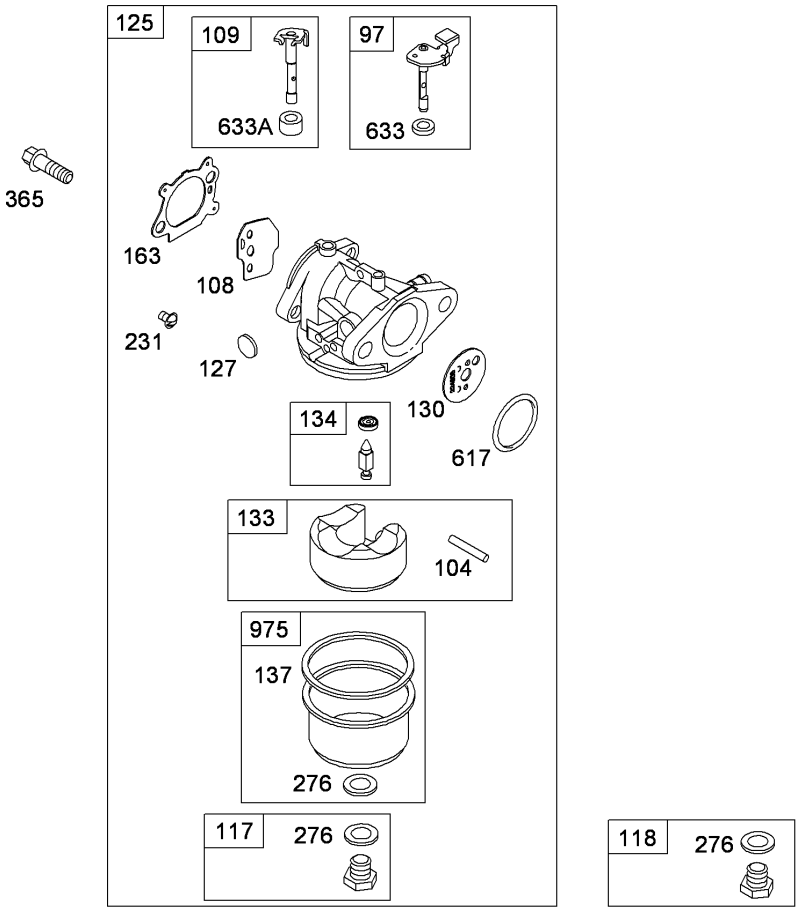

Assemblies include all parts shown in frames

Carburetor Assembly
Briggs and Stratton 126L05-0213-F1


Ref	Part No.	Qty.	Description
❸97	696565	1	Shaft-Throttle
❸❹104	691242	1	Pin-Hinge, Float
❸108	790844	1	Valve-Choke
❸109	790843	1	Shaft-Choke
❸117	498978	1	Jet-Main (STD)
❸118	494870	1	Jet-Main (High Altitude)
❸125	498170	1	Carburetor
❸❹127	694468	1	Plug-Welch
❸130	696564	1	Valve-Throttle
❸133	398187	1	Float-Carburetor
❸❹134	398188	1	Needle And Seat Kit
❸❹137 ❻	693981	1	Gasket-Bowl, Float
❸❹163 ❺❻	272653	1	Gasket-Cleaner, Air
❸231	691636	1	Screw (Choke Valve)
❸❹276 ❻	271716	1	Washer-Sealing
❸365	692524	1	Screw (Carburetor)
❸❹617 ❻	270344s	1	Seal-O Ring (Intake Manifold)
❸❹633 ❻	691321	1	Seal-Shaft, Choke Throttle
❸❹633A ❻	693867	1	Seal-Shaft, Choke Throttle
❸975	493640	1	Bowl-Float

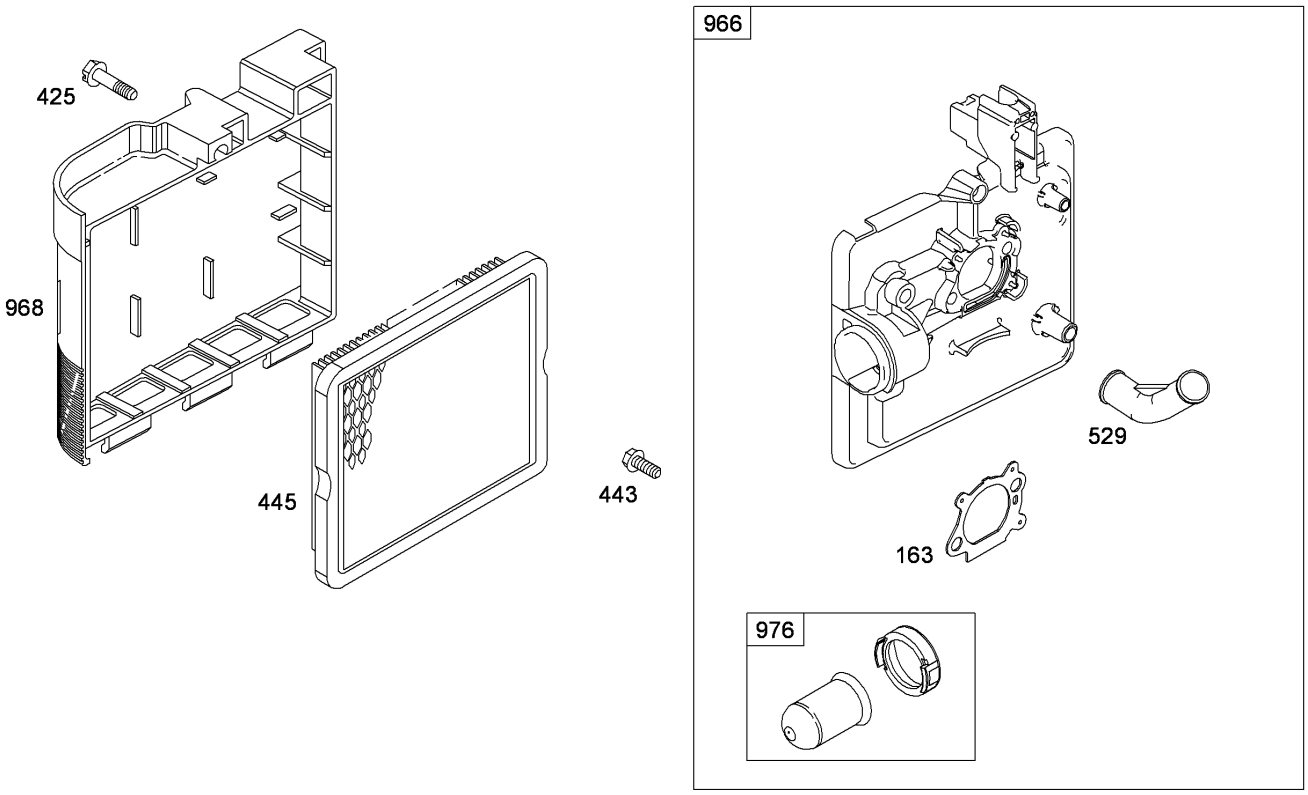

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 126L05-0213-F1


Ref	Part No.	Qty.	Description
❸❹163 ❺❻	272653s	1	Gasket-Cleaner, Air
❸425	690670	1	Screw (Air Cleaner Cover)
❸443	692523	1	Screw (Air Cleaner Primer Base)
❸445	491588s	1	Filter-Cartridge, Air Cleaner
❸529	691923	1	Grommet
❸966	792040	1	Base-Primer, Air Cleaner
❸968	692298	1	Cover-Cleaner, Air
❸976	694395	1	Primer-Carburetor

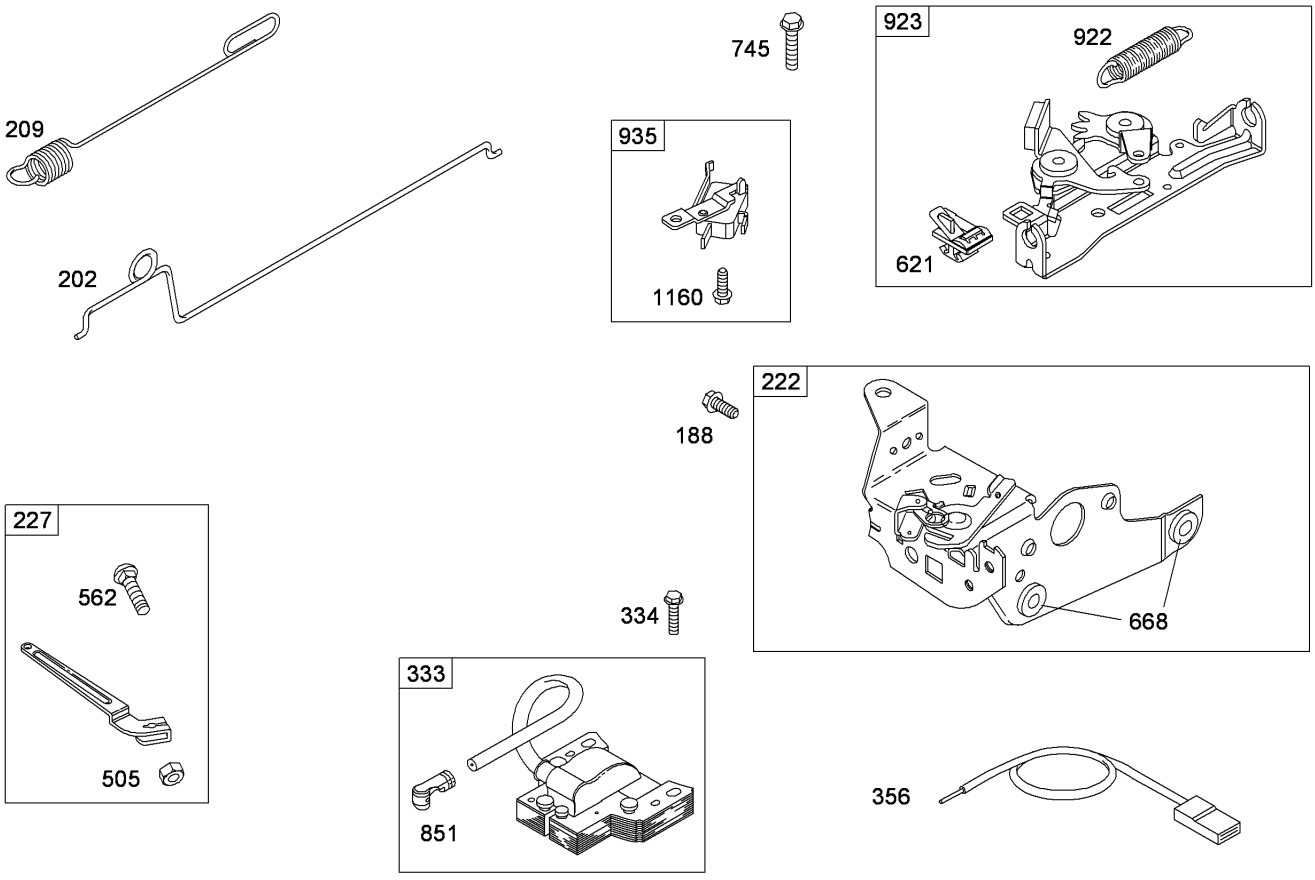

Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 126L05-0213-F1


Ref	Part No.	Qty.	Description
❸188	693399	1	Screw (Control Bracket)
❸202	691829	1	Link-Governor, Mechanical
❸209	691292	1	Spring-Governor
❸222	793754	1	Bracket-Control
❸227	690783	1	Lever-Control, Governor
❸333	802574	1	Armature-Magneto
❸334	691061	1	Screw (Magneto Armature)
❸356	692390	1	Wire-Stop
❸505	691251	1	Nut (Governor Control Lever)
❸562	691119	1	Screw (Governor Control Lever)
❸621	692310	1	Switch-Stop
❸❺668	493823	1	Spacer
❸745	691648	1	Screw (Brake)
❸851	493880s	1	Terminal-Spark Plug
❸922	691831	1	Spring-Brake
❸923	691994	1	Brake ASM
❸935	499421	1	Switch-Interlock
❸1160	691627	1	Screw (Interlock Switch)

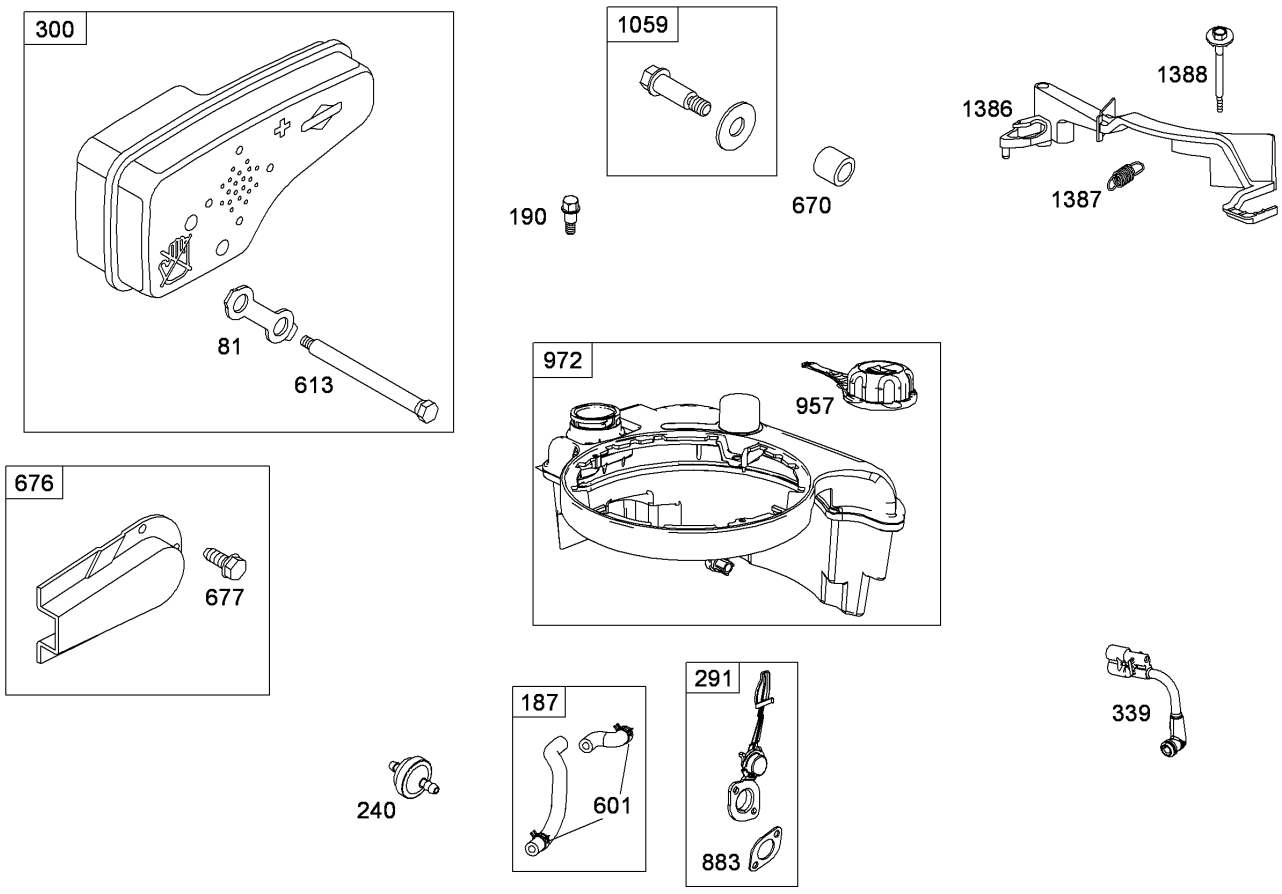

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly
Briggs and Stratton 126L05-0213-F1


Ref	Part No.	Qty.	Description
❸81	691740	1	Lock-Screw, Muffler
❸187	795090	1	Line-Fuel (Cut To Required Length)
❸190	690940	1	Screw (Fuel Tank)
❸240	298090S	1	Filter-Fuel
❸291	790830	1	Thermostat
❸300	790828	1	Muffler
❸339	794797	1	Tube And Connector ASM
❸601	791850	1	Clamp-Hose
❸613	790833	1	Screw (Muffler)
❸670	692294	1	Spacer-Tank, Fuel
❸676	493871	1	Deflector-Muffler
❸677	690661	1	Screw (Muffler Deflector)
❸❺883	691881	1	Gasket-Exhaust
❸957	794793	1	Cap-Fuel Tank
❸972	794792	1	Tank-Fuel
❸1059	692311	1	Screw And Washer Kit
❸1386	790848	1	Vane-Air
❸1387	790849	1	Spring-Vane, Air
❸1388	790850	1	Screw (Air Vane)

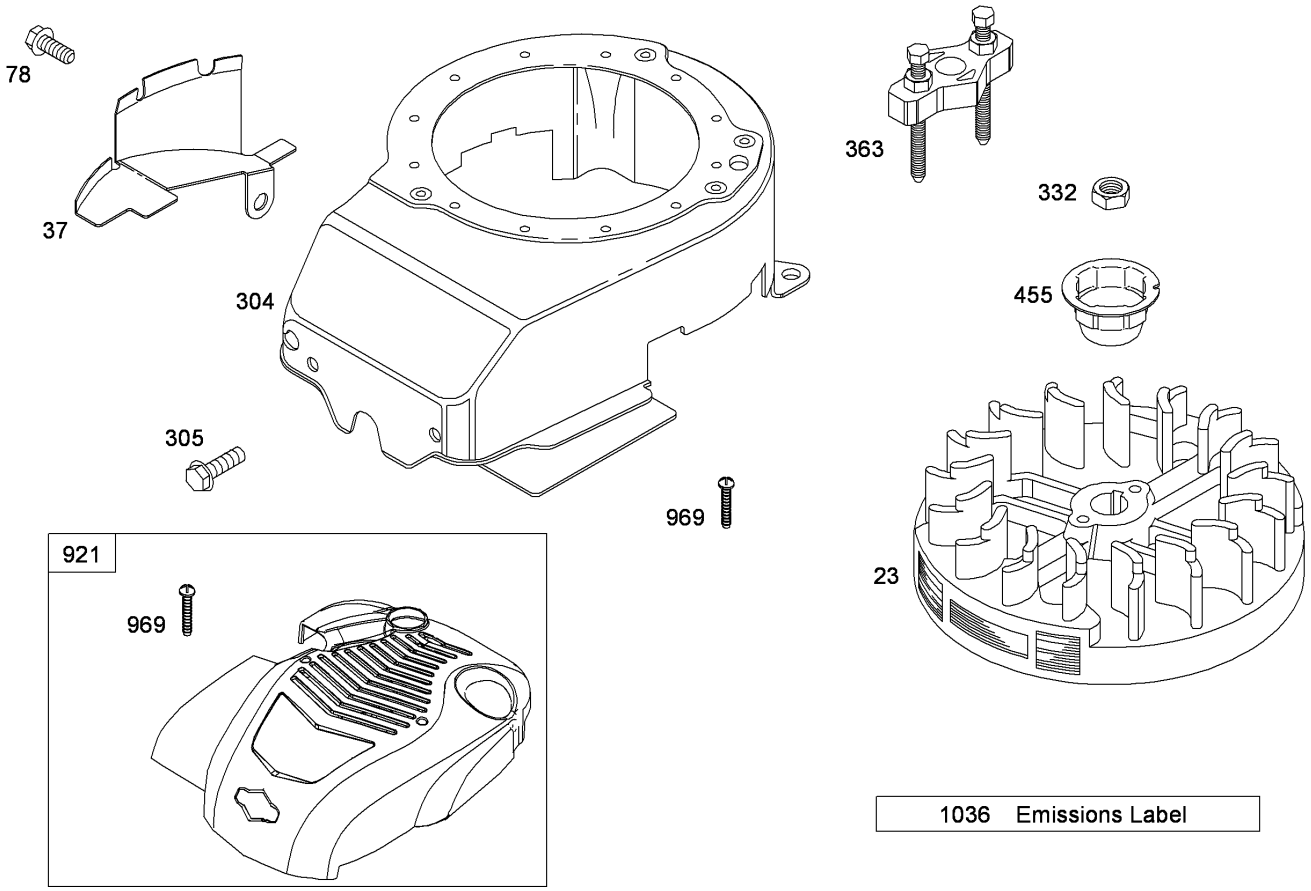

Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton 126L05-0213-F1


Ref	Part No.	Qty.	Description
❸23	691987	1	Flywheel
❸37	694086	1	Guard-Flywheel
❸78	691108	1	Screw (Flywheel Guard)
❸304	790983	1	Housing-Blower
❸305	691108	1	Screw (Blower Housing)
❸332	690662	1	Nut (Flywheel)
❸363	19069	1	Puller-Flywheel
❸455	791760	1	Cup-Flywheel
❸921	795089	1	Cover-Housing, Blower
❸969	691138	1	Screw (Blower Housing Cover)
❸1036		1	Label-Emissions

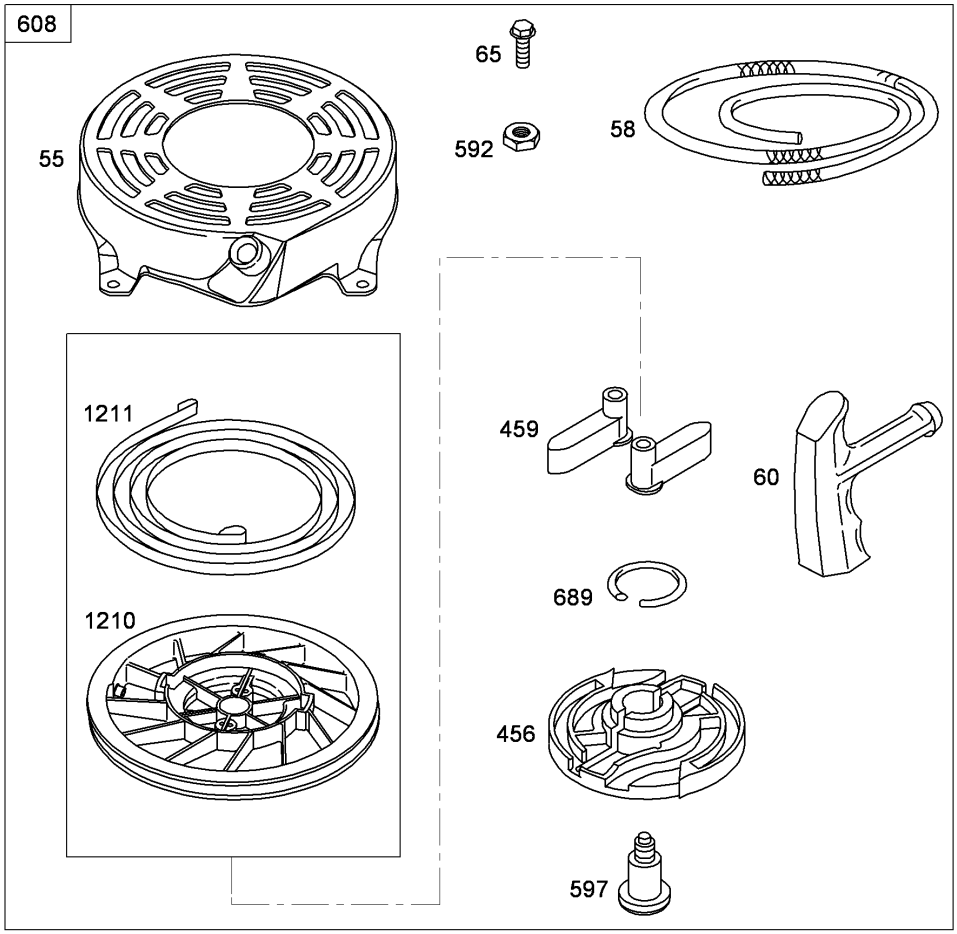

Starter Assembly
Briggs and Stratton 126L05-0213-F1

Ref	Part No.	Qty.	Description
❸55	691421	1	Housing-Starter, Rewind
❸58	697316	1	Rope-Starter (Cut To Required Length)
❸60	281434s	1	Grip-Rope, Starter
❸65	690837	1	Screw (Rewind Starter)
❸456	692299	1	Plate-Friction, Pawl
❸459	281505s	1	Ratchet-Pawl
❸592	690800	1	Nut (Rewind Starter)
❸597	691696	1	Screw (Pawl Friction Plate)
❸608	497680	1	Starter-Rewind
❸689	691855	1	Spring-Friction
❸1210	498144	1	Pulley And Spring ASM (Pulley)
❸1211	498144	1	Pulley And Spring ASM (Spring)


358 Engine Gasket Set

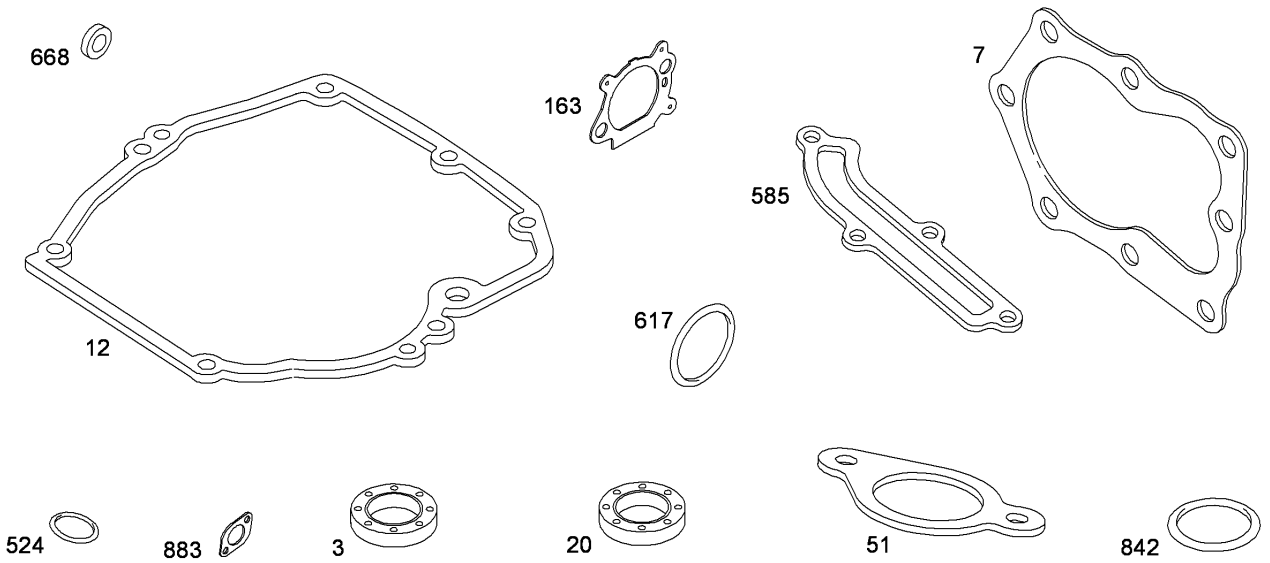


Assemblies include all parts shown in frames

Engine Gasket Set
Briggs and Stratton 126L05-0213-F1

Ref	Part No.	Qty.	Description
3 5 3	299819s	1	Seal-Oil (Magneto Side)
3 5 7	692249	1	Gasket-Head, Cylinder
3 5 12	692232	1	Gasket-Crankcase (.015 STD)
3 5 20	399781s	1	Seal-Oil (PTO Side)
3 5 51	272199s	1	Gasket-Intake
3 4 163	272653s	1	Gasket-Cleaner, Air
5 6			
3 358	794307	1	Engine Gasket Set
3 5 524	692296	1	Seal-O Ring (Dipstick Tube)
3 5 585	691879	1	Gasket-Passage, Breather
3 4 617	270344s	1	Seal-O Ring (Intake Manifold)
5 6			
3 5 668	493823	1	Spacer
3 5 842	691031	1	Seal-O Ring (Dipstick)
3 5 883	691881	1	Gasket-Exhaust

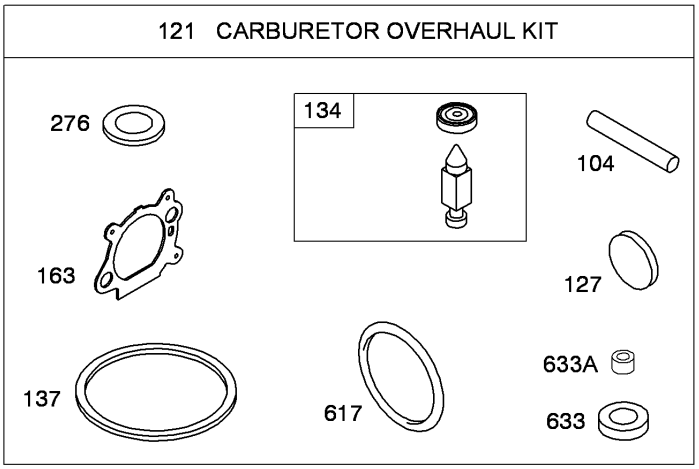

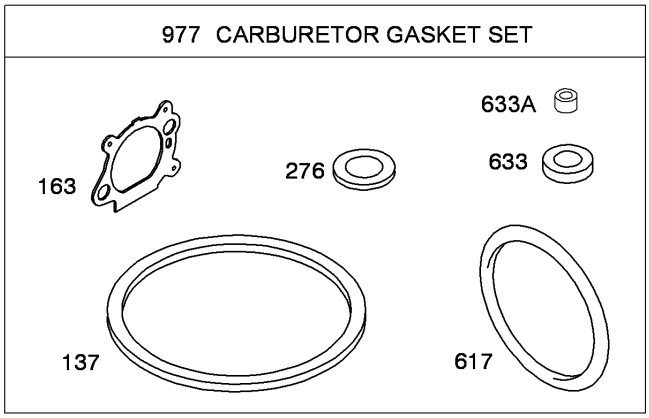

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 126L05-0213-F1

Ref	Part No.	Qty.	Description
❸❹104	691242	1	Pin-Hinge, Float
❸121	498260	1	Carburetor Overhaul Kit
❸❹127	694468	1	Plug-Welch
❸❹134	398188	1	Needle And Seat Kit
❸❹137 ❻	693981	1	Gasket-Bowl, Float
❸❹163 ❺❻	272653s	1	Gasket-Cleaner, Air
❸❹276 ❻	271716	1	Washer-Sealing
❸❹617 ❺❻	270344s	1	Seal-O Ring (Intake Manifold)
❸❹633 ❻	691321	1	Seal-Shaft, Choke Throttle
❸❹633A ❻	693867	1	Seal-Shaft, Choke Throttle
❸977	498261	1	Carburetor Gasket Set

Attachments and Accessories

For 20089 - 22in Recycler Lawn Mower

Product Name	Model/Part
Traction Assist Handle Kit	108-8120
Loose Parts Kit	115-1324
Replacement Bag	59303
Bagger Kit	59304
22 Inch Blade Kit	59534

NOTES


TORO®