Form Number 3359-889 Rev B

# 48cm Recycler®/Rear Bagging
## Lawn Mower

**Model No. 20817 - 280000001 and up.**

# Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

# Contents


| Description | Page |
|---|---|
| Housing Assembly | 3 |
| Height-of-Cut and Wheel Assembly | 4 |
| Drive Assembly | 5 |
| Gear Case Assembly No. 104-7593 | 6 |
| Engine and Blade Assembly | 7 |
| Handle Assembly | 8 |
| Rear Bag Assembly | 9 |
| Cylinder Assembly Briggs and Stratton 126T02-0231-B1 | 10 |
| Crankshaft Assembly Briggs and Stratton 126T02-0231-B1 | 11 |
| Crankcase Assembly Briggs and Stratton 126T02-0231-B1 | 12 |
| Carburetor Assembly Briggs and Stratton 126T02-0231-B1 | 13 |
| Air Cleaner Assembly Briggs and Stratton 126T02-0231-B1 | 14 |
| Governor Assembly Briggs and Stratton 126T02-0231-B1 | 15 |
| Muffler and Fuel Tank Assembly Briggs and Stratton 126T02-0231-B1 | 16 |
| Blower Housing Assembly Briggs and Stratton 126T02-0231-B1 | 17 |
| Starter Assembly Briggs and Stratton 126T02-0231-B1 | 18 |
| Engine Gasket Set Briggs and Stratton 126T02-0231-B1 | 19 |
| Carburetor Overhaul Kit Briggs and Stratton 126T02-0231-B1 | 20 |


# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| | |
|---|---|
| AR | as required |
| ASM | assembly |
| BBC | blade brake clutch |
| CARR | carriage |
| DEG | degrees |
| EXT | external |
| FH | flat head |
| GA | gauge |
| HD | heavy-duty |
| HF | hex flange |
| HH | hex head |
| HHF | hex head flange |
| HHFTF | hex head flange thread forming |
| HJ | hex jam |
| HLH | hex lag head |
| HOC | height-of-cut |
| HSBH | hex socket button head |
| HSFH | hex socket flat head |
| HSH | hex socket head |
| HWH | hex washer head |
| HWHTF | hex washer head thread forming |
| HYD | hydraulic |
| LH | left hand |
| NI | nylon insert |
| NPTF | national pipe thread fine |
| PFH | phillips flat head |
| PPH | phillips pan head |
| PPHTF | phillips pan head thread forming |
| PRH | phillips round head |
| PTH | phillips truss head |
| PTO | power-take-off |
| RH | right hand |
| ROPS | roll-over protection system |
| SFH | slotted fillister head |
| SHH | slotted hex head |
| SHWH | slotted hex washer head |
| SPH | slotted pan head |
| SQH | square head |
| SRH | slotted round head |
| STD | standard |
| TAP | self tapping |
| TTH | torx truss head |

# Footnotes

❶ Not illustrated


❷ Not serviced separately

❸ Obtain from your local Briggs & Stratton dealer

❹ Included in Carburetor Overhaul Kit (Ref. No. 121)


❺ Included in Engine Gasket Set (Ref. No. 358)

❻ Included in Carburetor Gasket Set (Ref. No. 977)

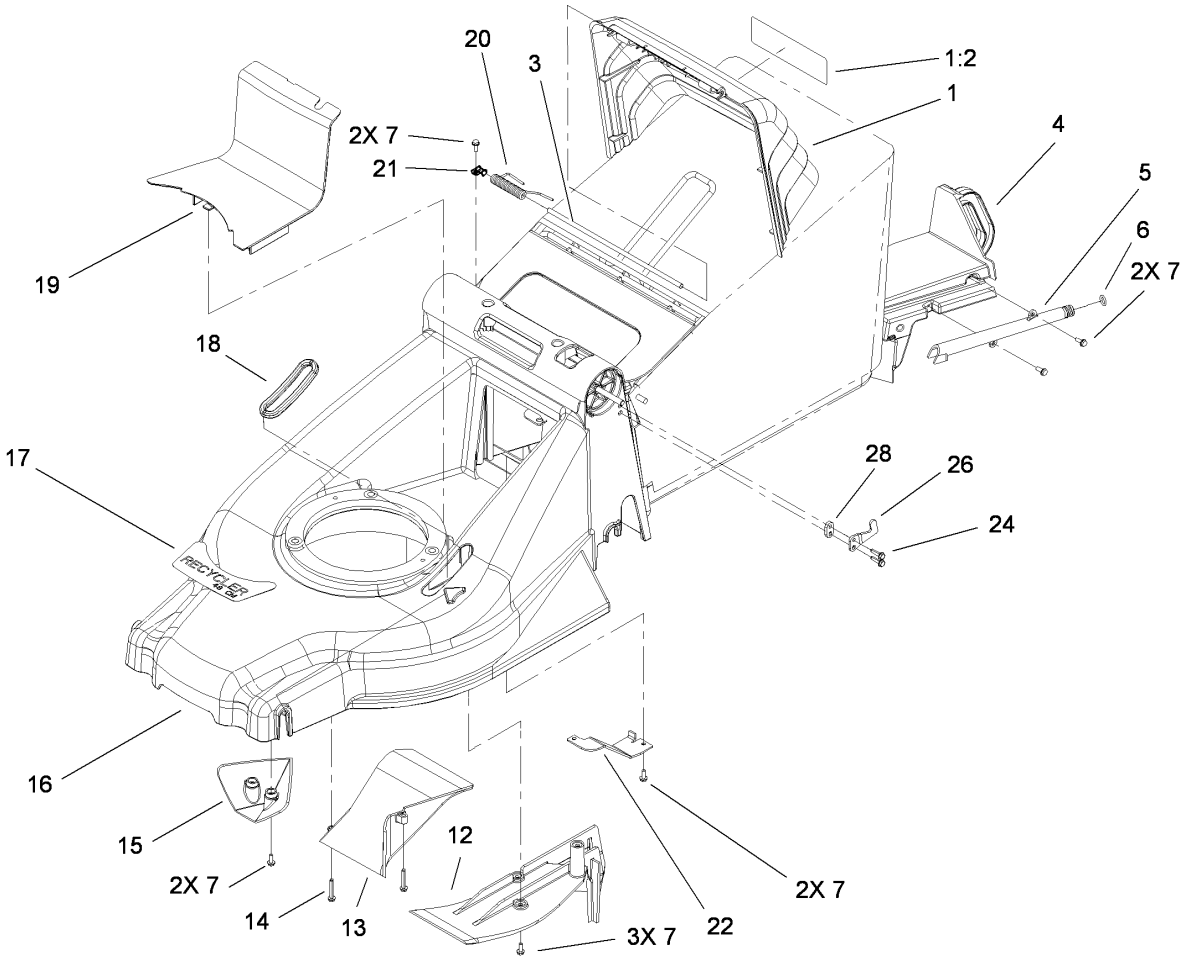


# Housing Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-9115 | 1 | Door ASM |
| 1:2 | 112-8759 | 1 | Decal-Warning |
| 3 | 100-1509 | 1 | Rod-Pivot |
| 4 | 100-1505 | 1 | Plug-Kicker, Recycler |
| 5 | 100-1522 | 1 | Fitting-Washout |
| 6 | 46-6290 | 1 | O-Ring |
| 7 | 32144-1 | 11 | Screw-Taptite |
| 12 | 99-6486 | 1 | Cover-Kicker, Rear |
| 13 | 100-1506 | 1 | Ramp-Discharge |
| 14 | 100-4352 | 2 | Screw-HWH |
| 15 | 99-6485 | 1 | Kicker-Front |
| 16 | 104-7579 | 1 | Deck |
| 17 | 110-9169 | 1 | Decal-Recycler, Deck |
| 18 | 100-3932 | 1 | Boot-HOC |
| 19 | 99-6479 | 1 | Cover-Belt |
| 20 | 104-7594 | 1 | Spring-Torsion |
| 21 | 98-2256 | 2 | Clamp |
| 22 | 100-9123-03 | 1 | Bracket-Deck |
| 24 | 100-4351 | 4 | Screw-HWH |
| 26 | 104-7557 | 1 | Hook-Left |
| ❶27 | 104-7558 | 1 | Hook-Right |
| 28 | 104-7556 | 2 | Spacer |

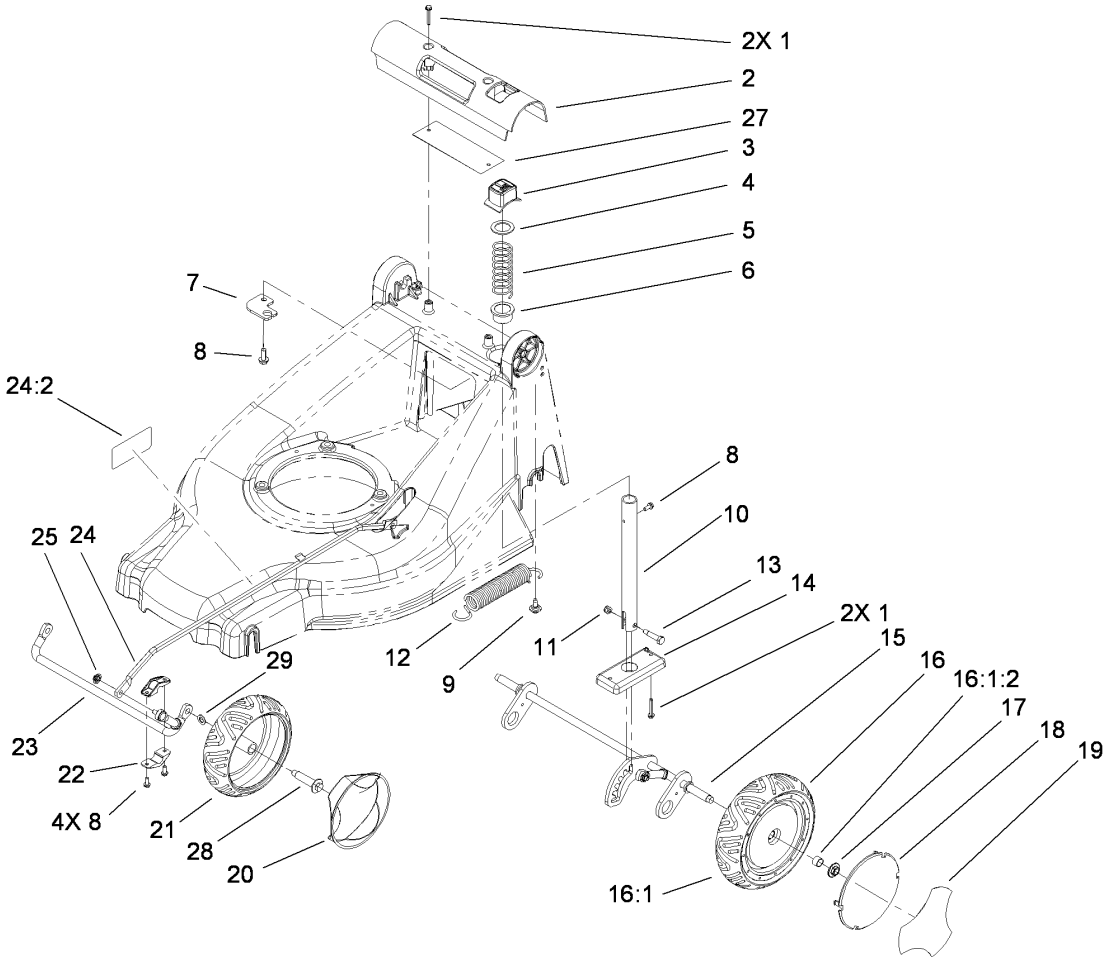


# Height-of-Cut and Wheel Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-4352 | 4 | Screw-HWH |
| 2 | 99-6487 | 1 | Handle-Deck |
| 3 | 99-6480 | 1 | Button-HOC |
| 4 | 88-7540 | 1 | Washer-Backup |
| 5 | 99-6481 | 1 | Spring-Compression, HOC |
| 6 | 99-6483 | 1 | Bushing-HOC |
| 7 | 100-1525 | 1 | Bracket-Cable, Traction |
| 8 | 32144-1 | 6 | Screw-Taptite |
| 9 | 92-9698 | 1 | Screw-Shoulder |
| 10 | 99-6458 | 1 | Pipe-HOC |
| 11 | 3296-73 | 1 | Nut-Lock, NI |
| 12 | 100-4384 | 1 | Spring-Extension, HOC |
| 13 | 99-6459 | 1 | Bolt-Shoulder |
| 14 | 99-6460 | 1 | Plate-Support, HOC |
| 15 | 99-6478 | 1 | Rear Axle ASM |
| 16 | 99-6471 | 2 | Wheel And Tire ASM |
| ❷16:1 | | 1 | Wheel ASM |
| 16:1:2 | 27-6250 | 2 | Bushing |
| 17 | 108-8890 | 2 | Nut-Jam, Lock |
| 18 | 100-4366 | 2 | Cover-Wheel, Smart |
| 19 | 100-9114 | 2 | Decal-Smart Wheel |
| 20 | 95-6543 | 2 | Cover-Wheel |
| 21 | 99-6470 | 2 | Wheel ASM |
| 22 | 100-1500 | 4 | Mount-Axle, Front |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 23 | 104-7562 | 1 | Front Axle ASM |
| 24 | 100-9116 | 1 | Rod ASM |
| 24:2 | 100-4355 | 1 | Decal-HOC |
| 25 | 100-3939 | 2 | Palnut |
| 27 | 100-4383-03 | 1 | Cover-Handle |
| 28 | 614650 | 2 | Bolt-Shoulder |
| 29 | 40-1940 | 2 | Washer |

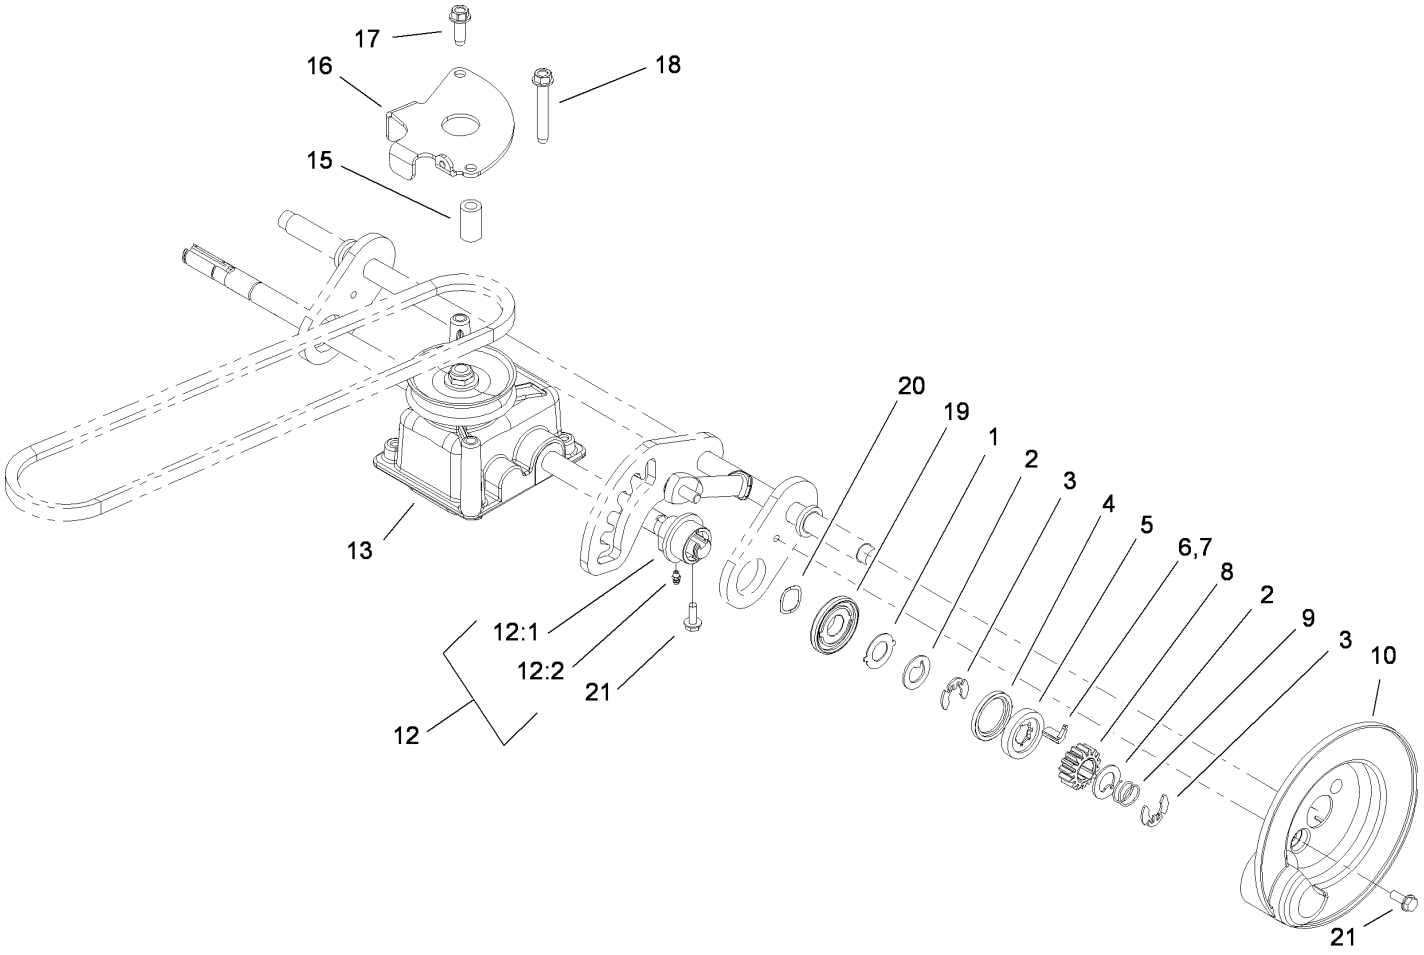



# Drive Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 65-4730 | 2 | Washer-Arm, Pivot |
| 2 | 65-4740 | 4 | Washer-Thrust, Keyed |
| 3 | 65-2720 | 4 | Ring-Clip, Locking |
| 4 | 65-4710 | 2 | Ring-Friction |
| 5 | 65-4760 | 2 | Washer-Clutch |
| 6 | 66-6040 | 1 | Key-Rocking, RH |
| 7 | 66-6050 | 1 | Key-Rocking, LH |
| 8 | 65-4750 | 2 | Gear-Pinion |
| 9 | 65-4720 | 2 | Spring-Compression |
| 10 | 100-1513 | 2 | Cover-Gear |
| 12 | 100-9118 | 2 | Bushing ASM |
| 12:1 | 99-6463 | 1 | Bushing |
| 12:2 | 302-56 | 1 | Fitting-Grease |
| 13 | 104-7593 | 1 | Gear Case ASM |
| 15 | 614673 | 1 | Bushing-Plate, Actuator |
| 16 | 100-1524-03 | 1 | Guide-Transmission |
| 17 | 49-2040 | 1 | Screw-HWHTF |
| 18 | 92-1616 | 1 | Screw-HWHTF |
| 19 | 100-1511 | 2 | Retainer-Ring |
| 20 | 100-1515 | 2 | Washer-Wave |
| 21 | 32144-1 | 4 | Screw-Taptite |

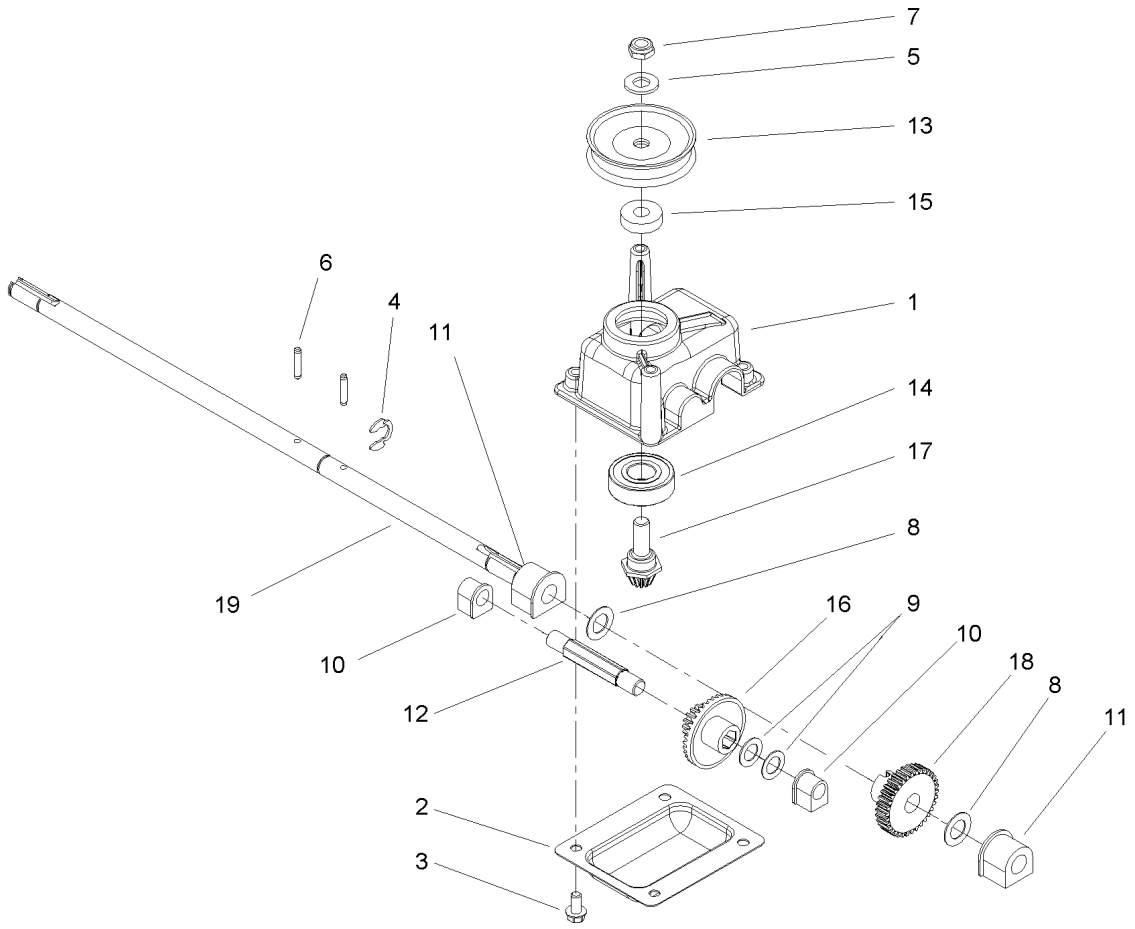



# Gear Case Assembly No. 104-7593

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104-7619 | 1 | Case-Gear |
| 2 | 614668-03 | 1 | Cover-Case, Gear |
| 3 | 32144-4 | 4 | Screw-HWH |
| 4 | 32151-68 | 1 | Ring-Retaining |
| 5 | 3256-24 | 1 | Washer-Flat |
| 6 | 3285-19 | 2 | Pin-Groove |
| 7 | 3296-5 | 1 | Nut-Lock |
| 8 | 36-4780 | 2 | Washer-Plain |
| 9 | 36-4791 | 2 | Washer-Thrust |
| 10 | 60-8750 | 2 | Bushing |
| 11 | 60-8850 | 2 | Bushing |
| 12 | 614696 | 1 | Shaft-Intermediate |
| 13 | 100-1176 | 2 | Pulley-Half |
| 14 | 100-1048 | 1 | Bearing-Ball |
| 15 | 62-6660 | 1 | Spacer |
| 16 | 104-7668 | 1 | Gear-15T Spur, 37T Bevel |
| 17 | 104-7667 | 1 | Gear-Pinion, Bevel |
| 18 | 614596 | 1 | Gear |
| 19 | 100-1514 | 1 | Shaft-Output |

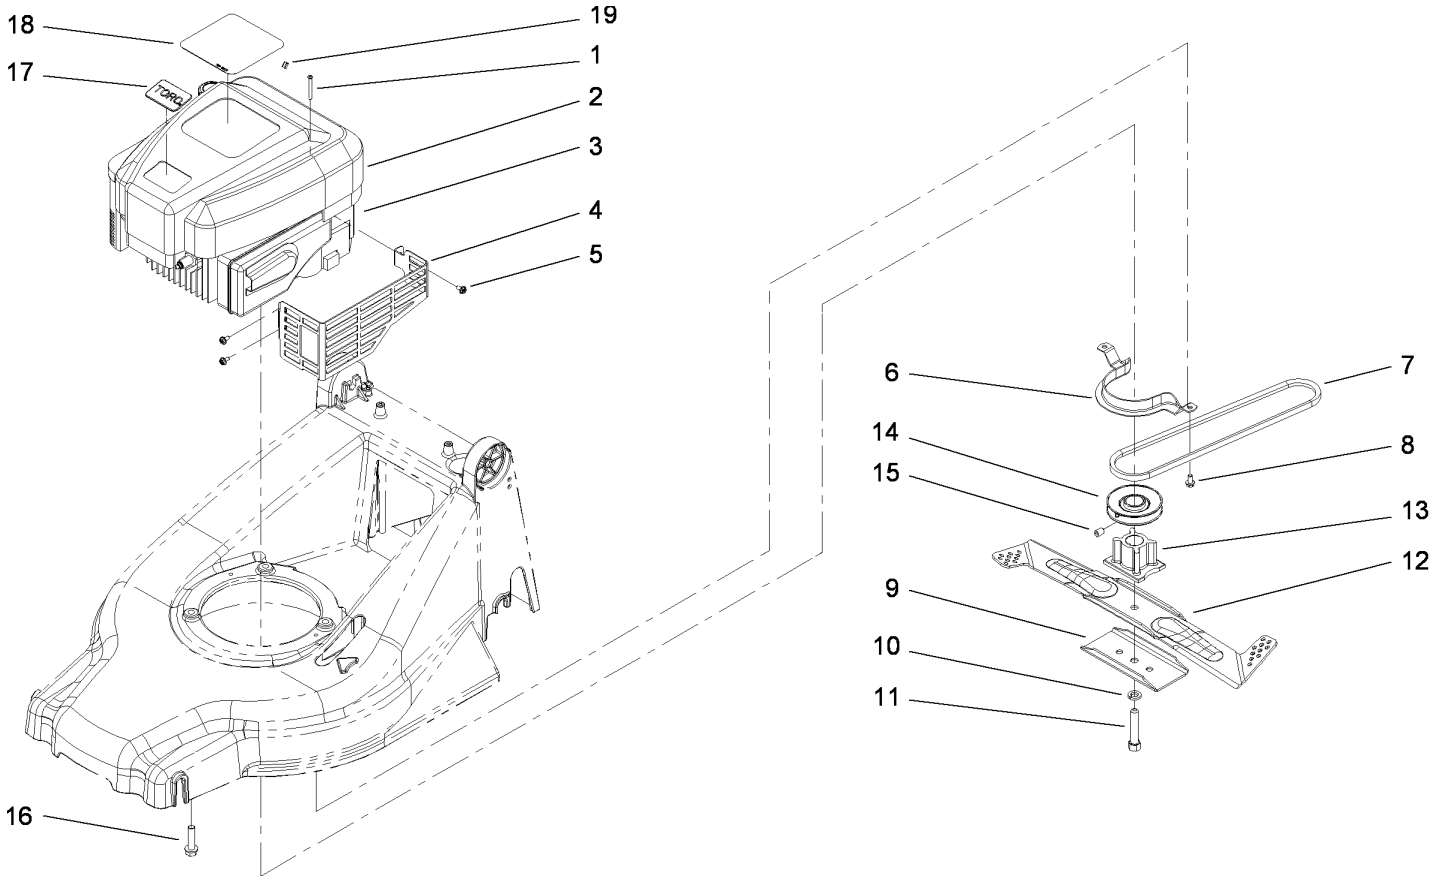


# Engine and Blade Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 32144-121 | 2 | Screw-PPH |
| 2 | 93-0243 | 1 | Shroud-Engine |
| ❷❸3 | | 1 | Engine-Briggs And Stratton, 126T02-0231-B1 |
| 4 | 104-7577-03 | 1 | Shield-Muffler |
| 5 | 104-2065 | 3 | Screw-HWH |
| 6 | 100-1523-03 | 1 | Guide-Belt, Engine |
| 7 | 93-0232 | 1 | V-Belt |
| 8 | 32144-4 | 2 | Screw-HWH |
| 9 | 80-0510-03 | 1 | Stiffener-Blade |
| 10 | 3253-22 | 1 | Washer-Lock |
| 11 | 100-4368 | 1 | Bolt-Blade |
| 12 | 105-0525-03 | 1 | Blade |
| 13 | 104-7554 | 1 | Retainer-Blade |
| 14 | 100-1102 | 1 | Pulley ASM |
| 15 | 104-0214 | 1 | Screw-Set |
| 16 | 32144-102 | 3 | Screw-HWH |
| 17 | 98-3206 | 1 | Decal |
| 18 | 114-5364 | 1 | Decal-Engine |
| 19 | 2210-316 | 1 | Stop-Rope |

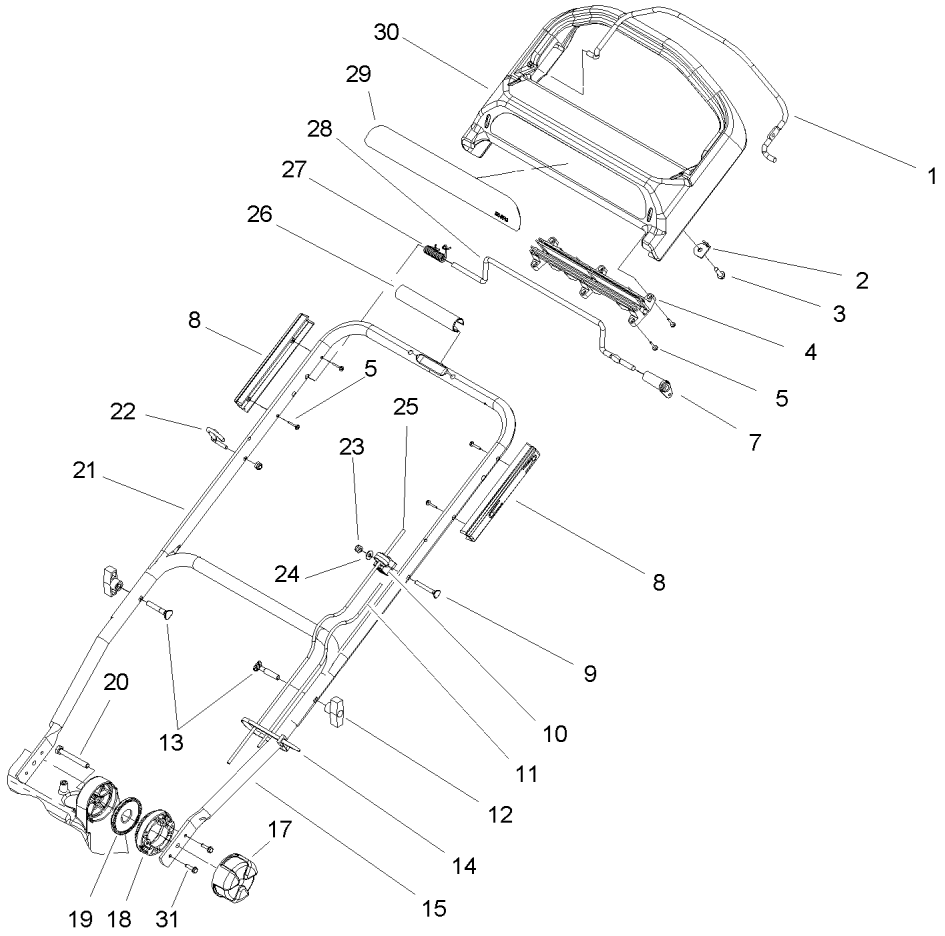


# Handle Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 99-1593-03 | 1 | Bail-Brake |
| 2 | 106-2662 | 1 | Retainer-Cable |
| 3 | 46-8091 | 1 | Screw-HWH |
| 4 | 99-6008 | 1 | Retainer-Control Rod, Traction |
| 5 | 94-4496 | 10 | Screw-PPH |
| 7 | 99-1589 | 1 | Lever-Traction |
| 8 | 99-1590 | 2 | Guide-Handle, Control |
| 9 | 95-4453 | 1 | Screw |
| 10 | 99-5239 | 1 | Anchor-Cable |
| 11 | 100-3936 | 1 | Cable-Traction |
| 12 | 98-7134 | 2 | Knob-Handle |
| 13 | 92-2260 | 2 | Screw-Handle |
| 14 | 3290-378 | 2 | Tie-Cable |
| 15 | 100-1502-05 | 1 | Handle-Lower |
| 17 | 100-4396 | 2 | Knob-Adjusting, Handle |
| 18 | 104-7553-03 | 2 | Disk-Adjusting, Handle |
| 19 | 100-1517 | 2 | Disk-Holding, Handle |
| 20 | 60-6690 | 2 | Capscrew |
| 21 | 99-1596-05 | 1 | Handle-Upper |
| 22 | 86-9671 | 1 | Guide-Rope |
| 23 | 3296-73 | 2 | Nut-Lock, NI |
| 24 | 3256-1 | 1 | Washer-Flat |
| 25 | 100-3937 | 1 | Cable-Brake |
| 26 | 100-5970 | 1 | Cover-Handle |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 27 | 99-1592 | 1 | Spring-Torsion, RH |
| 28 | 99-1588 | 1 | Bar-Control, Traction |
| 29 | 105-8643 | 1 | Decal-Panel |
| 30 | 99-1582 | 1 | Handle-Control |
| 31 | 100-4351 | 4 | Screw-HWH |

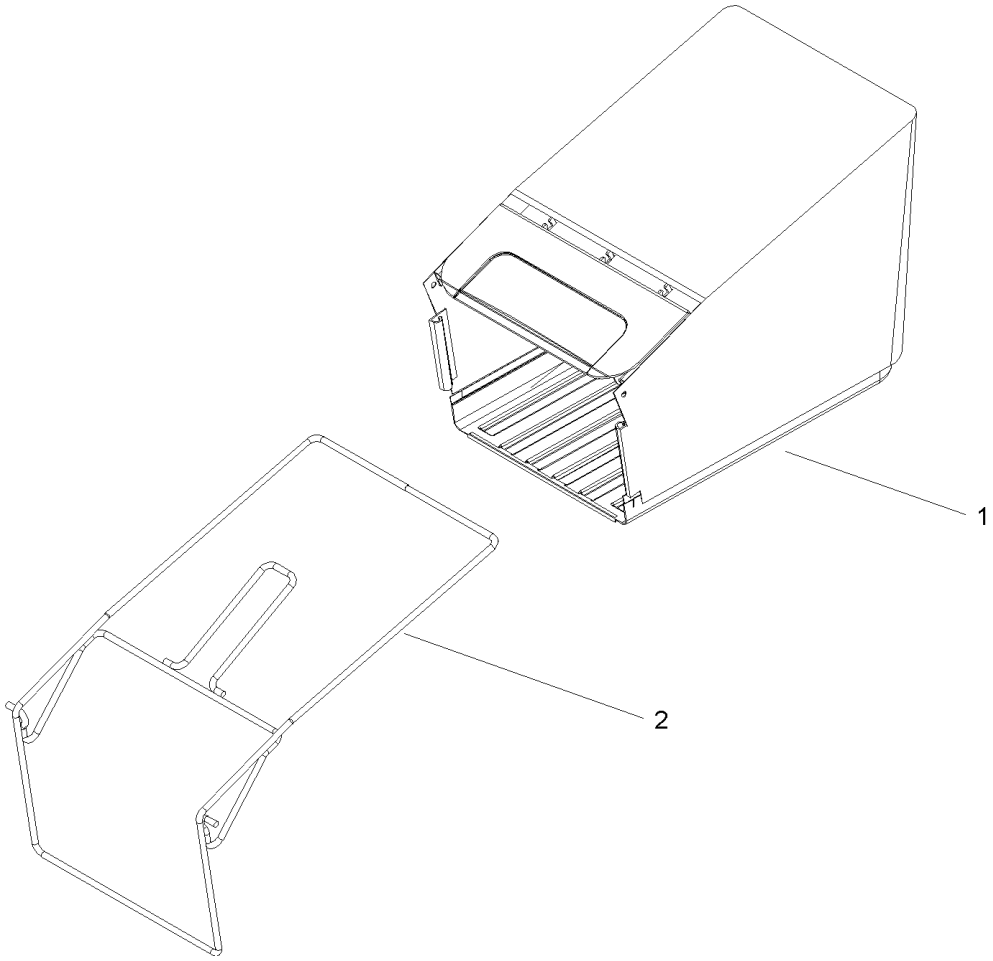


# Rear Bag Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104-7578 | 1 | Grass Bag ASM |
| 2 | 104-7560-03 | 1 | Bag Frame ASM |

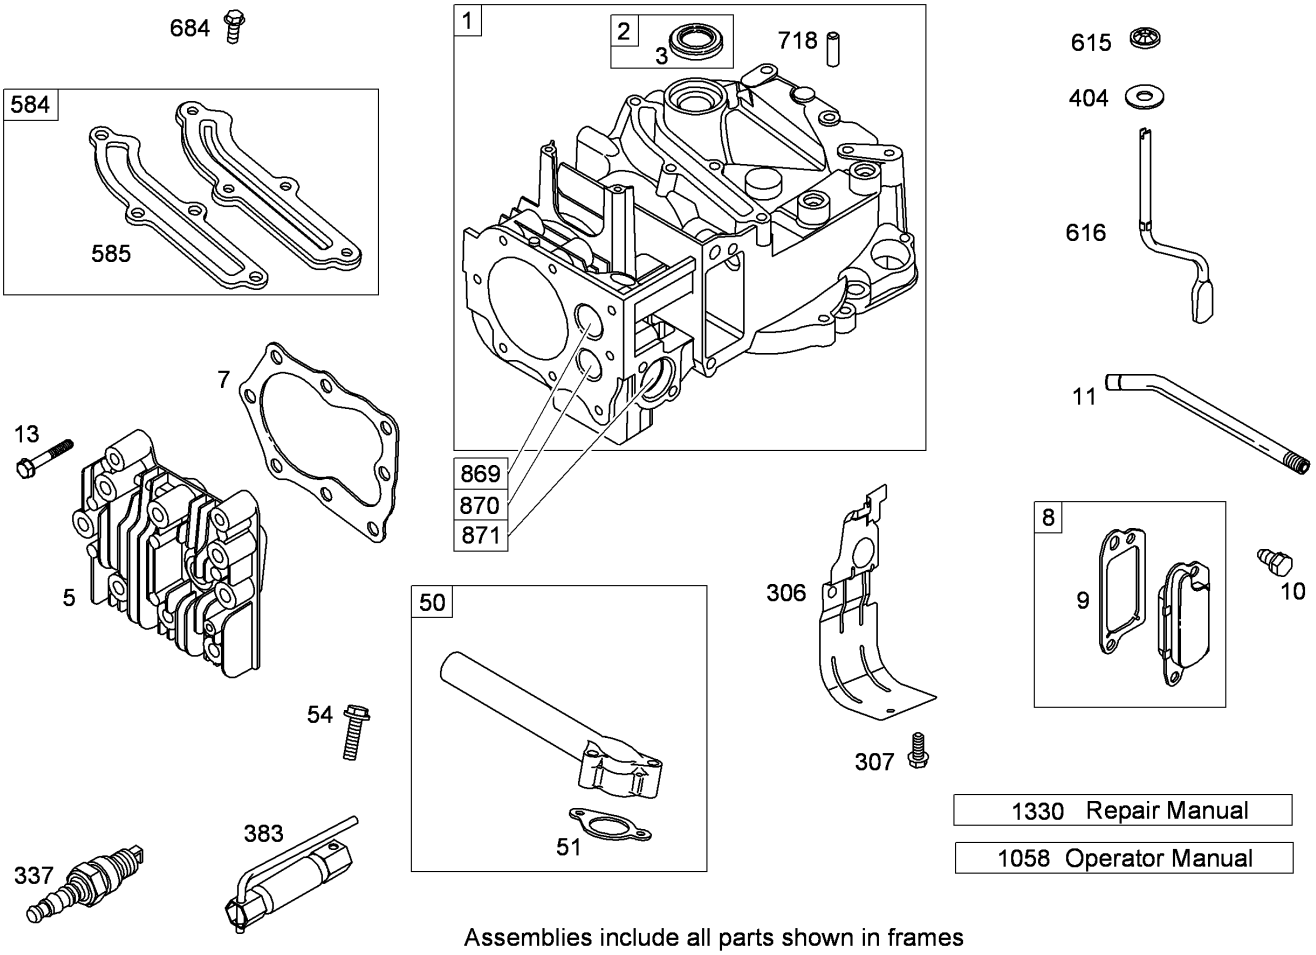




Assemblies include all parts shown in frames


# Cylinder Assembly
# Briggs and Stratton 126T02-0231-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸1 | 697322 | 1 | Cylinder ASM |
| ❸2 | 399269 | 1 | Bushing And Seal Kit |
| ❸❺3 | 299819s | 1 | Seal-Oil (Magneto Side) |
| ❸5 | 691160 | 1 | Head-Cylinder |
| ❸❺7 | 692249 | 1 | Gasket-Head, Cylinder |
| ❸8 | 695250 | 1 | Breather ASM |
| ❸9 | 696125 | 1 | Gasket-Breather |
| ❸10 | 691125 | 1 | Screw (Breather ASM) |
| ❸11 | 691781 | 1 | Tube-Breather |
| ❸13 | 690912 | 1 | Screw (Cylinder Head) |
| ❸50 | 794305 | 1 | Manifold-Intake |
| ❸❺51 | 794306 | 1 | Gasket-Intake |
| ❸54 | 691650 | 1 | Screw (Intake Manifold) |
| ❸306 | 790836 | 1 | Shield-Cylinder |
| ❸307 | 690345 | 1 | Screw (Cylinder Shield) |
| ❸337 | 802592s | 1 | Plug-Spark |
| ❸383 | 89838s | 1 | Wrench-Spark Plug |
| ❸404 | 690272 | 1 | Washer (Governor Crank) |
| ❸584 | 697734 | 1 | Cover-Passage, Breather |
| ❸❺585 | 691879 | 1 | Gasket-Passage, Breather |
| ❸615 | 690340 | 1 | Retainer-Shaft, Governor |
| ❸616 | 698801 | 1 | Crank-Governor |
| ❸684 | 690345 | 1 | Screw (Breather Passage Cover) |
| ❸718 | 690959 | 1 | Pin-Locating |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸869 | 691155 | 1 | Seat-Valve (Intake) |
| ❸870 | 690380 | 1 | Seat-Valve (Exhaust) |
| ❸871 | 262001 | 1 | Bushing-Guide (Exhaust) |
| ❸871 | 63709 | 1 | Bushing-Guide (Intake) |
| ❸1058 | MS3262 | 1 | Operator Manual |
| ❸1330 | 270962 | 1 | Repair Manual |

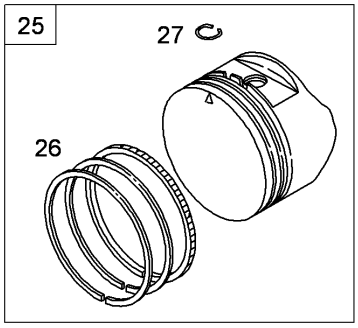

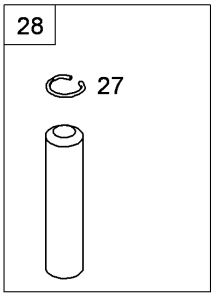


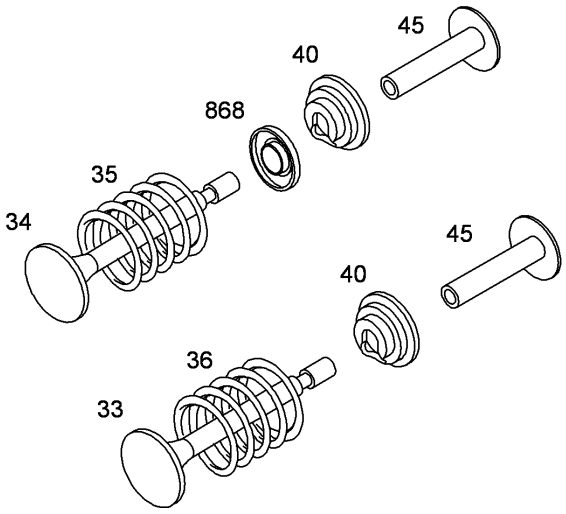

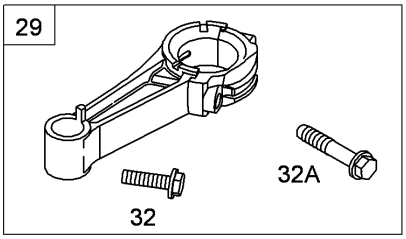
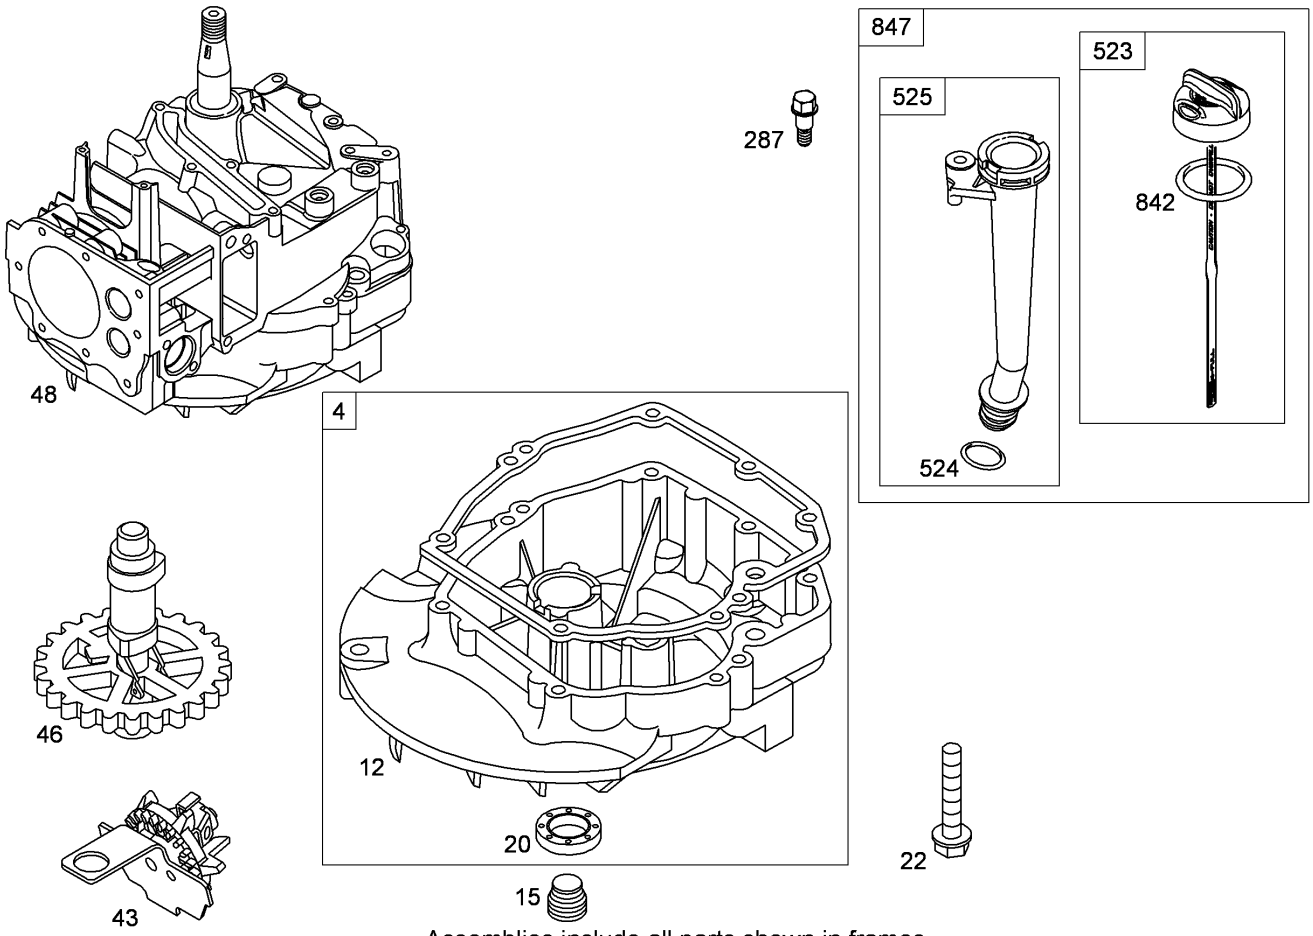





Assemblies include all parts shown in frames
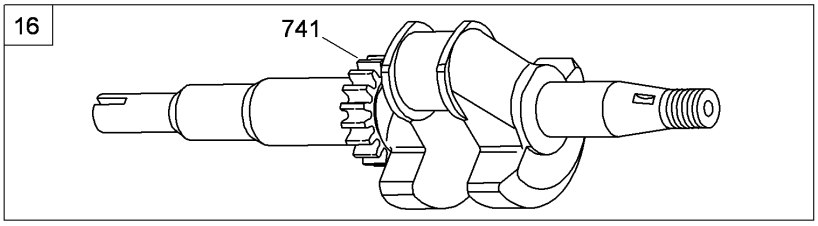
# Crankshaft Assembly
# Briggs and Stratton 126T02-0231-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸16 | 696009 | 1 | Crankshaft |
| ❸24 | 222698s | 1 | Key-Flywheel |
| ❸25 | 795429 | 1 | Piston ASM (STD) |
| ❸25 | 795430 | 1 | Piston ASM (.020 Oversize) |
| ❸26 | 795431 | 1 | Ring Set (STD) |
| ❸26 | 795432 | 1 | Ring Set (.020 Oversize) |
| ❸27 | 691866 | 1 | Lock-Pin, Piston |
| ❸28 | 499423 | 1 | Pin-Piston (STD) |
| ❸29 | 499424 | 1 | Rod-Connecting |
| ❸32 | 691664 | 1 | Screw (Connecting Rod ) |
| ❸32A | 695759 | 1 | Screw (Connecting Rod ) |
| ❸33 | 262651s | 1 | Valve-Exhaust |
| ❸34 | 262652s | 1 | Valve-Intake |
| ❸35 | 691270 | 1 | Spring-Valve (Intake) |
| ❸36 | 691270 | 1 | Spring-Valve (Exhaust) |
| ❸40 | 692194 | 1 | Retainer-Valve |
| ❸45 | 690548 | 1 | Tappet-Valve |
| ❸741 | 790345 | 1 | Gear-Timing |
| ❸868 | 697338 | 1 | Seal-Valve |




Assemblies include all parts shown in frames

# Crankcase Assembly
# Briggs and Stratton 126T02-0231-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸4 | 493279 | 1 | Sump-Engine |
| ❸❺12 | 692232 | 1 | Gasket-Crankcase (.015 STD) |
| ❸15 | 691680 | 1 | Plug-Drain, Oil |
| ❸❺20 | 399781s | 1 | Seal-Oil (PTO Side) |
| ❸22 | 691092 | 1 | Screw (Engine Sump) |
| ❸43 | 691997 | 1 | Slinger-Oil, Governor |
| ❸46 | 691449 | 1 | Camshaft |
| ❸48 | 692748 | 1 | Short Block |
| ❸287 | 690940 | 1 | Screw (Dipstick Tube) |
| ❸523 | 499621 | 1 | Dipstick |
| ❸❺524 | 692296 | 1 | Seal-O Ring (Dipstick Tube) |
| ❸525 | 495265 | 1 | Tube-Dipstick |
| ❸❺842 | 691031 | 1 | Seal-O Ring |
| ❸847 | 692047 | 1 | Dipstick Tube ASM |

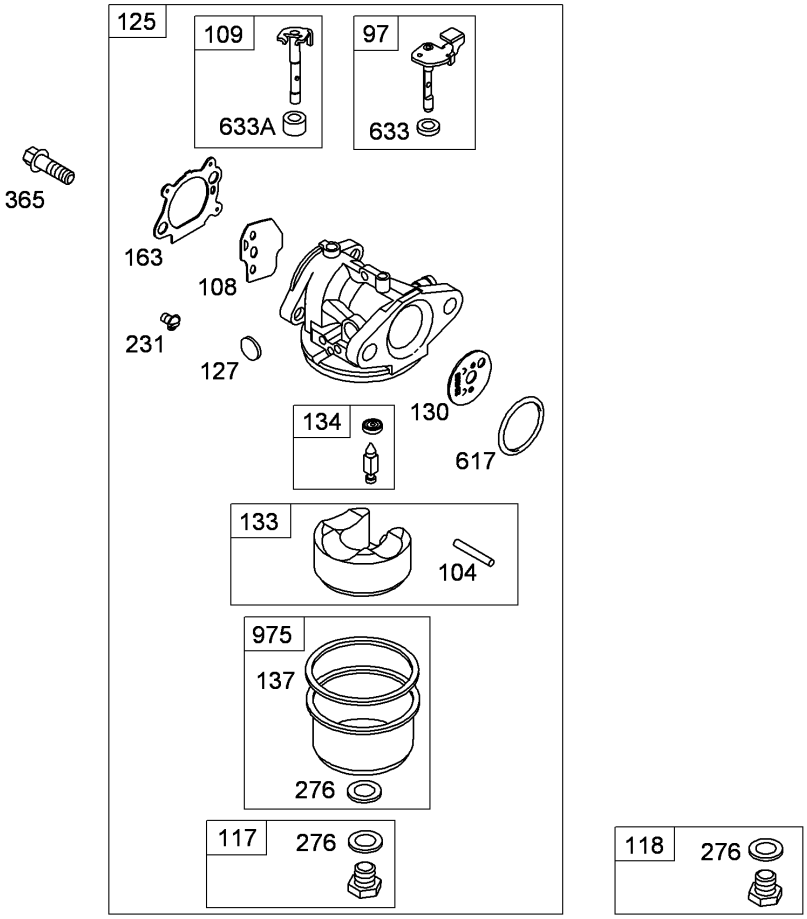


Assemblies include all parts shown in frames

# Carburetor Assembly
# Briggs and Stratton 126T02-0231-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸97 | 696565 | 1 | Shaft-Throttle |
| ❸❹104 | 691242 | 1 | Pin-Hinge, Float |
| ❸108 | 790844 | 1 | Valve-Choke |
| ❸109 | 790843 | 1 | Shaft-Choke |
| ❸117 | 691428 | 1 | Jet-Main (Standard) |
| ❸118 | 498977 | 1 | Jet-Main (High Altitude) |
| ❸125 | 794304 | 1 | Carburetor |
| ❸❹127 | 694468 | 1 | Plug-Welch |
| ❸130 | 696564 | 1 | Valve-Throttle |
| ❸133 | 398187 | 1 | Float-Carburetor |
| ❸❹134 | 398188 | 1 | Needle And Seat Kit |
| ❸❹137 ❻ | 693981 | 1 | Gasket-Bowl, Float |
| ❸❹163 ❺❻ | 272653s | 1 | Gasket-Cleaner, Air |
| ❸231 | 691636 | 1 | Screw (Choke Valve) |
| ❸❹276 ❻ | 271716 | 1 | Washer-Sealing |
| ❸365 | 692524 | 1 | Screw (Carburetor) |
| ❸❹617 ❻ | 270344s | 1 | Seal-O Ring (Intake Manifold) |
| ❸❹633 ❻ | 691321 | 1 | Seal-Shaft, Choke Throttle |
| ❸❹633A ❻ | 693867 | 1 | Seal-Shaft, Choke Throttle |
| ❸975 | 493640 | 1 | Bowl-Float |

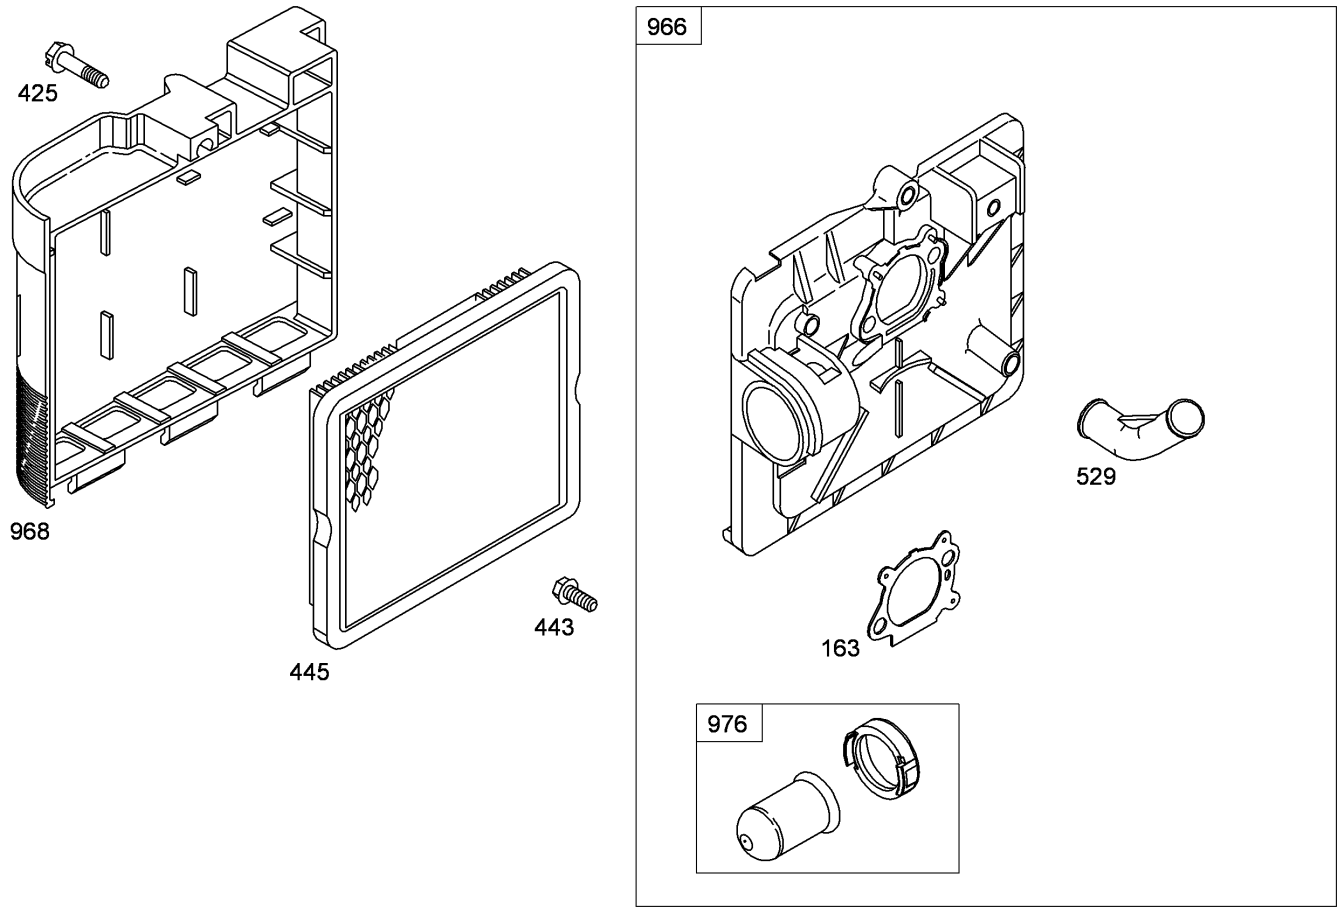


Assemblies include all parts shown in frames

# Air Cleaner Assembly
# Briggs and Stratton 126T02-0231-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❹163 ❺❻ | 272653s | 1 | Gasket-Cleaner, Air |
| ❸425 | 690670 | 1 | Screw (Air Cleaner Cover) |
| ❸443 | 692523 | 1 | Screw (Air Cleaner Primer Base) |
| ❸445 | 491588s | 1 | Filter-Cartridge, Air Cleaner |
| ❸529 | 691923 | 1 | Grommet |
| ❸966 | 792040 | 1 | Base-Primer, Air Cleaner |
| ❸968 | 692298 | 1 | Cover-Cleaner, Air |
| ❸976 | 694395 | 1 | Primer-Carburetor |

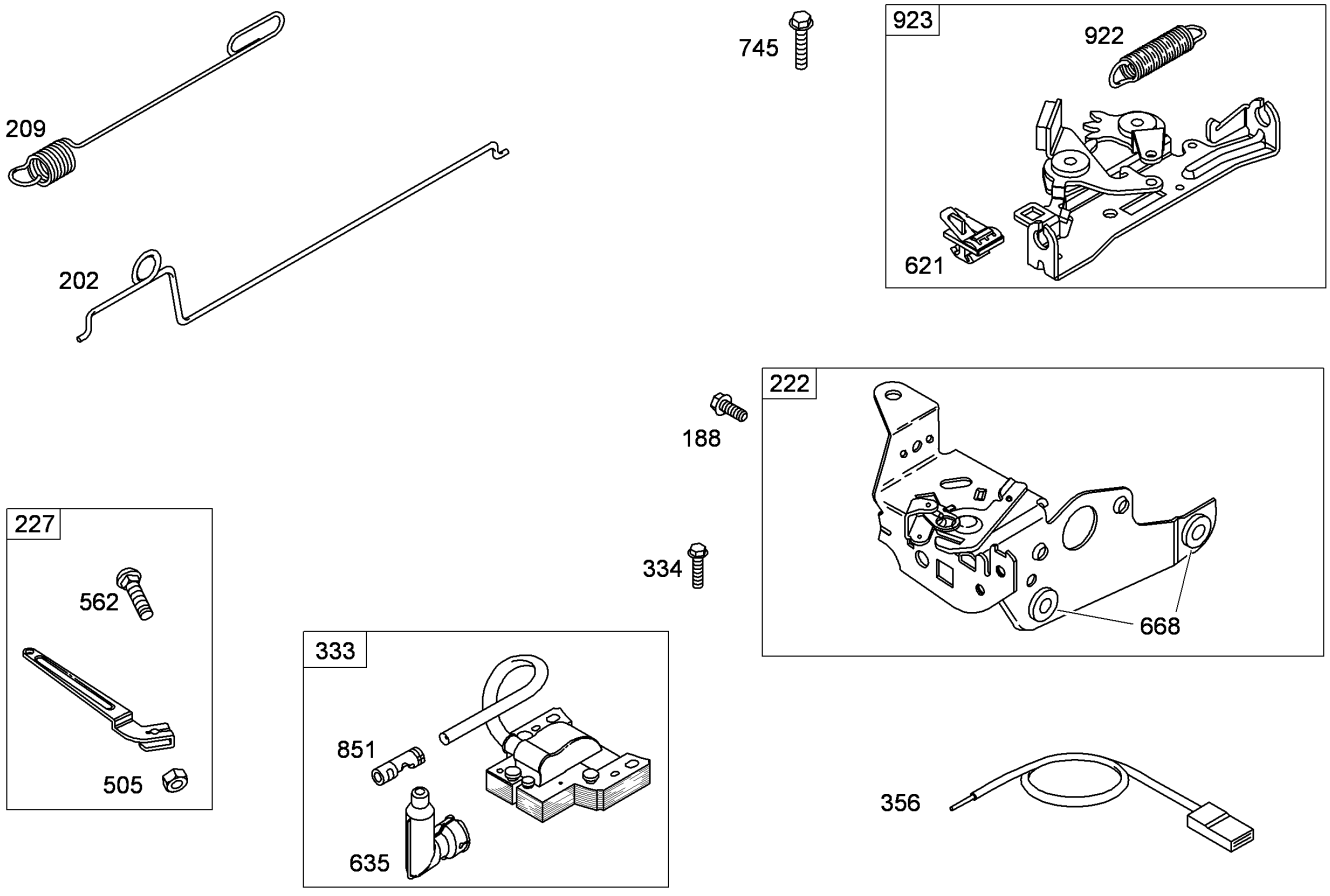


Assemblies include all parts shown in frames

# Governor Assembly
# Briggs and Stratton 126T02-0231-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸188 | 693399 | 1 | Screw (Control Bracket) |
| ❸202 | 691829 | 1 | Link-Governor, Mechanical |
| ❸209 | 691852 | 1 | Spring-Governor |
| ❸222 | 793754 | 1 | Bracket-Control |
| ❸227 | 690783 | 1 | Lever-Control, Governor |
| ❸333 | 793353 | 1 | Armature-Magneto |
| ❸334 | 691061 | 1 | Screw (Magneto Armature) |
| ❸356 | 692390 | 1 | Wire-Stop |
| ❸505 | 691251 | 1 | Nut (Governor Control Lever) |
| ❸562 | 691119 | 1 | Bolt (Governor Control Lever) |
| ❸621 | 692310 | 1 | Switch-Stop |
| ❸635 | 793351 | 1 | Boot-Spark Plug |
| ❸❺668 | 493823 | 1 | Spacer |
| ❸745 | 691648 | 1 | Screw |
| ❸851 | 692424 | 1 | Terminal–Spark Plug |
| ❸922 | 691831 | 1 | Spring-Brake |
| ❸923 | 691994 | 1 | Brake ASM |

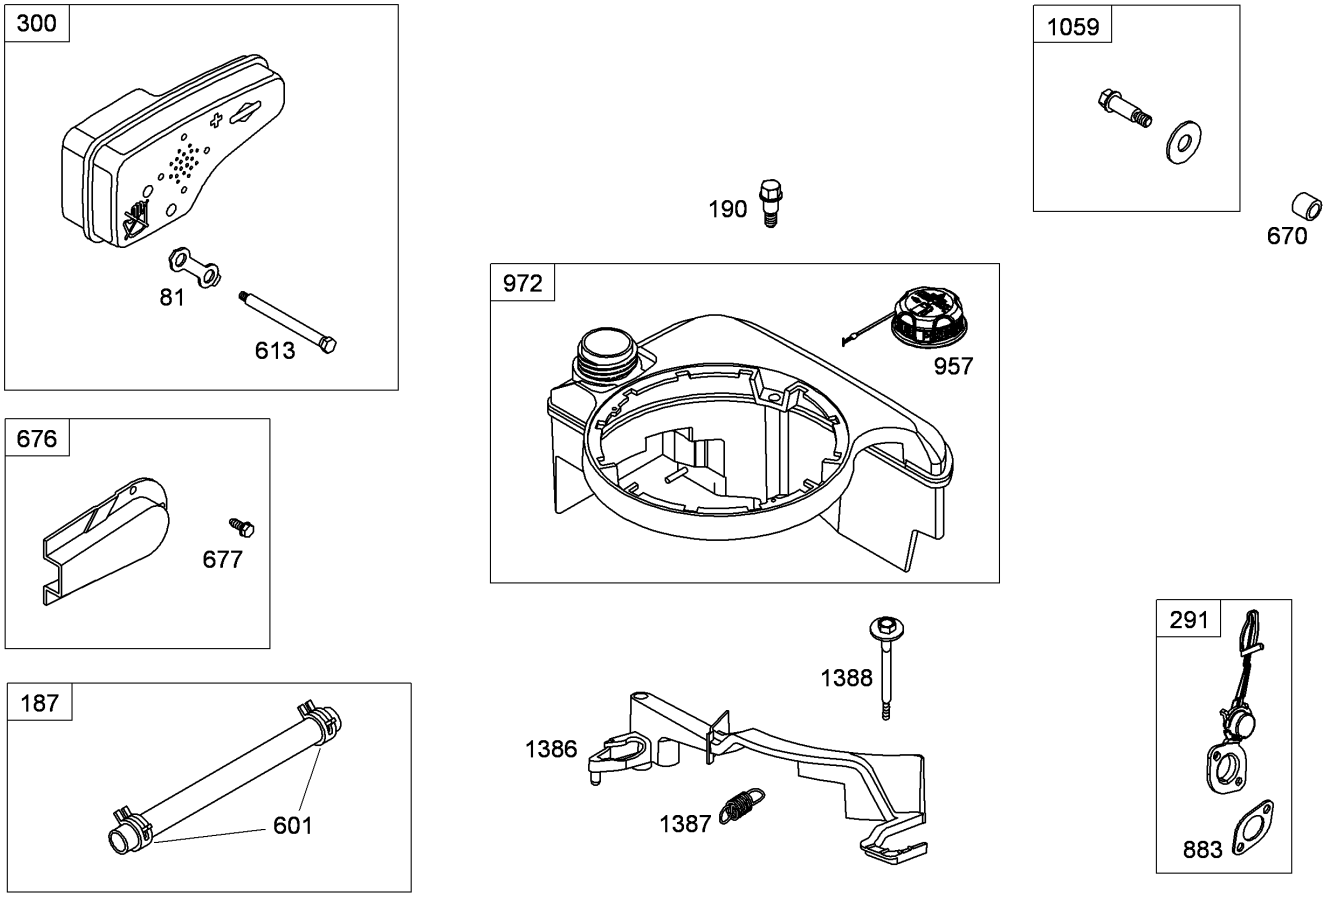



Assemblies include all parts shown in frames

# Muffler and Fuel Tank Assembly
# Briggs and Stratton 126T02-0231-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸81 | 691740 | 1 | Lock-Screw, Muffler |
| ❸187 | 791766 | 1 | Line-Fuel (Cut To Required Length) |
| ❸190 | 690940 | 1 | Screw (Fuel Tank) |
| ❸291 | 790830 | 1 | Thermostat |
| ❸300 | 692038 | 1 | Muffler |
| ❸601 | 791850 | 1 | Clamp-Hose |
| ❸613 | 691340 | 1 | Screw (Muffler) |
| ❸670 | 692294 | 1 | Spacer-Tank, Fuel |
| ❸676 | 493871 | 1 | Deflector-Muffler |
| ❸677 | 690661 | 1 | Screw (Muffler Deflector) |
| ❸❺883 | 691881 | 1 | Gasket-Exhaust |
| ❸957 | 699985 | 1 | Cap-Tank, Fuel |
| ❸972 | 699374 | 1 | Tank-Fuel |
| ❸1059 | 692311 | 1 | Screw And Washer Kit |
| ❸1386 | 790848 | 1 | Vane-Air |
| ❸1387 | 790849 | 1 | Spring-Vane, Air |
| ❸1388 | 790850 | 1 | Screw (Air Vane) |

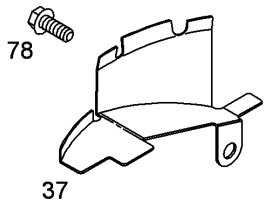


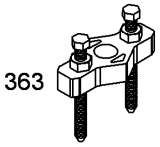








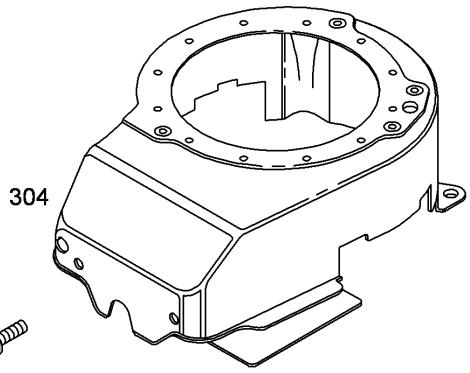
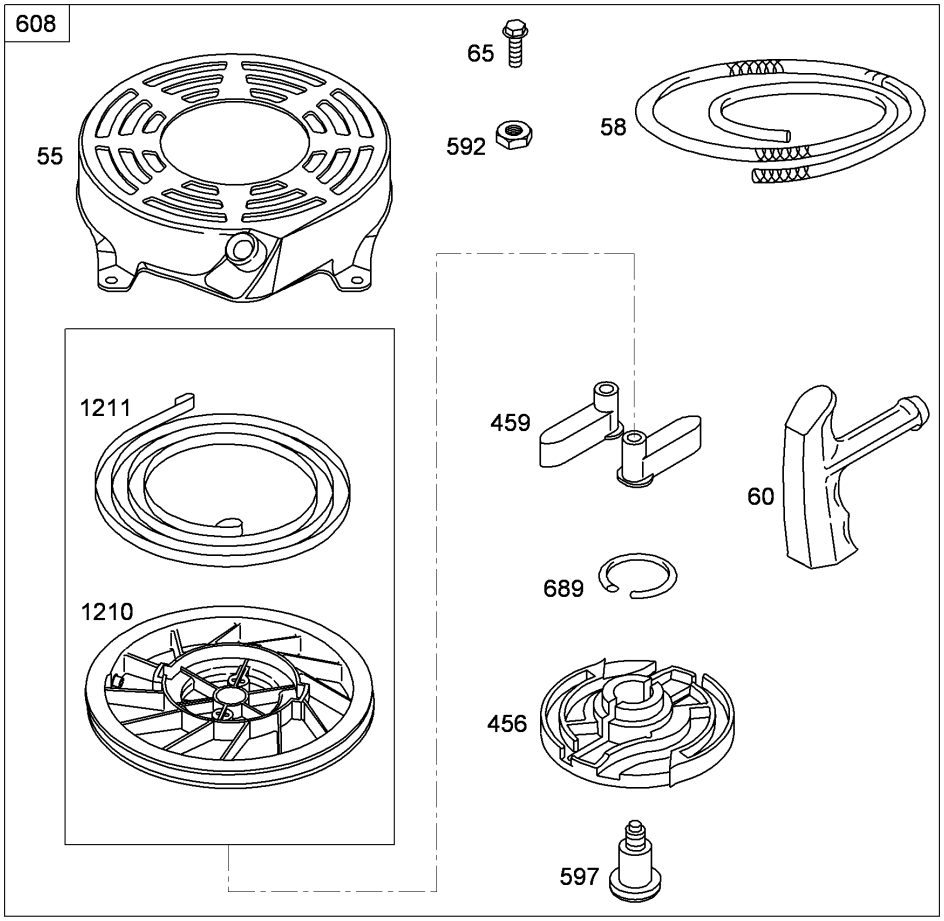


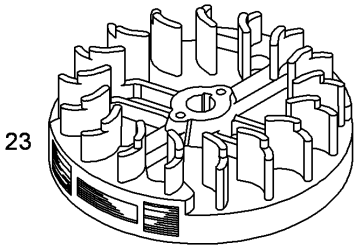

1036 Emissions Label

Assemblies include all parts shown in frames

# Blower Housing Assembly
# Briggs and Stratton 126T02-0231-B1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸23 | 691987 | 1 | Flywheel |
| ❸37 | 793756 | 1 | Guard-Flywheel |
| ❸78 | 691108 | 1 | Screw (Flywheel Guard) |
| ❸304 | 790983 | 1 | Housing-Blower |
| ❸305 | 691108 | 1 | Screw (Blower Housing) |
| ❸332 | 690662 | 1 | Nut (Flywheel) |
| ❸363 | 19069 | 1 | Puller-Flywheel |
| ❸455 | 791760 | 1 | Cup-Flywheel |
| ❸1036 | | 1 | Label-Emissions |





Assemblies include all parts shown in frames

# Starter Assembly
# Briggs and Stratton 126T02-0231-B1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸55 | 691421 | 1 | Housing-Starter, Rewind |
| ❸58 | 697316 | 1 | Rope-Starter (Cut To Required Length) |
| ❸60 | 281434s | 1 | Grip-Rope, Starter |
| ❸65 | 690837 | 1 | Screw (Rewind Starter) |
| ❸456 | 692299 | 1 | Plate-Friction, Pawl |
| ❸459 | 281505s | 1 | Ratchet-Pawl |
| ❸592 | 690800 | 1 | Nut (Rewind Starter) |
| ❸597 | 691696 | 1 | Screw (Pawl Friction Plate) |
| ❸608 | 497680 | 1 | Starter-Rewind |
| ❸689 | 691855 | 1 | Spring-Friction |
| ❸1210 | 498144 | 1 | Pulley And Spring ASM (Pulley) |
| ❸1211 | 498144 | 1 | Pulley And Spring ASM (Spring) |


358 Engine Gasket Set

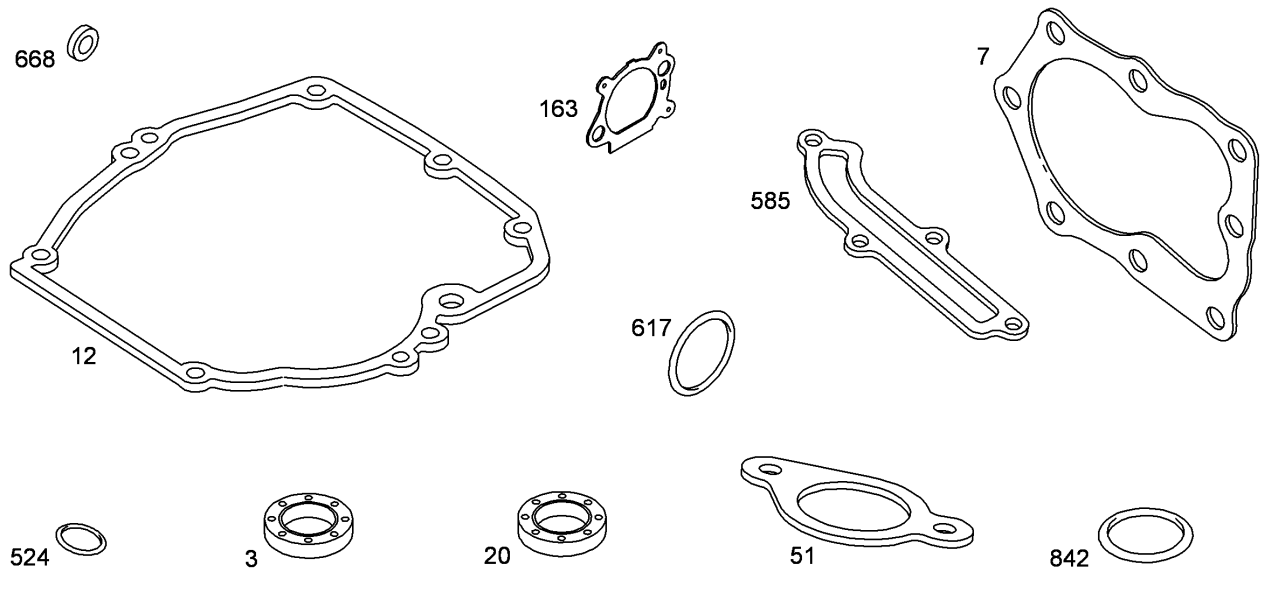



Assemblies include all parts shown in frames

# Engine Gasket Set
# Briggs and Stratton 126T02-0231-B1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❺3 | 299819s | 1 | Seal-Oil (Magneto Side) |
| ❸❺7 | 692249 | 1 | Gasket-Head, Cylinder |
| ❸❺12 | 692232 | 1 | Gasket-Crankcase (.015 STD) |
| ❸❺20 | 399781s | 1 | Seal-Oil (PTO Side) |
| ❸❺51 | 794306 | 1 | Gasket-Intake |
| ❸❹163 | 272653s | 1 | Gasket-Cleaner, Air |
| ❺❻ | | | |
| ❸358 | 794307 | 1 | Engine Gasket Set |
| ❸❺524 | 692296 | 1 | Seal-O Ring (Dipstick Tube) |
| ❸❺585 | 691879 | 1 | Gasket-Passage, Breather |
| ❸❹617 | 270344s | 1 | Seal-O Ring (Intake Manifold) |
| ❺❻ | | | |
| ❸❺668 | 493823 | 1 | Spacer |
| ❸❺842 | 691031 | 1 | Seal-O Ring (Dipstick) |

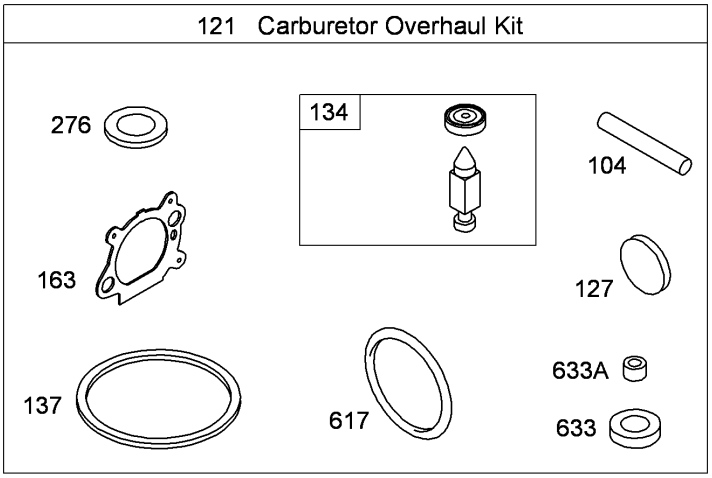

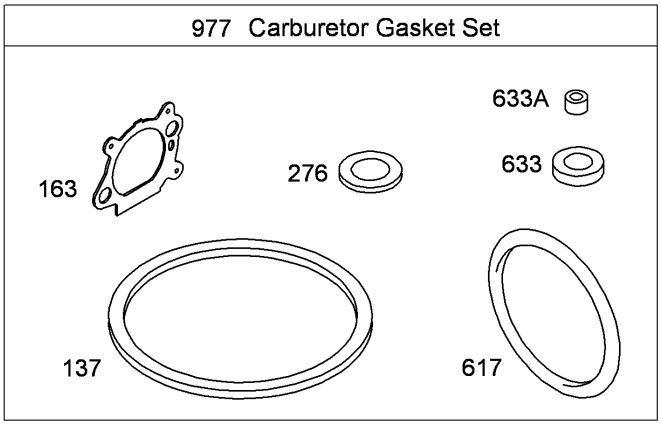
Assemblies include all parts shown in frames

# Carburetor Overhaul Kit
# Briggs and Stratton 126T02-0231-B1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❹104 | 691242 | 1 | Pin-Hinge, Float |
| ❸121 | 498260 | 1 | Carburetor Overhaul Kit |
| ❸❹127 | 694468 | 1 | Plug-Welch |
| ❸❹134 | 398188 | 1 | Needle And Seat Kit |
| ❸❹137 ❻ | 693981 | 1 | Gasket-Bowl, Float |
| ❸❹163 ❺❻ | 272653s | 1 | Gasket-Cleaner, Air |
| ❸❹276 ❻ | 271716 | 1 | Washer-Sealing |
| ❸❹617 ❺❻ | 270344s | 1 | Seal-O Ring (Intake Manifold) |
| ❸❹633 ❻ | 691321 | 1 | Seal-Shaft, Choke Throttle |
| ❸❹633A ❻ | 693867 | 1 | Seal-Shaft, Choke Throttle |
| ❸977 | 498261 | 1 | Carburetor Gasket Set |

# NOTES

# NOTES

# NOTES


TORO®