Form Number 3360-918 Rev A

# Super Recycler® Lawn Mower

**Model No. 20092 - 290000001 and up.**

## Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

# Contents


| Description | Page |
|---|---|
| Deck Housing and Rear Door Assembly | 3 |
| Discharge Door Assembly No. 107-3717 | 4 |
| Housing Assembly No. 115-2854 | 5 |
| Front Wheel and Height-of-Cut Assembly | 6 |
| Rear Wheel and Transmission Assembly | 7 |
| Engine and Blade Assembly | 8 |
| Handle Assembly | 9 |
| Bag Assembly | 10 |
| Attachments and Accessories List | 11 |


# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


| | |
|---|---|
| AR | as required |
| ASM | assembly |
| BBC | blade brake clutch |
| CARR | carriage |
| DEG | degrees |
| EXT | external |
| FH | flat head |
| GA | gauge |
| HD | heavy-duty |
| HF | hex flange |
| HH | hex head |
| HHF | hex head flange |
| HHFTF | hex head flange thread forming |
| HJ | hex jam |
| HLH | hex lag head |
| HOC | height-of-cut |
| HSBH | hex socket button head |
| HSFH | hex socket flat head |
| HSH | hex socket head |
| HWH | hex washer head |
| HWHTF | hex washer head thread forming |
| HYD | hydraulic |
| LH | left hand |
| NI | nylon insert |
| NPTF | national pipe thread fine |
| PFH | phillips flat head |
| PPH | phillips pan head |
| PPHTF | phillips pan head thread forming |
| PRH | phillips round head |
| PTH | phillips truss head |
| PTO | power-take-off |
| RH | right hand |
| ROPS | roll-over protection system |
| SFH | slotted fillister head |
| SHH | slotted hex head |
| SHWH | slotted hex washer head |
| SPH | slotted pan head |
| SQH | square head |
| SRH | slotted round head |
| STD | standard |
| TAP | self tapping |
| TTH | torx truss head |

# Footnotes

❶ Not illustrated

❷ Not serviced separately


❸ Obtain from your local Briggs & Stratton dealer

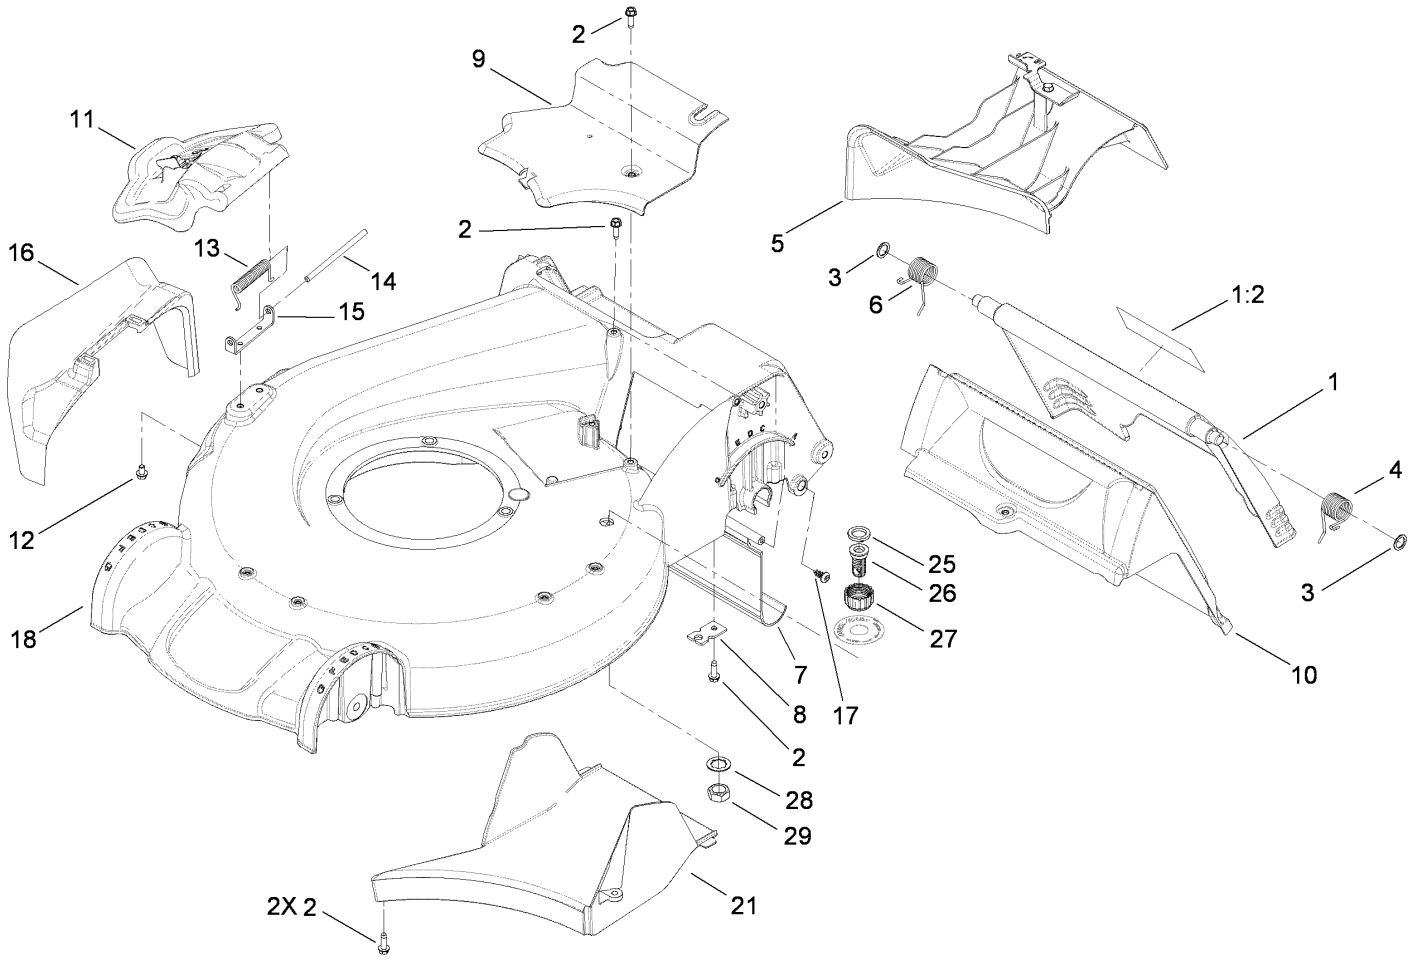


# Deck Housing and Rear Door Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 114-7992 | 1 | Rear Door ASM |
| 1:2 | 114-7982 | 1 | Decal-Warning |
| 2 | 49-2040 | 5 | Screw-HWHTF |
| 3 | 94-8196 | 2 | Washer-Nylon |
| 4 | 115-2859 | 1 | Spring-Torsion |
| 5 | 115-8413 | 1 | Mulch Plug ASM |
| 6 | 114-7924 | 1 | Spring-Torsion |
| 7 | 114-1586 | 1 | Shield-Trailing |
| 8 | 107-7497 | 1 | Bracket-Cable, Traction |
| 9 | 107-7494 | 1 | Cover-Belt |
| 10 | 114-2668 | 1 | Chute |
| 11 | 107-3717 | 1 | Discharge Door ASM |
| 12 | 99-8445 | 2 | Screw-HWH |
| 13 | 99-5293 | 1 | Spring-Torsion |
| 14 | 99-5291 | 1 | Rod-Cover |
| 15 | 112-6416 | 1 | Bracket-Cover |
| 16 | 108-3753 | 1 | Chute-Discharge, Side |
| 17 | 117-1092 | 2 | Screw-PPH |
| 18 | 115-2854 | 1 | Housing ASM |
| 21 | 107-7495 | 1 | Tunnel-Discharge |
| 25 | 112-6438 | 1 | Washer-Seal, Washout Port |
| 26 | 112-6400 | 1 | Port-Washout |
| 27 | 112-6401 | 1 | Coupling-Hose, Washout Port |
| 28 | 3254-5 | 1 | Washer-Tooth |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 29 | 3218-6 | 1 | Nut-Jam |

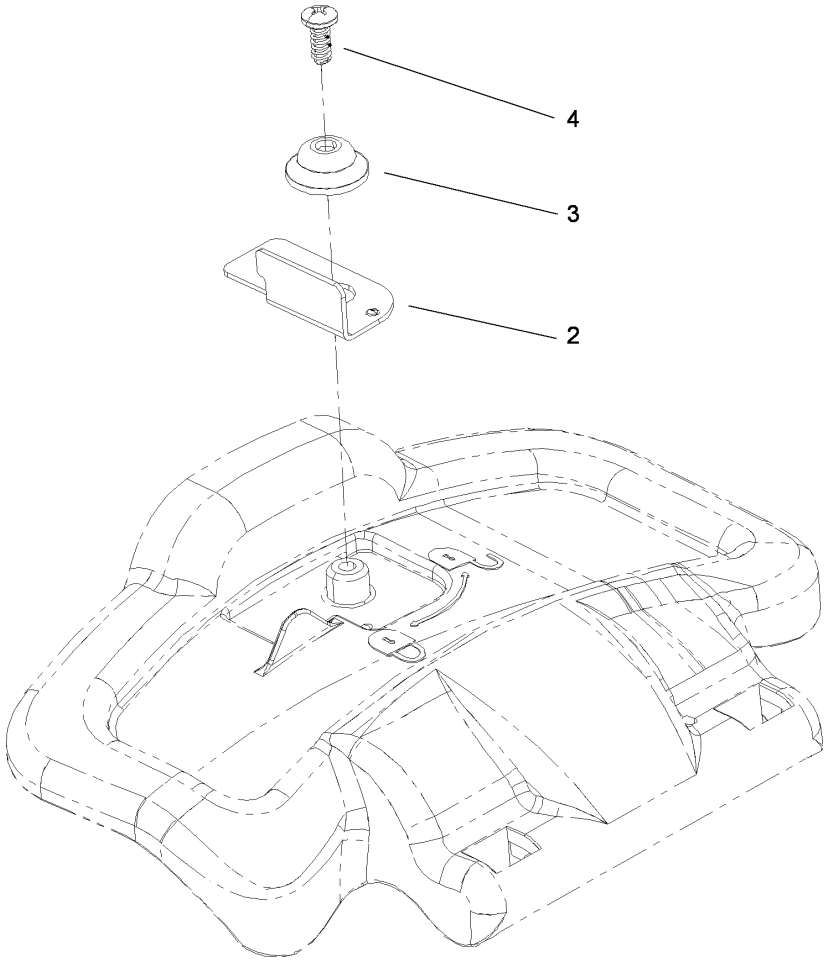



# Discharge Door Assembly No. 107-3717

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 2 | 107-0795 | 1 | Latch-Door |
| 3 | 107-7456 | 1 | Cap-Door |
| 4 | 107-7461 | 1 | Screw-Plastite |

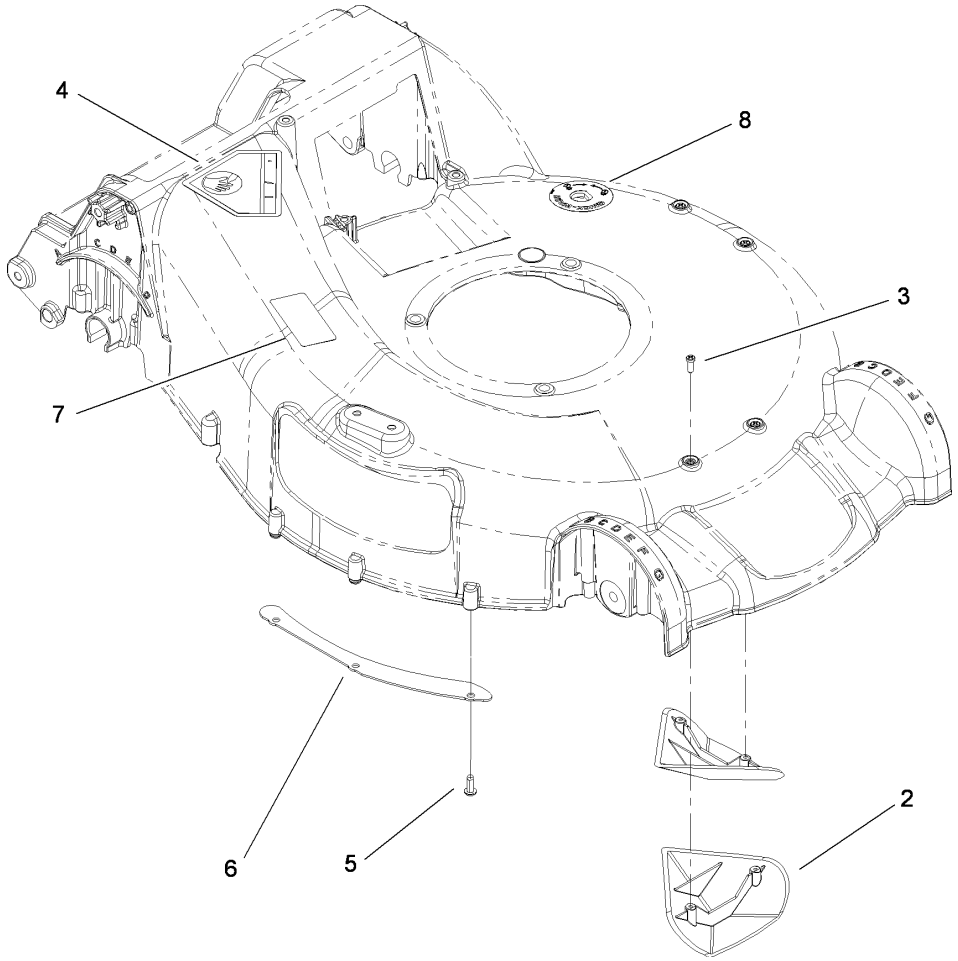



# Housing Assembly No. 115-2854

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 2 | 108-3798 | 2 | Kicker-Housing |
| 3 | 32144-111 | 4 | Screw-PPH |
| 4 | 94-8072 | 1 | Decal-Danger |
| 5 | 63-8590 | 3 | Screw |
| 6 | 105-1316-03 | 1 | Sheet-Lip |
| 7 | 108-8117 | 1 | Decal |
| 8 | 112-8867 | 1 | Decal |

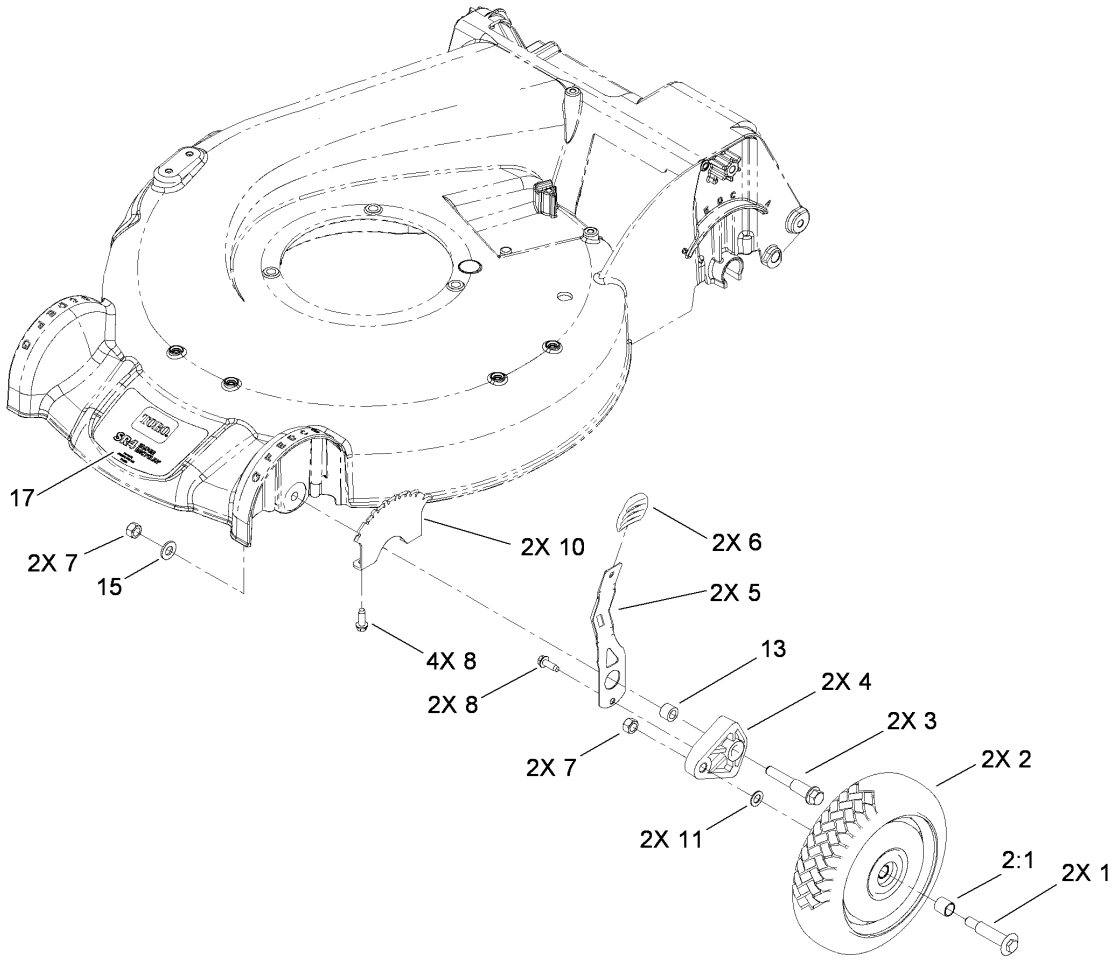


# Front Wheel and Height-of-Cut Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 92-1057 | 2 | Bolt-Shoulder |
| 2 | 51-2752 | 2 | Wheel ASM |
| 2:1 | 27-6250 | 2 | Bushing |
| 3 | 114-3467 | 2 | Screw-Shoulder |
| 4 | 107-7492 | 2 | Arm-Pivot |
| 5 | 107-7491 | 2 | Arm-Spring |
| 6 | 105-3042 | 2 | Knob-Lever, HOC |
| 7 | 603773 | 4 | Nut |
| 8 | 49-2040 | 10 | Screw-HWHTF |
| 10 | 107-7478 | 4 | Plate-HOC |
| 11 | 40-1940 | 2 | Washer |
| 13 | 52-2480 | 2 | Spacer-Wheel |
| 15 | 3256-24 | 2 | Washer-Flat |
| 17 | 108-8168 | 1 | Decal |

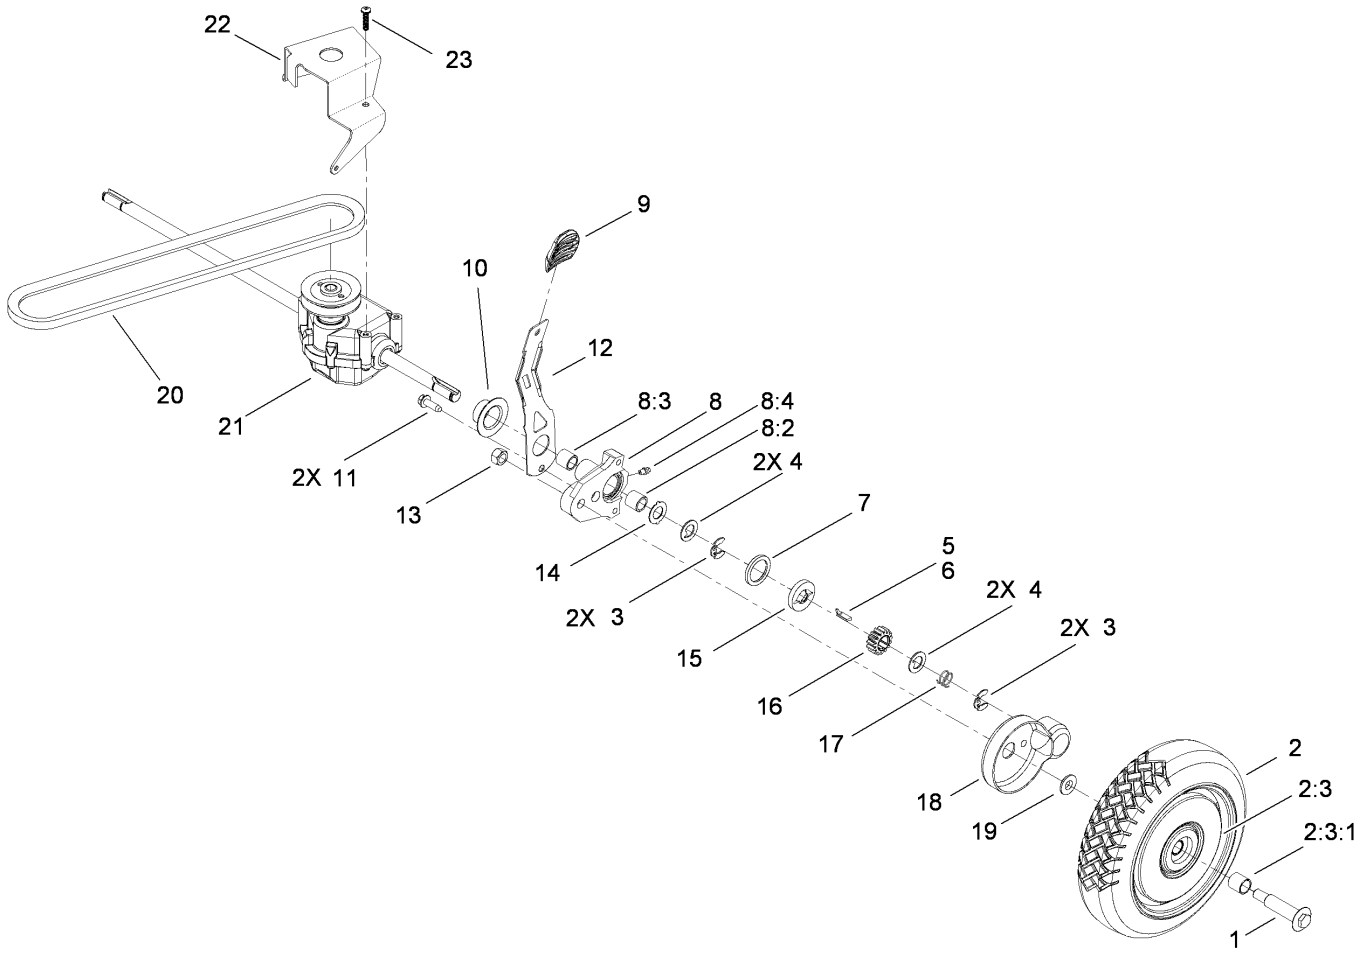


# Rear Wheel and Transmission Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 92-1057 | 2 | Bolt-Shoulder |
| 2 | 51-2744 | 2 | Wheel And Tire ASM (W/Gear) |
| ❷2:3 | | 1 | Wheel ASM |
| 2:3:1 | 27-6250 | 2 | Bushing |
| 3 | 65-2720 | 4 | Ring-Clip, Locking |
| 4 | 65-4740 | 4 | Washer-Thrust, Keyed |
| ❶5 | 66-6040 | 1 | Key-Rocking, RH |
| 6 | 66-6050 | 1 | Key-Rocking, LH |
| 7 | 65-4710 | 2 | Ring-Friction |
| 8 | 100-8774 | 2 | Pivot Arm ASM |
| 8:2 | 47-2900 | 1 | Bushing |
| 8:3 | 70-9760 | 1 | Bushing |
| 8:4 | 302-56 | 1 | Fitting-Grease |
| 9 | 105-3042 | 2 | Knob-Lever, HOC |
| 10 | 42-3520 | 2 | Cap-End |
| 11 | 49-2040 | 2 | Screw-HWHTF |
| 12 | 107-7491 | 2 | Arm-Spring |
| 13 | 603773 | 2 | Nut |
| 14 | 65-4730 | 2 | Washer-Arm, Pivot |
| 15 | 65-4760 | 2 | Washer-Clutch |
| 16 | 65-4750 | 2 | Gear-Pinion |
| 17 | 65-4720 | 2 | Spring-Compression |
| 18 | 74-1660 | 2 | Cover-Wheel |
| 19 | 74-1671 | 2 | Spacer-Cover, Wheel |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 20 | 92-1043 | 1 | V-Belt |
| 21 | 115-4560 | 1 | Transmission ASM |
| 22 | 114-7977-03 | 1 | Bracket-Transmission |
| 23 | 108-7476 | 3 | Screw-Plastite |

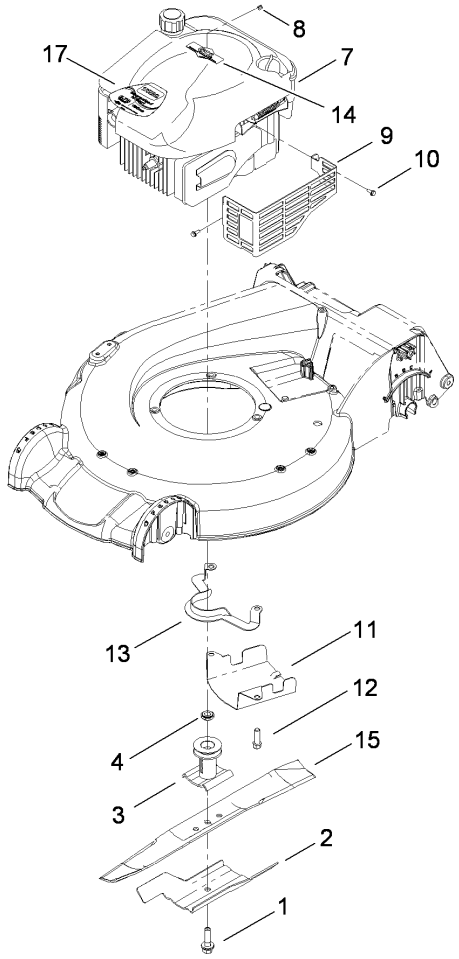


# Engine and Blade Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 105-8579 | 1 | Bolt-Blade |
| 2 | 105-6848-03 | 1 | Accelerator-Blade |
| 3 | 106-3987 | 1 | Blade Driver ASM |
| 4 | 106-3999 | 1 | Spacer-Driver |
| ❷❸7 | | 1 | Engine-B&s, 126T02-0124-B1 |
| 8 | 2210-316 | 1 | Stop-Rope |
| 9 | 104-7577-03 | 1 | Shield-Muffler |
| 10 | 32144-1 | 3 | Screw-Taptite |
| 11 | 107-7489-03 | 1 | Shield-Grass |
| 12 | 95-1727 | 3 | Screw-Taptite |
| 13 | 108-8110-03 | 1 | Guide-Belt |
| 14 | 108-8130 | 1 | Decal-Recoil |
| 15 | 108-3762-03 | 1 | Blade-Recycling |
| 17 | 114-0339 | 1 | Decal-Engine |

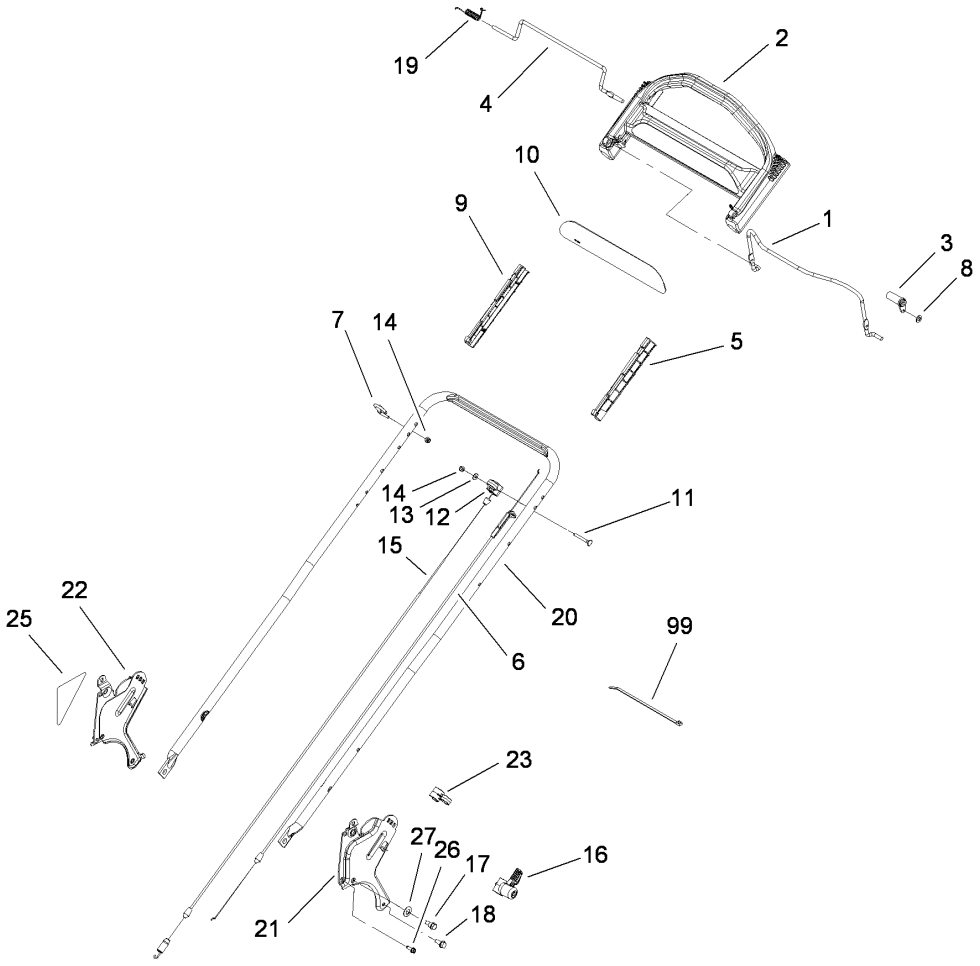


# Handle Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104-8679-03 | 1 | Bail-Brake |
| 2 | 104-8678 | 1 | Handle-Control |
| 3 | 99-1589 | 1 | Lever-Traction |
| 4 | 99-1588 | 1 | Bar-Control, Traction |
| 5 | 105-6842 | 1 | Guide-LH |
| 6 | 108-8157 | 1 | Cable-Brake |
| 7 | 86-9671 | 1 | Guide-Rope |
| 8 | 3256-23 | 1 | Washer-Flat |
| 9 | 105-6841 | 1 | Guide-RH |
| 10 | 108-8134 | 1 | Decal-Handle |
| 11 | 95-4453 | 1 | Screw |
| 12 | 99-5239 | 1 | Anchor-Cable |
| 13 | 3256-1 | 1 | Washer-Flat |
| 14 | 3296-73 | 2 | Nut-Lock, NI |
| 15 | 108-8158 | 1 | Cable-Traction |
| 16 | 115-2860 | 2 | Quick Release ASM |
| 17 | 115-1958 | 2 | Bolt-Shoulder |
| 18 | 32144-11 | 2 | Screw-HWHTF |
| 19 | 104-8690 | 1 | Spring-Torsion |
| 20 | 115-1300-05 | 1 | Handle |
| 21 | 114-2671-03 | 1 | Bracket-Handle, LH |
| 22 | 114-2672-03 | 1 | Bracket-Handle, RH |
| 23 | 106-6805 | 1 | Guide-Cable |
| 25 | 115-2884 | 1 | Decal-Instruction |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 26 | 49-2040 | 2 | Screw-HWHTF |
| 27 | 112-9972 | 2 | Washer-Conical, Spring |
| 99 | 614249 | 3 | Strap-Tie |

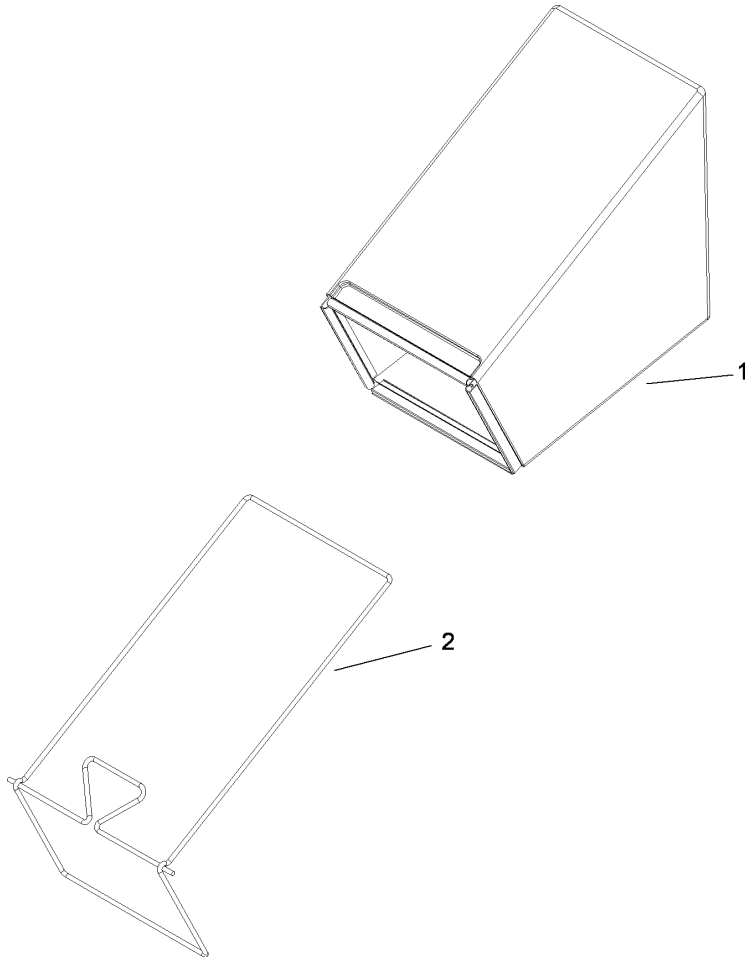


# Bag Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 114-2664 | 1 | Grass Bag ASM |
| 2 | 114-2679-03 | 1 | Bag Frame ASM |

# Attachments and Accessories

## For 20092 - Super Recycler Lawn Mower

| Product Name | Model/Part |
|---|---|
| Bagging Blade | 108-3759-03 |
| Traction Assist Handle Kit | 108-8120 |
| Toro Walk Mower Cover | 490-7462 |
| Plain Walk Mower Cover | 490-7463 |
| Dethatcher Kit | 59131 |


TORO®