FORM NO. 3316–359 Rev. B


TORO®

MODEL NO. 03425–40001 & UP

PARTS CATALOG

REELMASTER® 216–D 3wd
TRACTION UNIT

ONLY COPY
DO NOT REMOVE
Tech. Publications

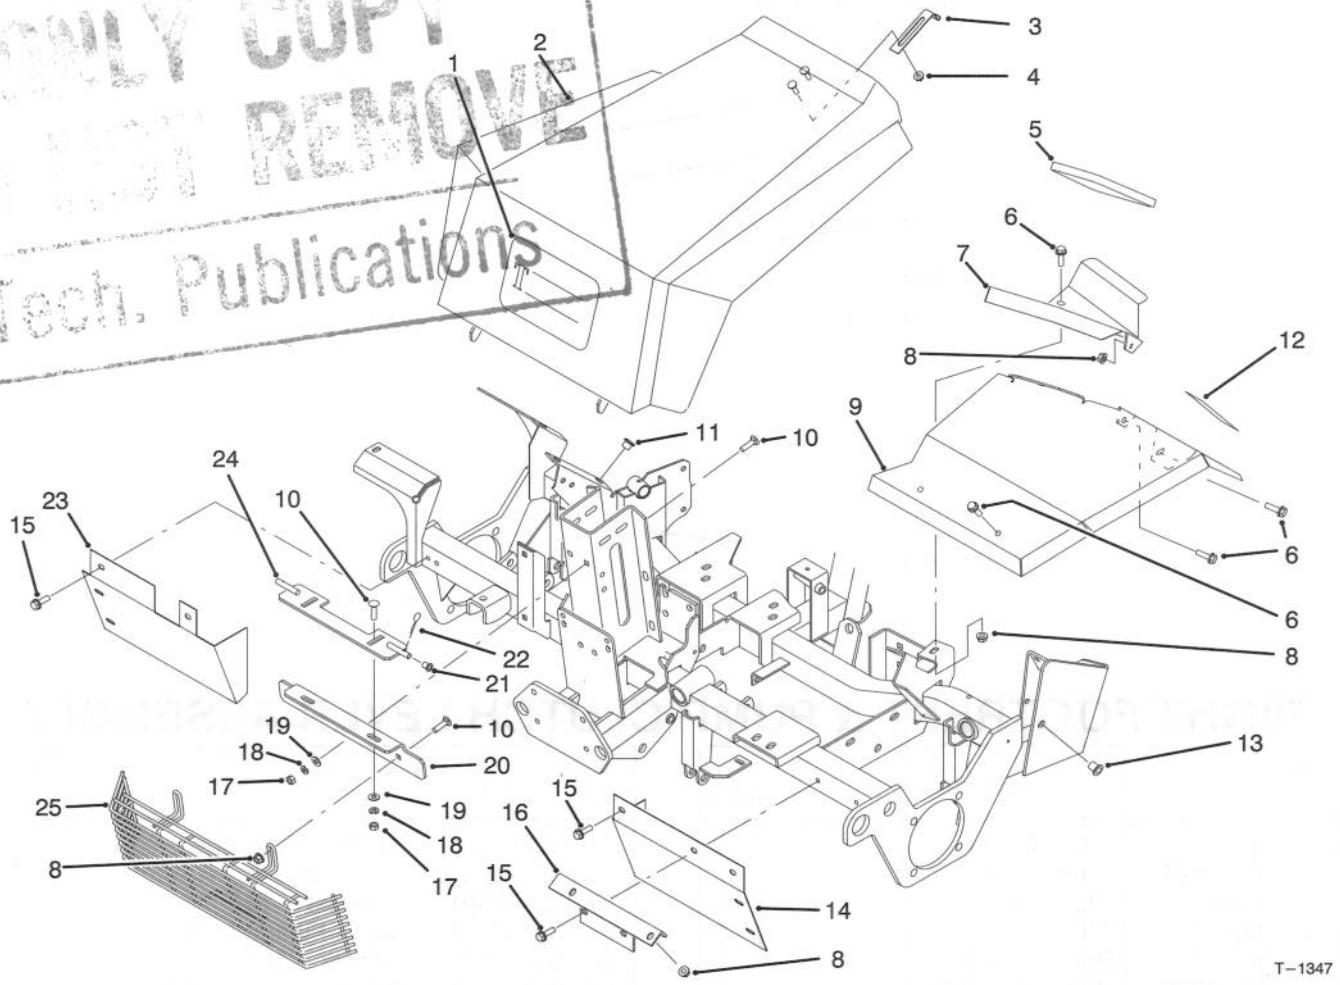

HOOD & GRILLE ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	62–7400	Decal – TORO	1
2	14–5759	Hood	1
3	83–9970	Latch – Hood	1
4	32128–14	Nut – Flange Lock	2
5	83–9840	Pad – Footrest L.H.	1
6	3234–5	Screw – Hex. Washer Hd.	12
7	83–9710	Footrest – L.H.	1
8	32128–44	Nut – Flange Lock	10
9	83–9700	Fender – L.H.	1
10	3230–23	Screw – Carriage	6
11	32148–7	Insert – Threaded	3
‡12	84–1650	Decal – Brake	1
13	32148–8	Insert – Threaded	1

Ref. No.	Part No.	Description	No. Used
14	83–9800	Shield – Grass Front L.H.	1
15	32104–82	Screw – Hex. Washer Hd.	5
16	83–8510	Bracket – Fender L.H.	1
17	3217–6	Nut – Hex.	4
18	3253–4	Washer – Lock	4
19	3256–23	Washer – Flat	4
20	85–4870	Support – Hinge	1
21	256–320	Bushing	2
22	3290–467	Pin – Cotter Hair	2
23	83–8860	Shield – Grass Front R.H.	1
24	85–4890	Hinge – Hood	1
25	83–8850	Grille – Front	1

‡For different language versions of this part, see International Decal Cross Reference.

TPS

© The TORO Company – 1994

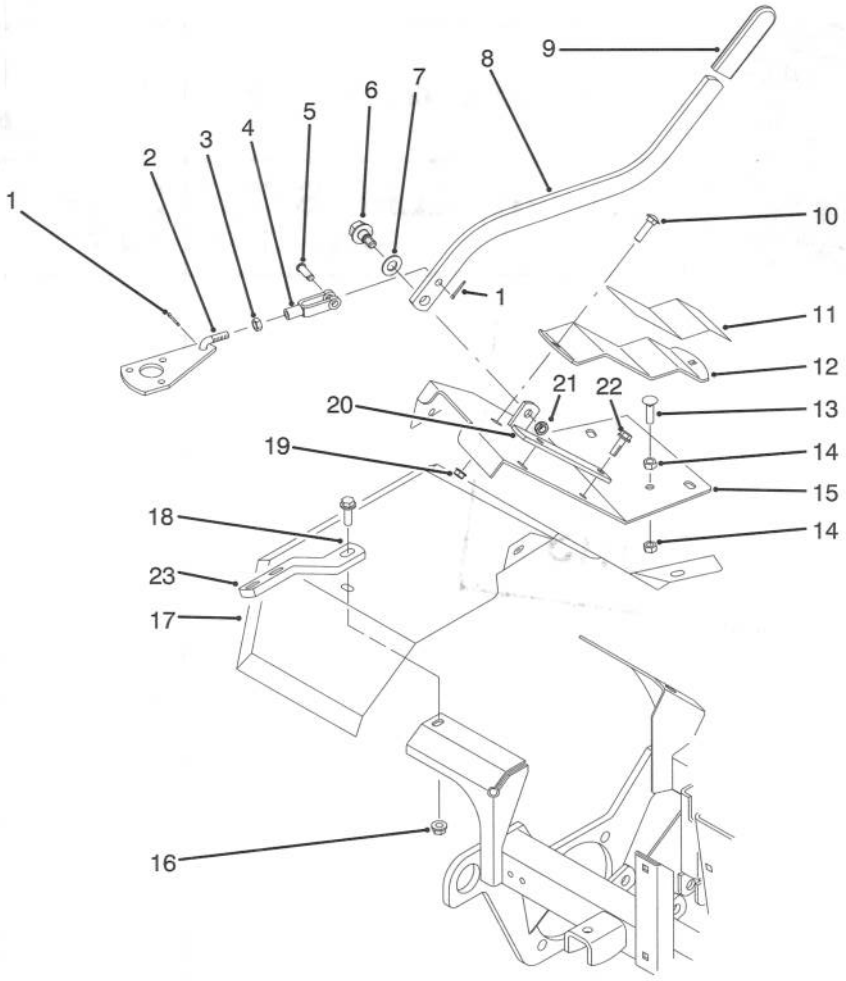


T–1816

RIGHT FOOTREST & PUMP CLUTCH LEVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272–6	Pin – Cotter	2
2	92–7921	Rod – Link	1
3	3220–2	Nut – Jam	1
4	282–2	Clevis	1
5	283–1	Pin – Clevis	1
6	67–0870	Bolt – Shoulder	1
7	3290–413	Washer – Belleville	1
8	92–7923	Lever – Pump Clutch	1
9	62–9130	Grip – Handle	1
10	3229–1	Screw – Carriage	2
11	76–2260	Pad – Footrest	1
12	76–2200	Footrest – Traction	1

Ref. No.	Part No.	Description	No. Used
13	3230–27	Screw – Carriage	1
14	32128–20	Nut – Jam	2
15	83–9740	Footrest – RH	1
16	32128–44	Nut – Flange Lock	3
17	83–9720	Fender – RH	1
18	3234–36	Screw – Hex. Flange Hd.	1
19	32128–33	Nut – Flange Lock	2
20	92–7918	Bracket – Lever	1
21	3296–59	Nut – Lock	1
22	3234–17	Screw – Hex. Flange Hd.	2
23	93–0100	Bracket – Exhaust Support	1

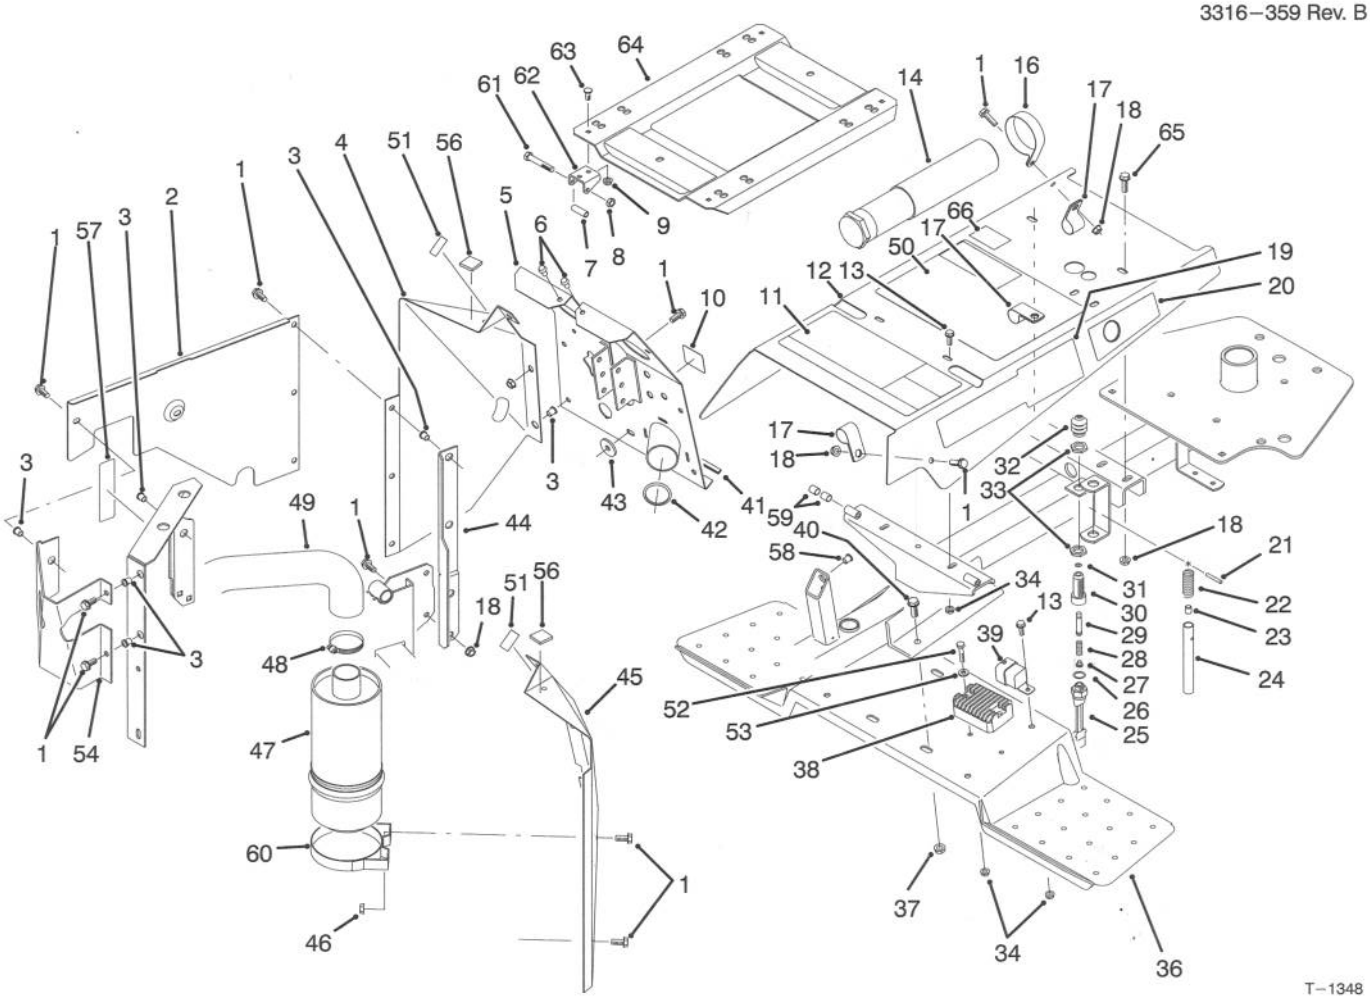


SKIRT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234–5	Screw – Hex. Flange Hd.	24
2	83–8230	Panel – Right Front	1
3	32148–7	Insert – Threaded	8
4	83–8120	Panel – Right Rear	1
5	83–8190	Panel – Control	1
6	237–37	Bumper – Rubber	2
7	85–5340	Tube – Seat Pivot	2
8	3296–42	Nut – Lock	2
9	32128–33	Nut – Flange Lock	2
‡10	83–9150	Decal – Starting Fluid	1
‡11	83–9550	Decal – Warning	1
12	16–3869	Skirt Panel (Incl. Ref. #11, 19 & 50)	1
13	3234–4	Screw – Hex. Flange Hd.	3
14	74–0720	Tube – Manual	1
16	2412–133	Clamp – R	2
17	2412–39	Clamp – R	3
18	32128–44	Nut – Flange Lock	10
19	83–8890	Decal – Reelmaster 216–D	2
21	32121–6	Pin – Roll	1
22	37–9590	Spring – Compression	1
23	28–6180	Pin	1
24	27–9870	Pin – Seat	1
25	72–4320	Switch – Seat	1
26	237–30	Seal – O–Ring	1
27	43–8610	Guide – Spring	1

Ref. No.	Part No.	Description	No. Used
28	43–8600	Spring – Compression	1
29	43–8860	Plunger – Switch	1
30	43–8620	Guide – Pin	1
31	237–7	Seal – O–Ring	1
32	43–8870	Boot – Switch	1
33	218–461	Nut – Hex.	2
34	32128–33	Nut – Flange Lock	5
36	83–9730	Step – Foot	1
37	32128–43	Nut – Flange Lock	4
†38	185516060	Regulator – Voltage	1
39	70–1480	Relay	1
40	3234–11	Screw – Hex. Flange Hd.	4
41	76–6471	Trim – Control Panel Bottom	1
42	237–71	Seal – O–Ring	1
43	62–7170	Spacer	1
44	83–9170	Right Channel Assembly (Incl. Ref. #3)	1
45	83–8110	Panel – Left	1
46	32128–20	Nut – Flange Lock	4
47	85–4910	Air Cleaner Assembly	1
48	2412–92	Clamp – Hose	1
49	83–8550	Hose – Air Cleaner	1
‡50	83–8900	Decal – Service Information	1
51	85–5180	Trim	2
52	321–8	Screw – Cap Hex. Hd.	2
53	3256–22	Washer – Flat	2

†Obtain from your Local Perkins Dealer

‡For different language versions of this part, see International Decal Cross Reference.

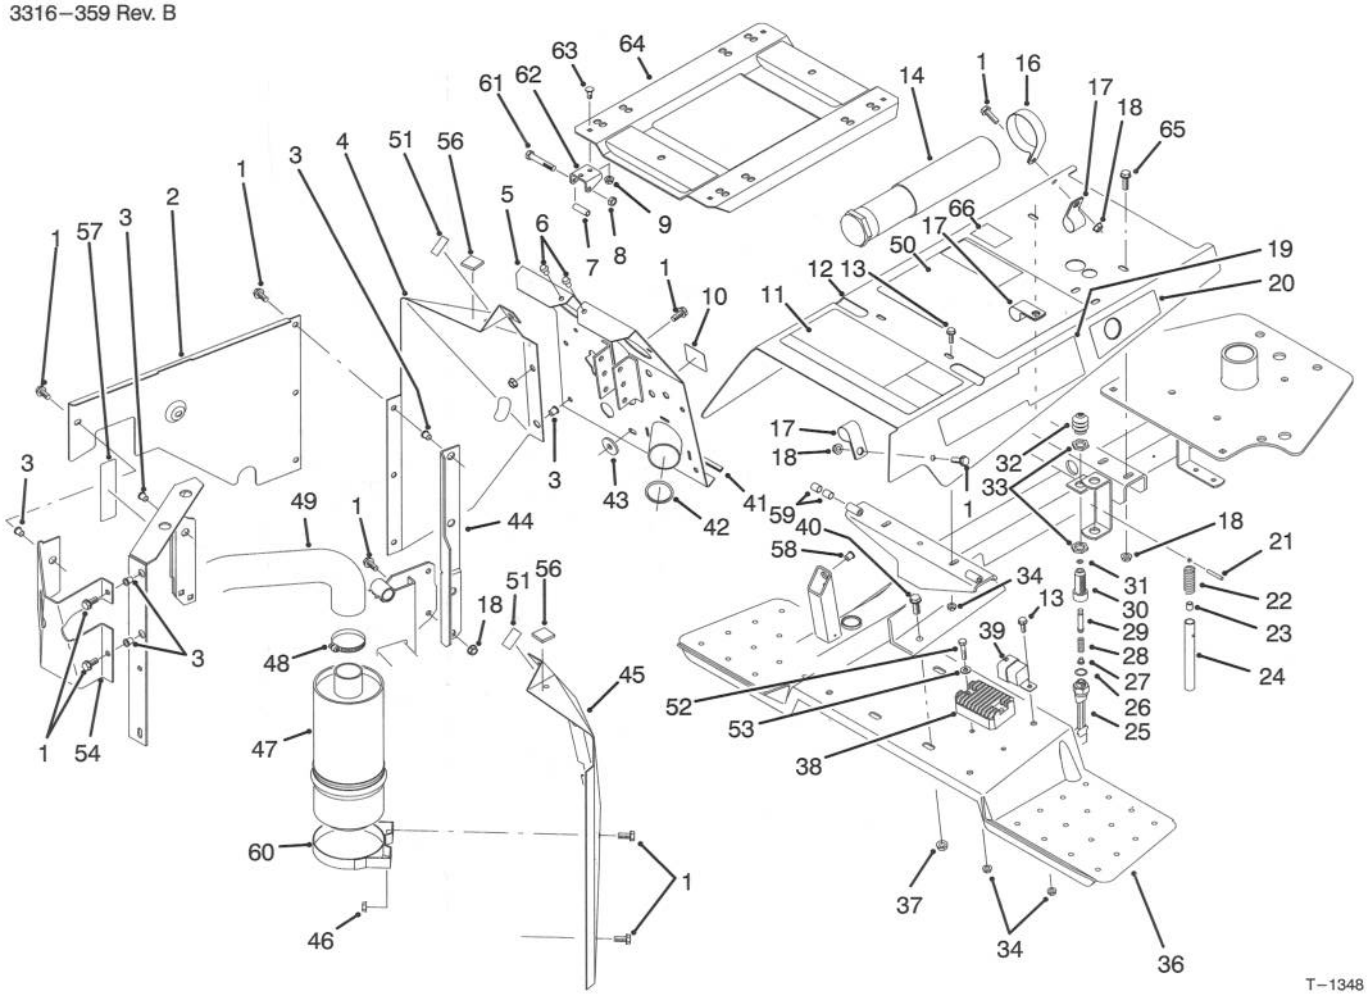


SKIRT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
54	85–5010	Bracket – Right Front	1
56	85–5140	Foam – Hood	2
‡57	67–5360	Decal – Danger	1
58	32148–8	Insert – Threaded	1
59	256–321	Bushing – Sleeve	4
60	33–1350	Clamp Assembly	2
61	321–11	Screw – Cap Hex. Hd.	2
62	85–5230	Bracket – Seat Pivot	2

Ref. No.	Part No.	Description	No. Used
63	3229–22	Bolt – Carriage	2
64	85–5330	Plate – Seat Mounting	1
65	3230–2	Bolt – Carriage	2
66	92–7948	Decal – Service Assistance	1
*	3290–379	Tie – Cable	1
*	43–9071	Seat Switch Assembly (Incl. Ref. #25–33)	1

*Not Illustrated

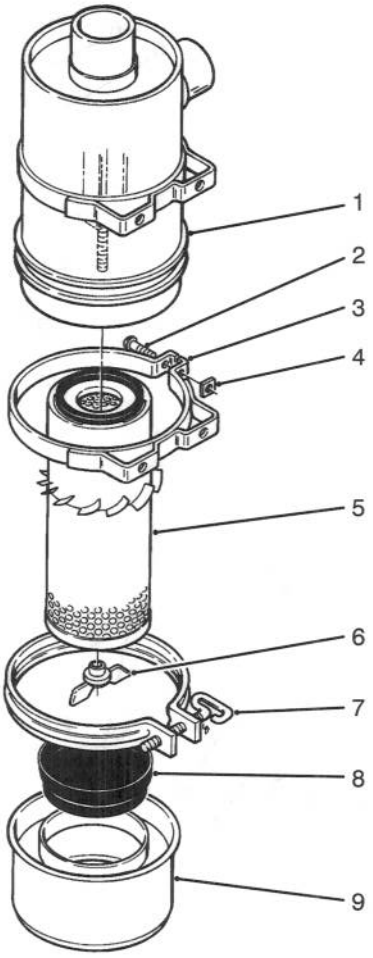


T–1349

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Body	1
2	3258–19	Screw – Round Hd.	2
3	33–1350	Band Assembly (Incl. Ref. #2 & 4)	2
4	32107–11	Nut – Square	2
5	33–1300	Element Assembly	1

Ref. No.	Part No.	Description	No. Used
6	33–1330	Nut Assembly	1
7	33–1340	Clamp Assembly	1
8	33–1310	Baffle	1
9	33–1320	Cup	1
*	85–4910	Air Cleaner (Complete) (Incl. Ref. #1 & 5–9)	1

*Not Illustrated

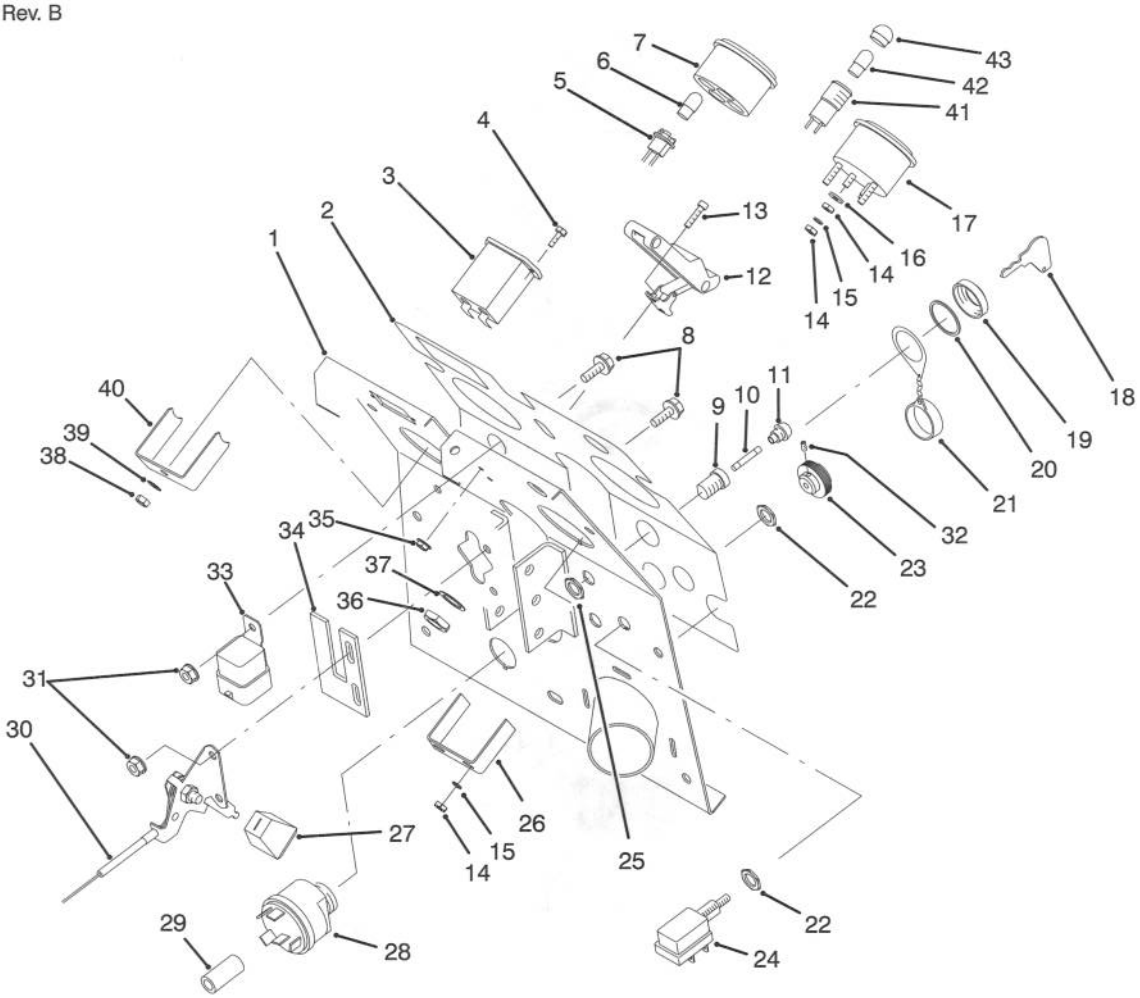


T–1350

INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–3183	Panel – Instrument	1
2	92–3178	Decal – Instrument Panel	1
3	75–6820	Hourmeter	1
4	32144–18	Screw – Hex. Hd.	2
5	87–6270	Socket – Warning Light	1
6	219–17	Bulb – Light	4
7	92–9775	Warning Light Assembly (Incl. Ref. #5, 6 & 38–40)	1
8	3234–4	Screw – Hex. Washer Hd.	3
9	218–489	Fuse Holder Assembly (Incl. Ref. #11 & 25)	2
10	218–469	Fuse – 15 Amp.	2
11		Cap – Fuse Holder	2
12	80–6980	Latch – Hood	1
13	3274–90	Screw – Hex. Socket Hd.	2
14	3219–14	Nut – Hex.	6
15	3253–2	Washer – Lock	5
16	3256–14	Washer – Flat	2
17	63–7430	Temperature Gauge Assy. (Incl. Ref. #14–16 & 26)	1
18	85–5270	Key – Starter	2
†19		Nut – Retaining	1
†20	390190030	Seal – Switch	1
†21	385800010	Cover – Switch	1
22	3218–19	Nut – Hex.	2

Ref. No.	Part No.	Description	No. Used
23	92–3195	Knob	1
24	92–3194	Switch Assembly (Incl. Ref. #22, 23 & 32)	1
25		Nut – Hex.	2
26		Clamp – Gauge	1
27		Knob – Throttle	1
†28	385201160	Starter Switch Assembly (Incl. Ref. #18 & 19)	1
29	80–7345	Hose	
30	92–3153	Throttle Assembly (Incl. Ref. #27)	1
31	32128–33	Nut – Flange Lock	3
32	3298–8	Screw – Set	1
33	70–1480	Relay	1
34	85–5000	Plate – Throttle	1
35	32149–9	Nut – Flange Lock	2
36		Nut – Hex.	1
37		Washer – Flat	1
38	3217–26	Nut – Hex.	1
39	3254–11	Washer – Lock ETLW	1
40		Clamp – Mounting	1
41	44–2212	Light Assembly (Incl. Ref. #36–37 & 42–43)	1
42	219–18	Bulb – Light	1
43	218–562	Lens – Light	1

†Obtain from your local Perkins Dealer.

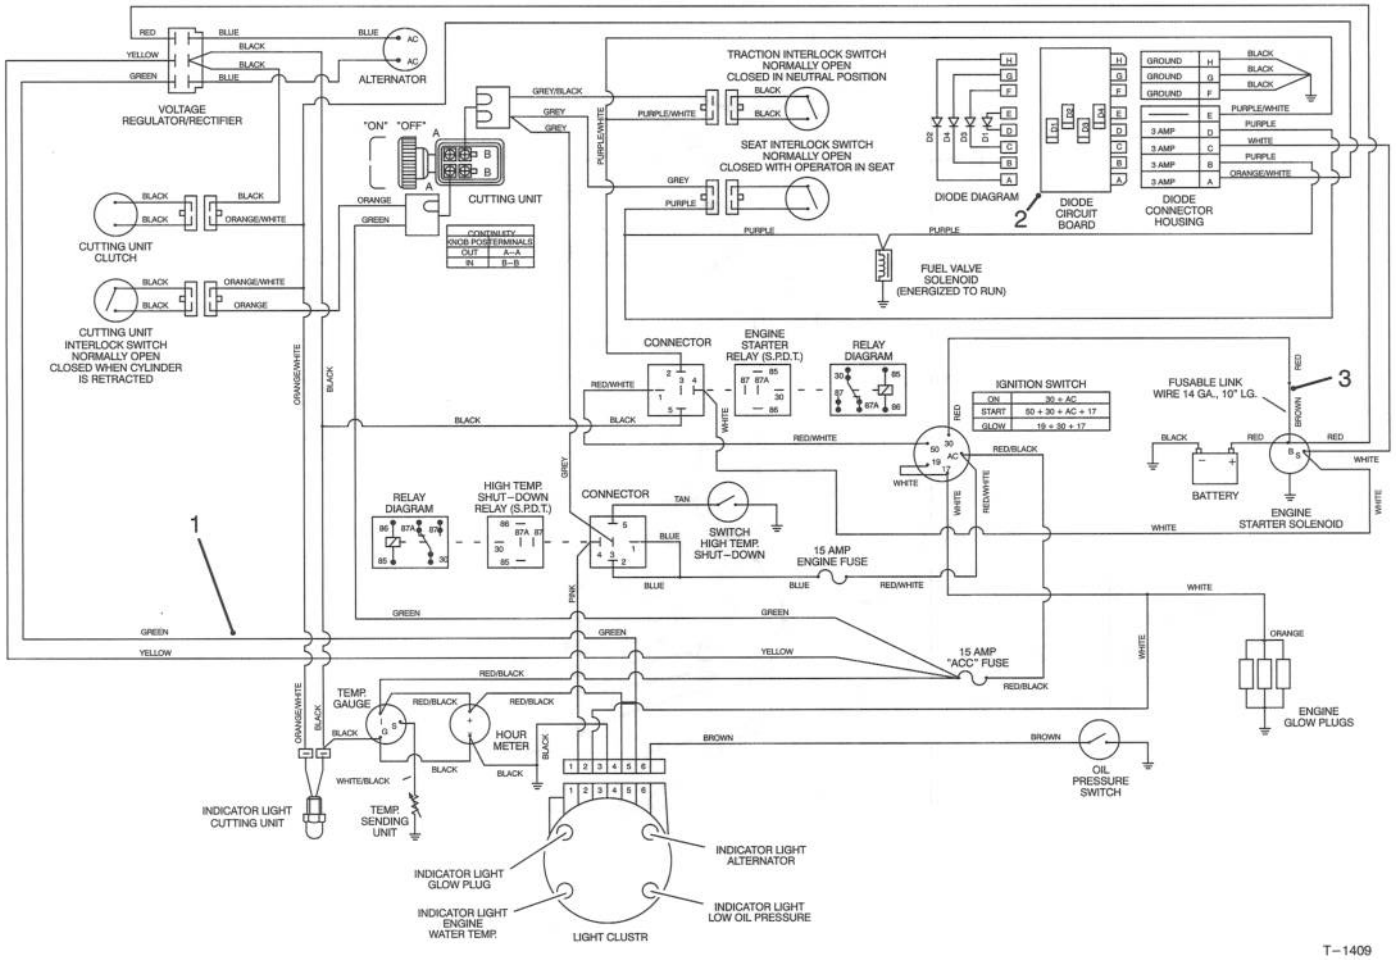


T–1409

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	92–7910	Harness – Wire	1
2	92–3188	Diode – Circuit Board	1

Ref. No.	Part No.	Description	No. Used
3	92–7914	Wire – Fusible Link	1

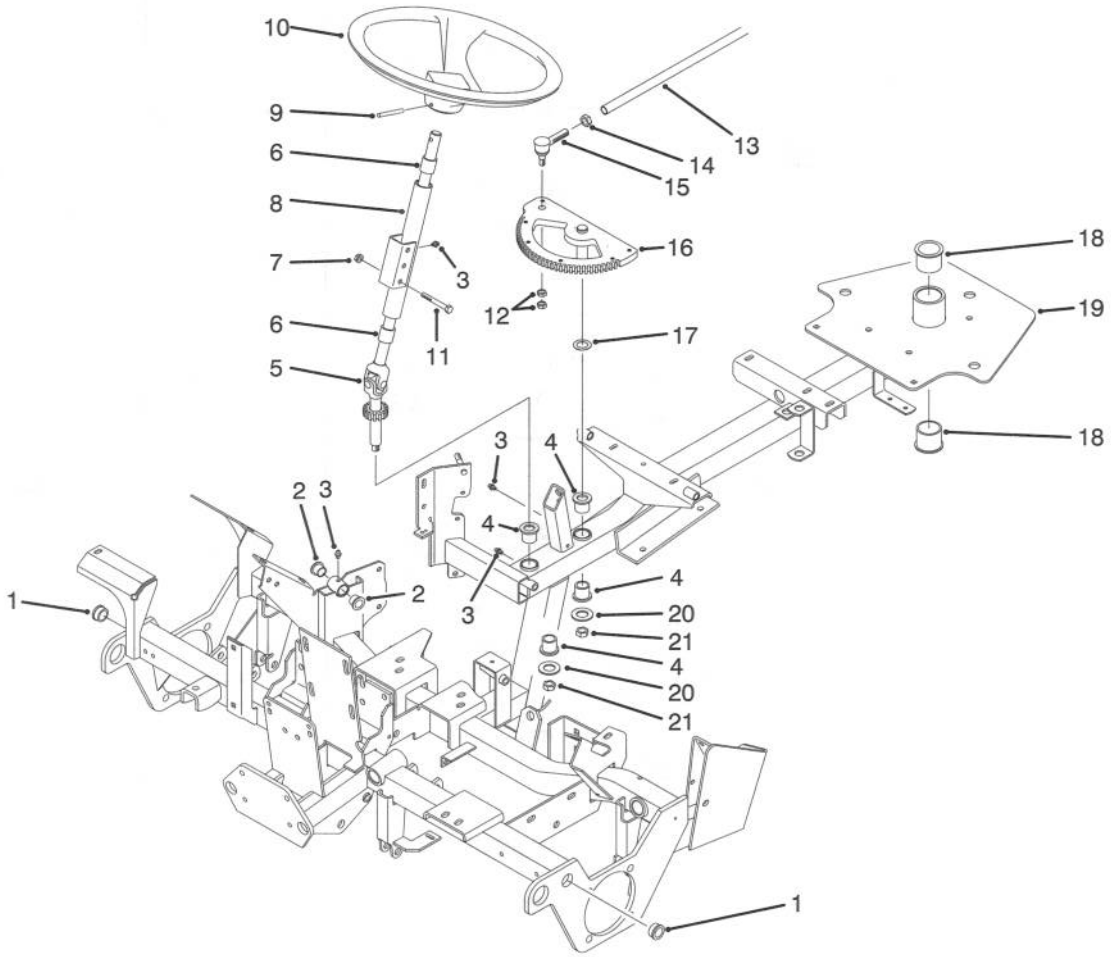


T–1351

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	256–247	Bushing – Flange	2
2	75–2160	Bushing – Flange	2
3	302–5	Fitting – Grease	4
4	92–3162	Bushing – Flange	4
5	92–3165	Steering Shaft & Gear	1
6	256–27	Bushing – Sleeve	2
7	3296–29	Nut – Flange Lock	1
8	61–2090	Steering Column Assembly (Incl. Ref. #6)	1
9	32121–10	Pin – Roll	1
10	76–1420	Wheel – Steering	1
11	322–12	Screw – Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
12	3220–3	Nut – Jam	2
13	61–2070	Rod – Steering	1
14	3220–5	Nut – Jam	1
15	21–0150	Rod End Assembly (Incl. Ref. #12)	1
16	92–3172	Gear – Steering	1
17	3–6498	Washer – Thrust	A/R
18	256–245	Bushing – Flange	2
19	92–2373	Frame	1
20	3256–26	Washer – Flat	2
21	3296–28	Nut – Lock	2

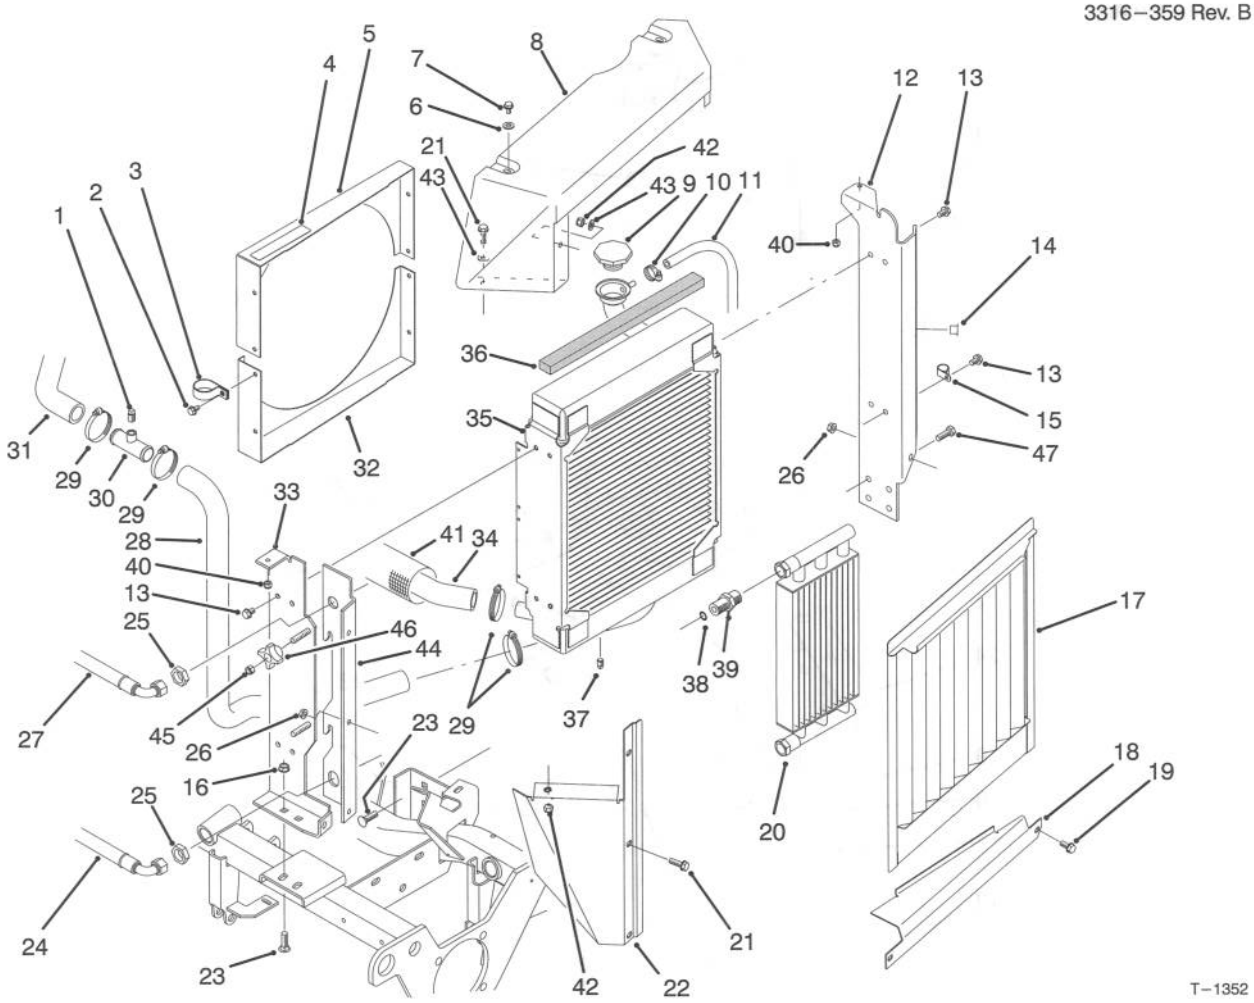


RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	281–7	Plug – Pipe	1
2	32104–116	Screw – Hex. Washer Hd.	8
3	2412–74	Clamp – R	1
‡4	77–3100	Decal – Warning	1
5	16–1149	Top Shroud Assembly (Incl. Ref. #4)	1
6	3256–22	Washer – Flat	2
7	3234–4	Screw – Cap Hex. Hd.	2
8	83–8040	Cover – Left	1
9	66–3240	Cap – Radiator	1
10	2412–108	Clamp – Hose	1
11	71–3382	Hose – Overflow	1
12	83–7980	Bracket – Radiator Rear	1
13	3234–28	Screw – Hex. Washer Hd.	8
14	32148–8	Insert – Threaded	3
15	2412–41	Clamp – R	1
16	32128–43	Nut – Flange Lock	6
17	83–8150	Screen – Radiator	1
18	83–8070	Bracket – Radiator Bottom	1
19	3234–5	Screw – Hex. Washer Hd.	2
20	24–0760	Cooler – Oil	1
21	3234–17	Screw – Hex. Washer Hd.	4
22	83–8210	Panel – Front Left	1
23	3231–22	Bolt – Carriage	2
24	92–1583	Hose – Hydraulic	1

Ref. No.	Part No.	Description	No. Used
25	340–127	Nut – Bulkhead	2
26	32128–44	Nut – Flange Lock	4
27	92–1177	Hose – Hydraulic	1
28	83–9060	Hose – Radiator	1
29	2412–34	Clamp – Hose	5
30	83–9080	Connector – Bleed	1
31	83–9070	Hose – Radiator	1
32	83–7850	Shroud – Fan Bottom	1
33	88–6720	Bracket – Radiator Front	1
34	83–9050	Hose – Radiator	1
35	83–7550	Radiator Assembly (Incl. Ref. #37)	1
36	83–9030	Foam – Top	1
37	281–1	Plug – Pipe	2
38	237–30	Seal – O–Ring	2
39	83–7970	Fitting – Hydraulic Bulkhead (Incl. Ref. #38)	2
40	3296–42	Nut – Lock	2
41	85–5170	Sleeve	1
42	3296–29	Nut – Lock	2
43	3256–23	Washer – Flat	2
44	88–6730	Bracket – Screen Front	1
45	32153–3	Nut – Lock	2
46	92–2368	Knob – Clamp	2
47	323–6	Screw – Cap Hex. Hd.	4


‡For different language versions of this part, see International Decal Cross Reference.

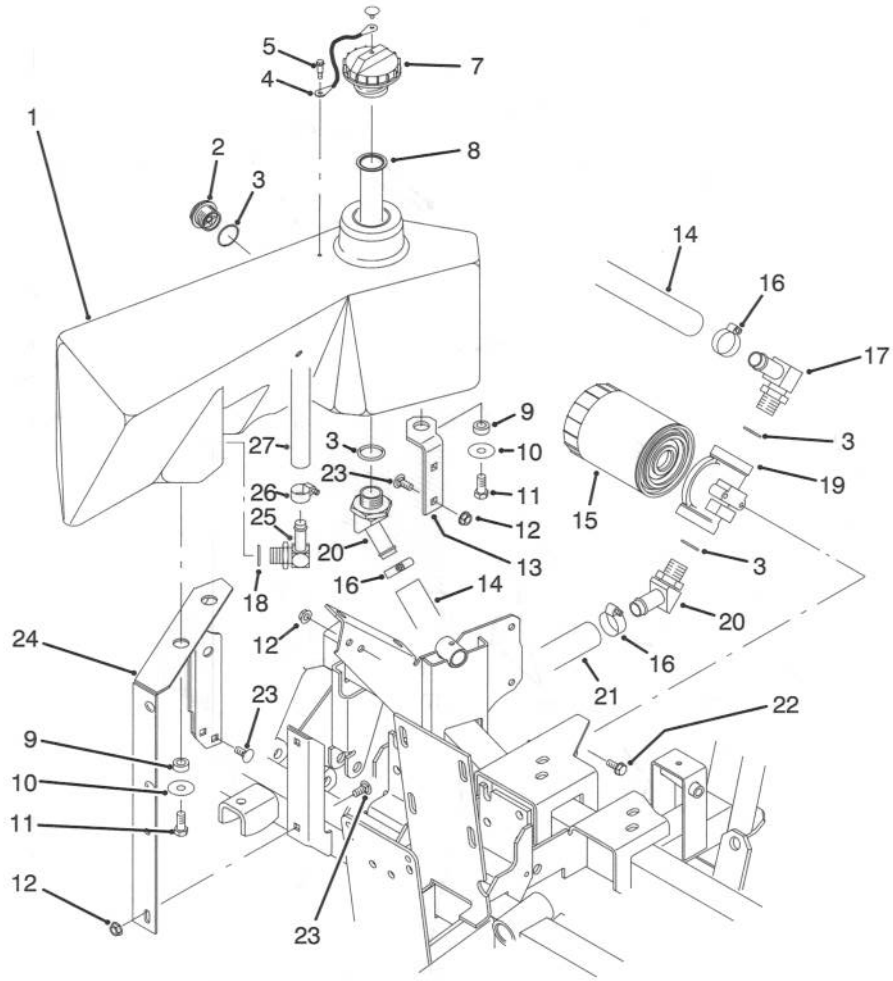

HYDRAULIC RESERVOIR & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83–7720	Reservoir – Hydraulic	1
2	69–1170	Glass – Sight (Incl. Ref. #3)	1
3	237–81	Seal – O–Ring	4
4	75–0540	Tether & Retainer Assembly	1
5	57–5420	Screw – Shoulder	1
7	93–3103	Cap – Hydraulic Reservoir (Incl. Ref. #4 & 6)	1
8	61–2790	Screen – Filler	1
9	240–11	Grommet	3
10	63–8410	Washer – Flat	3
11	323–5	Screw – Cap Hex. Hd.	3
12	32128–44	Nut – Hex. Flange Hd.	6
13	83–9920	Bracket – Reservoir	1
14	83–9651	Hose – Hydraulic	1
15	54–0110	Element – Oil Filter	1

Ref. No.	Part No.	Description	No. Used
16	3212–34	Clamp – Hose	3
17	353–987	Fitting– Hydraulic 90° (Incl. Ref. #3)	1
18	237–79	Seal – O–Ring	1
19	68–8990	Head – Oil Filter	1
20	354–127	Fitting – Hydraulic 45° (Incl. Ref. #3)	2
21	83–9650	Hose – Hydraulic	1
22	3234–4	Screw – Hex. Washer Hd.	2
23	3230–23	Screw – Carriage	6
24	83–7780	Bracket – Support	1
25	354–120	Fitting – Hydraulic 90° (Incl. Ref. #18)	1
26	2412–36	Clamp – Hose	1
27	92–1178	Hose – Hydraulic	1

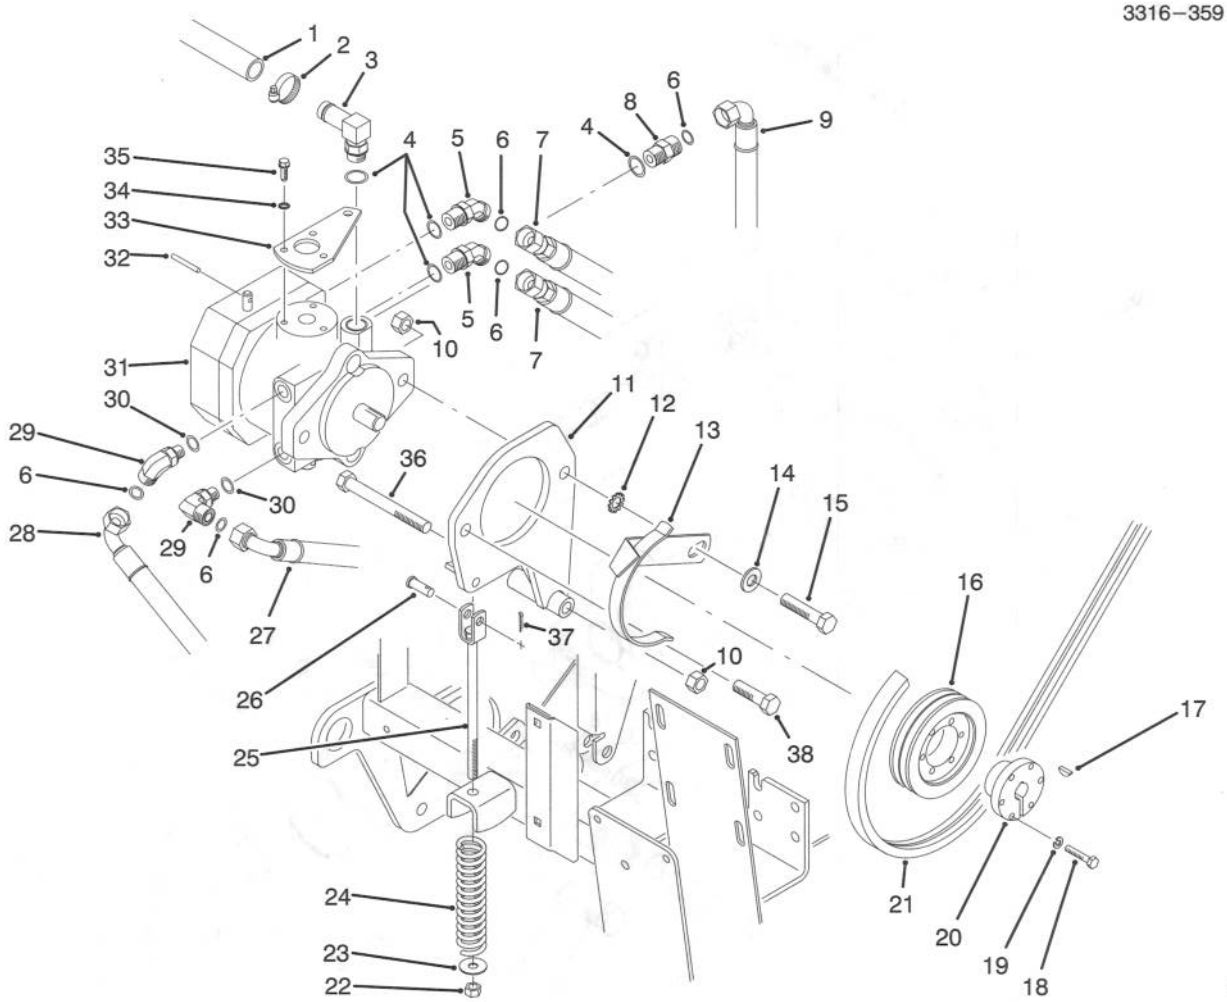


HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83–9650	Hose – Hydraulic	1
2	2412–34	Clamp – Hose	1
3	354–128	Fitting – Hydraulic 90° (Incl. Ref. #4)	1
4	237–79	Seal – O–Ring	4
5	340–101	Fitting – Hydraulic 45° (Incl. Ref. #4 & 6)	2
6	237–30	Seal – O–Ring	5
7	83–9600	Hose – Hydraulic	2
8	340–4	Fitting – Hydraulic Straight (Incl. Ref. #4 & 6)	1
9	92–1178	Hose – Hydraulic	1
10	3296–23	Nut – Lock	3
11	83–8320	Mount – Pump	1
12	3255–2	Washer – Lock ETLW	1
13	92–7924	Retainer – Belt	1
14	3256–26	Washer – Flat	1
15	325–9	Screw – Cap Hex. Hd.	1
16	61–3330	Pulley	1
17	3257–32	Key – Woodruff	1
18	321–13	Screw – Cap Hex. Hd.	3
19	3253–3	Washer – Lock	3
20	59–2150	Taper Lock Bushing Assy. (Incl. Ref. #18 & 19)	1

Ref. No.	Part No.	Description	No. Used
21	92–3186	Belt – Pump Drive	1
22	3296–6	Nut – Lock	1
23	52–2861	Washer – Flat	1
24	3–6692	Spring – Compression	1
25	92–7917	Clevis	1
26	283–2	Pin – Clevis	1
27	83–9640	Hose – Hydraulic	1
28	92–1583	Hose – Hydraulic	1
29	340–99	Fitting – Hydraulic 90° (Incl. Ref. #6 & 30)	2
30	237–42	Seal – O–Ring	2
31	92–9023	Hydraulic Pump Assembly (Incl. Ref. #17)	1
32	32121–34	Pin – Dowel	1
33	92–7922	Plate – Pump Pivot	1
34	3255–7	Washer – Lock ETLW	3
35	49–2040	Screw – Hex. Flange Hd.	3
36	325–18	Screw – Cap Hex. Hd.	1
37	3272–6	Pin – Cotter	1
38	325–8	Screw – Cap Hex. Hd.	1
*	3290–378	Tie – Cable	1

*Not Illustrated

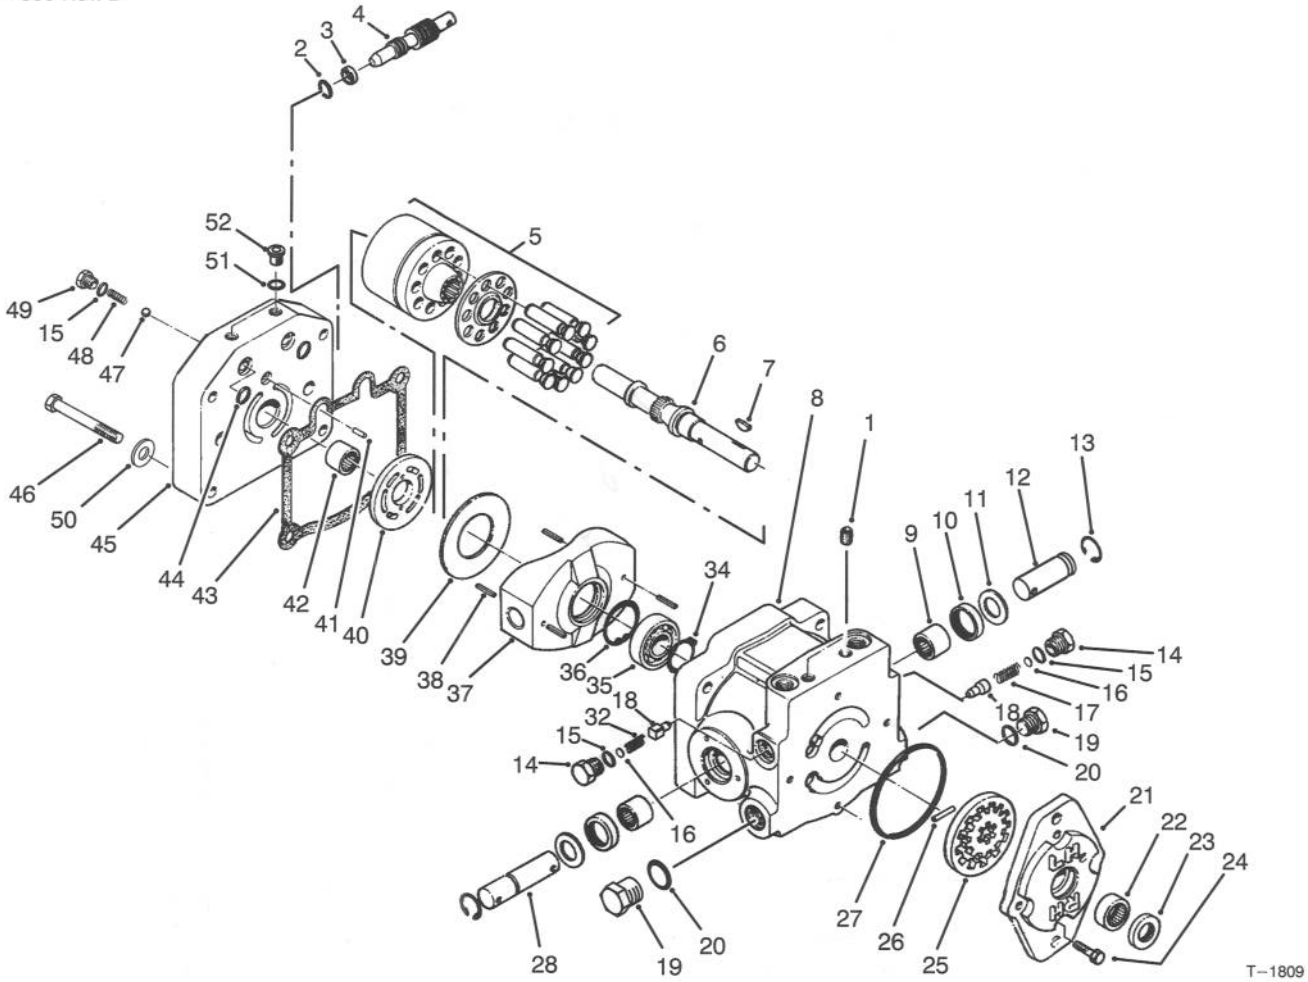


HYDRAULIC PUMP ASSEMBLY NO. 92–9023

Ref. No.	Part No.	Description	No. Used
1	285–17	Plug – Pipe	6
2	237–22	O–Ring	1
3	25–2630	Ring	1
4	88–8220	Valve – By–Pass	1
5	48–1800	Cylinder Block Kit	1
6	67–8020	Shaft – Pump	1
7	3257–32	Key – Woodruff	1
8	92–9023	Hydraulic Pump Assembly (Complete)	1
9	252–82	Bearing – Needle	2
10	25–3210	Seal – Lip	2
11	25–2510	Washer	2
12	49–8480	Shaft – Trunnion	1
13	32151–46	Ring – Retaining	2
14	25–2460	Plug	2
15	237–86	O–Ring	4
16	25–2470	Kit – Shim Pack	2
17	25–2570	Spring – Relief Valve	1
18	83–7260	Cone – Relief Valve	2
19	67–8030	Plug Assembly (Incl. Ref. #20)	2
20	67–8040	O–Ring	2
21	92–7940	Housing – Charge Pump	1
22	67–8050	Bearing – Needle	1
23	67–8060	Seal – Lip	1

Ref. No.	Part No.	Description	No. Used
24	322–4	Screw – Cap Hex. Hd.	4
25	25–2680	Gerotor Assembly	1
26	25–2530	Pin – Straight	1
27	237–95	O–Ring	1
28	28–3670	Shaft – Trunnion	1
32	25–2480	Spring – Charge Relief	1
34	32120–15	Ring – Retaining	1
35	251–8	Bearing – Ball	1
36	32120–11	Ring – Retaining	1
37	25–2450	Swash/Plate	1
38	32121–91	Pin – Coiled Spring	3
39	25–2380	Plate – Thrust	1
40	25–2390	Plate – Valve	1
41	25–2430	Pin – Straight	1
42	46–8400	Bearing – Needle	1
43	25–2400	Gasket	1
44	62–4290	O–Ring	2
45		Cap – Pump End	1
46	323–11	Screw – Cap Hex. Hd.	4
47	25–2490	Ball – Check Valve	2
48	25–2640	Spring – Check Valve	2
49	25–2650	Plug – Check Valve	2
50	3256–24	Washer	1
51	92–8777	Seal – O–Ring	2

*Not Illustrated

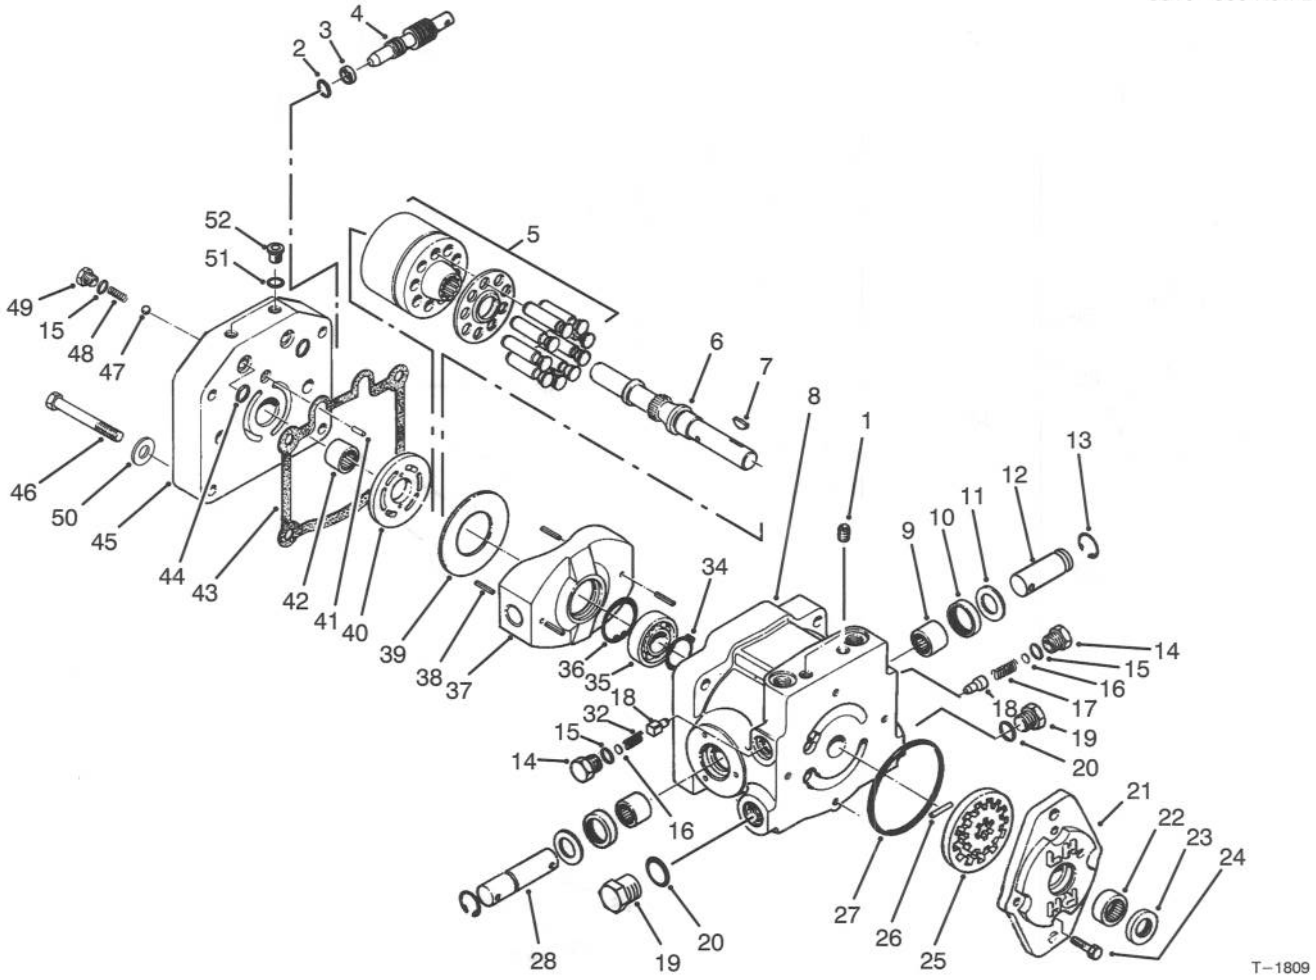


HYDRAULIC PUMP ASSEMBLY NO. 92–9023 (Continued)

Ref. No.	Part No.	Description	No. Used
52	92–8776	Plug Assembly (Incl. Ref. #51)	2
*	49–8510	Kit – Charge Relief (Incl. Ref. #14–16, 18 & 32)	1

Ref. No.	Part No.	Description	No. Used
*	25–3180	Kit – Check Valve (Incl. Ref. #15, 47–49)	1
*	49–8520	Kit – Implement Relief (Incl. Ref. #14–18)	1

*Not Illustrated

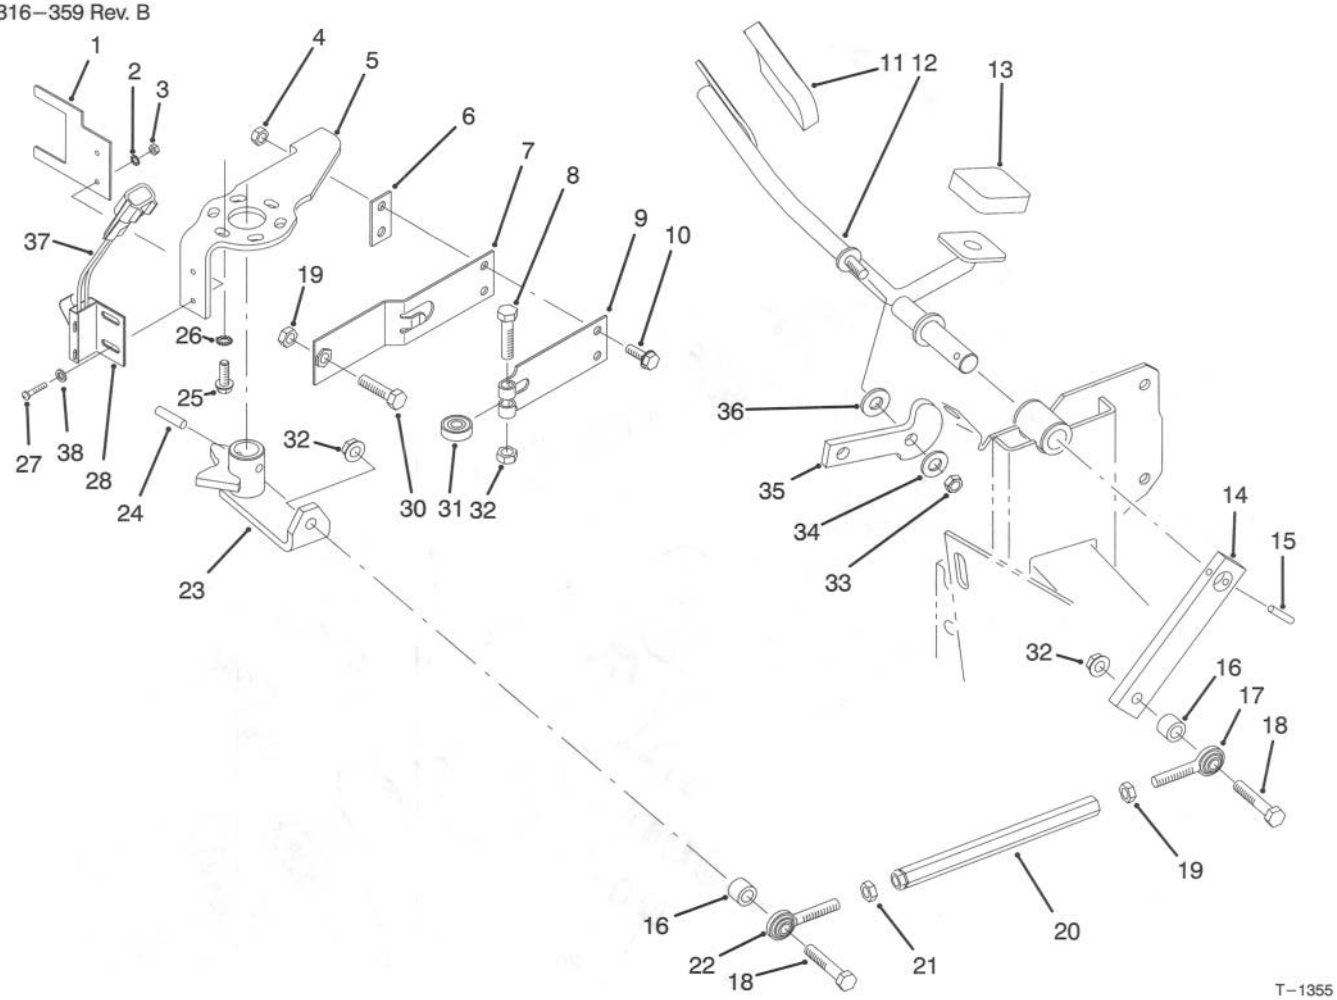


TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46–8810	Stop – Spring	1
2	3254–9	Washer – ITLW	2
3	3217–29	Nut – Lock	2
4	3296–16	Nut – Lock	2
5	29–6120	Plate – Pump	1
6	51–3150	Shim – Spring	1
7	29–6170	Spring – Extended Leaf	1
8	322–17	Screw – Cap Hex. Hd.	1
9	29–6150	Spring – Leaf	1
10	321–6	Screw – Cap Hex. Hd.	2
11	74–9100	Pad – Forward	1
12	83–8270	Pedal – Traction	1
13	74–9110	Pad – Reverse	1
14	61–2610	Arm – Traction	1
15	32121–6	Pin – Roll	1
16	61–2370	Spacer	2
17	2411–52	End – Rod	1
18	322–9	Screw – Cap Hex. Hd.	2
19	3220–2	Nut – Jam	2
20	83–8760	Rod – Control	1

Ref. No.	Part No.	Description	No. Used
21	3220–20	Nut – Jam	1
22	2411–53	End – Rod	1
23	83–8770	Lever – Pump	1
24	32121–24	Pin – Roll	1
25	49–2040	Screw – Hex. Flange Hd.	3
26	3255–7	Washer – ETLW	3
27	3249–3	Screw – Round Hd.	2
28	92–7905	Switch Assembly (Incl. Ref. #37)	1
30	3210–7	Screw – Cap Hex. Hd.	1
31	251–259	Bearing – Ball	1
32	3296–29	Nut – Lock	3
33	3296–59	Nut – Lock	1
34	3256–24	Washer – Flat	1
35	74–6110	Cam – Stop	1
36	66–2920	Spacer	1
37	92–7906	Switch	1
38	3256–53	Washer – Flat	2
*	3290–378	Tie – Cable	1

*Not Illustrated

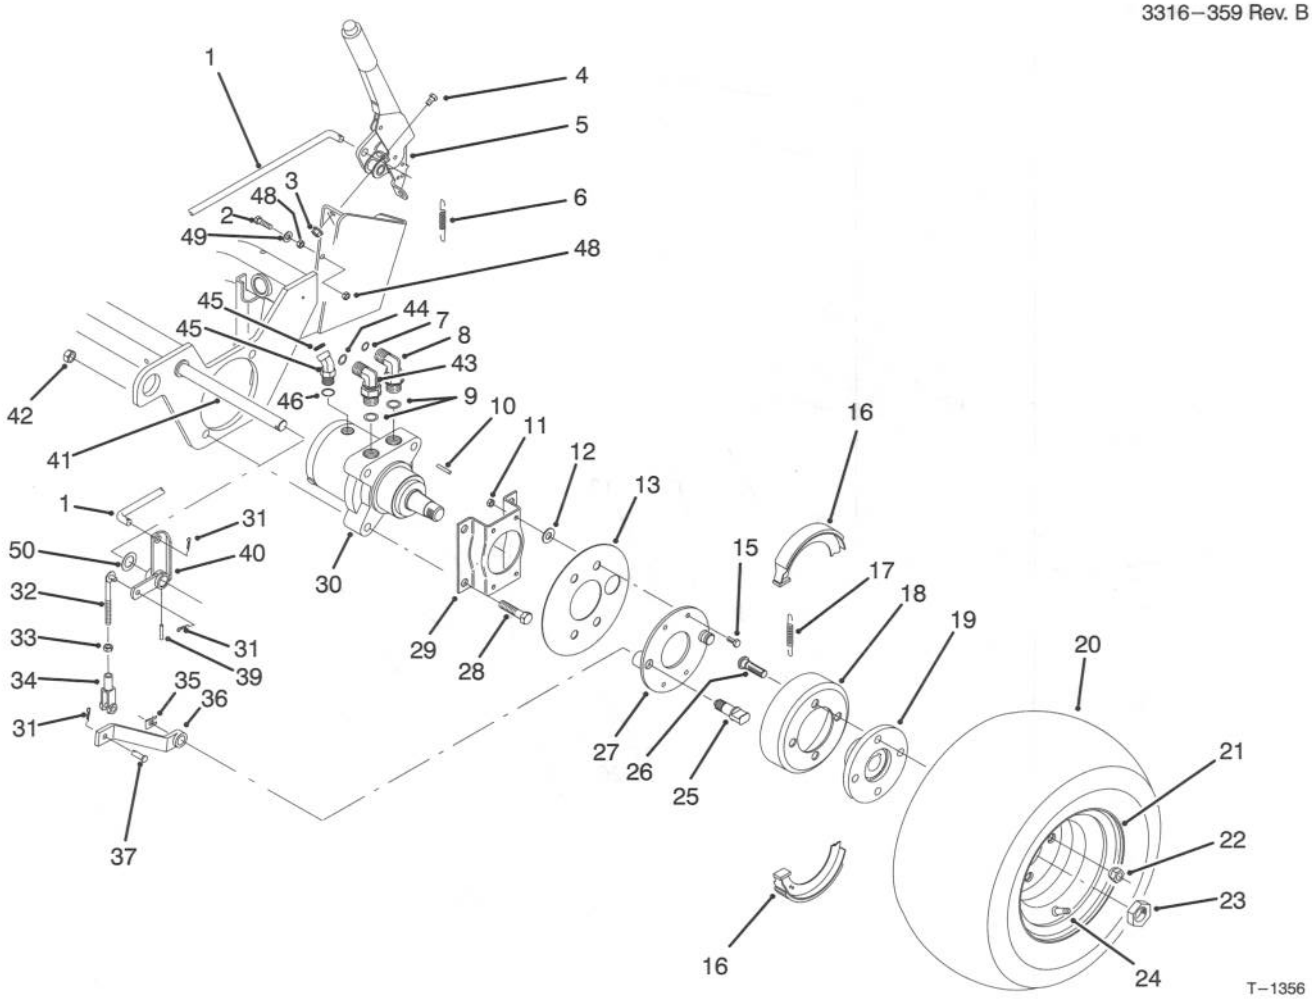


FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83–9350	Rod – Parking Brake	1
2	322–17	Screw – Cap Hex. Hd.	1
3	32128–44	Nut – Lock	2
4	3234–5	Screw – Hex. Washer Hd.	2
5	61–3990	Parking Brake Assembly	1
6	5–7290	Spring – Extension	1
7	237–30	Seal – O–Ring	2
8	340–105	Fitting – Hydraulic 90° (Incl. Ref. 7 & 9)	2
9	237–80	Seal – O–Ring	4
10	3257–15	Key – Square	2
11	3296–42	Nut – Lock	8
12	3256–16	Washer – Flat	8
13	83–9340	Shield – Grass	2
15	321–5	Screw – Cap Hex. Hd.	8
16	70–9840	Shoe – Brake	4
17	70–9880	Spring – Extension	4
18	10–6821	Brake Drum Assembly (Incl. Ref. #19 & 26)	2
19	10–6870	Hub – Wheel	2
20	231–127	Tire	2
21	217–60	Rim	2
22	242–50	Nut – Lug	8
23	26–3790	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
24	232–27	Valve – Stem	2
25	70–9860	Pin – Pivot Brake	2
26	85–6540	Stud – Drive	8
27	70–9870	Plate – Brake	2
28	325–11	Screw – Cap Hex. Hd.	8
29	84–2000	Bracket – Brake	2
30	66–5291	Hydraulic Motor Assembly (Incl. Ref. #10)	2
31	3272–6	Pin – Cotter	5
32	84–1990	Rod – Adjusting	2
33	3220–2	Nut – Jam	2
34	282–2	Clevis	2
35	70–9850	Clip – Retaining	2
36	83–9250	Lever – Brake	2
37	283–1	Pin – Clevis	2
39	32121–6	Pin – Roll	2
40	83–9270	Pivot – Brake L.H.	1
*	83–9310	Pivot – Brake R.H.	1
41	83–9330	Shaft – Brake	1
42	3296–23	Nut – Lock	8
43	340–17	Fitting – Hydraulic 90° (Incl. Ref. #9 & 44)	2
44	237–65	Seal – O–Ring	2


*Not Illustrated

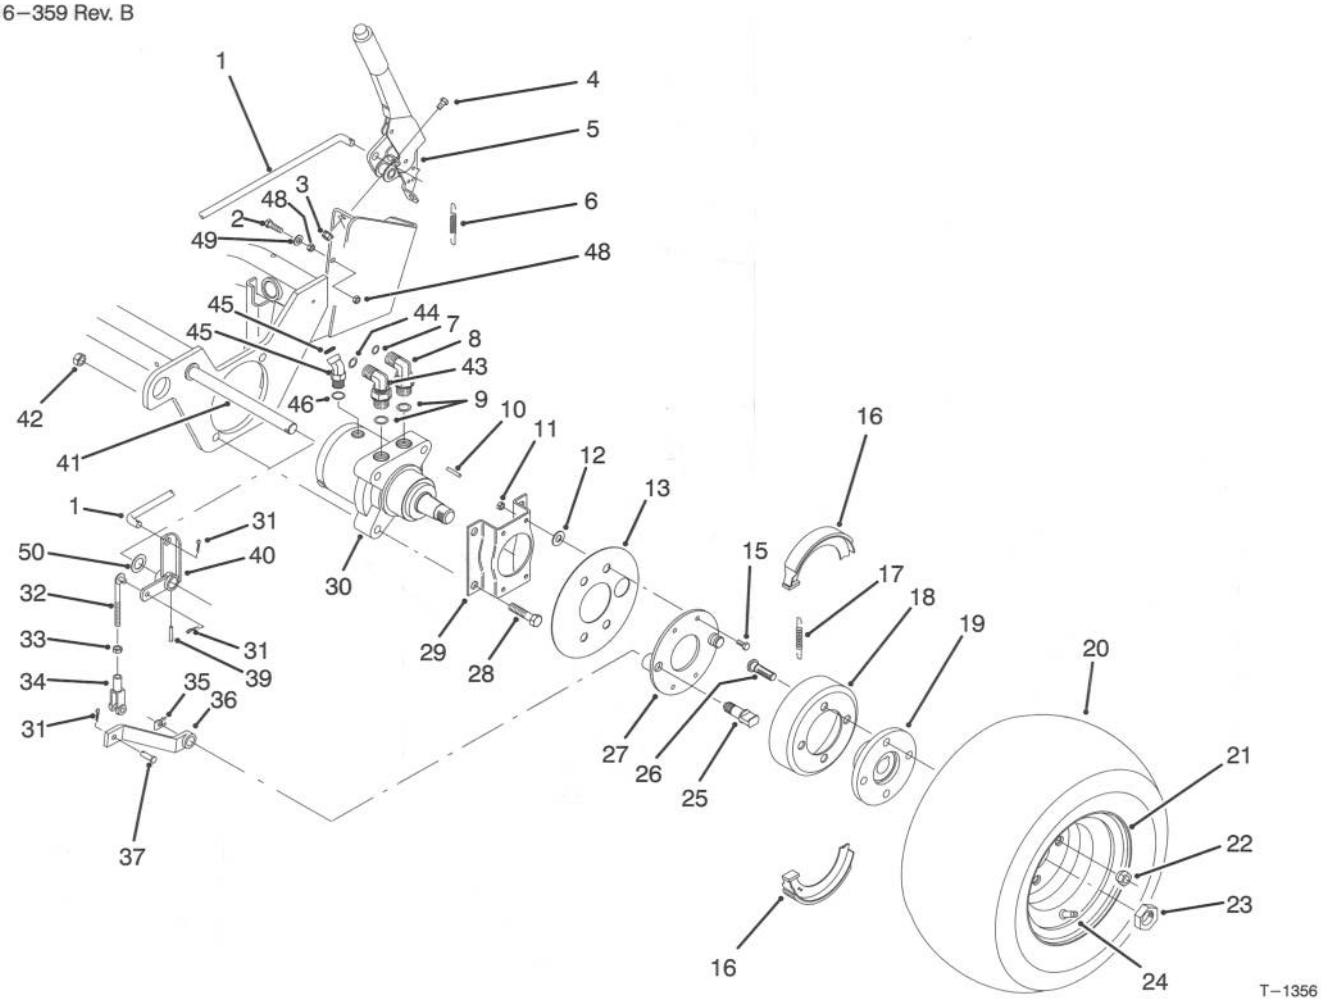

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	340–103	Fitting – Hydraulic 45° (Incl. Ref. #46 & 47) (For Left Wheel Motor)	1
*	340–140	Fitting – Hydraulic Tee (Incl. Ref. #46 & 47) (For Right Wheel Motor)	1
46	237–78	Seal – O–Ring	2
47	237–21	Seal – O–Ring	3
48	32128–20	Nut – Lock	2
49	3256–23	Washer	1
50	3–6498	Washer	2
*	71–1500	Brake Assembly (Incl. Ref. #16, 17, 25, 27 & 35)	2

*Not Illustrated

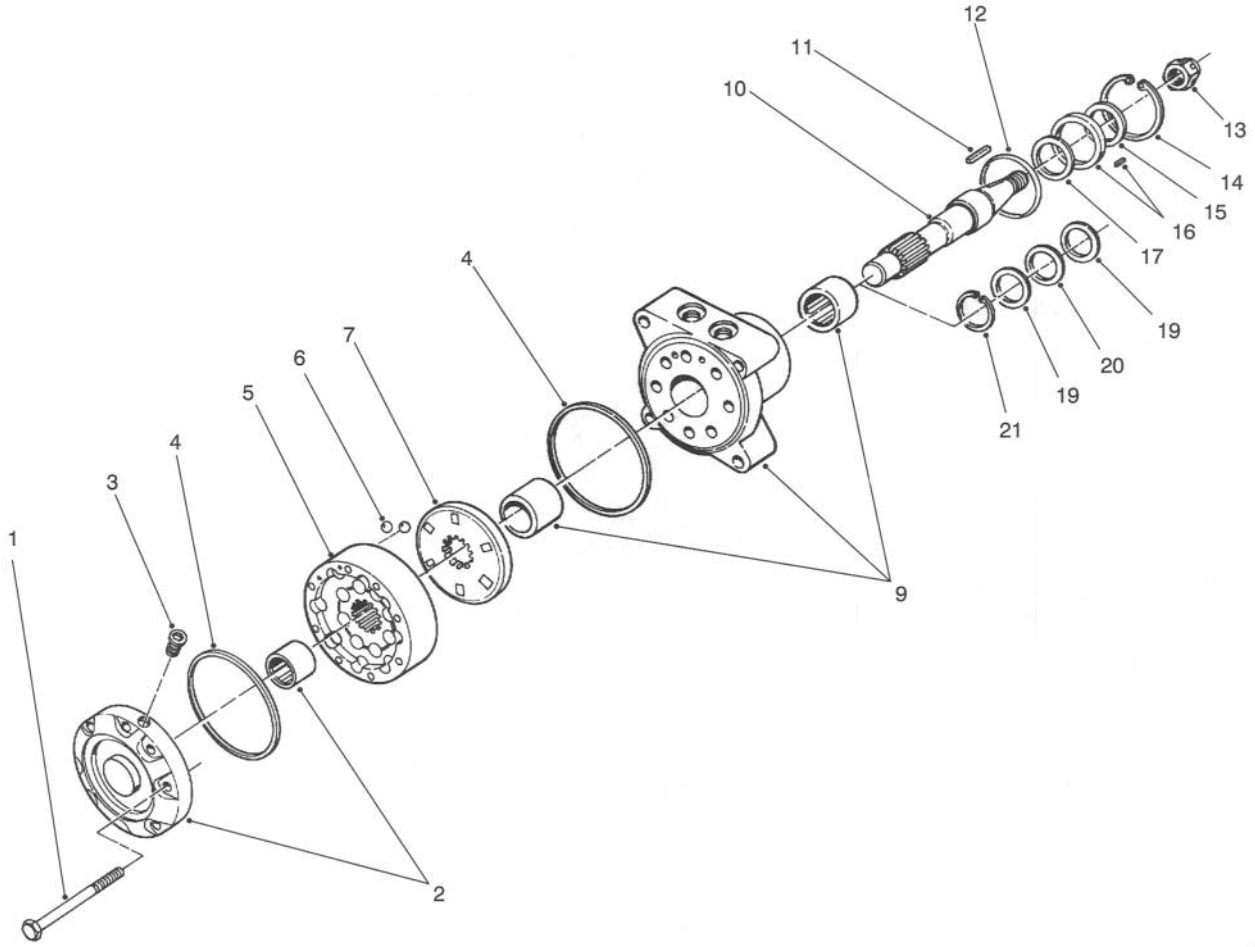


T–0274

HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 66–5291

Ref. No.	Part No.	Description	No. Used
1	65–4580	Screw – Cap Hex Hd.	8
2	65–4680	Cover & Bearing Assembly	1
3	65–4560	Plug – Hex (Hollow)	1
4	65–4570	Seal – Square Ring	2
5	66–6110	IGR Assembly	1
6	65–4550	Valve – Check Ball	2
7	70–8150	Plate – Valve	1
9	65–4670	Body & Bearing Assembly	1
10	92–1157	Shaft	1
11	3257–15	Key – Square	1
12	65–4620	Seal – O–Ring	1

Ref. No.	Part No.	Description	No. Used
14	65–4500	Seal – Snap Ring	1
†15		Seal–Dust	1
†16		Retainer/Pin	1
†17		Seal–Lip	1
*	76–2350	Seal/Retainer Assembly (Incl. Ref. #15–17)	1
19	65–4600	Washer – Thrust	2
20	65–4610	Bearing – Thrust	1
21	65–4590	Ring – Snap	1
*	76–2360	Body Seal Kit (Incl. Ref. #4,12 & 15–17)	1

*Not Illustrated
†Not available from Toro as a replacement part.

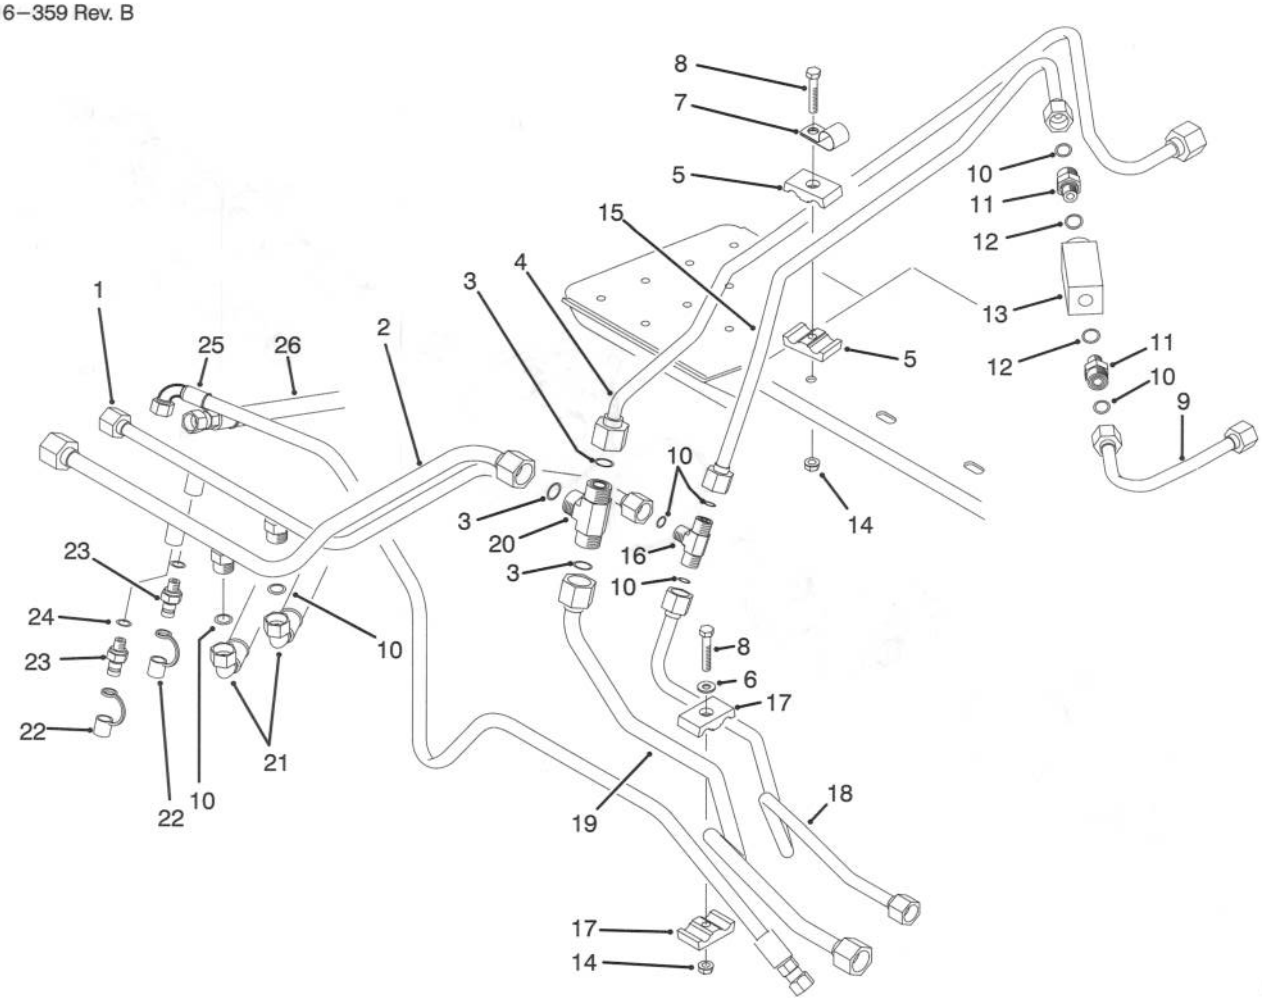


T–1358

DRIVE MOTOR PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83–9470	Hydraulic Tube Assembly (Incl. Ref. #10)	1
2	83–9440	Hydraulic Tube Assembly (Incl. Ref. #10)	1
3	327–65	Seal – O–Ring	3
4	83–9460	Tube – Hydraulic	1
5	56–7976	Clamp – Hydraulic Tube	2
6	3256–3	Washer – Flat	1
7	2412–39	Clamp – R	1
8	322–10	Screw – Cap Hex. Hd.	2
9	83–9500	Tube – Hydraulic	1
10	237–30	Seal – O–Ring	7
11	340–5	Fitting – Hydraulic Straight (Incl. Ref. #10 & 12)	2
12	237–42	Seal – O–Ring	2
13	71–2960	Valve – Flow Control	1

Ref. No.	Part No.	Description	No. Used
14	3296–29	Nut – Lock	2
15	83–9490	Tube – Hydraulic	1
16	340–102	Fitting – Hydraulic Tee (Incl. Ref. #10)	1
17	56–7977	Clamp – Hydraulic Tube	2
18	83–9480	Tube – Hydraulic	1
19	83–9450	Tube – Hydraulic	1
20	340–19	Fitting – Hydraulic Tee (Incl. Ref. #3)	1
21	83–9600	Hose – Hydraulic	2
22	354–79	Cap – Test Port	2
23	354–77	Fitting – Hydraulic Test Port (Incl. Ref. #24)	2
24	237–78	Seal – O–Ring	2
25	85–5300	Hose – Hydraulic	1
26	85–4990	Hose – Hydraulic	1

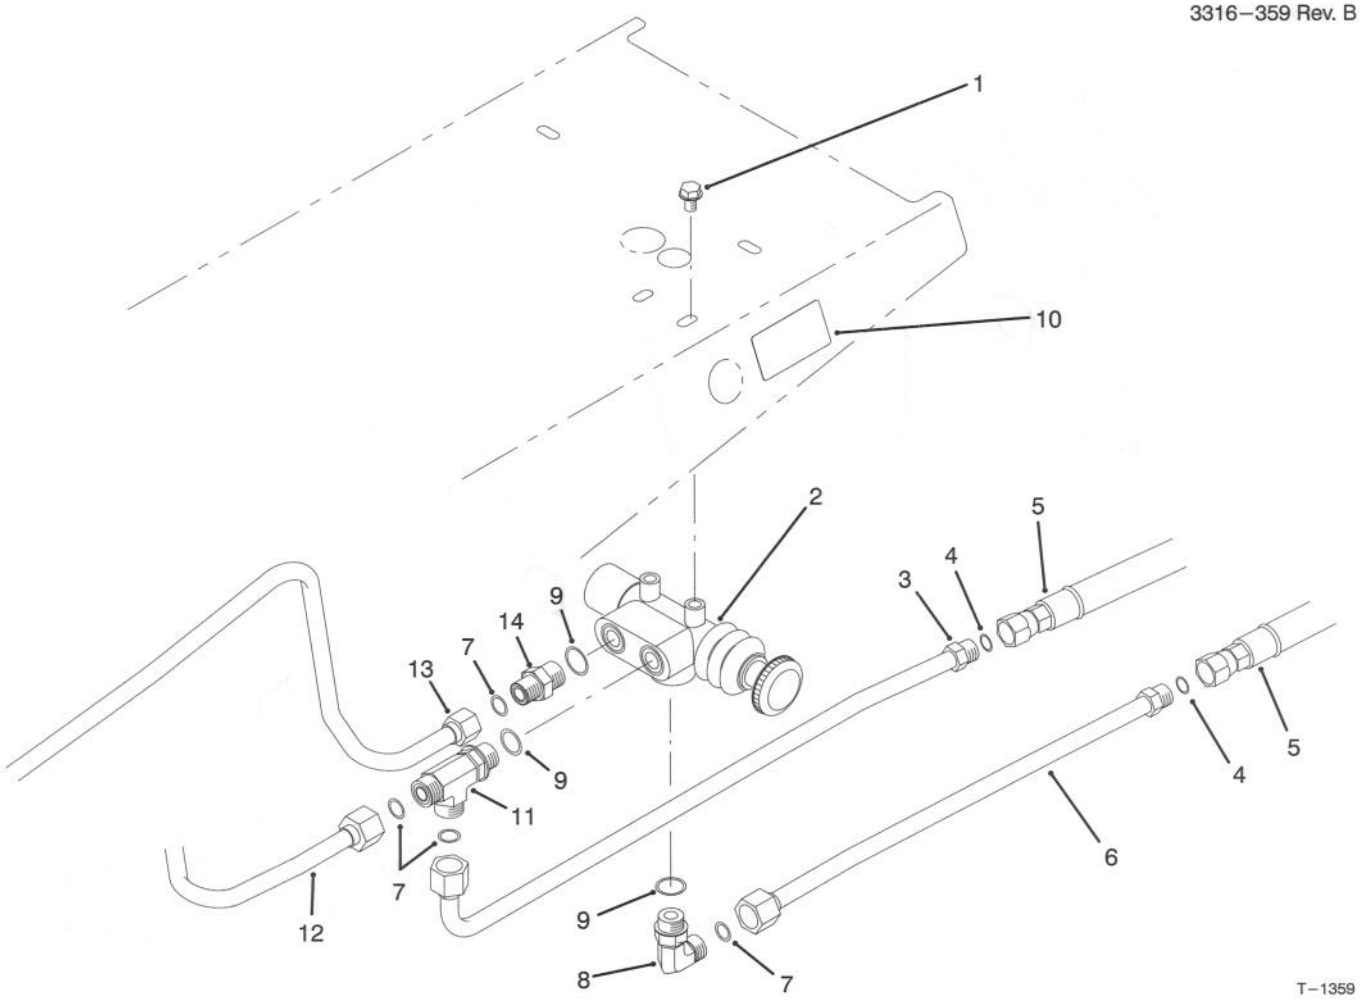


T–1359

REAR WHEEL DRIVE VALVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234–28	Screw – Hex. Flange Hd.	2
2	92–3196	2 Position Valve Assembly	1
3	71–0710	Hydraulic Tube Assembly (Incl. Ref. #4)	1
4	237–22	Seal – O–Ring	2
5	80–4090	Hose – Hydraulic	2
6	71–0840	Hydraulic Tube Assembly (Incl. Ref. #4)	1
7	237–30	Seal – O–Ring	4

Ref. No.	Part No.	Description	No. Used
8	340–98	Fitting – Hydraulic 90° (Incl. Ref. #7 & 9)	1
9	237–79	Seal – O–Ring	3
10	92–3179	Decal – Control	1
11	340–109	Fitting – Hydraulic Tee (Incl. Ref. #7 & 9)	1
12	83–9500	Tube – Hydraulic	1
13	83–9460	Tube – Hydraulic	1
14	340–4	Fitting – Hydraulic Straight (Incl. Ref. #7 & 9)	1

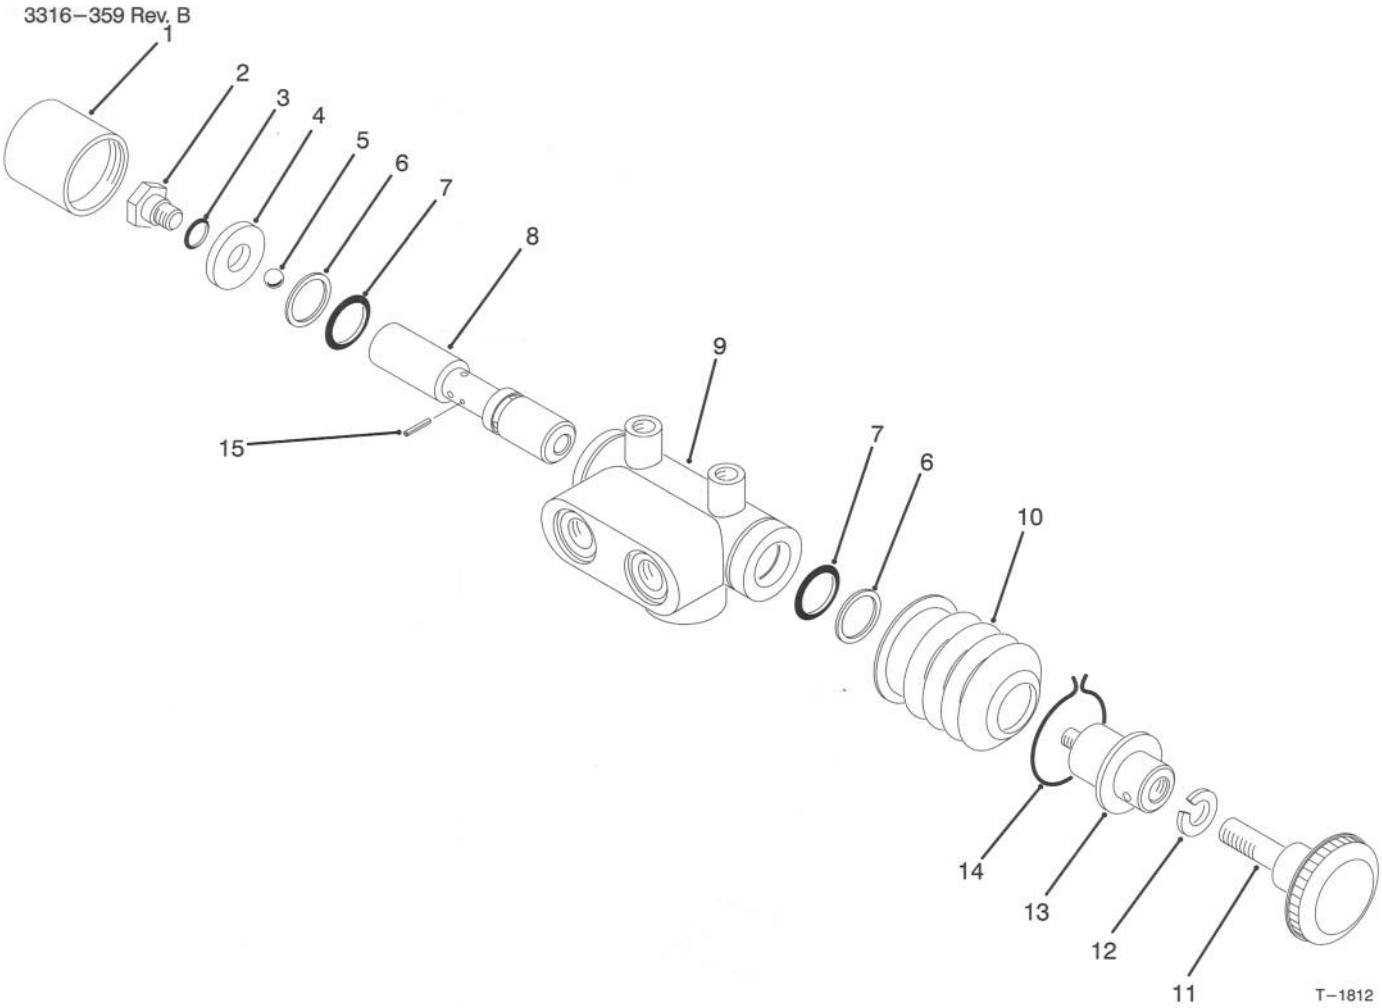


TWO POSITION VALVE ASSEMBLY NO. 92–3196

Ref. No.	Part No.	Description	No. Used
1	92–7904	Cap – Valve	1
2	92–7907	Plug Assembly (Incl. Ref. #3)	1
3	237–22	Seal – O–Ring	1
4	92–7908	Washer – Valve	1
5	354–23	Ball	1
6		Ring – Back–Up	2
7		Seal – O–Ring	2
8		Spool – Valve	1
9		Housing – Valve	1


Ref. No.	Part No.	Description	No. Used
10	92–7911	Boot	1
11	233–46	Knob	1
12	3253–5	Washer – Lock	1
13	92–7909	Stop – Valve	1
14	92–7912	Retainer – Boot	1
15	32121–38	Pin – Spring	1
*	92–7913	Seal Repair Kit (Incl. Ref. #1, 3, 6, 7, 10 & 14)	1

*Not Illustrated

HYDRAULIC SCHEMATIC

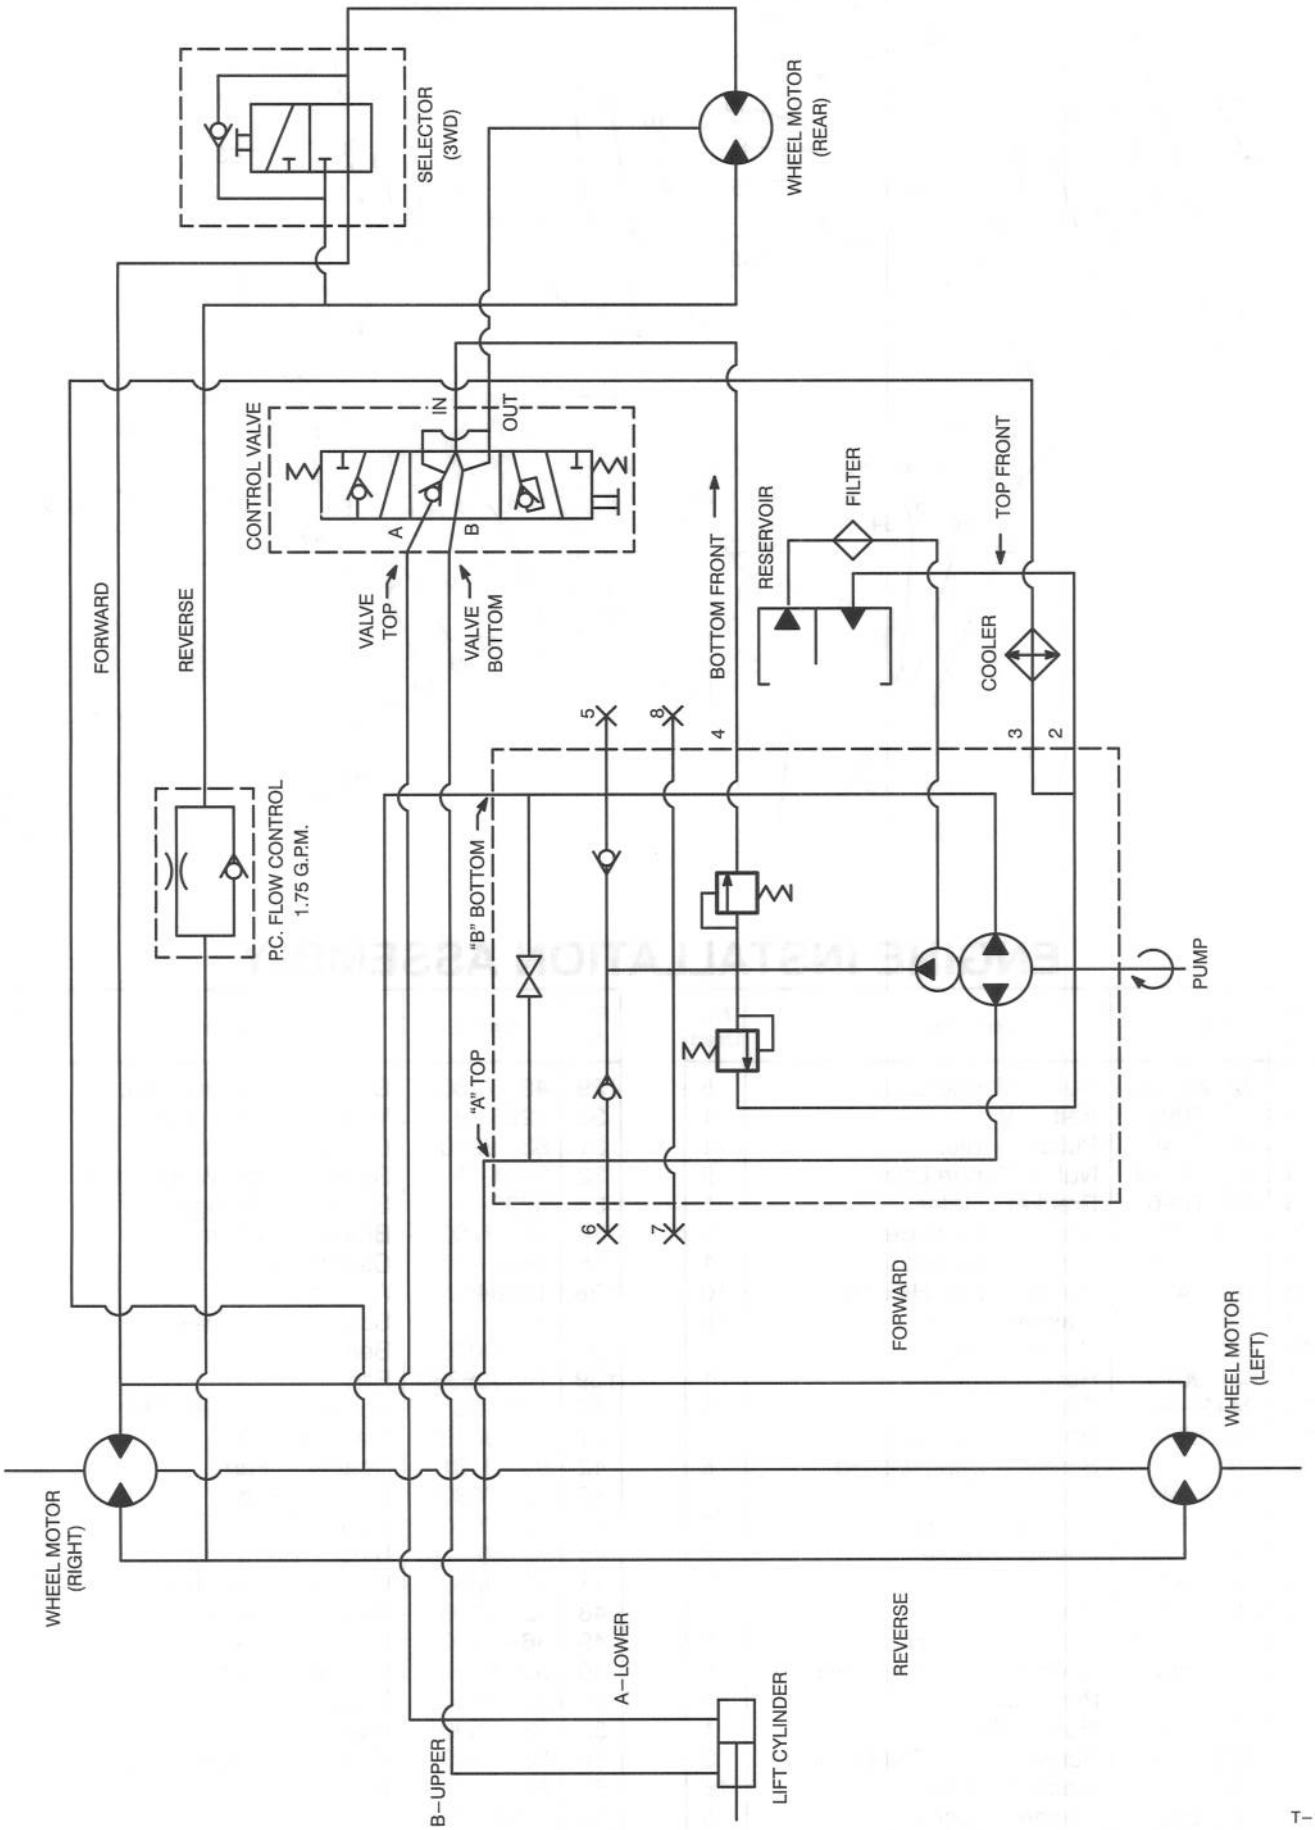

T–1411

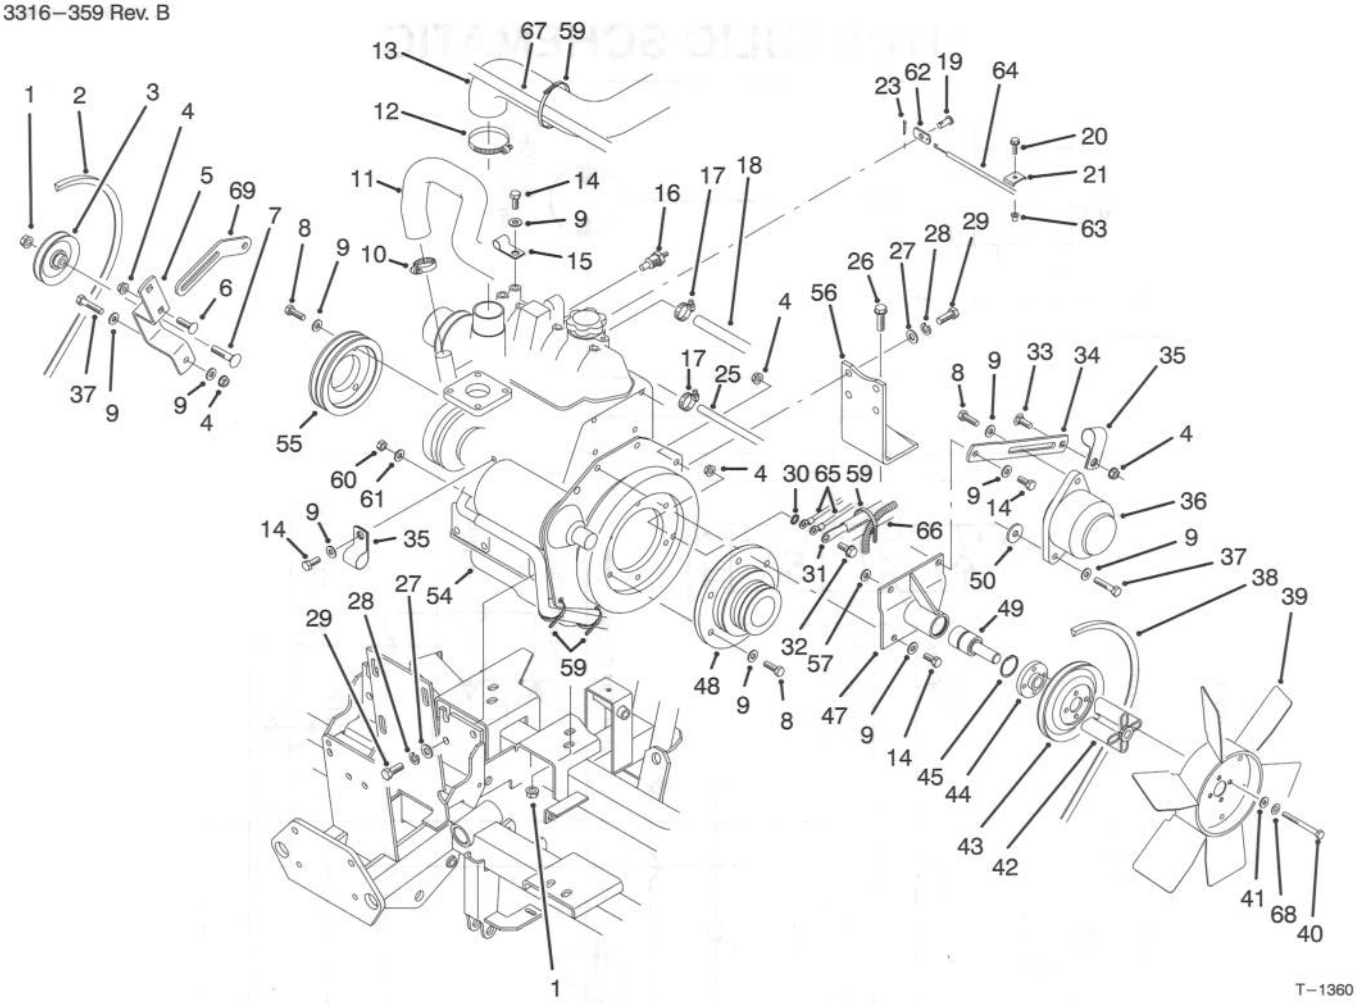


ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128–43	Nut – Flange Lock	5
2	37–9090	Belt – V	1
3	63–8140	Pulley – Idler	1
4	32128–44	Nut – Flange Lock	5
5	83–7690	Bracket – Idler	1
6	3230–22	Screw – Carriage	1
7	3231–26	Screw – Carriage	1
8	48–9460	Screw – Cap Hex. Hd.	10
9	3256–23	Washer – Flat	18
10	2412–34	Clamp – Hose	1
11	83–9070	Hose – Coolant	1
12	2412–92	Clamp – Hose	1
13	83–8550	Hose – Air Intake	1
14	48–7700	Screw – Cap Hex. Hd.	6
15	2412–93	Clamp – R	1
16	82–3110	Sensor – Temp.	1
17	2412–108	Clamp – Hose	2
18	63–7620	Hose – Fuel	1
19	283–62	Pin – Clevis	1
20	3290–432	Screw – Hex. Hd.	1
21	81–1690	Clamp – Throttle Cable	1
23	3272–10	Pin – Cotter	1
25	75–4703	Hose – Fuel	1
26	3234–24	Screw – Hex. Flange Hd.	3
27	3256–24	Washer – Flat	16
28	48–9590	Washer – Lock	16

Ref. No.	Part No.	Description	No. Used
29	48–7780	Screw – Cap Hex. Hd.	16
30	3255–8	Washer – Lock ETLW	1
31	83–9210	Cable – Ground	1
32	3234–5	Screw – Hex. Washer Hd.	1
33	3230–1	Screw – Carriage	1
34	83–7700	Bracket – Alternator	1
35	2412–39	Clamp – R	2
†36	185046210	Alternator	1
37	322–7	Screw – Cap Hex. Hd.	2
38	83–9020	Belt – V	1
†39	145306380	Fan	1
40	321–23	Screw – Cap Hex. Hd.	4
41	48–8010	Washer – Flat	4
42	92–3181	Spacer – Fan	1
43	83–7630	Pulley – Fan	1
44	83–7610	Hub – Fan	1
45	32120–10	Ring – Retaining	1
47	83–9880	Bracket – Fan Spindle	1
48	92–3198	Pulley – Engine	1
49	36–7290	Spindle – Fan	1
50	62–9510	Washer – Flat	1
54	83–7540	Engine Assembly	1
55	83–7590	Pulley – Engine	1
56	83–8470	Bracket – Engine Mount	2
57	65–8270	Washer	1
59	3290–379	Tie – Cable	4

†Obtain from your local Perkins Dealer.

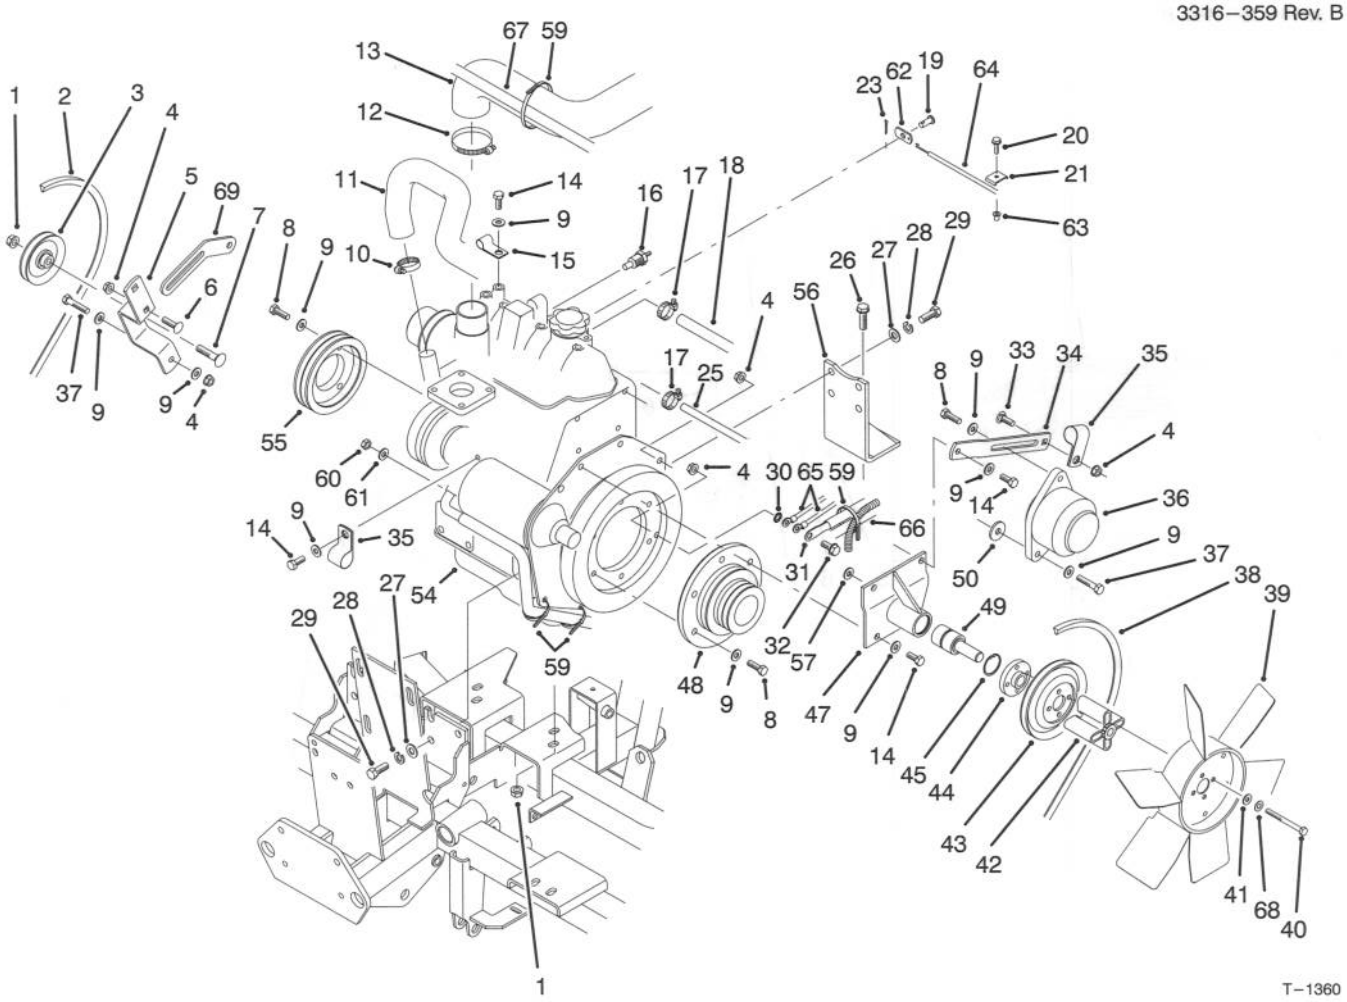


T–1360

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
60	57–6390	Nut	1
61	42–9850	Washer	1
62	92–3154	Tab – Throttle	1
63	32148–14	Insert – Threaded	1
64	92–3153	Cable – Throttle	1

Ref. No.	Part No.	Description	No. Used
65	92–7910	Harness – Wire	1
66	83–9220	Cable – Battery Pos.	1
67	92–1177	Hose – Hydraulic	1
68	3253–3	Washer – Lock	4
†69	185726431	Strap – Adjustment	1

†Obtain from your local Perkins Dealer.

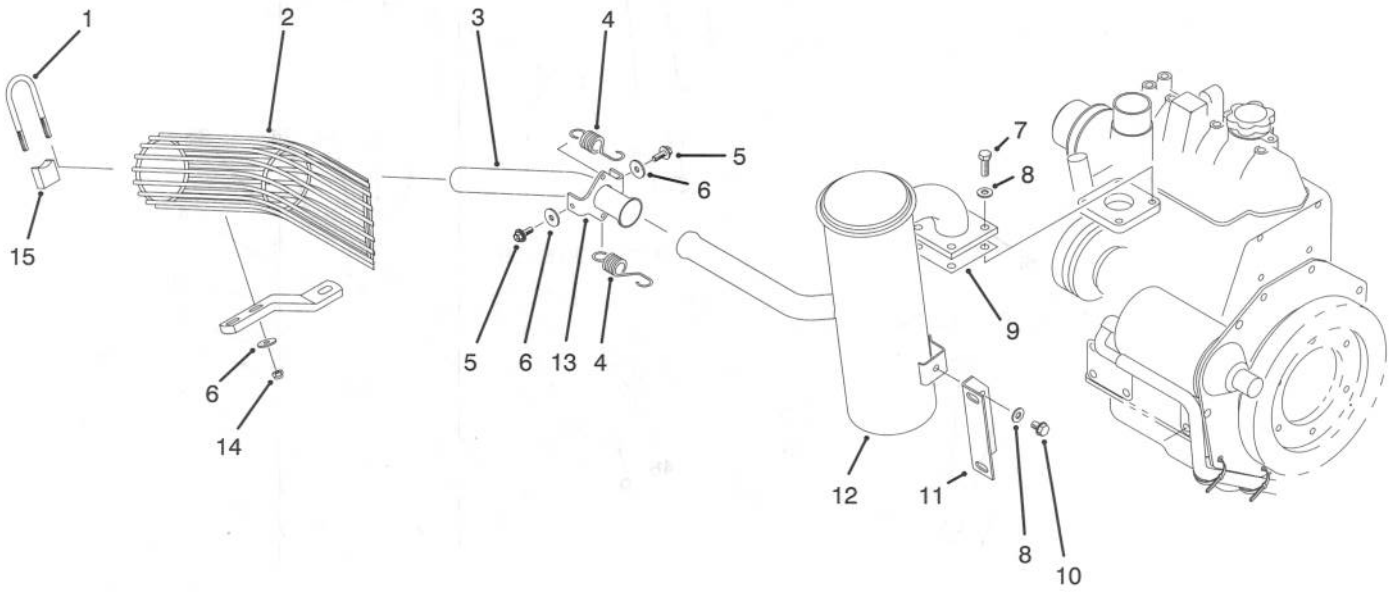


T–1931

EXHAUST SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–9798	Bolt – U	1
2	93–0152	Guard – Exhaust Pipe	1
3	92–9799	Tube – Muffler	1
4	92–9797	Spring – Extension	2
5	46–6811	Screw – Cap Hex. Hd.	2
6	3256–67	Washer – Flat	4
7	48–9460	Screw – Cap Hex. Hd.	4
8	3256–23	Washer – Flat	5

Ref. No.	Part No.	Description	No. Used
†9	314990013	Gasket – Muffler	1
10	3234–28	Screw – Hex. Flange Hd.	1
11	83–8220	Bracket – Muffler	1
12	92–9776	Muffler	1
13	93–0151	Bracket – Tube Support	1
14	3296–16	Nut – Lock	2
15	92–9796	Block – Support	1


†Obtain from your local Perkins Dealer.

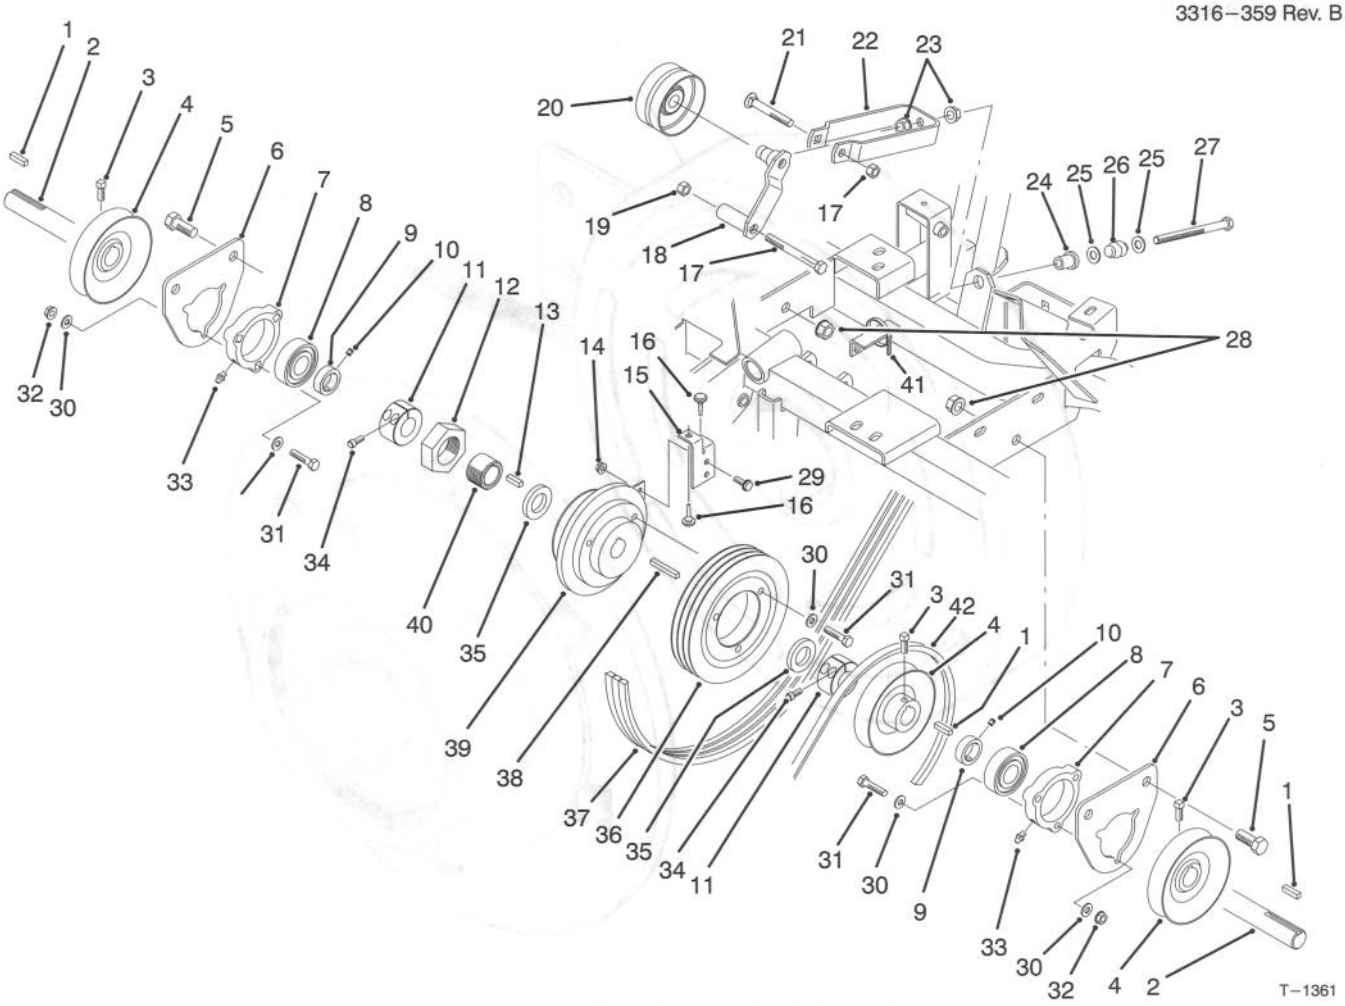

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5–7280	Key – Square	3
2	83–7820	Shaft – Drive	1
3	3242–4	Screw – Square Hd. Set	6
4	61–0140	Pulley – Reel	3
5	3234–32	Screw – Cap Hex. Hd.	4
6	92–3185	Support – Bearing	2
7	76–2460	Bearing Assembly (Incl. Ref. #7–10 & 33)	2
8	251–337	Bearing – Ball	2
9	251–77	Collar – Locking	2
10	3245–35	Screw – Set	4
11	83–7790	Collar	2
12	3218–17	Nut – Jam	1
13	10–7070	Key – Square	1
14	32128–33	Nut – Flange Lock	2
15	83–7830	Retainer – Clutch	1
16	240–13	Bumper	2
17	3296–39	Nut – Lock	2
18	83–8620	Bracket – Idler	1
19	323–15	Screw – Cap Hex. Hd.	1
20	83–8400	Pulley – Idler	1
21	3231–31	Bolt – Carriage	1

Ref. No.	Part No.	Description	No. Used
22	83–8630	Yoke – Belt Tension	1
23	32128–43	Nut – Flange Lock	2
24	83–9810	Bushing – Flange	1
25	3256–24	Washer – Flat	2
26	83–9690	Spring – Compression	1
27	83–9680	Screw – Cap Hex. Hd.	1
28	3296–23	Nut – Flange Lock	4
29	3234–4	Screw – Hex. Flange Hd.	2
30	3256–23	Washer – Flat	15
31	322–17	Screw – Cap Hex. Hd.	9
32	3296–29	Nut – Flange Lock	6
33	302–5	Fitting – Grease	2
34	3273–18	Screw – Hex. Socket Hd.	4
35	83–7810	Spacer	2
36	92–3199	Pulley – Clutch	1
37	92–3187	Belt – Drive (Set of 3)	1
38	83–8080	Key – Square	1
39	83–9140	Clutch Assembly	1
40	83–7800	Sleeve	1
41	3290–379	Tie – Cable	1
42	61–3380	Belt – Reel Drive	3

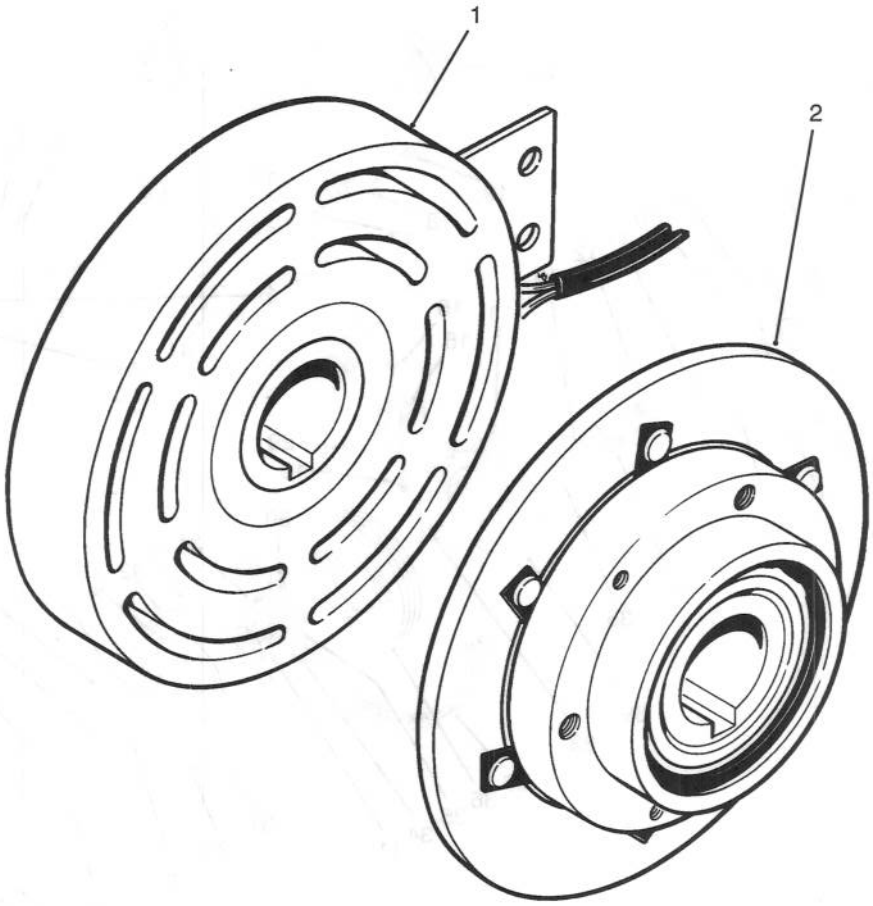


T–1362

ELECTRIC CLUTCH ASSEMBLY NO. 83–9140

Ref. No.	Part No.	Description	No. Used
1	84–7770	Field & Rotor Assembly	1

Ref. No.	Part No.	Description	No. Used
2	84–7780	Armature Assembly	1

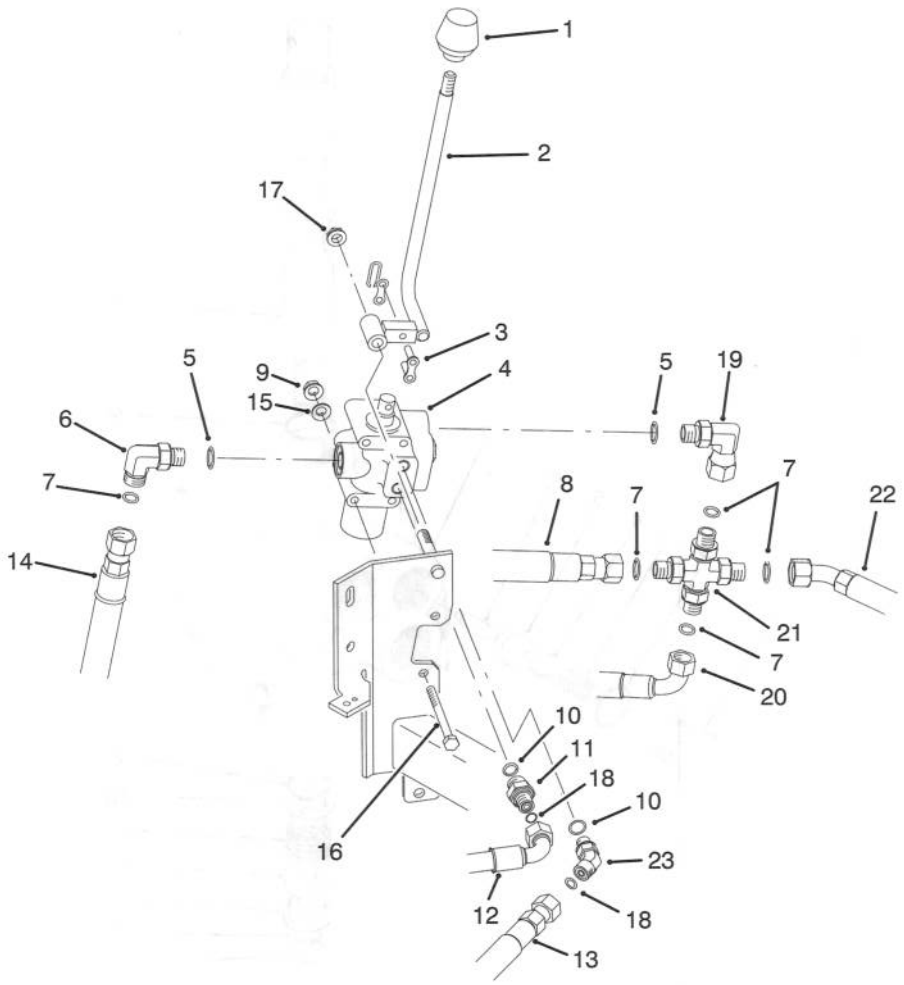


T–1363

CUTTING UNIT LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233–37	Knob	1
2	85–5160	Lever – Lift Valve	1
3	2710–16	Connecting Link Assembly	1
4	43–1950	Lift Valve Assembly	1
5	237–42	Seal – O–Ring	1
6	340–77	Fitting – Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237–22	Seal – O–Ring	4
8	92–1177	Hose – Hydraulic	1
9	3296–16	Nut – Flange Lock	2
10	237–78	Seal – O–Ring	2
11	340–92	Fitting – Hydraulic Straight (Incl. Ref. #10 & 18)	1
12	83–9620	Hose – Hydraulic	1

Ref. No.	Part No.	Description	No. Used
13	85–4990	Hose – Hydraulic	1
14	83–9640	Hose – Hydraulic	1
15	3256–22	Washer – Flat	2
16	321–23	Screw – Cap Hex. Hd.	2
17	3296–39	Nut – Flange Lock	1
18	237–21	Seal – O–Ring	2
19	340–110	Fitting – Hydraulic 90° (Incl. Ref. #5)	1
20	85–4990	Hose – Hydraulic	1
21	340–23	Fitting – Hydraulic Cross (Incl. Ref. #7)	1
22	340–103	Fitting – Hydraulic 90° (Incl. Ref. #10 & 18)	1

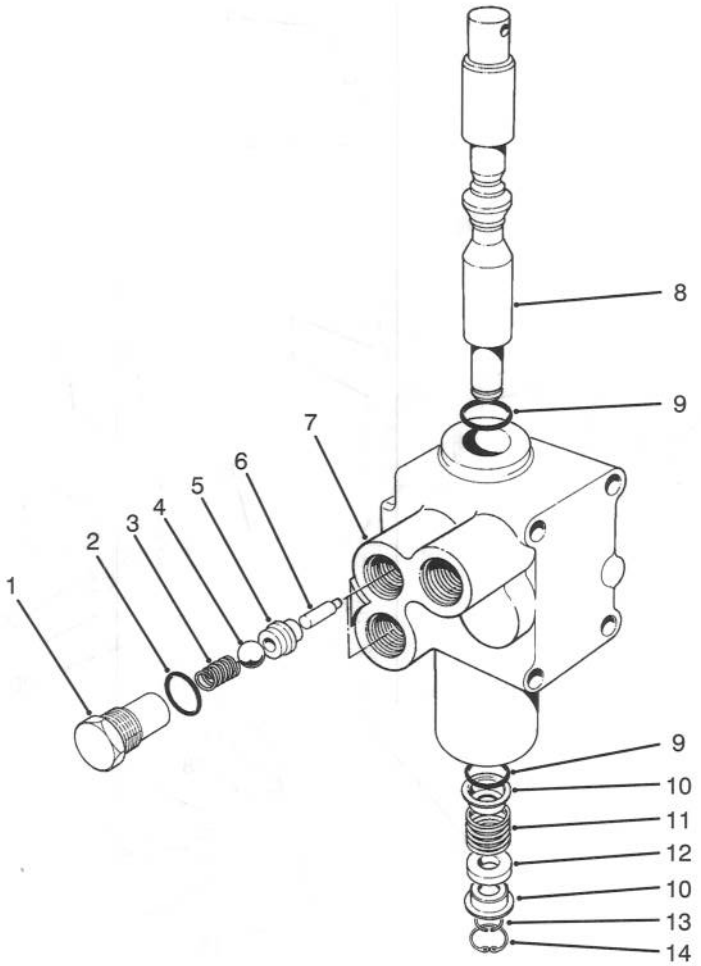


T–0280

CONTROL VALVE ASSEMBLY NO. 43–1950

Ref. No.	Part No.	Description	No. Used
1	22–8330	Plug	2
2	237–42	Seal – O–Ring	2
3	22–8340	Spring	2
4	22–8350	Ball	2
5	22–8370	Seat – Check Valve	2
6	22–8360	Pin – Cam	2
7		Body	1


Ref. No.	Part No.	Description	No. Used
8	22–8420	Spool	1
9	22–8500	Seal – O–Ring	2
10	22–8380	Retainer – Spring	2
11	22–8410	Spring	1
12	23–3030	Spacer	1
13	22–8480	Snap Ring – Spool	1
14	22–8490	Snap Ring	1

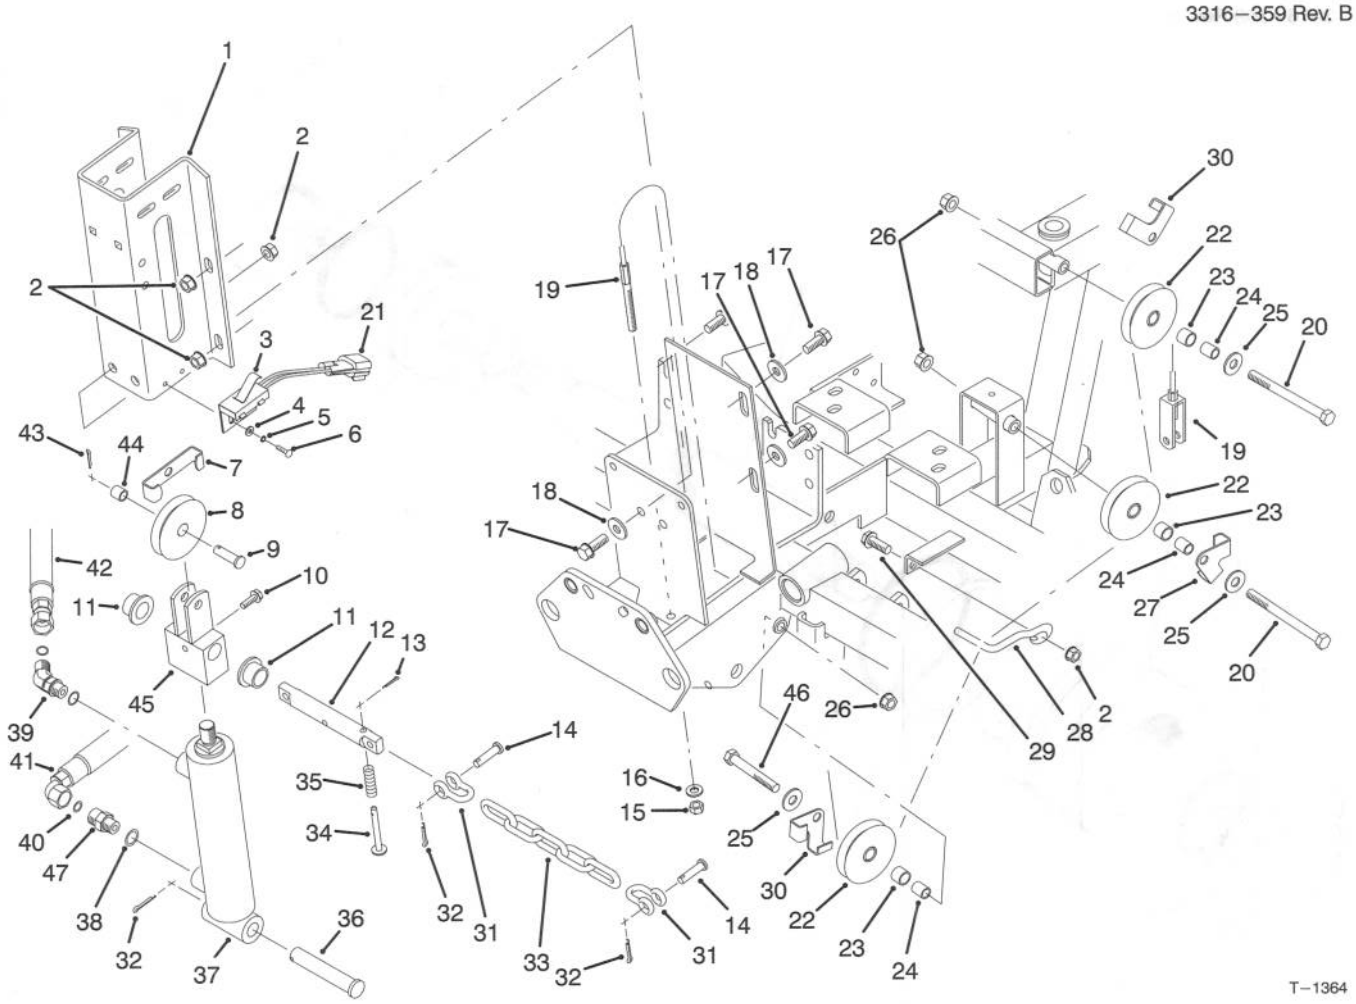

CUTTING UNIT LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83–9760	Bracket – Cylinder Support	1
2	32128–43	Nut – Flange Lock	7
3	92–7905	Switch Assembly (Incl. Ref. #21)	1
4	3256–53	Washer – Flat	2
5	3254–9	Washer – Lock Internal	2
6	3249–3	Screw – Round Hd.	2
7	5–2655	Keeper – Cable	1
8	5–2653	Cable Pulley Assembly (Incl. Ref. #44)	1
9	283–42	Pin – Clevis	1
10	3234–4	Screw – Hex. Washer Hd.	1
11	84–8440	Bushing – Flange	2
12	72–4190	Pin – Cylinder Guide	1
13	3272–4	Pin – Cotter	1
14	283–6	Pin – Clevis	4
15	3296–4	Nut – Lock	1
16	3256–23	Washer – Flat	1
17	3234–25	Screw – Hex. Washer Hd.	5
18	80–6990	Washer	4
19	83–8590	Cable – Lift	1
20	323–23	Screw – Cap Hex. Hd.	2
21	92–7906	Switch	1
22	61–3210	Cable Pulley Assembly (Incl. Ref. #23)	3
23	256–1	Bushing – Sleeve	3

Ref. No.	Part No.	Description	No. Used
24	61–3230	Spacer	3
25	3256–24	Washer – Flat	3
26	3296–39	Nut – Flange Lock	3
27	83–9130	Keeper – Cable	1
28	63–1400	Guide – Cable	1
29	3234–11	Screw – Hex. Washer Hd.	1
30	5–2656	Keeper – Cable	2
31	282–4	Clevis	4
32	3272–11	Pin – Cotter	5
33	61–3830	Chain – Lift	2
34	71–1380	Pin – Spring	1
35	71–1370	Spring – Compression	1
36	283–78	Pin – Clevis	1
37	76–0020	Hydraulic Cylinder Assembly	1
38	237–42	Seal – O–Ring	2
39	340–87	Fitting – Hydraulic 45° (Incl. Ref. #38 & 40)	1
40	237–22	Seal – O–Ring	2
41	85–4990	Hose – Hydraulic	1
42	83–9620	Hose – Hydraulic	1
43	3272–6	Pin – Cotter	1
45	61–2430	Hub – Lift	1
44	256–2	Bushing – Sleeve	1
46	323–13	Screw – Cap Hex. Hd.	1
47	340–2	Fitting – Hydraulic Straight (Incl. Ref. #38 & 40)	1

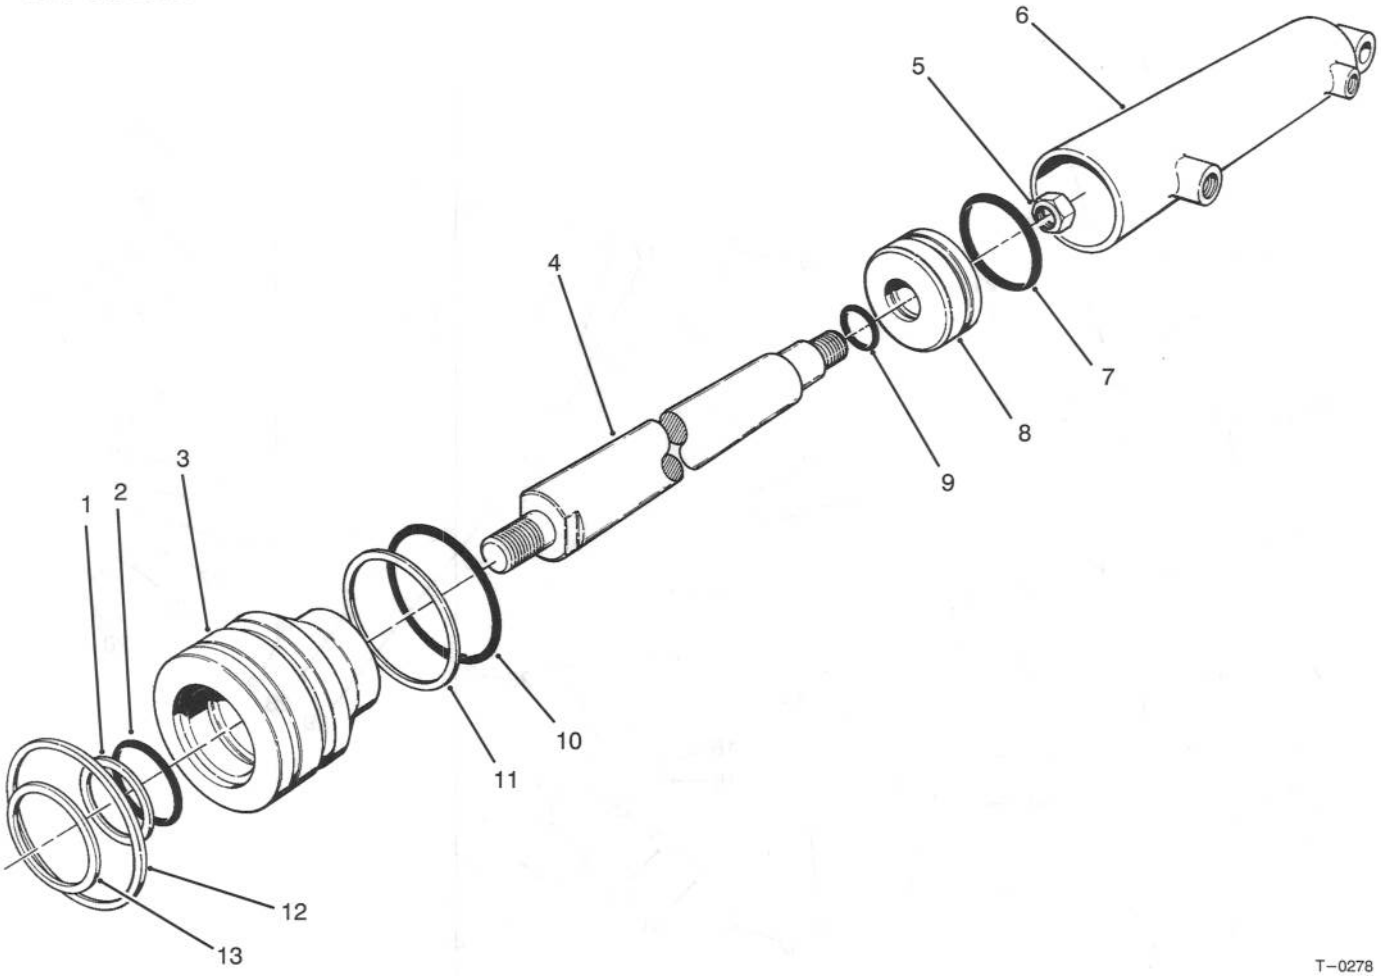


T–0278

HYDRAULIC CYLINDER ASSEMBLY NO. 76–0020

Ref. No.	Part No.	Description	No. Used
1		Washer – Backup	1
2		Seal – O–Ring	1
3	76–0090	Head	1
4	76–2320	Shaft	1
5	76–2330	Nut – Lock	1
6		Barrel	1
7		Uniring	1
8	76–0040	Piston	1

Ref. No.	Part No.	Description	No. Used
9		Seal – O–Ring	1
10		Seal – O–Ring	1
11		Washer – Backup	1
12	76–0050	Ring – Retaining	1
13		Seal–Dust	1
*	76–0030	Repair Kit (Incl. Ref. #1–2, 7, 9–11 &13)	1

*Not Illustrated

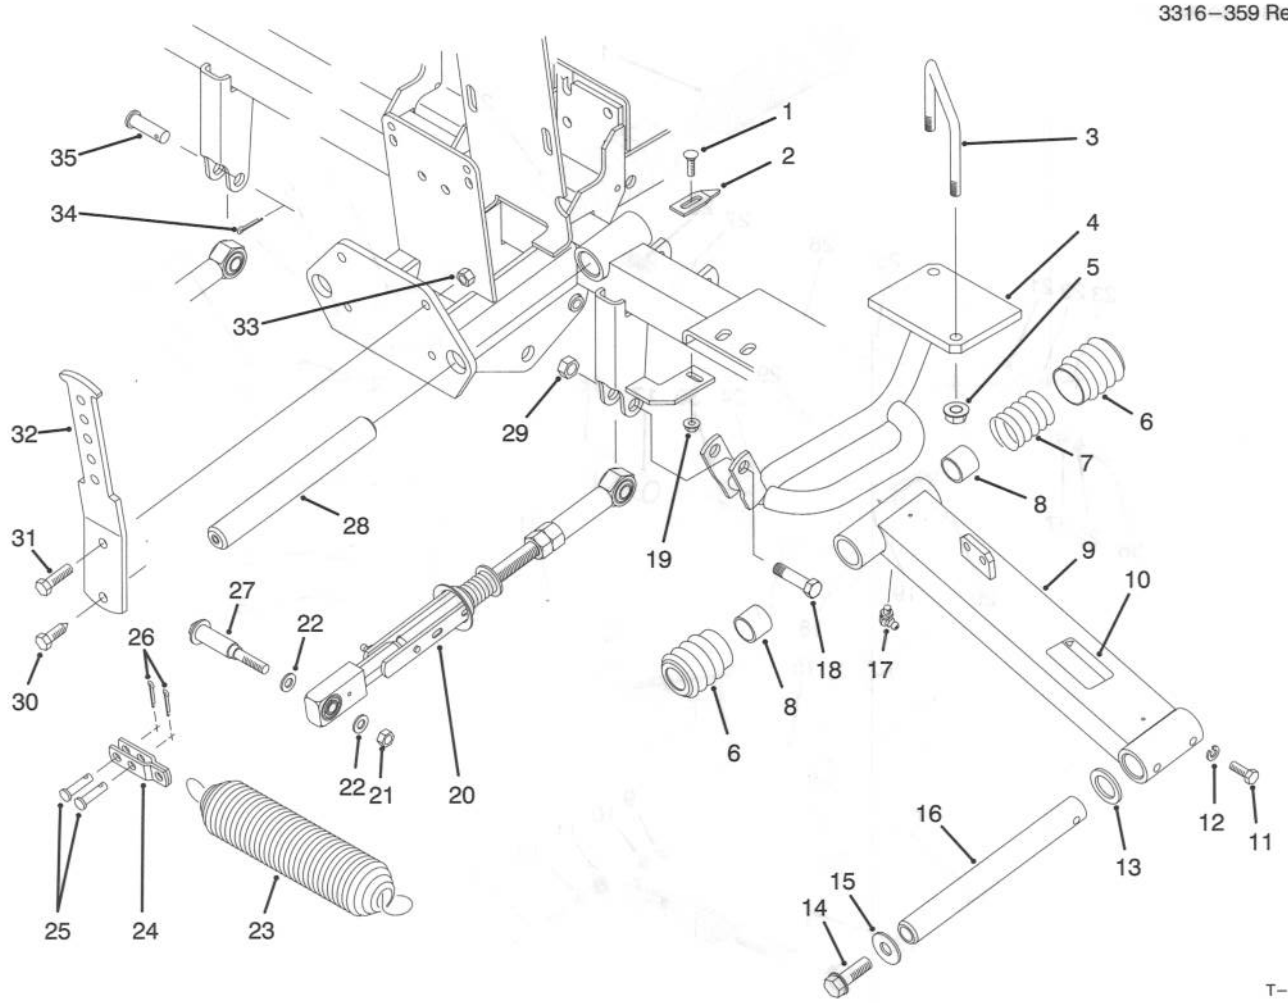


FRONT CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3229–1	Bolt – Carriage	2
2	76–2430	Scraper – Pulley	2
3	93–0153	Bolt – U	1
4	93–0160	Guard – Pulley	1
5	32128–19	Nut – Flange Lock	2
6	61–7250	Boot	4
7	61–3270	Spring – Compression	2
8	3–0348	Bushing – Sleeve	4
9	16–1159	Lift Arm Assembly L.H. (Incl. Ref. #8, 10 & 17)	1
*	16–1169	Lift Arm Assembly R.H. (Incl. Ref. #8, 10 & 17)	1
‡10	55–4300	Decal – Warning	2
11	322–4	Screw – Cap Hex. Hd.	2
12	3253–4	Washer – Lock	2
13	256–115	Washer – Thrust	2
14	3234–32	Screw – Hex. Flange Hd.	2
15	3256–6	Washer – Flat	2
16	92–1815	Rod – Pivot	2

Ref. No.	Part No.	Description	No. Used
17	302–60	Fitting – Grease	2
18	325–9	Screw – Cap Hex. Hd.	1
19	32128–33	Nut – Flange Lock	2
20	83–7900	Belt Tensioner Assembly	2
21	3296–59	Nut – Lock	2
22	3256–45	Washer – Flat	4
23	5–0743	Spring – Extension	2
24	92–1822	Shackle	2
25	283–75	Pin – Clevis	4
26	3272–10	Pin – Cotter	4
27	76–0370	Bolt – Shoulder	2
28	92–1812	Shaft – Lift Pivot	2
29	3296–45	Nut – Lock	1
30	32104–6	Screw – Cap Hex. Hd.	2
31	323–7	Screw – Cap Hex. Hd.	2
32	92–1818	Arm – Tension	2
33	3296–39	Nut – Lock	2
34	3272–13	Pin – Cotter	1
35	283–40	Pin – Clevis	1

*Not Illustrated
‡For different language versions of this part, see International Decal Cross Reference.

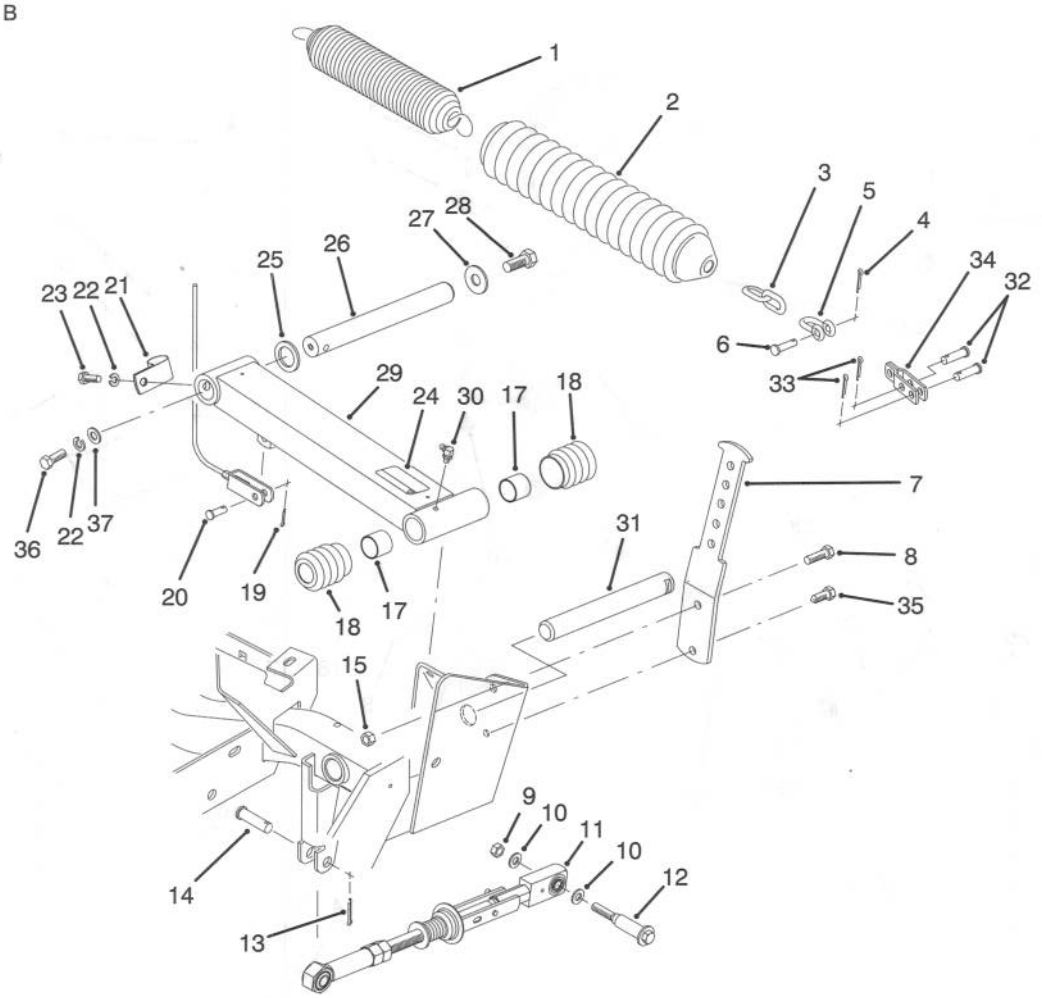


T–1366A

REAR CUTTING UNIT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5–0743	Spring – Extension	1
2	62–7240	Cover – Spring	1
3	62–7300	Chain	1
4	3272–11	Pin – Cotter	1
5	282–4	Clevis	1
6	283–6	Pin – Clevis	1
7	92–1818	Arm – Tension	1
8	323–7	Screw – Cap Hex. Hd.	1
9	3296–59	Nut – Lock	2
10	3256–45	Washer – Flat	4
11	83–7900	Belt Tensioner Assembly	2
12	76–0370	Bolt – Shoulder	2
13	3272–13	Pin – Cotter	2
14	283–40	Pin – Clevis	2
15	3296–39	Nut – Lock	1
17	3–0348	Bushing – Sleeve	2
18	62–7250	Boot	2
19	3272–6	Pin – Cotter	1
20	283–1	Pin – Clevis	1

Ref. No.	Part No.	Description	No. Used
21	2412–112	Clamp – R	1
22	3253–4	Washer – Lock	2
23	322–4	Screw – Cap Hex. Hd.	1
‡24	55–4300	Decal – Warning	1
25	256–115	Washer – Thrust	1
26	92–1815	Rod – Pivot	1
27	3256–6	Washer – Flat	1
28	3234–32	Screw – Cap Hex. Hd.	1
29	16–1089	Lift Arm Assembly (Incl. Ref. #17, 24 & 30)	1
30	302–60	Fitting – Grease	1
31	92–1812	Shaft – Lift Pivot	1
32	283–75	Pin – Clevis	2
33	3272–10	Pin – Cotter	2
34	92–1822	Shackle	1
35	32104–6	Screw – Cap Hex. Hd.	1
36	322–26	Screw – Cap Hex. Hd.	1
37	3256–57	Washer – Flat	1

‡For different language versions of this part, see International Decal Cross Reference.

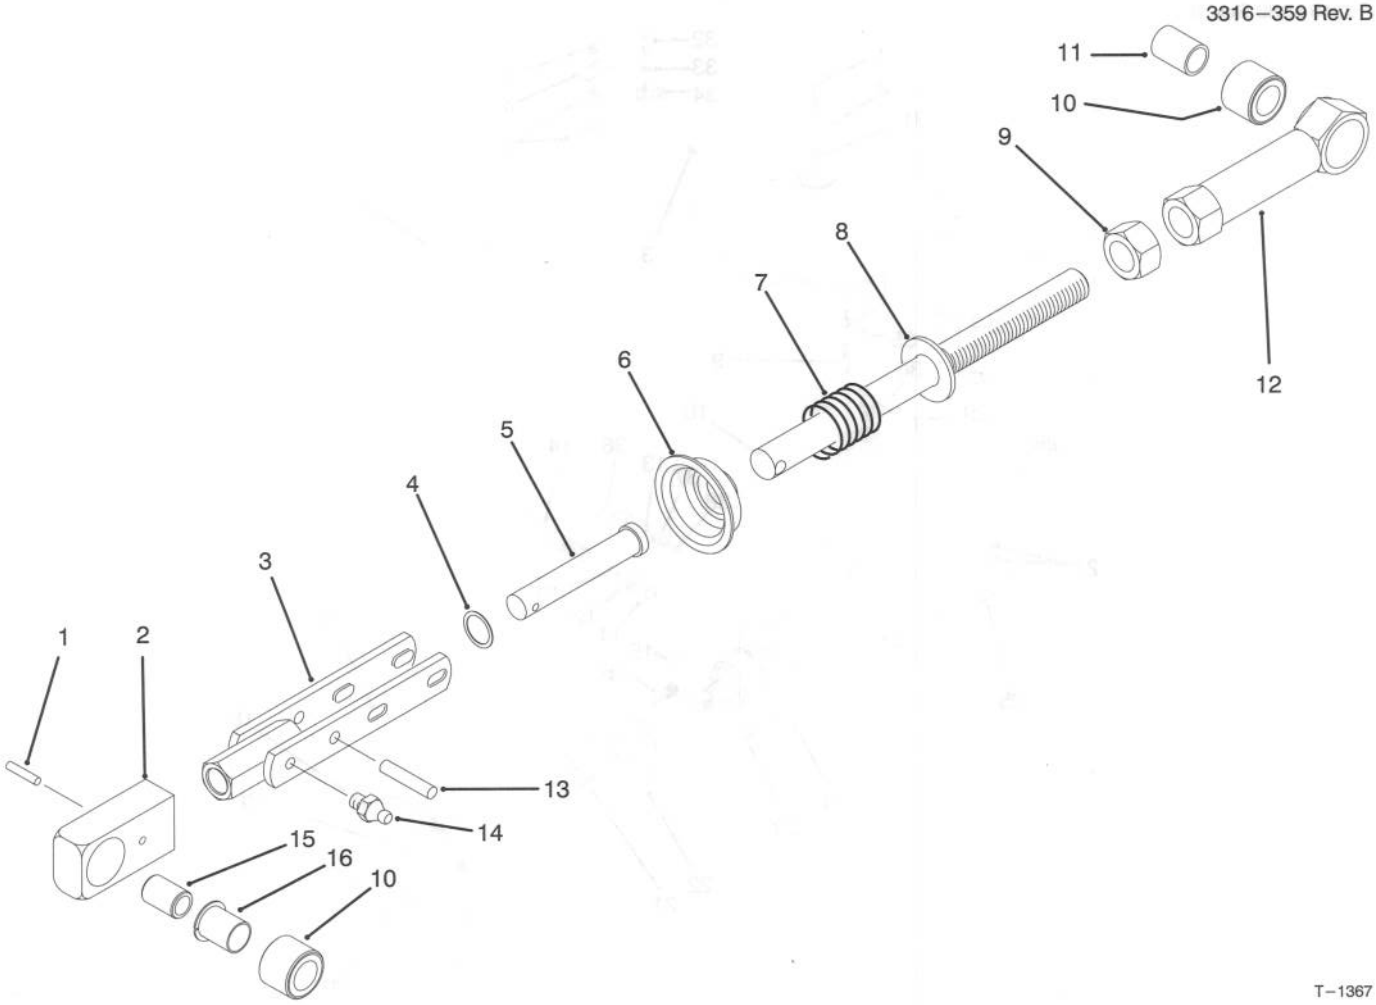


T–1367

BELT TENSIONER ASSEMBLY NO. 83–7900

Ref. No.	Part No.	Description	No. Used
1	32121–23	Pin – Roll	1
2	76–0350	Housing – Bushing	1
3	83–7930	Yoke	1
4	3256–54	Washer – Flat	1
5	283–55	Pin – Clevis	1
6	76–0360	Cup – Retainer	1
7	76–0410	Spring – Compression	1
8	83–7910	Rod	1

Ref. No.	Part No.	Description	No. Used
9	3218–6	Nut – Jam	1
10	56–9510	Bushing Assembly	2
11	256–173	Bushing – Sleeve	1
12	76–0300	Housing – Bushing	1
13	32121–9	Pin – Roll	1
14	302–5	Fitting – Grease	1
15	76–0390	Spacer	1
16	56–9520	Bushing – Nyliner	1

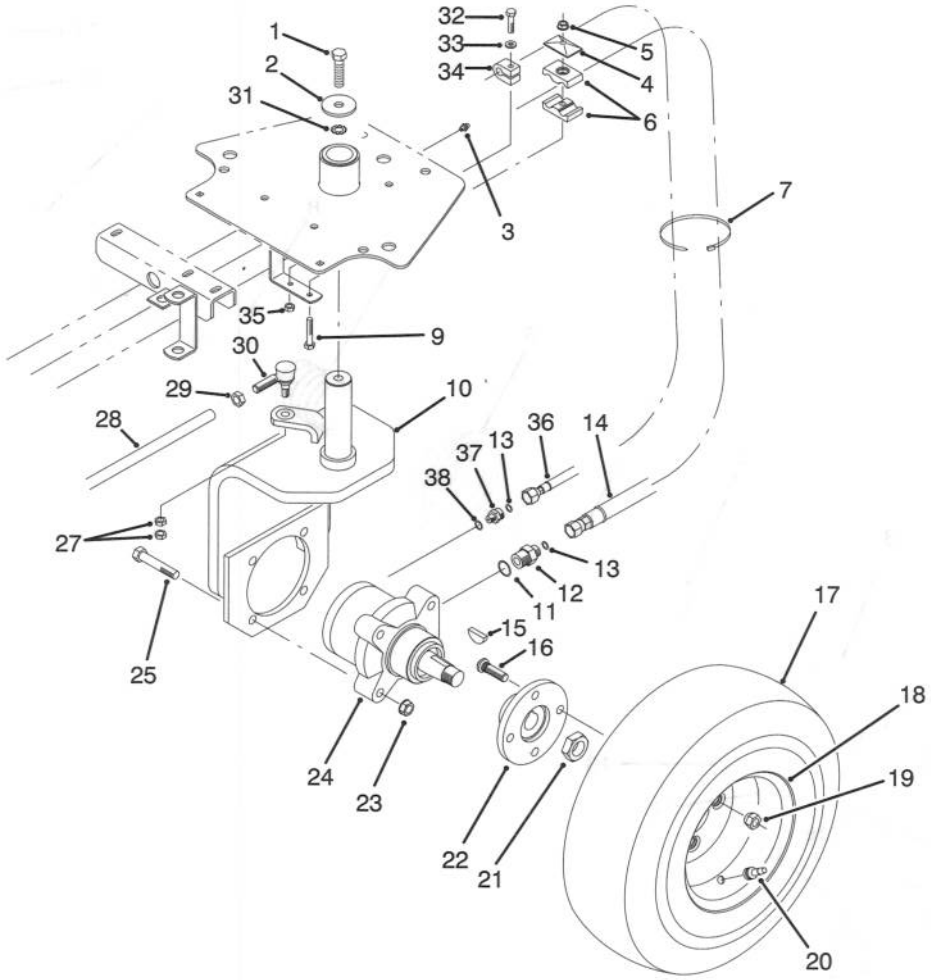


T–1369

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	365–6	Screw – Cap Hex. Hd.	1
2	75–7730	Spacer	1
3	302–5	Fitting – Grease	1
4	69–9760	Plate – Cover	1
5	3296–29	Nut – Flange Lock	1
6	56–7976	Clamp – Hose	2
7	3290–379	Tie – Cable	1
9	322–9	Screw – Cap Hex. Hd.	1
10	83–7270	Fork – Caster	1
11	237–80	Seal – O–Ring	2
12	340–141	Fitting – Hydraulic Straight (Incl. Ref. #11 & 13)	2
13	237–22	Seal – O–Ring	3
14	80–4090	Hose – Hydraulic	2
15	3257–15	Key – Woodruff	1
16	10–6830	Stud – Drive	4
17	93–0166	Tire	1
18	242–76	Rim	1
19	242–50	Nut – Lug	4
20	232–47	Valve – Stem	1

Ref. No.	Part No.	Description	No. Used
21	26–3790	Nut – Lock	1
22	10–6870	Hun – Wheel	1
23	2396–23	Nut – Flange Lock	4
24	66–5291	Hydraulic Motor Assembly (Incl. Ref. #15)	1
25	325–11	Screw – Cap Hex. Hd.	4
27	3220–3	Nut – Jam	2
28	61–2070	Rod – Steering	1
29	3220–12	Nut – Jam	1
30	21–0140	Rod End Assembly (Incl. Ref. #27)	1
31	3255–2	Washer – Lock	1
32	321–9	Screw – Cap Hex. Hd.	1
33	3256–22	Washer – Flat	1
34	85–5200	Clamp	1
35	3296–42	Nut – Lock	1
36	85–5190	Hose – Hydraulic	1
37	340–88	Fitting – Hydraulic Straight (Incl. Ref. #13 & 38)	1
38	237–78	Seal – O–Ring	1

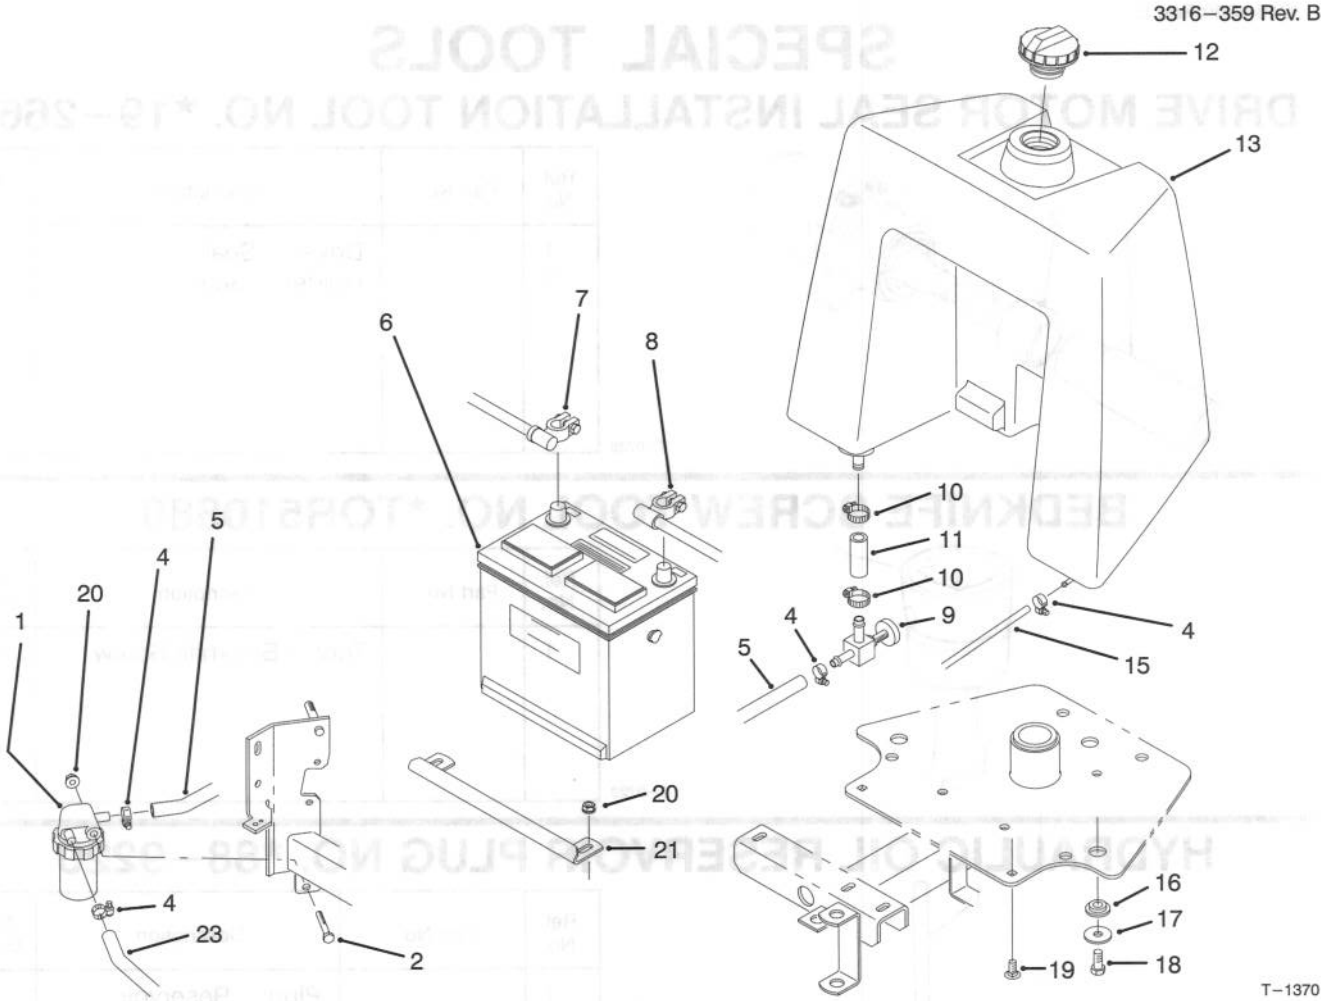

FUEL SYSTEM ASSEMBLY


Ref. No.	Part No.	Description	No. Used
†1	130366040	Filter – Fuel	1
2	321–12	Screw – Cap Hex. Hd.	1
4	2412–108	Clamp – Hose	4
5	63–7620	Hose – Fuel	1
6	83–9000	Battery	1
7	83–9220	Cable – Battery Pos.	1
8	83–9210	Cable – Battery Neg.	1
9	56–2520	Valve – Fuel Shut–Off	1
10	2412–36	Clamp – Hose	2
11	56–2230	Hose – Fuel	1

Ref. No.	Part No.	Description	No. Used
12	93–3102	Cap – Fuel Tank	1
13	83–8720	Tank – Fuel	1
15	75–4703	Hose – Fuel	1
16	240–11	Grommet	3
17	63–8410	Washer – Flat	3
18	323–5	Screw – Cap Hex. Hd.	3
19	3230–1	Screw – Carriage	2
20	32128–44	Nut – Flange Lock	3
21	83–9240	Hold–Down – Battery	1
23	23–2140	Hose – Fuel	1

†Obtain from your local Perkins Dealer.

SPECIAL TOOLS


DRIVE MOTOR SEAL INSTALLATION TOOL NO. *19–2660

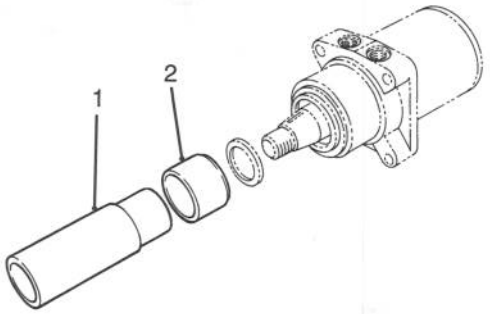

T–0728

Ref. No.	Part No.	Description	No. Used
1		Driver – Seal	1
2		Holder – Seal	1


BEDKNIFE SCREW TOOL NO. *TOR510880

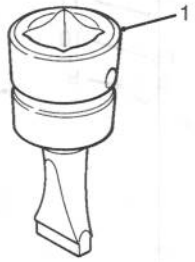

T–0729

Ref. No.	Part No.	Description	No. Used
1		Tool – Bedknife Screw	1


HYDRAULIC OIL RESERVOIR PLUG NO. *88–9220

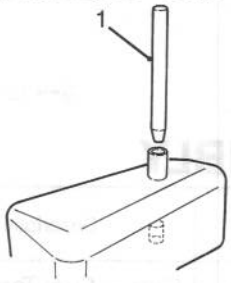

T–1213

Ref. No.	Part No.	Description	No. Used
1		Plug – Reservoir	1


GAUGE BAR ASSEMBLY NO. *TOR138199

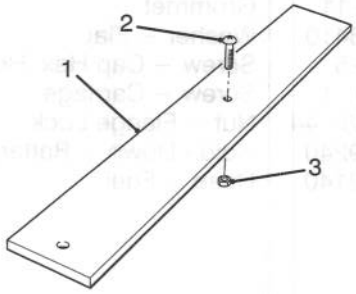

T–1151

Ref. No.	Part No.	Description	No. Used
1	65–8320	Bar – Height–Of–Cut	1
2	32122–2	Screw – Round Hd.	1
3	3219–14	Nut – Hex.	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

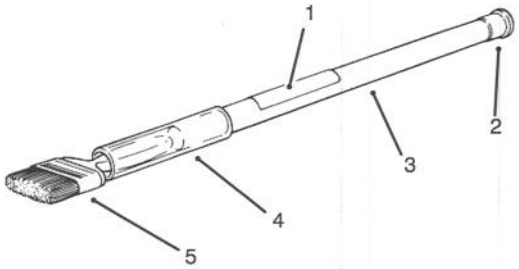

T–0731

Ref. No.	Part No.	Description	No. Used
1	12–9140	Decal	1
2	2410–18	Plug	1
3	29–9080	Handle	1
4	29–9090	Hose – Handle	1
5	36–4310	Brush	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1–800–533–0492 (in Minnesota and Canada 1–507–455–7050) Fax. 507–455–7011.

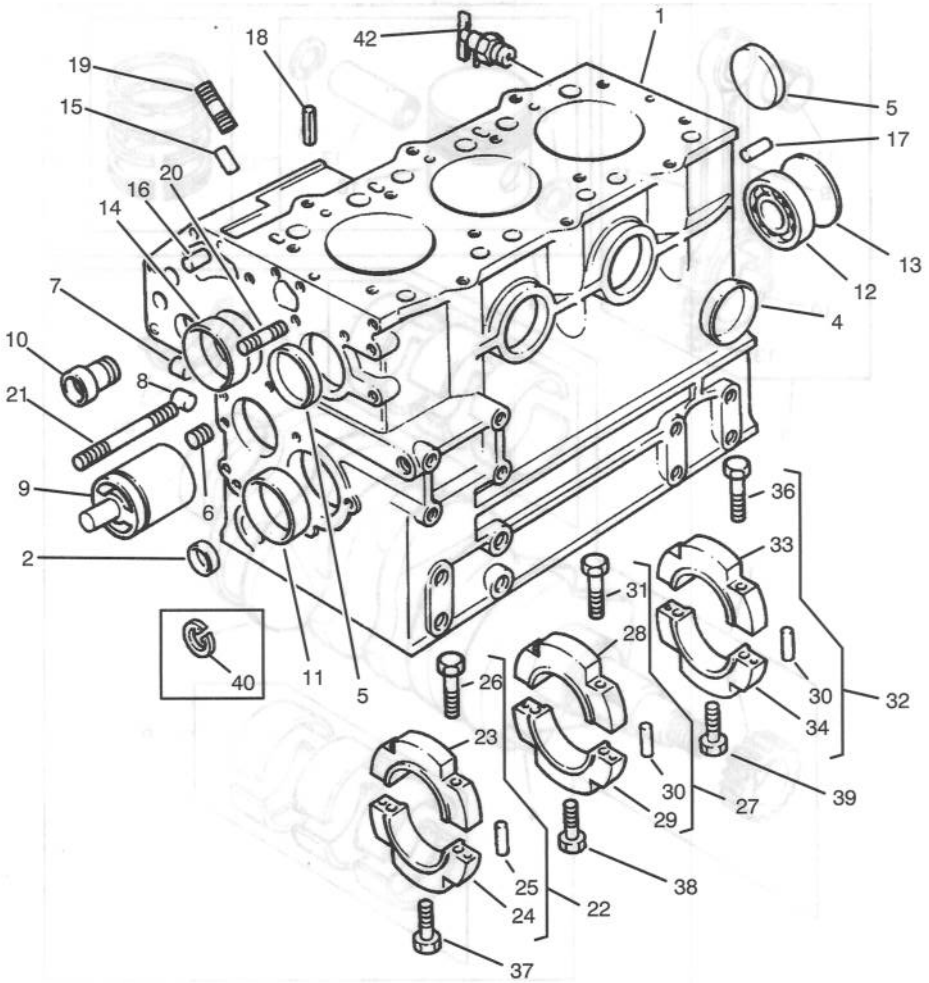


T–1377

CYLINDER BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	110186030	Kit – Cylinder Block	1
2	064200015	Plug	1
4	064200040	Plug	2
5	064200040	Plug	2
6	198466050	Plug	3
7	198466010	Plug	4
8	198466070	Plug	2
9	165296160	Shaft	1
10	198517090	Bush	1
11	198517300	Bush	1
*	198517304	Bush –.25mm	1
*	198517307	Bush –.50mm	1
12	040106203	Bearing – Ball	1
13	064100045	Plug	1
14	042303015	Bush	1
15	030500512	Dowel	2
16	030500512	Dowel	2
17	030500820	Dowel	2
18	030309005	Pin	2
19	012100620	Stud	2
20	012100635	Stud	1
21	012100660	Stud	1
22	110156220	Holder Incl. Ref. #23 & 24)	1

Ref. No.	Part No.	Description	No. Used
23		Cap	1
24		Cap	1
25	030500612	Dowel	2
26	010810840	Screw	2
27	110156230	Holder Incl. Ref. #28 & 29)	1
28		Cap	1
29		Cap	1
30	030500612	Dowel	2
31	010810840	Screw	2
32	110156240	Holder Incl. Ref. #33 & 34)	1
33		Cap	1
34		Cap	1
36	010810840	Screw	2
37	011310850	Screw	1
38	011310850	Screw	1
39	010700845	Screw	2
40	036509005	Circlip	1
41	064200018	Plug	2
42	198736052	Cock	1
*	110006330	Short Block Assembly	1
*	195906610	Kit – Gasket	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

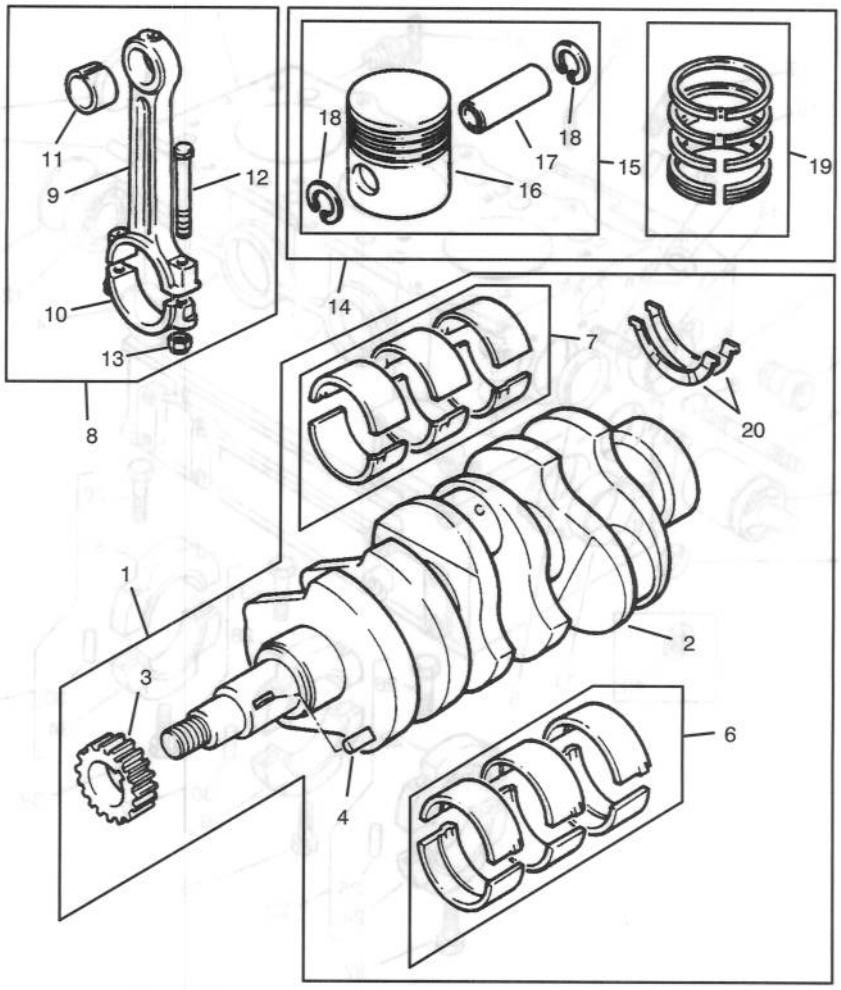


T–1378

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115236020	Kit – Crankshaft Inc. Ref. #2)	1
2		Crankshaft	1
3	115276210	Gear	1
4	030509020	Key	1
6	198586030	Kit – Bearing Std.	1
*	198586034	Kit – Bearing –0.25mm	1
*	198586037	Kit – Bearing –0.50mm	1
7	198586060	Kit – Bearing Std.	1
*	198586064	Kit – Bearing –0.25mm	1
*	198586067	Kit – Bearing –0.50mm	1
8	115026240	Connecting Rod Assembly Incl. Ref. # 9 & 10)	3
9		Rod	1
10		Cap	1
11	198517325	Bush	1
12	115176130	Screw	2

Ref. No.	Part No.	Description	No. Used
13	020109103	Nut	2
14	115016670	Kit – Piston Std.	3
*	115016674	Kit – Piston +0.5mm	1
*	115016677	Kit – Piston +1.0mm	1
15	115016770	Kit – Piston Std. Incl. Ref. #16)	1
*	115016774	Kit – Piston +0.5mm Incl. Ref. #16)	1
*	115016777	Kit – Piston +1.0mm Incl. Ref. #16)	1
16		Piston	1
17	115326260	Pin	1
18	03500019	Circlip	2
19	115107260	Kit – Piston Ring	1
*	115107263	Kit – Piston Ring +0.5mm	1
*	115107265	Kit – Piston Ring +1.0mm	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

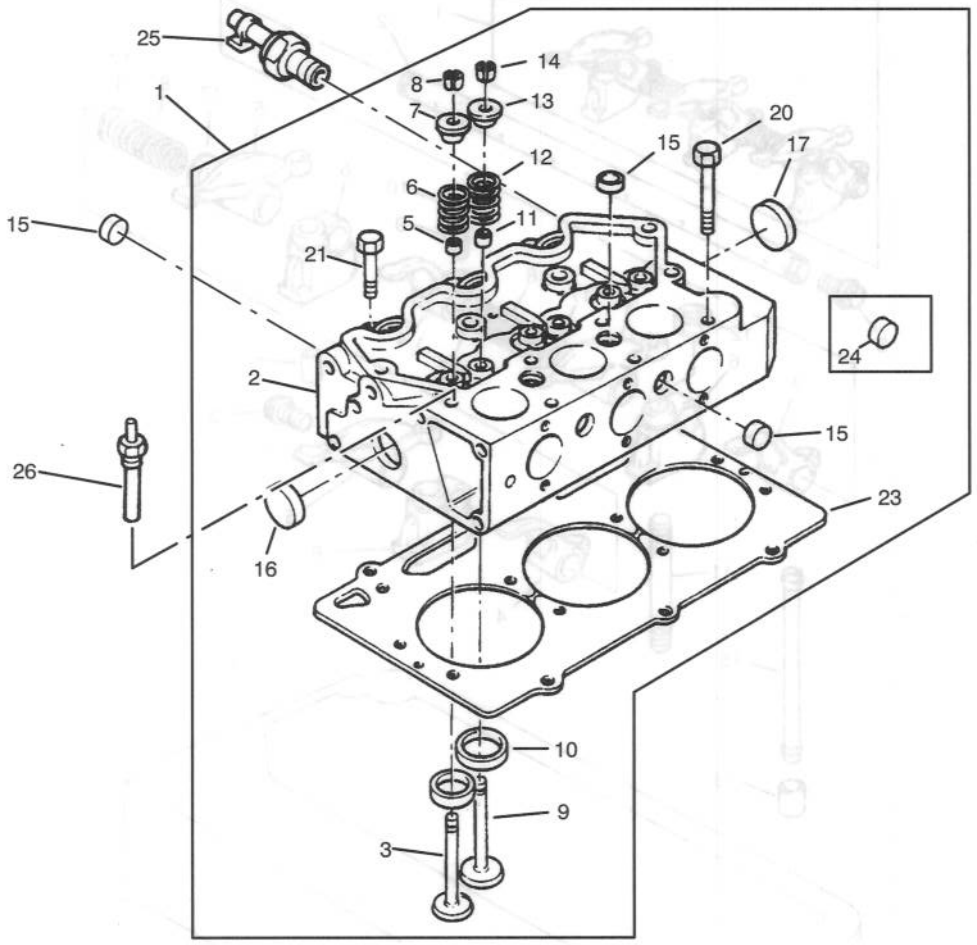


T–1379

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	111016911	Kit – Cylinder Head	1
2	111086030	Kit – Cylinder Head	1
3	120166280	Valve Inlet	3
5	120406080	Seal	3
6	198217070	Spring	3
7	120186100	Cap	3
8	120226080	Cotter	6
9	120176290	Valve Exhaust	3
10	110136290	Insert	3
11	120406080	Seal	3
12	198217070	Spring	3
13	120186100	Cap	3

Ref. No.	Part No.	Description	No. Used
14	120226080	Cotter	6
15	198466070	Plug	4
16	064200022	Plug	3
17	064200022	Plug	3
20	111136340	Screw	11
21	111136350	Screw	3
23	111147100	Gasket +1.2mm	1
*	111147110	Gasket +1.3mm	1
24	064200018	Plug	2
25	185246060	Switch – Oil Pressure	1
26	385720101	Sender – Temperature	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

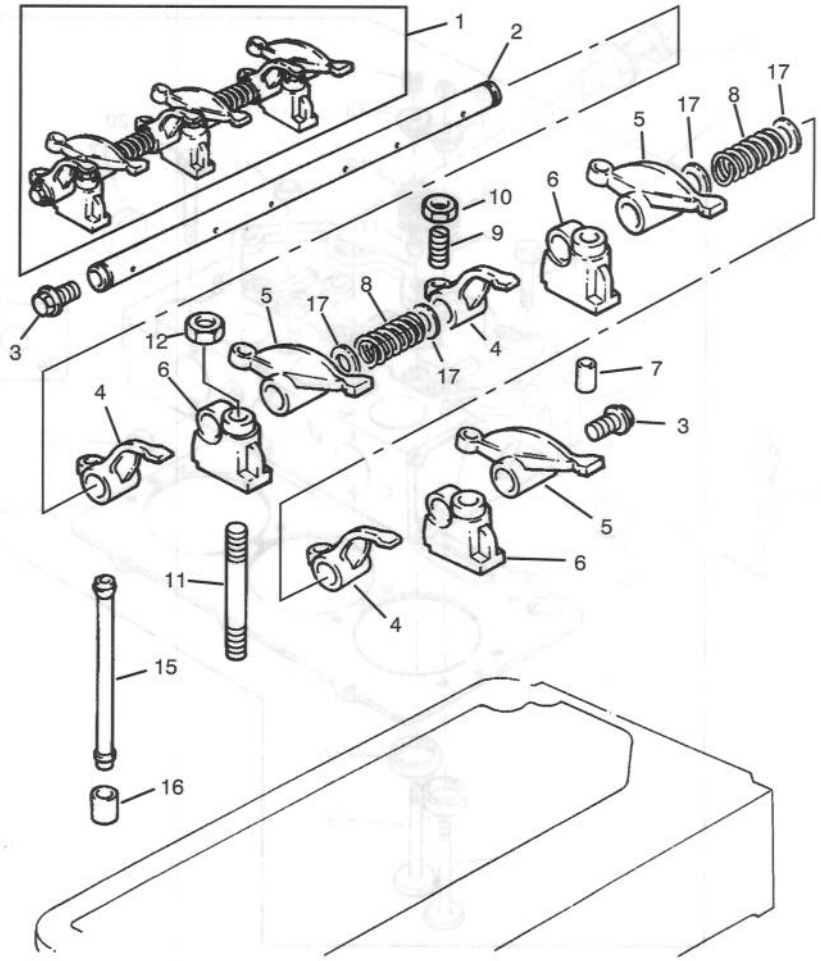


T–1380

ROCKER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120336020	Rocker Shaft Assembly	1
2	120316190	Shaft	1
3	064609006	Plug	2
4	120356120	Lever	3
5	120356110	Lever	3
6	120346170	Bracket	3
7	030300325	Pin	1
8	198217080	Spring	2

Ref. No.	Part No.	Description	No. Used
9	199486220	Adjusting Screw	6
10	020109076	Nut	6
11	012109177	Stud	3
12	023100008	Nut	3
15	120456240	Rod	6
16	120116100	Tappet	6
17	199280280	Washer	4

NOTE: Obtain replacement parts from your local Perkins Dealer.

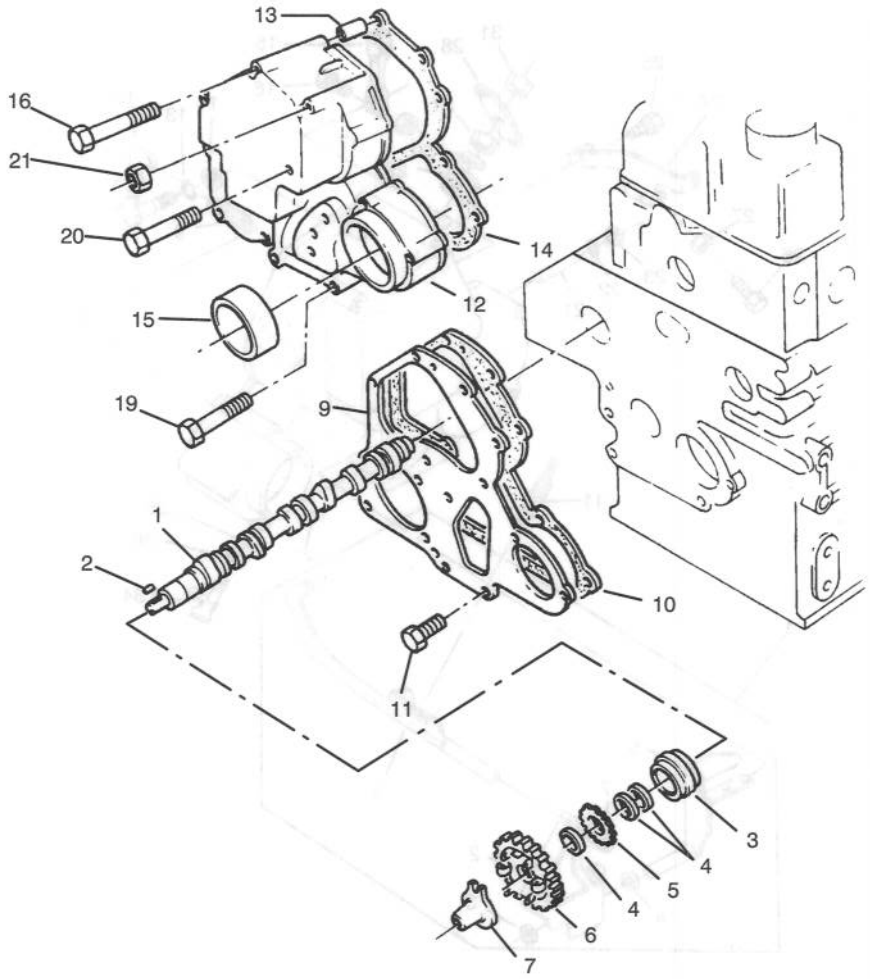


T–1381

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120026120	Camshaft	1
2	034100508	Key	1
3	040109059	Bearing	1
4	199216230	Spacer	3
5	120736081	Gear	1
6	120016030	Gear	1
7	125256120	Tappet	1
9	165166260	Plate	1
10	165996400	Joint	1

Ref. No.	Part No.	Description	No. Used
11	011300612	Bolt	3
12	165106130	Cover	1
13	030300414	Pin	1
14	165996410	Joint	1
15	198636090	Seal	1
16	011300680	Screw	2
19	011300640	Screw	4
20	011300660	Screw	2
21	023100006	Nut	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

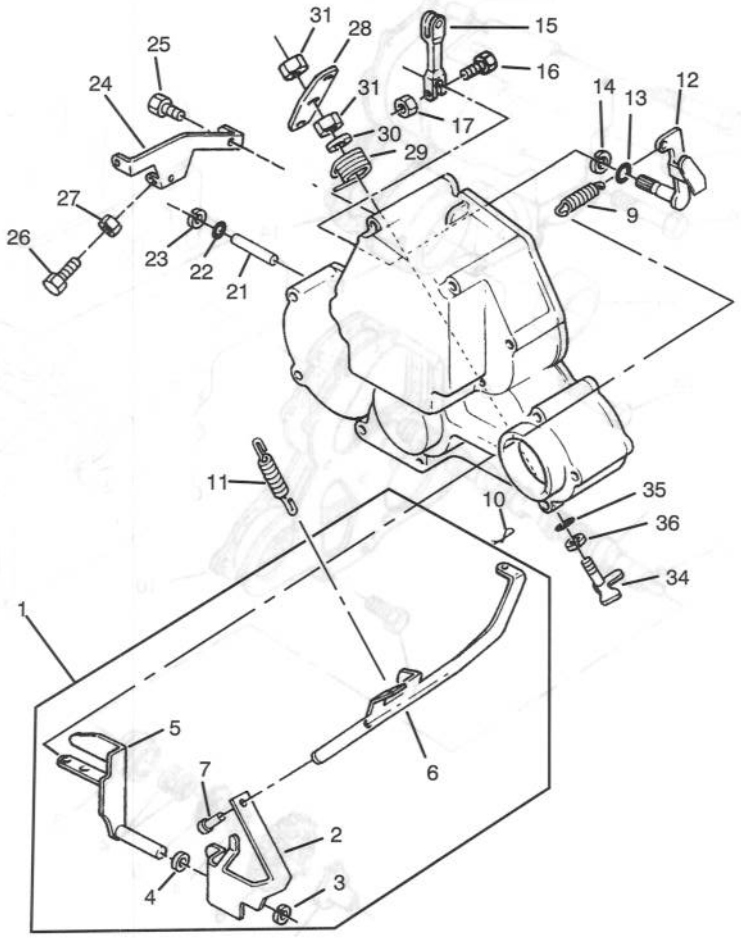


T–1382

TIMING COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	125046140	Lever (Incl. Ref. #2, 6 & 7)	1
2		Lever	1
3	036800008	Circlip	1
4	026200010	Washer	1
5	125406071	Lever	1
6		Link	1
7		Pin	1
9	198217220	Spring	1
10	031100004	Pin	1
11	198217420	Spring	1
12	125156170	Arm	1
13	052100070	O Ring	1
14	036800008	Circlip	1
15	125416020	Lever	1
16	010110630	Screw	1

Ref. No.	Part No.	Description	No. Used
17	023100006	Nut	1
21	125116130	Shaft	1
22	052100030	Seal – O–Ring	1
23	036800005	Circlip	1
24	125976120	Stay	1
25	011300618	Screw	2
26	010109264	Screw	2
27	023100006	Nut	2
28	125176080	Lever	1
29	198216760	Spring	1
30	026200008	Washer	1
31	020300008	Nut	2
34	125156180	Arm	1
35	052100050	O Ring	1
36	036800006	Circlip	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

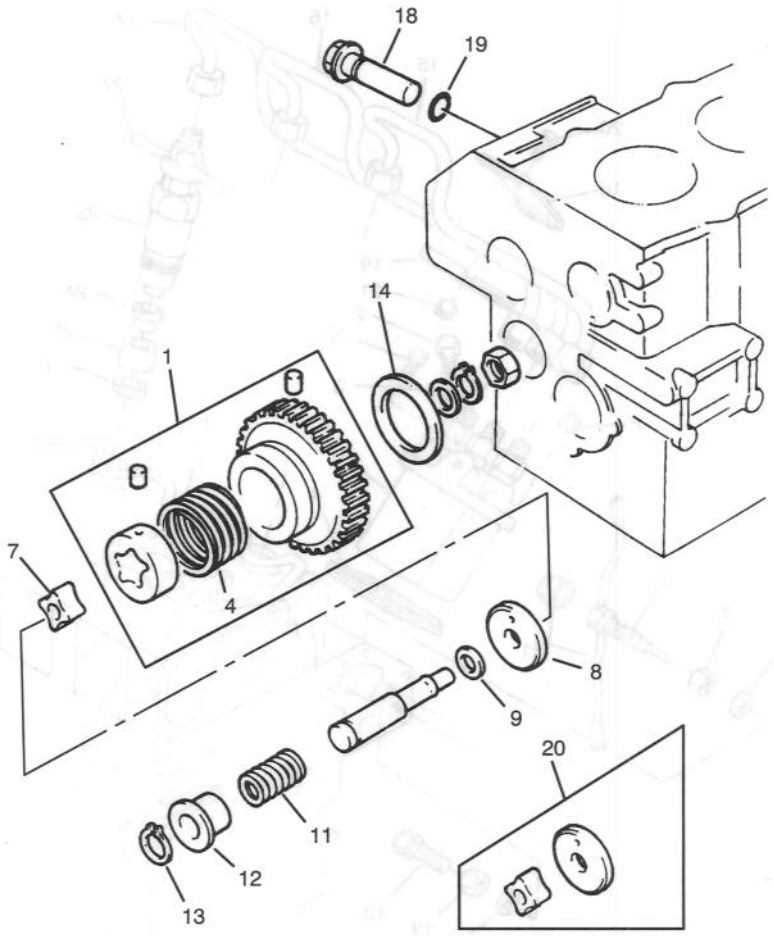


T–1383

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165026110	Gear	1
4	198216821	Spring	1
7	140166130	Rotor	1
8	140116140	Cover	1
9	199286150	Shim +0.10mm	1
*	199286160	Shim +0.15mm	1
*	199286170	Shim +0.20mm	1
*	199286180	Shim +0.50mm	1

Ref. No.	Part No.	Description	No. Used
11	198216720	Spring	1
12	199236540	Collar	1
13	036800010	Circlip	1
14	199266180	Washer	1
18	140036120	Valve	1
19	052100150	Seal – O–Ring	1
20	140186010	Repalr Kit	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

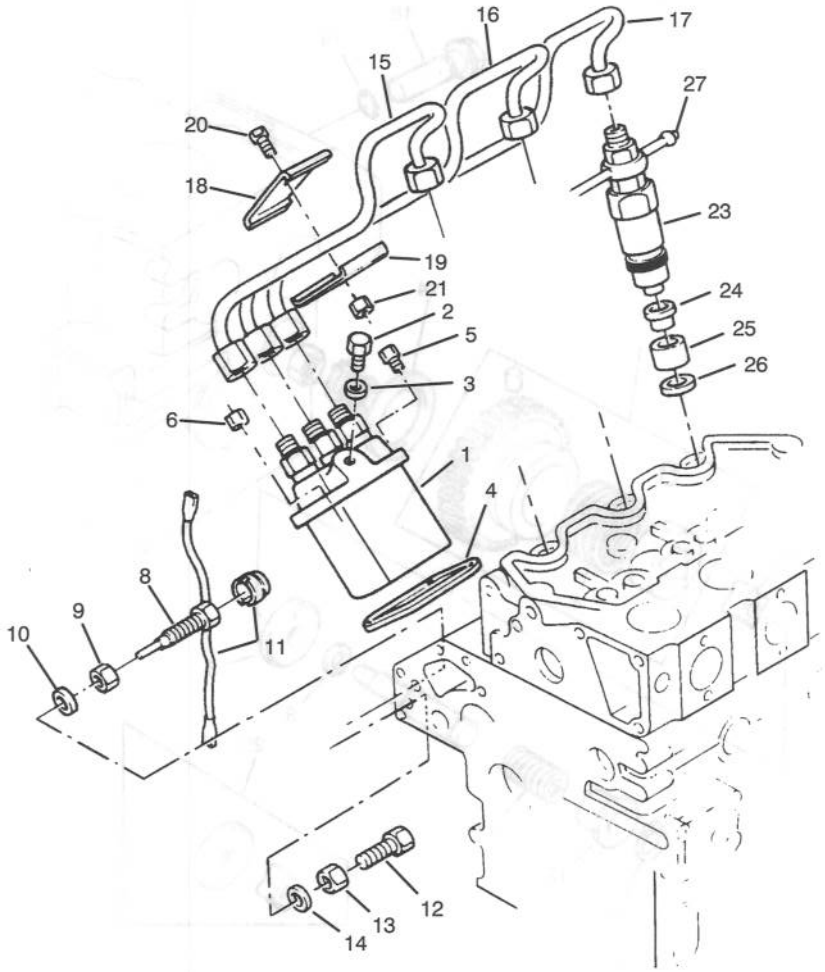


T–1384

FUEL INJECTION SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pump	1
2	131236201	Screw	1
3	025100006	Washer	1
4	131437310	Shim +0.2mm	1
*	131437320	Shim +0.3mm	1
*	131437330	Shim +0.4mm	1
*	131437340	Shim +0.5mm	1
*	131437340	Shim +1.0mm	1
5	011300620	Screw	2
6	023100006	Nut	2
8	131046160	Screw	1
9	023109002	Nut	1
10	025100010	Washer	1
11	198236030	Wire	1
12	010109270	Screw	1

Ref. No.	Part No.	Description	No. Used
13	023109002	Nut	1
14	025100010	Washer	1
15	131507010	Injection Pipe No. 1 Cyl.	1
16	131507020	Injection Pipe No. 2 Cyl.	1
17	131507030	Injection Pipe No. 3 Cyl.	1
18	199106020	Damper	2
19	199106020	Damper	2
20	010100625	Screw	2
21	023100006	Nut	2
23	131406340	Atomiser	3
24	131426200	Gasket	3
25	111316280	Insert	3
26	198996090	Seal	3
27	131606260	Pipe	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

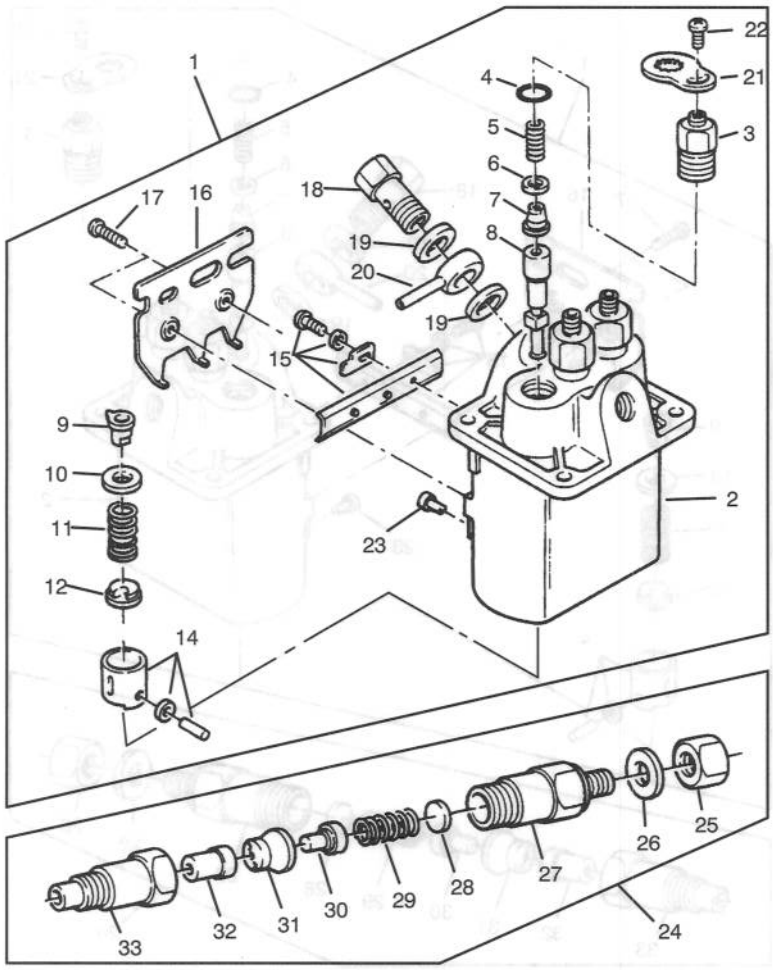


T–1385

INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	131017340	Injection Pipe	1
2	131296665	Housing	1
3	131196120	Holder	3
4	131226170	Seal – O–Ring	3
5	131176430	Spring	3
6	131186050	Gasket	3
7	131156160	Valve	3
8	131116410	Element	3
9	131296951	Sleeve	3
10	131296620	Seat	3
11	131176440	Spring	3
12	131296621	Seat	3
*	131296622	Plate +1.85mm	1
*	131296623	Plate +1.90mm	1
*	131296625	Plate +2.00mm	1
*	131296626	Plate +2.05mm	1
*	131296627	Plate +2.10mm	1
*	131296628	Plate +2.15mm	1
*	131296629	Plate +2.20mm	1
*	131296630	Plate +2.25mm	1
*	131296631	Plate +2.30mm	1
*	131296632	Plate +2.35mm	1
*	131296633	Plate +2.40mm	1
*	131296634	Plate +2.45mm	1
*	131296635	Plate +2.50mm	1
14	131256120	Tappet	3

Ref. No.	Part No.	Description	No. Used
15	131296636	Rack	1
16	131296650	Bracket	1
17	131136320	Screw	2
18	131236190	Bolt	1
19	131246180	Washer	2
20	131246130	Nipple	1
21	131296662	Plate	3
22	131136330	Screw	3
23	131296651	Pin	3
24	131406340	Atomiser	3
25	131446069	Nut	1
26	131426210	Washer	1
27	131446065	Body	1
28	131437250	Shim +0.90mm	1
*	131437251	Shim +0.925mm	1
*	131437252	Shim +0.95mm	1
*	131437253	Shim +0.975mm	1
*	131437354	Shim +1.00mm	1
*	131437255	Shim +1.025mm	1
*	131437256	Shim +1.05mm	1
*	131437257	Shim +1.075mm	1
*	131437258	Shim +1.10mm	1
*	131437259	Shim +1.125mm	1
*	131437260	Shim +1.15mm	1
*	131437261	Shim +1.175mm	1
*	131437262	Shim +1.20mm	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

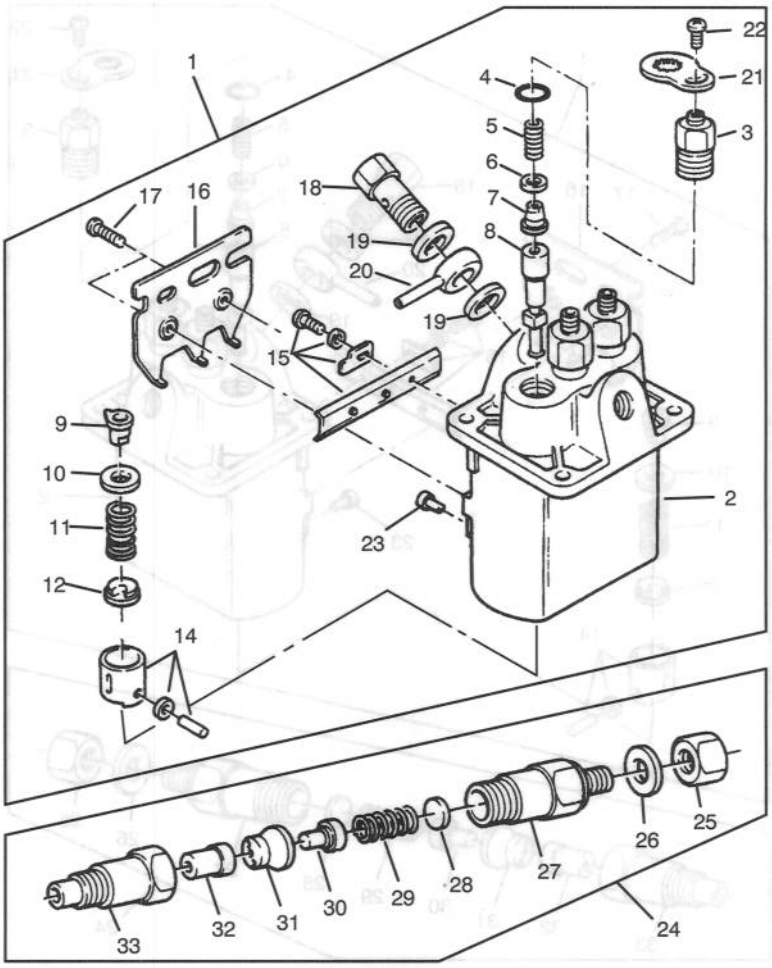


T–1385

INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
28	131437263	Shim +1.225mm	1
*	131437264	Shim +1.250mm	1
*	131437265	Shim +1.275mm	1
*	131437266	Shim +1.30mm	1
*	131437267	Shim +1.325mm	1
*	131437268	Shim +1.35mm	1
*	131437269	Shim +1.375mm	1
*	131437270	Shim +1.40mm	1
*	131437271	Shim +1.425mm	1
*	131437272	Shim +1.45mm	1

Ref. No.	Part No.	Description	No. Used
29	131446066	Spring	1
30	131446070	Pin	1
31	131446068	Spacer	1
32	131416150	Nozzle	1
33	131446067	Nut	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

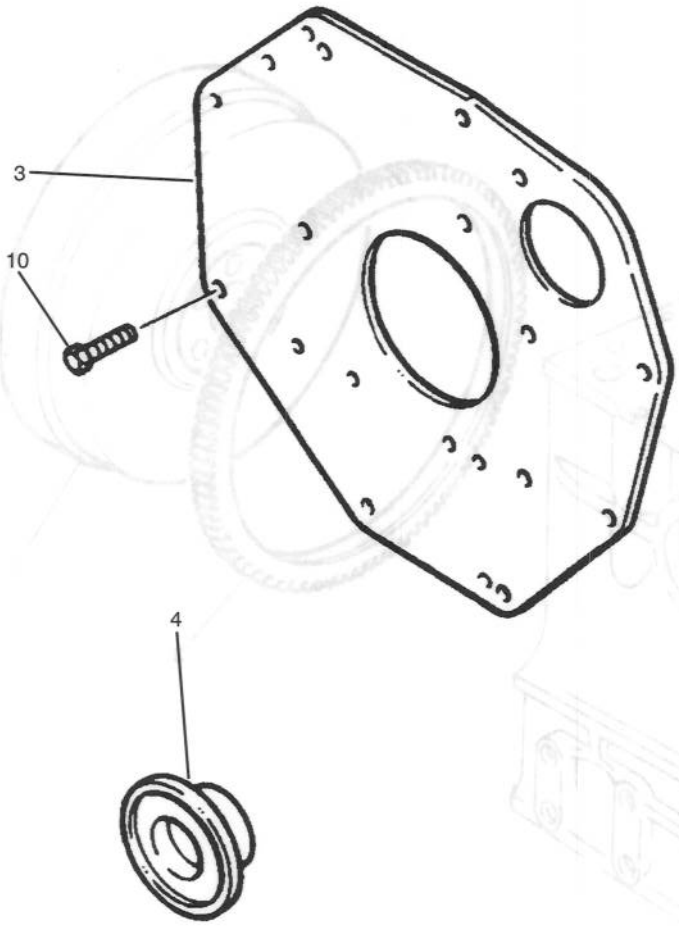


T–1386

FLYWHEEL HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	110366700	Plate	1
4	198636080	Seal	1

Ref. No.	Part No.	Description	No. Used
10	011310816	Screw	10

NOTE: Obtain replacement parts from your local Perkins Dealer.

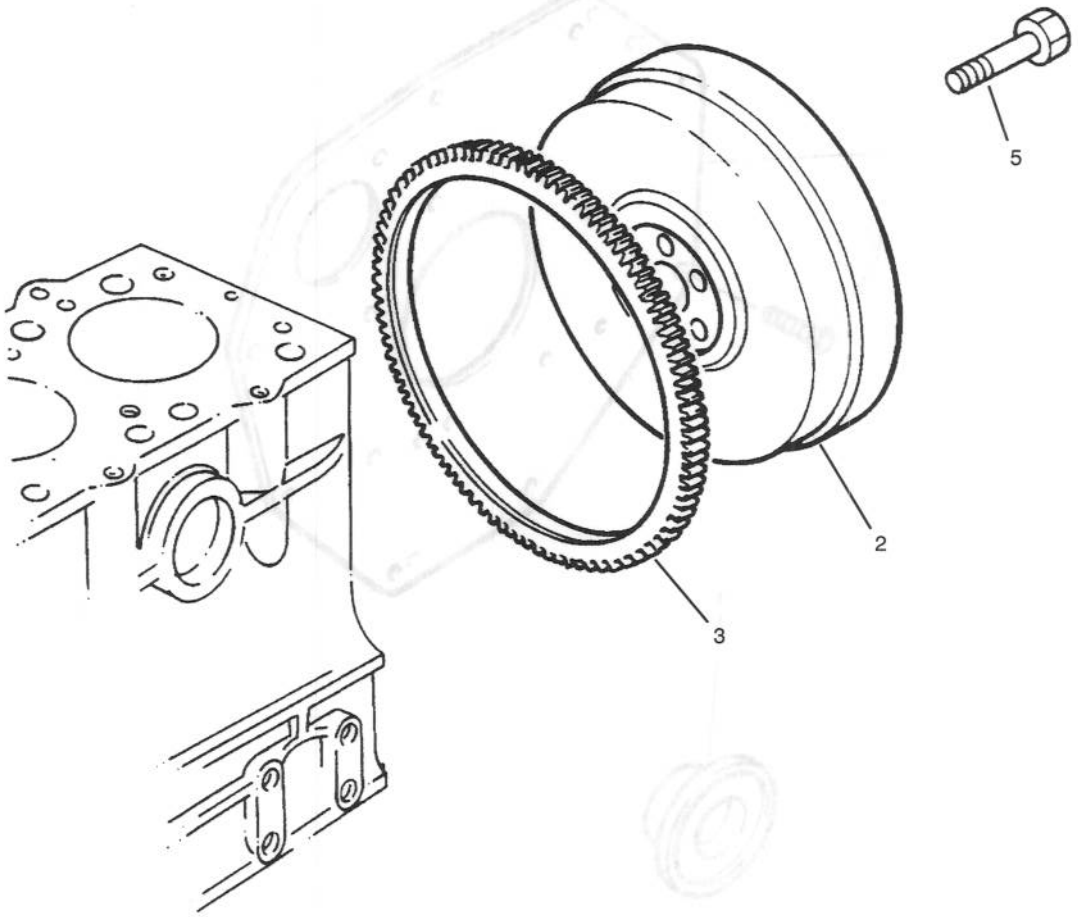


T–1387

FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	115356921	Flywheel	1
3	115376150	Gear – Ring	1

Ref. No.	Part No.	Description	No. Used
5	010109330	Screw	4

NOTE: Obtain replacement parts from your local Perkins Dealer.

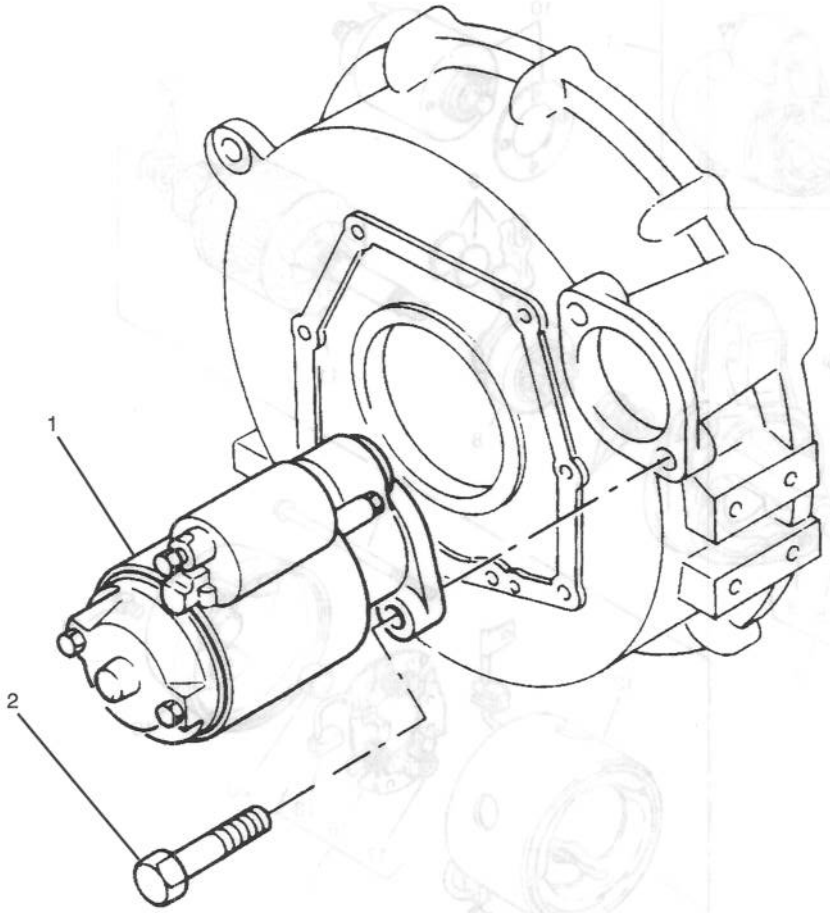


T–1388

STARTER INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1
2	011601020	Screw	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

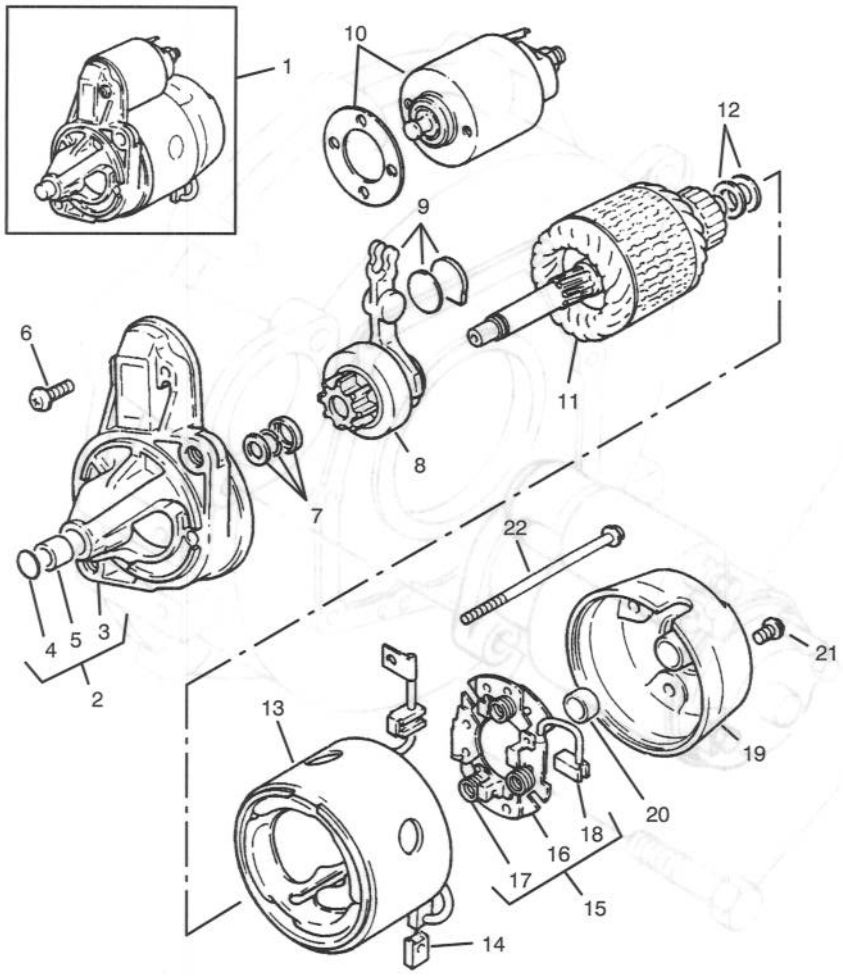


T–1389

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185086370	Startermotor	1
2	185846471	Cover	
		(Incl. Ref. #3 & 4)	1
3		Cover	1
4		Ring	1
5	185846472	Bush	2
6	185846468	Screw	2
7	185846473	Washer	1
8	185866240	Pinion	1
9	185846469	Lever	1
10	185816220	Switch	1
11	185846474	Armature	1

Ref. No.	Part No.	Description	No. Used
12	185846475	Washer	1
13	185846476	Yoke	1
14	185416400	Brush	1
15	185416390	Holder	
		(Incl. Ref. #16)	1
16		Holder	1
17	185886010	Spring	1
18	185416410	Brush	1
19	185846477	Cover	1
20	185846478	Bush	1
21	185846468	Screw	3
22	185846470	Screw	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

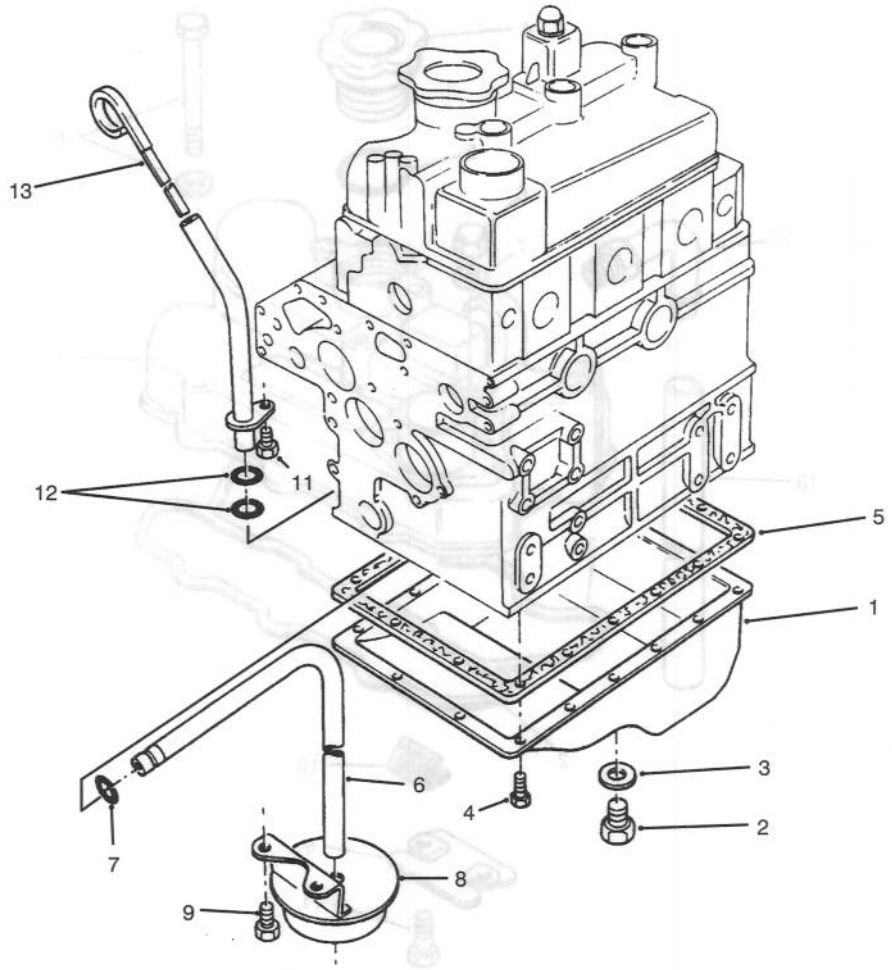


T–1390

OIL SUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	110706860	Sump	1
2	010401212	Plug	2
3	025100012	Washer	2
4	010109235	Screw	18
5	110996590	Gasket	1
6	140986590	Pipe	1
7	052109076	Seal – O–Ring	1
8	140406310	Strainer	1
9	011300612	Bolt	2
11	011300612	Bolt	1
*	011300812	Screw	1
12	052100100	Seal – O–Ring	2
13	198416371	Dipstick	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

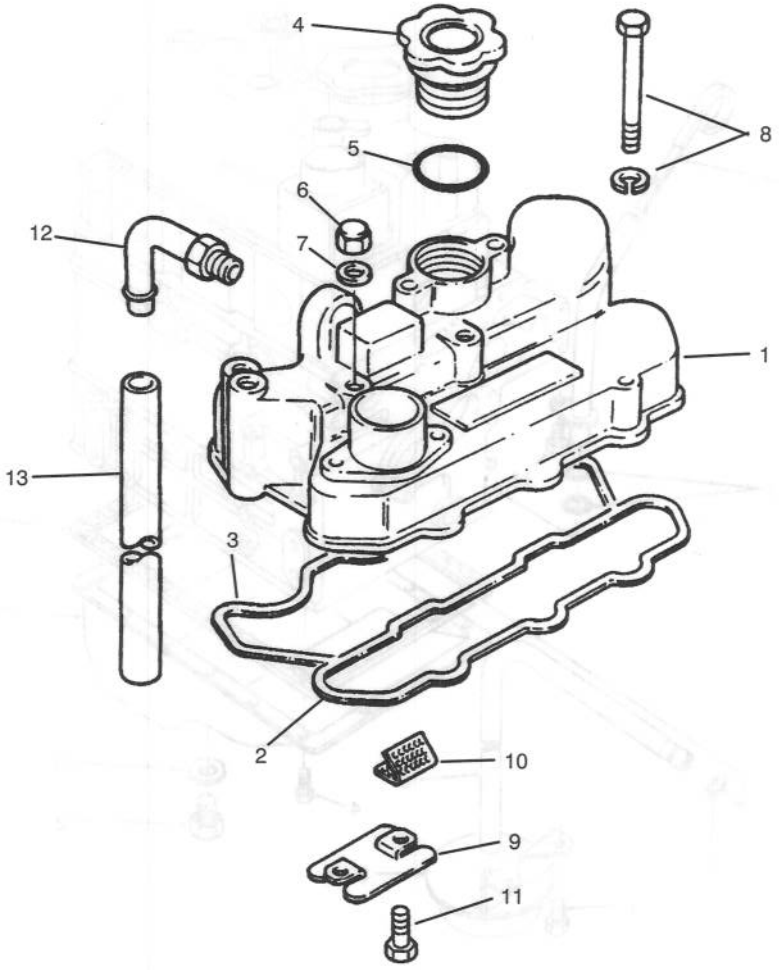


T–1391

VALVE COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	111216630	Cover	1
*	111026371	Cover	1
2	111996330	Gasket	1
3	111996060	Gasket	1
4	198436010	Cap	1
5	052100400	Seal	1
6	024500008	Nut	3

Ref. No.	Part No.	Description	No. Used
7	198996060	Washer	3
8	011300650	Screw	2
9	110666110	Plate	1
10	110666120	Gauze	1
11	011300612	Bolt	2
12	110986500	Pipe	1
13	068122560	Hose	1

NOTE: Obtain replacement parts from your local Perkins Dealer.
*Not Illustrated

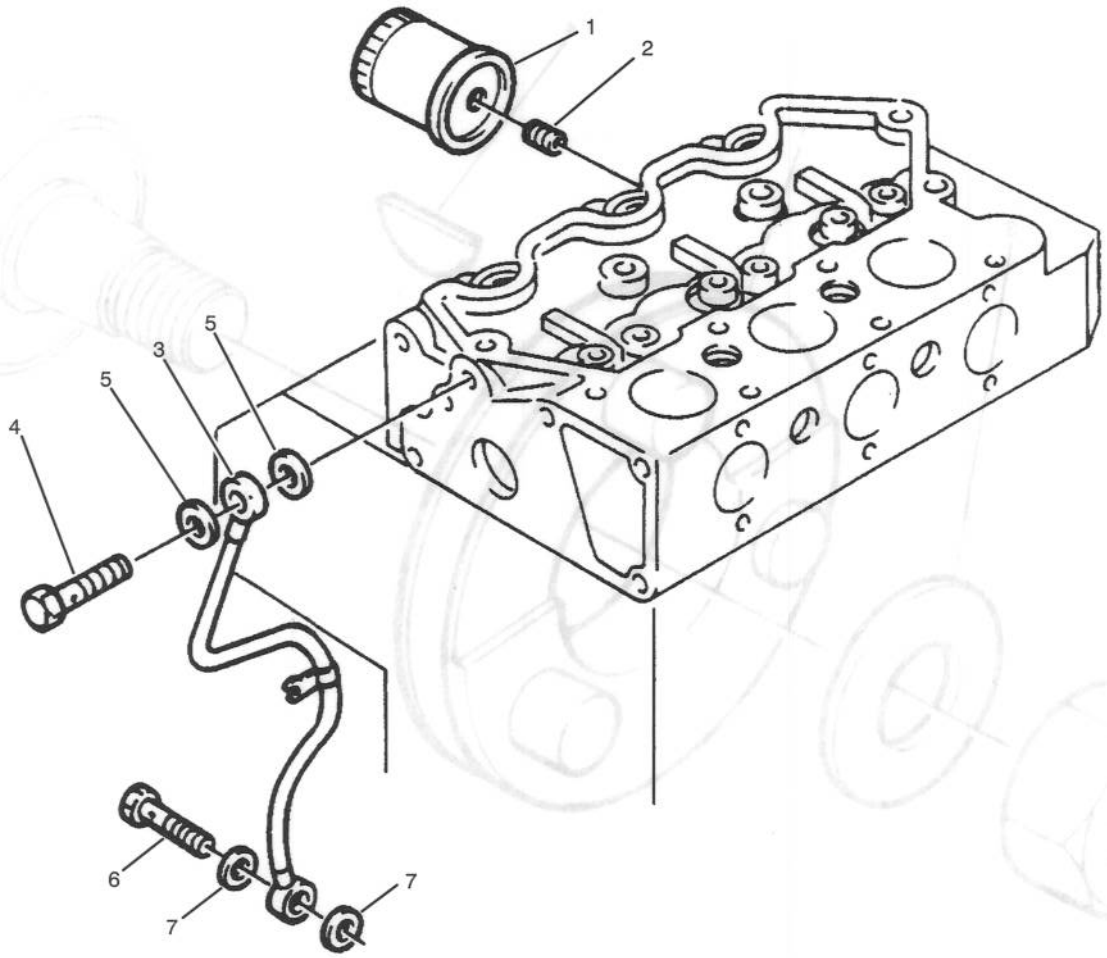


T–1392

OIL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	140516190	Filter – Oil	1
2	140546020	Connection	1
3	140606680	Pipe	1
4	198486780	Bolt	1

Ref. No.	Part No.	Description	No. Used
5	198996060	Washer	2
6	198486780	Bolt	1
7	198996060	Washer	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

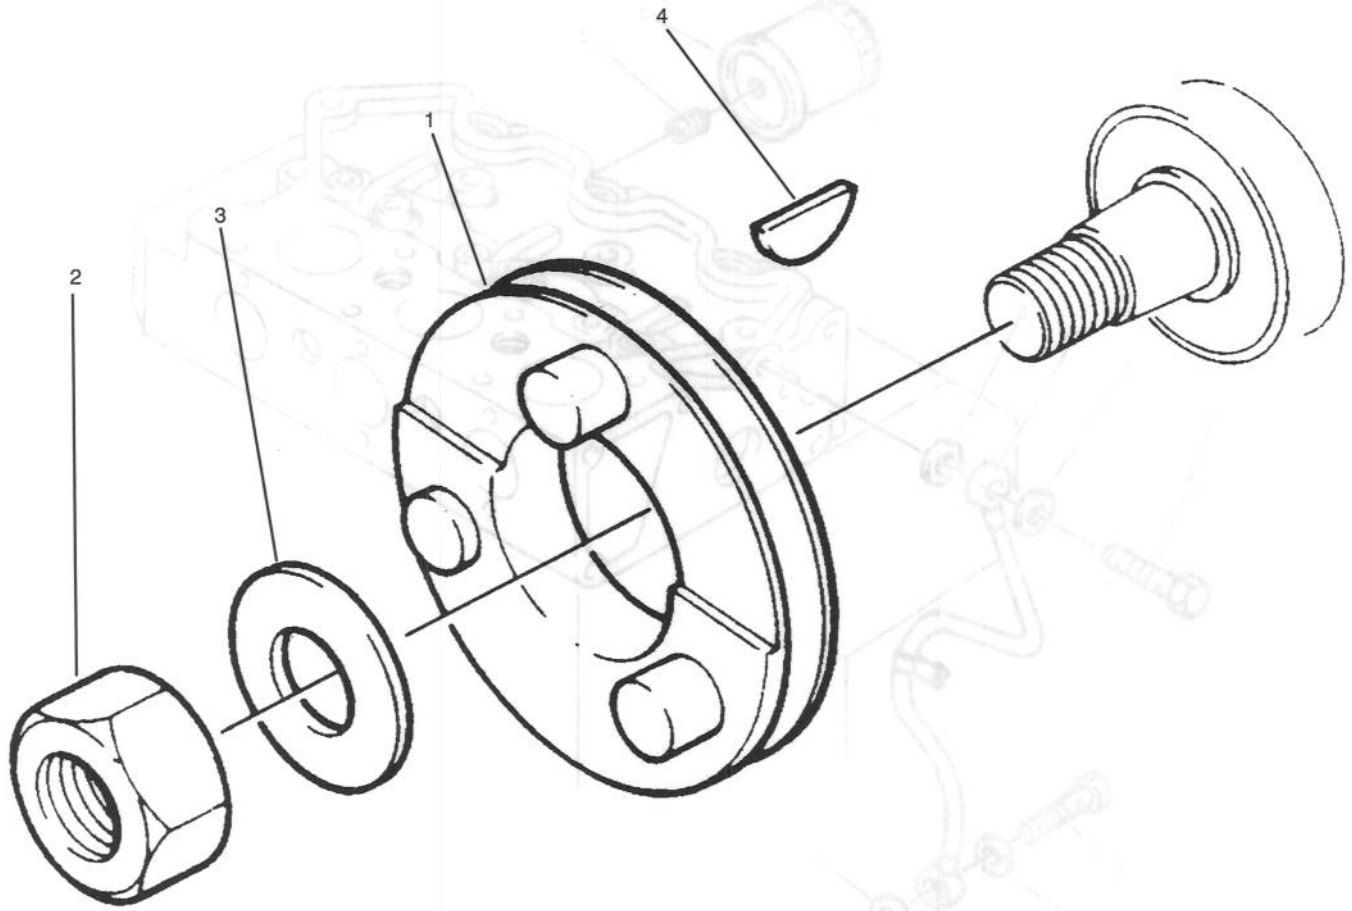


T–1393

FRONT DRIVE PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	115397550	Pulley	1
2	020800018	Nut	1

Ref. No.	Part No.	Description	No. Used
3	026200018	Washer	1
4	134100508	Key	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

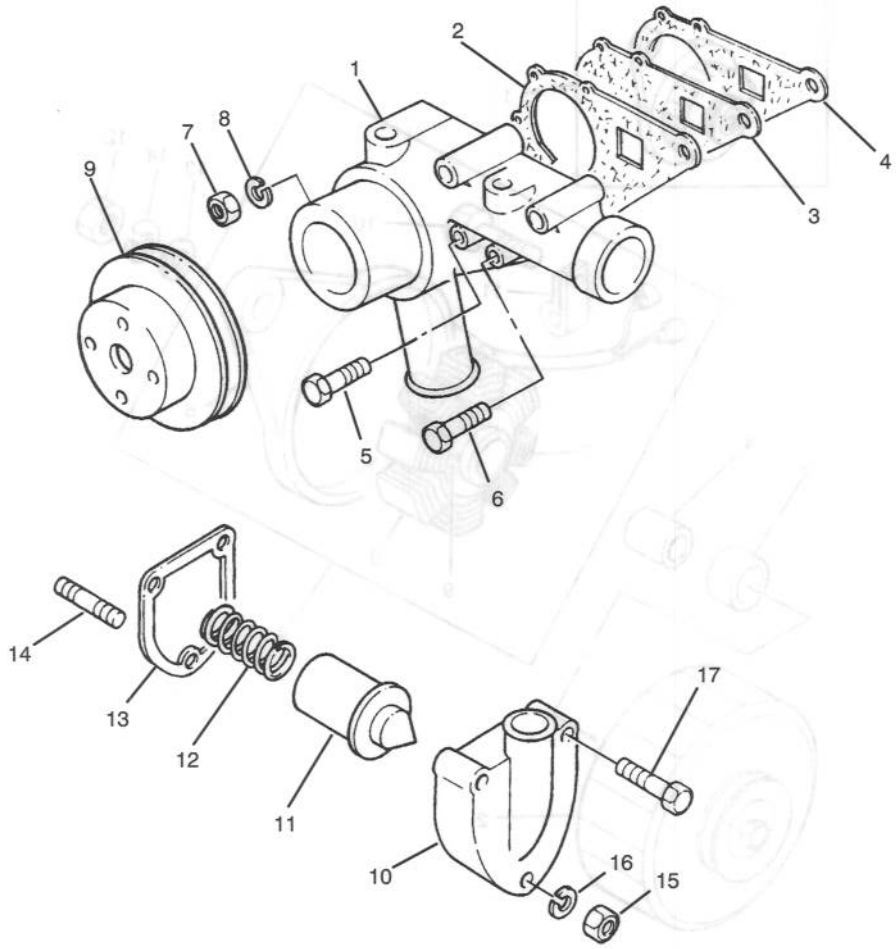


T–1394

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	145016840	Pump – Water	1
2	145996430	Gasket	1
3	145146270	Backplate	1
4	145996420	Gasket	1
5	011300635	Screw	3
6	011300650	Screw	4
7	023100006	Nut	1
8	027100006	Washer	1
9	145336490	Pulley	1

Ref. No.	Part No.	Description	No. Used
10	145216160	Housing	1
11	145206061	Thermostat	1
12	198217090	Spring	1
13	145996440	Gasket	1
14	012100650	Stud	1
15	023100006	Nut	1
16	027100006	Washer	1
17	011300650	Screw	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

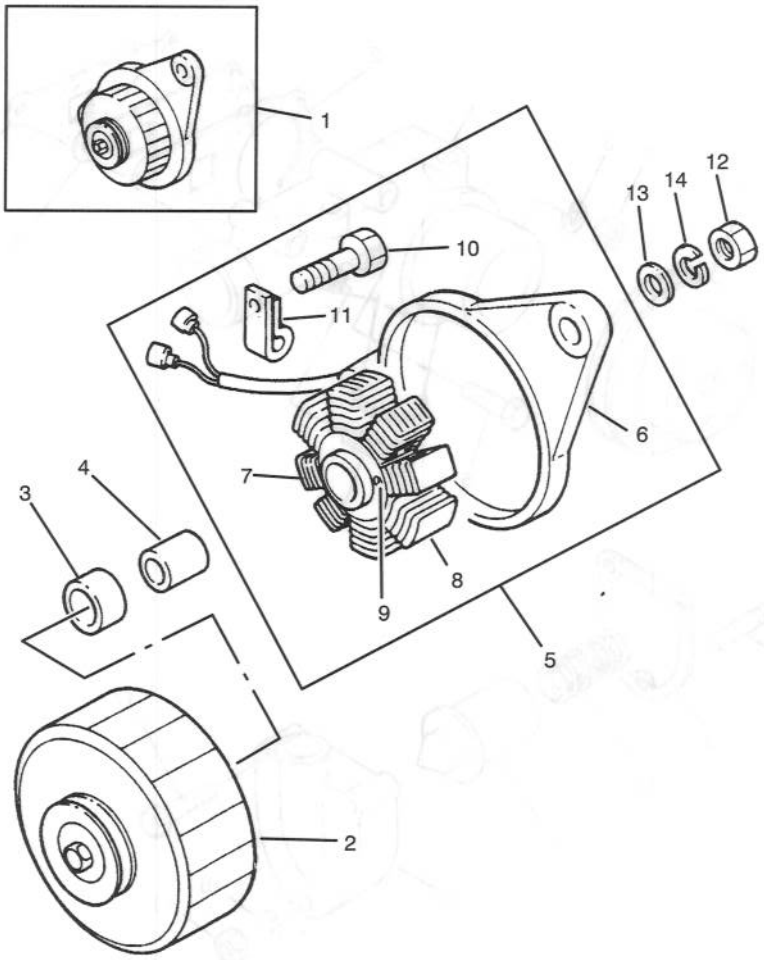


T–1397

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185046210	Alternator	1
2	185446219	Pulley	1
3	040126201	Bearing	1
4	199236510	Collar	1
5	185446217	Plate	1
6	185716200	Plate	1
7	040126201	Bearing	1

Ref. No.	Part No.	Description	No. Used
8	185426218	Stator	1
9	015140425	Screw	2
10	015140408	Screw	1
11	185446220	Clip	1
12	020210010	Nut	1
13	026100010	Washer	1
14	027100010	Washer	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

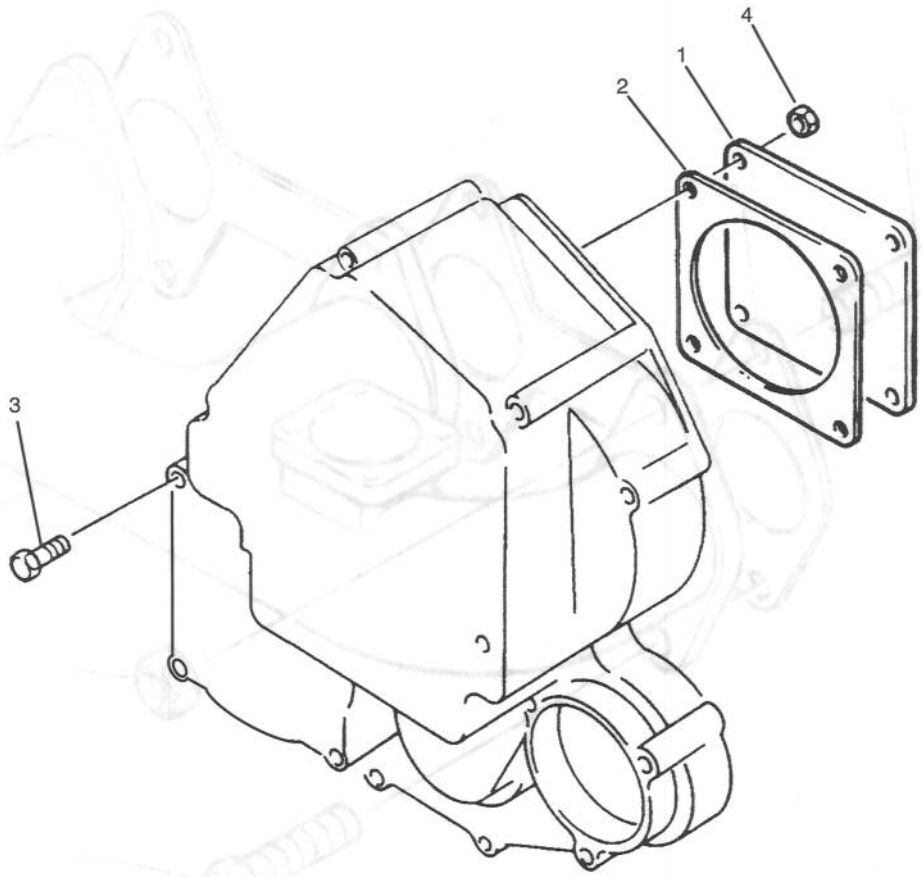


T–1398

TIMING COVER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	165206360	Plate	1
2	165996420	Gasket	1

Ref. No.	Part No.	Description	No. Used
3	010110850	Screw	4
4	023100008	Nut	4

NOTE: Obtain replacement parts from your local Perkins Dealer.

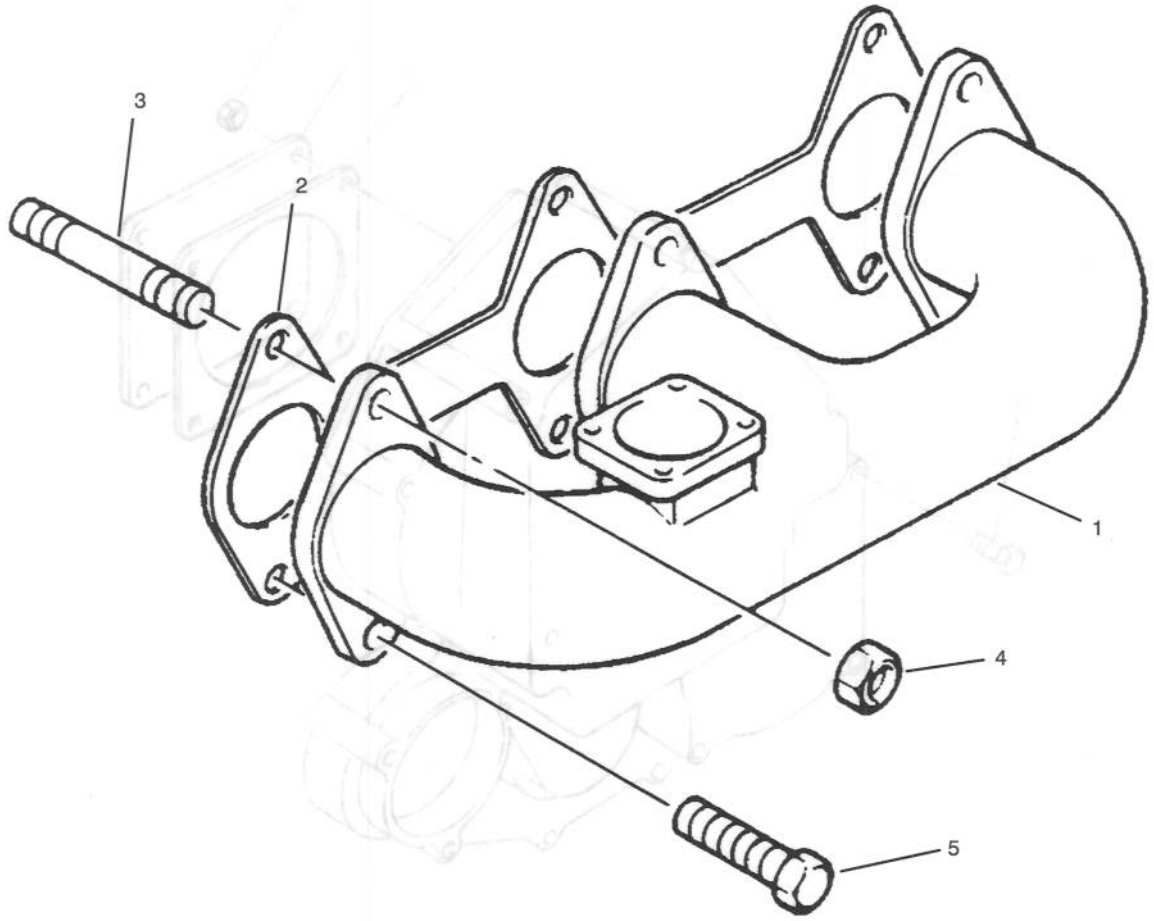


T–1399

EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	135616630	Manifold – Exhaust	1
2	135996520	Gasket	1
3	012110625	Stud	3
4	023100006	Nut	3
5	011310625	Screw	3

NOTE: Obtain replacement parts from your local Perkins Dealer.

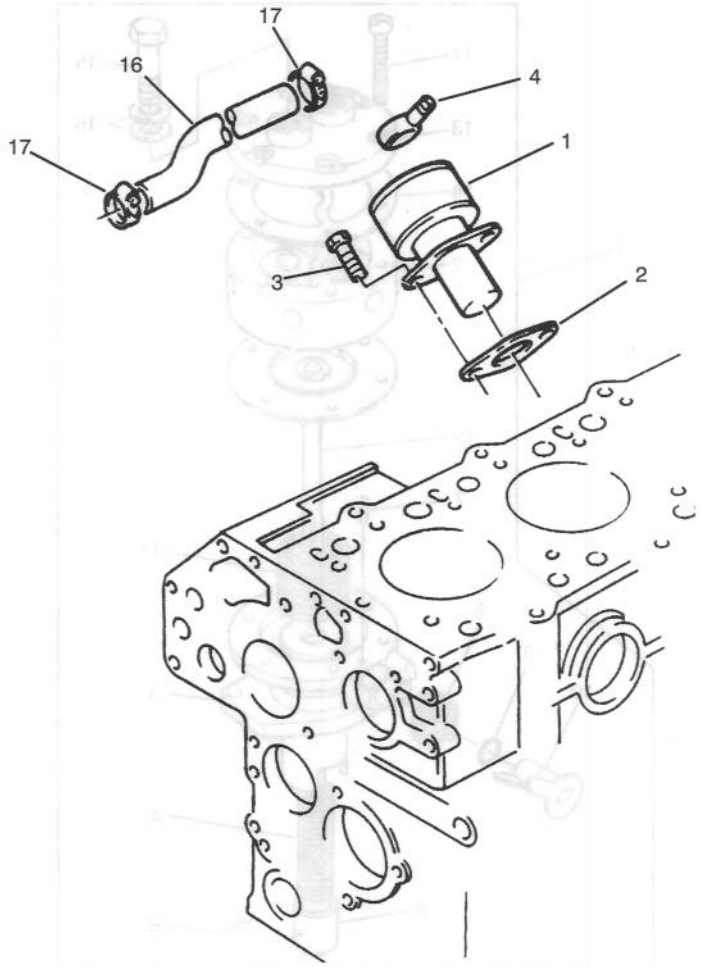


T–1400

LOW PRESSURE FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	130506140	Pump – Lift	1
2	130996070	Gasket	1
3	011140616	Screw	2

Ref. No.	Part No.	Description	No. Used
4	198486840	Connection	2
16	068209084	Hose	1
17	067100015	Clip	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

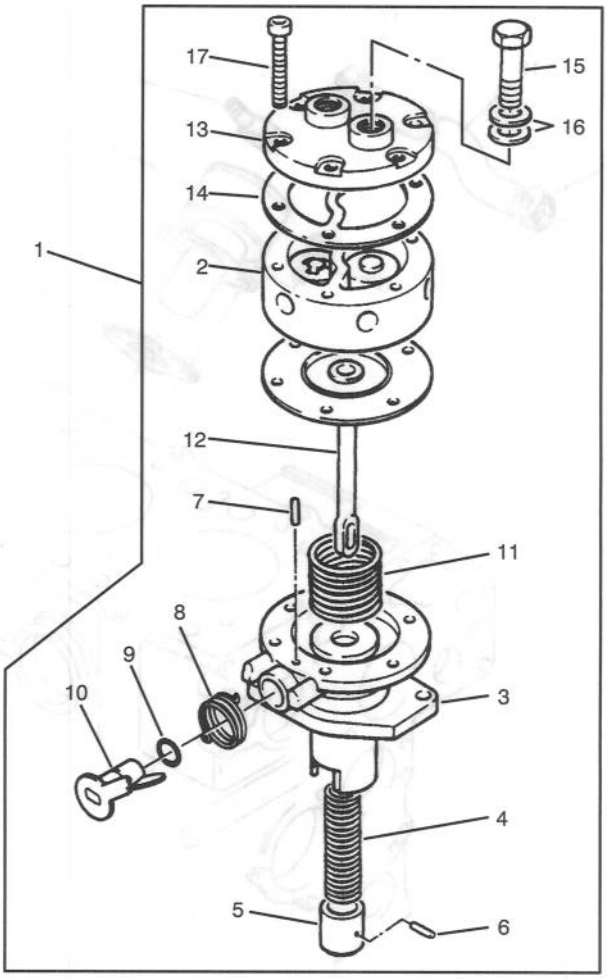


T–1401

LIFT PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	130506140	Lift Pump Assembly (Incl. Ref. #2)	1
2		Body	1
3	130516080	Body	1
4	130516081	Spring	1
5	130516082	Plunger	1
6	130516085	Pin	1
7	130516088	Pin	1
8	130516083	Spring	1
9	131226180	Seal – O–Ring	1
10	130516086	Lever	1
11	130516087	Spring	1
12	130516084	Diaphragm	1
13	130516090	Cap	1
14	130516089	Gasket	1
15	130516092	Bolt	2
16	130516069	Washer	4
17	130516091	Screw	6

NOTE: Obtain replacement parts from your local Perkins Dealer.

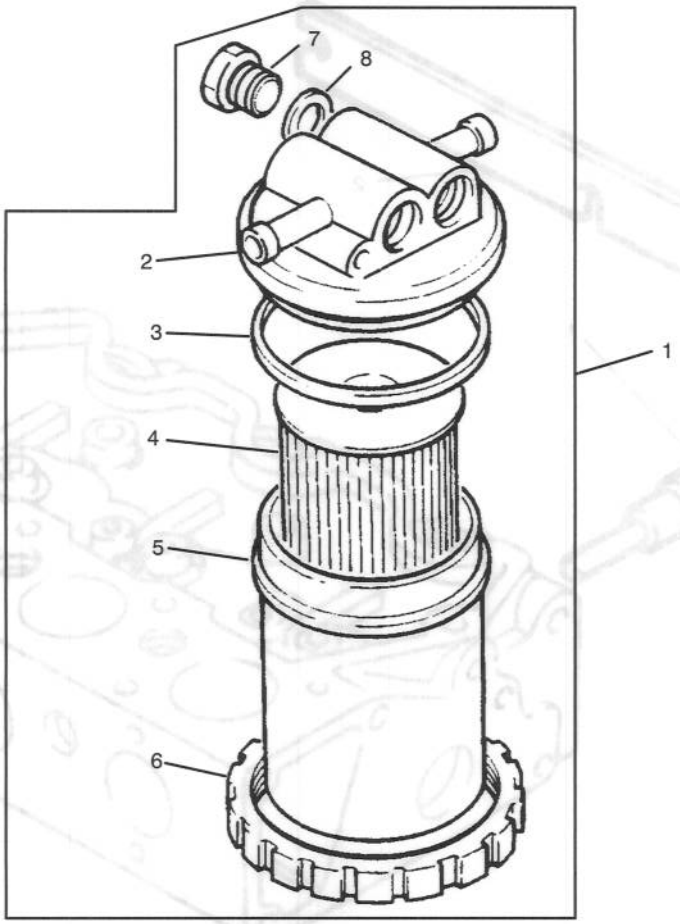


T–1402

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	130306041	Fuel Filter Assembly (Incl. Ref. #2)	1
2		Head	1
3	052100440	Seal – O–Ring	1
4	130366040	Element	1
5	130336031	Container	1
6	130446090	Seal – O–Ring	1
7	130446080	Plug	2
8	130326120	Washer	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

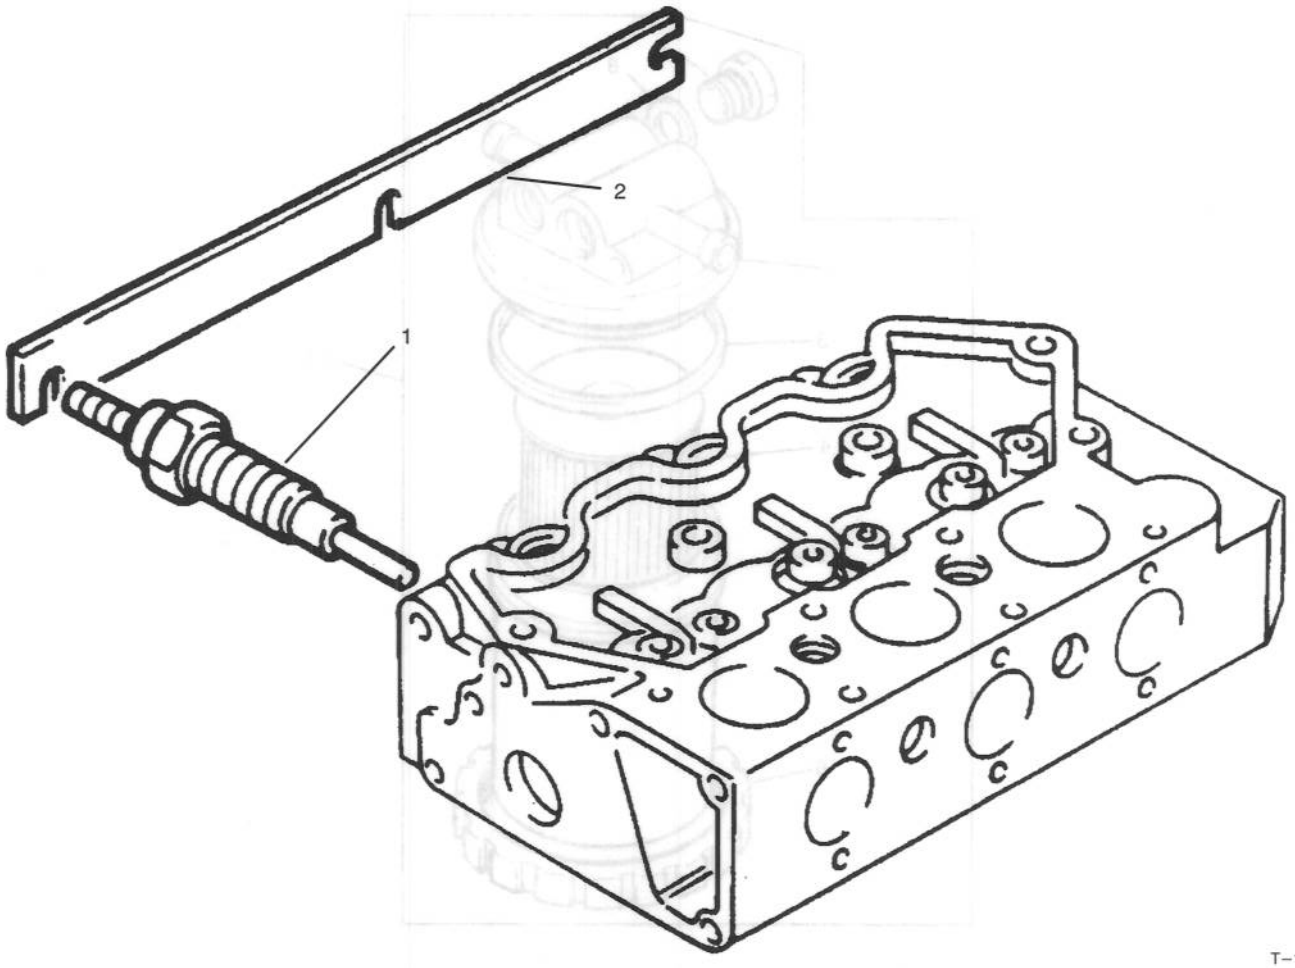


T–1403

COLD START SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185366060	Heater	3
2	185376170	Bar	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

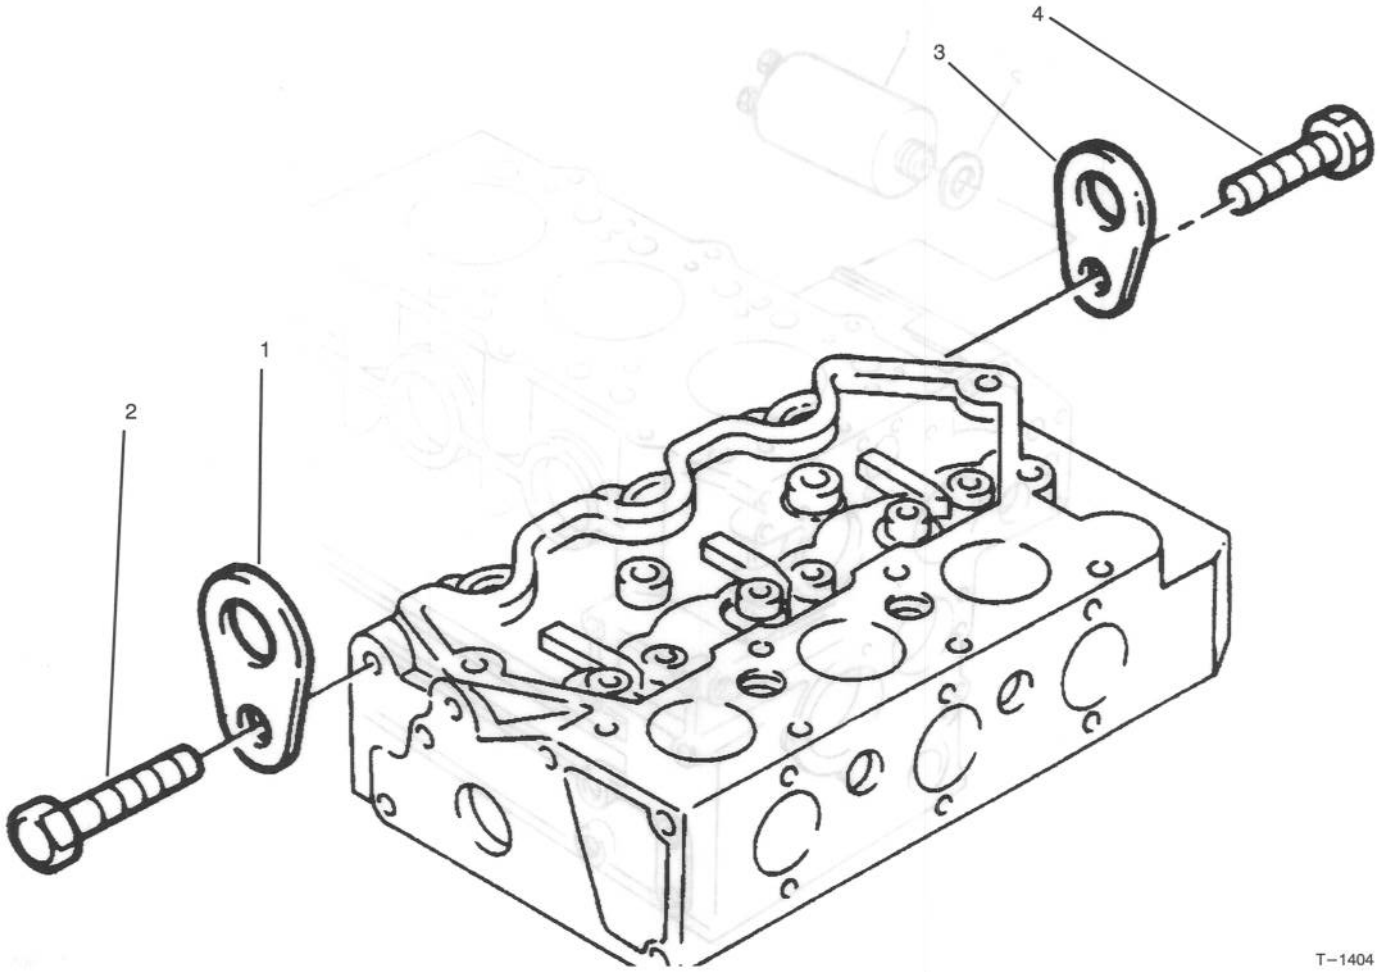


T–1404

ENGINE LIFTING TAB ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	195816200	Plate	1
2	011310816	Screw	1

Ref. No.	Part No.	Description	No. Used
3	195816200	Plate	1
4	011310816	Screw	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

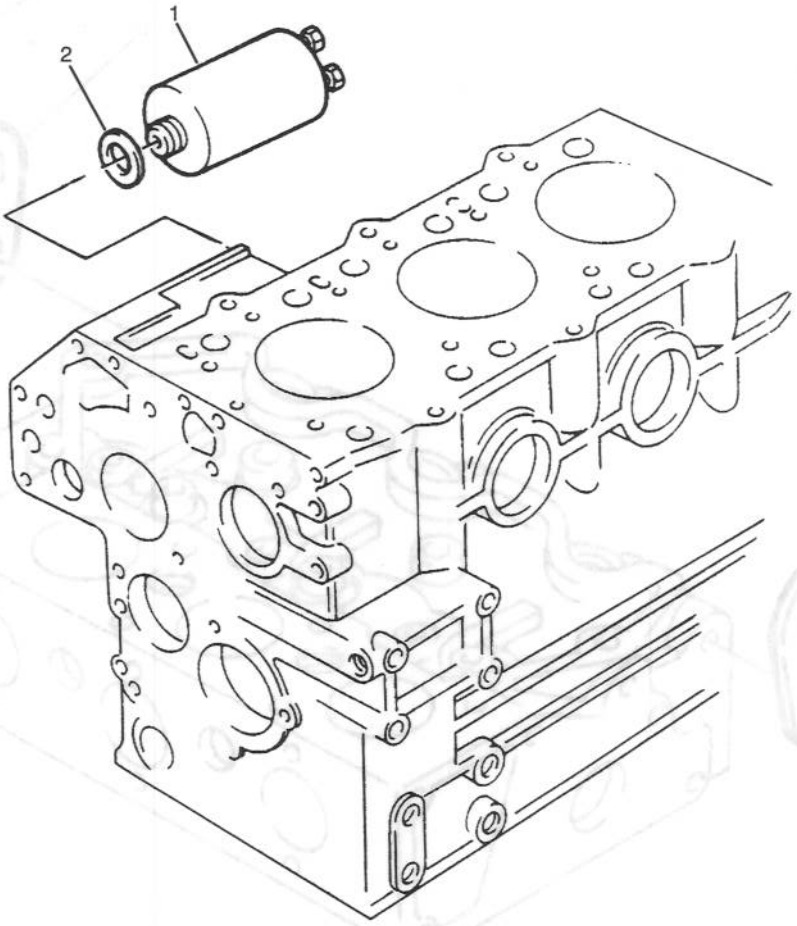


T–1405

THROTTLE STOP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	185206082	Solenoid	1

Ref. No.	Part No.	Description	No. Used
2	025100016	Washer	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

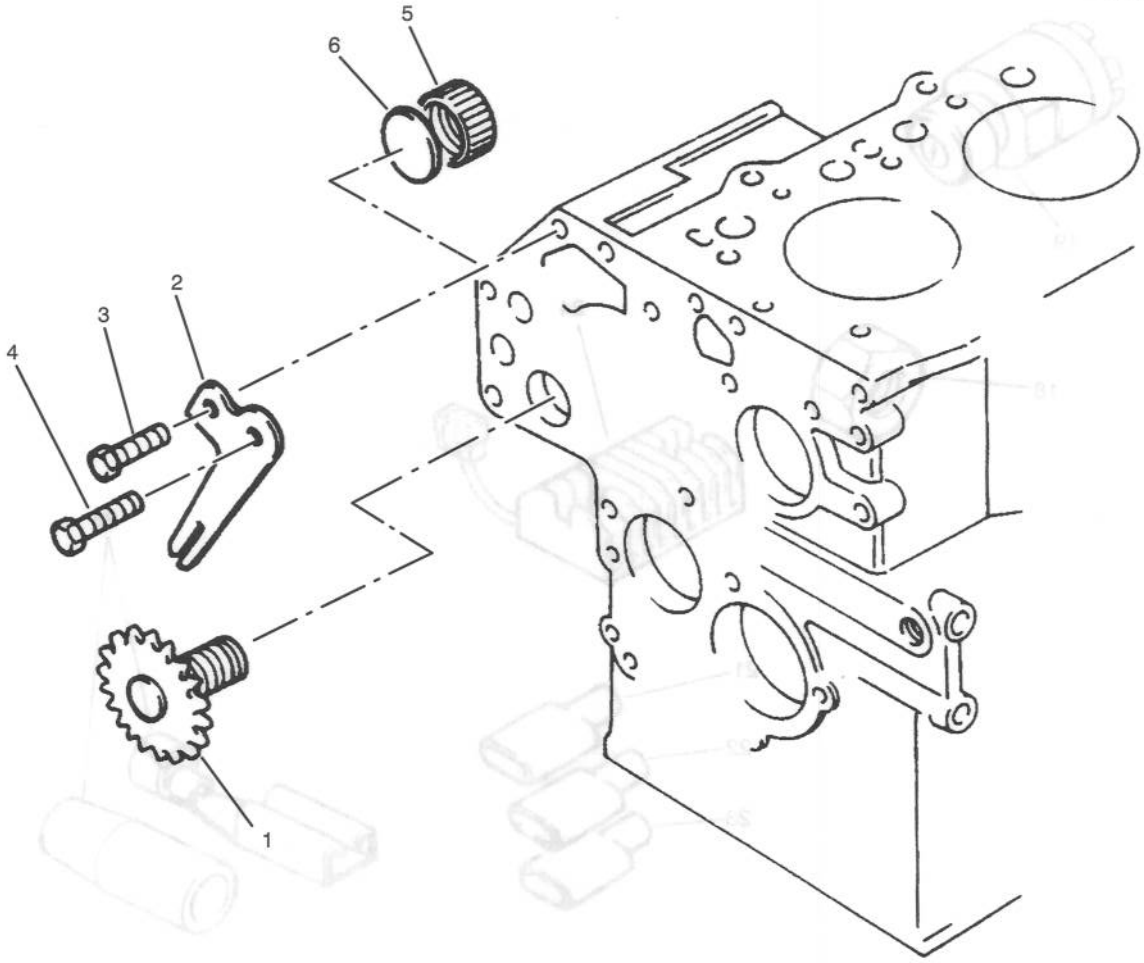


T–1406

RECORDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	120076070	Shaft	1
2	199566651	Plate	1
3	011310612	Screw	1

Ref. No.	Part No.	Description	No. Used
4	010700610	Screw	1
5	199376230	Cap	1
6	120996060	Seal	1

NOTE: Obtain replacement parts from your local Perkins Dealer.

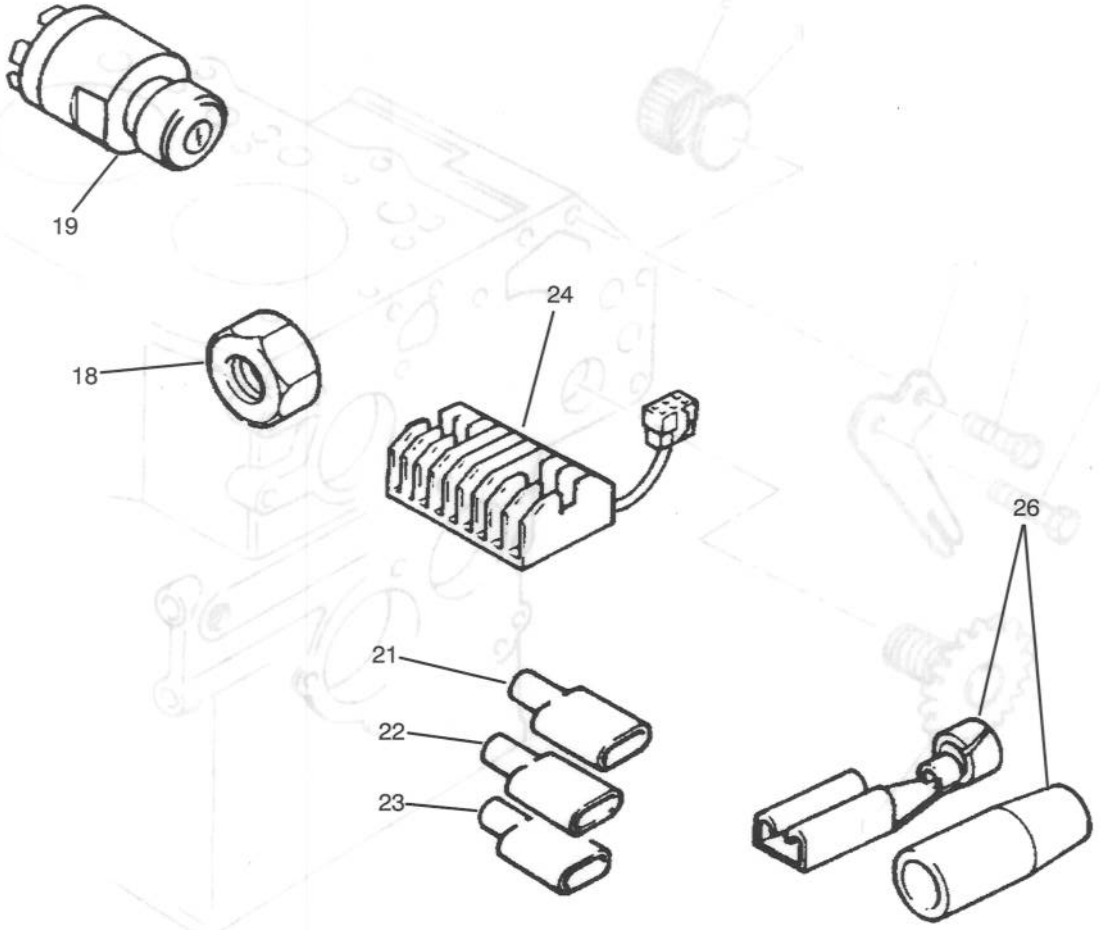

T–1407

ELECTRICAL COMPONENT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
18	020100008	Nut	1
19	385201160	Switch	1
21	385620010	Connection	1
22	385620280	Connection	2

Ref. No.	Part No.	Description	No. Used
23	385620270	Connection	1
24	185516060	Regulator	1
26	385620200	Connection	2

NOTE: Obtain replacement parts from your local Perkins Dealer.

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 85–5110

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Control	Skirt Panel	92–3179	84–6960
Decal Service	Skirt Panel	83–8900	84–7180
Panel Starting Fluid	Control Panel	83–9150	84–6660
Decal Parking Brake	Left Fender	84–1650	84–6860
Decal Warning	Fan Top Shroud	77–3100	84–6760
Decal Warning	Skirt Panel	83–9550	84–7080
Decal Warning	Hydraulic Tank Support	67–5360	84–7280
Decal Warning	Cutting Unit Top Shields	62–5070	84–6560
Decal Warning	Cutting Unit Lift Arms	55–4300	84–2940

ITALIAN DECAL KIT NO. 85–5120

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	ITALIAN
Decal Control	Skirt Panel	92–3179	84–6950
Decal Service	Skirt Panel	83–8900	84–7170
Panel Starting Fluid	Control Panel	83–9150	84–6650
Decal Parking Brake	Left Fender	84–1650	84–6850
Decal Warning	Fan Top Shroud	77–3100	84–6750
Decal Warning	Skirt Panel	83–9550	84–7070
Decal Warning	Hydraulic Tank Support	67–5360	84–7270
Decal Warning	Cutting Unit Top Shields	62–5070	84–6550
Decal Warning	Cutting Unit Lift Arms	55–4300	84–2910

SWEDISH DECAL KIT NO. 85–5060

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SWEDISH
Decal Control	Skirt Panel	92–3179	84–6990
Decal Service	Skirt Panel	83–8900	84–7210
Panel Starting Fluid	Control Panel	83–9150	84–6690
Decal Parking Brake	Left Fender	84–1650	84–6890
Decal Warning	Fan Top Shroud	77–3100	84–6790
Decal Warning	Skirt Panel	83–9550	84–7110
Decal Warning	Hydraulic Tank Support	67–5360	84–7310
Decal Warning	Cutting Unit Top Shields	62–5070	84–6590
Decal Warning	Cutting Unit Lift Arms	55–4300	84–2870

GERMAN DECAL KIT NO. 85–5050

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal Control	Skirt Panel	92–3179	84–6940
Decal Service	Skirt Panel	83–8900	84–7160
Panel Starting Fluid	Control Panel	83–9150	84–6640
Decal Parking Brake	Left Fender	84–1650	84–6840
Decal Warning	Fan Top Shroud	77–3100	84–6740
Decal Warning	Skirt Panel	83–9550	84–7060
Decal Warning	Hydraulic Tank Support	67–5360	84–7260
Decal Warning	Cutting Unit Top Shields	62–5070	84–6540
Decal Warning	Cutting Unit Lift Arms	55–4300	84–2900

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

SPANISH DECAL KIT NO. 85–5070

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal Control	Skirt Panel	92–3179	84–6980
Decal Service	Skirt Panel	83–8900	84–7200
Panel Starting Fluid	Control Panel	83–9150	84–6680
Decal Parking Brake	Left Fender	84–1650	84–6880
Decal Warning	Fan Top Shroud	77–3100	84–6780
Decal Warning	Skirt Panel	83–9550	84–7100
Decal Warning	Hydraulic Tank Support	67–5360	84–7300
Decal Warning	Cutting Unit Top Shields	62–5070	84–6580
Decal Warning	Cutting Unit Lift Arms	55–4300	84–2900

FRENCH DECAL KIT NO. 85–5040

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal Control	Skirt Panel	92–3179	84–6930
Decal Service	Skirt Panel	83–8900	84–7150
Panel Starting Fluid	Control Panel	83–9150	84–6630
Decal Parking Brake	Left Fender	84–1650	84–6830
Decal Warning	Fan Top Shroud	77–3100	84–6730
Decal Warning	Skirt Panel	83–9550	84–7050
Decal Warning	Hydraulic Tank Support	67–5360	84–7250
Decal Warning	Cutting Unit Top Shields	62–5070	84–6530
Decal Warning	Cutting Unit Lift Arms	55–4300	84–2800

DANISH DECAL KIT NO. 85–5130

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DANISH
Decal Control	Skirt Panel	92–3179	84–6900
Decal Service	Skirt Panel	83–8900	84–7120
Panel Starting Fluid	Control Panel	83–9150	84–6600
Decal Parking Brake	Left Fender	84–1650	84–6800
Decal Warning	Fan Top Shroud	77–3100	84–6700
Decal Warning	Skirt Panel	83–9550	84–7020
Decal Warning	Hydraulic Tank Support	67–5360	84–7220
Decal Warning	Cutting Unit Top Shields	62–5070	84–6500
Decal Warning	Cutting Unit Lift Arms	55–4300	84–2930

DUTCH DECAL KIT NO. 85–5080

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DUTCH
Decal Control	Skirt Panel	92–3179	84–6910
Decal Service	Skirt Panel	83–8900	84–7130
Panel Starting Fluid	Control Panel	83–9150	84–6610
Decal Parking Brake	Left Fender	84–1650	84–8610
Decal Warning	Fan Top Shroud	77–3100	84–6710
Decal Warning	Skirt Panel	83–9550	84–7030
Decal Warning	Hydraulic Tank Support	67–5360	84–7230
Decal Warning	Cutting Unit Top Shields	62–5070	84–6510
Decal Warning	Cutting Unit Lift Arms	55–4300	84–2920

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

FINNISH DECAL KIT NO. 85–5090

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FINISH
Decal Control	Skirt Panel	92–3179	84–6920
Decal Service	Skirt Panel	83–8900	84–7140
Panel Starting Fluid	Control Panel	83–9150	84–6620
Decal Parking Brake	Left Fender	84–1650	84–6820
Decal Warning	Fan Top Shroud	77–3100	84–6720
Decal Warning	Skirt Panel	83–9550	84–7040
Decal Warning	Hydraulic Tank Support	67–5360	84–7240
Decal Warning	Cutting Unit Top Shields	62–5070	84–6520
Decal Warning	Cutting Unit Lift Arms	55–4300	84–7010

NORWEGIAN DECAL KIT NO. 85–5100

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	NORWEGIAN
Decal Control	Skirt Panel	92–3179	84–6970
Decal Service	Skirt Panel	83–8900	84–7190
Panel Starting Fluid	Control Panel	83–9150	84–6670
Decal Parking Brake	Left Fender	84–1650	84–6870
Decal Warning	Fan Top Shroud	77–3100	84–6770
Decal Warning	Skirt Panel	83–9550	84–7090
Decal Warning	Hydraulic Tank Support	67–5360	84–7270
Decal Warning	Cutting Unit Top Shields	62–5070	84–6570
Decal Warning	Cutting Unit Lift Arms	55–4300	84–7000

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–0348	Bushing – Sleeve	31	8	4
3–0348	Bushing – Sleeve	32	17	2
3–6498	Washer	16	50	2
3–6498	Washer – Thrust	8	17	A/R
3–6692	Spring – Compression	11	24	1
5–0743	Spring – Extension	32	1	1
5–0743	Spring – Extension	31	23	2
5–2653	Cable Pulley Assembly	29	8	1
5–2655	Keeper – Cable	29	7	1
5–2656	Keeper – Cable	29	30	2
5–7280	Key – Square	25	1	3
5–7290	Spring – Extension	15	6	1
10–6821	Brake Drum Assembly	15	18	2
10–6830	Stud – Drive	34	16	4
10–6870	Hub – Wheel	15	19	2
10–6870	Hun – Wheel	34	22	1
10–7070	Key – Square	25	13	1
12–9140	Decal	36	1	1
14–5759	Hood	1	2	1
16–1089	Lift Arm Assembly	32	29	1
16–1149	Top Shroud Assembly	9	5	1
16–1159	Lift Arm Assembly L.H.	31	9	1
16–1169	Lift Arm Assembly R.H.	31	*	1
16–3869	Skirt Panel	3	12	1
21–0140	Rod End Assembly	34	30	1
21–0150	Rod End Assembly	8	15	1
22–8330	Plug	28	1	2
22–8340	Spring	28	3	2
22–8350	Ball	28	4	2
22–8360	Pin – Cam	28	6	2
22–8370	Seat – Check Valve	28	5	2
22–8380	Retainer – Spring	28	10	2
22–8410	Spring	28	11	1
22–8420	Spool	28	8	1
22–8480	Snap Ring – Spool	28	13	1
22–8490	Snap Ring	28	14	1
22–8500	Seal – O–Ring	28	9	2
23–2140	Hose – Fuel	35	23	1
23–3030	Spacer	28	12	1
24–0760	Cooler – Oil	9	20	1
25–2380	Plate – Thrust	12	39	1
25–2390	Plate – Valve	12	40	1
25–2400	Gasket	12	43	1
25–2430	Pin – Straight	12	41	1
25–2450	Swash/Plate	12	37	1
25–2460	Plug	12	14	2
25–2470	Kit – Shim Pack	12	16	2
25–2480	Spring – Charge Relief	12	32	1
25–2490	Ball – Check Valve	12	47	2
25–2510	Washer	12	11	2
25–2530	Pin – Straight	12	26	1
25–2570	Spring – Relief Valve	12	17	1
25–2630	Ring	12	3	1
25–2640	Spring – Check Valve	12	48	2
25–2650	Plug – Check Valve	12	49	2
25–2680	Gerotor Assembly	12	25	1
25–3180	Kit – Check Valve	13	*	1
25–3210	Seal – Lip	12	10	2
26–3790	Nut – Lock	34	21	1
26–3790	Nut – Lock	15	23	2
27–9870	Pin – Seat	3	24	1
28–3670	Shaft – Trunnion	12	28	1
28–6180	Pin	3	23	1
29–6120	Plate – Pump	14	5	1
29–6150	Spring – Leaf	14	9	1
29–6170	Spring – Extended Leaf	14	7	1
29–9080	Handle	36	3	1
29–9090	Hose – Handle	36	4	1
33–1300	Element Assembly	5	5	1
33–1310	Baffle	5	8	1
33–1320	Cup	5	9	1
33–1330	Nut Assembly	5	6	1
33–1340	Clamp Assembly	5	7	1
33–1350	Band Assembly	5	3	2
33–1350	Clamp Assembly	4	60	2
36–4310	Brush	36	5	1
36–7290	Spindle – Fan	22	49	1
37–9090	Belt – V	22	2	1
37–9590	Spring – Compression	3	22	1
42–9850	Washer	23	61	1
43–1950	Lift Valve Assembly	27	4	1
43–8600	Spring – Compression	3	28	1
43–8610	Guide – Spring	3	27	1
43–8620	Guide – Pin	3	30	1
43–8860	Plunger – Switch	3	29	1
43–8870	Boot – Switch	3	32	1
43–9071	Seat Switch Assembly	4	*	1
44–2212	Light Assembly	6	41	1
46–6811	Screw – Cap Hex. Hd.	24	5	2
46–8400	Bearing – Needle	12	42	1
46–8810	Stop – Spring	14	1	1
48–1800	Cylinder Block Kit	12	5	1
48–7700	Screw – Cap Hex. Hd.	22	14	6
48–7780	Screw – Cap Hex. Hd.	22	29	16
48–8010	Washer – Flat	22	41	4
48–9460	Screw – Cap Hex. Hd.	24	7	4
48–9460	Screw – Cap Hex. Hd.	22	8	10
48–9590	Washer – Lock	22	28	16
49–2040	Screw – Hex. Flange Hd.	14	25	3
49–2040	Screw – Hex. Flange Hd.	11	35	3
49–8480	Shaft – Trunnion	12	12	1
49–8510	Kit – Charge Relief	13	*	1
49–8520	Kit – Implement Relief	13	*	1
51–3150	Shim – Spring	14	6	1
52–2861	Washer – Flat	11	23	1
54–0110	Element – Oil Filter	10	15	1
55–4300	Decal – Warning	31	10	2
55–4300	Decal – Warning	32	24	1
56–2230	Hose – Fuel	35	11	1
56–2520	Valve – Fuel Shut–Off	35	9	1
56–7976	Clamp – Hose	34	6	2
56–7976	Clamp – Hydraulic Tube	18	5	2
56–7977	Clamp – Hydraulic Tube	18	17	2
56–9510	Bushing Assembly	33	10	2
56–9520	Bushing – Nyliner	33	16	1
57–5420	Screw – Shoulder	10	5	1
57–6390	Nut	23	60	1
59–2150	Taper Lock Bushing Assy.	11	20	1
61–0140	Pulley – Reel	25	4	3
61–2070	Rod – Steering	8	13	1
61–2070	Rod – Steering	34	28	1
61–2090	Steering Column Assembly	8	8	1
61–2370	Spacer	14	16	2
61–2430	Hub – Lift	29	45	1
61–2610	Arm – Traction	14	14	1
61–2790	Screen – Filler	10	8	1
61–3210	Cable Pulley Assembly	29	22	3
61–3230	Spacer	29	24	3
61–3270	Spring – Compression	31	7	2
61–3330	Pulley	11	16	1
61–3380	Belt – Reel Drive	25	42	3
61–3830	Chain – Lift	29	33	2
61–3990	Parking Brake Assembly	15	5	1
61–7250	Boot	31	6	4
62–4290	O–Ring	12	44	2
62–7170	Spacer	3	43	1
62–7240	Cover – Spring	32	2	1
62–7250	Boot	32	18	2
62–7300	Chain	32	3	1
62–7400	Decal – TORO	1	1	1
62–9130	Grip – Handle	2	9	1
62–9510	Washer – Flat	22	50	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
63–1400	Guide – Cable	29	28	1
63–7430	Temperature Gauge Assy.	6	17	1
63–7620	Hose – Fuel	35	5	1
63–7620	Hose – Fuel	22	18	1
63–8140	Pulley – Idler	22	3	1
63–8410	Washer – Flat	10	10	3
63–8410	Washer – Flat	35	17	3
65–4500	Seal – Snap Ring	17	14	1
65–4550	Valve – Check Ball	17	6	2
65–4560	Plug – Hex (Hollow)	17	3	1
65–4570	Seal – Square Ring	17	4	2
65–4580	Screw – Cap Hex Hd.	17	1	8
65–4590	Ring – Snap	17	21	1
65–4600	Washer – Thrust	17	19	2
65–4610	Bearing – Thrust	17	20	1
65–4620	Seal – O–Ring	17	12	1
65–4670	Body & Bearing Assembly	17	9	1
65–4680	Cover & Bearing Assembly	17	2	1
65–8270	Washer	22	57	1
65–8320	Bar – Height–Of–Cut	36	1	1
66–2920	Spacer	14	36	1
66–3240	Cap – Radiator	9	9	1
66–5291	Hydraulic Motor Assembly	34	24	1
66–5291	Hydraulic Motor Assembly	15	30	2
66–6110	IGR Assembly	17	5	1
67–0870	Bolt – Shoulder	2	6	1
67–5360	Decal – Danger	4	57	1
67–8020	Shaft – Pump	12	6	1
67–8030	Plug Assembly	12	19	2
67–8040	O–Ring	12	20	2
67–8050	Bearing – Needle	12	22	1
67–8060	Seal – Lip	12	23	1
68–8990	Head – Oil Filter	10	19	1
69–1170	Glass – Sight	10	2	1
69–9760	Plate – Cover	34	4	1
70–1480	Relay	6	33	1
70–1480	Relay	3	39	1
70–8150	Plate – Valve	17	7	1
70–9840	Shoe – Brake	15	16	4
70–9850	Clip – Retaining	15	35	2
70–9860	Pin – Pivot Brake	15	25	2
70–9870	Plate – Brake	15	27	2
70–9880	Spring – Extension	15	17	4
71–0710	Hydraulic Tube Assembly	19	3	1
71–0840	Hydraulic Tube Assembly	19	6	1
71–1370	Spring – Compression	29	35	1
71–1380	Pin – Spring	29	34	1
71–1500	Brake Assembly	16	*	2
71–2960	Valve – Flow Control	18	13	1
71–3382	Hose – Overflow	9	11	1
72–4190	Pin – Cylinder Guide	29	12	1
72–4320	Switch – Seat	3	25	1
74–0720	Tube – Manual	3	14	1
74–6110	Cam – Stop	14	35	1
74–9100	Pad – Forward	14	11	1
74–9110	Pad – Reverse	14	13	1
75–0540	Tether & Retainer Assembly	10	4	1
75–2160	Bushing – Flange	8	2	2
75–4703	Hose – Fuel	35	15	1
75–4703	Hose – Fuel	22	25	1
75–6820	Hourmeter	6	3	1
75–7730	Spacer	34	2	1
76–0020	Hydraulic Cylinder Assembly	29	37	1
76–0030	Repair Kit	30	*	1
76–0040	Piston	30	8	1
76–0050	Ring – Retaining	30	12	1
76–0090	Head	30	3	1
76–0300	Housing – Bushing	33	12	1
76–0350	Housing – Bushing	33	2	1
76–0360	Cup – Retainer	33	6	1
76–0370	Bolt – Shoulder	32	12	2
76–0370	Bolt – Shoulder	31	27	2
76–0390	Spacer	33	15	1
76–0410	Spring – Compression	33	7	1
76–1420	Wheel – Steering	8	10	1
76–2200	Footrest – Traction	2	12	1
76–2260	Pad – Footrest	2	11	1
76–2320	Shaft	30	4	1
76–2330	Nut – Lock	30	5	1
76–2350	Seal/Retainer Assembly	17	*	1
76–2360	Body Seal Kit	17	*	1
76–2430	Scraper – Pulley	31	2	2
76–2460	Bearing Assembly	25	7	2
76–6471	Trim – Control Panel Bottom	3	41	1
77–3100	Decal – Warning	9	4	1
80–4090	Hose – Hydraulic	19	5	2
80–4090	Hose – Hydraulic	34	14	2
80–6980	Latch – Hood	6	12	1
80–6990	Washer	29	18	4
80–7345	Hose	6	29	
81–1690	Clamp – Throttle Cable	22	21	1
82–3110	Sensor – Temp.	22	16	1
83–7260	Cone – Relief Valve	12	18	2
83–7270	Fork – Caster	34	10	1
83–7540	Engine Assembly	22	54	1
83–7550	Radiator Assembly	9	35	1
83–7590	Pulley – Engine	22	55	1
83–7610	Hub – Fan	22	44	1
83–7630	Pulley – Fan	22	43	1
83–7690	Bracket – Idler	22	5	1
83–7700	Bracket – Alternator	22	34	1
83–7720	Reservoir – Hydraulic	10	1	1
83–7780	Bracket – Support	10	24	1
83–7790	Collar	25	11	2
83–7800	Sleeve	25	40	1
83–7810	Spacer	25	35	2
83–7820	Shaft – Drive	25	2	1
83–7830	Retainer – Clutch	25	15	1
83–7850	Shroud – Fan Bottom	9	32	1
83–7900	Belt Tensioner Assembly	32	11	2
83–7900	Belt Tensioner Assembly	31	20	2
83–7910	Rod	33	8	1
83–7930	Yoke	33	3	1
83–7970	Fitting – Hydraulic Bulkhead	9	39	2
83–7980	Bracket – Radiator Rear	9	12	1
83–8040	Cover – Left	9	8	1
83–8070	Bracket – Radiator Bottom	9	18	1
83–8080	Key – Square	25	38	1
83–8110	Panel – Left	3	45	1
83–8120	Panel – Right Rear	3	4	1
83–8150	Screen – Radiator	9	17	1
83–8190	Panel – Control	3	5	1
83–8210	Panel – Front Left	9	22	1
83–8220	Bracket – Muffler	24	11	1
83–8230	Panel – Right Front	3	2	1
83–8270	Pedal – Traction	14	12	1
83–8320	Mount – Pump	11	11	1
83–8400	Pulley – Idler	25	20	1
83–8470	Bracket – Engine Mount	22	56	2
83–8510	Bracket – Fender L.H.	1	16	1
83–8550	Hose – Air Cleaner	3	49	1
83–8550	Hose – Air Intake	22	13	1
83–8590	Cable – Lift	29	19	1
83–8620	Bracket – Idler	25	18	1
83–8630	Yoke – Belt Tension	25	22	1
83–8720	Tank – Fuel	35	13	1
83–8760	Rod – Control	14	20	1
83–8770	Lever – Pump	14	23	1
83–8850	Grille – Front	1	25	1
83–8860	Shield – Grass Front R.H.	1	23	1
83–8890	Decal – Reelmaster 216–D	3	19	2
83–8900	Decal – Service Information	3	50	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
83–9000	Battery	35	6	1
83–9020	Belt – V	22	38	1
83–9030	Foam – Top	9	36	1
83–9050	Hose – Radiator	9	34	1
83–9060	Hose – Radiator	9	28	1
83–9070	Hose – Coolant	22	11	1
83–9070	Hose – Radiator	9	31	1
83–9080	Connector – Bleed	9	30	1
83–9130	Keeper – Cable	29	27	1
83–9140	Clutch Assembly	25	39	1
83–9150	Decal – Starting Fluid	3	10	1
83–9170	Right Channel Assembly	3	44	1
83–9210	Cable – Battery Neg.	35	8	1
83–9210	Cable – Ground	22	31	1
83–9220	Cable – Battery Pos.	35	7	1
83–9220	Cable – Battery Pos.	23	66	1
83–9240	Hold–Down – Battery	35	21	1
83–9250	Lever – Brake	15	36	2
83–9270	Pivot – Brake L.H.	15	40	1
83–9310	Pivot – Brake R.H.	15	*	1
83–9330	Shaft – Brake	15	41	1
83–9340	Shield – Grass	15	13	2
83–9350	Rod – Parking Brake	15	1	1
83–9440	Hydraulic Tube Assembly	18	2	1
83–9450	Tube – Hydraulic	18	19	1
83–9460	Tube – Hydraulic	18	4	1
83–9460	Tube – Hydraulic	19	13	1
83–9470	Hydraulic Tube Assembly	18	1	1
83–9480	Tube – Hydraulic	18	18	1
83–9490	Tube – Hydraulic	18	15	1
83–9500	Tube – Hydraulic	18	9	1
83–9500	Tube – Hydraulic	19	12	1
83–9550	Decal – Warning	3	11	1
83–9600	Hose – Hydraulic	11	7	2
83–9600	Hose – Hydraulic	18	21	2
83–9620	Hose – Hydraulic	27	12	1
83–9620	Hose – Hydraulic	29	42	1
83–9640	Hose – Hydraulic	27	14	1
83–9640	Hose – Hydraulic	11	27	1
83–9650	Hose – Hydraulic	11	1	1
83–9650	Hose – Hydraulic	10	21	1
83–9651	Hose – Hydraulic	10	14	1
83–9680	Screw – Cap Hex. Hd.	25	27	1
83–9690	Spring – Compression	25	26	1
83–9700	Fender – L.H.	1	9	1
83–9710	Footrest – L.H.	1	7	1
83–9720	Fender – RH	2	17	1
83–9730	Step – Foot	3	36	1
83–9740	Footrest – RH	2	15	1
83–9760	Bracket – Cylinder Support	29	1	1
83–9800	Shield – Grass Front L.H.	1	14	1
83–9810	Bushing – Flange	25	24	1
83–9840	Pad – Footrest L.H.	1	5	1
83–9880	Bracket – Fan Spindle	22	47	1
83–9920	Bracket – Reservoir	10	13	1
83–9970	Latch – Hood	1	3	1
84–1650	Decal – Brake	1	12	1
84–1990	Rod – Adjusting	15	32	2
84–2000	Bracket – Brake	15	29	2
84–7770	Field & Rotor Assembly	26	1	1
84–7780	Armature Assembly	26	2	1
84–8440	Bushing – Flange	29	11	2
85–4870	Support – Hinge	1	20	1
85–4890	Hinge – Hood	1	24	1
85–4910	Air Cleaner (Complete)	5	*	1
85–4910	Air Cleaner Assembly	3	47	1
85–4990	Hose – Hydraulic	27	13	1
85–4990	Hose – Hydraulic	27	20	1
85–4990	Hose – Hydraulic	18	26	1
85–4990	Hose – Hydraulic	29	41	1
85–5000	Plate – Throttle	6	34	1
85–5010	Bracket – Right Front	4	54	1
85–5140	Foam – Hood	4	56	2
85–5160	Lever – Lift Valve	27	2	1
85–5170	Sleeve	9	41	1
85–5180	Trim	3	51	2
85–5190	Hose – Hydraulic	34	36	1
85–5200	Clamp	34	34	1
85–5230	Bracket – Seat Pivot	4	62	2
85–5270	Key – Starter	6	18	2
85–5300	Hose – Hydraulic	18	25	1
85–5330	Plate – Seat Mounting	4	64	1
85–5340	Tube – Seat Pivot	3	7	2
85–6540	Stud – Drive	15	26	8
87–6270	Socket – Warning Light	6	5	1
88–6720	Bracket – Radiator Front	9	33	1
88–6730	Bracket – Screen Front	9	44	1
88–8220	Valve – By–Pass	12	4	1
92–1157	Shaft	17	10	1
92–1177	Hose – Hydraulic	27	8	1
92–1177	Hose – Hydraulic	9	27	1
92–1177	Hose – Hydraulic	23	67	1
92–1178	Hose – Hydraulic	11	9	1
92–1178	Hose – Hydraulic	10	27	1
92–1583	Hose – Hydraulic	9	24	1
92–1583	Hose – Hydraulic	11	28	1
92–1812	Shaft – Lift Pivot	31	28	2
92–1812	Shaft – Lift Pivot	32	31	1
92–1815	Rod – Pivot	31	16	2
92–1815	Rod – Pivot	32	26	1
92–1818	Arm – Tension	32	7	1
92–1818	Arm – Tension	31	32	2
92–1822	Shackle	31	24	2
92–1822	Shackle	32	34	1
92–2368	Knob – Clamp	9	46	2
92–2373	Frame	8	19	1
92–3153	Cable – Throttle	23	64	1
92–3153	Throttle Assembly	6	30	1
92–3154	Tab – Throttle	23	62	1
92–3162	Bushing – Flange	8	4	4
92–3165	Steering Shaft & Gear	8	5	1
92–3172	Gear – Steering	8	16	1
92–3178	Decal – Instrument Panel	6	2	1
92–3179	Decal – Control	19	10	1
92–3181	Spacer – Fan	22	42	1
92–3183	Panel – Instrument	6	1	1
92–3185	Support – Bearing	25	6	2
92–3186	Belt – Pump Drive	11	21	1
92–3187	Belt – Drive (Set of 3)	25	37	1
92–3188	Diode – Circuit Board	7	2	1
92–3194	Switch Assembly	6	24	1
92–3195	Knob	6	23	1
92–3196	2 Position Valve Assembly	19	2	1
92–3198	Pulley – Engine	22	48	1
92–3199	Pulley – Clutch	25	36	1
92–7904	Cap – Valve	20	1	1
92–7905	Switch Assembly	29	3	1
92–7905	Switch Assembly	14	28	1
92–7906	Switch	29	21	1
92–7906	Switch	14	37	1
92–7907	Plug Assembly	20	2	1
92–7908	Washer – Valve	20	4	1
92–7909	Stop – Valve	20	13	1
92–7910	Harness – Wire	7	1	1
92–7910	Harness – Wire	23	65	1
92–7911	Boot	20	10	1
92–7912	Retainer – Boot	20	14	1
92–7913	Seal Repair Kit	20	*	1
92–7914	Wire – Fusible Link	7	3	1
92–7917	Clevis	11	25	1
92–7918	Bracket – Lever	2	20	1
92–7921	Rod – Link	2	2	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–7922	Plate – Pump Pivot	11	33	1
92–7923	Lever – Pump Clutch	2	8	1
92–7924	Retainer – Belt	11	13	1
92–7940	Housing – Charge Pump	12	21	1
92–7948	Decal – Service Assistance	4	66	1
92–8776	Plug Assembly	13	52	2
92–8777	Seal – O–Ring	12	51	2
92–9023	Hydraulic Pump Assembly	12	8	1
92–9023	Hydraulic Pump Assembly	11	31	1
92–9775	Warning Light Assembly	6	7	1
92–9776	Muffler	24	12	1
92–9796	Block – Support	24	15	1
92–9797	Spring – Extension	24	4	2
92–9798	Bolt – U	24	1	1
92–9799	Tube – Muffler	24	3	1
93–0100	Bracket – Exhaust Support	2	23	1
93–0151	Bracket – Tube Support	24	13	1
93–0152	Guard – Exhaust Pipe	24	2	1
93–0153	Bolt – U	31	3	1
93–0160	Guard – Pulley	31	4	1
93–0166	Tire	34	17	1
93–3102	Cap – Fuel Tank	35	12	1
93–3103	Cap – Hydraulic Reservoir	10	7	1
217–60	Rim	15	21	2
218–461	Nut – Hex.	3	33	2
218–469	Fuse – 15 Amp.	6	10	2
218–489	Fuse Holder Assembly	6	9	2
218–562	Lens – Light	6	43	1
219–17	Bulb – Light	6	6	4
219–18	Bulb – Light	6	42	1
231–127	Tire	15	20	2
232–27	Valve – Stem	15	24	2
232–47	Valve – Stem	34	20	1
233–37	Knob	27	1	1
233–46	Knob	20	11	1
237–7	Seal – O–Ring	3	31	1
237–21	Seal – O–Ring	27	18	2
237–21	Seal – O–Ring	16	47	3
237–22	O–Ring	12	2	1
237–22	Seal – O–Ring	20	3	1
237–22	Seal – O–Ring	19	4	2
237–22	Seal – O–Ring	27	7	4
237–22	Seal – O–Ring	34	13	3
237–22	Seal – O–Ring	29	40	2
237–30	Seal – O–Ring	11	6	5
237–30	Seal – O–Ring	15	7	2
237–30	Seal – O–Ring	19	7	4
237–30	Seal – O–Ring	18	10	7
237–30	Seal – O–Ring	3	26	1
237–30	Seal – O–Ring	9	38	2
237–37	Bumper – Rubber	3	6	2
237–42	Seal – O–Ring	28	2	2
237–42	Seal – O–Ring	27	5	1
237–42	Seal – O–Ring	18	12	2
237–42	Seal – O–Ring	11	30	2
237–42	Seal – O–Ring	29	38	2
237–65	Seal – O–Ring	15	44	2
237–71	Seal – O–Ring	3	42	1
237–78	Seal – O–Ring	27	10	2
237–78	Seal – O–Ring	18	24	2
237–78	Seal – O–Ring	34	38	1
237–78	Seal – O–Ring	16	46	2
237–79	Seal – O–Ring	11	4	4
237–79	Seal – O–Ring	19	9	3
237–79	Seal – O–Ring	10	18	1
237–80	Seal – O–Ring	15	9	4
237–80	Seal – O–Ring	34	11	2
237–81	Seal – O–Ring	10	3	4
237–86	O–Ring	12	15	4
237–95	O–Ring	12	27	1
2396–23	Nut – Flange Lock	34	23	4
240–11	Grommet	10	9	3
240–11	Grommet	35	16	3
240–13	Bumper	25	16	2
242–50	Nut – Lug	34	19	4
242–50	Nut – Lug	15	22	8
242–76	Rim	34	18	1
2410–18	Plug	36	2	1
2411–52	End – Rod	14	17	1
2411–53	End – Rod	14	22	1
2412–34	Clamp – Hose	11	2	1
2412–34	Clamp – Hose	22	10	1
2412–34	Clamp – Hose	9	29	5
2412–36	Clamp – Hose	35	10	2
2412–36	Clamp – Hose	10	26	1
2412–39	Clamp – R	18	7	1
2412–39	Clamp – R	3	17	3
2412–39	Clamp – R	22	35	2
2412–41	Clamp – R	9	15	1
2412–74	Clamp – R	9	3	1
2412–92	Clamp – Hose	22	12	1
2412–92	Clamp – Hose	3	48	1
2412–93	Clamp – R	22	15	1
2412–108	Clamp – Hose	35	4	4
2412–108	Clamp – Hose	9	10	1
2412–108	Clamp – Hose	22	17	2
2412–112	Clamp – R	32	21	1
2412–133	Clamp – R	3	16	2
251–8	Bearing – Ball	12	35	1
251–77	Collar – Locking	25	9	2
251–259	Bearing – Ball	14	31	1
251–337	Bearing – Ball	25	8	2
252–82	Bearing – Needle	12	9	2
256–1	Bushing – Sleeve	29	23	3
256–2	Bushing – Sleeve	29	44	1
256–27	Bushing – Sleeve	8	6	2
256–115	Washer – Thrust	31	13	2
256–115	Washer – Thrust	32	25	1
256–173	Bushing – Sleeve	33	11	1
256–245	Bushing – Flange	8	18	2
256–247	Bushing – Flange	8	1	2
256–320	Bushing	1	21	2
256–321	Bushing – Sleeve	4	59	4
2710–16	Connecting Link Assembly	27	3	1
281–1	Plug – Pipe	9	37	2
281–7	Plug – Pipe	9	1	1
282–2	Clevis	2	4	1
282–2	Clevis	15	34	2
282–4	Clevis	32	5	1
282–4	Clevis	29	31	4
283–1	Pin – Clevis	2	5	1
283–1	Pin – Clevis	32	20	1
283–1	Pin – Clevis	15	37	2
283–2	Pin – Clevis	11	26	1
283–6	Pin – Clevis	32	6	1
283–6	Pin – Clevis	29	14	4
283–40	Pin – Clevis	32	14	2
283–40	Pin – Clevis	31	35	1
283–42	Pin – Clevis	29	9	1
283–55	Pin – Clevis	33	5	1
283–62	Pin – Clevis	22	19	1
283–75	Pin – Clevis	31	25	4
283–75	Pin – Clevis	32	32	2
283–78	Pin – Clevis	29	36	1
285–17	Plug – Pipe	12	1	6
302–5	Fitting – Grease	34	3	1
302–5	Fitting – Grease	8	3	4
302–5	Fitting – Grease	33	14	1
302–5	Fitting – Grease	25	33	2
302–60	Fitting – Grease	31	17	2
302–60	Fitting – Grease	32	30	1
321–5	Screw – Cap Hex. Hd.	15	15	8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
321–6	Screw – Cap Hex. Hd.	14	10	2
321–8	Screw – Cap Hex. Hd.	3	52	2
321–9	Screw – Cap Hex. Hd.	34	32	1
321–11	Screw – Cap Hex. Hd.	4	61	2
321–12	Screw – Cap Hex. Hd.	35	2	1
321–13	Screw – Cap Hex. Hd.	11	18	3
321–23	Screw – Cap Hex. Hd.	27	16	2
321–23	Screw – Cap Hex. Hd.	22	40	4
322–4	Screw – Cap Hex. Hd.	31	11	2
322–4	Screw – Cap Hex. Hd.	32	23	1
322–4	Screw – Cap Hex. Hd.	12	24	4
322–7	Screw – Cap Hex. Hd.	22	37	2
322–9	Screw – Cap Hex. Hd.	34	9	1
322–9	Screw – Cap Hex. Hd.	14	18	2
322–10	Screw – Cap Hex. Hd.	18	8	2
322–12	Screw – Cap Hex. Hd.	8	11	1
322–17	Screw – Cap Hex. Hd.	15	2	1
322–17	Screw – Cap Hex. Hd.	14	8	1
322–17	Screw – Cap Hex. Hd.	25	31	9
322–26	Screw – Cap Hex. Hd.	32	36	1
323–5	Screw – Cap Hex. Hd.	10	11	3
323–5	Screw – Cap Hex. Hd.	35	18	3
323–6	Screw – Cap Hex. Hd.	9	47	4
323–7	Screw – Cap Hex. Hd.	32	8	1
323–7	Screw – Cap Hex. Hd.	31	31	2
323–11	Screw – Cap Hex. Hd.	12	46	4
323–13	Screw – Cap Hex. Hd.	29	46	1
323–15	Screw – Cap Hex. Hd.	25	19	1
323–23	Screw – Cap Hex. Hd.	29	20	2
325–8	Screw – Cap Hex. Hd.	11	38	1
325–9	Screw – Cap Hex. Hd.	11	15	1
325–9	Screw – Cap Hex. Hd.	31	18	1
325–11	Screw – Cap Hex. Hd.	34	25	4
325–11	Screw – Cap Hex. Hd.	15	28	8
325–18	Screw – Cap Hex. Hd.	11	36	1
327–65	Seal – O–Ring	18	3	3
3210–7	Screw – Cap Hex. Hd.	14	30	1
3212–34	Clamp – Hose	10	16	3
3217–6	Nut – Hex.	1	17	4
3217–26	Nut – Hex.	6	38	1
3217–29	Nut – Lock	14	3	2
3218–6	Nut – Jam	33	9	1
3218–17	Nut – Jam	25	12	1
3218–19	Nut – Hex.	6	22	2
3219–14	Nut – Hex.	36	3	1
3219–14	Nut – Hex.	6	14	6
3220–2	Nut – Jam	2	3	1
3220–2	Nut – Jam	14	19	2
3220–2	Nut – Jam	15	33	2
3220–3	Nut – Jam	8	12	2
3220–3	Nut – Jam	34	27	2
3220–5	Nut – Jam	8	14	1
3220–12	Nut – Jam	34	29	1
3220–20	Nut – Jam	14	21	1
3229–1	Bolt – Carriage	31	1	2
3229–1	Screw – Carriage	2	10	2
3229–22	Bolt – Carriage	4	63	2
3230–1	Screw – Carriage	35	19	2
3230–1	Screw – Carriage	22	33	1
3230–2	Bolt – Carriage	4	65	2
3230–22	Screw – Carriage	22	6	1
3230–23	Screw – Carriage	1	10	6
3230–23	Screw – Carriage	10	23	6
3230–27	Screw – Carriage	2	13	1
3231–22	Bolt – Carriage	9	23	2
3231–26	Screw – Carriage	22	7	1
3231–31	Bolt – Carriage	25	21	1
3234–4	Screw – Cap Hex. Hd.	9	7	2
3234–4	Screw – Hex. Flange Hd.	3	13	3
3234–4	Screw – Hex. Flange Hd.	25	29	2
3234–4	Screw – Hex. Washer Hd.	6	8	3
3234–4	Screw – Hex. Washer Hd.	29	10	1
3234–4	Screw – Hex. Washer Hd.	10	22	2
3234–5	Screw – Hex. Flange Hd.	3	1	24
3234–5	Screw – Hex. Washer Hd.	15	4	2
3234–5	Screw – Hex. Washer Hd.	1	6	12
3234–5	Screw – Hex. Washer Hd.	9	19	2
3234–5	Screw – Hex. Washer Hd.	22	32	1
3234–11	Screw – Hex. Flange Hd.	3	40	4
3234–11	Screw – Hex. Washer Hd.	29	29	1
3234–17	Screw – Hex. Flange Hd.	2	22	2
3234–17	Screw – Hex. Washer Hd.	9	21	4
3234–24	Screw – Hex. Flange Hd.	22	26	3
3234–25	Screw – Hex. Washer Hd.	29	17	5
3234–28	Screw – Hex. Flange Hd.	19	1	2
3234–28	Screw – Hex. Flange Hd.	24	10	1
3234–28	Screw – Hex. Washer Hd.	9	13	8
3234–32	Screw – Cap Hex. Hd.	25	5	4
3234–32	Screw – Cap Hex. Hd.	32	28	1
3234–32	Screw – Hex. Flange Hd.	31	14	2
3234–36	Screw – Hex. Flange Hd.	2	18	1
3242–4	Screw – Square Hd. Set	25	3	6
3245–35	Screw – Set	25	10	4
3249–3	Screw – Round Hd.	29	6	2
3249–3	Screw – Round Hd.	14	27	2
3253–2	Washer – Lock	6	15	5
3253–3	Washer – Lock	11	19	3
3253–3	Washer – Lock	23	68	4
3253–4	Washer – Lock	31	12	2
3253–4	Washer – Lock	1	18	4
3253–4	Washer – Lock	32	22	2
3253–5	Washer – Lock	20	12	1
3254–9	Washer – ITLW	14	2	2
3254–9	Washer – Lock Internal	29	5	2
3254–11	Washer – Lock ETLW	6	39	1
3255–2	Washer – Lock	34	31	1
3255–2	Washer – Lock ETLW	11	12	1
3255–7	Washer – ETLW	14	26	3
3255–7	Washer – Lock ETLW	11	34	3
3255–8	Washer – Lock ETLW	22	30	1
3256–3	Washer – Flat	18	6	1
3256–6	Washer – Flat	31	15	2
3256–6	Washer – Flat	32	27	1
3256–14	Washer – Flat	6	16	2
3256–16	Washer – Flat	15	12	8
3256–22	Washer – Flat	9	6	2
3256–22	Washer – Flat	27	15	2
3256–22	Washer – Flat	34	33	1
3256–22	Washer – Flat	3	53	2
3256–23	Washer	16	49	1
3256–23	Washer – Flat	24	8	5
3256–23	Washer – Flat	22	9	18
3256–23	Washer – Flat	29	16	1
3256–23	Washer – Flat	1	19	4
3256–23	Washer – Flat	25	30	15
3256–23	Washer – Flat	9	43	2
3256–24	Washer	12	50	1
3256–24	Washer – Flat	25	25	2
3256–24	Washer – Flat	29	25	3
3256–24	Washer – Flat	22	27	16
3256–24	Washer – Flat	14	34	1
3256–26	Washer – Flat	11	14	1
3256–26	Washer – Flat	8	20	2
3256–45	Washer – Flat	32	10	4
3256–45	Washer – Flat	31	22	4
3256–53	Washer – Flat	29	4	2
3256–53	Washer – Flat	14	38	2
3256–54	Washer – Flat	33	4	1
3256–57	Washer – Flat	32	37	1
3256–67	Washer – Flat	24	6	4
3257–15	Key – Square	15	10	2
3257–15	Key – Square	17	11	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3257–15	Key – Woodruff	34	15	1
3257–32	Key – Woodruff	12	7	1
3257–32	Key – Woodruff	11	17	1
3258–19	Screw – Round Hd.	5	2	2
3272–4	Pin – Cotter	29	13	1
3272–6	Pin – Cotter	2	1	2
3272–6	Pin – Cotter	32	19	1
3272–6	Pin – Cotter	15	31	5
3272–6	Pin – Cotter	11	37	1
3272–6	Pin – Cotter	29	43	1
3272–10	Pin – Cotter	22	23	1
3272–10	Pin – Cotter	31	26	4
3272–10	Pin – Cotter	32	33	2
3272–11	Pin – Cotter	32	4	1
3272–11	Pin – Cotter	29	32	5
3272–13	Pin – Cotter	32	13	2
3272–13	Pin – Cotter	31	34	1
3273–18	Screw – Hex. Socket Hd.	25	34	4
3274–90	Screw – Hex. Socket Hd.	6	13	2
3290–378	Tie – Cable	11	*	1
3290–378	Tie – Cable	14	*	1
3290–379	Tie – Cable	4	*	1
3290–379	Tie – Cable	34	7	1
3290–379	Tie – Cable	25	41	1
3290–379	Tie – Cable	22	59	4
3290–413	Washer – Belleville	2	7	1
3290–432	Screw – Hex. Hd.	22	20	1
3290–467	Pin – Cotter Hair	1	22	2
3296–4	Nut – Lock	29	15	1
3296–6	Nut – Lock	11	22	1
3296–16	Nut – Flange Lock	27	9	2
3296–16	Nut – Lock	14	4	2
3296–16	Nut – Lock	24	14	2
3296–23	Nut – Flange Lock	25	28	4
3296–23	Nut – Lock	11	10	3
3296–23	Nut – Lock	15	42	8
3296–28	Nut – Lock	8	21	2
3296–29	Nut – Flange Lock	34	5	1
3296–29	Nut – Flange Lock	8	7	1
3296–29	Nut – Flange Lock	25	32	6
3296–29	Nut – Lock	18	14	2
3296–29	Nut – Lock	14	32	3
3296–29	Nut – Lock	9	42	2
3296–39	Nut – Flange Lock	27	17	1
3296–39	Nut – Flange Lock	29	26	3
3296–39	Nut – Lock	32	15	1
3296–39	Nut – Lock	25	17	2
3296–39	Nut – Lock	31	33	2
3296–42	Nut – Lock	3	8	2
3296–42	Nut – Lock	15	11	8
3296–42	Nut – Lock	34	35	1
3296–42	Nut – Lock	9	40	2
3296–45	Nut – Lock	31	29	1
3296–59	Nut – Lock	32	9	2
3296–59	Nut – Lock	2	21	1
3296–59	Nut – Lock	31	21	2
3296–59	Nut – Lock	14	33	1
3298–8	Screw – Set	6	32	1
32104–6	Screw – Cap Hex. Hd.	31	30	2
32104–6	Screw – Cap Hex. Hd.	32	35	1
32104–82	Screw – Hex. Washer Hd.	1	15	5
32104–116	Screw – Hex. Washer Hd.	9	2	8
32107–11	Nut – Square	5	4	2
32120–10	Ring – Retaining	22	45	1
32120–11	Ring – Retaining	12	36	1
32120–15	Ring – Retaining	12	34	1
32121–6	Pin – Roll	14	15	1
32121–6	Pin – Roll	3	21	1
32121–6	Pin – Roll	15	39	2
32121–9	Pin – Roll	33	13	1
32121–10	Pin – Roll	8	9	1
32121–23	Pin – Roll	33	1	1
32121–24	Pin – Roll	14	24	1
32121–34	Pin – Dowel	11	32	1
32121–38	Pin – Spring	20	15	1
32121–91	Pin – Coiled Spring	12	38	3
32122–2	Screw – Round Hd.	36	2	1
32128–14	Nut – Flange Lock	1	4	2
32128–19	Nut – Flange Lock	31	5	2
32128–20	Nut – Flange Lock	3	46	4
32128–20	Nut – Jam	2	14	2
32128–20	Nut – Lock	16	48	2
32128–33	Nut – Flange Lock	3	9	2
32128–33	Nut – Flange Lock	25	14	2
32128–33	Nut – Flange Lock	2	19	2
32128–33	Nut – Flange Lock	31	19	2
32128–33	Nut – Flange Lock	6	31	3
32128–33	Nut – Flange Lock	3	34	5
32128–43	Nut – Flange Lock	22	1	5
32128–43	Nut – Flange Lock	29	2	7
32128–43	Nut – Flange Lock	9	16	6
32128–43	Nut – Flange Lock	25	23	2
32128–43	Nut – Flange Lock	3	37	4
32128–44	Nut – Flange Lock	22	4	5
32128–44	Nut – Flange Lock	1	8	10
32128–44	Nut – Flange Lock	2	16	3
32128–44	Nut – Flange Lock	3	18	10
32128–44	Nut – Flange Lock	35	20	3
32128–44	Nut – Flange Lock	9	26	4
32128–44	Nut – Hex. Flange Hd.	10	12	6
32128–44	Nut – Lock	15	3	2
32144–18	Screw – Hex. Hd.	6	4	2
32148–7	Insert – Threaded	3	3	8
32148–7	Insert – Threaded	1	11	3
32148–8	Insert – Threaded	1	13	1
32148–8	Insert – Threaded	9	14	3
32148–8	Insert – Threaded	4	58	1
32148–14	Insert – Threaded	23	63	1
32149–9	Nut – Flange Lock	6	35	2
32151–46	Ring – Retaining	12	13	2
32153–3	Nut – Lock	9	45	2
340–2	Fitting – Hydraulic Straight	29	47	1
340–4	Fitting – Hydraulic Straight	11	8	1
340–4	Fitting – Hydraulic Straight	19	14	1
340–5	Fitting – Hydraulic Straight	18	11	2
340–17	Fitting – Hydraulic 90°	15	43	2
340–19	Fitting – Hydraulic Tee	18	20	1
340–23	Fitting – Hydraulic Cross	27	21	1
340–77	Fitting – Hydraulic 90°	27	6	1
340–87	Fitting – Hydraulic 45°	29	39	1
340–88	Fitting – Hydraulic Straight	34	37	1
340–92	Fitting – Hydraulic Straight	27	11	1
340–98	Fitting – Hydraulic 90°	19	8	1
340–99	Fitting – Hydraulic 90°	11	29	2
340–101	Fitting – Hydraulic 45°	11	5	2
340–102	Fitting – Hydraulic Tee	18	16	1
340–103	Fitting – Hydraulic 45°	16	45	1
340–103	Fitting – Hydraulic 90°	27	22	1
340–105	Fitting – Hydraulic 90°	15	8	2
340–109	Fitting – Hydraulic Tee	19	11	1
340–110	Fitting – Hydraulic 90°	27	19	1
340–127	Nut – Bulkhead	9	25	2
340–140	Fitting – Hydraulic Tee	16	*	1
340–141	Fitting – Hydraulic Straight	34	12	2
353–987	Fitting– Hydraulic 90°	10	17	1
354–23	Ball	20	5	1
354–77	Fitting – Hydraulic Test Port	18	23	2
354–79	Cap – Test Port	18	22	2
354–120	Fitting – Hydraulic 90°	10	25	1
354–127	Fitting – Hydraulic 45°	10	20	2
354–128	Fitting – Hydraulic 90°	11	3	1
365–6	Screw – Cap Hex. Hd.	34	1	1

*Not Illustrated

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 216–D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 216–D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 216–D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Hood & Grille Assembly	1
Right Footrest & Pump Clutch Lever Assembly	2
Skirt Assembly	3–4
Air Cleaner Assembly	5
Instrument Panel Assembly	6
Electrical Schematic	7
Frame Assembly	8
Radiator Assembly	9
Hydraulic Reservoir & Filter Assembly	10
Hydraulic Pump Installation Assembly	11
Hydraulic Pump Assembly No. 92–9023	12–13
Traction Control Assembly	14
Front Wheel Assembly	15–16
Hydraulic Drive Motor No. 66–5291	17
Drive Motor Plumbing Assembly	18
Rear Wheel Drive Valve Assembly	19
Two Position Valve Assembly No. 92–3196	20
Hydraulic Schematic	21
Engine Installation Assembly	22–23
Exhaust System Assembly	24
Reel Drive Assembly	25
Electric Clutch Assembly No. 83–9140	26
Cutting Unit Lift Valve Installation Assembly	27
Control Valve No. 43–1950	28
Cutting Unit Lift Assembly	29
Hydraulic Cylinder No. 76–0020	30
Front Cutting Unit Lift Arm Assembly	31
Rear Cutting Unit Lift Arm Assembly	32
Belt Tensioner Assembly No. 83–7900	33
Rear Wheel Assembly	34
Fuel System Assembly	35
Special Tools	36

Description	Page
Cylinder Block Assembly	37
Crankshaft Assembly	38
Cylinder Head Assembly	39
Rocker Arm Assembly	40
Camshaft Assembly	41
Timing Cover Assembly	42
Oil Pump Assembly	43
Fuel Injection System Assembly	44
Injection Pump Assembly	45–46
Flywheel Housing Assembly	47
Flywheel Assembly	48
Starter Installation Assembly	49
Starter Assembly	50
Oil Sump Assembly	51
Valve Cover Assembly	52
Oil Filter Assembly	53
Front Drive Pulley Assembly	54
Water Pump Assembly	55
Alternator Assembly	56
Timing Cover Plate Assembly	57
Exhaust Manifold Assembly	58
Low Pressure Fuel System Assembly	59
Lift Pump Assembly	60
Fuel Filter Assembly	61
Cold Start System Assembly	62
Engine Lifting Tab Assembly	63
Throttle Stop Assembly	64
Recorder Assembly	65
Electrical Component Assembly	66
International Decal Cross Reference	67–69
TORO Part Number Index	70–75

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.