
FORM NO. 3316–436

TORO®

MODEL NO. 07345–40001 & UP

PARTS CATALOG

POWER PLATFORM

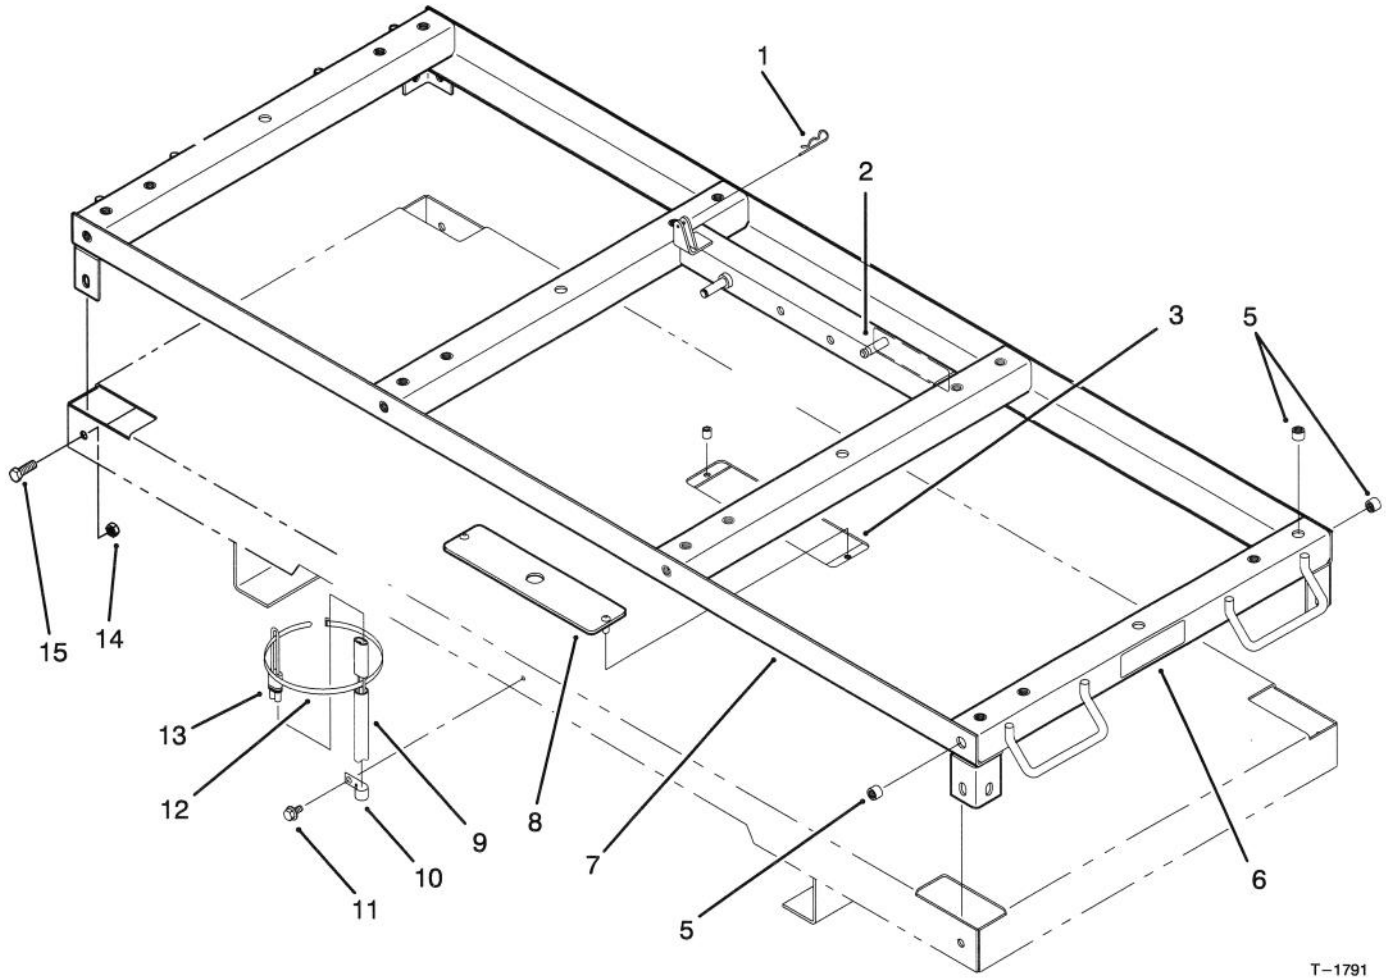


FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290–255	Pin – Cotter Hair	1
2	67–5360	Decal – Danger	1
3	92–2792	Mounting Plate Assembly	2
5	32148–9	Insert – Threaded	24
6	83–6620	Decal – Instruction	1
7	92–2785	Platorm W/A (Incl. Ref. #2, & 6)	1
8	92–9028	Cover Assembly	1
9	92–9026	Wire Harness	1
10	92–9033	Clamp – Arden	1
11	32104–116	Screw – Tapping	1
12	3290–379	Tie – Cable	1
13	92–9027	Wire Harness	1
14	32128–20	Nut – Lock	4
15	3234–17	Screw	4

Copyright 1993 The Toro Company
All Rights Reserved.

TPS

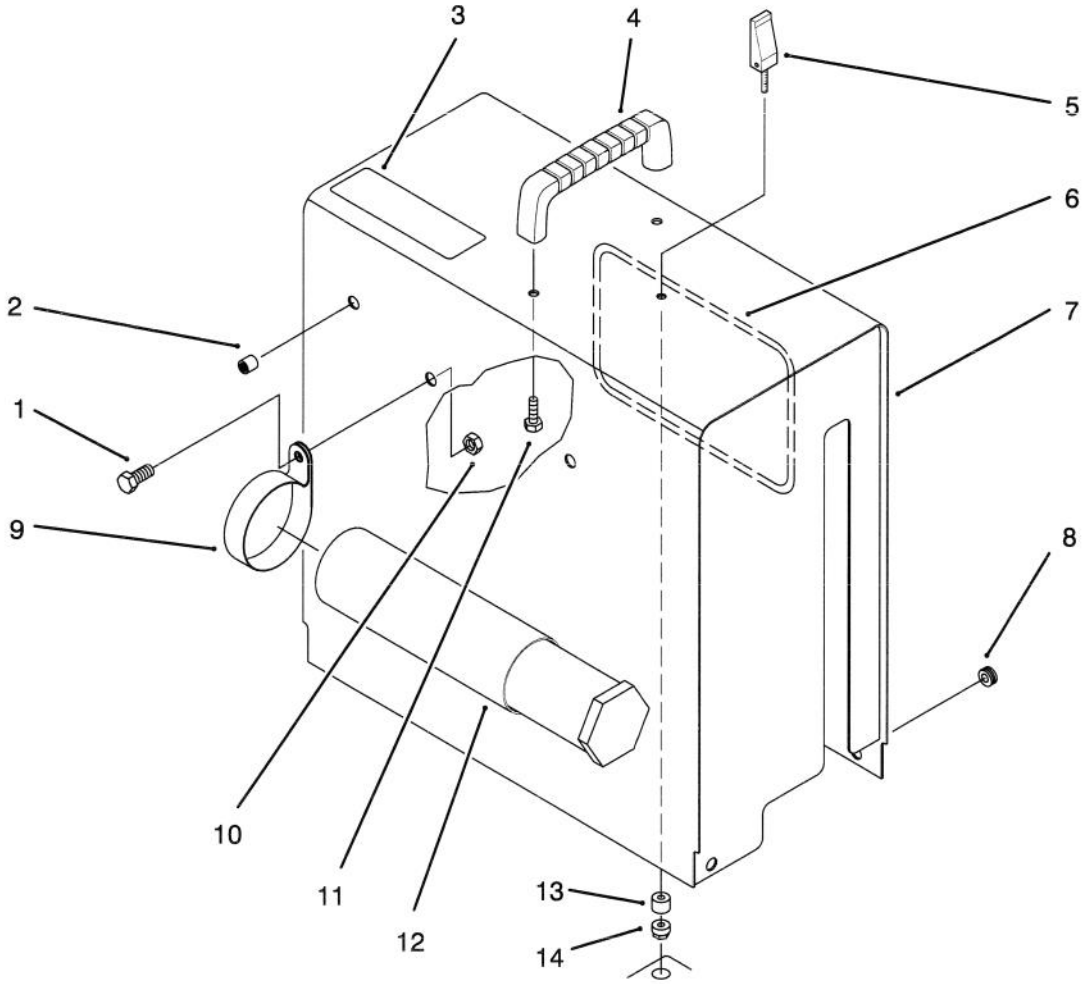


T–1792

SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–3	Screw – Hex Head	2
2	32148–6	Insert – Threaded	2
3	80–8040	Decal – Caution	1
4	65–5100	Handle – Hood	1
5	74–5950	Swell Latch Ass'y (Incl. Ref. #13, & 14)	2
6	62–7400	Decal – Toro	1
7	92–2786	Shield (Incl. Ref. #2, 3, & 6)	1

Ref. No.	Part No.	Description	No. Used
8	237–84	Grommet	4
9	2412–133	R–Clamp	2
10	3296–47	Nut – Lock	2
11	46–8091	Screw – Tapping	2
12	74–0720	Tube – Manual	1
13		Spacer	2
14		Nut	2

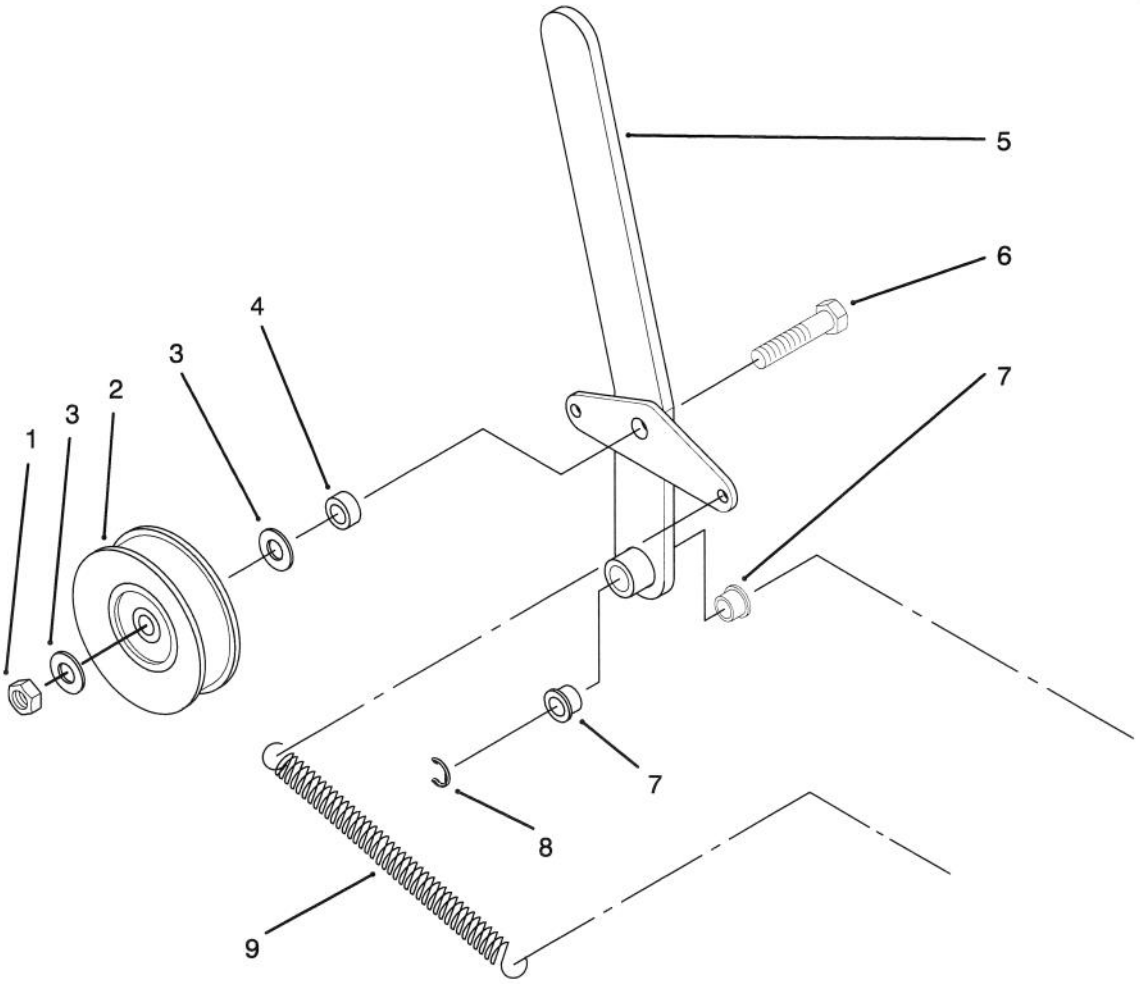


T–1793

IDLER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32146–2	Nut – Hex Lock	1
2	41353	Pulley – Idler	1
3	3256–24	Washer	2
4	92–9025	Spacer	1
5	92–9020	Idler Arm W/A	1

Ref. No.	Part No.	Description	No. Used
6	323–9	Screw – Hex Head	1
7	256–116	Bushing – Flange	2
8	32151–47	E–Ring	1
9	49–6920	Spring	1

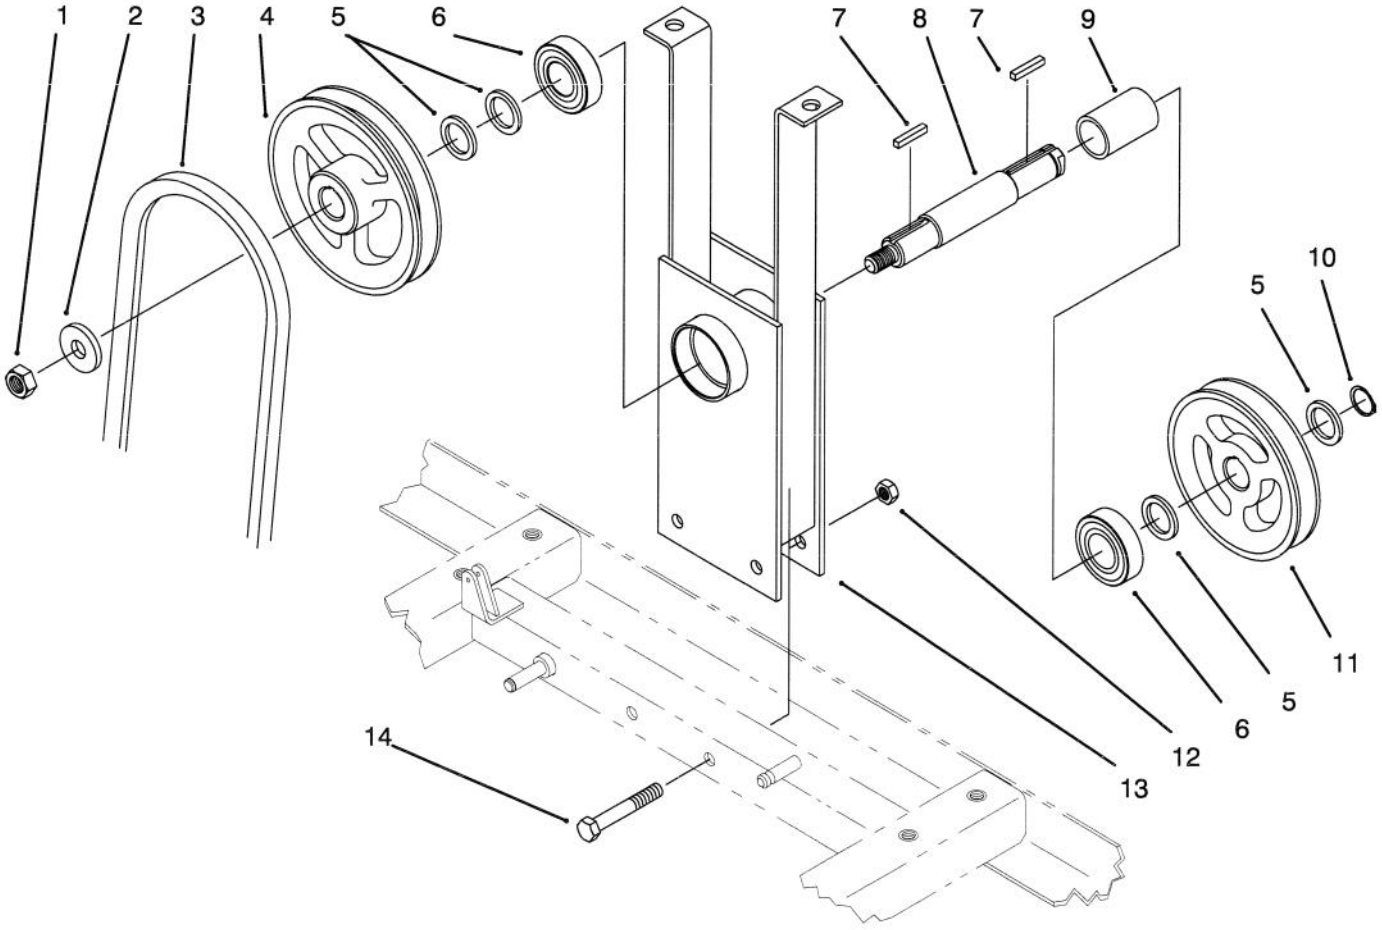


T–1794

PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–45	Nut	1
2	92–2651	Washer	1
3	92–9015	Belt – 48"	1
*	92–2783	Belt – 51"	1
4	92–9014	Pulley	1
5	92–2650	Spacer	4
6	251–82	Ball Bearing	2
7	3–6168	Key – Square	2

Ref. No.	Part No.	Description	No. Used
8	92–9032	Shaft	1
9	87–2750	Spacer – Bearing	1
10	32151–83	Ring – Snap	1
11	92–9016	Pulley	1
12	32146–2	Nut – Hex Lock	2
13	92–9011	Bearing Support W/A	1
14	323–12	Screw – Hex Head	2

*Not Illustrated

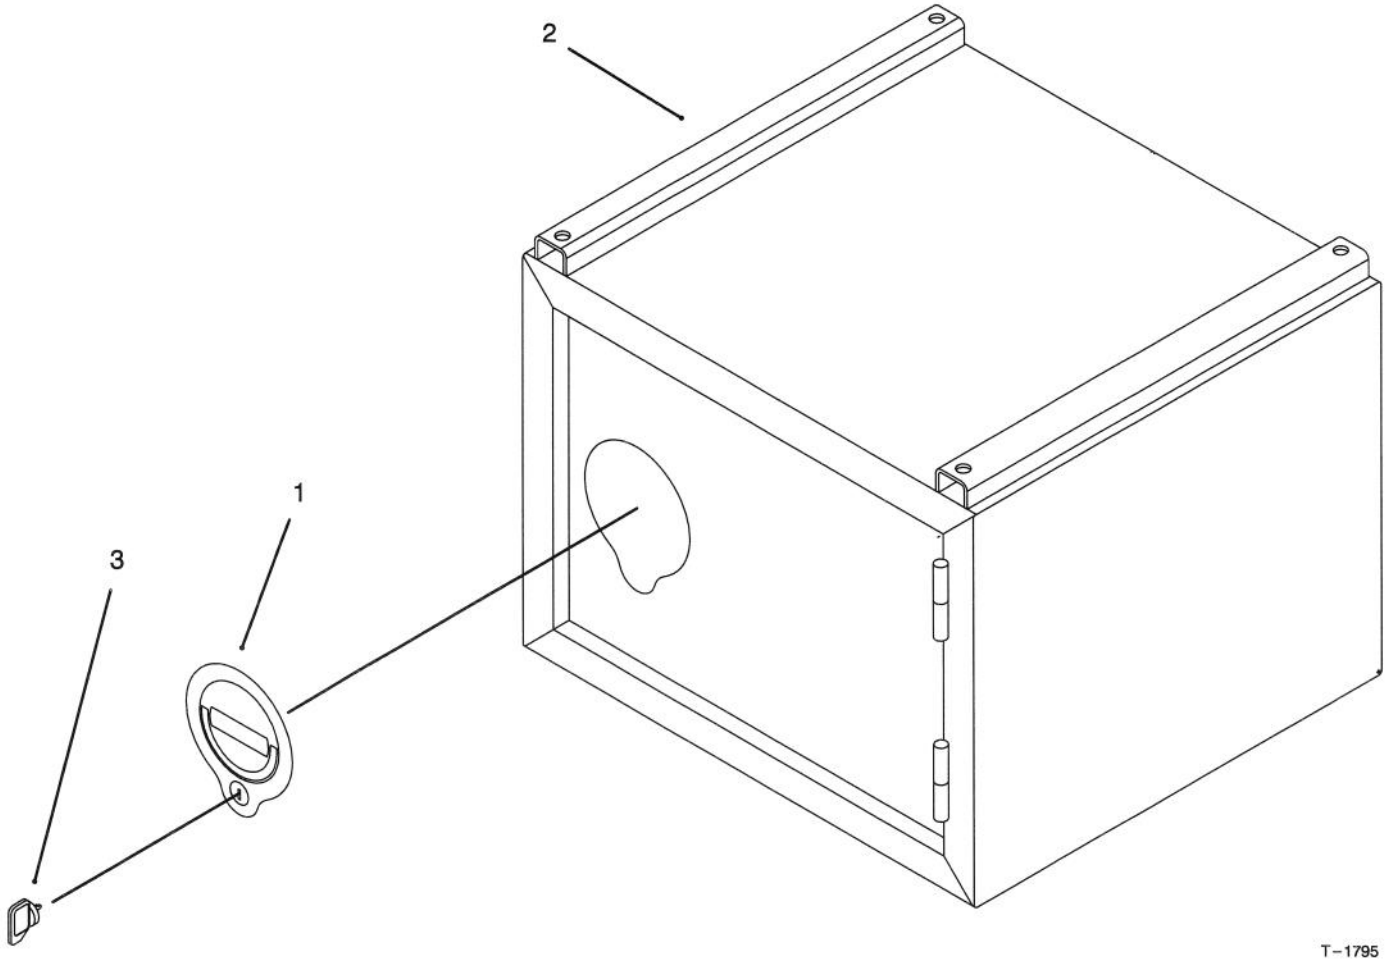

T–1795

TOOLBOX (Optional)

Ref. No.	Part No.	Description	No. Used
1	92–2775	Latch	1
2	92–2773	Toolbox	1

Ref. No.	Part No.	Description	No. Used
3	92–2796	Key	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
41353	Pulley – Idler	3	2	1
3–6168	Key – Square	4	7	2
46–8091	Screw – Tapping	2	11	2
49–6920	Spring	3	9	1
62–7400	Decal – Toro	2	6	1
65–5100	Handle – Hood	2	4	1
67–5360	Decal – Danger	1	2	1
74–0720	Tube – Manual	2	12	1
74–5950	Swell Latch Ass'y	2	5	2
80–8040	Decal – Caution	2	3	1
83–6620	Decal – Instruction	1	6	1
87–2750	Spacer – Bearing	4	9	1
92–2650	Spacer	4	5	4
92–2651	Washer	4	2	1
92–2773	Toolbox	5	2	1
92–2775	Latch	5	1	1
92–2783	Belt – 51	4		1
92–2785	Platform W/A	1	7	1
92–2786	Shield	2	7	1
92–2792	Mounting Plate Assembly	1	3	2
92–2796	Key	5	3	1
92–9011	Bearing Support W/A	4	13	1
92–9014	Pulley	4	4	1
92–9015	Belt – 48	4	3	1
92–9016	Pulley	4	11	1
92–9020	Idler Arm W/A	3	5	1
92–9025	Spacer	3	4	1
92–9026	Wire Harness	1	9	1
92–9027	Wire Harness	1	13	1
92–9028	Cover Assembly	1	8	1
92–9032	Shaft	4	8	1
92–9033	Clamp – Arden	1	10	1
237–84	Grommet	2	8	4
2412–133	R–Clamp	2	9	2
251–82	Ball Bearing	4	6	2
256–116	Bushing – Flange	3	7	2
322–3	Screw – Hex Head	2	1	2
323–9	Screw – Hex Head	3	6	1
323–12	Screw – Hex Head	4	14	2
3234–17	Screw	1	15	4
3256–24	Washer	3	3	2
3290–255	Pin – Cotter Hair	1	1	1
3290–379	Tie – Cable	1	12	1
3296–45	Nut	4	1	1
3296–47	Nut – Lock	2	10	2
32104–116	Screw – Tapping	1	11	1
32128–20	Nut – Lock	1	14	4
32146–2	Nut – Hex Lock	3	1	1
32146–2	Nut – Hex Lock	4	12	2
32148–6	Insert – Threaded	2	2	2
32148–9	Insert – Threaded	1	5	24
32151–47	E–Ring	3	8	1
32151–83	Ring – Snap	4	10	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

MAINTENANCE RECORD

Date								