Form Number 3361-915 Rev A

Commercial Walk-Behind Mower

Floating Deck T-Bar Gear with 40in TURBO FORCE® Cutting Unit

Model No. 30096 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Clutch Assembly	3
Power-Take-Off Idler and Weight Assembly	4
Fuel System Assembly	5
Lower Control Assembly	6
Transmission Drive Assembly	7
Wheel Drive and Brake Assembly	8
Upper Handle Assembly	9
Control Panel Assembly	10
Carrier Frame Assembly	11
Deck Drive and Baffle Assembly	12
Deck Assembly No. 112-7081	13
Spindle Assembly No. 110-0728	14
Spindle Assembly No. 110-6927	15
Lever Assembly No. 107-1664	16
Deck Assembly	17
Deflector Assembly No. 110-0790	18
Cylinder and Crankcase Assembly Kawasaki FH430V-ES28	19
Piston and Crankshaft Assembly Kawasaki FH430V-ES28	20
Valve and Camshaft Assembly Kawasaki FH430V-ES28	21
Lubrication Equipment Assembly Kawasaki FH430V-ES28	22
Cooling Equipment Assembly Kawasaki FH430V-ES28	23
Electric Equipment Assembly Kawasaki FH430V-ES28	24
Control Equipment Assembly Kawasaki FH430V-ES28	25
Carburetor Assembly Kawasaki FH430V-ES28	26
Air Filter and Muffler Assembly Kawasaki FH430V-ES28	27
Fuel Tank and Valve Assembly Kawasaki FH430V-ES28	28
Starter Assembly Kawasaki FH430V-ES28	29
Label Assembly Kawasaki FH430V-ES28	30
Attachments and Accessories List	31

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes

❶ Not serviced separately


❷ Obtain parts from www.kawpowerepc.com

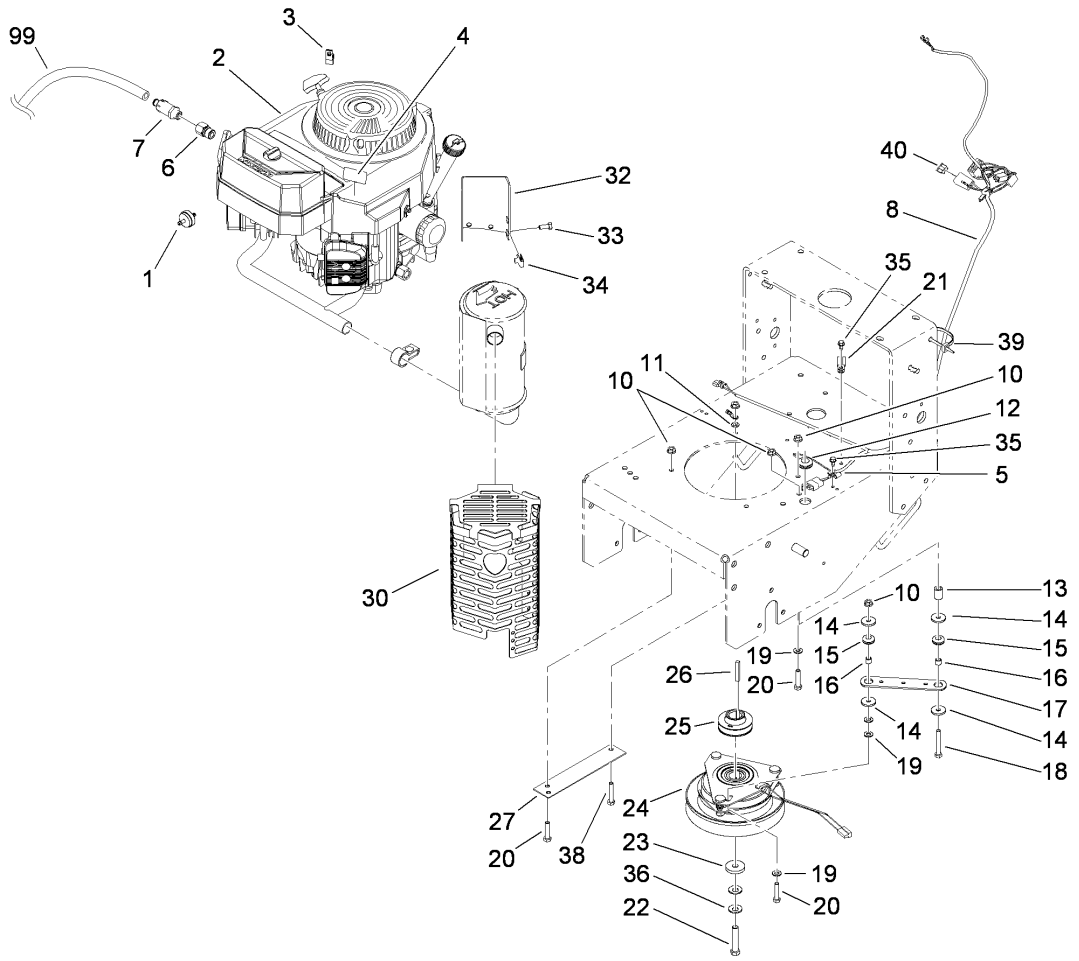

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description
1	56-6360	1	Filter-Fuel
❶❷2		1	Engine-Kawasaki, FH430V-Es28
3	2412-87	1	Clamp-Cable
4	106-0699	1	Decal-Warning
5	2412-72	1	Clip-Closed, Insulated
6	103-1966	1	Adapter
7	92-6877	1	Valve-Drain, Oil
8	104-8137	1	Harness-Wire
10	32128-20	6	Nut-HF
11	3255-8	1	Washer-Lock
12	112-7069	1	Grommet
13	104-6373	1	Tube-Retainer
14	1-613235	4	Washer
15	1-633630	2	Grommet-Brake
16	1-633545	2	Spacer
17	1-633543-03	1	Strap-Clutch, Brake
18	322-11	1	Screw-HH
19	3256-23	5	Washer-Flat
20	322-7	4	Screw-HH
21	2412-134	1	Clamp-R
22	3212-9	1	Screw-HH
23	107-4136	1	Washer
24	105-2635	1	Clutch / Brake
25	107-4112	1	Pulley-Drive

Ref	Part No.	Qty.	Description
26	608006	1	Key-Square
27	94-5847-01	1	Cover-Pulley
30	115-4150-03	1	Muffler Shield ASM
32	115-4154-03	1	Bracket-Muffler
33	322-3	4	Screw-HH
34	94-2413	4	U-Nut
35	12-3270	2	Screw
36	1-603610	2	Washer-Spring
38	322-9	1	Screw-HH
39	3290-378	1	Tie-Cable
40	114241	1	Fuse-7.5 Amp
99	103-1964	1	Hose-Drain, Oil

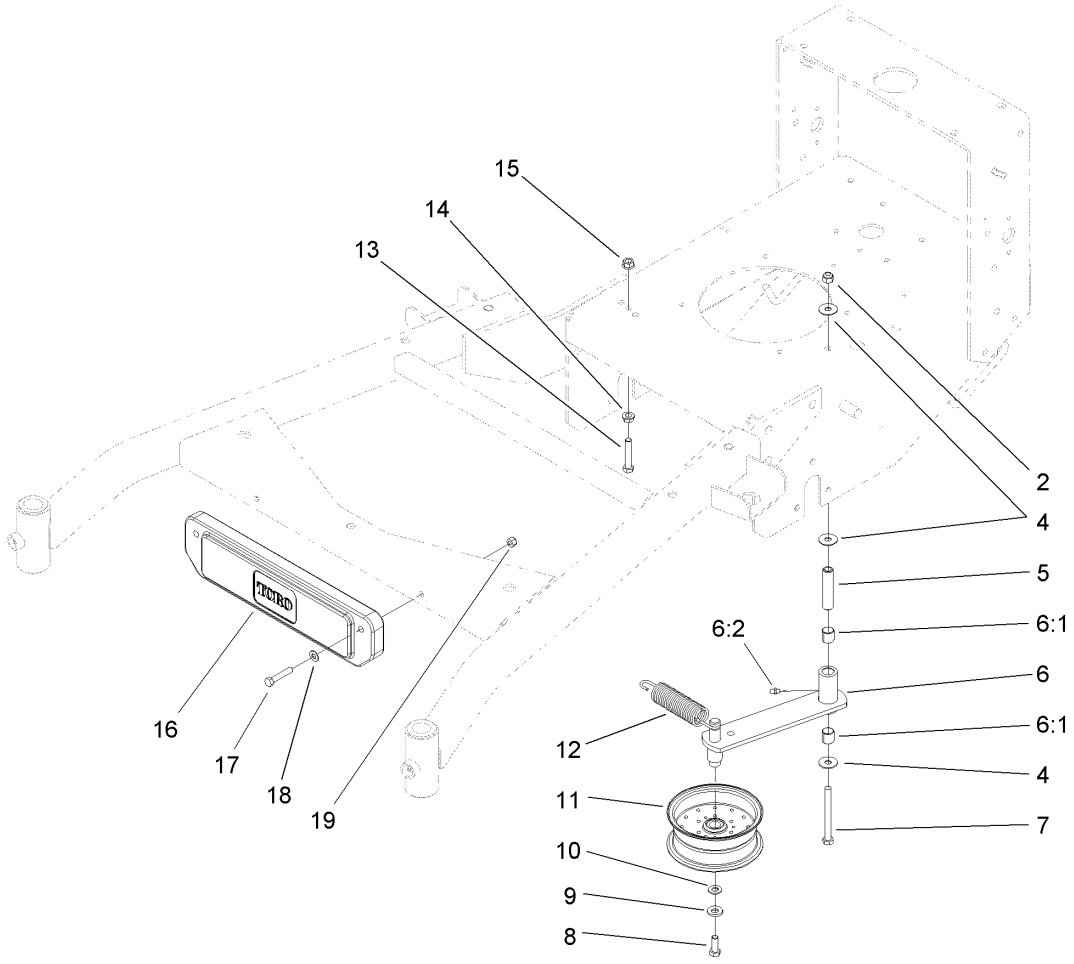


Power-Take-Off Idler and Weight Assembly

Ref	Part No.	Qty.	Description
2	3296-39	1	Nut-Lock, NI
4	52-2860	3	Washer
5	104-6377	1	Tube-Idler
6	112-7055	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension
13	323-10	1	Screw-HH
14	3290-357	1	Nut-HHF, Whiz
15	32128-21	1	Nut-HF
16	112-7059-01	1	Weight-Cast
17	322-9	2	Screw-HH
18	3256-23	2	Washer-Flat
19	3296-29	2	Nut-Lock, NI

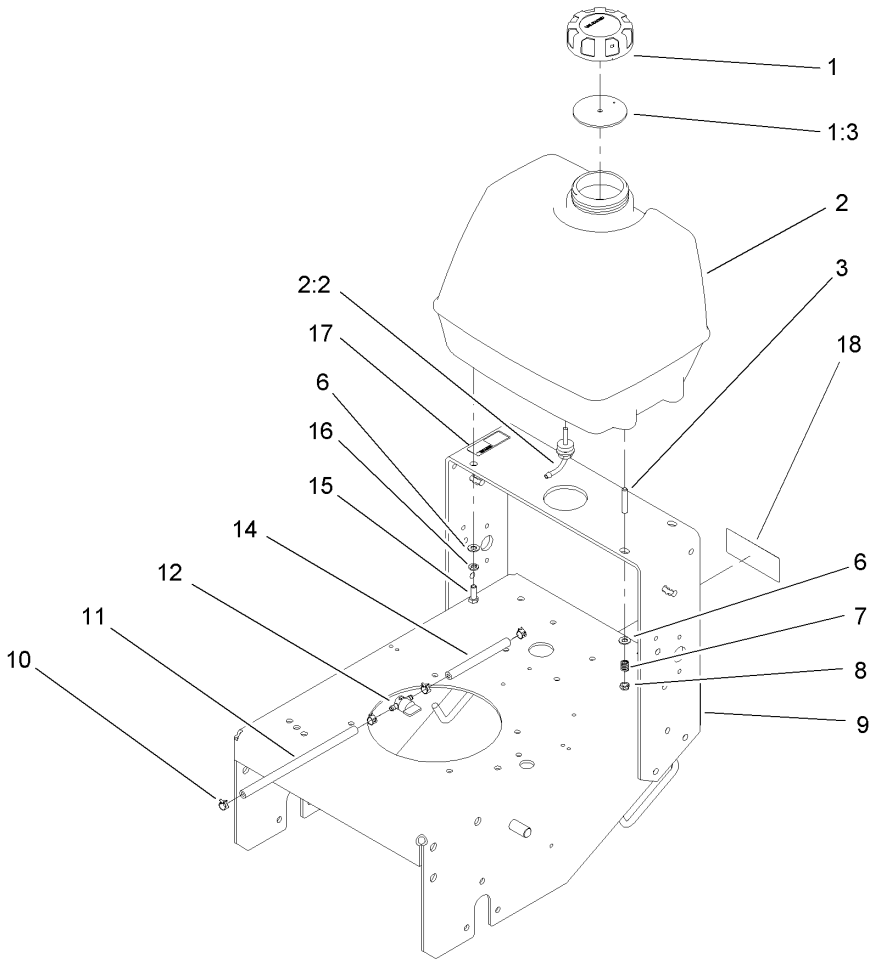


Fuel System Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	104-8121	2	Stud-Threaded
6	3256-23	4	Washer-Flat
7	1-633349	2	Spring-Tank, Fuel
8	3296-47	2	Nut-Lock, NI
9	110-4985-01	1	Gear Frame ASM
10	2412-98	4	Clamp
11	110-4894	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
14	107-0588	1	Hose-Fuel
15	322-4	2	Screw-HH
16	3253-4	2	Washer-Lock
17	95-2814	1	Decal-Shut Off, Fuel
18	98-0776	1	Decal-Caution

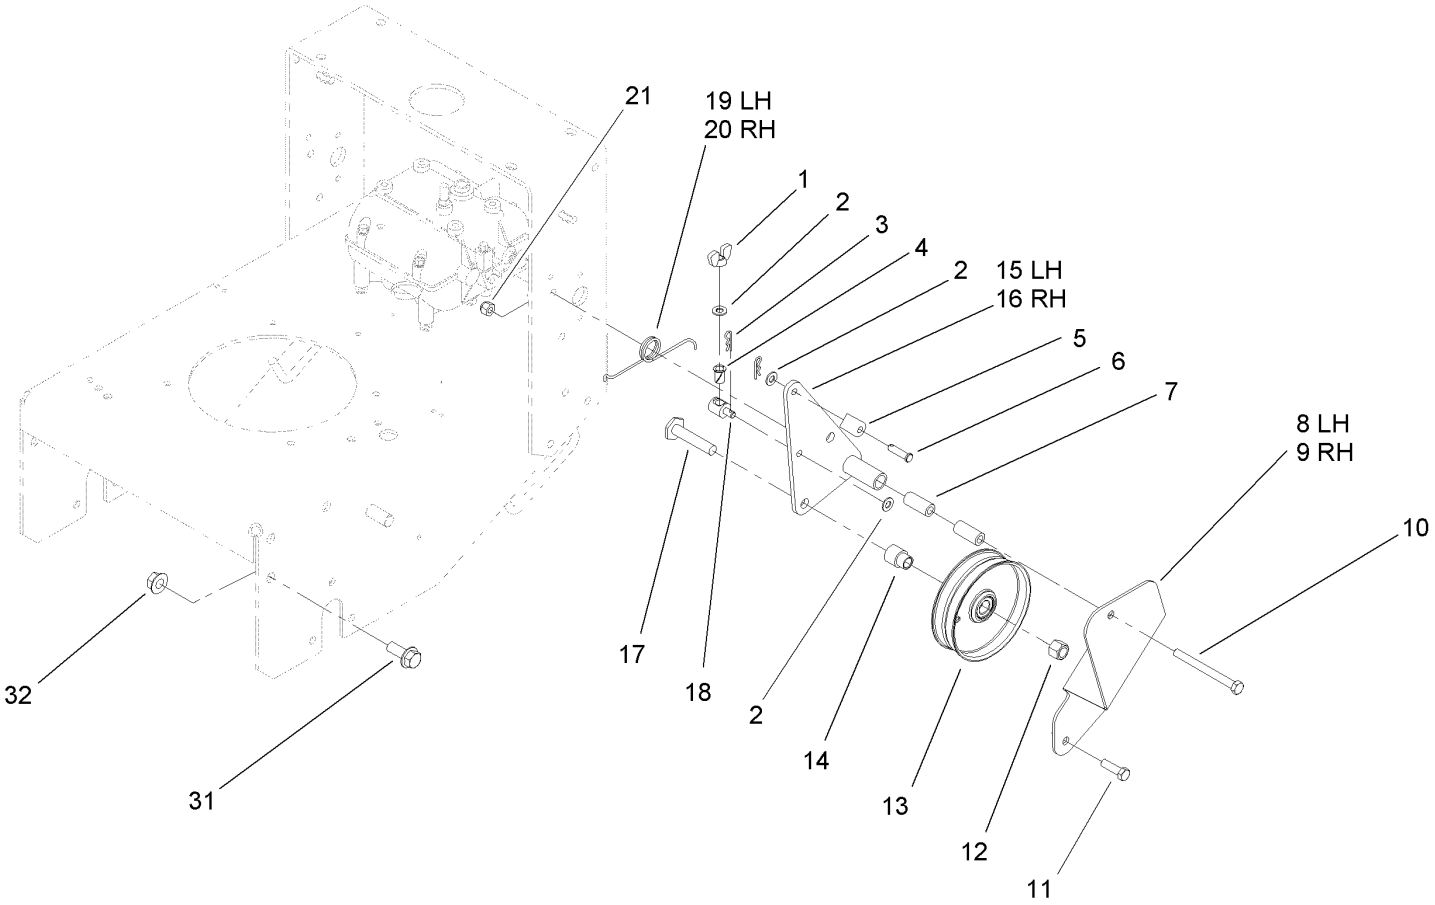

Lower Control Assembly


Ref	Part No.	Qty.	Description
1	32103-25	2	Nut-Wing
2	3256-23	6	Washer-Flat
3	3290-307	4	Pin-Hair
4	52-2890	2	Bushing-Nylon
5	74-0521	2	Fitting-Rod
6	283-6	2	Pin-Clevis
7	74-0040	4	Spacer-Pivot, Idler
8	108-2725-01	1	Support-Idler, LH
9	108-2724-01	1	Support-Idler, RH
10	323-16	2	Screw-HH
11	323-7	4	Screw-HH
12	3296-23	2	Nut-Lock, NI
13	95-2800	2	Pulley-Idler
14	95-2801	2	Spacer-Pulley
15	108-2740-01	1	LH Idler Arm ASM
16	108-2741-01	1	RH Idler Arm ASM
17	51-4450	2	Screw-Leveler
18	68-9690	2	Fitting-Rod
19	51-4380	1	Spring-Torsion, LH
20	51-4370	1	Spring-Torsion, RH
21	3296-39	6	Nut-Lock, NI
31	3234-32	6	Screw-HHF
32	32128-23	6	Nut-HF

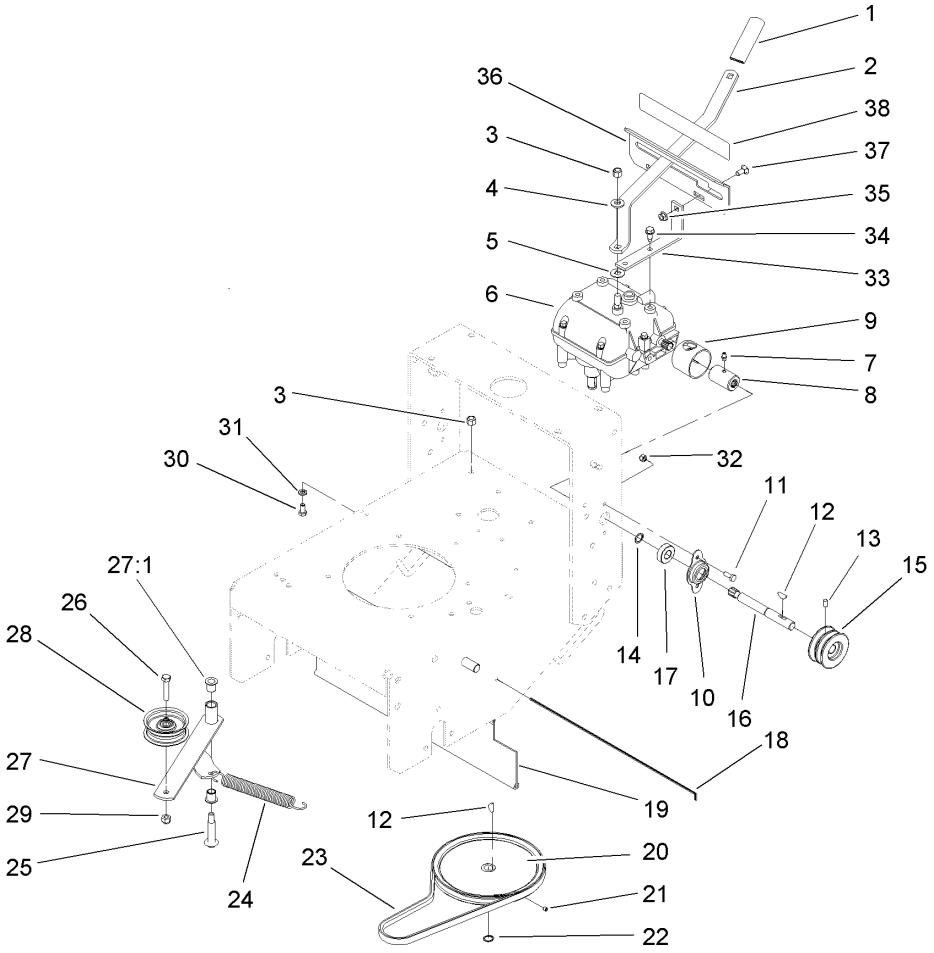

Transmission Drive Assembly

Ref	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	1-323500	1	Transmission
7	302-5	2	Fitting-Grease
8	1-323680	2	Coupler
9	51-4220	2	Guard-Coupler
10	1-323254	2	Flange-Output
11	321-4	4	Screw-HH
12	3257-5	3	Key-Woodruff
13	3245-9	2	Screw-Set
14	32151-62	2	Ring-Retaining
15	105-2698	2	Pulley-Transmission
16	104-1102	2	Shaft-Output
17	1-323252	2	Bearing-Shaft
18	95-1529	1	Rod-Shield
19	95-1526	1	Shield-Trailing
20	105-5646	1	Pulley-Driven
21	3245-1	1	Screw-Set, HSH
22	32120-64	1	Ring-Snap, External
23	105-5668	1	V-Belt
24	80-6610	1	Spring-Extension


Ref	Part No.	Qty.	Description
25	27-6230	1	Bolt-Wheel
26	323-9	1	Screw-HH
27	16-7509	1	Lever-Idler
27:1	256-155	2	Bushing-Flange
28	62-4540	1	Pulley
29	3296-39	1	Nut-Lock, NI
30	322-2	4	Screw-HH
31	3253-4	4	Washer-Lock
32	3296-42	4	Nut-Lock, NI
33	1-323389-03	2	Bracket-Plate, Shift
34	9264964	4	Screw-HWH, Thread Cut
35	32128-20	2	Nut-HF
36	1-323387-03	1	Plate-Shift
37	3230-1	2	Bolt-CARR
38	98-3256	1	Decal-Speed, Ground

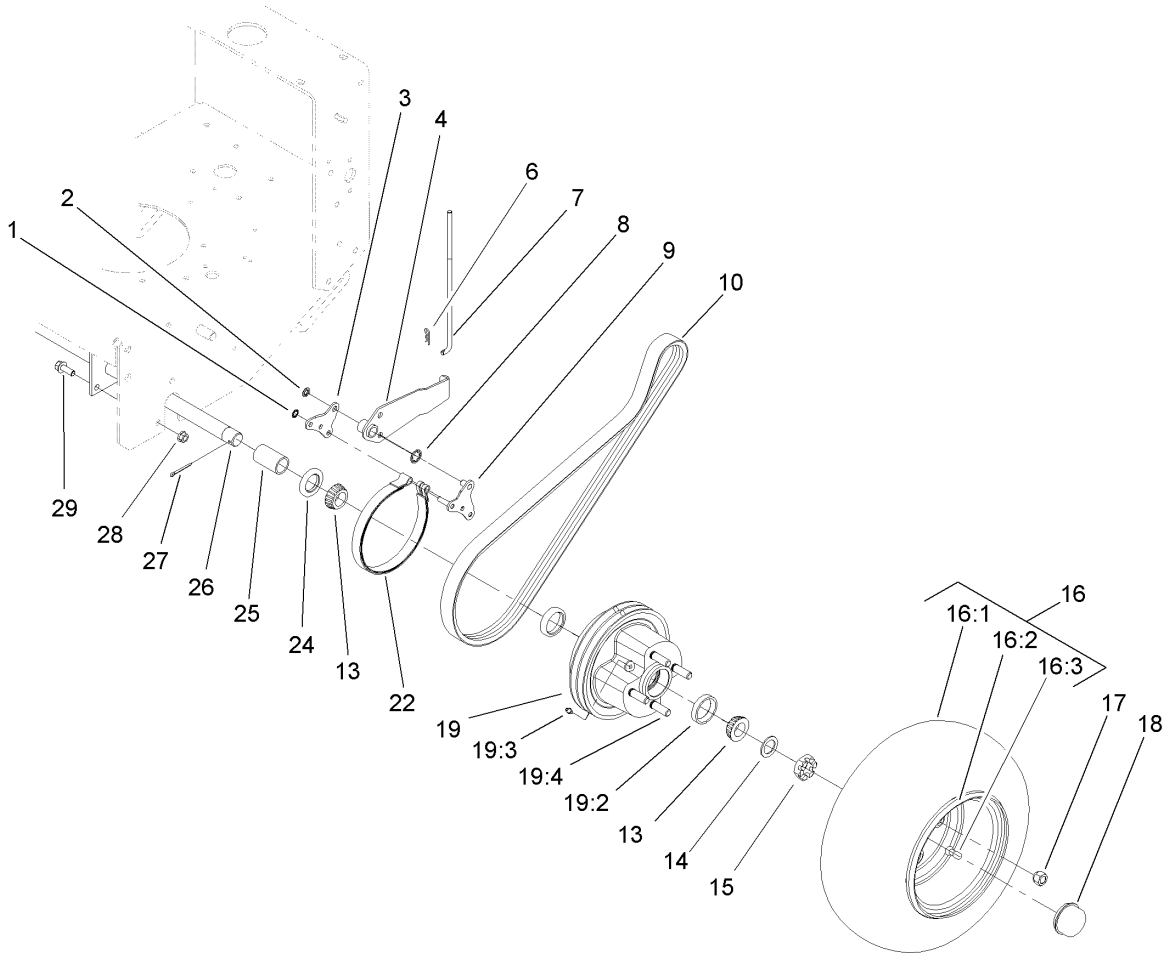

Wheel Drive and Brake Assembly


Ref	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining
2	32151-56	2	Ring-Retaining, External
3	106-8792	2	Plate-Link, Brake
4	110-5010-01	2	Brake Arm ASM
6	3290-307	2	Pin-Hair
7	108-2730	2	Rod-Brake
8	32151-40	2	Ring-Retaining
9	106-8773	2	Brake Link ASM
10	110-5004	2	Belt-V, Banded
13	1-543509	4	Bearing-Roller, Tapered
14	1-523157	2	Washer-Spacer
15	1-809082	2	Nut-SHH
16	106-0892	2	Wheel And Tire ASM
16:1	104-6322	1	Tire
16:2	106-0893	1	Wheel
16:3	232-27	1	Stem-Valve
17	242-50	8	Nut-Lug
18	241-119	2	Cap-Dust
19	107-4090	2	Wheel Hub ASM
19:2	1-543508	2	Cup-Bearing
19:3	302-5	1	Fitting-Grease
19:4	10-6830	4	Stud-Type, Drive
22	1-323262	2	Band-Brake
24	1-543511	2	Seal-Grease

Ref	Part No.	Qty.	Description
25	110-5006	2	Spacer-Wheel
26	110-4983-01	1	Axle ASM
27	1-806800	2	Pin-Cotter
28	32128-21	6	Nut-HF
29	3234-11	6	Screw-HHF

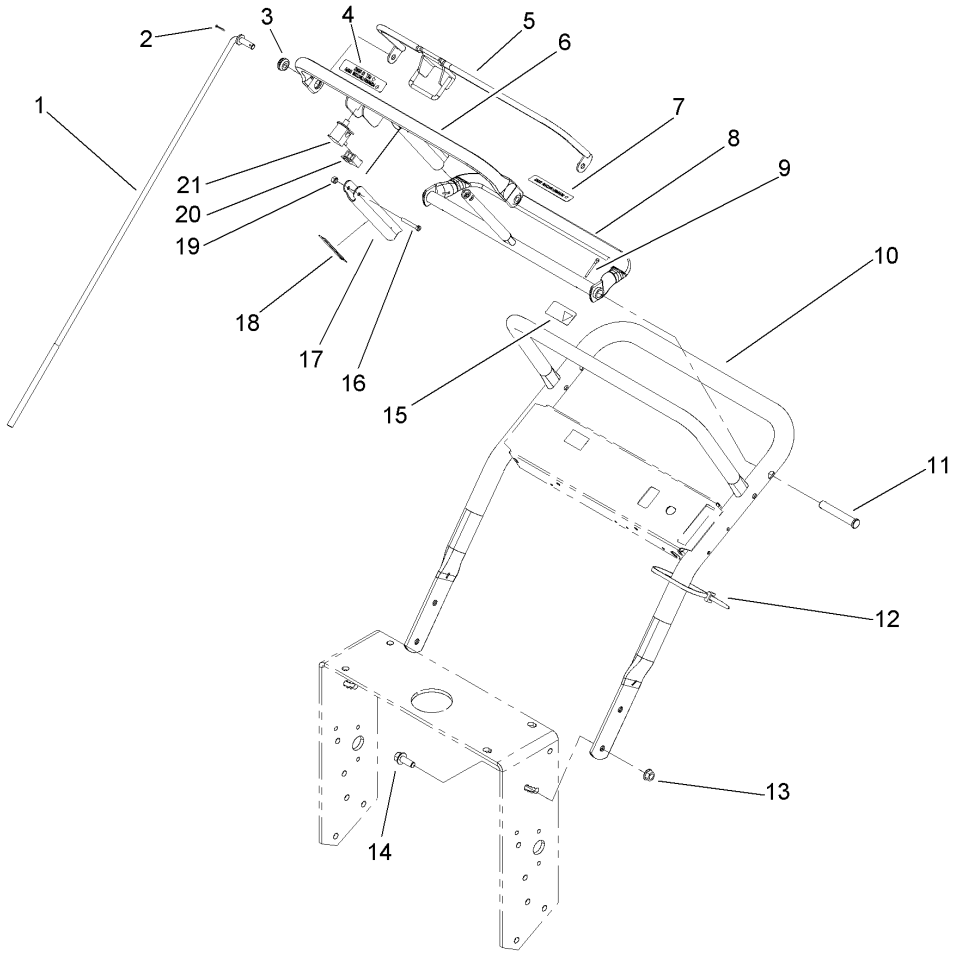


Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	105-4677	2	Rod-Control
2	3272-4	2	Pin-Cotter
3	237-141	2	Grommet-Rubber
4	82-2290	1	Decal
5	82-7680-03	1	Bail ASM
6	82-7690-03	1	Bar-Control
7	82-2280	1	Decal
8	106-5477-03	1	Control Pivot ASM
9	3272-11	2	Pin-Cotter
10	105-3158-03	1	Upper Handle ASM
11	283-55	2	Pin-Clevis
12	3290-378	2	Tie-Cable
13	32128-21	4	Nut-HF
14	3234-11	4	Screw-HHF
15	98-4387	1	Decal-Protection, Ear
16	32105-1	1	Screw-SHH
17	51-4850-03	1	Lever-Brake, Parking
18	52-2010	1	Decal-Lever, Parking
19	3296-2	1	Nut-Lock, NI
20	218-595	1	Connector-Body
21	82-2190	1	Switch-Bail

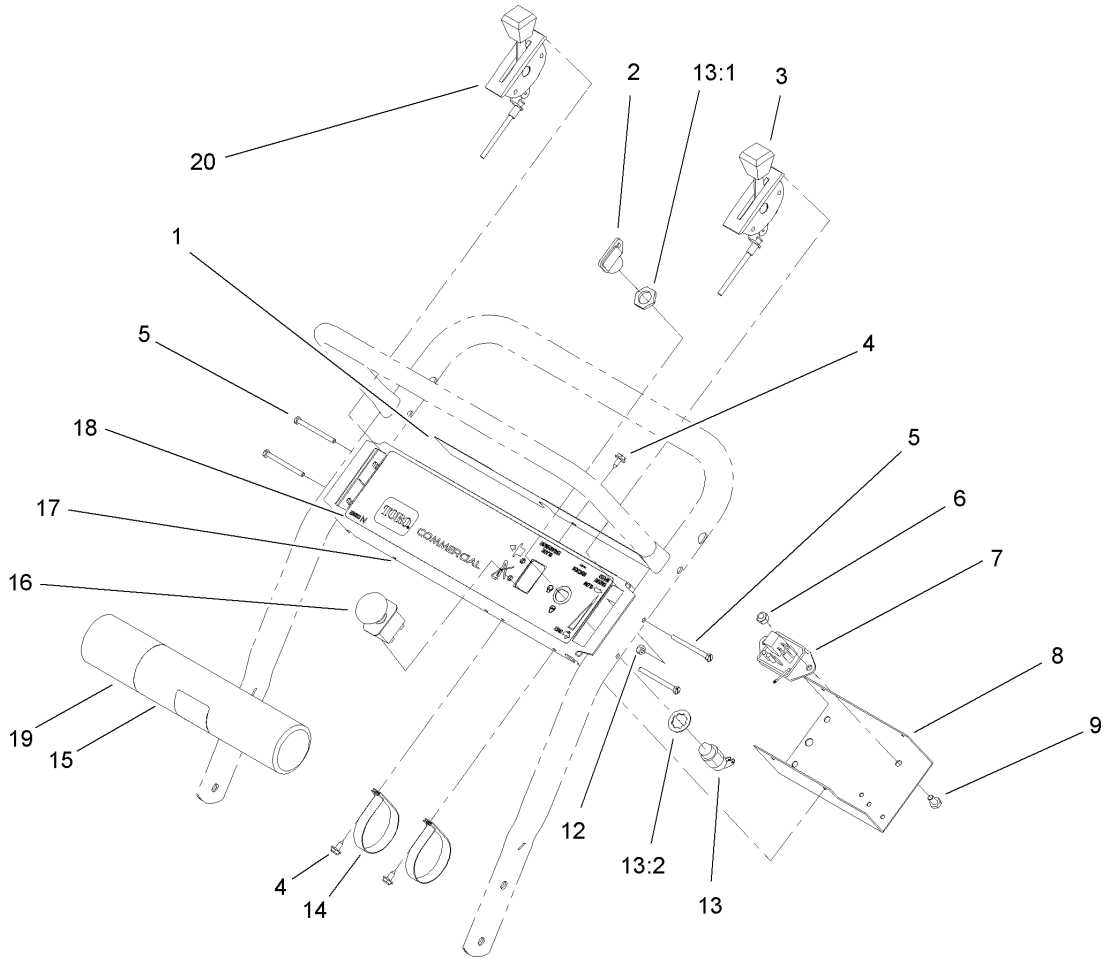

Control Panel Assembly


Ref	Part No.	Qty.	Description
1	105-0884	1	Decal-Danger
2	63-8360	1	Key-Ignition
3	110-4994	1	Cable-Throttle
4	32104-76	4	Screw
5	32105-14	4	Screw-SHH
6	3296-42	1	Nut-Lock, NI
7	104-8141	1	Module-Delay
8	93-1187-03	1	Panel-Bottom
9	321-2	1	Screw-HH
12	3296-2	4	Nut-Lock, NI
13	29-5560	1	Switch-On / Off
13:1	218-461	1	Nut-HH
13:2	3254-5	1	Washer-Tooth
14	2412-120	2	R-Clamp
15	104-7050	1	Tube-Manual
16	104-8140	1	Switch-PTO
17	110-4982-03	1	Panel-Control
18	110-4971	1	Decal-Control Panel
19	104-7048	1	Cap-Housing
20	110-4995	1	Cable-Choke

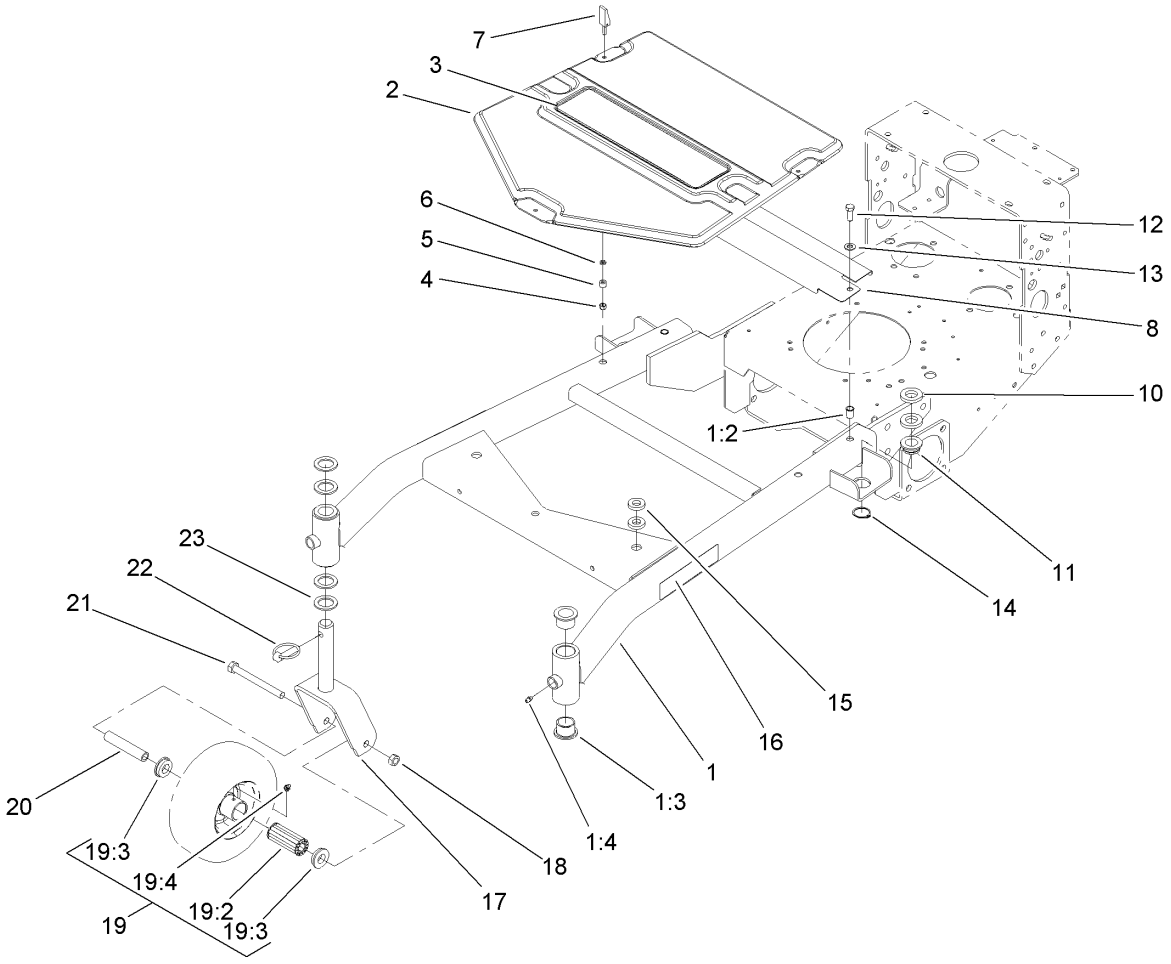

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	110-6965	1	Carrier Frame ASM
1:2	32148-9	2	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	110-6985	1	Cover-Frame, Carrier
3	112-9711	1	Decal
4	1-804254	3	Nut
5	106-6778	3	Bushing-Latch, Swell
6	99-3058	3	Washer
7	106-6777	3	Handle-Latch, Swell
8	110-6971-01	1	Shield-Belt
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	323-6	2	Screw-HH
13	3256-24	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	1-323539	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock, Side
19	110-5024	2	Wheel And Tire ASM
19:2	112-7066	1	Bearing-Roller
19:3	1-513810	2	Bushing
19:4	302-61	1	Zerk


Ref	Part No.	Qty.	Description
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust

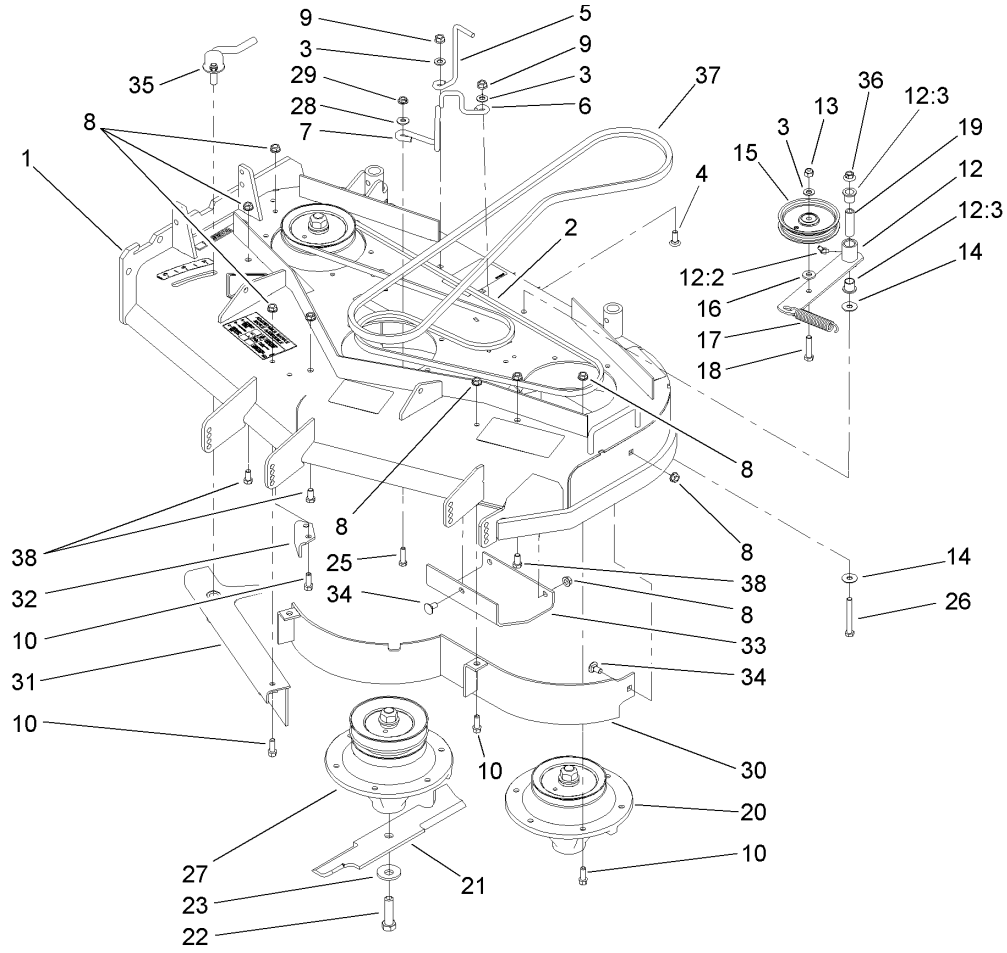

Deck Drive and Baffle Assembly


Ref	Part No.	Qty.	Description
1	112-7081	1	Deck ASM
2	110-6972	1	Belt-V
3	3256-24	3	Washer-Flat
4	3231-22	2	Screw-CARR
5	98-5980	1	Guide-Belt
6	110-6975	1	Guide-Belt
7	105-0850	1	Guide-Belt
8	3290-357	29	Nut-HHF, Whiz
9	32128-21	2	Nut-HF
10	92-1624	22	Screw-HWH
12	108-2728	1	Idler Arm ASM
12:2	302-11	1	Fitting-Lube, 45 DEG
12:3	256-90	2	Bushing-Flange
13	3296-39	1	Nut-Lock, NI
14	52-2860	2	Washer
15	93-1622	1	Pulley-Idler
16	9202414	1	Washer-Spacer
17	51-3650	1	Spring-Extension
18	323-9	1	Screw-HH
19	112-7091	1	Spacer
20	110-0728	2	Spindle ASM
21	108-4081-03	3	Blade-14 Inch (High Sail)
22	51-4060	3	Screw-Blade
23	103-0865	3	Washer-Blade Bolt, Heavy

Ref	Part No.	Qty.	Description
25	322-6	1	Screw-HH
26	323-14	1	Screw-HH
27	110-6927	1	Spindle ASM
28	3256-3	1	Washer-Flat
29	32128-13	1	Nut-HF
30	110-6910-03	1	Baffle ASM
31	110-6940-03	1	Adjust Baffle ASM
32	108-7273-01	1	Baffle-Discharge
33	108-7282-01	1	Plate-Skid
34	3231-1	4	Screw-CARR
35	107-1664	1	Lever ASM
36	32128-19	1	Nut-HF
37	110-6973	1	Belt-V
38	323-4	3	Screw-HH

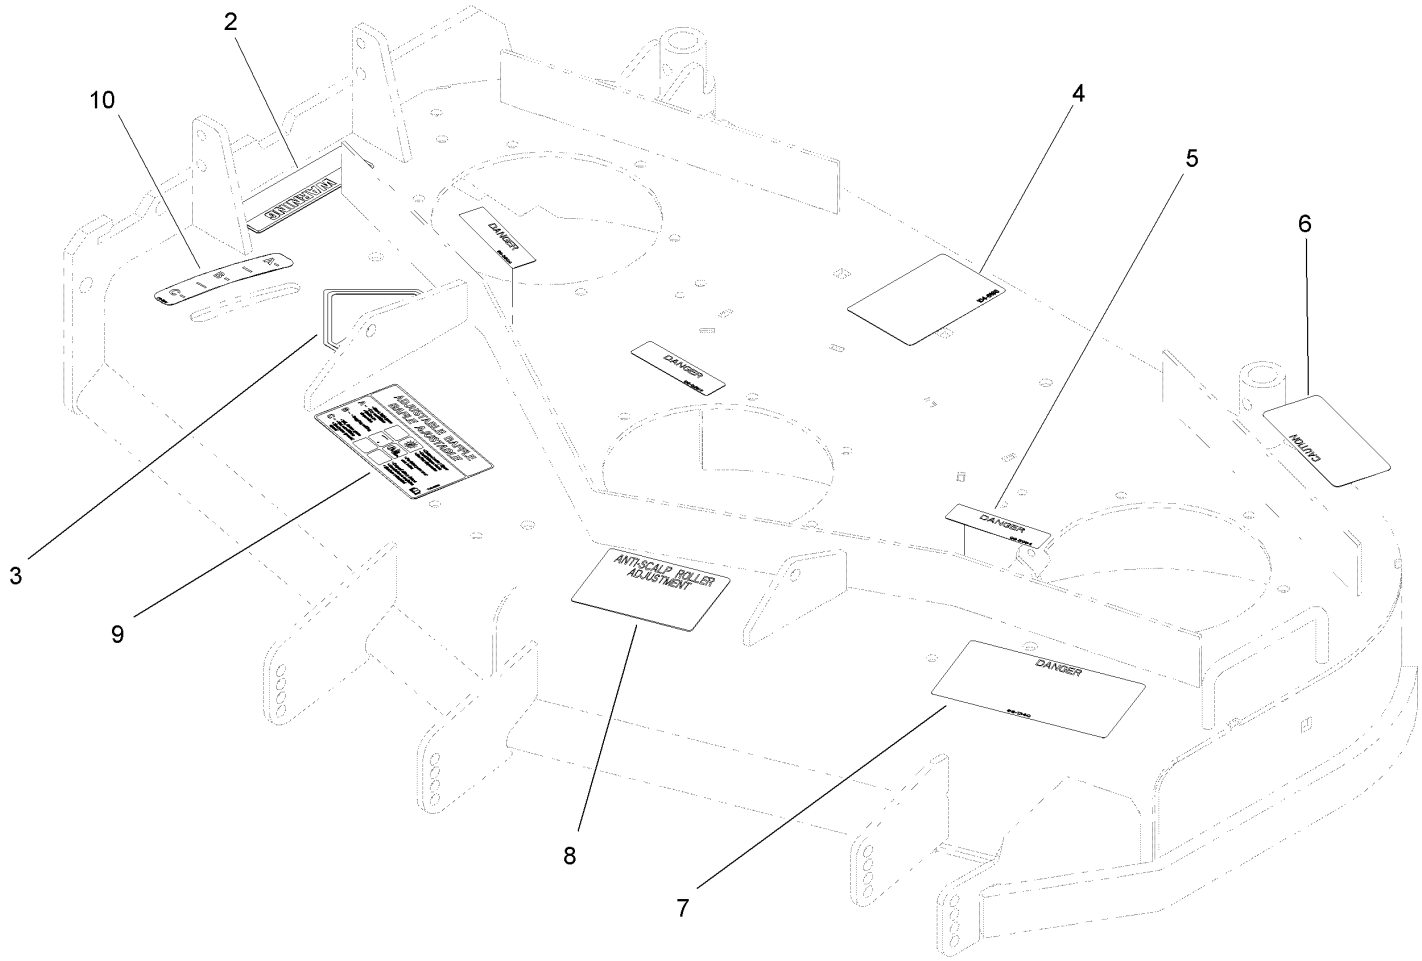


Deck Assembly No. 112-7081

Ref	Part No.	Qty.	Description
2	104-8569	1	Decal-Warning
3	43-8480	1	Decal-Danger
4	104-8186	1	Decal-Routing, Belt
5	98-5954	3	Decal-Cover, Missing
6	68-8340	1	Decal-Torque
7	66-1340	1	Decal-Danger, Thrown Object
8	105-7798	1	Decal-Scalp, Anti
9	110-2068	1	Decal-Adjustment, Baffle
10	110-2067	1	Decal-Setting, Baffle

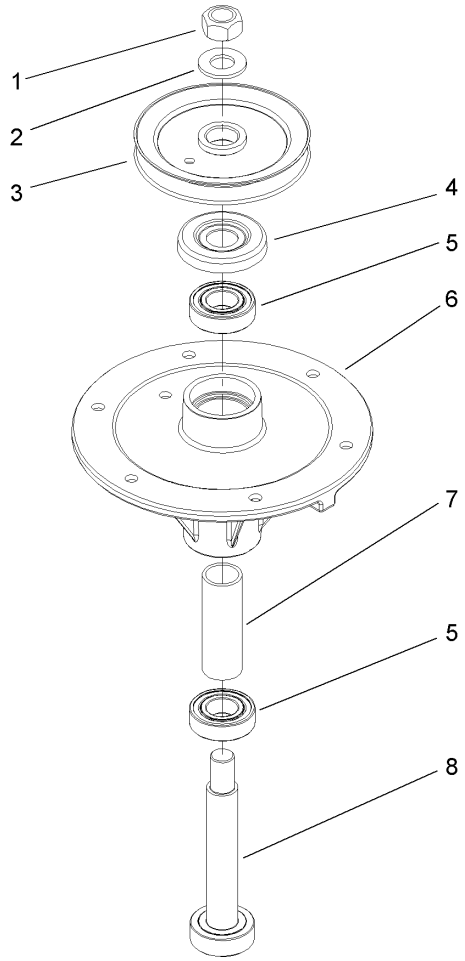


Spindle Assembly No. 110-0728

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1181	1	Pulley ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing-Ball
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0726	1	Shaft-Spindle

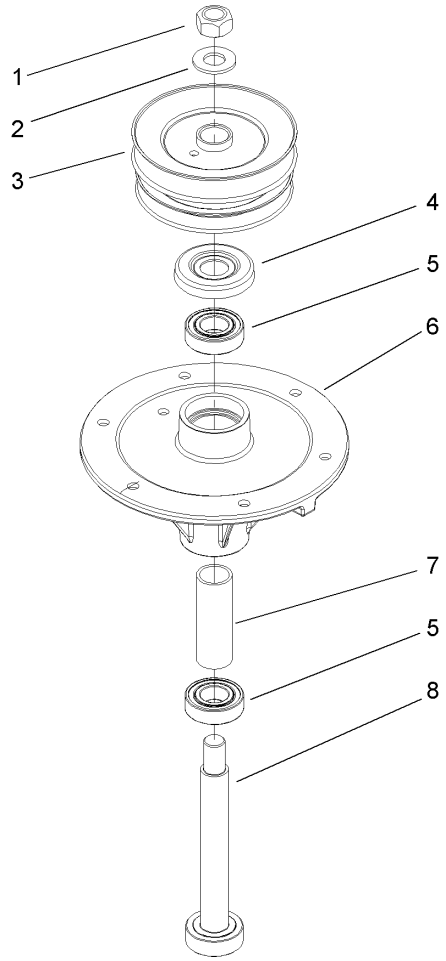


Spindle Assembly No. 110-6927

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	110-6928	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing-Ball
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0725	1	Shaft-Spindle

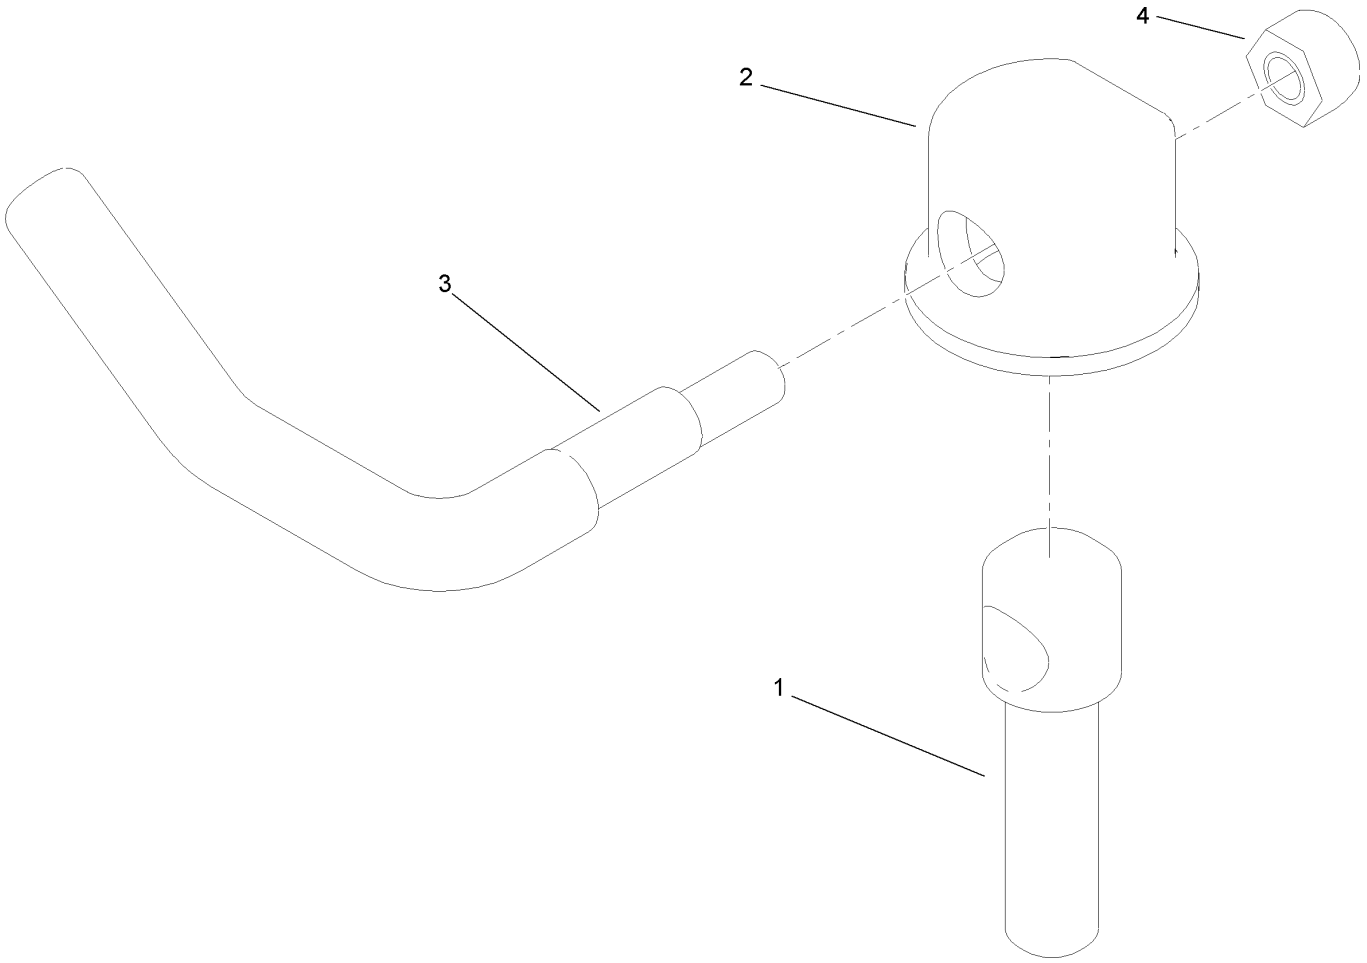

Lever Assembly No. 107-1664


Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

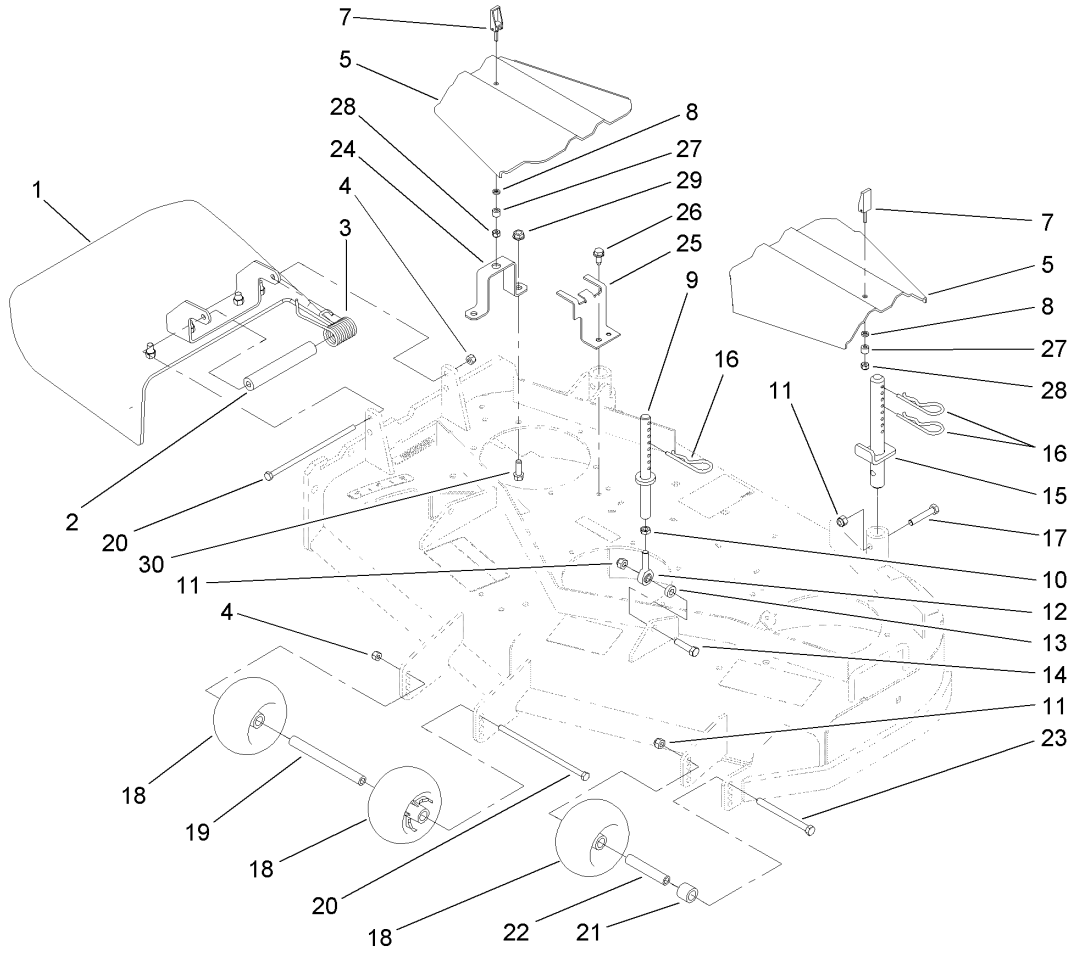

Deck Assembly


Ref	Part No.	Qty.	Description
1	110-0790	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	2	Nut-Lock, NI
5	110-6984	2	Cover-Belt
7	106-6777	2	Handle-Latch, Swell
8	99-3058	2	Washer
9	108-2674	2	Front Pin ASM
10	3220-3	2	Nut-HJ
11	3296-39	5	Nut-Lock, NI
12	1-613204	2	Balljoint
13	104-1156	2	Spacer
14	323-8	2	Screw-HH
15	110-2086	2	Rear Pin ASM
16	3290-256	6	Pin-Hair
17	323-10	2	Screw-HH
18	1-603299	3	Roller-Scalp, Anti
19	98-5967	1	Spacer-Wheel
20	322-50	2	Screw-HH
21	98-7913	1	Tube-Spacer
22	98-7912	1	Tube-Spanner
23	323-23	1	Screw-HH
24	112-7053-01	2	Bracket-Cover
25	112-7054-01	2	Bracket-Cover

Ref	Part No.	Qty.	Description
26	32144-70	2	Screw-HWHTF
27	106-6778	2	Bushing-Latch, Swell
28	1-804254	2	Nut
29	3290-357	4	Nut-HHF, Whiz
30	92-1624	4	Screw-HWH

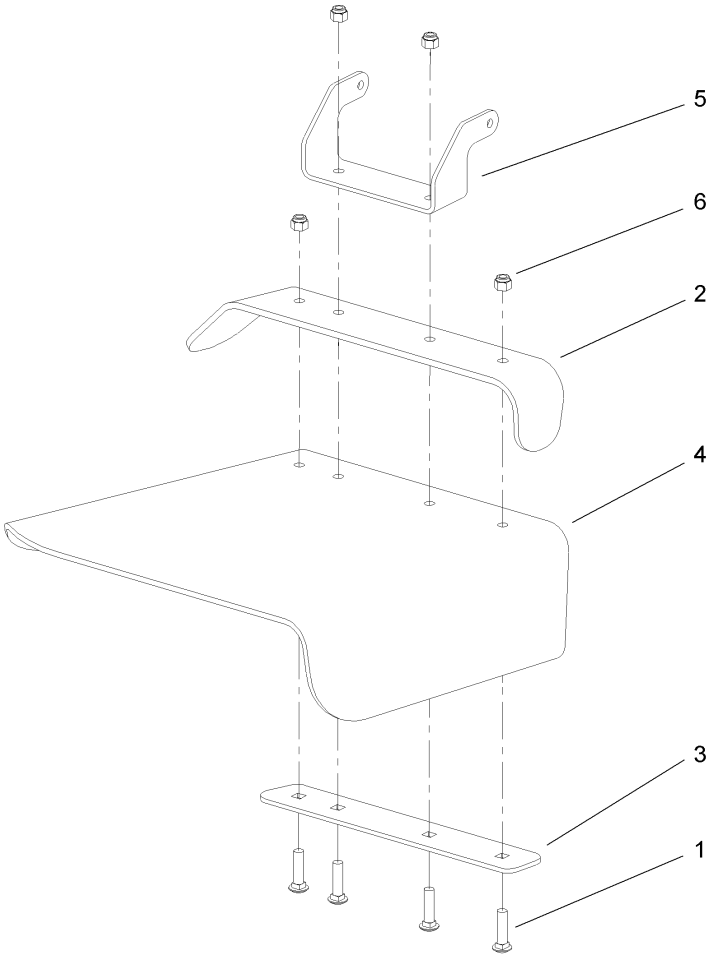


Deflector Assembly No. 110-0790

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI

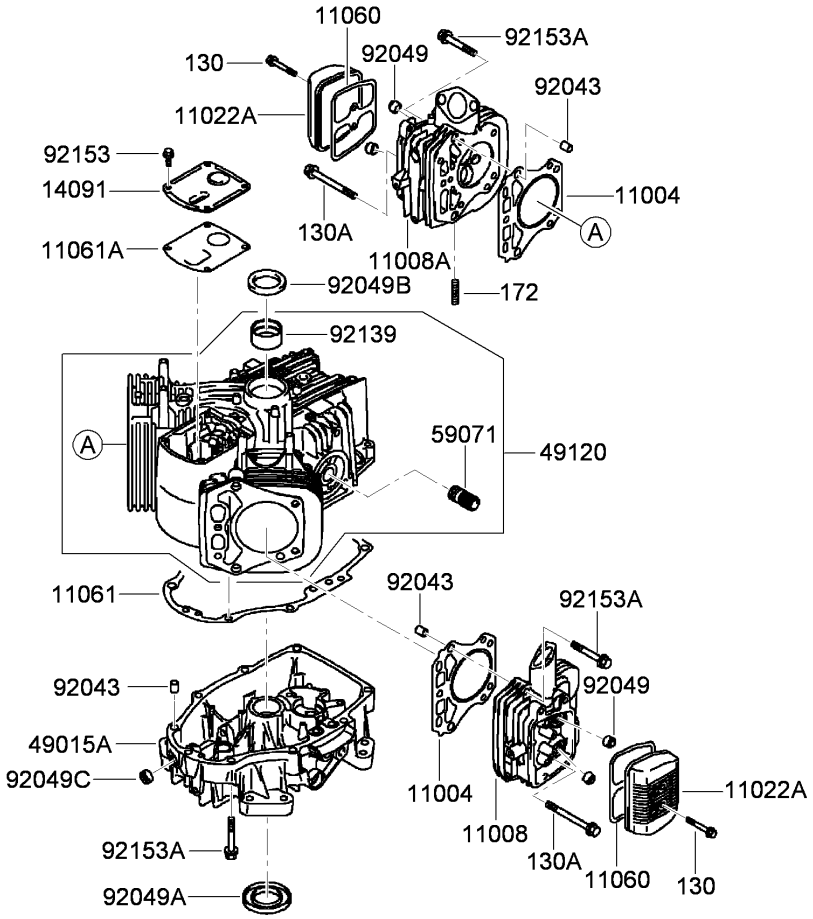


Cylinder and Crankcase Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷130	130AA0640	4	Bolt-Flanged (6X40)
❷130A	130CA0875	2	Bolt-Flanged (8X75)
❷172	172BA0818	4	Bolt-Stud (8X18)
❷11004	11004-7018	2	Gasket-Head
❷11008	11008-7021	1	Head-Cylinder, No. 2
❷11008A	11008-7022	1	Head-Cylinder, No. 1
❷11022A	11022-7018	2	Case-Rocker
❷11060	11060-7001	2	Gasket-Case, Rocker
❷11061	11061-7007	1	Gasket-Cover, Crankcase
❷11061A	11061-7008	1	Gasket-Breather
❷14091	14091-7007	1	Cover
❷49015A	49015-7080	1	Cover-Crankcase
❷49120	49120-7015	1	Crankcase
❷59071	59071-2079	1	Joint
❷92043	92043-7001	6	Pin
❷92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❷92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❷92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❷92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❷92139	92139-7008	1	Bushing
❷92153	92153-7043	4	Bolt (6X12)
❷92153A	92153-7054	17	Bolt (8X50)

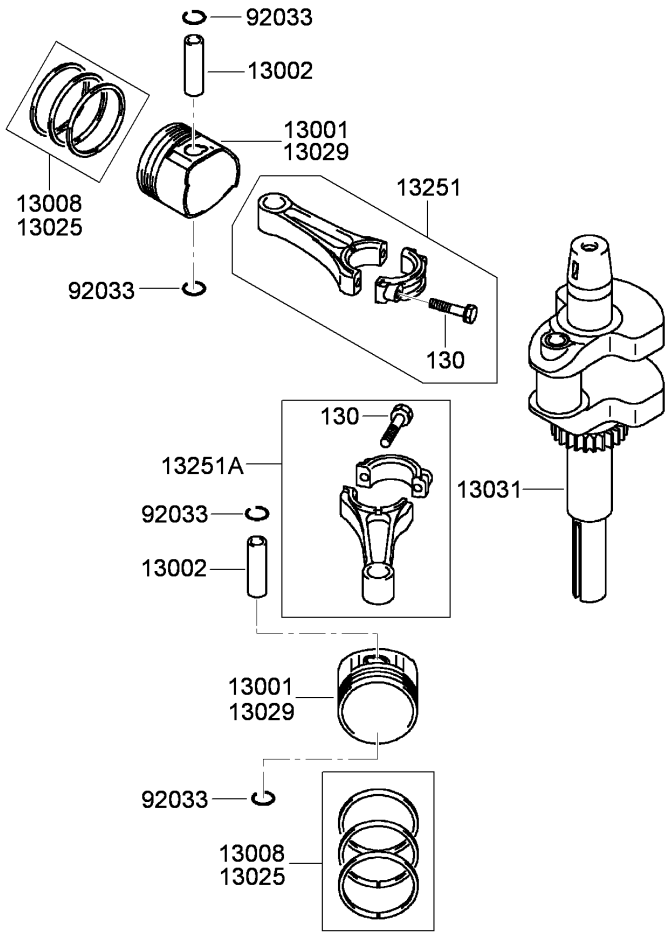


Piston and Crankshaft Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷130	130BA0630	4	Bolt-Flanged (6X30)
❷13001	13001-7022	2	Piston-Engine
❷13002	13002-7001	2	Pin-Piston
❷13008	13008-7001	2	Piston Ring Set
❷13025	13025-7003	1	Piston Ring Set (L 0.50)
❷13029	13029-7005	1	Piston-Engine (L 0.50)
❷13031	13031-7033	1	Crankshaft
❷13251	13251-7007	2	Connecting Rod ASM
❷13251A	13251-7008	2	Connecting Rod ASM (0.50)
❷92033	92033-7002	4	Ring-Snap

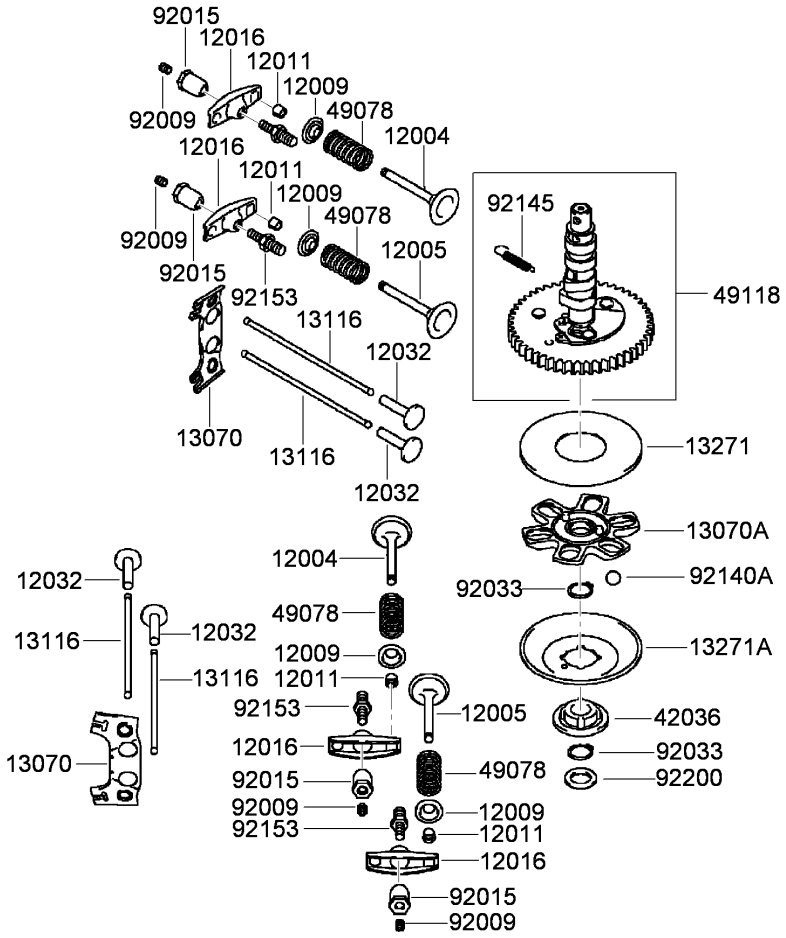


Valve and Camshaft Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷12004	12004-7005	2	Valve-Intake
❷12005	12005-7006	2	Valve-Exhaust
❷12009	12009-7001	4	Retainer-Spring, Valve
❷12011	12011-2056	8	Collet
❷12016	12016-7008	4	Arm-Rocker
❷12032	12032-7001	4	Tappet
❷13070	13070-7001	2	Guide
❷13070A	13070-7004	1	Guide
❷13116	13116-2057	4	Rod-Push
❷13271	13271-7007	1	Plate
❷13271A	13271-7021	1	Plate-Governor
❷42036	42036-7010	1	Sleeve
❷49078	49078-7001	4	Spring-Valve, Engine
❷49118	49118-7009	1	Camshaft
❷92009	92009-2341	4	Screw
❷92015	92015-2253	4	Nut
❷92033	92033-7001	2	Ring-Snap
❷92140A	92140-7005	6	Ball
❷92145	92145-7001	1	Spring
❷92153	92153-7019	4	Bolt
❷92200	92200-7001	1	Washer

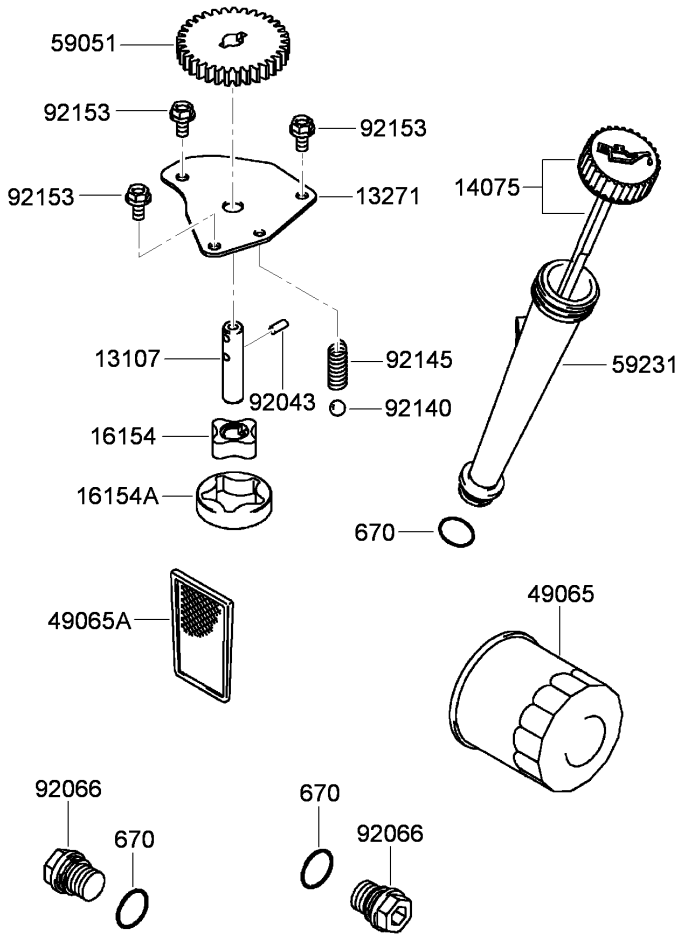


Lubrication Equipment Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷670	670D2016	3	O-Ring (16Mm)
❷13107	13107-7009	1	Shaft
❷13271	13271-7017	1	Plate
❷14075	14075-7009	1	Cap ASM
❷16154	16154-2053	1	Rotor-Pump (In)
❷16154A	16154-2054	1	Rotor-Pump (Out)
❷49065	49065-2078	1	Filter-Oil
❷49065A	49065-7004	1	Filter-Oil
❷59051	59051-7011	1	Gear-Spur
❷59231	59231-7003	1	Filler
❷92043	92043-7003	2	Pin
❷92066	92066-7003	2	Plug
❷92140	92140-7003	1	Ball
❷92145	92145-7002	1	Spring
❷92153	92153-7043	3	Bolt (6X12)

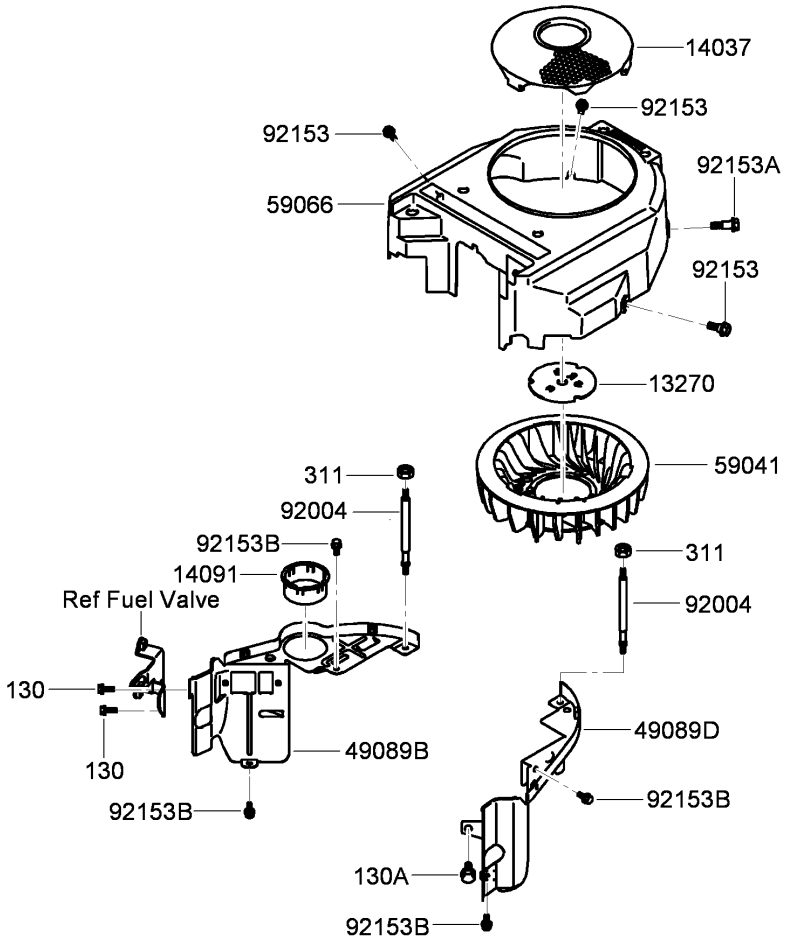


Cooling Equipment Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷130	130AA0616	2	Bolt-Flanged (6X16)
❷130A	130AA0816	1	Bolt-Flanged (8X16)
❷311	311AB0600	2	Nut-Hex (6Mm)
❷13270	13270-7007	1	Plate
❷14037	14037-7025-9H	1	Screen
❷14091	14091-7009	1	Cover
❷49089B	49089-7071	1	Shroud-Engine
❷49089D	49089-7072	1	Shroud-Engine
❷59041	59041-7012	1	Fan
❷59066	59066-7036	1	Housing-Fan
❷92004	92004-7007	2	Stud
❷92153	92153-7007	3	Bolt
❷92153A	92153-7008	1	Bolt
❷92153B	92153-7043	4	Bolt (6X12)

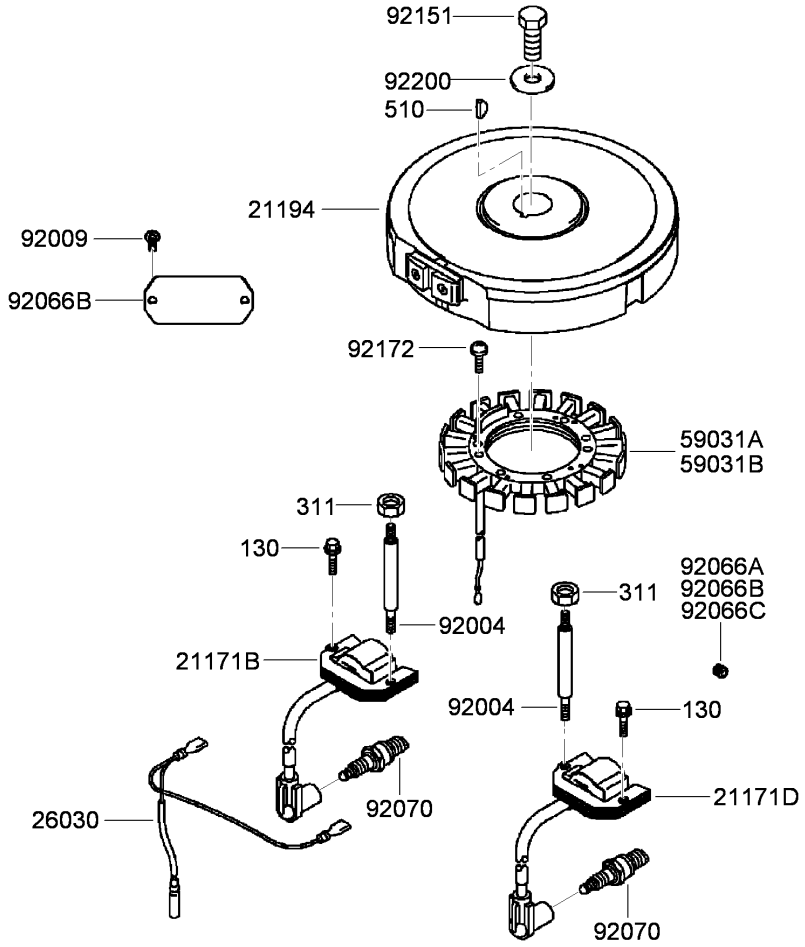


Electric Equipment Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷130	130AA0620	2	Bolt-Flanged (6X20)
❷311	311F0600	2	Nut-Hex (6Mm)
❷510	510A5100	1	Key-Woodruff
❷21171B	21171-7034	1	Ignition Coil ASM
❷21171D	21171-7035	1	Coil-Assy-Ignition
❷21194	21194-7012	1	Flywheel
❷26030	26030-7001	1	Harness
❷59031A	59031-7002	1	Coil-Charging (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)
❷59031B	59031-7011	1	Coil-Charging
❷92004	92004-7008	2	Stud
❷92009	92009-2308	2	Screw
❷92066A	92066-7002	1	Plug (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)
❷92066B	92066-7005	1	Plug
❷92066C	92066-7026	1	Plug
❷92070	92070-7003	2	Spark Plug (R C J 8 Y, Solid)
❷92151	92151-2097	1	Bolt (12X30)
❷92172	92172-7018	4	Screw (5X20)
❷92200	92200-7002	1	Washer

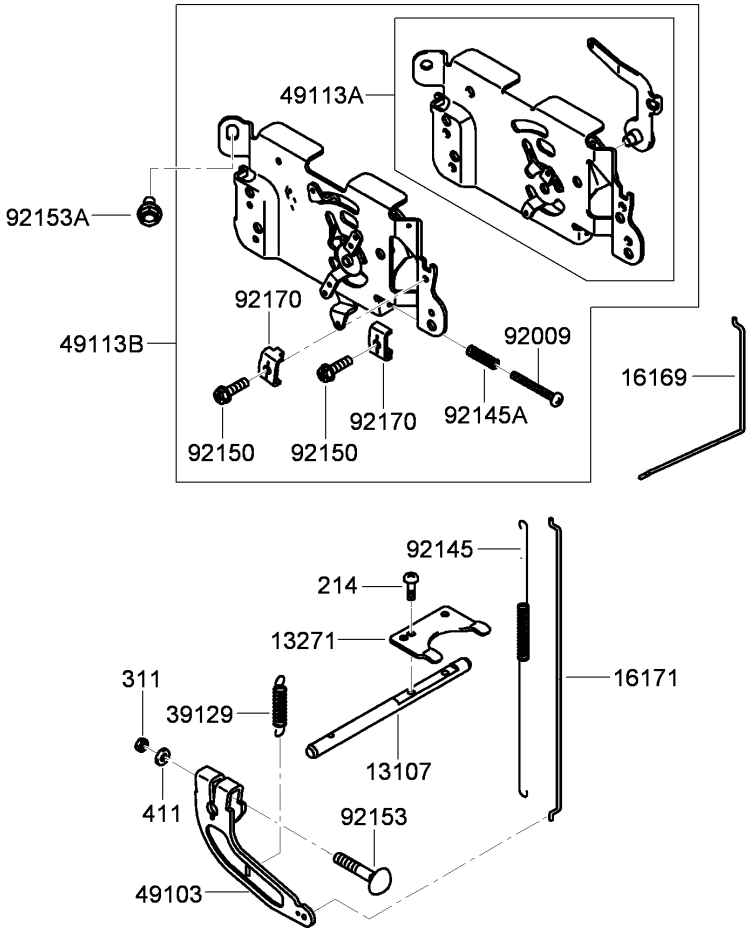

Control Equipment Assembly
Kawasaki FH430V-ES28


Ref	Part No.	Qty.	Description
❷214	214AA0408	2	Screw-Pan +-(4X8)
❷311	311AA0600	1	Nut-Hex (6Mm)
❷411	411AA0600	1	Washer-Plain (6Mm)
❷13107	13107-7010	1	Shaft
❷13271	13271-7032	1	Plate
❷16169	16169-7012	1	Link-Choke
❷16171	16171-7007	1	Link
❷39129	39129-7003	1	Spring-Governor
❷49103	49103-7004	1	Arm-Governor
❷49113A	49113-7024	1	Panel-Control (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)
❷49113B	49113-7054	1	Control Panel ASM
❷92009	92009-7007	1	Screw (4X35)
❷92145	92145-7003	1	Spring
❷92145A	92145-7005	1	Spring
❷92150	92150-2182	2	Bolt (5X18)
❷92153	92153-7033	1	Bolt (6X35)
❷92153A	92153-7043	2	Bolt (6X12)
❷92170	92170-7001	2	Clamp

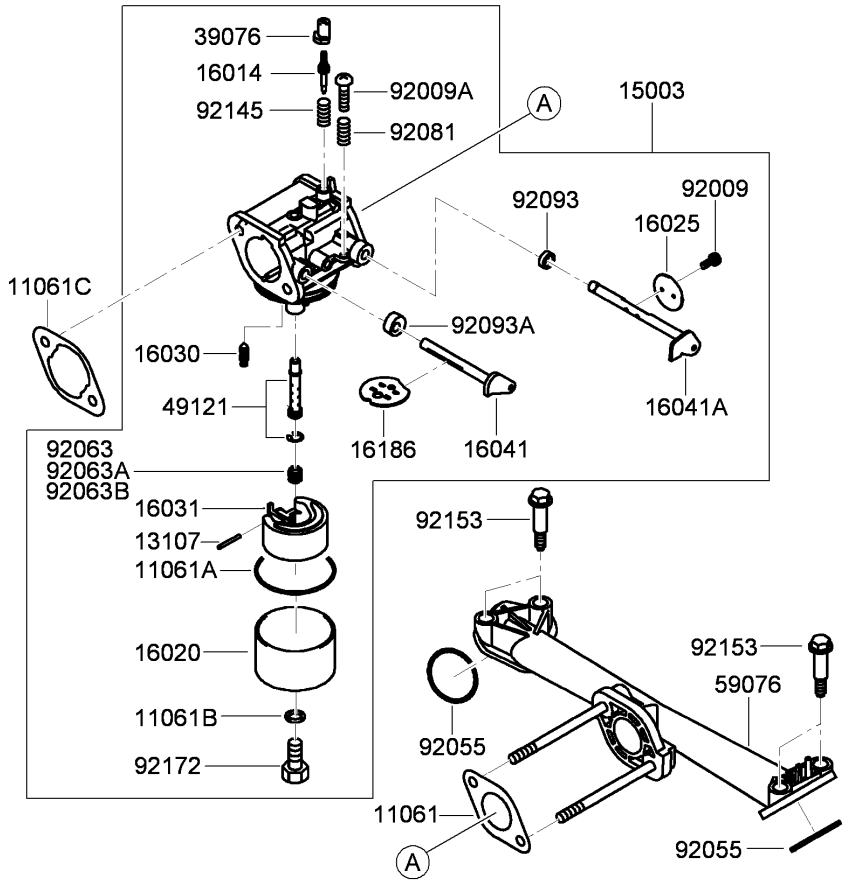

Carburetor Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷11061	11061-7004	1	Gasket-Insulator
❷11061A	11061-7009	1	Gasket-Chamber
❷11061B	11061-7010	1	Gasket-Screw
❷11061C	11061-7018	1	Gasket-Cleaner, Air
❷13107	13107-7018	1	Shaft
❷15003	15003-7061	1	Carburetor ASM
❷16014	16014-7002	1	Screw-Pilot, Air
❷16020	16020-7003	1	Chamber-Float
❷16025	16025-7006	1	Valve-Throttle
❷16030	16030-7003	1	Valve-Float
❷16031	16031-7002	1	Float
❷16041	16041-7016	1	Shaft-Choke, Carburetor
❷16041A	16041-7018	1	Shaft-Throttle, Carburetor
❷16186	16186-7002	1	Choke Valve ASM
❷39076	39076-7001	1	Limiter
❷49121	49121-7001	1	Nozzle-Main
❷59076	59076-7005	1	Manifold-Intake
❷92009	92009-2083	2	Screw
❷92009A	92009-2349	1	Screw
❷92055	92055-7007	2	O-Ring (I D 31)
❷92063	92063-7026	1	Jet-Main, No. 88
❷92063A	92063-7028	1	Jet-Main, No. 85 (3280 Ft)
❷92063B	92063-7029	1	Jet-Main, No.82 (6560 Ft)
❷92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
❷92093	92093-2100	1	Seal
❷92093A	92093-7003	1	Seal
❷92145	92145-7015	1	Spring
❷92153	92153-7009	4	Bolt
❷92172	92172-7002	1	Screw

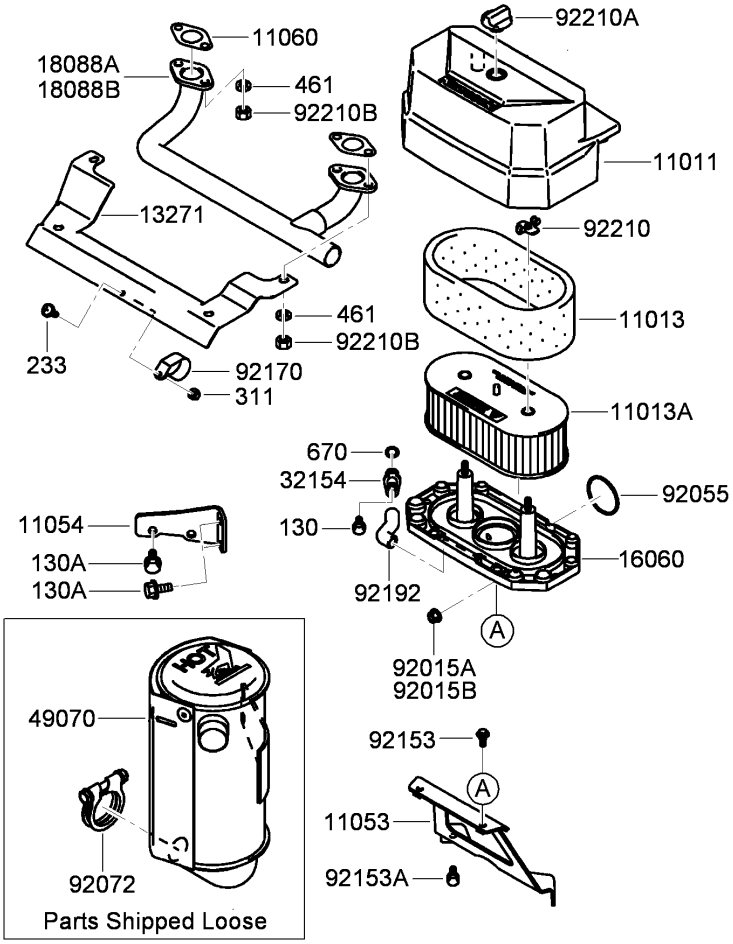

Air Filter and Muffler Assembly
Kawasaki FH430V-ES28


Ref	Part No.	Qty.	Description
❷130	130AA0610	1	Bolt-Flanged (6X10)
❷130A	130AA0816	3	Bolt-Flanged (8X16)
❷233	233AA0416	1	Screw-Pan, Wp +-(4X16)
❷311	311AA0400	1	Nut-Hex (4Mm)
❷461	461DA0800	4	Washer-Spring (8Mm)
❷670	670B2010	1	O-Ring (10Mm)
❷11011	11011-7045	1	Case-Filter, Air
❷11013	11013-7025	1	Element-Filter, Air
❷11013A	11013-7031	1	Element-Filter, Air
❷11053	11053-7022	1	Bracket
❷11054	11054-7002-9H	1	Bracket
❷11060	11060-7021	2	Gasket-Muffler
❷13271	13271-7022	1	Plate
❷16060	16060-7016	1	Pipe-Intake
❷18088A	18088-7001	1	Pipe-Exhaust (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)
❷18088B	18088-7008	1	Pipe-Exhaust
❷32154	32154-7006	1	Pipe
❷49070	49070-7021	1	Muffler
❷92015A	92015-1193	1	Nut (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)

Ref	Part No.	Qty.	Description
❷92015B	92015-1367	2	Nut
❷92055	92055-7015	1	O-Ring
❷92072	92072-7012	1	Band
❷92153	92153-7038	2	Bolt (6X10)
❷92153A	92153-7043	2	Bolt (6X12)
❷92170	92170-7002	1	Clamp
❷92192	92192-7010	1	Tube
❷92210	92210-7004	2	Nut (M6)
❷92210A	92210-7019	1	Nut
❷92210B	92210-7027	4	Nut (M8)

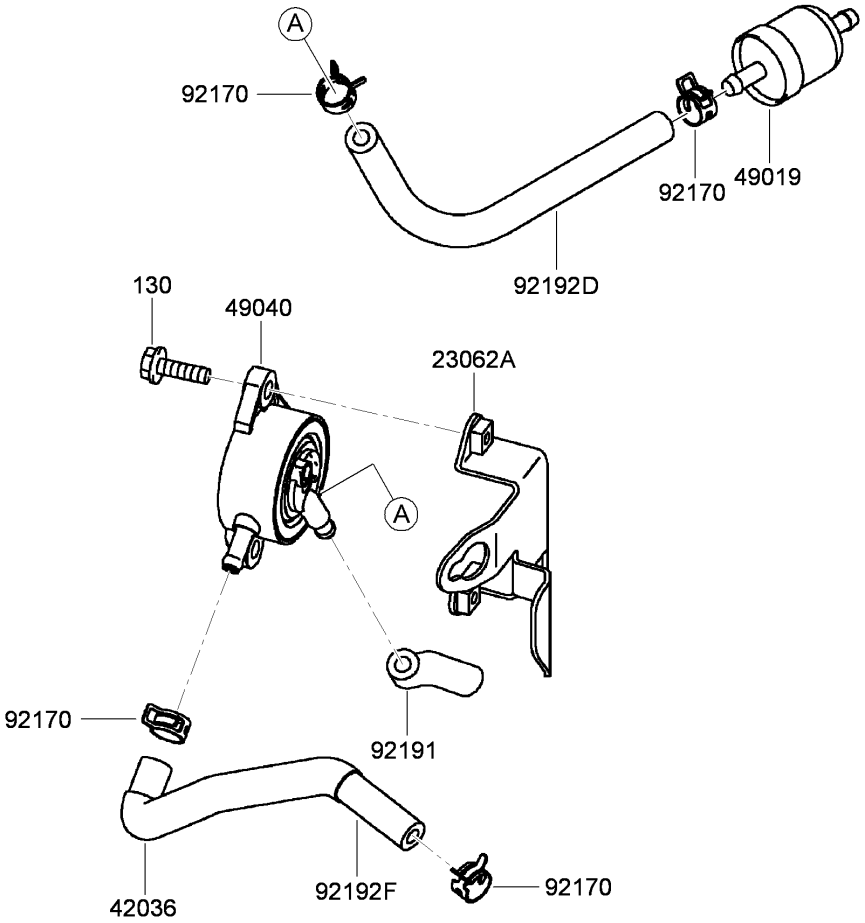


Fuel Tank and Valve Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷130	130AA0620	2	Bolt-Flanged (6X20)
❷23062A	23062-7019-9H	1	Bracket
❷42036	42036-7012	1	Sleeve
❷49019	49019-7001	1	Filter-Fuel
❷49040	49040-7001	1	Pump-Fuel
❷92170	92170-2009	4	Clamp
❷92191	92191-7002	1	Tube
❷92192D	92192-7135	1	Tube (6.35X12.7X160)
❷92192F	92192-7136	1	Tube (6.35X12.7X180)

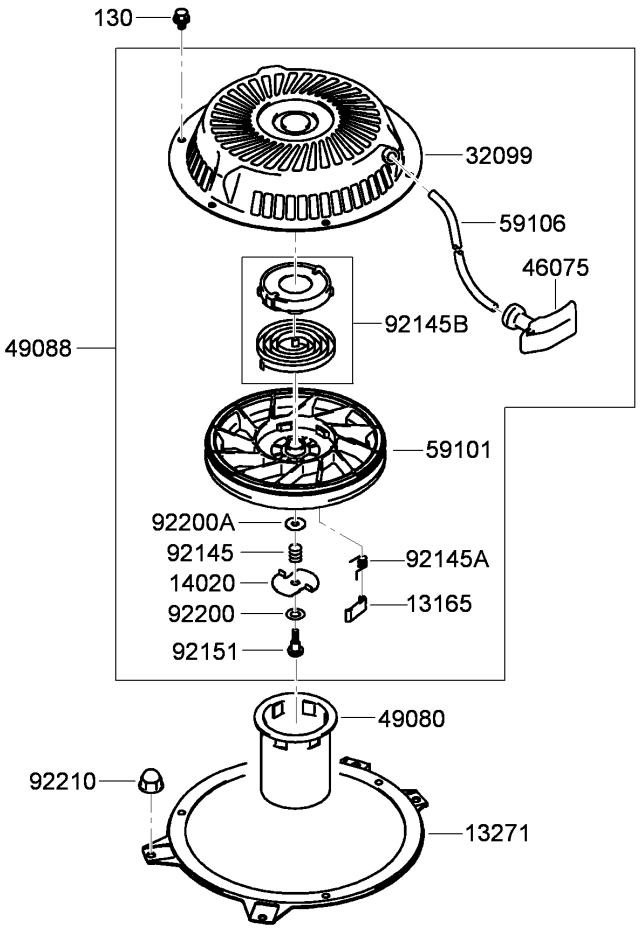

Starter Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷130	130AA0608	3	Bolt-Flanged (6X8)
❷13165	13165-7001	2	Pawl-Starter, Recoil
❷13271	13271-7003-9H	1	Plate
❷14020	14020-7001	1	Retainer
❷32099	32099-7002	1	Case-Starter, Recoil
❷46075	46075-7001	1	Grip-Starter, Recoil
❷49080	49080-7001	1	Pulley-Starting
❷49088	49088-7013	1	Starter-Recoil
❷59101	59101-7001	1	Reel-Starter, Recoil
❷59106	59106-7005	1	Rope
❷92145	92145-7006	1	Spring
❷92145A	92145-7007	2	Spring
❷92145B	92145-7008	1	Spring
❷92151	92151-7008	1	Bolt
❷92200	92200-7004	1	Washer
❷92200A	92200-7005	1	Washer
❷92210	92210-0003	4	Nut

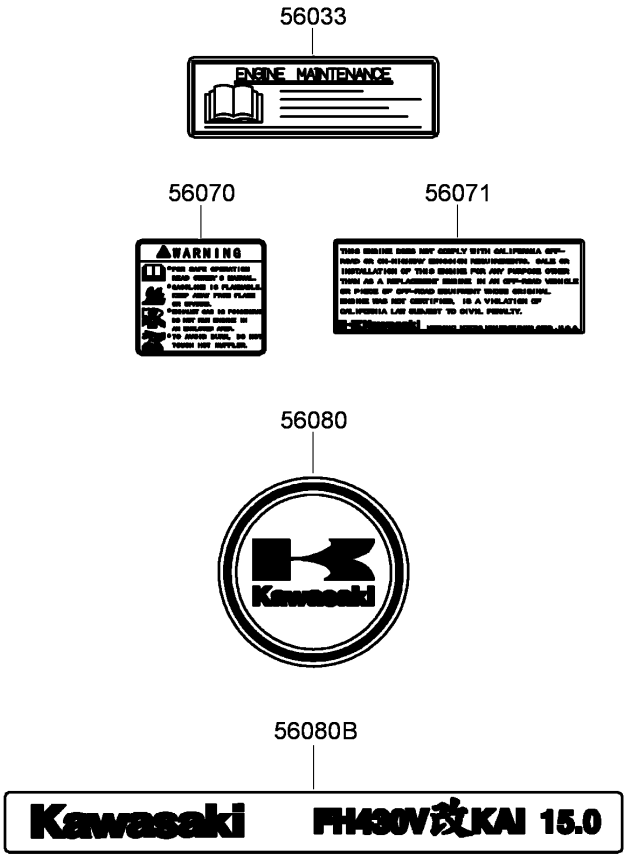

Label Assembly
Kawasaki FH430V-ES28

Ref	Part No.	Qty.	Description
❷56033	56033-7001	1	Label-Manual
❷56070	56070-7001	1	Label-Warning
❷56071	56071-7002	1	Label-Warning
❷56080	56080-2077	1	Label-Brand
❷56080B	56080-7057	1	Label-Brand

Attachments and Accessories

For 30096 - Commercial Walk-Behind Mower, Floating Deck T-Bar Gear with 40in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Rotary, 14 Inch (Recycling)	108-4089-03
Blade-Rotary, 14 Inch (Mid Flow)	108-4110-03
Blade-Rotary, 14 Inch (Low Flow)	108-4111-03
Blade-Rotary, 14 Inch (Atomic)	108-4112-03
40 Inch Bagger Enhancement Kit	110-2025
40 Inch Recycler Kit	110-2070
Plate Kit	110-6902
Weight-Cast	112-7059-01
Weight Kit	112-9971
Blade-Recycler, 14 Inch (6-pack)	114-4961
Blade-Low Flow, 14inch (6-pack)	114-4962
Blade-Mid Flow, 14 Inch (6-pack)	114-4963
Blade-High Flow, 14 Inch (6-pack)	114-4964
Blade-Atomic, 14 Inch (6-pack)	114-4965
Operator-Controlled Discharge Chute Kit	115-4190
Soft Bag (3 Bushel)	30104
Tru Trak Sulky	30110


TORO®