Form Number 3361-928 Rev A

Commercial Walk-Behind Mower

Fixed Deck Pistol Grip Gear Drive with 32in Cutting Unit

Model No. 30682 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel Tank Assembly	3
Transmission Drive Assembly	4
Drive Wheel and Brake Assembly	6
Handle and Control Assembly	8
Handle Assembly No. 110-6906	10
Deck and Shield Assembly	11
Deck Assembly No. 110-6901	12
Deflector Assembly No. 107-4140	13
Idler Arm and Caster Wheel Assembly	14
Spindle and Blade Assembly	16
Cylinder and Crankcase Assembly Kawasaki FH430V-CS25	17
Piston and Crankshaft Assembly Kawasaki FH430V-CS25	18
Valve and Camshaft Assembly Kawasaki FH430V-CS25	19
Lubrication Equipment Assembly Kawasaki FH430V-CS25	20
Cooling Equipment Assembly Kawasaki FH430V-CS25	21
Electric Equipment Assembly Kawasaki FH430V-CS25	22
Control Equipment Assembly Kawasaki FH430V-CS25	23
Carburetor Assembly Kawasaki FH430V-CS25	24
Air Filter and Muffler Assembly Kawasaki FH430V-CS25	25
Fuel Tank and Valve Assembly Kawasaki FH430V-CS25	26
Starter Assembly Kawasaki FH430V-CS25	27
Label Assembly Kawasaki FH430V-CS25	28
Attachments and Accessories List	29

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not serviced separately

❷ Optional Equipment


❸ Obtain from your local Kawasaki dealer

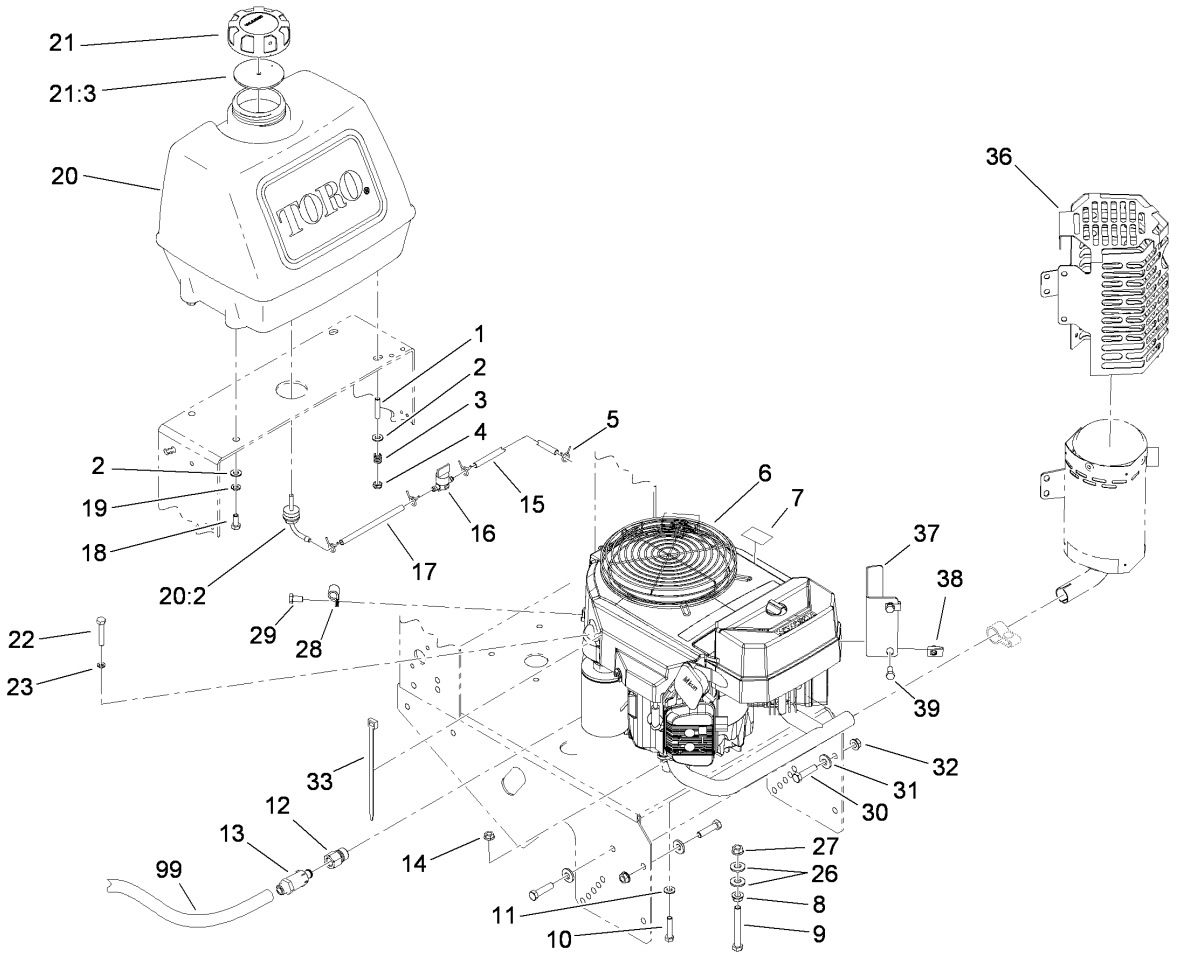

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
❶❸6		1	Engine-Kawasaki, FH430V-Cs25
7	106-0699	1	Decal-Warning
8	3290-357	1	Nut-HHF, Whiz
9	323-14	1	Screw-HH
10	322-7	4	Screw-HH
11	1-303334	4	Washer-Spring
12	103-1966	1	Adapter
13	92-6877	1	Valve-Drain, Oil
14	32128-20	4	Nut-HF
15	109-0293	1	Hose-Fuel
16	1-603770	1	Valve-Fuel
17	109-0306	1	Hose-Fuel
18	322-3	2	Screw-HH
19	1-805005	2	Washer-Lock
20	106-0730	1	Fuel Tank ASM
20:2	103-2605	1	Fitting-Fuel, Bulkhead
21	88-3980	1	Gas Cap ASM
21:3	88-4010	1	Gasket-Cap, Gas
22	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
23	1-805004	1	Washer-Lock
26	98-5975	2	Washer-Belleville
27	32128-21	1	Nut-HF
28	1-413510	1	Clip-Loom
29	33114-016	1	Screw-HH
30	323-8	8	Screw-HH
31	98-5975	8	Washer-Belleville
32	3290-357	8	Nut-HHF, Whiz
33	1-303335	1	Tie-Plastic
36	115-4150-03	1	Muffler Shield ASM
37	115-4154-03	1	Bracket-Muffler
38	94-2413	4	U-Nut
39	322-3	4	Screw-HH
99	103-1964	1	Hose-Drain, Oil

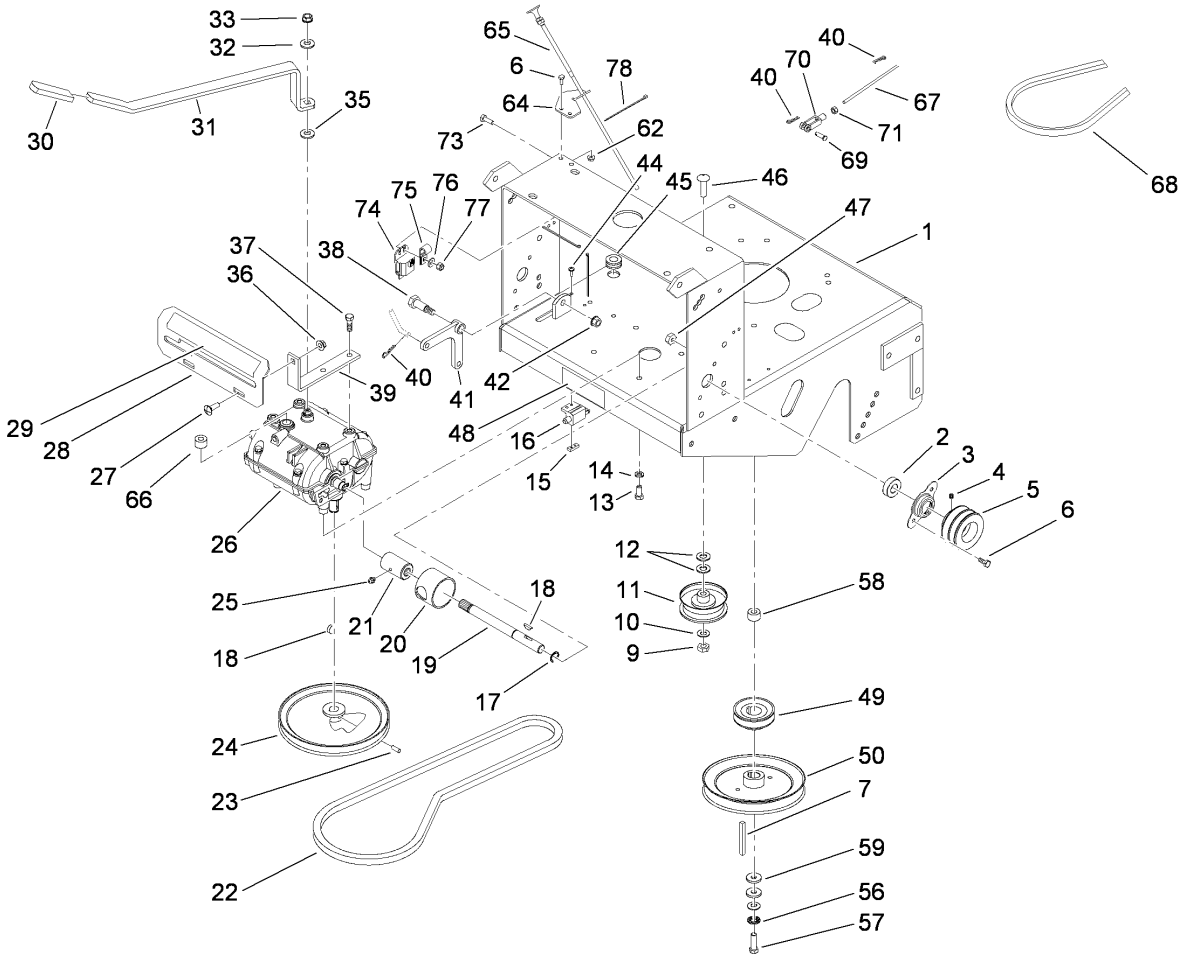

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Cotter, Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1667	1	Sheave
56	1-603610	2	Washer-Spring

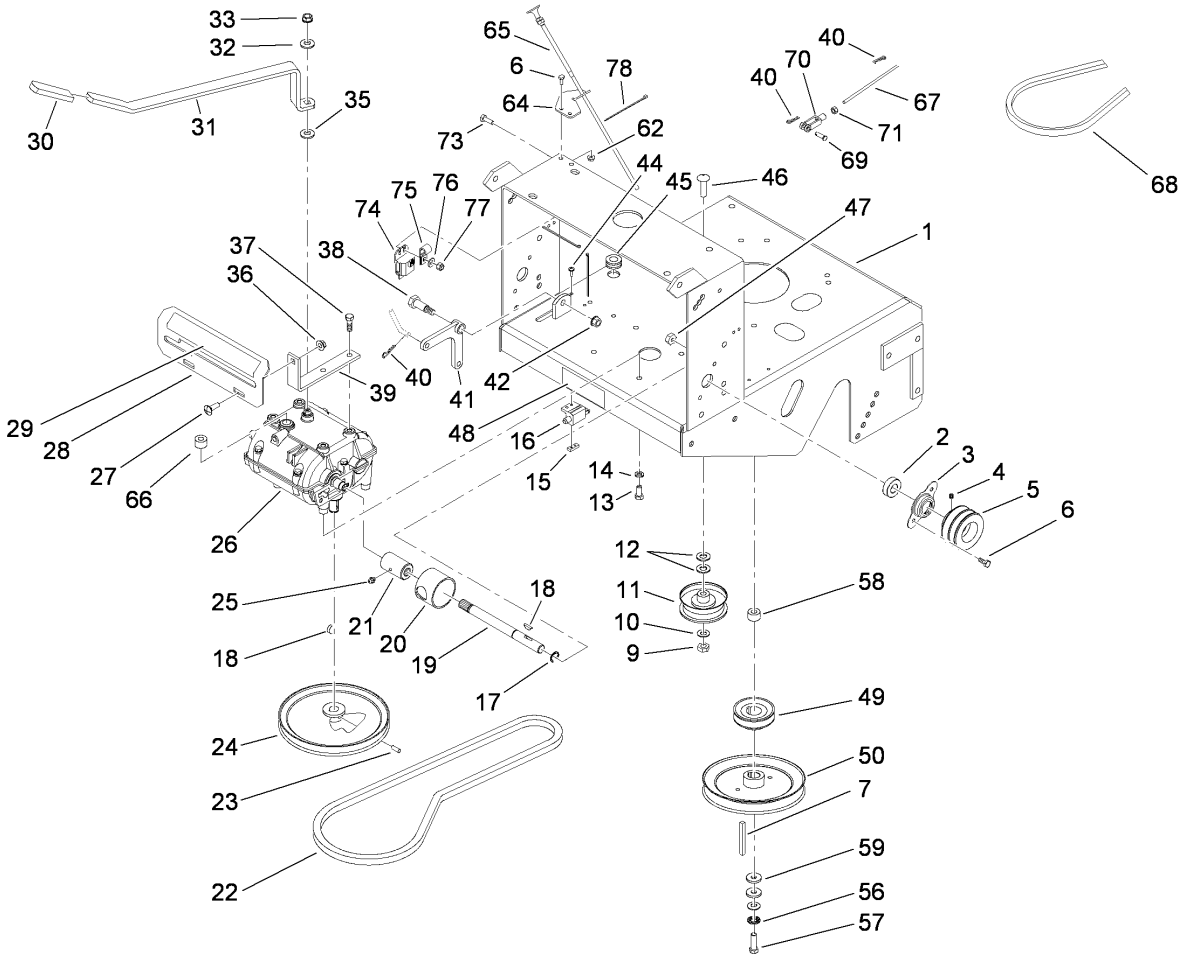

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral
67	1-323303	1	Linkage-Arm
68	1-323745	1	Belt-Blade, Drive
69	1-808280	1	Pin-Clevis
70	1-303105	1	Yoke-Adjustable
71	3219-2	1	Nut-Hex
73	321-4	1	Screw-HH
74	1-323430	1	Module-Interlock
75	1-323229	1	Clip-Loom
76	3256-22	1	Washer-Flat
77	3296-42	1	Nut-Lock, NI
78	1-303335	3	Tie-Plastic

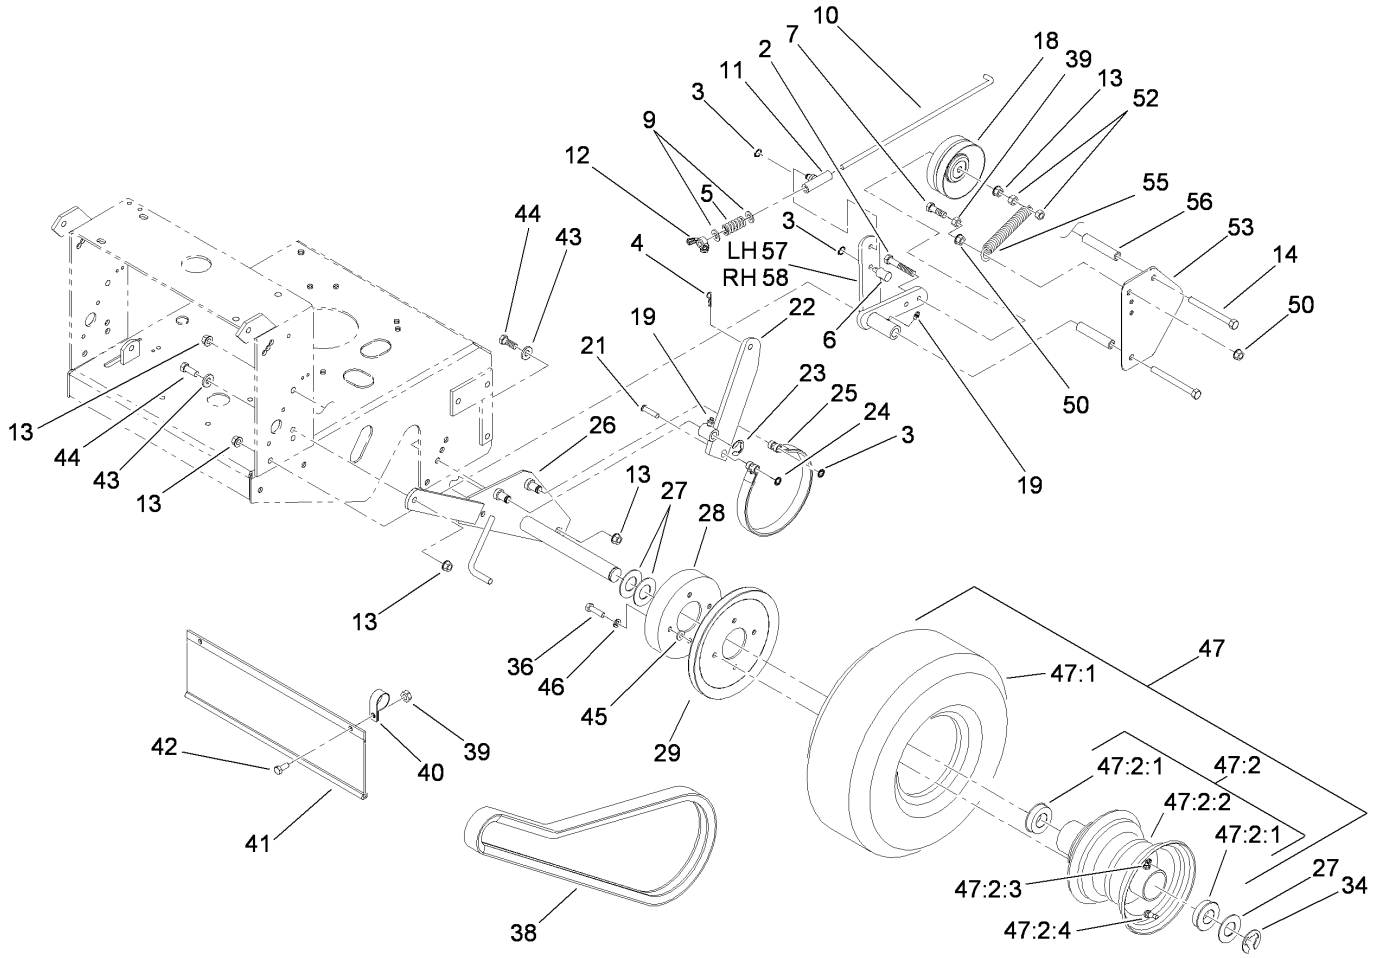

Drive Wheel and Brake Assembly


Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	2	Pin-Cotter, Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-39	4	Screw-HH
18	1-323352	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322141-03	1	Axle
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive

Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock
47	1-323346	2	Wheel And Tire ASM
47:1	1-323361	1	Tire
47:2	1-323360	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
❶47:2:2		1	Rim ASM
❶47:2:3		1	Fitting-Grease
❶47:2:4		1	Valve Stem And Cap
50	32128-20	4	Nut-HF
52	3296-39	4	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH

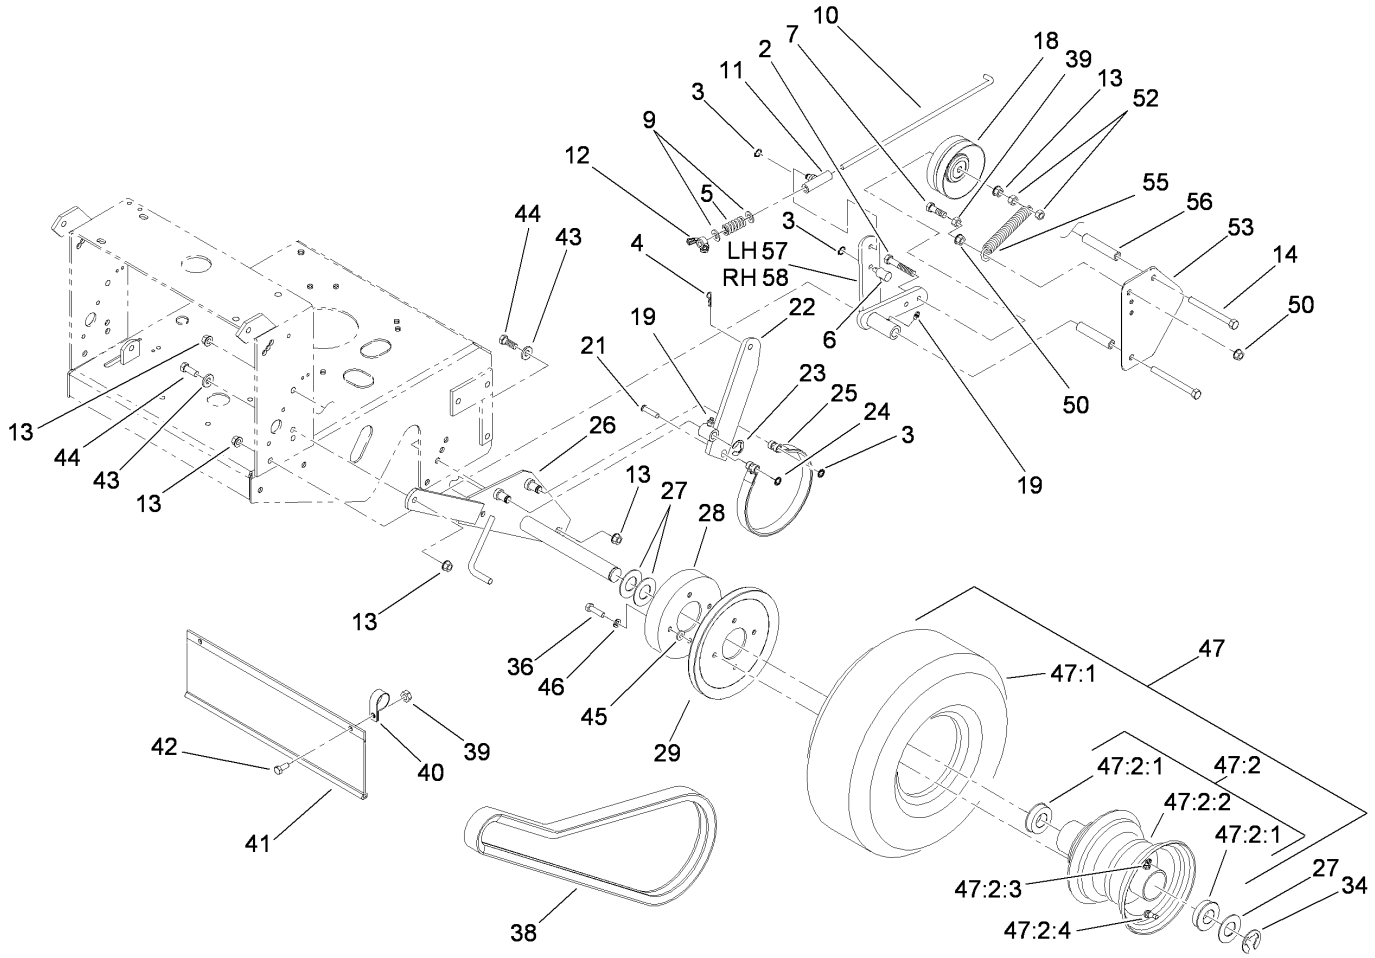

Drive Wheel and Brake Assembly (continued)


Ref	Part No.	Qty.	Description
58	103-1616-03	1	Arm-Idler, RH

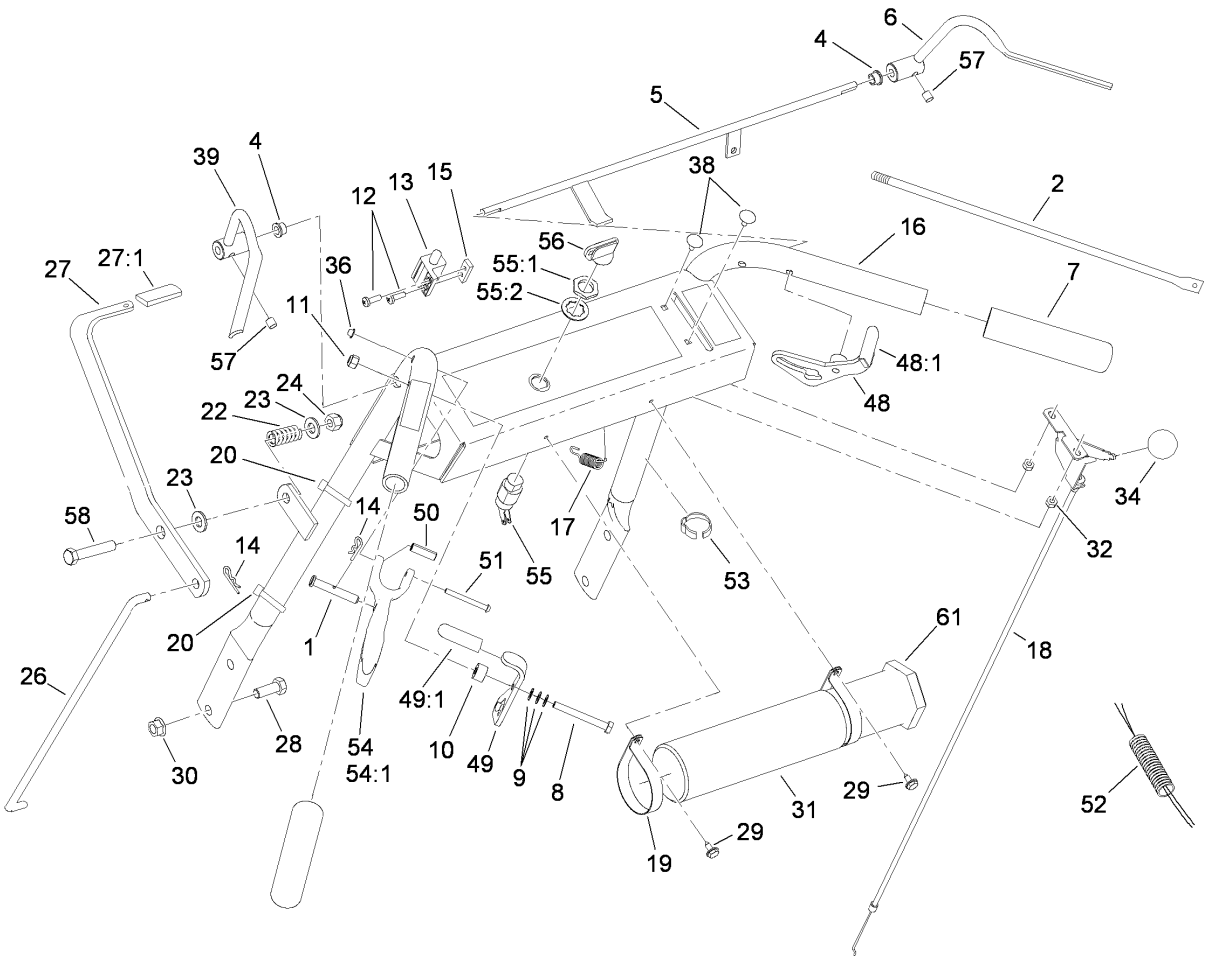

Handle and Control Assembly


Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Rod-Control, Operator Presence
6	106-5486	1	RH Operator Presence Control Lever ASM
7	104-9838	2	Grip-Foam
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	2	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	3	Pin-Cotter, Hair
15	1-633181	1	Plate-Tapped
16	110-6906	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Throttle Cable ASM
19	2412-120	2	R-Clamp
20	1-303287	2	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper

Ref	Part No.	Qty.	Description
27	1-322157	1	Lever ASM
27:1	1-303020	1	Grip-Lever
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	32128-21	4	Nut-HF
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock, NI
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	106-5485	1	LH Operator Presence Control Lever ASM
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Lever, Drive
52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	29-5560	1	Switch-On / Off
55:1	218-461	1	Nut-HH

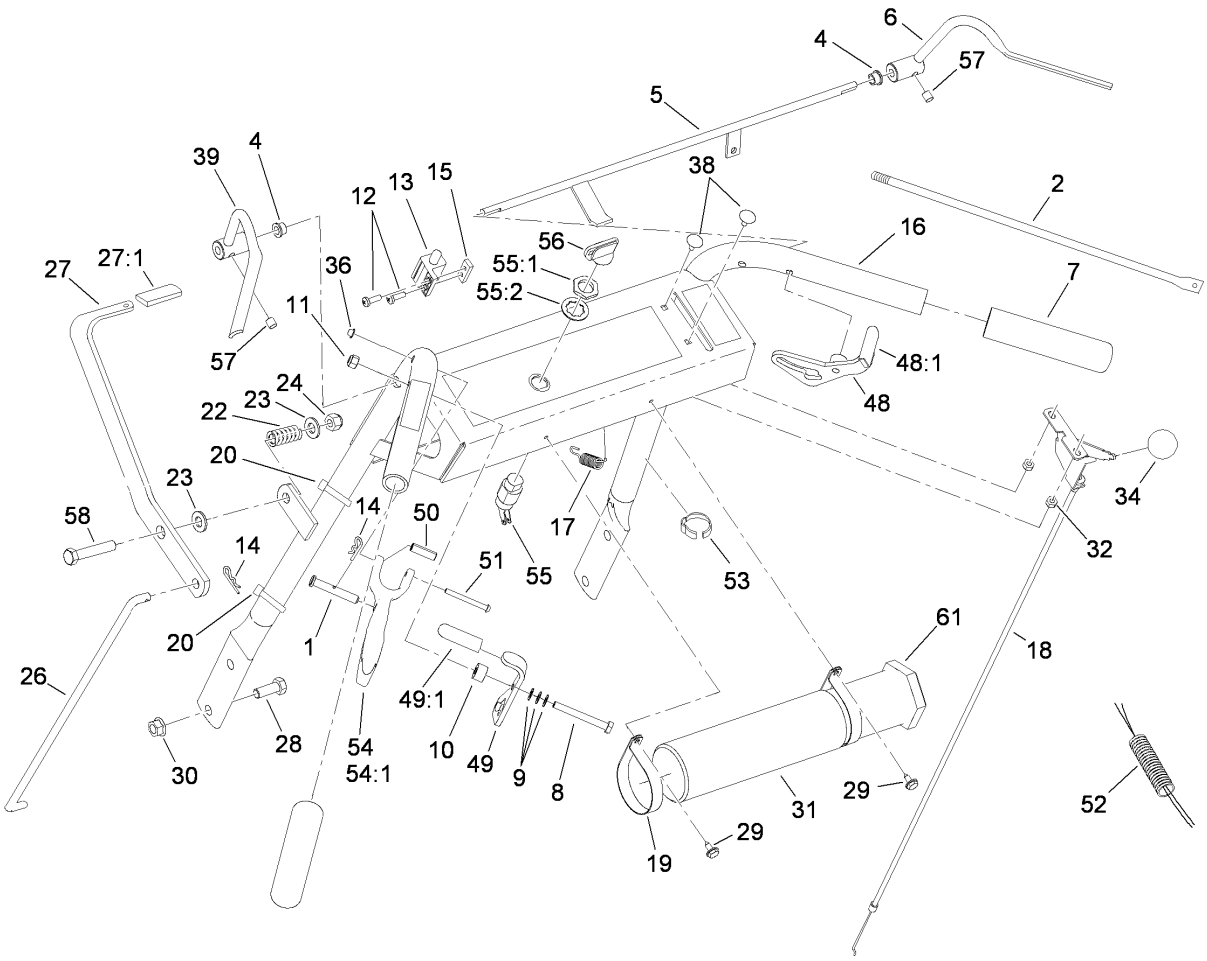


Handle and Control Assembly (continued)

Ref	Part No.	Qty.	Description
55:2	3254-5	1	Washer-Tooth
56	63-8360	1	Key-Ignition
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
61	104-7048	1	Cap-Housing

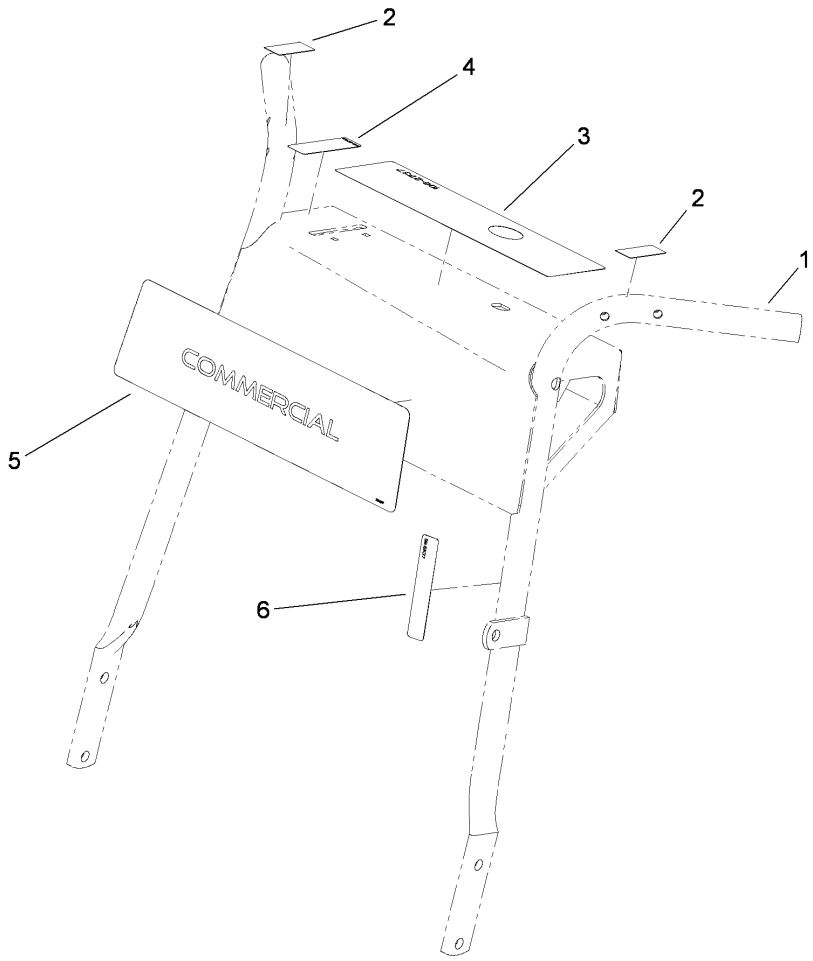


Handle Assembly No. 110-6906

Ref	Part No.	Qty.	Description
❶1		1	Handle ASM
2	105-4111	2	Decal-Lock, Neutral
3	106-2737	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	110-6917	1	Decal
6	95-5537	1	Decal-Engage, Deck

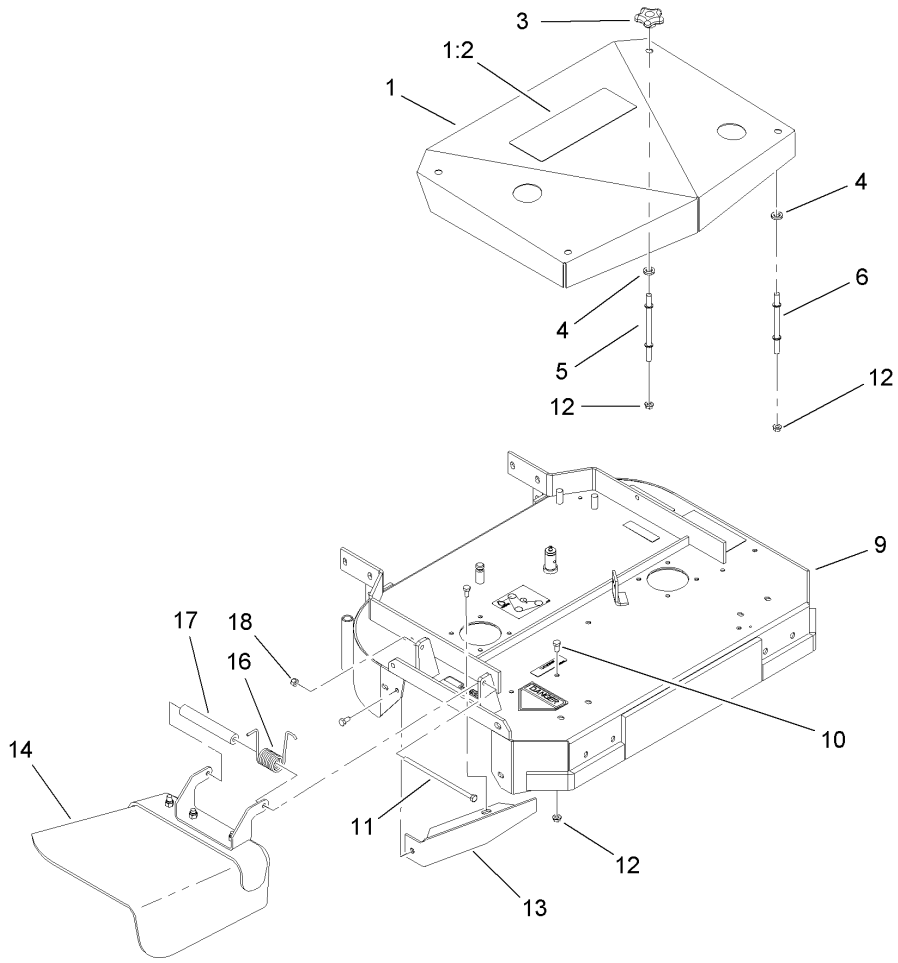


Deck and Shield Assembly

Ref	Part No.	Qty.	Description
1	1-324407	1	Shield-Belt
1:2	106-0710	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	110-6901	1	32 Inch Deck ASM
10	322-2	7	Screw-HH
11	322-50	1	Screw-HH
12	32128-20	11	Nut-HF
13	1-302189-01	1	Baffle-Dogleg
14	107-4140	1	Deflector ASM
16	104-8554	1	Spring-Torsion
17	105-4622	1	Spacer
18	3296-29	1	Nut-Lock, NI

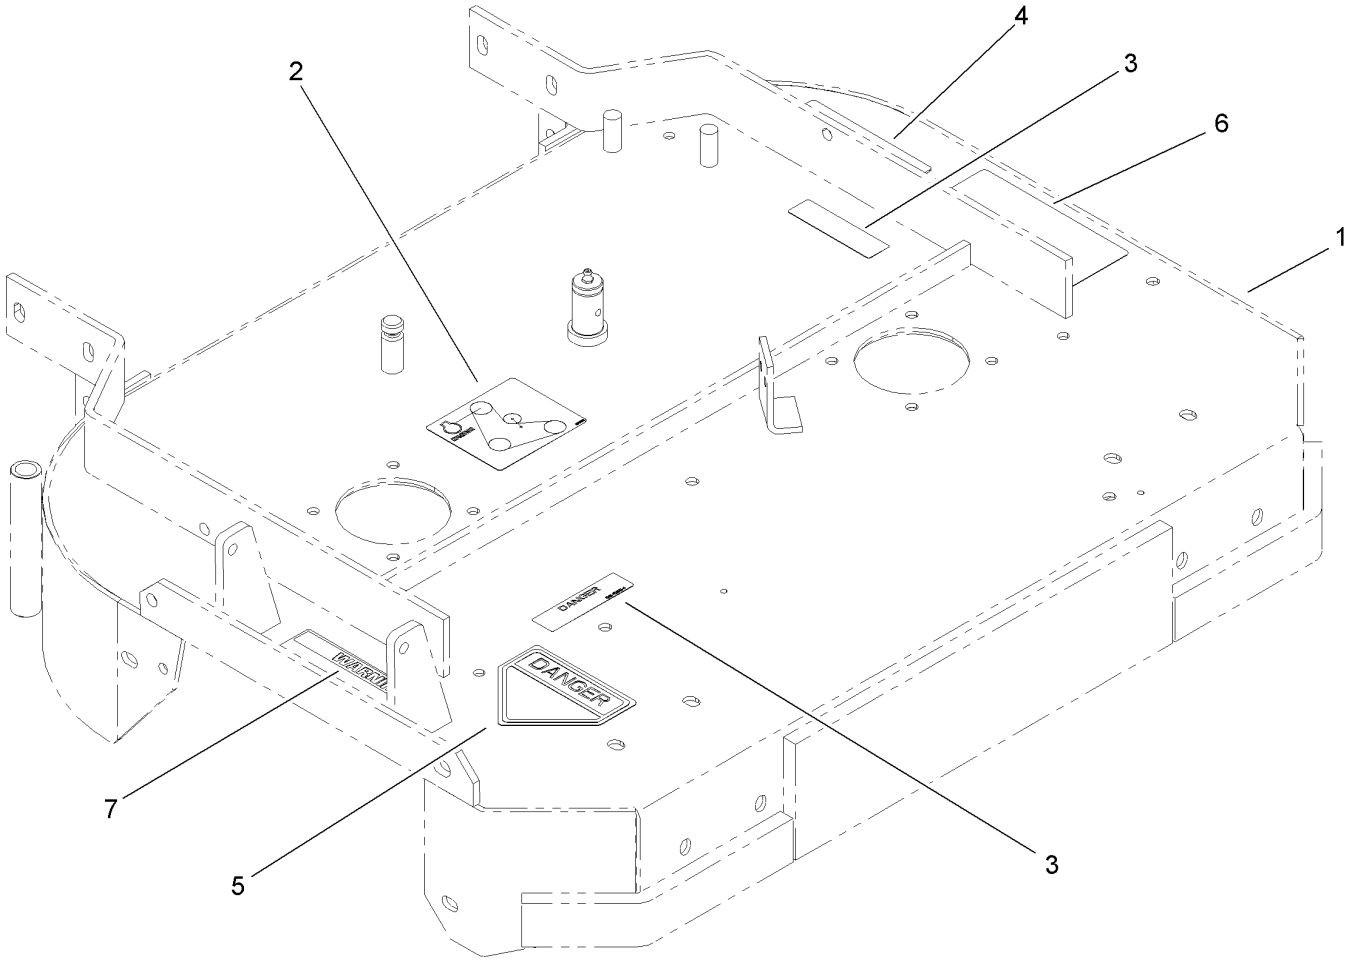


Deck Assembly No. 110-6901

Ref	Part No.	Qty.	Description
❶1		1	Deck
2	98-3296	1	Decal-Routing, Belt
3	98-5954	2	Decal-Cover, Missing
4	98-5130	1	Decal-Torque, Bolt
5	43-8480	1	Decal-Danger
6	66-1340	1	Decal-Danger, Thrown Object
7	104-8569	1	Decal-Warning

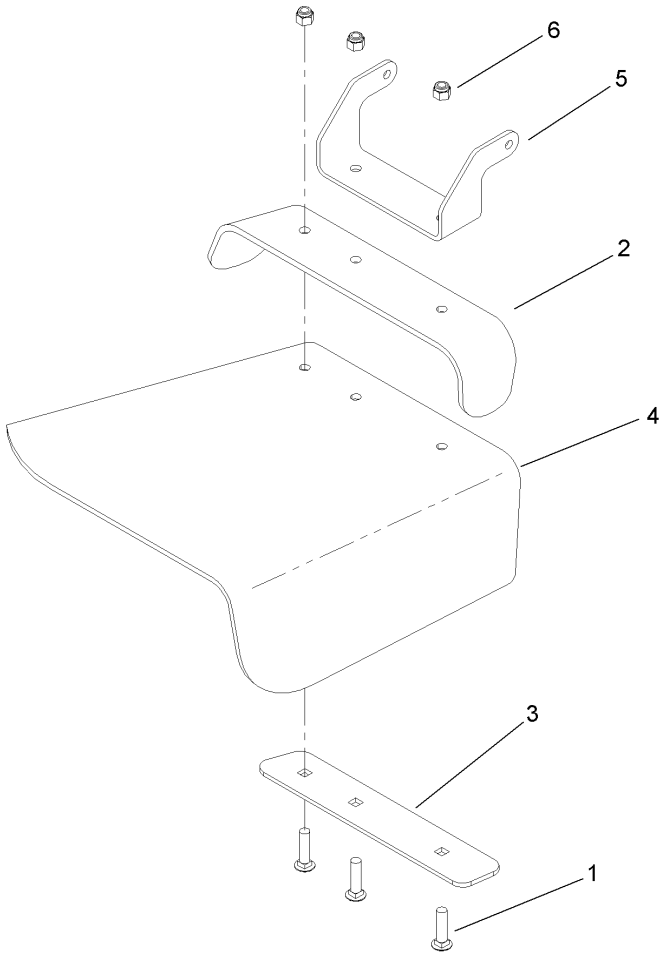

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

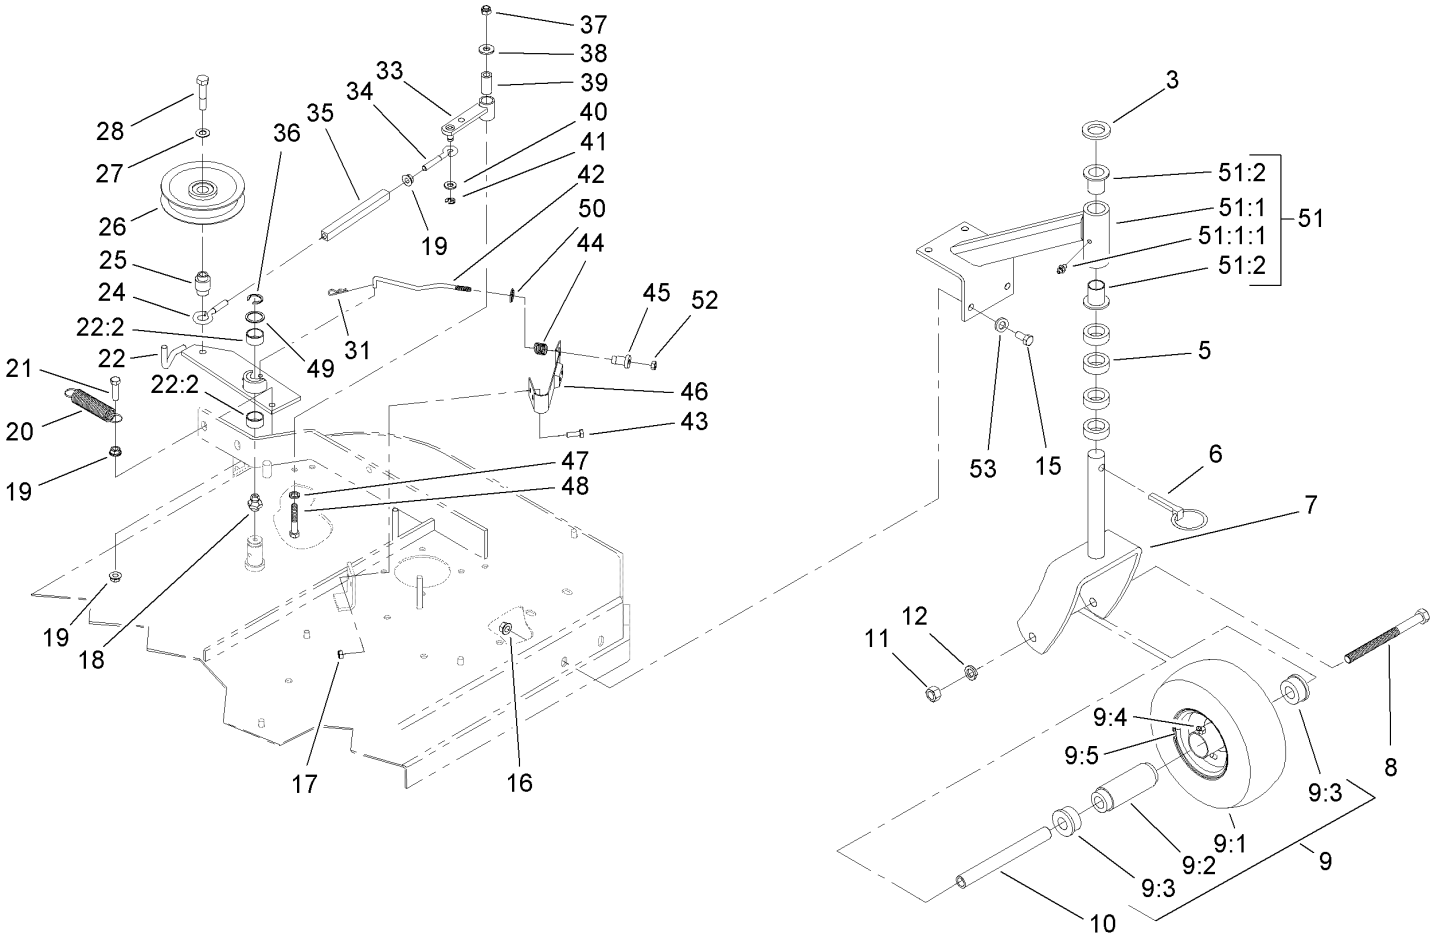

Idler Arm and Caster Wheel Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	110-5023	2	Wheel And Tire ASM
❶9:1		1	Tire
9:2	1-513809	1	Bearing
9:3	1-513810	2	Bushing
9:4	302-61	1	Zerk
❶9:5		1	Wheel
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	3290-357	8	Nut-HHF, Whiz
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH

Ref	Part No.	Qty.	Description
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
31	1-806003	1	Pin-Cotter, Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Retaining, EXT
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	Ring-Retaining, EXT
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad And Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM

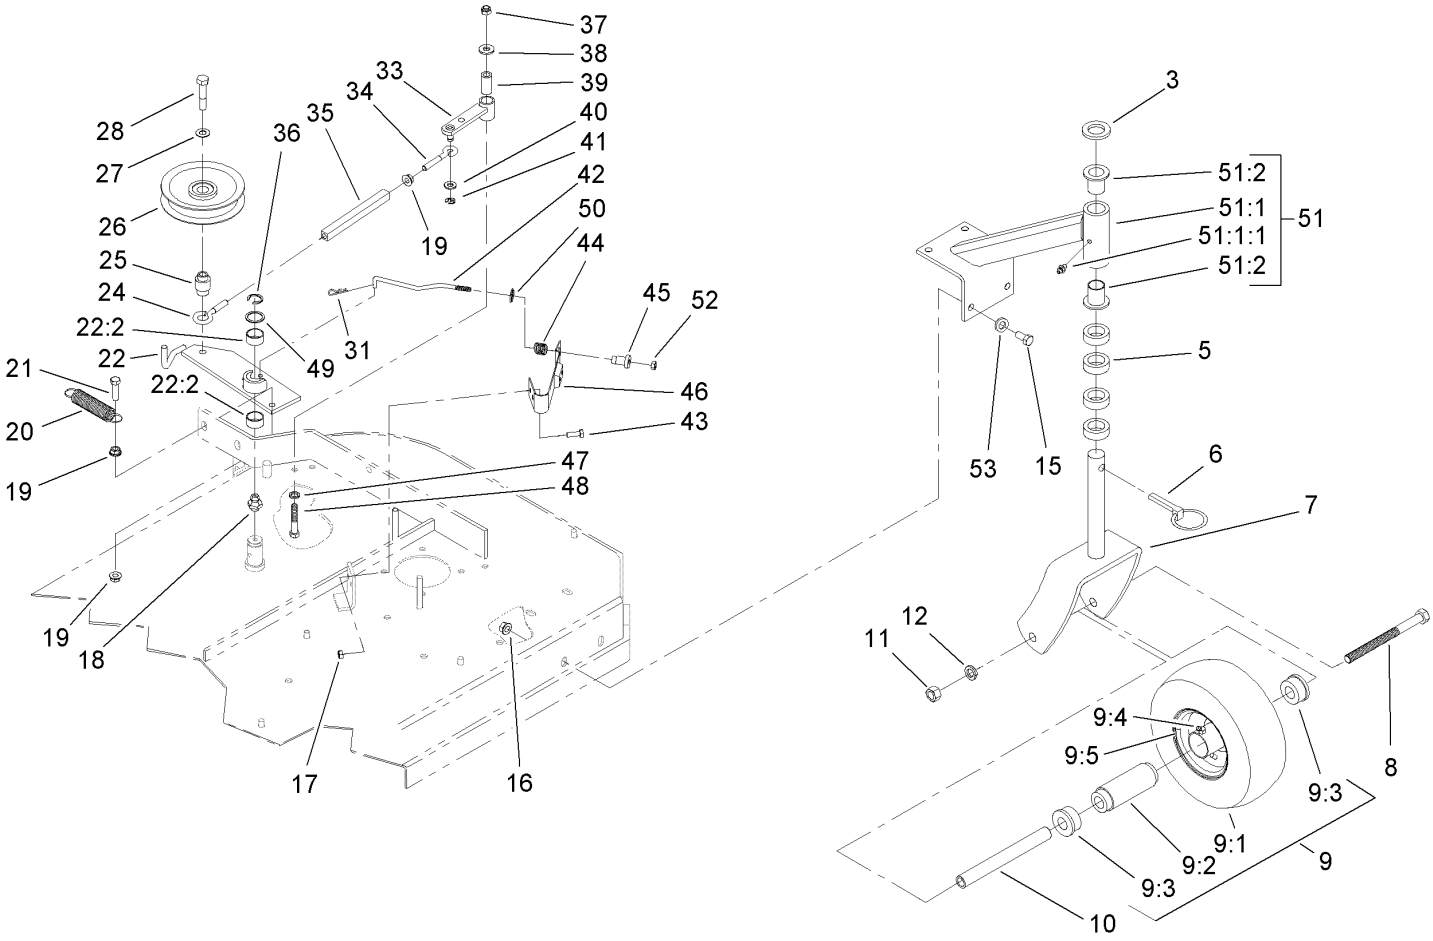


Idler Arm and Caster Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
❶51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI
53	3256-24	8	Washer-Flat

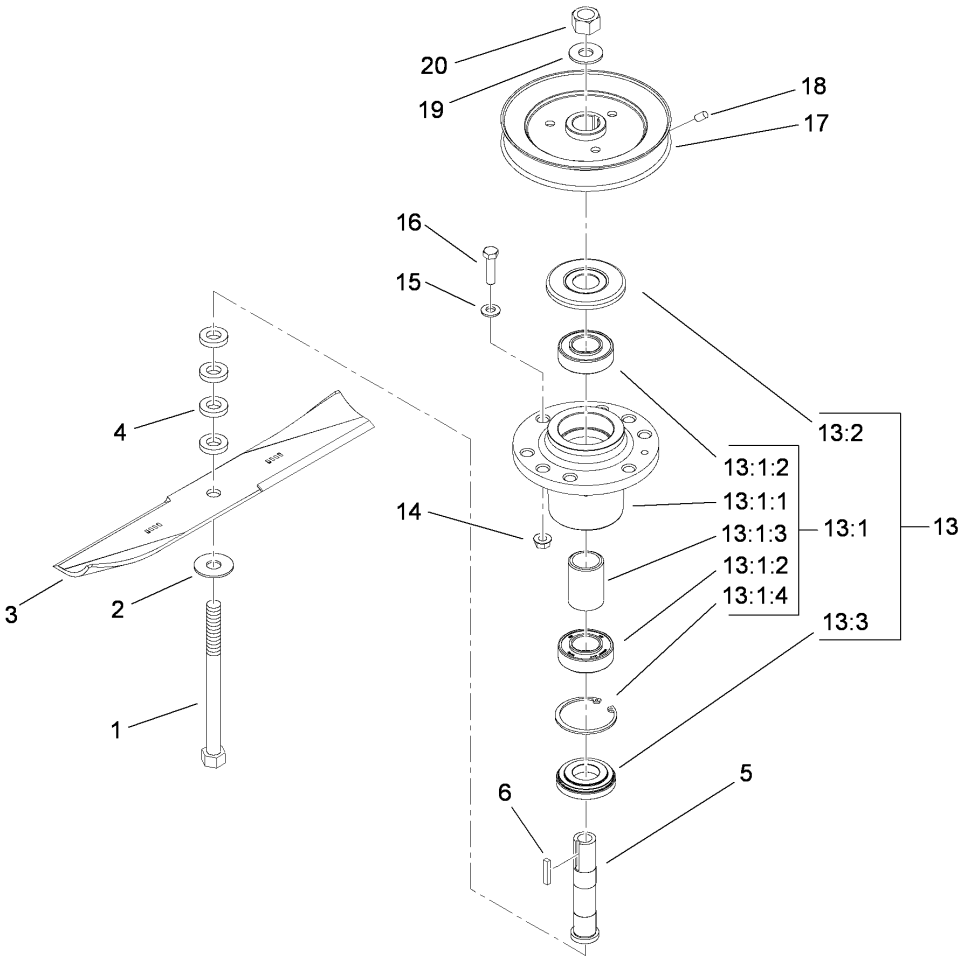


Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
❷3	103-2527	2	Blade-Notched
3	103-2507	2	Blade-Lift, Low
4	1-323539	8	Spacer
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
13	107-4065	2	Cutter Housing Service ASM
❶13:1		1	Cutter Housing ASM
13:1:1	103-7975	1	Housing-Spindle
13:1:2	103-2477	2	Bearing-Ball
13:1:3	103-2534	1	Spacer-Bearing
13:1:4	32120-8	1	Ring-Snap
13:2	103-1330	1	Guard-Bearing, Top
13:3	103-2535	1	Spacer-Guard, Bottom
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	1-803310	2	Screw-Set
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex

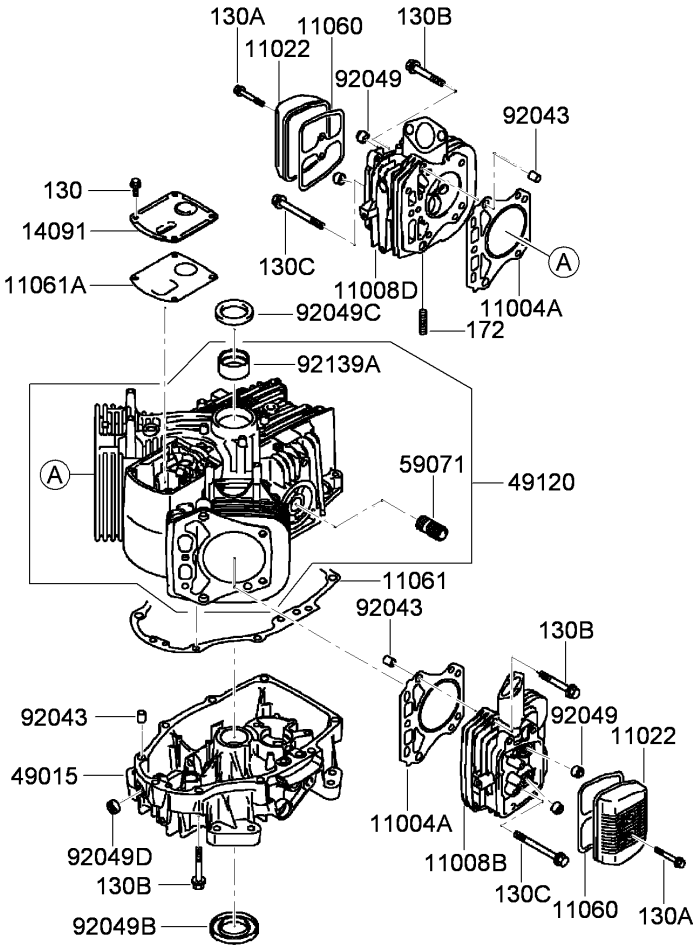


Cylinder and Crankcase Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸130	130B0612	4	Bolt-Flanged (6X12)
❸130A	130B0640	4	Bolt-Flanged (6X40)
❸130B	130T0850	17	Bolt-Flanged (8X50)
❸130C	130T0875	2	Bolt-Flanged (8X75)
❸172	172G0818	4	Bolt-Stud (8X18)
❸11004A	11004-7018	2	Gasket-Head
❸11008B	11008-7021	1	Head-Cylinder, No. 2
❸11008D	11008-7022	1	Head-Cylinder, No. 1
❸11022	11022-7003	2	Case-Rocker
❸11060	11060-7001	2	Gasket-Case, Rocker
❸11061	11061-7007	1	Gasket-Cover, Crankcase
❸11061A	11061-7008	1	Gasket-Breather
❸14091	14091-7007	1	Cover
❸49015	49015-7032	1	Cover-Crankcase
❸49120	49120-7015	1	Crankcase
❸59071	59071-2079	1	Joint
❸92043	92043-7001	6	Pin
❸92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❸92049B	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❸92049C	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❸92049D	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❸92139A	92139-7008	1	Bushing

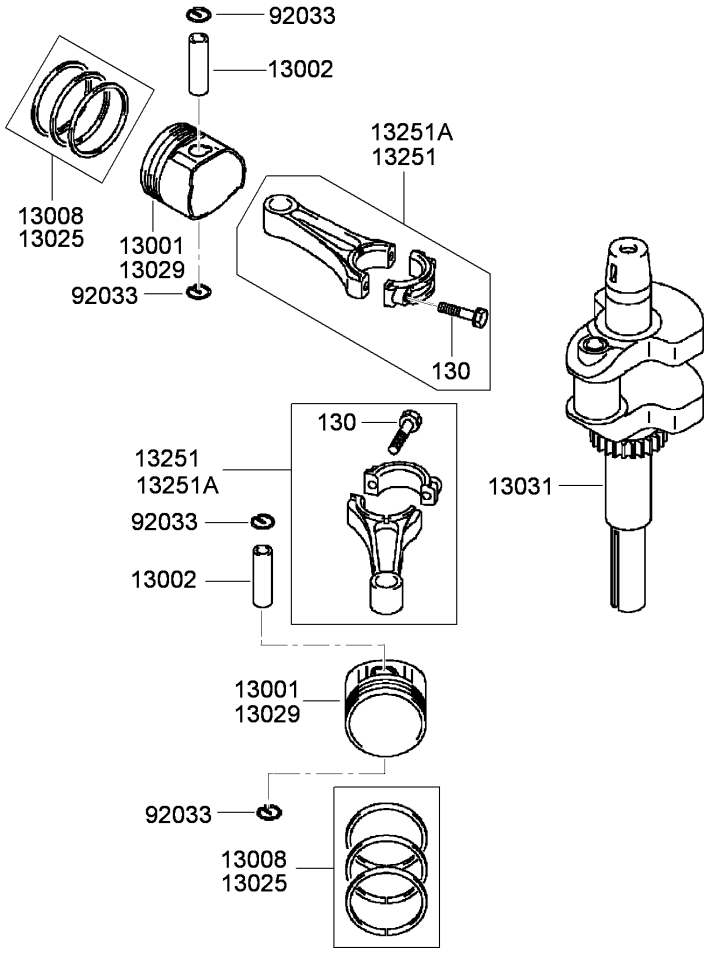


Piston and Crankshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸130	130G0630	4	Bolt-Flanged (6X30)
❸13001	13001-7009	2	Piston-Engine
❸13002	13002-7001	2	Pin-Piston
❸13008	13008-7001	2	Ring Set-Piston
❸13025	13025-7003	1	Ring Set-Piston (L 0.50)
❸13029	13029-7005	1	Piston-Engine (L 0.50)
❸13031	13031-7033	1	Crankshaft
❸13251	13251-7007	2	Connecting Rod ASM
❸13251A	13251-7008	2	Connecting Rod ASM (0.50)
❸92033	92033-7005	4	Ring-Snap

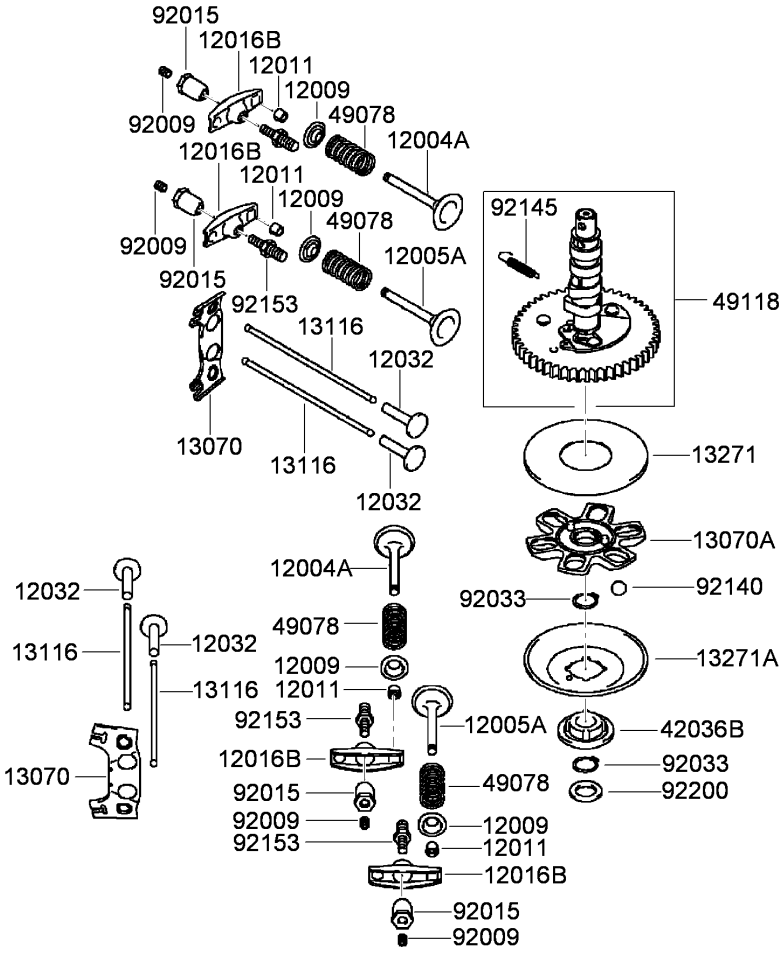


Valve and Camshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸12004A	12004-7005	2	Valve-Intake
❸12005A	12005-7006	2	Valve-Exhaust
❸12009	12009-7001	4	Retainer-Spring, Valve
❸12011	12011-2056	8	Collet
❸12016B	12016-7008	4	Arm-Rocker
❸12032	12032-7001	4	Tappet
❸13070	13070-7001	2	Guide
❸13070A	13070-7004	1	Guide
❸13116	13116-2057	4	Rod-Push
❸13271	13271-7007	1	Plate
❸13271A	13271-7021	1	Plate-Governor
❸42036B	42036-7010	1	Sleeve
❸49078	49078-7001	4	Spring-Valve, Engine
❸49118	49118-7009	1	Camshaft
❸92009	92009-2341	4	Screw
❸92015	92015-2253	4	Nut
❸92033	92033-7001	2	Ring-Snap
❸92140	92140-7002	6	Ball
❸92145	92145-7001	1	Spring
❸92153	92153-7019	4	Bolt
❸92200	92200-7001	1	Washer

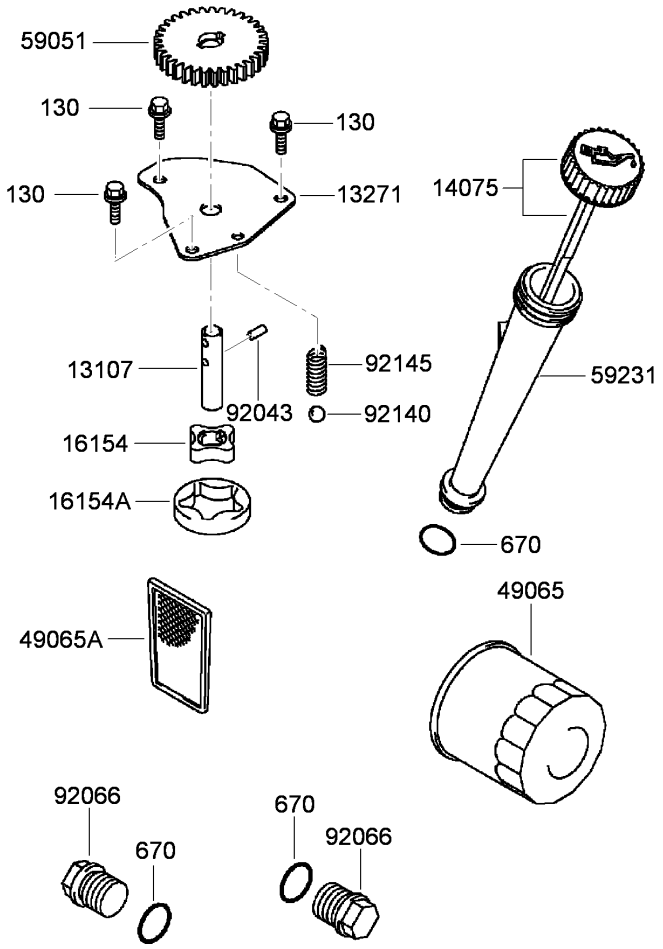


Lubrication Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸130	130B0612	3	Bolt-Flanged (6X12)
❸670	670D2016	3	O-Ring (16Mm)
❸13107	13107-7009	1	Shaft
❸13271	13271-7017	1	Plate
❸14075	14075-7009	1	Cap ASM
❸16154	16154-2053	1	Rotor-Pump (In)
❸16154A	16154-2054	1	Rotor-Pump (Out)
❸49065	49065-2078	1	Filter-Oil
❸49065A	49065-7004	1	Filter-Oil
❸59051	59051-7011	1	Gear-Spur
❸59231	59231-7003	1	Filler
❸92043	92043-7003	2	Pin
❸92066	92066-7003	2	Plug
❸92140	92140-7003	1	Ball
❸92145	92145-7002	1	Spring

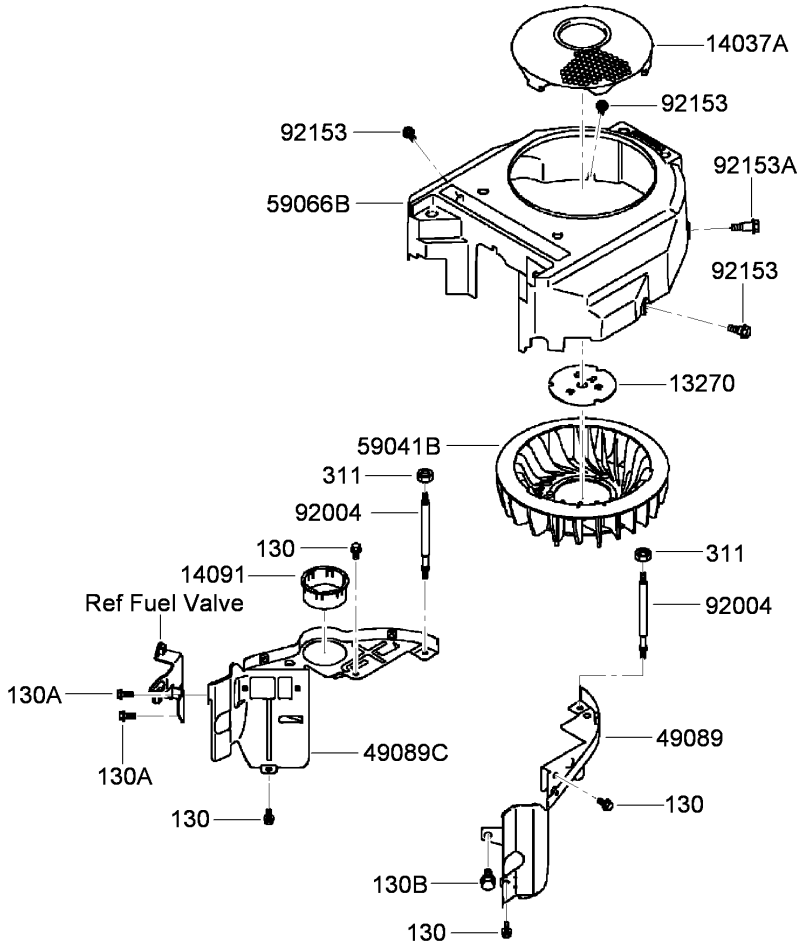


Cooling Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸130	130B0612	4	Bolt-Flanged (6X12)
❸130A	130B0616	2	Bolt-Flanged (6X16)
❸130B	130B0816	1	Bolt-Flanged (8X16)
❸311	311F0600	2	Nut-Hex (6Mm)
❸13270	13270-7007	1	Plate
❸14037A	14037-7025-9H	1	Screen
❸14091	14091-7009	1	Cover
❸49089	49089-7044	1	Shroud-Engine
❸49089C	49089-7061	1	Shroud-Engine
❸59041B	59041-7012	1	Fan
❸59066B	59066-7036	1	Housing-Fan
❸92004	92004-7007	2	Stud
❸92153	92153-7007	3	Bolt
❸92153A	92153-7008	1	Bolt

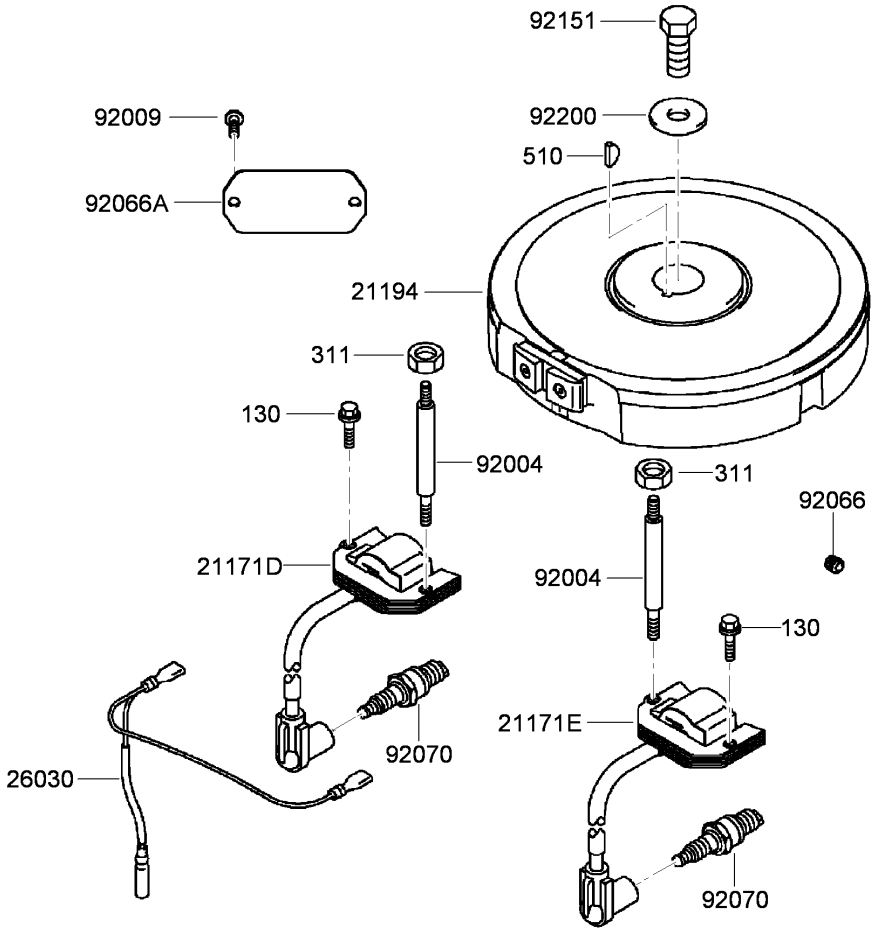


Electric Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸130	130B0620	2	Bolt-Flanged (6X20)
❸311	311F0600	2	Nut-Hex (6Mm)
❸510	510A5100	1	Key-Woodruff
❸21171D	21171-7026	1	Ignition Coil ASM
❸21171E	21171-7027	1	Ignition Coil ASM
❸21194	21194-7013	1	Flywheel
❸26030	26030-7001	1	Harness
❸92004	92004-7008	2	Stud
❸92009	92009-2308	2	Screw
❸92066	92066-7002	1	Plug
❸92066A	92066-7005	1	Plug
❸92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)
❸92151	92151-2097	1	Bolt (12X30)
❸92200	92200-7002	1	Washer

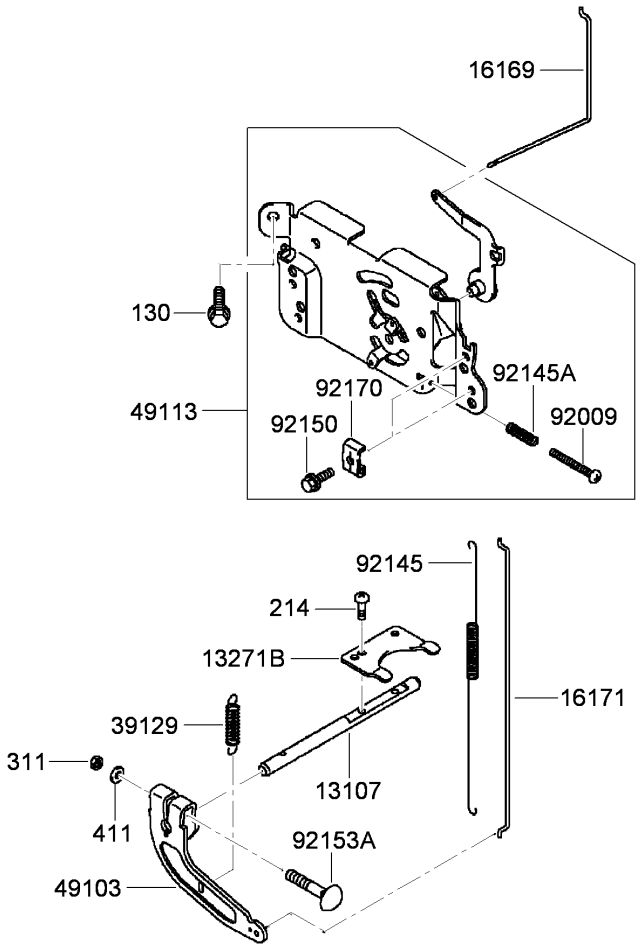

Control Equipment Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
❸130	130B0612	2	Bolt-Flanged (6X12)
❸214	214B0408	2	Screw-Pan (4X8)
❸311	311B0600	1	Nut-Hex (6Mm)
❸411	411B0600	1	Washer-Plain (6Mm)
❸13107	13107-7010	1	Shaft
❸13271B	13271-7032	1	Plate
❸16169	16169-7012	1	Link-Choke
❸16171	16171-7007	1	Link
❸39129	39129-7003	1	Spring-Governor
❸49103	49103-7004	1	Arm-Governor
❸49113	49113-7024	1	Panel-Control
❸92009	92009-7007	1	Screw (4X35)
❸92145	92145-7003	1	Spring
❸92145A	92145-7005	1	Spring
❸92150	92150-2182	2	Bolt (5X18)
❸92153A	92153-7033	1	Bolt (6X35)
❸92170	92170-7001	2	Clamp

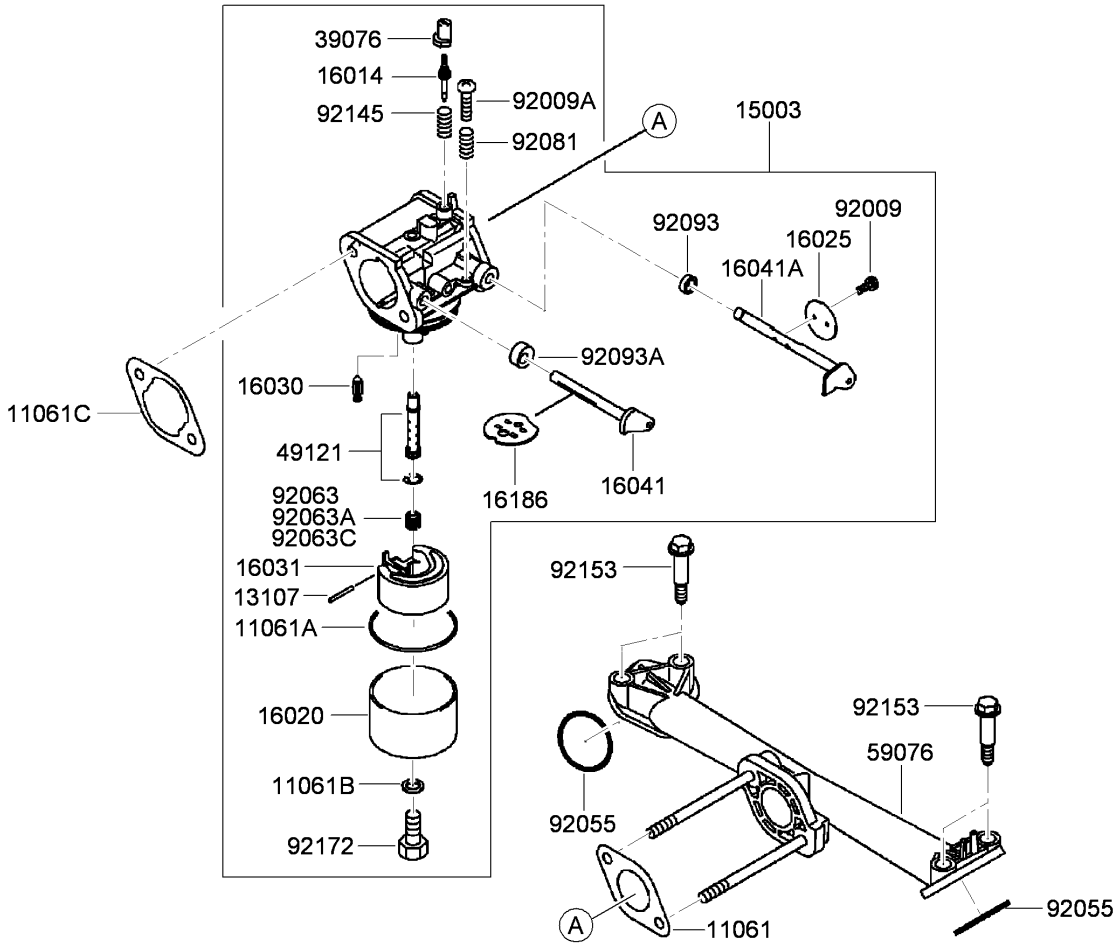

Carburetor Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸11061	11061-7004	1	Gasket-Insulator
❸11061A	11061-7009	1	Gasket-Chamber
❸11061B	11061-7010	1	Gasket-Screw
❸11061C	11061-7018	1	Gasket-Cleaner, Air
❸13107	13107-7018	1	Shaft
❸15003	15003-7061	1	Carburetor ASM
❸16014	16014-7002	1	Screw-Pilot, Air
❸16020	16020-7003	1	Chamber-Float
❸16025	16025-7006	1	Valve-Throttle
❸16030	16030-7003	1	Valve-Float
❸16031	16031-7002	1	Float
❸16041	16041-7016	1	Shaft-Choke, Carburetor
❸16041A	16041-7018	1	Shaft-Throttle, Carburetor
❸16186	16186-7002	1	Choke Valve ASM
❸39076	39076-7001	1	Limiter
❸49121	49121-7001	1	Nozzle-Main
❸59076	59076-7005	1	Manifold-Intake
❸92009	92009-2083	2	Screw
❸92009A	92009-2349	1	Screw
❸92055	92055-7007	2	O-Ring (I D 31)
❸92063	92063-7026	1	Jet-Main, No. 88
❸92063A	92063-7028	1	Jet-Main, No. 85
❸92063C	92063-7029	1	Jet-Main, No. 82
❸92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
❸92093	92093-2100	1	Seal
❸92093A	92093-7003	1	Seal
❸92145	92145-7015	1	Spring
❸92153	92153-7009	4	Bolt
❸92172	92172-7002	1	Screw

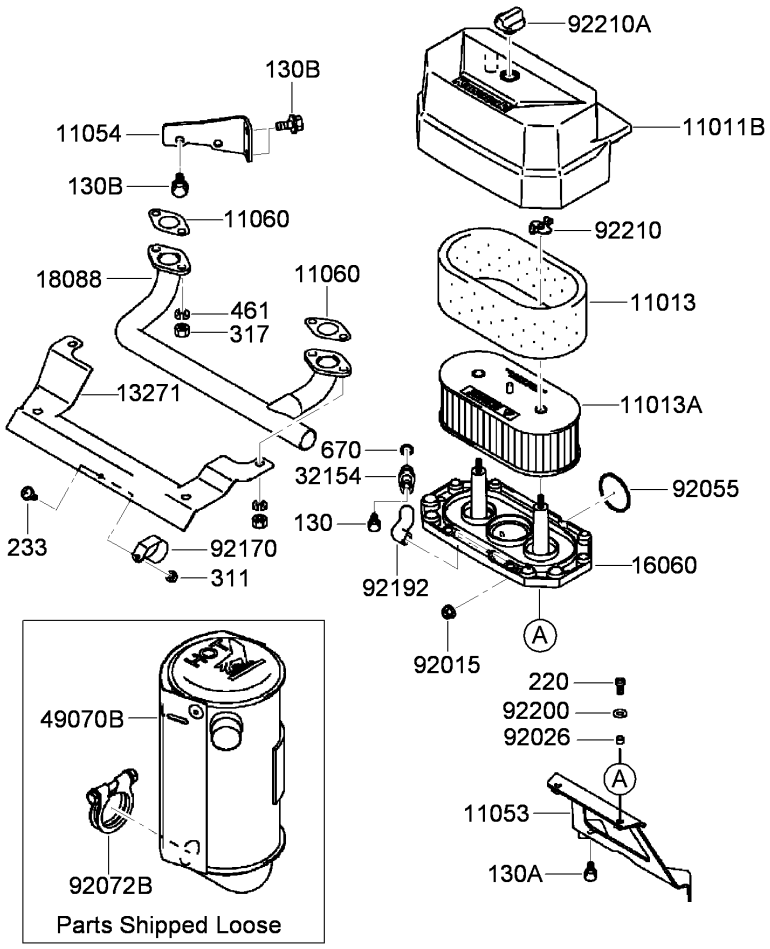

Air Filter and Muffler Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
❸130	130B0610	1	Bolt-Flanged (6X10)
❸130A	130B0612	2	Bolt-Flanged (6X12)
❸130B	130B0816	3	Bolt-Flanged (8X16)
❸220	220B0614	2	Screw-Pan, Cross (6X14)
❸233	233B0416	1	Screw (4X16)
❸311	311B0400	1	Nut-Hex (4Mm)
❸317	317R0800	4	Nut-Hex, Small (8Mm)
❸461	461F0800	4	Washer-Spring (8Mm)
❸670	670B2010	1	O-Ring (10Mm)
❸11011B	11011-7045	1	Case-Filter, Air
❸11013	11013-7025	1	Element-Filter, Air
❸11013A	11013-7031	1	Element-Filter, Air
❸11053	11053-7022	1	Bracket
❸11054	11054-7002-9H	1	Bracket
❸11060	11060-7021	2	Gasket-Muffler
❸13271	13271-7022	1	Plate
❸16060	16060-7016	1	Pipe-Intake
❸18088	18088-7001	1	Pipe-Exhaust
❸32154	32154-7006	1	Pipe
❸49070B	49070-7021	1	Muffler
❸92015	92015-1193	2	Nut
❸92026	92026-7001	2	Spacer (6.2X7.9X5)
❸92055	92055-7015	1	O-Ring

Ref	Part No.	Qty.	Description
❸92072B	92072-7012	1	Band
❸92170	92170-7002	1	Clamp
❸92192	92192-7010	1	Tube
❸92200	92200-2070	2	Washer
❸92210	92210-7004	2	Nut
❸92210A	92210-7019	1	Nut

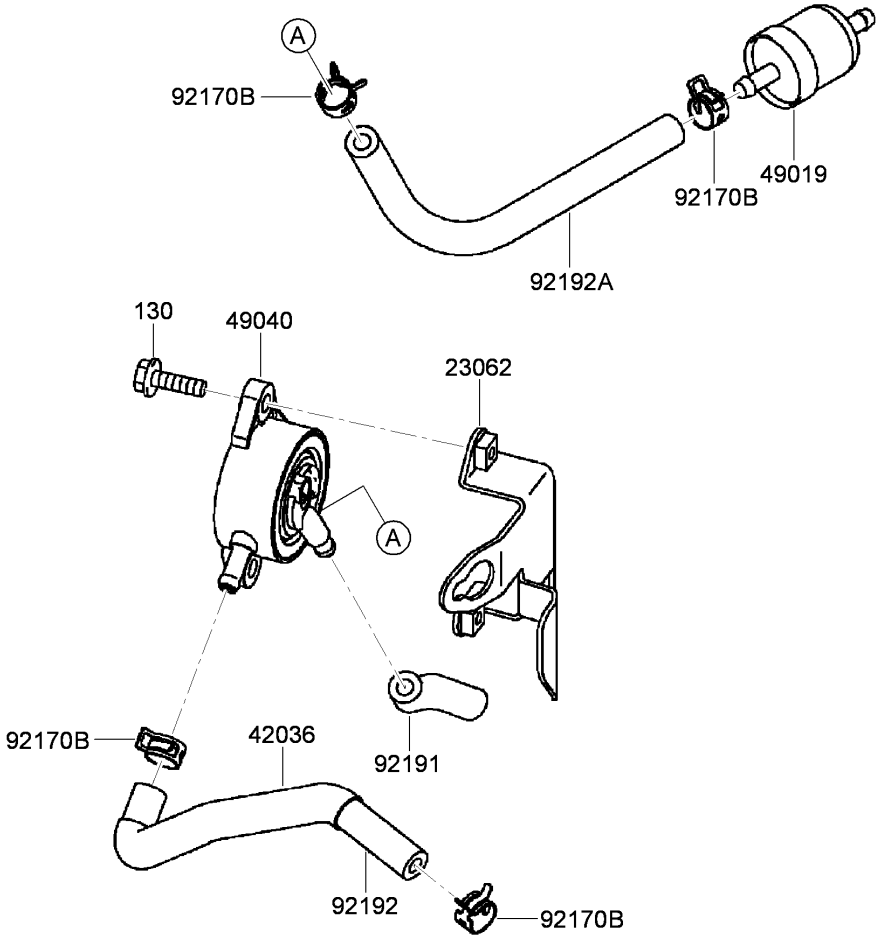

Fuel Tank and Valve Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸130	130B0620	2	Bolt-Flanged (6X20)
❸23062	23062-7004-9H	1	Bracket
❸42036	42036-7012	1	Sleeve
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7001	1	Pump-Fuel
❸92170B	92170-2088	4	Clamp
❸92191	92191-7002	1	Tube
❸92192	92192-7035	1	Tube (6.35X12.7X170)
❸92192A	92192-7037	1	Tube (6.35X12.7X160)

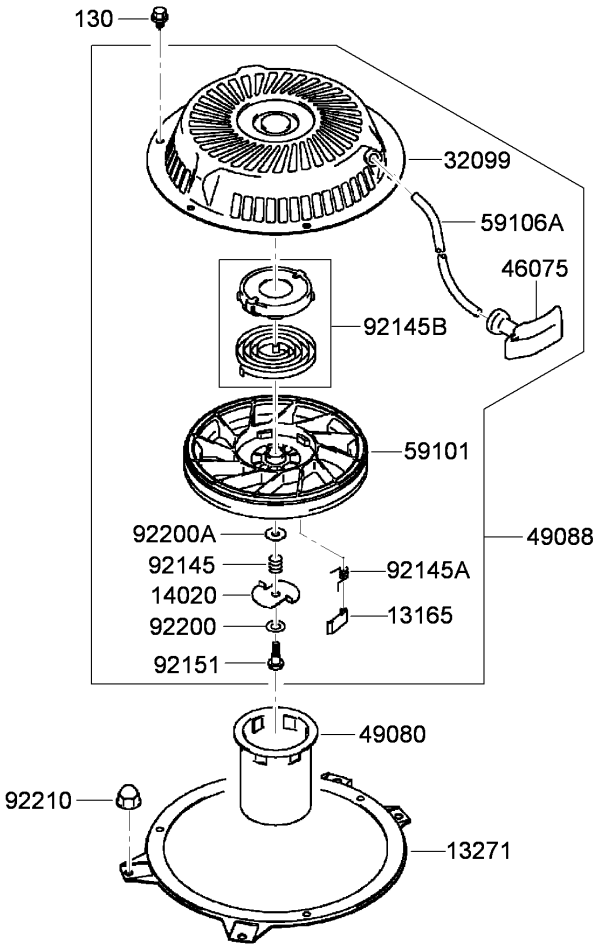

Starter Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸130	130B0608	3	Bolt-Flanged (6X8)
❸13165	13165-7001	2	Pawl-Starter, Recoil
❸13271	13271-7003-9H	1	Plate
❸14020	14020-7001	1	Retainer
❸32099	32099-7002	1	Case-Starter, Recoil
❸46075	46075-7001	1	Grip-Starter, Recoil
❸49080	49080-7001	1	Pulley-Starting
❸49088	49088-7013	1	Starter-Recoil
❸59101	59101-7001	1	Reel-Starter, Recoil
❸59106A	59106-7005	1	Rope
❸92145	92145-7006	1	Spring
❸92145A	92145-7007	2	Spring
❸92145B	92145-7008	1	Spring
❸92151	92151-7008	1	Bolt
❸92200	92200-7004	1	Washer
❸92200A	92200-7005	1	Washer
❸92210	92210-0003	4	Nut

56033



56070



56080



56080A



Label Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❸56033	56033-7001	1	Label-Manual
❸56070	56070-7001	1	Label-Warning
❸56080	56080-2077	1	Label-Brand
❸56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 30682 - Commercial Walk-Behind Mower, Fixed Deck Pistol Grip Gear Drive with 32in Cutting Unit

Product Name	Model/Part
32 Inch and 48 Inch Fixed Deck Low Lift Blades	103-2507
Blade-Notched	103-2527
Atomic Blade and Decal Assembly	104-8595
Weight Kit	107-4100
Blade-16.25 Inch (6 Pack)	108-1119
Blade-Atomic, 16.25 Inch (6 Pack)	110-0407
32 Inch Recycler Kit	110-4915
Soft Bag (3 Bushel)	30198

NOTES

NOTES


TORO®