Form Number 3362-130 Rev A

Z300 Z Master®
With 34in 7-Gauge Side Discharge Mower

Model No. 74408 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Deck Connection Assembly	3
Deck Assembly	4
Deck Decal Assembly No. 114-0503	5
Deflector Assembly No. 110-9917	6
Idler Assembly No. 112-3787	7
Spindle Assembly No. 110-9962	8
Brake Linkage Assembly	9
Front Frame Assembly	10
Frame Decal Assembly No. 114-3552	11
Caster and Height-of-Cut Assembly	12
Seat Assembly	13
Motion Control Assembly	14
Fuel Tank Assembly	15
Engine Mounting Assembly	16
Hydraulic Drive Assembly	17
RH Transmission Assembly No. 116-1204	18
LH Transmission Assembly No. 116-1205	19
Electrical Assembly	20
Attachments and Accessories List	21


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head


Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Obtain parts from www.kawpowerepc.com

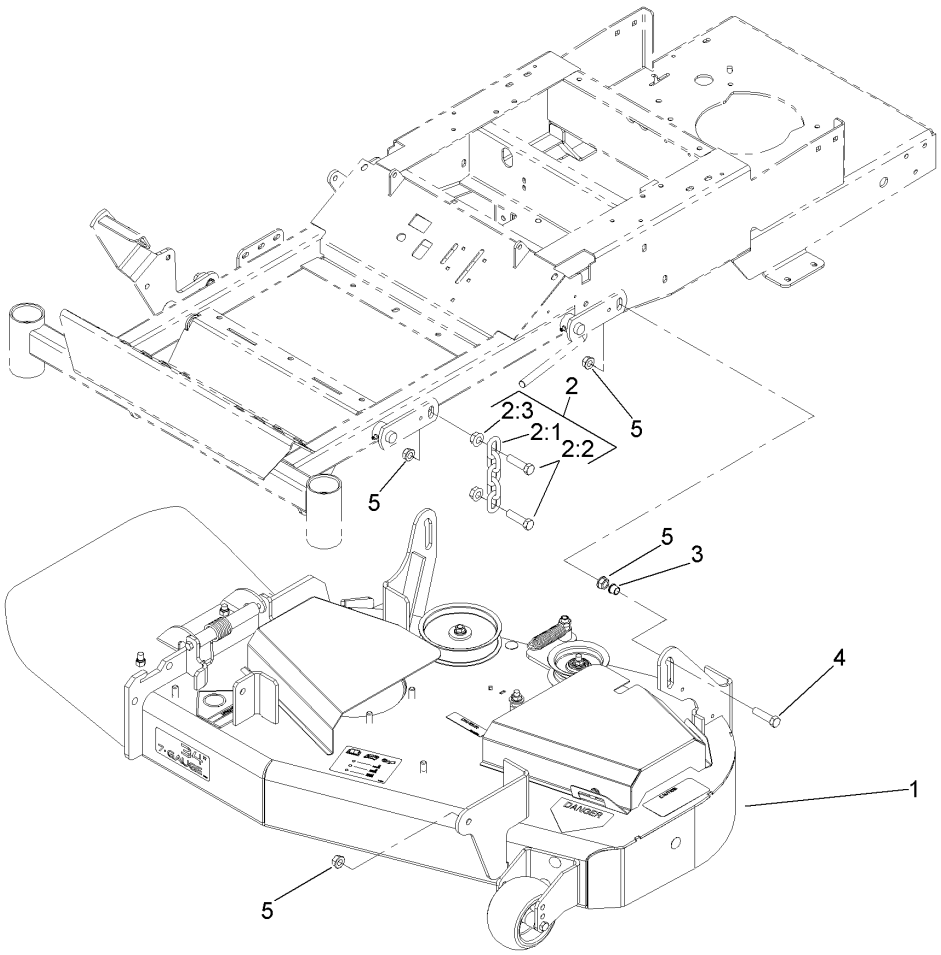

Deck Connection Assembly


Ref	Part No.	Qty.	Description
❷1		1	Deck ASM
2	103-9817	2	Deck Chain ASM
2:1	1-633447	1	Chain-Lift, Deck
2:2	103-1898	2	Screw-HH
2:3	32128-37	2	Nut-HF
3	104-9776	2	Bushing-Flanged
4	103-1898	2	Screw-HH
5	32128-37	8	Nut-HF

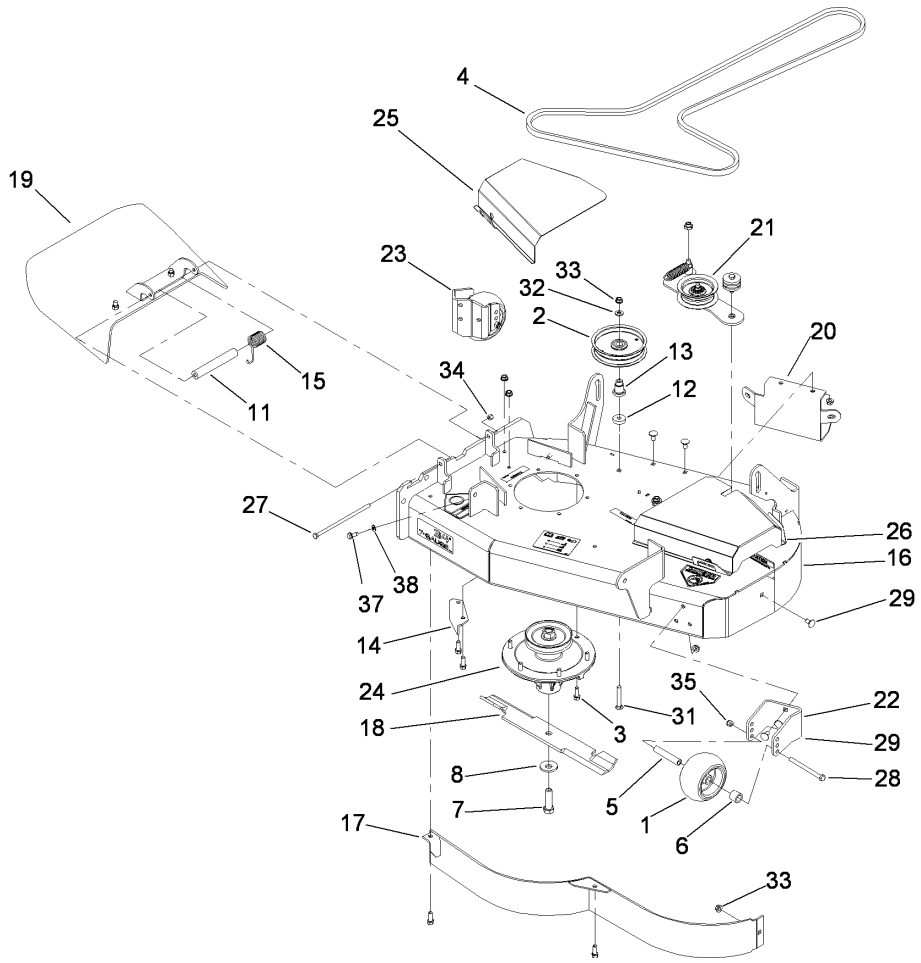

Deck Assembly


Ref	Part No.	Qty.	Description
1	1-603299	2	Roller-Scalp, Anti
2	1-613098	1	Pulley-Idler
3	92-1624	16	Screw-HWH
4	114-0451	1	Belt
5	98-7912	2	Tube-Spanner
6	98-7913	2	Tube-Spacer
7	51-4060	2	Screw-Blade
8	103-0865	2	Washer-Blade Bolt, Heavy
11	105-4622	1	Spacer
12	105-7788	1	Spacer
13	106-3214	1	Mount-Pulley
14	107-8541-01	1	Baffle-Discharge
15	108-4052	1	Spring-Torsion
16	114-0503	1	Deck Decal ASM
17	110-1515-01	1	Baffle
18	110-9915-03	2	Blade-Rotary, 17.50 High Flow
19	110-9917	1	Deflector ASM
20	110-9926-01	1	Plate-Skid
21	112-3787	1	Idler ASM
22	110-9946-01	1	Plate-Support, Wheel
23	110-9949-01	1	Mount-Wheel, RH
24	110-9962	2	Spindle ASM
25	110-9959-01	1	Cover-RH
26	110-9968-01	1	Cover-LH

Ref	Part No.	Qty.	Description
27	322-50	1	Screw-HH
28	323-23	2	Screw-HH
29	3231-1	11	Screw-CARR
31	3231-31	1	Screw-CARR
32	3256-24	1	Washer-Flat
33	3290-357	14	Nut-HHF, Whiz
34	3296-29	1	Nut-Lock, NI
35	3296-39	2	Nut-Lock, NI
37	32144-70	4	Screw-HWHTF
38	3256-23	4	Washer-Flat

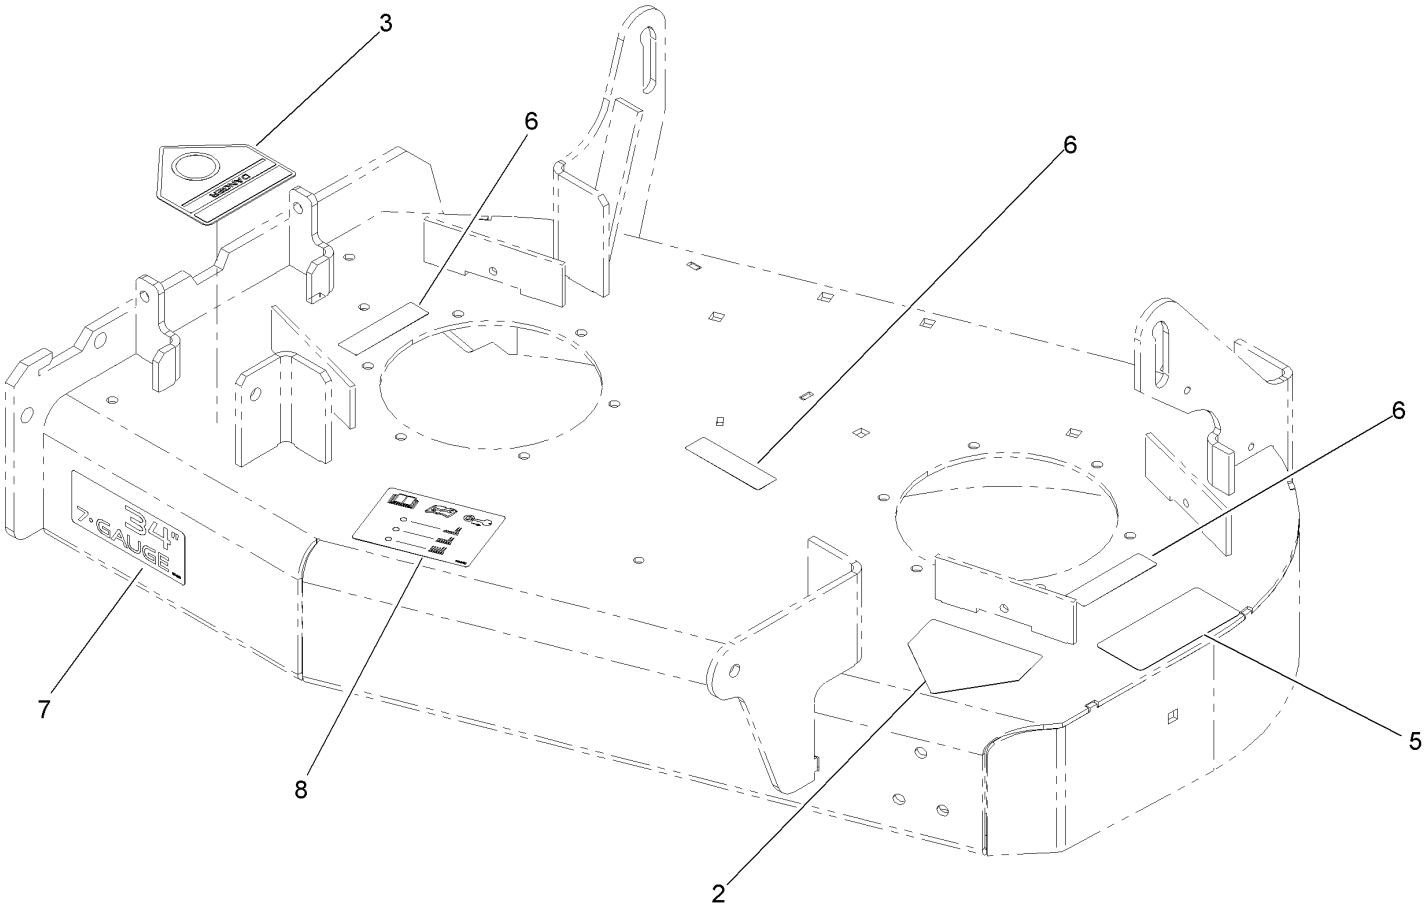


Deck Decal Assembly No. 114-0503

Ref	Part No.	Qty.	Description
2	1-403005	1	Decal-Danger
3	54-9220	1	Decal-Danger
5	68-8340	1	Decal-Torque
6	98-5954	3	Decal-Cover, Missing
7	112-3793	1	Decal
8	112-3858	1	Decal-Anti Scalp

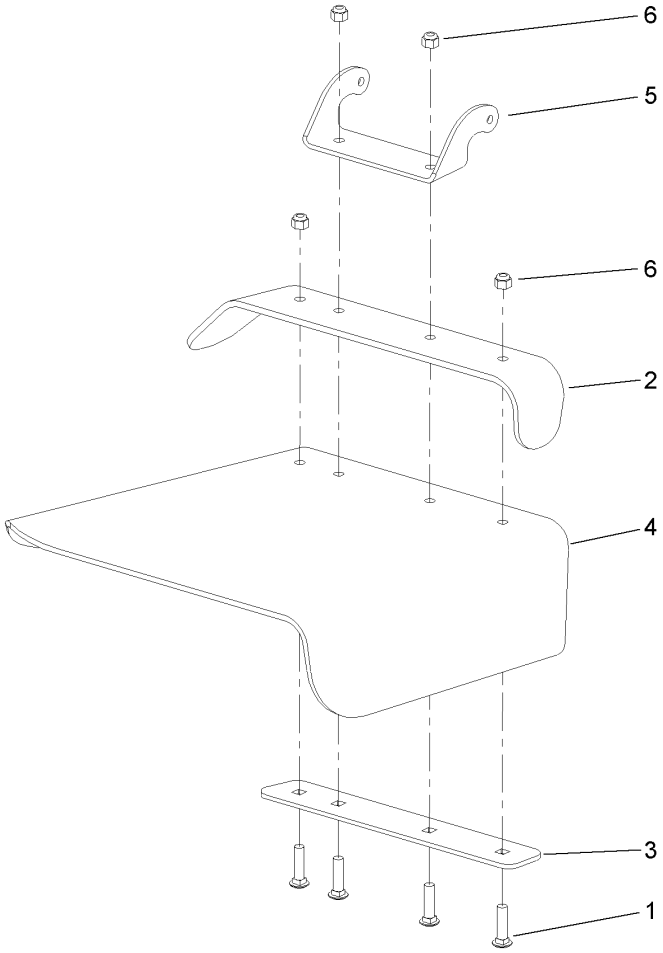


Deflector Assembly No. 110-9917

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	110-9923-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI

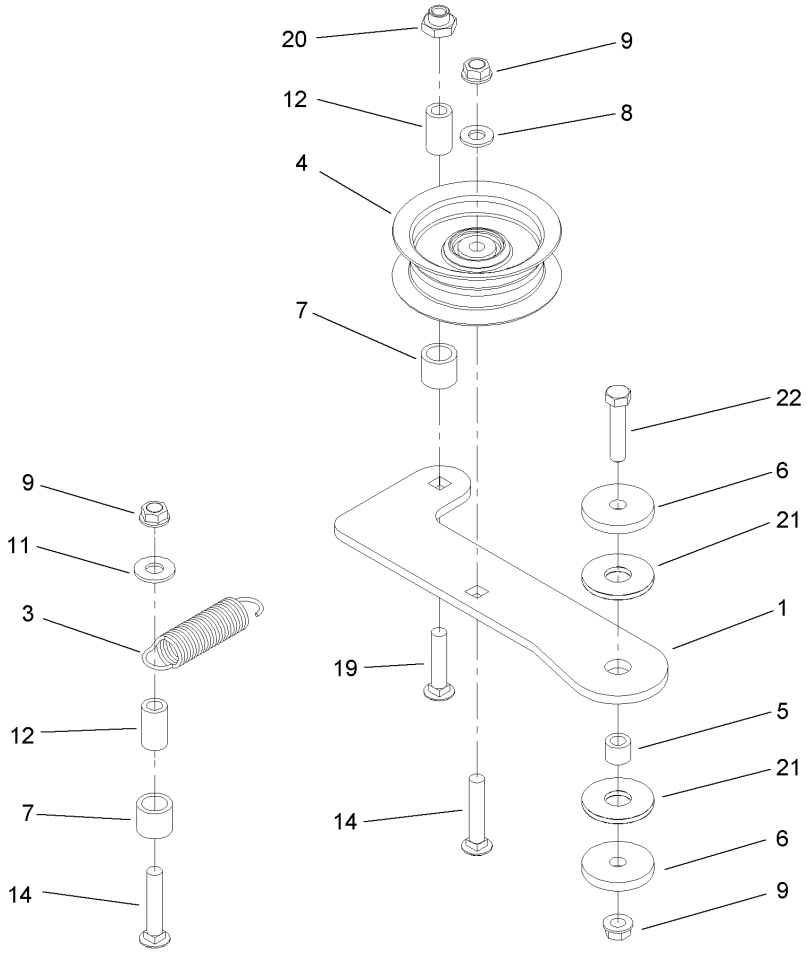


Idler Assembly No. 112-3787

Ref	Part No.	Qty.	Description
1	110-9996	1	Arm-Idler
3	108-4056	1	Spring-Extension
4	106-2175	1	Pulley-Idler, Flat
5	1-413088	1	Bushing-Lever, Lift
6	110-9981	2	Washer-Plain
7	108-4063	2	Spacer-Rubber
8	3256-24	1	Washer-Flat
9	3290-357	3	Nut-HHF, Whiz
11	3256-4	2	Washer-Flat
12	1-603401	3	Spacer-Fender
14	3231-6	2	Screw-CARR
19	3231-5	1	Screw-CARR
20	103-9933	1	Nut-Shoulder
21	114-0463	2	Washer-Friction, Composite
22	323-9	1	Screw-HH

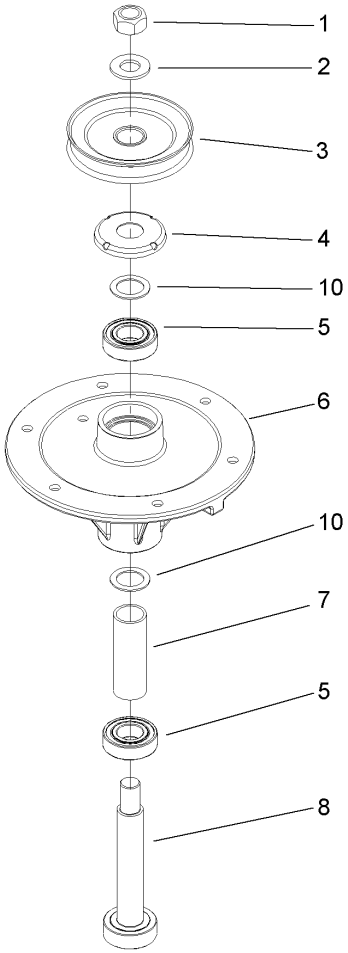


Spindle Assembly No. 110-9962

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	110-9932	1	Pulley
4	106-3204	1	Shield-Bearing
5	104-6325	2	Bearing-Ball
6	108-6696	1	Housing-Spindle
7	107-8502	1	Spacer-Bearing
8	110-0726	1	Shaft-Spindle
10	10-8110	2	Washer-Thrust

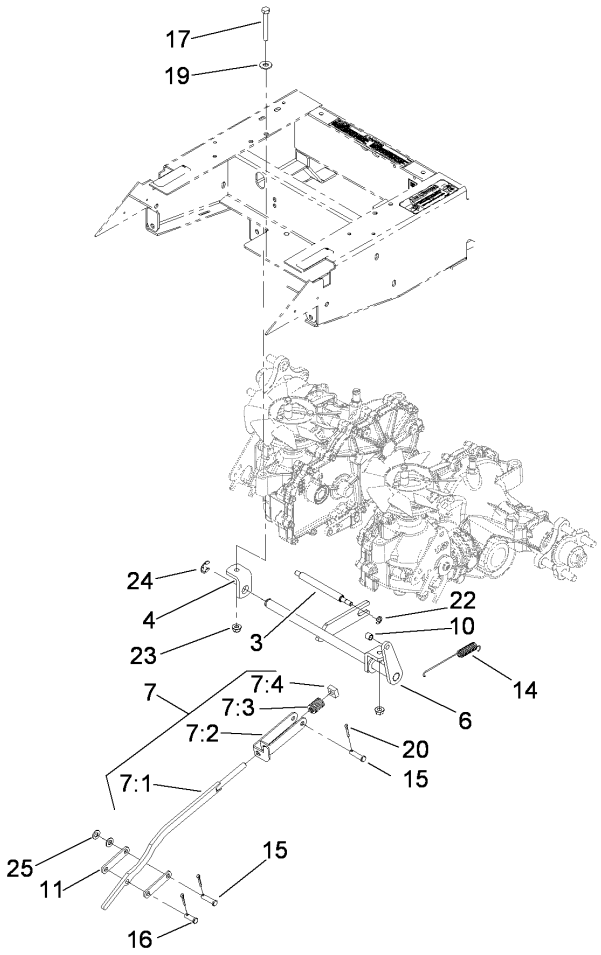


Brake Linkage Assembly

Ref	Part No.	Qty.	Description
3	103-9408	1	Bar-Equalizer
4	103-9409	1	Bracket-Pivot, Brake
6	109-5376	1	Bellcrank-Brake
❷7		1	Brake Link ASM
7:1	109-5370	1	Link-Brake
7:2	114-0548	1	Clevis-Brake
7:3	103-9925	1	Spring-Brake
7:4	103-9926	1	Nut-Square
10	1-633545	1	Spacer
11	109-0223	2	Link-Center, Over
14	109-2861	1	Spring-Return, Brake
15	283-6	2	Pin-Clevis
16	283-75	1	Pin-Clevis
17	322-12	2	Screw-HH
19	3256-3	2	Washer-Flat
20	3272-10	3	Pin-Cotter
22	32120-35	1	Ring-Retaining, EXT
23	104-8300	2	Nut-Flange, NI
24	32120-19	1	E-Ring
25	3256-23	2	Washer-Flat

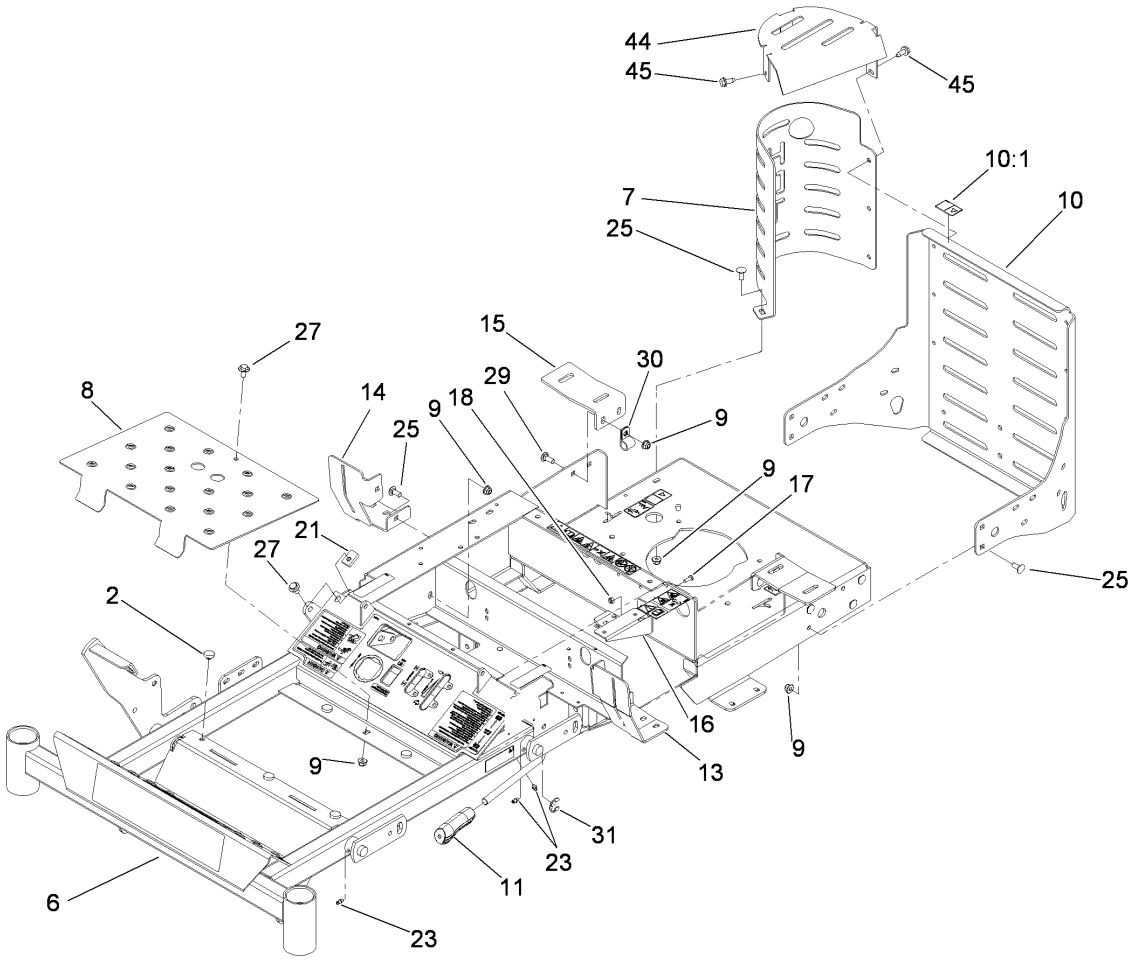


Front Frame Assembly

Ref	Part No.	Qty.	Description
2	1-513658	5	Bumper
6	114-3552	1	Frame ASM
7	116-0201-03	1	Guard-Muffler
8	103-9381-03	1	Plate-Floor
9	104-8300	19	Nut-Flange, NI
10	114-0543	1	Rear Guard ASM
10:1	93-8069	1	Decal-Surface, Hot
11	109-0375	1	Grip-Lever, Brake
13	109-2421-03	1	Mount-Tank, Fuel (LH)
14	109-2422-03	1	Mount-Tank, Fuel (RH)
15	109-2429-03	2	Bracket-Fuel Tank, Rear
16	114-3560-01	1	Bracket-Fuseblock
17	3290-500	2	Screw-PPH
18	3296-2	2	Nut-Lock, NI
21	109-2605	2	Stop-Motion
23	302-19	5	Fitting-Grease
25	3230-23	13	Screw-CARR
27	3234-7	3	Screw-HHF
29	3230-16	4	Screw-CARR
30	1-603727	2	Clip-Loom
31	32151-48	1	E-Ring
44	114-0481-03	1	Shield-Heat
45	32144-70	5	Screw-HWHTF

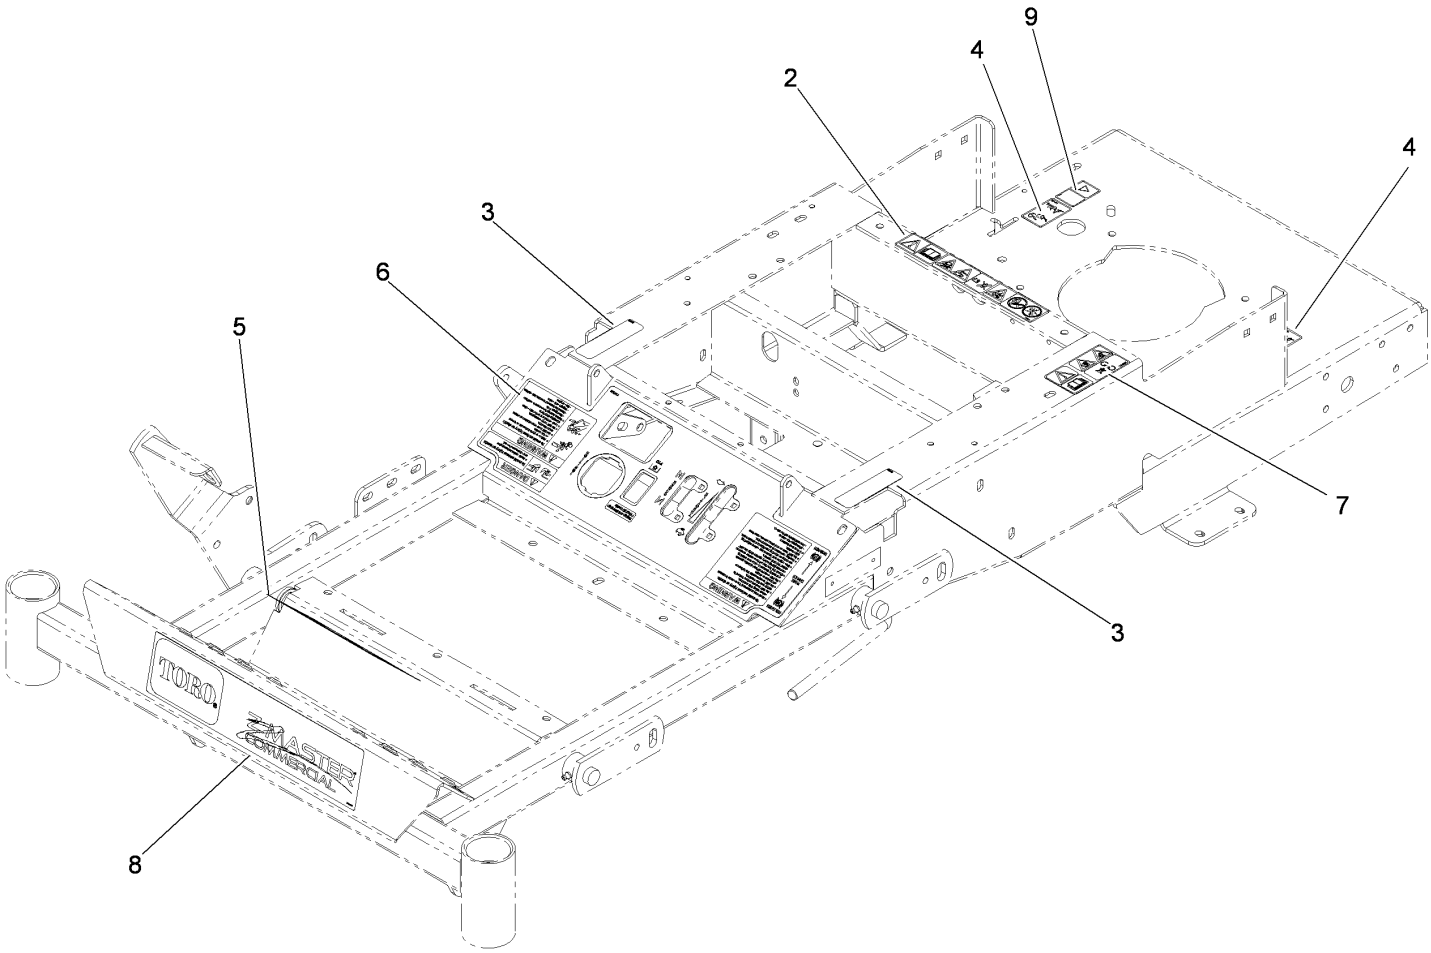

Frame Decal Assembly No. 114-3552


Ref	Part No.	Qty.	Description
2	112-3856	1	Decal-Danger Battery, Ce
3	99-8936	2	Decal-Control, Motion
4	112-3854	2	Decal-Transport, Ce
5	112-3850	1	Decal-Danger Slope, Ce
6	114-3556	1	Decal-Console
7	112-3857	1	Decal-Danger, Ce
8	112-3837	1	Decal
9	93-8069	1	Decal-Surface, Hot

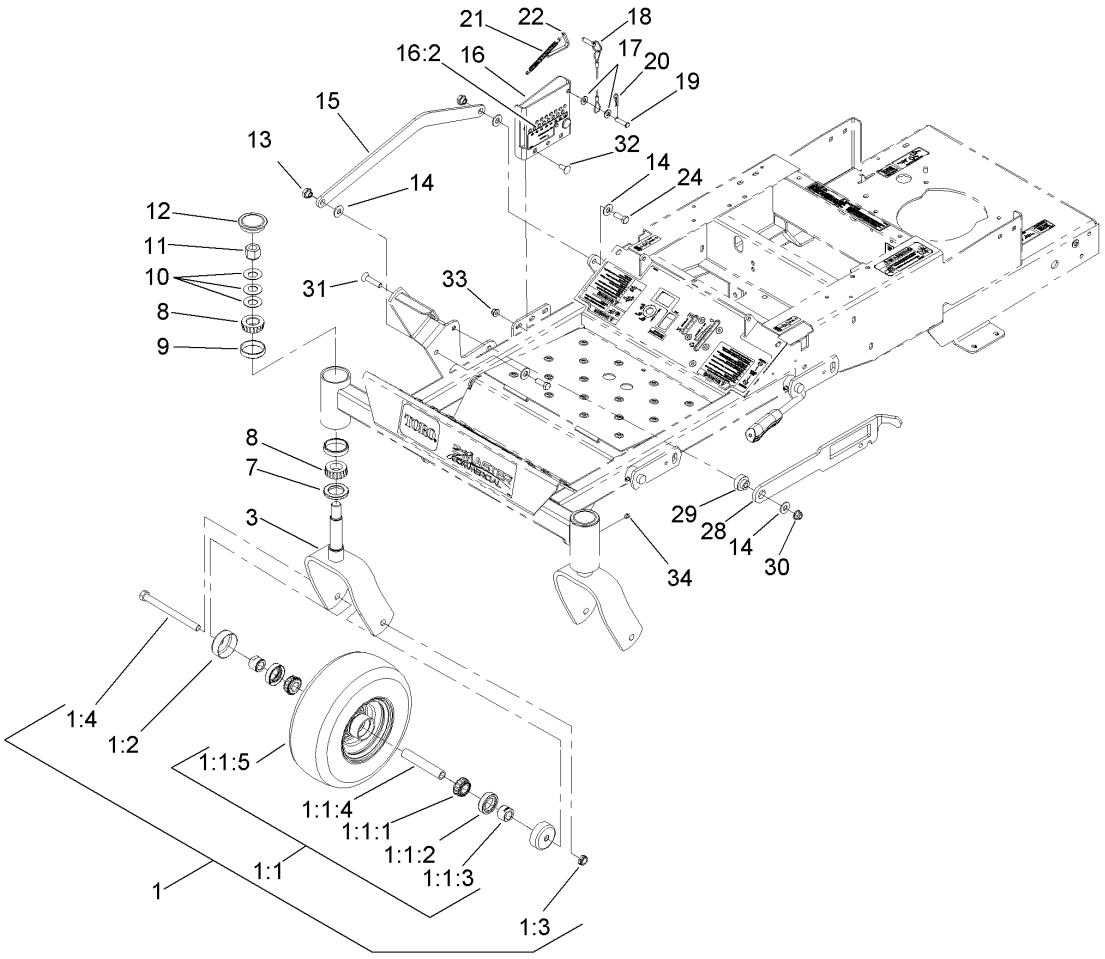

Caster and Height-of-Cut Assembly

Ref	Part No.	Qty.	Description
1	112-3810	2	Wheel And Bearing ASM
❷1:1		1	Wheel Bearing ASM
1:1:1	1-633585	2	Bearing-Cone, Taper
1:1:2	103-0063	2	Seal-Caster
1:1:3	103-3051	2	Spacer-Nut
1:1:4	103-3157	1	Axle-Caster
1:1:5	110-9965	1	Wheel And Tire ASM
1:2	103-2768	2	Guard-Seal
1:3	3296-45	1	Nut-Lock, NI
1:4	325-20	1	Screw-HH
3	103-8618-01	2	Fork-Caster
7	1-543511	2	Seal-Grease
8	1-543509	4	Bearing-Roller, Tapered
9	1-543508	4	Cup-Bearing
10	1-633508	6	Washer-Bellville
11	3296-51	2	Nut-Lock, NI
12	103-4882	2	Cap-Grease
13	103-9933	2	Nut-Shoulder
14	63-8410	5	Washer
15	103-9932	1	Link-Control, Deck
16	109-3544	1	Height Adjust ASM
16:2	109-2463	1	Decal-Height, Deck
17	1-303334	2	Washer-Spring
18	109-3323	1	Height Pin W/Lanyard ASM


Ref	Part No.	Qty.	Description
19	283-6	1	Pin-Clevis
20	1-806003	1	Pin-Cotter, Hair
21	109-2416	1	Spring-Adjust, Height
22	109-2620	1	Pawl-Control, Height
24	323-6	2	Screw-HH
28	109-2410	1	Bar-Adjust, Height
29	103-9934	1	Bushing
30	104-8301	1	Nut-Flange, NI
31	3289-19	1	Screw-FH
32	3230-23	2	Screw-CARR
33	104-8300	2	Nut-Flange, NI
34	1-811010	2	Plug

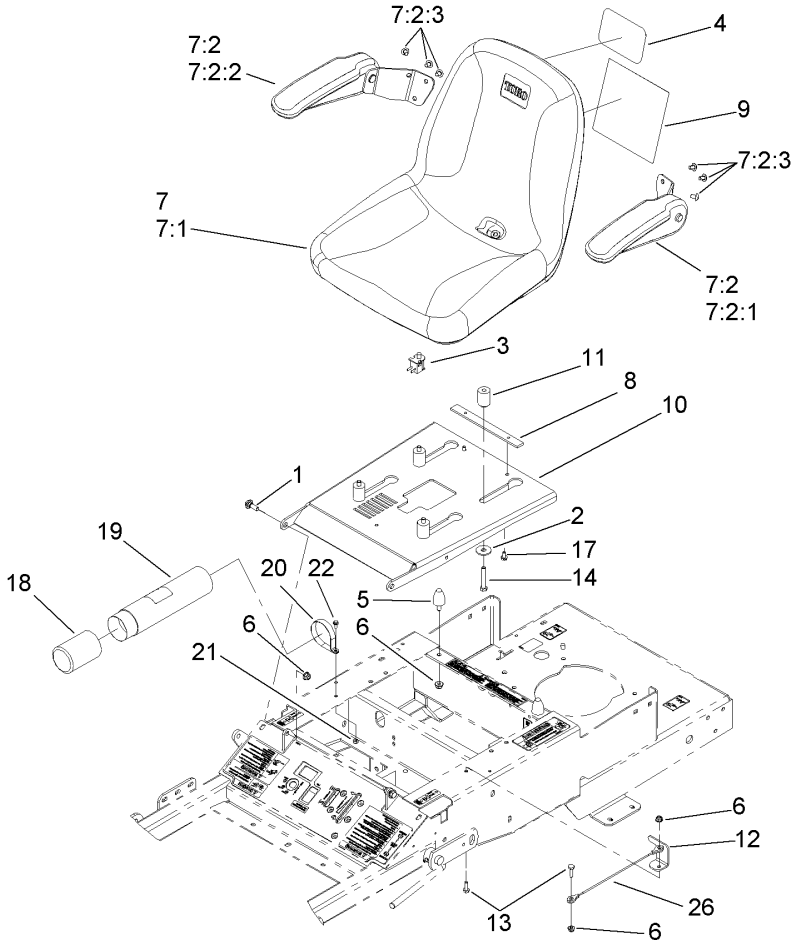

Seat Assembly

Ref	Part No.	Qty.	Description
1	27-0410	2	Screw-Shoulder
2	63-8410	4	Washer
3	82-2190	1	Switch-Bail
4	94-2579	1	Decal
5	103-9376	2	Bumper-Seat
6	104-8300	4	Nut-Flange, NI
7	112-3845	1	Seat (With Arm Rests)
7:1	112-3846	1	Seat
7:2	108-6163	1	Armrest Kit
7:2:1	110-6569	1	LH Armrest Kit
7:2:2	110-6570	1	RH Armrest Kit
7:2:3	108-6179	6	Screw-HSBH
8	109-2427-03	1	Bar-Stop, Seat
9	112-3836	1	Decal-Service
10	109-2607-03	1	Bracket-Seat
11	109-2608	4	Spacer
12	114-0507	1	Bracket-Seat Holdown
13	321-6	2	Screw-HH
14	322-10	4	Screw-HH
17	32144-4	2	Screw-HWH
18	104-7048	1	Cap-Housing
19	104-7050	1	Tube-Manual
20	2412-120	1	R-Clamp
21	3296-2	1	Nut-Lock, NI


Ref	Part No.	Qty.	Description
22	3290-321	1	Screw-HWH
26	109-2628	1	Cable-Stop, Seat

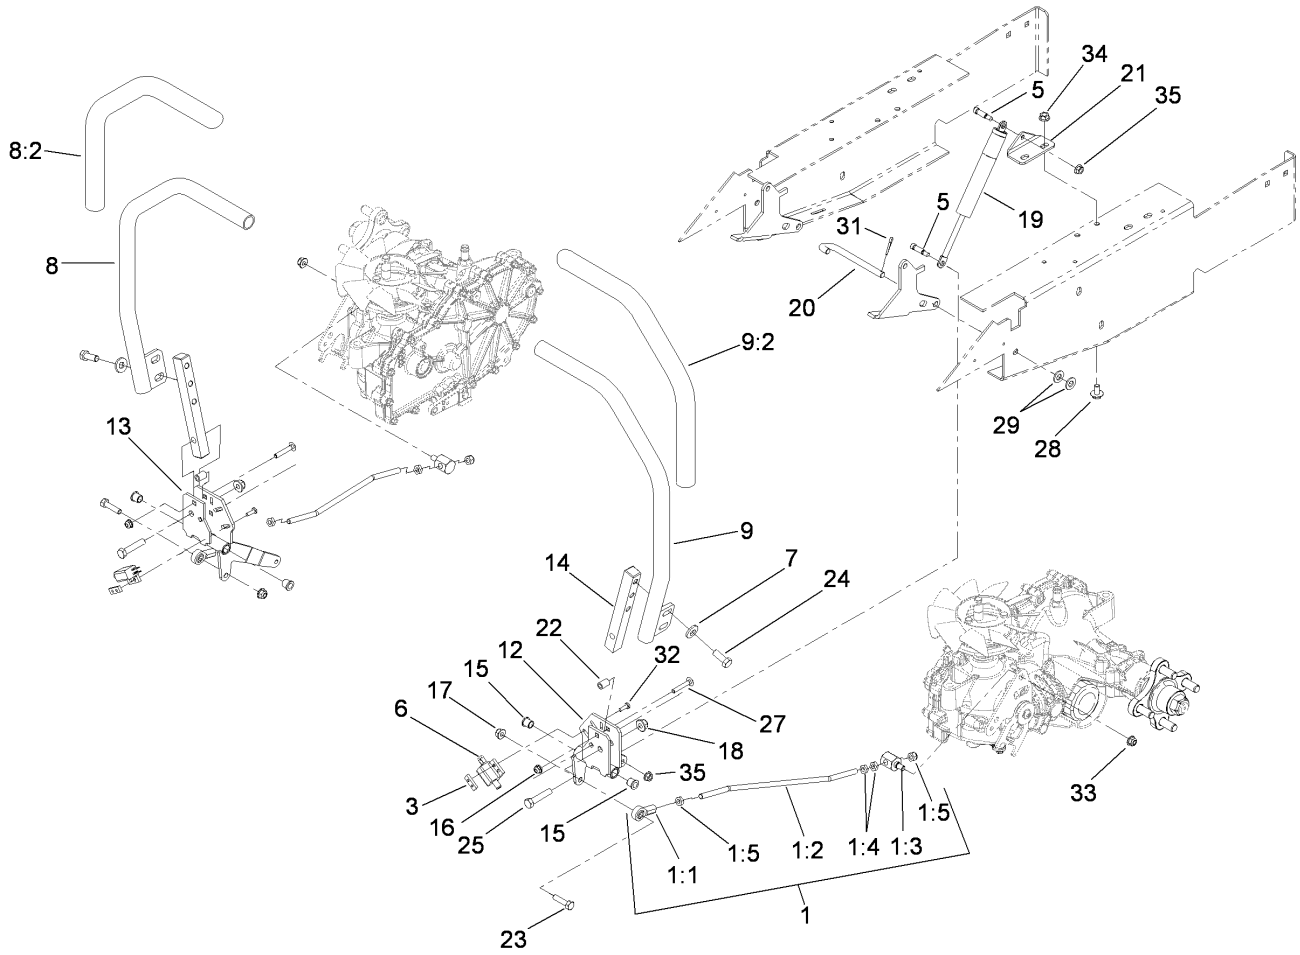

Motion Control Assembly


Ref	Part No.	Qty.	Description
❷1		2	Steering Rod ASM
1:1	1-543017	1	Balljoint-RH
1:2	103-9407	1	Rod-Steering, LH
1:3	103-9373	1	Trunnion
1:4	3220-2	3	Nut-Jam
1:5	3296-4	1	Nut-Lock
3	1-633181	2	Plate-Tapped
5	1-809057	4	Screw-HSH
6	65-7410	2	Switch-Pole, Single
7	98-5975	4	Washer-Belleville
8	112-3814	1	RH Control Lever ASM
8:2	108-5213	1	Grip-Foam
9	112-3815	1	LH Control Lever ASM
9:2	108-5213	1	Grip-Foam
12	103-9411	1	Control-Steering, RH
13	103-9413	1	Control-Steering, LH
14	103-9414	2	Mount-Post, Lever
15	103-9928	4	Bearing
16	104-7201	4	Nut-HF
17	104-8300	2	Nut-Flange, NI
18	104-8301	2	Nut-Flange, NI
19	109-2339	2	Damper-Control, Motion
20	109-2423	2	Shaft-Pivot, Control
21	109-2428	2	Bracket-Damper

Ref	Part No.	Qty.	Description
22	1-633545	4	Spacer
23	322-6	2	Screw-HH
24	323-6	4	Screw-HH
25	323-9	2	Screw-HH
27	3229-4	4	Screw-CARR
28	3234-7	4	Screw-HHF
29	3256-24	2	Washer-Flat
31	3272-10	2	Pin-Cotter
32	3290-500	4	Screw-PPH
33	104-8300	2	Nut-Flange, NI
34	32128-20	4	Nut-HF
35	32128-33	4	Nut-HF

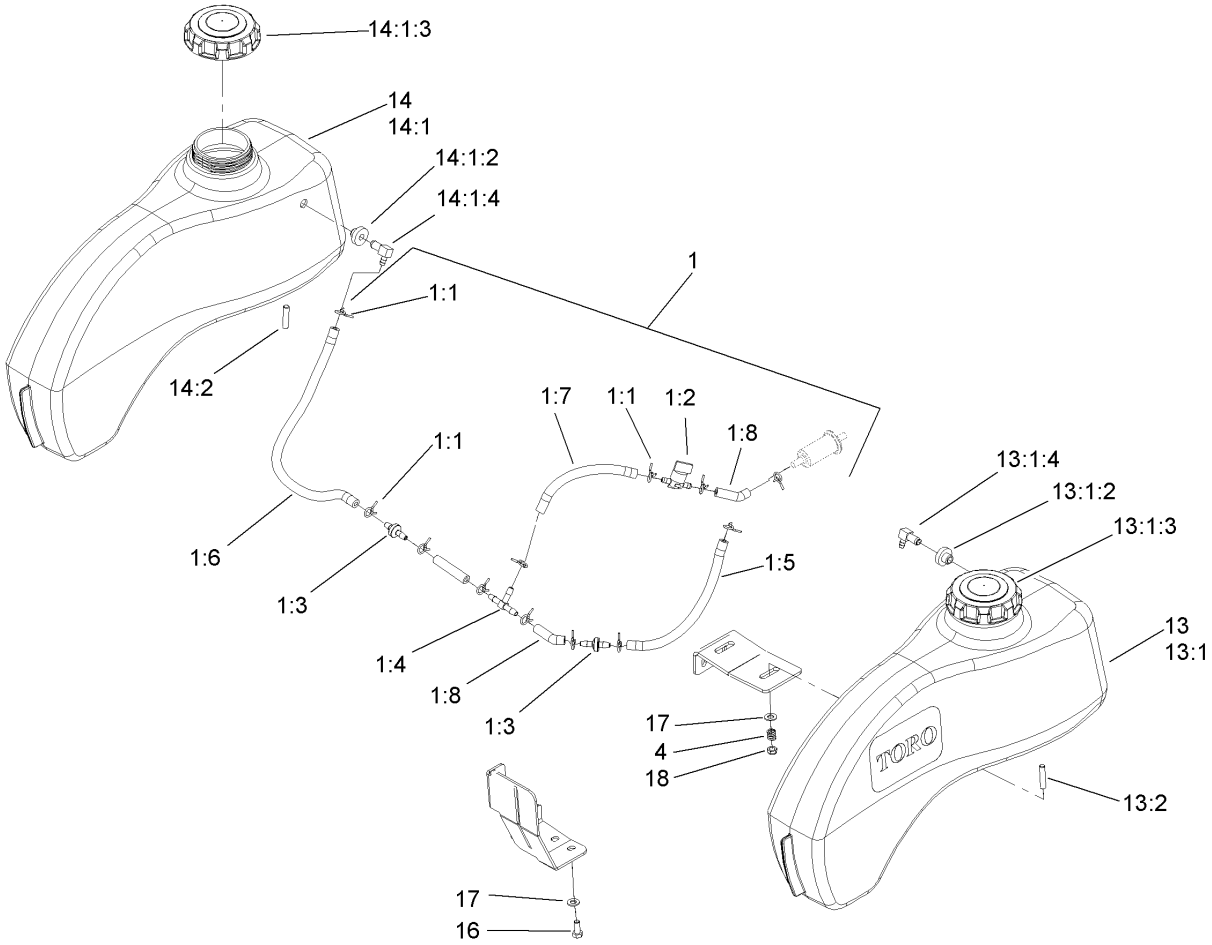

Fuel Tank Assembly


Ref	Part No.	Qty.	Description
❷1		1	Fuel Line ASM
1:1	1-303077	12	Clamp
1:2	1-603770	1	Valve-Fuel
1:3	99-5000	2	Valve-Check, Fuel
1:4	99-5005	1	Fitting-Tee, Barbed
1:5	107-7684	1	Hose-Fuel
1:6	108-4582	1	Hose-Fuel
1:7	109-0293	1	Hose-Fuel
1:8	109-0304	3	Hose-Fuel
4	1-633349	4	Spring-Tank, Fuel
13	112-3780	1	LH Tank ASM (W/Studs)
❷13:1		1	LH Tank ASM
13:1:2	104-7789	1	Bushing
13:1:3	109-0346	1	Cap-Fuel, Gas
13:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
13:2	1-633023	2	Stud
14	112-3783	1	RH Tank ASM (W/Studs)
❷14:1		1	RH Tank ASM
14:1:2	104-7789	1	Bushing
14:1:3	109-0346	1	Cap-Fuel, Gas
14:1:4	109-2420	1	Fitting-Fuel (W/Line And Screen)
14:2	1-633023	2	Stud
16	322-3	2	Screw-HH
17	3256-23	6	Washer-Flat
18	3296-47	4	Nut-Lock, NI

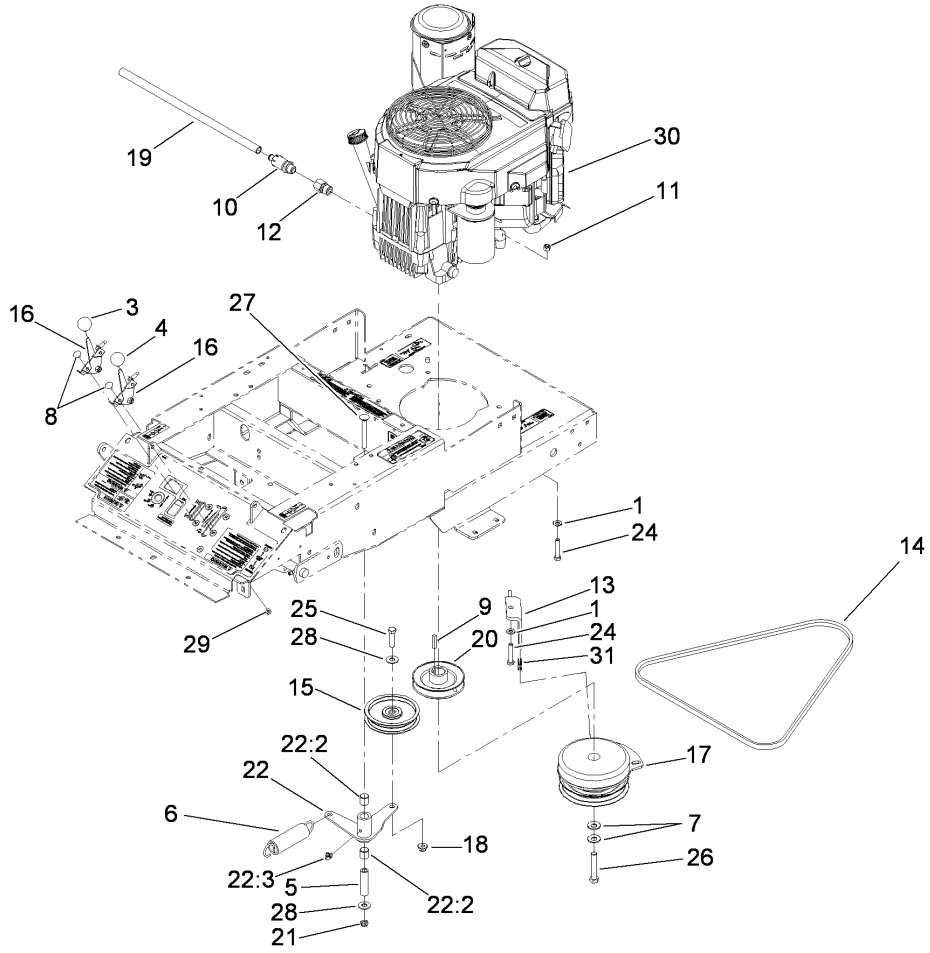

Engine Mounting Assembly

Ref	Part No.	Qty.	Description
1	1-303334	4	Washer-Spring
3	1-513592	1	Knob-Ball
4	1-513593	1	Knob-Ball, Black
5	1-603384	1	Bushing-Pivot, Idler
6	108-4056	1	Spring-Extension
7	1-603610	2	Washer-Spring
8	1-807513	4	Bolt-CARR
9	13-2840	1	Key-Square
10	92-6877	1	Valve-Drain, Oil
11	3296-29	4	Nut-Lock, NI
12	103-1966	1	Adapter
13	103-9356-03	1	Rotation-Stop, Clutch
14	112-3799	1	Belt-V
15	103-9401	1	Idler
16	103-9946	2	Throttle Control ASM
17	103-9950	1	Clutch
18	104-8301	1	Nut-Flange, NI
19	106-7022	1	Tube-Drain, Oil
20	109-0393	1	Pulley-Engine
21	3296-59	1	Nut-Lock, NI
22	109-3119	1	Idler Hydro ASM
22:2	1-513034	2	Sleeve-Bearing
22:3	302-40	1	Fitting-Grease
24	322-9	4	Screw-HH


Ref	Part No.	Qty.	Description
25	323-8	1	Screw-HH
26	3212-10	1	Screw-HH
27	3231-10	1	Screw-CARR
28	3256-4	2	Washer-Flat
29	3296-2	4	Nut-Lock, NI
❷❸30		1	Engine-Kawasaki, FH580V
31	109-3765	1	Bumper

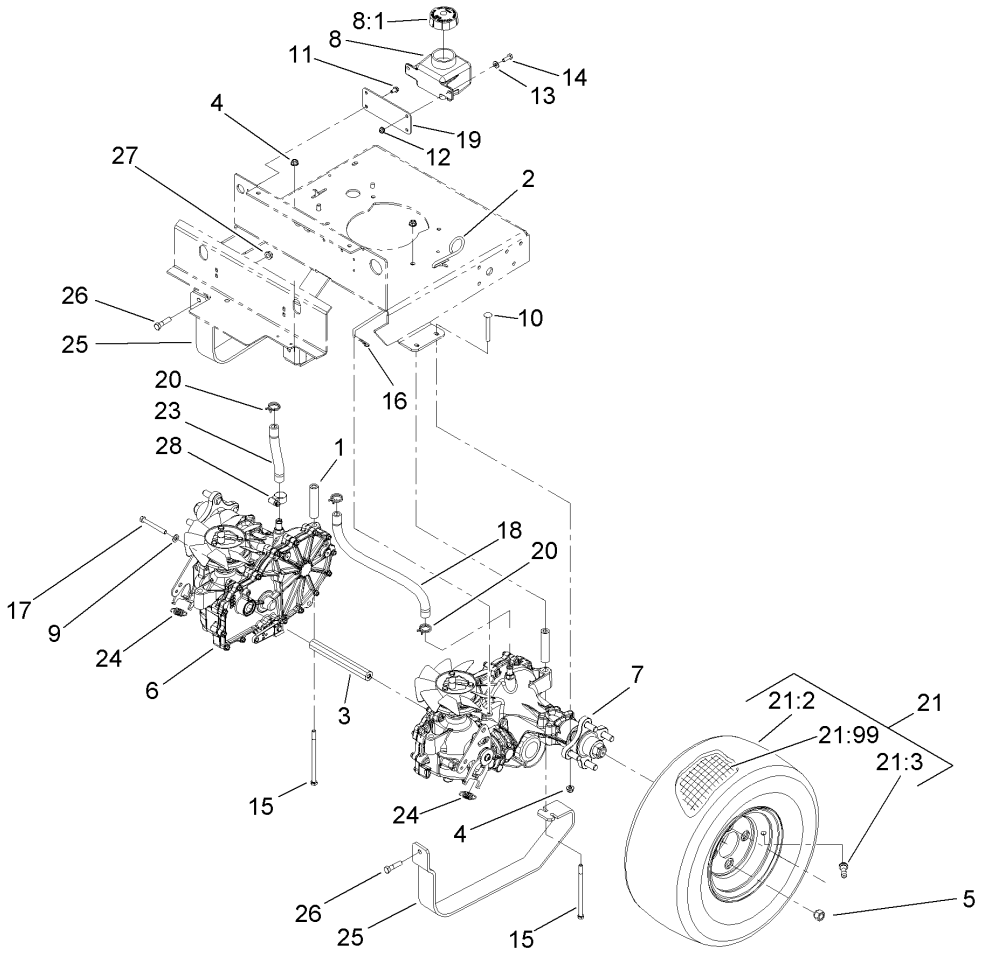

Hydraulic Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9397	2	Spacer-Hydro
2	103-9380	2	Rod-Bypass, Hydro
3	103-9398	1	Spacer-Axle
4	104-8300	6	Nut-Flange, NI
5	242-50	8	Nut-Lug
6	116-1204	1	RH Transaxle ASM
7	116-1205	1	LH Transaxle ASM
8	109-2250	1	Vent-Tank, Hydro
8:1	109-3320	1	Cap-Reservoir, Hydraulic
9	98-5975	2	Washer-Belleville
10	3230-9	4	Screw-CARR
11	32144-4	2	Screw-HWH
12	104-7201	2	Nut-HF
13	3256-22	2	Washer-Flat
14	321-4	2	Screw-HH
15	1-800286	2	Screw-HH
16	1-806003	2	Pin-Cotter, Hair
17	323-11	2	Screw-HH
18	109-3459	1	Hose-HYD
19	103-9350-03	1	Plate-Mount, Tank
20	109-3322	3	Clamp-Hose
21	112-3794	2	Wheel And Tire ASM
21:2	112-3797	1	Tire
21:3	232-27	1	Stem-Valve

Ref	Part No.	Qty.	Description
21:99	107-2491	1	Tube-Tire
23	109-3319	1	Hose-HYD
24	109-2631	2	Spring-Return, Neutral
25	114-0469-03	2	Guard-Transmission
26	323-8	2	Screw-HH
27	3290-357	2	Nut-HHF, Whiz
28	109-6801	1	Clamp-Hose

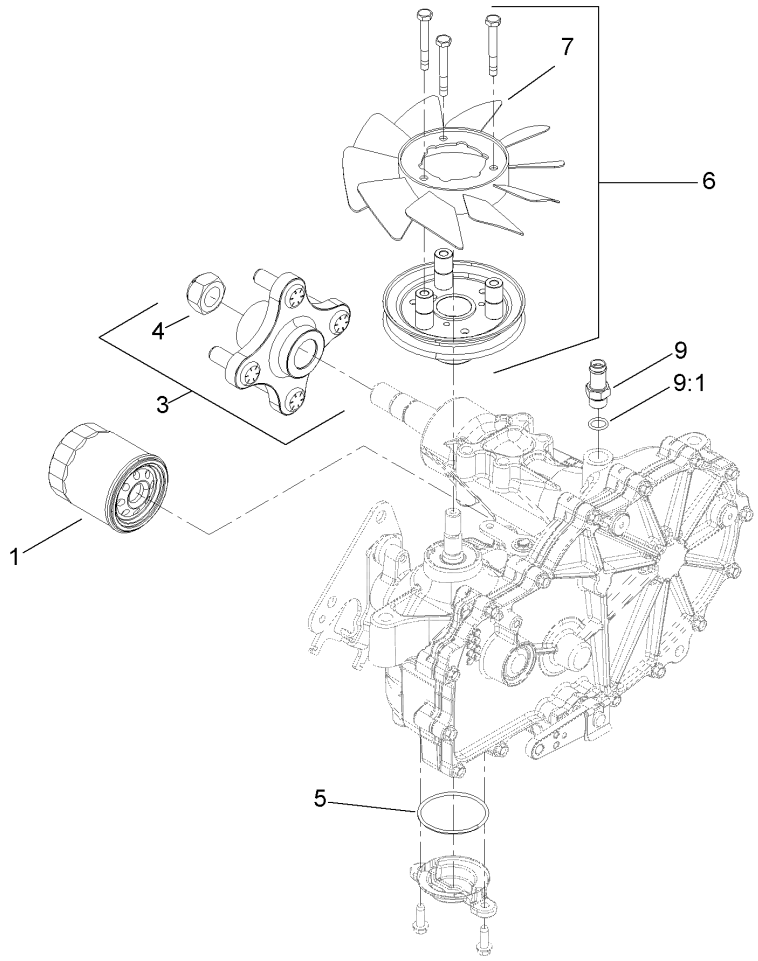


RH Transmission Assembly No. 116-1204

Ref	Part No.	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
❶2	109-3537	1	Complete Seal Kit
3	109-3538	1	Hub Kit
4	109-3536	1	Nut-Hub
5	109-3540	1	O-Ring-Seal
6	116-1207	1	Fan And Pulley Kit
7	116-1206	1	Fan-7 Inch, 10 Blade
9	109-3278	1	Adapter-Straight
9:1	1-603921	1	O-Ring

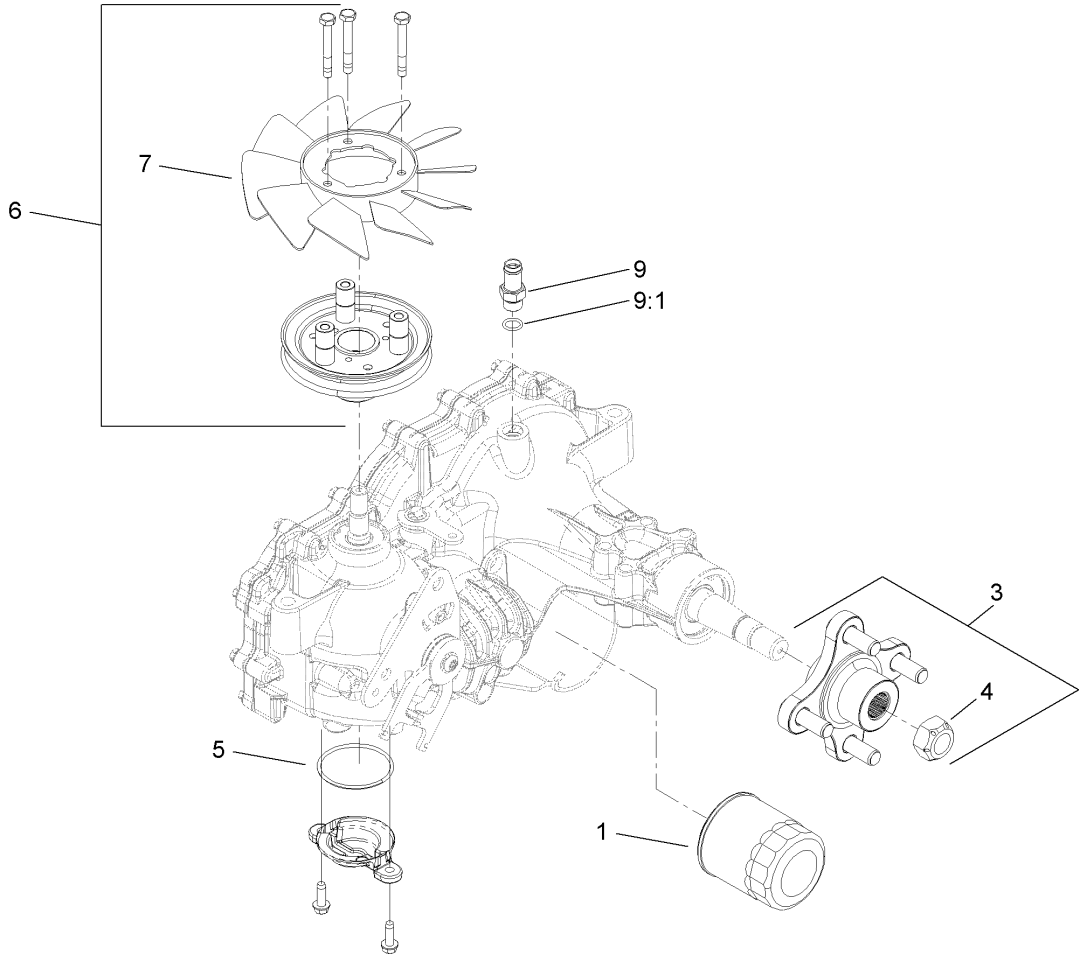

LH Transmission Assembly No. 116-1205

Ref	Part No.	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
❶2	109-3537	1	Complete Seal Kit
3	109-3538	1	Hub Kit
4	109-3536	1	Nut-Hub
5	109-3540	1	O-Ring-Seal
6	116-1207	1	Fan And Pulley Kit
7	116-1206	1	Fan-7 Inch, 10 Blade
9	109-3278	1	Adapter-Straight
9:1	1-603921	1	O-Ring

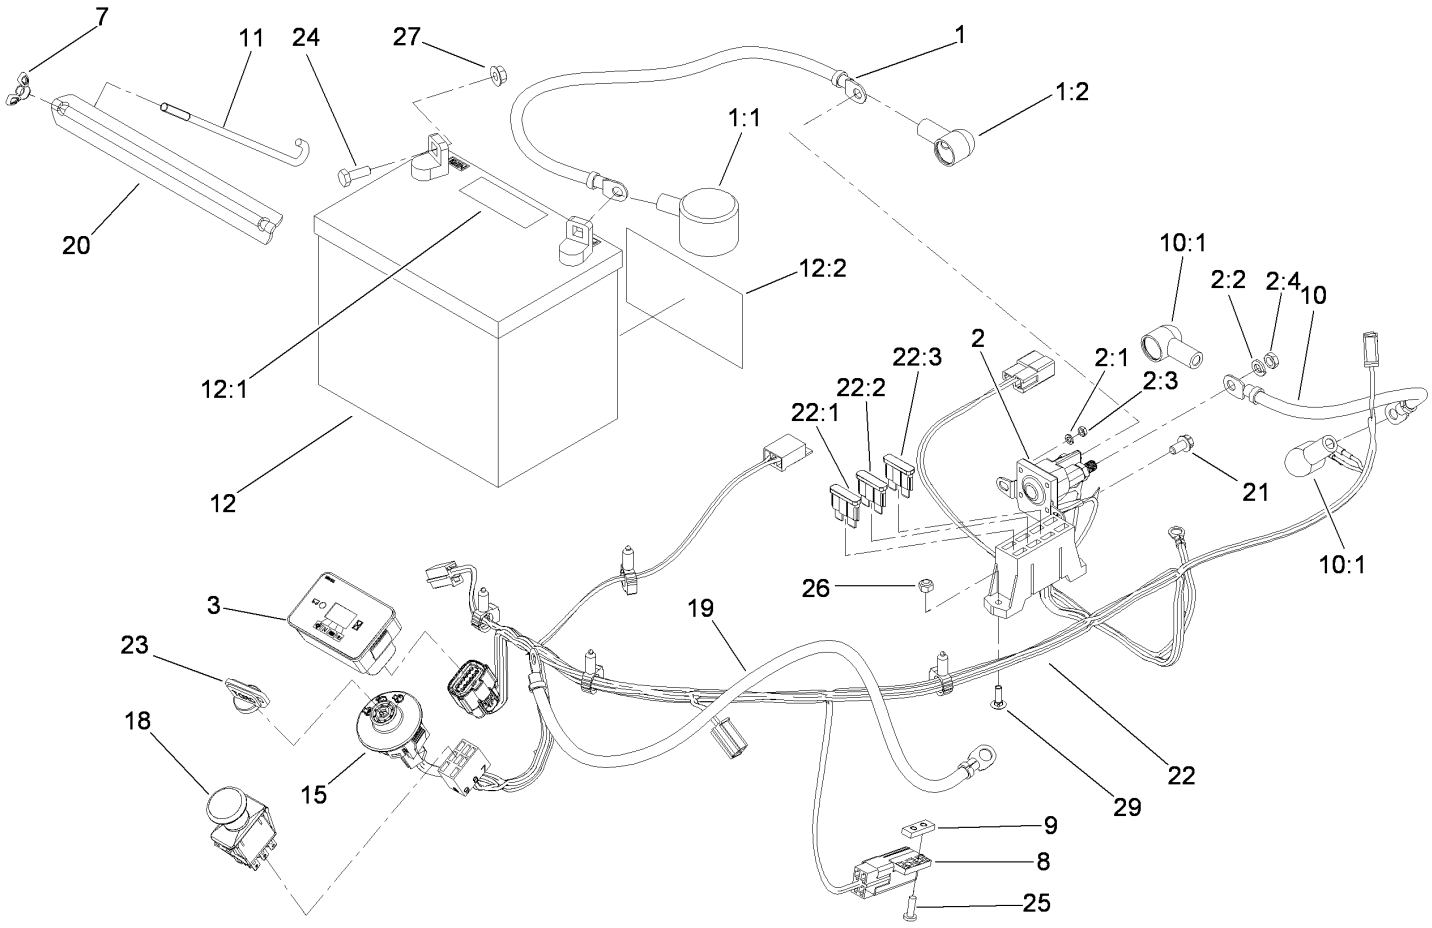

Electrical Assembly

Ref	Part No.	Qty.	Description
1	109-7653	1	Positive Battery Cable ASM
1:1	109-2407	1	Insulator-Battery
1:2	1-543393	1	Insulator-Solenoid
2	1-513075	1	Switch-Solenoid
2:1	3253-17	2	Washer-Lock
2:2	3253-4	2	Washer-Lock
2:3	3219-14	2	Nut-Hex
2:4	3220-2	2	Nut-Jam
3	112-8650	1	Hour Meter ASM
7	1-543792	2	Wingnut
8	1-633111	1	Switch
9	1-633181	1	Plate-Tapped
10	109-7620	1	Positive Starter Cable ASM
10:1	1-543393	2	Insulator-Solenoid
11	1-633651	2	Bolt-Holddown
12	105-1692	1	Battery
12:1	104-4163	1	Decal-Battery
12:2	104-4164	1	Decal-Battery
15	116-0229	1	Switch-Ignition
18	103-5221	1	Switch-PTO
19	103-8355	1	Cable-Battery, Negative
20	103-9944-03	1	Angle-Battery
21	32144-4	2	Screw-HWH
22	114-3515	1	Harness-Wire

Ref	Part No.	Qty.	Description
22:1	109103	1	Fuse-30 Amp
22:2	109102	2	Fuse-25 Amp
22:3	218-578	1	Fuse-10 Amp
23	63-8360	1	Key-Ignition
24	321-4	2	Screw-HH
25	3290-500	2	Screw-PPH
26	3296-2	2	Nut-Lock, NI
27	32128-33	2	Nut-HF
29	1-807533	2	Bolt-CARR

Attachments and Accessories

For 74408 - Z300 Z Master, With 34in 7-Gauge Side Discharge Mower

Product Name	Model/Part
Recycler Kit	110-9960
17.5 Inch Recycling Blade (6-Pack)	114-4956
17.5 Low Flow Blade (6-Pack)	114-4957
17.5 Med Flow Blade (6-Pack)	114-4958
17.5 High Flow Blade (6-Pack)	114-4959
17.5 Atomic Blade (6-Pack)	114-4960
Chute Gate Kit	78520

NOTES

NOTES


TORO®