Form Number 3362-303 Rev A

21in Commercial Lawn Mower

Model No. 22156 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Front End and Tunnel Assembly	3
Wheel Assembly No. 117-5252	4
Disharge Door and Rear Wheel Assembly	5
Wheel Assembly No. 117-5253	6
Engine and Blade Assembly	7
Handle Assembly	8
Rear Bag Assembly	9
Cylinder Barrel Assembly Honda GSV190LA A3T	10
Oil Pan Assembly Honda GSV190LA A3T	11
Crankshaft Assembly Honda GSV190LA A3T	12
Piston and Connecting Rod Assembly Honda GSV190LA A3T	13
Camshaft Pulley Assembly Honda GSV190LA A3T	14
Recoil Starter Assembly Honda GSV190LA A3T	15
Fan Cover Assembly Honda GSV190LA A3T	16
Carburetor Assembly Honda GSV190LA A3T	17
Air Cleaner Assembly Honda GSV190LA A3T	18
Muffler Assembly Honda GSV190LA A3T	19
Fuel Tank Assembly Honda GSV190LA A3T	20
Flywheel Assembly Honda GSV190LA A3T	21
Control Assembly Honda GSV190LA A3T	22
Label Assembly Honda GSV190LA A3T	23

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not serviced separately


❷ Obtain from your local Honda dealer

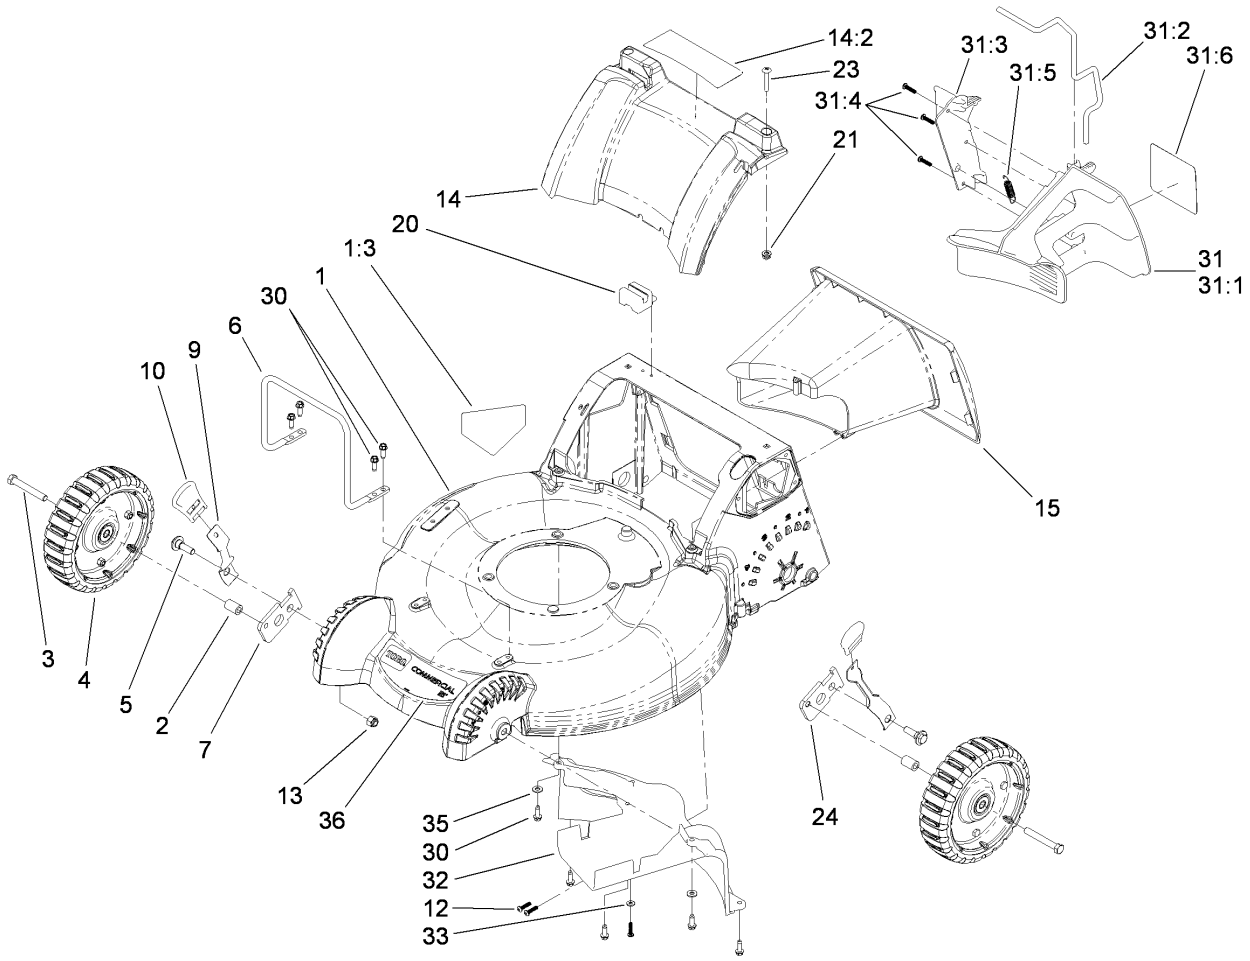

Front End and Tunnel Assembly


Ref	Part No.	Qty.	Description
1	117-5266	1	Housing Assembly
1:3	94-8072	1	Decal-Danger
2	114-2754	2	Spacer
3	323-13	2	Screw-HH
4	117-5252	2	8 Inch Wheel ASM
5	614672	2	Bolt-Shoulder
6	110-9475-03	1	Guard-Engine
7	110-9421	1	Arm-Pivot, RH
9	110-9434	2	Arm-Spring, Front
10	110-0549	2	Knob-HOC
12	108-7476	6	Screw-Plastite
13	3296-39	2	Nut-Lock, NI
14	115-3177	1	Cover-Rear
14:2	114-2820	1	Decal-Warning
15	110-9455	1	Tunnel
20	110-1786	1	Module-Switch
21	94-1610	2	Nut-Clip
23	108-0965	2	Screw-PTH
24	110-9420	1	Arm-Pivot, LH
30	49-2040	9	Screw-HWHTF
31	110-9468	1	Mulch Plug ASM
31:1	110-9446	1	Plug-Mulch, LH
31:2	110-9448	1	Latch-Plug, Mulch
31:3	110-9447	1	Plug-Mulch, RH

Ref	Part No.	Qty.	Description
31:4	108-7476	3	Screw-Plastite
31:5	110-9458	1	Spring-Extension
31:6	110-9457	1	Decal-Plug, Mulch
32	110-9413	1	Baffle-Rear
33	3256-14	1	Washer-Flat
35	3256-22	2	Washer-Flat
36	117-5247	1	Decal-Housing, Front

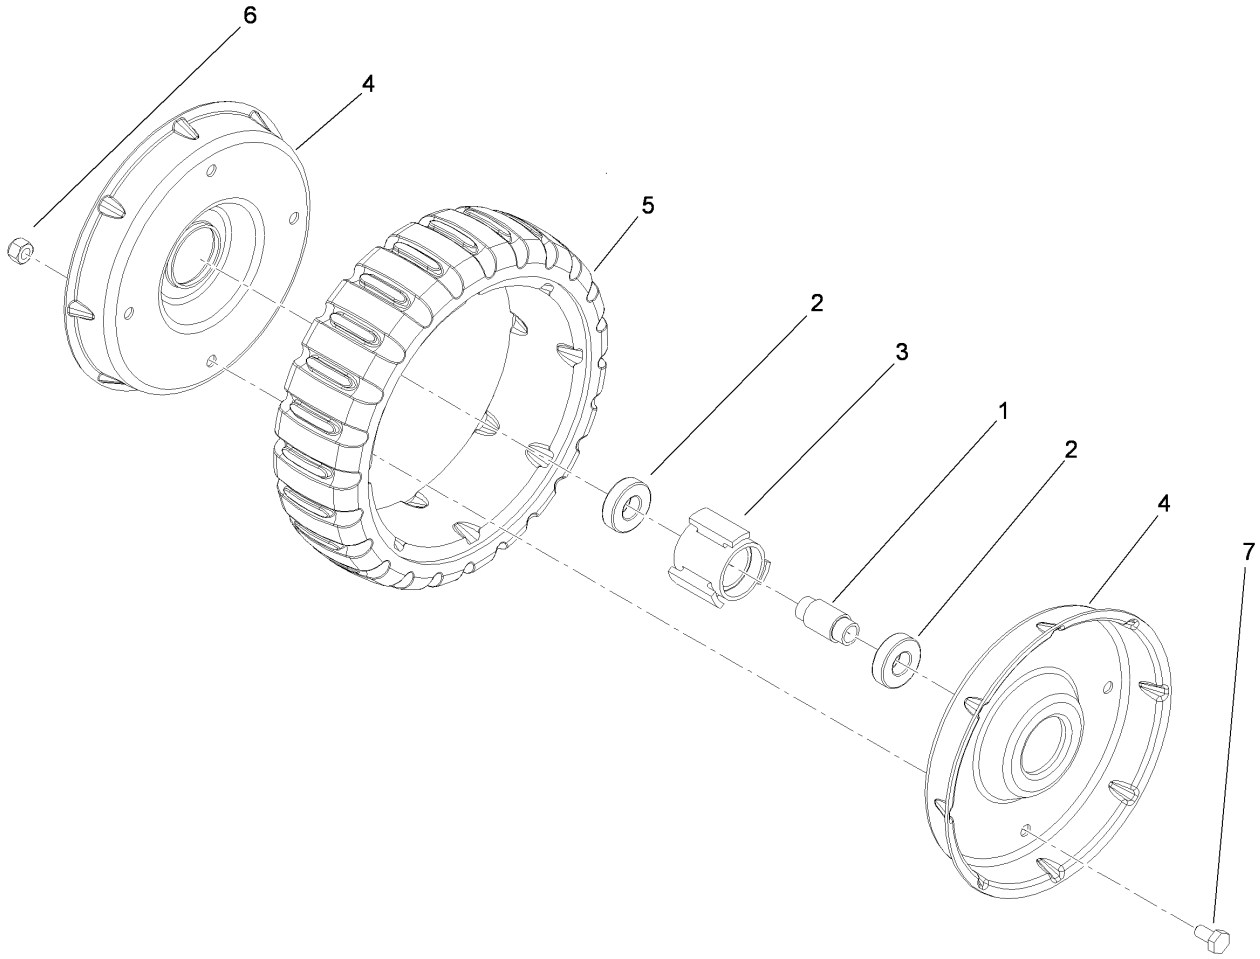

Wheel Assembly No. 117-5252


Ref	Part No.	Qty.	Description
1	52-2440	1	Spacer-Bearing
2	52-2450	2	Bearing-Wheel
3	52-2410	1	Hub-Bearing
4	117-5250	2	Wheel-Half
5	110-9499	1	Tire-8 Inch
6	3296-42	4	Nut-Lock, NI
7	321-2	4	Screw-HH

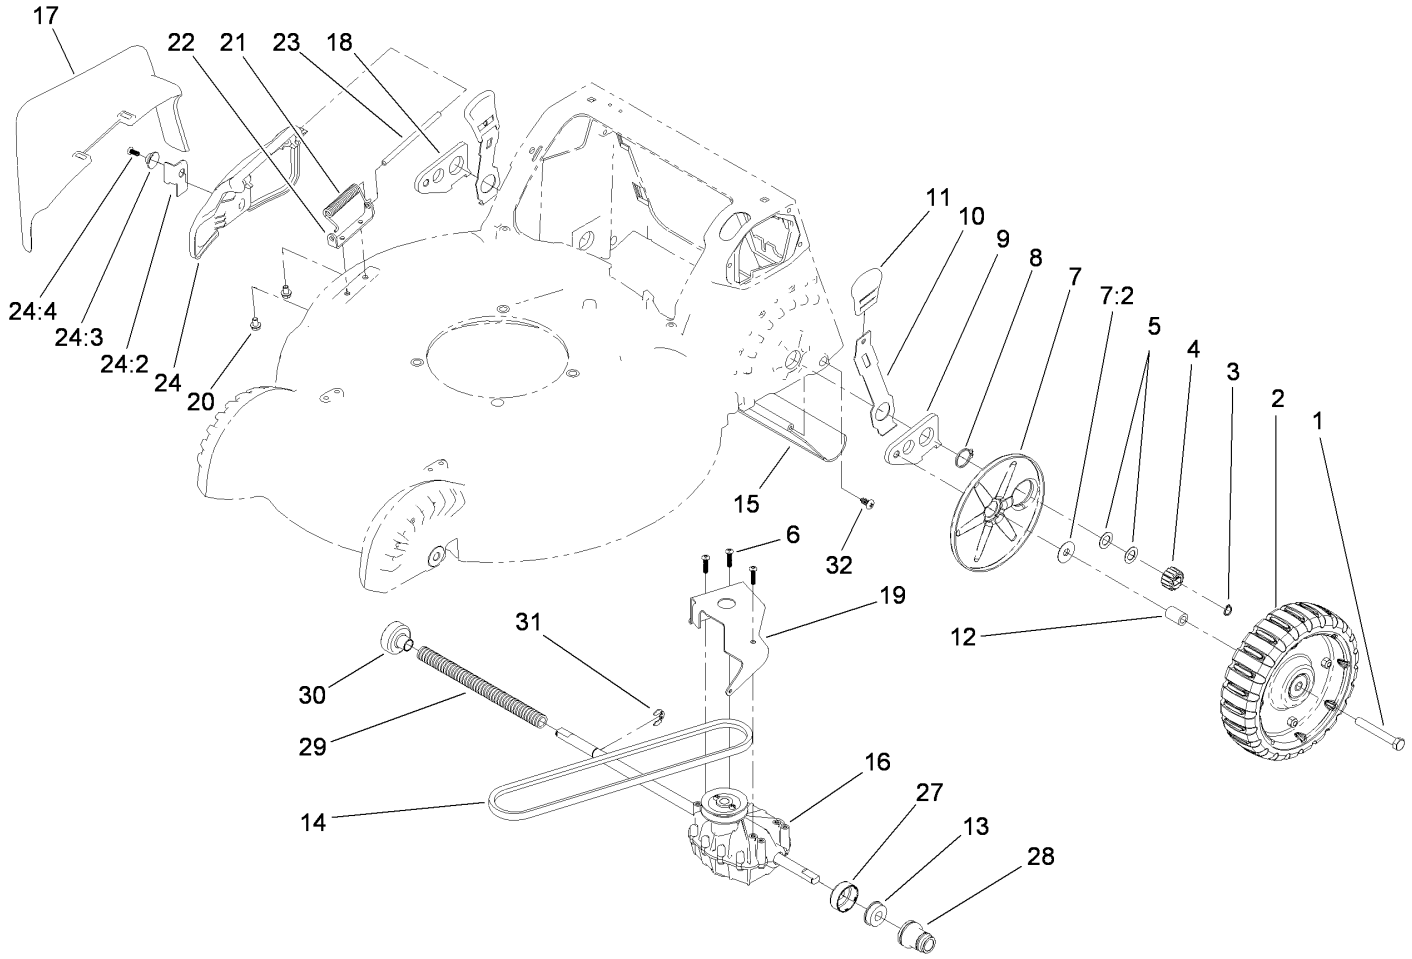

Disharge Door and Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	323-13	2	Screw-HH
2	117-5253	2	8-Inch Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	36-4780	2	Washer-Plain
6	108-7476	3	Screw-Plastite
7	110-1792	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	108-9344	1	Arm-Rear Pivot, LH
10	110-9445	2	Arm-Spring, Rear
11	110-0549	2	Knob-HOC
12	114-2754	2	Spacer
13	104-8699	2	Bearing-Ball
14	110-9429	1	V-Belt
15	112-8768	1	Shield-Trailing
16	114-2819	1	Transmission
17	105-3028	1	Chute-Discharge, Side
18	108-9343	1	Arm-Rear Pivot, RH
19	114-7977-03	1	Bracket-Transmission
20	99-8445	2	Screw-HWH
21	99-5293	1	Spring-Torsion
22	112-6416	1	Bracket-Cover
23	99-5291	1	Rod-Cover

Ref	Part No.	Qty.	Description
24	106-8376	1	Discharge Door ASM
24:2	107-0795	1	Latch-Door
24:3	107-7456	1	Cap-Door
24:4	107-7461	1	Screw-Plastite
27	117-5268	1	Cover-Bearing
28	110-9422	2	Retainer-Bearing
29	117-5260	1	Cover-Shaft, Drive
30	114-2755	1	Cap-Bearing
31	65-2720	1	Ring-Clip, Locking
32	117-1092	2	Screw-PTH

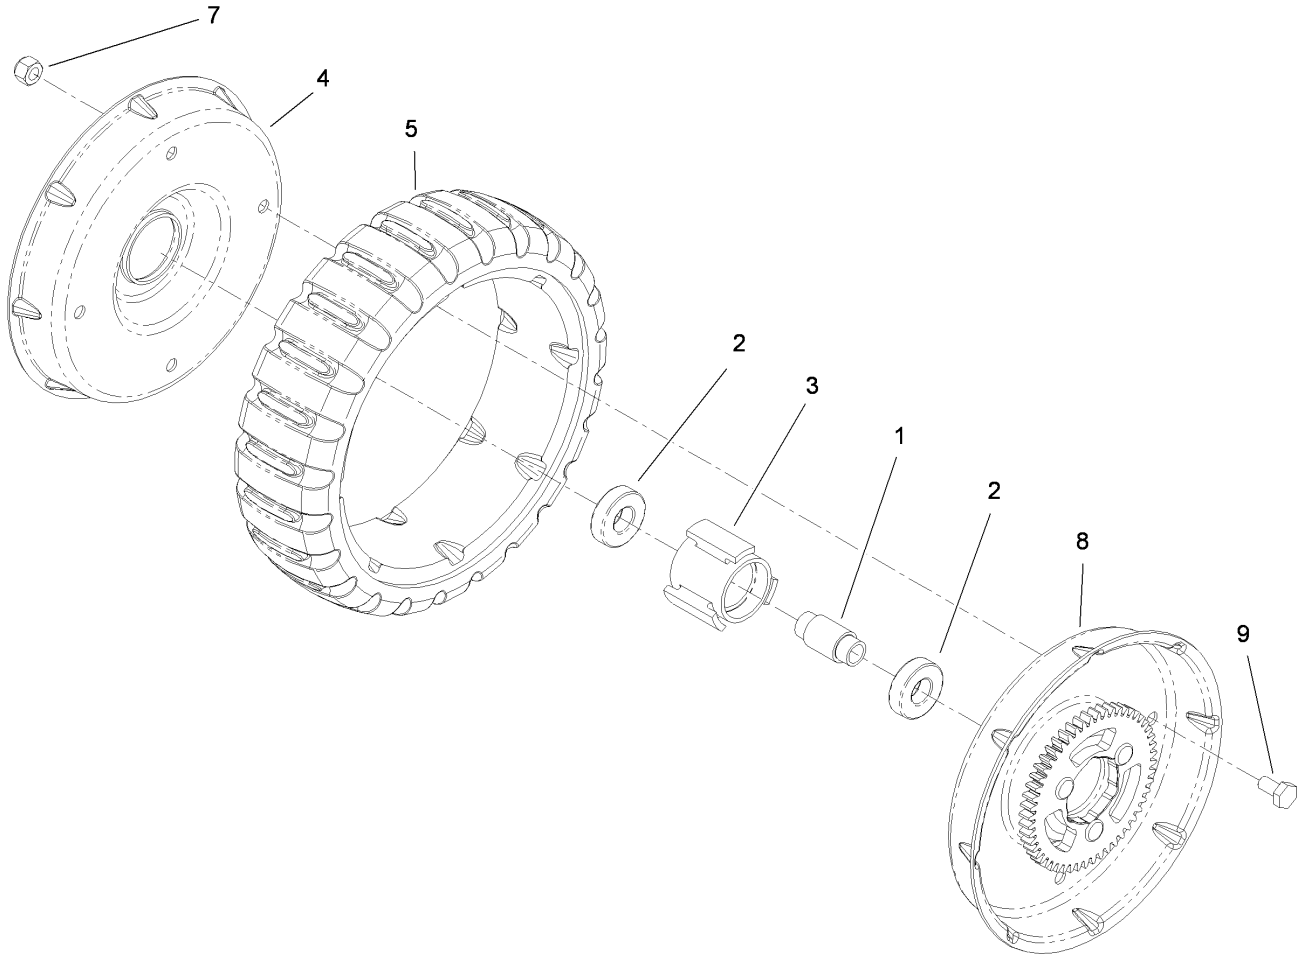


Wheel Assembly No. 117-5253

Ref	Part No.	Qty.	Description
1	52-2440	1	Spacer-Bearing
2	52-2450	2	Bearing-Wheel
3	52-2410	1	Hub-Bearing
4	117-5250	1	Wheel-Half
5	110-9499	1	Tire-8 Inch
7	3296-42	4	Nut-Lock, NI
8	117-5251	1	Hub Gear ASM
9	321-2	4	Screw-HH

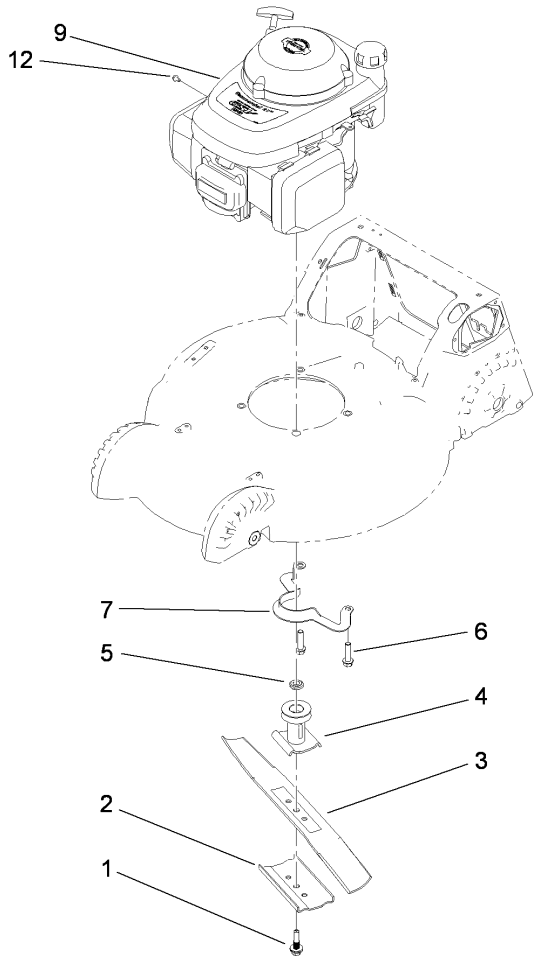

Engine and Blade Assembly


Ref	Part No.	Qty.	Description
1	117-5270	1	Bolt-Blade
2	108-3766-03	1	Support-Blade
3	108-3759-03	1	Blade-Bagging
4	114-2774	1	Driver-Blade
5	106-3999	1	Spacer-Driver
6	32144-102	3	Screw-HWH
7	108-8110-03	1	Guide-Belt
❶❷9		1	Engine-Honda, Gsv190La A3T
12	98-1394	1	Screw-HWH

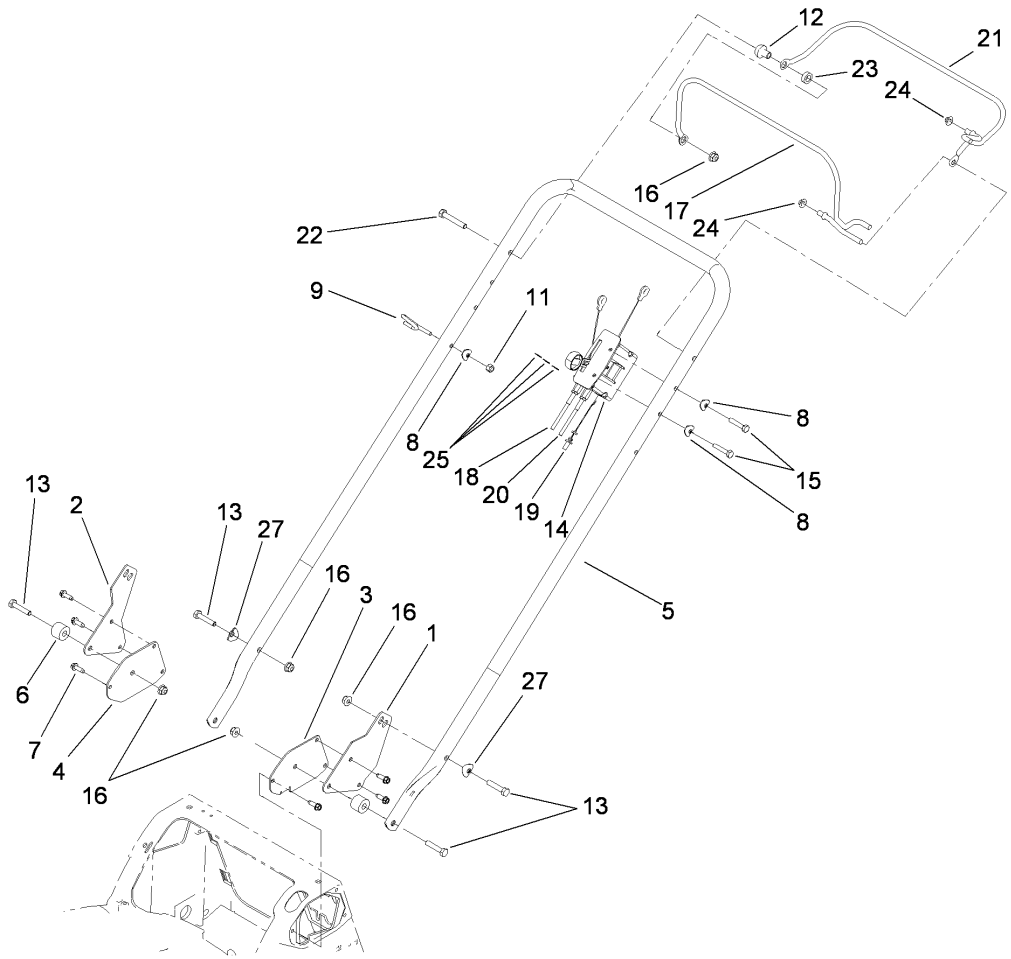

Handle Assembly


Ref	Part No.	Qty.	Description
1	110-9494-03	1	Support-Strut, LH
2	110-9495-03	1	Support-Strut, RH
3	114-2760-03	1	Plate-Handle, Traction
4	110-9471-03	1	Plate-Handle
5	107-4162-03	1	Handle
6	112-8797-03	2	Spacer
7	49-2040	6	Screw-HWHTF
8	3-7501	3	Washer
9	114-2775	1	Guide-Rope
11	3296-42	1	Nut-Lock, NI
12	49-1630	1	Spacer-Support
13	322-7	4	Screw-HH
14	108-2645	1	Control-Head, Throttle
15	321-13	2	Screw-HH
16	104-8300	5	Nut-Flange, NI
17	114-2768-03	1	Bail-Brake
18	114-2771	1	Cable-Brake
19	110-4923	1	Throttle Cable ASM
20	115-3170	1	Cable-Traction
21	114-2769-03	1	Bail-Traction
22	322-10	1	Screw-HH
23	256-276	1	Spacer-Nylon
24	109-0917	2	Nut-Push
25	32151-86	3	E-Ring

Ref	Part No.	Qty.	Description
27	107-3844	2	Washer

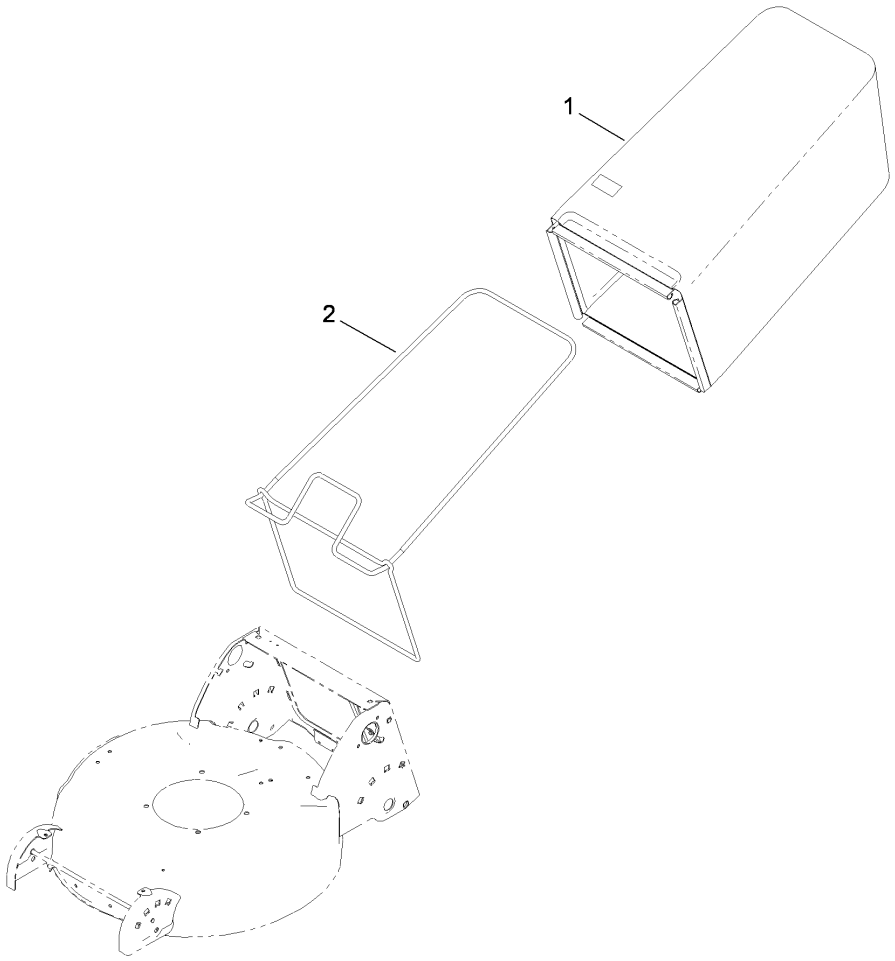


Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	117-4191	1	Grass Bag ASM
2	112-8750-03	1	Frame-Bag

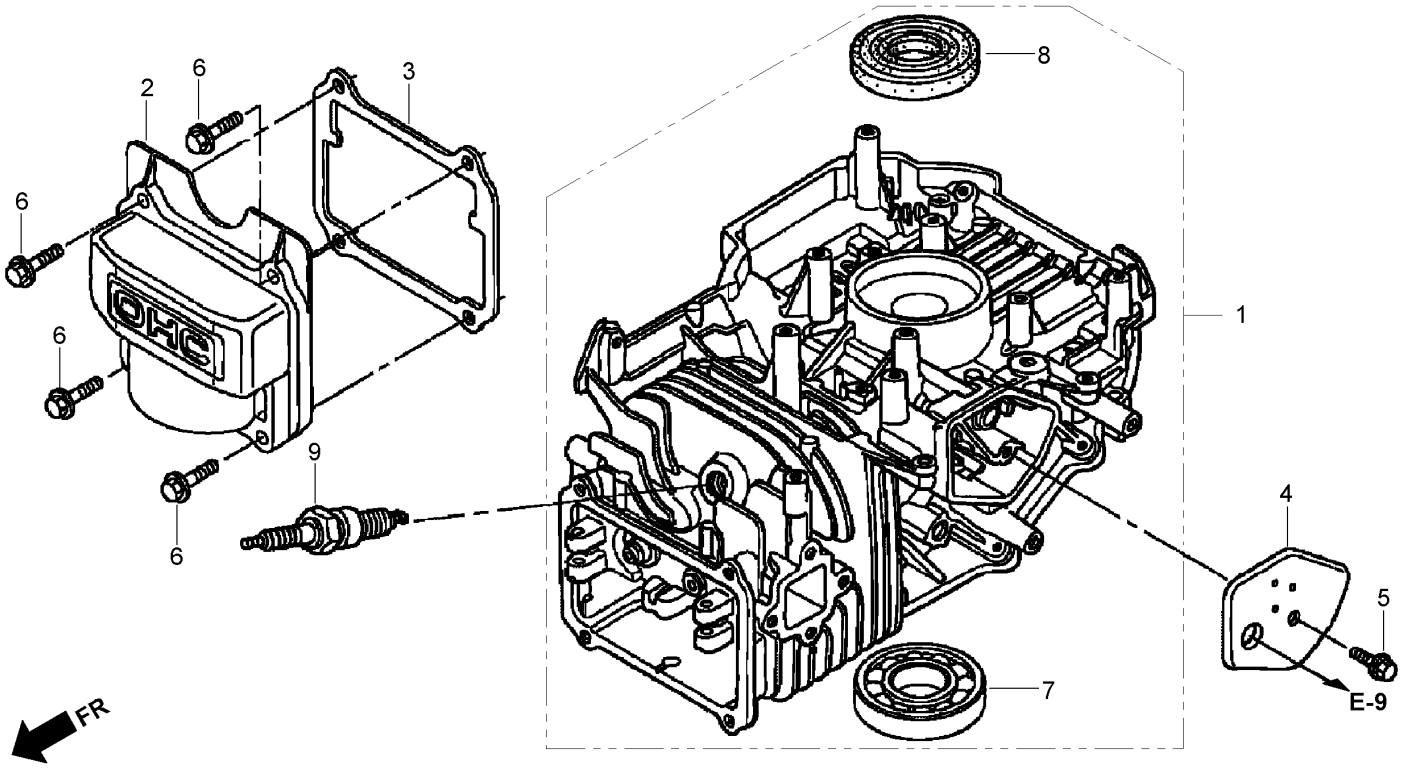

Cylinder Barrel Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
❷1	12000-Z2C-000	1	Cylinder ASM
❷2	12311-Z2A-000	1	Cover-Head, Cylinder
❷3	12312-Z2A-000	1	Gasket-Cover, Head
❷4	12355-ZL8-000	1	Cover-Breather (Breather Valve ASM)
❷5	90014-952-000	1	Bolt-Flange (6X14) (C T200)
❷6	90121-952-000	4	Bolt-Flange (6X25) (C T 200)
❷7	91001-894-004	1	Bearing-Ball, Radial
❷8	91201-Z2A-003	1	Seal-Oil (25.4X74X6)
❷9	98079-55846	1	Spark Plug (B P R 5E S) (N G K)

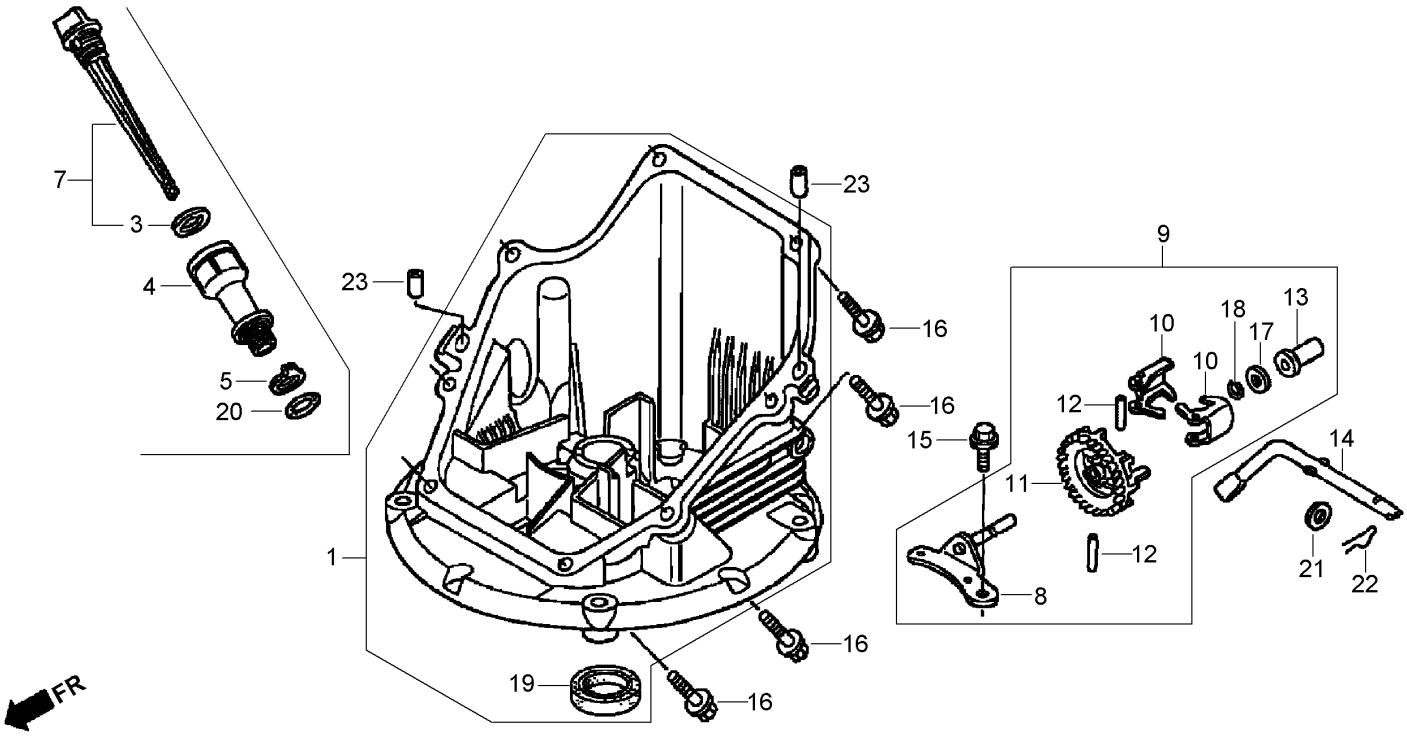

Oil Pan Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
❷1	11300-Z0Y-406	1	Oil Pan ASM
❷3	15625-ZE6-000	1	Gasket-Cap, Oil Filler
❷4	15631-ZM0-000	1	Extension-Filler, Oil
❷5	15639-ZM0-000	1	Washer-Lock, Extension
❷7	15650-ZM0-801	1	Oil Level Gauge ASM
❷8	16508-ZM0-010	1	Shaft-Holder, Governor
❷9	16510-ZM0-010	1	Governor ASM
❷10	16511-ZL8-000	2	Weight-Governor
❷11	16512-ZM0-000	1	Holder-Weight, Governor
❷12	16513-ZE1-000	2	Pin-Weight, Governor
❷13	16531-ZE1-000	1	Slider-Governor
❷14	16541-ZM0-000	1	Shaft-Arm, Governor
❷15	90014-952-000	1	Bolt-Flange (6X14) (C T200)

Ref	Part No.	Qty.	Description
❷16	90121-952-000	8	Bolt-Flange (6X25) (C T 200)
❷17	90451-ZE1-000	1	Washer-Thrust (6Mm)
❷18	90602-ZE1-000	1	Clip-Holder, Governor
❷19	91202-ZL8-003	1	Seal-Oil (28X41.25X6)
❷20	91356-MA6-005	1	O-Ring (14.8X24) (N O K)
❷21	94101-06800	1	Washer-Plain (6Mm)
❷22	94251-08000	1	Pin-Lock (8Mm)
❷23	94301-08200	2	Pin-Dowel (8X20)

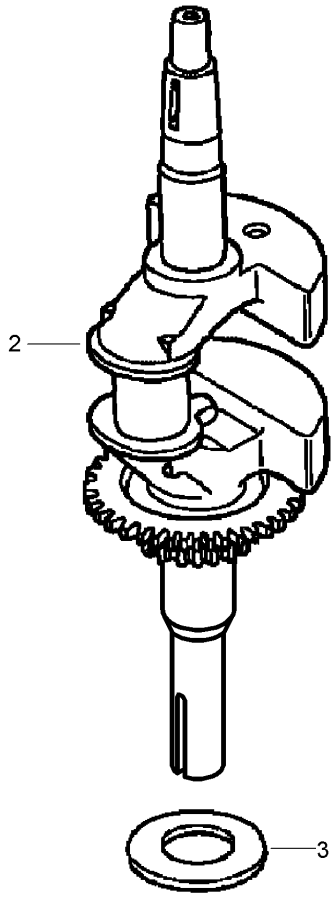


Crankshaft Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
❷2	13310-Z0Y-610	1	Crankshaft
❷3	90402-ZL8-000	1	Washer-Thrust

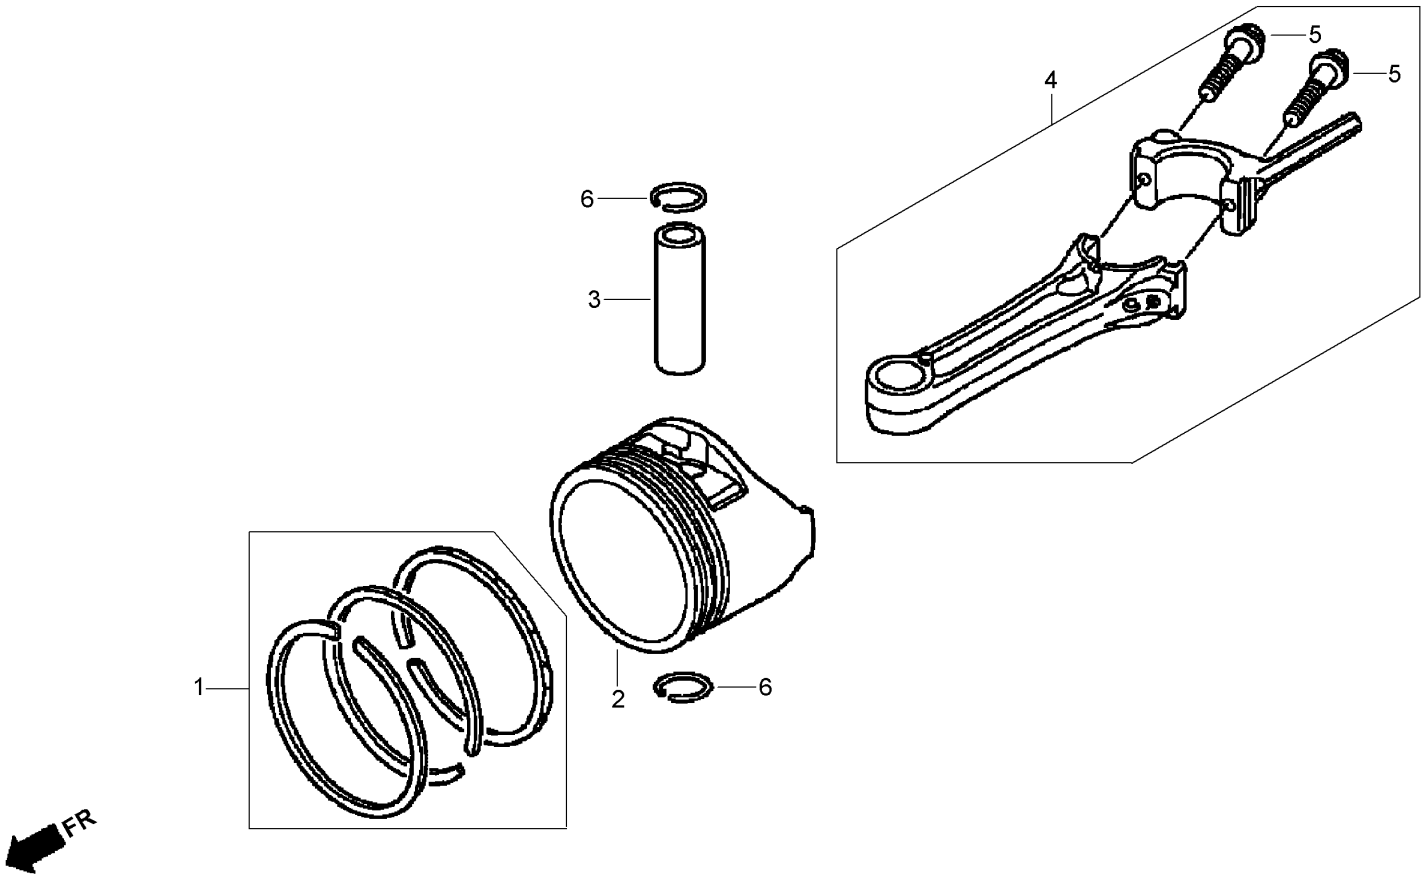


Piston and Connecting Rod Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
❷1	13010-Z2C-014	1	Piston Ring Set (STD) (Teikoku)
❷2	13101-Z0Y-010	1	Piston
❷3	13111-Z0Y-000	1	Pin-Piston
❷4	13200-Z0Y-010	1	Connecting Rod ASM
❷5	90001-ZE1-000	2	Bolt-Rod, Connecting
❷6	90551-ZE0-000	2	Clip-Pin, Piston (13Mm)

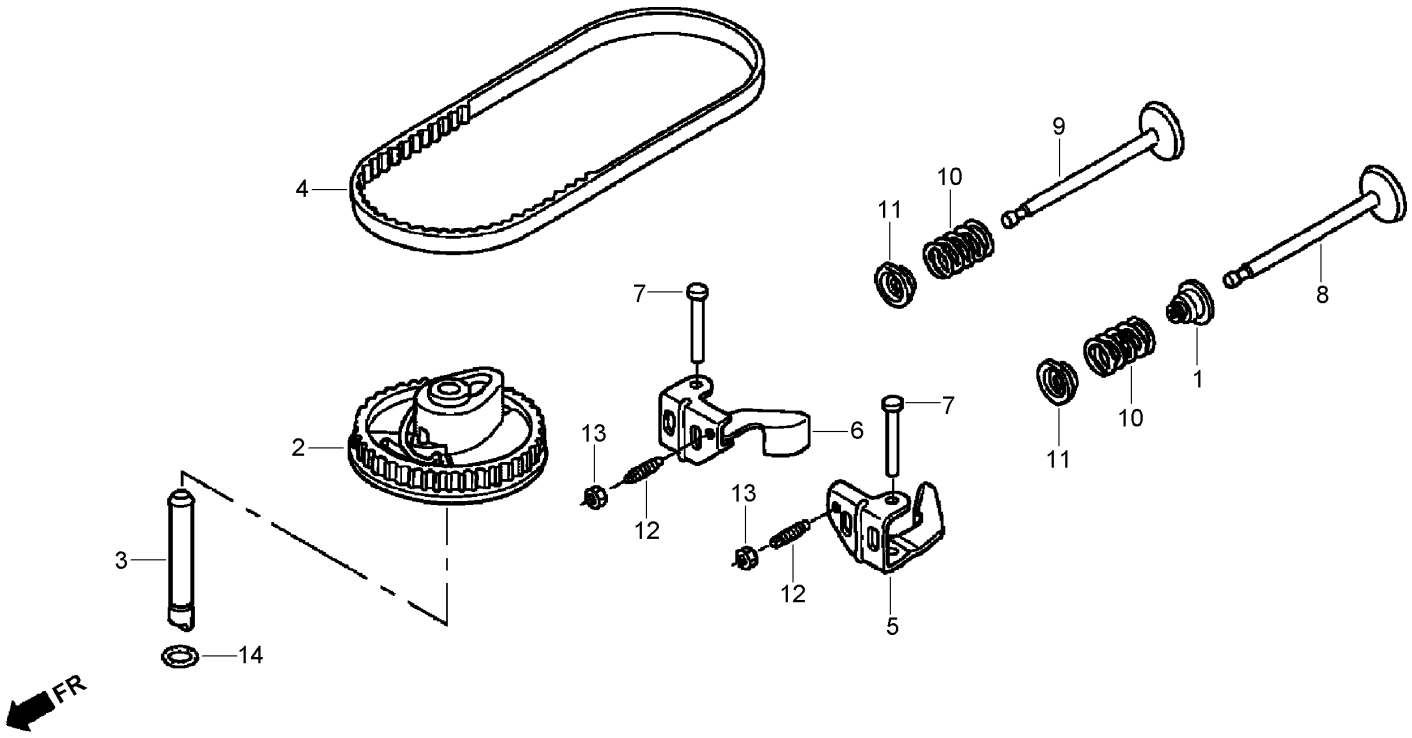


Camshaft Pulley Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
❷1	12209-ZM0-003	1	Seal-Stem, Valve
❷2	14320-Z0Y-000	1	Pulley-Camshaft
❷3	14324-ZL8-000	1	Shaft-Pulley, Cam
❷4	14400-Z0J-014	1	Belt-Timing (84H U7 G-200)
❷5	14431-Z0J-000	1	Arm-Rocker, Intake Valve
❷6	14441-Z0J-000	1	Arm-Rocker, Exhaust Valve
❷7	14461-ZL8-000	2	Shaft-Arm, Rocker
❷8	14711-ZL8-000	1	Valve-Intake (Technostar)
❷8	14711-Z0J-000	1	Valve-Intake (Rocknel)
❷9	14721-ZL8-000	1	Valve-Exhaust
❷10	14751-ZL8-000	2	Spring-Valve
❷11	14771-Z0J-000	2	Retainer-Spring, Valve
❷12	90012-333-000	2	Screw-Adjusting, Tappet
❷13	90206-001-000	2	Nut-Adjusting, Tappet
❷14	91301-ZM0-V31	1	O-Ring (6.8X19) (Arai)

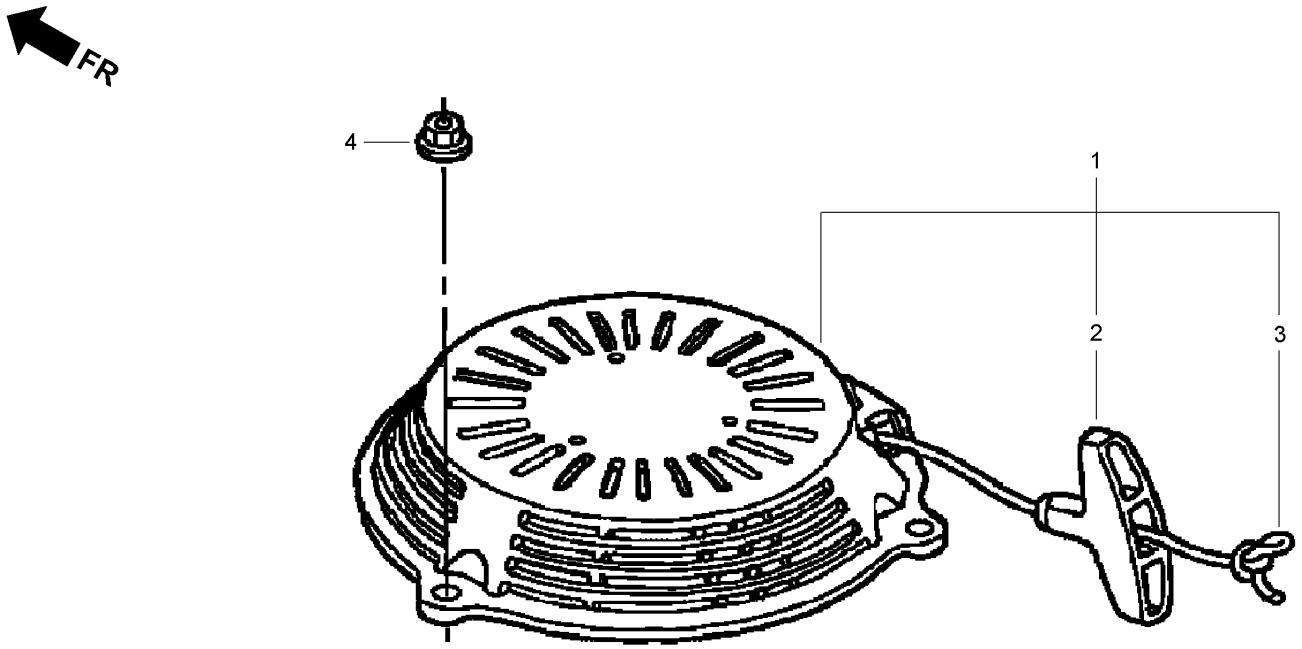


Recoil Starter Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
❷1	28400-Z0Y-013ZB	1	Recoil Starter ASM (N H1) (Black)
❷2	28461-ZL8-003	1	Grip-Starter
❷3	28462-ZL8-631	1	Rope-Starter, Recoil (Long Type)
❷4	90201-ZM0-000	3	Nut-Flange (6Mm)

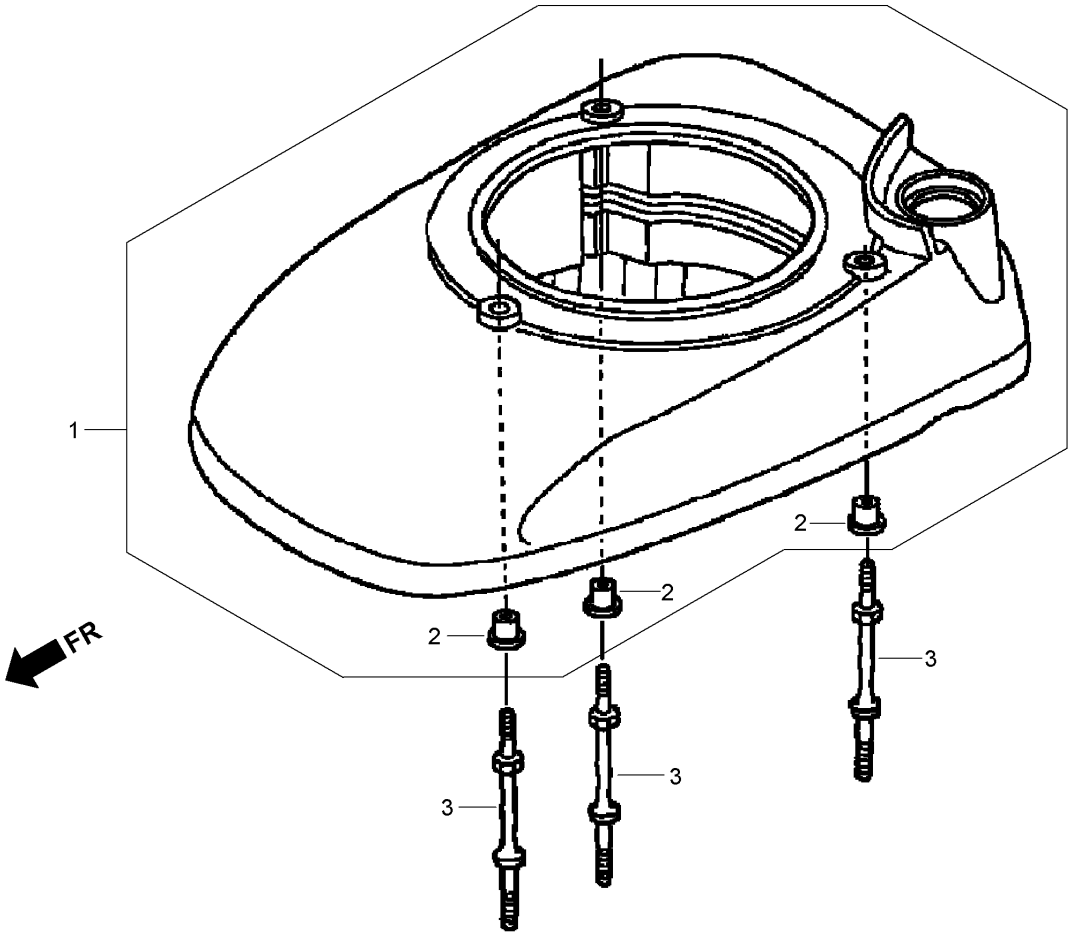

Fan Cover Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
❷1	19610-Z0L-850ZA	1	Cover, Fan N H1 (Black)
❷2	19619-ZL8-300	3	Collar-Cover, Fan
❷3	90043-ZL8-000	3	Bolt-Stud (H T 42.5Mm)

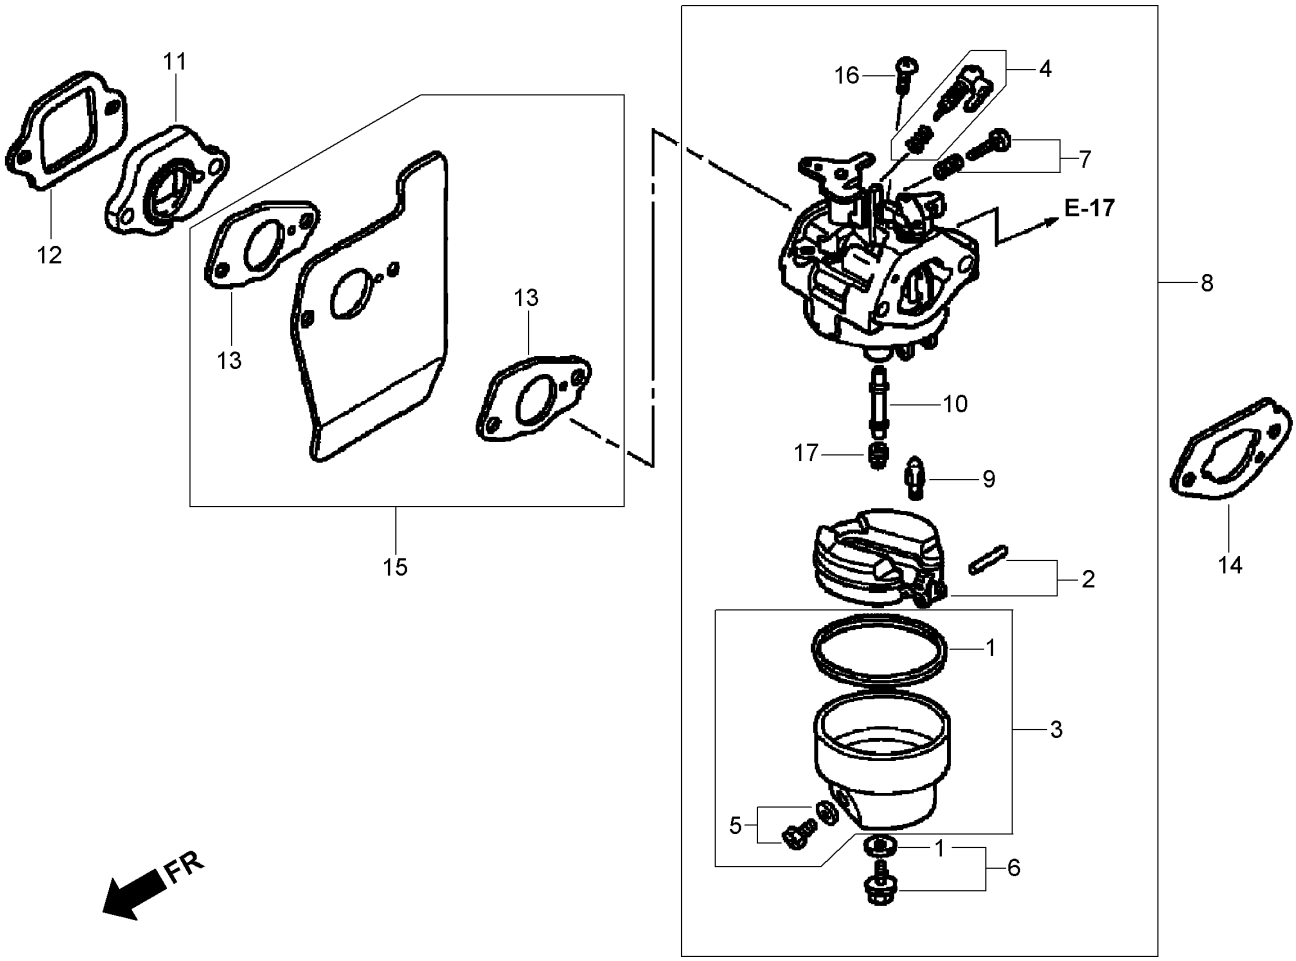

Carburetor Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
❷1	16010-883-015	1	Gasket Set
❷2	16013-ZL1-003	1	Float Set
❷3	16015-887-782	1	Float Chamber Set
❷4	16016-ZG0-W00	1	Screw Set
❷5	16024-ZE1-811	1	Drain Screw Set
❷6	16028-ZE0-005	1	Screw Set
❷7	16029-ZG0-901	1	Screw Set (Throttle Stop)
❷8	16100-Z2D-811	1	Carburetor ASM (Bb65G A)
❷9	16155-ZM0-013	1	Valve-Float
❷10	16166-Z0Y-003	1	Nozzle-Main
❷11	16211-ZL8-000	1	Insulator-Carburetor
❷12	16212-ZL8-000	1	Gasket-Insulator
❷13	16221-883-800	2	Gasket-Carburetor

Ref	Part No.	Qty.	Description
❷14	16228-ZL8-000	1	Gasket-Carburetor
❷15	19650-ZM0-000	1	Guide-Air
❷16	93500-05006-0H	1	Screw-Pan (5X6)
❷17	99101-124-0620	1	Jet-Main (No.62)
❷17	99101-124-0650	1	Jet-Main (No.65)
❷17	99101-124-0680	1	Jet-Main (No.68)

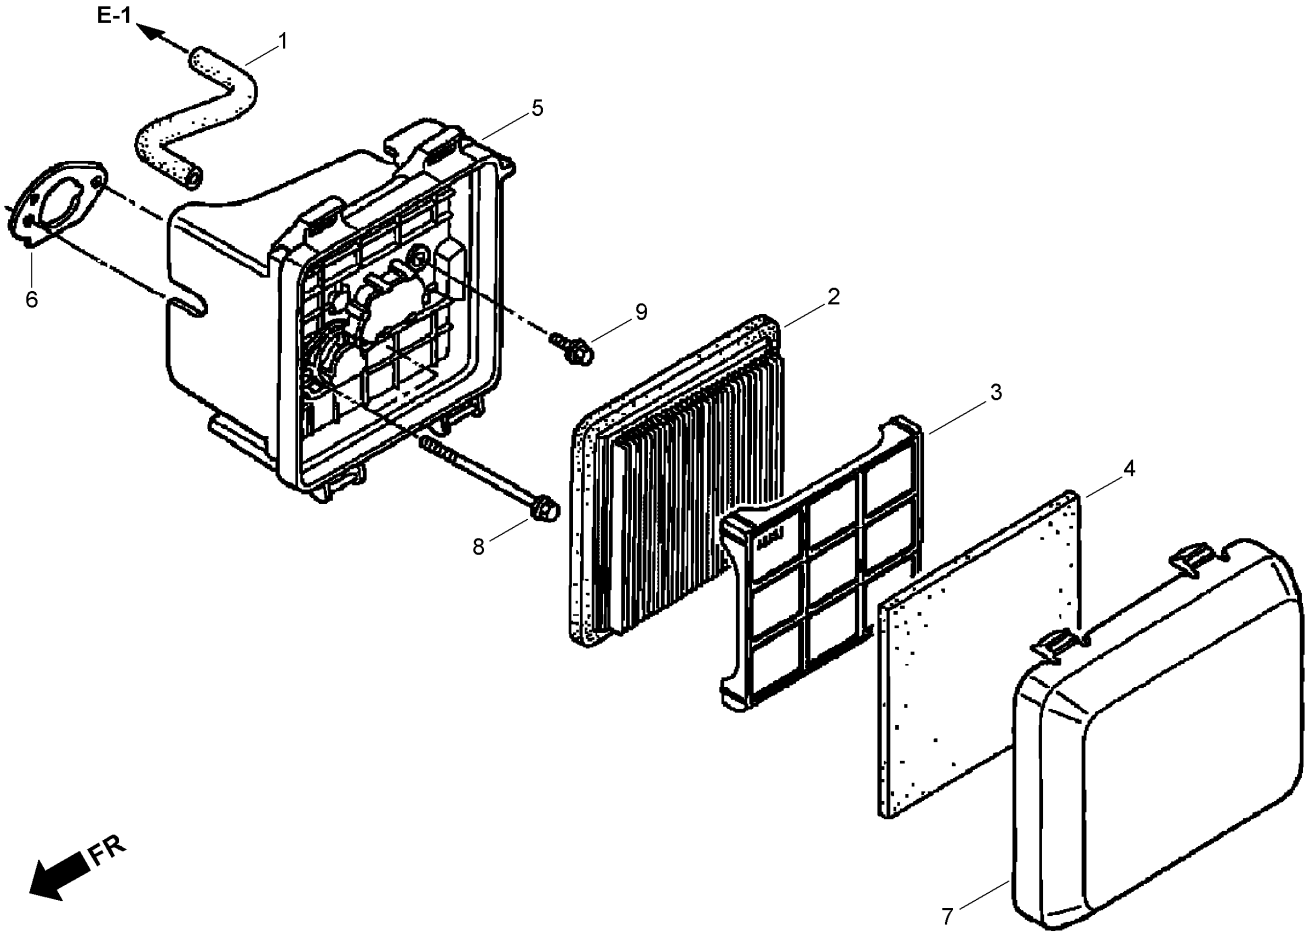


Air Cleaner Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
❷1	15721-ZM0-000	1	Tube-Breather
❷2	17211-ZL8-023	1	Element-Cleaner, Air
❷3	17212-Z2A-000	1	Grid-Cleaner, Air
❷4	17218-Z2A-000	1	Filter (Outer) (Wet)
❷5	17220-ZM0-000	1	Air Cleaner Case ASM
❷6	17228-ZM0-000	1	Gasket-Cleaner, Air
❷7	17231-Z2B-000	1	Cover-Cleaner, Air (Dual)
❷8	90003-ZM0-000	2	Bolt-Flange (6X86) (C T200)
❷9	95701-06014-08	1	Bolt-Flange (6X14)

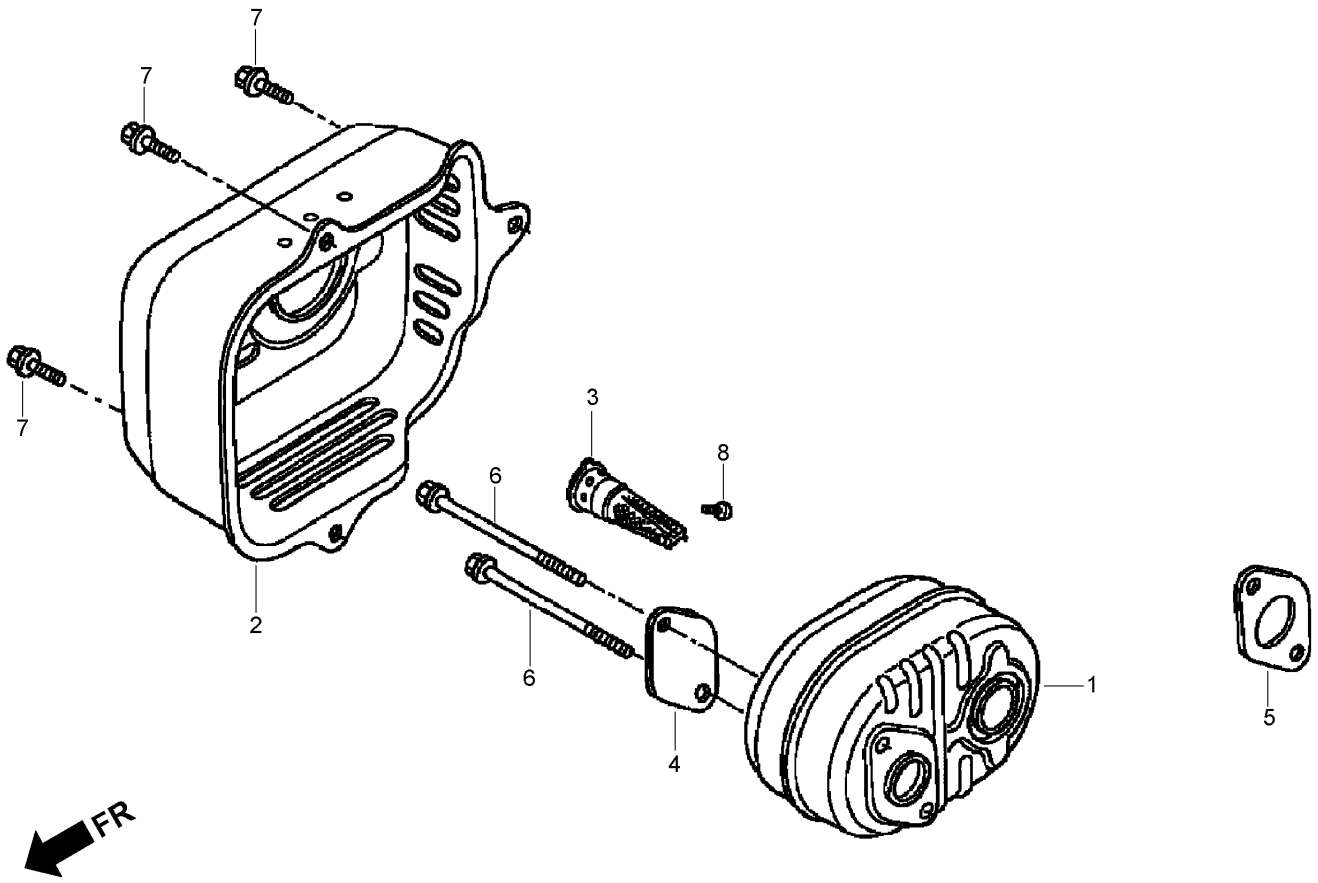

Muffler Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
❷1	18310-Z0Y-000	1	Muffler
❷2	18321-Z0L-J00	1	Protector-Muffler
❷3	18350-ZL8-000	1	Arrester-Spark
❷4	18356-ZL8-000	1	Plate-Number, Arrester
❷5	18381-ZL8-305	1	Gasket-Muffler
❷6	90004-ZL8-000	2	Bolt-Flange (6X79) (C T200)
❷7	90013-883-000	3	Bolt-Flange (6X12) (C T200)
❷8	90055-ZE1-000	1	Screw-Tapping (4X6)

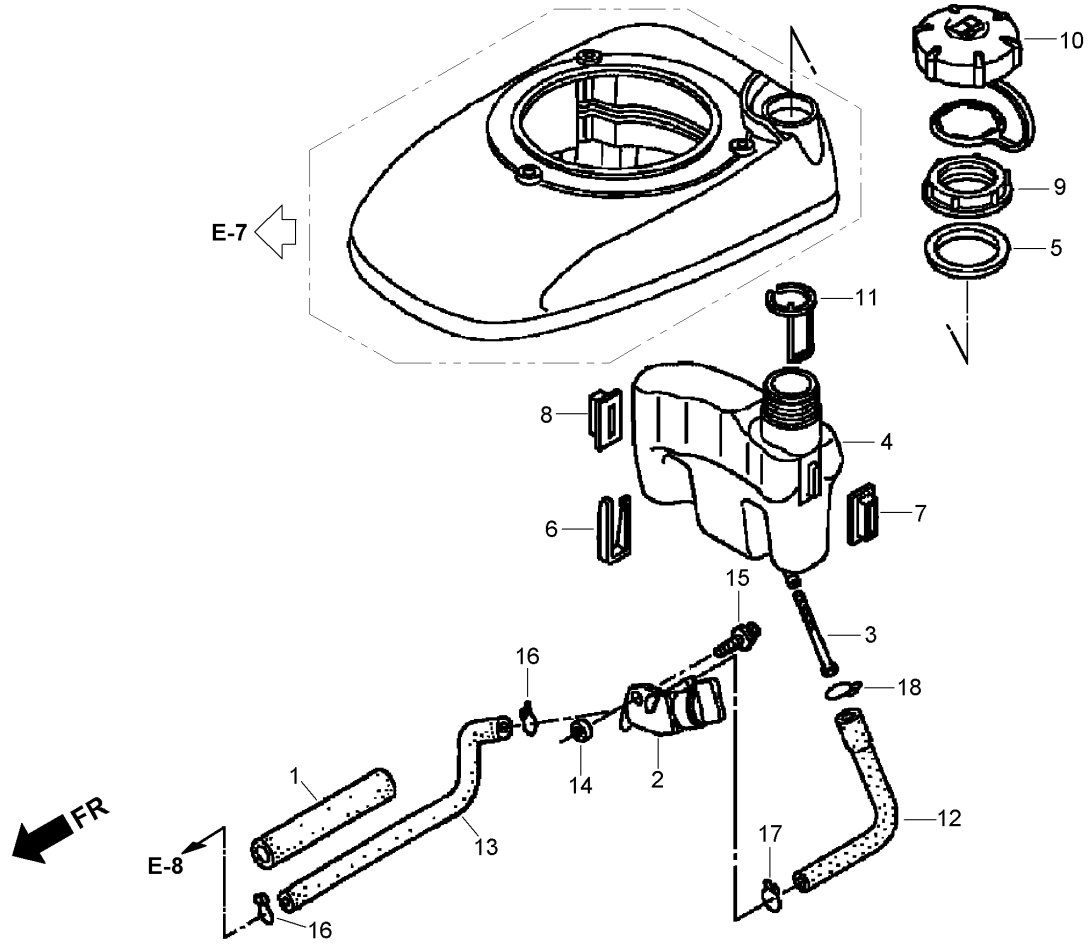

Fuel Tank Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
❷1	16854-ZH8-000	1	Supporter-Rubber (107 Mm)
❷2	16950-ZM0-003	1	Petcock ASM
❷3	16952-ZA8-800	1	Filter-Fuel
❷4	17511-Z0L-000	1	Tank-Fuel
❷5	17514-Z0L-000	1	Seal-Neck, Fuel Filler
❷6	17516-Z0L-000	1	Clip-Mounting, Tank
❷7	17532-Z0L-000	1	Rubber A-Mounting, Tank
❷8	17533-Z0L-000	1	Rubber B-Mounting, Tank
❷9	17534-Z0L-000	1	Nut-Mounting, Tank
❷10	17620-Z0J-800	1	Fuel Tank Cap ASM
❷11	17636-Z0L-000	1	Gauge-Level, Fuel
❷12	17701-Z0L-810	1	Tube-Tank, Fuel
❷13	17702-ZM0-800	1	Tube-Fuel


Ref	Part No.	Qty.	Description
❷14	91501-Z0L-800	1	Collar-Petcock, Fuel
❷15	93891-05010-08	1	Screw-Washer (5X10)
❷16	95002-02080	2	Clip-Tube (B8)
❷17	95002-02100	1	Clip-Tube (B10)
❷18	95002-70000	1	Clip-Tube (C11)

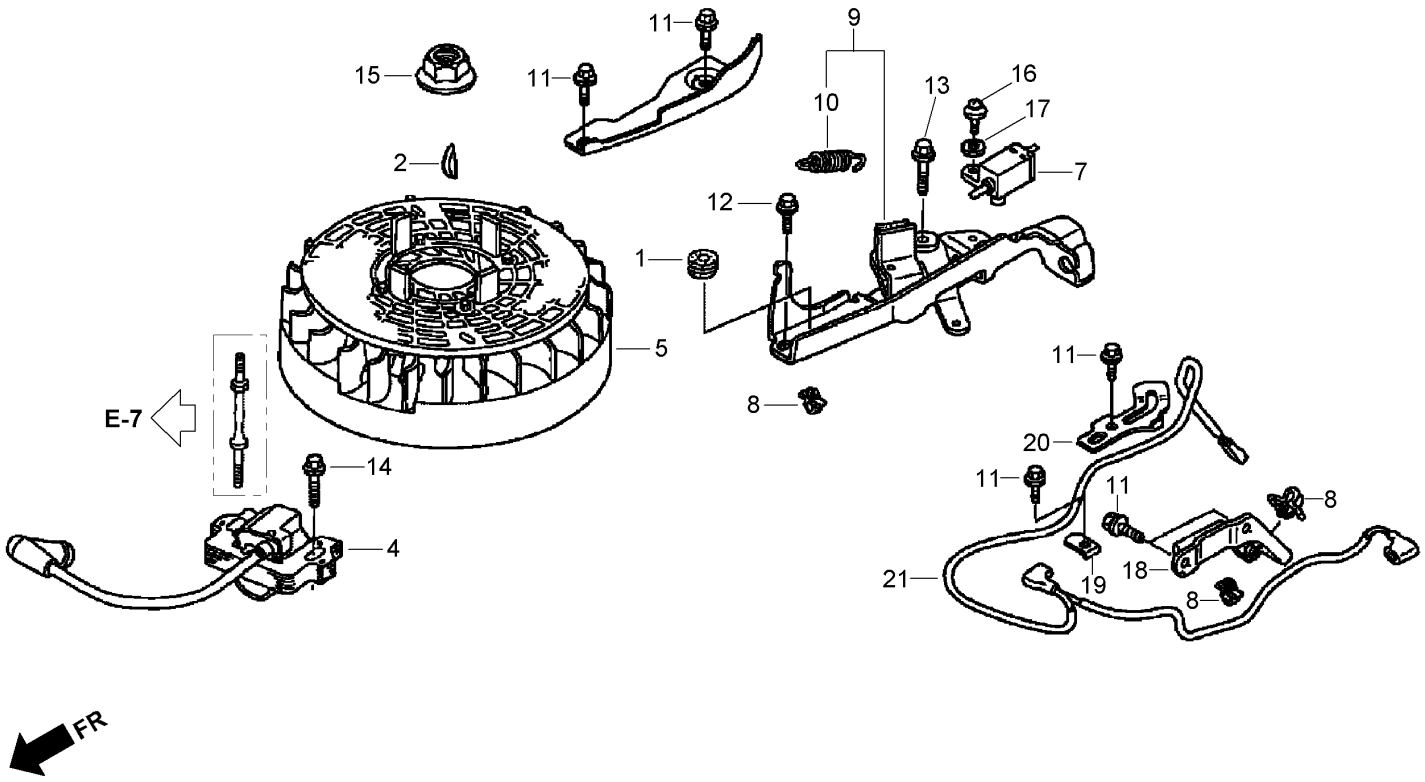

Flywheel Assembly
Honda GSV190LA A3T


Ref	Part No.	Qty.	Description
❷1	11344-MB0-000	1	Grommet A-Cover, R R (8X16X6.6)
❷1	11344-Z0L-800	1	Grommet A, Rr Cover (8X16X8)
❷2	13331-357-000	1	Key-Woodruff, Special (25X18)
❷4	30500-Z0J-003	1	Ignition Coil ASM (Phelon) (Use For Flywheel Of Phelon)
❷5	31105-Z0Y-010	1	Flywheel ASM (Phelon) (Use For Ignition Coil Of Phelon)
❷7	35120-ZM0-003	1	Engine Stop Switch ASM (N C)
❷8	51125-Z0L-003	1	Holder-Wire (Fastex)
❷8	90681-959-003	1	Clip A-Cable (Nifco)
❷9	75110-Z0L-800	1	Brake ASM
❷10	75113-ZM0-000	1	Spring-Lever, Brake
❷11	90013-883-000	2	Bolt-Flange (6X12) (C T200)
❷12	90014-952-000	1	Bolt-Flange (6X14) (C T200)
❷13	90018-ZE1-000	1	Bolt-Flange (6X23) (C T200)

Ref	Part No.	Qty.	Description
❷14	90022-888-010	1	Bolt-Flange (6X20) (C T200)
❷15	90213-S3Y-000	1	Nut-Flange (14Mm)
❷16	93892-04012-00	1	Screw-Washer (4X12)
❷17	94103-04000	1	Washer-Plain (4Mm)
❷18	30547-Z0L-S00	1	Clamp-Wire, Stop Switch
❷19	30548-ZL8-000	1	Clamp-Wire, Stop Switch
❷20	30549-ZL8-000	1	Clamp-Wire
❷21	32195-Z0L-S00	1	Wire-Switch, Stop

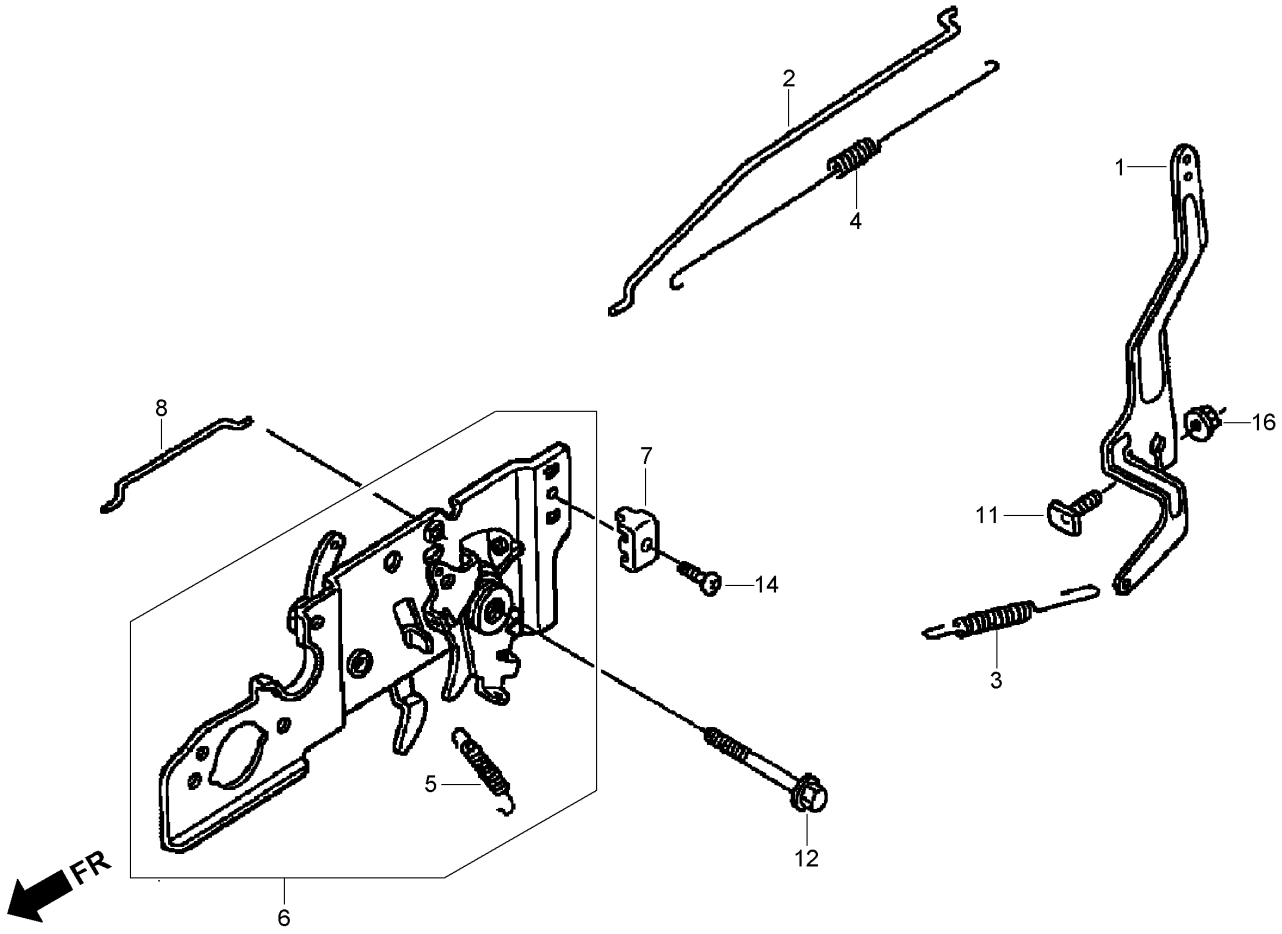

Control Assembly
Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
❷1	16551-ZM0-010	1	Arm-Governor
❷2	16555-Z0L-800	1	Rod-Governor
❷3	16561-Z0L-000	1	Spring-Governor
❷4	16562-ZM0-000	1	Spring-Return, Throttle
❷5	16576-ZE7-300	1	Spring-Lever
❷6	16580-ZM0-030	1	Base, Control
❷7	16617-VG3-000	1	Holder-Cable
❷8	16674-ZM0-000	1	Rod-Choke
❷11	90015-ZE5-010	1	Bolt-Arm, Governor
❷12	90016-ZM0-000	1	Bolt-Flange (6X45) (Ct200)
❷14	93500-05016-0A	1	Screw-Pan (5X16)
❷16	94050-06000	1	Nut-Flange (6 Mm)

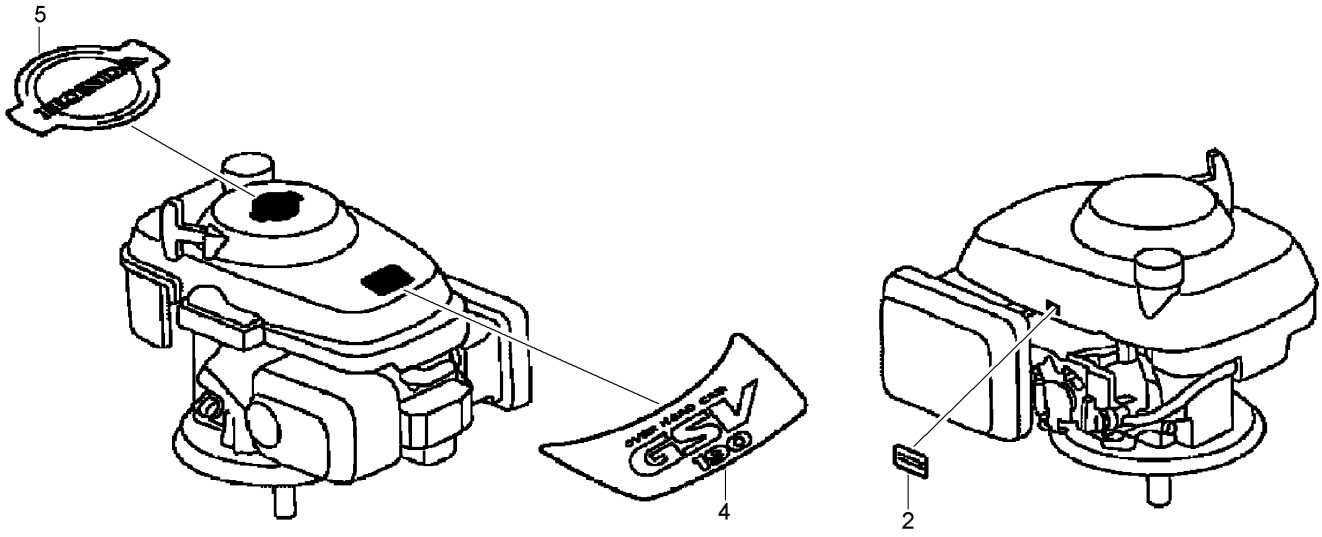

Label Assembly Honda GSV190LA A3T

Ref	Part No.	Qty.	Description
❷2	87114-ZH7-821	1	Label-Warning (Not Certified For Sale)
❷4	87101-Z8E-000	1	Mark, Emblem (Gsv190)
❷5	87169-Z8E-000	1	Mark, Recoil Cover


TORO®