Form Number 3362-344 Rev A

50cm Mulching/Rear Bagging Lawn Mower

Model No. 29641 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page	Description	Page
Housing Assembly	 3	Engine and Blade Assembly	 6
Front Axle Assembly	 4	Handle and Control Assembly	 7
Rear Axle and Transmission Assembly	 5	Grass Bag Assembly	 8

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not serviced separately

❷ Obtain from your local Briggs & Stratton dealer

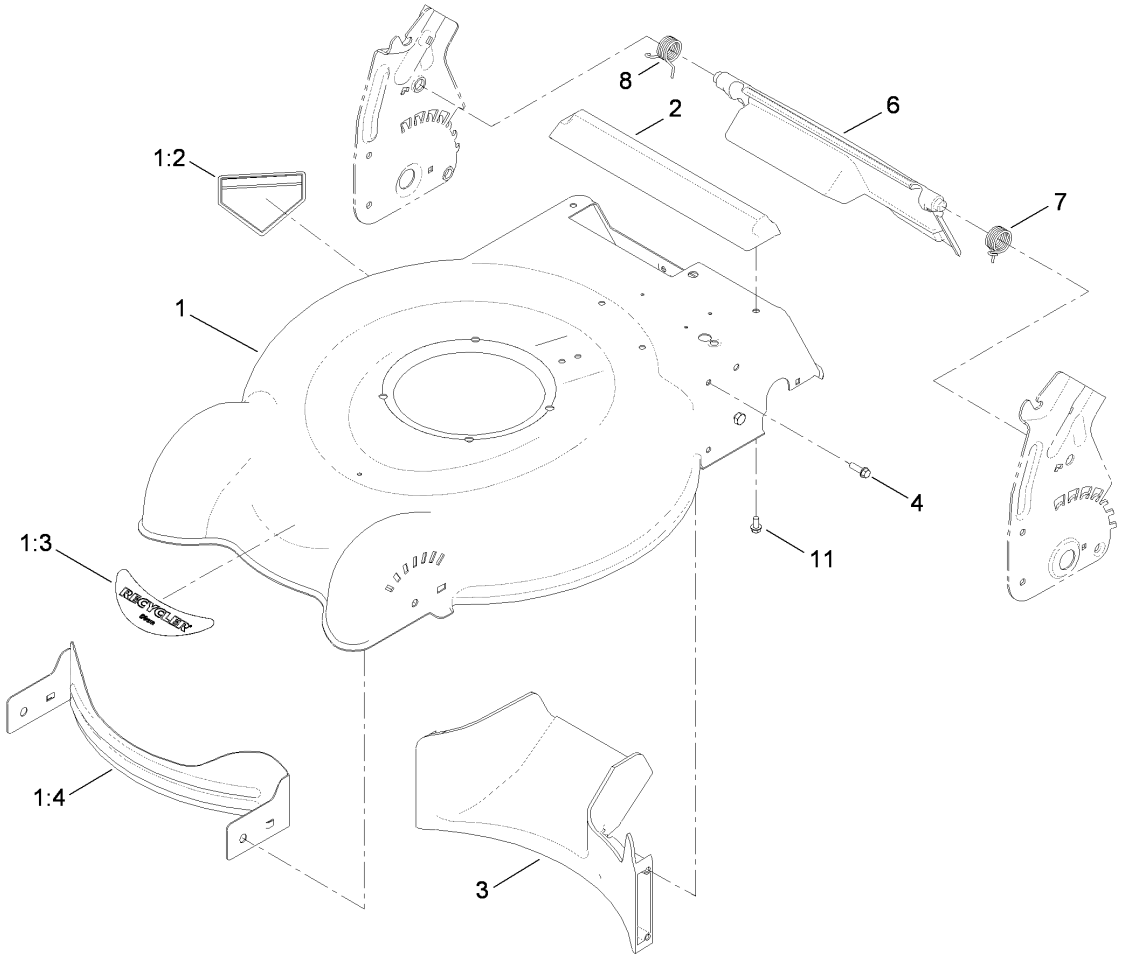


Housing Assembly

Ref	Part No.	Qty.	Description
1	117-5944	1	Housing ASM
1:2	112-8760	1	Decal-Danger
1:3	117-5947	1	Decal-Deck
1:4	117-4162-01	1	Baffle-Front
2	112-8845	1	Chute-Rear
3	112-8821	1	Baffle-Rear
4	46-8091	5	Screw-HWH
6	117-5923	1	Rear Deflector ASM
7	112-8848	1	Spring-Torsion, LH
8	112-8849	1	Spring-Torsion, RH
11	46-8093	3	Screw-Plastite

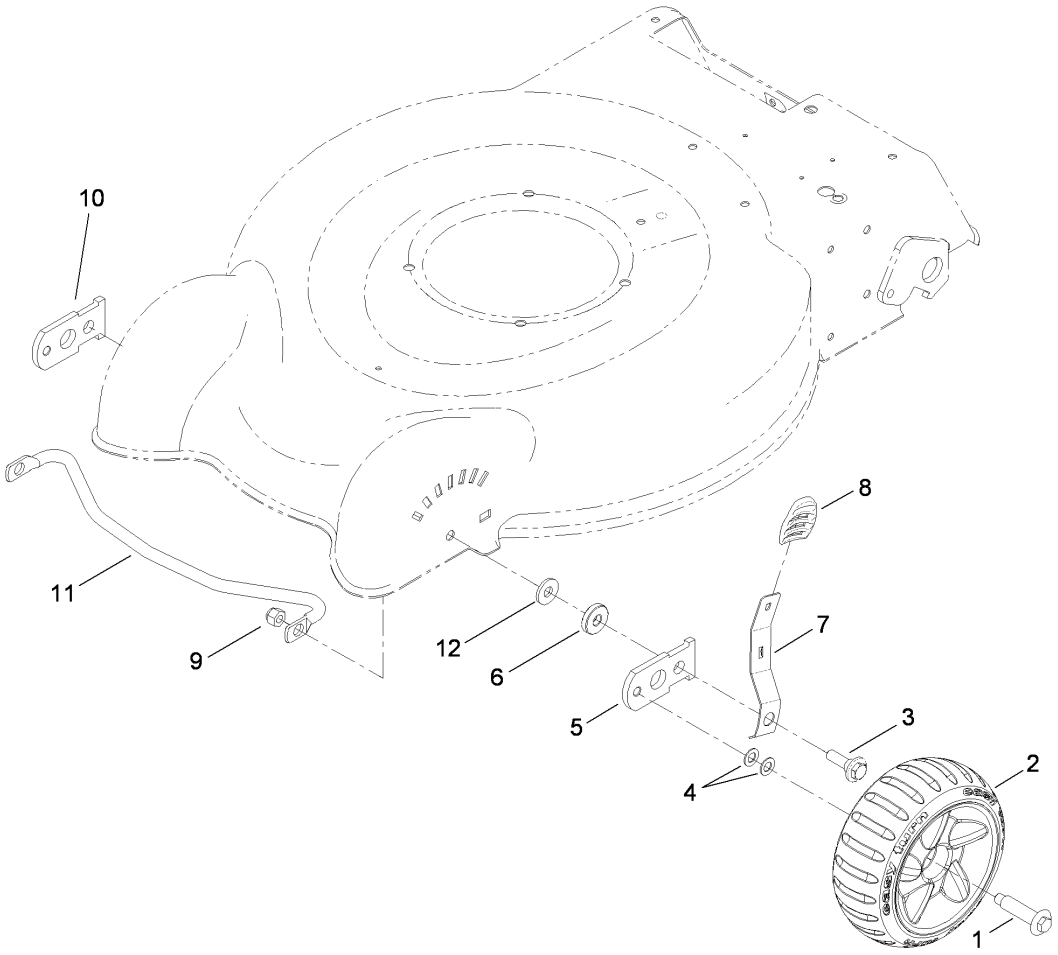

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	112-1548	2	7 Inch Front Wheel ASM
3	614672	2	Bolt-Shoulder
4	40-1940	4	Washer
5	107-3877	1	Arm-Pivot, RH
6	92-4890	2	Washer
7	112-8828	2	Arm-Spring, Front
8	105-3042	2	Knob-Lever, HOC
9	3296-39	2	Nut-Lock, NI
10	108-1044	1	Arm-Pivot, LH
11	117-4161	1	Brace-Front
12	80-6990	2	Washer-Hardened

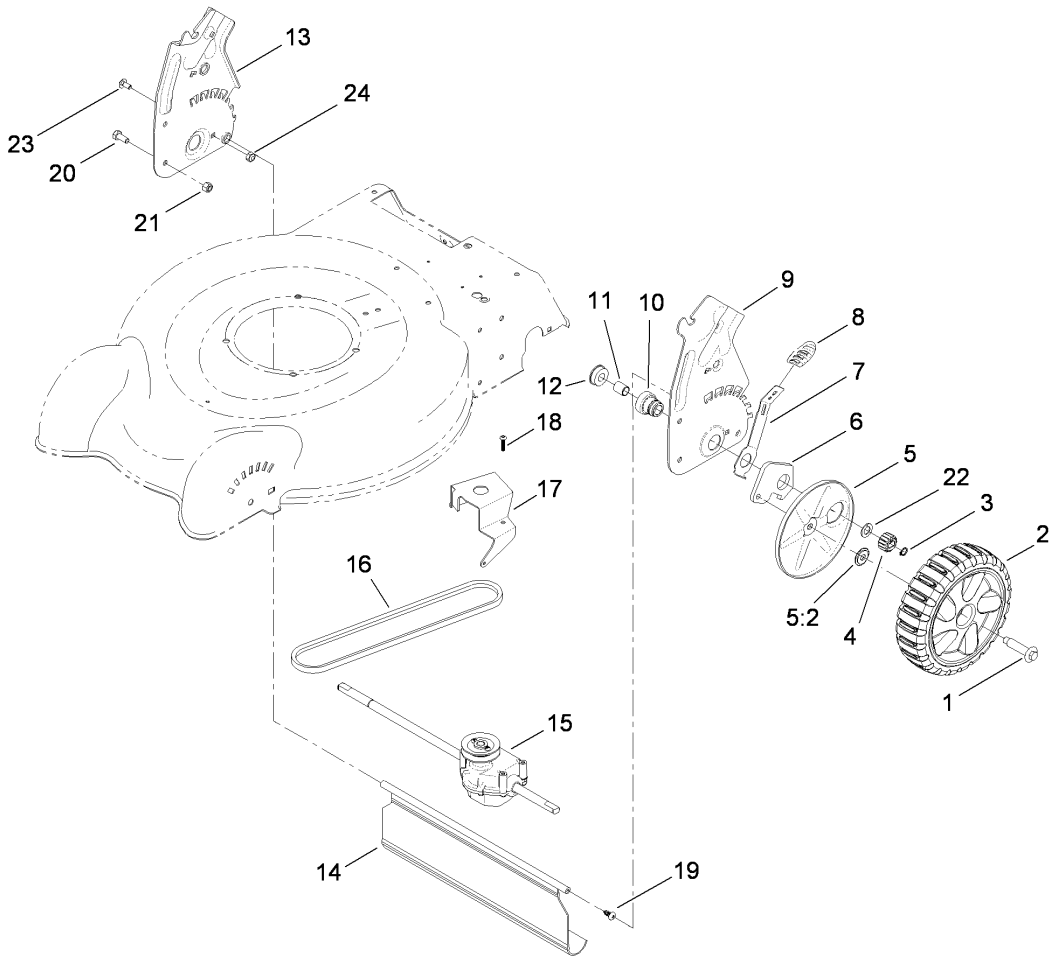

Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-3906	2	Rear Wheel ASM
3	32151-61	2	Ring-Retaining
4	110-9417	2	Pinion
5	110-1793	2	Wheel Cover ASM
5:2	614426	1	Washer-Stepped
6	108-9781	2	Arm-Pivot, Rear
7	108-9780	2	Arm-Spring
8	105-3042	2	Knob-Lever, HOC
9	112-8822-03	1	Plate-HOC, LH
10	108-9779	2	Retainer-Bushing, HOC
11	108-9782	2	Bushing-Sleeve
12	104-8699	2	Bearing-Ball
13	112-8823-03	1	Plate-HOC, RH
14	112-8768	1	Shield-Trailing
15	112-8831	1	Transmission ASM
16	110-9429	1	V-Belt
17	114-7977-03	1	Bracket-Transmission
18	108-7476	3	Screw-Plastite
19	117-1092	2	Screw-PTH
20	322-3	4	Screw-HH
21	3296-29	4	Nut-Lock, NI
22	110-7191	2	Washer-Thrust
23	3229-11	2	Screw-CARR

Ref	Part No.	Qty.	Description
24	3296-16	2	Nut-Lock, NI

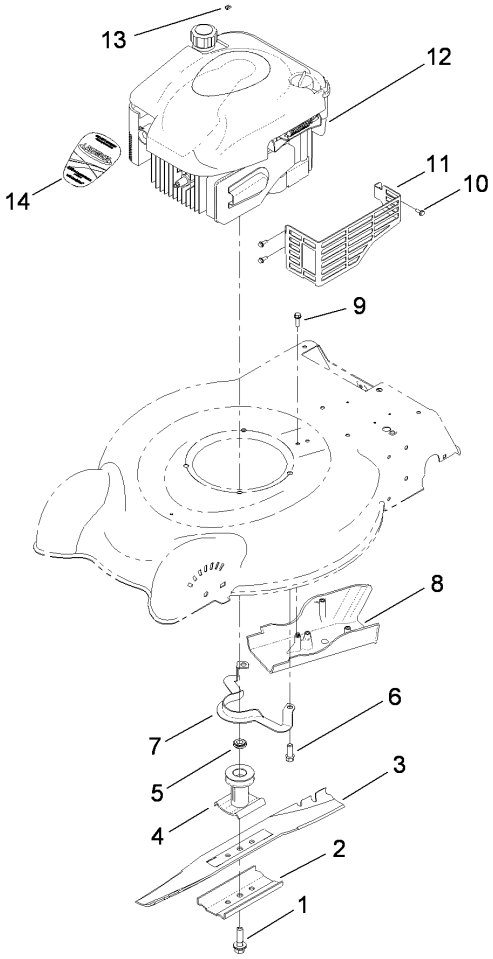


Engine and Blade Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
2	108-3766-03	1	Support-Blade
3	112-8841-03	1	Blade-20 Inch
4	106-3987	1	Blade Driver ASM
5	106-3999	1	Spacer-Driver
6	95-1726	3	Screw-Taptite
7	105-3030-03	1	Guide-Belt
8	112-8829	1	Cover-Belt
9	46-8091	3	Screw-HWH
10	32144-1	3	Screw-Taptite
11	104-7577-03	1	Shield-Muffler
❶❷12		1	Engine-B&s, 124T02-0222-B
13	2210-316	1	Stop-Rope
14	117-5946	1	Decal-Engine

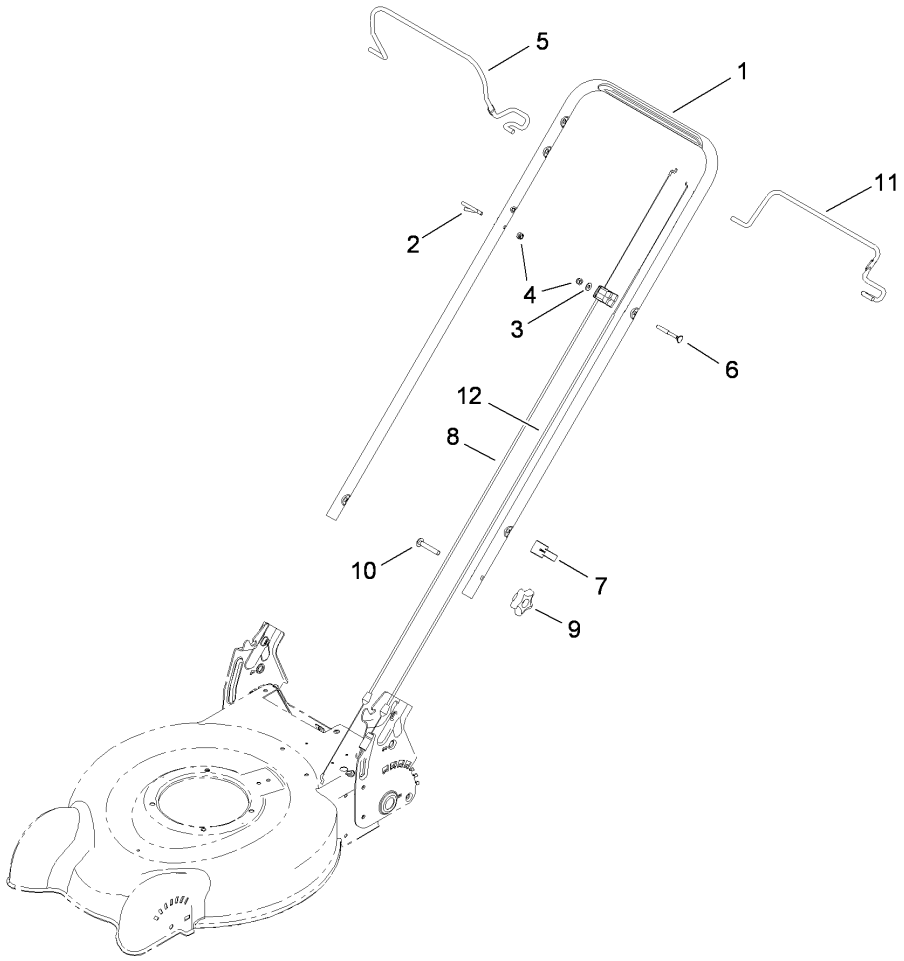

Handle and Control Assembly

Ref	Part No.	Qty.	Description
1	112-8833-05	1	Handle
2	86-9671	1	Guide-Rope
3	3256-1	1	Washer-Flat
4	3296-73	2	Nut-Lock, NI
5	112-8834-03	1	Bail-Brake, 2-Bail Flat
6	92-2270	1	Screw-Handle
7	106-6805	1	Guide-Cable
8	112-8818	1	Cable-Brake
9	108-8162	2	Knob-Locking
10	3230-6	2	Screw-CARR
11	112-8835-03	1	Bail-Traction, 2-Bail Flat
12	112-8817	1	Cable-Traction

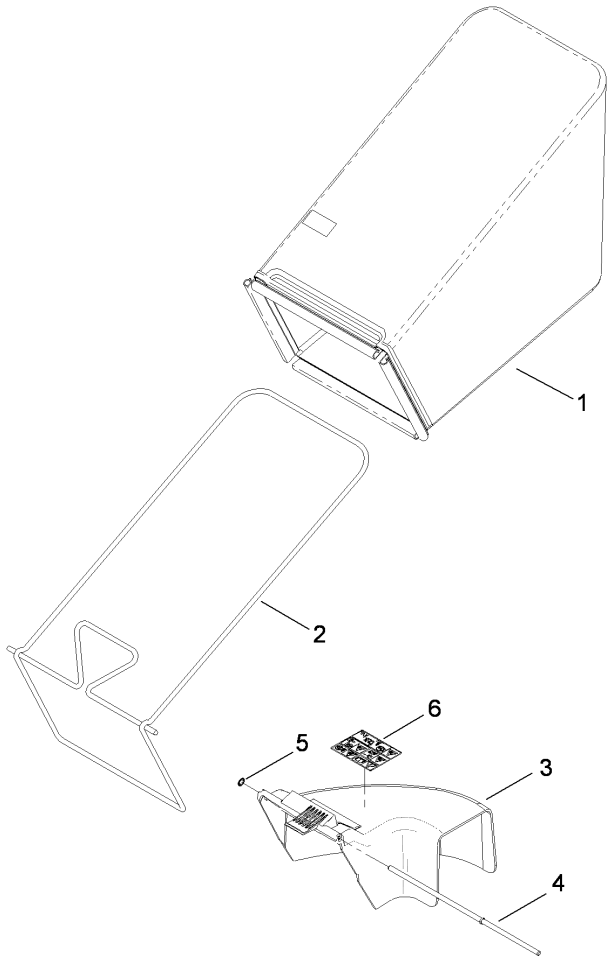

Grass Bag Assembly

Ref	Part No.	Qty.	Description
1	117-5927	1	Grass Bag ASM
2	112-8825-03	1	Frame-Bag
3	112-8819	1	Deflector-Rear
4	117-4159	1	Rod
5	32151-72	1	Ring-Retaining
6	117-4143	1	Decal-Warning, Ce

NOTES

NOTES

NOTES


TORO®