Form Number 3361-690 Rev B

Power Max 828 OE
Snowthrower

Model No. 38639C - 290000001 and up.

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Auger and Housing Assembly	3
28 Inch Auger Gearcase Assembly No. 108-7329	4
Chute Assembly	5
Frame Assembly	6
Chain Drive Assembly	8
Handle Assembly	9
Handle Assembly	10
Lever Chute Control Assembly	11
Engine Assembly	12
Cylinder Assembly Briggs and Stratton 15D104-0113-E8	13
Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 15D104-0113-E8	14
Cylinder Head Assembly Briggs and Stratton 15D104-0113-E8	15
Carburetor and Fuel Tank Assembly Briggs and Stratton 15D104-0113-E8	16
Rewind Starter and Starter Motor Assembly Briggs and Stratton 15D104-0113-E8	17
Governor, Controls and Ignition Assembly Briggs and Stratton 15D104-0113-E8	18
Muffler, Blower Housing and Flywheel Assembly Briggs and Stratton 15D104-0113-E8	19
Snow Hood, Snow Shield and Panel Briggs and Stratton 15D104-0113-E8	20
Engine and Valve Gasket Sets Briggs and Stratton 15D104-0113-E8	21
Carburetor Overhaul Kit Briggs and Stratton 15D104-0113-E8	22
Attachments and Accessories List	23

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes


❶ Not serviced separately

❷ Obtain from your local Briggs & Stratton dealer

❸ Included in Carburetor Overhaul Kit (Ref. No. 121)

❹ Included in Engine Gasket Set (Ref. No. 358)


❺ Included in Valve Gasket Set (Ref. No. 1095)

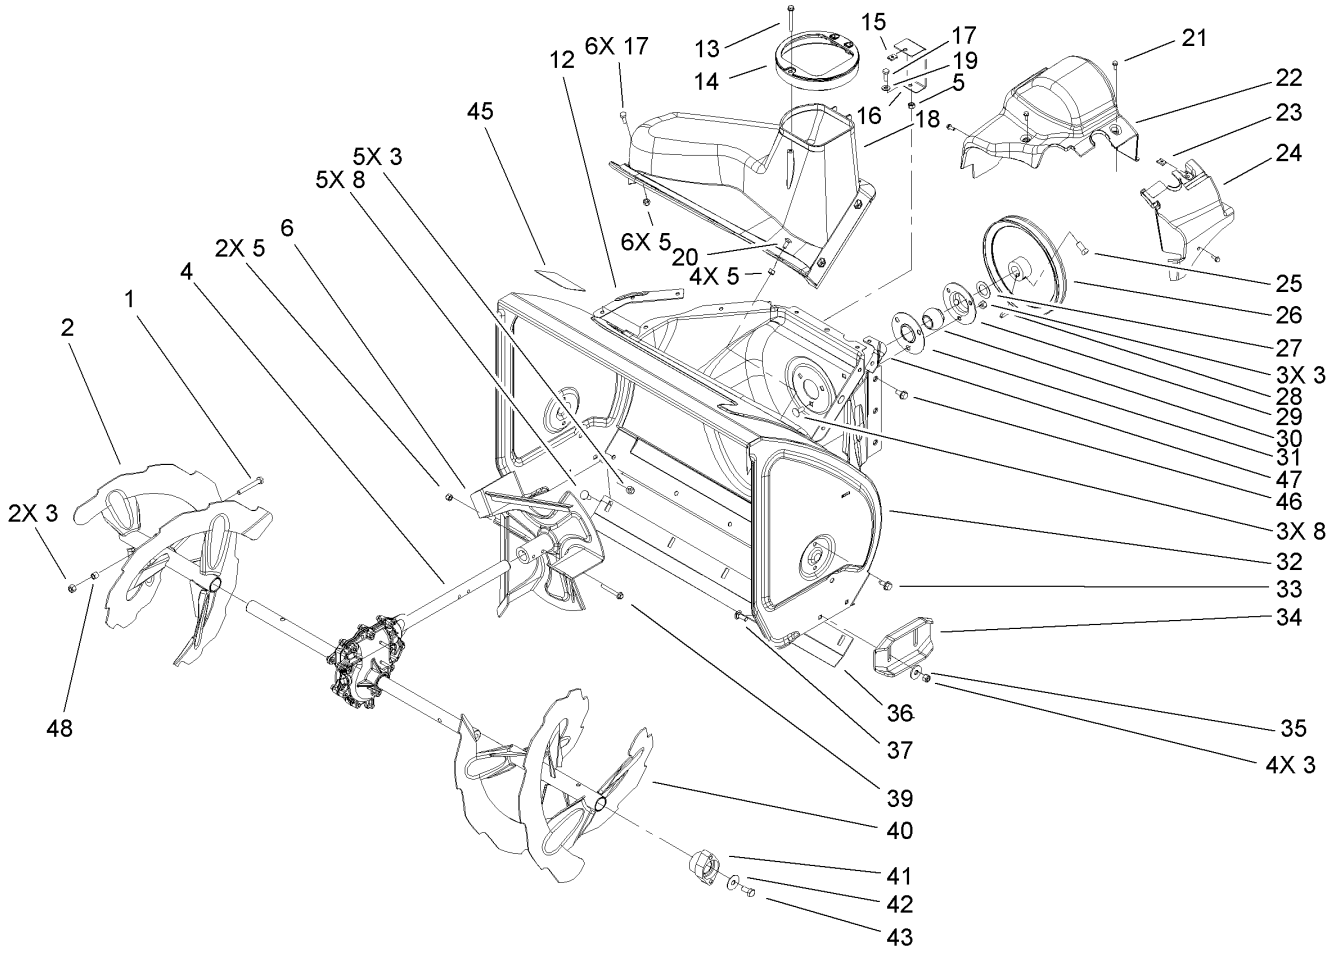

Auger and Housing Assembly


Ref	Part No.	Qty.	Description
1	322-11	2	Screw-HH
2	106-7291-03	1	Auger-RH
3	3296-29	14	Nut-Lock, NI
4	108-7329	1	28 Inch Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
8	3230-23	8	Screw-CARR
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff

Ref	Part No.	Qty.	Description
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3824	1	Housing- Auger, 28 Inch
33	32144-70	4	Screw-HWHTF
34	106-4588-01	2	Skid
35	52-2861	4	Washer
36	106-4573-01	1	Scraper-Fixed
37	3230-16	4	Screw-CARR
39	321-44	2	Screw-HHF
40	106-7301-03	1	LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
45	107-3040	1	Decal-Danger, Auger
46	32144-14	6	Screw-HWHTF
47	108-0039-03	1	Seal
48	1-633545	2	Spacer

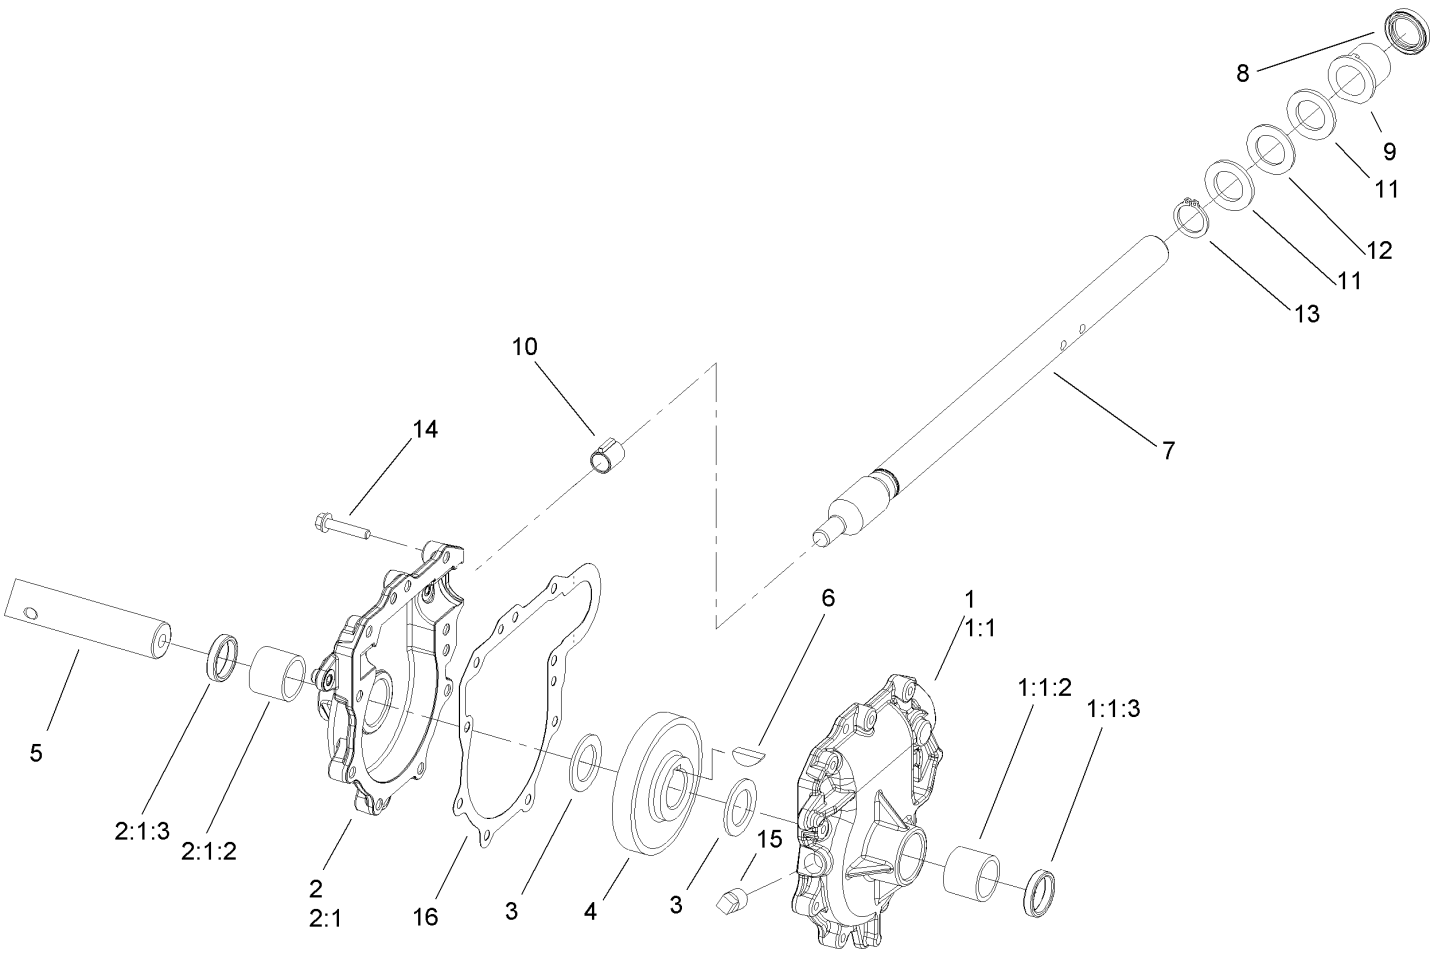

28 Inch Auger Gearcase Assembly No. 108-7329


Ref	Part No.	Qty.	Description
1	108-7325	1	LH Auger Gearcase ASM
❶1:1		1	Gearcase-Auger, LH
1:1:2	112-6635	1	Bushing-Sleeve
1:1:3	7-0045	1	Seal-Oil
2	108-7327	1	RH Auger Gearcase ASM
❶2:1		1	Gearcase-Auger, RH
2:1:2	112-6635	1	Bushing-Sleeve
2:1:3	7-0045	1	Seal-Oil
3	252-71	2	Washer-Thrust
4	62-0120	1	Gear-Helical
5	106-4421	1	Shaft-Auger
6	3257-10	1	Key-Woodruff
7	66-7811	1	Shaft-Impeller
8	253-149	1	Seal-Oil
9	37-6560	1	Bushing-Input
10	62-1150	1	Bushing-Worm
11	252-78	2	Washer-Thrust
12	252-76	1	Bearing-Thrust
13	32151-33	1	Ring-Retaining, EXT
14	108-4862	9	Screw-HWHTF
15	281-1	1	Plug-Pipe, SQH
16	108-7330	1	Gasket-Gearcase, Auger

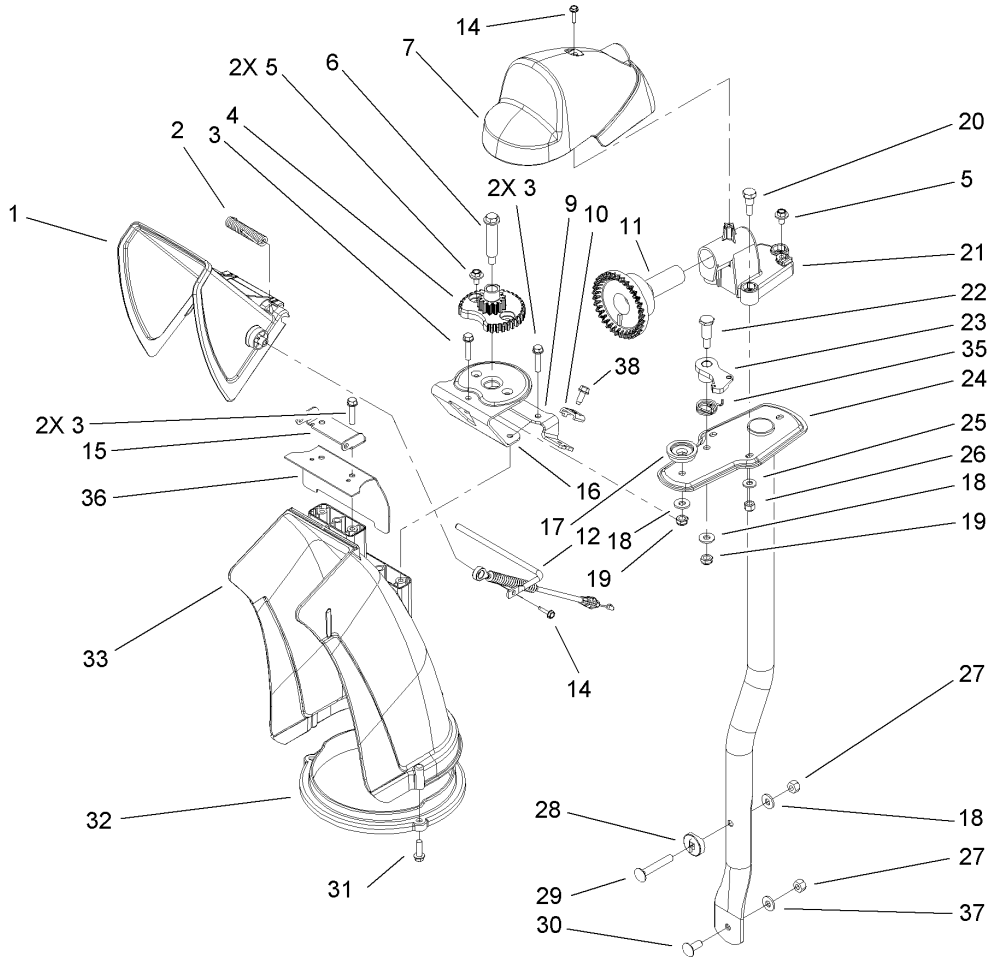

Chute Assembly

Ref	Part No.	Qty.	Description
1	112-6629	1	Deflector-Chute, Ce
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	3	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI


Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
35	108-7315	1	Spring-Torsion
36	108-5052	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

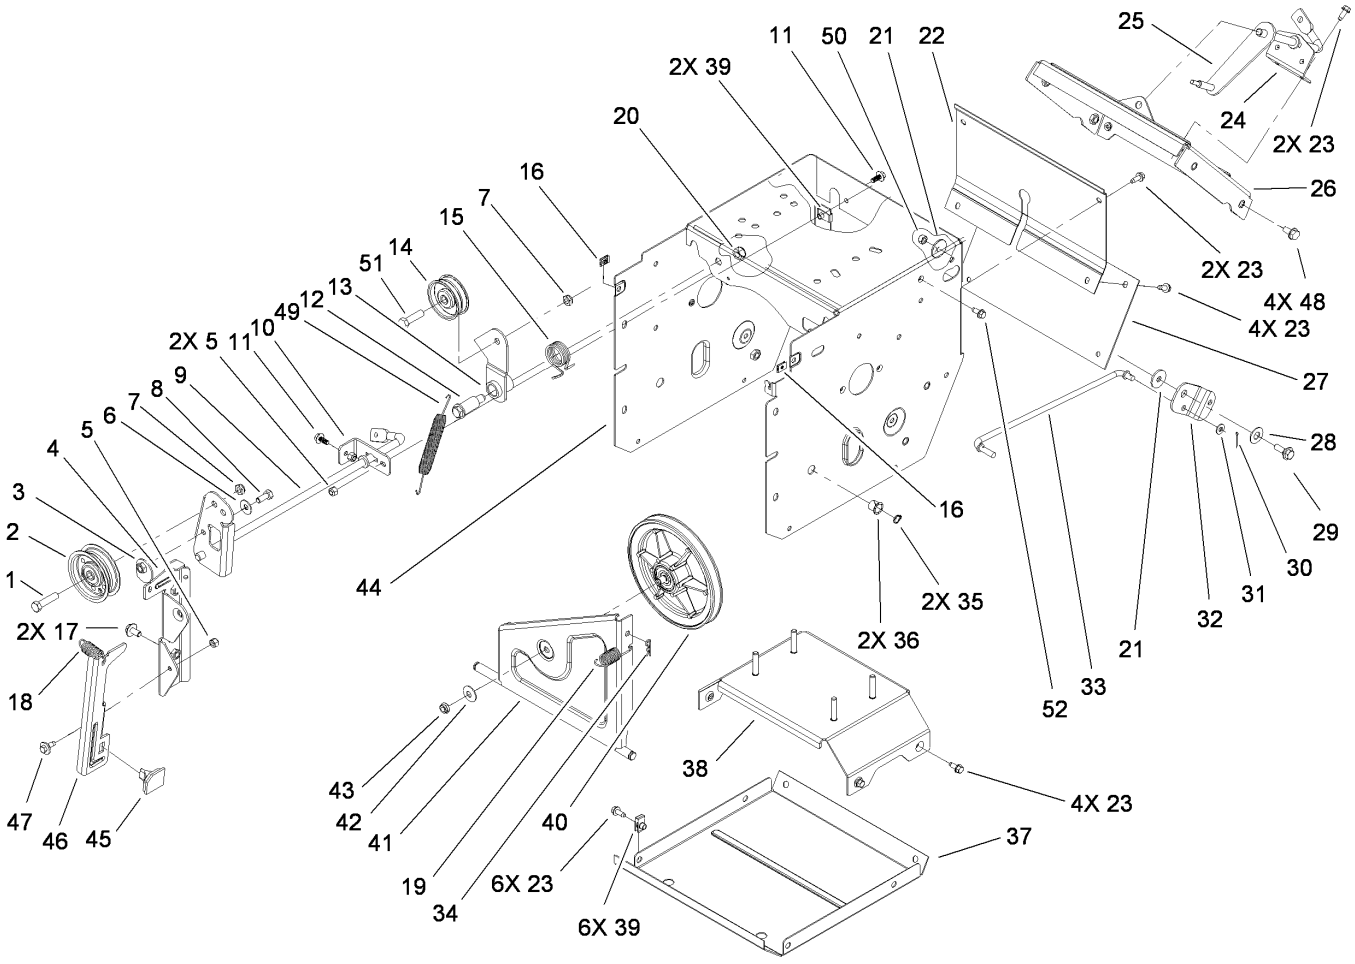

Frame Assembly


Ref	Part No.	Qty.	Description
1	323-8	1	Screw-HH
2	92-7104	1	Pulley-Idler
3	107-1047	1	Nut
4	107-1039	1	Bracket-Idler, Impeller
5	3296-42	3	Nut-Lock, NI
6	3290-456	1	Washer-Belleville
7	3296-59	2	Nut-Lock, NI
8	322-3	1	Screw-HH
9	107-3838-03	1	Impeller Clutch ASM
10	106-7341	1	Bracket-Rear, Clutch
11	99-6810	2	Screw-HH
12	108-5056	1	Bolt-Shoulder
13	108-5058	1	Arm-Idler, Traction
14	3-4244	1	Pulley-Idler
15	108-7332	1	Spring-Torsion
16	107-1013	2	Nut-Speed, U-Type
17	3234-7	2	Screw-HHF
18	107-1045	1	Spring-Extension
19	107-1003	1	Spring-Extension
20	3296-76	1	Nut-Lock, NI
21	5-4460	2	Washer-Pivot
22	106-4556-01	1	Cover-Upper
23	32144-10	16	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift

Ref	Part No.	Qty.	Description
25	106-7268	1	Lever-Control, Traction
26	108-0026-01	1	Shift Plate ASM
27	106-7345-01	1	Cover-Lower
28	25-5640	1	Washer
29	27-0410	1	Screw-Shoulder
30	3272-4	1	Pin-Cotter
31	3256-23	1	Washer-Flat
32	107-1011	1	Bellcrank-Drive
33	106-4467	1	Link-Control, Speed
34	3290-307	1	Pin-Hair
35	32151-61	2	Ring-Retaining
36	256-257	2	Bushing-Nyliner
37	106-7330-01	1	Pan-Bottom
38	112-8128	1	Frame Brace ASM
39	107069	8	Clip
40	108-0031	1	Traction Pulley ASM
41	108-7307	1	Friction Wheel Bracket ASM
42	3290-340	1	Washer-Belleville
43	3296-5	1	Nut-Lock
44	114-9259-01	1	Traction Frame ASM
45	66-8060	1	Pad-Brake
46	107-1000	1	Arm-Brake
47	92-9698	1	Screw-Shoulder
48	32144-14	4	Screw-HWHTF

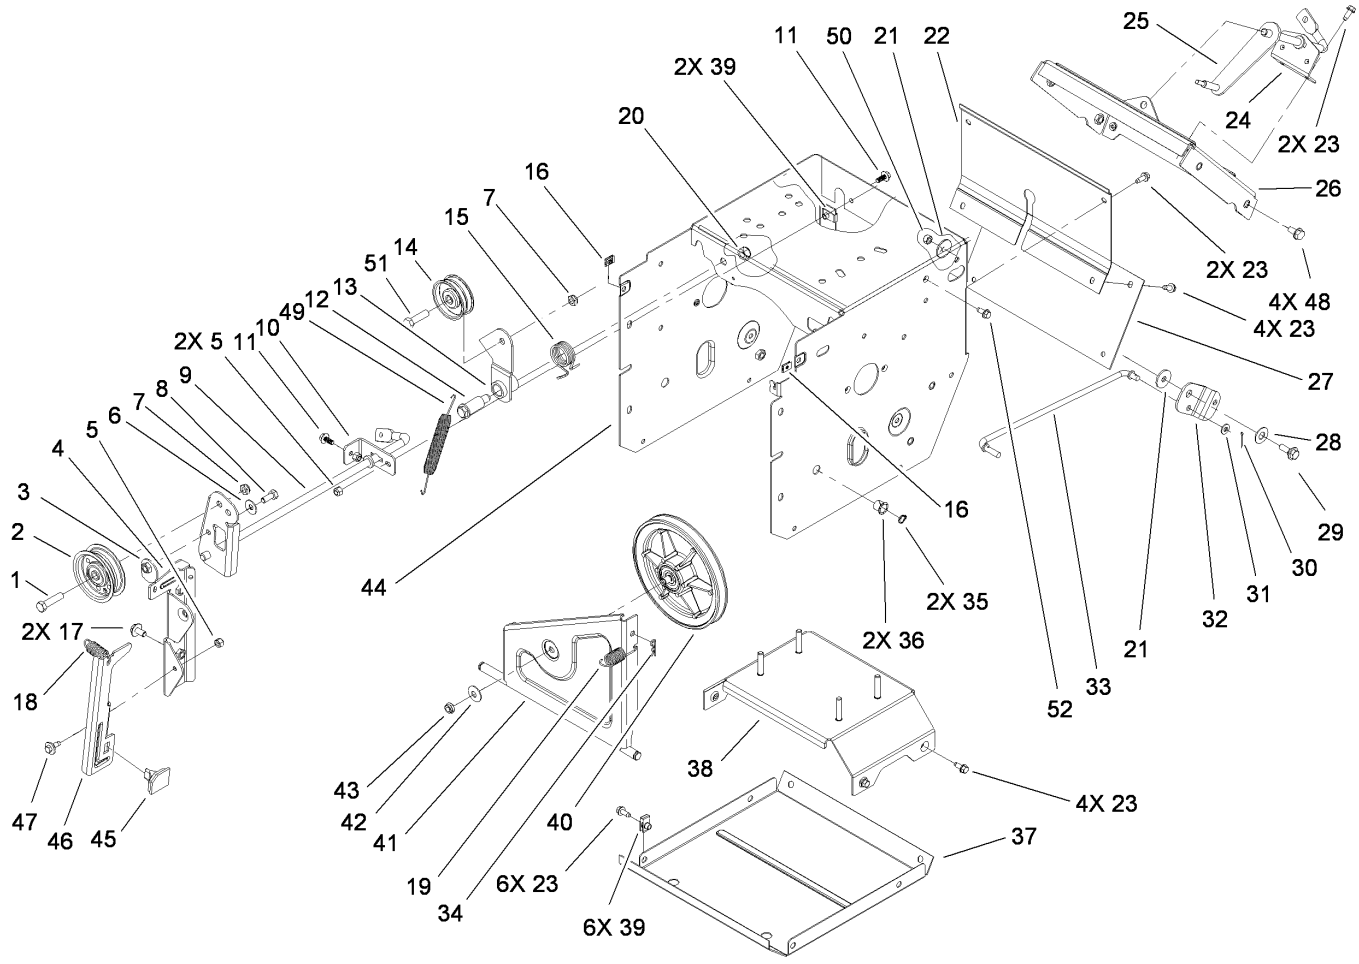

Frame Assembly (continued)


Ref	Part No.	Qty.	Description
49	108-2976	1	Spring-Extension
50	3296-29	1	Nut-Lock, NI
51	323-29	1	Screw-HH
52	32144-4	1	Screw-HWH

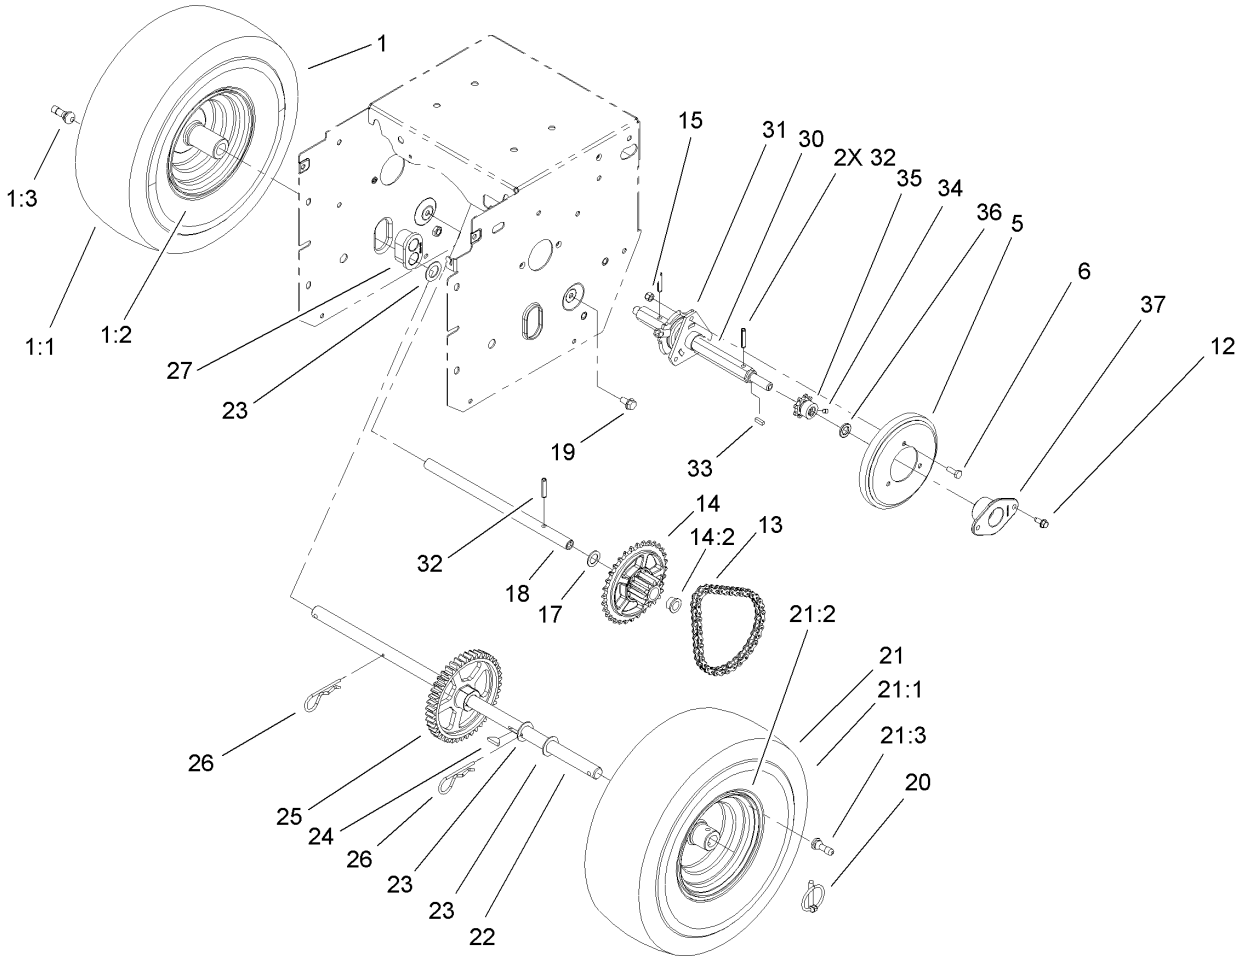

Chain Drive Assembly

Ref	Part No.	Qty.	Description
❶1		1	RH Wheel And Tire ASM
1:1	107-3042	1	Tire
1:2	107-3043	1	Rim-Tire
1:3	232-27	1	Stem-Valve
5	106-4480	1	Wheel-Friction
6	321-4	3	Screw-HH
12	32144-10	4	Screw-HWH
13	108-0016	1	Chain-Roller
13	2710-6	1	Link-Connecting
14	108-0013	1	Sprocket ASM
14:2	108-2974	2	Bushing-Flange
15	3296-42	3	Nut-Lock, NI
17	107-3041	1	Washer-Flat
18	106-4592	1	Shaft-Intermediate
19	32144-14	2	Screw-HWHTF
20	107-3039	2	Klik Pin ASM
❶21		1	LH Wheel And Tire ASM
21:1	107-3042	1	Tire
21:2	107-3043	1	Rim-Tire
21:3	232-27	1	Stem-Valve
22	106-4449	1	Shaft-Axle
23	3-8664	3	Washer-Thrust
24	3257-7	1	Key-Woodruff
25	106-4572	1	Gear-Axle, 44 Tooth


Ref	Part No.	Qty.	Description
26	3290-343	2	Pin-Hair
27	106-4558	2	Bearing-Axle
30	108-5054	1	Shaft-Hex
31	106-4434	1	Trunion-Hex
32	32121-9	3	Pin-Roll, Slotted
33	94-8850	1	Key-Square
34	3245-32	2	Screw-HSH
35	106-7317	1	Sprocket-8 Tooth
36	108-5059	1	Spacer-Bushing
37	108-7319	2	Retainer-Bearing

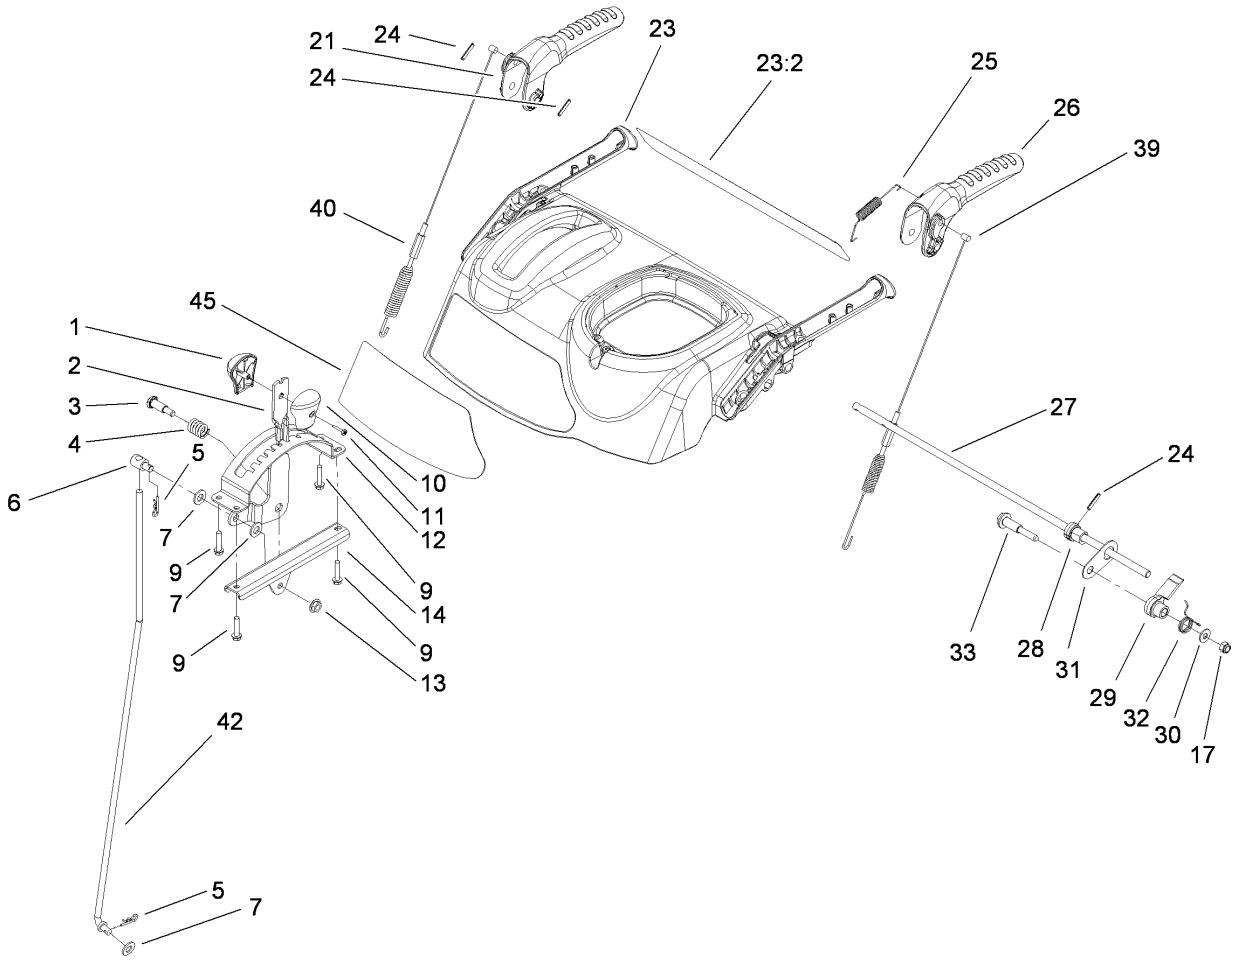

Handle Assembly

Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	108-7313	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	110-3446	1	Trunion-Rod
7	3256-24	3	Washer-Flat
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
17	3296-72	1	Nut-Lock, NI
21	106-4413	1	Lever-Auger
23	112-6631	1	Control Panel ASM
23:2	112-6626	1	Decal-Panel, Control
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat


Ref	Part No.	Qty.	Description
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
39	115-5671	1	Cable-Traction
40	115-5680	1	Cable-Auger
42	107-1005	1	Rod-Shift
45	112-8144	1	Decal-Control Panel

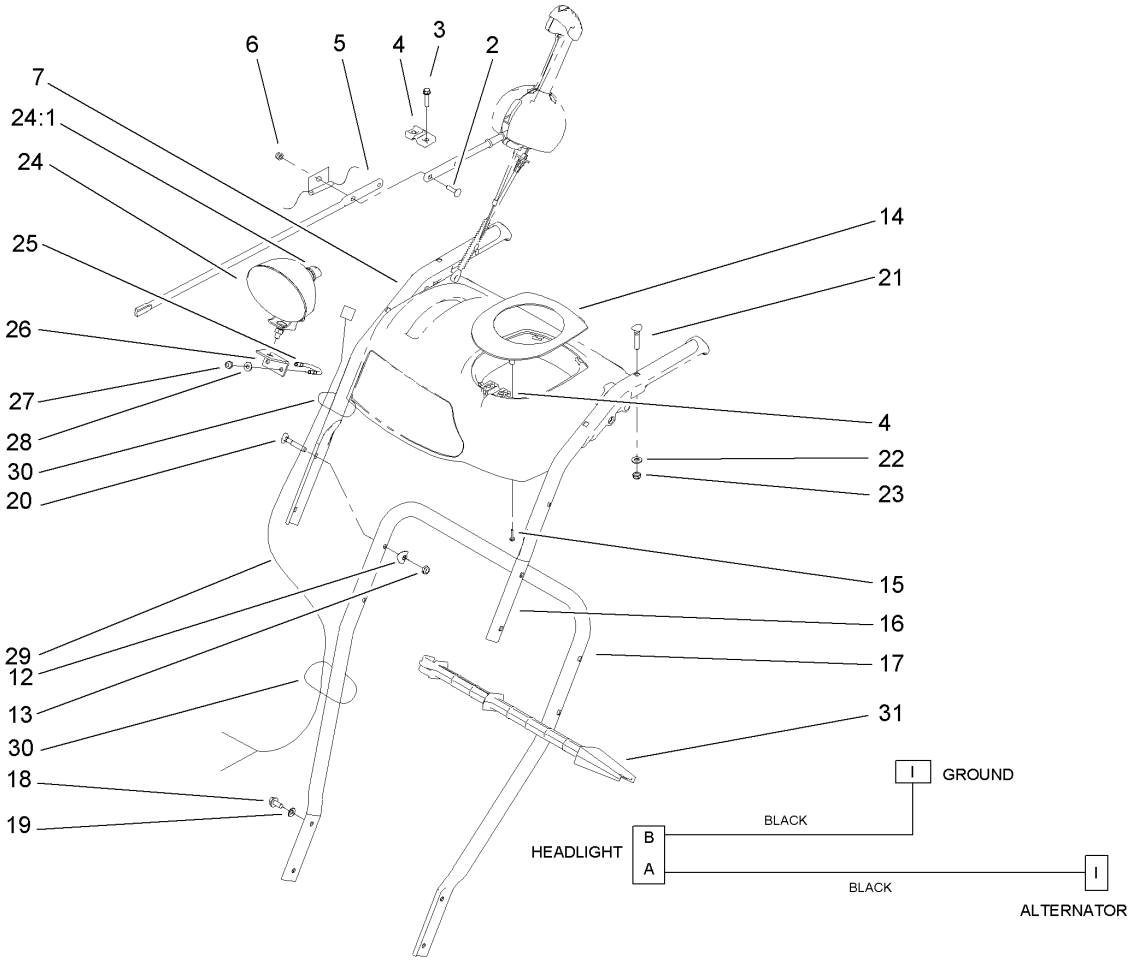

Handle Assembly


Ref	Part No.	Qty.	Description
2	3229-30	2	Screw-CARR
3	46-8092	2	Screw-Plastite
4	105-9987	2	Support-Rod
5	106-7283	1	Rod-Chute, Front
6	3296-73	2	Nut-Lock, NI
7	108-0038-03	1	Handle-Upper, RH
12	107-3844	4	Washer
13	3296-72	4	Nut-Lock, NI
14	106-4586	1	Cover-Panel, Control
15	94-4496	2	Screw-PPH
16	108-0037-03	1	Handle-Upper, LH
17	105-9981-03	1	Handle-Lower
18	32144-14	4	Screw-HWHTF
19	3290-475	4	Washer-Belleville
20	92-2260	4	Screw-Handle
21	107-3018	4	Screw-Handle
22	3256-70	4	Washer-Flat
23	3296-72	4	Nut-Lock, NI
24	106-4510	1	Headlamp ASM
24:1	108-0008	1	Lamp-12 Volt
25	107-3024	1	Clamp
26	107-1020-03	1	Bracket-Light
27	3296-73	2	Nut-Lock, NI
28	3256-1	2	Washer-Flat

Ref	Part No.	Qty.	Description
29	106-4511	1	Harness-Wire
30	614249	2	Strap-Tie
31	110-3408	1	Stick-Cleanout

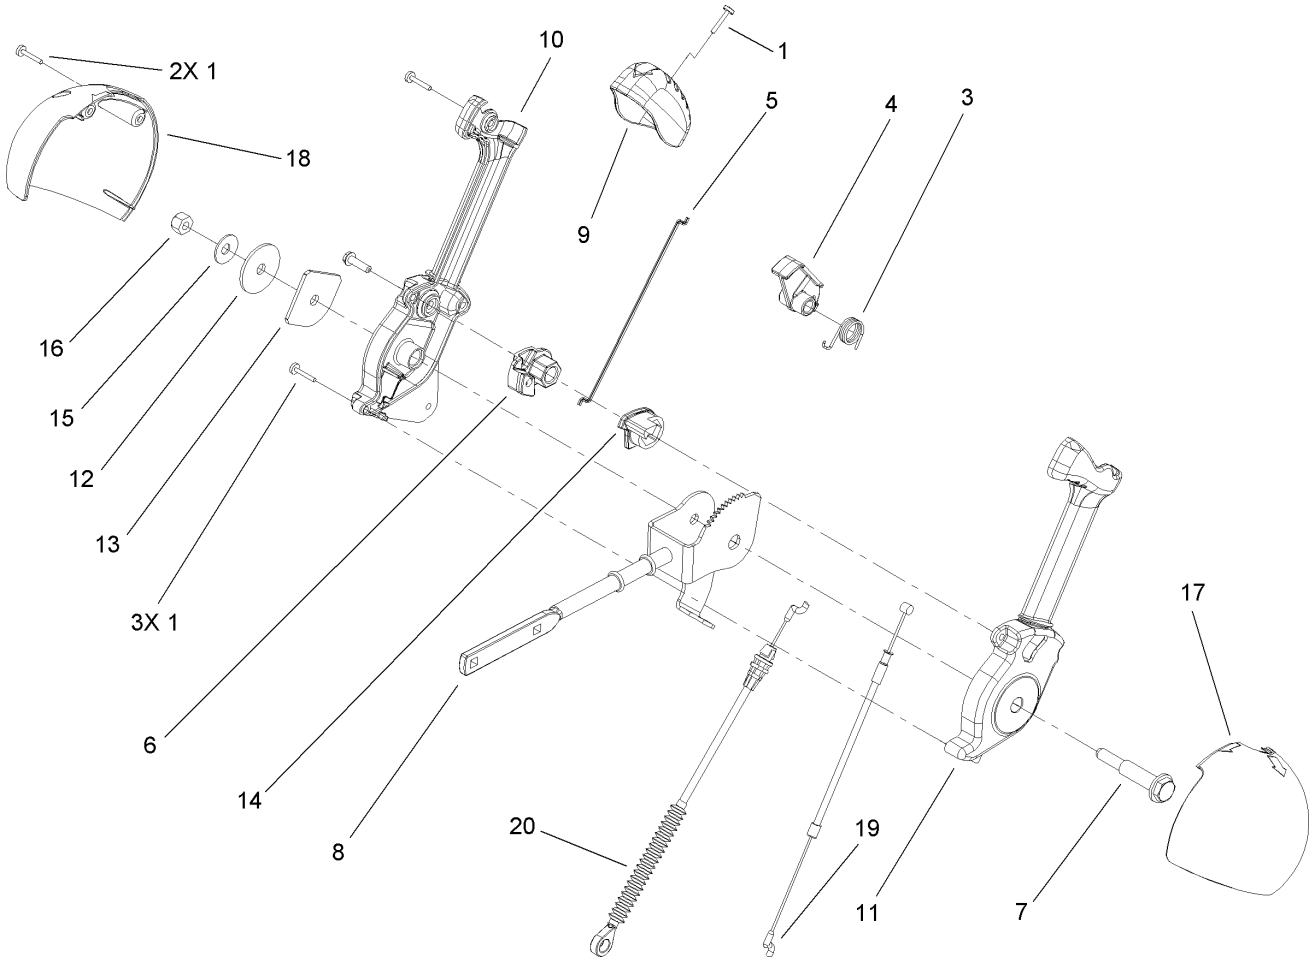


Lever Chute Control Assembly

Ref	Part No.	Qty.	Description
1	94-4496	6	Screw-PPH
3	105-9982	1	Spring-Torsion
4	105-9984	1	Trigger-Latch
5	105-9985	1	Link-Latch
6	105-9988	1	Lever-Cable, Deflector
7	105-9995	1	Screw-Shoulder
8	106-4479	1	Rod-Control, Chute
9	106-7280	1	Cap-Lever
10	106-7281	1	Lever-Chute Control, RH
11	106-7282	1	Lever-Chute Control, LH
12	107-3002	1	Washer-Nylon
13	106-7295	1	Plate-Friction
14	106-7310	1	Pawl-Latch
15	3290-456	1	Washer-Belleville
16	3296-29	1	Nut-Lock, NI
17	105-9986	1	Cover-Chute Lever, LH
18	106-7292	1	Cover-Chute Lever, RH
19	105-9989	1	Cable-Release, Chute
20	105-9990	1	Cable-Control, Deflector

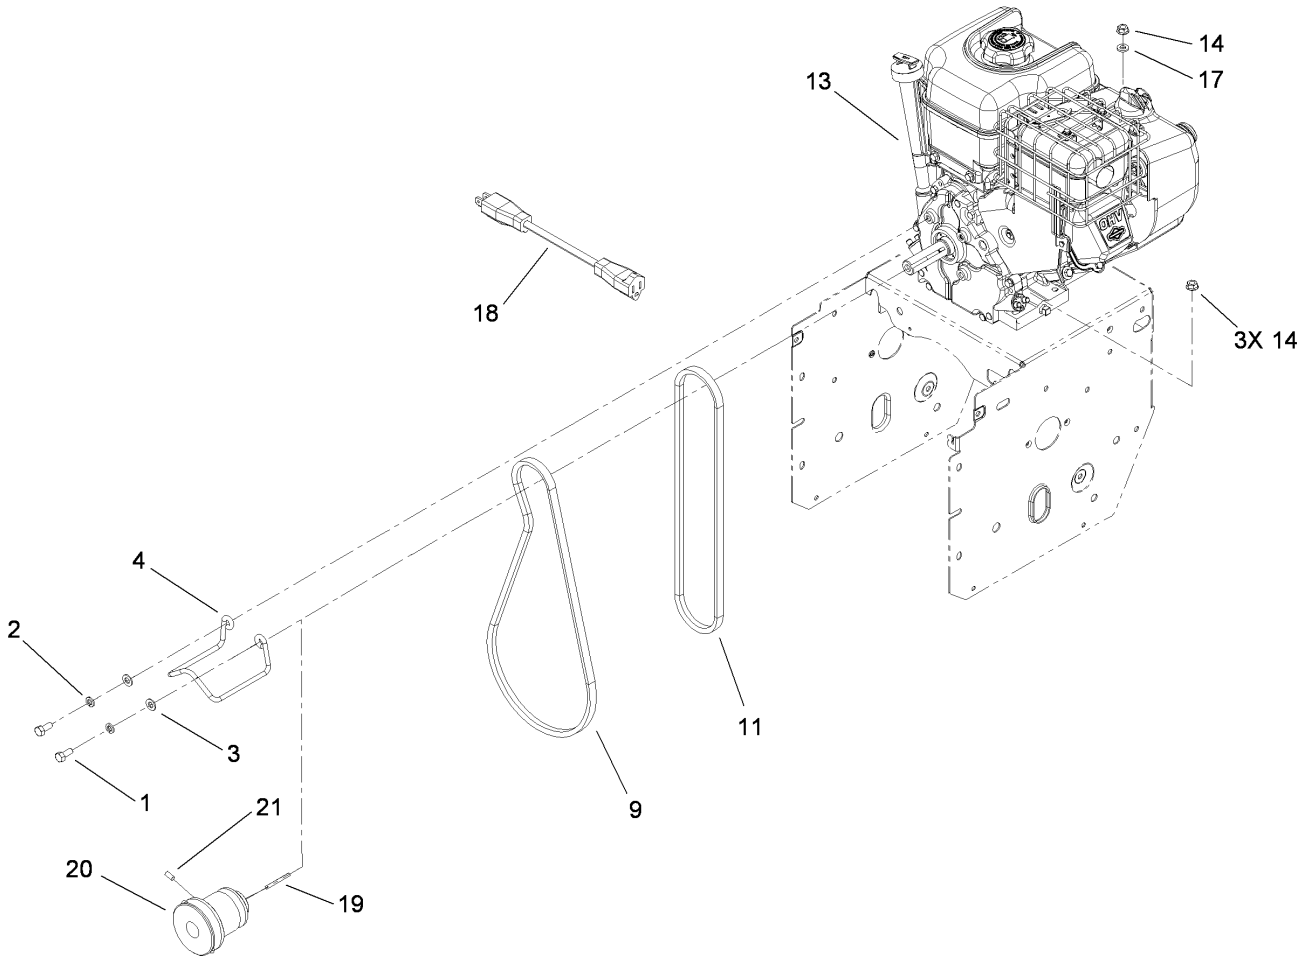

Engine Assembly

Ref	Part No.	Qty.	Description
1	3210-3	2	Screw-HH
2	3253-4	2	Washer-Lock
3	3256-23	2	Washer-Flat
4	107-3835	1	Guide-Belt
9	106-4498	1	Belt-V
11	94-8812	1	V Belt-Traction
❶❷13		1	Engine-Briggs, 15D104-0113-E8
14	32128-20	4	Nut-HF
17	3256-2	1	Washer-Flat
18	99-9300	1	Cord-Extension
19	7-0036	1	Key-Square
20	114-9252	1	Pulley-Engine
21	3245-9	2	Screw-Set

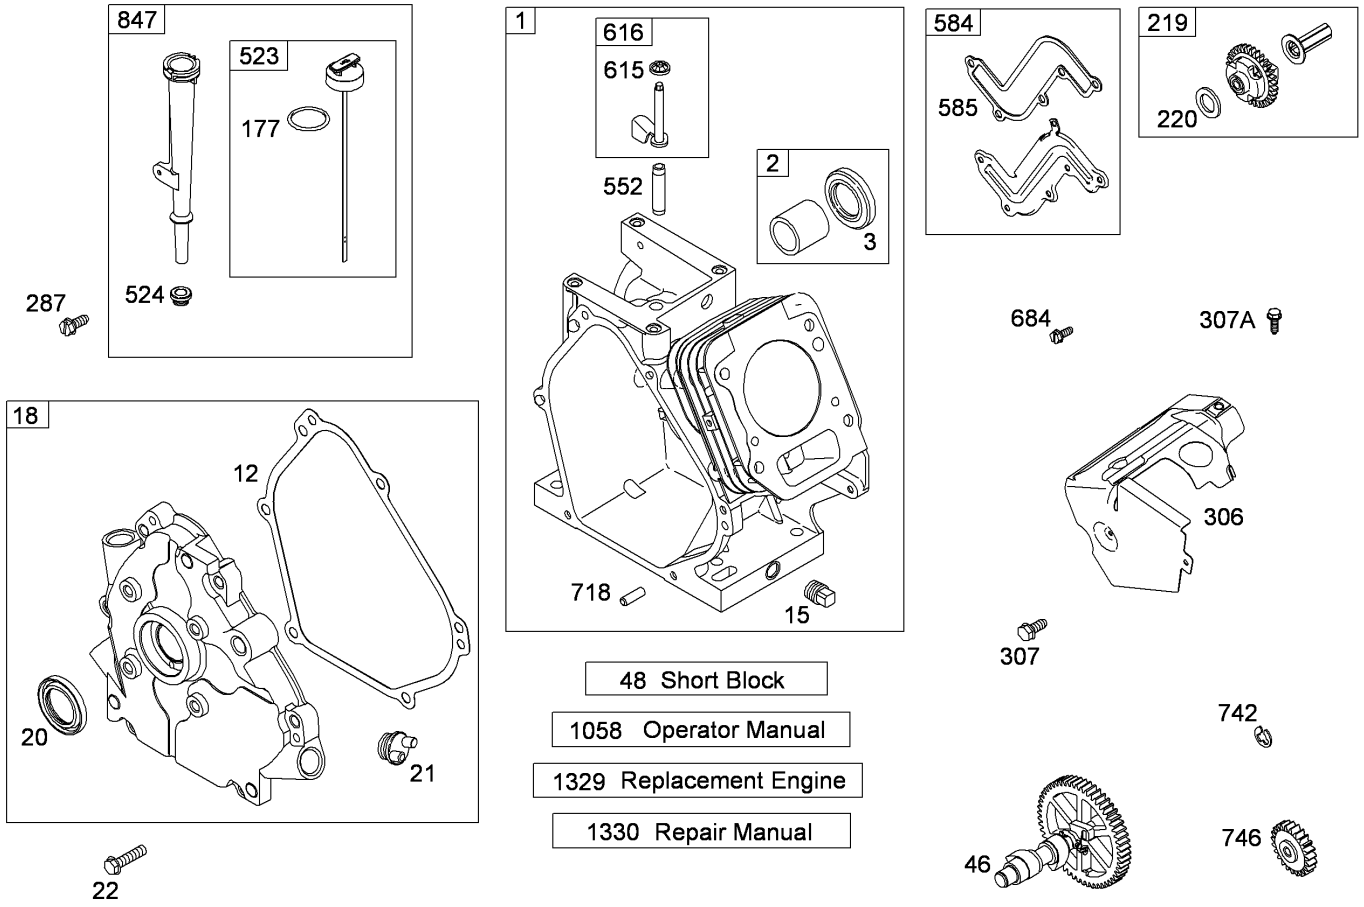



Assemblies include all parts shown in frames


Cylinder Assembly
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
❷❹1	794188	1	Cylinder ASM
❷2	399269	1	Bushing And Seal Kit (Magneto Side)
❷❹3	299819s	1	Seal-Oil (Magneto Side)
❷❹12	699485	1	Gasket-Cover, Crankcase
❷15	691686	1	Plug-Drain, Oil (Square Head)
❷18	699696	1	Cover-Crankcase
❷❹20	692550	1	Seal-Oil
❷21	281658S	1	Cap-Fill, Oil
❷22	699478	1	Screw (Crankcase Cover To Sump)
❷46	693404	1	Camshaft
❷48	791711	1	Short Block
❷177	691031	1	Seal-O Ring (Dipstick)
❷219	693578	1	Gear-Governor
❷220	691724	1	Washer (Governor Gear)
❷287	699629	1	Screw (Dipstick Tube)
❷306	695710	1	Shield-Cylinder
❷307	699483	1	Screw (Cylinder Shield) (M4)
❷307A	699234	1	Screw (Cylinder Shield) (M5)
❷523	693618	1	Dipstick
❷524	281730s	1	Seal-Dipstick Tube
❷552	692346	1	Bushing-Crank, Governor
❷584	791759	1	Cover-Passage, Breather


Ref	Part No.	Qty.	Description
❷❹585❺	791760	1	Cup-Flywheel
❷615	692576	1	Retainer-Shaft, Governor
❷616	692547	1	Crank-Governor
❷684	793369	1	Screw (Breather Passage Cover)
❷718	690959	1	Pin-Locating
❷742	692564	1	Retainer-E Ring
❷746	790278	1	Gear-Idler
❷847	693617	1	Dipstick And Tube ASM
❷1058	277104	1	Operator Manual

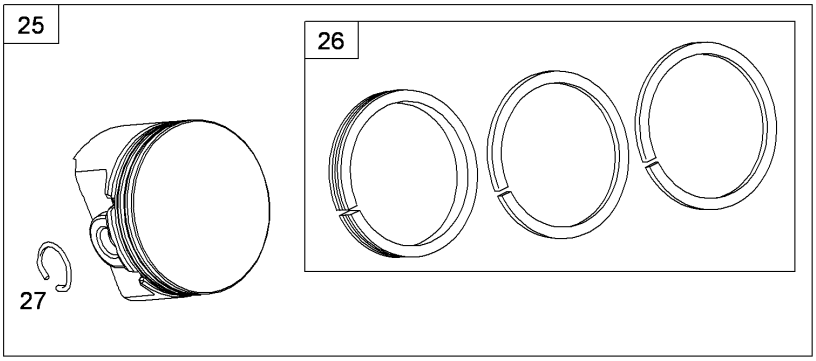

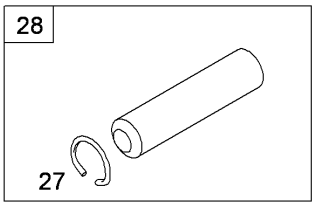

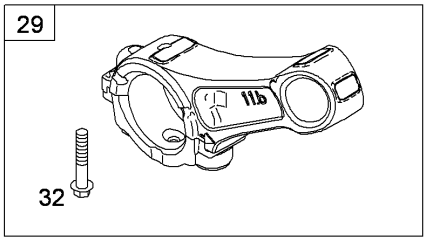




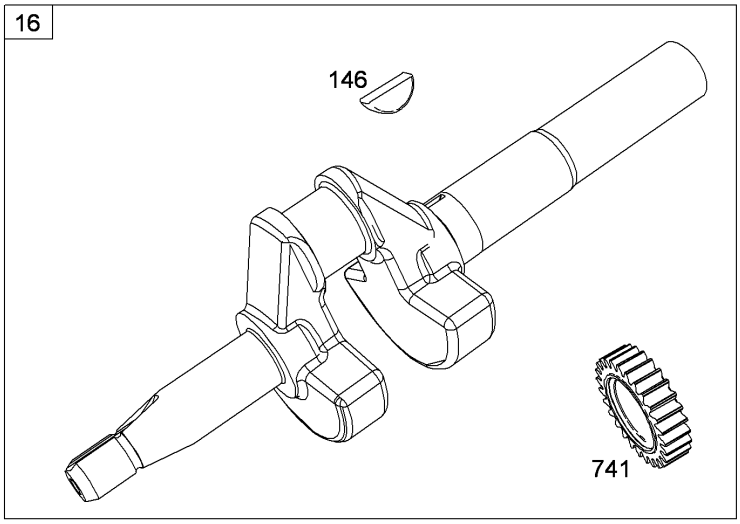

Assemblies include all parts shown in frames

Crankshaft, Piston, Ring and Connecting Rod Assembly
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
❷16	699454	1	Crankshaft
❷24	222698s	1	Key-Flywheel
❷25	791786	1	Piston ASM (Standard)
❷25	791791	1	Piston ASM (.020 Oversize)
❷26	791787	1	Ring Set (Standard)
❷26	791792	1	Ring Set (.020 Oversize)
❷27	690975	1	Lock-Pin, Piston
❷28	690229	1	Pin-Piston (STD)
❷29	791783	1	Rod-Connecting
❷32	791784	1	Screw (Connecting Rod)
❷146	690979	1	Key-Timing
❷598	220624	1	Shim-End Play (Crankshaft)
❷741	695087	1	Gear-Timing
❷1329	15D114-0020	1	Replacement Engine
❷1330	272147	1	Repair Manual

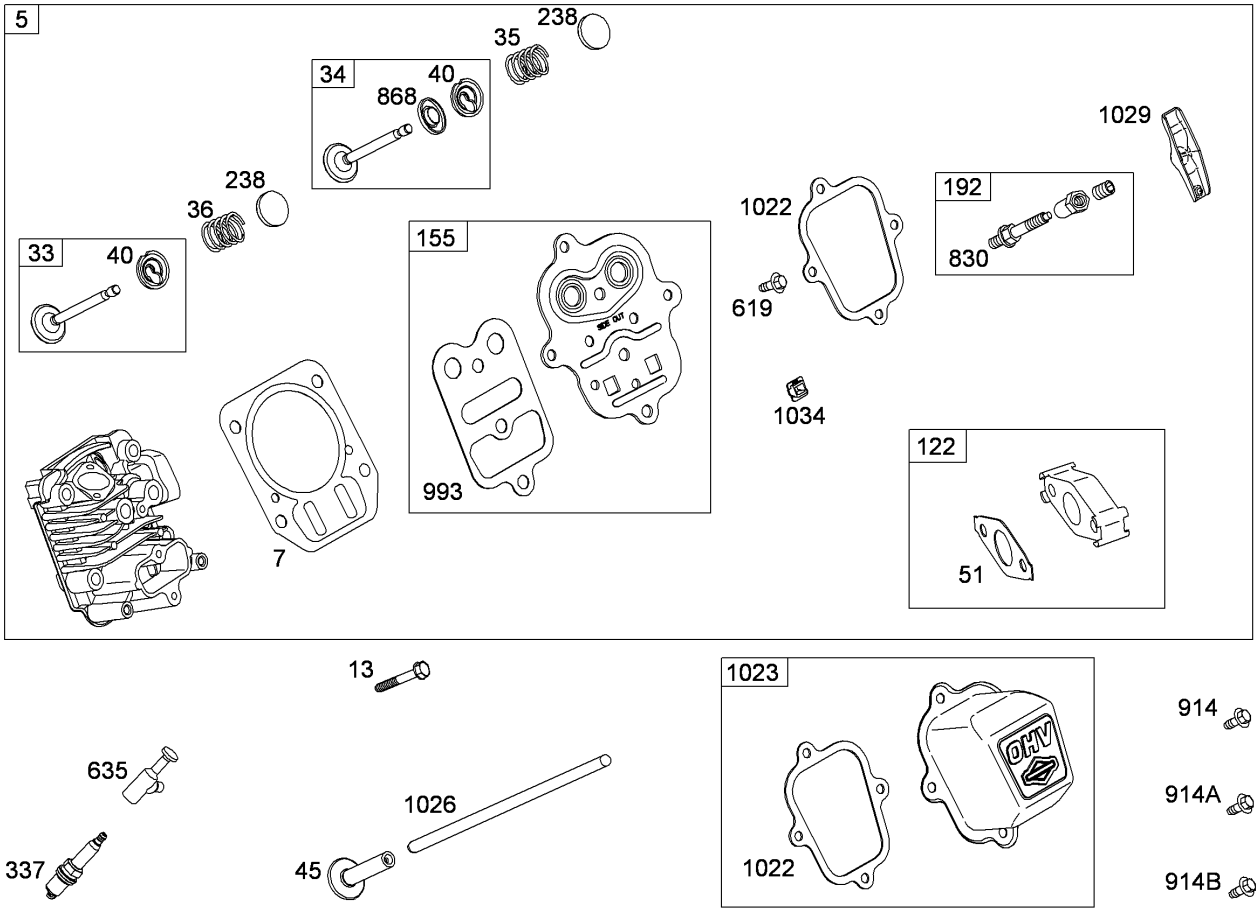


Assemblies include all parts shown in frames

Cylinder Head Assembly
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
❷5	791720	1	Head-Cylinder
❷❹7 ❺	791716	1	Gasket-Head, Cylinder
❷13	699482	1	Screw (Cylinder Head)
❷33	499642	1	Valve-Exhaust
❷34	499641	1	Valve-Intake
❷35	691304	1	Spring-Valve (Intake)
❷36	691304	1	Spring-Valve (Exhaust)
❷40	692194	1	Retainer-Valve
❷45	690977	1	Tappet-Valve
❷❺51 ❹❺	791718	1	Gasket-Intake
❷122	791717	1	Spacer-Carburetor
❷155	698214	1	Plate-Head, Cylinder
❷192	694543	1	Adjuster-Arm, Rocker
❷238	691300	1	Cap-Valve
❷337	691043	1	Spark Plug
❷619	699480	1	Screw (Cylinder Head Plate)
❷635	692927	1	Boot-Sparkplug
❷830	694544	1	Stud-Arm, Rocker
❷❹868 ❺	795440	1	Seal-Valve
❷914	699480	1	Screw (Rocker Cover) (Bottom)
❷914A	692557	1	Screw (Rocker Cover) (Top)
❷914B	697551	1	Screw (Rocker Cover) (Sides)

Ref	Part No.	Qty.	Description
❷❹993 ❺	694088	1	Gasket-Head Plate, Cylinder
❷❹1022 ❺	691890	1	Gasket-Cover, Rocker
❷1023	499924	1	Cover-Arm, Rocker
❷1026	790287	1	Rod-Push
❷1029	691230	1	Arm-Rocker
❷1034	691343	1	Guide-Rod, Push

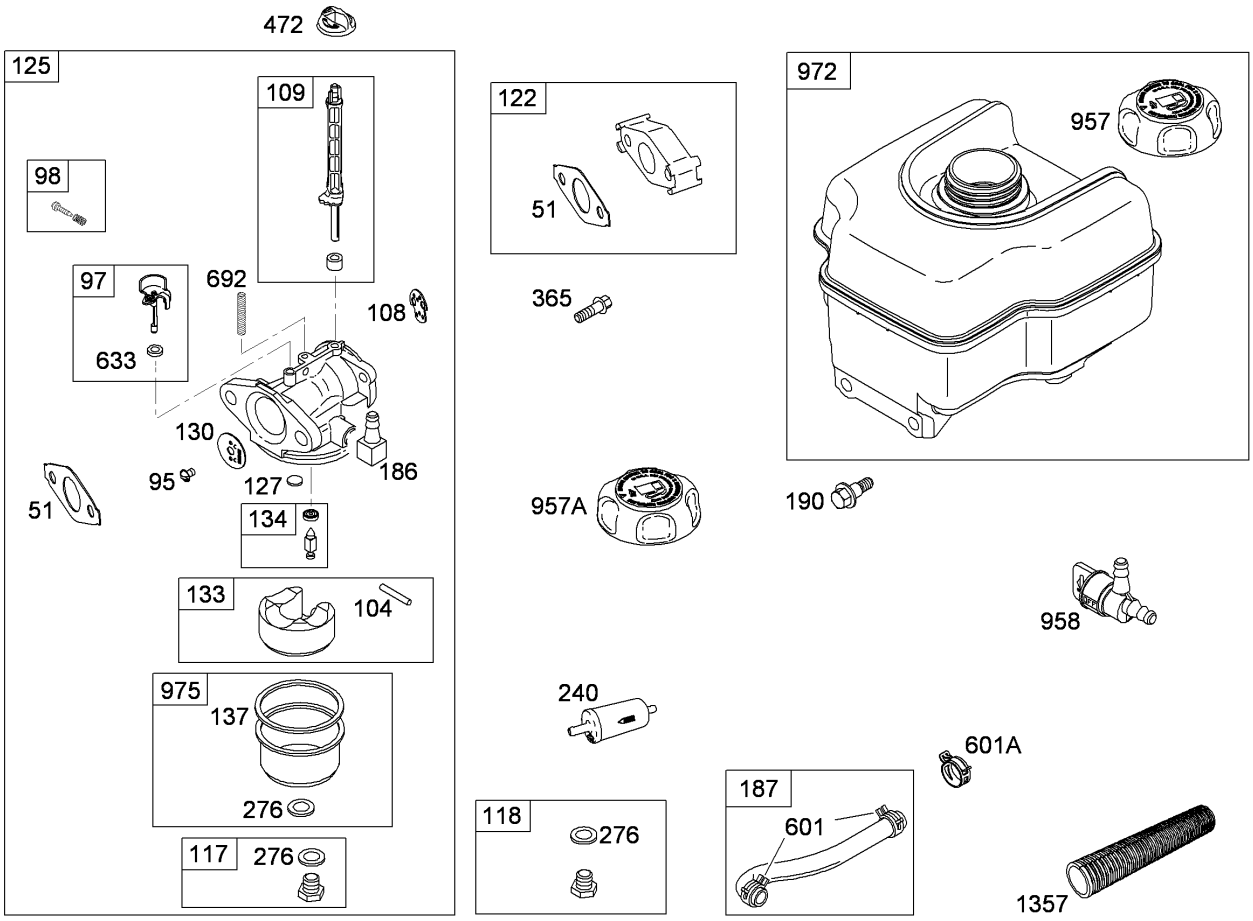


Assemblies include all parts shown in frames

Carburetor and Fuel Tank Assembly
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
❷❸51 ❹❺	791718	1	Gasket-Intake
❷95	691636	1	Screw (Throttle Valve)
❷97	690024	1	Shaft-Throttle
❷98	398185	1	Idle Speed Kit
❷❸104	691242	1	Pin-Hinge, Float
❷108	695807	1	Valve-Choke
❷109	791957	1	Shaft-Choke
❷117	691428	1	Jet-Main (Standard)
❷118	690048	1	Jet-Main (High Altitude)
❷122	791717	1	Spacer-Carburetor
❷125	794588	1	Carburetor
❷❸127	691739	1	Plug-Welch
❷130	691181	1	Valve-Throttle
❷133	398187	1	Float-Carburetor
❷❸134	398188	1	Needle And Seat Kit
❷❸137	693981	1	Gasket-Bowl, Float
❷186	692317	1	Connector-Hose
❷187	791867	1	Line-Fuel (Molded)
❷190	699220	1	Screw (Fuel Tank)
❷240	695666	1	Filter–Fuel
❷❸276	271716	1	Washer-Sealing
❷291	790830	1	Thermostat
❷365	699484	1	Screw (Carburetor)


Ref	Part No.	Qty.	Description
❷472	791958	1	Knob-Choke Shaft
❷601	791850	1	Clamp-Hose (Green)
❷601A	691038	1	Clamp-Hose (Black)
❷❸633	691321	1	Seal-Shaft, Choke Throttle
❷692	690572	1	Spring-Detent
❷972	694260	1	Tank-Fuel
❷957	795027	1	Cap-Fuel Tank
❷957A	792647	1	Cap-Fuel Tank (Fresh Start)
❷958	698180	1	Valve-Shut Off, Fuel
❷975	790559	1	Bowl-Float
❷1357	794700	1	Sleeve-Fuel Line

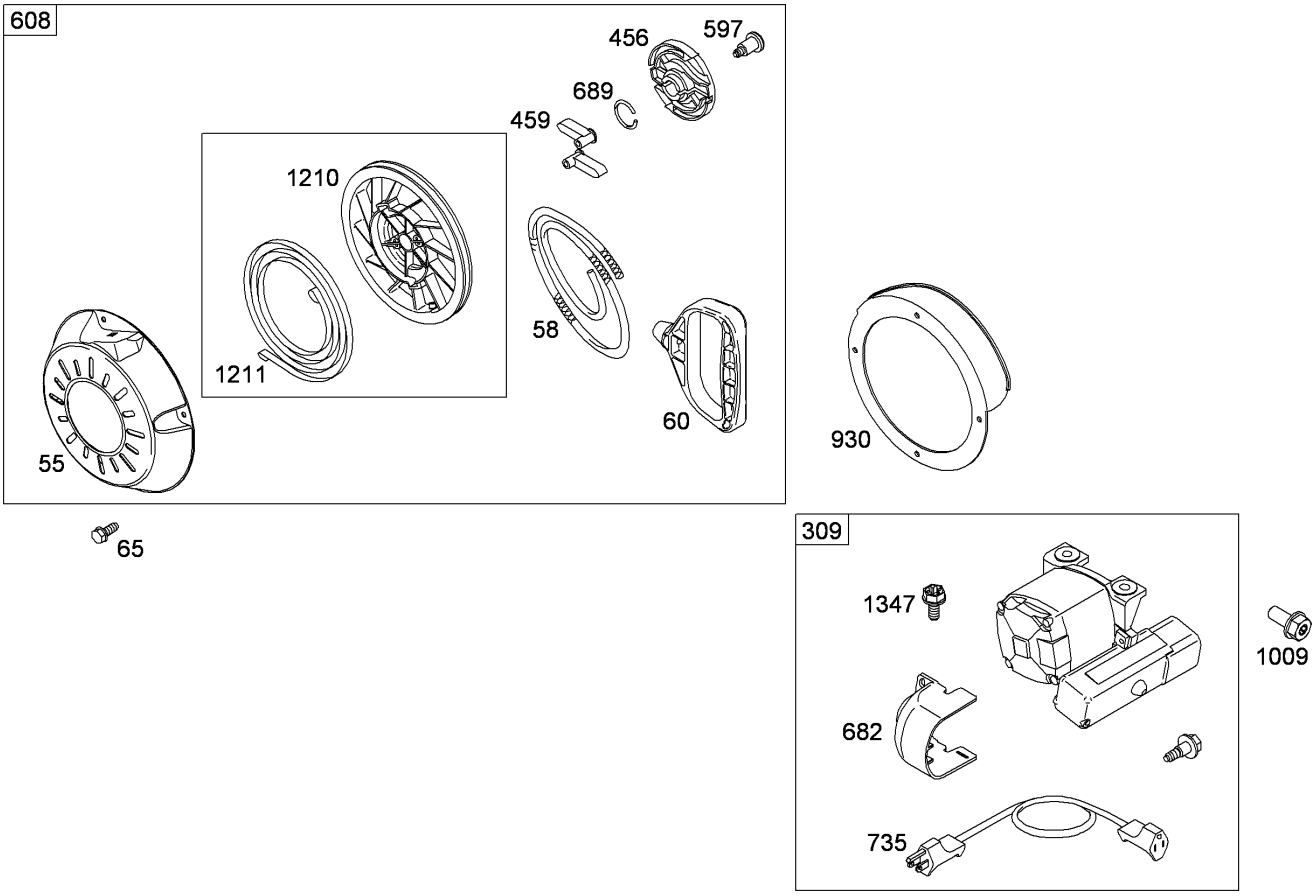

Assemblies include all parts shown in frames

Rewind Starter and Starter Motor Assembly
Briggs and Stratton 15D104-0113-E8


Ref	Part No.	Qty.	Description
❷55	696710	1	Housing-Starter, Rewind
❷58	693389	1	Rope-Starter
❷60	699334	1	Grip-Starter Rope
❷65	699228	1	Screw (Rewind Starter)
❷309	793667	1	Motor-Starter
❷456	692299	1	Plate-Friction, Pawl
❷459	281505s	1	Ratchet-Pawl
❷597	691696	1	Screw (Pawl Friction Plate)
❷608	699335	1	Starter-Rewind
❷682	698039	1	Shield-Starter
❷689	691855	1	Spring-Friction
❷735	795901	1	Cord-Starter
❷930	696709	1	Guard-Rewind
❷1009	790537	1	Screw (Starter Motor)
❷1210	498144	1	Pulley And Spring ASM (Pulley)
❷1211	498144	1	Pulley And Spring ASM (Spring)
❷1347	699200	1	Screw (Starter Shield)

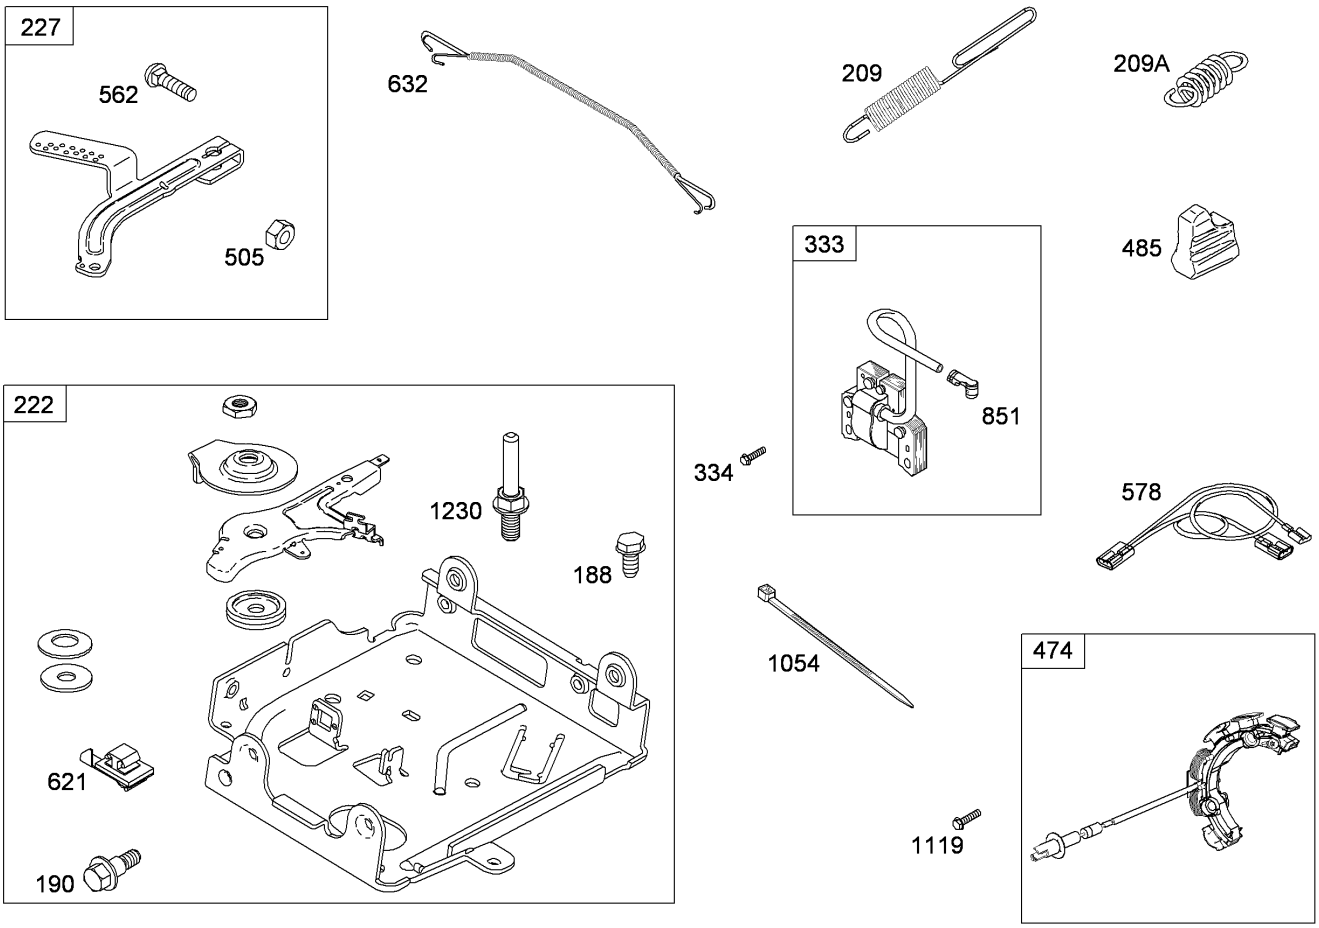

Assemblies include all parts shown in frames

Governor, Controls and Ignition Assembly
Briggs and Stratton 15D104-0113-E8


Ref	Part No.	Qty.	Description
❷188	699479	1	Screw (Control Bracket)
❷190	699220	1	Screw (Fuel Tank)
❷209	692571	1	Spring-Governor
❷209A	691278	1	Spring-Governor (Platinum)
❷222	793109	1	Bracket-Control
❷227	794367	1	Lever-Control, Governor
❷333	695711	1	Armature-Magneto
❷334	699477	1	Screw (Magneto Armature)
❷474	793640	1	Alternator
❷485	695755	1	Knob-Control
❷505	691251	1	Nut (Governor Control Lever)
❷562	691119	1	Bolt (Governor Control Lever)
❷578	794819	1	Wire ASM
❷621	692310	1	Switch-Stop
❷632	692653	1	Link-Spring, Mechanical Governor
❷851	493880s	1	Terminal-Spark Plug
❷1054	280275	1	Tie-Cable
❷1119	699772	1	Screw (Alternator)
❷1230	699847	1	Stud (Control Bracket)

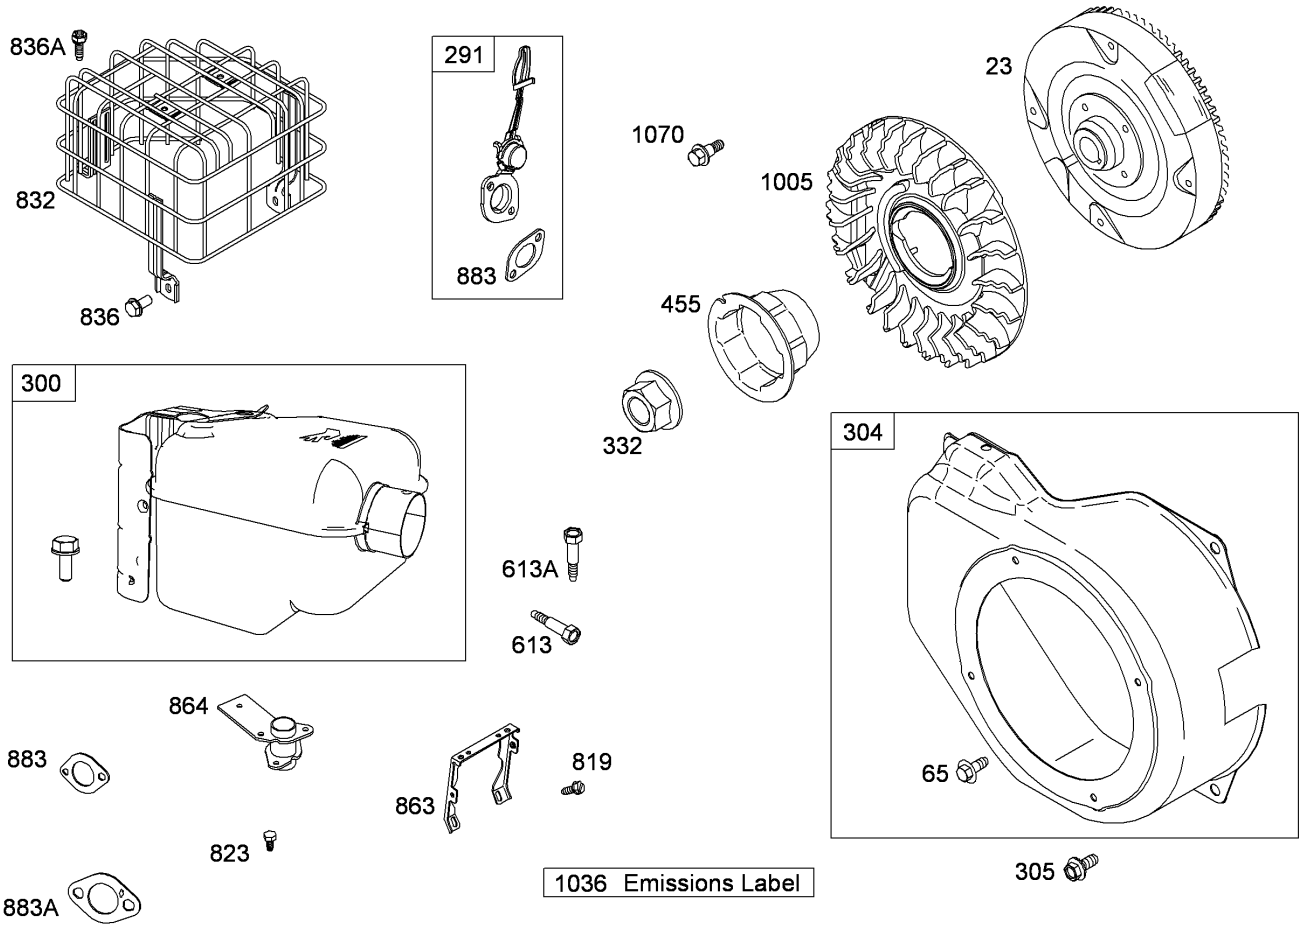

Assemblies include all parts shown in frames

Muffler, Blower Housing and Flywheel Assembly
Briggs and Stratton 15D104-0113-E8


Ref	Part No.	Qty.	Description
❷23	699516	1	Flywheel
❷65	699228	1	Screw (Rewind Starter)
❷300	794726	1	Muffler
❷304	699598	1	Housing-Blower
❷305	699480	1	Screw (Muffler) (M6)
❷332	792723	1	Nut (Flywheel)
❷455	692591	1	Cup-Flywheel
❷613	697812	1	Screw (Muffler)
❷613A	699480	1	Screw (Muffler) (M6)
❷819	699223	1	Screw (Muffler Bracket)
❷823	791972	1	Screw (Muffler Adapter)
❷832	699313	1	Guard-Muffler
❷836	699209	1	Screw (Muffler Guard)
❷836A	699234	1	Screw (Muffler Guard) (M5)
❷863	699849	1	Bracket-Muffler
❷864	699232	1	Adapter-Muffler
❷❹883	692237	1	Gasket-Exhaust (Muffler Adapter)
❷❹883A	691893	1	Gasket-Exhaust (Muffler)
❷1005	692592	1	Fan-Flywheel
❶❷1036		1	Label-Emissions
❷1070	699201	1	Screw (Flywheel Fan)

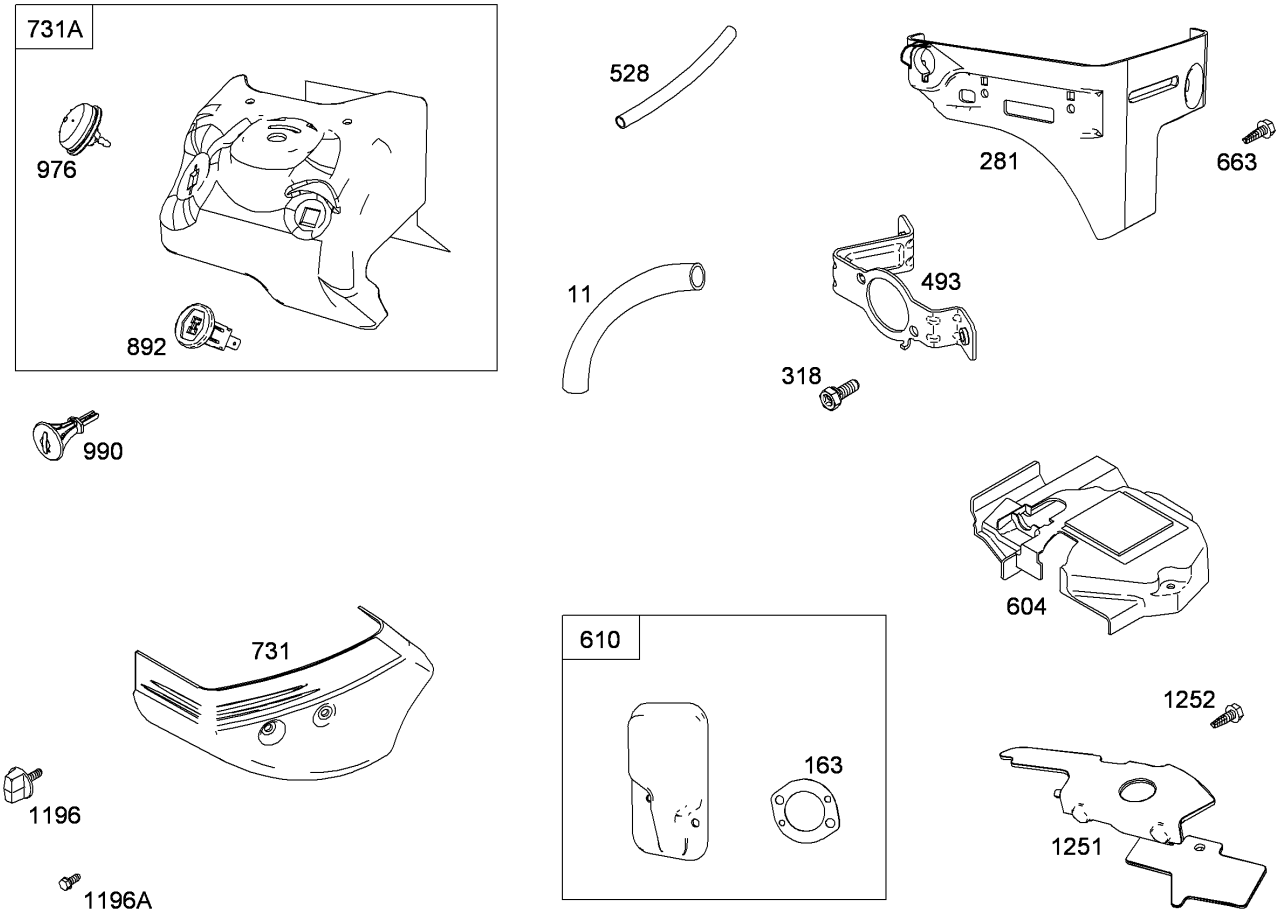


Assemblies include all parts shown in frames

Snow Hood, Snow Shield and Panel
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
❷11	695745	1	Tube-Breather
❷❸163 ❹	696024	1	Gasket-Air Cleaner
❷281	793122	1	Panel-Control
❷318	690370	1	Screw (Mounting Bracket)
❷493	695744	1	Bracket-Mounting
❷528	793006	1	Hose-Primer
❷604	793134	1	Cover-Control
❷610	794614	1	Arrester-Intake
❷663	699206	1	Screw (Control Panel)
❷731	794703	1	Hood-Snow
❷731A	794704	1	Hood-Snow
❷892	791944	1	Switch-Key
❷976	790221	1	Primer-Carburetor
❷990	794696	1	Key Set
❷1196	696692	1	Screw (Snow Hood)
❷1196A	699854	1	Screw (Snow Hood)
❷1251	794702	1	Shield-Snow
❷1252	699234	1	Screw (Snow Shield)

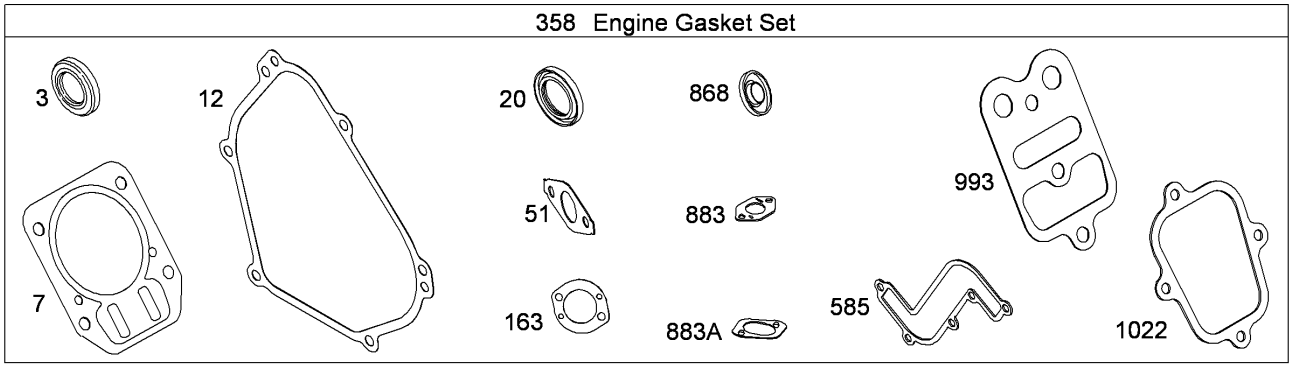


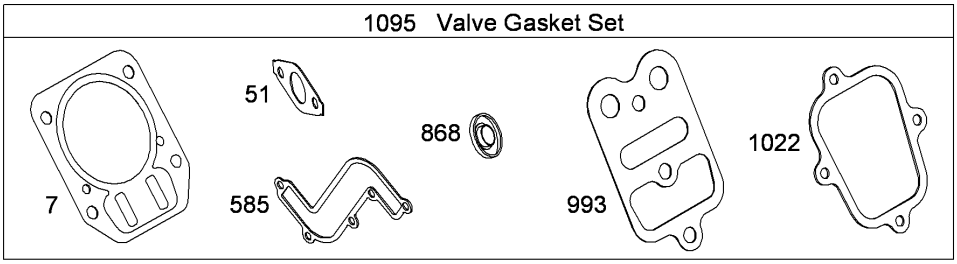

Assemblies include all parts shown in frames

Engine and Valve Gasket Sets
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
❷❹3	299819s	1	Seal-Oil (Magneto Side)
❷❹7 ❺	791716	1	Gasket-Head, Cylinder
❷❹12	699485	1	Gasket-Cover, Crankcase
❷❹20	692550	1	Seal-Oil (PTO Side)
❷❸51 ❹❺	791718	1	Gasket-Intake
❷❸163 ❹	696024	1	Gasket-Air Cleaner
❷358	791797	1	Engine Gasket Set
❷❹585 ❺	791760	1	Cup-Flywheel
❷❹868 ❺	795440	1	Seal-Valve
❷❹883	692237	1	Gasket-Exhaust (Muffler Adapter)
❷❹883A	691893	1	Gasket-Exhaust (Muffler)
❷❹993 ❺	694088	1	Gasket-Head Plate, Cylinder
❷❹1022 ❺	691890	1	Gasket-Cover, Rocker
❷1095	791798	1	Valve Gasket Set

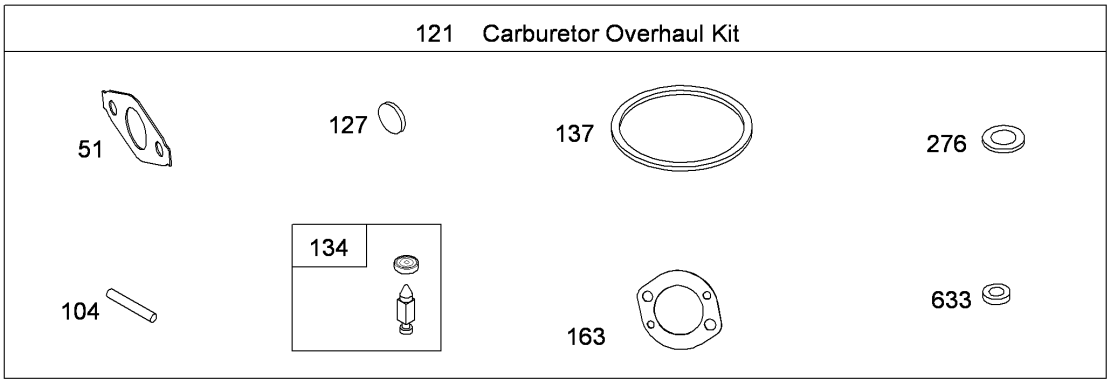

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 15D104-0113-E8

Ref	Part No.	Qty.	Description
❷❸51 ❹❺	791718	1	Gasket-Intake
❷❸104	691242	1	Pin-Hinge, Float
❷121	792006	1	Carburetor Overhaul Kit
❷❸127	691739	1	Plug-Welch
❷❸134	398188	1	Needle And Seat Kit
❷❸137	693981	1	Gasket-Bowl, Float
❷❸163 ❹	696024	1	Gasket-Air Cleaner
❷❸276	271716	1	Washer-Sealing
❷❸633	691321	1	Seal-Shaft, Choke Throttle

Attachments and Accessories

For 38639C - Power Max 828 OE Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
28 Inch Drift Breaker	107-3817


TORO®