Form Number 3360-859 Rev B

22in Recycler® Lawn Mower

Model No. 20331C - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Deck, Side Chute and Rear Door Assembly	3
Rear Axle and Wheel Assembly	4
Front Axle Assembly	5
Engine and Blade Assembly	6
Handle Assembly	7
Rear Bag Assembly	8
Cylinder and Cylinder Head Assembly Briggs and Stratton 124T02-0206-B1	9
Crankshaft, Piston, Ring and Connecting Rod Assembly Briggs and Stratton 124T02-0206-B1	10
Crankcase Cover/Sump Assembly Briggs and Stratton 124T02-0206-B1	11
Carburetor Assembly Briggs and Stratton 124T02-0206-B1	12
Air Cleaner Assembly Briggs and Stratton 124T02-0206-B1	13
Governor, Controls and Ignition Assembly Briggs and Stratton 124T02-0206-B1	14
Muffler and Fuel Tank Assembly Briggs and Stratton 124T02-0206-B1	15
Blower Housing and Flywheel Assembly Briggs and Stratton 124T02-0206-B1	16
Rewind Starter Assembly Briggs and Stratton 124T02-0206-B1	17
Engine and Valve Gasket Sets Briggs and Stratton 124T02-0206-B1	18
Carburetor Overhaul Kit Briggs and Stratton 124T02-0206-B1	19
Attachments and Accessories List	20

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

❸ Obtain from your local Briggs & Stratton dealer

❹ Included in Carburetor Overhaul Kit (Ref. No. 121)

❺ Included in Engine Gasket Set (Ref. No. 358)


❻ Included in Valve Gasket Set (Ref. No. 1095)

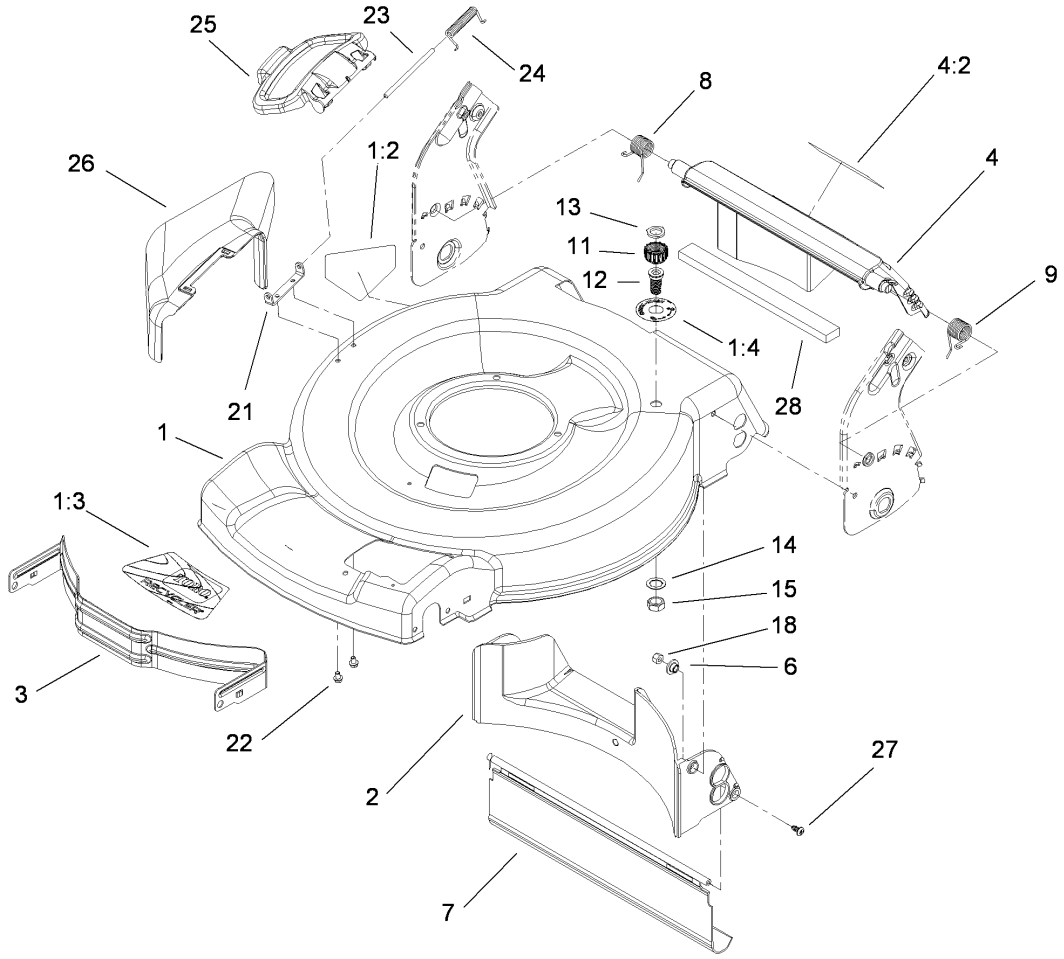

Deck, Side Chute and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	117-1085	1	Housing ASM
1:2	94-8072	1	Decal-Danger
1:3	115-4678	1	Decal-Recycler
1:4	112-8867	1	Decal
2	115-1307	1	Baffle-Rear
3	114-7963-01	1	Baffle-Front
4	117-4199	1	Deflector, Rear ASM
4:2	114-7982	1	Decal-Warning
6	27-6600	2	Spacer-Coupling
7	115-8420	1	Shield-Trailing
8	114-7924	1	Spring-Torsion
9	115-2859	1	Spring-Torsion
11	112-6401	1	Coupling-Hose, Washout Port
12	112-6400	1	Port-Washout
13	112-6438	1	Washer-Seal, Washout Port
14	3254-5	1	Washer-Tooth
15	3218-6	1	Nut-Jam
18	3296-29	2	Nut-Lock, NI
21	112-6416	1	Bracket-Cover
22	99-8445	2	Screw-HWH
23	99-5291	1	Rod-Cover
24	99-5293	1	Spring-Torsion
25	115-8449	1	Deflector-Side
26	115-8447	1	Chute-Discharge, Side

Ref	Part No.	Qty.	Description
27	117-1092	2	Screw-PTH
28	117-5924	1	Foam-Seal

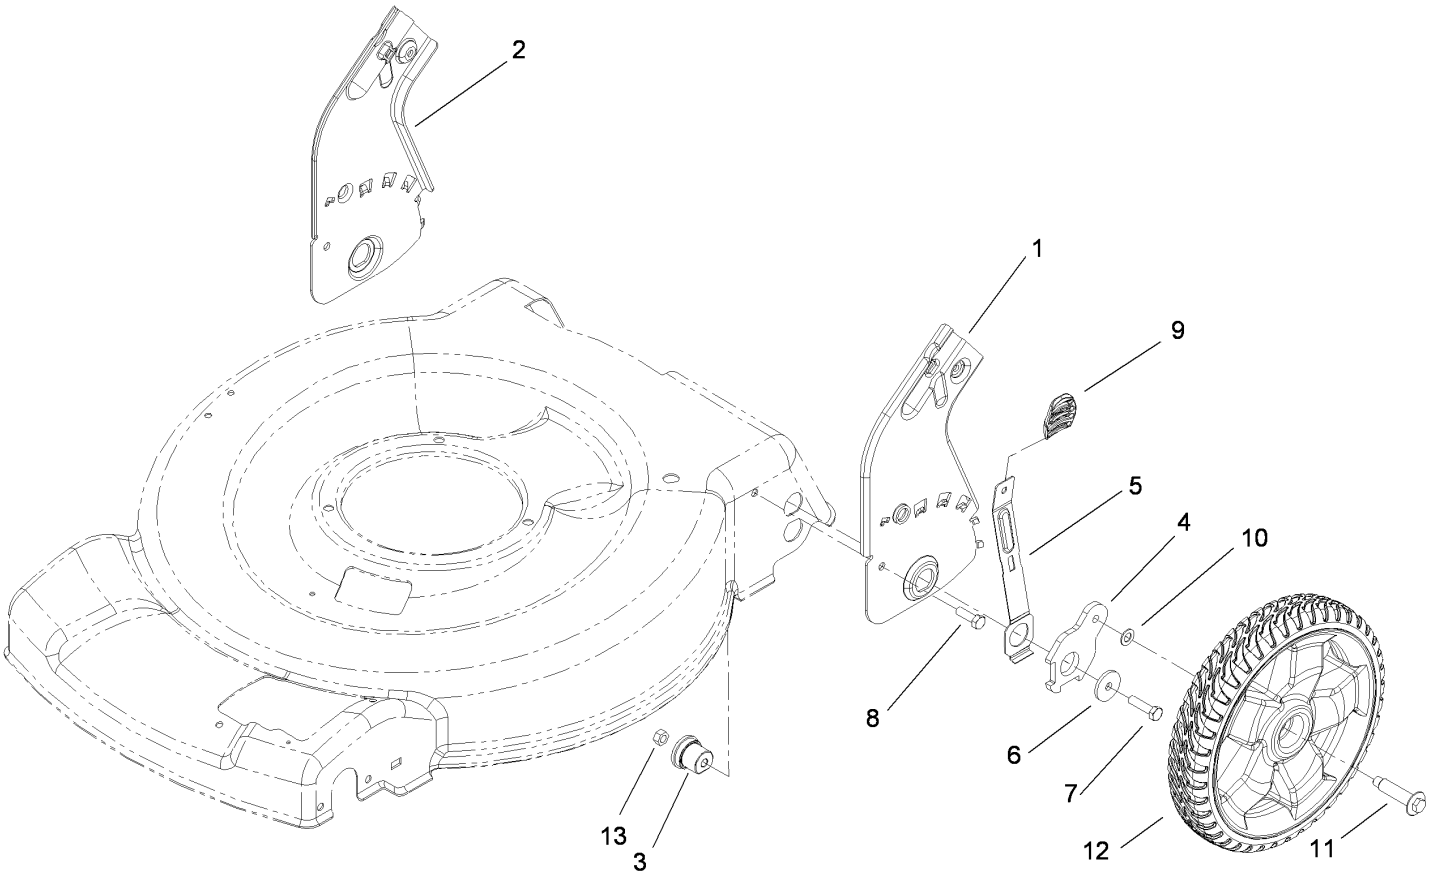


Rear Axle and Wheel Assembly

Ref	Part No.	Qty.	Description
1	114-7993-03	1	Plate-HOC, Rear LH
2	114-7994-03	1	Plate-HOC, Rear RH
3	115-4651	2	Bushing-Mount, HOC
4	114-7997	2	Arm-Pivot, Rear
5	115-2899	2	Arm-Spring, 11Inch Rear
6	105-3048	2	Washer-Flat
7	322-7	2	Screw-HH
8	322-5	2	Screw-HH
9	105-3042	2	Knob-Lever, HOC
10	40-1940	2	Washer
11	614650	2	Bolt-Shoulder
12	115-2882	2	Wheel ASM
13	3296-29	4	Nut-Lock, NI

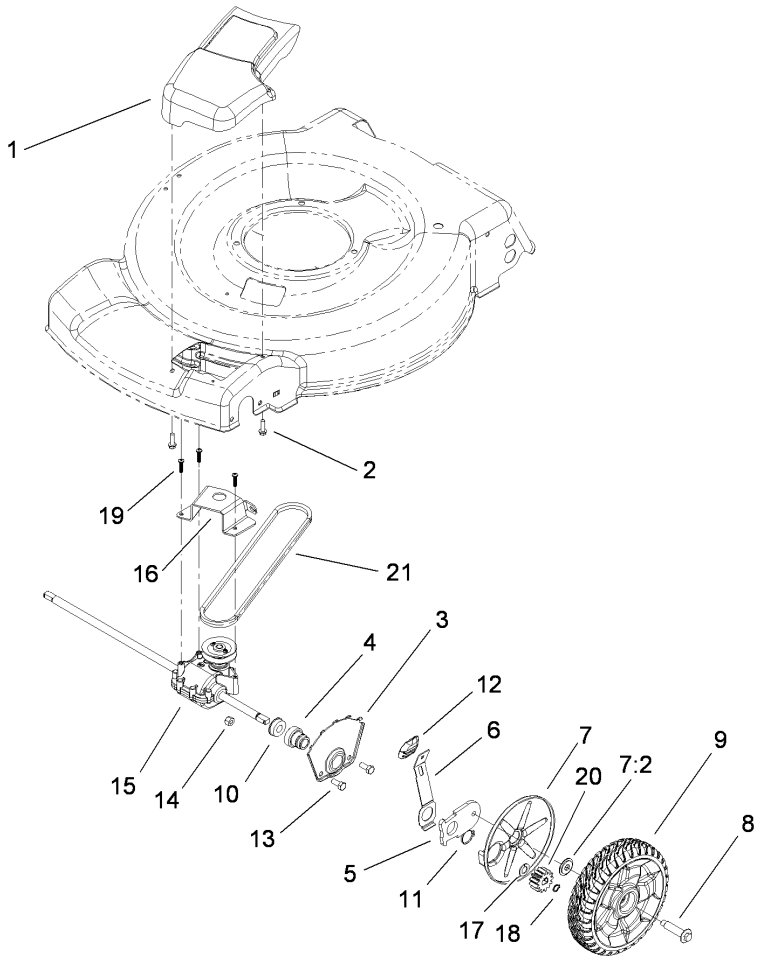


Front Axle Assembly

Ref	Part No.	Qty.	Description
1	115-1305	1	Cover-Belt
2	46-8091	2	Screw-HWH
3	115-1956-03	2	Plate-HOC, Front
4	104-8698	2	Retainer-Bearing, HOC
5	105-1807	2	Arm-Pivot, Front
6	105-1809	2	Arm-Spring
7	110-1792	2	Wheel Cover ASM
❶❷7:1		1	Cover-Wheel
7:2	614426	1	Washer-Stepped
8	614650	2	Bolt-Shoulder
9	115-2878	2	Wheel ASM
10	104-8699	2	Bearing-Ball
11	32151-36	2	Ring-Retaining
12	105-3042	2	Knob-Lever, HOC
13	322-3	4	Screw-HH
14	3296-29	4	Nut-Lock, NI
15	115-1992	1	Transmission-4.5/1
16	114-7978-03	1	Bracket-Transmission
17	110-7191	2	Washer-Thrust
18	32151-61	2	Ring-Retaining
19	108-7476	3	Screw-Plastite
20	115-4665	2	Gear-Pinion, 13T
21	117-1018	1	V-Belt

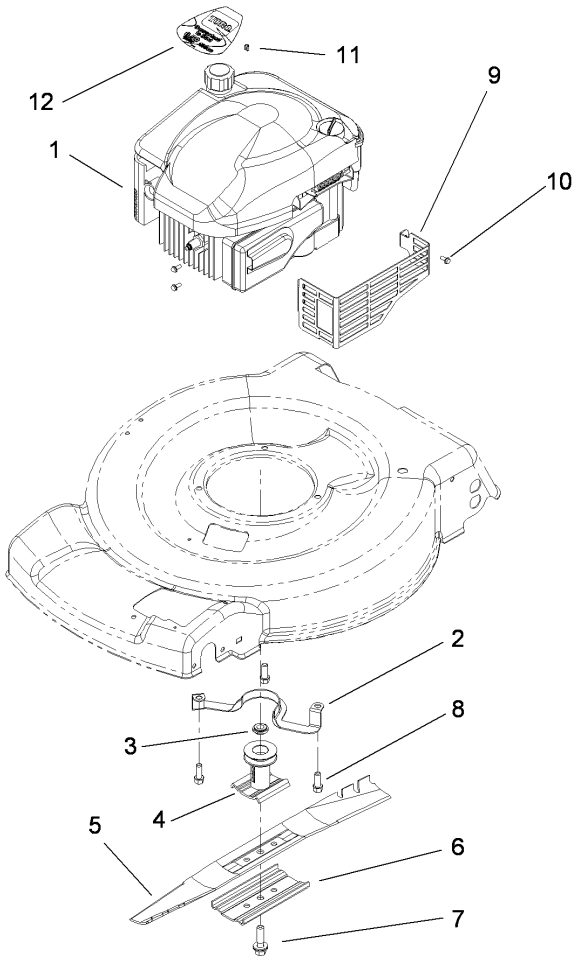


Engine and Blade Assembly

Ref	Part No.	Qty.	Description
❷❸1		1	Engine-Briggs, 124T02-0206-B1
2	105-3031-03	1	Guide-Belt
3	106-3999	1	Spacer-Driver
4	106-3987	1	Blade Driver ASM
5	108-9764-03	1	Blade-22 Inch
6	108-3766	1	Support-Blade
7	105-8579	1	Bolt-Blade
8	95-1726	3	Screw-Taptite
9	104-7577-03	1	Shield-Muffler
❷❸10		3	Screw-Taptite
11	2210-316	1	Stop-Rope
12	117-1016	1	Decal

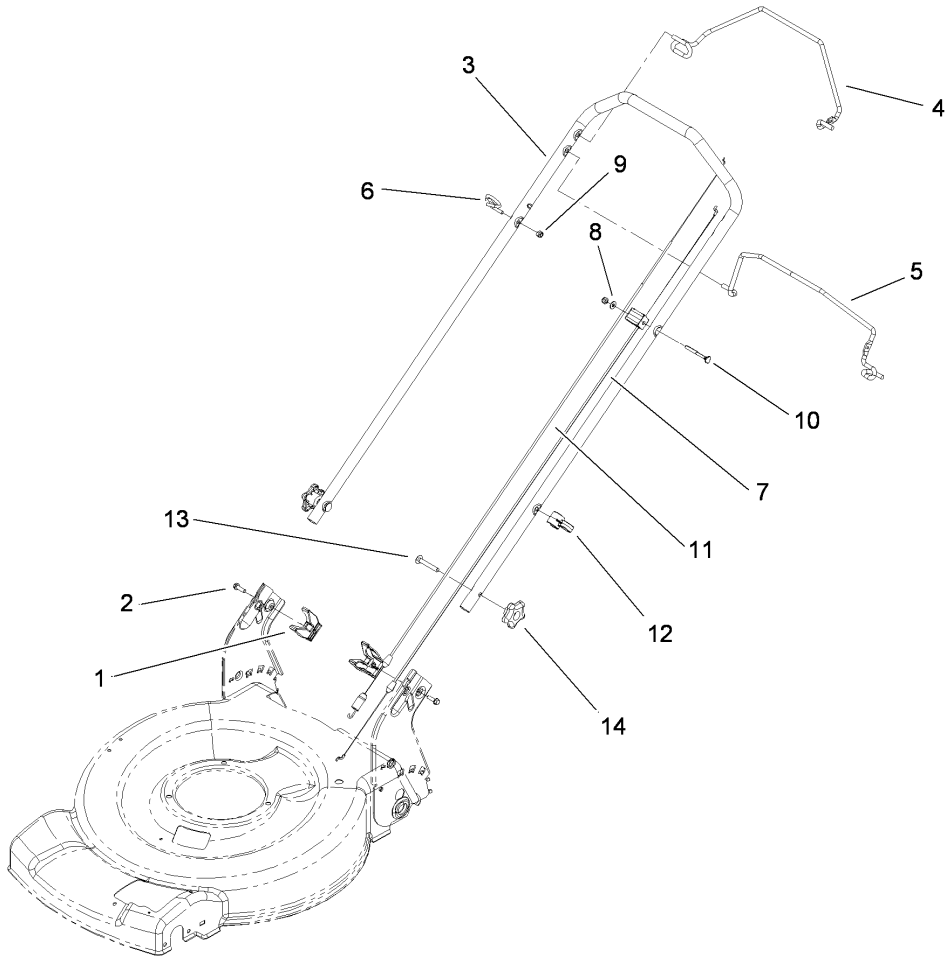


Handle Assembly

Ref	Part No.	Qty.	Description
1	115-2866	2	Anchor-Bag
2	46-8091	2	Screw-HWH
3	115-2872-05	1	Handle-Contour
4	108-9790-03	1	Bail-Traction
5	115-4561-03	1	Bail-Brake
6	86-9671	1	Guide-Rope
7	115-4579	1	Cable-Brake, 2 Bail
8	3256-1	1	Washer-Flat
9	3296-73	2	Nut-Lock, NI
10	92-2270	1	Screw-Handle
11	115-8436	1	Cable-Traction
12	106-6805	1	Guide-Cable
13	3230-6	2	Screw-CARR
14	108-8162	2	Knob-Locking

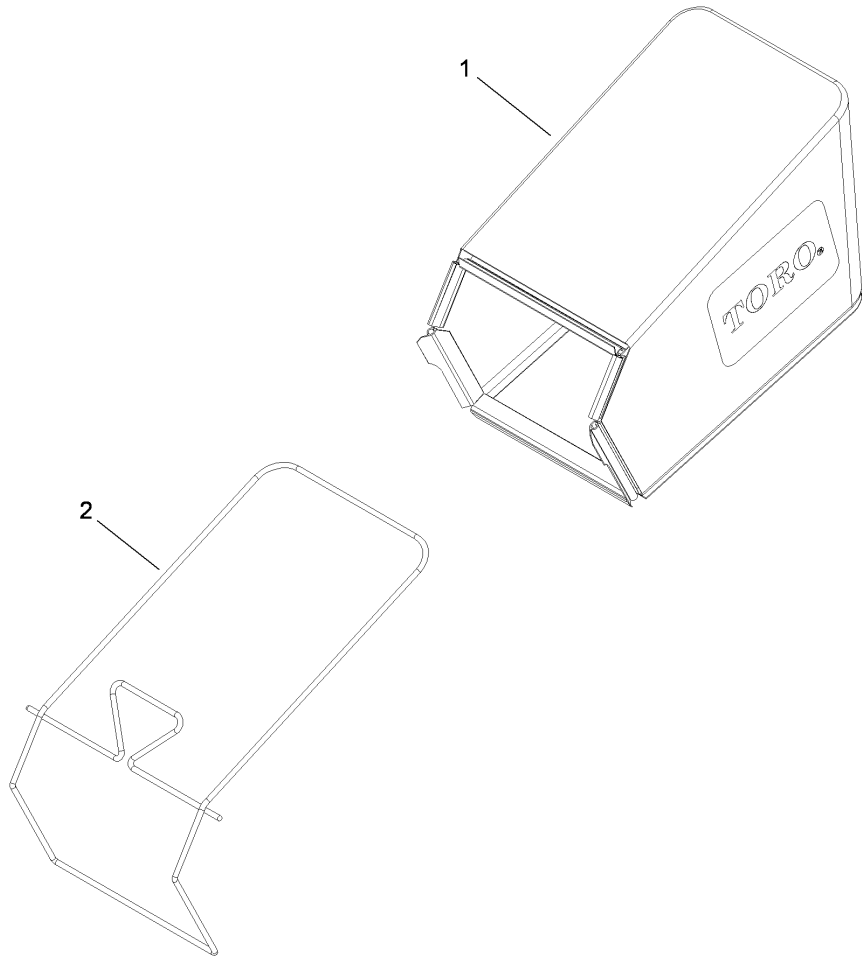

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	115-4664	1	Grass Bag ASM
2	114-2639-03	1	Bag Frame ASM

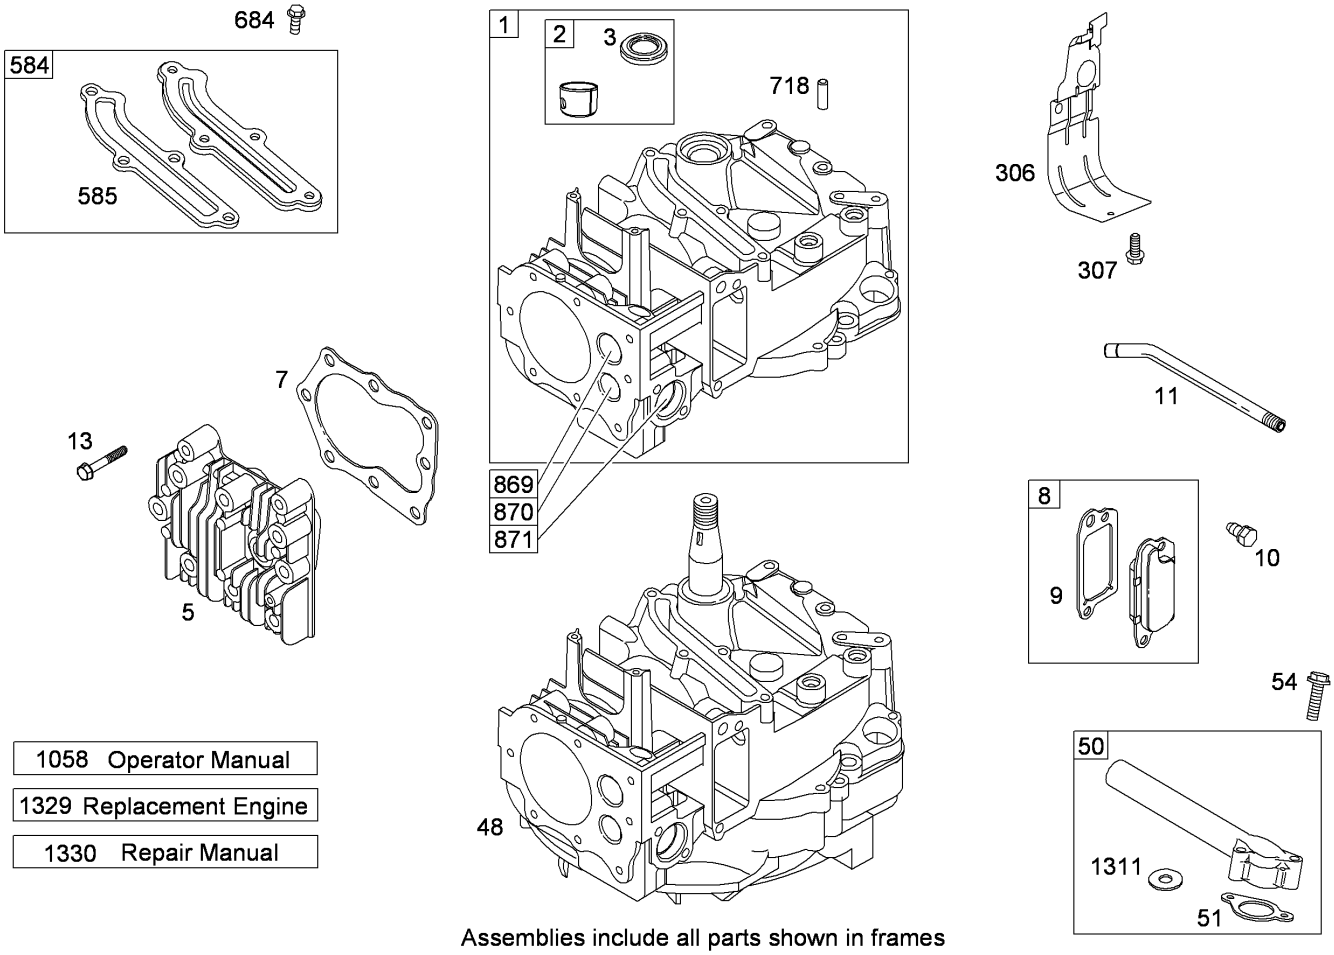


Assemblies include all parts shown in frames

Cylinder and Cylinder Head Assembly
Briggs and Stratton 124T02-0206-B1

Ref	Part No.	Qty.	Description
❸1	697322	1	Cylinder ASM
❸2	399269	1	Bushing And Seal Kit
❸❺3	299819s	1	Seal-Oil (Magneto Side)
❸5	691160	1	Head-Cylinder
❸❺7 ❻	692249	1	Gasket-Head, Cylinder
❸8	695250	1	Breather ASM
❸❺9 ❻	699472	1	Gasket-Breather
❸10	691125	1	Screw (Breather ASM)
❸11	691781	1	Tube-Breather
❸13	690912	1	Screw (Cylinder Head)
❸48	792742	1	Block-Short
❸50	497465	1	Manifold-Intake
❸❺51	272199s	1	Gasket-Intake
❸54	691650	1	Screw (Intake Manifold)
❸306	790836	1	Shield-Cylinder
❸307	690345	1	Screw (Cylinder Shield)
❸584	697734	1	Cover-Passage, Breather
❸❺585	691879	1	Gasket-Passage, Breather
❸684	690345	1	Screw (Breather Passage Cover)
❸718	690959	1	Pin-Locating
❸869	691155	1	Seat-Valve (Intake)
❸870	690380	1	Seat-Valve (Exhaust)


Ref	Part No.	Qty.	Description
❸871	262001	1	Bushing-Guide (Exhaust)
❸871	63709	1	Bushing-Guide (Intake)
❸1058	277039	1	Operator Manual
❸1311	690390	1	Washer (Intake Manifold)
❸1329	126L021031 F1	1	Replacement Engine
❸1330	270962	1	Repair Manual

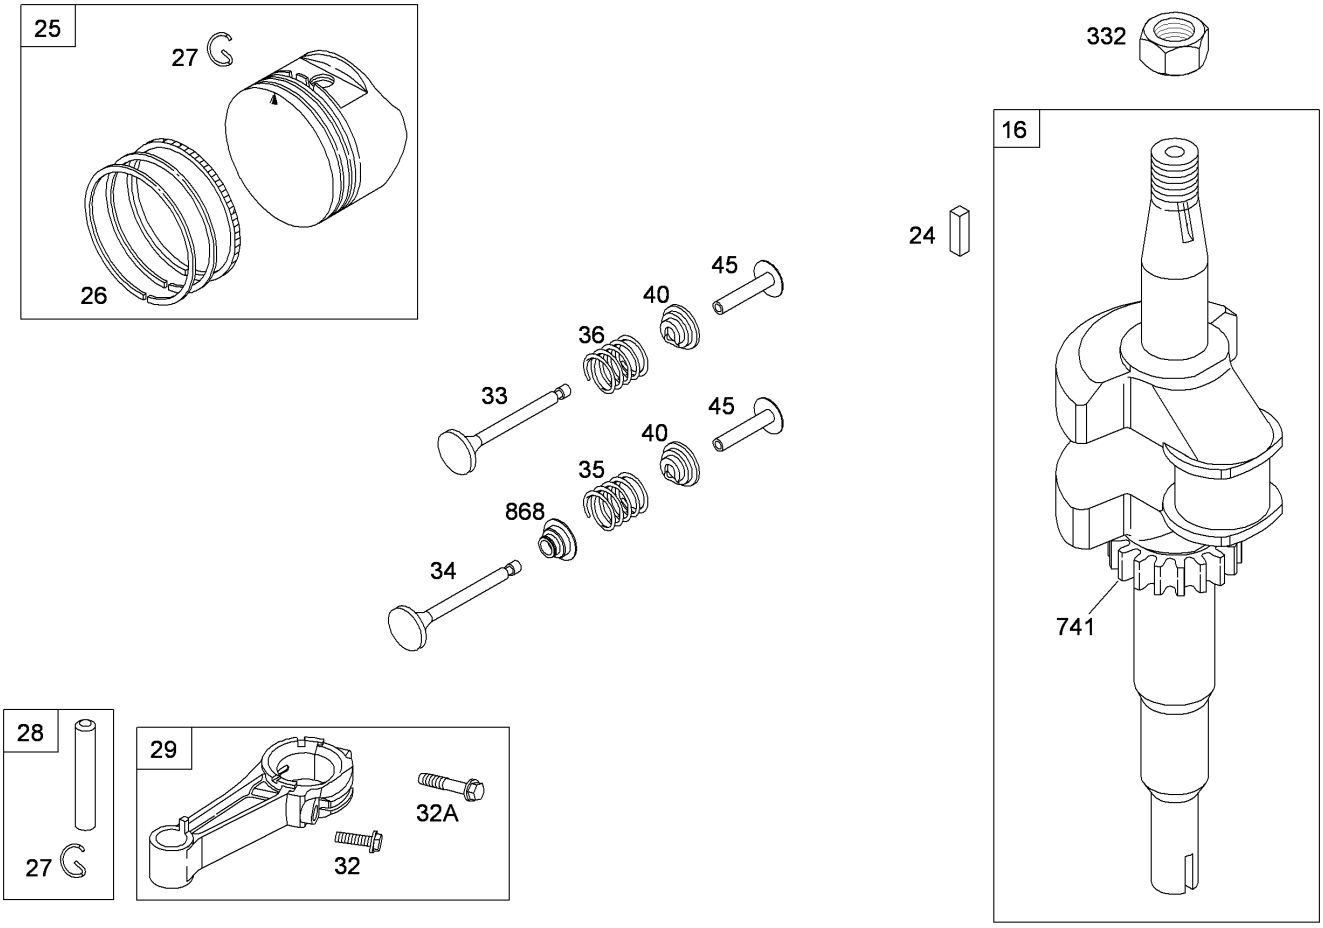

Assemblies include all parts shown in frames

Crankshaft, Piston, Ring and Connecting Rod Assembly
Briggs and Stratton 124T02-0206-B1


Ref	Part No.	Qty.	Description
❸16	696009	1	Crankshaft
❸24	222698s	1	Key-Flywheel
❸25	795429	1	Piston ASM (STD)
❸25	795430	1	Piston ASM (.020 Oversize)
❸26	795431	1	Ring Set (STD)
❸26	795432	1	Ring Set (.020 Oversize)
❸27	691866	1	Lock-Pin, Piston
❸28	499423	1	Pin-Piston (STD)
❸29	499424	1	Rod-Connecting
❸32	691664	1	Screw (Connecting Rod)
❸32A	695759	1	Screw (Connecting Rod)
❸33	262651s	1	Valve-Exhaust
❸34	262652s	1	Valve-Intake
❸35	691270	1	Spring-Valve (Intake)
❸36	691270	1	Spring-Valve (Exhaust)
❸40	692194	1	Retainer-Valve
❸45	690548	1	Tappet-Valve
❸332	690662	1	Nut (Flywheel)
❸741	795755	1	Gear-Timing
❸868	697338	1	Seal-Valve

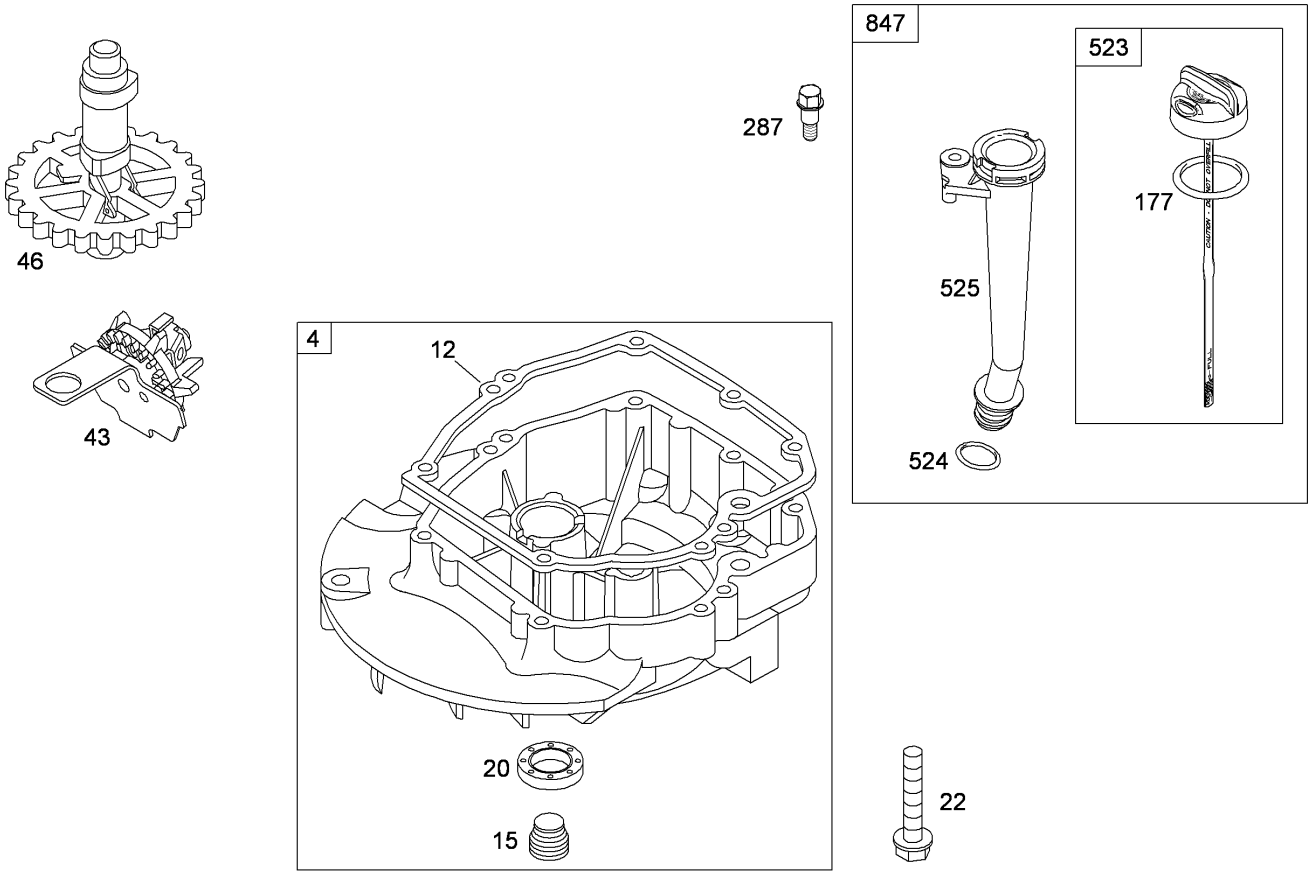

Assemblies include all parts shown in frames

Crankcase Cover/Sump Assembly
Briggs and Stratton 124T02-0206-B1

Ref	Part No.	Qty.	Description
❸4	493279	1	Sump-Engine
❸❺12	692232	1	Gasket-Crankcase (.015 STD)
❸15	691680	1	Plug-Drain, Oil
❸❺20	399781s	1	Seal-Oil (PTO Side)
❸22	691092	1	Screw (Crankcase Cover To Sump)
❸43	691997	1	Slinger-Oil, Governor
❸46	691449	1	Camshaft
❸❺177	691031	1	Seal-O Ring (Dipstick)
❸287	690940	1	Screw (Dipstick Tube)
❸523	499621	1	Dipstick
❸❺524	692296	1	Seal-O Ring (Dipstick Tube)
❸525	495265	1	Tube-Dipstick
❸847	692047	1	Dipstick Tube ASM

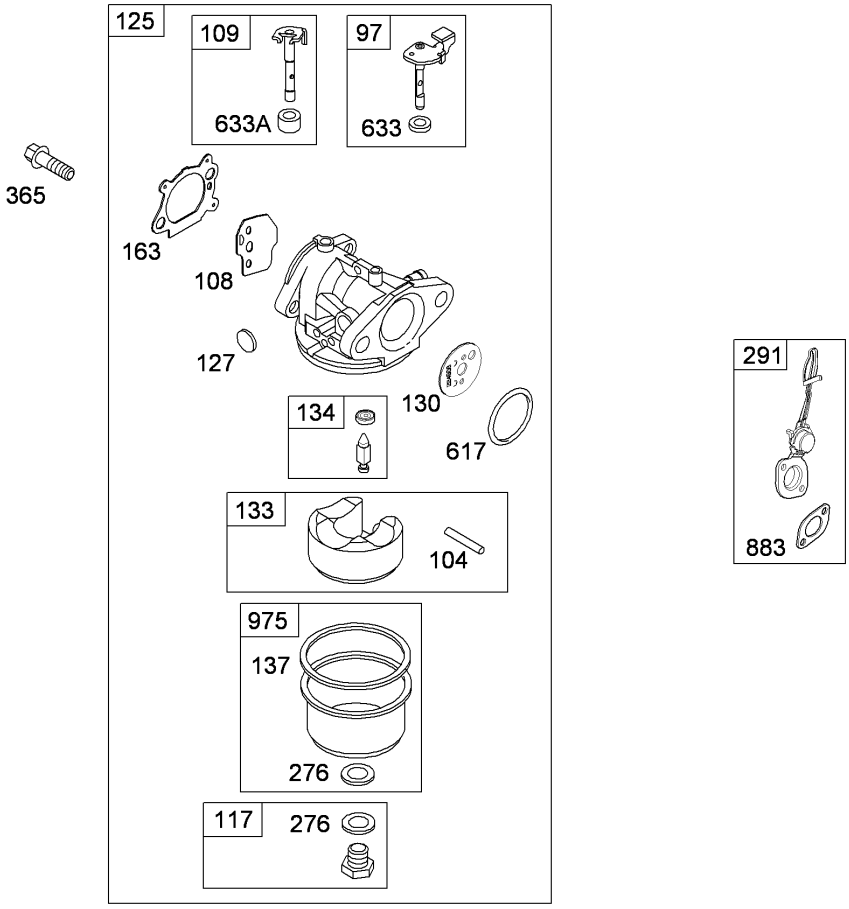



Assemblies include all parts shown in frames

Carburetor Assembly
Briggs and Stratton 124T02-0206-B1

Ref	Part No.	Qty.	Description
❸97	696565	1	Shaft-Throttle
❸❹104	691242	1	Pin-Hinge, Float
❸108	795935	1	Valve-Choke
❸109	795936	1	Shaft-Choke
❸117	695042	1	Jet-Main (STD)
❸125	794304	1	Carburetor
❸❹127	694468	1	Plug-Welch
❸130	696564	1	Valve-Throttle
❸133	398187	1	Float-Carburetor
❸❹134	398188	1	Needle And Seat Kit
❸❹137	796610	1	Gasket-Bowl, Float (Used After Date Code 08120100)
❸❹137	693981	1	Gasket-Bowl, Float (Used Before Date Code 08120200)
❸❹163 ❺	795629	1	Gasket-Cleaner, Air
❸❹276	271716	1	Washer-Sealing
❸291	790830	1	Thermostat
❸365	691688	1	Screw (Carburetor)
❸❹617 ❺	270344s	1	Seal-O Ring (Intake Manifold)
❸❹633	691321	1	Seal-Shaft, Choke Throttle (Throttle Shaft)
❸633A	693867	1	Seal-Shaft, Choke Throttle (Choke Shaft)

Ref	Part No.	Qty.	Description
❸❺883 ❻	691881	1	Gasket-Exhaust
❸975	493640	1	Bowl-Float

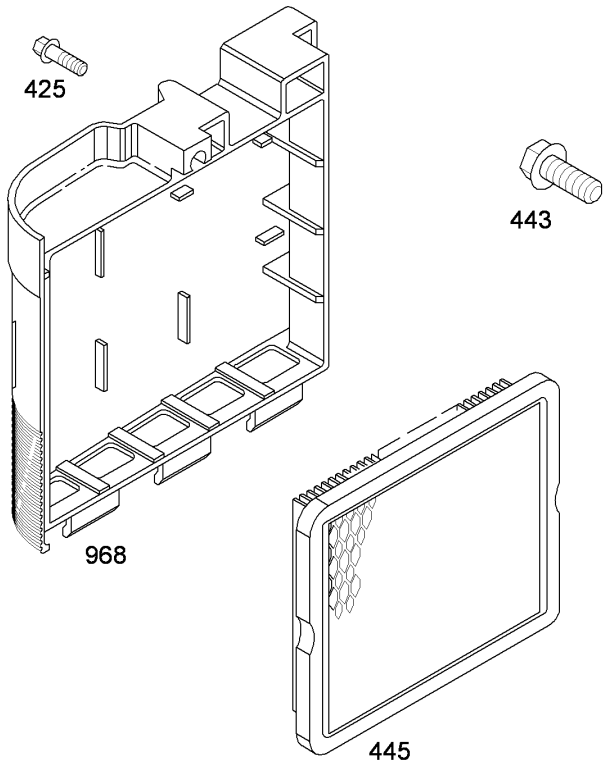


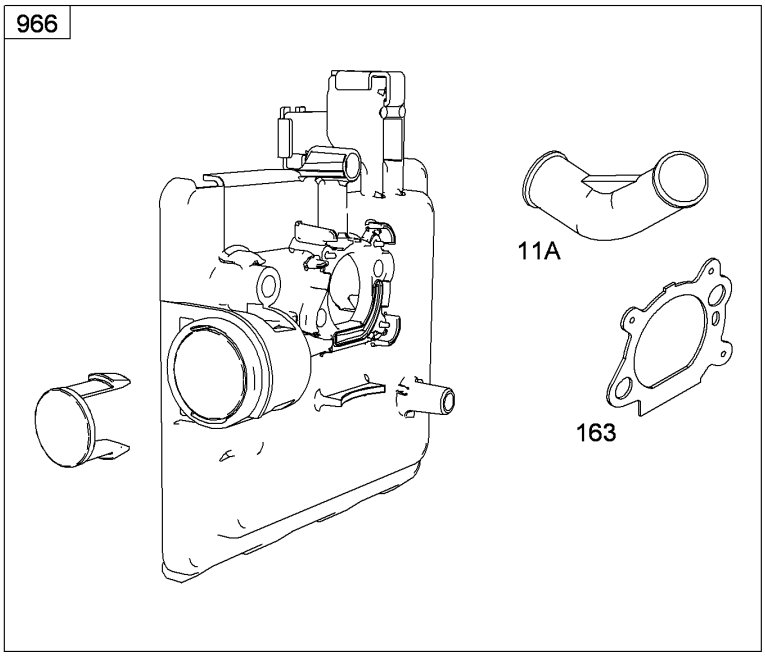

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 124T02-0206-B1


Ref	Part No.	Qty.	Description
❸11A	691923	1	Tube-Breather (Air Cleaner Primer Base)
❸❹163 ❺	795629	1	Gasket-Cleaner, Air
❸425	690670	1	Screw (Air Cleaner Cover)
❸443	692523	1	Screw (Air Cleaner Primer Base)
❸445	491588s	1	Filter-Cartridge, Air Cleaner
❸966	795259	1	Base-Air Cleaner Primer
❸968	692298	1	Cover-Cleaner, Air

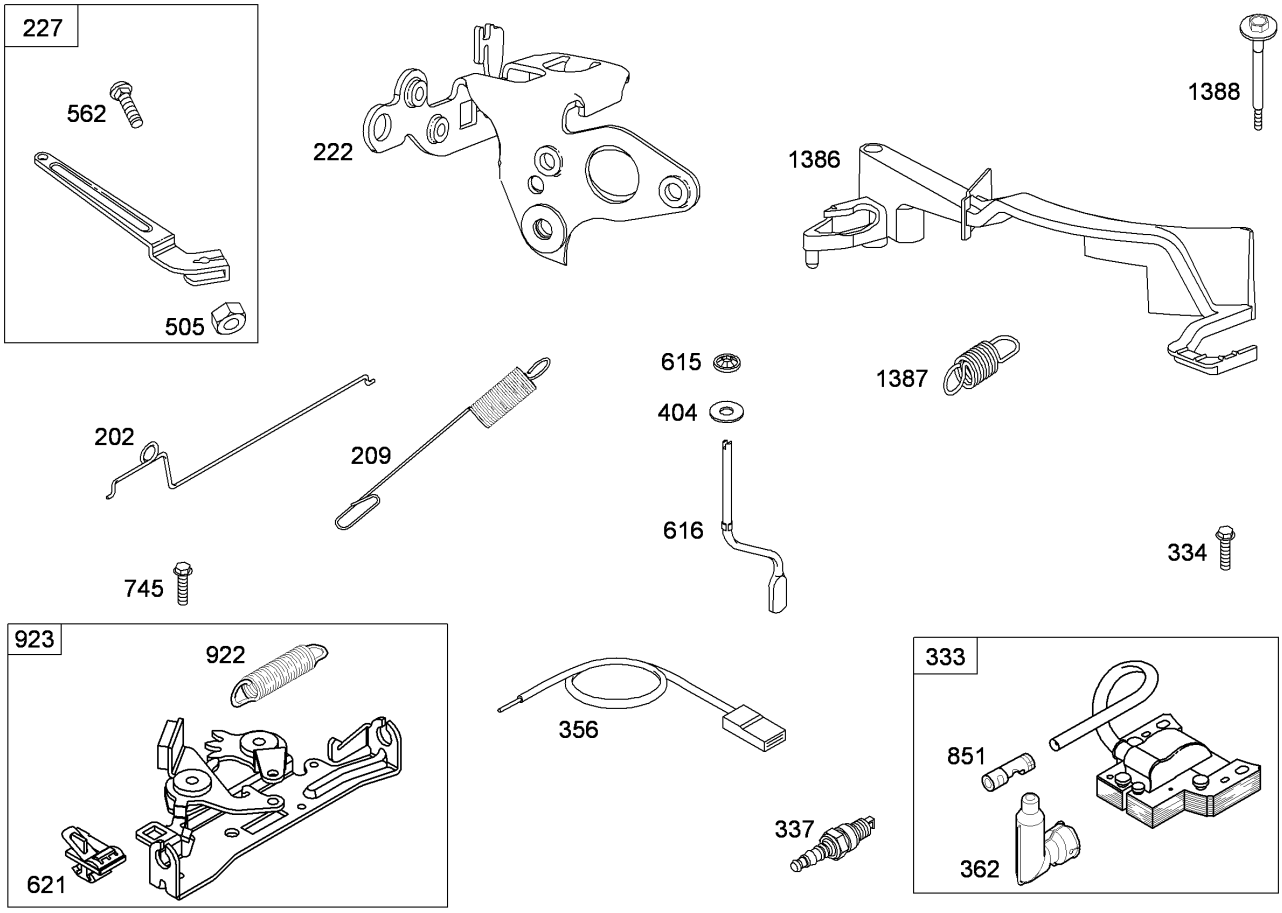



Assemblies include all parts shown in frames

Governor, Controls and Ignition Assembly
Briggs and Stratton 124T02-0206-B1


Ref	Part No.	Qty.	Description
❸202	691829	1	Link-Governor, Mechanical
❸209	691292	1	Spring-Governor (Black)
❸222	795937	1	Bracket-Control
❸227	690783	1	Lever-Control, Governor
❸333	793353	1	Armature-Magneto
❸334	691061	1	Screw (Magneto Armature)
❸337	802592s	1	Spark Plug
❸356	692390	1	Wire-Stop
❸362	793351	1	Boot-Spark Plug
❸404	690272	1	Washer (Governor Crank)
❸505	691251	1	Nut (Governor Control Lever)
❸562	691119	1	Bolt (Governor Control Lever)
❸615	690340	1	Retainer-Shaft, Governor
❸616	698801	1	Crank-Governor
❸621	692310	1	Switch-Stop
❸745	691648	1	Screw (Brake)
❸851	692424	1	Terminal–Spark Plug
❸922	692135	1	Spring-Brake
❸923	796136	1	Brake
❸1386	790848	1	Vane-Air
❸1387	790849	1	Spring-Vane, Air
❸1388	790850	1	Screw (Air Vane)

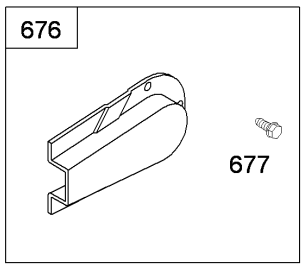

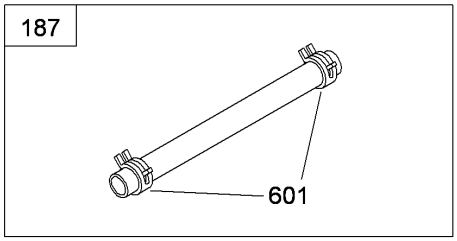


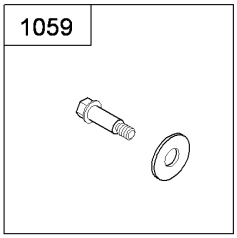




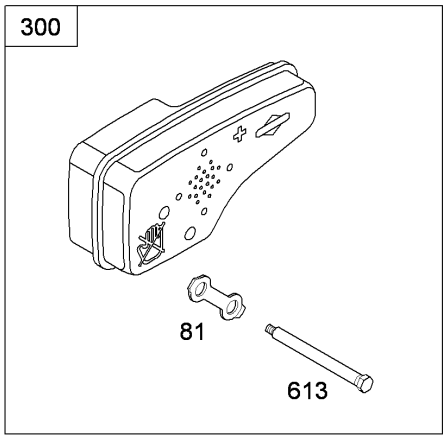






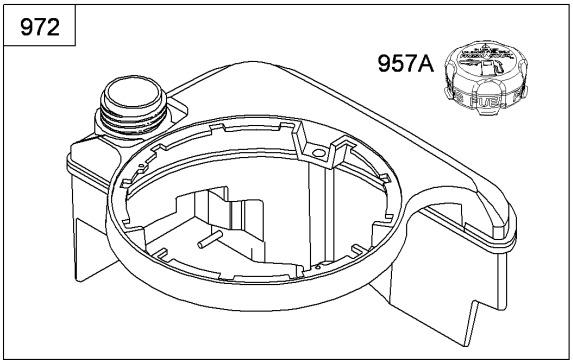

Assemblies include all parts shown in frames

Muffler and Fuel Tank Assembly
Briggs and Stratton 124T02-0206-B1


Ref	Part No.	Qty.	Description
❸81	691740	1	Lock-Screw, Muffler
❸187	791766	1	Line–Fuel (Cut To Required Length)
❸190	690940	1	Screw (Fuel Tank)
❸300	790828	1	Muffler
❸601	791850	1	Clamp-Hose
❸613	790833	1	Screw (Muffler)
❸676	493871	1	Deflector-Muffler
❸677	690661	1	Screw (Muffler Deflector)
❸❺❻883	691881	1	Gasket-Exhaust
❸957	793606	1	Cap-Tank, Fuel
❸957A	796654	1	Cap-Tank, Fuel
❸972	699374	1	Tank-Fuel
❸1059	692311	1	Screw And Washer Kit

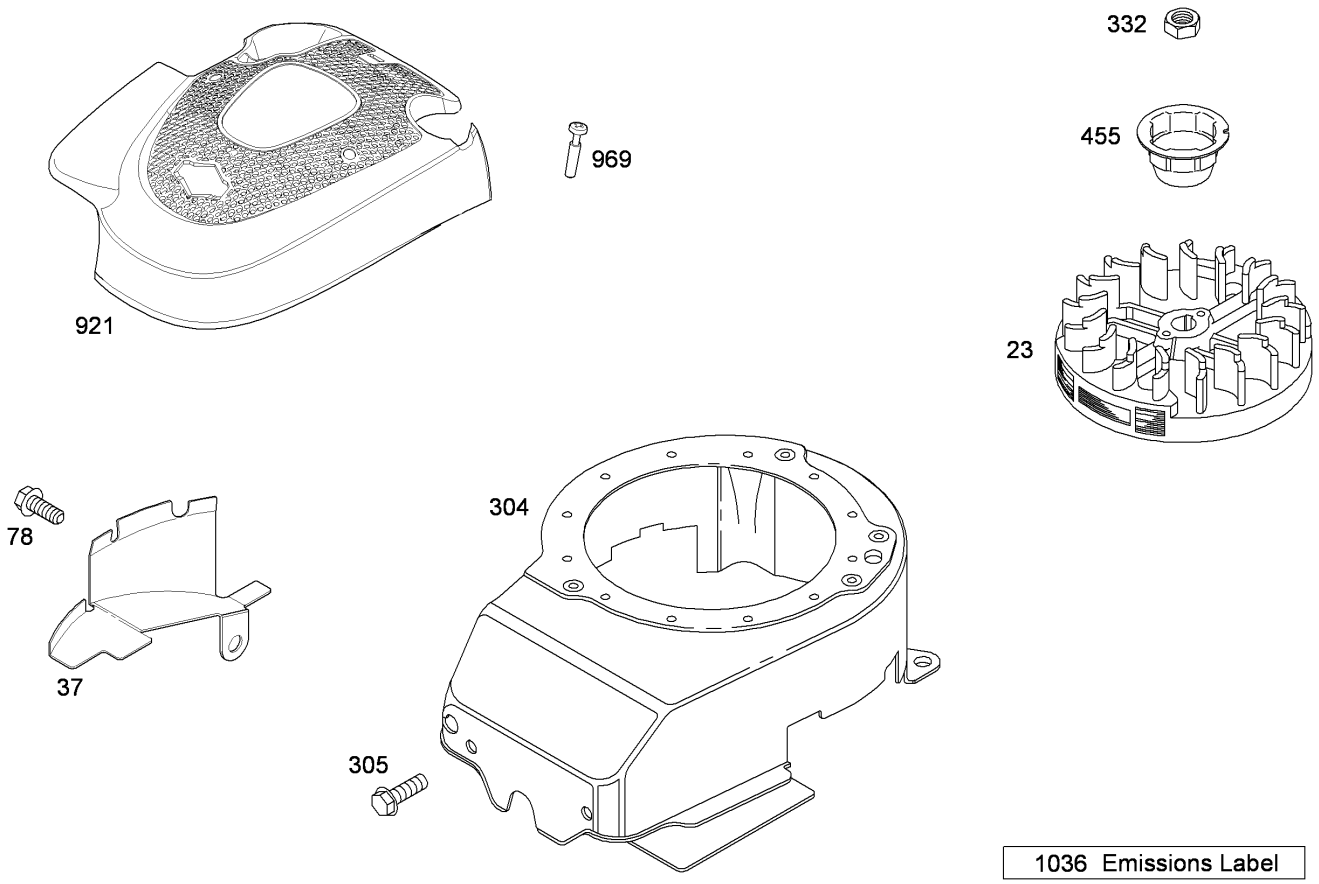

Assemblies include all parts shown in frames

Blower Housing and Flywheel Assembly
Briggs and Stratton 124T02-0206-B1


Ref	Part No.	Qty.	Description
❸23	691987	1	Flywheel
❸37	793756	1	Guard-Flywheel
❸78	691108	1	Screw (Flywheel Guard)
❸304	790826	1	Housing-Blower
❸305	691108	1	Screw (Blower Housing)
❸332	690662	1	Nut (Flywheel)
❸455	791760	1	Cup-Flywheel
❸921	792652	1	Cover-Housing, Blower
❸969	691138	1	Screw (Blower Housing Cover)
❷❸1036		1	Label-Emissions

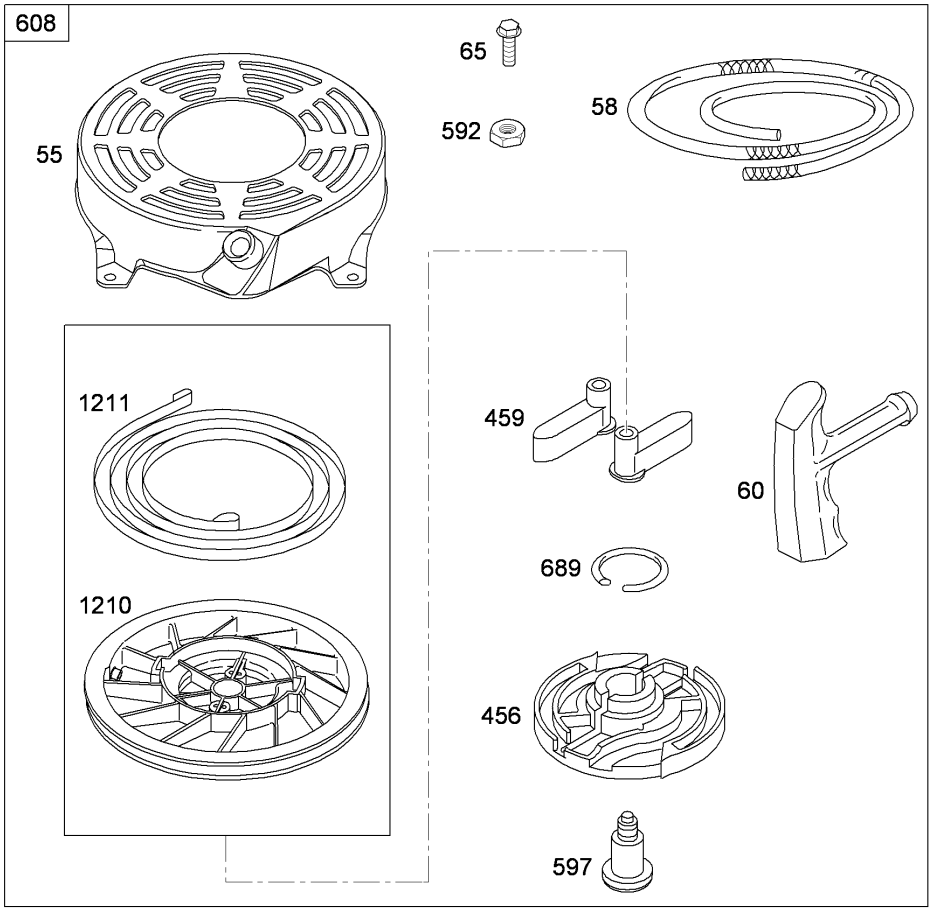


Assemblies include all parts shown in frames

Rewind Starter Assembly
Briggs and Stratton 124T02-0206-B1

Ref	Part No.	Qty.	Description
❸55	691421	1	Housing-Starter, Rewind
❸58	697316	1	Rope-Starter (Cut To Required Length)
❸60	281434s	1	Grip-Rope, Starter
❸65	690837	1	Screw (Rewind Starter)
❸456	692299	1	Plate-Friction, Pawl
❸459	281505s	1	Ratchet-Pawl
❸592	690800	1	Nut (Rewind Starter)
❸597	691696	1	Screw (Pawl Friction Plate)
❸608	497680	1	Starter-Rewind
❸689	691855	1	Spring-Friction
❸1210	498144	1	Pulley And Spring ASM (Pulley)
❸1211	498144	1	Pulley And Spring ASM (Spring)

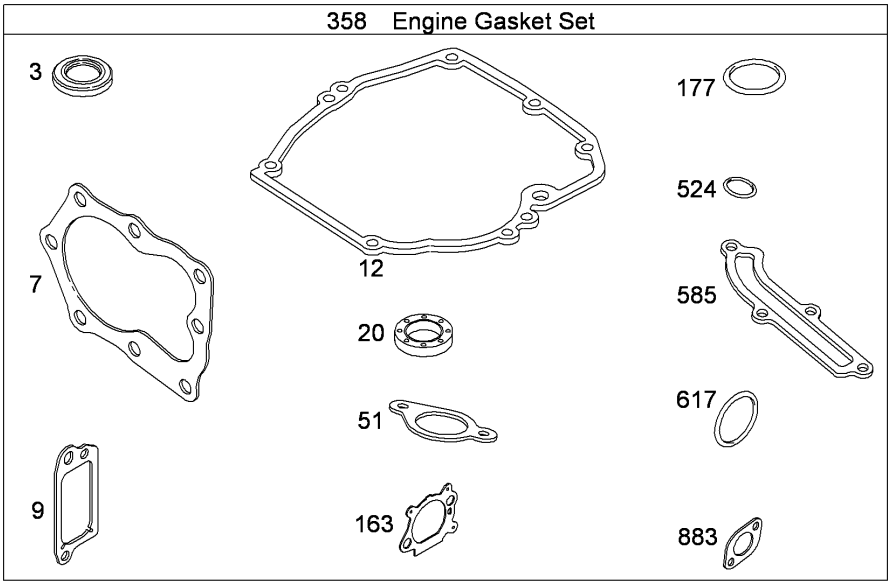


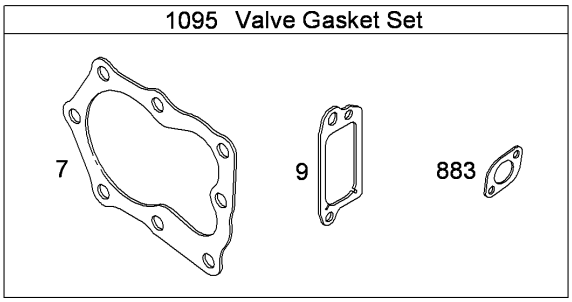

Assemblies include all parts shown in frames

Engine and Valve Gasket Sets
Briggs and Stratton 124T02-0206-B1

Ref	Part No.	Qty.	Description
❸❺3	299819s	1	Seal-Oil (Magneto Side)
❸❺7 ❻	692249	1	Gasket-Head, Cylinder
❸❺9 ❻	699472	1	Gasket-Breather
❸❺12	692232	1	Gasket-Crankcase (.015 STD)
❸❺20	399781s	1	Seal-Oil (PTO Side)
❸❺51	272199s	1	Gasket-Intake
❸❹163 ❺	795629	1	Gasket-Cleaner, Air
❸❺177	691031	1	Seal-O Ring (Dipstick)
❸358	497316	1	Engine Gasket Set
❸❺524	692296	1	Seal-O Ring (Dipstick Tube)
❸❺585	691879	1	Gasket-Passage, Breather
❸❹617 ❺	270344s	1	Seal-O Ring (Intake Manifold)
❸❺883 ❻	691881	1	Gasket-Exhaust
❸1095	498528	1	Valve Gasket Set

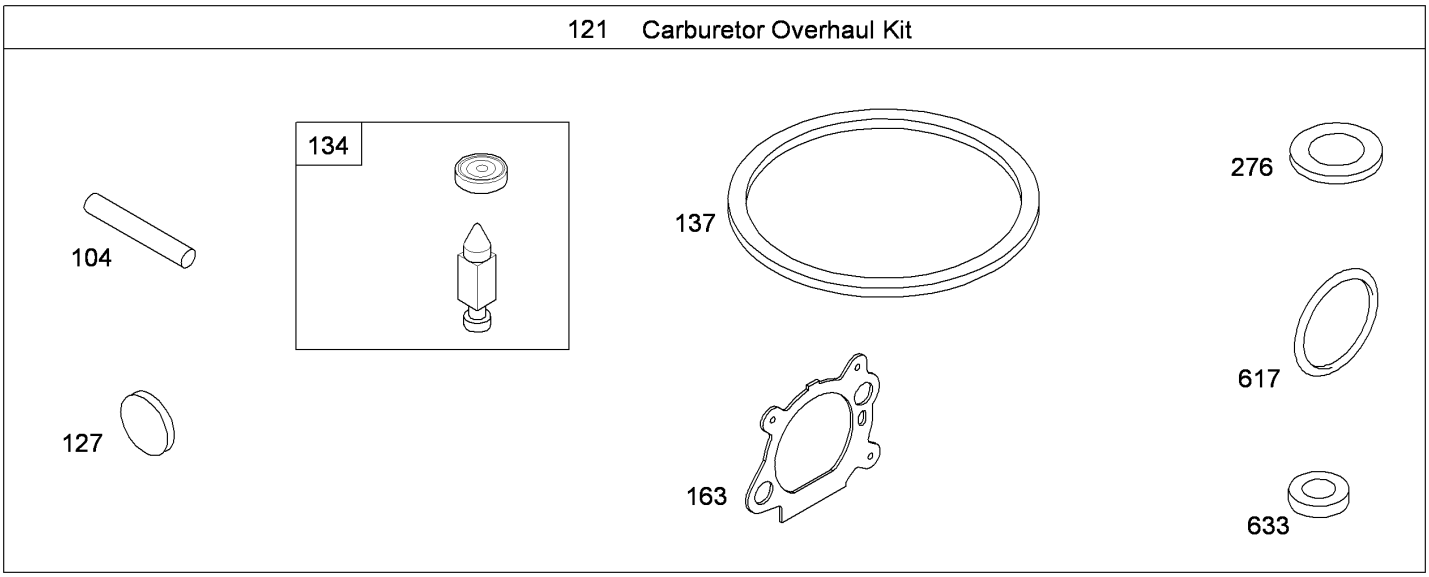

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 124T02-0206-B1

Ref	Part No.	Qty.	Description
❸❹104	691242	1	Pin-Hinge, Float
❸121	498260	1	Carburetor Overhaul Kit
❸❹127	694468	1	Plug-Welch
❸❹134	398188	1	Needle And Seat Kit
❸❹137	796610	1	Gasket-Bowl, Float (Used After Date Code 08120100)
❸❹137	693981	1	Gasket-Bowl, Float (Used Before Date Code 08120200)
❸❹163 ❺	795629	1	Gasket-Cleaner, Air
❸❹276	271716	1	Washer-Sealing
❸❹617 ❺	270344s	1	Seal-O Ring (Intake Manifold)
❸❹633	691321	1	Seal-Shaft, Choke Throttle (Throttle Shaft)

Attachments and Accessories

For 20331C - 22in Recycler Lawn Mower

Product Name	Model/Part
Loose Parts Kit	117-4123
Replacement Bag	59305
Replacement Bag Kit	59307
22 Inch Blade Kit	59534

NOTES

NOTES

NOTES


TORO®