Form Number 3362-674 Rev A

DH 200 Lawn Tractor

Model No. 74573 - 290000481 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Frame Assembly	4
Front Axle Assembly	6
Steering Assembly	7
Hood Assembly	8
Engine Assembly	9
Operation - Brake and Bypass Assembly	10
Operation - Travel Pedal Assembly	11
Transmission Drive Assembly	12
Control Shaft Assembly Transmission Assembly No. 114-3155	14
Differential Gear Assembly Transmission Assembly No. 114-3155	15
Final Pinion Assembly Transmission Assembly No. 114-3155	16
Axle Shaft Assembly Transmission Assembly No. 114-3155	17
Brake Assembly Transmission Assembly No. 114-3155	18
Fan Pulley Assembly Transmission Assembly No. 114-3155	19
Range Shift Assembly Transmission Assembly No. 114-3155	20
Center Case Assembly Transmission Assembly No. 114-3155	21
Pump Shaft Assembly Transmission Assembly No. 114-3155	22
Motor Shaft Assembly Transmission Assembly No. 114-3155	23
Transaxle Case Assembly Transmission Assembly No. 114-3155	24
Grass Collector Assembly	25
Tunnel Assembly	26
Deck Housing Assembly	27
Cutting Pan and Drive System Assembly	28
Cutting Pan and Bag on Demand Assembly	30
Mower Lift Assembly	31
Harness Assembly	32
Electrical Switch No. 1 Assembly	33
Electrical Switch No. 2 Assembly	34
Electrical Switch No. 3 Assembly	35
Cylinder Assembly Briggs and Stratton Model 31A607-0117-E1	36
Cylinder Head Assembly Briggs and Stratton Model 31A607-0117-E1	37
Crankshaft Assembly Briggs and Stratton Model 31A607-0117-E1	38
Crankcase Assembly Briggs and Stratton Model 31A607-0117-E1	39
Carburetor Assembly Briggs and Stratton Model 31A607-0117-E1	40
Carburetor Assembly (Nikki) Briggs and Stratton Model 31A607-0117-E1	41
Governor Assembly Briggs and Stratton Model 31A607-0117-E1	42
Blower Housing Assembly Briggs and Stratton Model 31A607-0117-E1	43
Starter Assembly Briggs and Stratton Model 31A607-0117-E1	44
Gasket Set Briggs and Stratton Model 31A607-0117-E1	45
Carburetor Overhaul Kit Briggs and Stratton Model 31A607-0117-E1	46
Carburetor Overhaul Kit (Nikki) Briggs and Stratton Model 31A607-0117-E1	47
Attachments and Accessories List	48


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not serviced separately
❷ Obtain parts from www.briggsandstratton.com
❸ Included in Engine Gasket Set (Ref. No. 358)
❹ Included in Carburetor Gasket Set (Ref. No. 977)
❺ Included in Valve Gasket Set (Ref. No. 1095)
❻ For Service of Nikki Carburetors
❼ Included in Carburetor Overhaul Kit (Ref. No. 121, 121A)

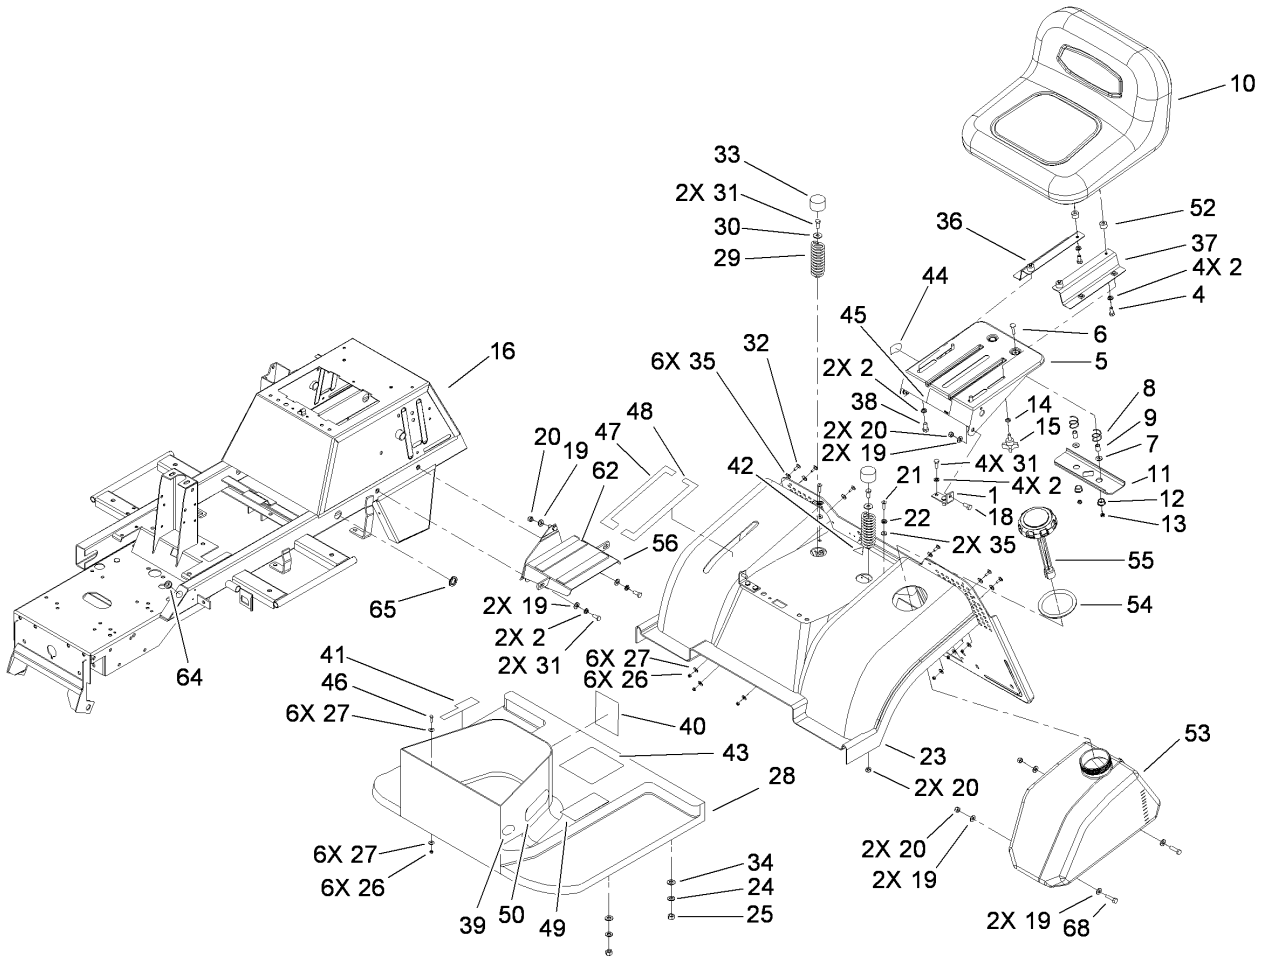

Frame Assembly


Ref	Part No.	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	3253-4	12	Washer-Lock
4	322-3	4	Screw-HH
5	104-2929	1	Support-Seat
6	104-2930	2	Bolt-Carriage
7	104-2931	2	Washer-Flat
8	104-2932	2	Spring-Seat
9	104-2933	2	Spacer-Split
10	107-2214	1	Seat ASM
11	104-2934	1	Bracket
12	104-2935	2	Bushing
13	33023-00	2	Nut-Lock
14	104-2936	2	Washer-Spring
15	104-2937	2	Knob-Adj.
16	107-8948	1	Chassis-Frame
18	104-2939	2	Screw-Support, Seat
19	33094-00	9	Washer-Plain
20	33024-00	7	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	114-3247	1	Fender-Body, Rear
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock
26	87-5140	12	Nut-Lock

Ref	Part No.	Qty.	Description
27	104-2943	18	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	2	Washer-Plain
31	33114-020	8	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	4	Washer-Rubber
35	104-2952	8	Washer-Rubber
36	107-8915	1	Bracket-Seat, RH
37	107-8916	1	Bracket-Seat, LH
38	104-3195	2	Screw
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	104-2903	1	Decal-Instruction
44	99-5340	1	Decal-Switch
45	93-7276	1	Decal-Danger
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation
50	107-8974	2	Decal-Tower

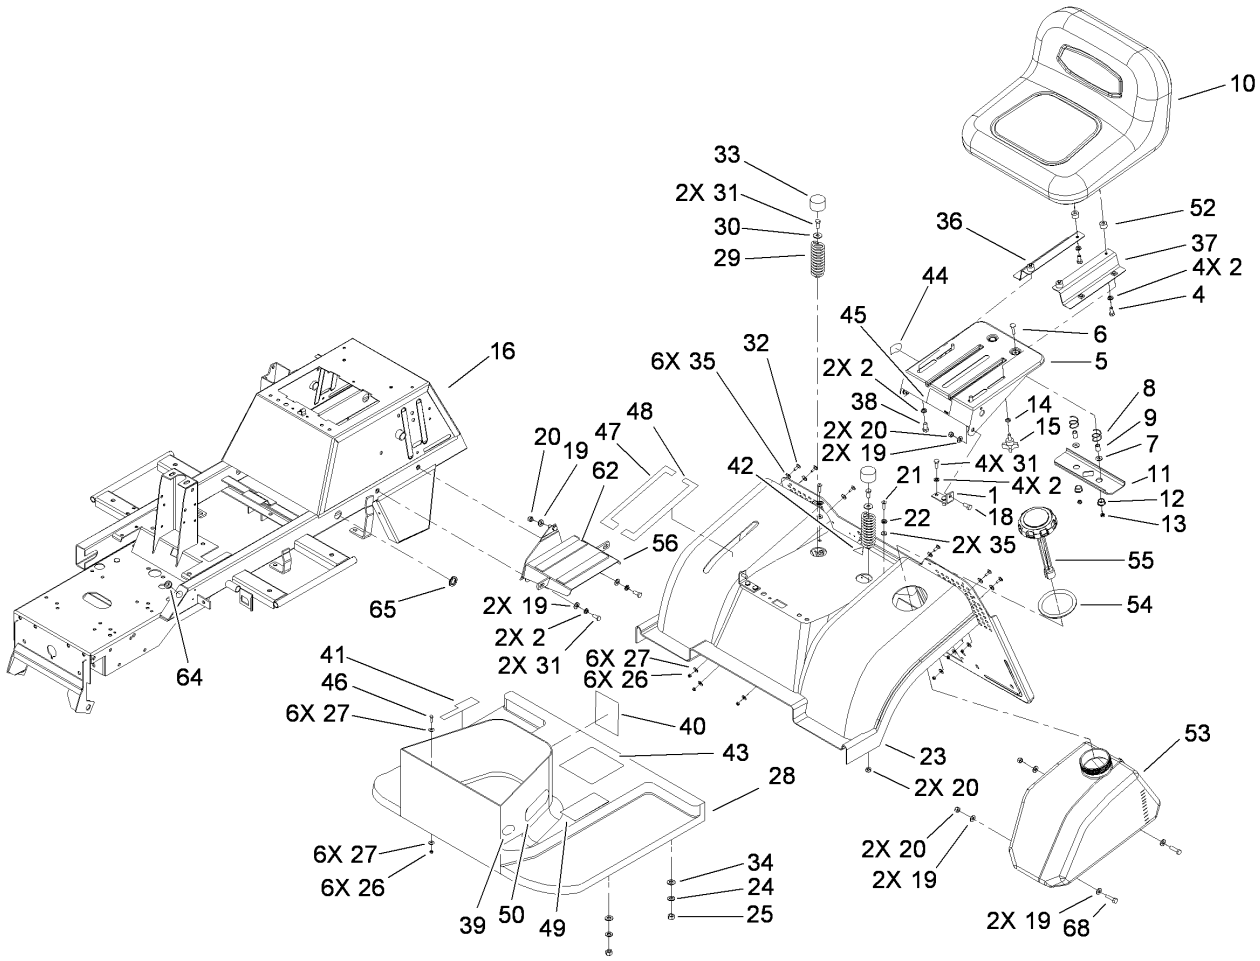

Frame Assembly (continued)


Ref	Part No.	Qty.	Description
52	107-8924	2	Shim-Seat
53	110-8689	1	Tank-Fuel
54	110-8691	1	Protector-Neck, Filler
55	110-8697	1	Cap-Fuel
56	110-8684	1	Bracket-Fuel, Tank
62	110-8690	2	Strip-Rubber, Fuel Tank
64	107-8950	1	Grommet
65	110-8683	1	Grommet
68	33114-030	2	Screw-HH

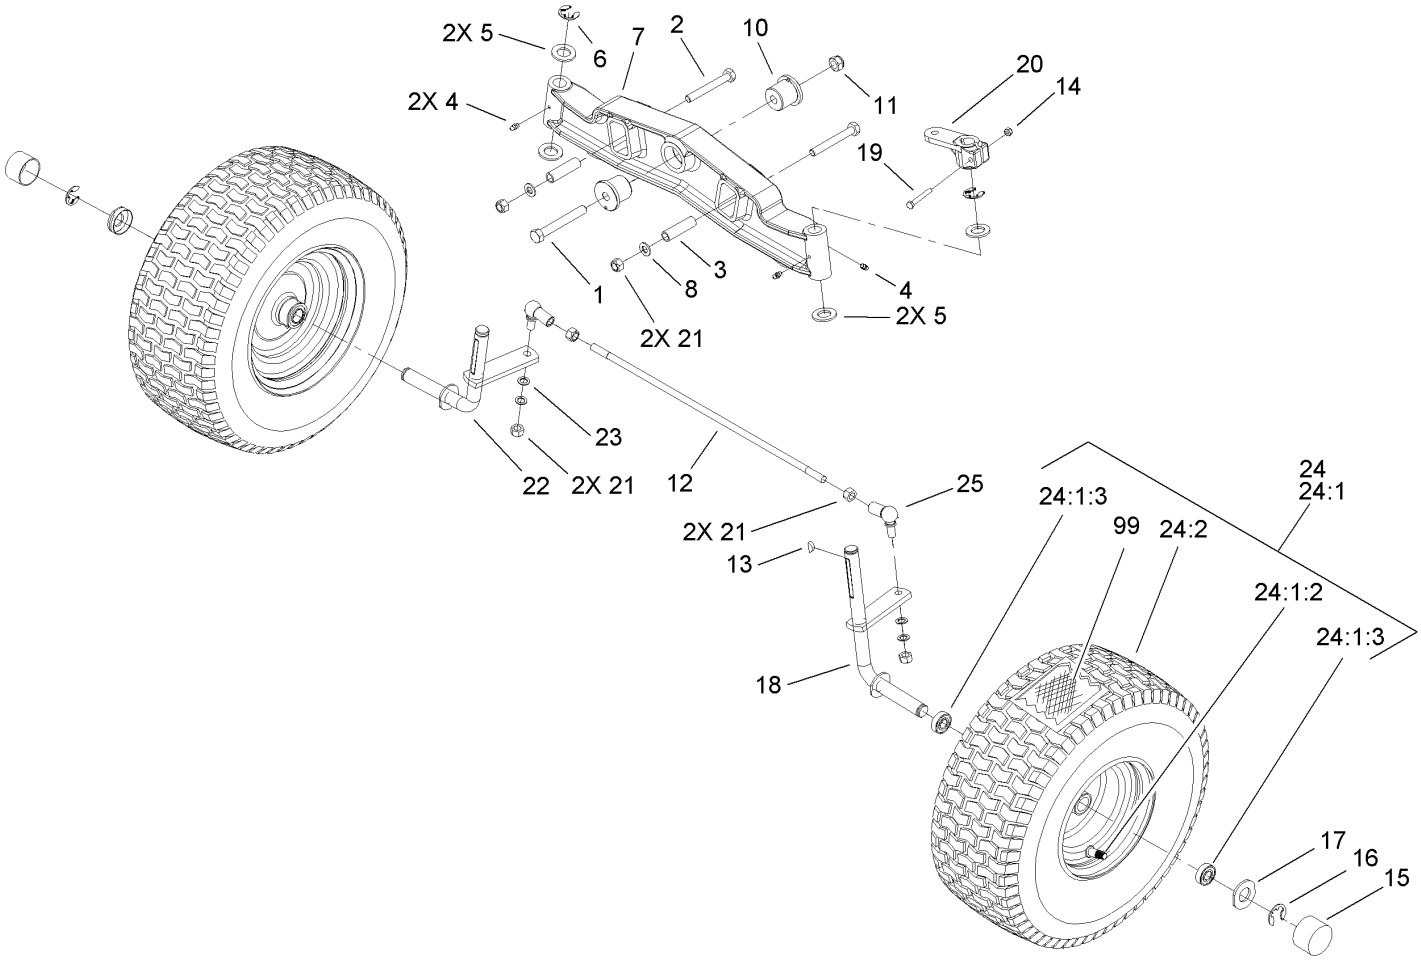

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	107-8949	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	4	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Locking, Self
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring
17	107-8998	2	Retainer-Cap, Hub
18	108-8776	1	Spindle-LH
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	6	Nut-Lock
22	107-8926	1	RH Spindle ASM
23	106-5757	4	Washer
24	110-9087	2	Wheel And Tire ASM
24:1	110-9088	1	Wheel ASM

Ref	Part No.	Qty.	Description
24:1:2	106-8596	1	Valve-Tire
24:1:3	110513	2	Bearing-Wheel
24:2	99-2988	1	Tire
25	104-2876	2	Joint-Ball, Angle
99	232-39	1	Tube-Inner

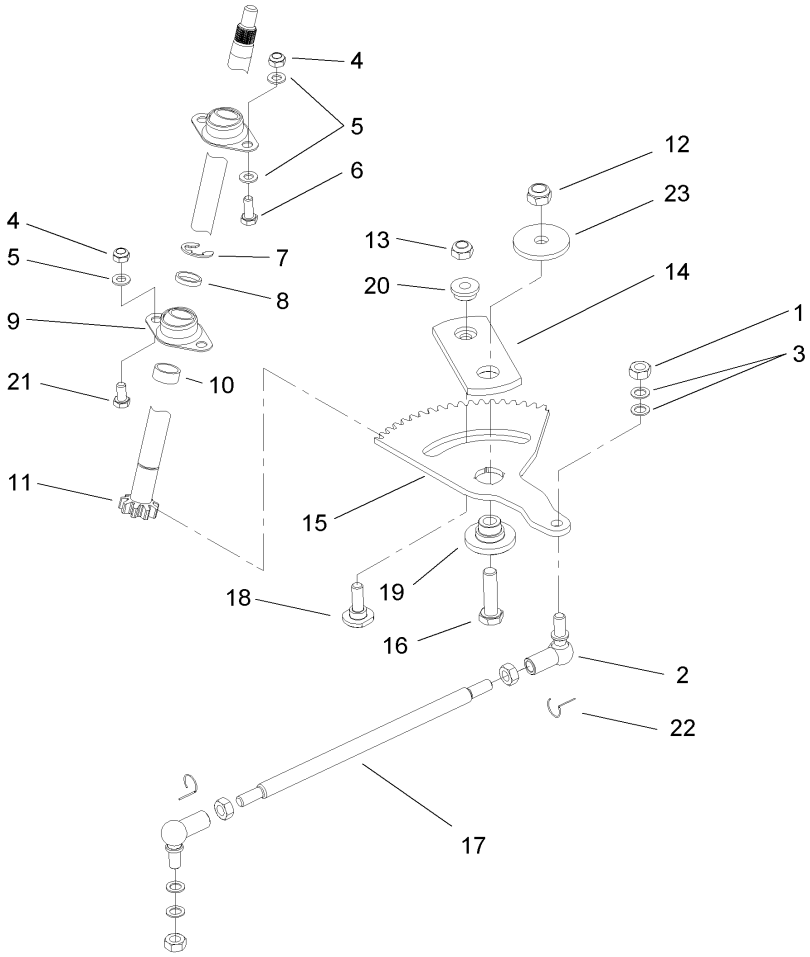

Steering Assembly


Ref	Part No.	Qty.	Description
1	33025-00	4	Nut-Lock
2	104-2876	2	Joint-Ball, Angle
3	106-5757	4	Washer
4	33024-00	4	Nut-Lock
5	33094-00	6	Washer-Plain
6	33114-020	2	Screw-HH
7	104-2891	1	Clip-Spring
8	104-2877	1	Spacer-Upper
9	104-2878	2	Bearing-Spherical
10	104-2879	1	Spacer-Lower
11	106-5773	1	Shaft-Steering
12	33026-00	1	Nut-Lock
13	33025-00	1	Nut-Lock
14	105-1238	1	Plate-Steering
15	104-2883	1	Gear-Sector
16	104-2910	1	Screw-Hex
17	104-2886	1	Link-Drag
18	105-1239	1	Bolt-Shoulder
19	105-1240	1	Pivot-Steering
20	105-1241	1	Bushing
21	33114-016	2	Screw-HH
22	104-2865	2	Stirrups-Locking
23	108-8892	1	Washer

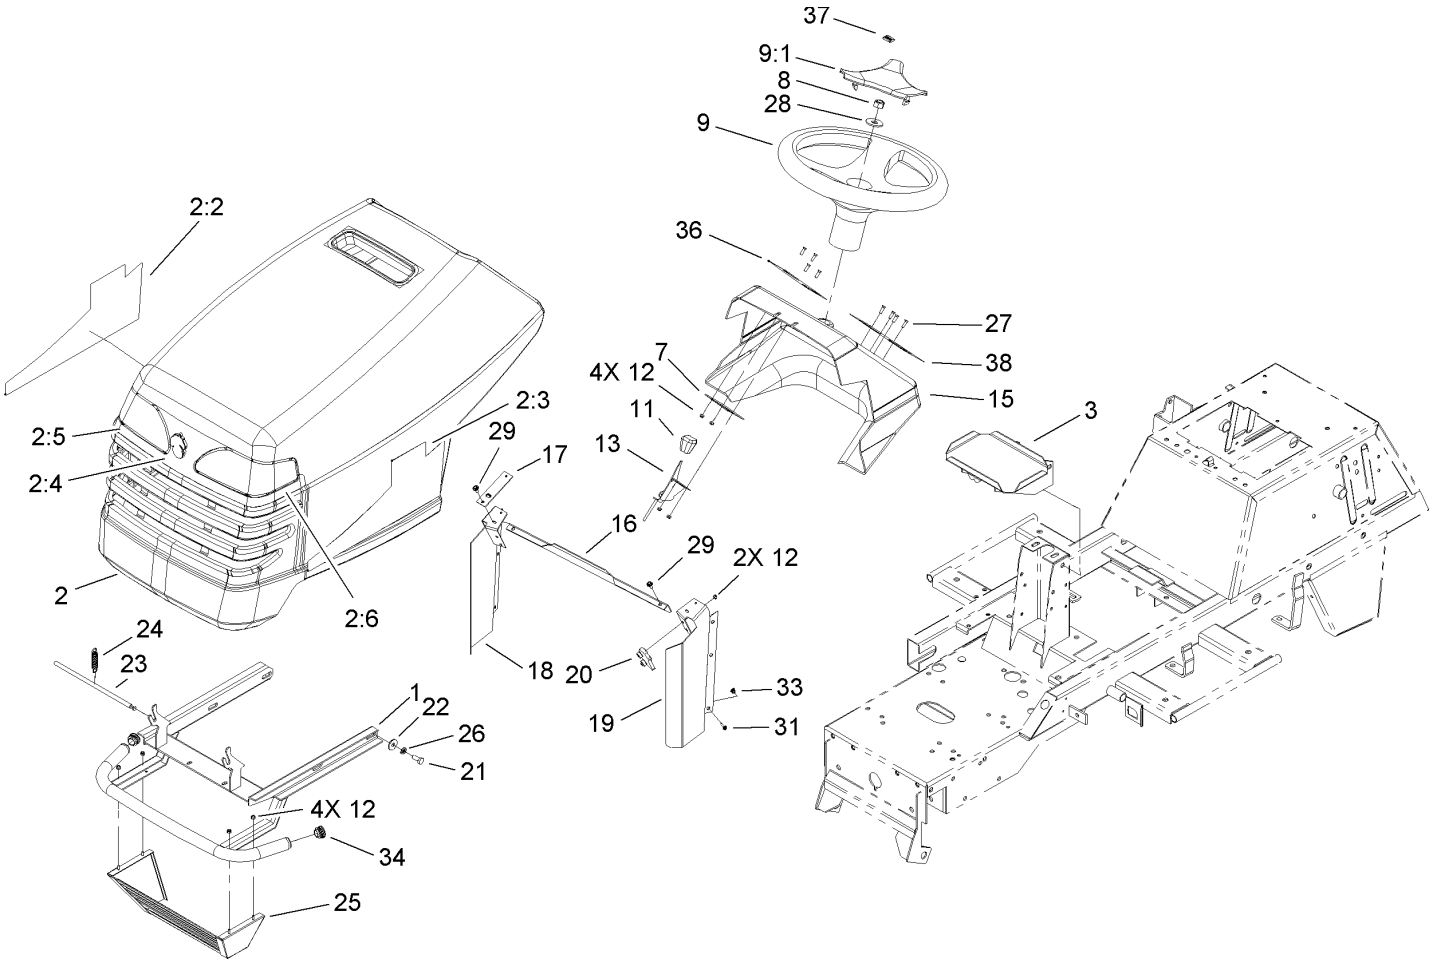

Hood Assembly

Ref	Part No.	Qty.	Description
1	107-2216	1	Support-Bumper
2	107-8986	1	Hood-Assembly
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Emblem
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	110-8679	1	Tray-Battery
7	104-2962	1	Brace
8	33026-00	1	Nut-Lock
9	98-1471	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
11	66-0120	1	Knob
12	87-5140	10	Nut-Lock
13	106-4166	1	Cable-Throttle And Choke
15	104-2968	1	Panel-Dash
16	114-3132	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain
23	104-2974	1	Bar-Safety


Ref	Part No.	Qty.	Description
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	3253-4	4	Washer-Lock
27	106-5759	4	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
31	107-8918	6	Screw
33	104-2985	6	Nut-Hex
34	107-8943	2	Plug-End, Tube
36	107-8920	1	Decal-Dash Throttle And Ignition
37	98-1459	1	Decal
38	104-3235	1	Decal-PTO

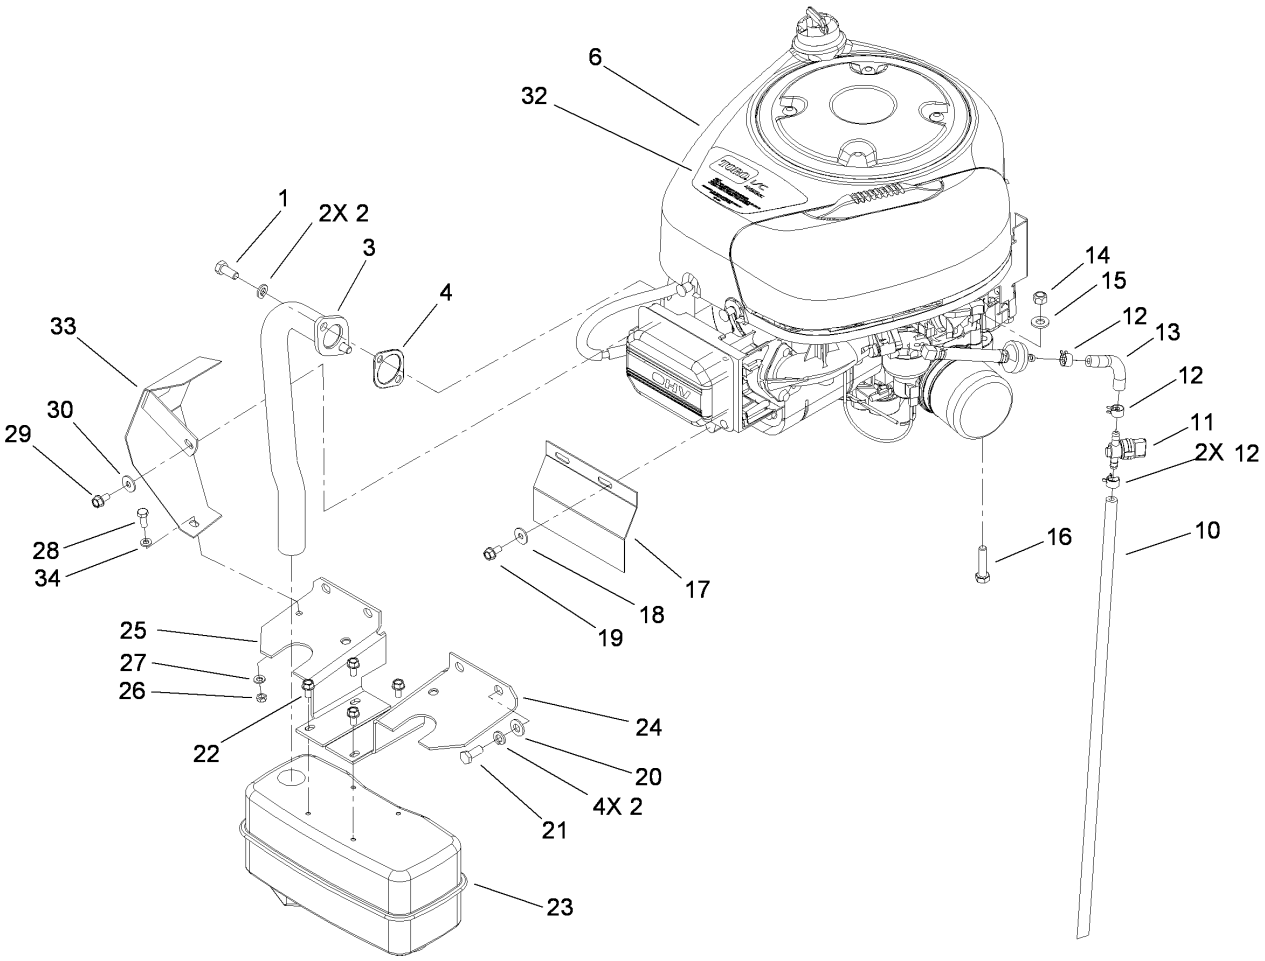

Engine Assembly

Ref	Part No.	Qty.	Description
1	322-3	2	Screw-HH
2	42-9850	6	Washer-Lock, Spring
3	104-3221	1	Tube-Exhaust
4	88-4410	1	Gasket-Exhaust
❶❷6		1	Briggs And Stratton Model 31A607-0117-E1
10	110-8692	1	Line-Fuel
11	104-3224	1	Valve-Tank, Fuel
12	104-3212	4	Clamp-Line, Fuel
13	104-3213	1	Line-Fuel
14	33024-00	4	Nut-Lock
15	33094-00	4	Washer-Plain
16	33114-035	4	Screw-HH
17	104-3222	1	Cover-Front
18	104-2931	2	Washer-Flat
19	106-5763	2	Screw
20	33094-00	4	Washer-Plain
21	33114-020	4	Screw-HH
22	106-5763	4	Screw
23	104-3229	1	Muffler
24	104-3214	1	Guard-Muffler, LH
25	104-3215	1	Guard-Muffler, RH
26	33013-00	1	Nut-Hex
27	104-3186	1	Washer-Spring


Ref	Part No.	Qty.	Description
28	33113-016	1	Screw-HH
29	106-5763	1	Screw
30	104-2931	1	Washer-Flat
32	107-4924	1	Decal
33	105-1242	1	Cover-Manifold, Exhaust
34	33093-00	1	Washer-Flat

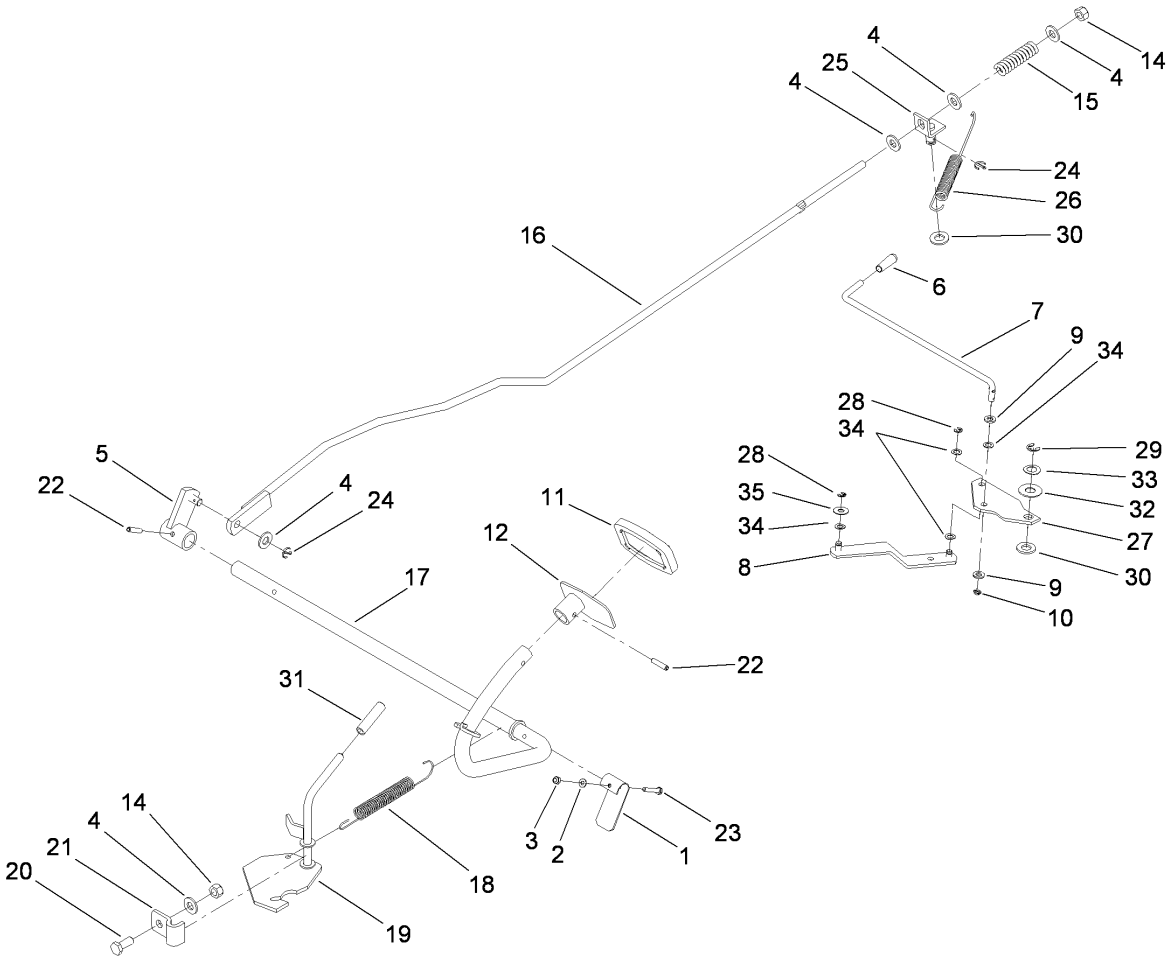

Operation - Brake and Bypass Assembly


Ref	Part No.	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	104-2995	1	Rod-Lever, Bypass
8	107-8944	1	Lever-Bypass
9	104-3193	2	Washer
10	104-2997	1	Pin-Cotter
11	104-3018	1	Pad-Pedal
12	114-3246	1	Pedal-Brake
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake
16	104-3003	1	Rod-Connecting, Brake
17	104-3004	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake

Ref	Part No.	Qty.	Description
26	104-3012	1	Spring
27	104-3323	1	Plate-Bypass
28	104-3014	2	Stirrup
29	104-3015	1	Stirrup
30	33095-00	2	Washer-Flat
31	104-3247	1	Cap
32	106-5768	1	Washer
33	106-5769	1	Washer
34	106-5770	4	Washer
35	106-5771	1	Washer

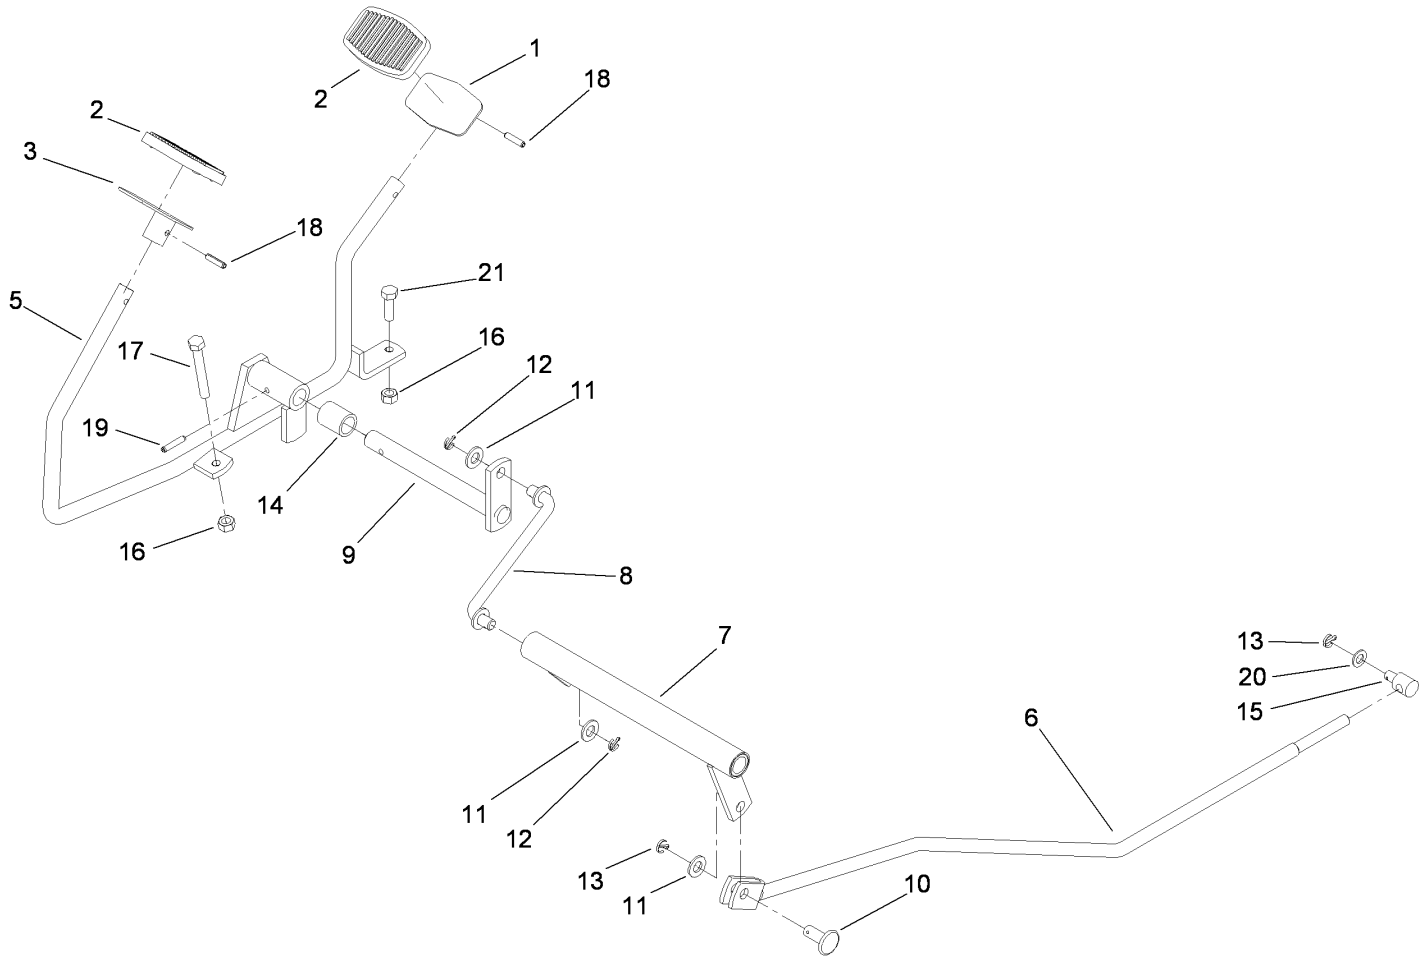

Operation - Travel Pedal Assembly


Ref	Part No.	Qty.	Description
1	104-3017	1	Pedal-Rear, Travel
2	104-3018	2	Pad-Pedal
3	114-3248	1	Pedal-Travel, Forward
5	104-3021	1	Pad-Travel
6	104-3022	1	Rod-Tie
7	104-3023	1	Shaft-Diagonal
8	104-3024	1	Link-Formed
9	104-3025	1	Shaft-Diagonal
10	104-3026	1	Pin
11	33095-00	3	Washer-Flat
12	104-3016	2	Pin-Cotter
13	104-3027	2	Pin-Cotter
14	104-3028	1	Spacer
15	104-3029	1	Pin
16	33014-00	2	Nut-Hex
17	33114-060	1	Screw-HH
18	104-3008	2	Pin-Spring
19	104-3030	1	Pin-Spring
20	104-3031	1	Washer
21	33114-025	1	Screw-HH

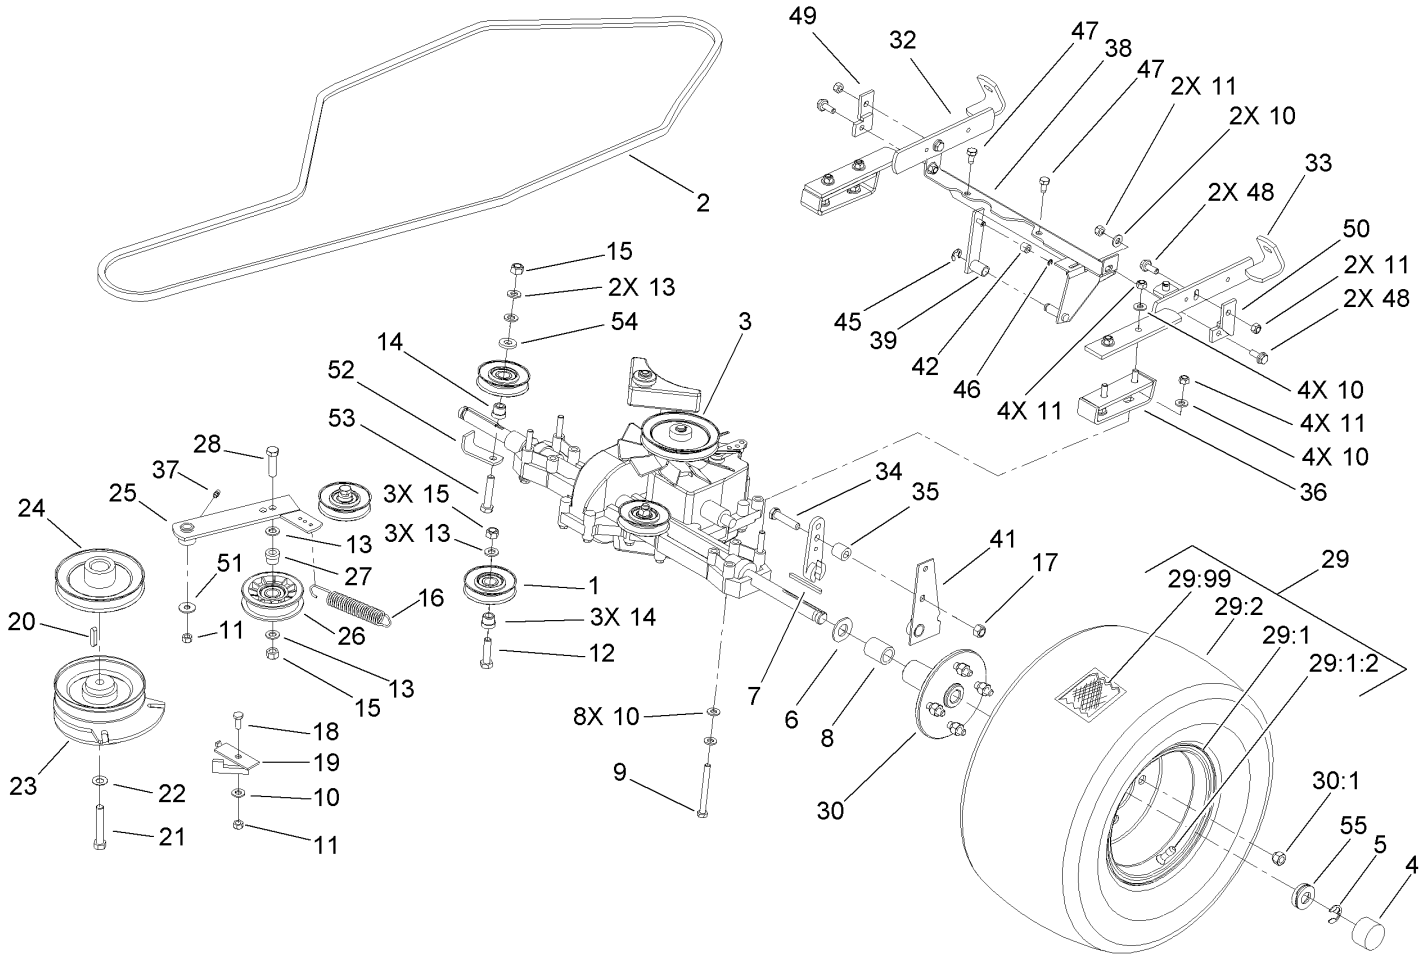

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	114-3155	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	19	Washer-Plain
11	33024-00	14	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	7	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine

Ref	Part No.	Qty.	Description
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
❶29		2	Rear Wheel Complete
29:1	117-7847	1	Rim Assembly
29:1:2	232-27	1	Stem-Valve
29:2	99-2996	1	Tire
29:99	232-41	1	Tube
30	108-8718	2	Hub-Wheel
30:1	108-8717	4	Nut-Lug
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	107-8947	2	Bracket-Support
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
41	104-3326	1	Tenon
42	104-3329	1	Roller
45	104-3341	1	Stirrup
46	104-3014	1	Stirrup
47	104-3344	2	Screw-Thread Forming

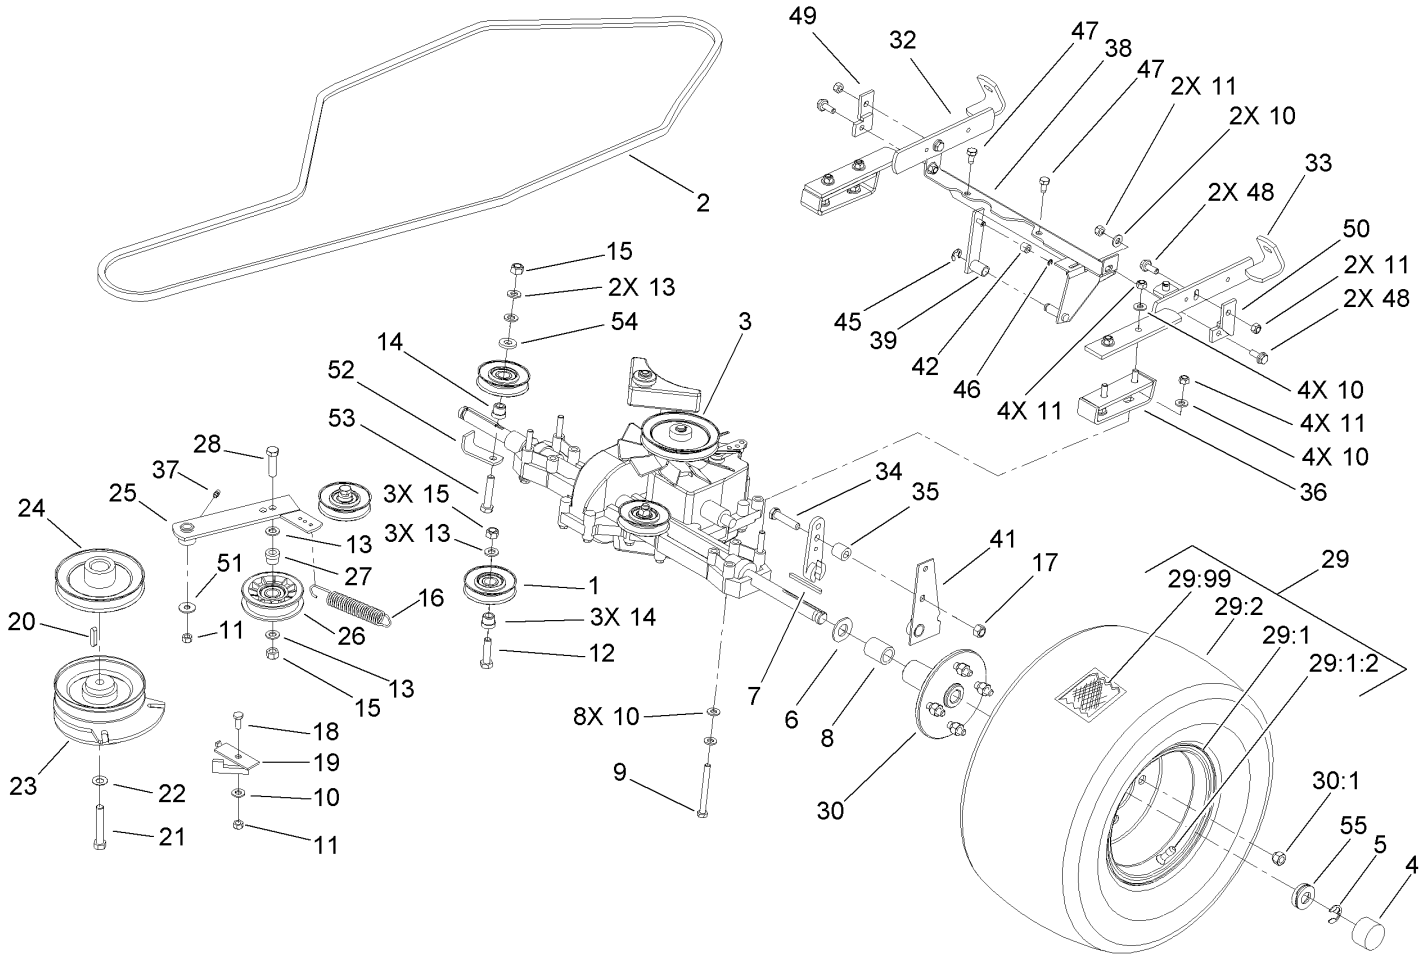


Transmission Drive Assembly (continued)

Ref	Part No.	Qty.	Description
48	104-3065	4	Screw-Hex
49	107-8945	1	Bracket-Right
50	107-8946	1	Bracket-Left
51	104-2946	2	Washer-Plain
52	108-8732	1	Retainer-Belt
53	33115-050	1	Screw-HH
54	108-8709	1	Washer-Flat
55	107-8998	2	Retainer-Cap, Hub

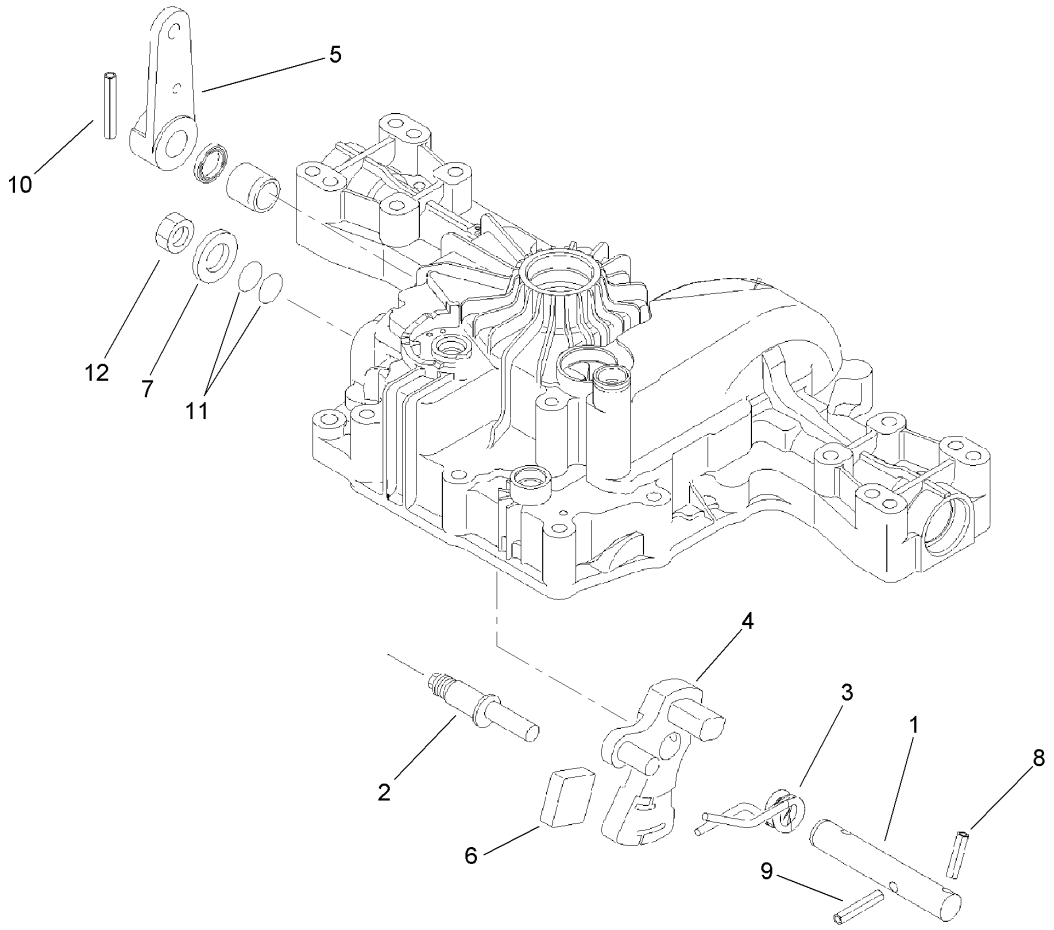


Control Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	114-3181	1	Shaft-Control
2	104-3292	1	Fulcrum-Eccentricity
3	114-3217	1	Spring-Torsion
4	114-3180	1	Arm-Control
5	104-3342	1	Arm-Transaxle
6	104-3296	1	Plate-Jerky
7	93-0417	1	Washer
8	114-3182	1	Pin-Cotter
9	104-3297	1	Pin
10	93-0411	1	Pin-Roll
11	104-3298	2	Packing
12	93-0420	1	Nut

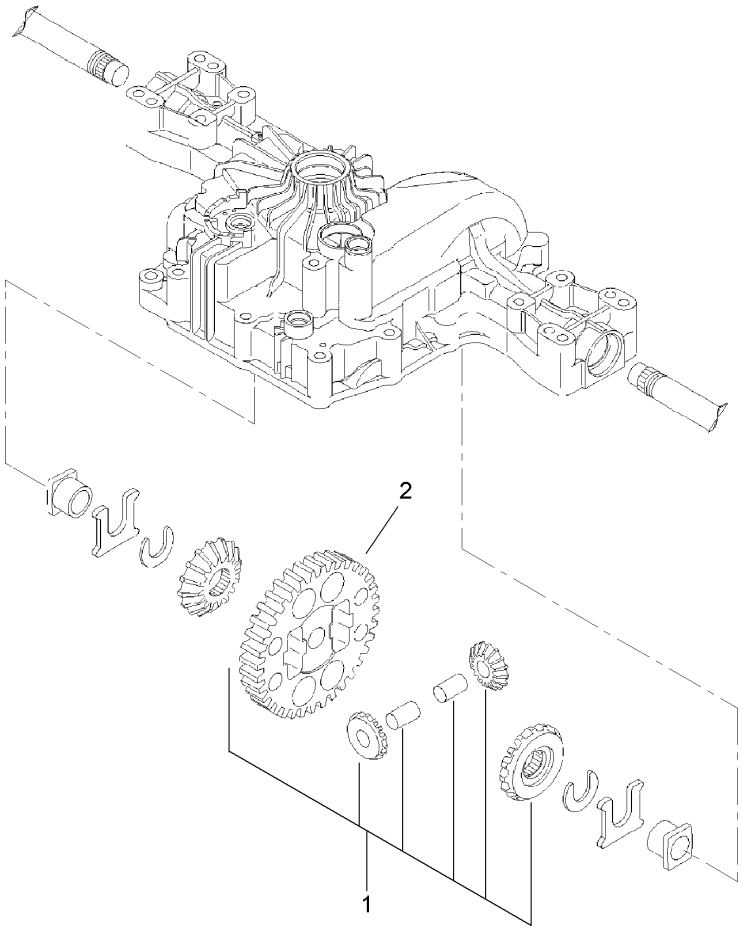


Differential Gear Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

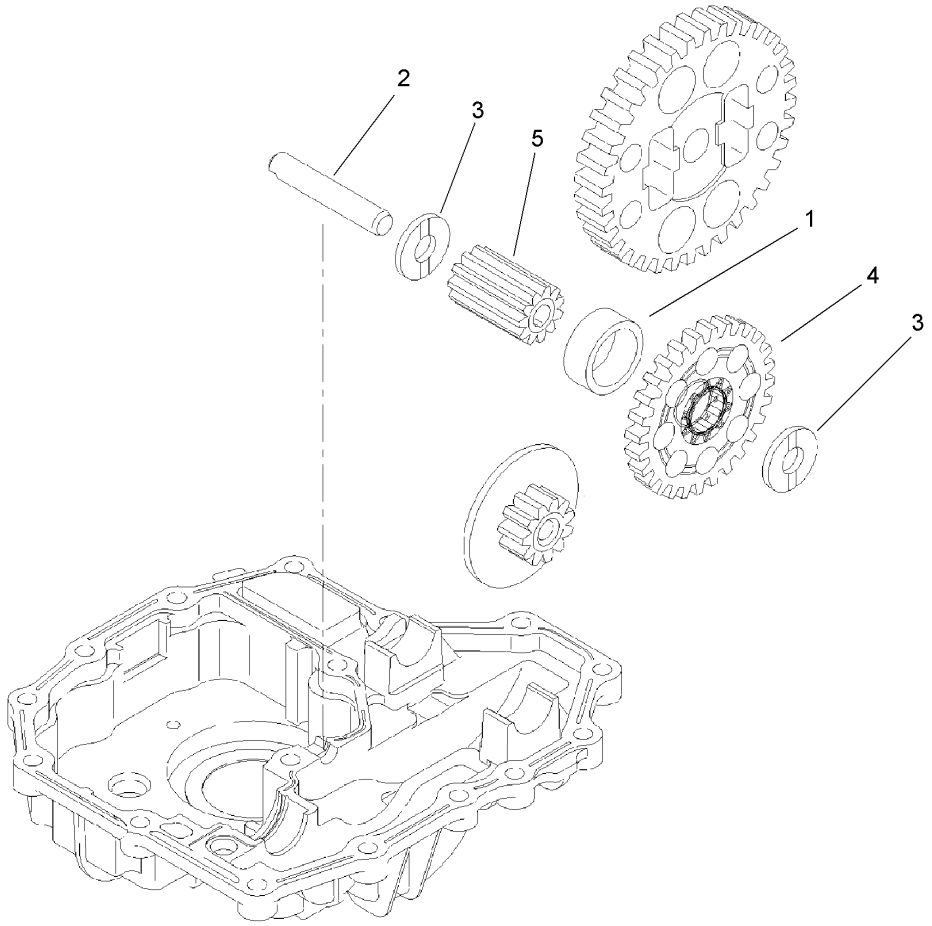


Final Pinion Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3302	1	Collar-Final Pinion
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

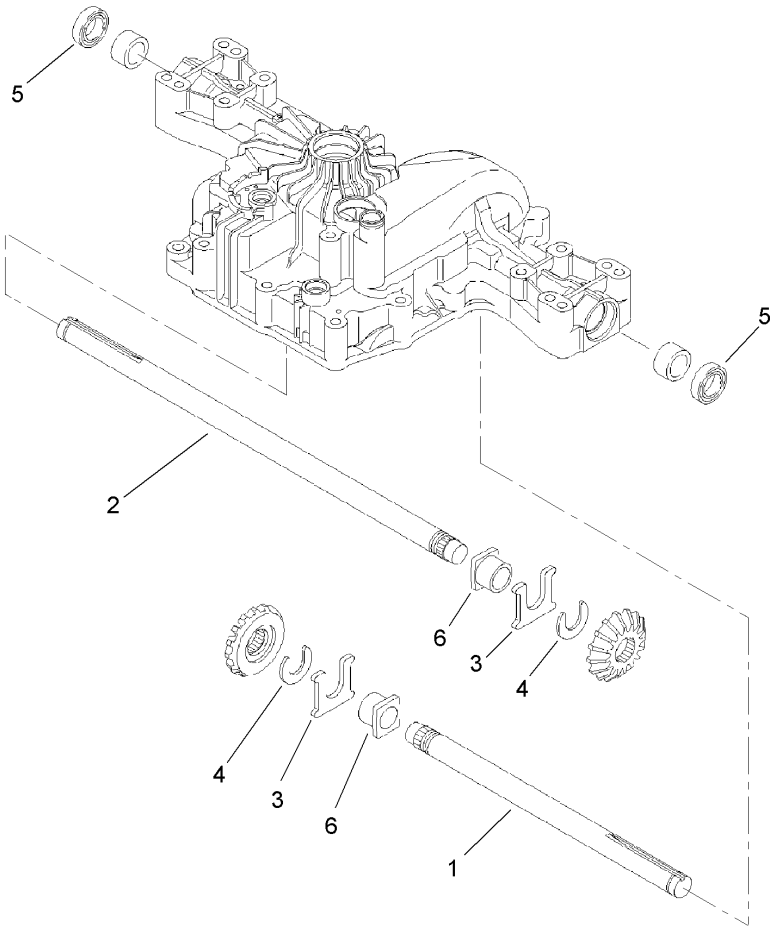


Axle Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3307	1	Shaft-Axle, LH
2	104-3308	1	Shaft-Axle, RH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

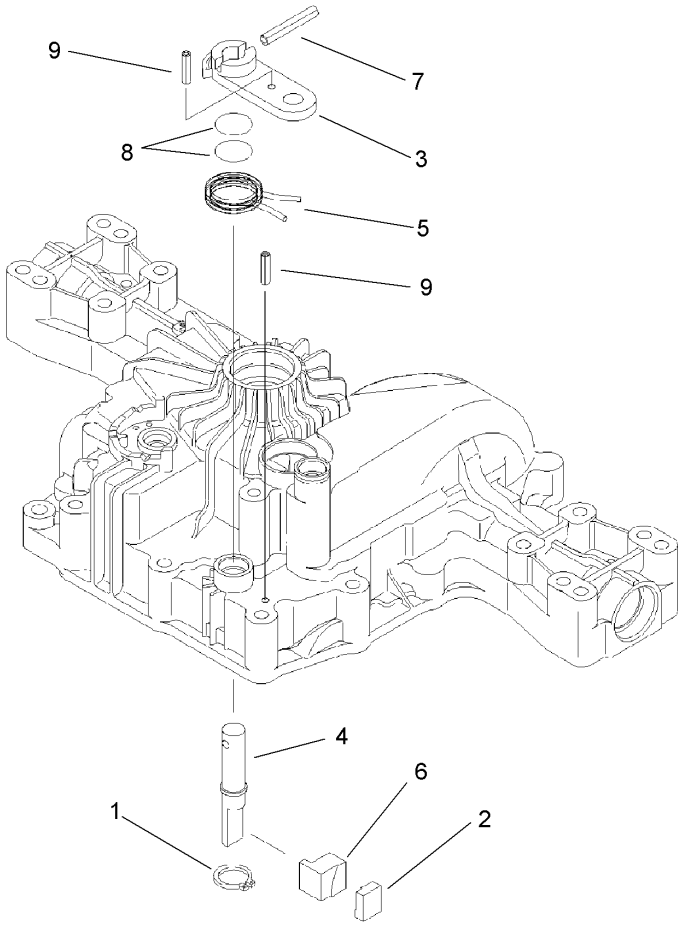


Brake Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	93-0418	2	O-Ring
9	104-3319	2	Pin

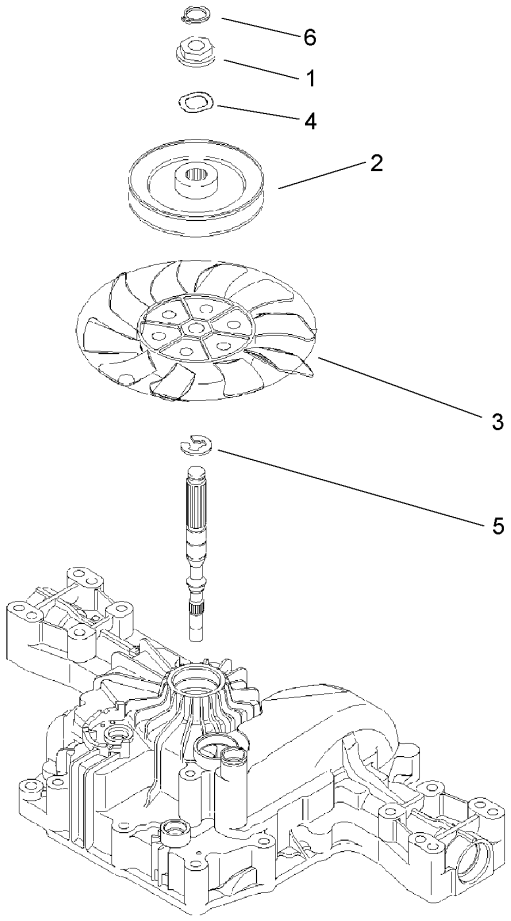


Fan Pulley Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan- Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring

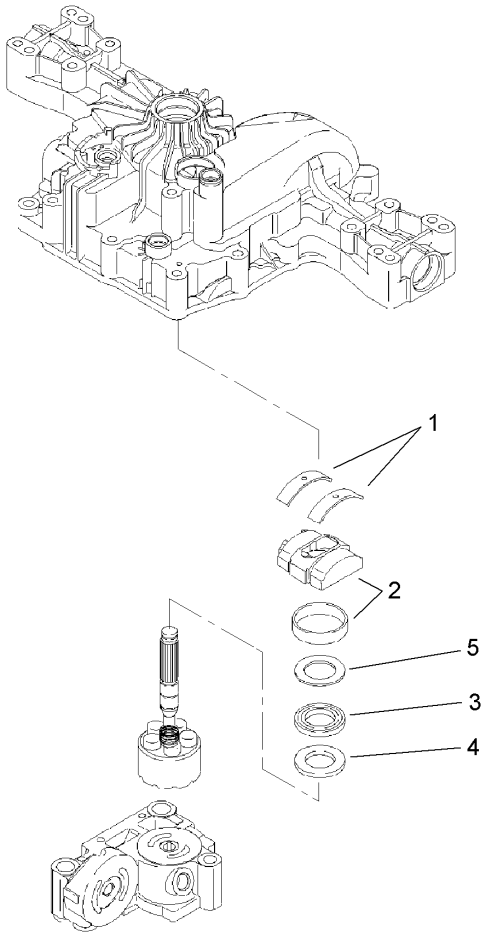


Range Shift Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

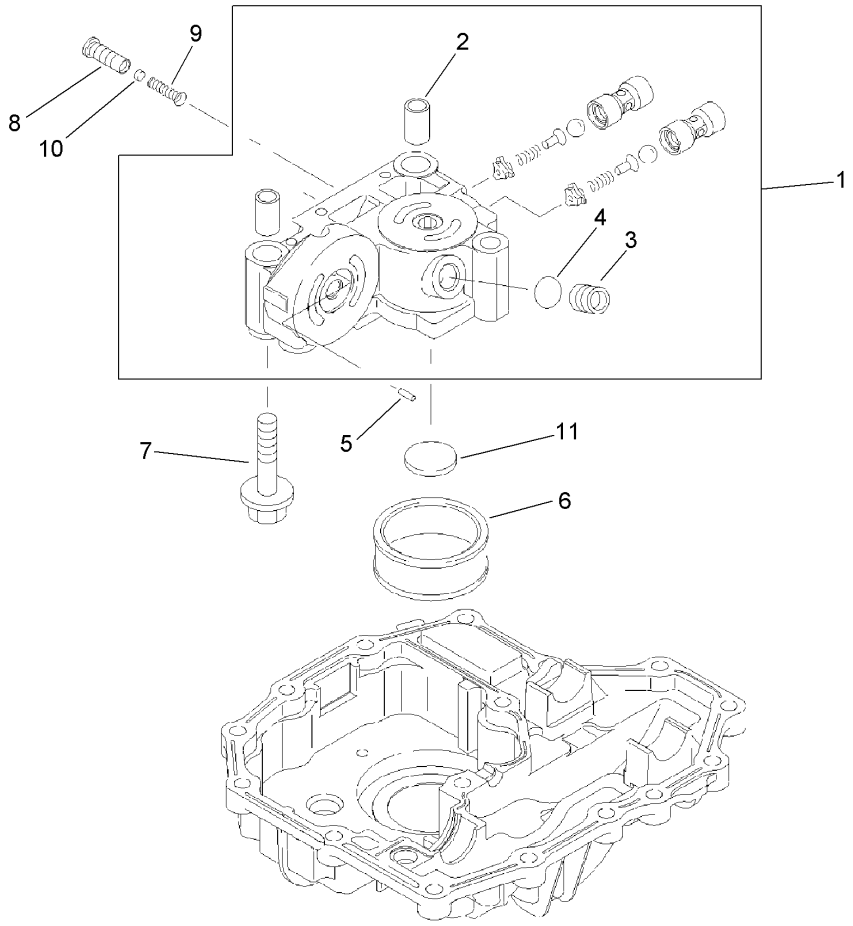


Center Case Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3267	1	Case-Center
2	104-3268	2	Pin-Knock
3	104-3269	1	Plug
4	93-0419	1	Packing
5	104-3270	1	Pin
6	104-3271	1	Filter
7	104-3272	3	Bolt
8	104-3273	2	Valve
9	104-3274	2	Spring
10	104-3275	2	Filter
11	104-3257	1	Magnet

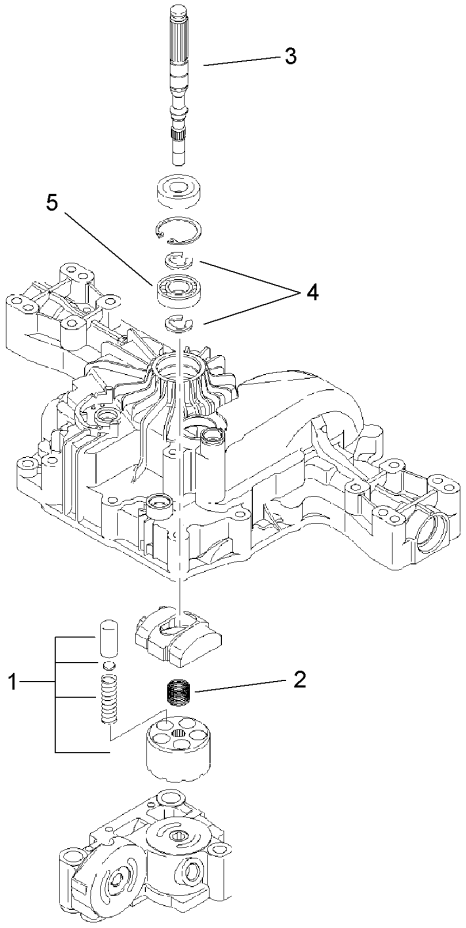


Pump Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

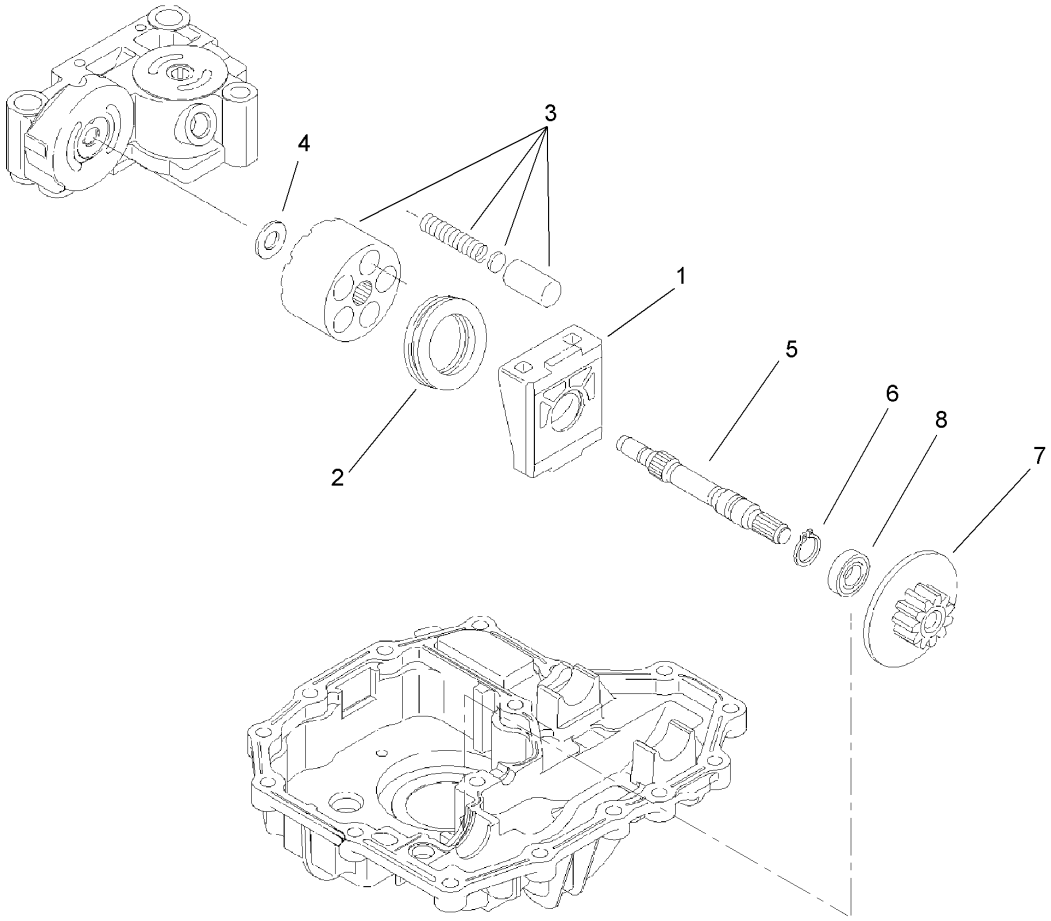


Motor Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing

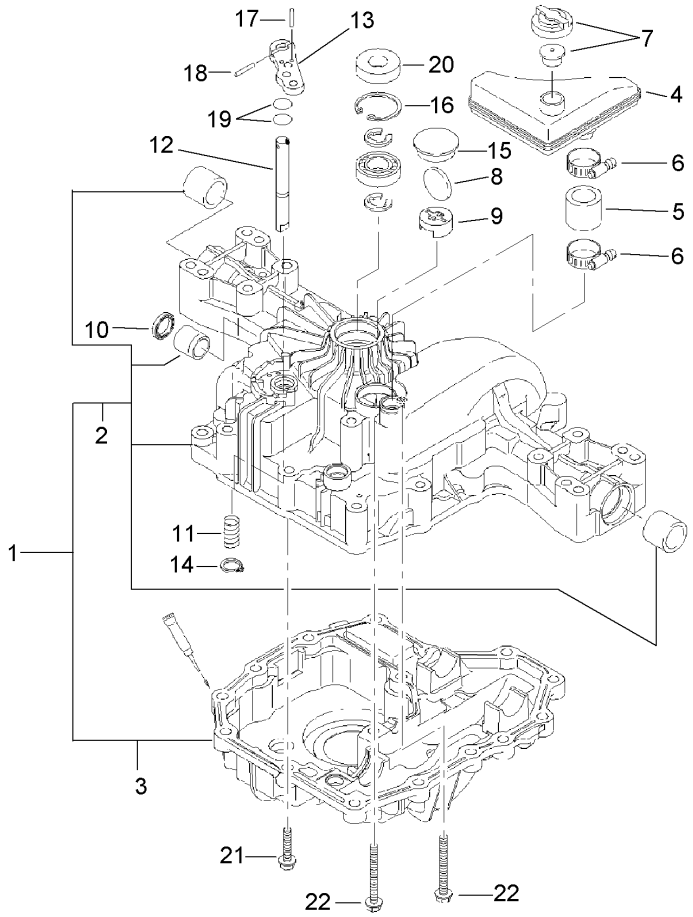

Transaxle Case Assembly
Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description
1	104-3251	1	Transaxle Case Set
2	104-3252	1	Housing-Upper
3	104-3253	1	Housing-Lower
4	104-2914	1	Tank-Reservoir, With Cap
5	104-3254	1	Tube
6	104-3255	2	Clamp-Miniature
7	104-3256	1	Valve-Vent, 15
8	104-3257	1	Magnet
9	104-3258	1	Holder-Magnet
10	104-3259	1	Seal-Oil
11	93-0396	1	Spring
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	93-0360	1	Ring
17	104-3264	1	Pin
18	104-3265	1	Pin
19	93-0419	2	Packing
20	93-0361	1	Seal
21	93-0363	14	Screw-TAP
22	104-3266	2	Screw-TAP

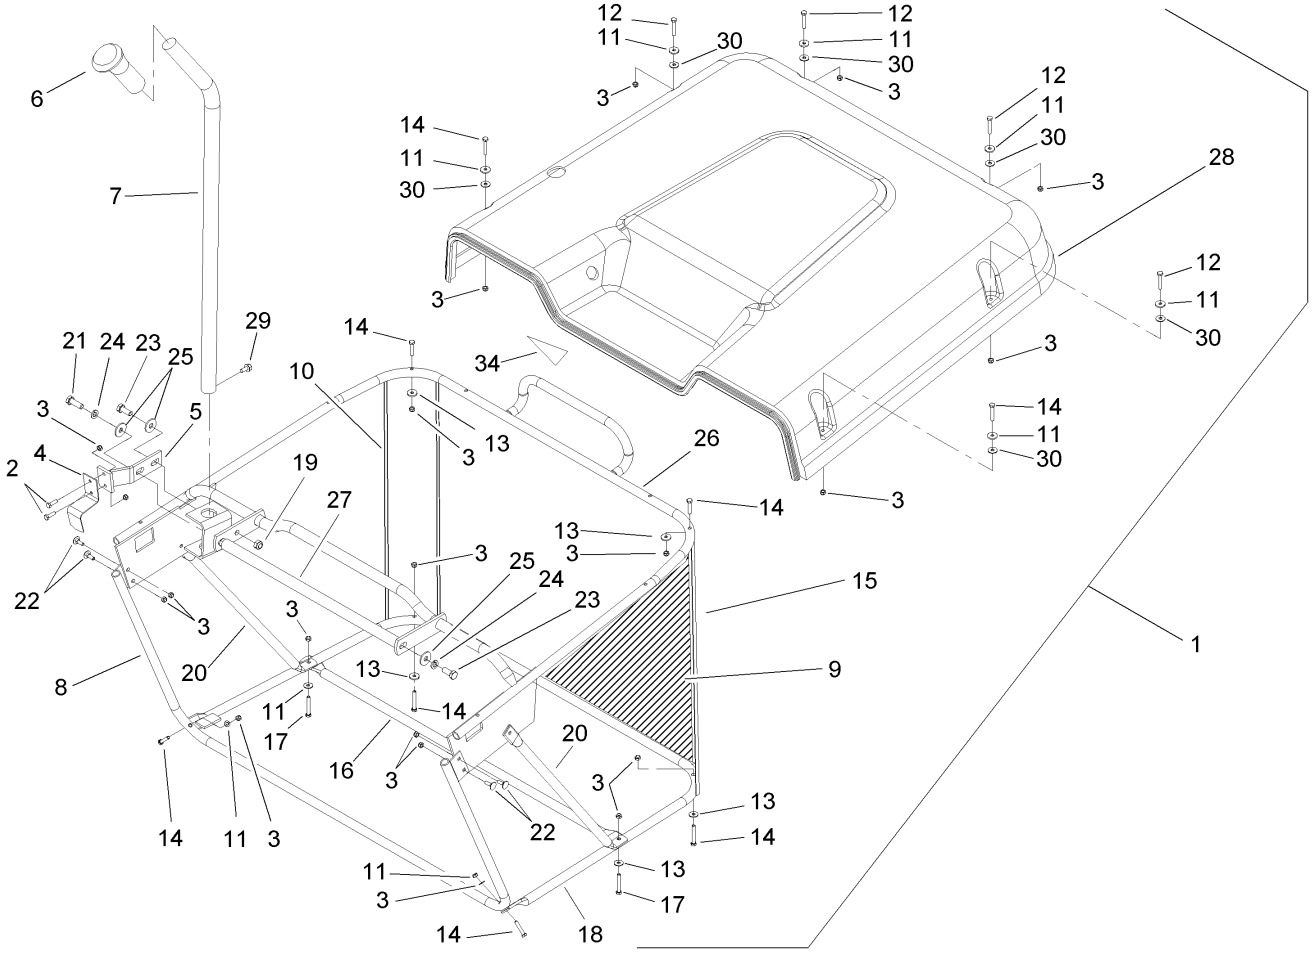

Grass Collector Assembly

Ref	Part No.	Qty.	Description
1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	3253-4	2	Washer-Lock


Ref	Part No.	Qty.	Description
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

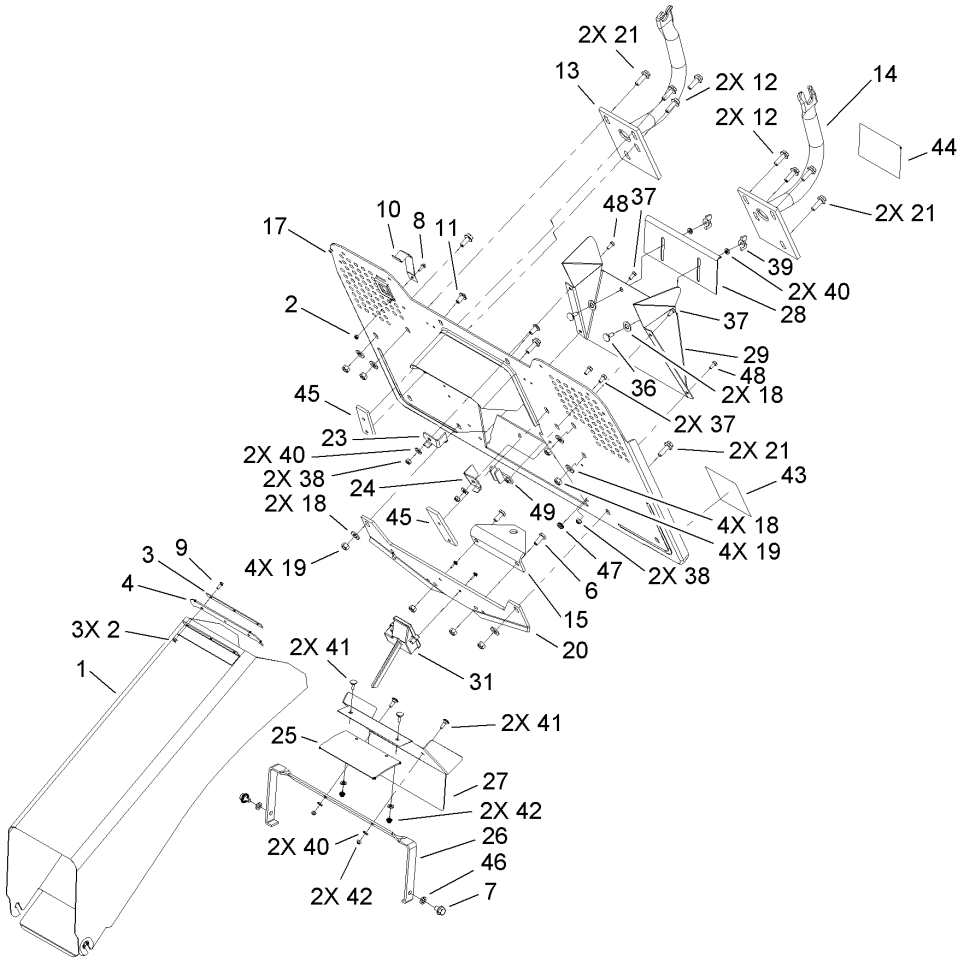

Tunnel Assembly

Ref	Part No.	Qty.	Description
1	106-8562	1	Tunnel
2	104-2985	4	Nut-Hex
3	104-3055	1	Plate-Support
4	104-3056	1	Seal-Rubber
6	33114-020	2	Screw-HH
7	68-9410	2	Screw-Flange
8	104-2983	1	Screw
9	104-3058	3	Screw-SFH
10	104-3059	1	Cover-Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	104-3064	1	Hitch-Tow
17	104-3066	1	Collector Plate ASM
18	33095-00	8	Washer-Flat
19	33024-00	8	Nut-Lock
20	104-3067	1	Support-Hitch, Tow
21	104-3068	6	Screw-Hex
23	106-8597	1	Support-Tunnel, Left
24	106-8598	1	Support-Tunnel, Right
25	106-8599	1	Shield-Rubber
26	104-3069	1	Bracket-Shield, Protective
27	104-3070	1	Shield-Protective


Ref	Part No.	Qty.	Description
28	104-3336	1	Shield-Adjustable
29	104-3335	1	Hopper-Receiving
31	104-3074	1	Overload Switch ASM
36	104-2961	2	Screw
37	33113-012	4	Screw-HH
38	33023-00	4	Nut-Lock
39	32103-28	2	Nut-Wing
40	33093-00	6	Washer-Flat
41	104-2948	4	Bolt-Carriage
42	87-5140	4	Nut-Lock
43	104-3243	1	Decal-Bypass, Hydro
44	104-2853	1	Decal-Position, Bagging
45	104-3347	2	Plate-Reinforcing
46	104-3348	2	Washer-Spring
47	106-5772	1	Bushing
48	106-8575	2	Screw-HH
49	110-8688	1	Bracket-Support, Fuel Tank

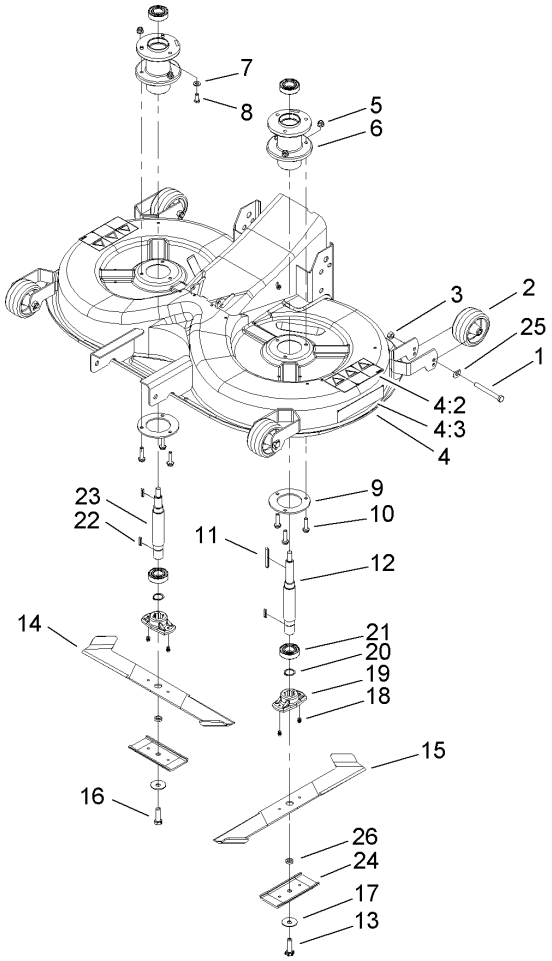

Deck Housing Assembly

Ref	Part No.	Qty.	Description
1	33115-090	4	Screw-HH
2	104-3080	4	Wheel-Gauge
3	33025-00	4	Nut-Lock
4	110-9071	1	Deck ASM
4:2	93-7824	2	Decal-Danger
4:3	106-8563	1	Decal-Recycler
5	104-3082	6	Nut-Lock, HF
6	107-8992	2	Housing-Spindle
7	33094-00	6	Washer-Plain
8	33114-020	6	Screw-HH
9	104-3084	2	Support-Ring
10	104-3085	6	Bolt-HHF
11	104-3086	1	Key
12	106-8565	1	Shaft-Blade, Left
13	106-5797	1	Bolt-HH, Blade
14	106-8557	1	Blade-RH
15	106-8558	1	Blade-LH
16	106-5798	1	Bolt-Blade, HH
17	106-6532	2	Washer-Blade
18	104-3093	4	Pin-Shear, Grooved
19	106-4185	2	Adapter-Blade
20	104-3095	2	Ring-Locking
21	104-6325	4	Bearing-Ball
22	104-3097	3	Key-Square


Ref	Part No.	Qty.	Description
23	106-8566	1	Shaft-Blade, Right
24	106-6533	2	Stiffener-Blade
25	106-5767	4	Washer
26	106-6530	2	Spacer

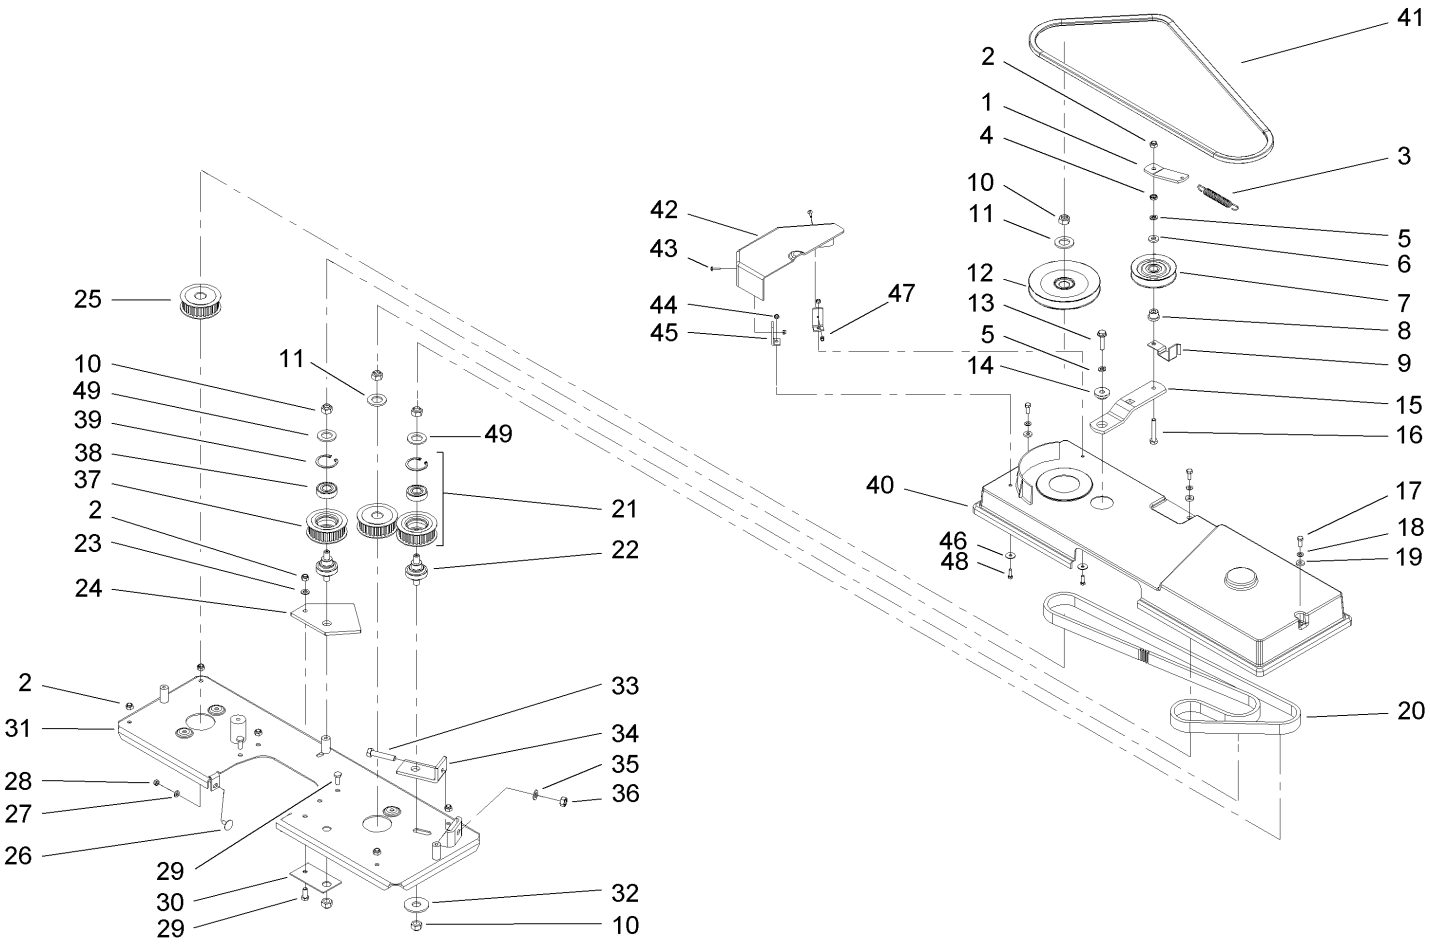

Cutting Pan and Drive System Assembly


Ref	Part No.	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	3253-4	1	Washer-Lock
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley

Ref	Part No.	Qty.	Description
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	2	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3127	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw

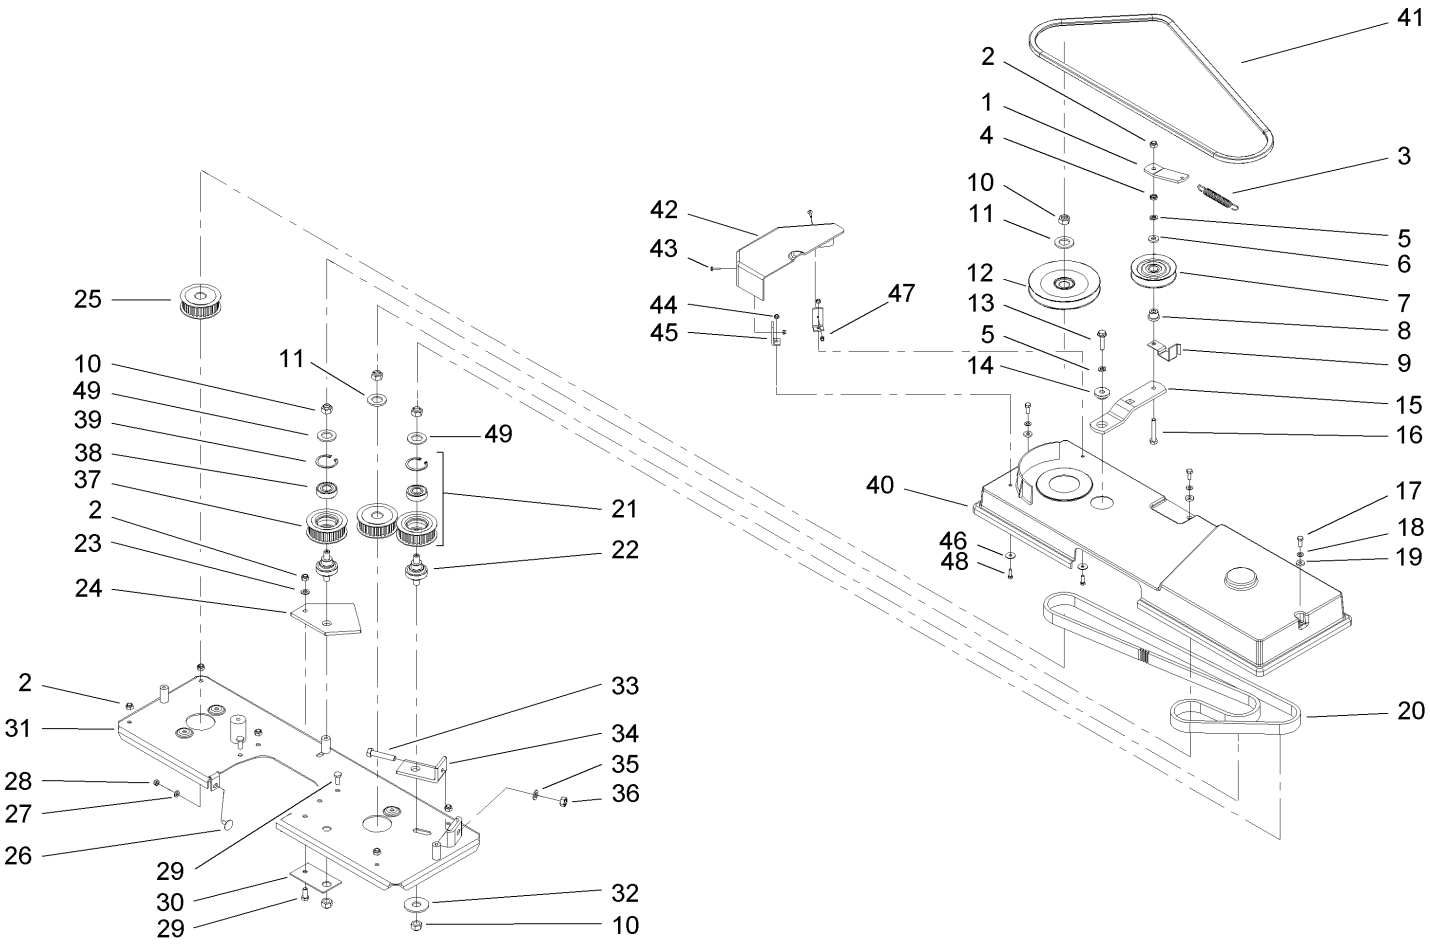

Cutting Pan and Drive System Assembly (continued)


Ref	Part No.	Qty.	Description
49	33096-00	2	Washer-Flat

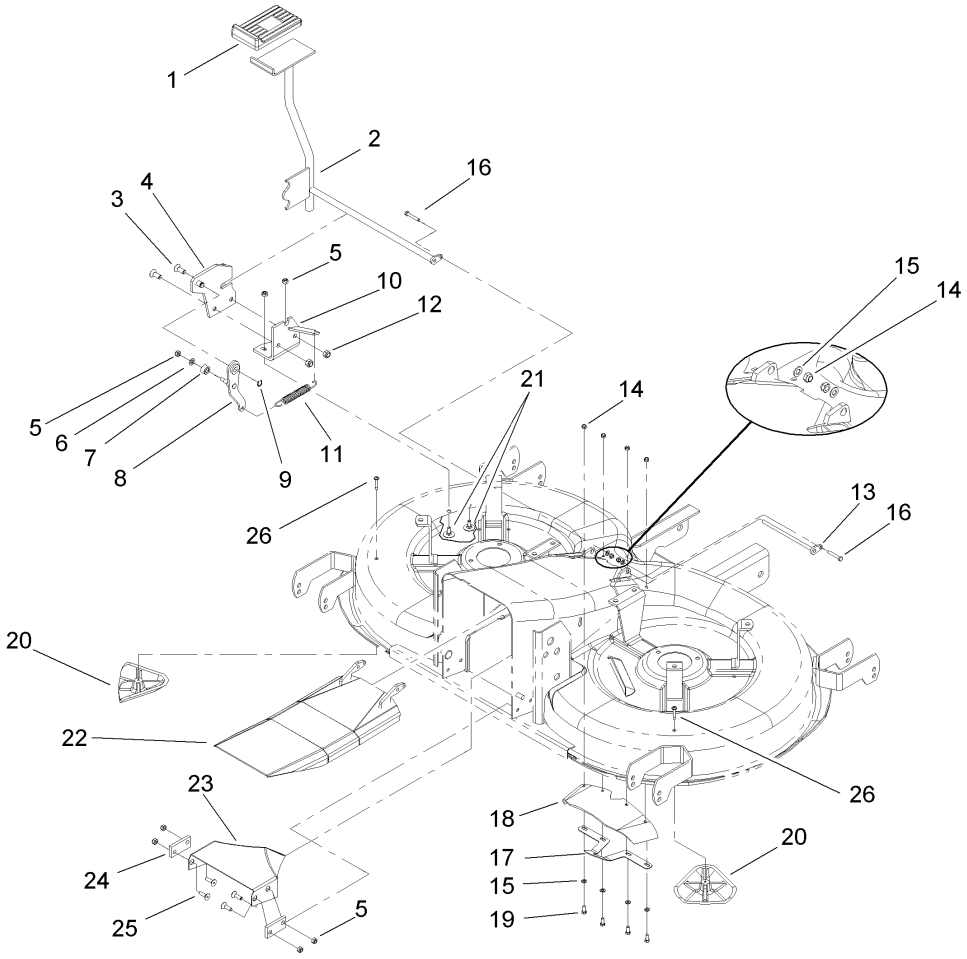

Cutting Pan and Bag on Demand Assembly

Ref	Part No.	Qty.	Description
1	106-8583	1	Cover-Lever, Foot
2	106-8582	1	Lever-Foot
3	100-8159	2	Screw-HSFH
4	106-8578	1	Plate-Stop
5	33023-00	7	Nut-Lock
6	33093-00	1	Washer-Flat
7	106-8581	1	Roller
8	106-8579	1	Lever-Spring
9	106-8592	1	Ring-Locking
10	106-8577	1	Bracket-Mounting
11	106-8580	1	Spring
12	48-9510	2	Nut
13	106-8585	1	Rod-Door, Mulch
14	87-5140	6	Nut-Lock
15	52-6430	6	Washer
16	87-5150	2	Bolt
17	106-8567	2	Guide
18	106-8586	1	Gasket-Door, Mulch
19	106-8575	4	Screw-HH
20	106-8587	2	Kicker
21	33123-016	2	Screw-CARR
22	107-8968	1	Door-Mulch
23	106-8573	1	Baffle-Center
24	106-8572	2	Plate-Baffel, Center


Ref	Part No.	Qty.	Description
25	106-8574	4	Screw
26	104-1451	2	Screw-TAP, PPH

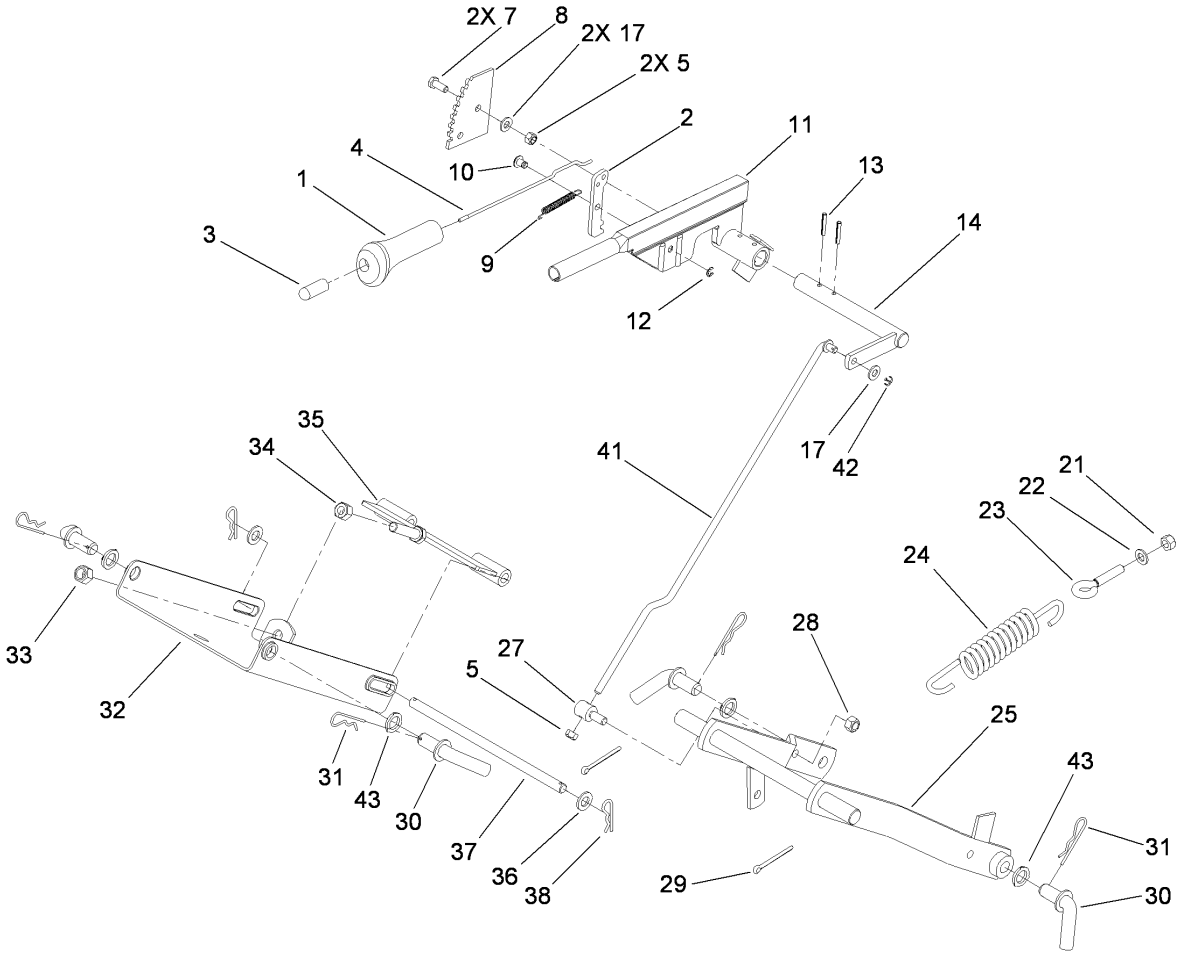

Mower Lift Assembly


Ref	Part No.	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	114-3244	1	Gear-Segment, Deck Lift
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	114-3245	1	Shaft-Lift, Deck
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair


Ref	Part No.	Qty.	Description
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Pin-Hair
41	104-3149	1	Rod-Height, Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

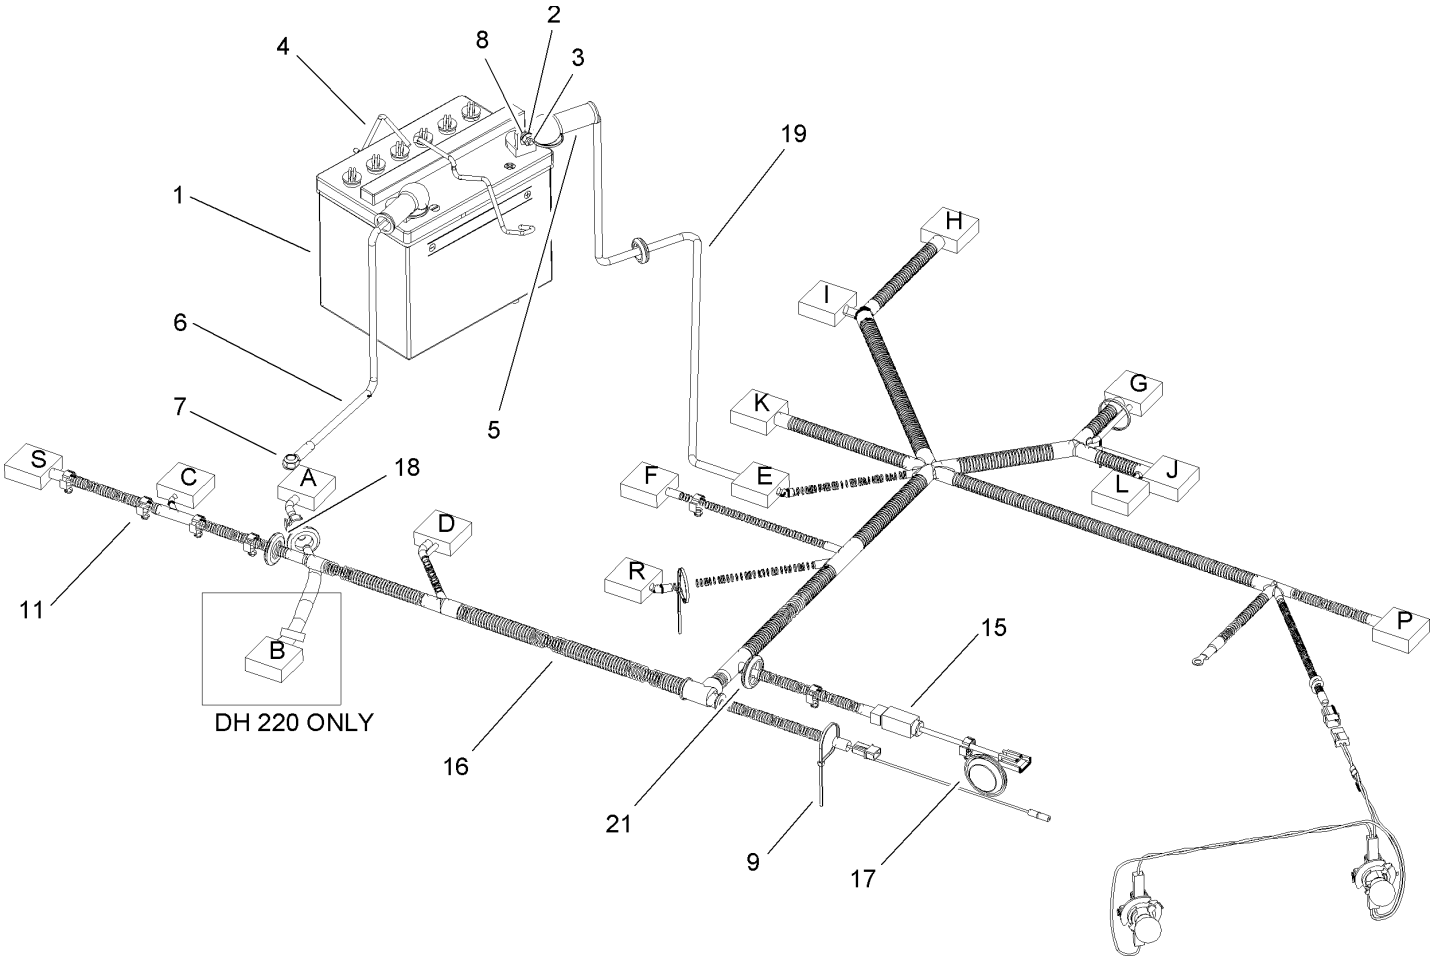



Harness Assembly


Ref	Part No.	Qty.	Description
1	104-2491	1	Battery
2	33013-00	2	Nut-Hex
3	33113-016	2	Screw-HH
4	114-3131	1	Clamp-Battery
5	104-3154	2	Boot-Rubber
6	110-8678	1	Cable-Battery, Negative
7	33024-00	1	Nut-Lock
8	33093-00	2	Washer-Flat
9	3334-945	3	Tie-Cable
11	104-3157	8	Clip-Snap
15	104-3160	1	Harness-Clutch
16	108-8754	1	Harness-Wiring
17	104-3163	1	Cap
18	104-3165	2	Bushing
19	110-8677	1	Cable-Battery, Positive
21	104-3168	1	Bushing

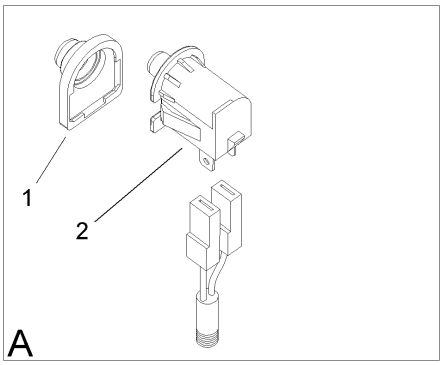

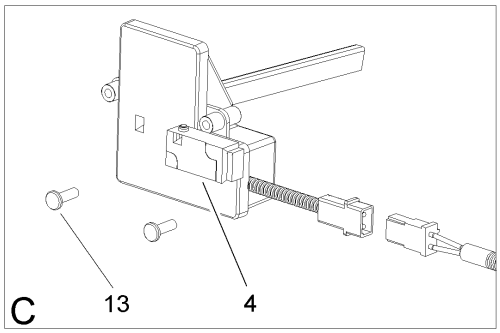

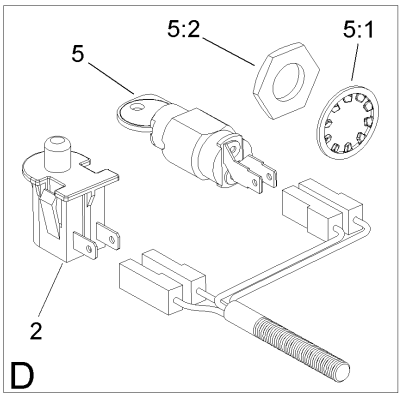


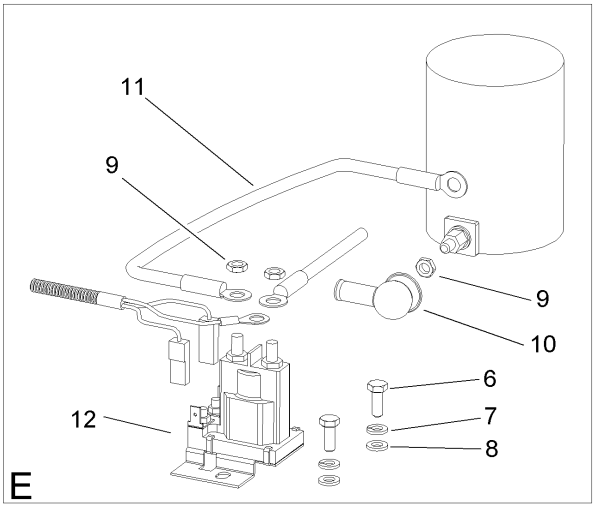


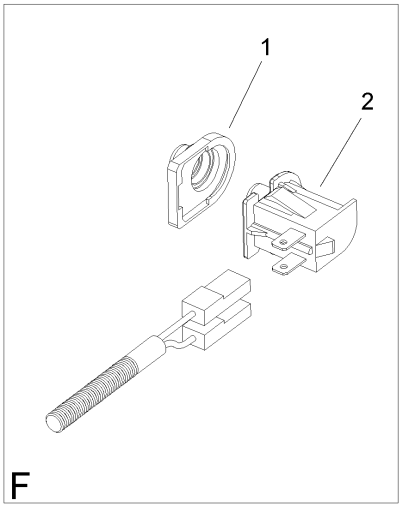



Electrical Switch No. 1 Assembly

Ref	Part No.	Qty.	Description
1	104-3178	2	Cover-Protective
2	104-3179	3	Switch-Delta
4	104-3185	1	Switch-Omron
5	46-5780	1	Starter Switch ASM
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	33113-012	2	Screw-HH
7	104-3186	2	Washer-Spring
8	33093-00	2	Washer-Flat
9	32128-32	3	Nut-HHF
10	104-3187	1	Boot-Rubber
11	104-3188	1	Lead-Starter, Electric
12	47-1910	1	Solenoid
13	104-3349	2	Screw

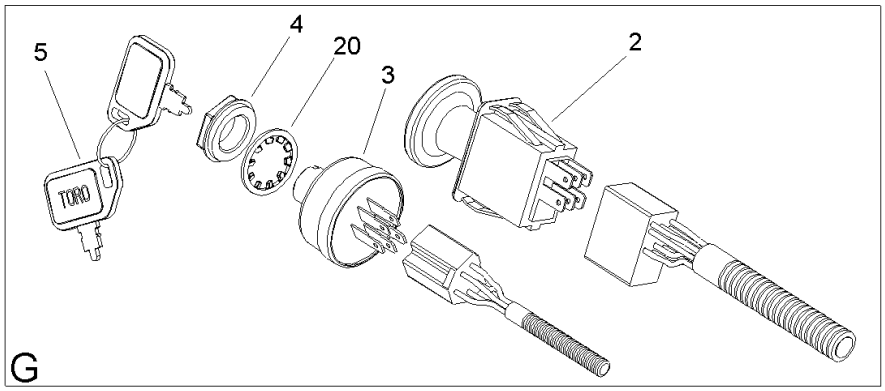

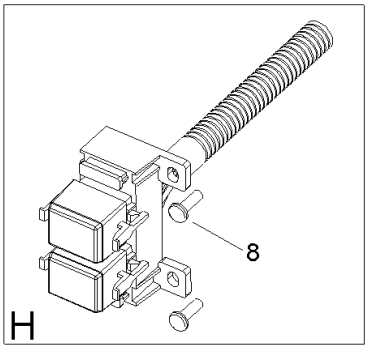


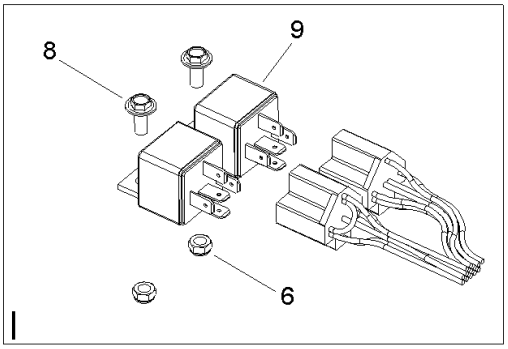


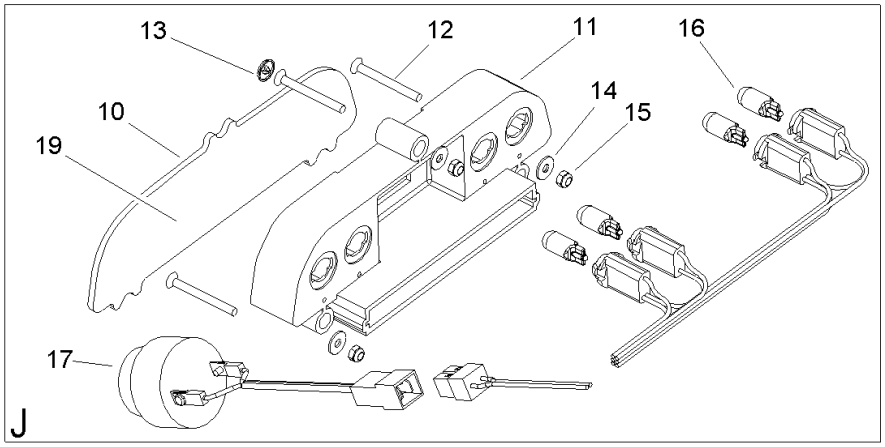



Electrical Switch No. 2 Assembly


Ref	Part No.	Qty.	Description
2	93-9998	1	Switch-PTO
3	92-6785	1	Switch-Ignition
4	218-461	1	Nut-HH
5	62-7770	2	Key-Ignition
6	87-5140	2	Nut-Lock
8	104-2978	4	Screw-Hex
9	104-3173	2	Relay
10	92-6707	1	Lens-Dash Lights
11	92-6732	1	Housing-Light, Indicator
12	104-3191	3	Screw
13	104-3174	3	Screw-Cap
14	104-3175	3	Washer
15	104-2985	3	Nut-Hex
16	104-3176	3	Bulb
17	104-3177	1	Buzzer
19	107-2220	1	Decal-Dash
20	3254-5	1	Washer-Tooth

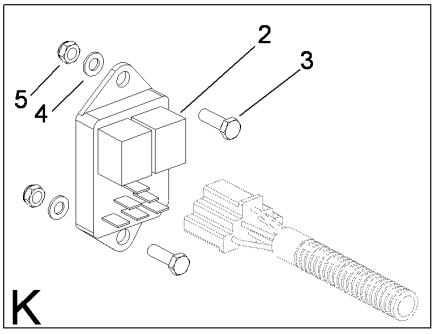

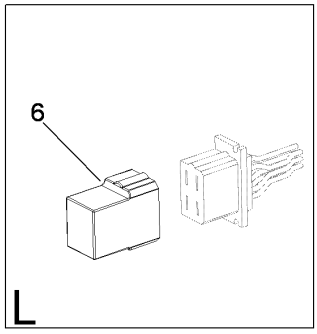

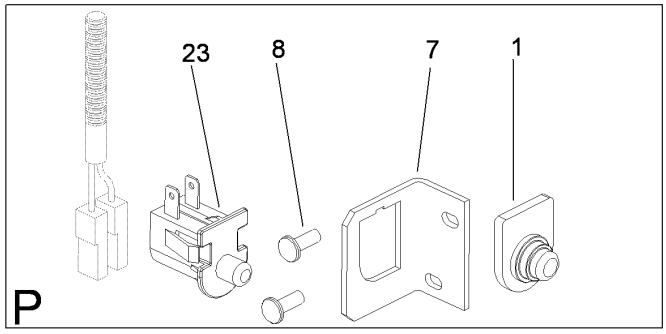


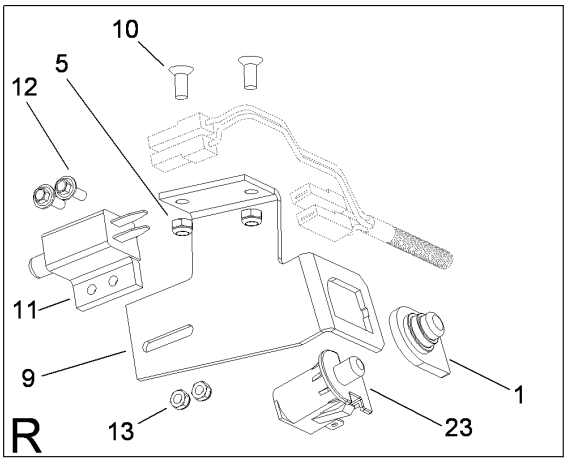

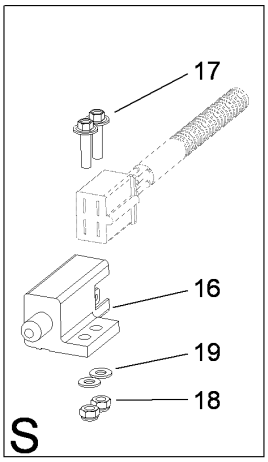

Electrical Switch No. 3 Assembly


Ref	Part No.	Qty.	Description
1	104-3178	1	Cover-Protective
2	99-3701	1	Module-Clutch
3	60-6910	2	Screw
4	52-6430	2	Washer
5	87-5140	4	Nut-Lock
6	104-3169	1	Circuit-Memory
7	107-8954	1	Holder-Switch
8	104-3190	2	Screw
9	107-8955	1	Holder-Switch
10	104-2980	2	Screw
11	95-1653	1	Switch-Pole, Single
12	104-2983	2	Screw
13	104-2985	2	Nut-Hex
16	104-3330	1	Switch-Delta
17	104-3331	2	Bolt
18	46-0430	2	Nut-Lock
19	52-6430	2	Washer
23	104-3180	1	Switch-Delta

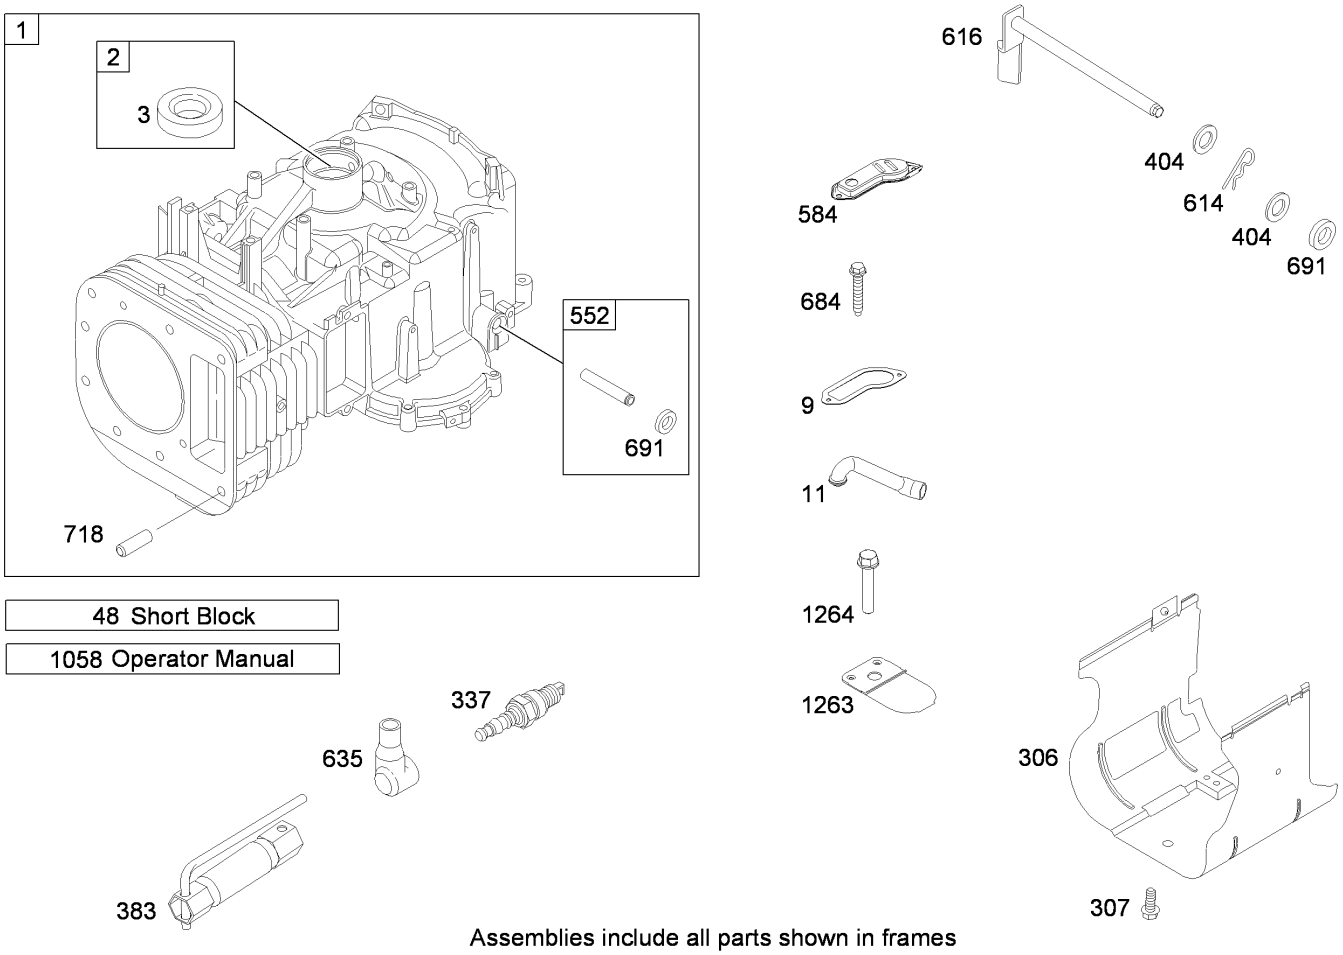

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❷1	793987	1	Cylinder ASM
❷2	399265	1	Bushing And Seal Kit
❷❸3	391086s	1	Seal-Oil (Magneto Side)
❷❸9	697109	1	Gasket-Breather
❷11	697113	1	Tube-Breather
❷48	697761	1	Short Block
❷306	697107	1	Shield-Cylinder
❷307	691003	1	Screw (Cylinder Shield)
❷337	691043	1	Spark Plug
❷383	89838s	1	Wrench-Spark Plug
❷404	691691	1	Washer (Governor Crank)
❷552	697144	1	Bushing-Crank, Governor
❷584	697112	1	Cover-Passage, Breather
❷614	691620	1	Pin-Cotter
❷616	692012	1	Crank-Governor
❷635	691909	1	Boot-Spark Plug
❷684	697157	1	Screw (Breather Passage Cover)
❷❸691	692407	1	Seal-Shaft, Governor
❷718	690959	1	Pin-Locating
❷1058	MS5935	1	Manual-Operator
❷1263	697124	1	Reed-Breather
❷1264	697104	1	Screw (Breather Reed)

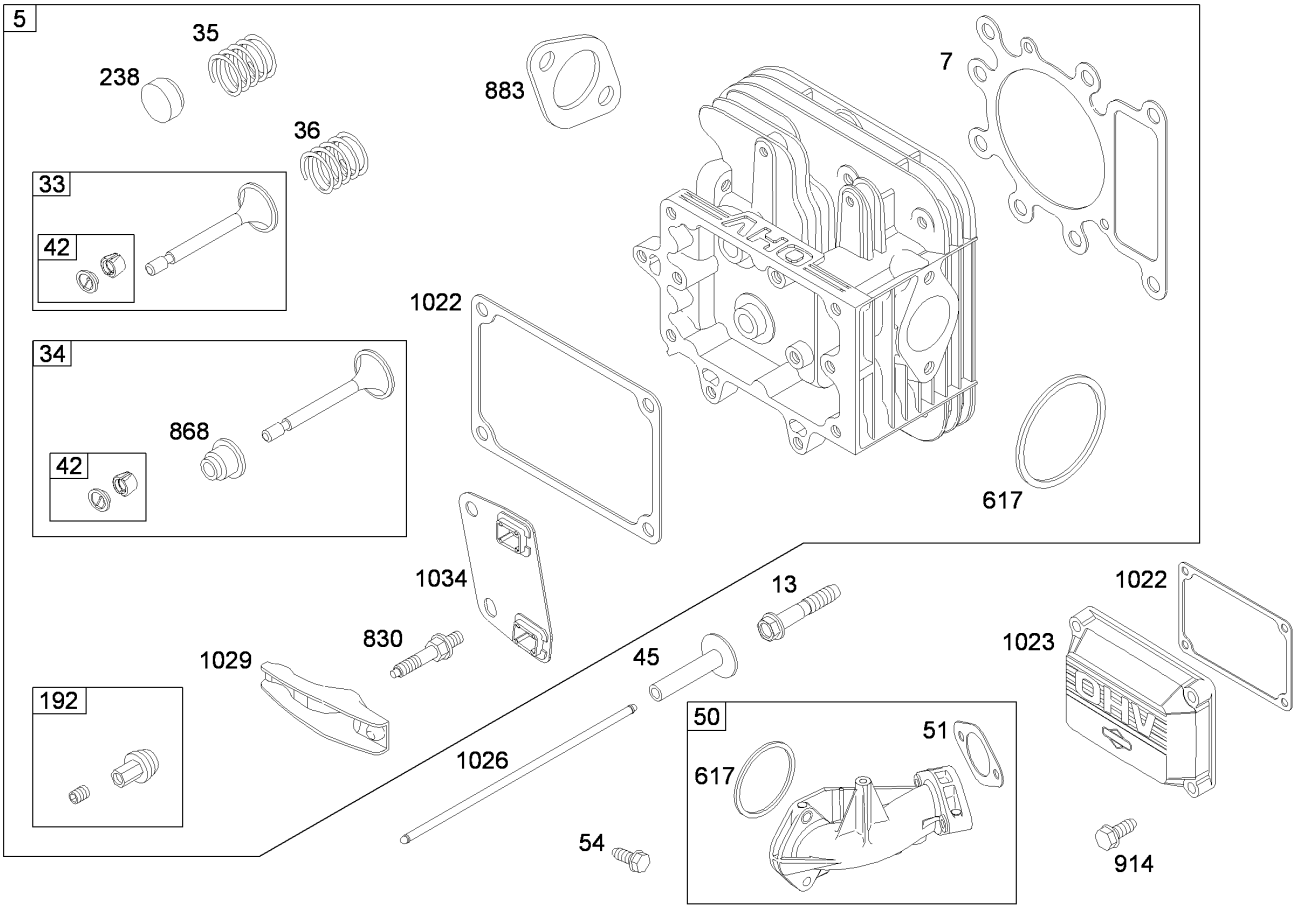


Assemblies include all parts shown in frames

Cylinder Head Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❷5	793989	1	Head-Cylinder
❷❸7	699168	1	Gasket-Head, Cylinder
❷13	793988	1	Screw (Cylinder Head Gasket)
❷33	791934	1	Valve-Exhaust
❷34	791935	1	Valve-Intake
❷35	691279	1	Spring-Valve (Intake)
❷36	691279	1	Spring-Valve (Exhaust)
❷42	499586	1	Keeper-Valve
❷45	690564	1	Tappet-Valve
❷50	690193	1	Manifold-Intake
❷❸51 ❹❼	692137	1	Gasket-Intake
❷54	691148	1	Screw (Intake Manifold)
❷192	691986	1	Adjustor-Arm, Rocker
❷238	691843	1	Cap-Valve
❷❸617 ❼	692138	1	Seal-O Ring (Intake Manifold)
❷830	691095	1	Stud-Arm, Rocker
❷❸868 ❺	690968	1	Seal-Valve
❷883	692236	1	Gasket-Exhaust
❷914	691108	1	Screw (Rocker Cover)
❷❸1022 ❺	272475s	1	Gasket-Cover, Rocker
❷1023	791079	1	Cover-Rocker


Ref	Part No.	Qty.	Description
❷1026	692003	1	Rod-Push (Intake)
❷1026	692011	1	Rod-Push (Exhaust)
❷1029	691751	1	Arm-Rocker
❷1034	690822	1	Guide-Rod, Push

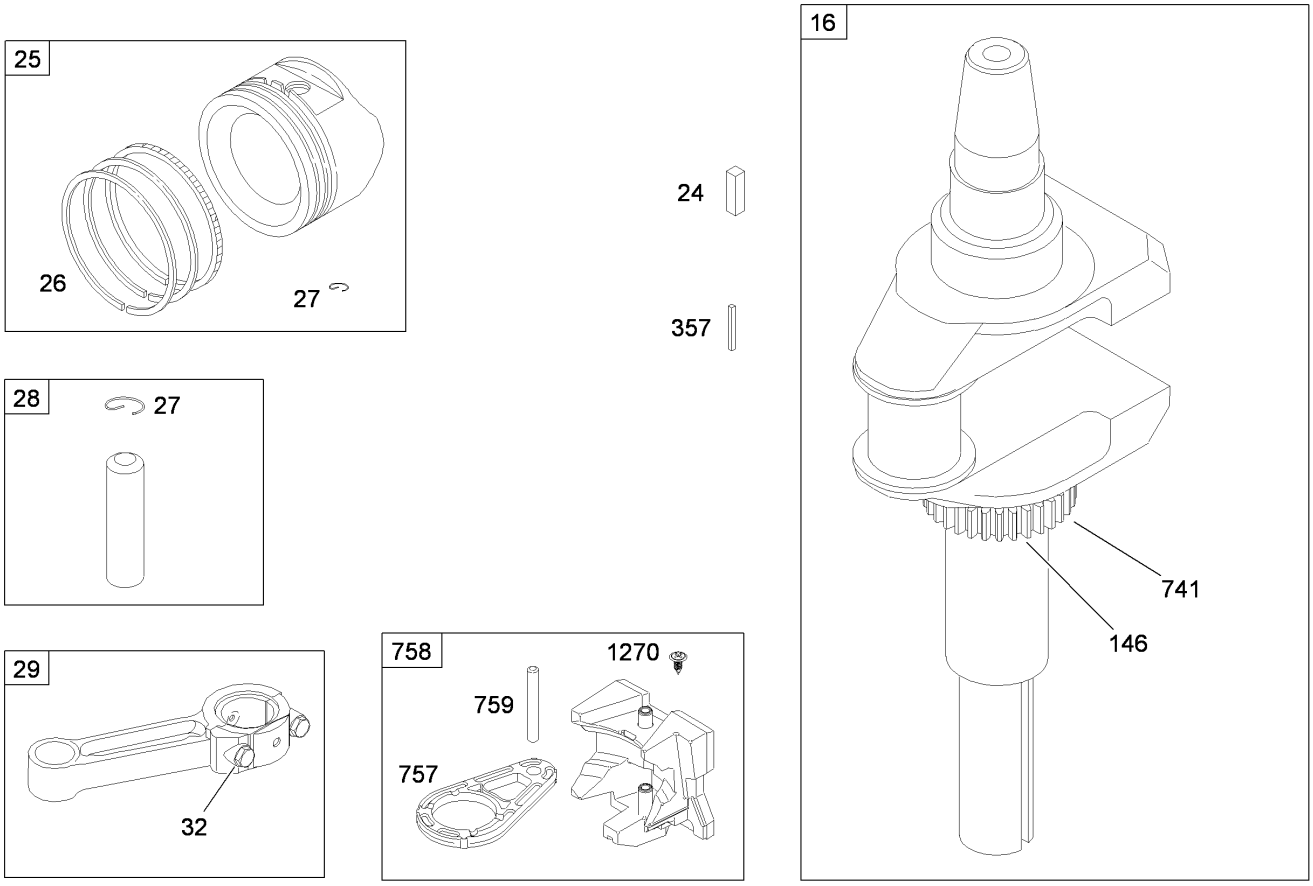

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton Model 31A607-0117-E1


Ref	Part No.	Qty.	Description
❷16	697127	1	Crankshaft
❷24	222698s	1	Key-Flywheel
❷25	792507	1	Piston ASM (STD)
❷25	792648	1	Piston ASM (.020 O S)
❷26	792649	1	Ring Set (STD)
❷26	791947	1	Ring Set (.020 O S)
❷27	698469	1	Lock-Pin, Piston
❷28	697099	1	Pin-Piston (STD)
❷29	791631	1	Ring Set (STD)
❷32	791118	1	Screw (Connecting Rod)
❷146	691639	1	Key-Timing
❷357	691483	1	Key–Pulley, Drive
❷741	697128	1	Gear-Timing
❷757	793242	1	Link-Counterweight
❷758	697134	1	Counterweight
❷759	697392	1	Pin-Counterweight
❷1270	793243	1	Plug-Counterweight, A V S

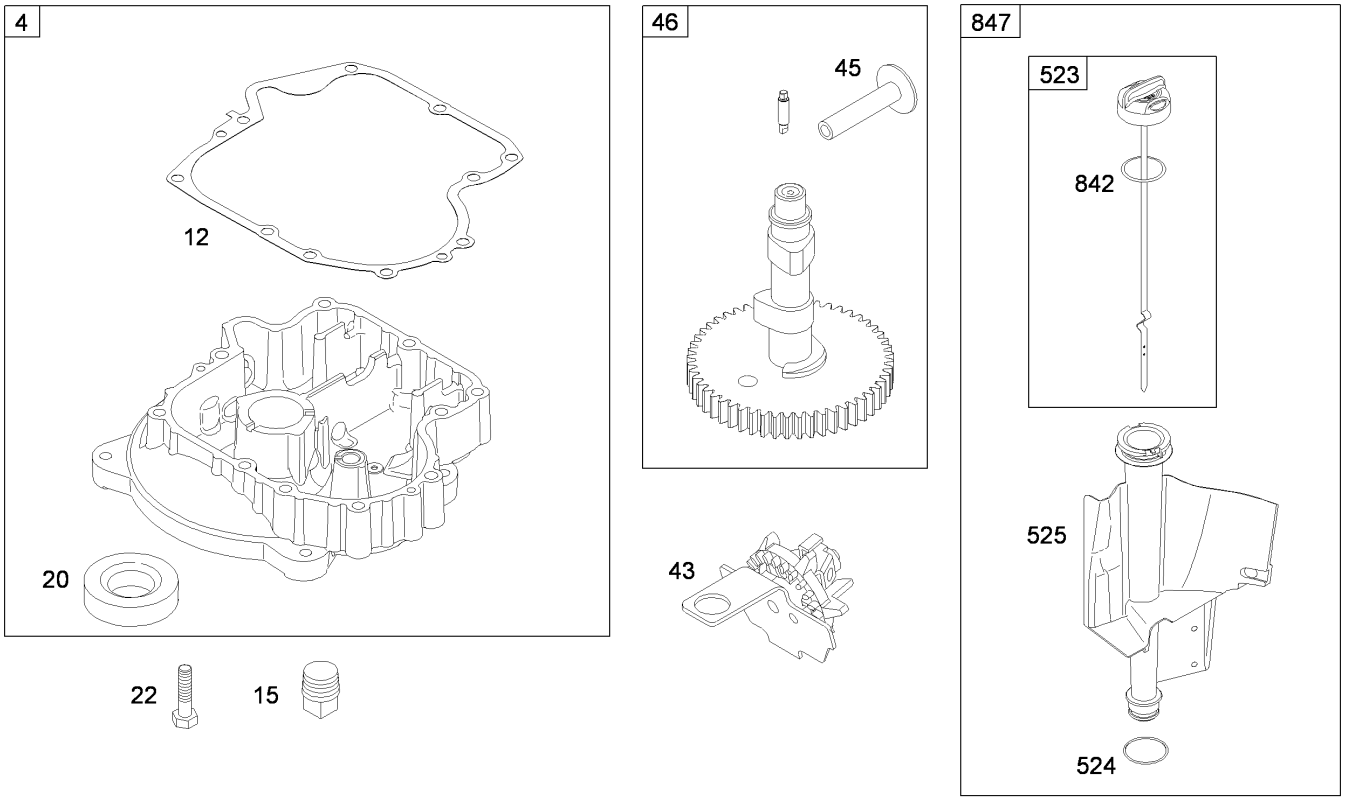

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❷4	697106	1	Sump-Engine
❷❸12	697110	1	Gasket-Crankcase
❷15	690946	1	Plug-Drain, Oil
❷❸20	791892	1	Seal-Oil (P-T-O Side)
❷22	692125	1	Screw (Engine Sump)
❷43	691968	1	Slinger-Governor, Oil
❷45	690564	1	Tappet-Valve
❷46	793583	1	Camshaft
❷523	699908	1	Dipstick
❷❸524	691032	1	Seal-O Ring (Dipstick Tube)
❷525	697085	1	Tube–Dipstick
❷❸842	691031	1	Seal-O Ring (Dipstick)
❷847	790443	1	Dipstick Tube ASM

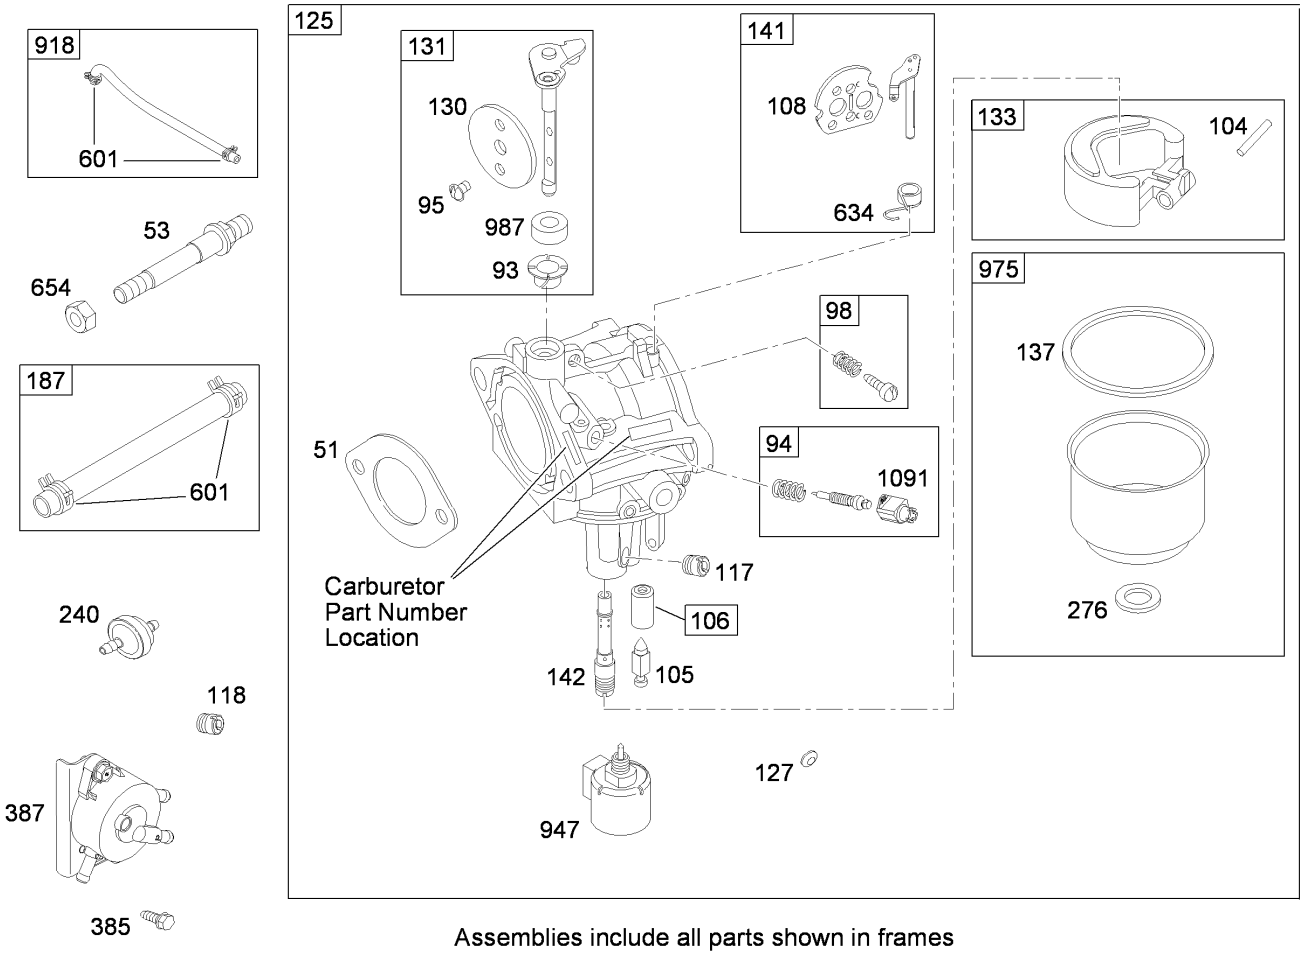


Assemblies include all parts shown in frames

Carburetor Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❼	692137	1	Gasket-Intake
❷53	690227	1	Stud (Carburetor)
❷❼93	690602	1	Bushing-Shaft, Throttle
❷94	794176	1	Idle Mixture Kit
❷❼95	691636	1	Screw (Throttle Valve)
❷98	495800	1	Idle Speed Kit
❷❼104	690525	1	Pin-Hinge, Carburetor Float
❷❼105	231855s	1	Valve-Float, Needle
❷❼106	691780	1	Seat–Inlet
❷108	692344	1	Valve-Choke
❷❼117	694352	1	Jet-Main (STD)
❷118	697228	1	Jet-Main (High Altitude)
❷125	793224	1	Carburetor
❷127	695005	1	Plug-Welch
❷130	691750	1	Valve-Throttle
❷131	494379	1	Throttle Shaft Kit
❷133	494381	1	Float-Carburetor
❷❹137 ❼	281165s	1	Gasket-Bowl, Float
❷141	495931	1	Choke Shaft Kit
❷❼142	697140	1	Nozzle-Carburetor
❷187	791805	1	Line-Fuel (Cut To Required Length)
❷240	691035	1	Filter-Fuel

Ref	Part No.	Qty.	Description
❷❹276 ❼	692255	1	Washer-Sealing
❷385	694476	1	Screw (Fuel Pump)
❷387	697090	1	Pump-Fuel (With Bracket)
❷601	791850	1	Clamp-Hose
❷❼634	690802	1	Spring And Seal ASM
❷654	690958	1	Nut (Carburetor)
❷918	791851	1	Line-Vacuum
❷947	694393	1	Solenoid-Fuel
❷975	495933	1	Bowl-Float
❷❼987	691326	1	Seal-Shaft, Throttle
❷1091	691333	1	Cap-Limiter

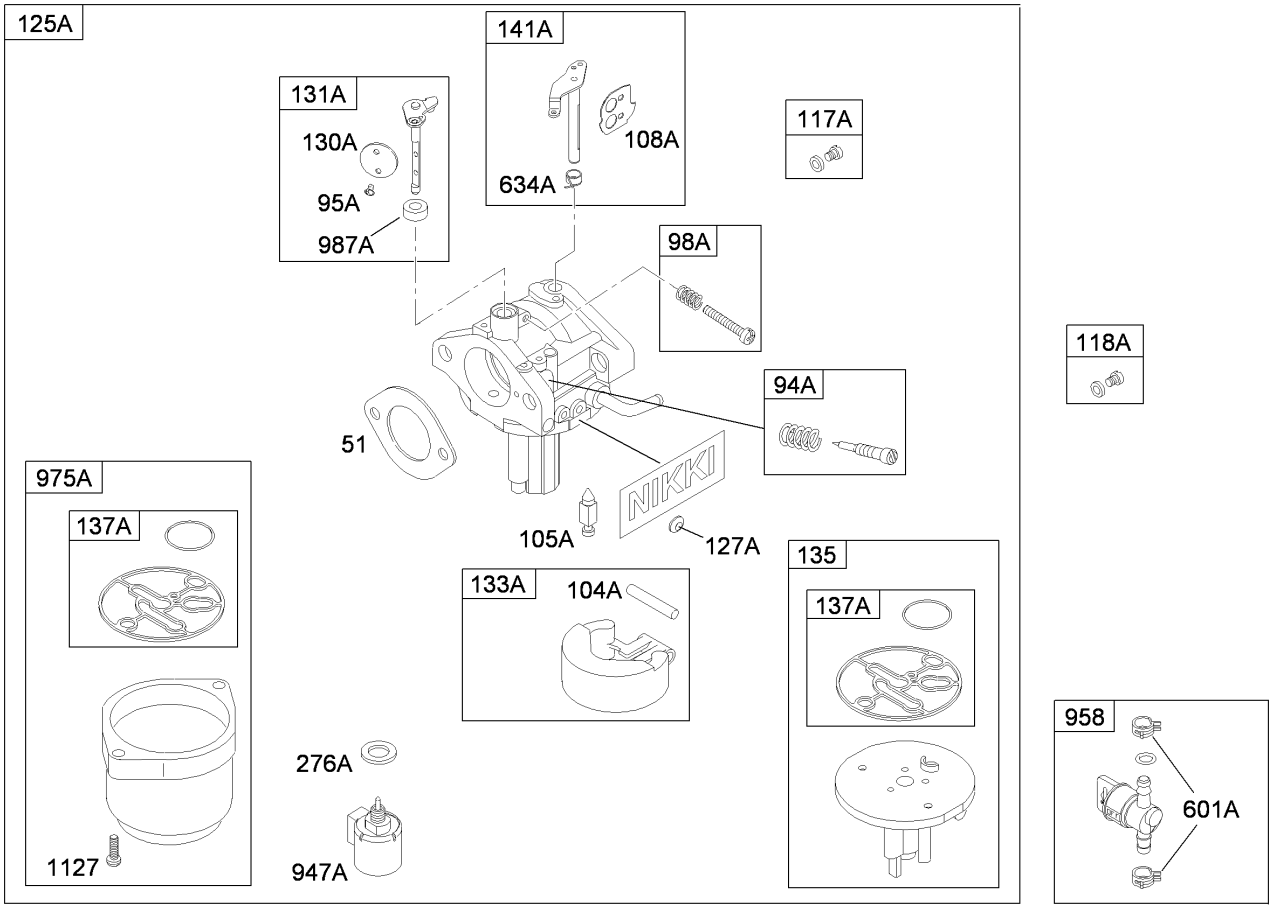


Assemblies include all parts shown in frames

Carburetor Assembly (Nikki)
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❼	692137	1	Gasket-Intake
❷94A	695425	1	Idle Mixture Kit
❷❼95A	690718	1	Screw
❷98A	695408	1	Idle Speed Kit
❷❼104A	694918	1	Pin-Hinge, Float
❷❼105A	696136	1	Valve-Float, Needle
❷108A	695419	1	Valve-Choke
❷❼117A	699457	1	Jet-Main (STD)
❷118A	699458	1	Jet-Main (High Altitude)
❶❷125A		1	Carburetor (Nikki) (For Service See Ref 125)
❷❼127A	690727	1	Plug-Welch
❷130A	699500	1	Valve-Throttle
❷131A	699501	1	Throttle Shaft Kit
❷133A	694914	1	Carburetor Float ASM
❷135	698780	1	Fuel Transfer Tube ASM
❷❼137A	698781	1	Gasket-Bowl, Float
❷141A	695420	1	Choke Shaft Kit
❷276A	695410	1	Washer-Sealing
❷601A	691038	1	Clamp-Hose
❷❼634A	698779	1	Spring And Seal ASM
❷947A	699915	1	Solenoid, Fuel
❷958	698183	1	Valve–Shut Off, Fuel

Ref	Part No.	Qty.	Description
❷975A	699502	1	Bowl-Float
❷❼987A	698777	1	Seal-Shaft, Throttle
❷1127	695407	1	Screw (Float Bowl)

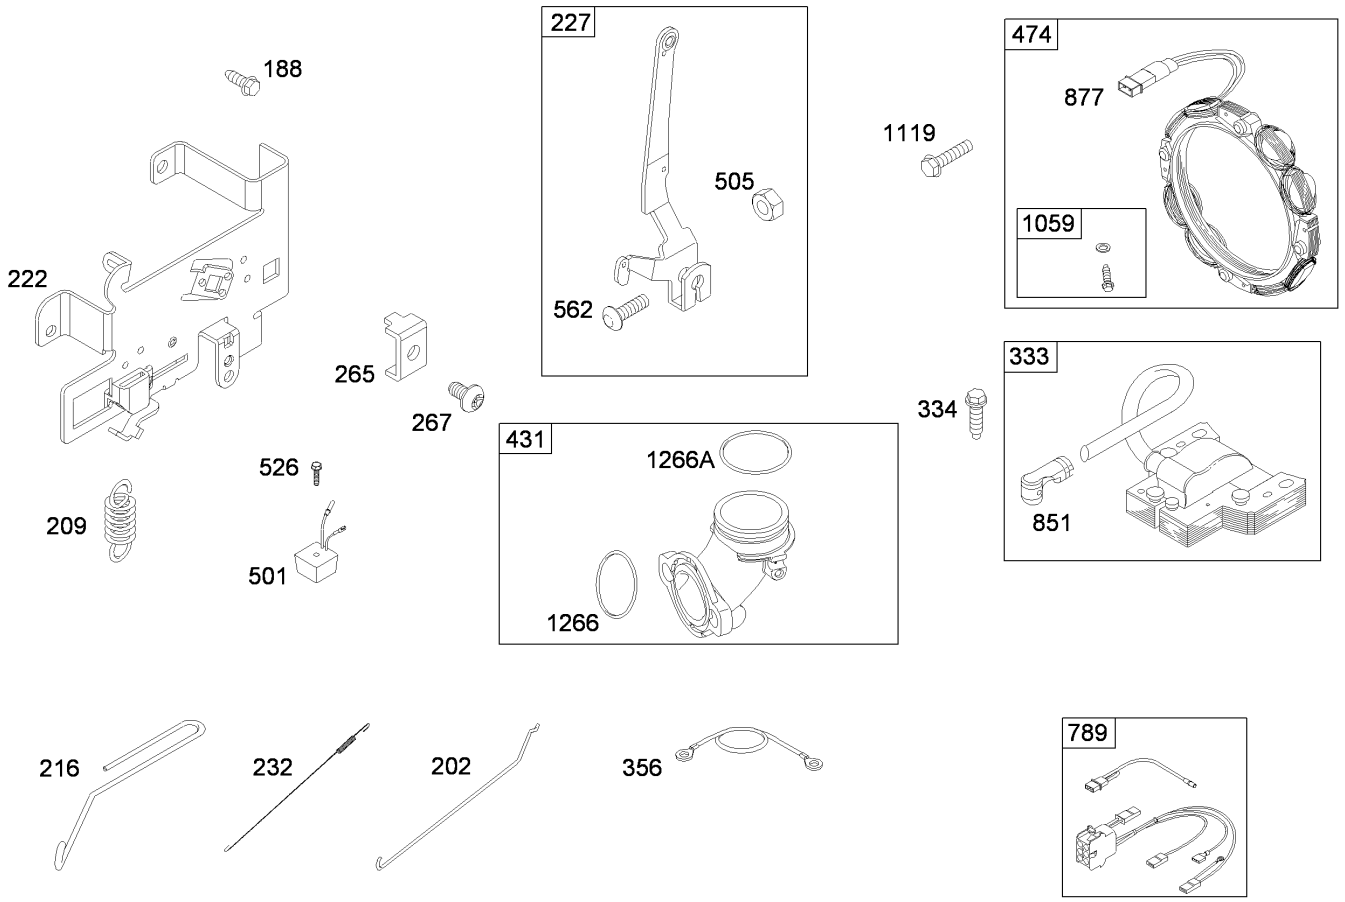


Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❷188	691693	1	Screw (Control Bracket)
❷202	691841	1	Link-Governor, Mechanical
❷209	691795	1	Spring–Governor
❷216	691840	1	Link-Choke
❷222	694042	1	Bracket-Control
❷227	691374	1	Lever-Control, Governor
❷232	691842	1	Spring-Link, Governor
❷265	691024	1	Clamp-Casing
❷267	690804	1	Screw (Casing Clamp)
❷333	492341	1	Armature-Magneto
❷334	691061	1	Screw (Magneto Armature)
❷356	697089	1	Stop-Wire
❷431	697122	1	Elbow-Intake (Magneto Armature)
❷474	696457	1	Alternator
❷501	691188	1	Regulator
❷505	691251	1	Nut (Governor Control Lever)
❷526	697088	1	Screw (Regulator)
❷562	691119	1	Bolt (Governor Control Lever)
❷789	698329	1	Harness–Wiring
❷851	493880s	1	Terminal-Spark Plug
❷877	393537	1	Connector-Wire, Tri Circuit
❷1059	698516	1	Screw And Washer Kit
❷1119	691183	1	Screw (Alternator)

Ref	Part No.	Qty.	Description
❷❸1266❼	691917	1	Seal-O Ring (Intake Elbow)
❷❼1266A	697123	1	Seal-O Ring (Intake Elbow)

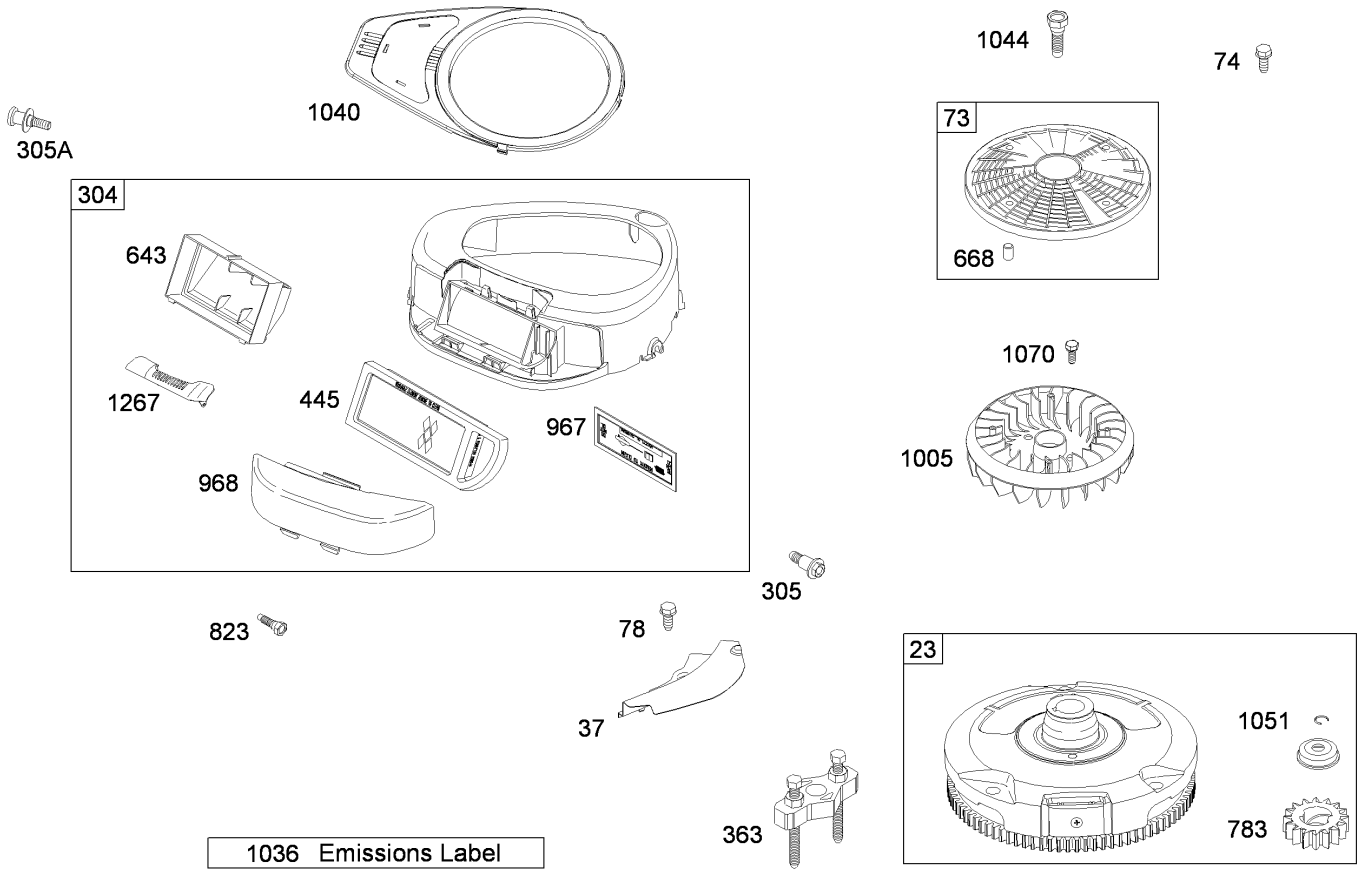


Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❷23	790835	1	Flywheel
❷37	697352	1	Guard-Flywheel
❷73	697133	1	Screen-Rotating
❷74	697897	1	Screw (Rotating Screen)
❷78	691003	1	Screw (Flywheel Guard)
❷304	698402	1	Housing–Blower
❷305	697102	1	Screw (Blower Housing)
❷305A	793376	1	Screw (Blower Housing)
❷363	19203	1	Puller-Flywheel
❷445	698083	1	Filter-Cartridge, Air Cleaner
❷643	698401	1	Retainer-Filter, Air
❷668	691500	1	Spacer
❷783	693713	1	Gear-Pinion
❷823	698941	1	Screw (Muffler Adapter)
❷967	697015	1	Filter-Cleaner, Pre
❷968	698403	1	Cover–Cleaner, Air
❷1005	699043	1	Fan-Flywheel
❶❷1036		1	Label-Emissions (Available From A Briggs And Stratton Authorized Service Dealer)
❷1040	698368	1	Plate-Trim
❷1044	698139	1	Screw (Crankshaft Extension)
❷1051	691265	1	Ring-Retaining
❷1070	690372	1	Screw (Flywheel Fan)


Ref	Part No.	Qty.	Description
❷1267	697419	1	Latch-Housing, Blower

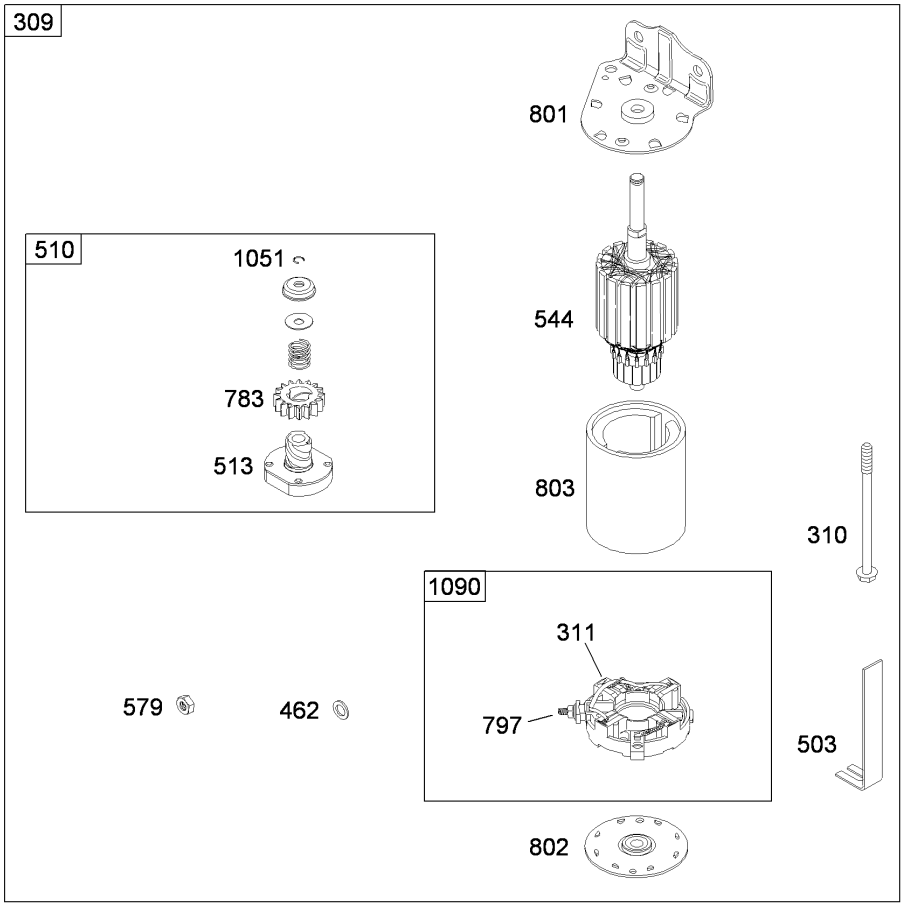


Assemblies include all parts shown in frames

Starter Assembly
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❷309	693551	1	Motor-Starter
❷310	690323	1	Bolt (Starter Motor)
❷311	497608	1	Brush Set
❷462	691261	1	Washer (Brush Retainer)
❷503	691532	1	Strap-Starter
❷510	693699	1	Drive-Starter
❷513	692024	1	Clutch-Drive
❶❷544		1	Armature-Starter (For Service Order 693551)
❷579	691029	1	Nut (Brush Retainer)
❷697	690372	1	Screw (Drive Cap)
❷729	691224	1	Clip-Wire
❷783	693713	1	Gear-Pinion
❷797	693167	1	Nut (Brush Retainer)
❷801	691283	1	Cap-Drive
❷802	691286	1	Cap-End
❶❷803		1	Housing-Starter (For Service Order 693551)
❷1051	691265	1	Ring-Retaining
❷1090	691293	1	Retainer-Brush

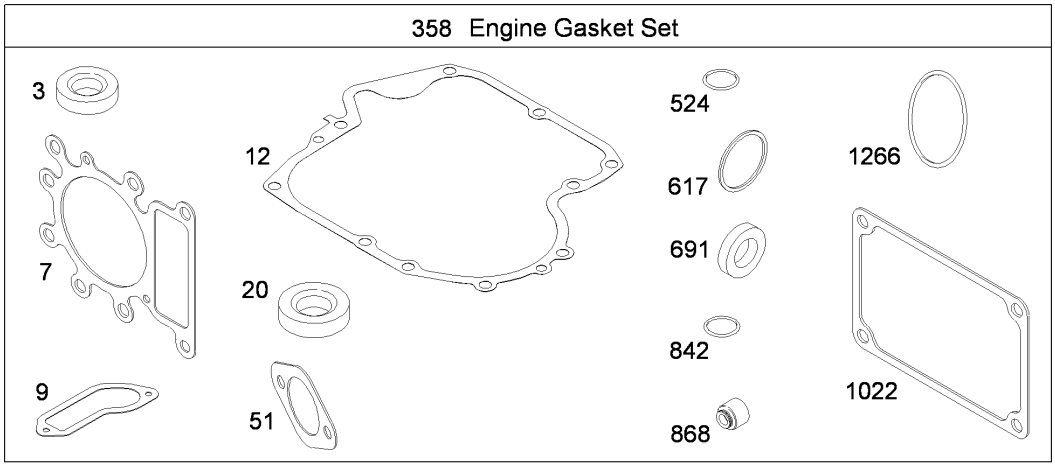

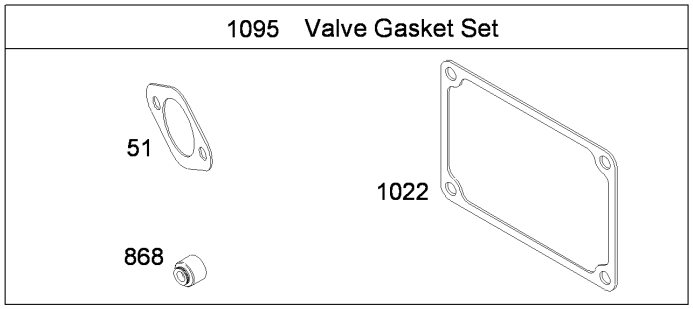



Assemblies include all parts shown in frames

Gasket Set

Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❷❸3	391086s	1	Seal-Oil (Magneto Side)
❷❸7	699168	1	Gasket-Head, Cylinder
❷❸9	697109	1	Gasket-Breather
❷❸12	697110	1	Gasket-Crankcase
❷❸20	791892	1	Seal-Oil (P T O Side)
❸❹51 ❺❼	692137	1	Gasket-Intake
❷358	794150	1	Engine Gasket Set
❷❸524	691032	1	Seal-O Ring (Dipstick Tube)
❷❸617 ❼	692138	1	Seal-O Ring (Intake Manifold)
❷❸691	692407	1	Seal-Shaft, Governor
❷❸842	691031	1	Seal-O Ring (Dipstick)
❷❸868 ❺	690968	1	Seal-Valve
❷❸1022 ❺	272475s	1	Gasket-Cover, Rocker
❷1095	691581	1	Valve Gasket Set
❷❸1266 ❼	691917	1	Seal-O Ring (Intake Elbow)

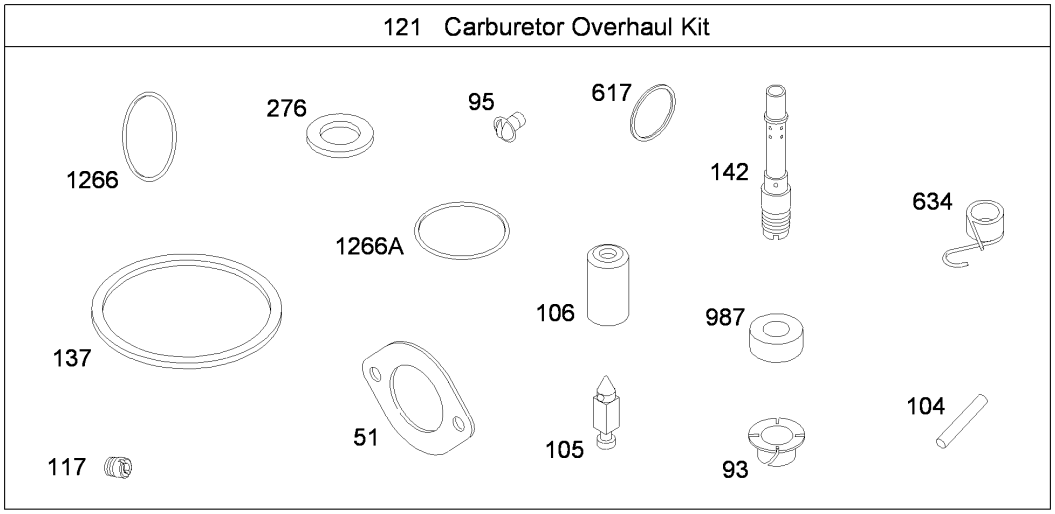


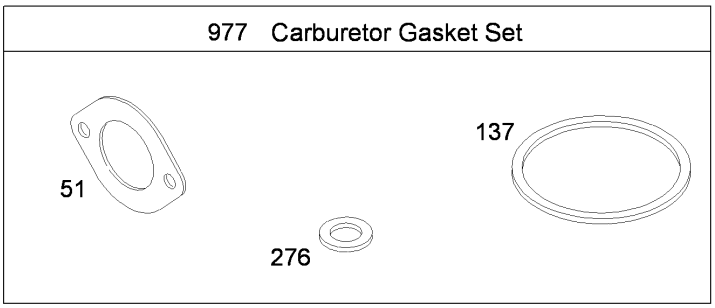

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❼	692137	1	Gasket-Intake
❷❼93	690602	1	Bushing-Shaft, Throttle
❷❼95	691636	1	Screw (Throttle Valve)
❷104	690525	1	Pin-Hinge, Carburetor Float
❷❼105	231855s	1	Valve-Float, Needle
❷❼106	690577	1	Seat-Inlet
❷❼117	694352	1	Jet-Main (STD)
❷121	697241	1	Carburetor Overhaul Kit
❷❹137 ❼	281165s	1	Gasket-Bowl, Float
❷❼142	697140	1	Nozzle-Carburetor
❷❹276 ❼	692255	1	Washer-Sealing
❷❺617 ❼	692138	1	Seal-O Ring (Intake Manifold)
❷❼634	690802	1	Spring And Seal ASM
❷977	690192	1	Carburetor Gasket Set
❷❼987	691326	1	Seal-Shaft, Throttle
❷❸1266 ❼	691917	1	Seal-O Ring (Intake Elbow)
❷❼1266A	697123	1	Seal-O Ring (Intake Elbow)

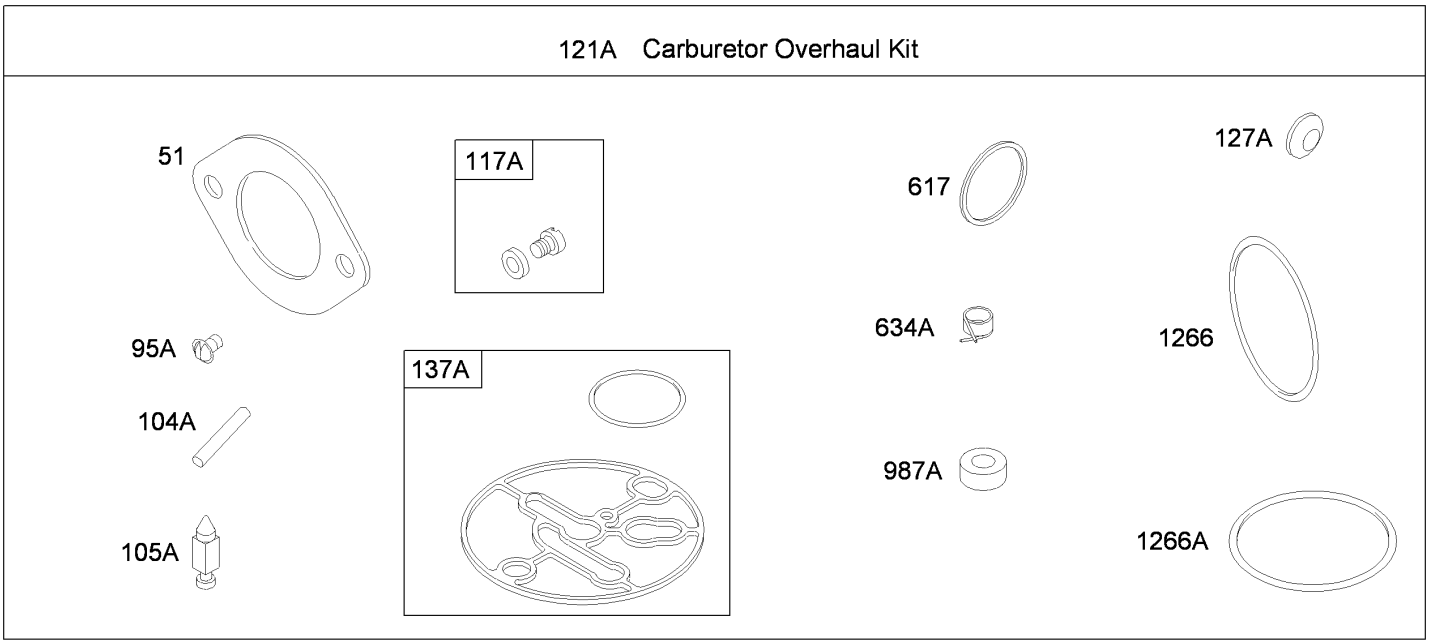

Assemblies include all parts shown in frames

Carburetor Overhaul Kit (Nikki)
Briggs and Stratton Model 31A607-0117-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❻	692137	1	Gasket-Intake
❷❻95A ❼	690718	1	Screw (Throttle Valve)
❷❻104A ❼	694914	1	Carburetor Float ASM
❷❻105A ❼	696136	1	Valve-Float, Needle
❷❻117A ❼	699457	1	Jet-Main (STD)
❷❻121A	699521	1	Carburetor Overhaul Kit
❷❻127A ❼	690727	1	Plug-Welch
❷❹137A ❻❼	698781	1	Gasket-Bowl, Float
❷❸617 ❻❼	692138	1	Seal-O Ring (Intake Manifold)
❷❻634A ❼	698779	1	Spring And Seal ASM
❷❻987A ❼	698777	1	Seal-Shaft, Throttle
❷❸1266 ❻❼	691917	1	Seal-O Ring (Intake Elbow)
❷❻1266A ❼	697123	1	Seal-O Ring (Intake Elbow)

Attachments and Accessories

For 74573 - DH 200 Lawn Tractor

Product Name	Model/Part
Rear Discharge Kit	79471

NOTES

NOTES

NOTES


TORO®