FORM NO. 3316–927


TORO®

MODEL NO. 73420–4900001 & UP
MODEL NO. 73440–4900001 & UP

PARTS CATALOG


WHEEL HORSE®

416–8 Garden Tractor
416–8e Garden Tractor

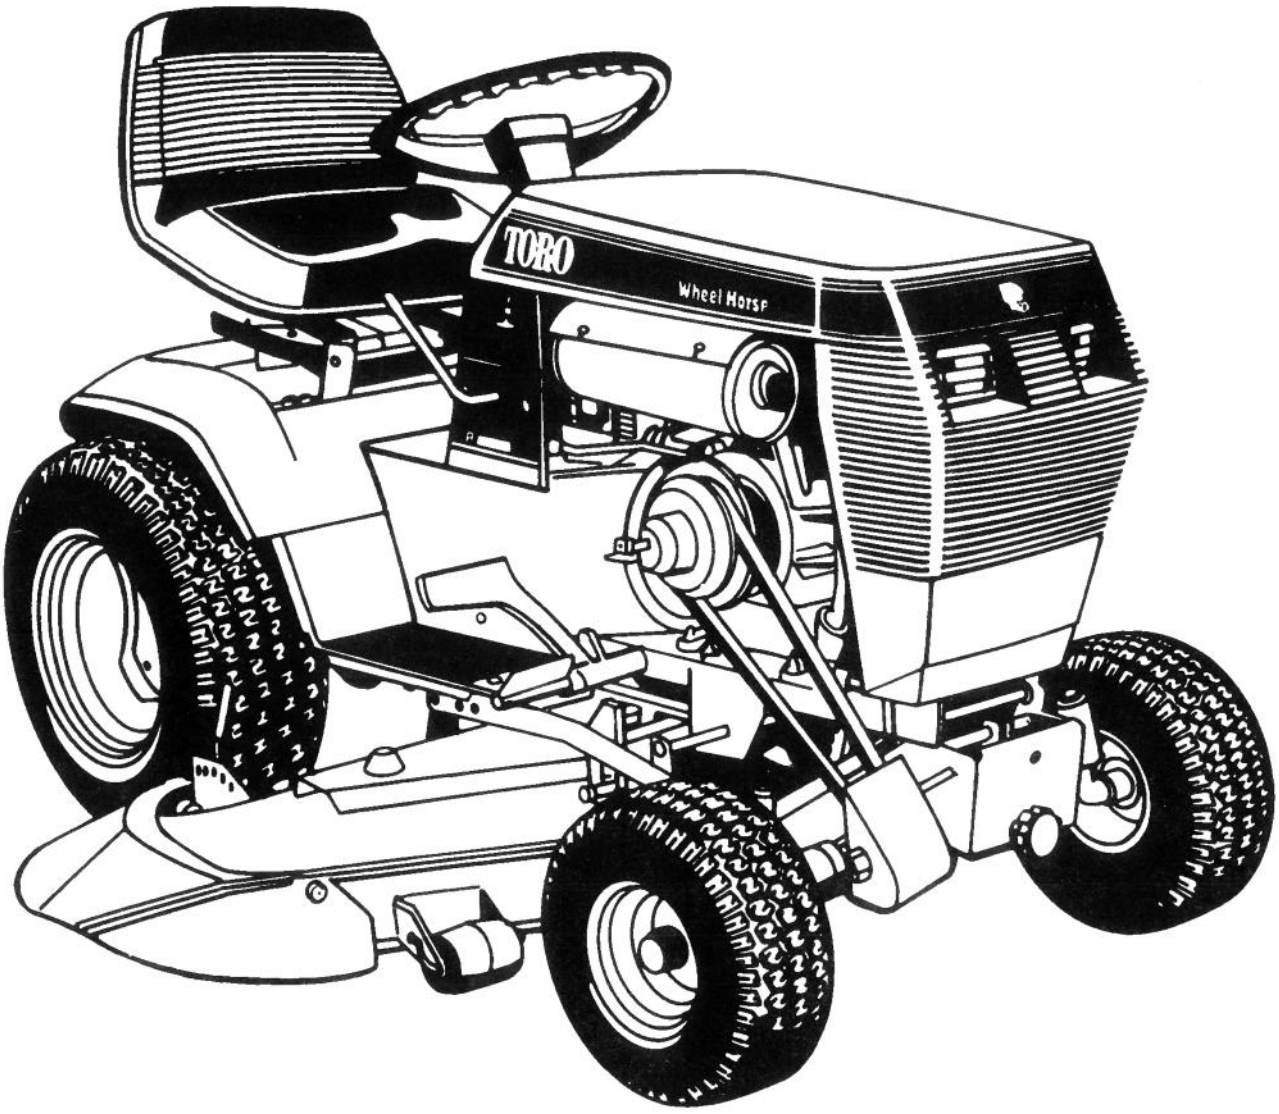

© The TORO Company –1994
All Rights Reserved

TPS

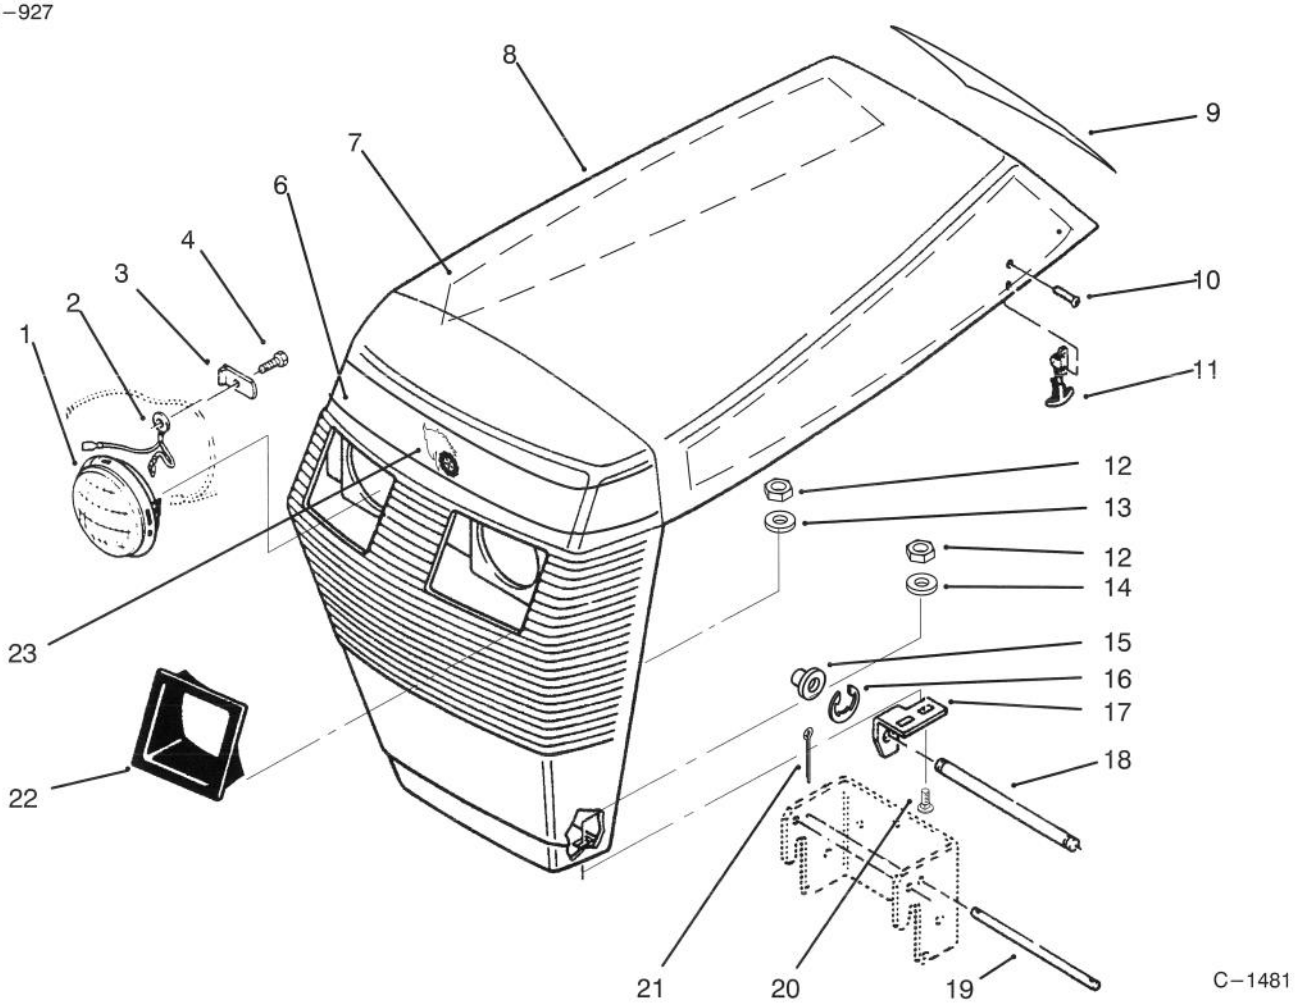


HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	102881	Headlight	2
2	108130	Wire – Headlight Ground	1
3	109459	Clamp	2
4	926671	Bolt	2
6	92–9826	Decal – Hood, Front	1
7	92–9825	Decal – Hood RH	1
*	92–9824	Decal – Hood LH	1
8	88–2782	Hood (Incl. Ref. # 9)	1
9	92–9837	Decal – Danger	1
10	117432	Rivet – Pop	4
11	117344	Handle Assembly	2
12	3296–42	Nut	4

Ref. No.	Part No.	Description	No. Used
13	3254–2	Washer – Intl. T	1
14	3256–22	Washer	3
15	5979	Bushing – Hood Pivot	2
16	105797	Ring – Retaining	2
17	116747	Bracket – LH	1
*	116746	Bracket – RH	1
18	116745	Rod – Pivot	1
19	101850	Rod – Hood Stop	1
20	3229–25	Bolt – Carriage	4
21	3272–1	Pin – Cotter	2
22	109495	Retainer – Headlight LH	1
*	109494	Retainer – Headlight RH	1
23	92–9836	Decal – Logo	1


*Not Illustrated

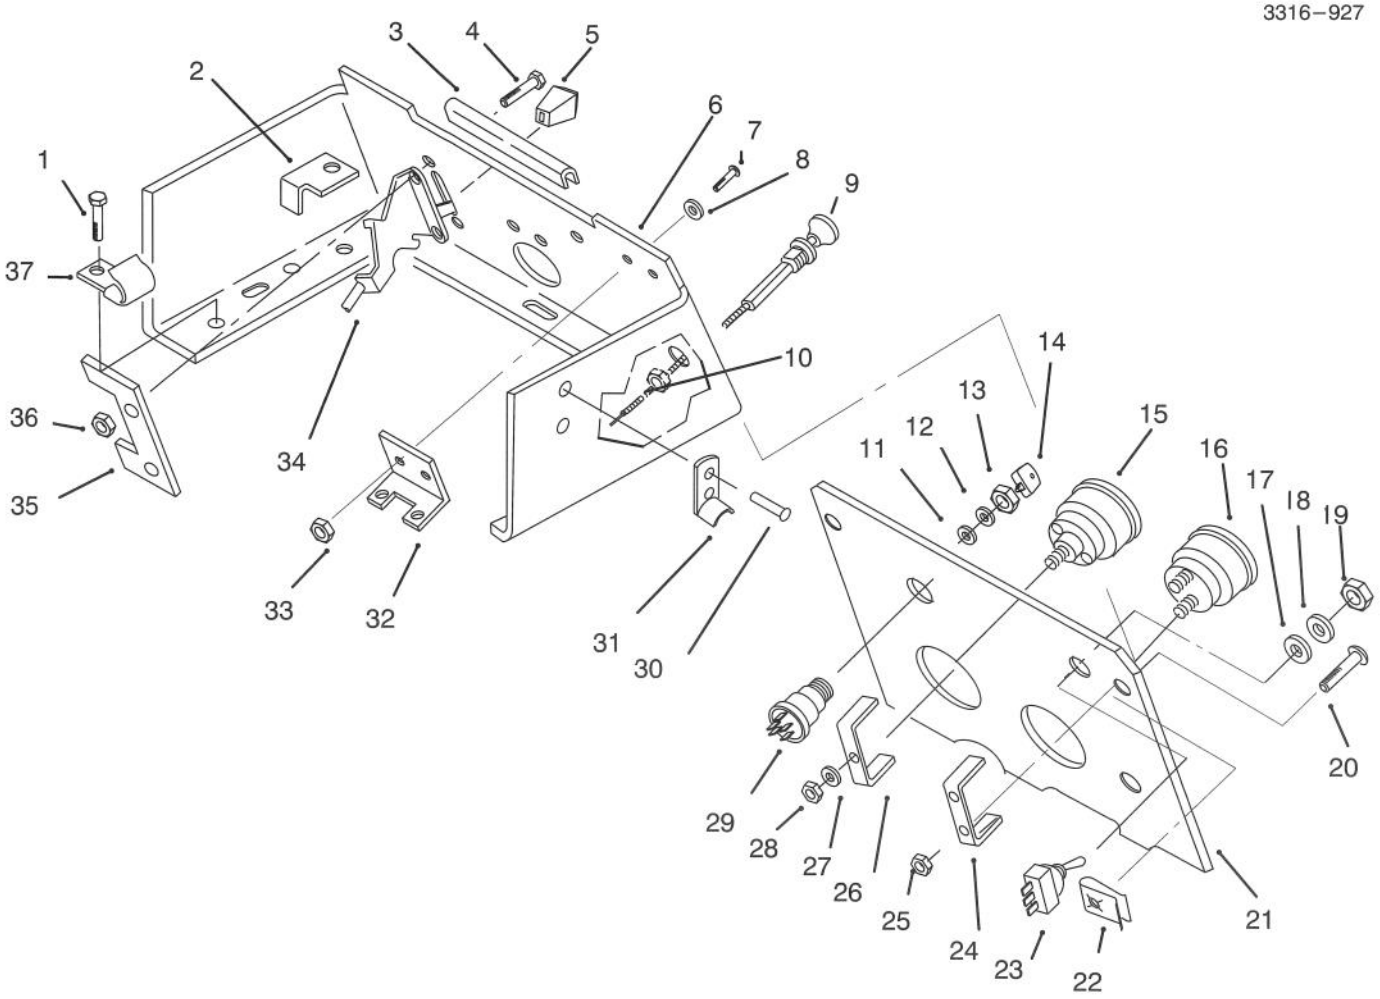

CONTROL PANEL

Ref. No.	Part No.	Description	No. Used
1	926694	Screw – Hex. Washer Hd.	3
2	112415	Stop – PTO	1
3	111757	Edging – Console	1
4	910792	Screw	6
5	66–0120	Knob – Control	1
6	111271	Console	1
7	910762	Screw	2
8	920150	Washer – Lock	2
9	112214	Control – Choke	1
10	109530	Nut	1
11	920262	Washer – Special	1
12	920160	Washer – IntL. T	1
13	101884	Nut – Special	1
14	62–7770	Key – Ignition, Padded	1
15	78–0020	Meter – Hour (Incl. Ref.# 27–28)	1
16	79–0060	Meter – Volt (Incl. Ref.# 24–25)	1
17	920259	Washer – Special	1
18	102950	Ring – Retaining	1
19	113179	Nut	1

Ref. No.	Part No.	Description	No. Used
20	910837	Screw	7
21	111034	Plate – Hood Stand	1
22	8830	Clip	2
23	102138	Switch – Light (Incl. Ref. #17–19)	1
24	78–0080	Clamp – Volt Meter	1
25	5924	Nut	2
26	78–3320	Clamp – Steel	1
27	3255–25	Washer – Lock	1
28	3217–27	Nut – Hex	1
29	116338	Switch – Ignition (Incl. Ref.#11–13)	1
30	117431	Rivet – Pop	4
31	117343	Latch – Hood	2
32	112506	Bracket – Indicator Lights	1
33	915960	Nut	2
34	115854	Control – Throttle	1
35	120590	Stop – Throttle	1
36	915740	Nut – Lock	2
37	111392	"J"Clip	1

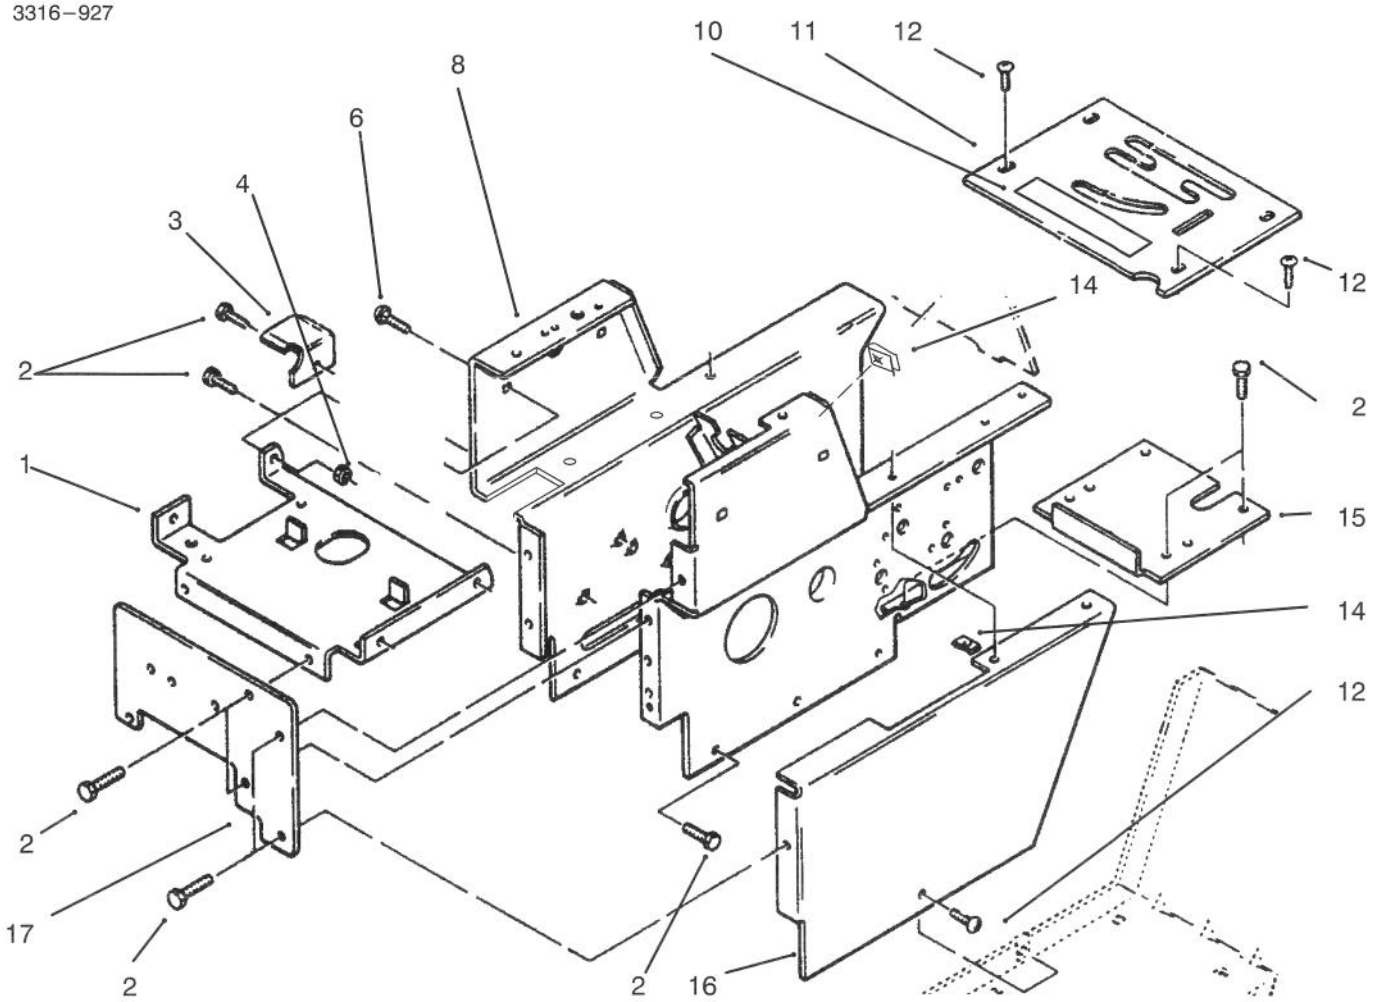


HOOD STAND AND SUPPORTS

Ref. No.	Part No.	Description	No. Used
1	78–3010	Bracket – Battery Support	1
2	926694	Screw – Hex. Hd..	13
3	88–2170	Bracket – Belt	1
4	9151126	Nut	4
6	117371	Bolt – Carriage	4
8	92–1525	Hoodstand	1
10	92–8946	Decal – Danger	1

Ref. No.	Part No.	Description	No. Used
11	92–6529	Plate – Shift Cover (Incl. Ref.#10)	1
12	910837	Screw	7
14	107069	Nut – Speed	7
15	106250	Cover – Dust	1
16	113935	Cover – Side, LH	1
17	78–3020	Plate – Front	


*Not Illustrated

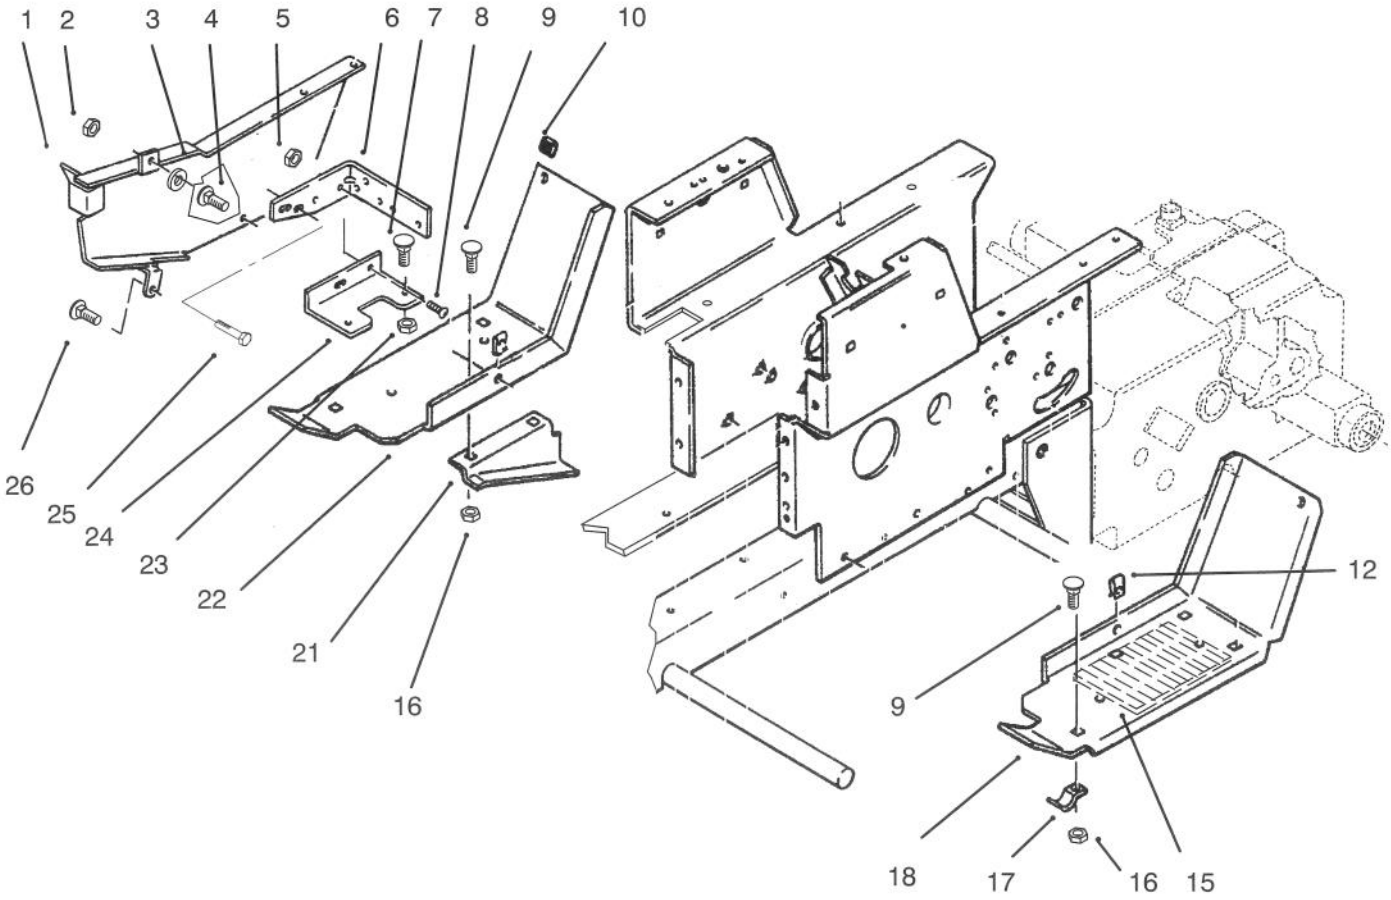

BELT GUARD & FOOTRESTS

Ref. No.	Part No.	Description	No. Used
1	107975	Guard – Belt	1
2	3296–29	Nut – Lock	7
3	108457	Nut – Push	1
4	910837	Bolt – Carriage	9
5	3296–42	Nut	1
6	109554	Bracket – Belt Guard	1
7	910794	Screw – Machine	2
8	321–4	Bolt	2
9	116000	Bolt – Carriage	6
10	518211	Bumper	2
12	107069	Clip	3

Ref. No.	Part No.	Description	No. Used
15	110636	Pad – Footrest	2
16	3296–29	Nut	11
17	7456	Clamp	4
18	106223	Footrest – LH	1
21	106352	Guard – Lower Belt	1
22	106222	Footrest – RH	1
23	915740	Nut	4
24	117331	Bracket – Fuse Holder	1
25	3230–1	Bolt	1
26	926694	Bolt	6

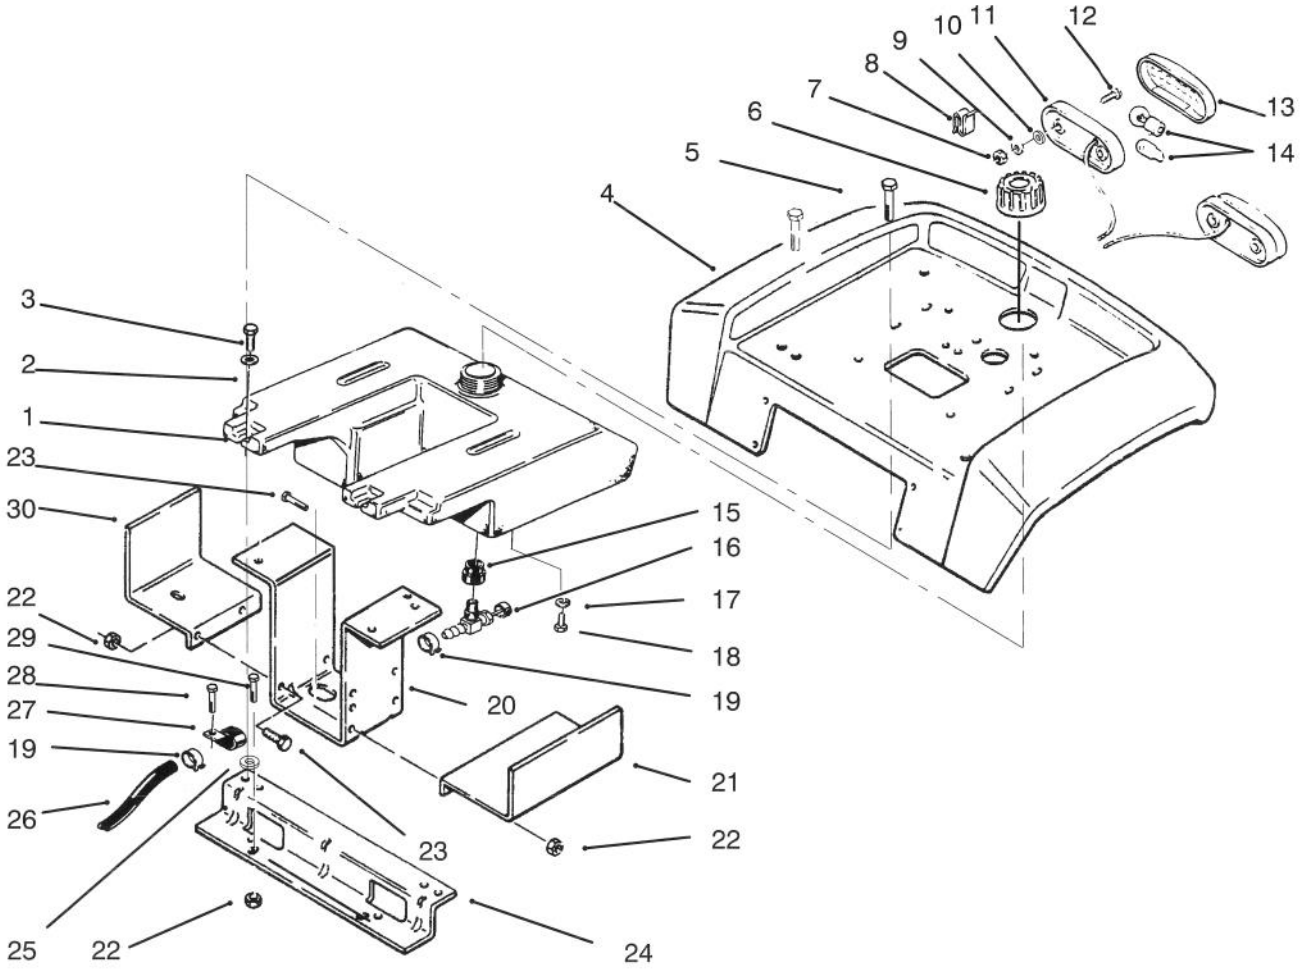


FENDER AND SUPPORT

Ref. No.	Part No.	Description	No. Used
1	106234	Tank – Fuel	1
2	3256–4	Washer	2
3	926697	Bolt	2
4	110960	Fender	1
5	926694	Bolt	2
6	55–3570	Fuel Cap	1
7	3296–27	Nut	4
8	3023	Clip – Small	1
9	3256–21	Washer	4
10	3254–1	Washer – Lock	4
11	105202	Base – Taillight, w/Bulb	2
12	910808	Screw	4
13	112564	Lens – Taillight	2
14	8043	Bulb – Light, Metal Base	2
*	109045	Bulb – Light, All Glass	2
15	104047	Bushing	1

Ref. No.	Part No.	Description	No. Used
16	104048	Valve – Fuel Shut–Off	1
17	3253–4	Washer – Lock	1
18	322–2	Bolt	5
19	2412–98	Clamp	2
20	79–4990	Bracket – Fender Support	1
21	108464	Support – Fuel Tank, LH	1
22	3296–29	Nut	6
23	322–3	Bolt	6
24	107951	Bracket – Fender Front	1
25	3256–23	Washer	2
26	92–9511	Line – Fuel 62"	1
27	8830	"J"Clip	1
28	3235–22	Screw – Hex. Hd..	1
29	322–5	Screw – Hex. Hd..	2
30	106236	Support – Fuel Tank, RH	1

*Not Illustrated

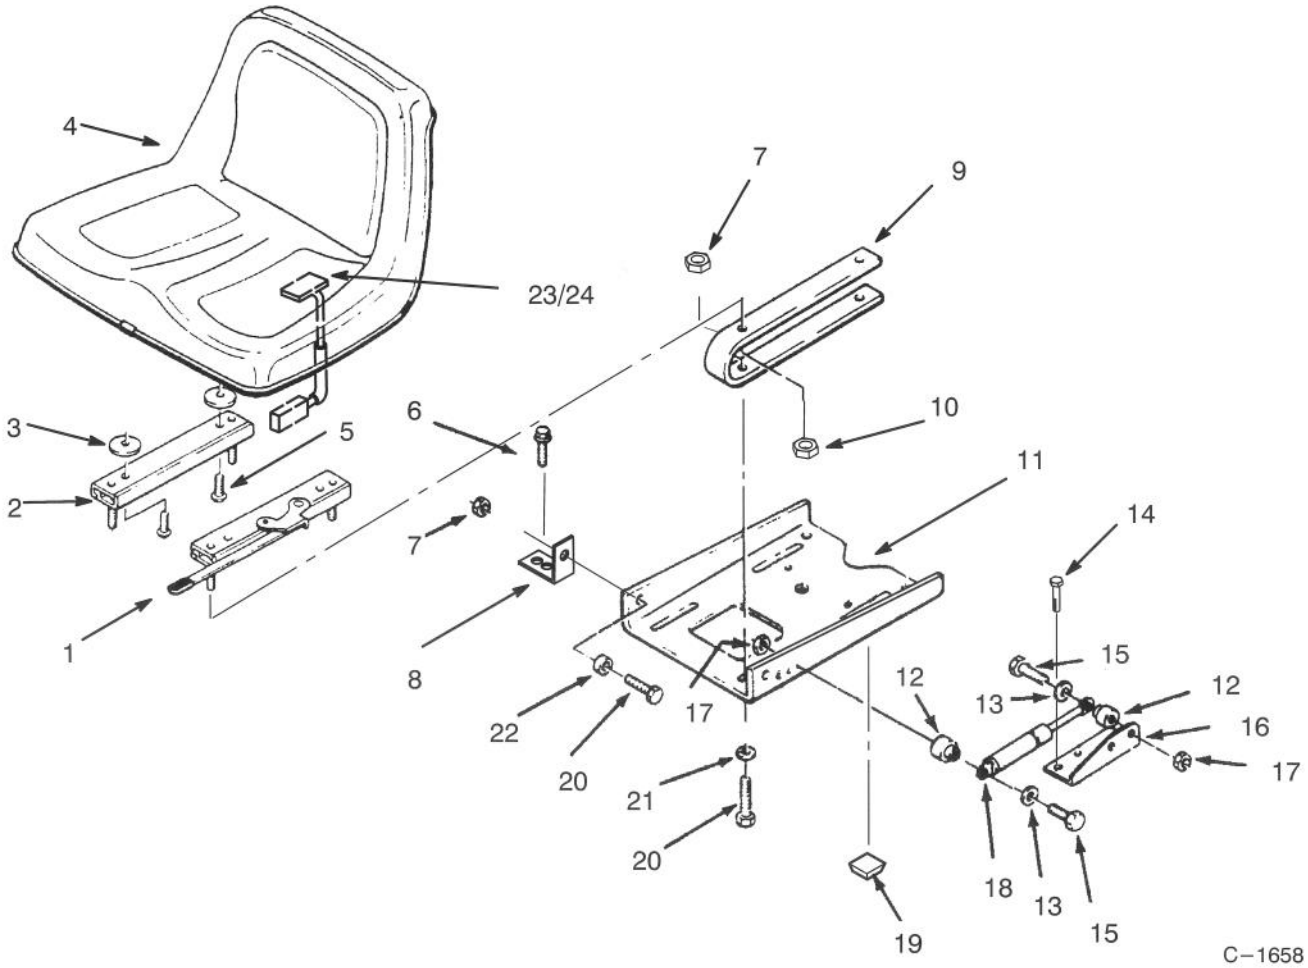


SEAT

Ref. No.	Part No.	Description	No. Used
1	114264	Adjuster – Seat, L.H.	1
2	114265	Slide – Seat, R.H.	1
3	109989	Spacer	4
4	79–3680	Seat	1
5	9108652	Bolt	4
6	913464	Bolt	4
7	3296–29	Nut	6
8	105524	Bracket – Pivot	2
9	114263	Spring – Seat	2
10	9151126	Nut	4
11	78–2990	Plate – Seat Pivot	1
12	114344	Spacer	2

Ref. No.	Part No.	Description	No. Used
13	3256–22	Washer	2
14	9266944	Bolt	2
15	321–8	Bolt	2
16	114345	Bracket	1
17	3296–42	Nut	2
18	114343	Spring – Gas	1
19	111071	Bumper	2
20	322–4	Bolt	6
21	3256–23	Washer	4
22	105503	Bushing	2
23	38–1420	Switch – Seat	1
24	3023	Clip – Speed	1

*Not Illustrated


FRONT AXLE AND STEERING

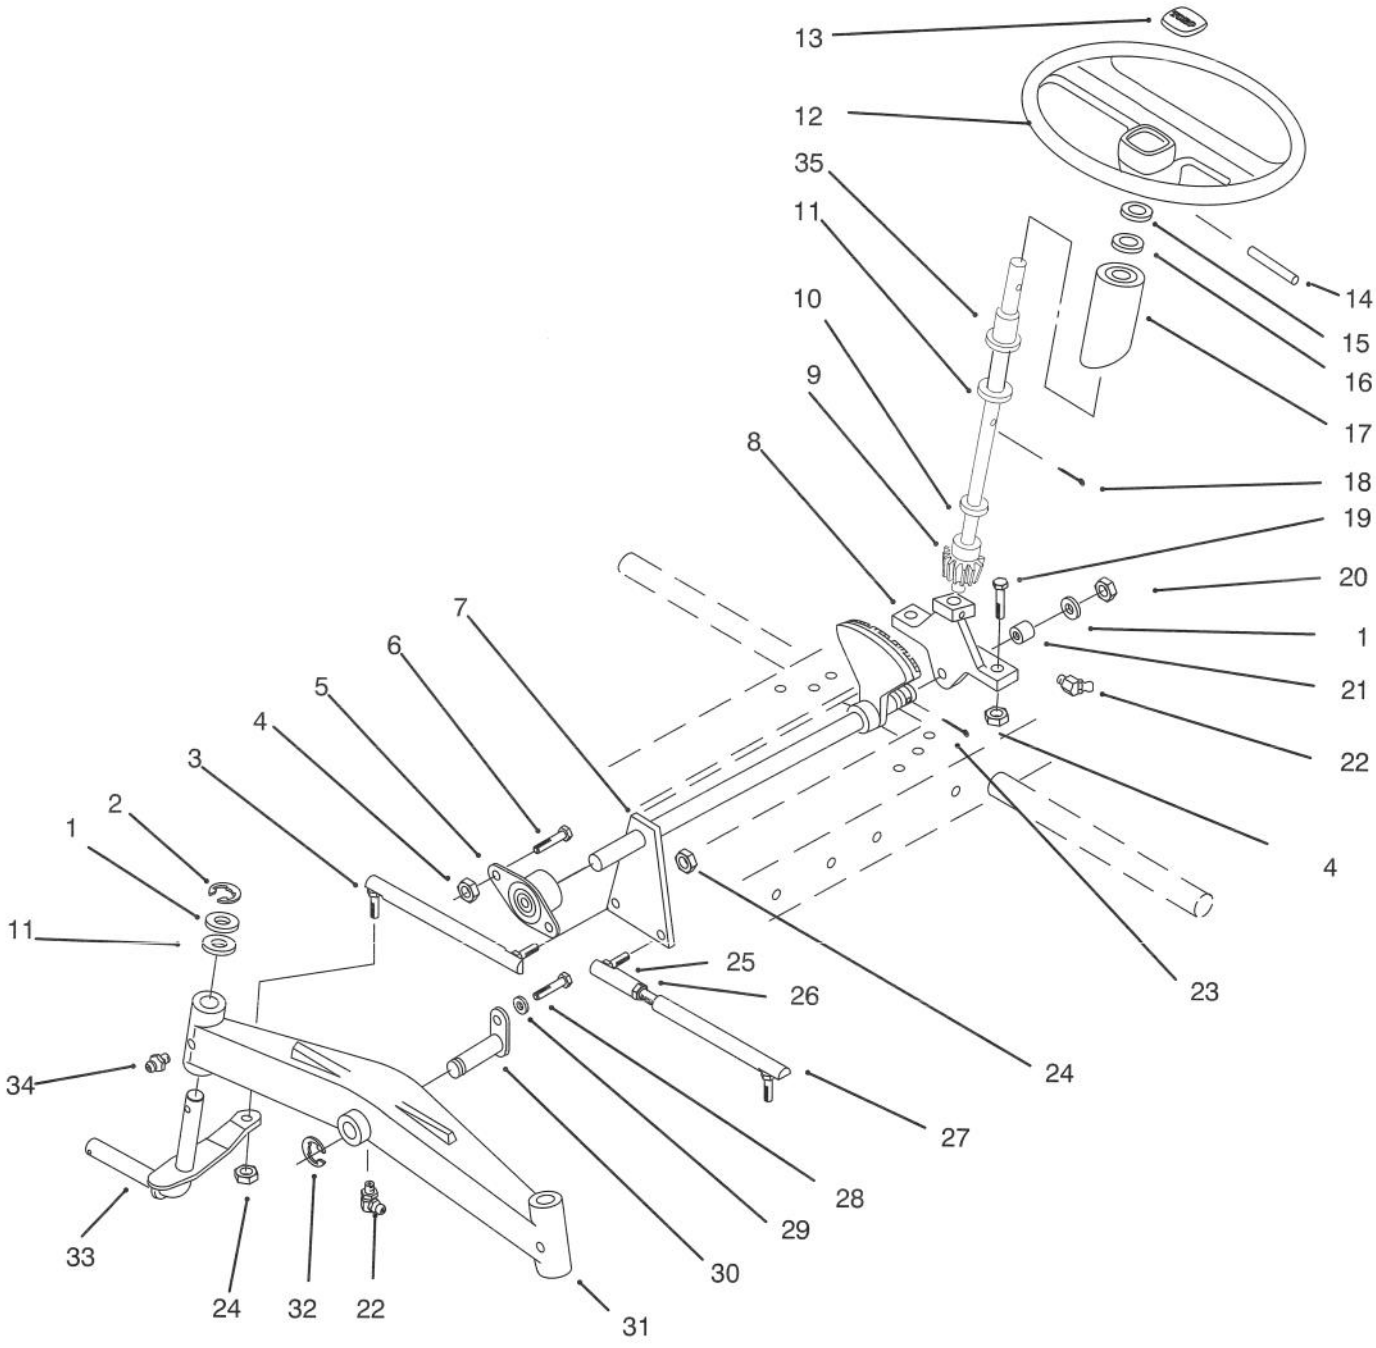

FRONT AXLE AND STEERING

Ref. No.	Part No.	Description	No. Used
1	1278	Washer – Shim	3
2	32120–93	Ring – Retaining	2
3	102592	Tie Rod Asm, RH	1
4	3296–39	Nut – Lock	4
5	6472	Bearing – Flanged	1
6	323–6	Bolt	2
7	78–2880	Shaft – Lower	1
8	88–2710	Support – Steering Shaft	1
9	92–4987	Shaft – Upper	1
10	237–69	"O"Ring	1
11	5210	Washer – Shim	A/R
12	76–1420	Steering Wheel (Incl. Ref. #13)	1
13	78–0370	Insert	1
14	32121–111	Pin – Spirol	1
15	7896	Washer – Bowed	1
16	109262	Washer – Special	2
17	113443	Tube – Steering	1
18	3272–21	Pin – Cotter	1
19	323–8	Bolt	2
20	32136–5	Nut – Slotted	1
21	6397	Bearing	1
22	1481	Fitting – Grease, 45°	2
23	3272–19	Pin – Cotter	1
24	3296–6	Nut	4
25	78–2920	Tie Rod End	1
26	3219–3	Nut	1
27	78–2900	Tie Rod Assembly, LH (Incl. Ref. # 25 & 26)	1
28	322–1	Bolt	1
29	3253–4	Washer – Lock	1
30	6216	Pin & Plate	1
31	5638	Axle	1
32	5618	Ring – Retaining	1
33	113381	Spindle – LH	1
*	113382	Spindle – RH	1
34	302–5	Fitting – Grease, Straight	2
35	109189	Bearing	1

*Not Illustrated

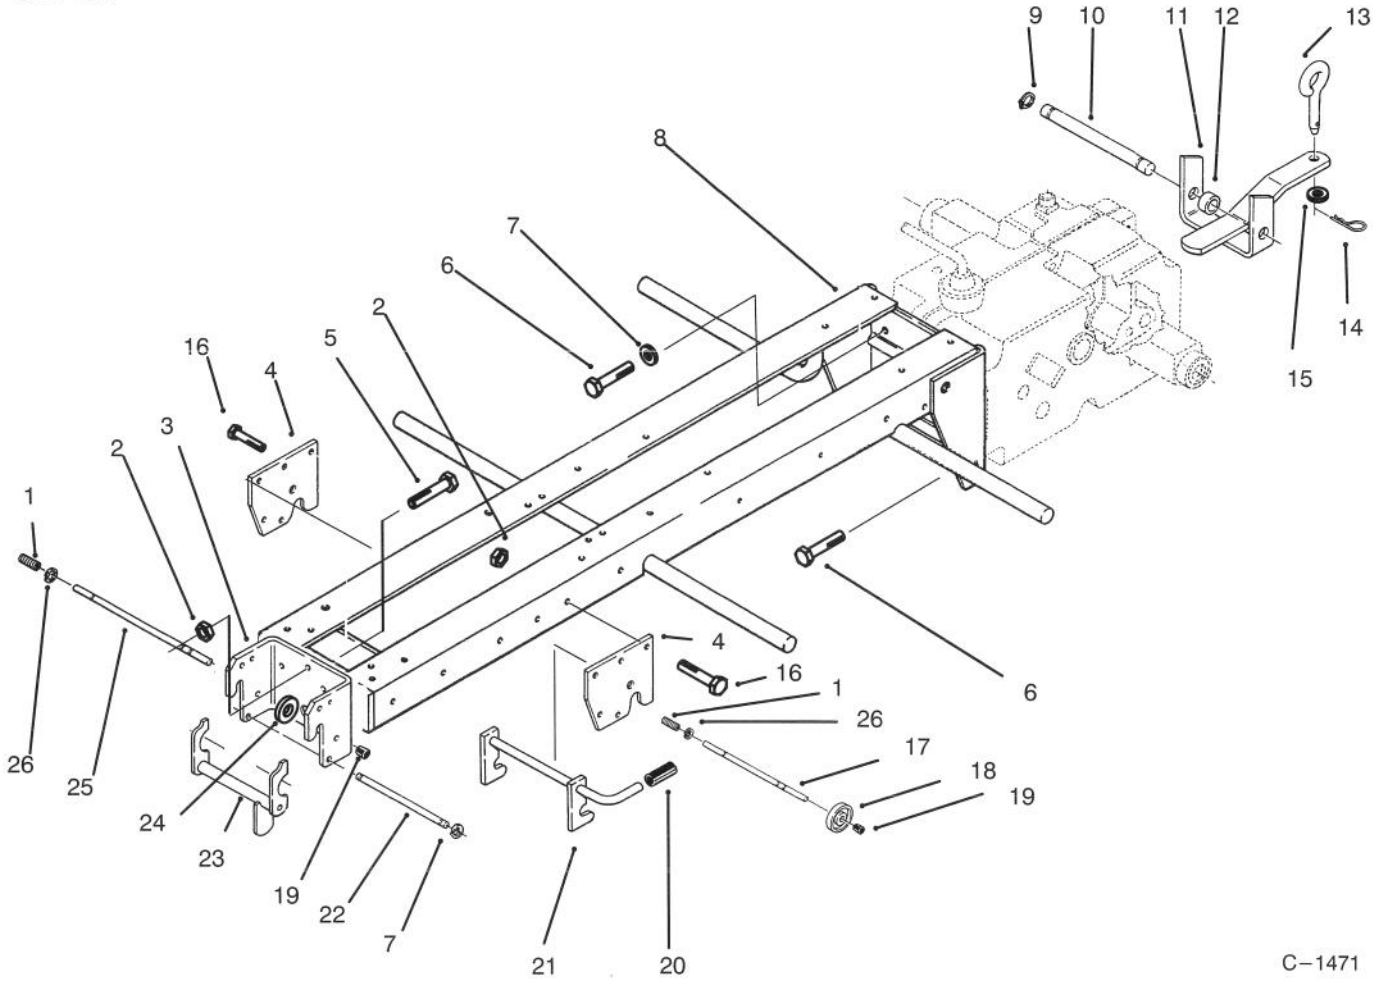


C–1471

FRAME & HITCHES

Ref. No.	Part No.	Description	No. Used
1	8616	Spring	2
2	3296–39	Nut	9
3	101711	Housing – Front Hitch	1
4	102644	Plate – Mid Hitch	2
5	3231–25	Bolt – Carriage	3
6	323–5	Bolt	4
7	3253–21	Washer – Lock	4
8	78–2680	Frame	1
9	5618	Ring – Retaining	2
10	105269	Shaft – Drawbar Hitch	1
11	1644	Hitch – Drawbar	1
12	979120	Spacer	2
13	106634	Pin – Hitch	1

Ref. No.	Part No.	Description	No. Used
14	933505	Pin – Cotter	1
15	3256–26	Washer – Flat	1
16	323–44	Screw – Hex. Hd..	6
17	101017	Rod – Mid Hitch Lock	1
18	83–6520	Rod – Lock	1
19	105316	Cap – Lock Rod	2
20	9038	Grip	1
21	117930	Latch – Mid Hitch	1
22	101750	Rod – Pivot Latch	1
23	93–1613	Latch – Front Hitch	1
24	101707	Lock – Attachment	1
25	101751	Rod – Lock	1
26	105797	Ring – Retaining	6

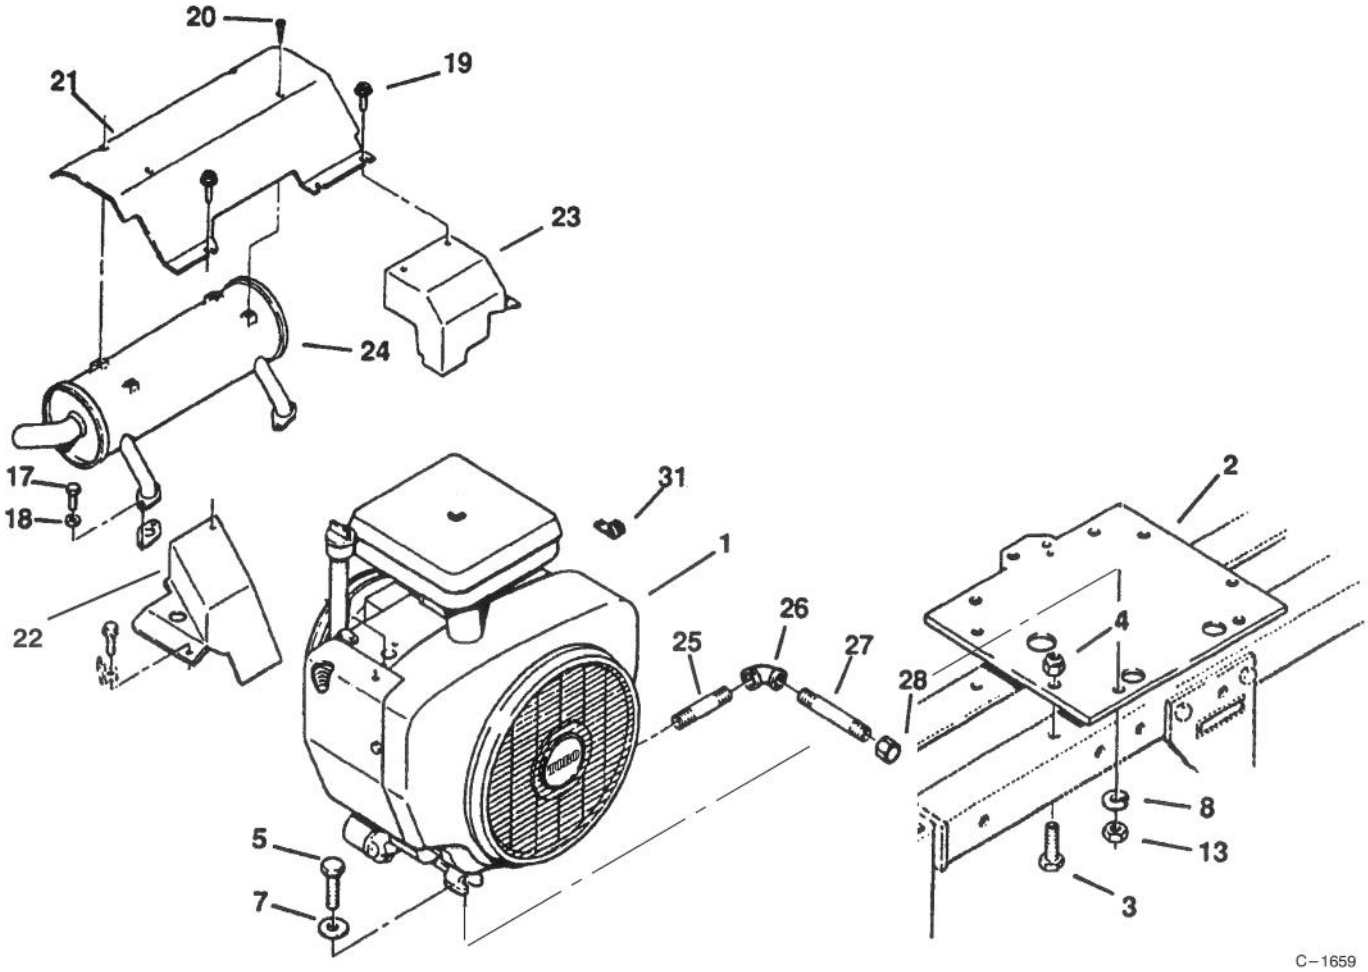


C–1659

ENGINE, TORO POWER PLUS

Ref. No.	Part No.	Description	No. Used
1	79–5210	Engine – 16HP TORO Power Plus P216G–I/10976D	1
2	116609	Plate – Engine	1
3	908035	Bolt	4
4	915553	Nut	4
5	908035	Bolt	4
7	3256–24	Washer	4
8	3253–24	Washer – Lock	4
13	32146–2	Nut	4
17	322–3	Bolt	4
18	3253–4	Washer	4
19	321–2	Bolt	3

Ref. No.	Part No.	Description	No. Used
20	910331	Screw	4
21	114217	Deflector – Air	1
22	114215	Cover – Exhaust, L.H.	1
23	114216	Cover – Exhaust, RH	1
24	116470	Muffler	1
25	114636	Pipe	1
26	114764	Elbow – 90°	1
27	114763	Pipe	1
28	5224	Cap	1
30	114214	Gasket – Exhaust	2
31	111357	Clip	1

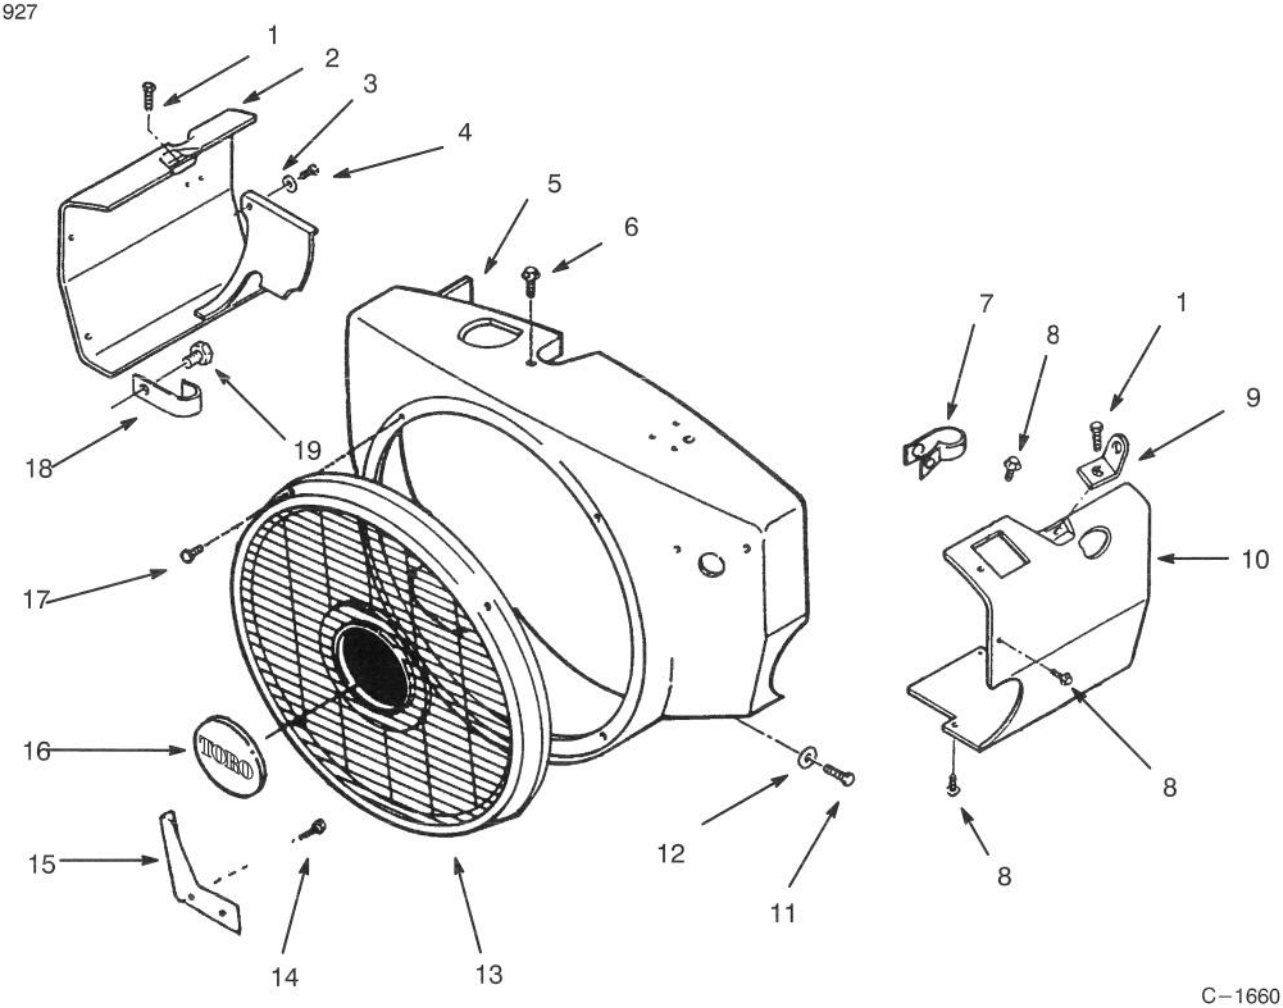


C–1660

BLOWER HOUSING

Ref. No.	Part No.	Description	No. Used
1	82–1600	Screw	2
2	92–0920	Housing – Cylinder Air, L.H.	1
3	NN10393	Washer	1
4	59–0980	Screw	1
5	NN10862	Housing – Blower	1
6	59–0970	Screw	1
7	NN10289	Clamp	1
8	NN10414	Screw	4
9	NN10296	Bracket – Lifting	2
10	92–0921	Housing – Cylinder Air, R.H.	1


Ref. No.	Part No.	Description	No. Used
11	NN10393	Screw	4
12	NN10356	Washer – Flat	1
13	82–0620	Guard – Stationary	1
14	82–0930	Screw	2
15	NN10832	Bracket	1
16	118530	Name Plate – Toro	1
17	82–1590	Screw	4
18	NN10348	Clip – Wire	1
19	82–1540	Screw	1

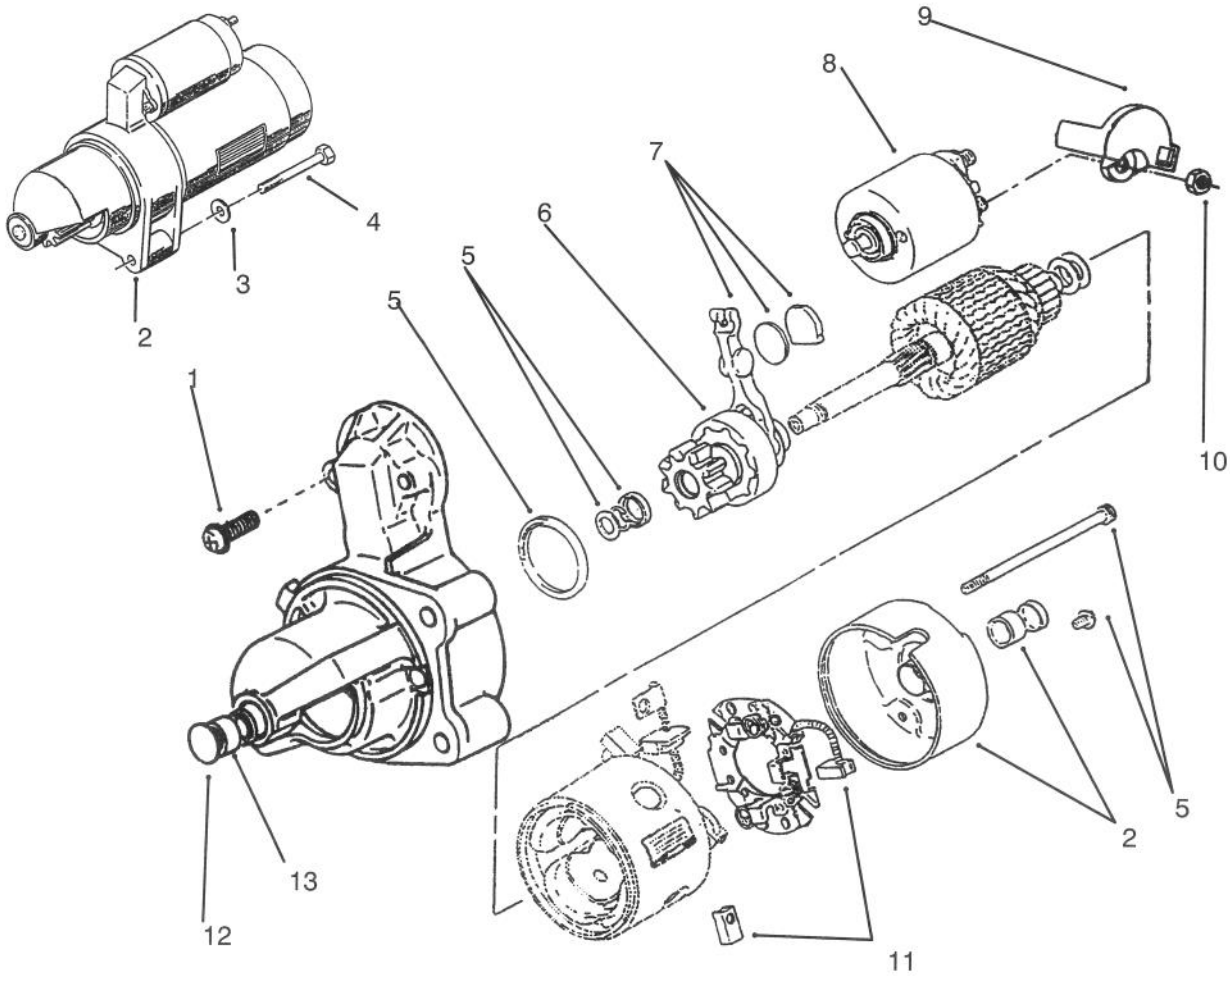

STARTER

Ref. No.	Part No.	Description	No. Used
1	NN10885	Starter Hdwr Kit (Incl. Solenoid Screws [2] Brush Holder Screws [2], Thru Bolts[2], Armature Shims [2], Pinion Stop Collar, & Pinion Retaining Ring)	1
2	71–6040	Starter, Complete – See Components Below	1
3	57–9770	Washer – Flat	2
4	79–6580	Screw – Cap	2
5	NN10886	Seal – Dust	1
6	NN10884	Clutch – Starter (Incl. Pinion Gear w/Clutch)	1
7	NN10266	Kit – Starter Shift Lever (Incl. Shift Lever, Wear Plate & Rubber Plug)	1
8	NN10887	Kit – Starter Solenoid (Incl. Solenoid, Spring, & Plunger)	1
9	NN10930	Cap – Starter Solenoid	1
10	NN10768	Nut	1
11	NN10883	Kit – Starter Brush (Incl. Positive Brush [2] & Negative Brush w/Pigtail)	1
12	62–2730	Kit – Bushing (Incl. Front Bushing & Rear Cap w/Bushing)	1
13	NN10929	Holder – Starter Brush (Incl. Brush Holder w/Negative Brush)	1

CYLINDER BLOCK

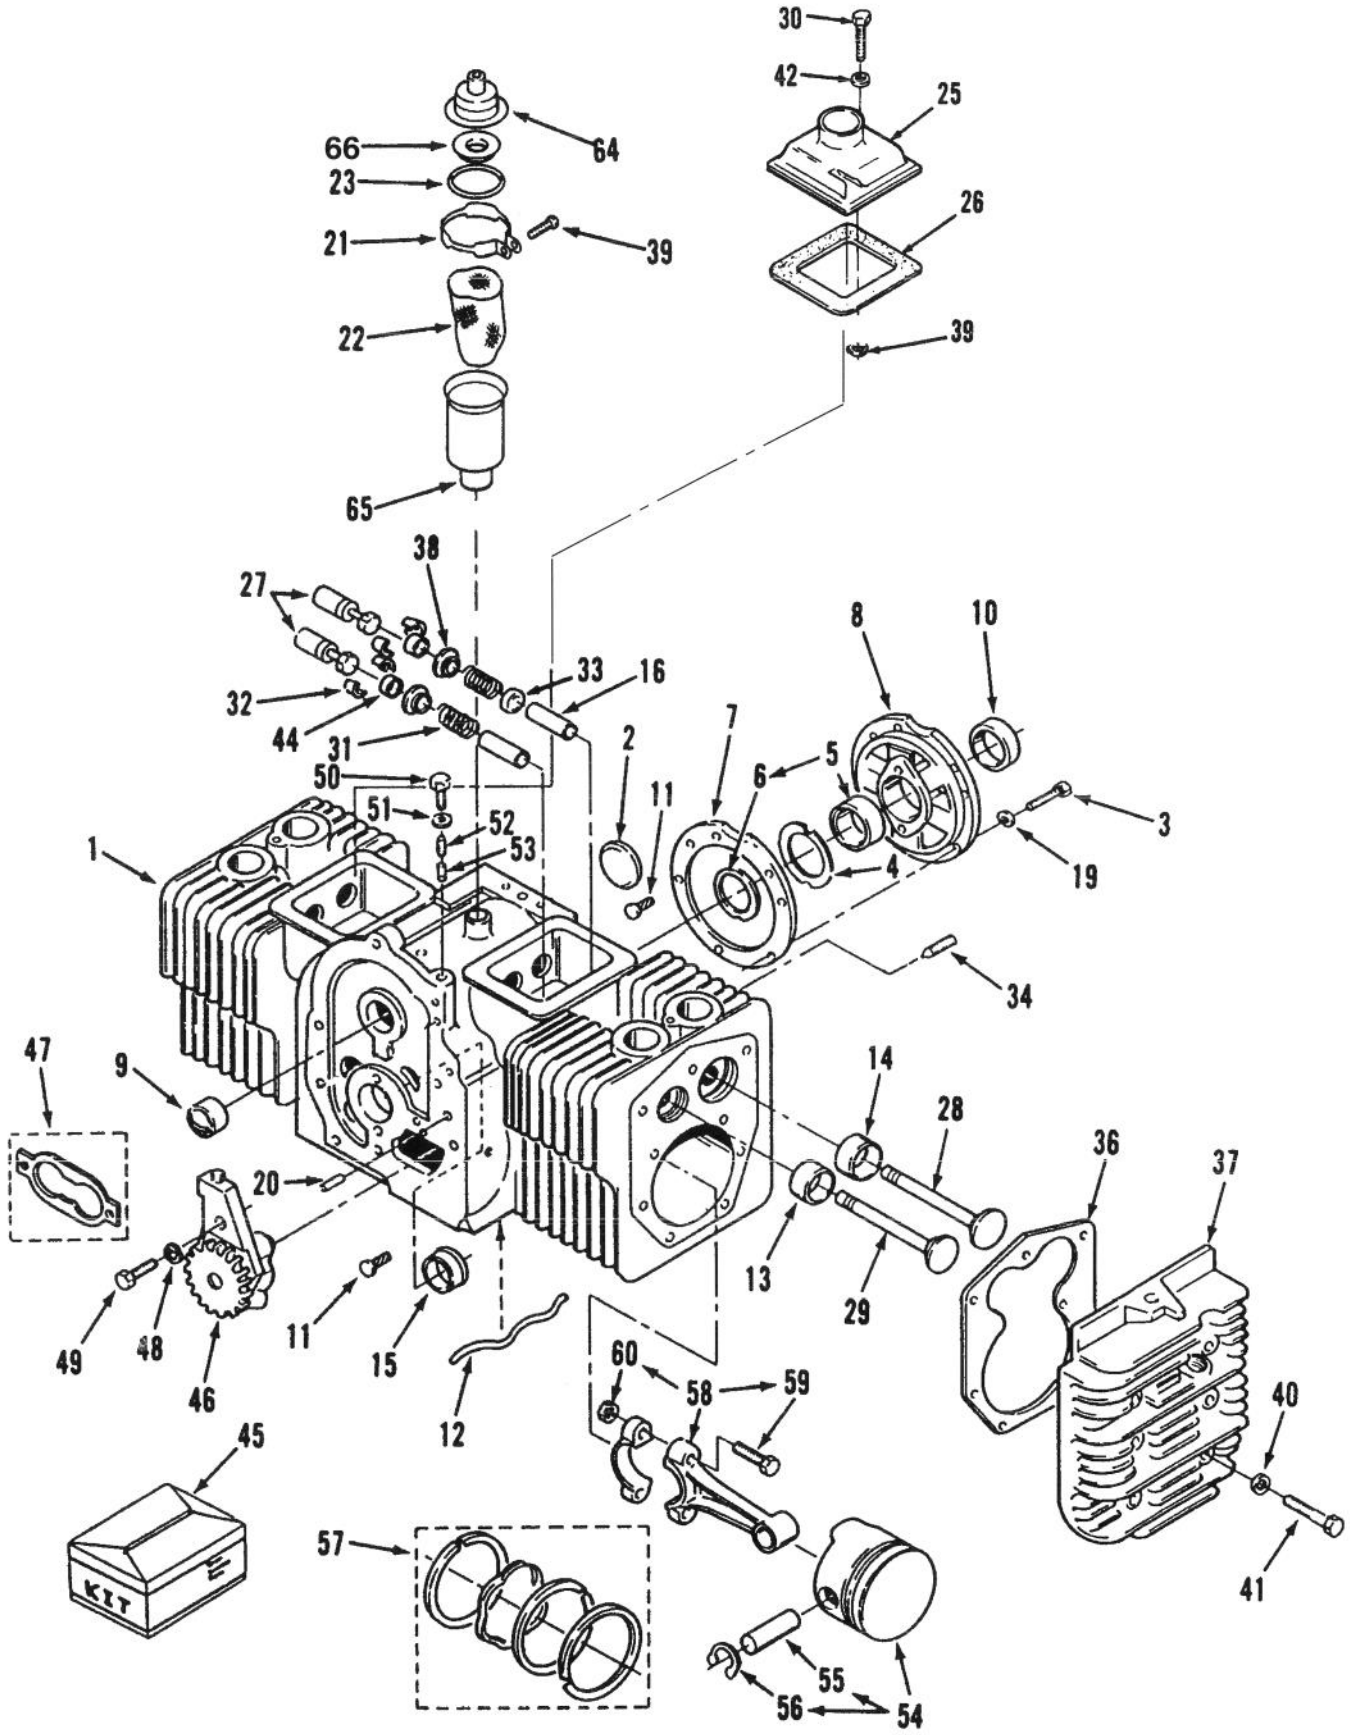

C–1661


CYLINDER BLOCK

Ref. No.	Part No.	Description	No. Used
1	92–0900	Block – Short	1
2	57–9690	Plug	1
3	59–0880	Bolt	5
4	57–8170	Shim 0.005"	A/R
5	57–8050	Bearing – Crankshaft, Rear, Standard	1
	NN10010	Bearing – Crankshaft, Rear .002" Under	1
	57–8060	Bearing – Crankshaft, Rear .010" Under	1
	NN10012	Bearing – Crankshaft, Rear .020" Under	1
	NN10013	Bearing – Crankshaft, Rear .030" Under	1
6	57–8160	Washer – Thrust	2
7	NN10554	Gasket	1
8	82–0020	Plate – Bearing	1
9	57–8000	Bearing – Camshaft	2
10	57–9590	Seal – Oil	1
11	NN10334	Pin – Stop	4
12	59–0290	Tube – Oil	1
13	NN10054	Insert – Exhaust Seat, Std.	2
	NN10055	Insert – Exhaust Seat .002" O.S.	2
	NN10056	Insert – Exhaust Seat .005 O.S.	2
	NN10057	Insert – Exhaust Seat .010" O.S.	2
	NN10058	Insert – Exhaust Seat .025" O.S.	2
14	NN10035	Insert – Intake Seat, Std.	2
	NN10036	Insert – Intake Seat .002" O.S.	2
	NN10037	Insert – Intake Seat .005" O.S.	2
	NN10038	Insert – Intake Seat .010" O.S.	2
	NN10039	Insert – Intake Seat .025" O.S.	2
15	NN10003	Bearing – Crankshaft, Front Standard	1
	NN10004	Bearing – Crankshaft, Front .002" Under	1
	NN10005	Bearing – Crankshaft, Front .010" Under	1
	NN10006	Bearing – Crankshaft, Front .020" Under	1
	NN10007	Bearing – Crankshaft, Front .030" Under	1
16	NN10479	Guide – Exhaust Valve	2
	NN10478	Guide – Intake Valve	2
19	82–1640	Washer – Spring	5
20	NN10336	Pin	2
21	82–0530	Clamp	1
22	57–8580	Breather – Baffle	1
23	82–0570	Seal	1

Ref. No.	Part No.	Description	No. Used
25	NN10821	Cover – Valve	2
26	57–8280	Gasket	2
27	NN10129	Tappet – Std.	4
	NN10130	Tappet .002" O.S.	4
	NN10131	Tappet .004" O.S.	4
28	NN10075	Valve – Intake	2
29	NN10075	Valve – Exhaust	2
30	NN10370	Bolt	2
31	NN10077	Spring	4
32	NN10082	Lock – Spring	8
33	NN10326	Seal	2
34	NN10385	Screw	2
36	NN10070	Gasket	2
37	NN10080	Head – Right Cylinder	1
	NN10079	Head – Left Cylinder	1
38	NN10078	Washer	4
39	82–1480	Screw	1
40	57–9770	Washer – Flat	18
41	NN10381	Bolt – Special	10
42	NN10359	Washer	2
44	71–5830	Cap – Valve	4
45	71–6290	Kit – Engine Gasket Valve Grind/Carbon Removal	1
46	NN10136	Pump – Oil, Complete	1
47	NN10134	Pump – Oil, Gasket Kit	1
48	82–1340	Washer – Flat	2
49	87–1370	Bolt	2
50	59–0910	Bolt	1
51	NN10361	Washer	1
52	NN10133	Spring	1
53	NN10135	Plunger	1
54	92–0901	Piston Pin & Retaining Rings STD	2
*	92–0902	Piston Pin & Retaining Rings .010"	2
*	92–0903	Piston Pin & Retaining Rings .020"	2
*	92–0904	Piston Pin & Retaining Rings .030"	2
55	NN10100	Piston Pin	2
56	NN10345	Retaining Ring	4
57	92–0905	Set – Piston Ring, Std.	2
	92–0906	Set – Piston Ring .005" O.S.	2
	92–0907	Set – Piston Ring .010" O.S.	2
	92–0908	Set – Piston Ring .020" O.S.	2
	92–0909	Set – Piston Ring .030" O.S.	2
58	NN10125	Rod w/Bolts & Nuts – STD	2
	NN10126	Rod w/Bolts & Nuts – .010"	2
	NN10127	Rod w/Bolts & Nuts – .020"	2
	NN10128	Rod w/Bolts & Nuts – .030"	2
59	NN10120	Bolt – Special Rod	4
60	NN10428	Nut	4
64	82–0550	Breather Cap & Valve	1
65	82–0540	Tube – Baffle Breather	1
66	82–0560	Screen	2

*Not Illustrated

CRANKSHAFT, CAMSHAFT, FLYWHEEL

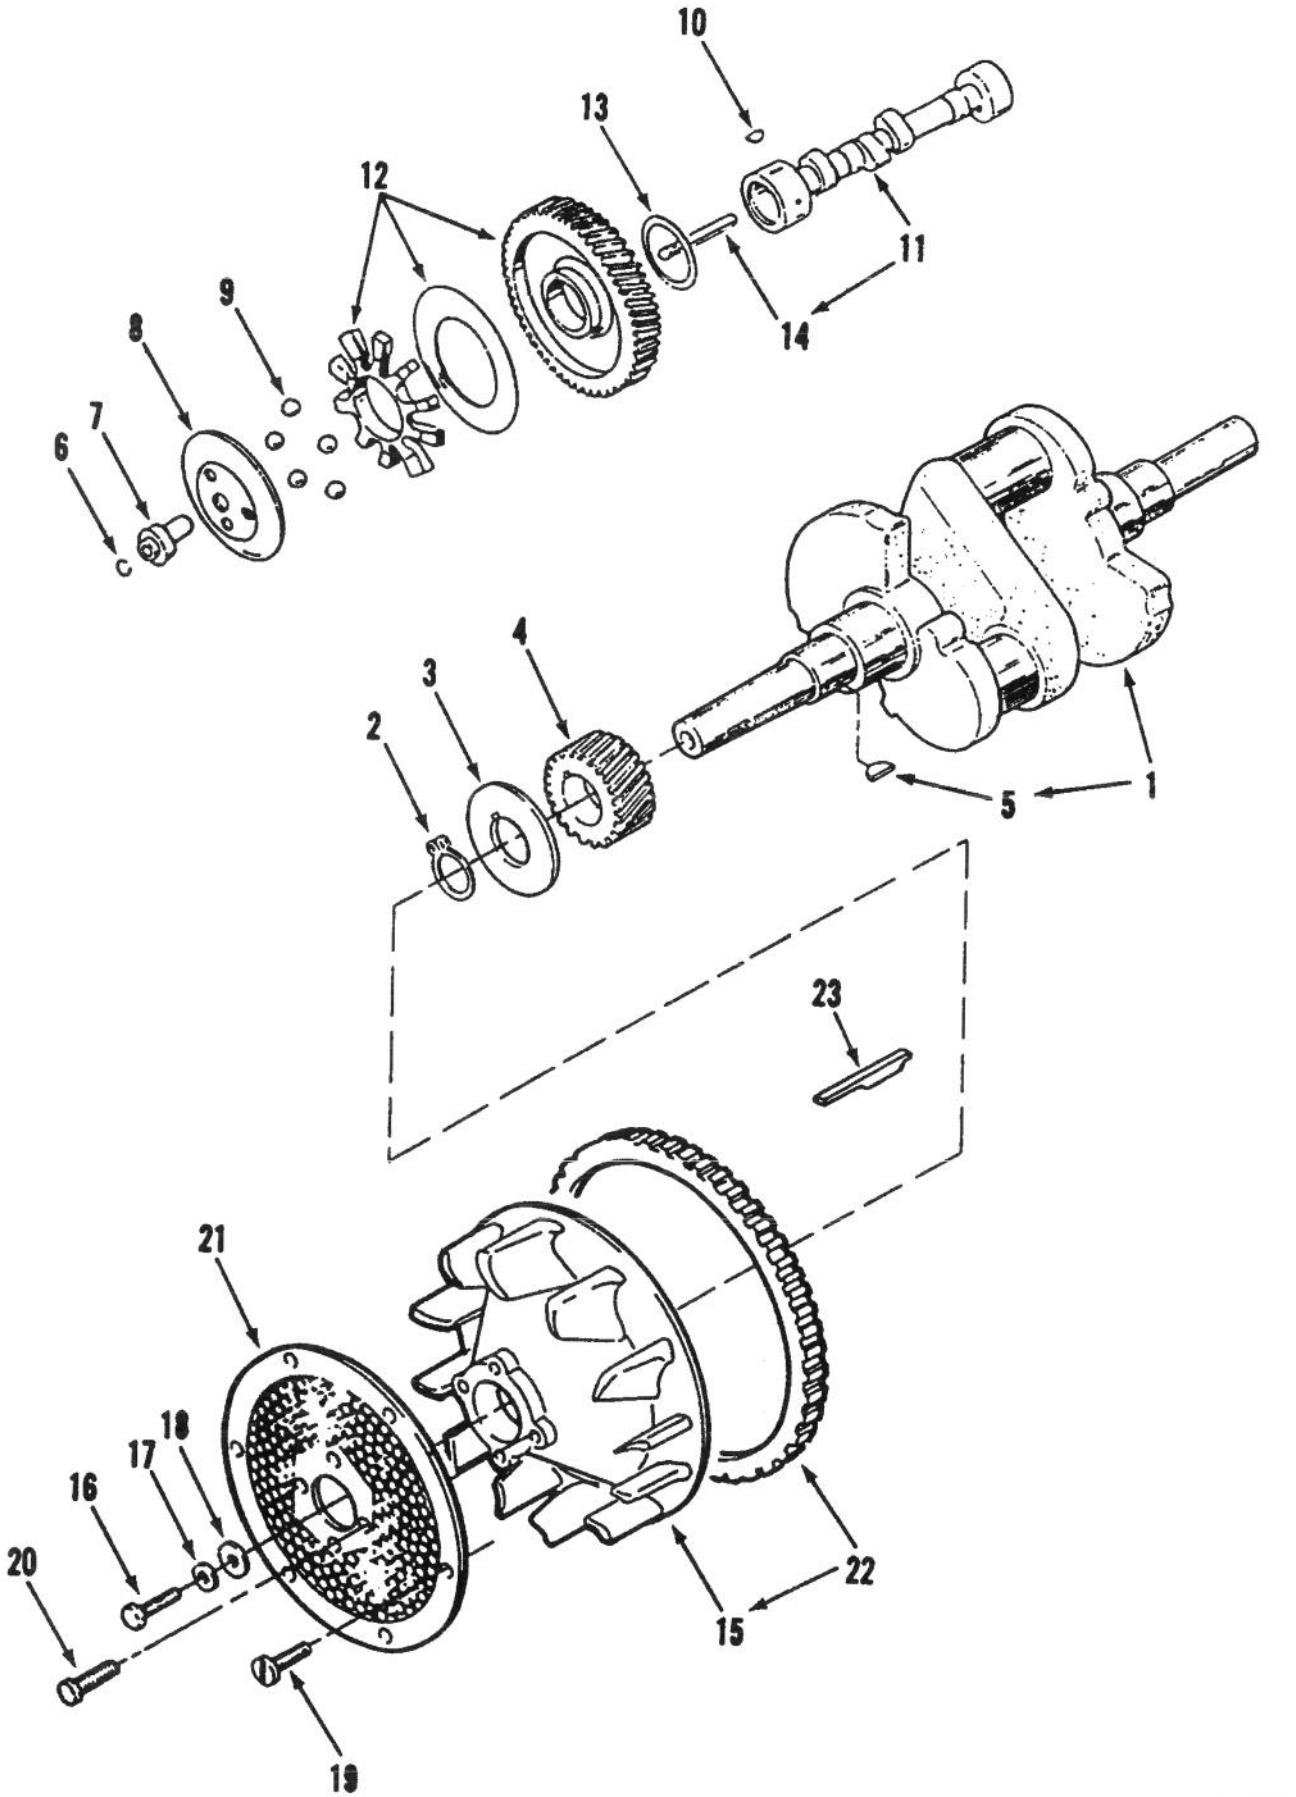


C–1662

CRANKSHAFT, CAMSHAFT, FLYWHEEL

Ref. No.	Part No.	Description	No. Used
1	NN10853	Crankshaft	1
2	57–9710	Ring – Retaining	1
3	NN10439	Washer	1
4	NN10438	Gear	1
5	NN10330	Key	1
6	NN10215	Ring – Retaining	1
7	NN10221	Hub – Governor Cup	1
8	NN10222	Cup – Governor	1
9	57–9640	Ball	1
10	57–9660	Key	1
11	NN10032	Camshaft (Incl. Item 13)	1
12	57–8210	Camshaft Gear (Incl. Gear, Spacer, & Plate)	1

Ref. No.	Part No.	Description	No. Used
13	NN10030	Washer	1
14	NN10214	Pin	1
15	NN10171	Flywheel (Incl. Ring Gear)	1
16	NN10021	Screw	1
17	82–1320	Washer	1
18	NN10355	Washer	1
19	NN10409	Screw	6
20	82–1400	Screw	4
21	79–6440	Screen	1
22	57–8180	Gear – Ring	1
23	82–1150	Key	1

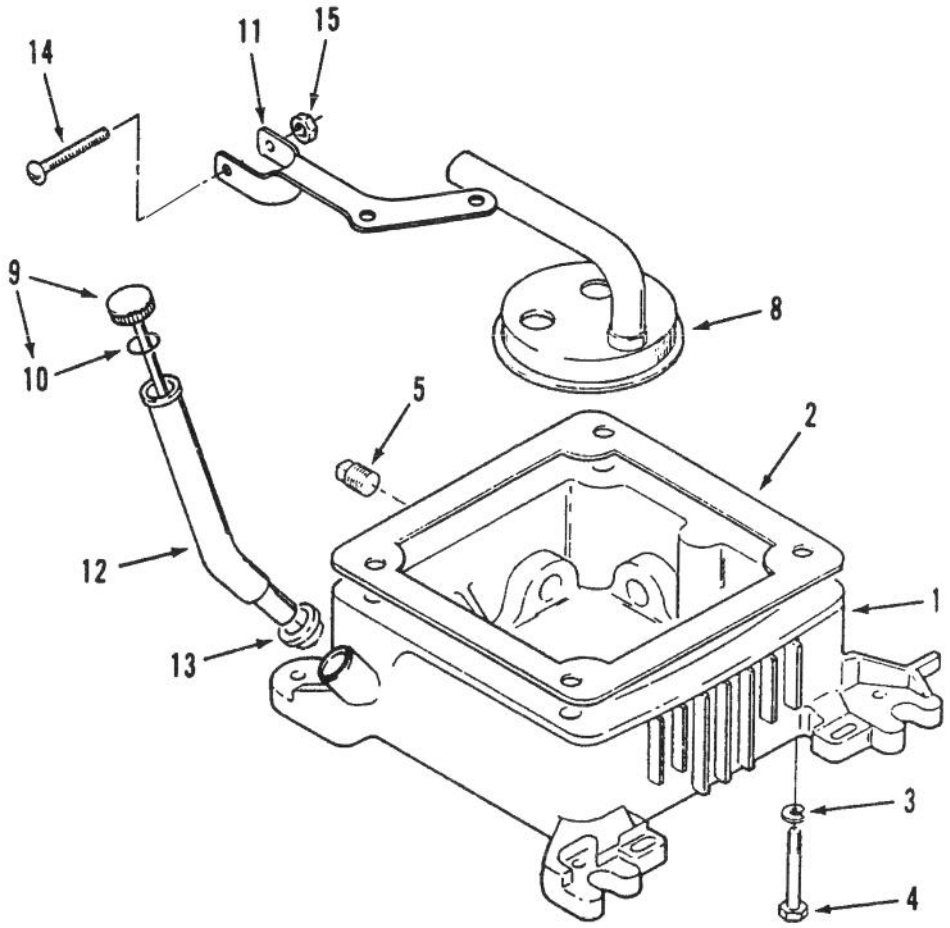


C–1663

OIL BASE AND FILL TUBE AND BRACKET

Ref. No.	Part No.	Description	No. Used
1	NN10018	Base – Oil (Incl. All Plugs & Plug Gasket)	1
2	57–8090	Gasket	1
3	82–1310	Washer – Lock	4
4	NN10379	Screw	4
5	82–1130	Plug – Sq Hd.	2
8	NN10138	Cup – Oil Pump Intake	1
9	NN10159	Cap – Oil Fill & Indicator (Incl. "O"Ring)	1

Ref. No.	Part No.	Description	No. Used
10	NN10323	Ring – Oil	1
11	79–6460	Bracket	1
12	NN10854	Tube – Oil Fill, Chrome	1
13	NN10690	Seal	1
14	82–1560	Screw	1
15	82–1700	Nut – Speed	1

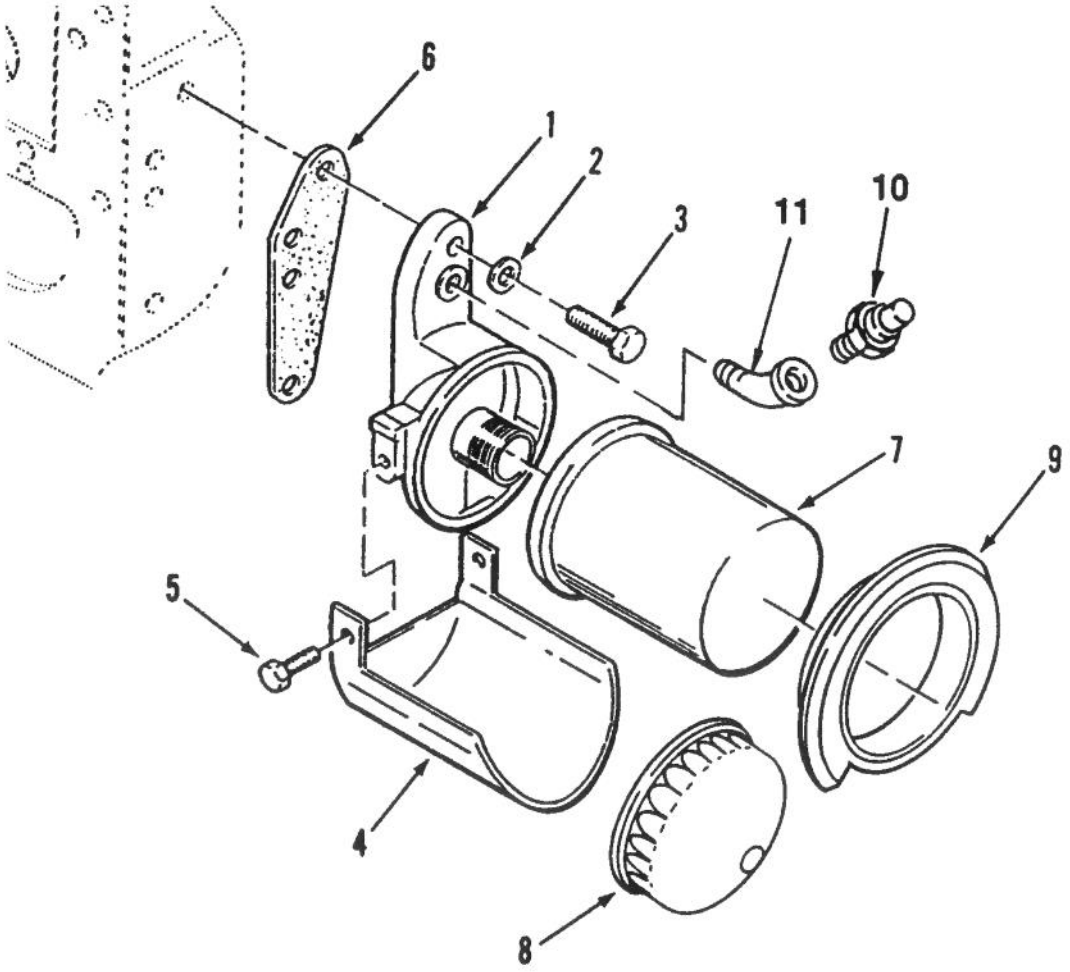


C–1664

OIL FILTER

Ref. No.	Part No.	Description	No. Used
1	82–0500	Adapter – Oil Filter	1
2	57–9750	Washer	2
3	NN10373	Screw	2
4	NN10894	Drain – Oil Filter	1
5	82–1510	Screw	2
6	79–6470	Gasket	1

Ref. No.	Part No.	Description	No. Used
7	NN10143	Filter – Oil	1
8	NN10465	Wrench	1
9	82–0680	Gasket	1
10	NN10824	Switch – Oil Pressure	1
11	92–0912	Elbow 45°	1

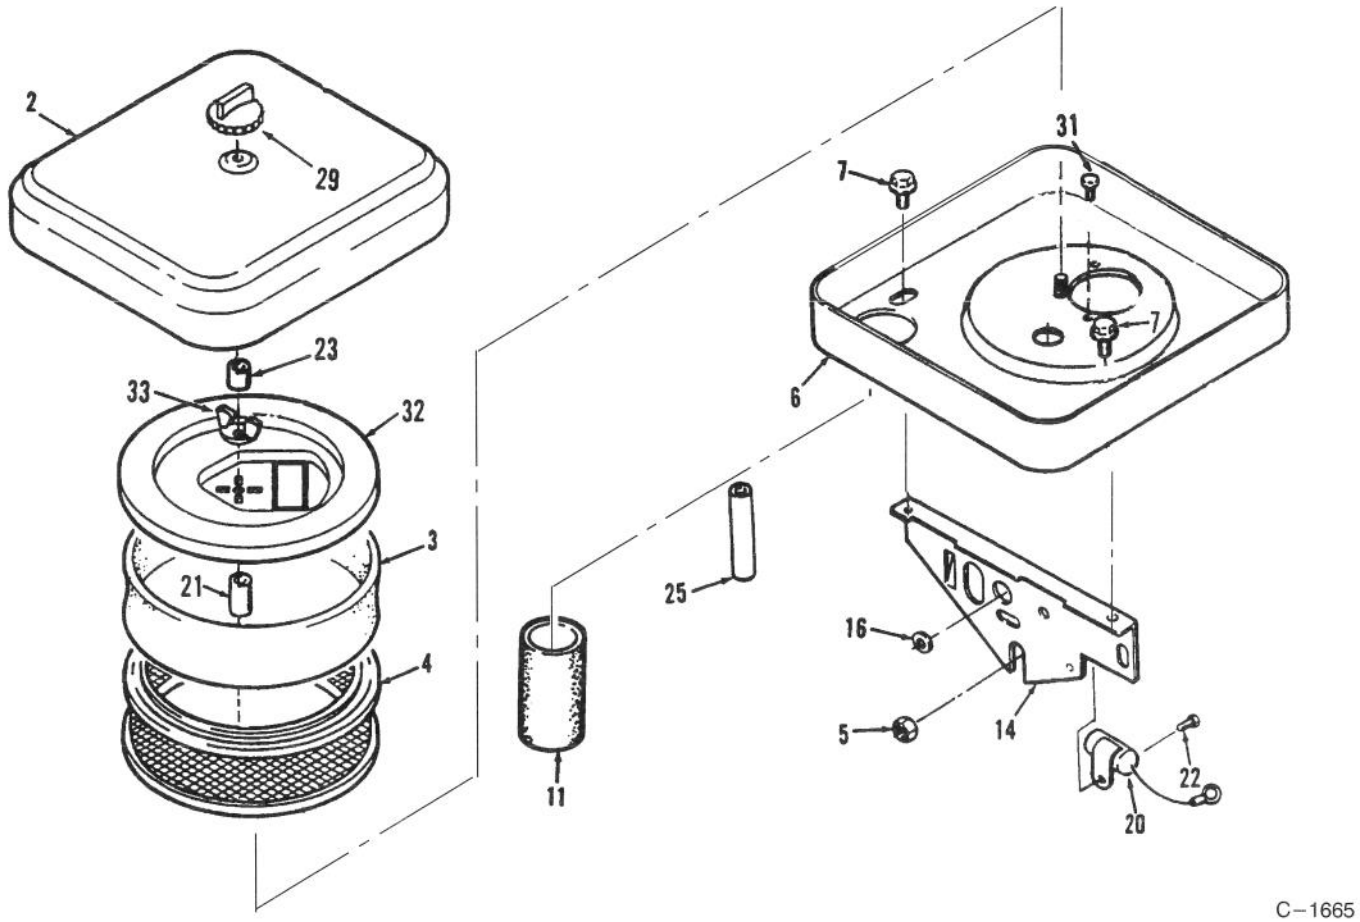


C–1665

AIR CLEANER

Ref. No.	Part No.	Description	No. Used
2	79–6320	Cover – Air Cleaner	1
3	NN10176	Element – Foam	1
4	NN10175	Element – Air Cleaner	1
5	82–1690	Nut – Flange	1
6	79–6330	Housing – Air Cleaner	1
7	82–1550	Screw – Hex. Hd.	.2
11	NN10187	Tube – Air Intake	1
14	79–6340	Support – Air Cleaner	1
16	NN10309	Grommet	1

Ref. No.	Part No.	Description	No. Used
20	NN0980	Capacitor (300 VD)	1
22	NN10390	Screw – Hex. Hd..	1
23	79–6520	Spacer	1
25	92–0917	Tube	1
29	79–6350	Knob – Tool less	1
31	92–0915	Screw	1
32	92–0914	Cover – Element	1
33	92–0913	Nut – Wing	1

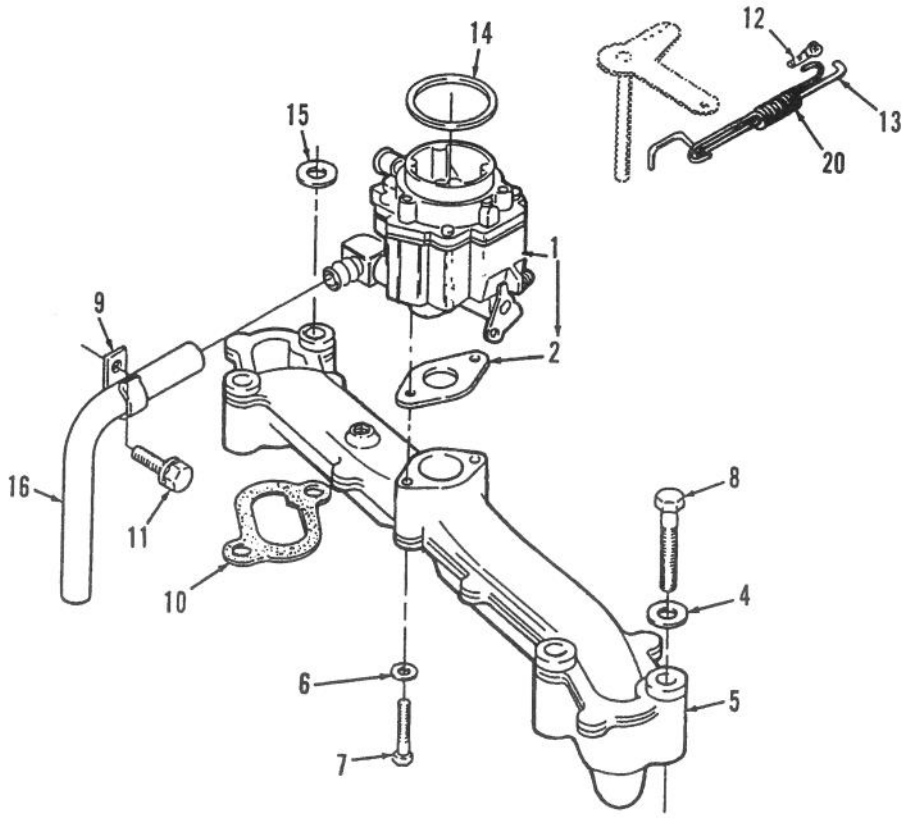


C–1666

INTAKE MANIFOLD

Ref. No.	Part No.	Description	No. Used
1	NN10504	Carburetor (Incl. Mounting Gasket, Elbow, & "O"Ring)	1
2	72–0850	Gasket	1
4	82–1350	Washer – Flat	4
5	92–0918	Manifold – Intake	1
6	82–1410	Washer – Flat	2
7	82–1410	Screw – Hex. Hd..	2
8	NN10375	Screw – Hex. Hd..	4
9	NN10348	Clip – Fuel Line	1


Ref. No.	Part No.	Description	No. Used
10	71–5980	Gasket	2
11	82–1450	Screw	2
12	57–9700	Clip – Retaining, Rod to Carburetor	1
13	92–0919	Rod – Governor Control	1
14	57–9620	"O"Ring	1
15	NN10362	Washer – Flat	1
16	NN10858	Hose – Fuel	1
20	NN10877	Spring – Governor Rod	1

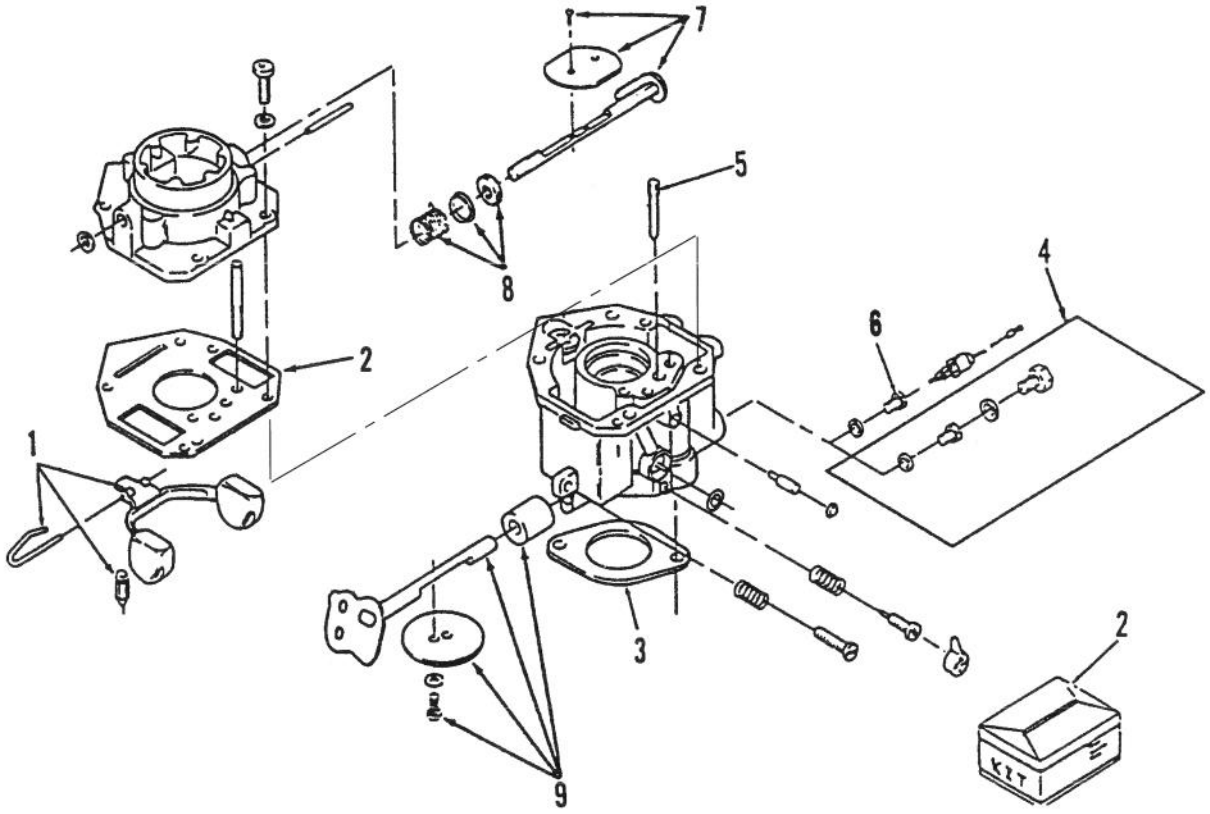

C–1667

CARBURETOR

Ref. No.	Part No.	Description	No. Used
1	NN10209	Kit – Float (Incl. Float, Pin, & Valve)	1
2	82–0780	Kit – Repair (Incl. Screw & Plug Package, Gasket Package, Float Valve, Idle Adjustment Needle & Spring, Mounting Gaskets, & Idle Limit Cap)	1
3	82–0850	Gasket – Carburetor Mtg. Jet (Power–Fixed & Opt. High Altitude)	1
4	NN10810	Kit – Fixed Jet	1
5	NN10201	Jet – Idle	1
6	NN10199	Jet – Power	1
7	NN10207	Kit – Choke Shaft (Incl. Choke Valve, Valve Screw – Set, & Air Filter)	1
8	NN10809	Kit – Choke Lever (Incl. Choke Lever Ring, Choke Spring, & Choke Collar)	1
9	NN10811	Kit – Throttle Shaft (Incl. Valve Screw – Set, Air Filter, & Throttle Valve)	1

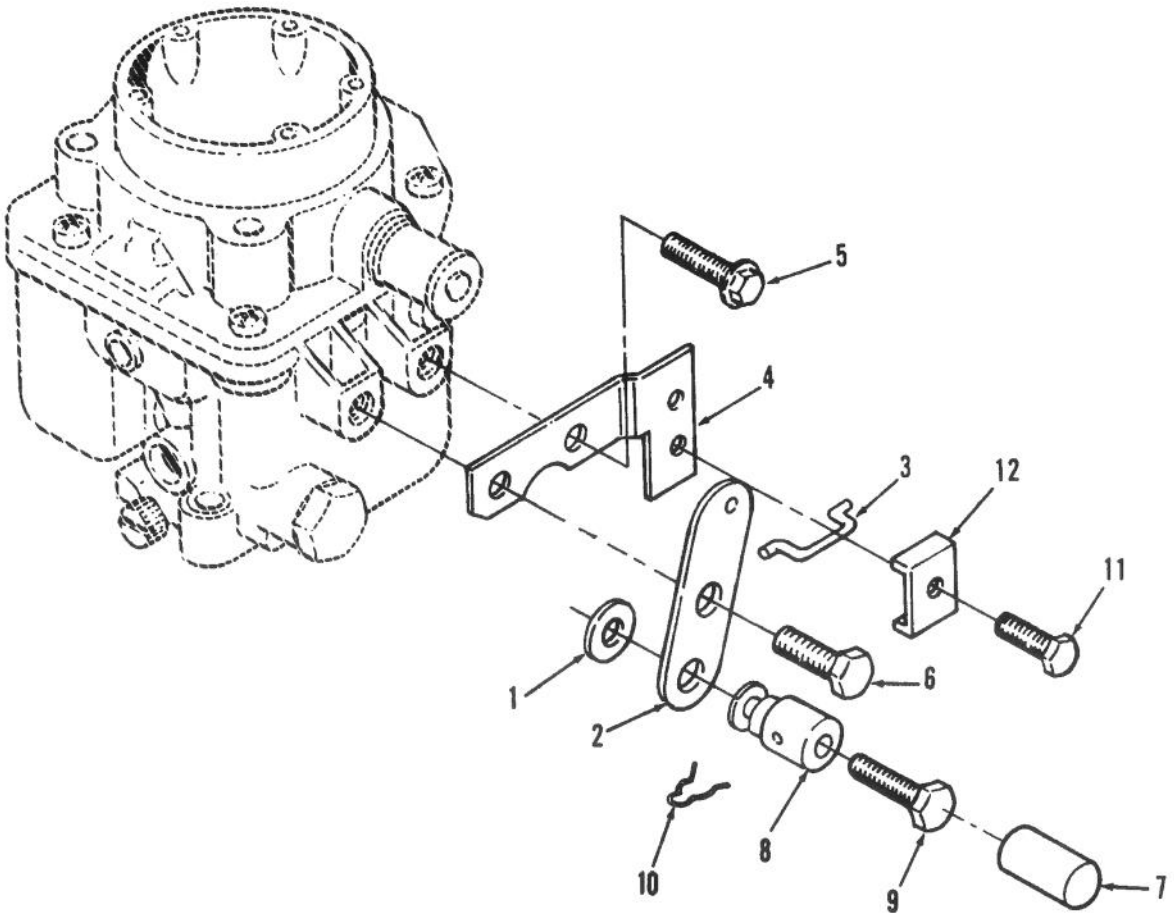


C–1668

CHOKE LINKAGE

Ref. No.	Part No.	Description	No. Used
1	59–0850	Washer	2
2	59–0460	Lever – Choke	1
3	57–9180	Link – Choke	1
4	59–0470	Bracket	1
5	NN10412	Screw	1
6	92–0916	Screw	1

Ref. No.	Part No.	Description	No. Used
7	NN10830	Plug	1
8	57–9170	Swivel – Choke Lever	1
9	NN10410	Screw	1
10	59–0720	Pin – Cotter	1
11	NN10784	Screw	1
12	57–9190	Clip	1

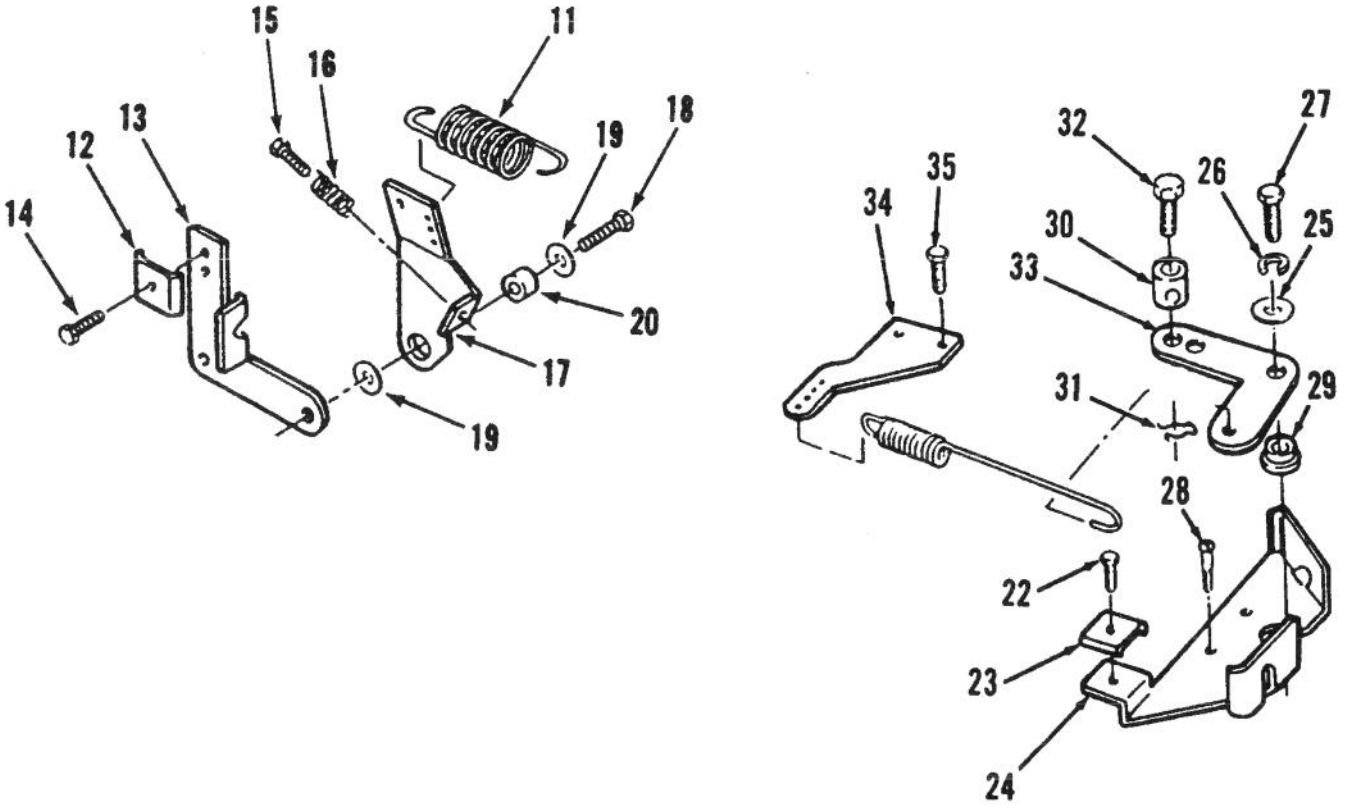


C–1669

GOVERNOR

Ref. No.	Part No.	Description	No. Used
11	NN10217	Spring – Governor, 5 Ball	1
12	57–9190	Clamp – Cable	1
13	79–6360	Bracket	1
14	NN10395	Screw	1
15	59–1030	Screw	1
16	NN10219	Spring	1
17	92–0922	Arm – Governor Control, w/o Swivel	1
18	59–1100	Screw	2
19	NN10357	Washer – Flat	1
20	NN10218	Bushing	1
22	59–1000	Screw	1
23	57–9190	Clamp – Throttle Cable	1

Ref. No.	Part No.	Description	No. Used
24	79–6390	Bracket – Governor Control	1
25	59–0830	Washer – Flat	1
26	82–1620	Washer – Lock	1
27	82–1370	Screw	1
28	201327	Screw	3
29	79–6400	Bushing – Governor Control	1
30	NN10320	Swivel – Throttle Control	1
31	59–0720	Pin – Cotter	1
32	NN10410	Screw – Machine	1
33	79–6410	Link – Governor Control	1
34	79–6420	Adapter – Governor Arm	1
35	59–1050	Screw	2

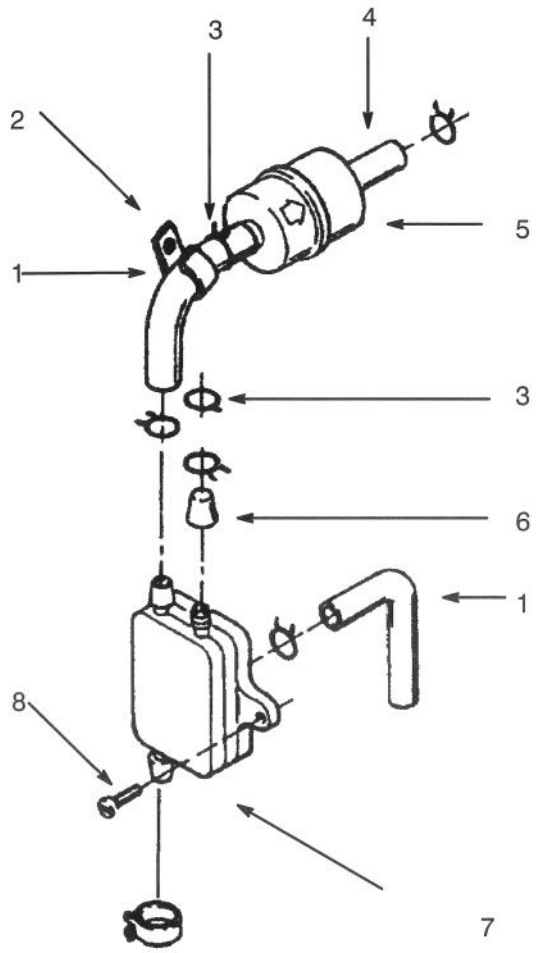


FUEL PUMP

Ref. No.	Part No.	Description	No. Used
1	NN10302	Line – Fuel 12"	2
2	NN10348	Clip – Wire	1
3	82–1080	Clamp – Hose 1/2	6
4	92–0923	Hose – Fuel	1

Ref. No.	Part No.	Description	No. Used
5	NN10506	Filter – Fuel	1
6	59–0370	Cap – Fuel Fitting	1
7	57–9080	Pump – Fuel	1
8	59–1050	Screw	1

GEARCASE AND IGNITION CONTROLS

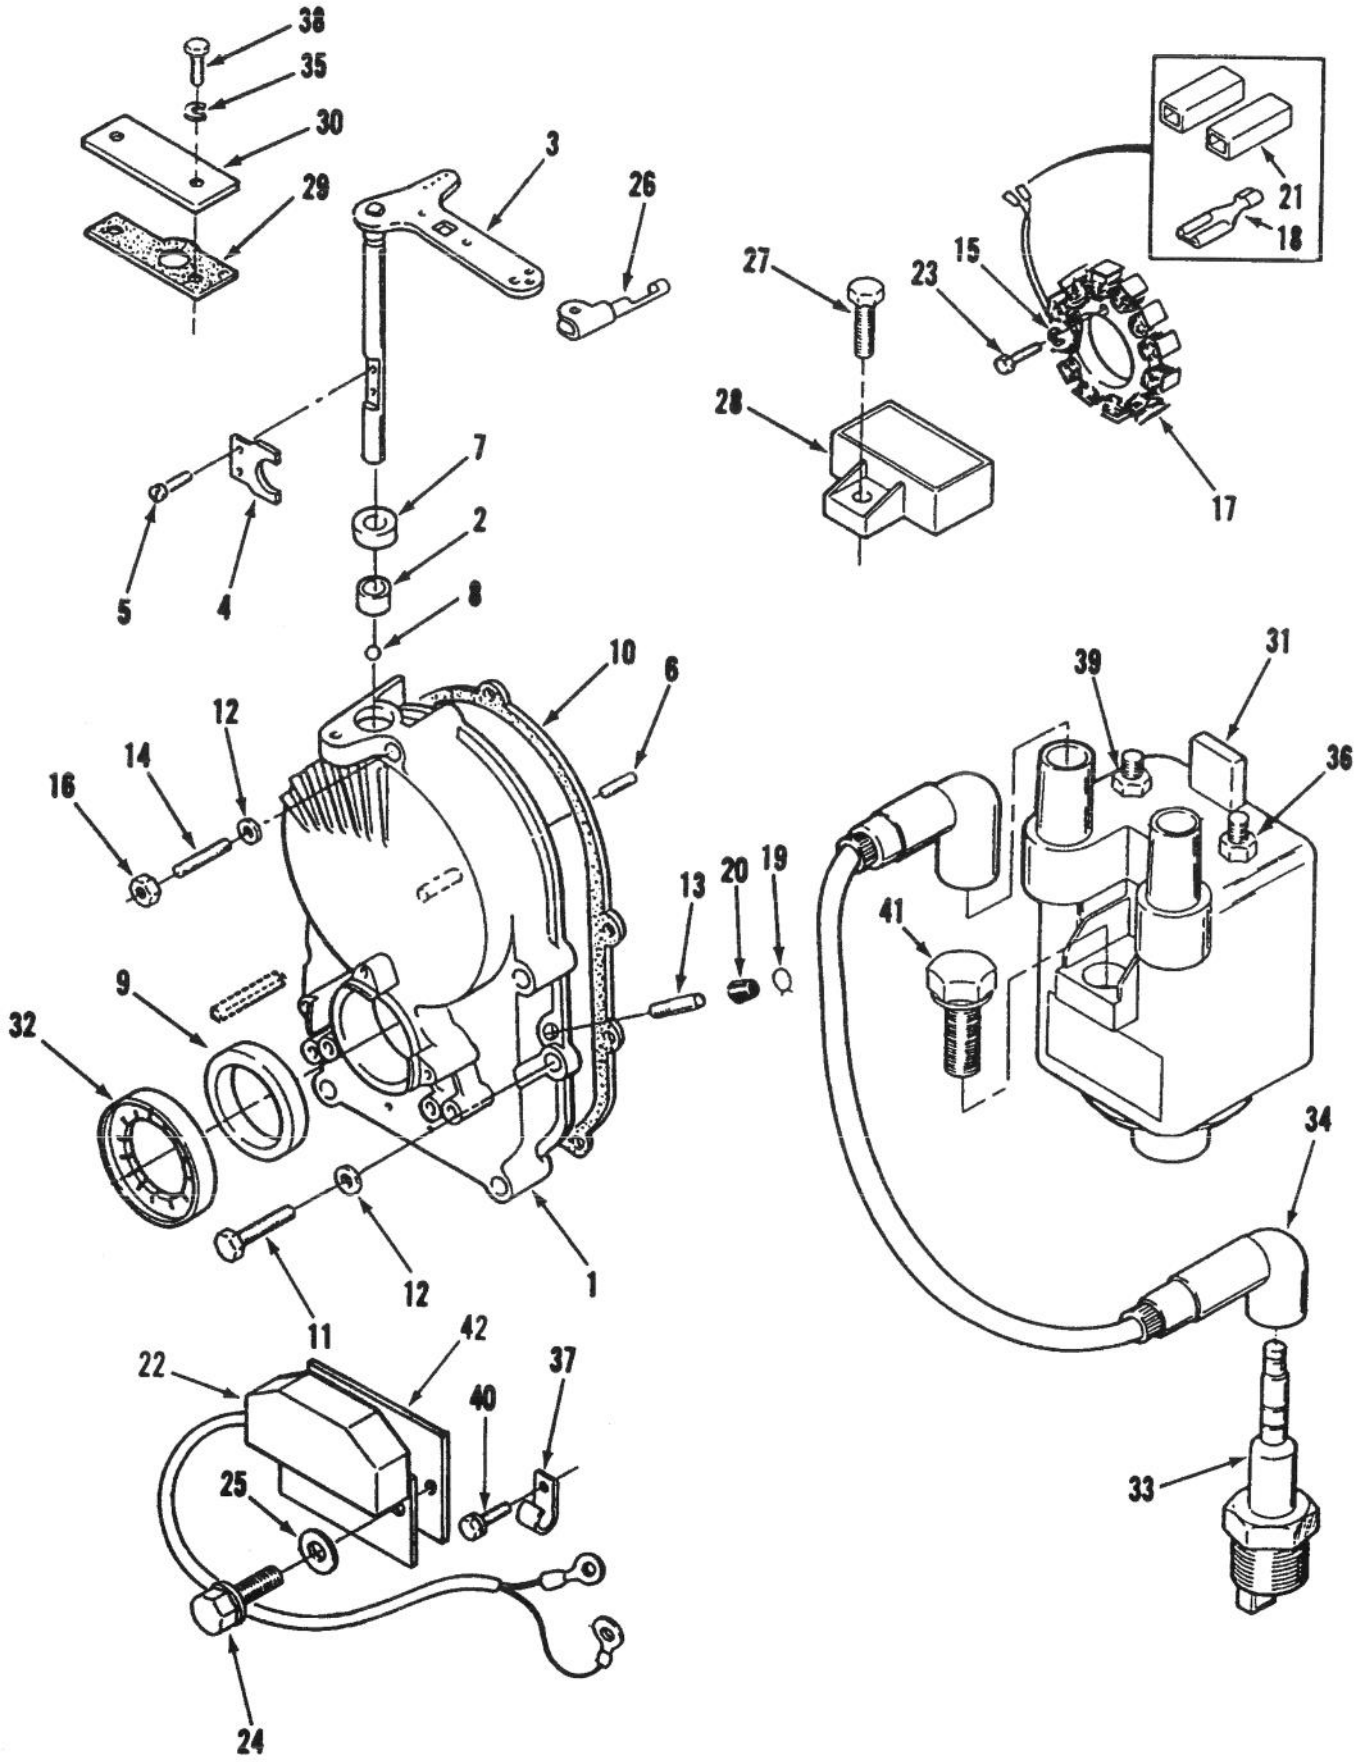


C–1670

GEARCASE AND IGNITION CONTROLS

Ref. No.	Part No.	Description	No. Used
1	NN10825	Kit – Gearcase (Incl. Ref.# 2–9, 13, 19, & 20)	1
2	57–9650	Bearing	1
3	NN10826	Governor Shaft & Arm–Chromed	1
4	59–0420	Yoke	1
5	59–0950	Screw	1
6	NN10335	Pin – Dowel	1
7	57–9570	Seal – Oil	1
8	NN10327	Bearing	1
9	57–9580	Seal – Oil	1
10	NN10895	Gasket	1
11	82–1410	Screw	4
12	57–9750	Washer	5
13	59–0360	Tube – Vacuum Port	1
14	NN10352	Stud – Gear Cover	1
15	3253–2	Washer – Lock	3
16	NN10426	Nut	1
17	NN10518	Stator w/Terminals	1
18	NN10290	Terminal – Stator Leads	3
19	57–9550	Clamp	1
20	59–0370	Cap	1
21	82–1000	Kit – Terminal Connector Body	1
22	NN10444	Control – Ignition	1
23	82–1500	Screw – Hex. Hd..	3
24	NN10394	Screw – Hex. Hd..	2
25	82–1660	Washer – Lock	2
26	57–9730	Clip – Retaining	1
27	NN10414	Screw – Hex. Hd.	1
28	NN10261	Regulator – Voltage 20 amp	1
29	79–6490	Gasket – Plate	1
30	NN10515	Cover – Ignition Plunger	1
31	NN10245	Battery Ignition Coil	1
32	NN10247	Rotor – Ignition	1
33	57–9340	Plug – Spark	2
34	82–1340	Cable – Spark Plug	1
35	82–1340	Washer – Flat	2
36	NN10248	Nut	1
37	NN10348	Clip – Wire	1
38	82–1360	Screw – Hex. Hd.	1
39	NN10249	Nut	1
40	82–1410	Screw – Hex. Hd..	1
41	NN10408	Screw – Hex. Hd..	2
42	NN10516	Indicator – Ignition Module	1

TRANSMISSION 8–SPEED

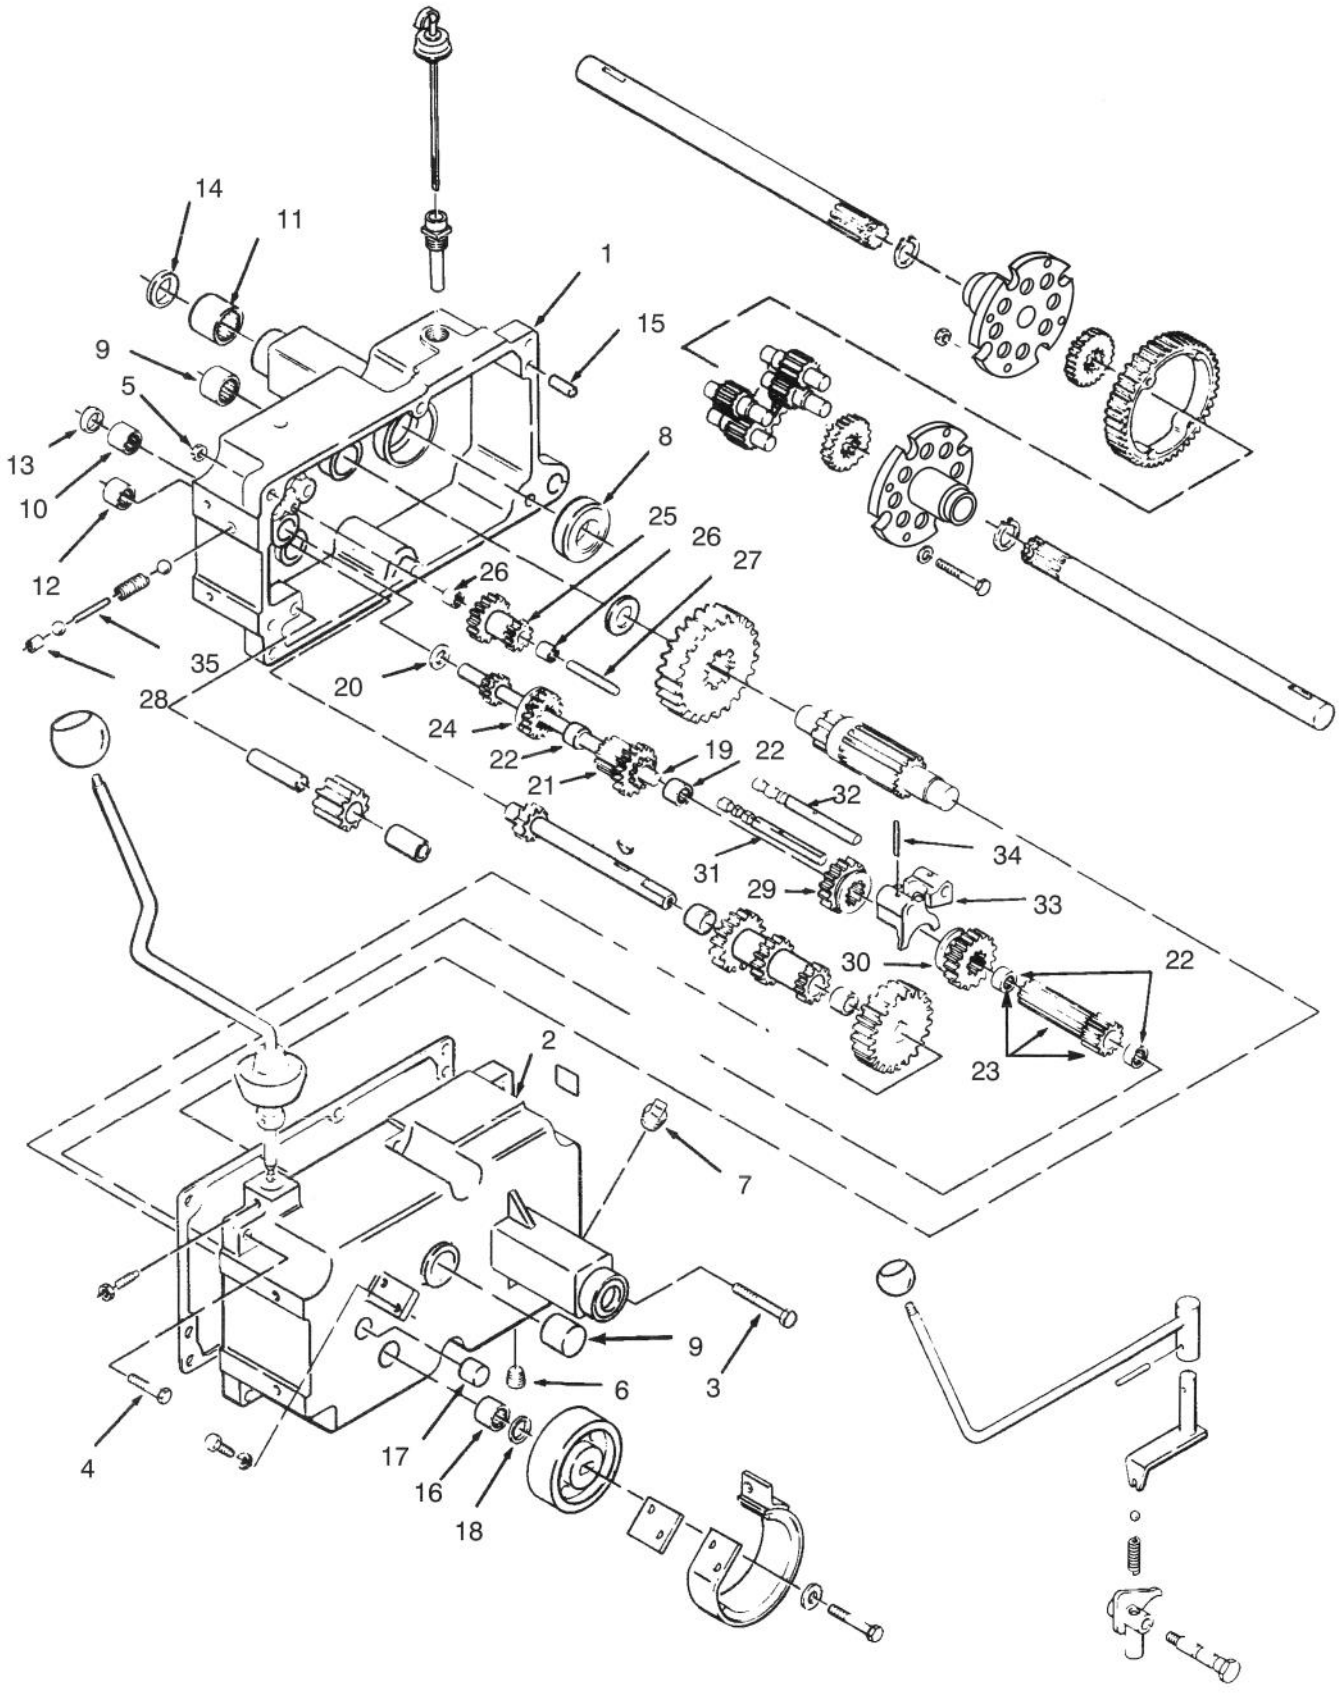

C–1473


TRANSMISSION 8–SPEED

Ref. No.	Part No.	Description	No. Used
*	92–8708	Transmission Assembly	1
1	111200	Case–Transmission, RH	1
2	111198	Case–Transmission, LH	1
3	323–16	Screw – Hex. Hd..	1
4	323–11	Screw – Hex. Hd..	5
5	3296–39	Nut	6
6	281–10	Plug – Pipe, Allen Hd.	1
7	281–2	Plug – Pipe, Sq. Hd.	1
8	111199	Bearing – Ball	2
9	1532	Bearing – Needle	2
10	1542	Bearing – Needle	1
11	9416	Bearing – Needle	2
12	1529	Bearing – Needle	1
13	100442	Seal – Input Shaft	1
14	100443	Seal – Axle	4
15	3915	Pin – Locating	2
16	1523	Bearing – Needle	1
17	83–2890	Bearing – Needle	1
18	100441	Seal – Brake Shaft	1

Ref. No.	Part No.	Description	No. Used
19	7201	Shaft – Input	1
20	7418	Washer – Thrust	1
21	7204	Gear Assembly (Incl. Ref. #22)	1
22	1518	Bearing – Needle	2
23	5175	Gear Assembly (Incl. Ref. # 22)	1
24	7205	Gear – Sliding	1
25	7206	Gear – Reduction	1
26	7207	Bearing – Needle	2
27	7208	Shaft – Reduction Gear	1
28	1243	Cup – Plug	1
29	5173	Gear – Hi &Second	1
30	5174	Gear Low & Reverse	1
31	5615	Rail – Shift, Front	1
32	5616	Rail – Shift, Rear	1
33	3503	Fork – Shift	2
34	933156	Pin – Spirol	2
35	5614	Pin – Shift	1

*Not Illustrated


TRANSMISSION 8–SPEED

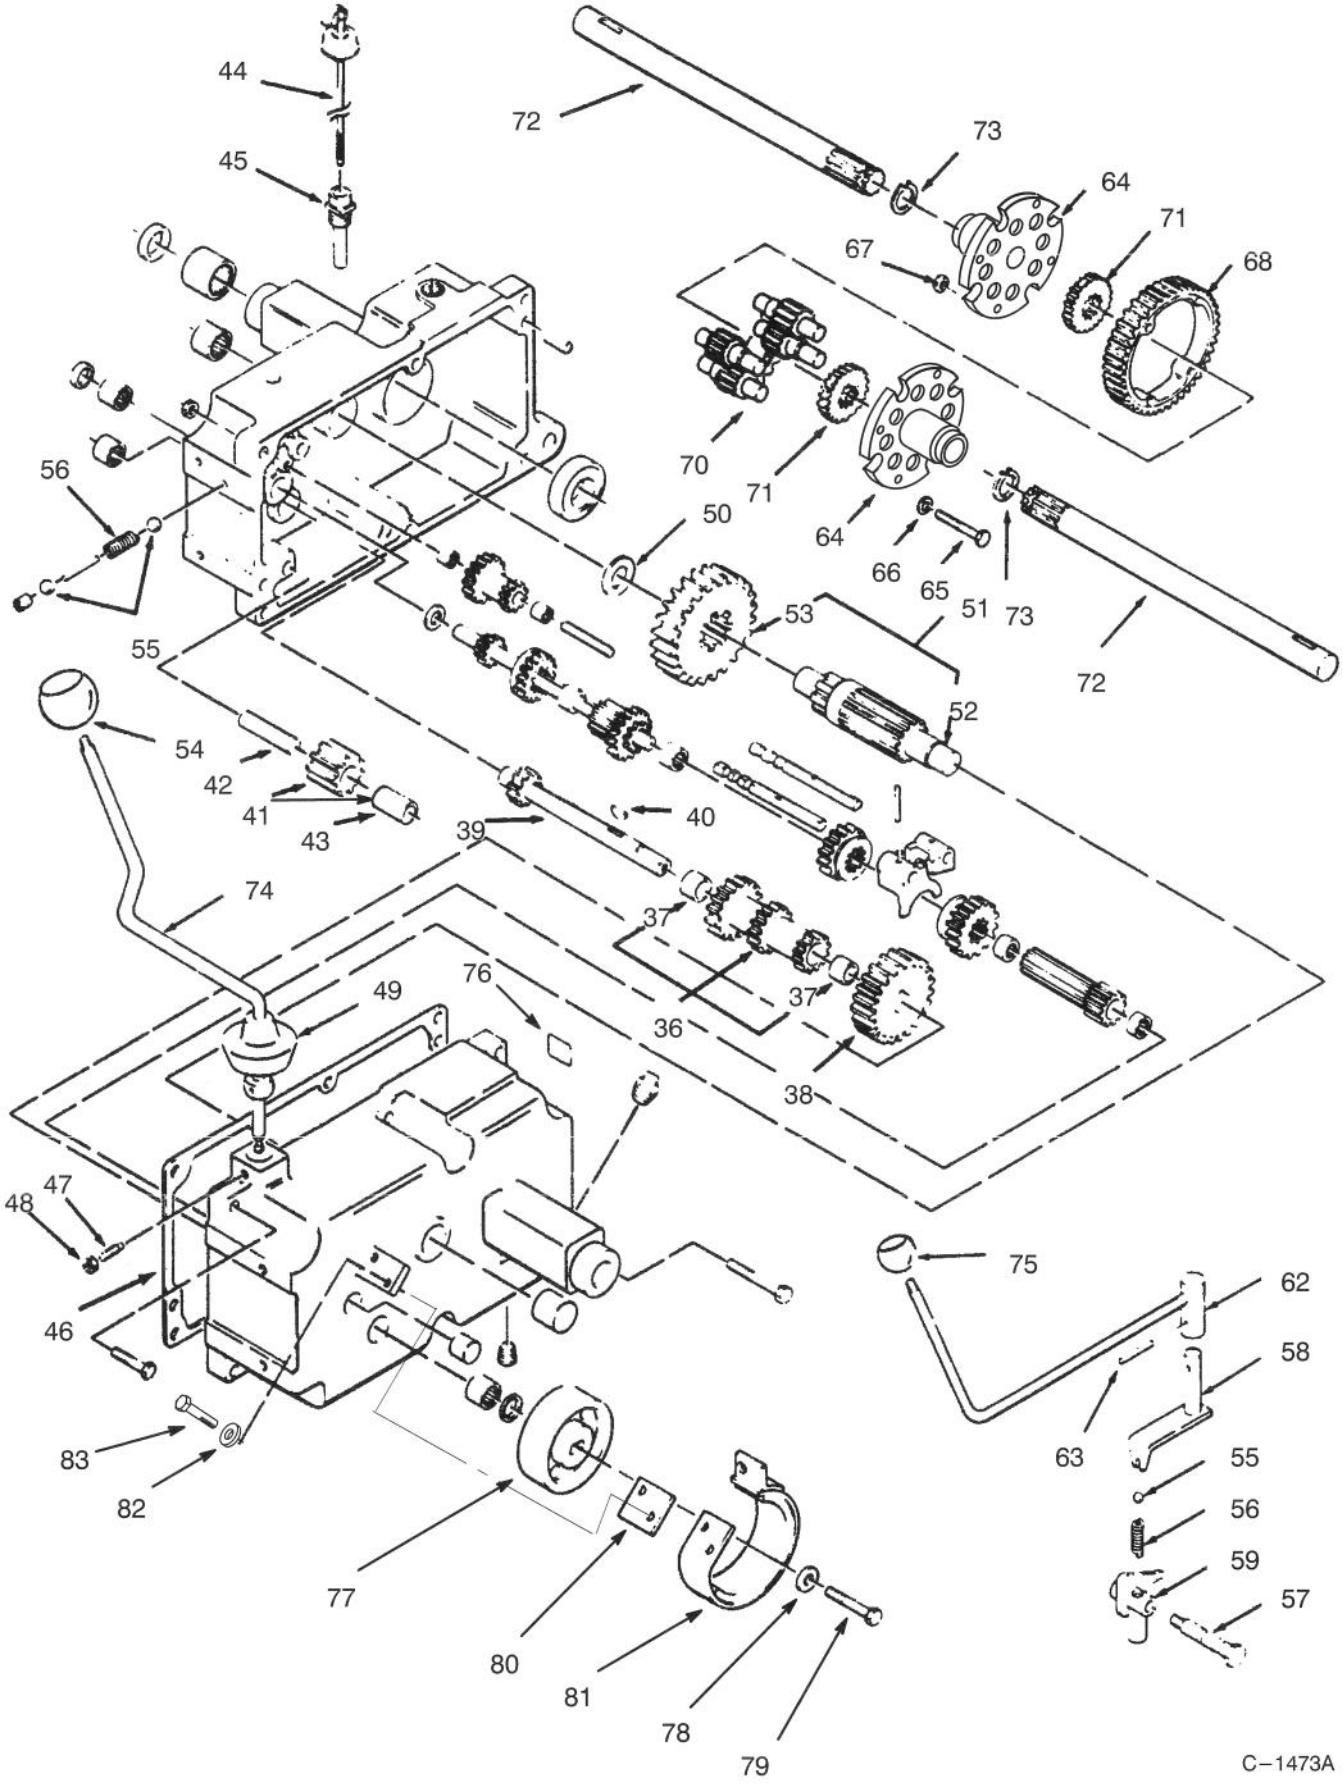

TRANSMISSION 8–SPEED

Ref. No.	Part No.	Description	No. Used
36	7269	Gear Assembly (Incl. Ref.#37)	1
37	1504	Bushing – Bronze	2
38	3527	Gear – Reduction	1
39	83–3530	Shaft – Cluster	1
40	937089	Key – Woodruff	1
41	4204	Gear Assembly, Reverse Idler (Incl. Ref. #43)	1
42	3909	Pin – Reverse Idler	1
43	1516	Bushing – Reverse Idler	1
44	101847	Dipstick	1
45	102703	Nipple – Transmission Fill	1
46	3912	Gasket – Transmission	1
47	1239	Screw – Set – Special	1
48	3217–5	Nut	1
49	3577	Cover – Dust	1
50	9547	Washer – Thrust	1
51	102974	Gear Assembly (Incl. Ref.# 52 & 53)	1
52	101625	Shaft – Pinion	1
53	101626	Gear 44 Tooth	1
54	108758	Knob – Gear Shift	1
55	3517	Ball – Detent	3
56	106030	Spring – Detent	2
57	7213	Bolt – Detent	1
58	7214	Lever – Shift Hi–Low Range	1
59	116636	Fork – Shift Hi–Low Range	1
62	110727	Rod – Shift Hi–Low Range	1
63	933184	Pin – Spirol	1
64	111196	Cap – Diff End	2
65	911423	Bolt	4
66	107374	Washer – Special	4
67	108881	Nut – Hex	4
68	105061	Gear – Differential Ring 43 Tooth	1
70	101623	Gear – Differential Pinion	8
71	101889	Gear – Differential Axle	2
72	105875	Axle – Rear	2
73	105876	Ring – Special, Snap	2
74	110725	Stick – Shift	1
75	83–2710	Knob – Hi–Lo Range Shift	1
76	92–8749	Decal – Unidrive	1
77	106719	Drum – Brake	1
78	2844	Washer – Special	1
79	110234	Screw – Hex. Hd..	1
80	9598	Plate – Stop	1
81	9593	Band – Brake	1
82	3253–3	Washer – Lock	2
83	321 – 3	Screw – Hex. Hd..	2

CLUTCH, BRAKE AND SPEED CONTROL LINKAGE

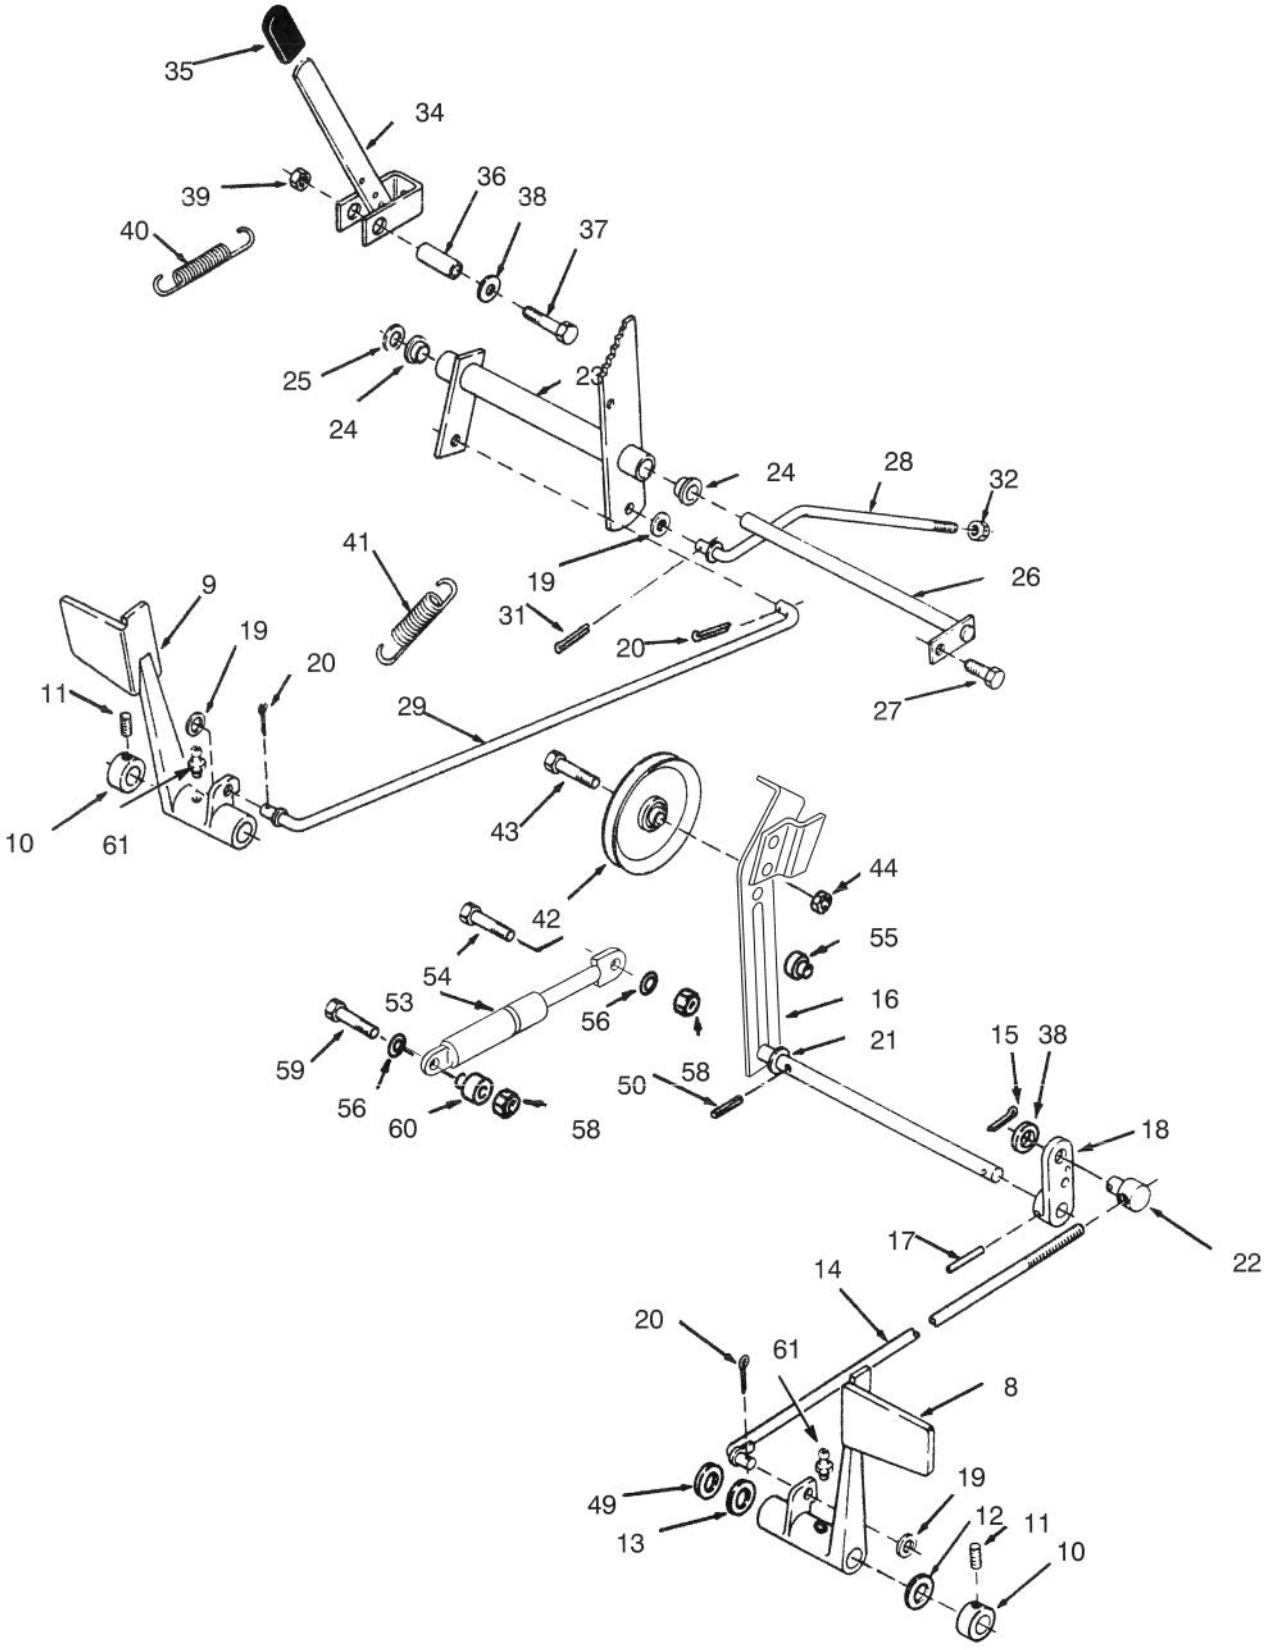


C–1475

CLUTCH, BRAKE AND SPEED CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
8	114814	Pedal – Clutch	1
9	114813	Pedal – Brake	1
10	111383	Collar	3
11	3245–32	Screw –Set	3
12	7896	Washer – Bowed	1
13	1278	Washer – Shim	1
14	103347	Rod – Clutch	1
15	3272–6	Pin – Cotter	1
16	78–2970	Arm – Clutch Idler	1
17	933190	Pin – Spirol	1
18	105896	Arm – Clutch Rod	1
19	920248	Washer – Nylon	3
20	3272–10	Pin – Cotter	3
21	3765	Washer – Shim	1
22	101161	Trunnion – Clutch Rod	1
23	103543	Bell Crank – Brake Linkage	1
24	7879	Bushing	2
25	3256–26	Washer	1
26	106417	Rod – Bell Crank Pivot	1
27	926694	Screw – Hex. Hd..	1
28	105900	Rod – Brake, Rear	1
29	105886	Rod – Brake, Front	1
31	933505	Pin – Cotter	1

Ref. No.	Part No.	Description	No. Used
32	3296–39	Nut	1
34	106451	Lever – Parking Brake	1
35	6820	Grip	1
36	102025	Spacer	1
37	323–9	Screw Hex. Hd..	1
38	3256–24	Washer	2
39	102809	Nut – Special	1
40	107677	Spring – Brake Return	1
41	103628	Spring – Return	1
42	7451	Pulley – Idler	1
43	106193	Bolt – Special	1
44	32146–2	Nut	1
49	920225	Washer – Special	1
50	933267	Pin – Spirol	1
53	78–3240	Spring – Gas	1
54	321–31	Screw – Hex. Hd..	1
55	78–3260	Spacer	1
56	3256–22	Washer	2
58	3296–42	Nut	2
59	321–9	Screw – Hex. Hd..	1
60	78–3250	Spacer	1
61	302–5	Fitting – Grease	2

MANUAL LIFT LINKAGE

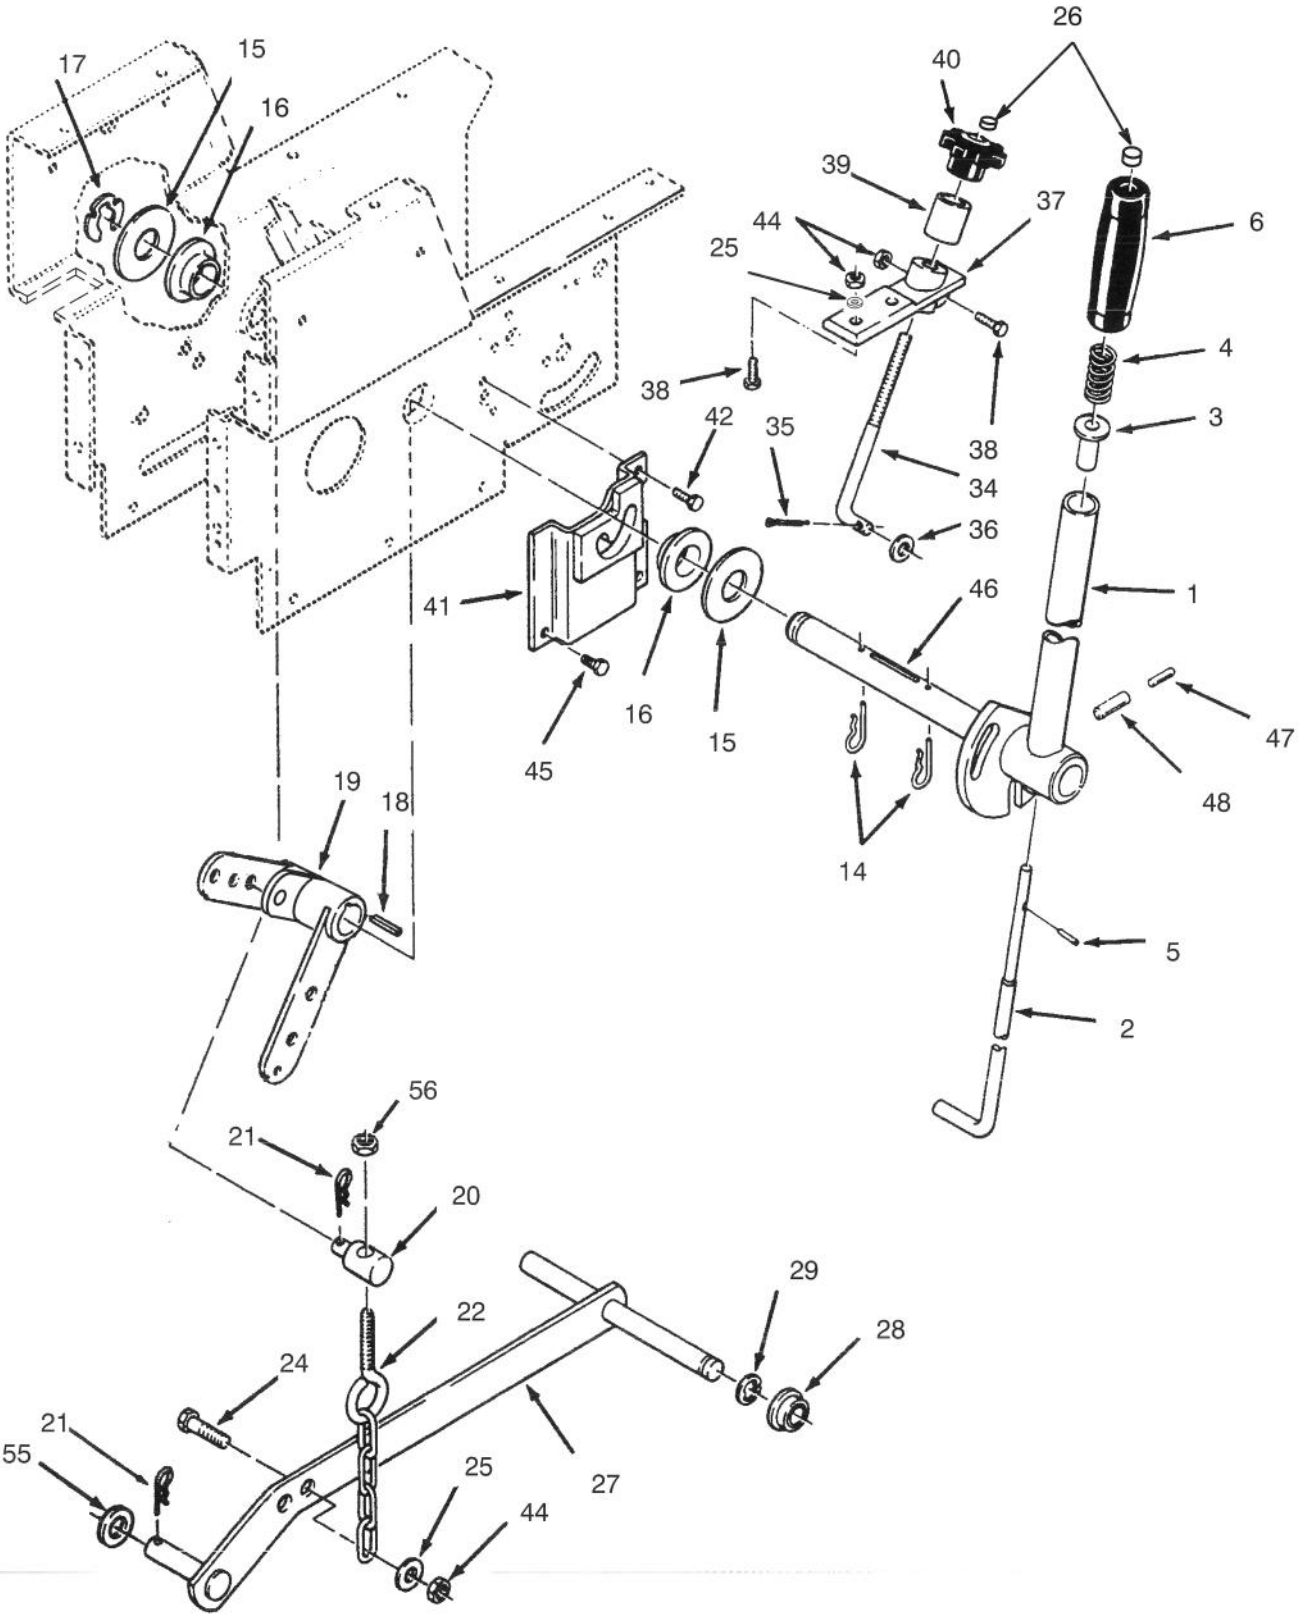


C–1477

MANUAL LIFT LINKAGE

Ref. No.	Part No.	Description	No. Used
1	108563	Lever – Lift (Incl. Ref.# 46, 47 & 48)	1
2	106257	Rod – Latch	1
3	8130	Retainer – Spring	1
4	3624	Spring	1
5	933148	Pin – Spirol	1
6	6542	Grip – Lift Lever	1
14	933507	Pin – Cotter	2
15	3256–62	Washer	2
16	106269	Bushing	2
17	32151–91	Retainer	1
18	1121	Key	1
19	78–1550	Lever – Lift	1
20	6739	Trunnion	1
21	933505	Pin – Cotter	2
22	106522	Chain – Lift	1
24	322–6	Screw – Hex. Hd..	1
25	3256–23	Washer	3
26	105316	Cap – Plunger	2

Ref. No.	Part No.	Description	No. Used
27	113445	Bar – Lift	1
28	6229	Bearing	1
29	32120–47	Ring – Retaining	1
34	110653	Rod – Height Control	1
35	3272–10	Pin – Cotter	1
36	3256–5	Washer	1
37	106345	Casting – Lift Lever	1
38	322–5	Screw – Hex. Hd..	3
39	106258	Sleeve	1
40	5280	Knob – Height Control	1
41	106411	Latch – Bracket	1
42	926694	Screw – Hex. Hd..	1
44	3296–29	Nut	4
45	926696	Screw – Hex. Hd..	2
46	108565	Shaft	1
47	32121–103	Pin – Spirol	1
48	32121–25	Pin – Roll	1
55	3256–25	Washer	1
56	3296–39	Nut	1

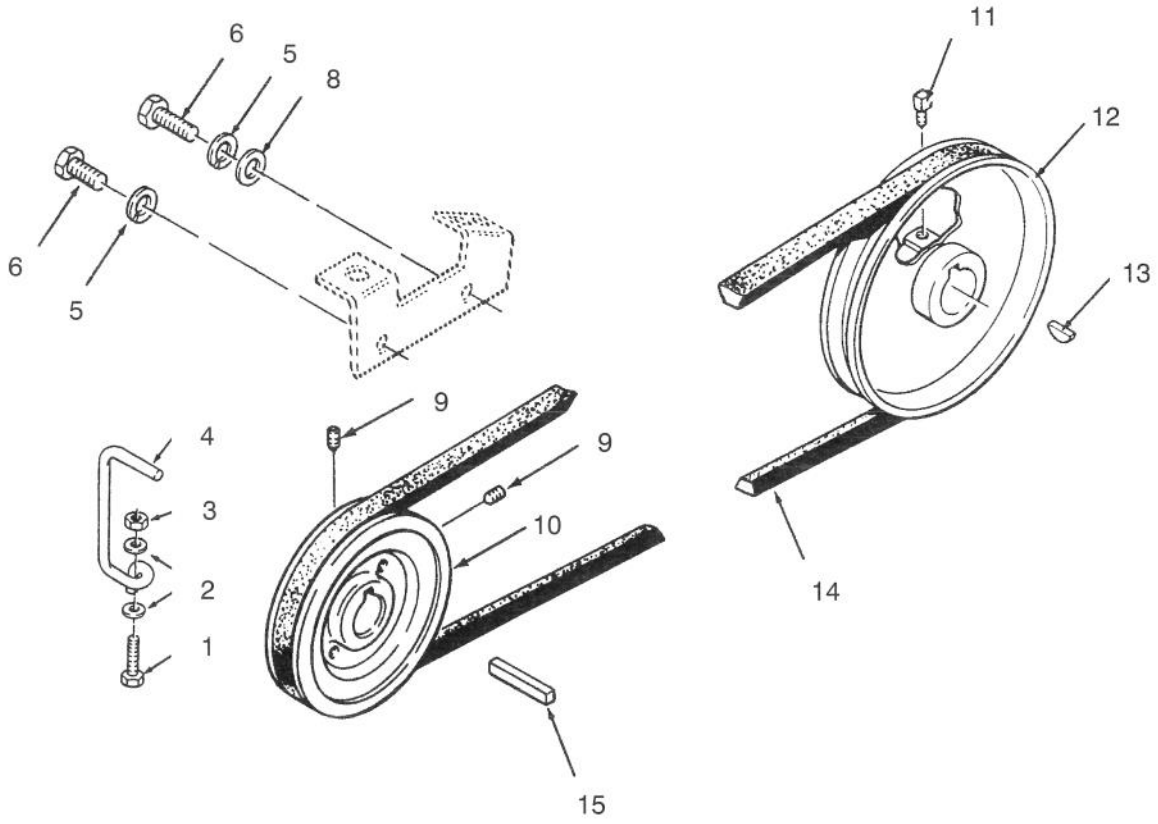


C–1656

DRIVE BELT AND PULLEYS

Ref. No.	Part No.	Description	No. Used
1	322–6	Bolt	2
2	3256–3	Washer	2
3	3296–29	Nut	2
4	120320	Guide – Belt	1
5	3253–21	Washer – Lock	3
6	323–6	Bolt	3
8	3256–25	Washer	3

Ref. No.	Part No.	Description	No. Used
9	3246–2	Screw – Set	2
10	7466	Pulley – Engine Drive	1
11	3242–2	Screw – Set	2
12	106165	Pulley – Transmission Drive	1
13	937221	Key – Hi–Pro	1
14	107939	Belt – Drive	1
15	105453	Key	1

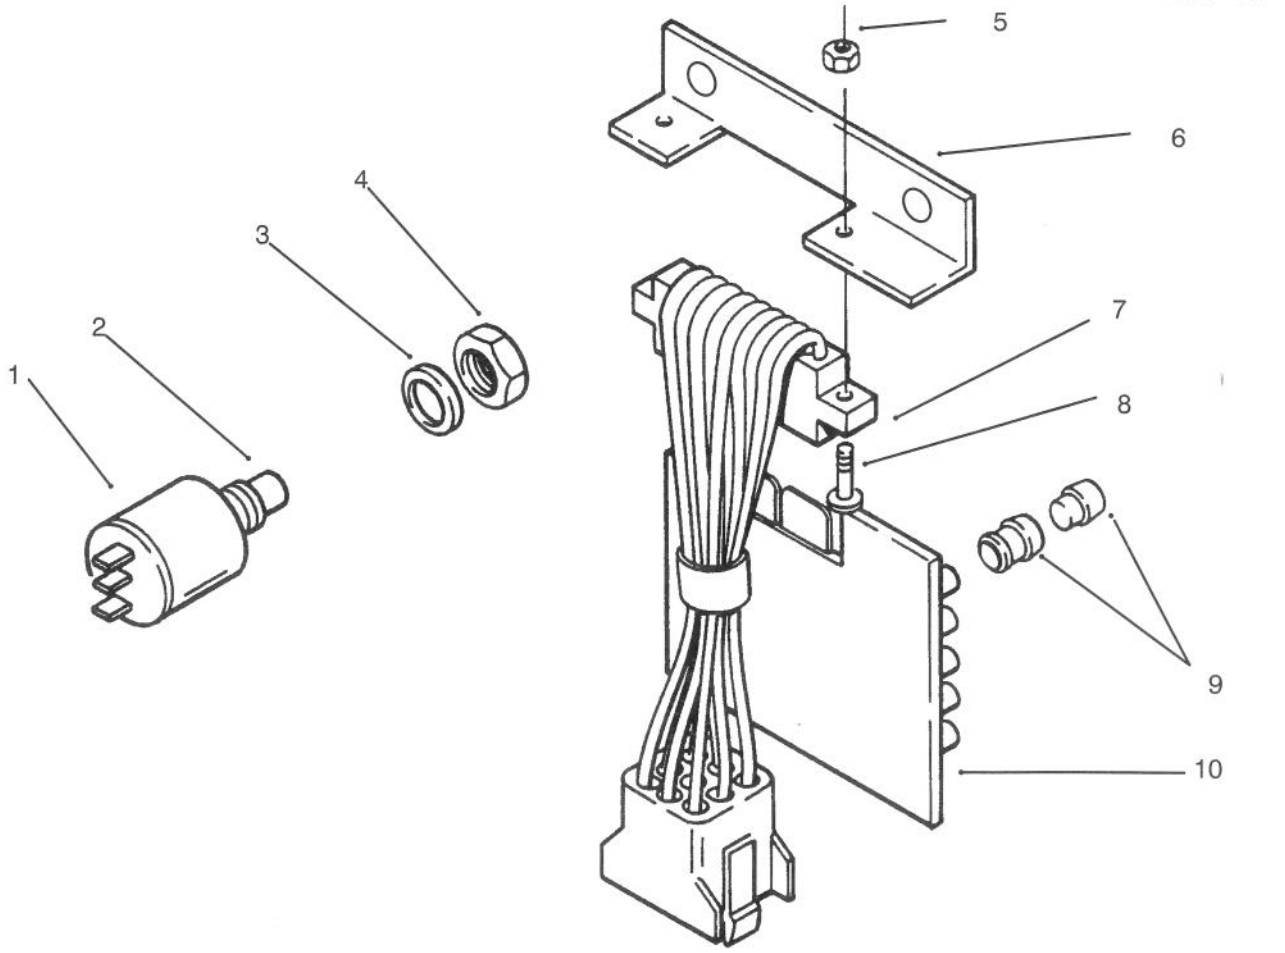


C–1497

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	116796	Test Switch (Incl. Ref. #2–4)	1
2	117217	Button – Switch	1
3	111767	Washer	1
4	111359	Nut – Hex	1
5	9157324	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
6	112506	Bracket	1
7	117377	Harness – Wiring	1
8	9107562	Screw	2
9	111343	Bushing Assembly & Indicator Lens	5
10	114825	PC Board w/Lights	1

ELECTRICAL SYSTEM

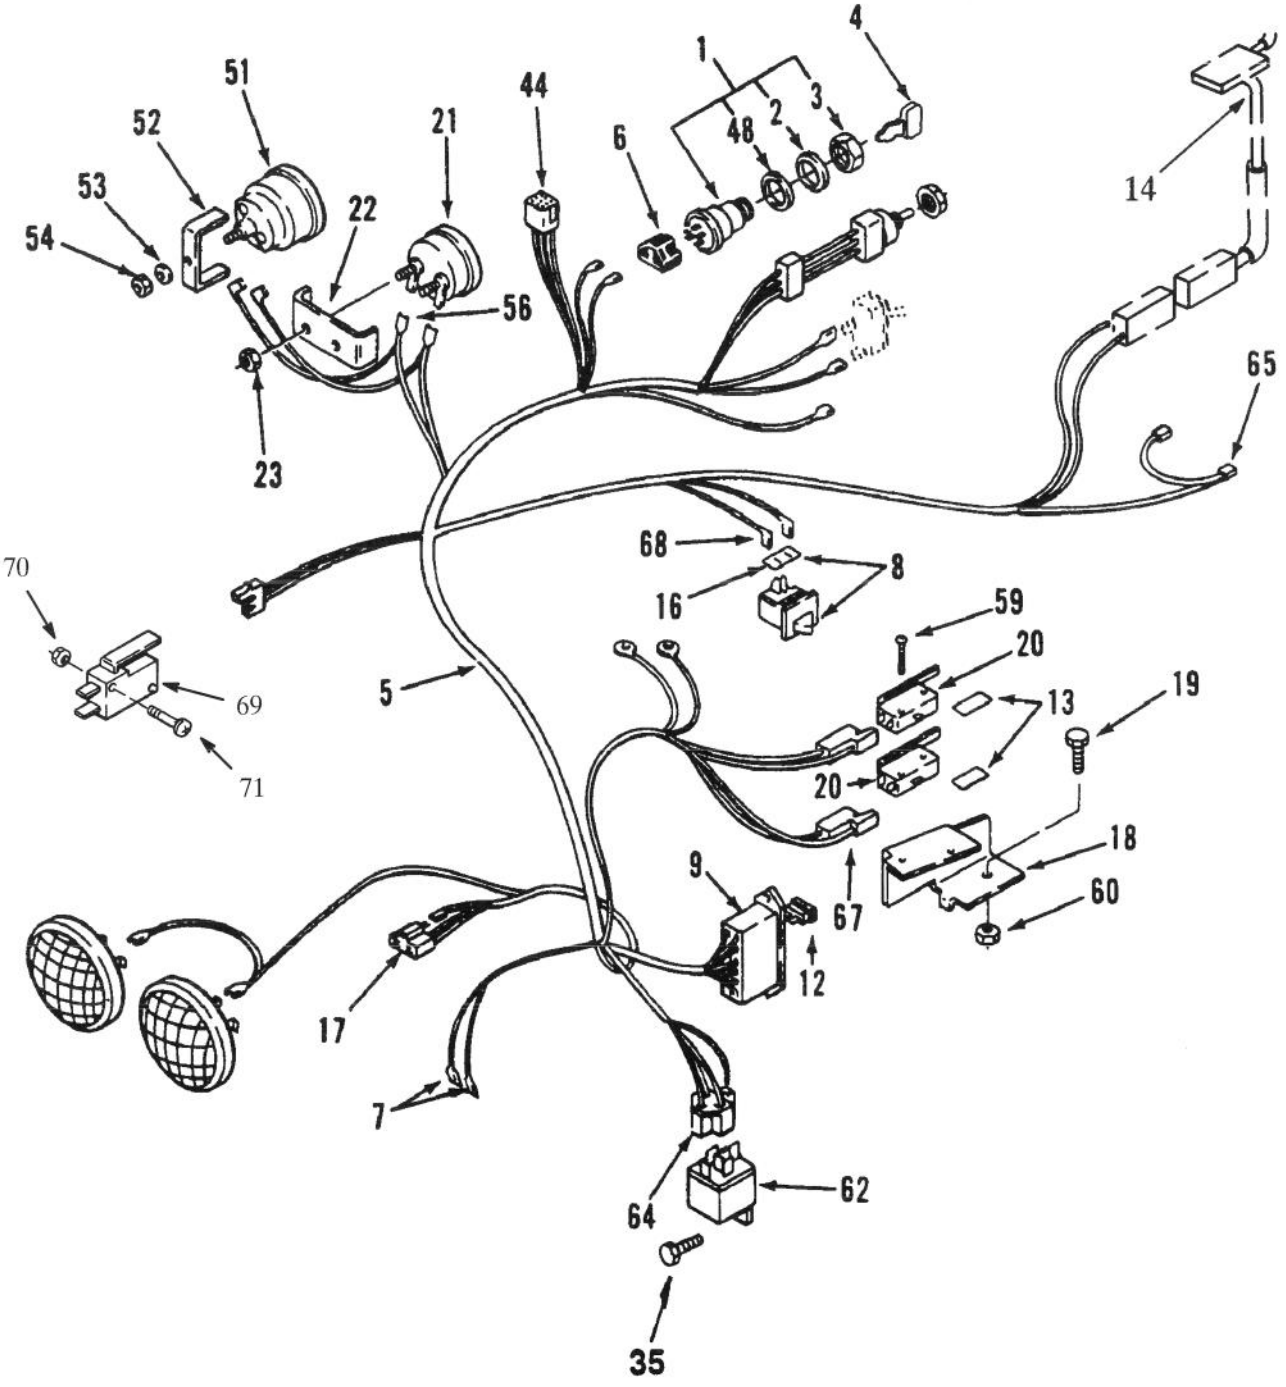

C–1657


ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	111216	Switch – Ignition	1
2	920160	Washer – Lock	1
3	101884	Nut – Special	1
4	62–7770	Key – Ignition, Padded	1
5	79–3600	Wiring Harness (Incl. Ref.# 6,7,9,17,44,65 & 68)	1
6	104926	Switch – Connector Body Ignition	1
7	518105	Terminal	1
8	103480	Switch – Clutch Interlock, (Incl. Ref.#16)	1
9	120930	Body – Fuse	1
12	109355	Fuse 15 Amp ATO or ATC	1
*	109102	Fuse 25 Amp ATO or ATC	1
*	NN10277	Fuse 30 Amp ATO or ATC	1
13	111642	Barrier – Switch Insulator	2
14	38–1420	Switch – Seat	1
16	110502	Shield – Dirt	1
17	112185	Body – Connector	1
18	115411	Support – Switch	1
19	926671	Bolt	1

Ref. No.	Part No.	Description	No. Used
20	111332	Switch – PTO Interlock	2
21	79–0060	Voltmeter	1
22	78–0080	Clamp – Voltmeter	1
23	5924	Nut	2
35	910794	Screw	1
48	920262	Washer – Special	1
51	78–0020	Meter – Hour (Incl. Ref.# 52–54)	1
52	114017	Clamp – Hour Meter	1
53	920120	Washer – Lock	1
54	915962	Nut – Hex	1
59	910478	Screw	2
60	915732	Nut	2
62	116397	Relay	1
64	518105	Terminal	1
65	6921	Terminal	1
68	518077	Terminal	2
69	111332	Switch – Parking Brake	1
70	915732	Nut – Hex	2
71	910948	Screw	2

*Not Illustrated


ELECTRICAL SYSTEM

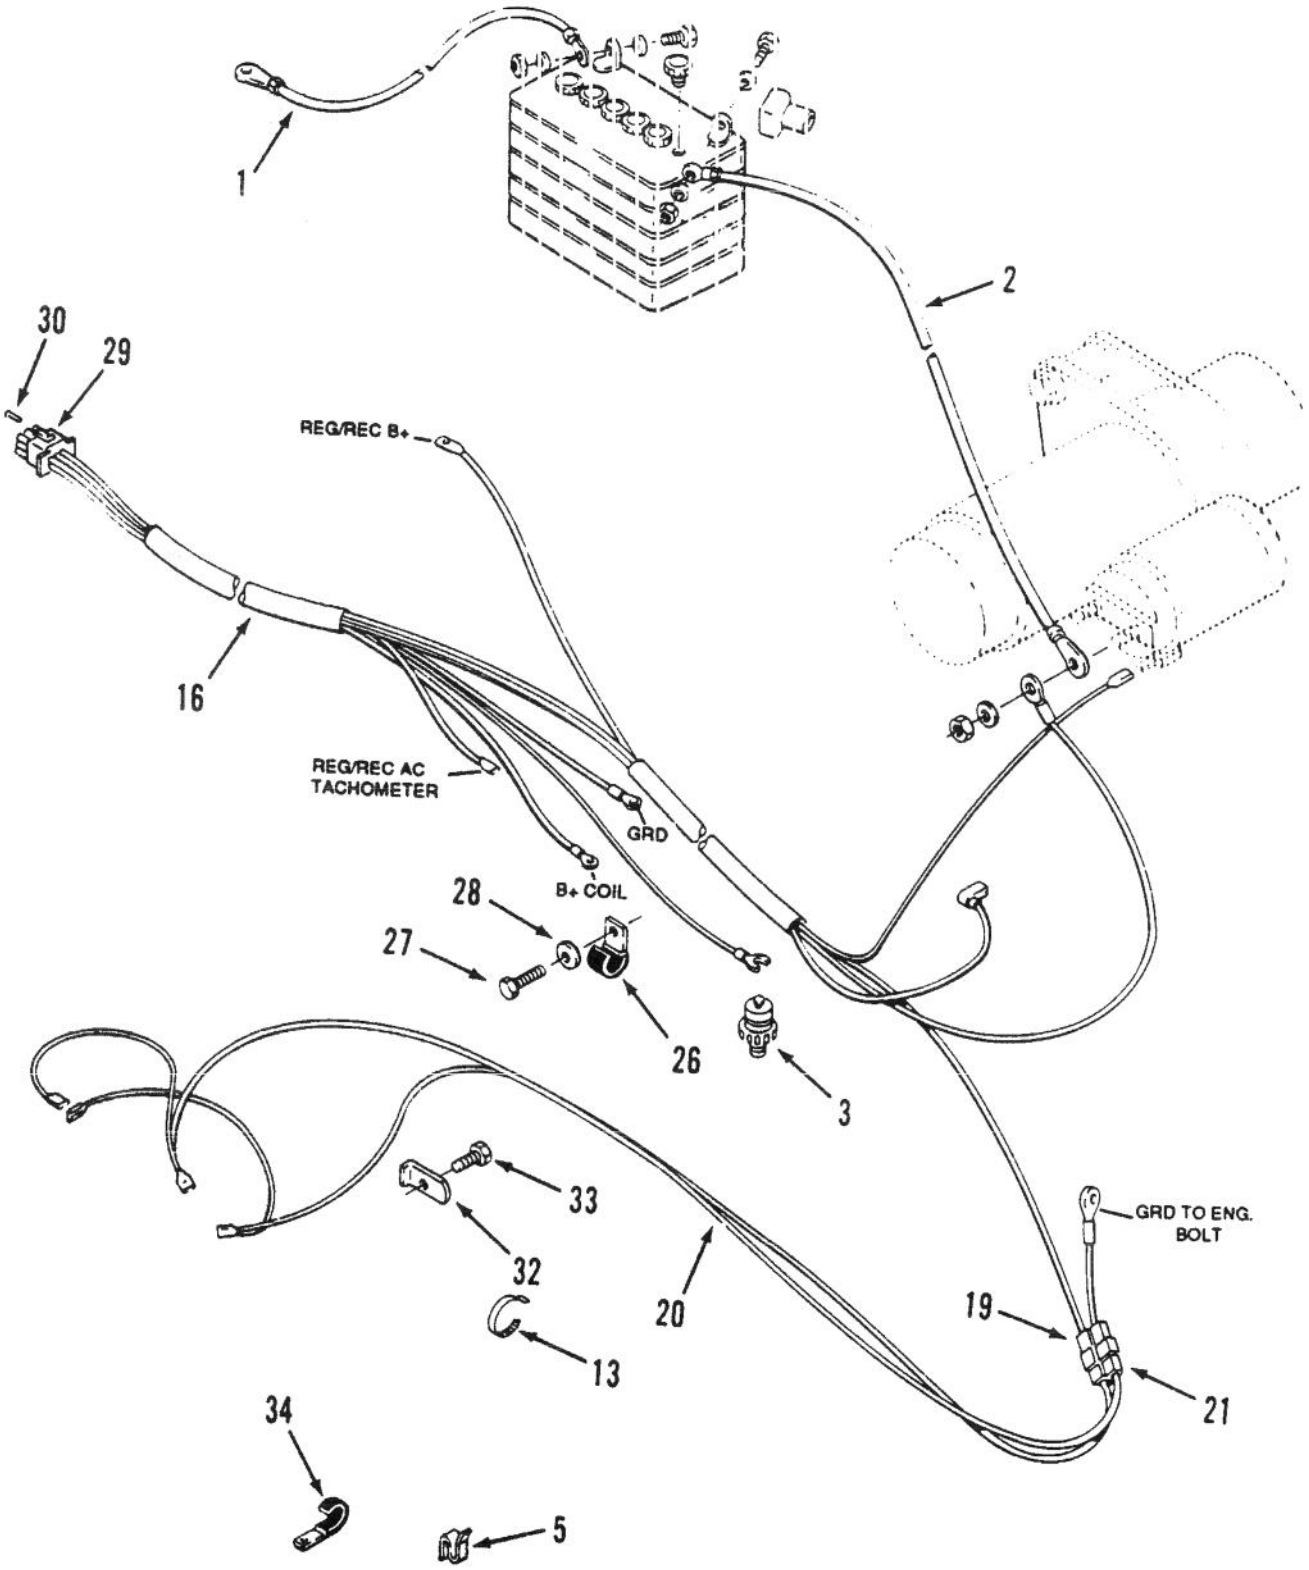

C–1673

ELECTRICAL SYSTEM


Ref. No.	Part No.	Description	No. Used
1		Cable – Battery Ground	1
2		Cable – Battery (+) to Solenoid	1
3	NN10824	Switch – Low Oil Pressure	1
4	109553	Cover – Terminal	2
5	3023	Clip – Small	1
13	100571	Tie – Cable	1
16	NN10553	Harness – Engine Wiring	1
19	NN10278	Connector	1
20	114052	Harness – Headlight	1
21	109357	Connector	1
26	NN10348	Clip	1
27	NN10399	Screw	1
28	NN10425	Washer – Lock	1
29	NN10281	Connector	1
30	NN10279	Contact – Socket	1
32	109459	Clamp	2
33	926671	Bolt – Hex	2
34	8830	Clip	1

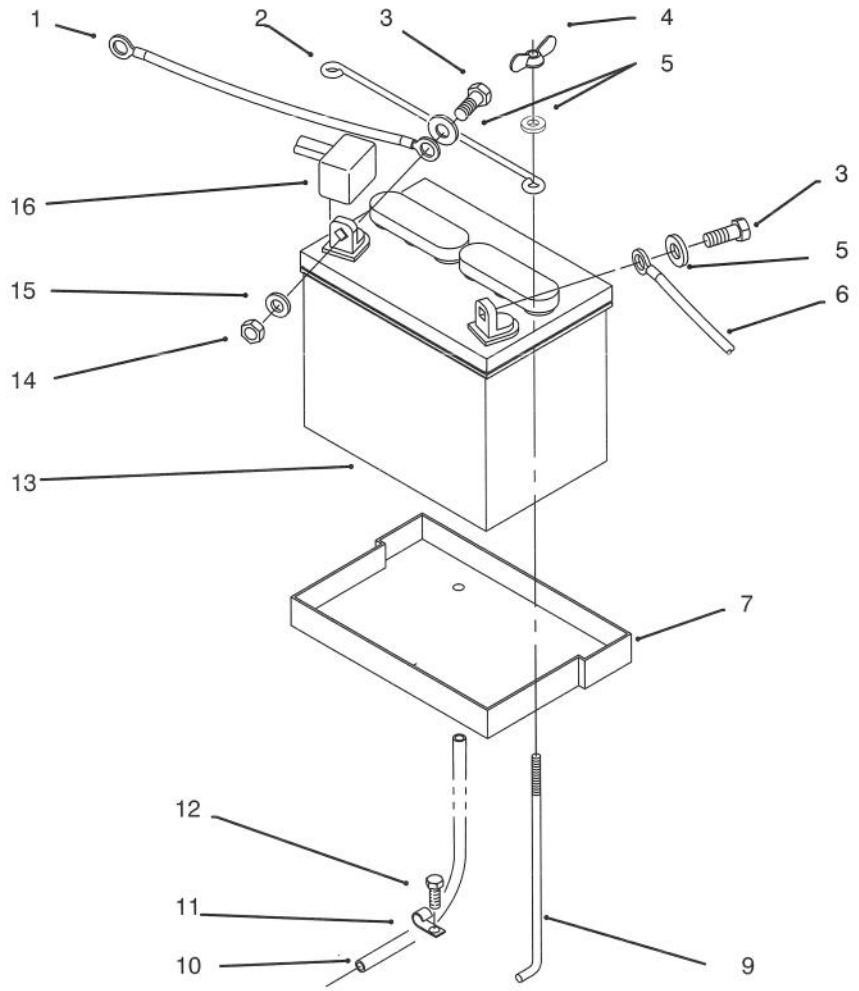

BATTERY

Ref. No.	Part No.	Description	No. Used
1	114210	Cable – Battery	1
2	113010	Rod – Battery Hold Down	1
3	321–3	Screw – Hex. Hd..	2
4	32103–22	Nut – Wing	4
5	3256–22	Washer	4
6	111069	Cable – Battery	1
7	106948	Tray – Battery	1
9	113969	Hook – Battery	2

Ref. No.	Part No.	Description	No. Used
10	114720	Tube – Battery	1
11	8830	Retainer	1
12	322–2	Screw – Hex. Hd..	1
13	105842	Battery	1
14	3296–42	Nut	2
15	3253–3	Washer – Lock	2
16	109553	Boot – Battery Cable	1

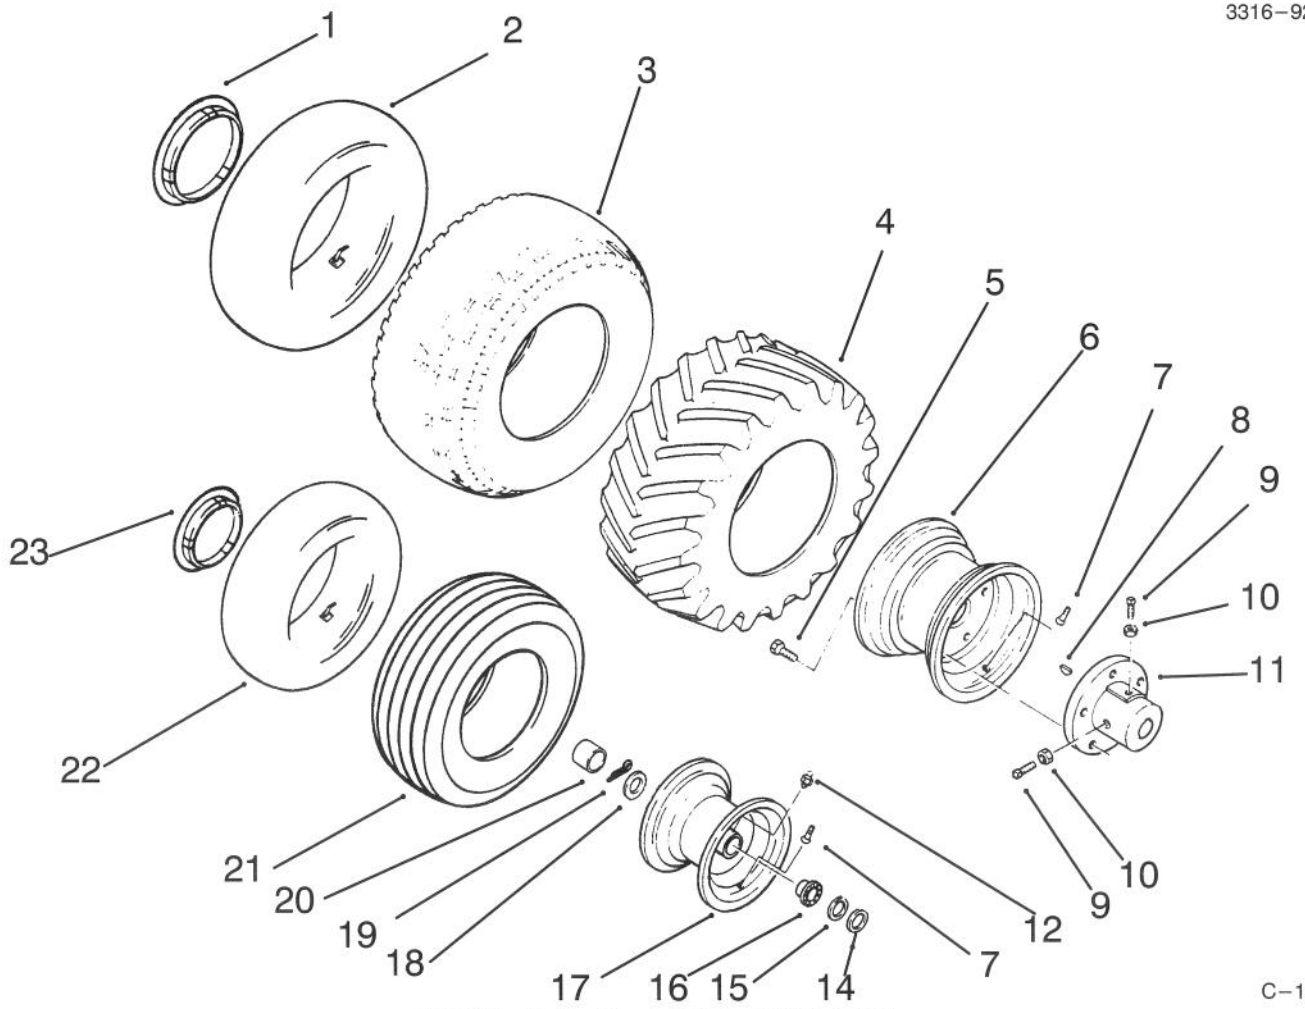


C–1499

WHEELS AND TIRES

Ref. No.	Part No.	Description	No. Used
1	114428	Logo – Hub Cap 12" (Opt.)	2
2	7007	Tube – Rear (Opt.)	2
*	100291	Tube – Cleat Tire (Opt.)	2
3	116744	Tire – Turf Trac, Rear	2
4	7607	Tire – Cleat, (Opt.)	2
5	83–2720	Bolt – Lug	10
6	111516	Wheel – Rear	2
*	110677	Wheel – Cleat (Opt.)	2
7	5108	Stem – Valve	4
8	937108	Key – Woodruff	2
9	3243–5	Screw – Set	4
10	3218–3	Nut	4
11	105763	Hub – Rear	2

Ref. No.	Part No.	Description	No. Used
12	109500	Fitting – Grease	2
14	5210	Washer – Shim .015	2
15	1278	Washer – Shim .050	4
16	110513	Bearing – Ball	4
17	78–1680	Rim – Front	2
18	111952	Washer – Special Hub Cap	2
19	3272–17	Pin – Cotter	2
20	111591	Hubcap	2
21	117127	Tire – Turf Trac, Front	2
22	100079	Tube – Front" (Opt.)	2
23	114427	Logo – Hub Cap 6" (Opt.)	2
*	78–1660	Wheel Assembly – Front (Incl. Ref.# 7,12, 16 & 21)	2

*Not Illustrated

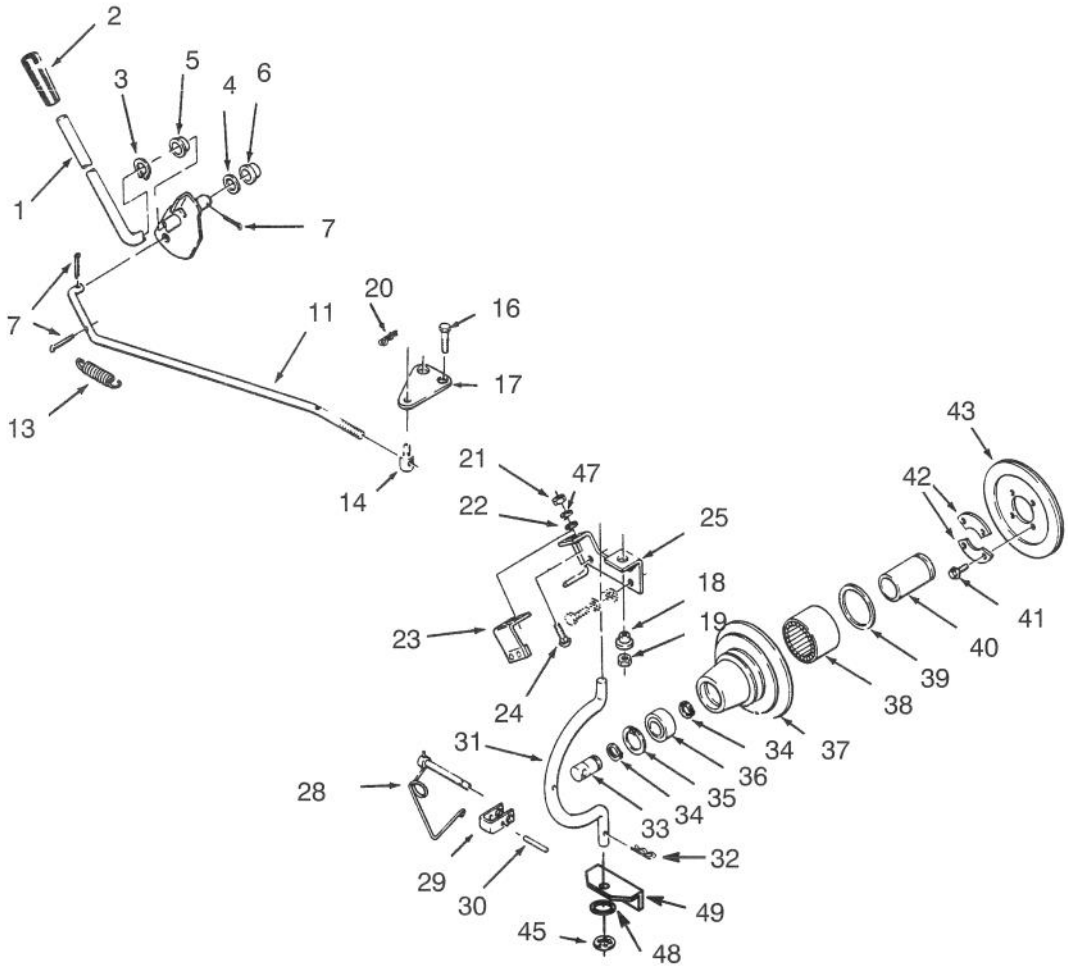


C–1500

PTO CLUTCH AND CONTROL

Ref. No.	Part No.	Description	No. Used
1	111234	Lever – PTO Clutch	1
2	9038	Grip	1
3	32151–11	Ring – Grip	1
4	3765	Washer – Shim	2
5	5666	Bushing – Nyliner	1
6	5983	Bushing	1
7	3272–10	Pin – Cotter	3
11	111052	Rod – PTO Clutch	1
13	103125	Spring	1
14	110656	Trunnion	1
16	323–7	Screw – Hex. Hd..	1
17	110669	Plate – PTO	1
18	104859	Spacer	1
19	3296–39	Nut	1
20	933505	Pin – Cotter	1
21	3218–1	Nut	2
22	3256–22	Washer	2
23	110665	Brake Assembly – PTO	1
24	3229–25	Bolt – Carriage	2
25	111240	Bracket – Engine	1

Ref. No.	Part No.	Description	No. Used
28	111314	Pin – Locking	1
29	113107	Clevis	1
30	933274	Pin – Spirol	1
31	113108	Rod – PTO Housing	1
32	933506	Pin – Cotter	1
33	102872	Shaft – Stub	1
34	32120–72	Ring – Retaining	2
35	32120–62	Ring – Retaining	1
36	109842	Bearing – Ball	1
37	103478	Housing – Pulley	1
38	6662	Bearing – Needle	1
39	6663	Seal	1
40	6658	Race – Bearing	1
41	321–8	Bolt – Nylok	4
42	6659	Retainer	2
43	114881	Facing – Clutch Plate	1
45	106695	Push–On Ring	1
47	3253–3	Washer – Lock	2
48	3256–27	Washer	1
49	102870	Bracket Support	1

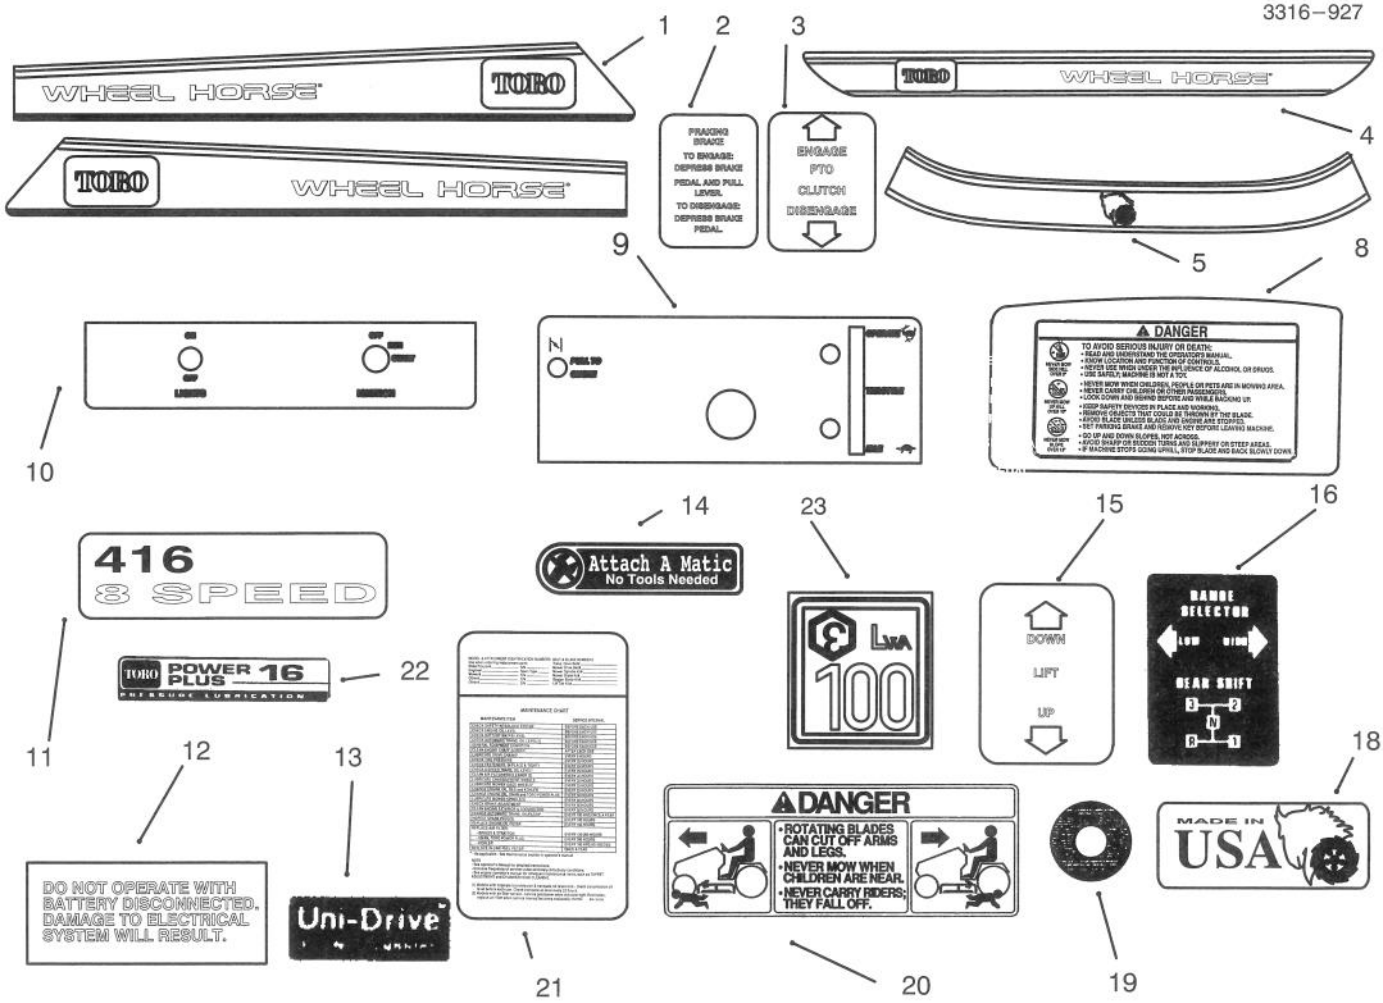

DECALS

Ref. No.	Part No.	Description	No. Used
1	92–9825	Decal – Hood RH	1
	92–9824	Decal – Hood LH	1
2	111510	Decal – Parking Brake	1
3	111960	Decal – PTO Clutch	1
4	92–9827	Decal – Rear Fender	1
5	92–9826	Decal – Front Hood	1
8	92–9837	Decal – Rear Hood Danger	1
9	119190	Decal – Lower Dash	1
10	74–2470	Decal – Switch Plate	1
11	92–9831	Decal – 416–8 Speed	2
12	111926	Decal – Electrical System	1

Ref. No.	Part No.	Description	No. Used
13	92–8749	Decal – Unidrive	1
14	92–8747	Decal – Attach–A–Matic	2
15	112168	Decal – Lift	1
16	111534	Decal – Hi–Low Shift	1
18	76–1340	Decal – Made in U.S.A.	1
19	KH10191	Decal – Air Cleaner/Lub	1
20	92–8946	Decal – Danger	1
21	88–3200	Decal – Maintenance	1
22	118540	Decal – Power Plus	1
23	114621	Decal – Noise (Model 73440 Only)	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
1121	Key	35	18	1
1239	Screw – Set – Special	31	47	1
1243	Cup – Plug	29	28	1
1278	Washer – Shim	33	13	1
1278	Washer – Shim .050	43	15	4
1481	Fitting – Grease, 45°	9	22	2
1504	Bushing – Bronze	31	37	2
1516	Bushing – Reverse Idler	31	43	1
1518	Bearing – Needle	29	22	2
1523	Bearing – Needle	29	16	1
1529	Bearing – Needle	29	12	1
1532	Bearing – Needle	29	9	2
1542	Bearing – Needle	29	10	1
1644	Hitch – Drawbar	10	11	1
2844	Washer – Special	31	78	1
3023	Clip – Small	41	5	1
3023	Clip – Small	6	8	1
3023	Clip – Speed	7	24	1
3503	Fork – Shift	29	33	2
3517	Ball – Detent	31	55	3
3527	Gear – Reduction	31	38	1
3577	Cover – Dust	31	49	1
3624	Spring	35	4	1
3765	Washer – Shim	44	4	2
3765	Washer – Shim	33	21	1
3909	Pin – Reverse Idler	31	42	1
3912	Gasket – Transmission	31	46	1
3915	Pin – Locating	29	15	2
4204	Gear Assembly, Reverse	31	41	1
5108	Stem – Valve	43	7	4
5173	Gear – Hi &Second	29	29	1
5174	Gear Low & Reverse	29	30	1
5175	Gear Assembly	29	23	1
5210	Washer – Shim	9	11	A/R
5210	Washer – Shim .015	43	14	2
5224	Cap	11	28	1
5280	Knob – Height Control	35	40	1
5614	Pin – Shift	29	35	1
5615	Rail – Shift, Front	29	31	1
5616	Rail – Shift, Rear	29	32	1
5618	Ring – Retaining	10	9	2
5618	Ring – Retaining	9	32	1
5638	Axle	9	31	1
5666	Bushing – Nyliner	44	5	1
5924	Nut	39	23	2
5924	Nut	3	25	2
5979	Bushing – Hood Pivot	2	15	2
5983	Bushing	44	6	1
6216	Pin & Plate	9	30	1
6229	Bearing	35	28	1
6397	Bearing	9	21	1
6472	Bearing – Flanged	9	5	1
6542	Grip – Lift Lever	35	6	1
6658	Race – Bearing	44	40	1
6659	Retainer	44	42	2
6662	Bearing – Needle	44	38	1
6663	Seal	44	39	1
6739	Trunnion	35	20	1
6820	Grip	33	35	1
6921	Terminal	39	65	1
7007	Tube – Rear (Opt.)	43	2	2
7201	Shaft – Input	29	19	1
7204	Gear Assembly	29	21	1
7205	Gear – Sliding	29	24	1
7206	Gear – Reduction	29	25	1
7207	Bearing – Needle	29	26	2
7208	Shaft – Reduction Gear	29	27	1
7213	Bolt – Detent	31	57	1
7214	Lever – Shift Hi–Low Range	31	58	1
7269	Gear Assembly	31	36	1
7418	Washer – Thrust	29	20	1
7451	Pulley – Idler	33	42	1
7456	Clamp	5	17	4
7466	Pulley – Engine Drive	36	10	1
7607	Tire – Cleat, (Opt.)	43	4	2
7879	Bushing	33	24	2
7896	Washer – Bowed	33	12	1
7896	Washer – Bowed	9	15	1
8043	Bulb – Light, Metal Base	6	14	2
8130	Retainer – Spring	35	3	1
8616	Spring	10	1	2
8830	"J"Clip	6	27	1
8830	Clip	3	22	2
8830	Clip	41	34	1
8830	Retainer	42	11	1
9038	Grip	44	2	1
9038	Grip	10	20	1
9416	Bearing – Needle	29	11	2
9547	Washer – Thrust	31	50	1
9593	Band – Brake	31	81	1
9598	Plate – Stop	31	80	1
100079	Tube – Front (Opt.)	43	22	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
100291	Tube – Cleat Tire (Opt.)	43	*	2
100441	Seal – Brake Shaft	29	18	1
100442	Seal – Input Shaft	29	13	1
100443	Seal – Axle	29	14	4
100571	Tie – Cable	41	13	1
101017	Rod – Mid Hitch Lock	10	17	1
101161	Trunnion – Clutch Rod	33	22	1
101623	Gear – Differential Pinion	31	70	8
101625	Shaft – Pinion	31	52	1
101626	Gear 44 Tooth	31	53	1
101707	Lock – Attachment	10	24	1
101711	Housing – Front Hitch	10	3	1
101750	Rod – Pivot Latch	10	22	1
101751	Rod – Lock	10	25	1
101847	Dipstick	31	44	1
101850	Rod – Hood Stop	2	19	1
101884	Nut – Special	39	3	1
101884	Nut – Special	3	13	1
101889	Gear – Differential Axle	31	71	2
102025	Spacer	33	36	1
102138	Switch – Light	3	23	1
102592	Tie Rod Asm, RH	9	3	1
102644	Plate – Mid Hitch	10	4	2
102703	Nipple – Transmission Fill	31	45	1
102809	Nut – Special	33	39	1
102870	Bracket Support	44	49	1
102872	Shaft – Stub	44	33	1
102950	Ring – Retaining	3	18	1
102974	Gear Assembly	31	51	1
103125	Spring	44	13	1
103347	Rod – Clutch	33	14	1
103478	Housing – Pulley	44	37	1
103480	Switch – Clutch Interlock,	39	8	1
103543	Bell Crank – Brake Linkage	33	23	1
103628	Spring – Return	33	41	1
104047	Bushing	6	15	1
104048	Valve – Fuel Shut–Off	6	16	1
104859	Spacer	44	18	1
104926	Switch – Connector Body	39	6	1
105061	Gear – Differential Ring	31	68	1
105202	Base – Taillight, w/Bulb	6	11	2
105269	Shaft – Drawbar Hitch	10	10	1
105316	Cap – Plunger	35	26	2
105316	Cap – Lock Rod	10	19	2
105453	Key	36	15	1
105503	Bushing	7	22	2
105524	Bracket – Pivot	7	8	2
105763	Hub – Rear	43	11	2
105797	Ring – Retaining	2	16	2
105797	Ring – Retaining	10	26	6
105842	Battery	42	13	1
105875	Axle – Rear	31	72	2
105876	Ring – Special, Snap	31	73	2
105886	Rod – Brake, Front	33	29	1
105896	Arm – Clutch Rod	33	18	1
105900	Rod – Brake, Rear	33	28	1
106030	Spring – Detent	31	56	2
106165	Pulley – Transmission Drive	36	12	1
106193	Bolt – Special	33	43	1
106222	Footrest – RH	5	22	1
106223	Footrest – LH	5	18	1
106234	Tank – Fuel	6	1	1
106236	Support – Fuel Tank, RH	6	30	1
106250	Cover – Dust	4	15	1
106257	Rod – Latch	35	2	1
106258	Sleeve	35	39	1
106269	Bushing	35	16	2
106345	Casting – Lift Lever	35	37	1
106352	Guard – Lower Belt	5	21	1
106411	Latch – Bracket	35	41	1
106417	Rod – Bell Crank Pivot	33	26	1
106451	Lever – Parking Brake	33	34	1
106522	Chain – Lift	35	22	1
106634	Pin – Hitch	10	13	1
106695	Push–On Ring	44	45	1
106719	Drum – Brake	31	77	1
106948	Tray – Battery	42	7	1
107069	Clip	5	12	3
107069	Nut – Speed	4	14	7
107374	Washer – Special	31	66	4
107677	Spring – Brake Return	33	40	1
107939	Belt – Drive	36	14	1
107951	Bracket – Fender Front	6	24	1
107975	Guard – Belt	5	1	1
108130	Wire – Headlight Ground	2	2	1
108457	Nut – Push	5	3	1
108464	Support – Fuel Tank, LH	6	21	1
108563	Lever – Lift	35	1	1
108565	Shaft	35	46	1
108758	Knob – Gear Shift	31	54	1
108881	Nut – Hex	31	67	4
109045	Bulb – Light, All Glass	6	*	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
109102	Fuse 25 Amp ATO or ATC	39	*	1
109189	Bearing	9	35	1
109262	Washer – Special	9	16	2
109355	Fuse 15 Amp ATO or ATC	39	12	1
109357	Connector	41	21	1
109459	Clamp	2	3	2
109459	Clamp	41	32	2
109494	Retainer – Headlight RH	2	*	1
109495	Retainer – Headlight LH	2	22	1
109500	Fitting – Grease	43	12	2
109530	Nut	3	10	1
109553	Boot – Battery Cable	42	16	1
109553	Cover – Terminal	41	4	2
109554	Bracket – Belt Guard	5	6	1
109842	Bearing – Ball	44	36	1
109989	Spacer	7	3	4
110234	Screw – Hex. Hd..	31	79	1
110502	Shield – Dirt	39	16	1
110513	Bearing – Ball	43	16	4
110636	Pad – Footrest	5	15	2
110653	Rod – Height Control	35	34	1
110656	Trunnion	44	14	1
110665	Brake Assembly – PTO	44	23	1
110669	Plate – PTO	44	17	1
110677	Wheel – Cleat (Opt.)	43	*	2
110725	Stick – Shift	31	74	1
110727	Rod – Shift Hi–Low Range	31	62	1
110960	Fender	6	4	1
111034	Plate – Hood Stand	3	21	1
111052	Rod – PTO Clutch	44	11	1
111069	Cable – Battery	42	6	1
111071	Bumper	7	19	2
111196	Cap – Diff End	31	64	2
111198	Case–Transmission, LH	29	2	1
111199	Bearing – Ball	29	8	2
111200	Case–Transmission, RH	29	1	1
111216	Switch – Ignition	39	1	1
111234	Lever – PTO Clutch	44	1	1
111240	Bracket – Engine	44	25	1
111271	Console	3	6	1
111314	Pin – Locking	44	28	1
111332	Switch – PTO Interlock	39	20	2
111332	Switch – Parking Brake	39	69	1
111343	Bushing Assembly	37	9	5
111357	Clip	11	31	1
111359	Nut – Hex	37	4	1
111383	Collar	33	10	3
111392	"J"Clip	3	37	1
111510	Decal – Parking Brake	45	2	1
111516	Wheel – Rear	43	6	2
111534	Decal – Hi–Low Shift	45	16	1
111591	Hubcap	43	20	2
111642	Barrier – Switch Insulator	39	13	2
111757	Edging – Console	3	3	1
111767	Washer	37	3	1
111926	Decal – Electrical System	45	12	1
111952	Washer – Special Hub Cap	43	18	2
111960	Decal – PTO Clutch	45	3	1
112168	Decal – Lift	45	15	1
112185	Body – Connector	39	17	1
112214	Control – Choke	3	9	1
112415	Stop – PTO	3	2	1
112506	Bracket	37	6	1
112506	Bracket – Indicator Lights	3	32	1
112564	Lens – Taillight	6	13	2
113010	Rod – Battery Hold Down	42	2	1
113107	Clevis	44	29	1
113108	Rod – PTO Housing	44	31	1
113179	Nut	3	19	1
113381	Spindle – LH	9	33	1
113382	Spindle – RH	9	*	1
113443	Tube – Steering	9	17	1
113445	Bar – Lift	35	27	1
113935	Cover – Side, LH	4	16	1
113969	Hook – Battery	42	9	2
114017	Clamp – Hour Meter	39	52	1
114052	Harness – Headlight	41	20	1
114210	Cable – Battery	42	1	1
114214	Gasket – Exhaust	11	30	2
114215	Cover – Exhaust, L.H.	11	22	1
114216	Cover – Exhaust, RH	11	23	1
114217	Deflector – Air	11	21	1
114263	Spring – Seat	7	9	2
114264	Adjuster – Seat, L.H.	7	1	1
114265	Slide – Seat, R.H.	7	2	1
114343	Spring – Gas	7	18	1
114344	Spacer	7	12	2
114345	Bracket	7	16	1
114427	Logo – Hub Cap 6 (Opt.)	43	23	2
114428	Logo – Hub Cap 12 (Opt.)	43	1	2
114621	Decal – Noise	45	23	1
114636	Pipe	11	25	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
114720	Tube – Battery	42	10	1
114763	Pipe	11	27	1
114764	Elbow – 90°	11	26	1
114813	Pedal – Brake	33	9	1
114814	Pedal – Clutch	33	8	1
114825	PC Board w/Lights	37	10	1
114881	Facing – Clutch Plate	44	43	1
115411	Support – Switch	39	18	1
115854	Control – Throttle	3	34	1
116000	Bolt – Carriage	5	9	6
116338	Switch – Ignition	3	29	1
116397	Relay	39	62	1
116470	Muffler	11	24	1
116609	Plate – Engine	11	2	1
116636	Fork – Shift Hi–Low Range	31	59	1
116744	Tire – Turf Trac, Rear	43	3	2
116745	Rod – Pivot	2	18	1
116746	Bracket – RH	2	*	1
116747	Bracket – LH	2	17	1
116796	Test Switch	37	1	1
117127	Tire – Turf Trac, Front	43	21	2
117217	Button – Switch	37	2	1
117331	Holder – Fuse	5	24	1
117343	Latch – Hood	3	31	2
117344	Handle Assembly	2	11	2
117371	Bolt – Carriage	4	6	4
117377	Harness – Wiring	37	7	1
117431	Rivet – Pop	3	30	4
117432	Rivet – Pop	2	10	4
117930	Latch – Mid Hitch	10	21	1
118530	Name Plate – Toro	12	16	1
118540	Decal – Power Plus	45	22	1
119190	Decal – Lower Dash	45	9	1
120320	Guide – Belt	36	4	1
120590	Stop – Throttle	3	35	1
201327	Screw	24	28	3
518077	Terminal	39	68	2
518105	Terminal	39	7	1
518105	Terminal	39	64	1
518211	Bumper	5	10	2
908035	Bolt	11	3	4
908035	Bolt	11	5	4
910331	Screw	11	20	4
910478	Screw	39	59	2
910762	Screw	3	7	2
910792	Screw	3	4	6
910794	Screw	39	35	1
910794	Screw – Machine	5	7	2
910808	Screw	6	12	4
910837	Bolt – Carriage	5	4	9
910837	Screw	4	12	7
910837	Screw	3	20	7
910948	Screw	39	71	2
911423	Bolt	31	65	4
913464	Bolt	7	6	4
915553	Nut	11	4	4
915732	Nut	39	60	2
915732	Nut – Hex	39	70	2
915740	Nut	5	23	4
915740	Nut – Lock	3	36	2
915960	Nut	3	33	2
915962	Nut – Hex	39	54	1
920120	Washer – Lock	39	53	1
920150	Washer – Lock	3	8	2
920160	Washer – IntL. T	3	12	1
920160	Washer – Lock	39	2	1
920225	Washer – Special	33	49	1
920248	Washer – Nylon	33	19	3
920259	Washer – Special	3	17	1
920262	Washer – Special	3	11	1
920262	Washer – Special	39	48	1
926671	Bolt	2	4	2
926671	Bolt	39	19	1
926671	Bolt – Hex	41	33	2
926694	Bolt	6	5	2
926694	Bolt	5	26	6
926694	Screw – Hex. Hd..	4	2	13
926694	Screw – Hex. Hd..	33	27	1
926694	Screw – Hex. Hd..	35	42	1
926694	Screw – Hex. Washer Hd.	3	1	3
926696	Screw – Hex. Hd..	35	45	2
926697	Bolt	6	3	2
933148	Pin – Spirol	35	5	1
933156	Pin – Spirol	29	34	2
933184	Pin – Spirol	31	63	1
933190	Pin – Spirol	33	17	1
933267	Pin – Spirol	33	50	1
933274	Pin – Spirol	44	30	1
933505	Pin – Cotter	10	14	1
933505	Pin – Cotter	44	20	1
933505	Pin – Cotter	35	21	2
933505	Pin – Cotter	33	31	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
933506	Pin – Cotter	44	32	1
933507	Pin – Cotter	35	14	2
937089	Key – Woodruff	31	40	1
937108	Key – Woodruff	43	8	2
937221	Key – Hi–Pro	36	13	1
979120	Spacer	10	12	2
9107562	Screw	37	8	2
9108652	Bolt	7	5	4
9151126	Nut	4	4	4
9151126	Nut	7	10	4
9157324	Nut – Lock	37	5	2
9266944	Bolt	7	14	2
KH10191	Decal – Air Cleaner/Lub	45	19	1
NN0980	Capacitor (300 VD)	20	20	1
NN10003	Bearing – Crankshaft, Front	15	15	1
NN10004	Bearing – Crankshaft, Front	15		1
NN10005	Bearing – Crankshaft, Front	15		1
NN10006	Bearing – Crankshaft, Front	15		1
NN10007	Bearing – Crankshaft, Front	15		1
NN10010	Bearing – Crankshaft, Rear	15		1
NN10012	Bearing – Crankshaft, Rear	15		1
NN10013	Bearing – Crankshaft, Rear	15		1
NN10018	Base – Oil	181		1
NN10021	Screw	17	16	1
NN10030	Washer	17	13	1
NN10032	Camshaft	17	11	1
NN10035	Insert – Intake Seat, Std.	15	14	2
NN10036	Insert – Intake Seat .002	15		2
NN10037	Insert – Intake Seat .005	15		2
NN10038	Insert – Intake Seat .010	15		2
NN10039	Insert – Intake Seat .025	15		2
NN10054	Insert – Exhaust Seat, Std.	15	13	2
NN10055	Insert – Exhaust Seat .002	15		2
NN10056	Insert – Exhaust Seat .005	15		2
NN10057	Insert – Exhaust Seat .010	15		2
NN10058	Insert – Exhaust Seat .025	15		2
NN10070	Gasket	15	36	2
NN10075	Valve – Exhaust	15	29	2
NN10075	Valve – Intake	15	28	2
NN10077	Spring	15	31	4
NN10078	Washer	15	38	4
NN10079	Head – Left Cylinder	15		1
NN10080	Head – Right Cylinder	15	37	1
NN10082	Lock – Spring	15	32	8
NN10100	Piston Pin	15	55	2
NN10120	Bolt – Special Rod	15	59	4
NN10125	Rod w/Bolts & Nuts – STD	15	58	2
NN10126	Rod w/Bolts & Nuts – .010	15		2
NN10127	Rod w/Bolts & Nuts – .020	15		2
NN10128	Rod w/Bolts & Nuts – .030	15		2
NN10129	Tappet – Std.	15	27	4
NN10130	Tappet .002 O.S.	15		4
NN10131	Tappet .004 O.S.	15		4
NN10133	Spring	15	52	1
NN10134	Pump – Oil, Gasket Kit	15	47	1
NN10135	Plunger	15	53	1
NN10136	Pump – Oil, Complete	15	46	1
NN10138	Cup – Oil Pump Intake	18	8	1
NN10143	Filter – Oil	19	7	1
NN10159	Cap – Oil Fill & Indicator	18	9	1
NN10171	Flywheel	17	15	1
NN10175	Element – Air Cleaner	20	4	1
NN10176	Element – Foam	20	3	1
NN10187	Tube – Air Intake	20	11	1
NN10199	Jet – Power	22	6	1
NN10201	Jet – Idle	22	5	1
NN10207	Kit – Choke Shaft	22	7	1
NN10209	Kit – Float	22	1	1
NN10214	Pin	17	14	1
NN10215	Ring – Retaining	17	6	1
NN10217	Spring – Governor, 5 Ball	24	11	1
NN10218	Bushing	24	20	1
NN10219	Spring	24	16	1
NN10221	Hub – Governor Cup	17	7	1
NN10222	Cup – Governor	17	8	1
NN10245	Battery Ignition Coil	27	31	1
NN10247	Rotor – Ignition	27	32	1
NN10248	Nut	27	36	1
NN10249	Nut	27	39	1
NN10261	Regulator – Voltage	27	28	1
NN10266	Kit – Starter Shift Lever	13	7	1
NN10277	Fuse 30 Amp ATO or ATC	39	*	1
NN10278	Connector	41	19	1
NN10279	Contact – Socket	41	30	1
NN10281	Connector	41	29	1
NN10289	Clamp	12	7	1
NN10290	Terminal – Stator Leads	27	18	3
NN10296	Bracket – Lifting	12	9	2
NN10302	Line – Fuel 12"	25	1	2
NN10309	Grommet	20	16	1
NN10320	Swivel – Throttle Control	24	30	1
NN10323	Ring – Oil	18	10	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
NN10326	Seal	15	33	2
NN10327	Bearing	27	8	1
NN10330	Key	17	5	1
NN10334	Pin – Stop	15	11	4
NN10335	Pin – Dowel	27	6	1
NN10336	Pin	15	20	2
NN10345	Retaining Ring	15	56	4
NN10348	Clip	41	26	1
NN10348	Clip – Fuel Line	21	9	1
NN10348	Clip – Wire	25	2	1
NN10348	Clip – Wire	12	18	1
NN10348	Clip – Wire	27	37	1
NN10352	Stud – Gear Cover	27	14	1
NN10355	Washer	17	18	1
NN10356	Washer – Flat	12	12	1
NN10357	Washer – Flat	24	19	1
NN10359	Washer	15	42	2
NN10361	Washer	15	51	1
NN10362	Washer – Flat	21	15	1
NN10370	Bolt	15	30	2
NN10373	Screw	19	3	2
NN10375	Screw – Hex. Hd..	21	8	4
NN10379	Screw	18	4	4
NN10381	Bolt – Special	15	41	10
NN10385	Screw	15	34	2
NN10390	Screw – Hex. Hd..	20	22	1
NN10393	Screw	12	11	4
NN10393	Washer	12	3	1
NN10394	Screw – Hex. Hd..	27	24	2
NN10395	Screw	24	14	1
NN10399	Screw	41	27	1
NN10408	Screw – Hex. Hd..	27	41	2
NN10409	Screw	17	19	6
NN10410	Screw	23	9	1
NN10410	Screw – Machine	24	32	1
NN10412	Screw	23	5	1
NN10414	Screw	12	8	4
NN10414	Screw – Hex. Hd.	27	27	1
NN10425	Washer – Lock	41	28	1
NN10426	Nut	27	16	1
NN10428	Nut	15	60	4
NN10438	Gear	17	4	1
NN10439	Washer	17	3	1
NN10444	Control – Ignition	27	22	1
NN10465	Wrench	19	8	1
NN10478	Guide – Intake Valve	15		2
NN10479	Guide – Exhaust Valve	15	16	2
NN10504	Carburetor	21	1	1
NN10506	Filter – Fuel	25	5	1
NN10515	Cover – Ignition Plunger	27	30	1
NN10516	Indicator – Ignition Module	27	42	1
NN10518	Stator w/Terminals	27	17	1
NN10553	Harness – Engine Wiring	41	16	1
NN10554	Gasket	15	7	1
NN10690	Seal	18	13	1
NN10768	Nut	13	10	1
NN10784	Screw	23	11	1
NN10809	Kit – Choke Lever	22	8	1
NN10810	Kit – Fixed Jet	22	4	1
NN10811	Kit – Throttle Shaft	22	9	1
NN10821	Cover – Valve	15	25	2
NN10824	Switch – Low Oil Pressure	41	3	1
NN10824	Switch – Oil Pressure	19	10	1
NN10826	Governor Shaft &	27	3	1
NN10830	Plug	23	7	1
NN10832	Bracket	12	15	1
NN10854	Tube – Oil Fill, Chrome	18	12	1
NN10858	Hose – Fuel	21	16	1
NN10862	Housing – Blower	12	5	1
NN10877	Spring – Governor Rod	21	20	1
NN10883	Kit – Starter Brush	13	11	1
NN10884	Clutch – Starter	13	6	1
NN10885	Starter Hdwr Kit	13	1	1
NN10886	Seal – Dust	13	5	1
NN10887	Kit – Starter Solenoid	13	8	1
NN10894	Drain – Oil Filter	19	4	1
NN10895	Gasket	27	10	1
NN10929	Holder – Starter Brush	13	13	1
NN10930	Cap – Starter Solenoid	13	9	1
38–1420	Switch – Seat	7	23	1
38–1420	Switch – Seat	39	14	1
55–3570	Fuel Cap	6	6	1
57–8000	Bearing – Camshaft	15	9	2
57–8050	Bearing – Crankshaft, Rear,	15	5	1
57–8060	Bearing – Crankshaft, Rear	15		1
57–8090	Gasket	18	2	1
57–8160	Washer – Thrust	15	6	2
57–8170	Shim 0.005	15		4A/R
57–8180	Gear – Ring	17	22	1
57–8210	Camshaft Gear	17	12	1
57–8280	Gasket	15	26	2
57–8580	Breather – Baffle	15	22	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
57–9080	Pump – Fuel	25	7	1
57–9590	Seal – Oil	15	10	1
57–9170	Swivel – Choke Lever	23	8	1
57–9180	Link – Choke	23	3	1
57–9190	Clamp – Cable	24	12	1
57–9190	Clamp – Throttle Cable	24	23	1
57–9190	Clip	23	12	1
57–9340	Plug – Spark	27	33	2
57–9550	Clamp	27	19	1
57–9570	Seal – Oil	27	7	1
57–9580	Seal – Oil	27	9	1
57–9620	"O"Ring	21	14	1
57–9640	Ball	17	9	1
57–9650	Bearing	27	2	1
57–9660	Key	17	10	1
57–9690	Plug	15	2	1
57–9700	Clip – Retaining, Rod to	21	12	1
57–9710	Ring – Retaining	17	2	1
57–9730	Clip – Retaining	27	26	1
57–9750	Washer	19	2	2
57–9750	Washer	27	12	5
57–9770	Washer – Flat	13	3	2
57–9770	Washer – Flat	15	40	18
59–0290	Tube – Oil	15	12	1
59–0360	Tube – Vacuum Port	27	13	1
59–0370	Cap	27	20	1
59–0370	Cap – Fuel Fitting	25	6	1
59–0420	Yoke	27	4	1
59–0460	Lever – Choke	23	2	1
59–0470	Bracket	23	4	1
59–0720	Pin – Cotter	23	10	1
59–0720	Pin – Cotter	24	31	1
59–0830	Washer – Flat	24	25	1
59–0850	Washer	23	1	2
59–0880	Bolt	15	3	5
59–0910	Bolt	15	50	1
59–0950	Screw	27	5	1
59–0970	Screw	12	6	1
59–0980	Screw	12	4	1
59–1000	Screw	24	22	1
59–1030	Screw	24	15	1
59–1050	Screw	24	35	2
59–1050	Screw	25	8	1
59–1100	Screw	24	18	2
62–2730	Kit – Bushing	13	12	1
62–7770	Key – Ignition, Padded	39	4	1
62–7770	Key – Ignition, Padded	3	14	1
66–0120	Knob – Control	3	5	1
71–5830	Cap – Valve	15	44	4
71–5980	Gasket	21	10	2
71–6040	Starter, Complete – See	13	2	1
71–6290	Kit – Engine Gasket Valve	15	45	1
72–0850	Gasket	21	2	1
74–2470	Decal – Switch Plate	45	10	1
76–1340	Decal – Made in U.S.A.	45'	18	1
76–1420	Steering Wheel	9	12	1
78–0020	Meter – Hour	3	15	1
78–0020	Meter – Hour	39	51	1
78–0080	Clamp – Volt Meter	3	24	1
78–0080	Clamp – Voltmeter	39	22	1
78–0370	Insert	9	13	1
78–1550	Lever – Lift	35	19	1
78–1660	Wheel Assembly – Front	43	*	2
78–1680	Rim – Front	43	17	2
78–2680	Frame	10	8	1
78–2880	Shaft – Lower	9	7	1
78–2900	Tie Rod Assembly, LH	9	27	1
78–2920	Tie Rod End	9	25	1
78–2970	Arm – Clutch Idler	33	16	1
78–2990	Plate – Seat Pivot	7	11	1
78–3010	Bracket – Battery Support	4	1	1
78–3020	Plate – Front	4	17	
78–3240	Spring – Gas	33	53	1
78–3250	Spacer	33	60	1
78–3260	Spacer	33	55	1
78–3320	Clamp – Steel	3	26	1
79–0060	Meter – Volt	3	16	1
79–0060	Voltmeter	39	21	1
79–3600	Wiring Harness	39	5	1
79–3680	Seat	7	4	1
79–4990	Bracket – Fender Support	6	20	1
79–5210	Engine – 16HP TORO Power	11	1	1
79–6320	Cover – Air Cleaner	20	2	1
79–6330	Housing – Air Cleaner	20	6	1
79–6340	Support – Air Cleaner	20	14	1
79–6350	Knob – Tool less	20	29	1
79–6360	Bracket	24	13	1
79–6390	Bracket – Governor Control	24	24	1
79–6400	Bushing – Governor Control	24	29	1
79–6410	Link – Governor Control	24	33	1
79–6420	Adapter – Governor Arm	24	34	1
79–6440	Screen	17	21	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
79–6460	Bracket	18	11	1
79–6470	Gasket	19	6	1
79–6490	Gasket – Plate	27	29	1
79–6520	Spacer	20	23	1
79–6580	Screw – Cap	13	4	2
82–0020	Plate – Bearing	15	8	1
82–0500	Adapter – Oil Filter	191		1
82–0530	Clamp	15	21	1
82–0540	Tube – Baffle Breather	15	65	1
82–0550	Breather Cap & Valve	15	64	1
82–0560	Screen	15	66	2
82–0570	Seal	15	23	1
82–0620	Guard – Stationary	12	13	1
82–0680	Gasket	19	9	1
82–0780	Kit – Repair	22	2	1
82–0850	Gasket – Carburetor Mtg.	22	3	1
82–0930	Screw	12	14	2
82–1000	Kit – Terminal	27	21	1
82–1080	Clamp – Hose 1/2	25	3	6
82–1130	Plug – Sq Hd.	18	5	2
82–1150	Key	17	23	1
82–1310	Washer – Lock	18	3	4
82–1320	Washer	17	17	1
82–1340	Cable – Spark Plug	27	34	1
82–1340	Washer – Flat	27	35	2
82–1340	Washer – Flat	15	48	2
82–1350	Washer – Flat	21	4	4
82–1360	Screw – Hex. Hd.	27	38	1
82–1370	Screw	24	27	1
82–1400	Screw	17	20	4
82–1410	Screw	27	11	4
82–1410	Screw – Hex. Hd..	21	7	2
82–1410	Screw – Hex. Hd..	27	40	1
82–1410	Washer – Flat	21	6	2
82–1450	Screw	21	11	2
82–1480	Screw	15	39	1
82–1500	Screw – Hex. Hd..	27	23	3
82–1510	Screw	19	5	2
82–1540	Screw	12	19	1
82–1550	Screw – Hex. Hd.	20	7	.2
82–1560	Screw	18	14	1
82–1590	Screw	12	17	4
82–1600	Screw	12	1	2
82–1620	Washer – Lock	24	26	1
82–1640	Washer – Spring	15	19	5
82–1660	Washer – Lock	27	25	2
82–1690	Nut – Flange	20	5	1
82–1700	Nut – Speed	18	15	1
83–2710	Knob – Hi–Lo Range Shift	31	75	1
83–2720	Bolt – Lug	43	5	10
83–2890	Bearing – Needle	29	17	1
83–3530	Shaft – Cluster	31	39	1
83–6520	Rod – Lock	10	18	1
87–1370	Bolt	15	49	2
88–2170	Bracket – Belt	4	3	1
88–2710	Support – Steering Shaft	9	8	1
88–2782	Hood	2	8	1
88–3200	Decal – Maintenance	45	21	1
92–0900	Block – Short	15	1	1
92–0901	Piston Pin & Retaining	15	54	2
92–0902	Piston Pin & Retaining	15	*	2
92–0903	Piston Pin & Retaining	15	*	2
92–0904	Piston Pin & Retaining	15	*	2
92–0905	Set – Piston Ring, Std.	15	57	2
92–0906	Set – Piston Ring .005 O.S..	15		2
92–0907	Set – Piston Ring .010 O.S.	15		2
92–0908	Set – Piston Ring .020 O.S.	15		2
92–0909	Set – Piston Ring .030 O.S.	15		2
92–0912	Elbow 45_	19	11	1
92–0913	Nut – Wing	20	33	1
92–0914	Cover – Element	20	32	1
92–0915	Screw	20	31	1
92–0916	Screw	23	6	1
92–0917	Tube	20	25	1
92–0918	Manifold – Intake	21	5	1
92–0919	Rod – Governor Control	21	13	1
92–0920	Housing – Cylinder Air, L.H.	12	2	1
92–0921	Housing – Cylinder Air, R.H.	12	10	1
92–0922	Arm – Governor Control,	24	17	1
92–0923	Hose – Fuel	25	4	1
92–1525	Hoodstand	4	8	1
92–4987	Shaft – Upper	9	9	1
92–6529	Plate – Shift Cover	4	11	1
92–8708	Transmission Assembly	29	*	1
92–8747	Decal – Attach–A–Matic	45	14	2
92–8749	Decal – Unidrive	45	13	1
92–8749	Decal – Unidrive	31	76	1
92–8946	Decal – Danger	4	10	1
92–8946	Decal – Danger	45	20	1
92–9511	Line – Fuel 62"	6	26	1
92–9824	Decal – Hood LH	2	*	1
92–9824	Decal – Hood LH	45		1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–9825	Decal – Hood RH	45	1	1
92–9825	Decal – Hood RH	2	7	1
92–9826	Decal – Front Hood	45	5	1
92–9826	Decal – Hood, Front	2	6	1
92–9827	Decal – Rear Fender	45	4	1
92–9831	Decal – 416–8 Speed	45	11	2
92–9836	Decal – Logo	2	23	1
92–9837	Decal – Danger	2	9	1
92–9837	Decal – Rear Hood Danger	45	8	1
93–1613	Latch – Front Hitch	10	23	1
237–69	"O"Ring	9	10	1
2412–98	Clamp	6	19	2
281–2	Plug – Pipe, Sq. Hd.	29	7	1
281–10	Plug – Pipe, Allen Hd.	29	6	1
302–5	Fitting – Grease	33	61	2
302–5	Fitting – Grease, Straight	9	34	2
321–2	Bolt	11	19	3
321–3	Screw – Hex. Hd..	42	3	2
321 – 3	Screw – Hex. Hd..	31	83	2
321–4	Bolt	5	8	2
321–8	Bolt	7	15	2
321–8	Bolt – Nylok	44	41	4
321–9	Screw – Hex. Hd..	33	59	1
321–31	Screw – Hex. Hd..	33	54	1
322–1	Bolt	9	28	1
322–2	Bolt	6	18	5
322–2	Screw – Hex. Hd..	42	12	1
322–3	Bolt	11	17	4
322–3	Bolt	6	23	6
322–4	Bolt	7	20	6
322–5	Screw – Hex. Hd..	6	29	2
322–5	Screw – Hex. Hd..	35	38	3
322–6	Screw – Hex. Hd..	35	24	1
323–5	Bolt	10	6	4
323–6	Bolt	36	6	3
323–6	Bolt	9	6	2
323–7	Screw – Hex. Hd..	44	16	1
323–8	Bolt	9	19	2
323–9	Screw Hex. Hd..	33	37	1
323–11	Screw – Hex. Hd..	29	4	5
323–16	Screw – Hex. Hd..	29	3	1
323–44	Screw – Hex. Hd..	10	16	6
3217–5	Nut	31	48	1
3217–27	Nut – Hex	3	28	1
3218–1	Nut	44	21	2
3218–3	Nut	43	10	4
3219–3	Nut	9	26	1
3229–25	Bolt – Carriage	2	20	4
3229–25	Bolt – Carriage	44	24	2
3230–1	Bolt	5	25	1
3231–25	Bolt – Carriage	10	5	3
3235–22	Screw – Hex. Hd..	6	28	1
3242–2	Screw – Set	36	11	2
3243–5	Screw – Set	43	9	4
3245–32	Screw –Set	33	11	3
3246–2	Screw – Set	36	9	2
3253–2	Washer – Lock	27	15	3
3253–3	Washer – Lock	42	15	2
3253–3	Washer – Lock	44	47	2
3253–3	Washer – Lock	31	82	2
3253–4	Washer	11	18	4
3253–4	Washer – Lock	6	17	1
3253–4	Washer – Lock	9	29	1
3253–21	Washer – Lock	36	5	3
3253–21	Washer – Lock	10	7	4
3253–24	Washer – Lock	11	8	4
3254–1	Washer – Lock	6	10	4
3254–2	Washer – Intl. T	2	13	1
3255–25	Washer – Lock	3	27	1
3256–3	Washer	36	2	2
3256–4	Washer	6	2	2
3256–5	Washer	35	36	1
3256–21	Washer	6	9	4
3256–22	Washer	42	5	4
3256–22	Washer	7	13	2
3256–22	Washer	2	14	3
3256–22	Washer	44	22	2
3256–22	Washer	33	56	2
3256–23	Washer	7	21	4
3256–23	Washer	35	25	3
3256–23	Washer	6	25	2
3256–24	Washer	11	7	4
3256–24	Washer	33	38	2
3256–25	Washer	36	8	3
3256–25	Washer	35	55	1
3256–26	Washer	33	25	1
3256–26	Washer – Flat	10	15	1
3256–27	Washer	44	48	1
3256–62	Washer	35	15	2
3272–1	Pin – Cotter	2	21	2
3272–6	Pin – Cotter	33	15	1
3272–10	Pin – Cotter	44	7	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3272–10	Pin – Cotter	33	20	3
3272–10	Pin – Cotter	35	35	1
3272–17	Pin – Cotter	43	19	2
3272–19	Pin – Cotter	9	23	1
3272–21	Pin – Cotter	9	18	1
3296–6	Nut	9	24	4
3296–27	Nut	6	7	4
3296–29	Nut	36	3	2
3296–29	Nut	7	7	6
3296–29	Nut	5	16	11
3296–29	Nut	6	22	6
3296–29	Nut	35	44	4
3296–29	Nut – Lock	5	2	7
3296–39	Nut	10	2	9
3296–39	Nut	29	5	6
3296–39	Nut	44	19	1
3296–39	Nut	33	32	1
3296–39	Nut	35	56	1
3296–39	Nut – Lock	9	4	4
3296–42	Nut	5	5	1
3296–42	Nut	2	12	4
3296–42	Nut	42	14	2
3296–42	Nut	7	17	2
3296–42	Nut	33	58	2
32103–22	Nut – Wing	42	4	4
32120–47	Ring – Retaining	35	29	1
32120–62	Ring – Retaining	44	35	1
32120–72	Ring – Retaining	44	34	2
32120–93	Ring – Retaining	9	2	2
32121–25	Pin – Roll	35	48	1
32121–103	Pin – Spirol	35	47	1
32121–111	Pin – Spirol	9	14	1
32136–5	Nut – Slotted	9	20	1
32146–2	Nut	11	13	4
32146–2	Nut	33	44	1
32151–11	Ring – Grip	44	3	1
32151–91	Retainer	35	17	1

*Not Illustrated

MAINTENANCE RECORD

Date								