Form Number 3358-992 Rev B

# 22in Recycler® Lawn Mower

**Model No. 20065 - 280000001 and up.**

## Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

# Contents


| Description | Page |
|---|---|
| Deck, Side Chute and Rear Door Assembly | 3 |
| Rear Axle Assembly | 4 |
| Front Axle and Transmission Assembly | 5 |
| Transmission Assembly No. 106-3955 | 6 |
| Engine and Blade Assembly | 7 |
| Handle Assembly | 8 |
| Rear Bag Assembly | 9 |
| Cylinder Assembly Briggs and Stratton 124T02-0161-B1 | 10 |
| Crankshaft Assembly Briggs and Stratton 124T02-0161-B1 | 11 |
| Crankcase Assembly Briggs and Stratton 124T02-0161-B1 | 12 |
| Carburetor Assembly Briggs and Stratton 124T02-0161-B1 | 13 |
| Air Cleaner Assembly Briggs and Stratton 124T02-0161-B1 | 14 |
| Governor Assembly Briggs and Stratton 124T02-0161-B1 | 15 |
| Muffler and Fuel Tank Assembly Briggs and Stratton 124T02-0161-B1 | 16 |
| Blower Housing Assembly Briggs and Stratton 124T02-0161-B1 | 17 |
| Starter Assembly Briggs and Stratton 124T02-0161-B1 | 18 |
| Engine Gasket Set Briggs and Stratton 124T02-0161-B1 | 19 |
| Carburetor Overhaul Kit Briggs and Stratton 124T02-0161-B1 | 20 |
| Attachments and Accessories List | 21 |



# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

# Footnotes


❶ Not serviced separately
❷ Obtain parts from www.briggsandstratton.com
❸ Included in Carburetor Overhaul Kit (Ref. No. 121)
❹ Included in Engine Gasket Set (Ref. No. 358)
❺ Included in Carburetor Gasket Set (Ref. No. 977)

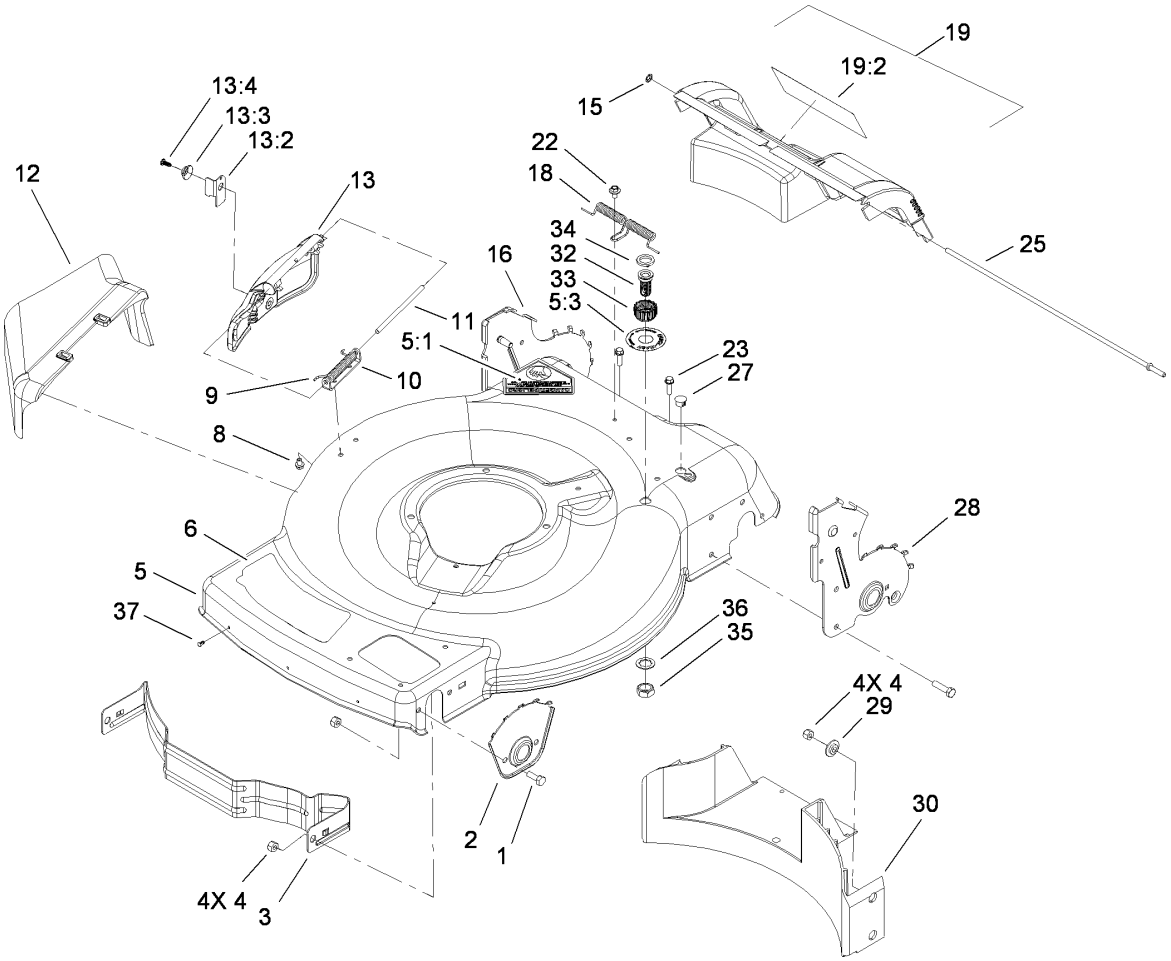


# Deck, Side Chute and Rear Door Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 322-3 | 4 | Screw-HH |
| 2 | 105-1808-03 | 2 | Plate-HOC, Front |
| 3 | 104-8694-03 | 1 | Baffle-Front |
| 4 | 3296-29 | 8 | Nut-Lock, NI |
| 5 | 112-8850 | 1 | Housing ASM |
| 5:1 | 94-8072 | 1 | Decal-Danger |
| 5:3 | 112-8867 | 1 | Decal |
| 6 | 114-0322 | 1 | Decal-Deck |
| 8 | 99-8445 | 2 | Screw-HWH |
| 9 | 99-5293 | 1 | Spring-Torsion |
| 10 | 112-6416 | 1 | Bracket-Cover |
| 11 | 99-5291 | 1 | Rod-Cover |
| 12 | 105-3028 | 1 | Chute-Discharge, Side |
| 13 | 106-8376 | 1 | Discharge Door ASM |
| 13:2 | 107-0795 | 1 | Latch-Door |
| 13:3 | 107-7456 | 1 | Cap-Door |
| 13:4 | 107-7461 | 1 | Screw-Plastite |
| 15 | 32112-6 | 1 | Nut-Push |
| 16 | 112-6445 | 1 | 11 Inch RH HOC Plate ASM |
| 18 | 105-3032 | 1 | Spring-Door, Rear |
| 19 | 112-8864 | 1 | Rear Door ASM |
| 19:2 | 112-8759 | 1 | Decal-Warning |
| 22 | 46-6810 | 1 | Screw And Washer ASM |
| 23 | 46-8091 | 2 | Screw-HWH |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 25 | 105-1827 | 1 | Rod-Pivot, Rear Door |
| 27 | 104-9369 | 1 | Plug-Dome |
| 28 | 112-6447 | 1 | 11 Inch LH HOC Plate ASM |
| 29 | 105-3006 | 4 | Washer-Stepped |
| 30 | 105-3047 | 1 | Baffle-Rear |
| 32 | 112-6400 | 1 | Port-Washout |
| 33 | 112-6401 | 1 | Coupling-Hose, Washout Port |
| 34 | 112-6438 | 1 | Washer-Seal, Washout Port |
| 35 | 3218-6 | 1 | Nut-Jam |
| 36 | 3254-5 | 1 | Washer-Tooth |
| 37 | 112-6436 | 3 | Plug-Arrow |

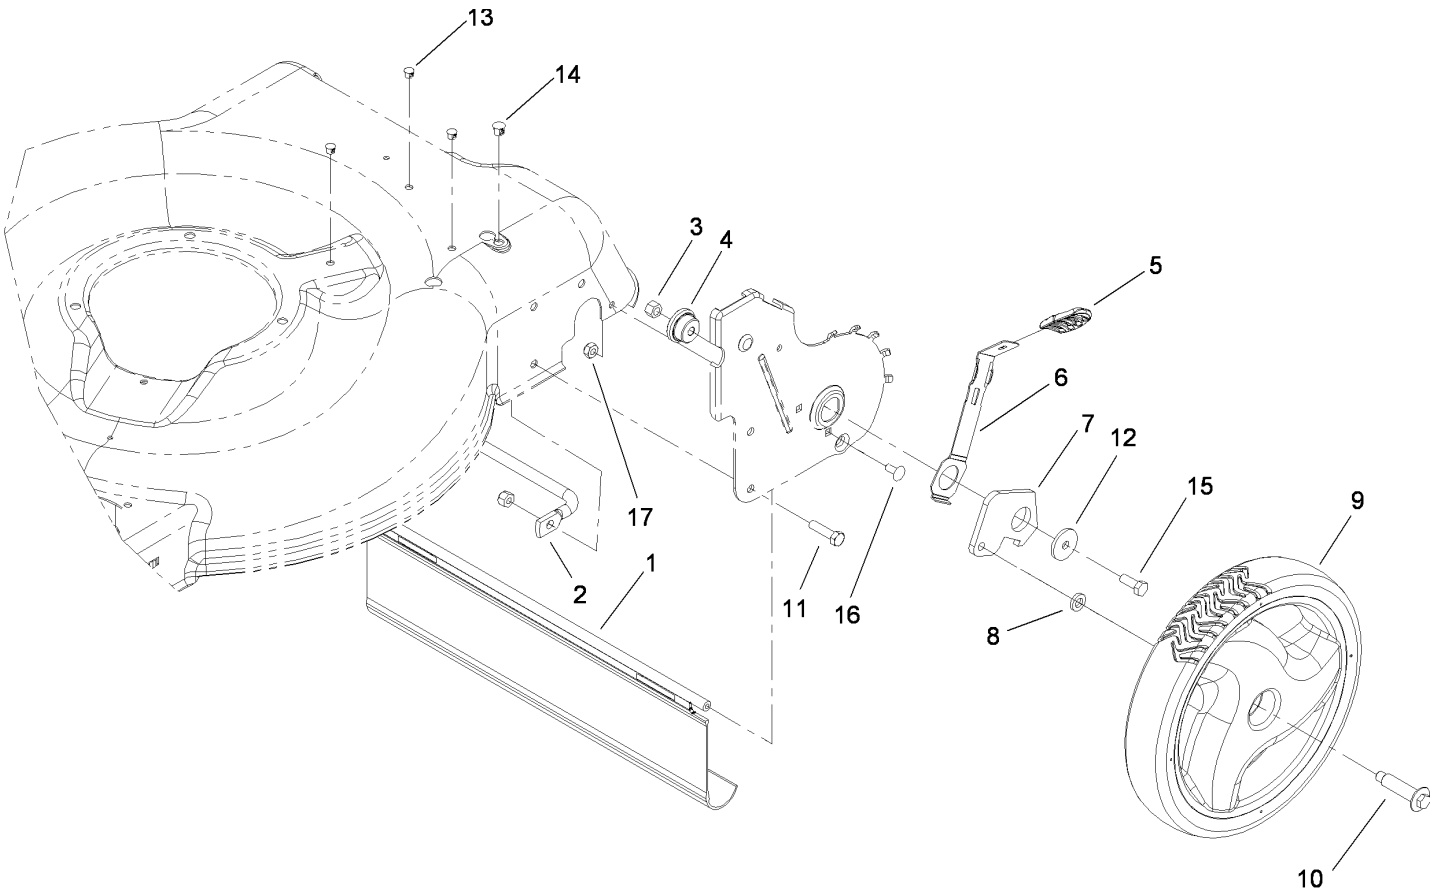


# Rear Axle Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 114-1585 | 1 | Shield-Trailing |
| 2 | 105-1811 | 1 | Brace-Plate, HOC |
| 3 | 32153-3 | 2 | Nut-Hex, Side Deform |
| 4 | 110-1612 | 2 | Bushing-Mount |
| 5 | 105-3042 | 2 | Knob-Lever, HOC |
| 6 | 110-1630 | 2 | Arm-11 Inch Spring, Rear |
| 7 | 105-1819 | 2 | Arm-Pivot, Rear |
| 8 | 110-7466 | 2 | Washer-Bolt, Wheel |
| 9 | 110-1632 | 2 | 11 Inch Wheel ASM |
| 10 | 614650 | 2 | Bolt-Shoulder |
| 11 | 322-6 | 4 | Screw-HH |
| 12 | 105-3048 | 2 | Washer-Flat |
| 13 | 104-9373 | 3 | Plug-Dome |
| 14 | 104-9368 | 1 | Plug-Dome |
| 15 | 322-4 | 2 | Screw-HH |
| 16 | 3229-11 | 4 | Screw-CARR |
| 17 | 3296-16 | 4 | Nut-Lock, NI |

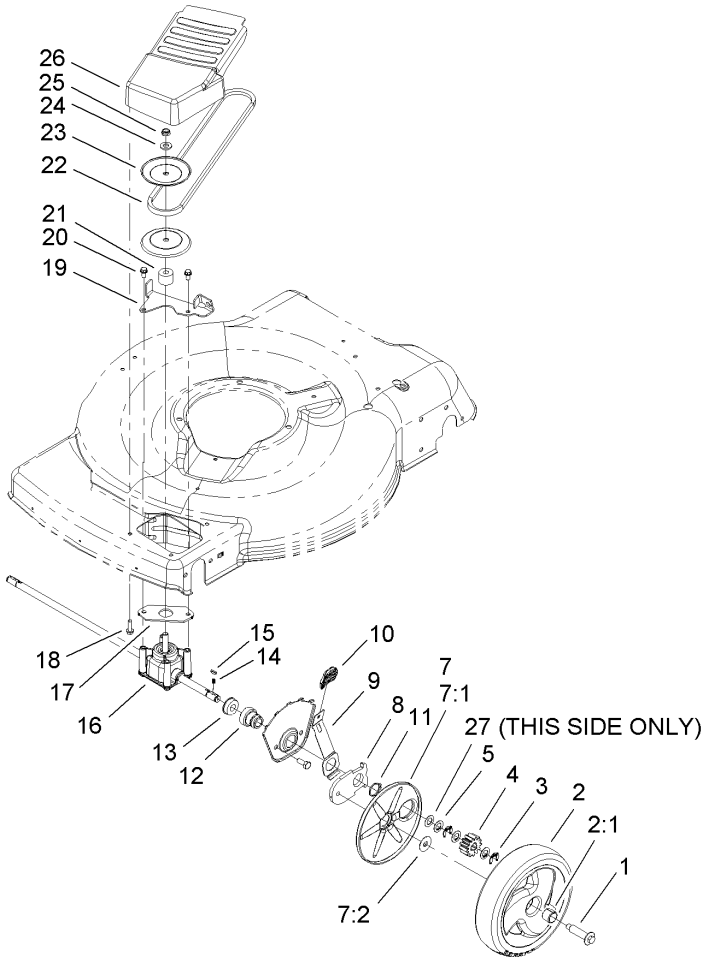


# Front Axle and Transmission Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 614650 | 2 | Bolt-Shoulder |
| 2 | 105-1815 | 2 | Wheel Gear ASM |
| 2:1 | 27-6250 | 2 | Bushing |
| 3 | 65-2720 | 4 | Ring-Clip, Locking |
| 4 | 104-8670 | 2 | Gear-Pinion, 13T |
| 5 | 105-6840 | 6 | Washer-Thrust |
| 7 | 110-1792 | 2 | Wheel Cover ASM |
| ❶7:1 | | 1 | Cover-Wheel |
| 7:2 | 614426 | 1 | Washer-Stepped |
| 8 | 105-1807 | 2 | Arm-Pivot, Front |
| 9 | 105-1809 | 2 | Arm-Spring |
| 10 | 105-3042 | 2 | Knob-Lever, HOC |
| 11 | 32151-36 | 2 | Ring-Retaining |
| 12 | 104-8698 | 2 | Retainer-Bearing, HOC |
| 13 | 104-8699 | 2 | Bearing-Ball |
| 14 | 39-9650 | 2 | Spring-Compression |
| 15 | 612066 | 2 | Key |
| 16 | 106-3955 | 1 | Transmission ASM |
| 17 | 108-9756 | 1 | Gasket-Gearbox |
| 18 | 46-8091 | 2 | Screw-HWH |
| 19 | 105-1833-03 | 1 | Bracket-Pivot, Fwd |
| 20 | 32144-4 | 2 | Screw-HWH |
| 21 | 92-5791 | 1 | Spacer |
| 22 | 91-2258 | 1 | V-Belt |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 23 | 104-8691 | 2 | Pulley-Half, Front |
| 24 | 3256-24 | 1 | Washer-Flat |
| 25 | 3296-5 | 1 | Nut-Lock |
| 26 | 105-1839 | 1 | Cover-Belt, Front |
| 27 | 36-4780 | 1 | Washer-Plain |

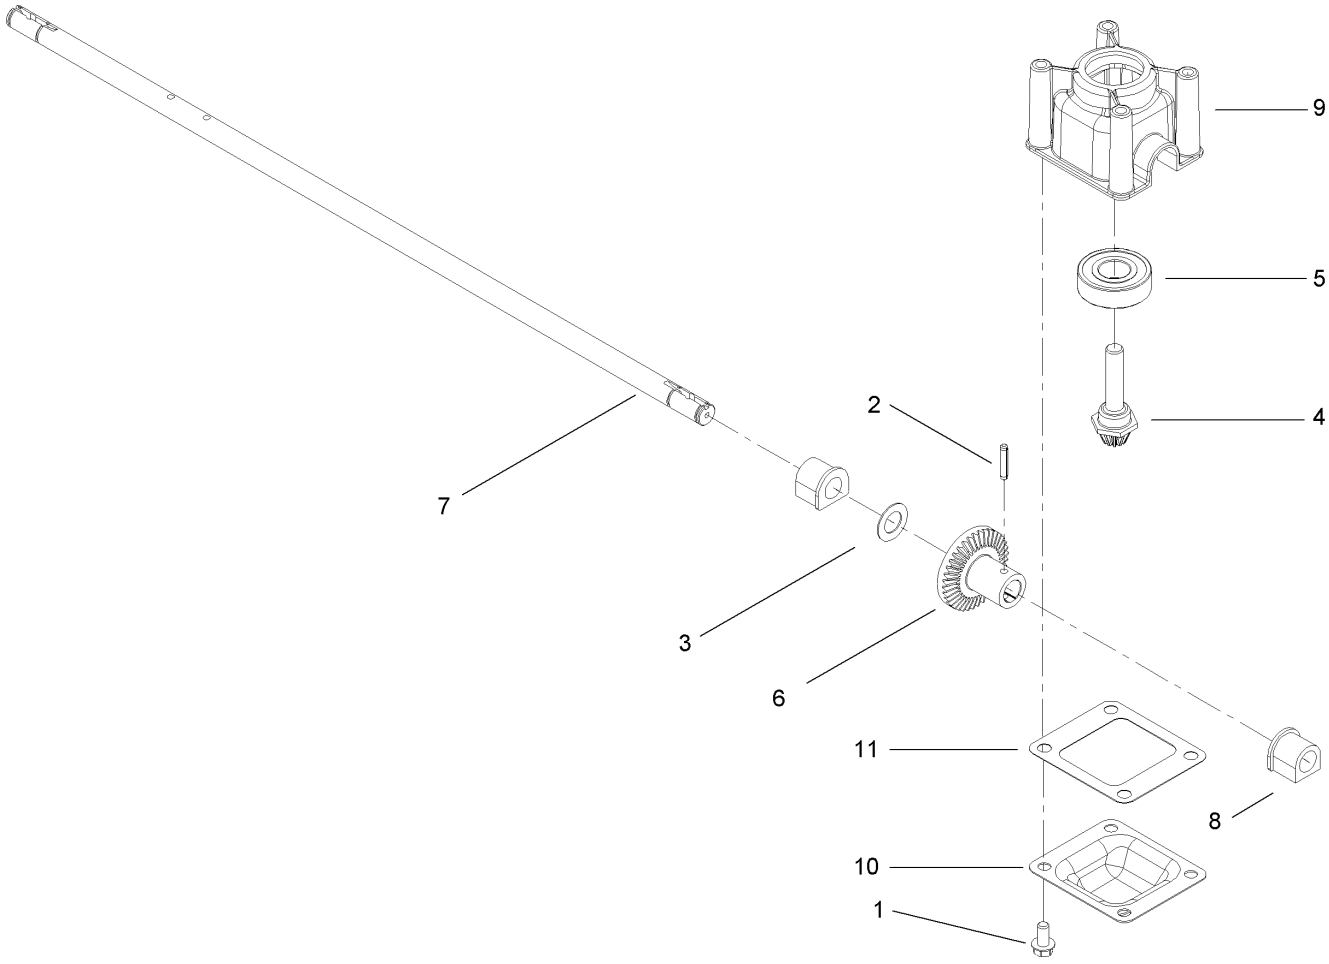


# Transmission Assembly No. 106-3955


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 32144-4 | 4 | Screw-HWH |
| 2 | 3285-19 | 1 | Pin-Groove |
| 3 | 36-4780 | 1 | Washer-Plain |
| 4 | 92-5790 | 1 | Pinion |
| 5 | 100-1048 | 1 | Bearing-Ball |
| 6 | 104-8671 | 1 | Gear-Bevel, 37T |
| 7 | 106-3957 | 1 | Shaft-Output |
| 8 | 104-8673 | 2 | Bushing-Shaft, Output |
| 9 | 104-8674 | 1 | Gearcase-Upper |
| 10 | 104-8675-03 | 1 | Cover-Gearcase |
| 11 | 105-6839 | 1 | Gasket-Gearcase |

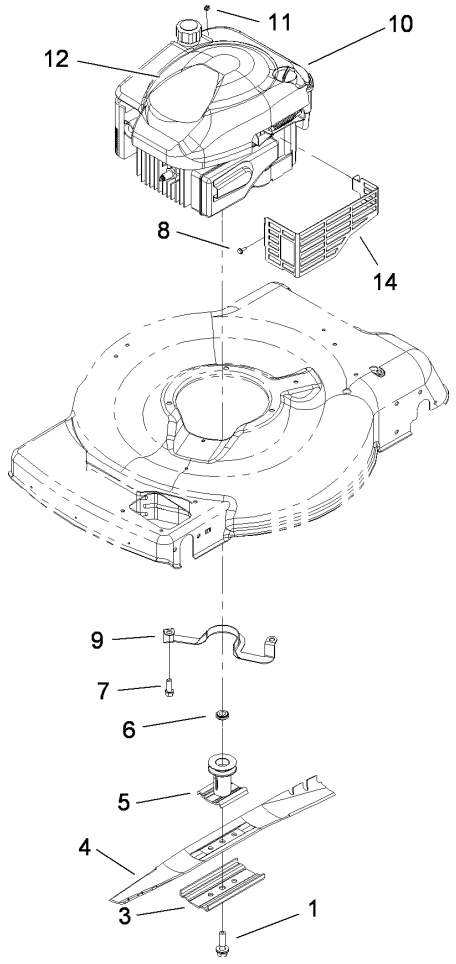


# Engine and Blade Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 105-8579 | 1 | Bolt-Blade |
| 3 | 108-3766-03 | 1 | Support-Blade |
| 4 | 108-9764-03 | 1 | Blade-22 Inch |
| 5 | 106-3987 | 1 | Blade Driver ASM |
| 6 | 106-3999 | 1 | Spacer-Driver |
| 7 | 95-1726 | 3 | Screw-Taptite |
| 8 | 32144-1 | 3 | Screw-Taptite |
| 9 | 105-3031-03 | 1 | Guide-Belt |
| ❶❷10 | | 1 | Engine-Briggs And Stratton, 124T02-0161-B1 |
| 11 | 92-1701 | 1 | Stop-Rope |
| 12 | 115-1310 | 1 | Decal |
| 14 | 104-7577-03 | 1 | Shield-Muffler |

| | | | |
|---|---|---|---|
| | | | |

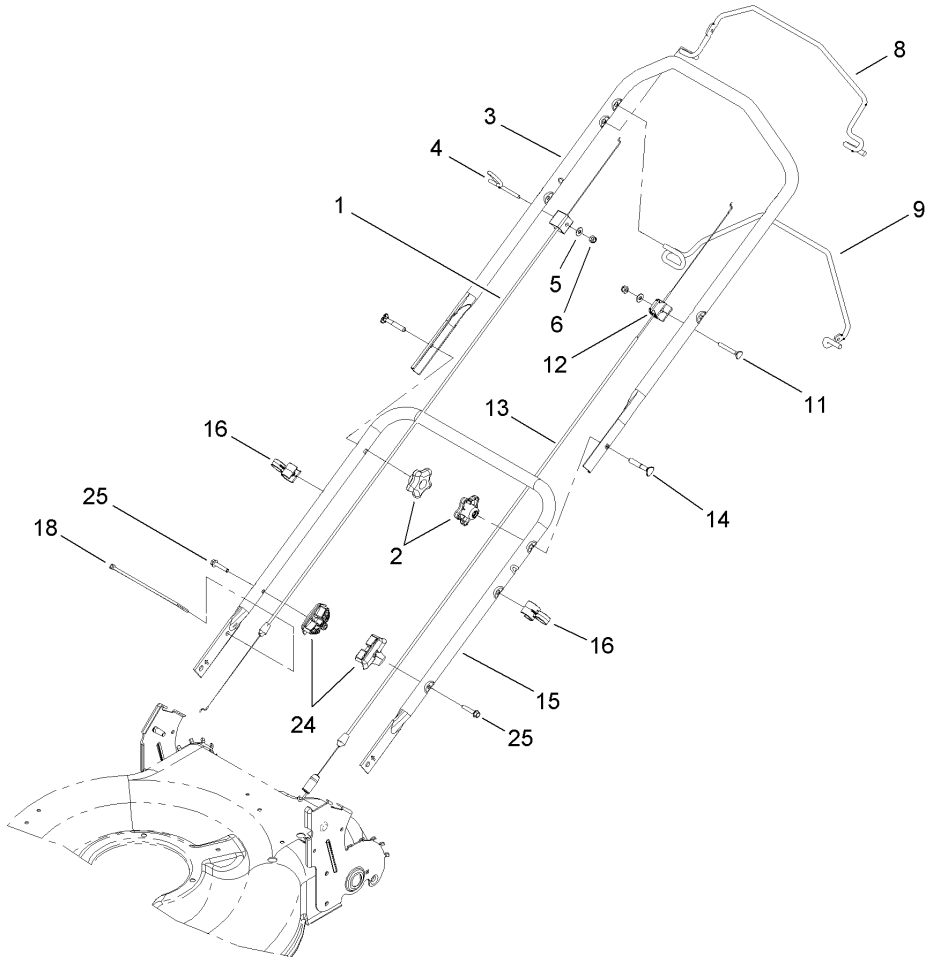



# Handle Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 108-8156 | 1 | Cable-Brake |
| 2 | 108-8162 | 2 | Knob-Locking |
| 3 | 108-9789-05 | 1 | Handle-Upper |
| 4 | 106-8330 | 1 | Guide-Rope |
| 5 | 3256-1 | 2 | Washer-Flat |
| 6 | 3296-73 | 2 | Nut-Lock, NI |
| 8 | 114-7923-03 | 1 | Bail-Brake |
| 9 | 108-9790-03 | 1 | Bail-Traction |
| 11 | 95-4453 | 1 | Screw |
| 12 | 92-7729 | 1 | Anchor-Cable, Upper |
| 13 | 105-1845 | 1 | Cable-Traction |
| 14 | 112-8876 | 2 | Screw-Handle |
| 15 | 112-6440-05 | 1 | Handle-Lower |
| 16 | 106-6805 | 2 | Guide-Cable |
| 18 | 614249 | 1 | Strap-Tie |
| 24 | 108-9788 | 2 | Anchor-Bag |
| 25 | 32144-110 | 2 | Screw-HWH |

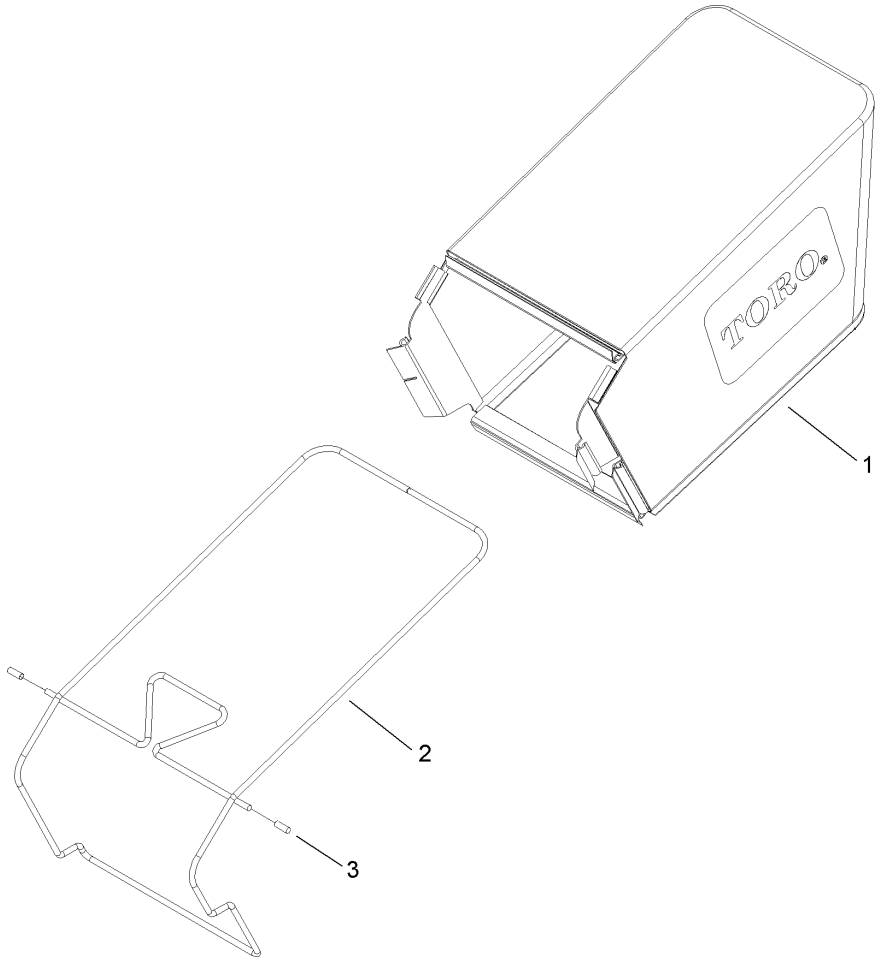


# Rear Bag Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 108-9792 | 1 | Grass Bag ASM |
| 2 | 108-9785-03 | 1 | Frame-Bag |
| 3 | 112-6439 | 2 | Cap-End |

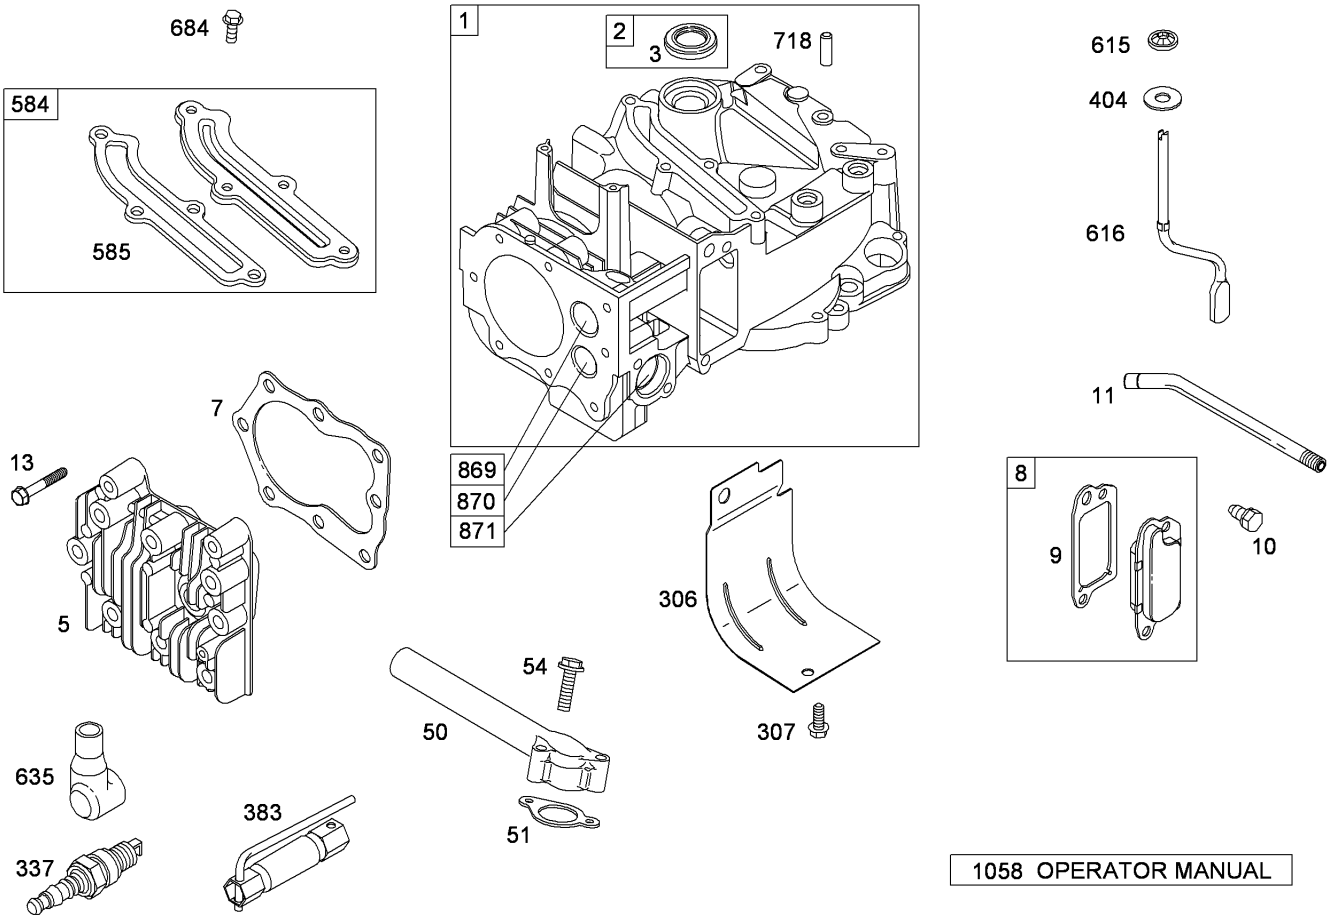



Assemblies include all parts shown in frames

# Cylinder Assembly
# Briggs and Stratton 124T02-0161-B1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷1 | 697322 | 1 | Cylinder ASM |
| ❷2 | 399269 | 1 | Bushing And Seal Kit |
| ❷❹3 | 299819s | 1 | Seal-Oil (Magneto Side) |
| ❷5 | 691160 | 1 | Head-Cylinder |
| ❷❹7 | 692249 | 1 | Gasket-Head, Cylinder |
| ❷8 | 695250 | 1 | Breather ASM |
| ❷9 | 696125 | 1 | Gasket-Breather |
| ❷10 | 691125 | 1 | Screw (Breather ASM) |
| ❷11 | 691781 | 1 | Tube-Breather |
| ❷13 | 690912 | 1 | Screw (Cylinder Head) |
| ❷50 | 497465 | 1 | Manifold-Intake |
| ❷❹51 | 272199s | 1 | Gasket-Intake |
| ❷54 | 691650 | 1 | Screw (Intake Manifold) |
| ❷306 | 690450 | 1 | Shield-Cylinder |
| ❷307 | 690345 | 1 | Screw (Cylinder Shield) |
| ❷337 | 802592s | 1 | Spark Plug |
| ❷383 | 89838s | 1 | Wrench-Spark Plug |
| ❷404 | 690272 | 1 | Washer (Governor Crank) |
| ❷584 | 697734 | 1 | Cover-Passage, Breather |
| ❷❹585 | 691879 | 1 | Gasket-Passage, Breather |
| ❷615 | 690340 | 1 | Retainer-Shaft, Governor |
| ❷616 | 698801 | 1 | Crank-Governor |
| ❷635 | 66538s | 1 | Boot-Spark Plug |
| ❷684 | 690345 | 1 | Screw (Breather Passage Cover) |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷718 | 690959 | 1 | Pin-Locating |
| ❷869 | 691155 | 1 | Seat-Valve (Intake) |
| ❷870 | 690380 | 1 | Seat-Valve (Exhaust) |
| ❷871 | 262001 | 1 | Bushing-Guide (Exhaust) |
| ❷871 | 63709 | 1 | Bushing-Guide (Intake) |
| ❷1058 | 277039TRI | 1 | Operator Manual |

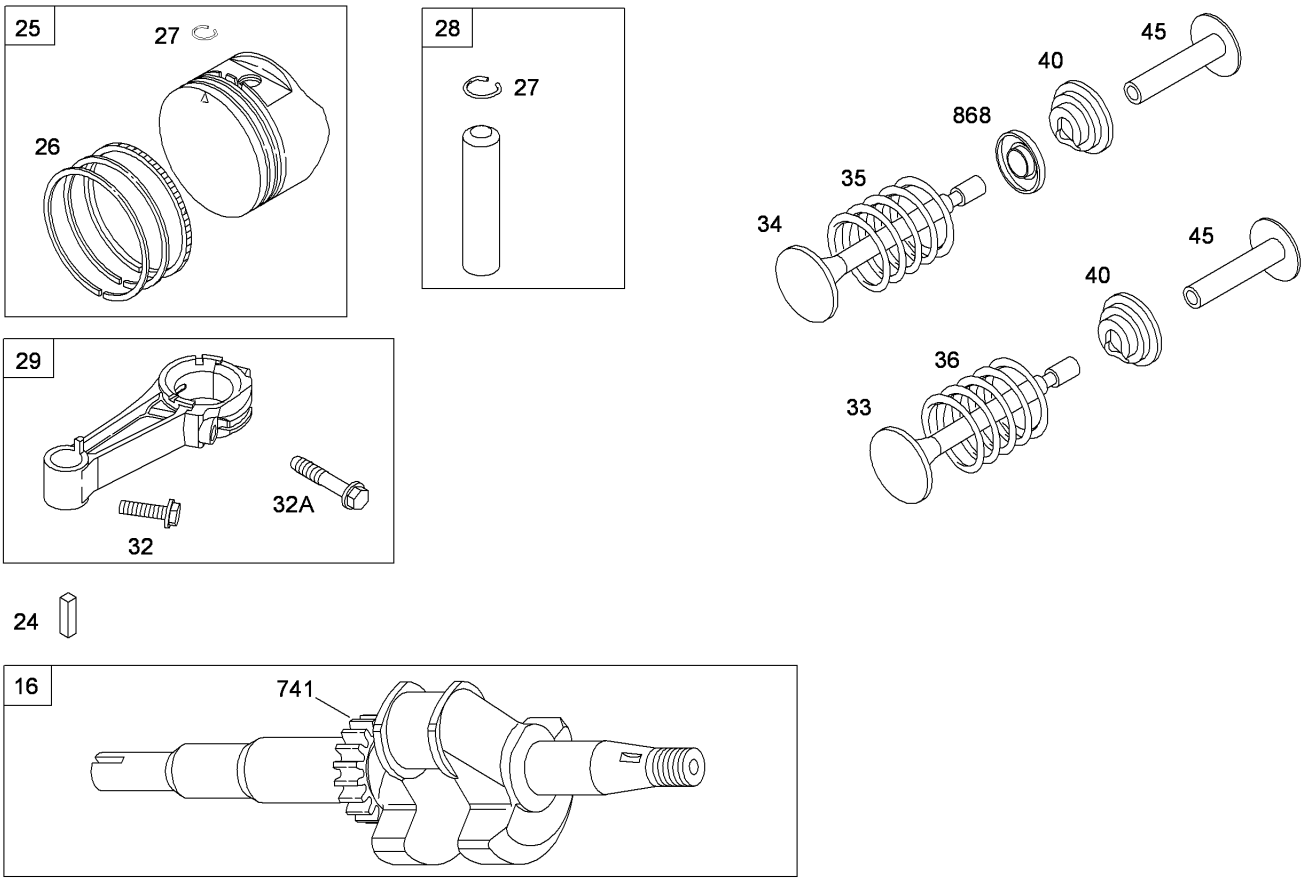


Assemblies include all parts shown in frames

# Crankshaft Assembly
# Briggs and Stratton 124T02-0161-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷16 | 696009 | 1 | Crankshaft |
| ❷24 | 222698s | 1 | Key-Flywheel |
| ❷25 | 791097 | 1 | Piston ASM (STD) |
| ❷25 | 791326 | 1 | Piston ASM (.020 O S) |
| ❷26 | 791098 | 1 | Ring Set (STD) |
| ❷26 | 791324 | 1 | Ring Set (.020 O S) |
| ❷27 | 691866 | 1 | Lock-Pin, Piston |
| ❷28 | 499423 | 1 | Pin-Piston (STD) |
| ❷29 | 499424 | 1 | Rod-Connecting (STD) |
| ❷32 | 691664 | 1 | Screw (Connecting Rod) |
| ❷32A | 695759 | 1 | Screw (Connecting Rod) |
| ❷33 | 262651s | 1 | Valve-Exhaust |
| ❷34 | 262652s | 1 | Valve-Intake |
| ❷35 | 691270 | 1 | Spring-Valve (Intake) |
| ❷36 | 691270 | 1 | Spring-Valve (Exhaust) |
| ❷40 | 692194 | 1 | Retainer-Valve |
| ❷45 | 690548 | 1 | Tappet-Valve |
| ❷741 | 790345 | 1 | Gear-Timing |
| ❷868 | 697338 | 1 | Seal-Valve |

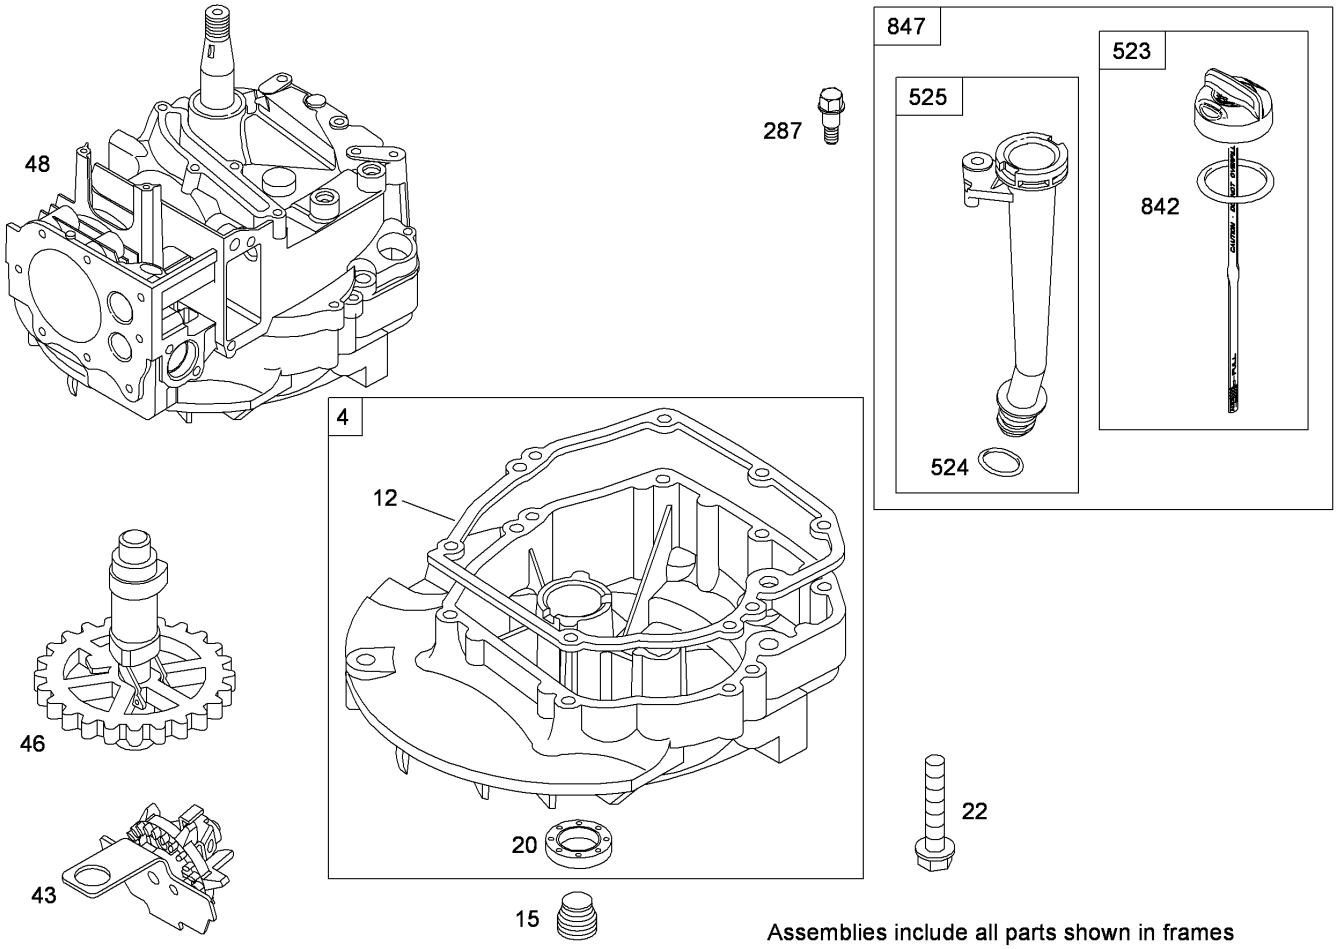


Assemblies include all parts shown in frames

# Crankcase Assembly
# Briggs and Stratton 124T02-0161-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷4 | 493279 | 1 | Sump-Engine |
| ❷❹12 | 692232 | 1 | Gasket-Crankcase (.015 STD) |
| ❷15 | 691680 | 1 | Plug-Drain, Oil |
| ❷❹20 | 399781s | 1 | Seal-Oil (PTO Side) |
| ❷22 | 691092 | 1 | Screw (Engine Sump) |
| ❷43 | 691997 | 1 | Slinger-Oil, Governor |
| ❷46 | 691449 | 1 | Camshaft |
| ❷48 | 792742 | 1 | Block-Short |
| ❷287 | 690940 | 1 | Screw (Dipstick Tube) |
| ❷523 | 499621 | 1 | Dipstick |
| ❷❹524 | 692296 | 1 | Seal-O Ring (Dipstick Tube) |
| ❷525 | 495265 | 1 | Tube-Dipstick |
| ❷❹842 | 691031 | 1 | Seal-O Ring (Dipstick Tube) |
| ❷847 | 692047 | 1 | Dipstick Tube ASM |

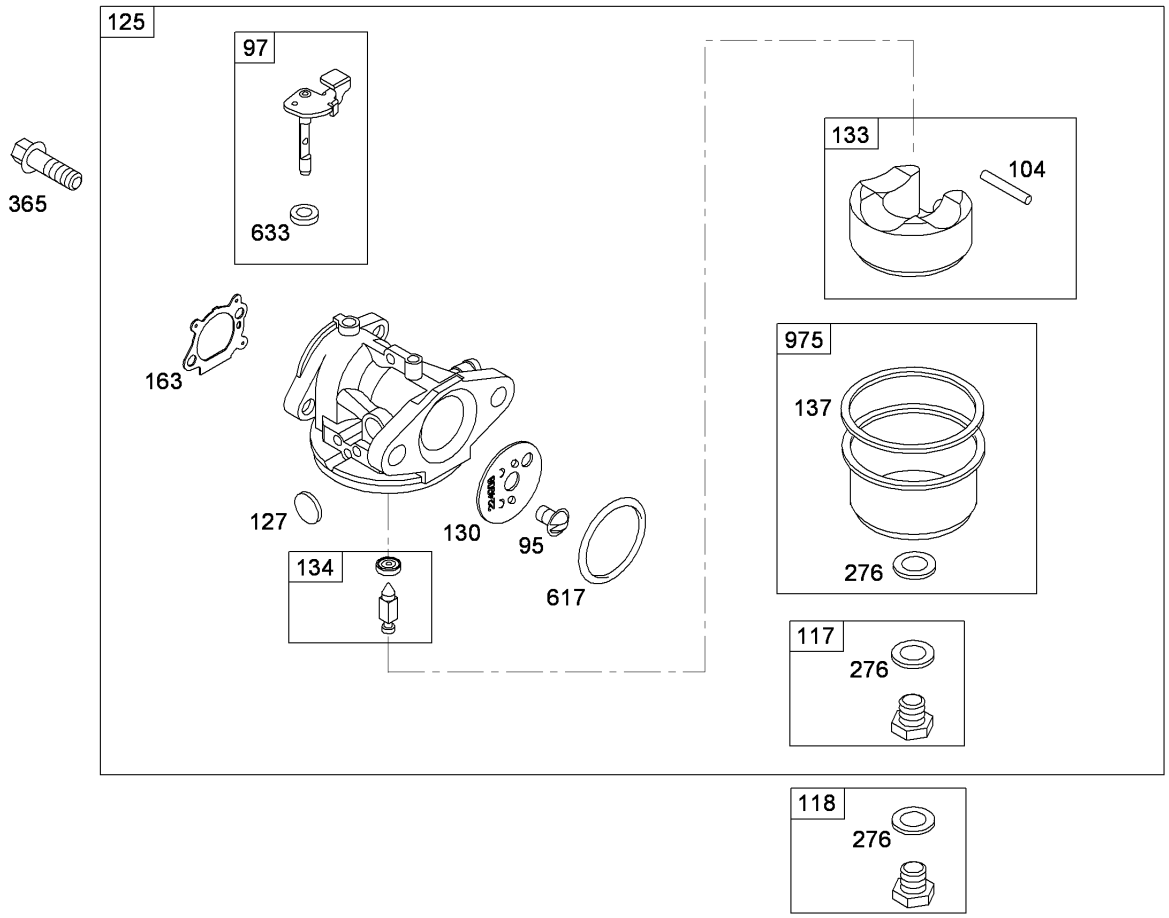


Assemblies include all parts shown in frames

# Carburetor Assembly
# Briggs and Stratton 124T02-0161-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷95 | 691636 | 1 | Screw (Throttle Valve) |
| ❷97 | 696565 | 1 | Shaft-Throttle |
| ❷❸104 | 691242 | 1 | Pin-Hinge, Float |
| ❷117 | 498978 | 1 | Jet-Main (STD) |
| ❷118 | 494870 | 1 | Jet-Main (High Altitude) |
| ❷125 | 498170 | 1 | Carburetor |
| ❷❸127 | 694468 | 1 | Plug-Welch |
| ❷130 | 696564 | 1 | Valve-Throttle |
| ❷133 | 398187 | 1 | Float-Carburetor |
| ❷❸134 | 398188 | 1 | Needle And Seat Kit |
| ❷❸137 ❺ | 693981 | 1 | Gasket-Bowl, Float |
| ❷❸163 ❹❺ | 272653 | 1 | Gasket-Cleaner, Air |
| ❷❸276 ❺ | 271716 | 1 | Washer-Sealing |
| ❷365 | 692524 | 1 | Screw (Carburetor) |
| ❷❸617 ❺ | 270344s | 1 | Seal-O Ring (Intake Manifold) |
| ❷❸633 ❺ | 691321 | 1 | Seal-Shaft, Choke Throttle |
| ❷975 | 493640 | 1 | Bowl-Float |

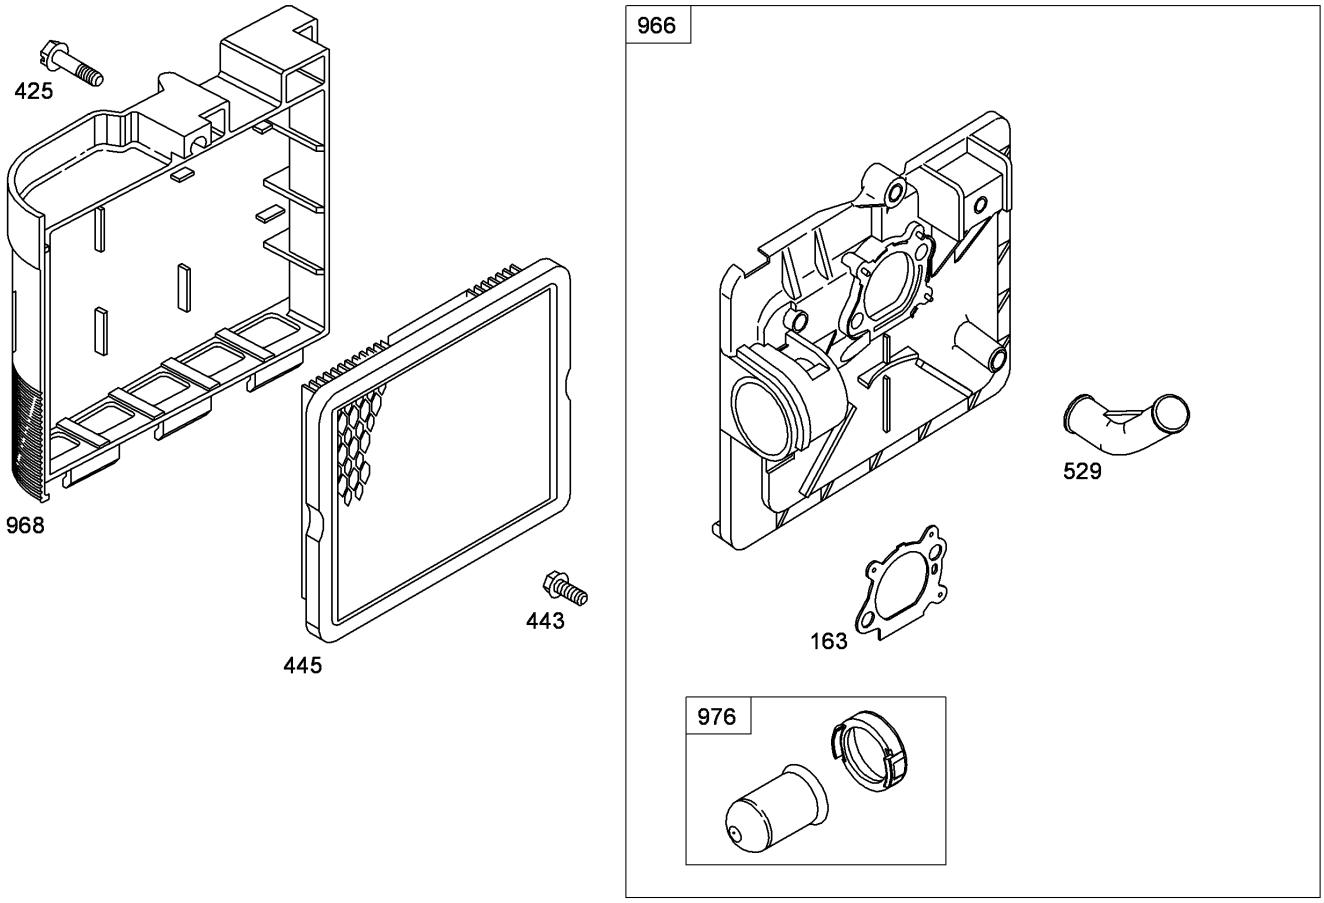


Assemblies include all parts shown in frames

# Air Cleaner Assembly
# Briggs and Stratton 124T02-0161-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷❸❹163 | 272653s | 1 | Gasket-Cleaner, Air |
| ❷425 | 690670 | 1 | Screw (Air Cleaner Cover) |
| ❷443 | 692523 | 1 | Screw (Air Cleaner Primer Base) |
| ❷445 | 491588s | 1 | Filter-Cartridge, Air Cleaner |
| ❷529 | 691923 | 1 | Grommet |
| ❷966 | 792040 | 1 | Base-Primer, Air Cleaner |
| ❷968 | 692298 | 1 | Cover-Cleaner, Air |
| ❷976 | 694395 | 1 | Primer-Carburetor |

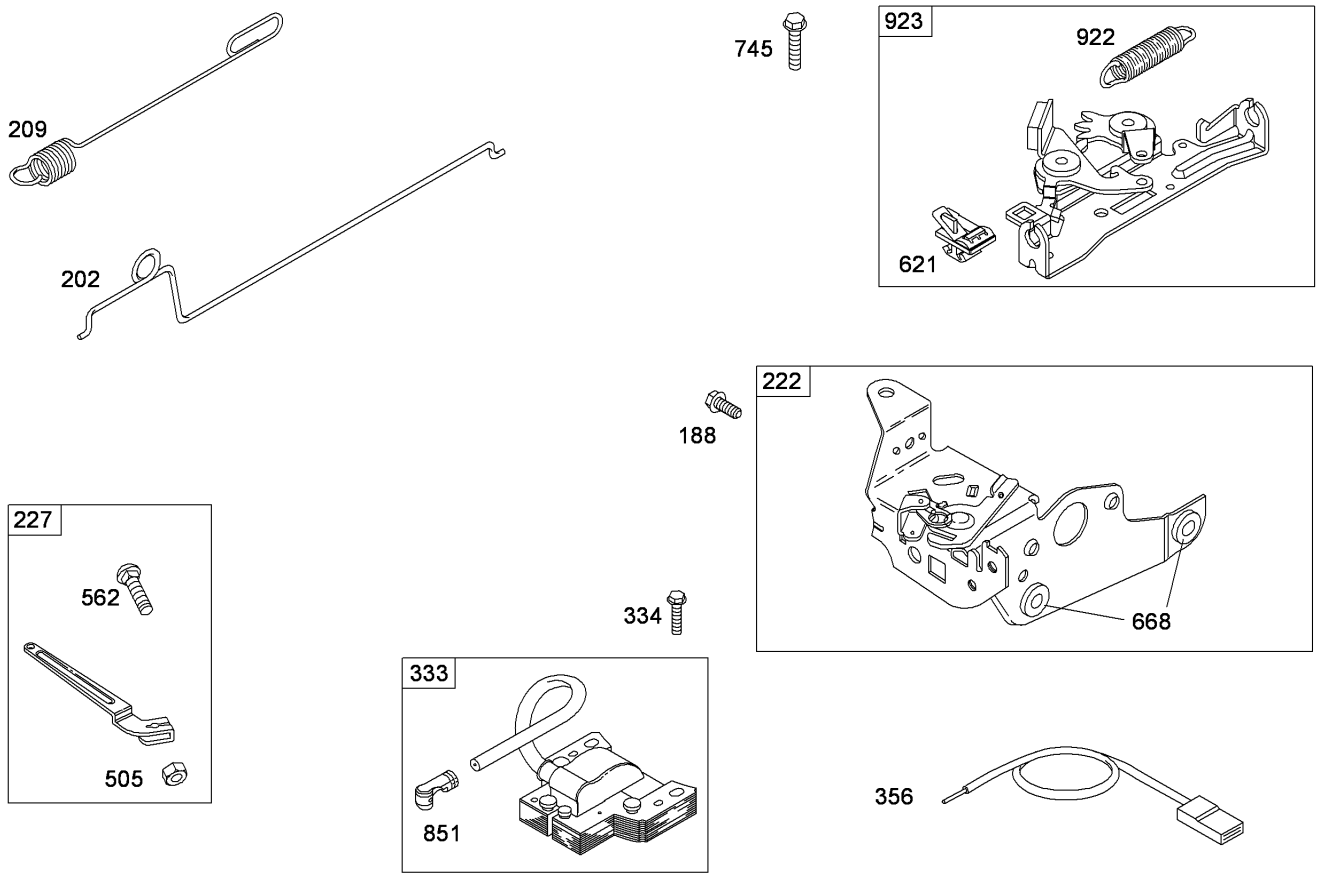


Assemblies include all parts shown in frames

# Governor Assembly
# Briggs and Stratton 124T02-0161-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷188 | 693399 | 1 | Screw (Control Bracket) |
| ❷202 | 691829 | 1 | Link-Governor, Mechanical |
| ❷209 | 691292 | 1 | Spring-Governor |
| ❷222 | 793754 | 1 | Bracket-Control |
| ❷227 | 690783 | 1 | Lever-Control, Governor |
| ❷333 | 802574 | 1 | Armature-Magneto |
| ❷334 | 691061 | 1 | Screw (Magneto Armature) |
| ❷356 | 692390 | 1 | Wire-Stop |
| ❷505 | 691251 | 1 | Nut (Governor Control Lever) |
| ❷562 | 691119 | 1 | Screw (Governor Control Lever) |
| ❷621 | 692310 | 1 | Switch-Stop |
| ❷❹668 | 493823 | 1 | Spacer |
| ❷745 | 691648 | 1 | Screw (Brake) |
| ❷851 | 493880s | 1 | Terminal-Spark Plug |
| ❷922 | 691831 | 1 | Spring-Brake |
| ❷923 | 691994 | 1 | Brake ASM |

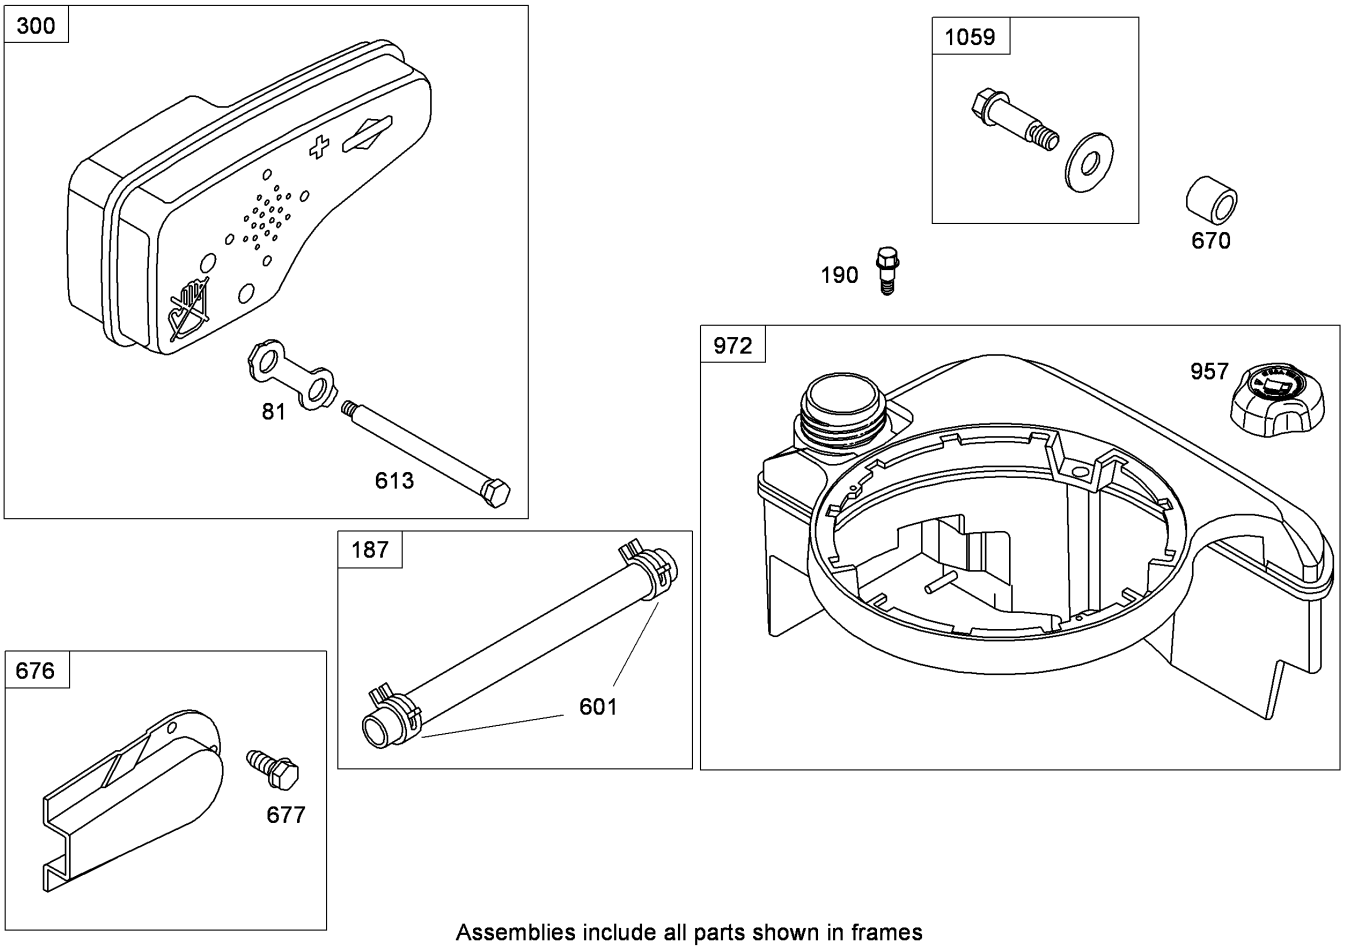


Assemblies include all parts shown in frames

# Muffler and Fuel Tank Assembly
# Briggs and Stratton 124T02-0161-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷81 | 691740 | 1 | Lock-Screw, Muffler |
| ❷187 | 791766 | 1 | Line–Fuel (Cut To Required Length) |
| ❷190 | 690940 | 1 | Screw (Fuel Tank) |
| ❷300 | 692038 | 1 | Muffler |
| ❷601 | 791850 | 1 | Clamp-Hose |
| ❷613 | 691340 | 1 | Screw (Muffler) |
| ❷670 | 692294 | 1 | Spacer-Tank, Fuel |
| ❷676 | 493871 | 1 | Deflector-Muffler |
| ❷677 | 690661 | 1 | Screw (Muffler Deflector) |
| ❷957 | 699985 | 1 | Cap-Tank, Fuel |
| ❷972 | 699374 | 1 | Tank-Fuel |
| ❷1059 | 692311 | 1 | Screw And Washer Kit |

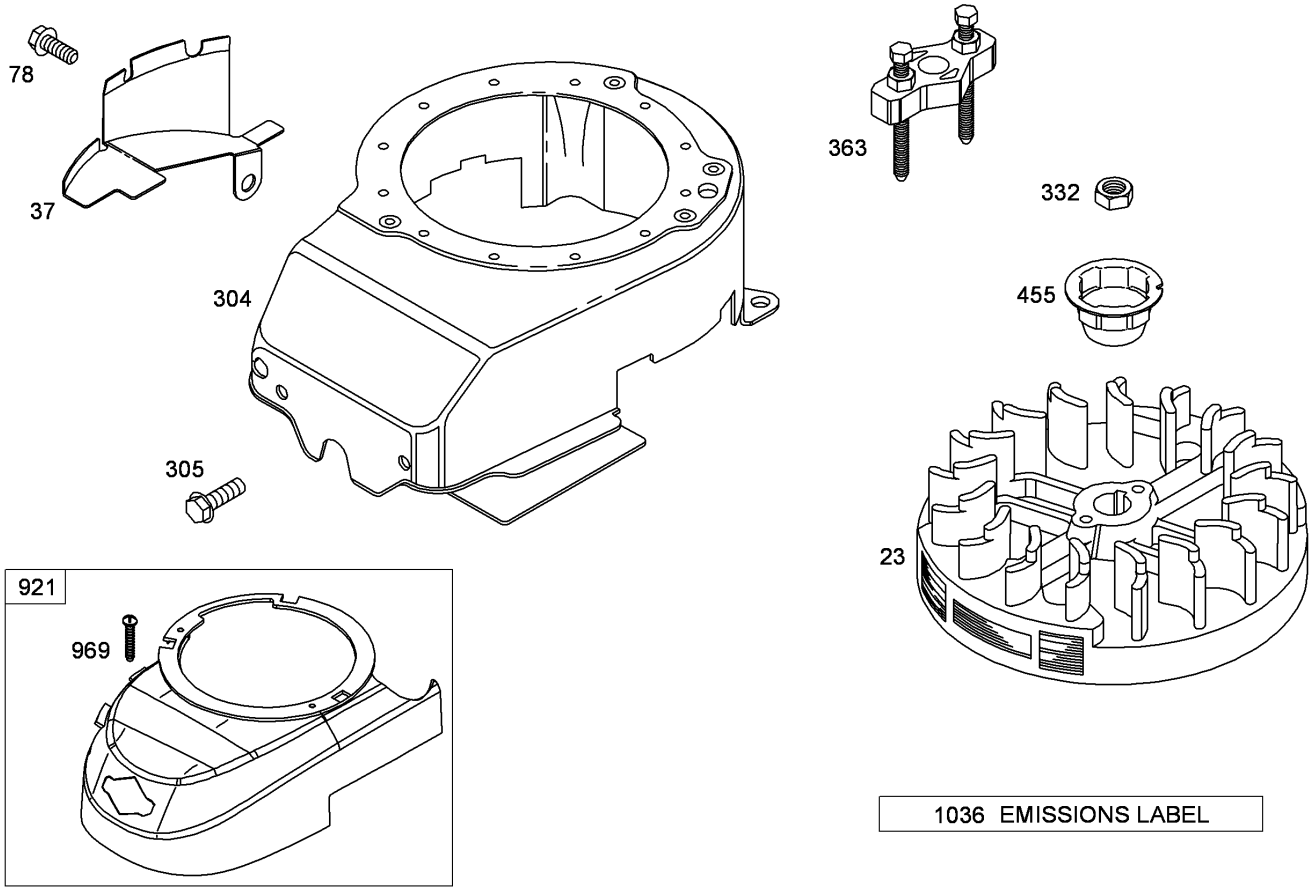


Assemblies include all parts shown in frames


# Blower Housing Assembly
# Briggs and Stratton 124T02-0161-B1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷23 | 691987 | 1 | Flywheel |
| ❷37 | 694086 | 1 | Guard-Flywheel |
| ❷78 | 691108 | 1 | Screw (Flywheel Guard) |
| ❷304 | 694769 | 1 | Housing-Blower |
| ❷305 | 691108 | 1 | Screw (Blower Housing) |
| ❷332 | 690662 | 1 | Nut (Flywheel) |
| ❷363 | 19069 | 1 | Puller-Flywheel |
| ❷455 | 791760 | 1 | Gasket-Passage, Breather |
| ❷921 | 790036 | 1 | Cover-Housing, Blower |
| ❷969 | 691138 | 1 | Screw (Blower Housing Cover) |
| ❷1036 | | 1 | Label-Emissions |

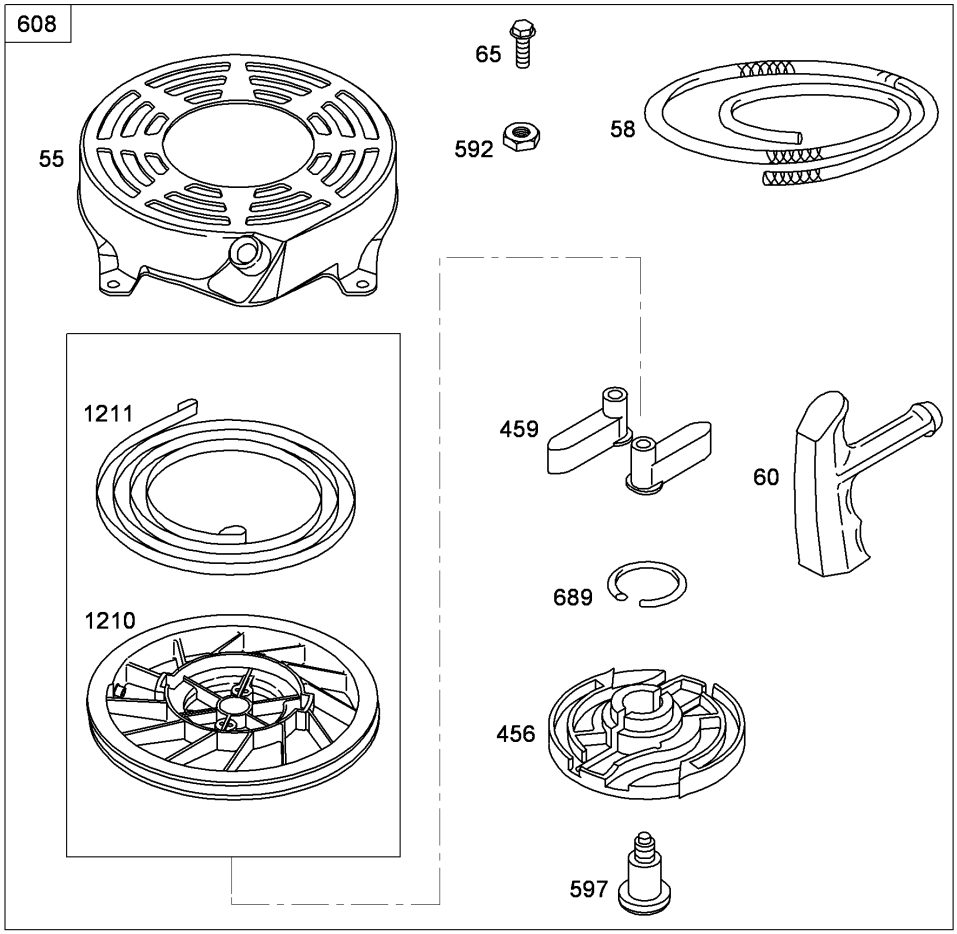


# Starter Assembly
# Briggs and Stratton 124T02-0161-B1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷55 | 691421 | 1 | Housing-Starter, Rewind |
| ❷58 | 697316 | 1 | Rope-Starter (Cut To Required Length) |
| ❷60 | 281434s | 1 | Grip-Rope, Starter |
| ❷65 | 690837 | 1 | Screw (Rewind Starter) |
| ❷456 | 692299 | 1 | Plate-Friction, Pawl |
| ❷459 | 281505s | 1 | Ratchet-Pawl |
| ❷592 | 690800 | 1 | Nut (Rewind Starter) |
| ❷597 | 691696 | 1 | Screw (Pawl Friction Plate) |
| ❷608 | 497680 | 1 | Starter-Rewind |
| ❷689 | 691855 | 1 | Spring-Friction |
| ❷1210 | 498144 | 1 | Pulley And Spring ASM (Pulley) |
| ❷1211 | 498144 | 1 | Pulley And Spring ASM (Spring) |

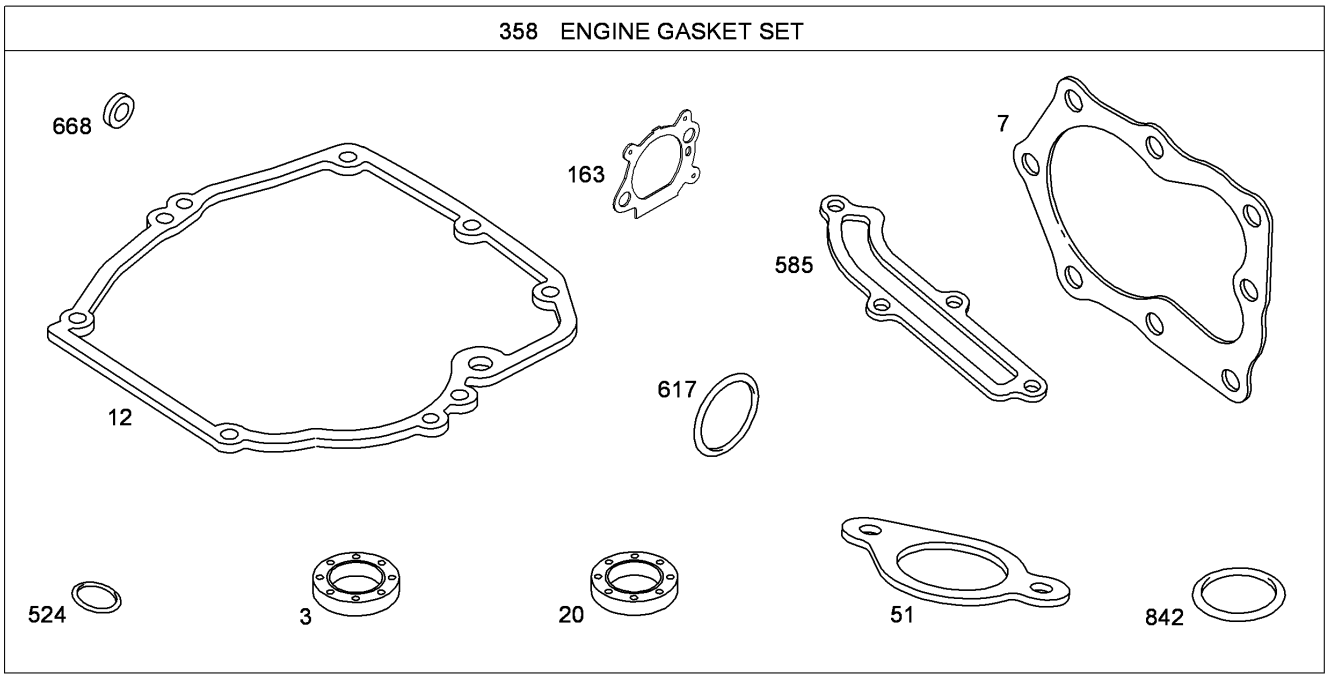



Assemblies include all parts shown in frames

# Engine Gasket Set
# Briggs and Stratton 124T02-0161-B1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷❹3 | 299819s | 1 | Seal-Oil (Magneto Side) |
| ❷❹7 | 692249 | 1 | Gasket-Head, Cylinder |
| ❷❹12 | 692232 | | Gasket-Crankcase (.015 STD) |
| ❷❹20 | 399781s | 1 | Seal-Oil (PTO Side) |
| ❷❹51 | 272199s | 1 | Gasket-Intake |
| ❷❺163 ❹ | 272653s | 1 | Gasket-Cleaner, Air |
| ❷358 | 794307 | 1 | Engine Gasket Set |
| ❷❹524 | 692296 | 1 | Seal-O Ring (Dipstick Tube) |
| ❷❹585 | 691879 | 1 | Gasket-Passage, Breather |
| ❷❺617 ❹ | 270344s | 1 | Seal-O Ring (Intake Manifold) |
| ❷❹668 | 493823 | 1 | Spacer |
| ❷❹842 | 691031 | 1 | Seal-O Ring (Dipstick) |

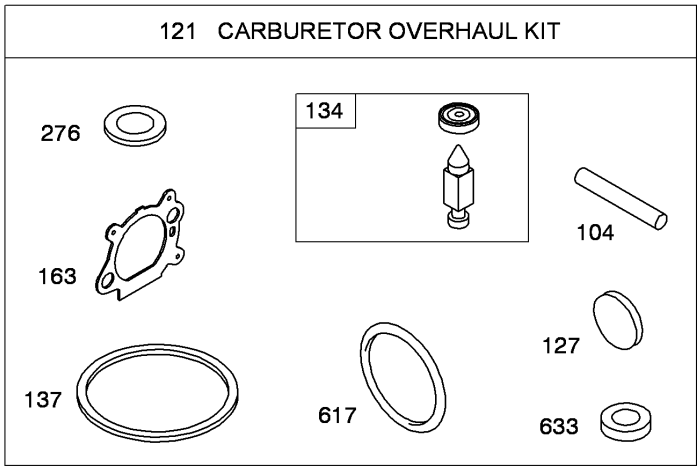

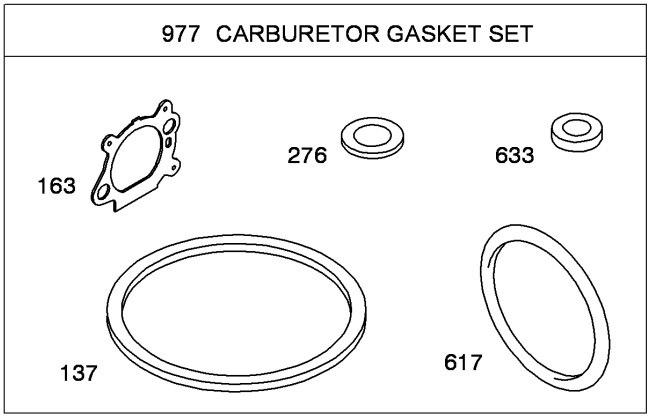
Assemblies include all parts shown in frames

# Carburetor Overhaul Kit
# Briggs and Stratton 124T02-0161-B1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷❸104 | 691242 | 1 | Pin-Hinge, Float |
| ❷121 | 498260 | 1 | Carburetor Overhaul Kit |
| ❷❸127 | 694468 | 1 | Plug-Welch |
| ❷❸134 | 398188 | 1 | Needle And Seat Kit |
| ❷❸137 ❺ | 693981 | 1 | Gasket-Bowl, Float |
| ❷❸163 ❹❺ | 272653s | 1 | Gasket-Cleaner, Air |
| ❷❸276 ❺ | 271716 | 1 | Washer-Sealing |
| ❷❸617 ❹❺ | 270344s | 1 | Seal-O Ring (Intake Manifold) |
| ❷❸633 ❺ | 691321 | 1 | Seal-Shaft, Choke Throttle |
| ❷977 | 498261 | 1 | Carburetor Gasket Set |

# Attachments and Accessories

## For 20065 - 22in Recycler Lawn Mower

| Product Name | Model/Part |
|---|---|
| Loose Parts Kit | 114-7939 |
| Replacement Bag | 59303 |
| Bagger Kit | 59304 |
| 22 Inch Blade Kit | 59534 |

# NOTES

# NOTES


TORO®