
FORM NO. 3316–978 Rev.B

TORO®

MODEL NO. 04353–50001 & UP

PARTS CATALOG

GREENSMASTER® 3100
TRACTION UNIT

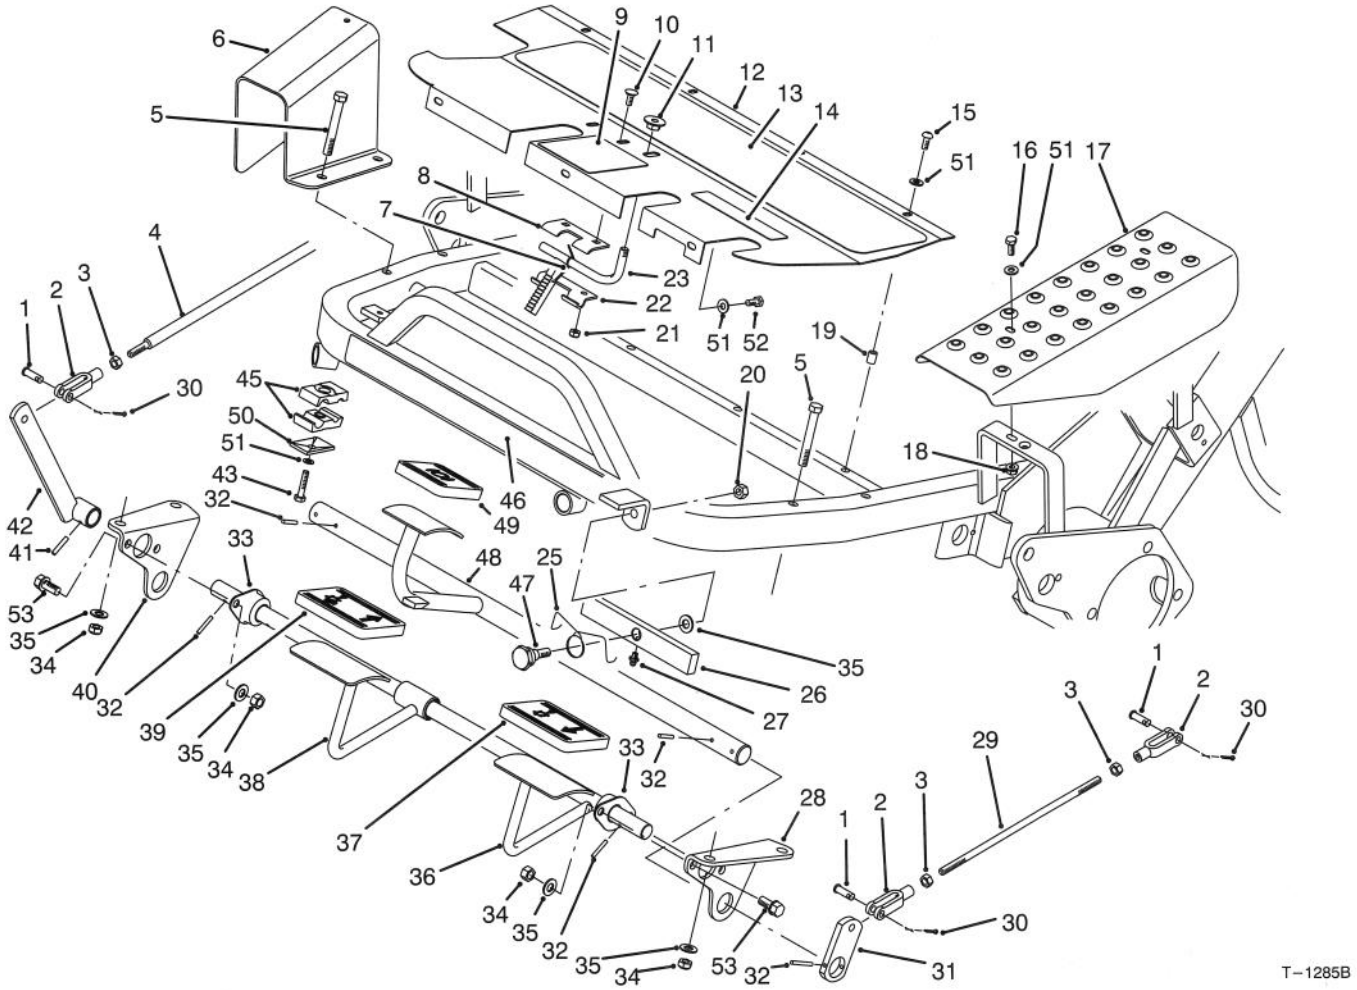

CONTROL PEDAL ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	283–61	Pin – Clevis	5
2	282–2	Clevis – Adjusting	5
3	3220–2	Nut – Jam	5
4	49–5430	Rod – Control	1
5	323–13	Screw – Cap Hex. Hd.	4
6	49–6110	Guard – Transfer Rod	1
7	10–8140	Spring – Torsion	1
8	10–7880	Hinge – Upper	1
‡9	27–2830	Decal – Parking Brake	1
10	3229–22	Bolt – Carriage	2
11	32141–111	Nut Flange Lock	1
12	83–0640	Plate – Footrest	1
13	49–6120	Pad – Footrest	1
14	93–8075	Decal – Mow/Lift	1
15	3274–31	Screw – Hex. Socket Hd.	4
16	321–4	Screw – Hex. Flange Hd.	2

Ref. No.	Part No.	Description	No. Used
17	83–0200	Cover – L.H.	1
18	32128–33	Nut – Flange Lock	2
19	32148–6	Insert – Threaded	8
20	3296–39	Nut – Lock	1
21	3296–16	Nut – Lock	2
22	10–7890	Hinge – Lower	1
23	10–7850	Latch – Parking Brake	1
25	83–0080	Spring – Torsion	1
26	83–0060	Lift – Pivot	1
27	302–5	Fitting – Grease	1
28	88–9640	Lift Pivot Bracket L.H.	1
29	27–2270	Rod – Brake Adjusting	2
30	3272–6	Pin – Cotter	5
31	10–8100	Strap – Brake Shaft	2
32	32121–35	Pin – Roll	8
33	27–2320	Bearing – Flange	2

‡For different language versions of this part, see International Parts Page.

© The TORO Company – 1994
All Rights Reserved

TPS

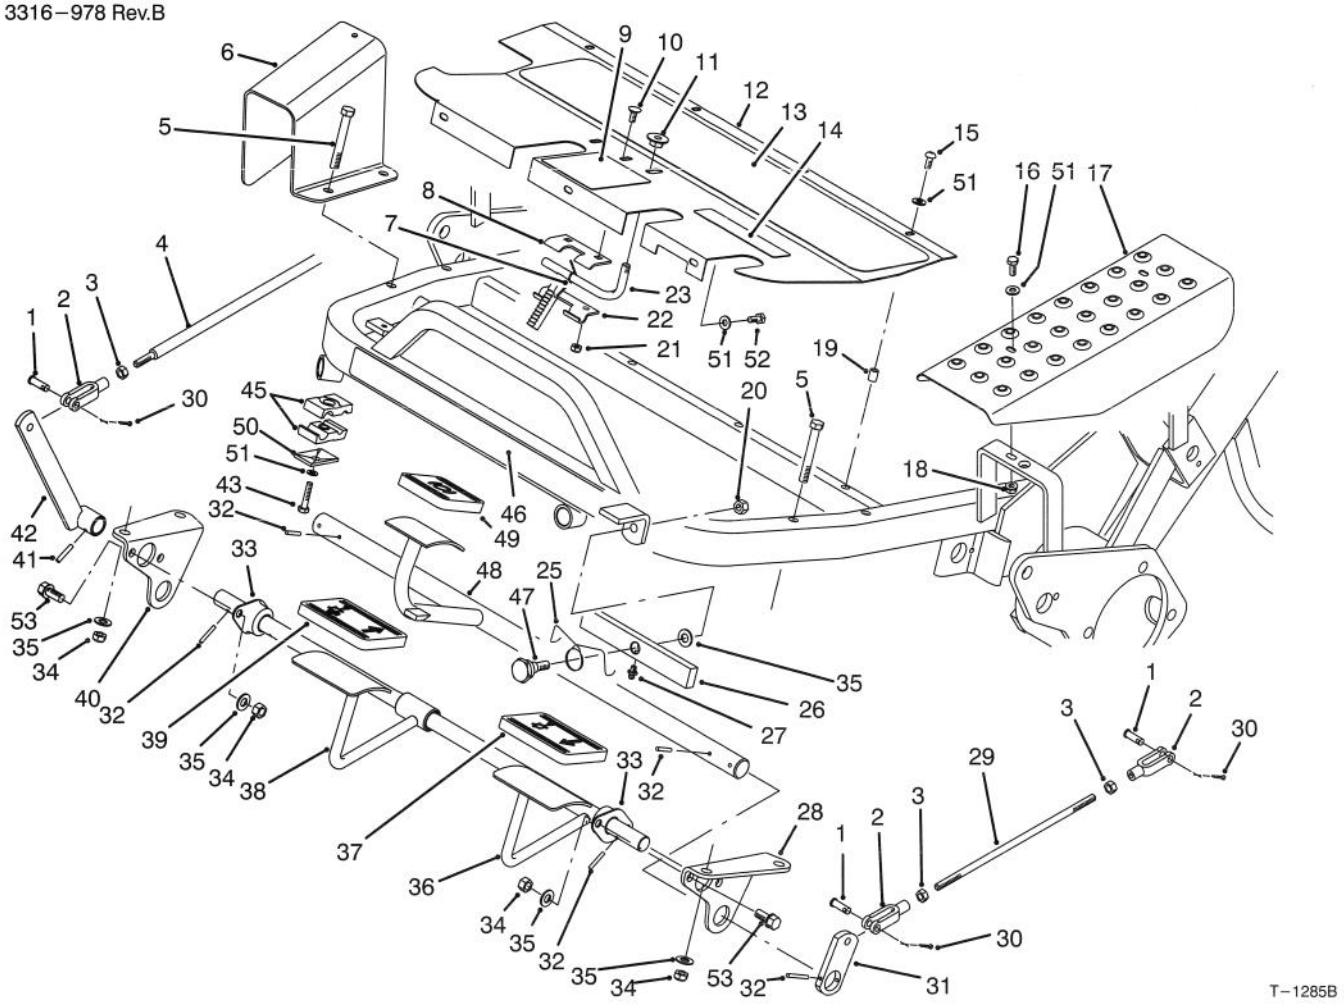


CONTROL PEDAL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
34	3296–59	Nut – Lock	8
35	3256–24	Washer – Flat	9
36	88–9660	Shaft – Cutting Control	1
37	93–7631	Pad – Lift	1
38	83–0140	Pedal – Mow	1
39	93–7630	Pad – Mow	1
40	88–9630	Lift Pivot Bracket R.H.	1
41	32121–6	Pin – Roll	1
42	49–6200	Lever – Cutting Control	1
43	321–11	Screw – Cap Hex. Hd.	1
44	3256–22	Washer – Flat	1

Ref. No.	Part No.	Description	No. Used
45	56–7970	Clamp Half – Tube	2
46	88–9620	Decal – Greensmaster 3100	1
47	83–2590	Bolt – Shoulder	1
48	83–0160	Shaft – Brake	1
49	93–7629	Pad – Brake	1
50	69–9760	Plate – Cover	1
51	3256–1	Washer – Flat	9
52	321–3	Screw – Cap Hex. Hd.	3
53	3234–1	Screw – Cap Hex. Hd.	4
*	37–8130	Basket – Grass	3
*	65–8320	Bar – Gauge	1

*Not Illustrated

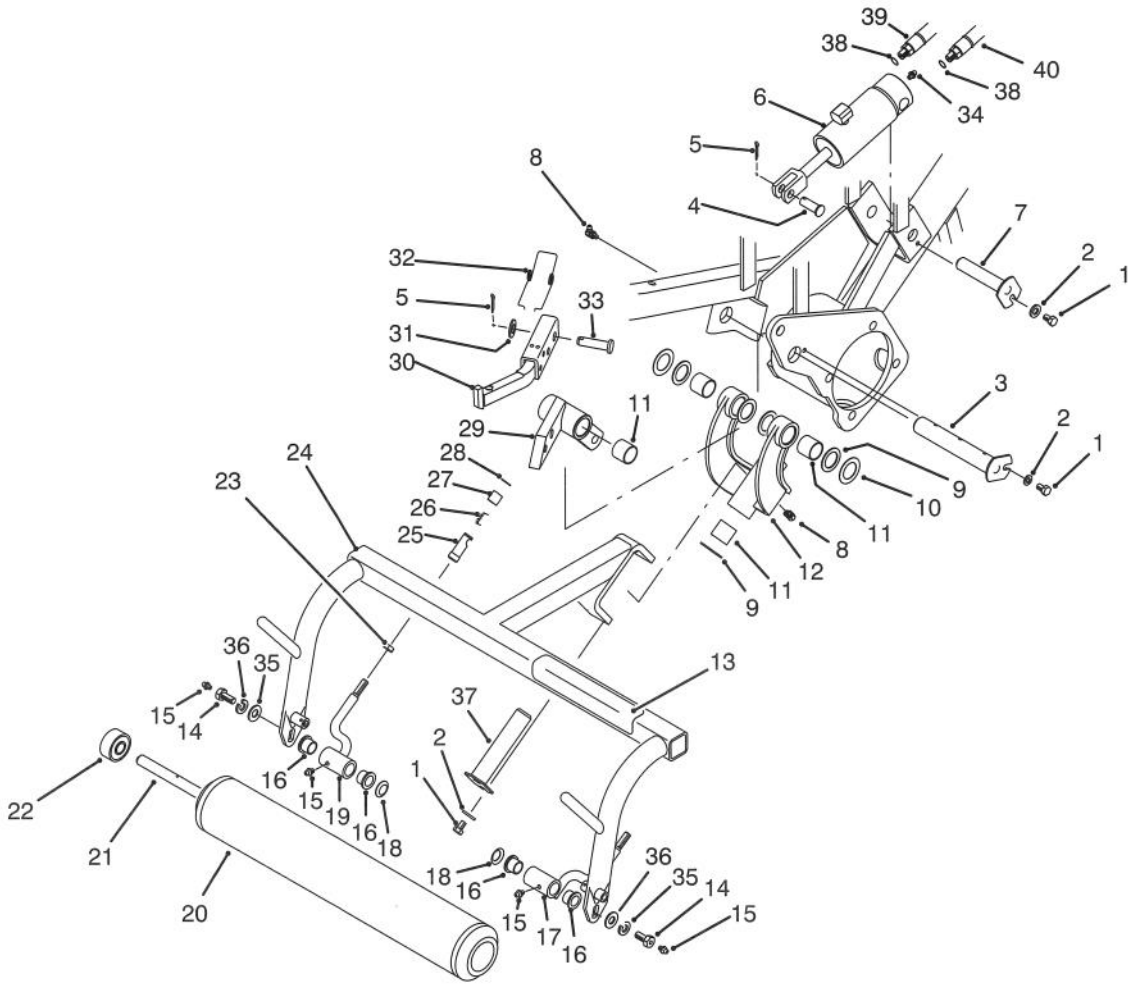


T–1283A

PULL FRAME ASSEMBLY L.H.

Ref. No.	Part No.	Description	No. Used
1	322–1	Screw – Cap Hex. Hd.	3
2	3256–23	Washer – Flat	3
3	10–6110	Pin – Hinge	1
4	283–8	Pin – Clevis	1
5	3272–11	Pin – Cotter	2
6	83–2580	Cylinder – Lift	1
7	10–6060	Pin – Lift Cylinder	1
8	302–60	Fitting – Grease 90°	2
9	10–8110	Washer – Thrust	6
10	5–1226	Washer – Shim	2
11	3–0348	Bushing – Sleeve	6
12	10–7820	Pivot Hinge Assembly (Incl. Ref. #11)	1
‡13	62–5070	Decal – Danger	1
14	11–0160	Roller Shaft Screw Assy. (Incl. Ref. #15)	2
15	302–5	Fitting – Grease Straight	4
16	3–1506	Bushing – Flange	4
17	92–0586	Pull Arm Assembly L.H. (Incl. Ref. #16)	1
18	3290–317	Washer – Wave	2
19	92–0585	Pull Arm Assembly R.H. (Incl. Ref. #16)	1
20	52–2720	Roller Assembly (Incl. Ref. #22)	1

Ref. No.	Part No.	Description	No. Used
21	21–8470	Shaft – Roller	1
22	251–141	Bearing – Ball	2
23	3220–3	Nut – Jam	2
24	92–9176	Frame – Pull L.H.	1
25	8–7710	Ball Joint Receiver Assy. (Incl. Ref. #26–28)	2
26		Spring – Compression	2
27		Sleeve	2
28		Ring – Retaining	2
29	62–2460	Lift Arm Assembly L.H. (Incl. Ref. #11)	1
30	62–2390	Bar – Lift L.H.	1
31	3256–26	Washer – Flat	1
32	57–7650	Spring – Torsion	1
33	63–8750	Pin – Pivot	1
34	302–2	Fitting – Grease Straight	1
35	3253–21	Washer – Lock	2
36	3256–24	Washer – Flat	2
37	10–6090	Pin – Pivot	1
38	237–78	Seal – O–Ring	2
39	63–3850	Hose – Hydraulic (Incl. Ref. #38)	1
40	83–1690	Hose – Hydraulic (Incl. Ref. #38)	1

‡For different language versions of this part, see International Parts Page.

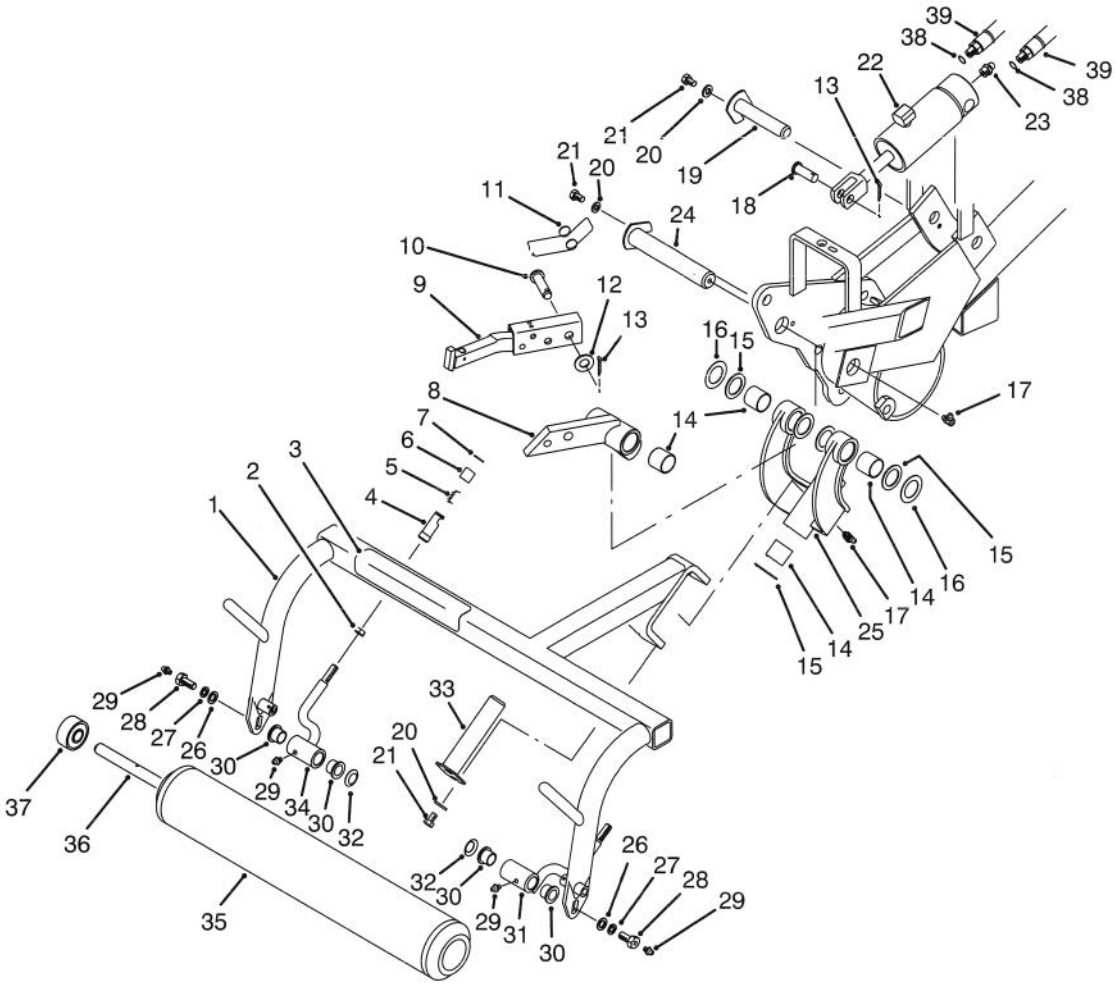


T–1284A

PULL FRAME ASSEMBLY R.H.

Ref. No.	Part No.	Description	No. Used
1	92–9177	Frame – Pull R.H.	1
2	3220–3	Nut – Jam	2
‡3	62–5070	Decal – Danger	1
4	8–7710	Ball Joint Receiver Assy. (Incl. Ref. #5–7)	2
5		Spring – Compression	2
6		Sleeve	2
7		Ring – Retaining	2
8	62–2440	Lift Arm Assembly (Incl. Ref. #14)	1
9	62–2420	Bar – Lift	1
10	63–8750	Pin – Pivot	1
11	57–7650	Spring – Torsion	1
12	3256–26	Washer – Flat	1
13	3272–11	Pin – Cotter	2
14	3–0348	Bushing – Sleeve	6
15	10–8110	Washer – Thrust	6
16	5–1226	Washer – Shim	2
17	302–60	Fitting – Grease 90°	2
18	283–8	Pin – Clevis	1
19	10–6060	Pin – Pivot	1
20	3256–23	Washer – Flat	3
21	322–1	Screw – Cap Hex. Hd.	3
22	83–2580	Hydraulic Cylinder Assy.	1

Ref. No.	Part No.	Description	No. Used
23	302–2	Fitting – Grease	1
24	10–6110	Pin – Pivot	1
25	10–7820	Pivot Hinge Assembly (Incl. Ref. #14)	1
26	3256–24	Washer – Flat	2
27	3253–21	Washer – Lock	2
28	11–0160	Roller Shaft Screw Assy. (Incl. Ref. #29)	2
29	302–5	Fitting – Grease	4
30	3–1506	Bushing – Flange	4
31	92–0586	Pull Arm Assembly L.H. (Incl. Ref. #30)	1
32	3290–317	Washer – Wave	2
33	10–6090	Pin – Pivot	1
34	92–0585	Pull Arm Assembly R.H. (Incl. Ref. #30)	1
35	52–2720	Roller Assembly (Incl. Ref. #37)	1
36	21–8470	Shaft – Roller	1
37	251–141	Bearing – Ball	2
38	237–78	Seal – O–Ring	2
39	63–3880	Hose – Hydraulic (Incl. Ref. #38)	2

‡For different language versions of this part, see International Parts Page.

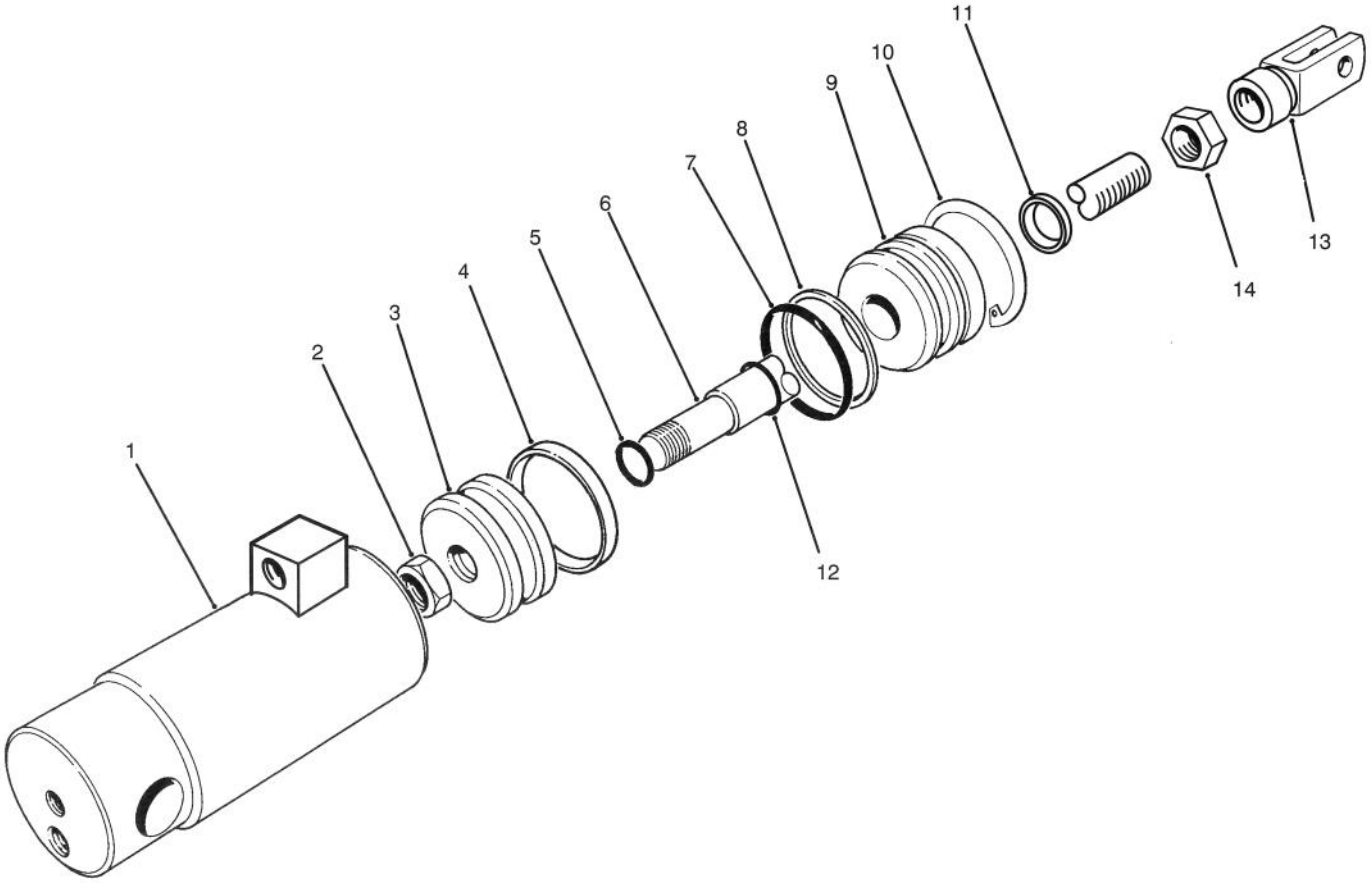


T–1246

HYDRAULIC CYLINDER ASSEMBLY NO. 83–2580

Ref. No.	Part No.	Description	No. Used
1		Barrel	1
2	32152–10	Nut – Lock	1
3	52–1990	Piston	1
4		Uniring	1
5		Seal – O–Ring	1
6	76–1860	Shaft	1
7		Seal – O–Ring	1
8		Washer – Back–Up	1
9	65–4860	Head	1

Ref. No.	Part No.	Description	No. Used
10	32120–8	Ring – Retaining	1
11		Seal – Dust	1
12		Seal – PDF	1
13	76–1850	Clevis	1
14	3220–6	Nut – Jam	1
*	86–5390	Seal Kit (Incl. Ref. #4, 5, 7, 8, 11 & 12)	1

*Not Illustrated

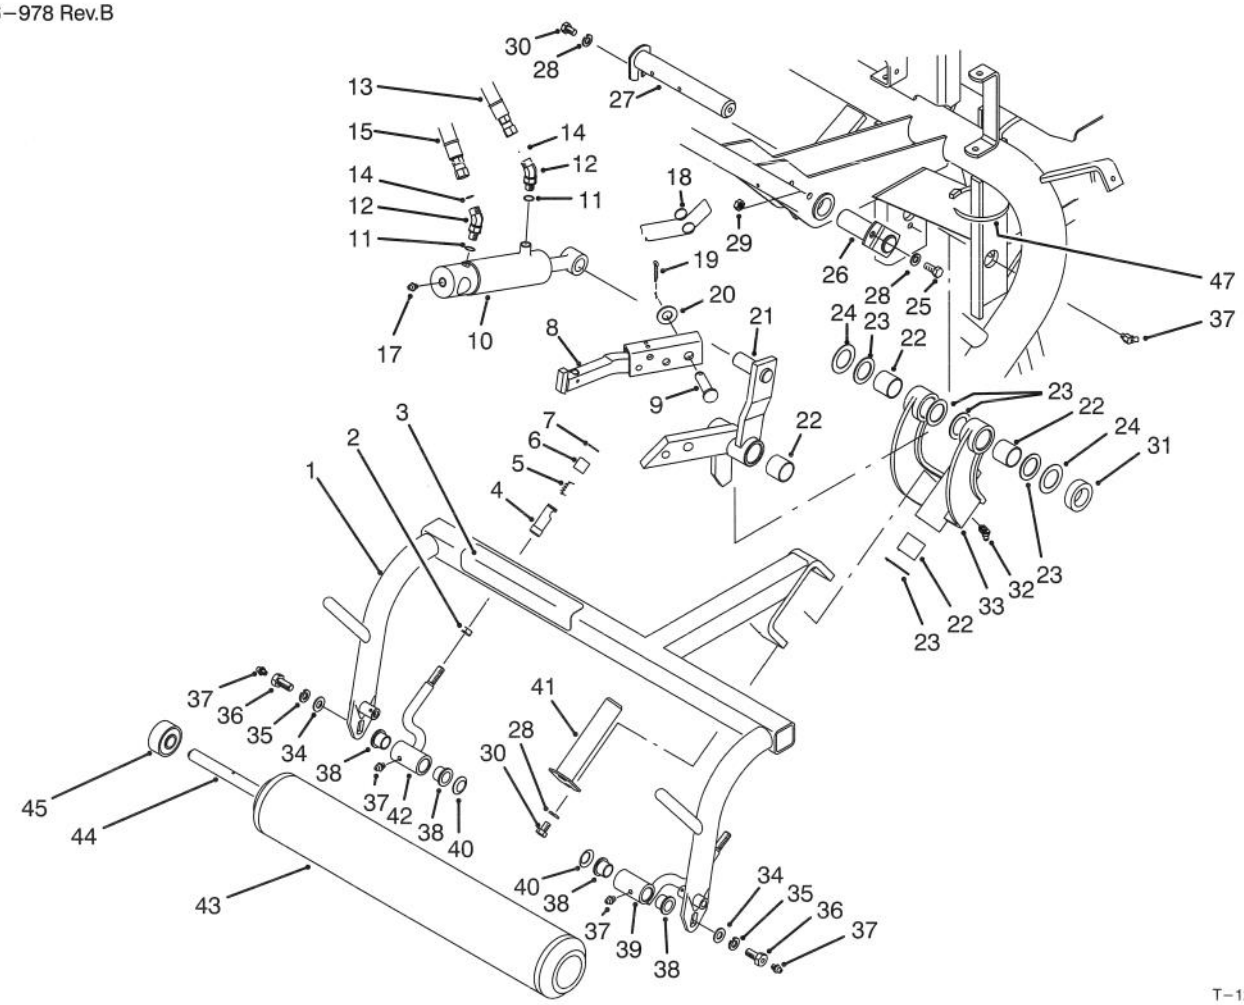


PULL FRAME ASSEMBLY REAR

Ref. No.	Part No.	Description	No. Used
1	92–9177	Frame – Pull Rear	1
2	3220–3	Nut – Jam	2
‡3	62–5070	Decal – Danger	1
4	8–7710	Ball Joint Receiver Assy. (Incl. Ref. 5–7)	2
5		Spring – Compression	2
6		Sleeve	2
7		Ring – Retaining	2
8	62–2420	Bar – Lift	1
9	63–8750	Pin – Pivot	1
10	83–7230	Hydraulic Cylinder Assembly	1
11	237–35	Seal – O–Ring	2
12	340–103	Fitting – Hydraulic 45° (Incl. Ref. #11 & 14)	2
13	83–1680	Hose – Hydraulic	1
14	237–78	Seal – O–Ring	2
15	88–9700	Hose – Hydraulic	1
17	302–2	Fitting – Grease	1
18	57–7650	Spring – Torsion	1
19	3272–11	Pin – Cotter	1
20	3256–26	Washer – Flat	1
21	68–5380	Lift Arm Assembly (Incl. Ref. #22)	1
22	3–0348	Bushing – Sleeve	6
23	10–8110	Washer – Thrust	6
24	5–1226	Washer – Shim	2
25	322–3	Screw – Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
26	68–5560	Pin – Cylinder Pivot	1
27	27–2550	Pin – Pivot	1
28	3256–23	Washer – Flat	3
29	3296–29	Nut – Lock	1
30	322–1	Screw – Cap Hex. Hd.	2
31	27–2540	Spacer – Hub	1
32	302–60	Fitting – Grease 90°	1
33	10–7820	Pivot Hinge Assembly (Incl.Ref. #22)	1
34	3256–24	Washer – Flat	2
35	3253–21	Washer – Lock	2
36	11–0160	Roller Shaft Screw Assy. (Incl. Ref. #37)	2
37	302–5	Fitting – Grease Straight	5
38	3–1506	Bushing – Flange	4
39	92–0586	Pull Arm Assembly L.H. (Incl. Ref. #38)	1
40	3290–317	Washer – Wave	2
41	10–6090	Pin – Pivot	1
42	92–0585	Pull Arm Assembly R.H. (Incl. Ref. #38)	1
43	52–2720	Roller Assembly (Incl. Ref. #45)	1
44	21–8470	Shaft – Roller	1
45	251–141	Bearing – Ball	2
46	3253–4	Washer – Lock	1
47	3290–379	Tie – Cable	1

‡For different language versions of this part, see International Parts Page

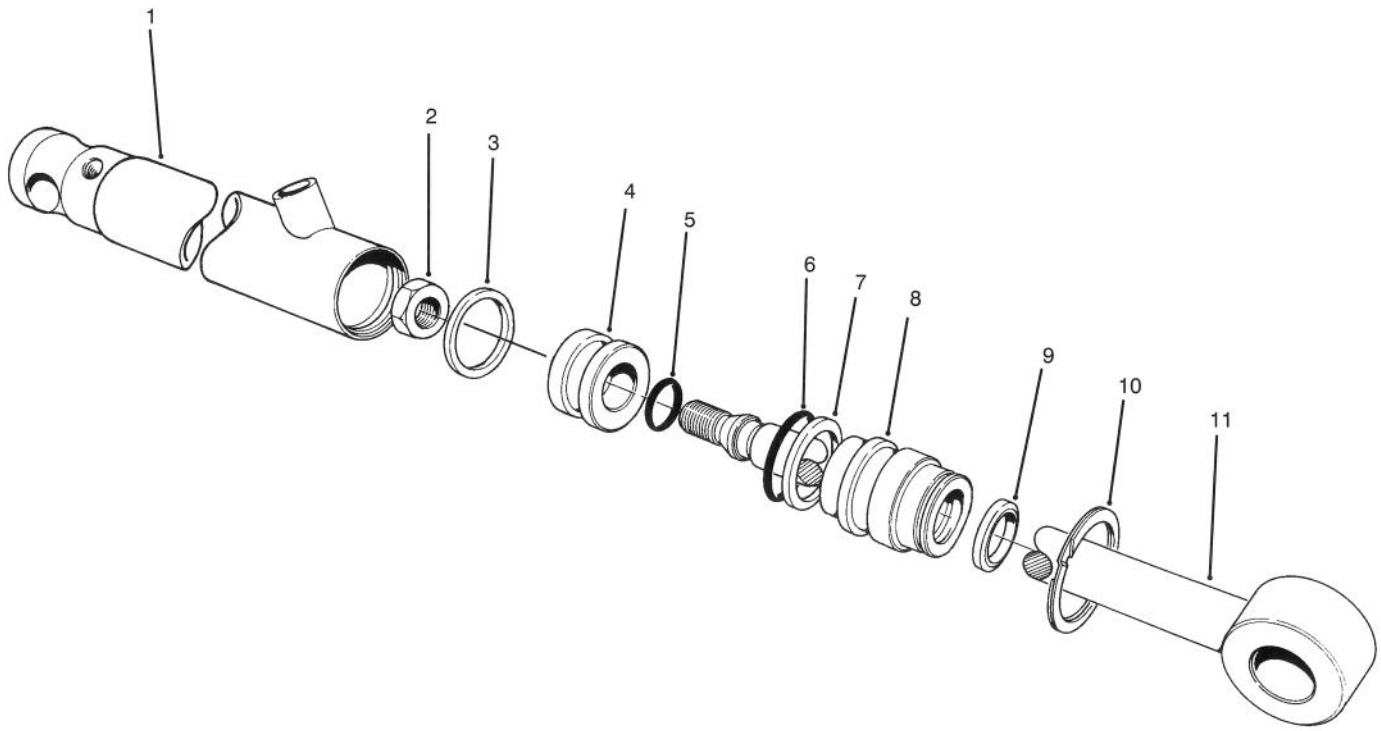


T–0640

HYDRAULIC CYLINDER NO. 83–7230

Ref. No.	Part No.	Description	No. Used
1	70–8130	Barrel	1
2	32152–10	Nut – Hex.	1
3		Uniring	1
4	70–2780	Piston	1
5		Seal – O–Ring	1
6		Seal – O–Ring	1
7		Washer – Back–Up	1

Ref. No.	Part No.	Description	No. Used
8	70–2770	Head	1
9		Seal – Dust	1
10	43–5220	Ring – Retaining	1
11	43–5230	Shaft & Clevis	1
*	86–5360	Repair Kit (Incl. Ref. #3, 5–7 & 9)	1


*Not Illustrated

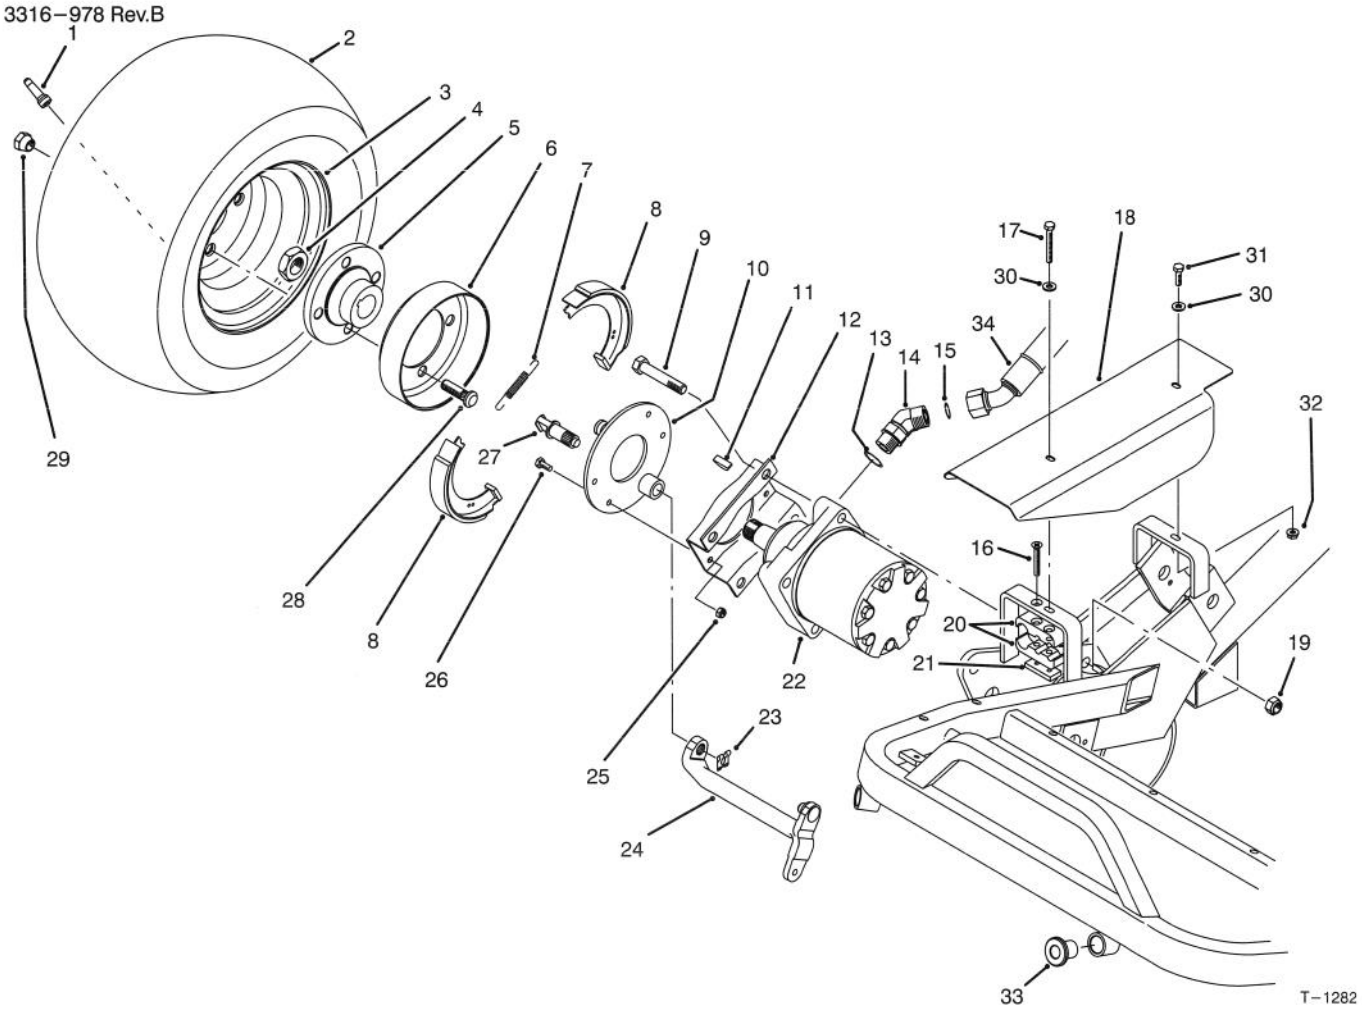

FRONT WHEEL & BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	232–24	Stem – Valve	2
2	28–3680	Tire	2
3	217–60	Rim	2
4	26–3790	Nut – Lock	2
5	10–6870	Hub – Wheel	2
6	10–6850	Drum – Brake	2
7	70–9880	Spring – Return	4
8	70–9840	Shoe – Brake	4
9	325–11	Screw – Cap Hex. Hd.	8
10	70–9870	Plate – Backing	2
11	3257–42	Key – Woodruff	2
12	84–2000	Bracket – Brake	2
13	237–80	Seal – O–Ring	4
14	340–14	Fitting – Hydraulic 45° (Incl. Ref. #13 & 15)	4
15	237–65	Seal – O–Ring	4
16	32108–100	Screw – Flat Hd.	1
17	321–11	Screw – Hex. Washer Hd.	1
18	83–0190	Cover – R.H.	1
19	3296–23	Nut – Lock	8
20	57–6140	Clamp Half – Tube	2
21	83–1220	Plate – Clamp	1
22	75–9990	Motor – Hydraulic (Use on Serial #50101–50299)	2
22	92–9199	Motor – Hydraulic (Use on Serial #50301 & Up)	2
23	70–9850	Clip – Retaining	2
24	71–1510	Arm – Brake	2
25	3296–42	Nut – Lock	8
26	321–5	Screw – Cap Hex. Hd.	8
27	70–9860	Cam – Brake	2
28	85–6540	Stud – Drive	8
29	242–50	Nut – Lug	8
30	3256–22	Washer – Flat	2
31	321–4	Screw – Cap Hex. Hd.	1
32	32128–33	Nut – Lock	1
33	83–1700	Bushing – Flange	2
34	83–2450	Hose – Hydraulic (Top)	1
*	83–2460	Hose – Hydraulic (Bottom)	1
*	10–6821	Brake Drum Assembly (Incl. Ref. #5, 6 & 28)	2
*	71–1500	Brake Assembly (Incl. Ref. #7, 8, 10, 23 & 27)	2

*Not Illustrated

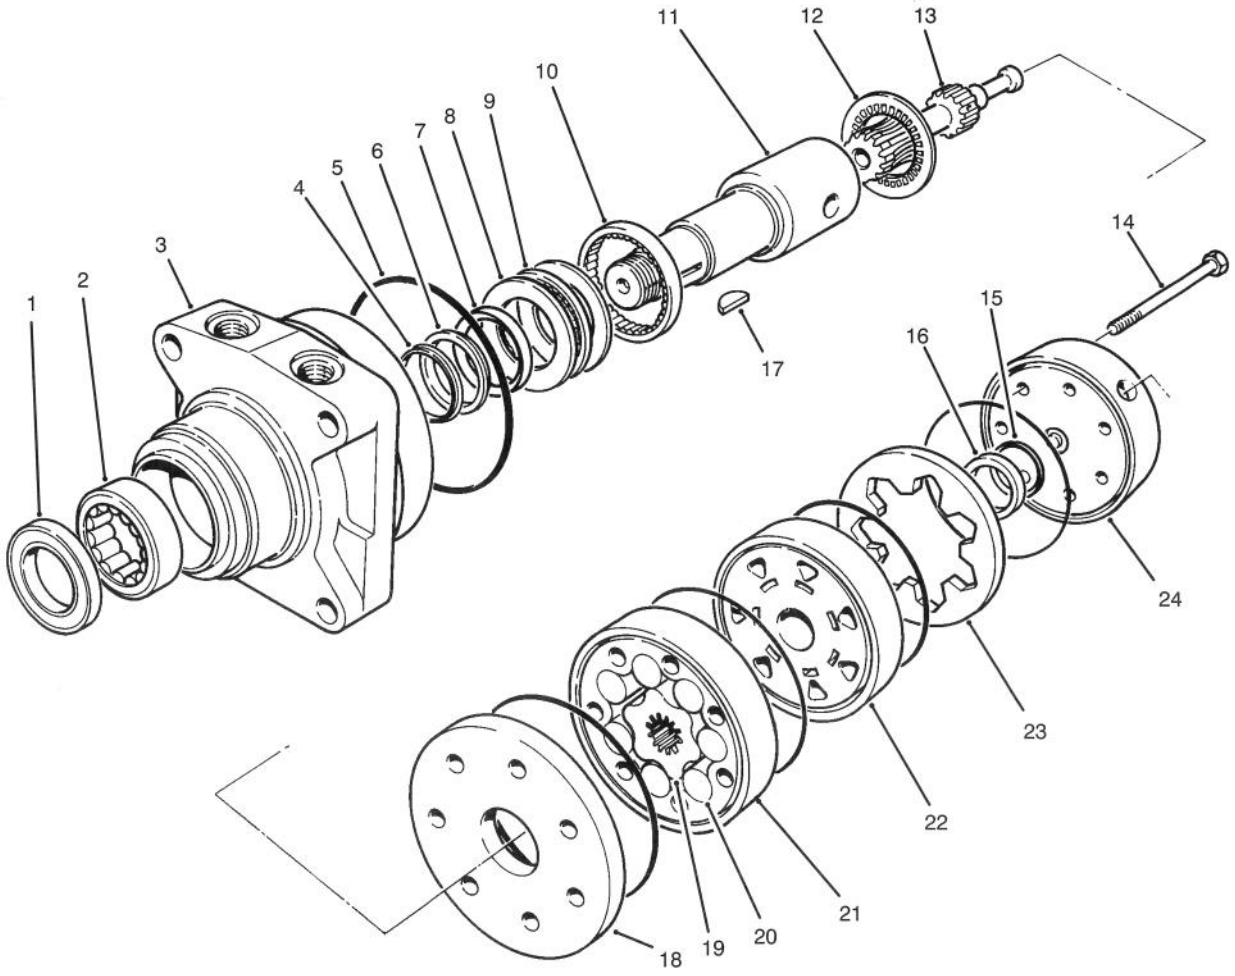


T–0983

HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 75–9990

Ref. No.	Part No.	Description	No. Used
1		Seal – Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer – Back–Up	1
5		Ring – Seal	5
6		Washer – Back–Up	1
7		Seal – Inner	1
8		Washer – Thrust	2
9		Bearing – Thrust	1
10		Bearing	1
11	76–0860	Shaft – Coupling	1
12	76–0850	Bearing – Thrust	1
13	76–0960	Link – Drive	7
14	76–1010	Screw – Cap Hex. Hd.	1
15		Seal – Commutator	1
16		Commutator	1

Ref. No.	Part No.	Description	No. Used
17	3257–42	Key – Woodruff	1
18	76–0870	Plate – Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76–0840	Manifold	1
23		Ring – Commutator	1
24	76–0940	End Cover Assembly	1
*	76–0970	Rotor Set (Incl. Ref. #19–21)	1
*	76–0880	Commutator Assembly (Incl. Ref. #15, 16 & 23)	1
*	76–0800	Seal Kit (Incl. Ref. #1, 4–7 & 15)	1
*	76–0810	Housing Assembly (Incl. Ref. #2, 3 & 8–10)	1

*Not Illustrated

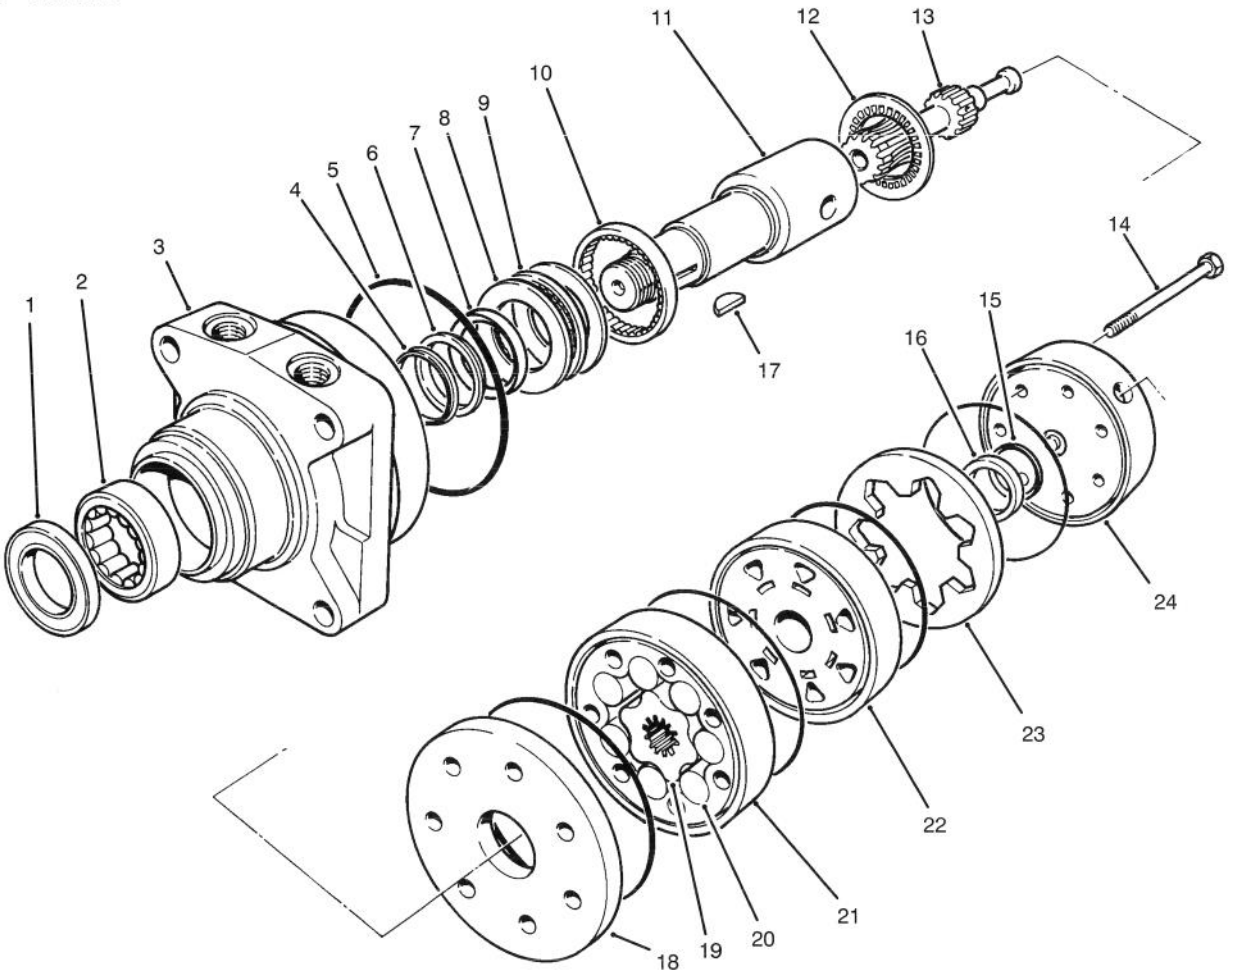


T–0983

HYDRAULIC DRIVE MOTOR ASSEMBLY NO. 92–9199

Ref. No.	Part No.	Description	No. Used
1		Seal – Dirt & Water	1
2		Bearing	1
3		Housing	1
4		Washer – Back–Up	1
5		Ring – Seal	5
6		Washer – Back–Up	1
7		Seal – Inner	1
8		Washer – Thrust	2
9		Bearing – Thrust	1
10		Bearing	1
11	76–0860	Shaft – Coupling	1
12	76–0850	Bearing – Thrust	1
13	92–9761	Link – Drive	7
14	92–9762	Screw – Cap Hex. Hd.	1
15		Seal – Commutator	1
16		Commutator	1

Ref. No.	Part No.	Description	No. Used
17	3257–42	Key – Woodruff	1
18	76–0870	Plate – Wear	1
19		Rotor	1
20		Vane	7
21		Stator	1
22	76–0840	Manifold	1
23		Ring – Commutator	1
24	76–0940	End Cover Assembly	1
*	92–9763	Rotor Set (Incl. Ref. #19–21)	1
*	76–0880	Commutator Assembly (Incl. Ref. #15, 16 & 23)	1
*	76–0800	Seal Kit (Incl. Ref. #1, 4–7 & 15)	1
*	76–0810	Housing Assembly (Incl. Ref. #2, 3 & 8–10)	1

*Not Illustrated

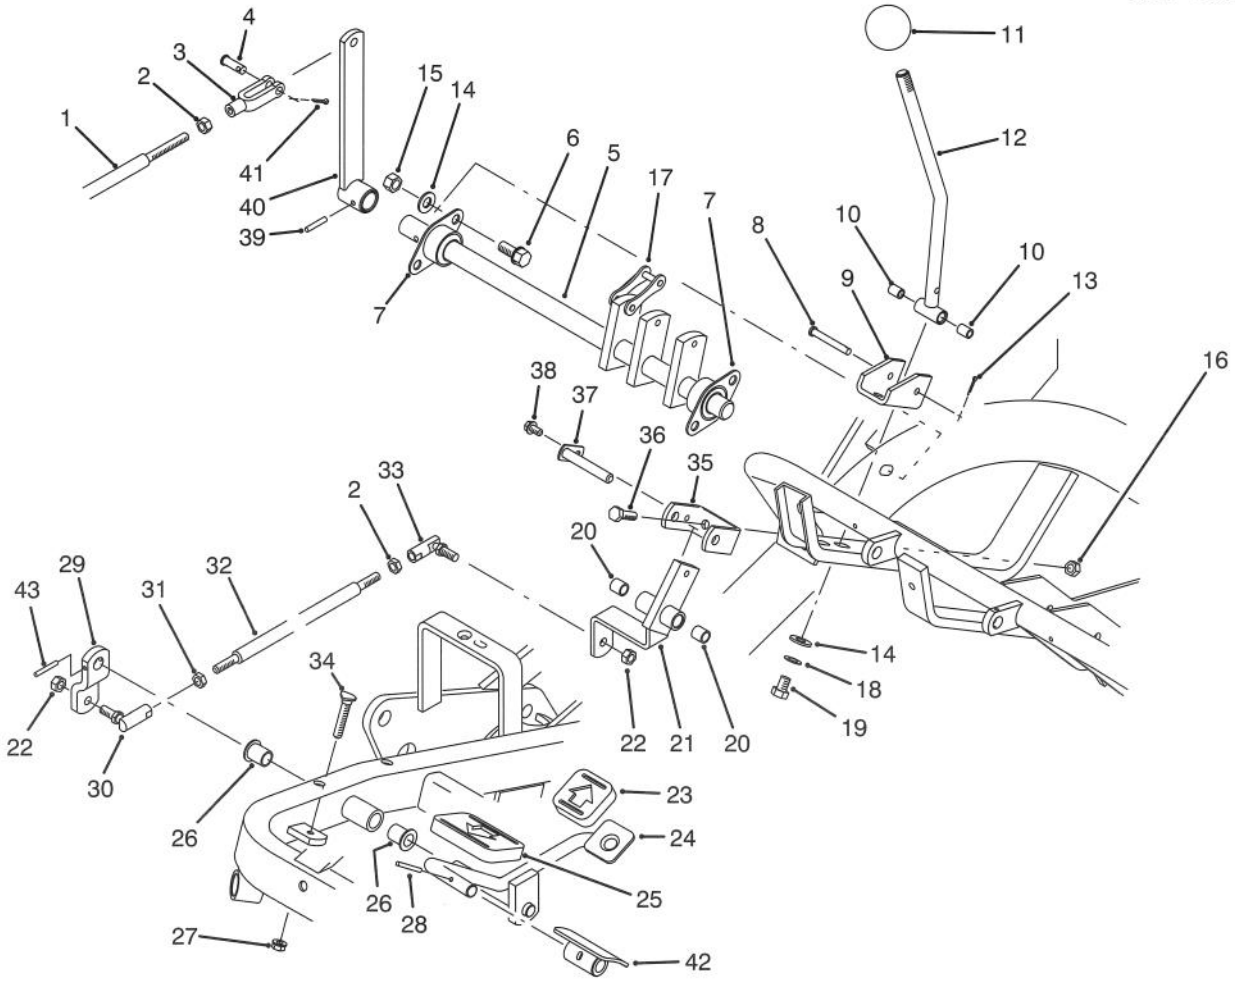


T–1287

TRACTION CONTROLS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49–5430	Rod – Control	1
2	3220–2	Nut – Jam	2
3	282–2	Clevis – Rod	1
4	283–61	Pin – Clevis	1
5	44–0870	Shaft – Cam	1
6	3234–1	Screw – Hex. Flange Hd.	4
7	27–2320	Bearing – Flange	2
8	283–57	Pin – Clevis	1
9	49–6220	Bracket – Control Arm	1
10	256–251	Bushing – Sleeve	2
11	233–48	Knob	1
12	83–0590	Traction Handle Assembly (Incl. Ref. #10)	1
13	3272–4	Pin – Cotter	1
14	3256–24	Washer – Flat	6
15	3296–59	Nut – Lock	4
16	3296–29	Nut – Lock	2
17	57–6220	Link	5
18	3254–6	Washer – I.T.L.W.	2
19	3211–2	Screw – Cap Hex. Hd.	2
20	256–2	Bushing – Sleeve	2
21	49–6260	Assy. – Pivot, Traction (Incl. Ref. #20)	1


Ref. No.	Part No.	Description	No. Used
22	3296–4	Nut – Lock	2
23	74–9110	Pad – Reverse Pedal	1
24	83–0540	Pedal – Traction	1
25	74–9100	Pad – Forward Pedal	1
26	256–155	Bushing – Flange	2
27	32128–20	Nut – Flange Lock	1
28	32121–45	Pin – Roll	1
29	83–0630	Arm – Traction Pivot	1
30	2411–42	Joint – Ball L.H. Thread	1
31	3220–20	Nut – Jam L.H. Thread	1
32	83–0580	Rod – Traction Control	1
33	2411–43	Joint – Ball R.H. Thread	1
34	77–0480	Screw – Traction Stop	1
35	49–6250	Bracket – Traction Pivot	1
36	322–5	Screw – Cap Hex. Hd.	2
37	49–6290	Shaft – Traction Pivot	1
38	12–3270	Screw – Hex. Washer Hd.	1
39	32121–6	Pin – Roll	1
40	47–5320	Lever – Control	1
41	3272–6	Pin – Cotter	1
42	49–6440	Pedal – Forward	1
43	32121–51	Pin – Roll	1

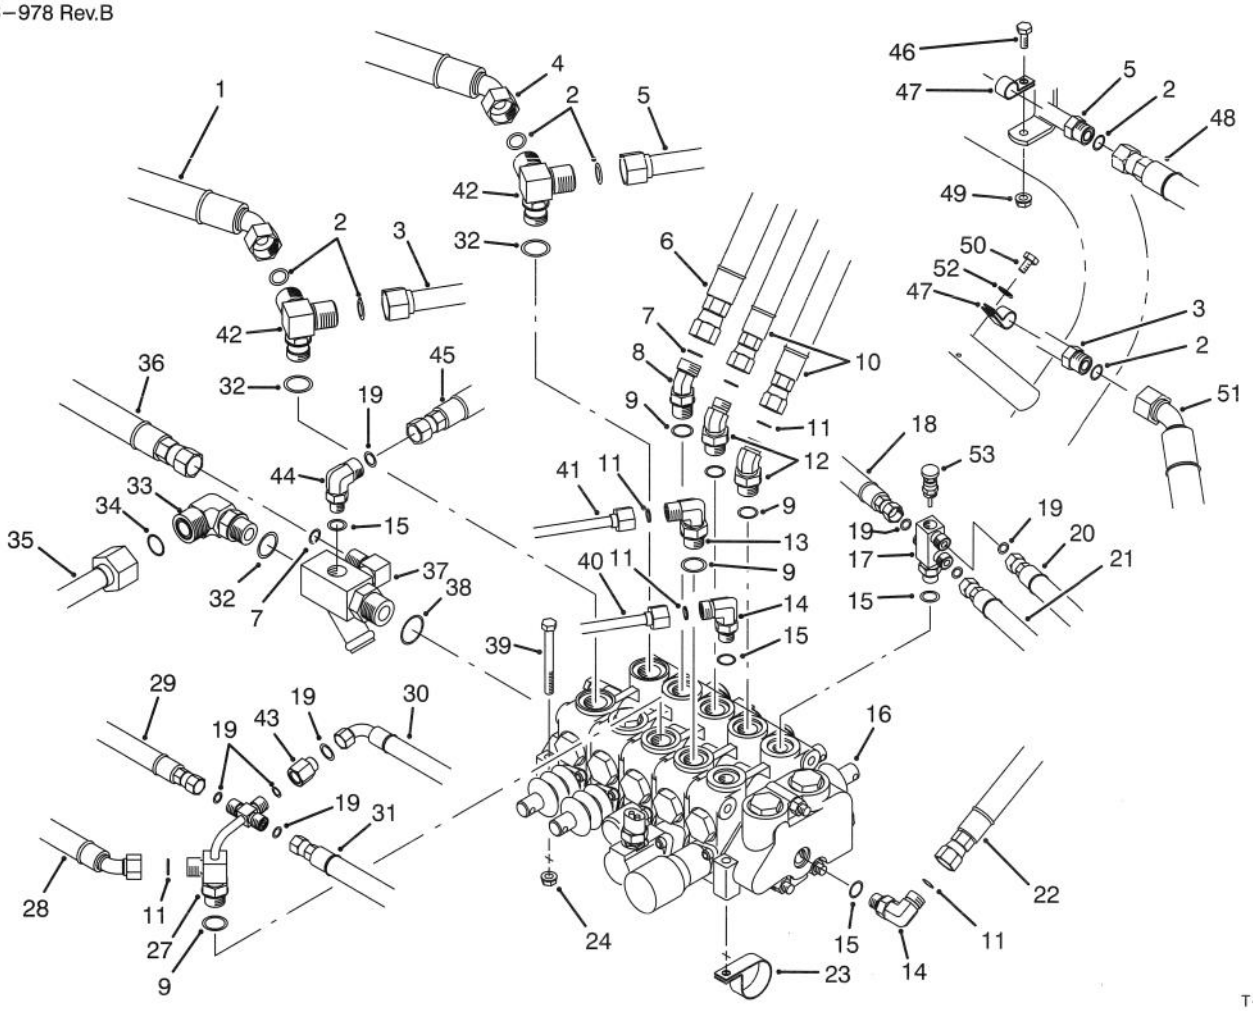

CONTROL VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83–2450	Hose – Hydraulic	1
2	237–65	Seal – O–Ring	6
3	70–7130	Tube Assy. (Incl. Ref. #2)	1
4	83–2460	Hose – Hydraulic	1
5	83–1200	Tube Assy. (Incl. Ref. #2)	1
6	83–1180	Hose – Hydraulic	1
7	237–30	Seal – O–Ring	2
8	340–101	Fitting – Hydraulic 45° (Incl. Ref. #7 & 9)	1
9	237–79	Seal – O–Ring	4
10	83–1190	Hose – Hydraulic	2
11	237–22	Seal – O–Ring	6
12	340–138	Fitting – Hydraulic 45° (Incl. Ref. #9 & 11)	2
13	340–18	Fitting – Hydraulic 90° (Incl. Ref. #9 & 11)	1
14	340–77	Fitting – Hydraulic 90° (Incl. Ref. #11 & 15)	2
15	237–42	Seal – O–Ring	4
16	84–2203	Control Valve Assembly	1
17	92–0587	Fitting – Valve Body (Incl. Ref. #15 & 19)	1
18	63–3880	Hose – Hydraulic	1
19	237–21	Seal – O–Ring	6
20	88–9700	Hose – Hydraulic	1
21	83–1690	Hose – Hydraulic	1

Ref. No.	Part No.	Description	No. Used
22	83–1170	Hose – Hydraulic	1
23	304–61	Clamp – R	1
24	32128–20	Nut – Flange Lock	3
27	83–1670	Fitting – Special (Incl. Ref. #9, 11 & 19)	1
28	74–3830	Hose – Hydraulic	1
29	63–3880	Hose – Hydraulic	1
30	83–1680	Hose – Hydraulic	1
31	63–3850	Hose – Hydraulic	1
32	237–80	Seal – O–Ring	3
33	340–16	Fitting – Hydraulic 90° (Incl. Ref. #32 & 34)	1
34	237–58	Seal – O–Ring	1
35	63–4040	Tube – Hydraulic	1
36	63–3840	Hose – Hydraulic	1
37	68–5260	Fitting – Manifold Tee (Incl. Ref. #7 & 38)	1
38	237–81	Seal – O–Ring	1
39	322–14	Screw – Cap Hex. Hd.	3
40	63–4020	Tube – Hydraulic	1
41	63–4030	Tube – Hydraulic	1
42	63–4050	Fitting – Tee (Incl. Ref. #2 & 32)	2
43	71–0990	Orifice (Incl. Ref. #19)	1
44	340–137	Fitting – Hydraulic 45° (Incl. Ref. #15 & 19)	1

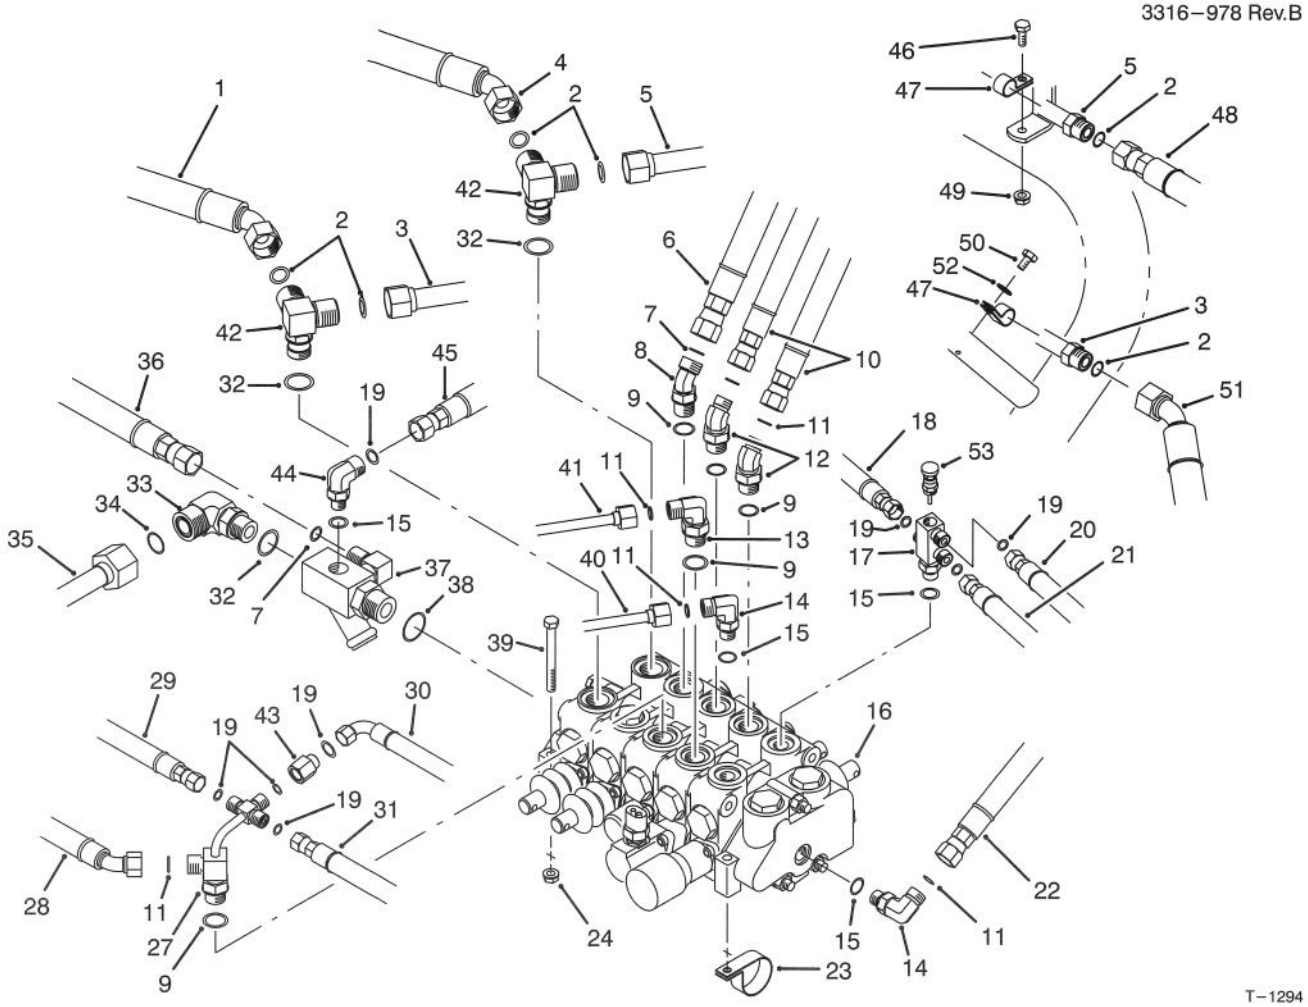


CONTROL VALVE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	83–1350	Hose – Hydraulic	1
46	3234–4	Screw – Cap Hex. Hd.	1
47	2412–41	Clamp–R	2
48	70–7150	Hose – Hydraulic	1
49	3296–16	Nut – Lock	1
50	12–3270	Screw – Thread Forming	1

Ref. No.	Part No.	Description	No. Used
51	70–8610	Hose – Hydraulic	1
52	3256–22	Washer – Flat	1
53	92–0588	Valve – Needle	1
*	88–9500	Needle Valve Assembly (Incl. Ref. #15, 17, 19 & 53)	1

*Not Illustrated

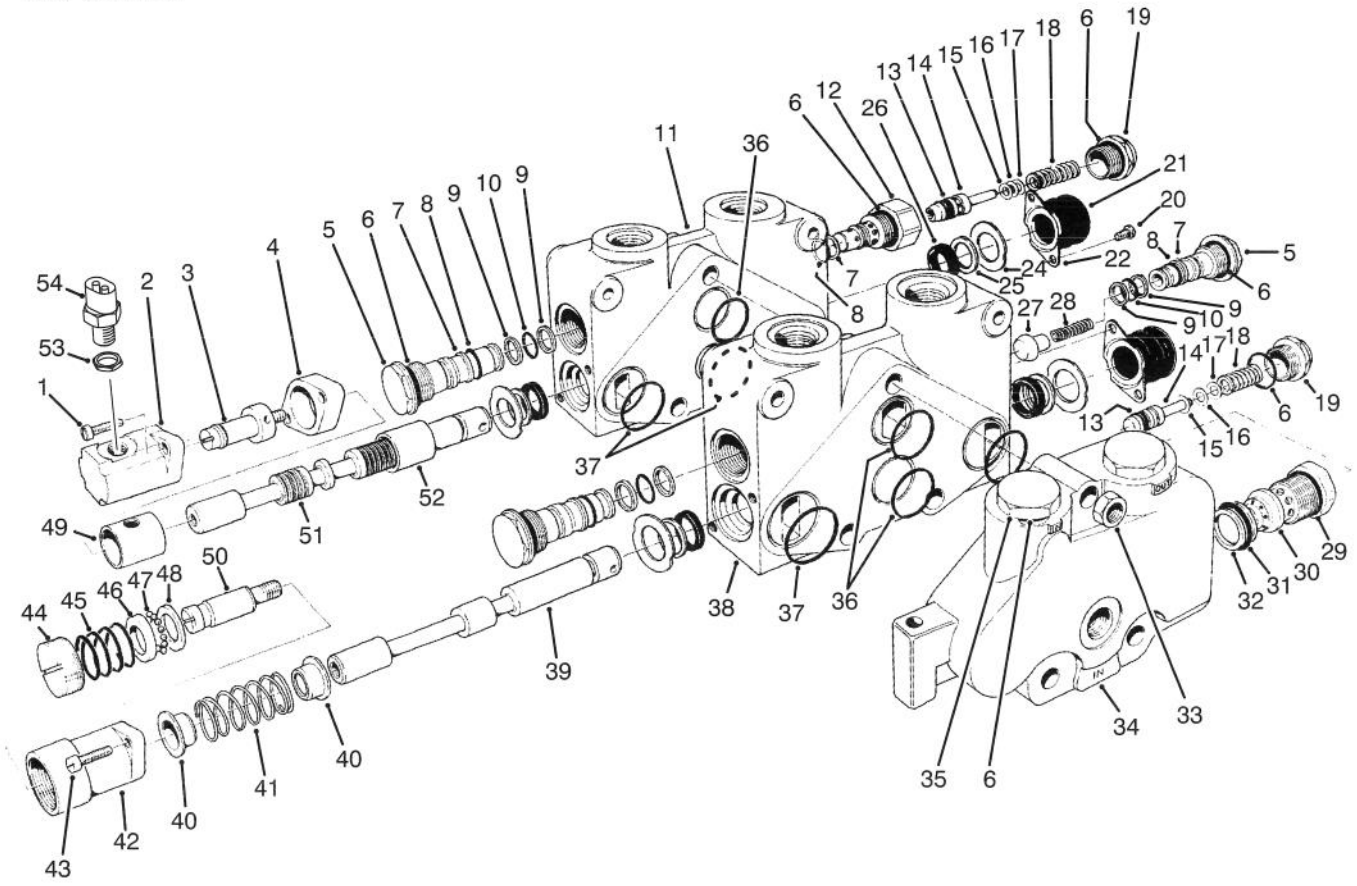


T–1318A

CONTROL VALVE ASSY. NO. 84–2203 (Sections 1& 2)

Ref. No.	Part No.	Description	No. Used
1	3274–70	Screw – Hex, Socket Hd.	2
2	353–727	Bonnet	1
3	353–729	Spud – Detent	1
4	353–733	Spacer – Bonnet	1
5	353–481	Plug – Load Check (Incl. Ref. #6–10)	3
6	237–54	O–Ring	8
7	353–306	Ring – Backup	4
8	353–305	O–Ring	4
9	353–303	Ring – Backup	6
10	353–302	O–Ring	3
11		Housing V20T	1
12	353–851	Body – Relief CP–RC Mod.	1
13	353–392	Seal – Relief Poppet PTFE	2
14	353–531	Poppet Assy. (Incl. Ref. #13)	2
15	353–328	Washer – Shim	A/R
16	353–329	Washer – Shim	A/R
17	353–330	Washer – Shim	A/R
18	353–855	Spring	2
19	353–334	Cap – Relief	2
20	3274–52	Screw – Hex, Socket Hd.	4
21	353–575	Boot – Dust Cap	2
22	93–3651	Retainer – Boot	2
24	92–2547	Plate – Seal Retainer	4

Ref. No.	Part No.	Description	No. Used
25	92–2546	Wiper – Seal	4
26	353–957	Seal – Lip	4
27	353–301	Poppet	1
28	353–304	Spring	1
29	353–331	O–Ring	1
30	353–760	Body Relief	1
31	353–758	Seal – O–Ring	1
32	353–952	Ring – Backup	1
33	3217–7	Nut – Hex	3
34	353–772	Left End Cover	1
35	353–721	Plug (Incl. Ref. #6)	2
†36		O–Ring	3
†37		O–Ring	4
†38		Housing Section #1	1
†39		Spool V20 SPL	1
40	353–417	Collar Spring	2
41	92–3058	Spring – Centering	1
42	353–754	Bonnet – R. Detent	1
43	3274–15	Screw – Fillister Hd.	2
44	353–763	Cap – Adjustment	1
45	353–579	Spring	1
46	42–2680	Race R. Detent	1
47	52–5880	Ball – Steel	12
48	354–29	Plate – Thrust	1

†Parts Available as Assemblies Listed as (*Not Illustrated) on Following Page

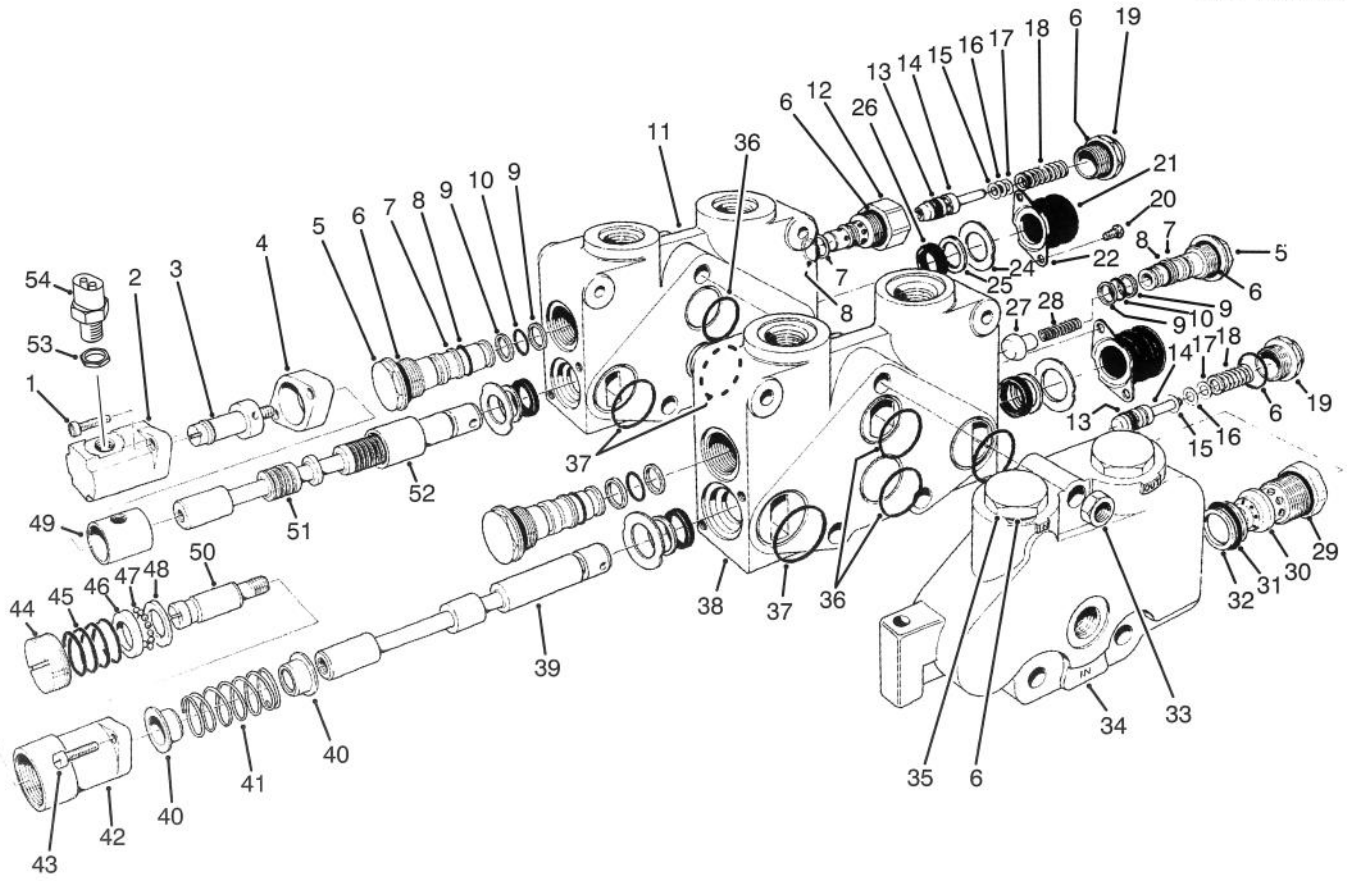


T–1318A

CONTROL VALVE ASSEMBLY NO. 84–2203 (Sections 1 And 2) (Continued)

Ref. No.	Part No.	Description	No. Used
49	353–728	Sleeve	1
50	353–762	Spud – Detent Out (Incl. Ref. #44)	1
†51		Spool V20 3 Way F.F.	1
52	353–732	Sleeve – Detent	1
53	38–0410	Nut – Hex.	1
54	83–1890	Switch – Ball	1
*	353–766	Relief WH (2000) PSI Assy. (Incl. Ref. #6,13–19 & 29–32)	1
*	353–768	Section #1 Complete	1
*	353–837	Section #2 Complete	1
*	353–780	Positioner – R. Detent (Out) (Incl. Ref. #3 & 40–49)	1

Ref. No.	Part No.	Description	No. Used
*	353–839	Positioner – DI (SPL) Assy. (Incl. Ref. #1, 3–5, 50 & 52)	1
*	353–642	Relief – RC Mod. (Incl. Ref. #6–8 & 12–19)	2
*	93–3652	Boot – Spool Assembly (Incl. Ref. #20–22)	2
*	353–835	Seals – Section Set (Incl. Ref. #36 & 37)	1
*	92–2548	Seals – Spool (Single End Set) (Incl. Ref. #24–26)	1
*	92–2545	Seals – Spool (Entire Valve Set)	1

*Not Illustrated
†Parts Available as Assemblies Listed as (*Not Illustrated) on This Page

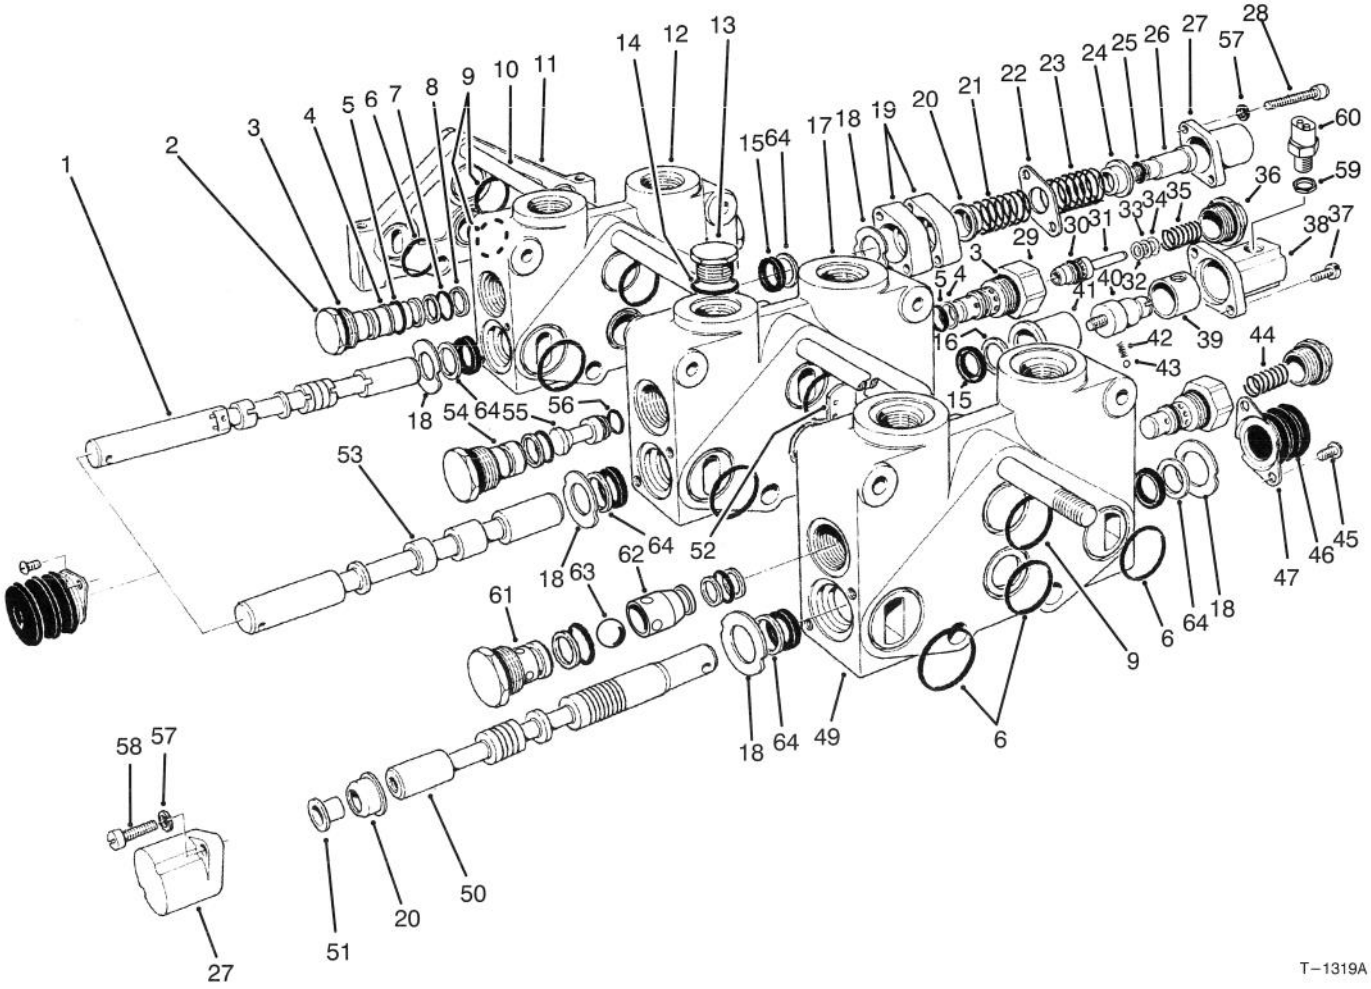


CONTROL VALVE ASSY. NO. 84–2203 (Sections 3 Thru 5)

Ref. No.	Part No.	Description	No. Used
†1		Spool #5	1
2	353–481	Plug – Load Check (Incl. Ref. #3–5 & 7–8)	3
3	237–54	O–Ring	6
4	353–306	Ring – Backup	5
5	353–305	O–Ring	5
†6		O–Ring	11
7	353–302	O–Ring	3
8	353–303	Ring – Backup	6
†9		O–Ring	5
10	353–853	Bolt – Hex Hd.	3
11	353–668	Plate – Cap, Cover RH	1
12		Housing V20 #5	1
13	353–550	Plug Assembly (Incl. Ref. #14)	1
14	353–848	O–Ring	1
15	353–957	Seal – Lip	6
16	353–958	Ring – Backup	1
†17		Housing V20 #4	1
18	92–2547	Plate – Seal Retainer	5
19	353–733	Spacer – Bonnet	2
20	353–417	Collar Spring	2
21	353–831	Spring	1
22	353–529	Plate Seal	1
23	92–3148	Spring	1

Ref. No.	Part No.	Description	No. Used
24	353–808	Collar – Spring	1
25	353–830	O–Ring	1
26	353–829	Collar Spool	1
27	354–26	Bonnet	2
28	354–28	Screw – Hex, Socket Hd.	2
29	353–851	Body – Relief CP–RC Mod.	2
30	353–392	Seal – Relief Poppet PTFE	2
31	353–531	Poppet Assembly (Incl. Ref. #30)	2
32	353–328	Washer – Shim	A/R
33	353–329	Washer – Shim	A/R
34	353–330	Washer – Shim	A/R
35	353–398	Spring	1
36	353–334	Cap – Relief	2
37	52–5900	Screw – Fillister Hd.	4
38	353–847	Bonnet (SPL)	1
39	353–849	Sleeve	1
40	353–846	Spud – DI (SPL)	1
41	353–845	Sleeve – Detent	1
42	353–730	Spring	1
43	353–731	Ball	1
44	353–855	Spring	1
45	3274–52	Screw – Hex. Socket Hd.	6
46	353–575	Boot – Dust Cap	3
47	93–3651	Retainer – Boot	3

†Parts Available as Assemblies Listed as (*Not Illustrated) on Following Page

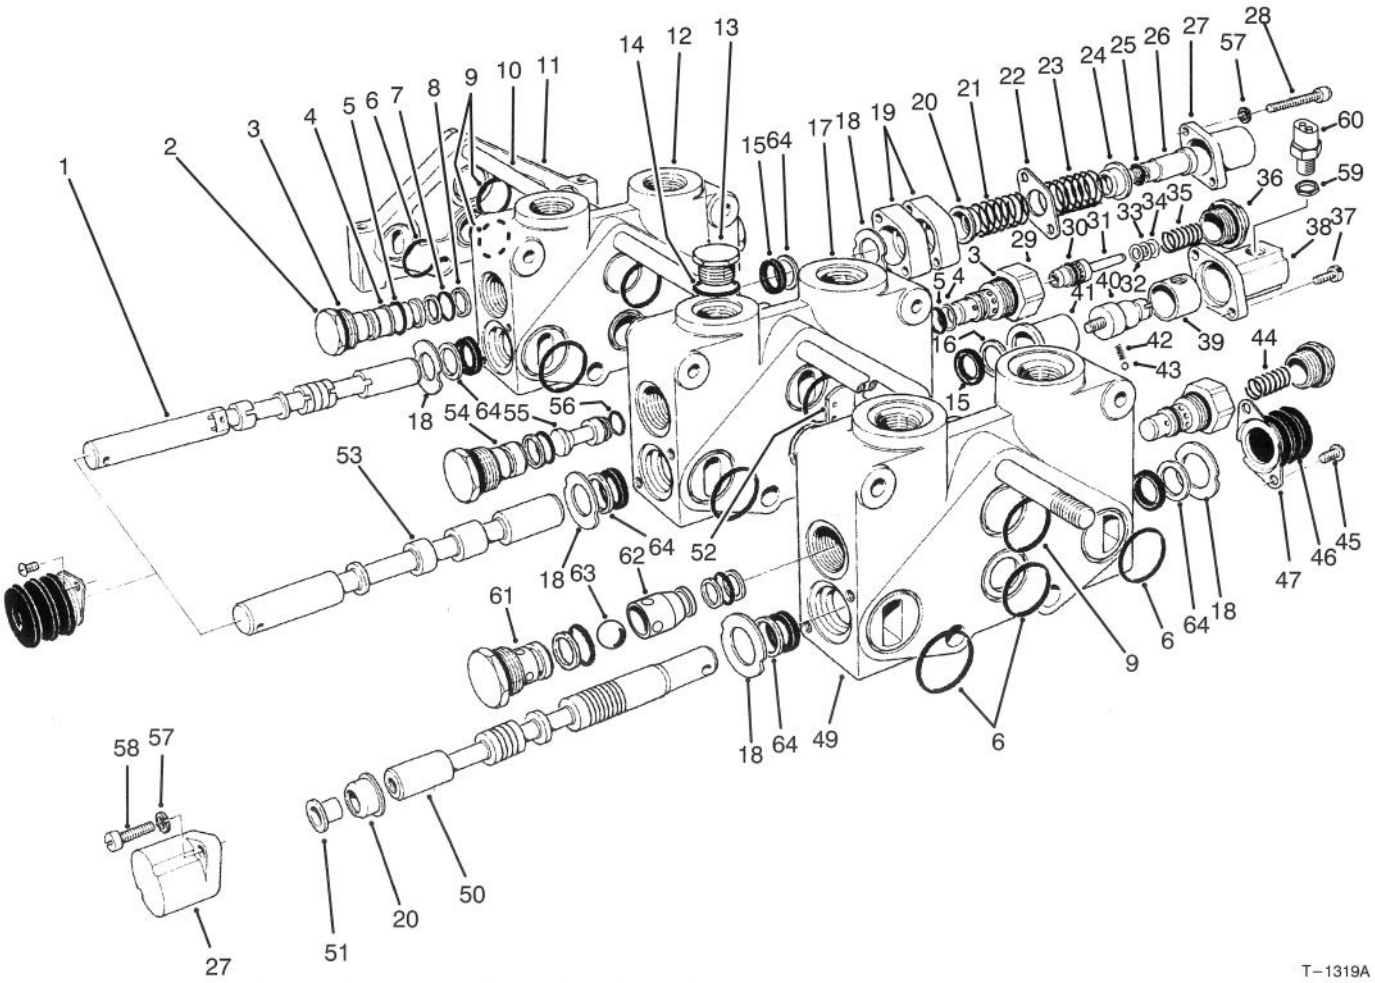


T–1319A

CONTROL VALVE ASSEMBLY NO. 84–2203 (Sections 3 Thru 5) (Continued)

Ref. No.	Part No.	Description	No. Used
49		Housing V20 #2	1
†50		Spool V20 3 Way F.F.	1
51	52–5860	Collar – Spool	1
52	354–122	Disc – Seal	1
†53		Spool #4	1
54	353–953	Plug Assembly	1
55	353–844	Plus Series (Incl. Ref. #56)	1
56	353–850	O–Ring	1
57	3253–3	Washer – Lock	4
58	3274–84	Screw – Cap, Hex. Hd.	4
59	38–0410	Nut – Hex.	1
60	83–1890	Switch – Ball	1
61	353–483	Body – Anticavitation	1
62	353–484	Retainer – Ball	1
63	353–737	Ball	1
64	92–2546	Wiper – Seal	5
*	354–129	Anticavitation Check Assy. (Incl. Ref. #3, 4, 5, 7, 8 & 61–63)	1
*	353–835	Seals – Section Set (Incl. Ref. #6 & 9)	1
*	93–3652	Boot – Spool Assembly (Incl. Ref. #45–47)	3
*	354–131	Section #3 Assembly (Complete)	1
*	354–25	Section #4 Assembly (Complete)	1
*	93–1386	Section #5 Assembly (Complete)	1
*	353–841	Position – Spool Assembly (Incl. Ref. #20 27 37 & 51)	1
*	353–840	Position – DI (SP) Assy. (Incl. Ref. #37–43)	1
*	353–642	Relief – RC Mod. Assembly (Incl. Ref. #3–5 & 29–36)	1
*	353–833	Positioner Assembly (Incl. Ref. #19–28)	1
*	84–2203	Control Valve Assembly Complete	1
*	92–2548	Seals – Spool (End Set) (Incl. Ref. #15, 18 & 64)	1
*	92–2549	Seals – Spool (End Set #4 Rear Only) (Incl. Ref. #15, 16 & 18)	1
*	92–2545	Seals – Spool (Entire Valve Set)	1

*Not Illustrated

†Parts Available as Assemblies Listed as (*Not Illustrated) on This Page

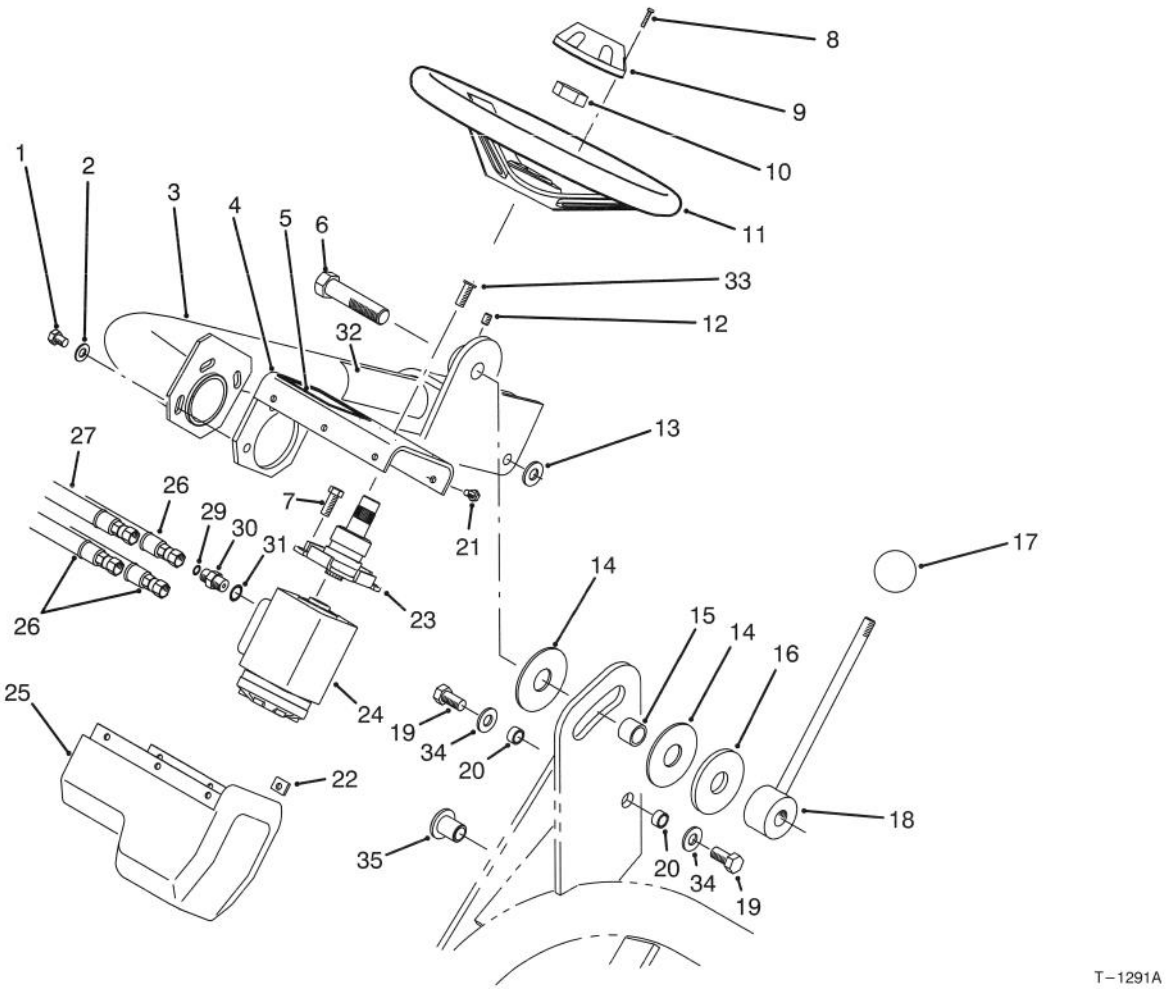


STEERING ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3274–80	Screw – Cap Hex. Hd.	3
2	3256–80	Washer – Flat	3
3	83–0650	Arm – Steering	1
4	83–0780	Support – Steering Valve	1
‡5	83–1790	Decal – Warning	1
6	83–0750	Screw – Cap Hex. Hd. L.H.	1
7	323–4	Screw – Cap Hex. Hd.	2
8	32144–21	Screw – Round Hd.	2
9	68–5140	Cap – Steering Wheel	1
10	47–6990	Nut – Steering Wheel	1
11	68–5130	Steering Wheel Assembly (Incl. Ref. #8 & 9)	1
12	3246–3	Screw – Set	1
13	65–6390	Washer – Thrust	1
14	83–0740	Disc – Friction	2
15	83–0730	Spacer – Lockup	1
16	83–0760	Plate – Lockup	1
17	233–48	Knob	1
18	83–0700	Handle – Lockup	1

Ref. No.	Part No.	Description	No. Used
19	325–4	Screw – Cap Hex. Hd.	2
20	47–2890	Bushing – Sleeve	2
21	3274–39	Screw – Cap Hex. Hd.	6
22	3290–277	Nut – Speed	6
23	83–1420	Column – Steering	1
24	92–8690	Steering – Valve Assembly	1
25	83–0810	Cover – Steering Valve	1
26	83–1350	Hose – Hydraulic	2
27	83–1360	Hose – Hydraulic	1
28	83–1370	Hose – Hydraulic	1
29	237–21	Seal – O–Ring	4
30	340–1	Fitting – Hydraulic Straight (Incl. Ref. #29 & 31)	4
31	237–42	Seal – O–Ring	4
‡32	83–2050	Decal – Steering Arm	1
33	3274–63	Screw – Hex. Socket Hd.	2
34	3256–26	Washer – Flat	2
35	83–1700	Bushing – Flange	1

‡For different language versions of this part, see International Parts Page.

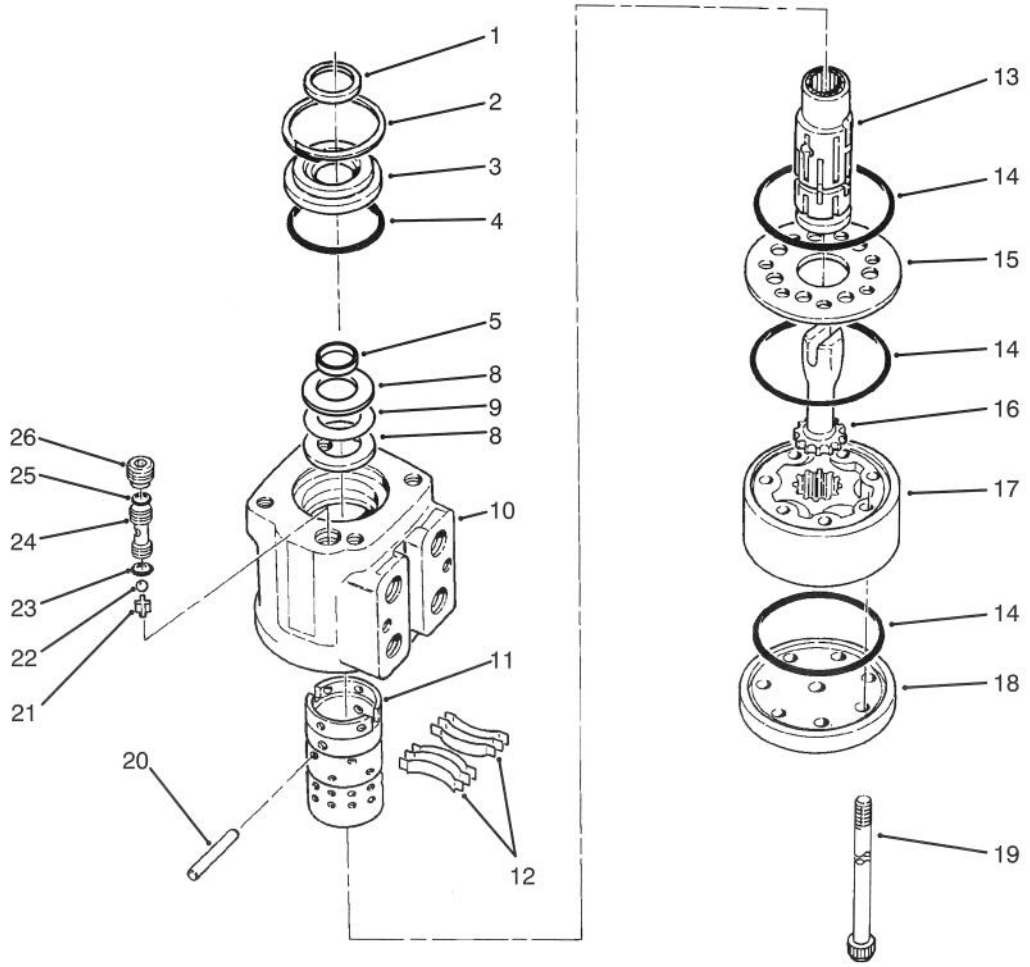


T–1442

POWER STEERING VALVE NO. 92–8690

Ref. No.	Part No.	Description	No. Used
†1		Seal – Dust	1
2	52–9230	Ring – Retaining	1
3	92–8691	Bushing – Seal Gland	1
†4		O–Ring	1
†5		Seal – One Piece	1
8	59–6730	Race – Bearing	2
9	59–6740	Bearing – Needle Thrust	1
†10		Housing	1
†11		Sleeve – Control	1
12	83–1860	Centering Spring Kit	1
†13		Spool – Control	1
†14		O–Ring	3
15	92–8697	Plate – Wear	1
16	70–8250	Drive	1
17	83–1870	Gerotor	1

Ref. No.	Part No.	Description	No. Used
18	67–8113	Cap – End	1
19	92–8696	Screw – Torx Hd.	7
20	59–6830	Centering Pin Kit	1
21	52–9290	Retainer – Ball Check	1
22	52–9280	Ball – Check	1
†23		O–Ring	1
24	52–9270	Seat – Ball Check	1
†25		O–Ring	1
26	52–9260	Screw – Set	1
*	83–1880	Control Parts Assembly (Incl. Ref. #10–13 & 20)	1
*	92–8695	Seal Kit (Incl. Ref. #1, 4, 5, 14, 23 & 25)	1

*Not Illustrated
†Not Serviced Separately

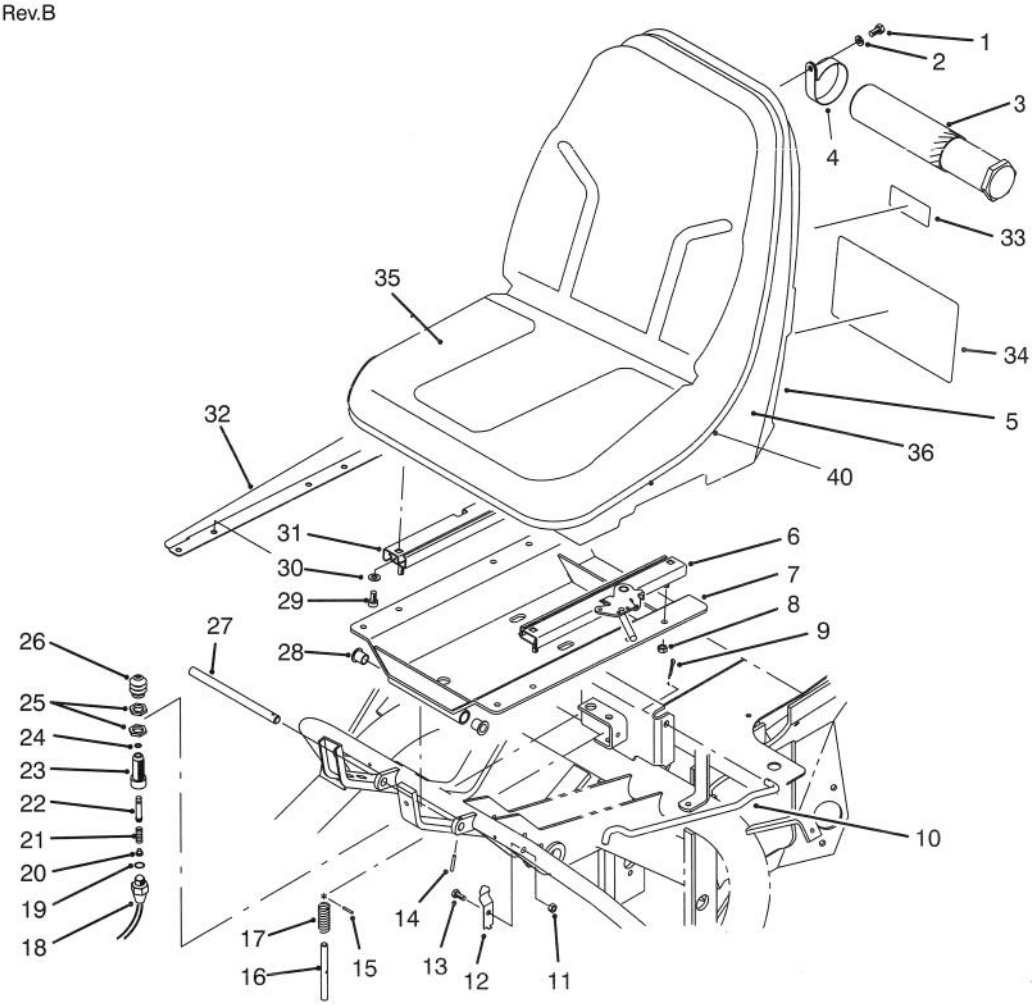

T–1290A


SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–2	Screw – Cap Hex. Hd.	2
2	3253–4	Washer – Lock	2
3	74–0720	Tube – Manual	1
4	2412–133	Clamp – R	2
5	92–1180	Seat Assembly (Incl. Ref. #35, 36 & 40)	1
6	51–0790	Adjuster – Seat	1
7	83–1270	Seat Support Assembly (Incl. Ref. #28)	1
8	3296–29	Nut – Lock	4
9	3272–11	Pin – Cotter	1
10	68–5100	Rod – Seat Prop	1
11	3296–16	Nut – Lock	1
12	68–5310	Clip – Seat Rod	1
13	321–3	Screw – Cap Hex. Hd.	1
14	32121–45	Pin – Roll	1
15	3284–3	Pin – Groove	1
16	51–0350	Pin – Seat Spring	1
17	3–6685	Spring – Compression	1
18	72–4320	Switch – Ball	1
19	237–30	Seal – O–Ring	1

Ref. No.	Part No.	Description	No. Used
20	43–8610	Seat – Ball	1
21	43–8600	Spring – Compression	1
22	43–8860	Plunger – Switch	1
23	43–8620	Guide – Switch	1
24	237–7	Seal – O–Ring	1
25	218–461	Nut – Hex.	2
26	43–8870	Boot – Switch	1
27	49–5880	Shaft – Seat Support	1
28	256–155	Bushing –Flange	2
29	3274–12	Screw – Hex. Socket Hd.	4
30	3256–23	Washer – Flat	4
31	51–0780	Slider – Seat	1
32	83–1840	Cover – R.H.	1
‡33	58–6530	Decal – Hydraulic Oil	1
‡34	83–1780	Decal – Service	1
35	92–6533	Kit – Cushion	1
36	92–6534	Shell	1
40	351–78	Edging	1
*	43–9071	Seat Switch Assembly (Incl. Ref. #18–26)	1

*Not Illustrated

‡For different language versions of this part, see International Parts Page.

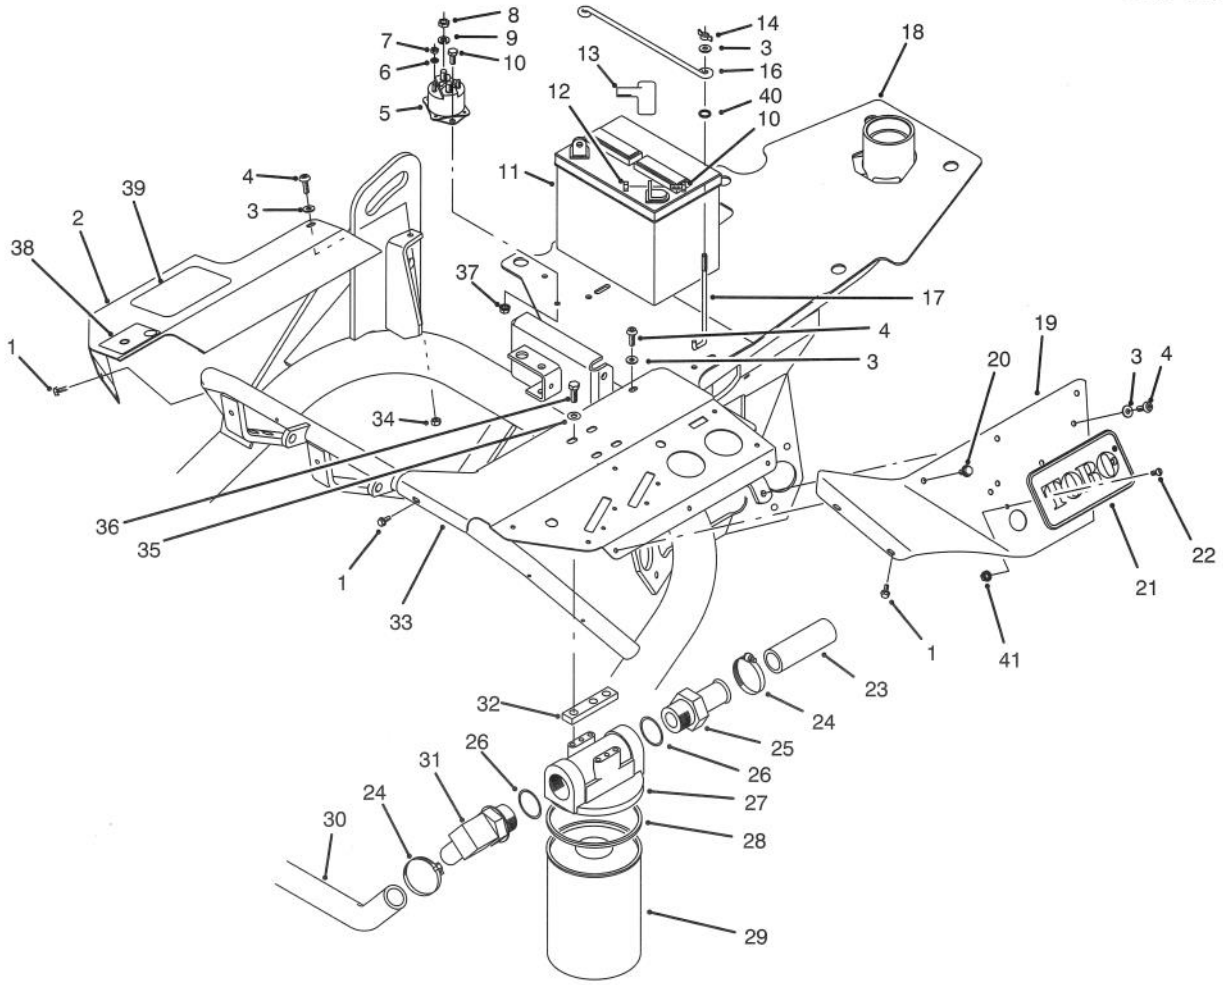


T–1295

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32104–76	Screw – Self Tapping	5
2	83–1830	Cover – R.H.	1
3	3256–22	Washer – Flat	5
4	3274–64	Screw – Hex. Socket Hd.	3
5	28–4210	Solenoid – Starter	1
6	3254–1	Washer – Lock	2
7	3219–14	Nut – Hex.	2
8	3218–13	Nut – Jam	2
9	3253–4	Washer – Lock	2
10	321–3	Screw – Cap Hex. Hd.	4
11	28–1400	Battery	1
12	3217–5	Nut – Hex.	2
13	28–8080	Boot Terminal	1
14	32103–12	Nut – Wing	2
16	72–4790	Hold–Down – Battery	1
17	56–7720	Bolt – Battery	2
18	92–9164	Frame Assembly	1
19	83–0840	Fender – L.H.	1
20	46–8560	Screw – Self Taping	3
21	61–3310	Plate – Logo	1
22	3290–470	Screw – Flat Hd.	2
23	83–1430	Hose – Hydraulic	1

Ref. No.	Part No.	Description	No. Used
24	2412–34	Clamp – Hose	2
25	353–563	Fitting – Hydraulic Straight (Incl. Ref. #26)	1
26	237–101	Seal – O–Ring	2
27	44–5560	Head – Oil Filter	1
28	72–3850	Seal – Filter	1
29	74–3570	Filter – Hydraulic Oil (Incl. Ref. #28)	1
30	68–5880	Hose – Hydraulic	1
31	353–564	Fitting – Hydraulic 90° (Incl. Ref. #26)	1
32	27–2380	Spacer	2
33	83–0830	Panel – Control Upper	1
34	3296–16	Nut – Lock	3
35	3256–23	Washer – Flat	4
36	322–4	Screw – Cap Hex. Hd.	4
37	32149–2	Nut – Keps	2
‡38	83–1850	Decal – Traction	1
39	67–1300	Decal – TORO	1
40	237–143	Grommet	2
41	32149–7	Nut – Keps	2

‡For different language versions of this part, see International Parts Page.

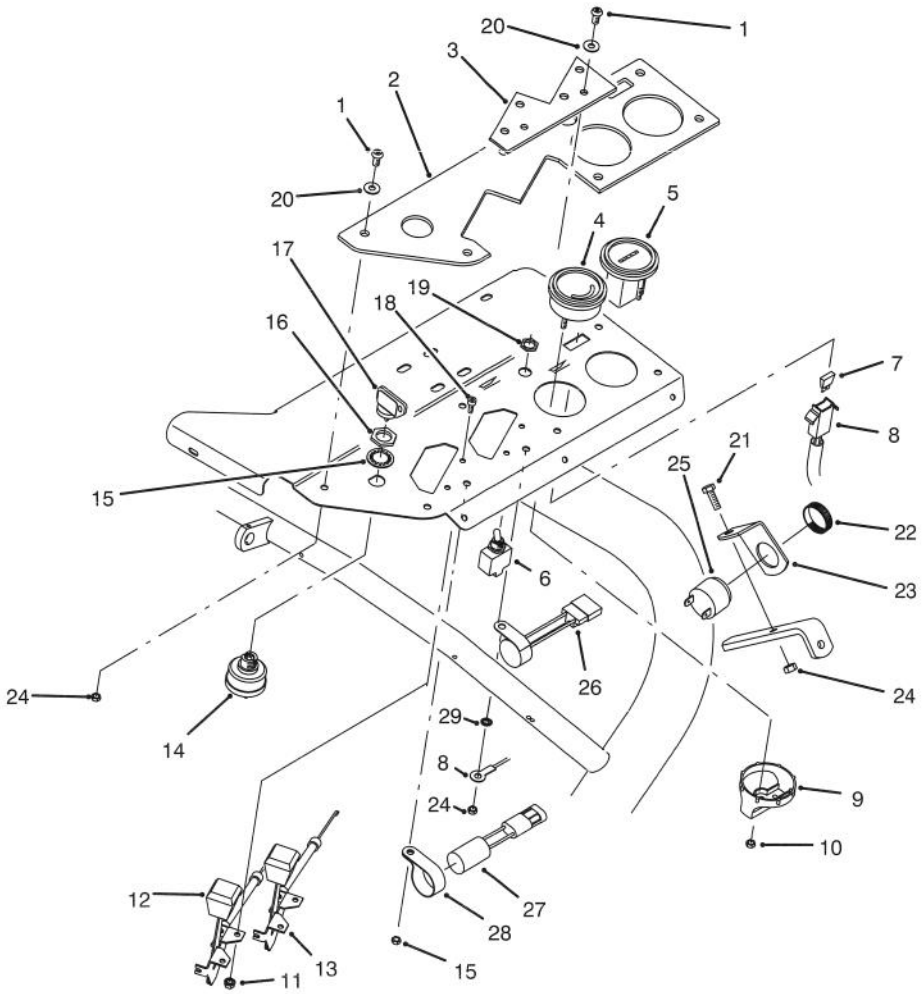


T–1296

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3274–69	Screw – Hex. Socket Hd.	8
2	83–0850	Plate – Control Panel	1
3	83–2030	Plate – Filler	1
4	83–0820	Gauge – Ammeter	1
5	66–2950	Gauge – Hourmeter	1
6	83–1660	Switch Assembly (Incl. Ref. #19)	1
7	218–594	Fuse – 20 Amp	1
8	83–1100	Harness – Wire (Main)	1
9	39–9600	Clamp – Mounting	1
10	3219–14	Nut – Hex.	6
11	3296–27	Nut – Lock	4
12	83–0030	Control – Throttle	1
13	83–0040	Control – Choke	1
14	83–0020	Ignition Switch Assembly (Incl. Ref. #15–16)	1

Ref. No.	Part No.	Description	No. Used
15	3254–5	Washer – Lock	1
16	218–461	Nut – Hex.	1
17	63–8360	Key – Ignition	1
18	3273–26	Screw – Hex. Socket Hd.	4
19		Nut – Hex.	2
20	3256–1	Washer – Flat	8
21	321–4	Screw – Cap Hex. Hd.	1
22		Retainer – Alarm	1
23	83–1530	Bracket – Alarm	1
24	3296–16	Nut – Lock	9
25	80–9330	Audio Alarm Assembly (Incl. Ref. #22)	1
26	28–7890	Module – Interlock	1
27	83–2280	Timer – Relay	1
28	2412–39	Clamp – R	1
29	3255–7	Washer – Lock	1

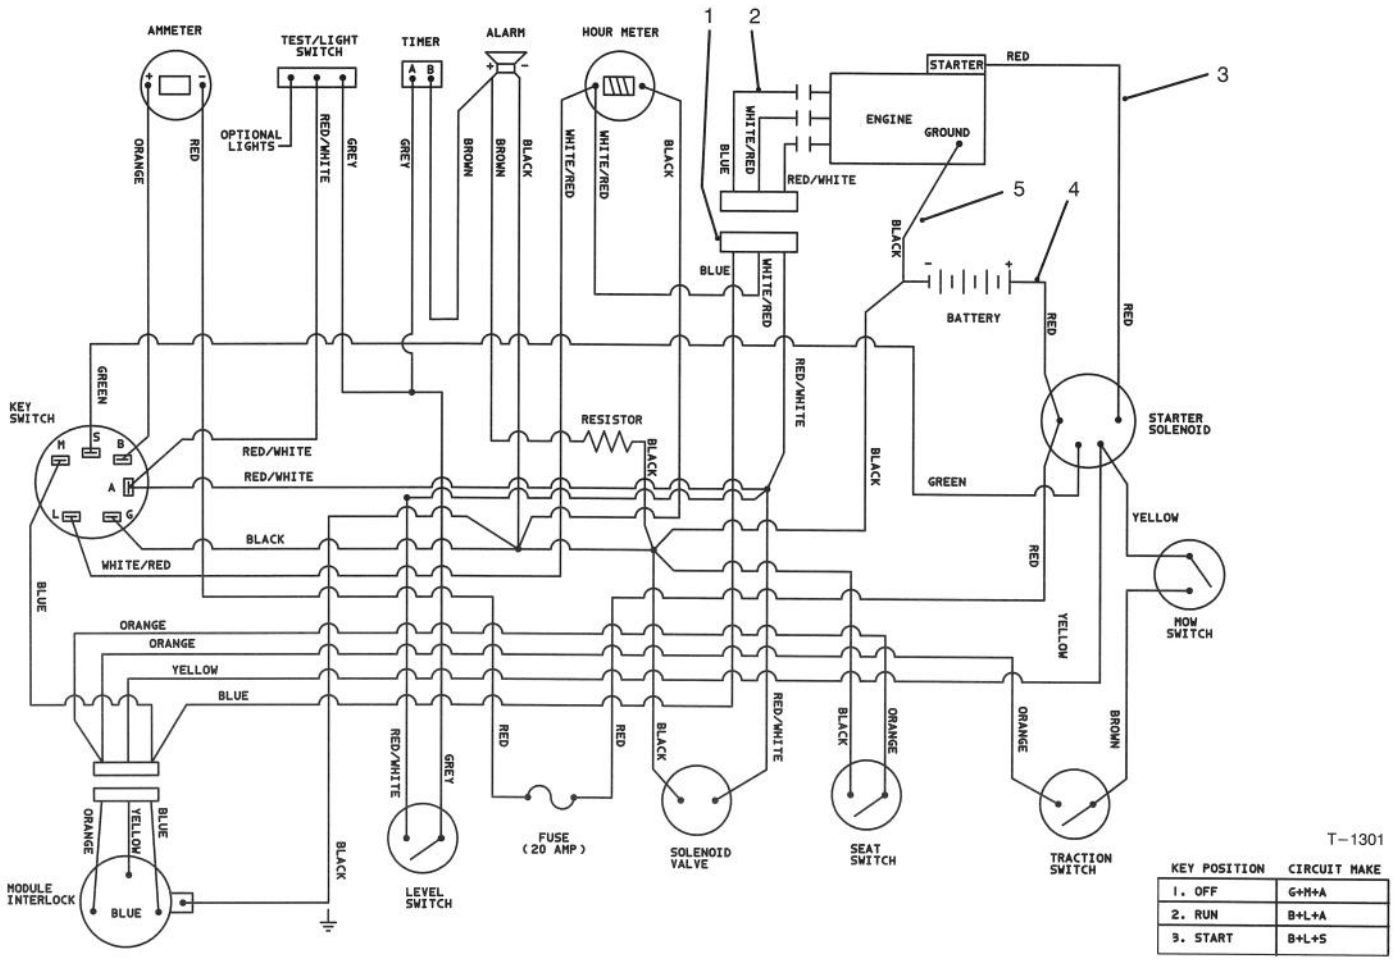


KEY POSITION	CIRCUIT MAKE
1. OFF	G+M+A
2. RUN	B+L+A
3. START	B+L+S

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	83–1100	Harness – Wire (Main)	1
2	83–1110	Harness – Wire (Engine)	1
3	83–1160	Wire – Solenoid–Starter	1

Ref. No.	Part No.	Description	No. Used
4	83–2420	Wire – Solenoid–Battery	1
5	83–1150	Wire – Engine Ground	1

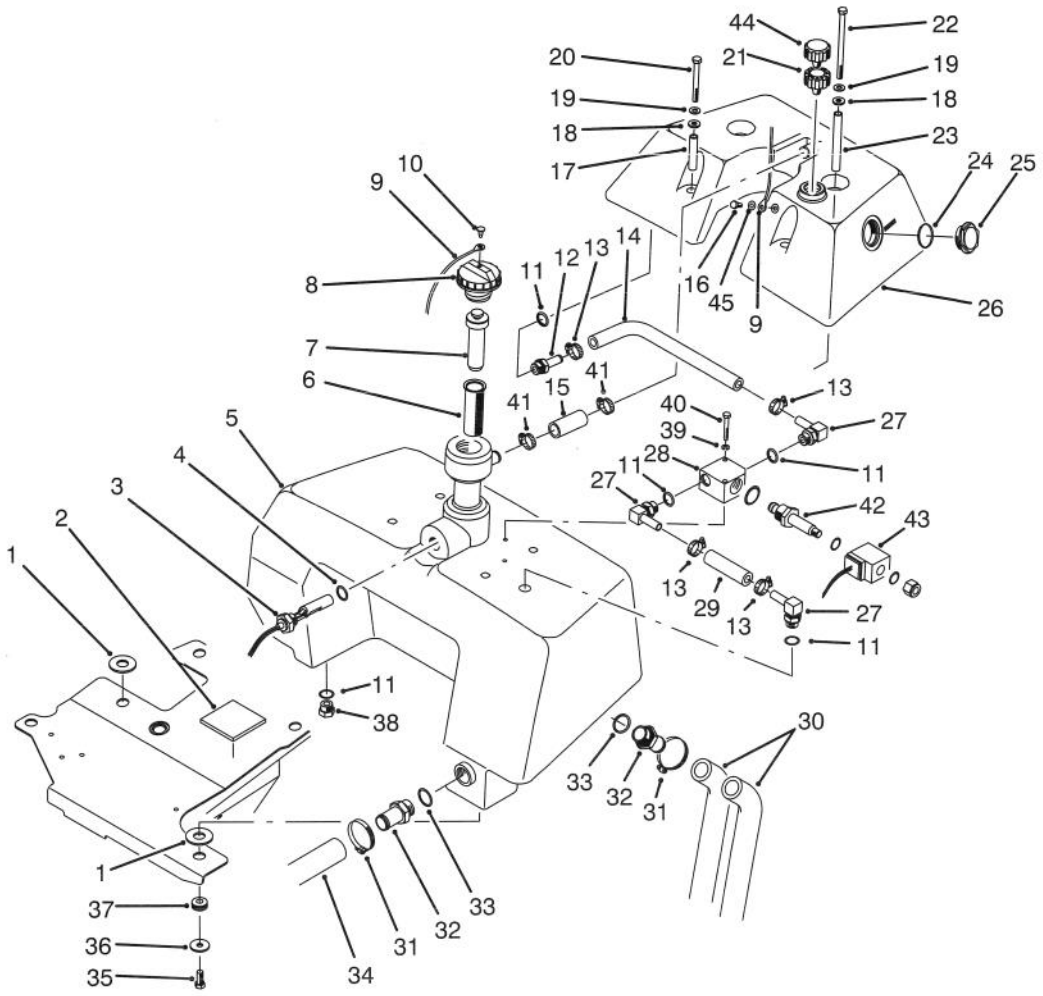


T–1289A

HYDRAULIC RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83–2400	Spacer – Tank	2
2	83–2390	Pad – Tank	1
3	83–1450	Sensor – Oil Level	1
4	237–80	Seal – O–Ring	1
5	92–8966	Reservoir – Hydraulic	1
6	83–1520	Screen – Filler	1
7	92–4063	Plug – Filler Cap	1
8	93–7160	Cap – Hydraulic Reservoir (Incl. Ref. #9 & 10)	1
9	75–0540	Tether – Cap	1
10	2410–73	Retainer – Tether	1
11	237–79	Seal – O–Ring	5
12	354–121	Fitting – Hydraulic Straight (Incl. Ref. #11)	1
13	2412–36	Clamp – Hose	4
14	83–2070	Hose – Valve	1
15	83–2090	Hose – Overflow	1
16	321–2	Screw – Cap Hex. Hd.	1
17	83–1550	Spacer – Tank (Short)	2
18	83–1470	Washer – Neoprene	4
19	3256–23	Washer – Flat	4
20	322–14	Screw – Cap Hex. Hd.	2
21	92–8020	Adapter – Breather	1
22	322–29	Screw – Cap Hex. Hd.	2
23	83–1560	Spacer – Tank (Long)	2
24	237–123	Seal – O–Ring	1

Ref. No.	Part No.	Description	No. Used
25	83–2250	Guage – Sight (Incl. Ref. #24)	1
26	83–2100	Tank – Auxiliary Hydraulic	1
27	354–120	Fitting – Hydraulic 90° (Incl. Ref. #11)	3
28	83–1460	Solenoid Valve Assembly (Incl. Ref. #42 & 43)	1
29	83–2080	Hose – Valve–Tank	1
30	83–0910	Hose – Hydraulic	2
31	2412–34	Clamp – Hose	3
32	83–0870	Fitting – Hydraulic Straight (Incl. Ref. #33)	3
33	237–177	Seal – O–Ring	3
34	83–1430	Hose – Hydraulic	1
35	323–6	Screw – Cap Hex. Hd.	3
36	63–8410	Washer – Flat	3
37	240–11	Grommet	3
38	353–550	Plug – Hydraulic (Incl. Ref. #11)	1
39	3253–3	Washer – Lock	2
40	321–11	Screw – Cap Hex. Hd.	2
41	2412–141	Clamp – Hose	2
42	83–2000	Spool – Valve	1
43	83–2010	Coil – Valve	1
44	68–6150	Breather	1
45	3256–22	Washer – Flat	1

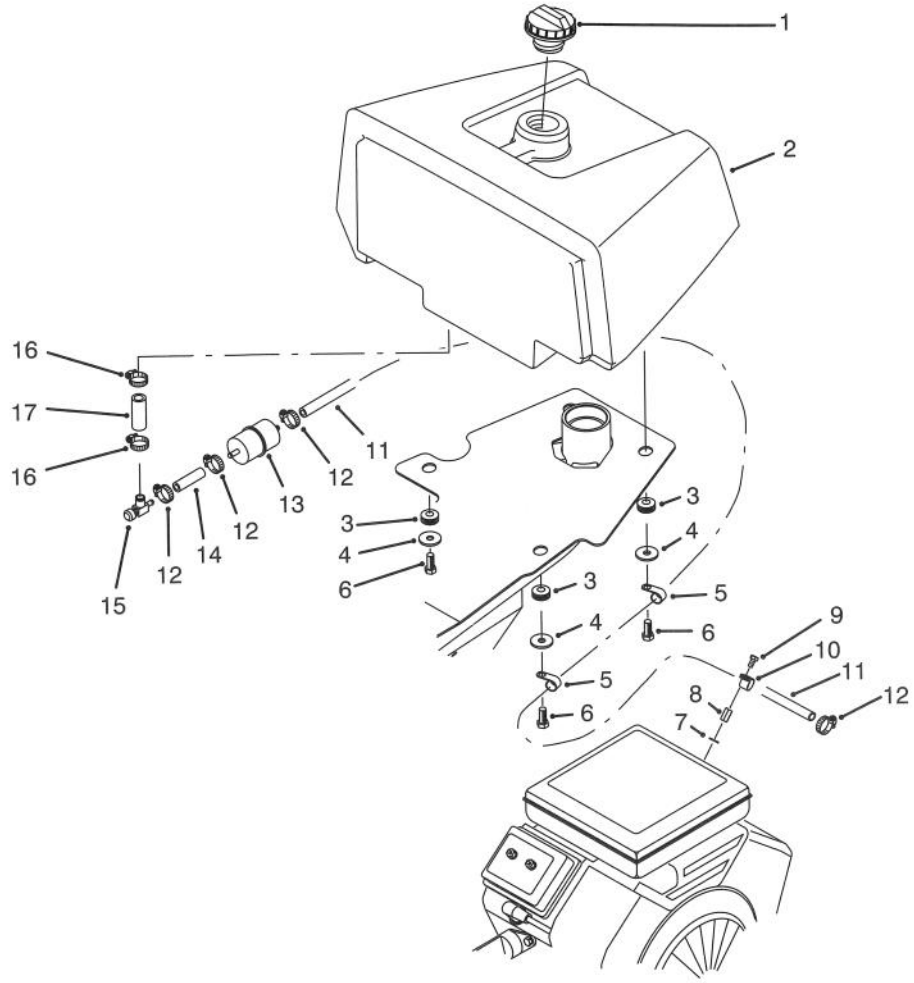


T–1317A

FUEL TANK ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	93–3101	Cap – Fuel	1
2	92–7189	Tank – Fuel	1
3	240–11	Grommet	4
4	63–8410	Washer – Flat	4
5	2412–41	Clamp – R	3
6	323–6	Screw – Cap Hex. Hd.	3
7	3256–63	Washer – Flat	1
8	83–2200	Nut – Special	1
9	48–7610	Screw – Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
10	2412–94	Clamp – R	1
11	83–2041	Hose – Fuel	1
12	2412–108	Clamp – Hose	4
13	83–1320	Filter – Fuel	1
14	83–2040	Hose – Fuel	1
15	83–1390	Fitting – Fuel Shut–Off	1
16	2412–36	Clamp – Hose	2
17	56–2230	Hose – Fuel	1

HYDRAULIC SCHEMATIC

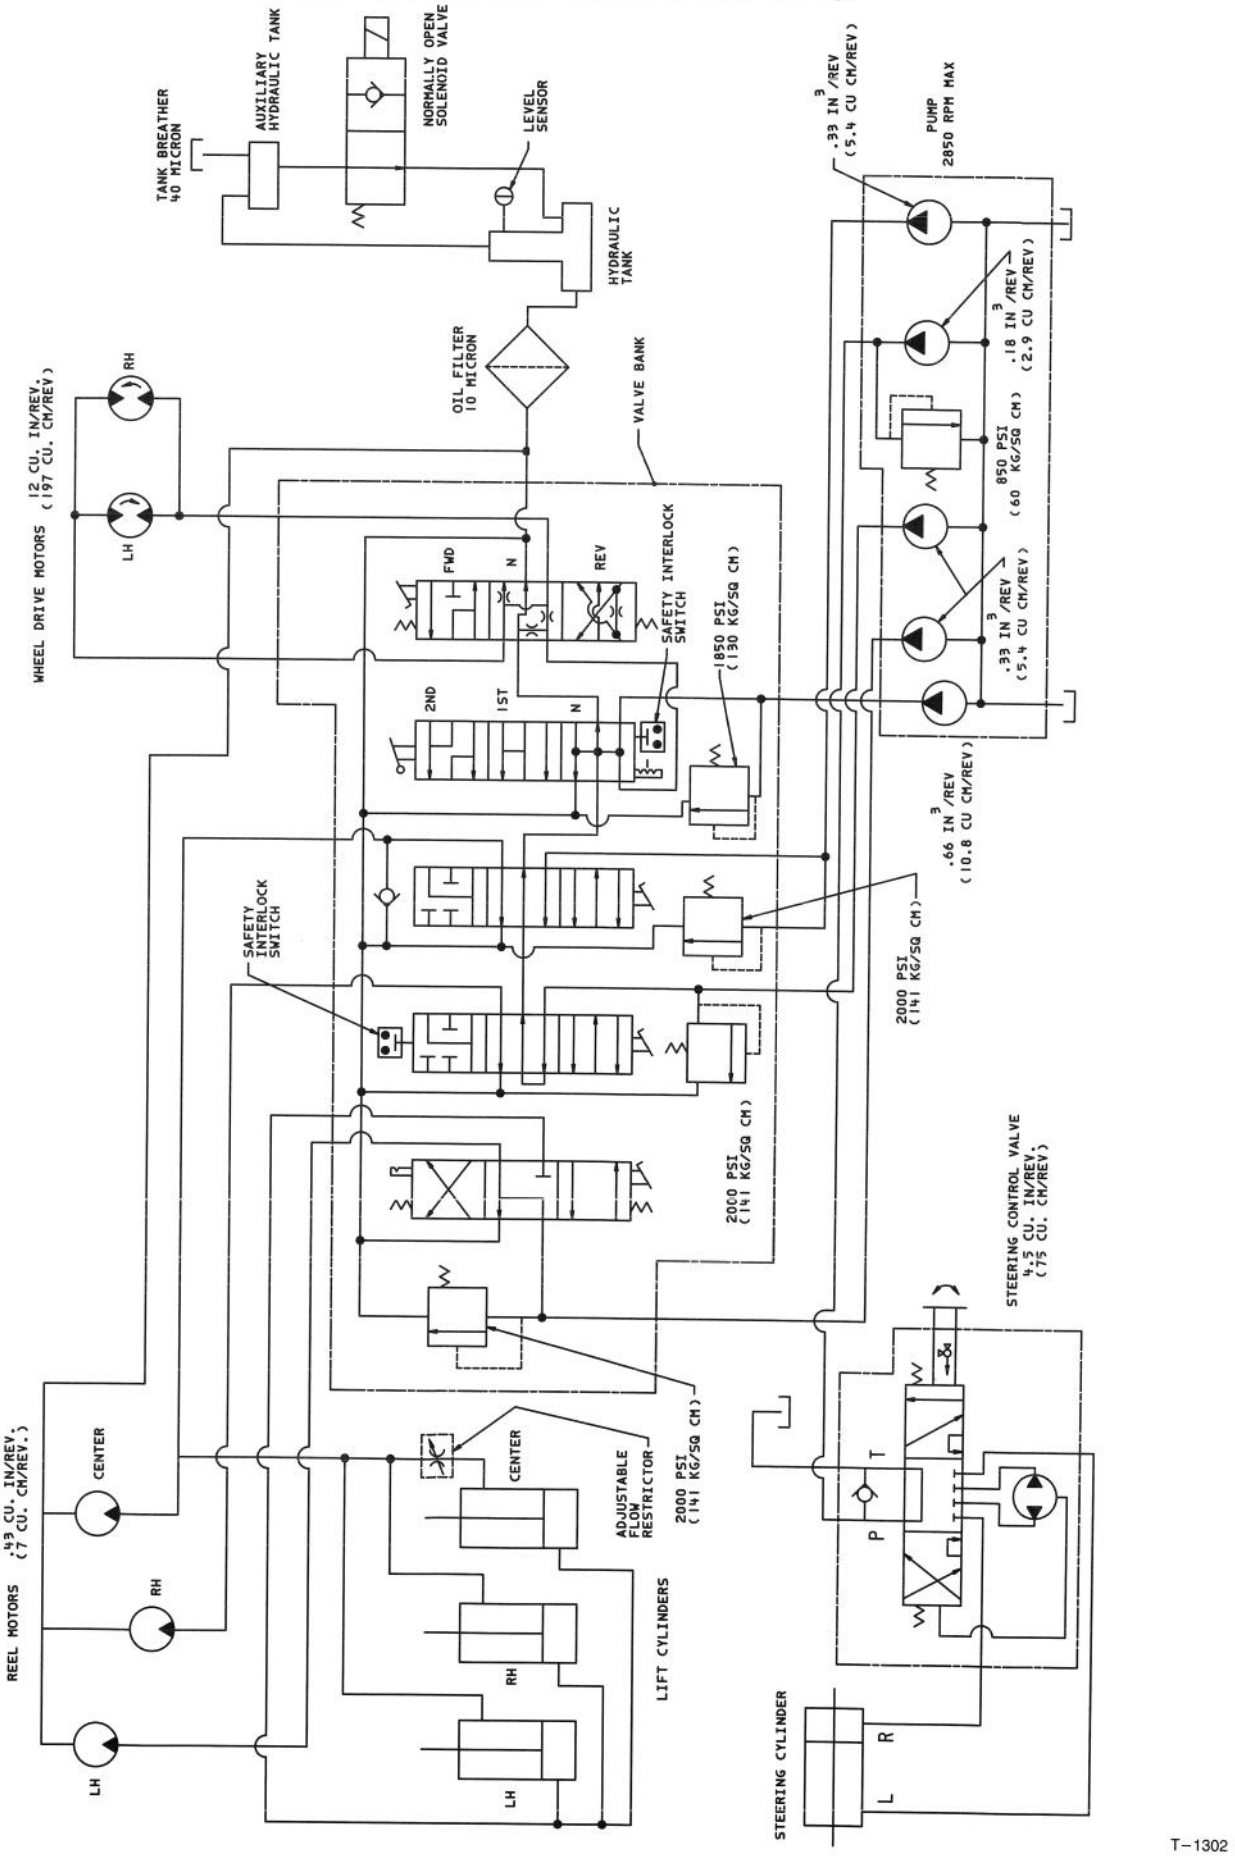

T–1302

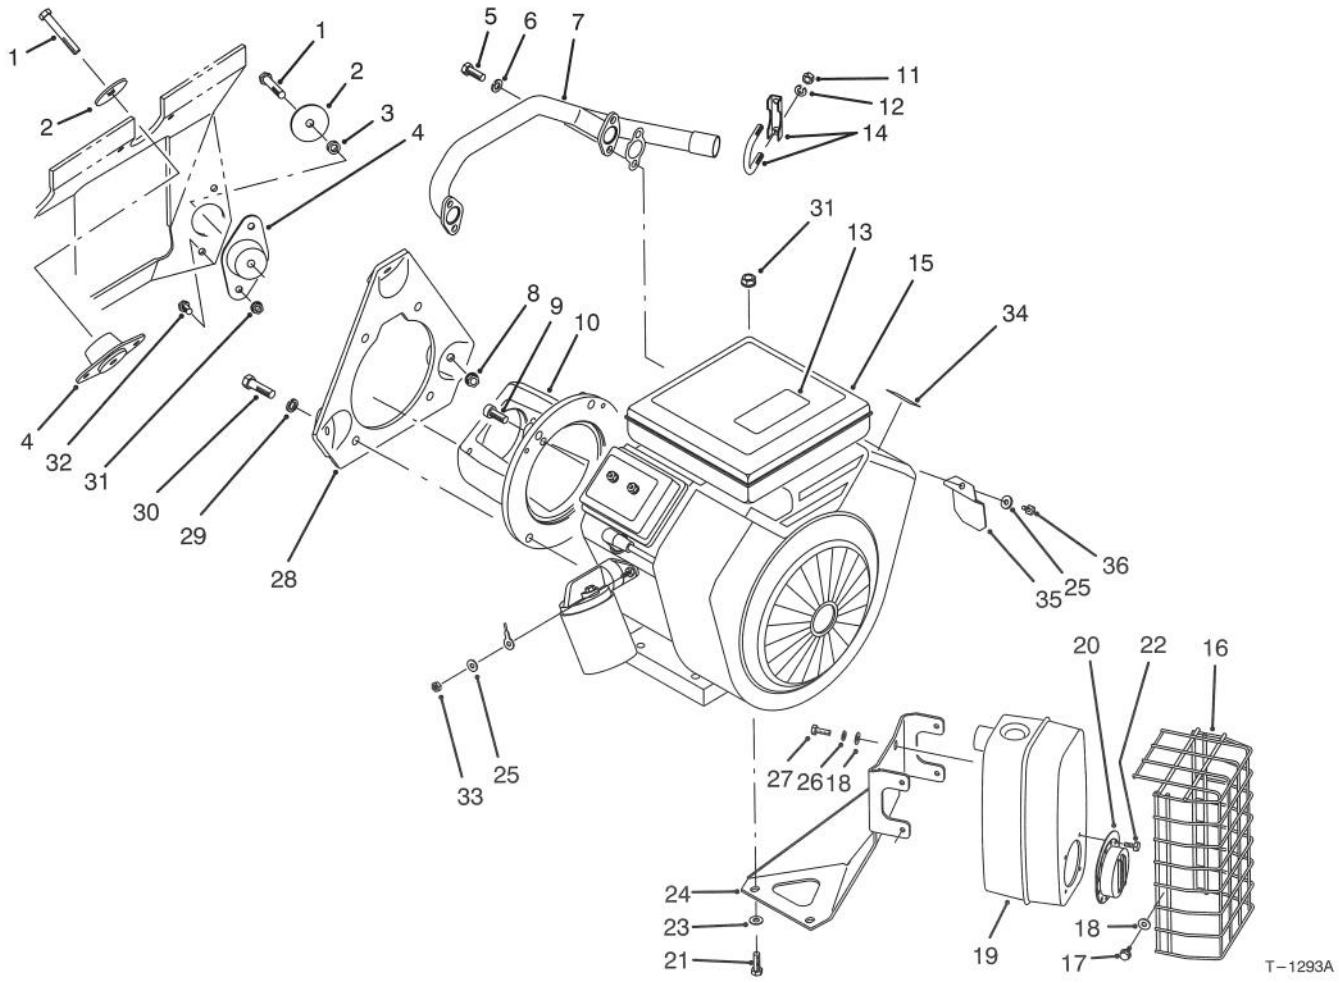


ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323–12	Screw – Cap Hex. Hd.	3
2	83–1040	Washer – Mount	3
3	83–1050	Spacer – Mount	2
4	83–1030	Mount – Engine	3
5		Screw – Cap Hex. Hd.	4
6		Washer – Lock	4
7	83–1080	Pipe – Exhaust	1
8	3290–357	Nut – Flange Lock	3
9	3274–7	Screw – Socket Hd.	2
10	83–1060	Adapter – Pump	1
11		Nut – Hex.	2
12		Washer – Lock	2
‡13	71–3620	Decal – Engine RPM	1
14	2112–11	Clamp – Muffler (Incl. Ref. #11 & 12)	1
15	83–0010	Engine Assembly (Incl. Ref. #5 & 6)	1
16	83–1400	Shield – Muffler	1
17	12–3270	Screw – Hex. Washer Hd.	4
18	3256–1	Washer – Flat	8
19	493963	Muffler	1
*	83–2240	Arrestor – Spark (Optional)	1

Ref. No.	Part No.	Description	No. Used
20	83–2220	Deflector – Exhaust	1
21	322–8	Screw – Cap Hex. Hd.	2
22	83–2230	Screw – Cap Hex. Hd.	4
23	3256–23	Washer – Flat	2
24	83–1630	Bracket – Muffler Support	1
25	43–5930	Washer – Lock	2
26	3253–3	Washer – Lock	4
27	321–4	Screw – Cap Hex. Hd.	4
28	85–8120	Plate – Engine Mount	1
29	3253–6	Washer – Lock	4
30	324–7	Screw – Cap Hex. Hd.	4
31	32128–20	Nut – Flange Lock	8
32	322–3	Screw – Cap Hex. Hd.	6
33	43–2830	Nut – Hex	1
‡34	63–8440	Decal – Warning Hot	1
35	83–2310	Shield	1
36	48–7620	Screw – Cap Hex. Hd.	1
*	3290–378	Tie – Cable	2
*	250–6	Tie – Cable	2


*Not Illustrated ‡For different language versions of this part, see International Parts Page.

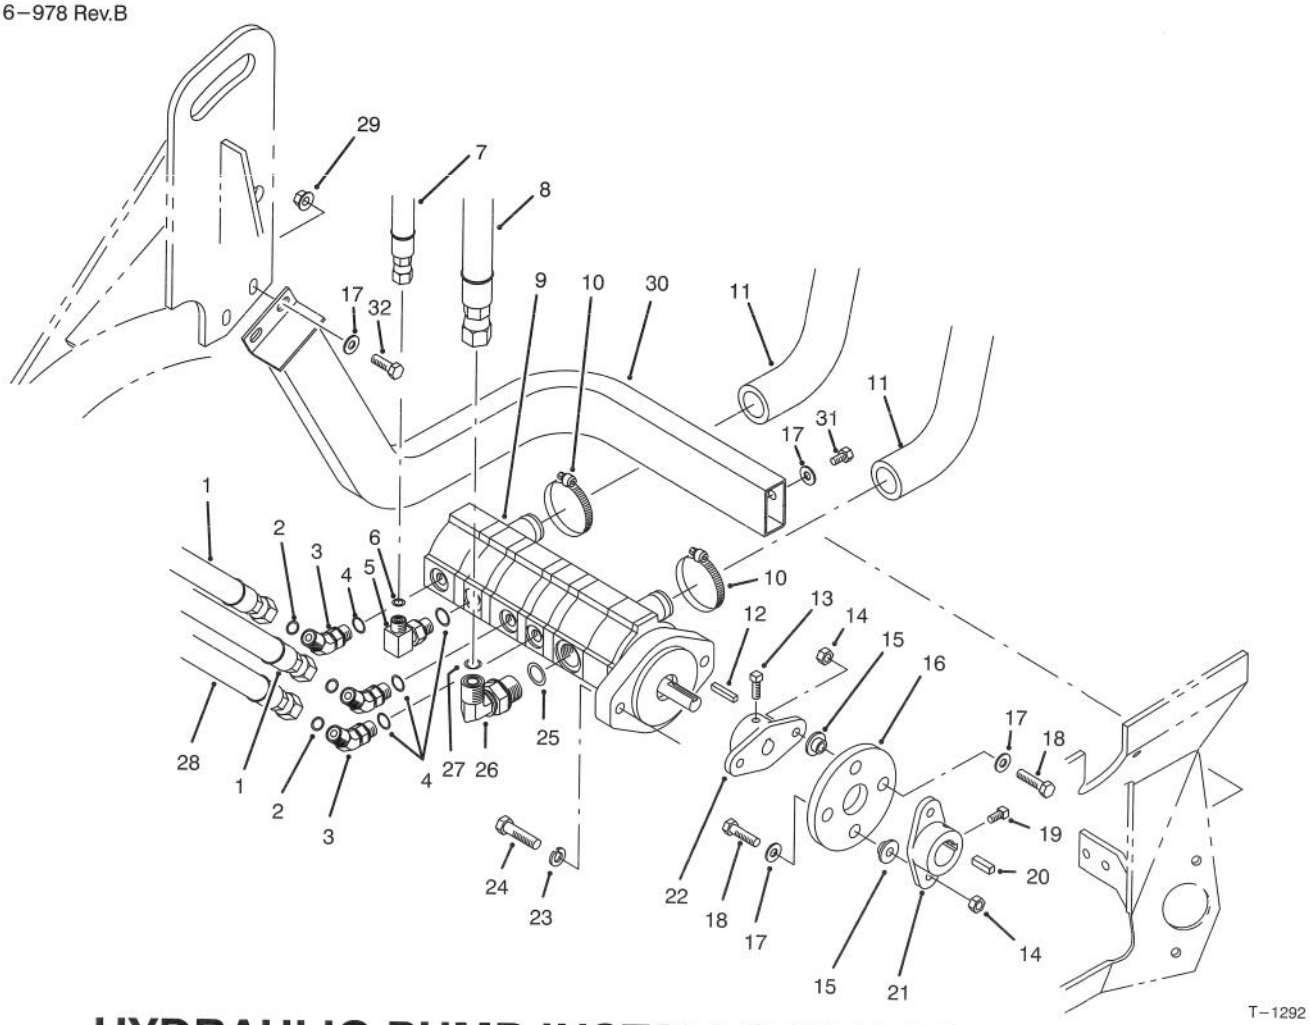

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83–1190	Hose – Hydraulic	2
2	237–22	Seal – O–Ring	3
3	340–87	Fitting – Hydraulic 45° (Incl. Ref. #2 & 4)	3
4	237–42	Seal – O–Ring	4
5	340–82	Fitting – Hydraulic 90° (Incl. Ref. #4 & 6)	1
6	237–21	Seal – O–Ring	1
7	83–1350	Hose – Hydraulic	1
8	83–1180	Hose – Hydraulic	1
9	68–4940	Hydraulic Pump Assembly (Incl. Ref. #12) (Use on Serial #50101–50299)	2
9	92–9764	Hydraulic Pump Assembly (Incl. Ref. #12) (Use on Serial #50301 & Up)	2
10	2412–34	Clamp – Hose	2
11	83–0910	Hose – Pump	2
12	5–0946	Key – Square	1
13	3241–6	Screw – Set Square Hd.	2


Ref. No.	Part No.	Description	No. Used
14	3296–29	Nut – Lock	4
15	27–6600	Spacer – Coupling	4
16	44–2230	Coupling – Rubber	1
17	3256–23	Washer – Flat	8
18	322–6	Screw – Cap Hex. Hd.	4
19	3241–2	Screw – Set Square Hd.	2
20	10–7070	Key – Square	1
21	27–1960	Hub – Engine	1
22	27–1970	Hub – Pump	1
23	3253–21	Washer – Lock	2
24	323–8	Screw – Cap Hex. Hd.	2
25	237–80	Seal – O–Ring	1
26	340–105	Fitting – Hydraulic 90° (Incl. Ref. #25 & 27)	1
27	237–30	Seal – O–Ring	1
28	83–1170	Hose – Hydraulic	1
29	32128–20	Nut – Flange Lock	2
30	83–1940	Guard – Pump	1
31	322–1	Screw – Cap Hex. Hd.	2
32	322–4	Screw – Cap Hex. Hd.	2

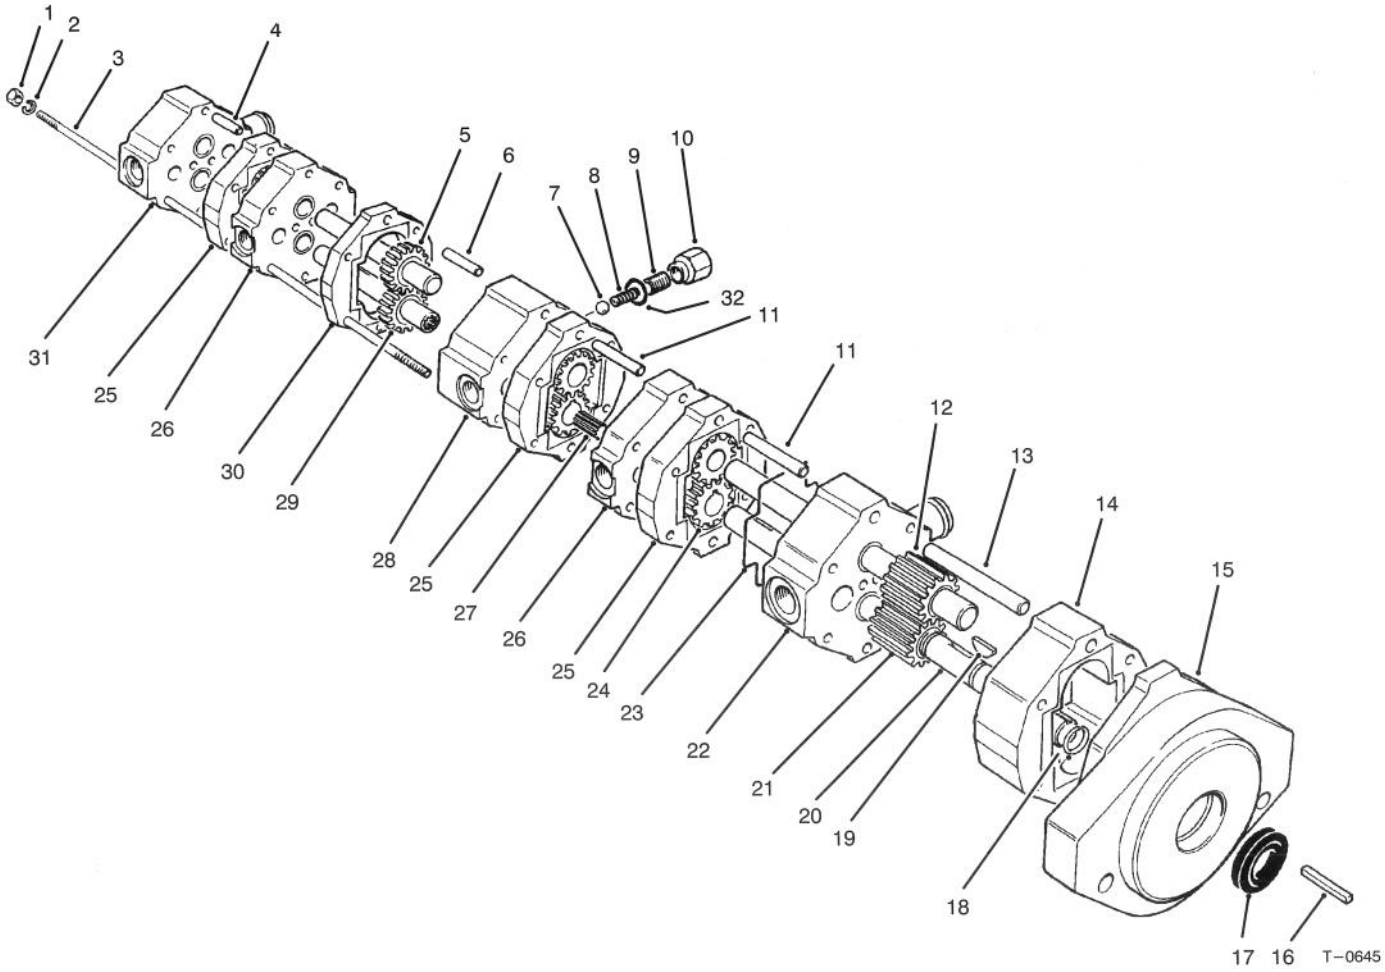

HYDRAULIC PUMP 68–4940

Ref. No.	Part No.	Description	No. Used
1	3217–6	Nut – Lock	4
2	354–16	Washer – Lock	4
3	354–17	Stud – Threaded	4
4	354–11	Pin – Dowel	2
5	354–9	Idler Shaft – Gear Assy.	1
6	354–12	Pin – Dowel	2
7		Ball – Valve	1
8		Spring – Compression	1
9		Adjuster – Valve	1
10		Cap – Adjuster, Valve	1
11	354–13	Pin – Dowel	4
12	354–10	Idler Shaft – Gear Assy.	1
13	354–14	Pin – Dowel	2
14	353–971	Plate – Gear 66B	1
15	354–2	Body Assembly	1
16	5–0946	Key – Square	1
17	354–15	Seal – Shaft	1


Ref. No.	Part No.	Description	No. Used
18	353–886	Ring – Retaining	2
19	353–884	Key – Woodruff	4
20	354–1	Shaft – Drive	1
21	353–964	Gear – 66B	1
22	354–3	Bearing Plate Assembly	1
23	353–922	Seal – Ring	10
24	353–967	Gear – 33B	6
25	353–969	Plate – Gear 33B	3
26	353–923	Bearing Plate Assembly	2
27	354–5	Adapter – Splined	1
28	354–4	Bearing Plate Assembly (Incl. Ref. #7–10 & 32)	1
29	354–8	Drive Shaft – Gear Assy.	1
30	354–6	Plate – Gear 18B	1
31	354–7	Cover Assembly	1
32	354–35	Gasket	1

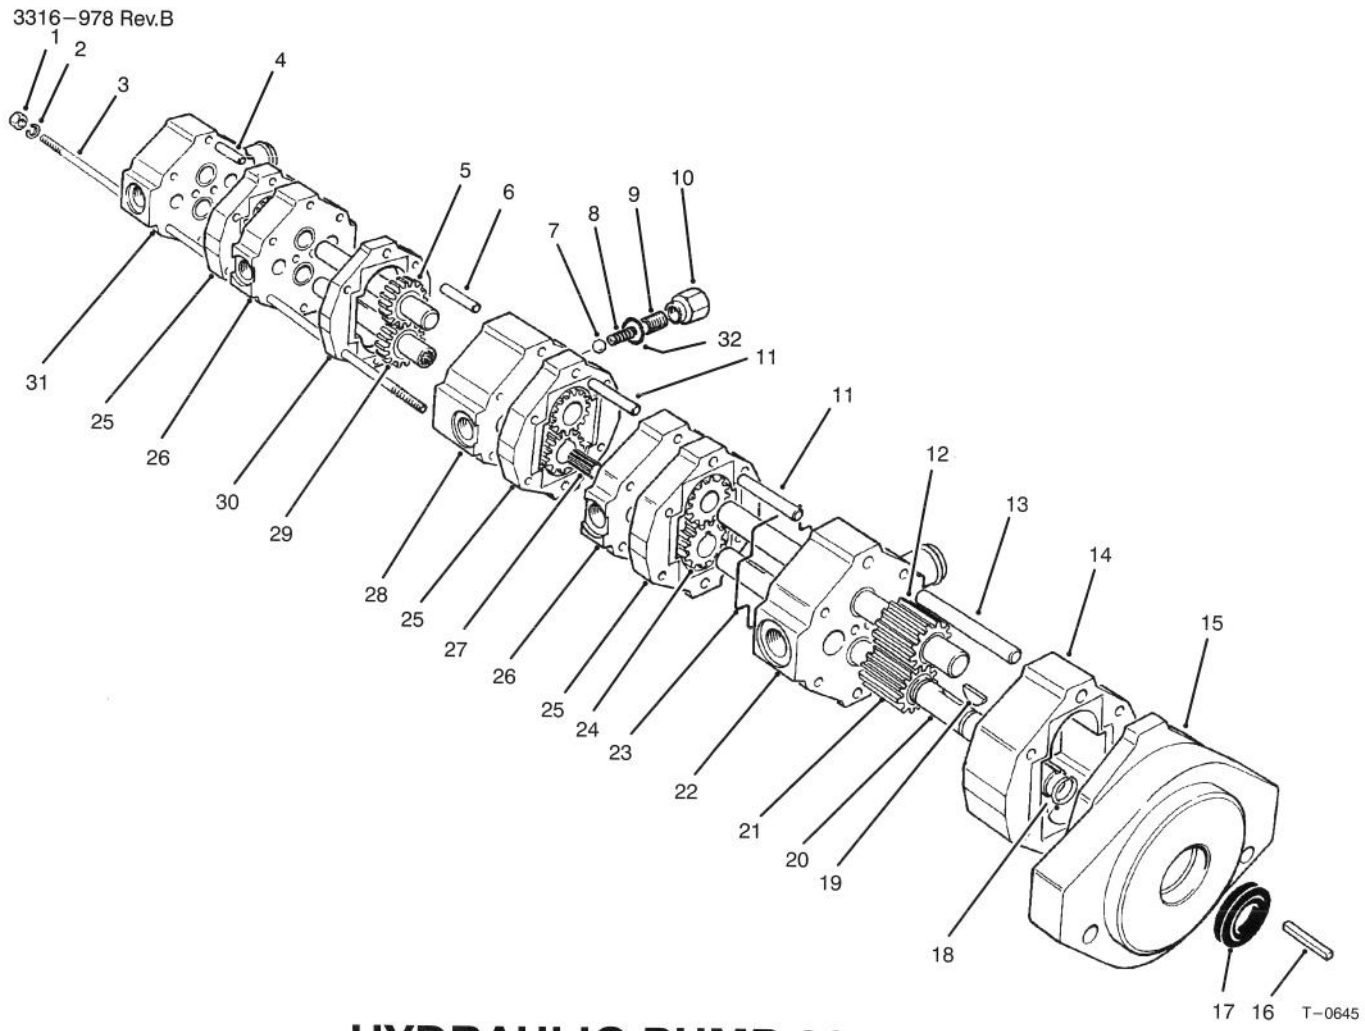

HYDRAULIC PUMP 92–9764

Ref. No.	Part No.	Description	No. Used
1	3217–6	Nut – Lock	4
2	354–16	Washer – Lock	4
3	354–17	Stud – Threaded	4
4	354–11	Pin – Dowel	2
5	354–9	Idler Shaft – Gear Assy.	1
6	354–12	Pin – Dowel	2
7		Ball – Valve	1
8		Spring – Compression	1
9		Adjuster – Valve	1
10		Cap – Adjuster, Valve	1
11	354–13	Pin – Dowel	4
12	92–9774	Idler Shaft – Gear Assy.	1
13	354–14	Pin – Dowel	2
14	92–9766	Plate – Gear 66B	1
15	354–2	Body Assembly	1
16	5–0946	Key – Square	1
17	354–15	Seal – Shaft	1

Ref. No.	Part No.	Description	No. Used
18	353–886	Ring – Retaining	2
19	353–884	Key – Woodruff	4
20	92–9772	Shaft – Drive	1
21	92–9773	Gear – 66B	1
22	354–3	Bearing Plate Assembly	1
23	353–922	Seal – Ring	10
24	353–967	Gear – 33B	6
25	353–969	Plate – Gear 33B	3
26	353–923	Bearing Plate Assembly	2
27	354–5	Adapter – Splined	1
28	354–4	Bearing Plate Assembly (Incl. Ref. #7–10 & 32)	1
29	354–8	Drive Shaft – Gear Assy.	1
30	354–6	Plate – Gear 18B	1
31	354–7	Cover Assembly	1
32	354–35	Gasket	1

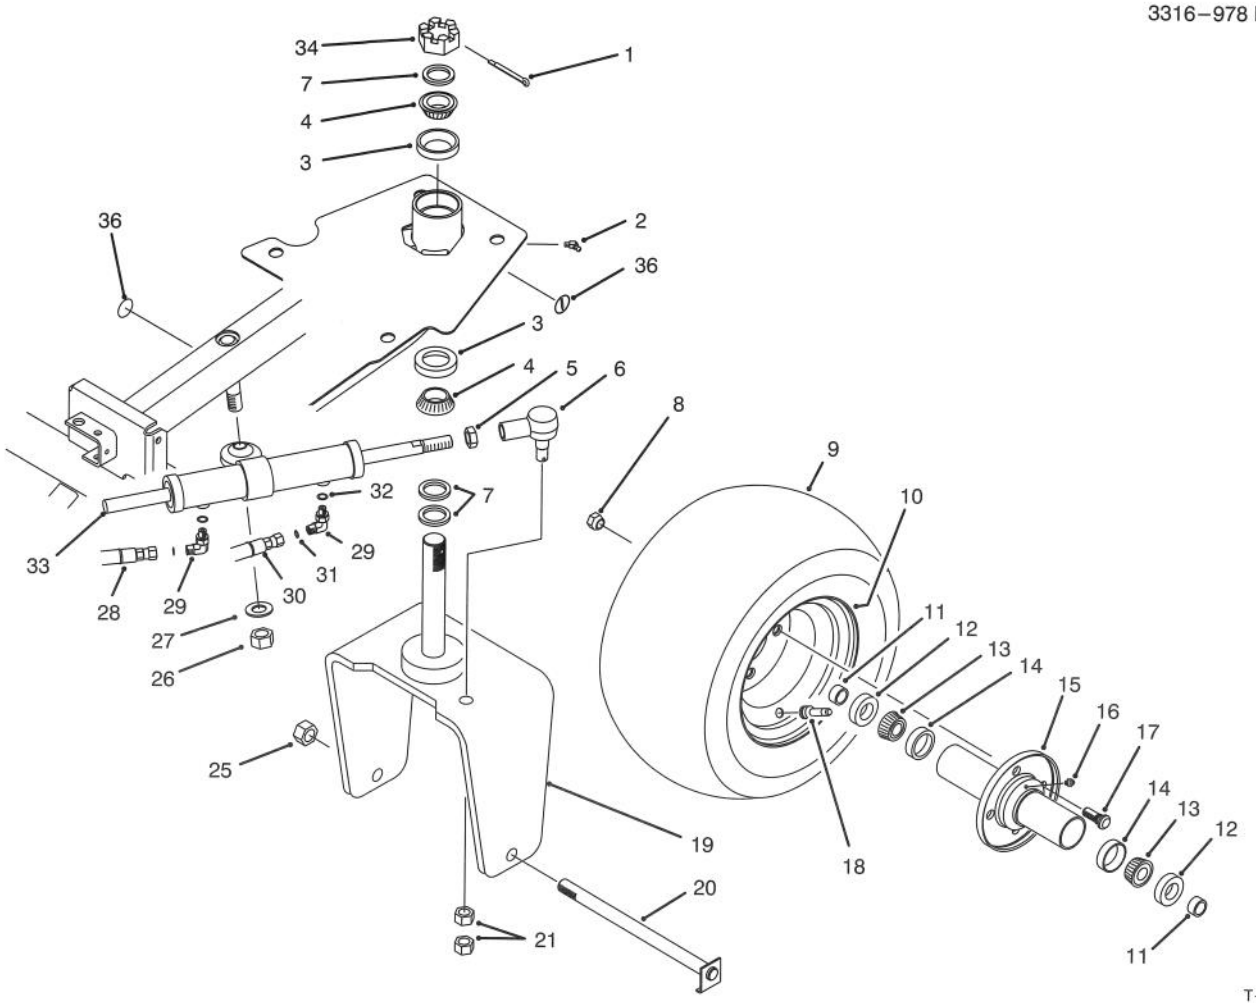


T–1288A

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272–37	Pin – Cotter	1
2	302–11	Fitting – Grease	1
3	254–61	Cup – Bearing	2
4	254–70	Cone – Bearing	2
5	84–5300	Nut – Jam	1
6	83–1640	Rod End Assembly	1
7	18–6320	Washer – Steering	4
8	242–50	Nut – Lug	4
9	28–3680	Tire	1
10	217–60	Rim	1
11	74–3730	Spacer – Hub	2
12	253–111	Seal – Shaft	2
13	254–78	Cone – Bearing	2
14	254–79	Cup – Bearing	2
15	75–9440	Hub – Wheel	1
16	302–55	Fitting – Grease	1
17	10–6830	Stud – Drive	4

Ref. No.	Part No.	Description	No. Used
18	232–24	Valve Stem w/Cap	1
19	93–2524	Fork – Castor	1
20	5–3934	Bolt – Castor	1
21	3220–6	Nut – Jam	2
25	3296–67	Nut – Lock	1
26	3217–12	Nut – Lock	1
27	3256–28	Washer – Flat	1
28	83–1350	Hose – Hydraulic	1
29	340–132	Fitting – Hydraulic 90° (Incl. Ref. #31 & 32)	2
30	83–1360	Hose – Hydraulic	1
31	237–21	Seal – O–Ring	2
32	237–78	Seal – O–Ring	2
33	83–2330	Hydraulic Cylinder Assy.	1
34	32136–9	Nut – Hex. Slotted	1
36	58–6520	Decal – Grease	2

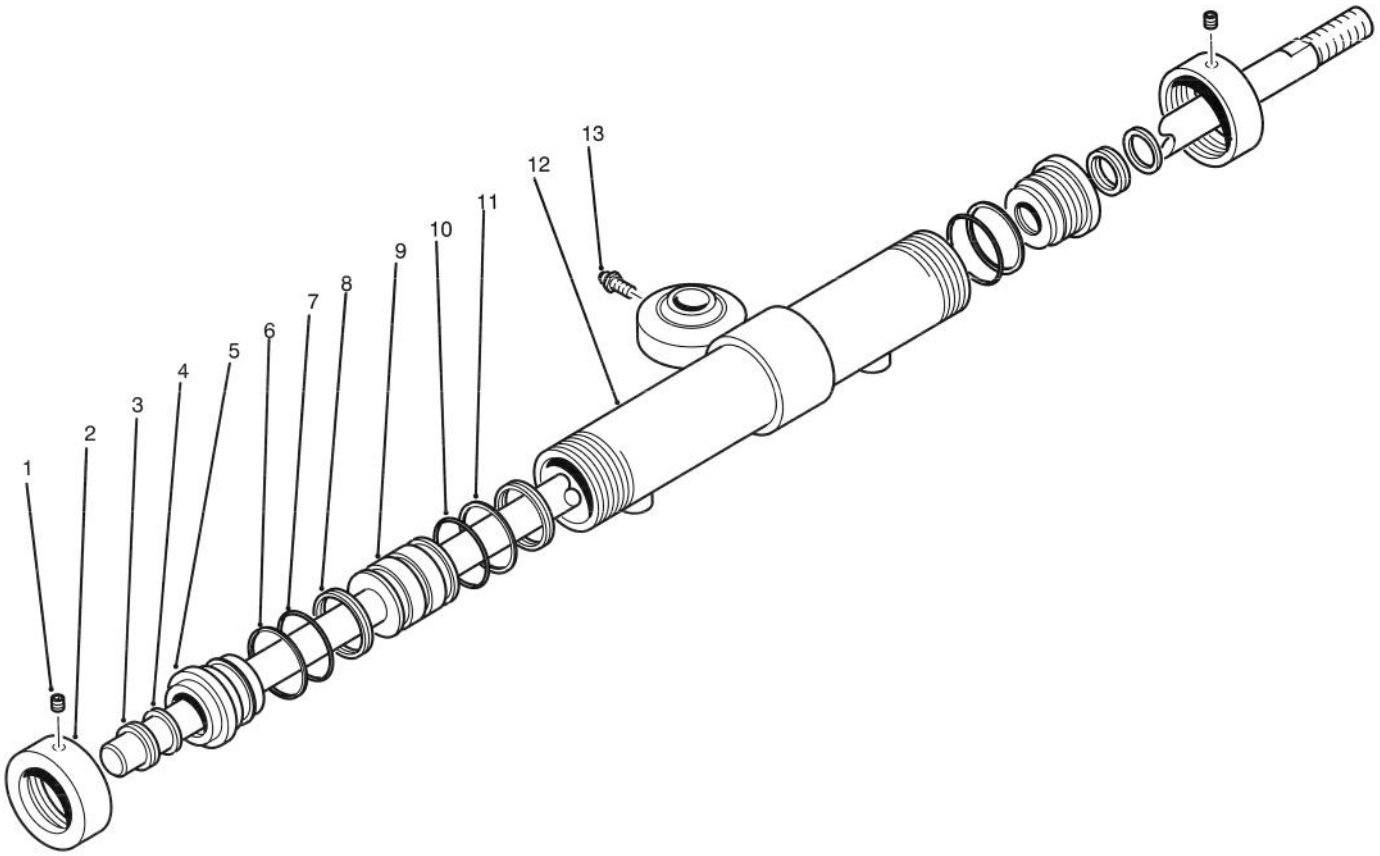


T–1313

HYDRAULIC CYLINDER ASSEMBLY NO. 83–2330

Ref. No.	Part No.	Description	No. Used
1	3245–1	Screw – Set, Hex. Soc. Hd.	2
2	83–2340	Cap – Threaded	2
3		Wiper – Rod	2
4		U–Cup – Double Lip	2
5	83–2350	Cap – Head, Thread	2
6		Ring – Back–Up	2
7		O–Ring	2
8		Ring – Wear	2
9	83–2360	Assembly – Rod	1
10		O–Ring	1
11		Ring – Piston, Urithane	1
12	83–2370	Assembly – Barrel	1
13	302–5	Fitting – Grease	1
*	83–2380	Kit – Seal Repair (Incl. Ref. #1–7)	1

*Not Illustrated

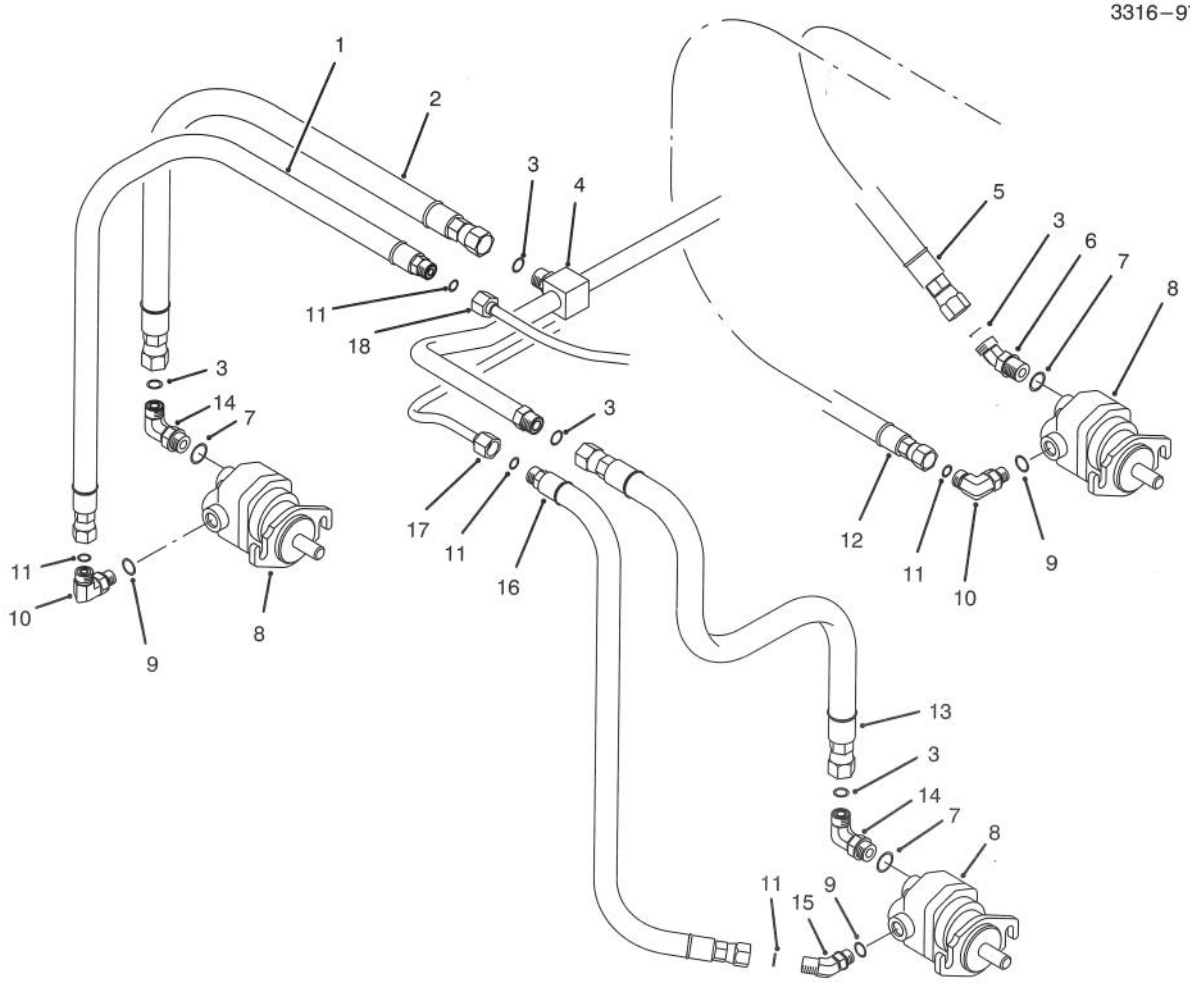


T–1297

REEL MOTOR INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63–3810	Hose – Hydraulic	1
2	63–3820	Hose – Hydraulic	1
3	237–30	Seal – O–Ring	5
4	63–4040	Hydraulic Tube Assembly (Incl. Ref. #3)	1
5	63–3840	Hose – Hydraulic	1
6	340–101	Fitting – Hydraulic 45° (Incl. Ref. #3 & 7)	1
7	237–79	Seal – O–Ring	3
8	70–9800	Reel Motor Assembly	3
9	237–42	Seal – O–Ring	3

Ref. No.	Part No.	Description	No. Used
10	340–77	Fitting – Hydraulic 90° (Incl. Ref. #9 & 11)	2
11	237–22	Seal – O–Ring	5
12	74–3830	Hose – Hydraulic	1
13	63–3830	Hose – Hydraulic	1
14	340–98	Fitting – Hydraulic 90° (Incl. Ref. #3 & 7)	2
15	340–87	Fitting – Hydraulic 45° (Incl. Ref. #9 & 11)	1
16	63–3870	Hose – Hydraulic	1
17	63–4020	Tube – Hydraulic	1
18	63–4030	Tube – Hydraulic	1

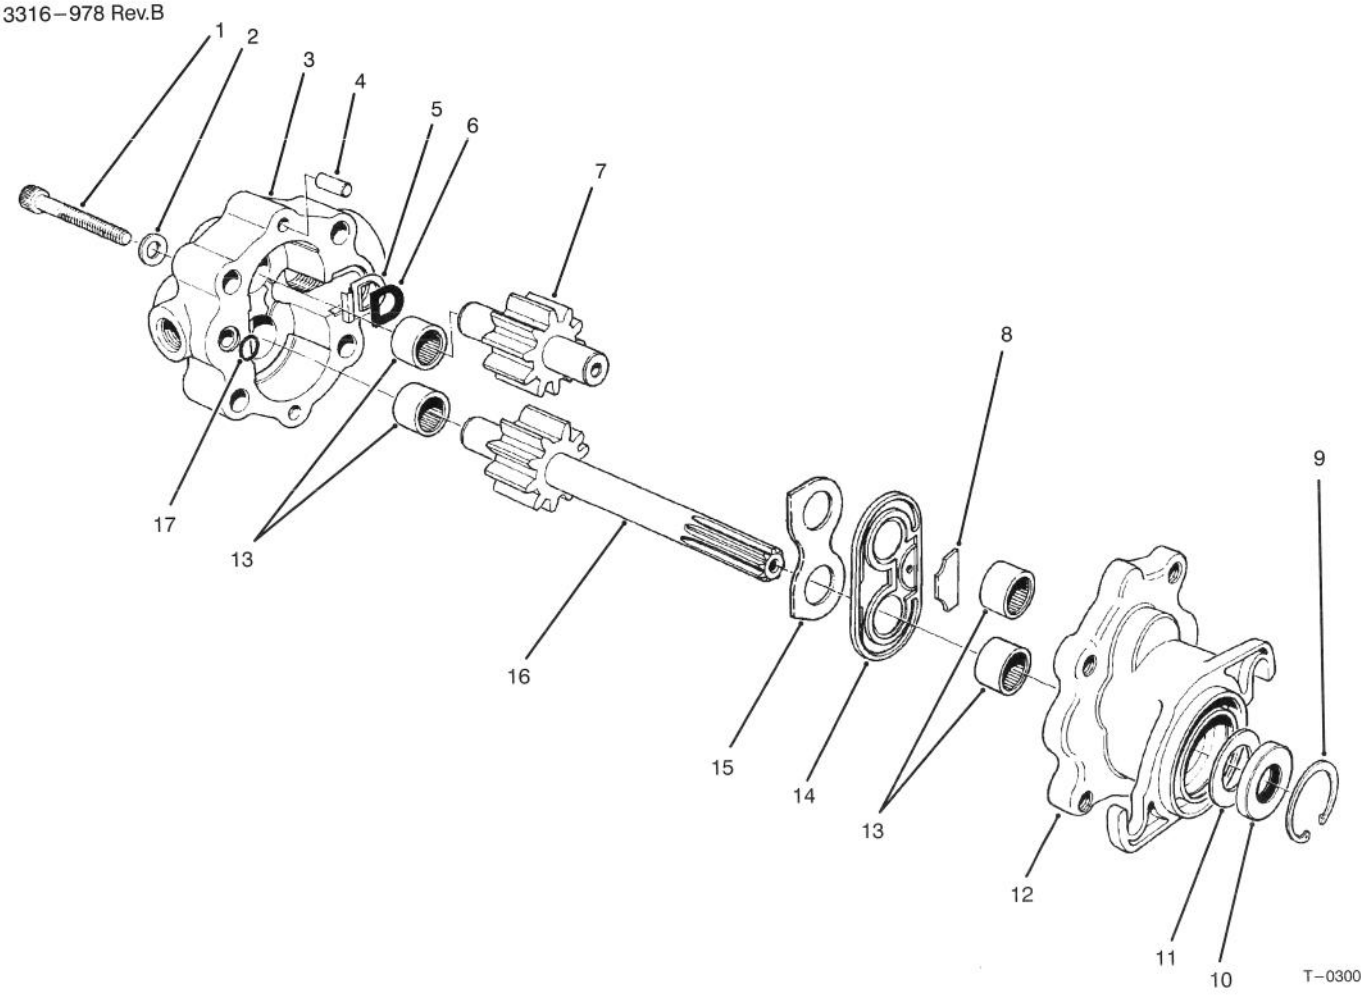

REEL MOTOR NO. 70–9800


Ref. No.	Part No.	Description	No. Used
1	353–601	Screw – Hex Socket Hd.	4
2	353–600	Washer	4
3	353–588	Cover – Motor	1
4	353–599	Pin – Dowel	2
5	353–597	Bridging – Insert	1
6	353–598	Gasket – Insert	1
7	353–593	Idler Gear Assembly	1
8	353–591	Block – Anti–Extrusion	1
9	32151–41	Ring – Retaining	1
10		Seal – Shaft	1
11		Spacer	1
12	353–777	Body – Motor (Incl. Ref. #13)	1

Ref. No.	Part No.	Description	No. Used
13	353–586	Bearing – Needle	4
14	353–594	Seal Assembly	1
15	353–595	Plate – Wear	1
16	353–592	Drive Shaft Assembly	1
17	353–596	O–Ring	1
*	72–4380	Seal Kit (Incl. Ref. #9–11)	1
*	72–4390	Repair Kit (Incl. Ref. #5, 6, 8–11, 14, 15 & 17)	
*		Seal Installer	1
*		Seal Protector	1

*Not Illustrated

SPECIAL TOOLS


REEL MOTOR SEAL INSTALLATION TOOLS

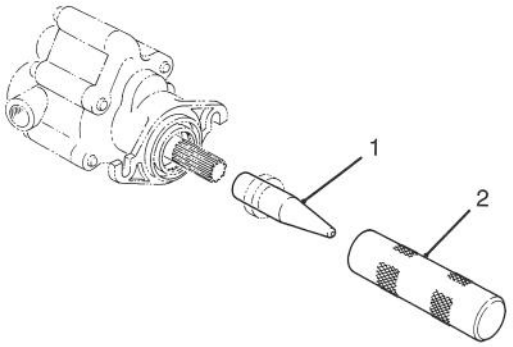

T–0727

Ref. No.	Part No.	Description	No. Used
1	TOR491430	Protector – Seal	1
2	TOR491450	Installer – Seal	1


BED KNIFE SCREW TOOL NO. TOR510880

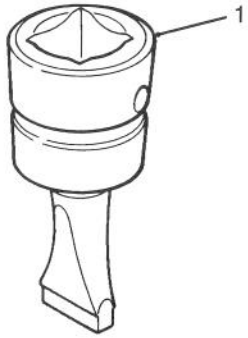

T–0729

Ref. No.	Part No.	Description	No. Used
1		Tool – Bed Knife Screw	1


BEARING REPLACEMENT TOOL KIT NO. TOR238900

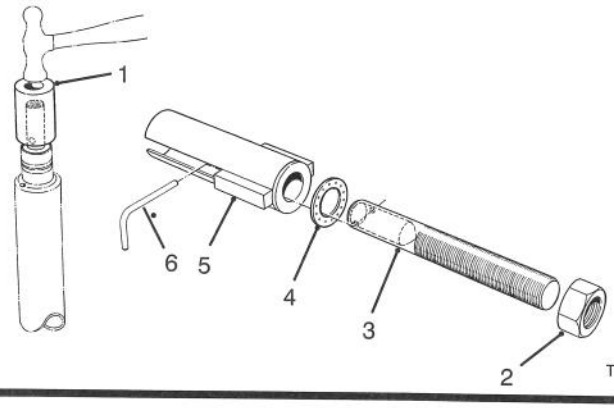

T–0730

Ref. No.	Part No.	Description	No. Used
1	23–8880	Driver – Bearing	2
2	3219–18	Nut – Hex.	1
3	23–8840	Puller – Bolt	1
4	22–6090	Washer – Thrust	1
5	23–8850	Tube – Support	1
6	23–8860	Pin – Bearing Rplcmnt.	1

BACKLAPPING BRUSH ASSEMBLY NO. 29–9100

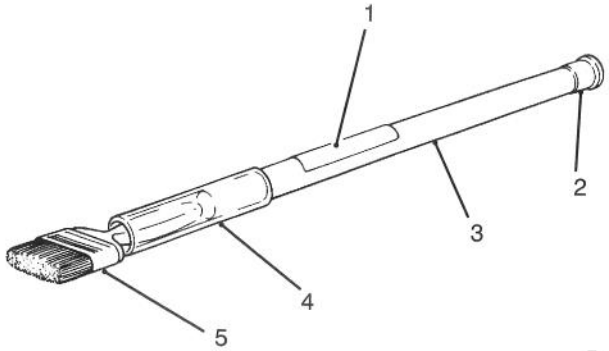


T–0731

Ref. No.	Part No.	Description	No. Used
1	12–9140	Decal	1
2	2410–18	Plug	1
3	29–9080	Handle	1
4	29–9090	Hose – Handle	1
5	36–4310	Brush	1

Note: Special tools may be ordered from: Owatonna Tool Company 2013 4th St. NW Owatonna, MN 55060

SPECIAL TOOLS (Continued)


ALIGNMENT TOOL NO. TOR200120

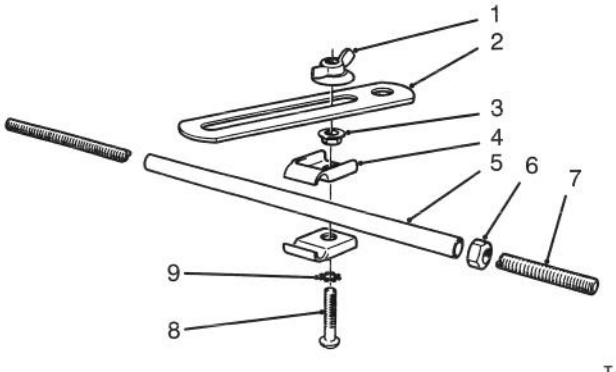

T–0732

Ref. No.	Part No.	Description	No. Used
1	3–4808	Nut – Wing	1
2	20–0110	Bracket – Alignment	1
3	32128–20	Nut – Lock, Flange	1
4	3–6657	Clip – Skid	2
5	20–0070	Tube	1
6	3219–2	Nut – Hex.	1
7	20–0080	Rod	1
8	32122–35	Screw – Truss Head	1
9	3255–8	Washer – Lock, Int. Tooth	1

Note: Special tools may be ordered from: Owatonna Tool Company
2013 4th St. NW
Owatonna, MN 55060

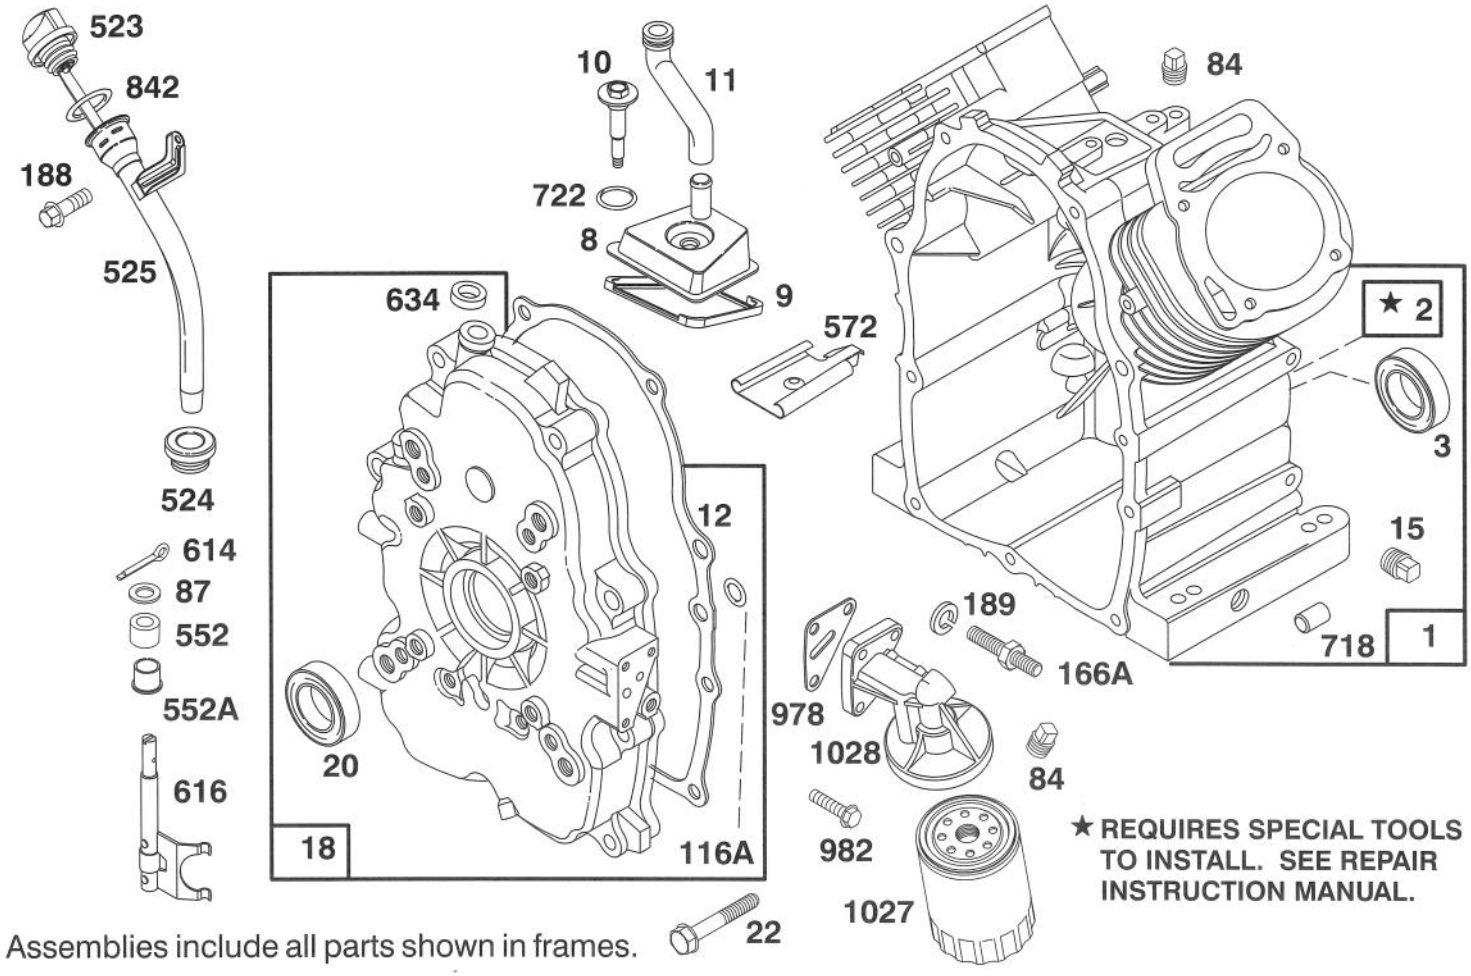


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01

Ref. No.	Part No.	Description	No. Used
1	807521	Cylinder Assembly	
2	805107	Bearing – Cylinder	
*3	805101	Seal – Oil	
8	807795	Breather Assembly	
*9	805379	Gasket – Breather	
10	805751	Screw – Hex. Washer Head	
11	805362	Tube – Breather	
*12	805112	Gasket – Crankcase Cover	
15	805048	Plug – Oil Drain	
18	807628	Cover Assembly – Crankcase	
*20	805049	Seal – Oil	
22	805696	Screw – Crankcase Cover	
84	91488	Plug – Pipe	
*87	805054	Seal – Governor Shaft	
*116A	805198	O–Ring (Crankcase Cover)	
166A	805073	Stud – Oil Filter Adapter	
188	805247	Screw – Hex. Head	

Ref. No.	Part No.	Description	No. Used
189	805449	Lockwasher	
523	807977	Dipstick	
*524	805259	Seal – Filler Tube	
525	807584	Tube – Oil Filler	
552	805412	Bushing – Governor Shaft	
552A	805413	Bushing – Governor Shaft	
572	805197	Baffle – Breather	
614	805417	Pin – Cotter	
616	807596	Fork – Governor	
634	805416	Washer – Governor Shaft	
718	805103	Dowel – Crankcase	
*722	805483	Seal – Breather Screw	
*842	805386	O–Ring	
*978	805250	Gasket – Oil Filter Adapter	
982	805030	Screw	
1027	491056	Filter – Oil	
1028	805292	Adapter – Oil Filter	

*Included in Gasket Set – Part No. 807989.

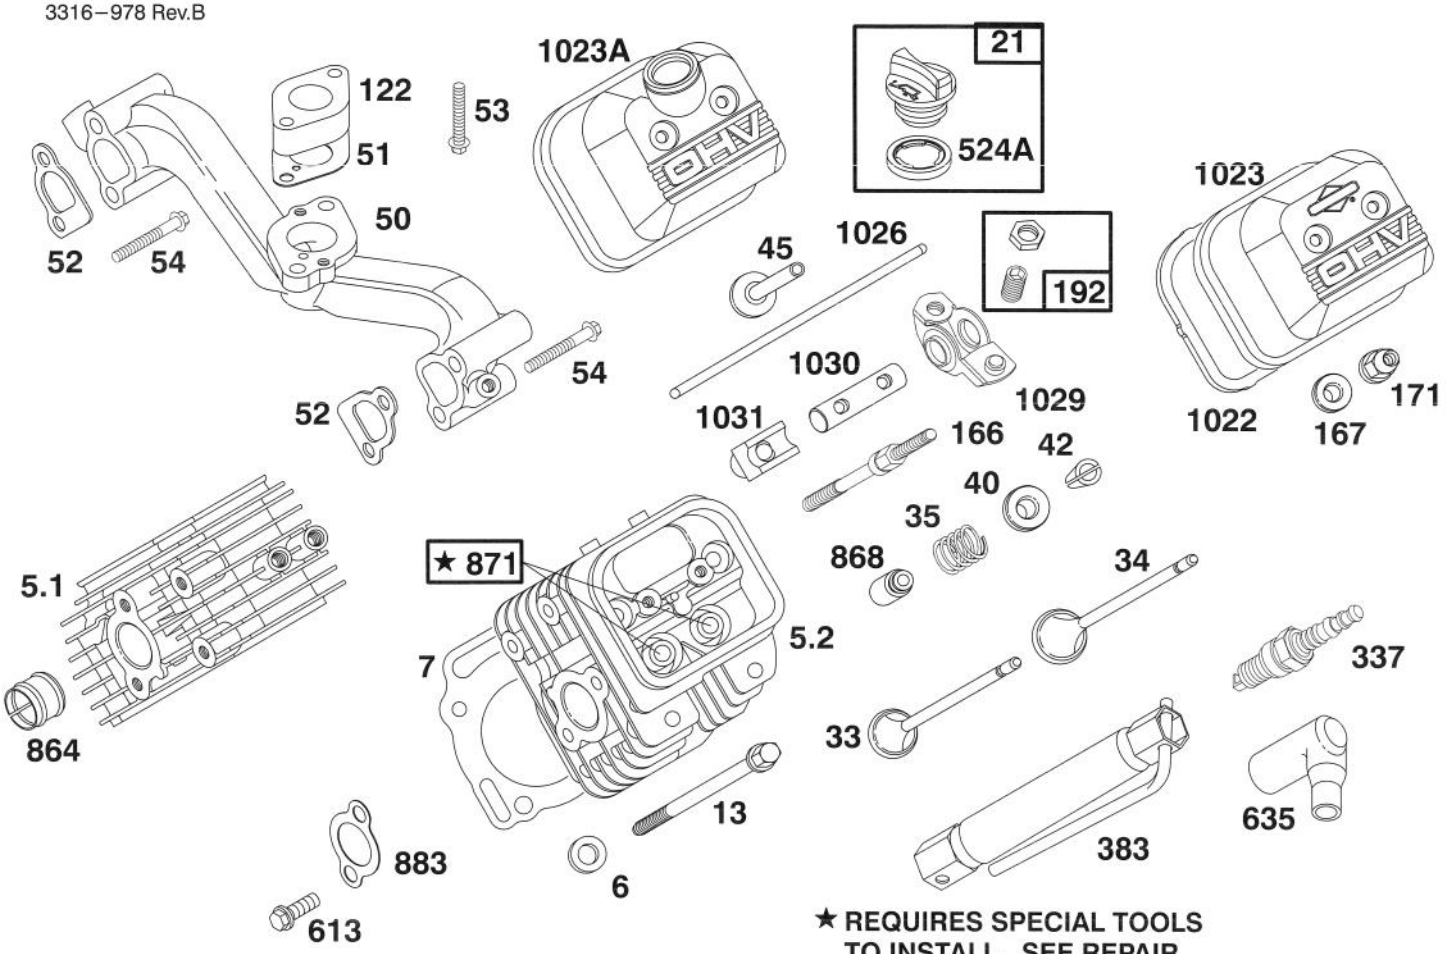

Assemblies include all parts shown in frames.


★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01

Ref. No.	Part No.	Description	No. Used
5.1	807987	Head – Cylinder (Cyl. #1)	
5.2	807988	Head – Cylinder (Cyl. #2)	
‡6	805193	Washer – Cylinder Head	
‡*7	807986	Gasket – Cylinder Head	
13	805097	Screw – Cylinder Head	
21	491832	Plug – Oil Fill (Cyl. #1)	
33	805089	Valve – Exhaust	
34	805090	Valve – Intake	
35	805078	Spring – Valve	
40	805092	Retainer – Valve Spring	
42	805161	Retainer – Valve	
45	805354	Tappet – Valve	
50	805772	Manifold – Intake	
*51	805264	Gasket – Carburetor Mtg.	
‡*52	805023	Gasket – Intake Manifold	
53	805466	Screw	
54	805006	Screw	
122	805328	Spacer – Carburetor	
166	805343	Stud – Rocker Arm	
‡*167	805420	Washer – Valve Cover	
‡171	805019	Nut – Nylock	

Ref. No.	Part No.	Description	No. Used
192	807623	Screw – Valve Adjustment (Incl. Jam Nut)	
337	496018	Plug – Spark	
383	19374	Wench – Spark Plug	
‡*524A	271983	Seal – Filler Plug	
613	805158	Screw	
635	805529	Elbow – Spark Plug	
864	805083	Liner – Exhaust Port	
868	805094	Seal – Valve Guide	
871	805084	Guide – Valve	
‡*883	805024	Gasket – Exhaust Manifold	
‡*1022	805028	Gasket – Valve Cover	
1023	805100	Cover – Valve	
1023A	808032	Cover – Valve Used on Cylinder #1.	
1026	805352	Rod – Push **Note:** 805617 Rod – Push Used on Exhaust Side Only.	
1029	807557	Arm – Rocker	
1030	805342	Shaft – Rocker Arm	
1031	805341	Support – Rocker Arm	

*Included in Gasket Set – Part No. 807989.
‡Included in Valve Overhaul Kit – Part No. 807990.

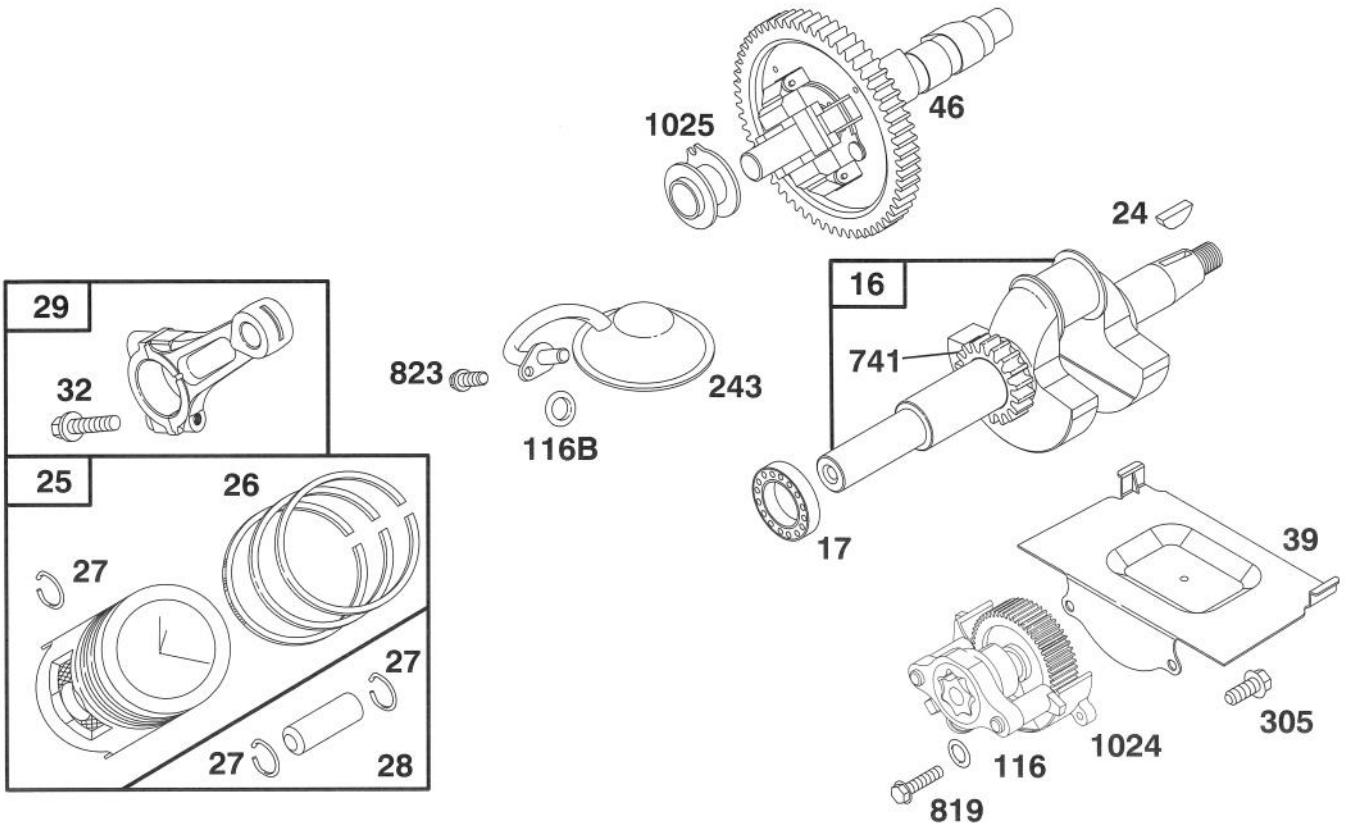


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01


Ref. No.	Part No.	Description	No. Used
16	807589	Crankshaft **Note:** To Replace Crankshaft Gear Key – Order Part No. 94196. 807625 Thrust Washer	
17	805754	Bearing – Ball	
24	805016	Key – Flywheel	
25	807619	Piston Assembly (Standard)	
	807807	Piston Assembly .010 O.S.	
	807809	Piston Assembly .020 O.S.	
	807811	Piston Assembly .030 O.S.	
26	807620	Ring Set – Piston (Standard)	
	807808	Ring Set – Piston .010 O.S.	
	807810	Ring Set – Piston .020 O.S.	
	807812	Ring Set – Piston .030 O.S.	
27	805099	Lock – Piston Pin	
28	807621	Piston Pin Assembly	


Ref. No.	Part No.	Description	No. Used
29	807900	Connecting Rod Assembly **Note:** For Connecting Rod With .020" Undersize Crankpin Bore – Order Part No. 807803.	
32	805395	Screw – Connecting Rod	
39	805654	Plate – Windage	
46	807542	Gear – Cam	
*116	805058	O–Ring (Oil Pump)	
*116B	805316	O–Ring (Pick – Up Tube)	
243	807598	Screen – Oil Pump Pick-Up	
305	805406	Screw	
741	805675	Gear – Timing	
819	805057	Screw	
823	805317	Screw – Mounting	
1024	807644	Oil Pump Assembly	
1025	805313	Slider – Governor	

*Included in Gasket Set – Part No. 807989.

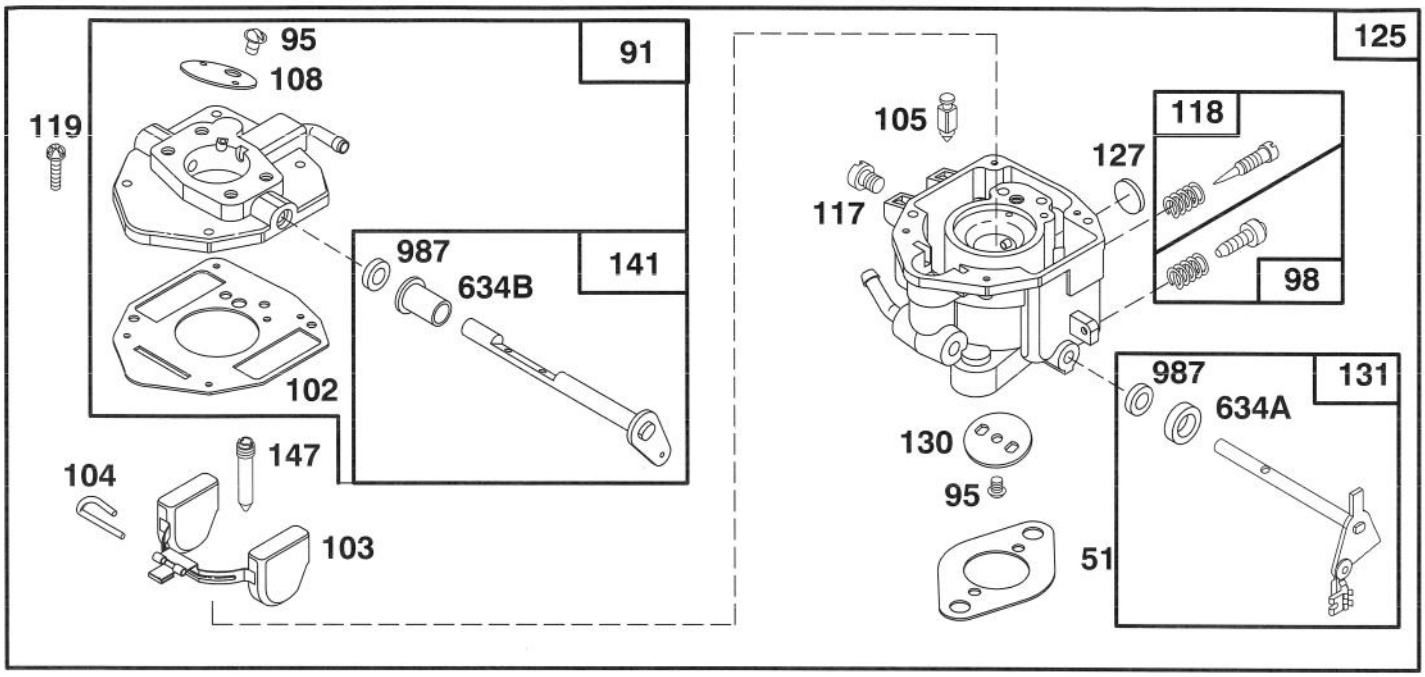



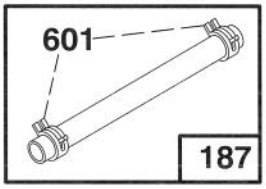

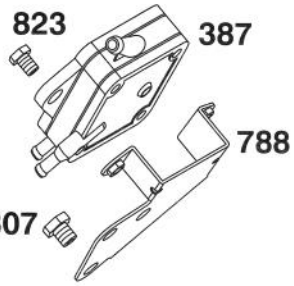


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01

Ref. No.	Part No.	Description	No. Used
*51	805700	Gasket – Carburetor Mtg.	
91	807919	Body – Upper Carburetor	
95	805538	Screw – Valve Mtg.	
98	807718	Screw – Throttle Adj.	
†102	805541	Gasket – Intake Elbow	
103	805546	Float Assembly	
†104	805545	Pin – Float Hinge	
†105	805547	Valve – Fuel Inlet	
108	805539	Valve – Choke	
†117	805853	Jet – Main	
†118	807719	Valve – Idle Adjusting Needle	
119	805540	Screw – Upper Body Mtg.	
125	807918	Carburetor Assembly	
†127	805559	Plug – Welch	

Ref. No.	Part No.	Description	No. Used
130	805554	Valve – Throttle	
131	807720	Shaft – Throttle	
141	807722	Shaft – Choke	
†147	805553	Jet – Slow Speed	
187	393815	Hose – Fuel (Cut to Suit)	
307	805025	Screw	
387	491922	Pump – Fuel	
601	93053	Clamp – Hose	
†634A	805557	Collar – Throttle	
†634B	805543	Collar – Choke	
788	807685	Bracket – Fuel Pump	
823	805317	Screw – Mounting	
947	807664	Solenoid	
†987	805544	Seal – Shaft	

†Included in Carburetor Kit – Part No. 807726.
*Included in Gasket Set – Part No. 807989.

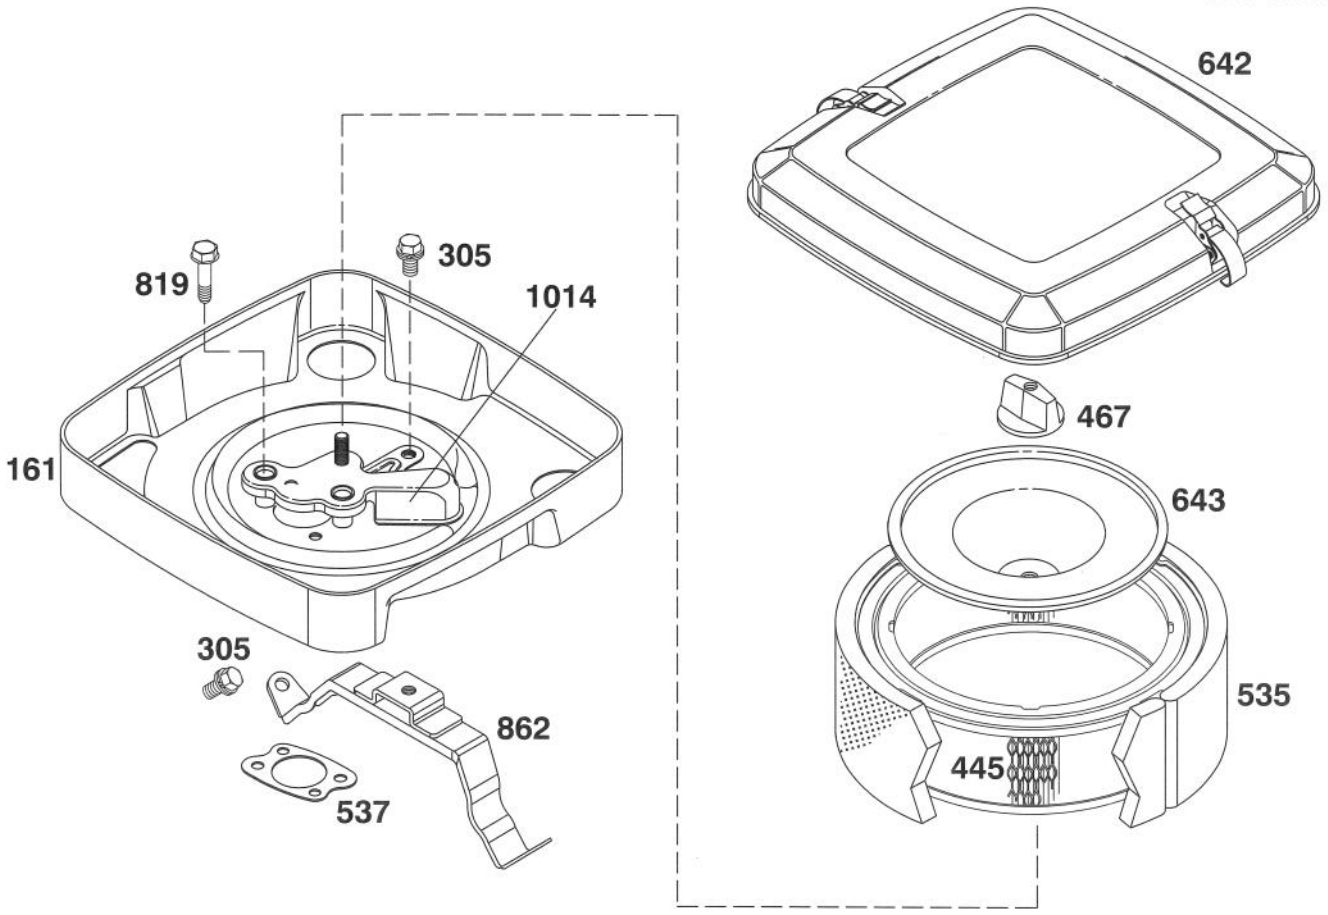


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01

Ref. No.	Part No.	Description	No. Used
161	807857	Base Assy. – Air Cleaner	
305	805406	Screw	
445	394018	Cartridge – Air Cleaner	
467	491875	Knob – Air Cleaner	
535	272490	Element – Foam	
*537	805655	Gasket – Air Cleaner	

Ref. No.	Part No.	Description	No. Used
642	807862	Cover Assy. – Air Cleaner	
643	805631	Plate – Air Cleaner	
819	805057	Screw	
862	807796	Bracket – Air Cleaner	
1014	807797	Carburetor Inlet Shield Assy.	

*Included in Gasket Set – Part No. 807989.

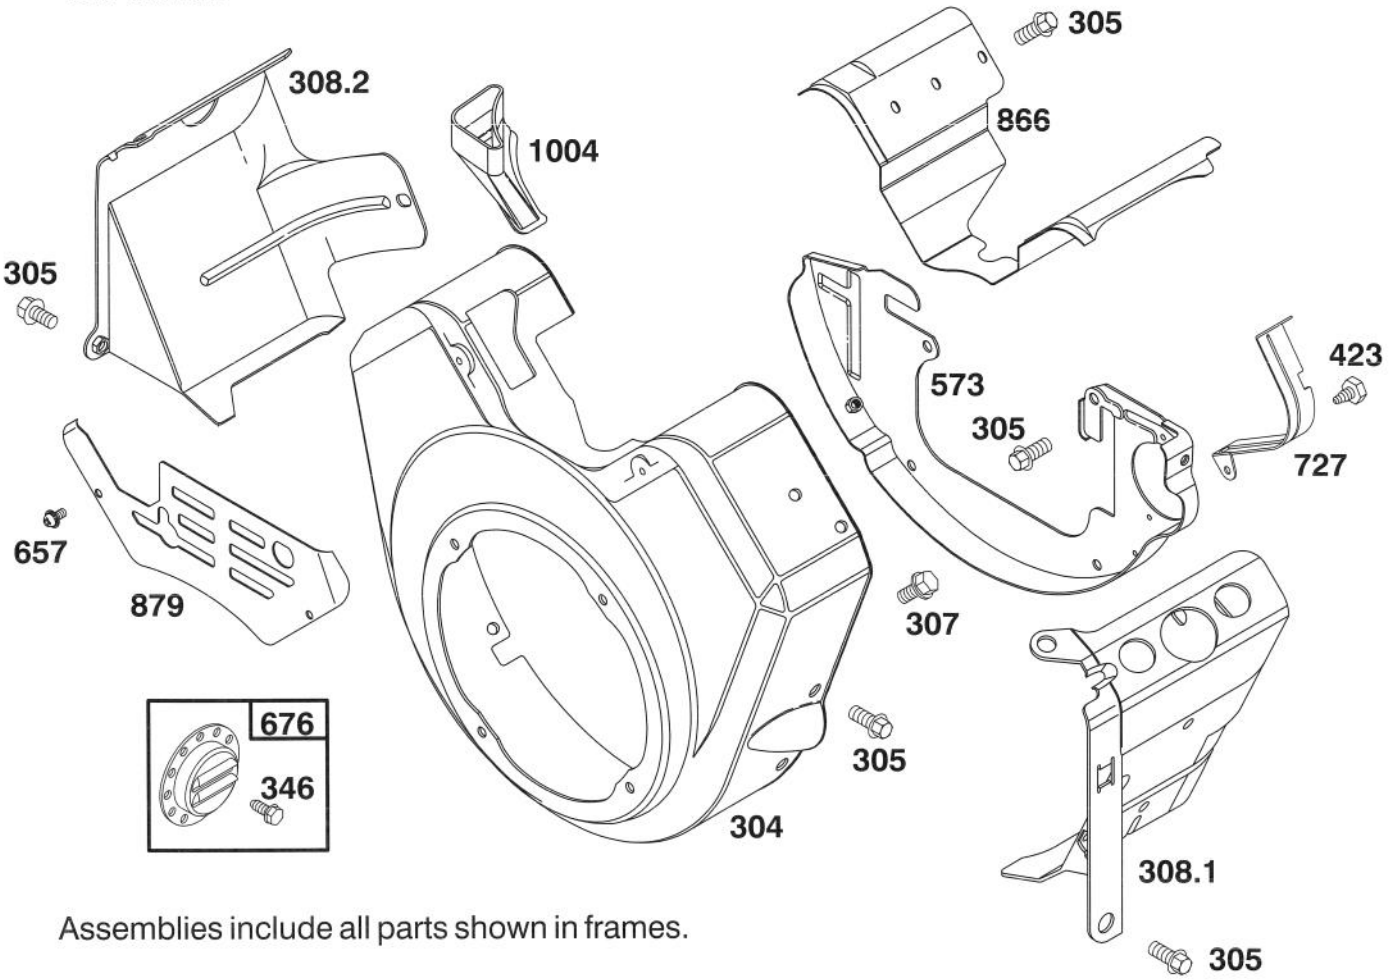


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01

Ref. No.	Part No.	Description	No. Used
304	807898	Housing – Blower	
305	805406	Screw	
307	805025	Screw	
308.1	807868	Cover – Air Guide (Cyl. #1)	
308.2	807869	Cover – Air Guide (Cyl. #2)	
346	93705	Screw	
423	805260	Screw	

Ref. No.	Part No.	Description	No. Used
573	807663	Back Plate Assembly	
657	805009	Screw	
676	397630	Deflector–Exhaust	
727	805505	Shield – Starter	
866	805738	Valley Cover – Air Guide	
879	805841	Cover – Carburetor	
1004	805632	Tube – Air Inlet	

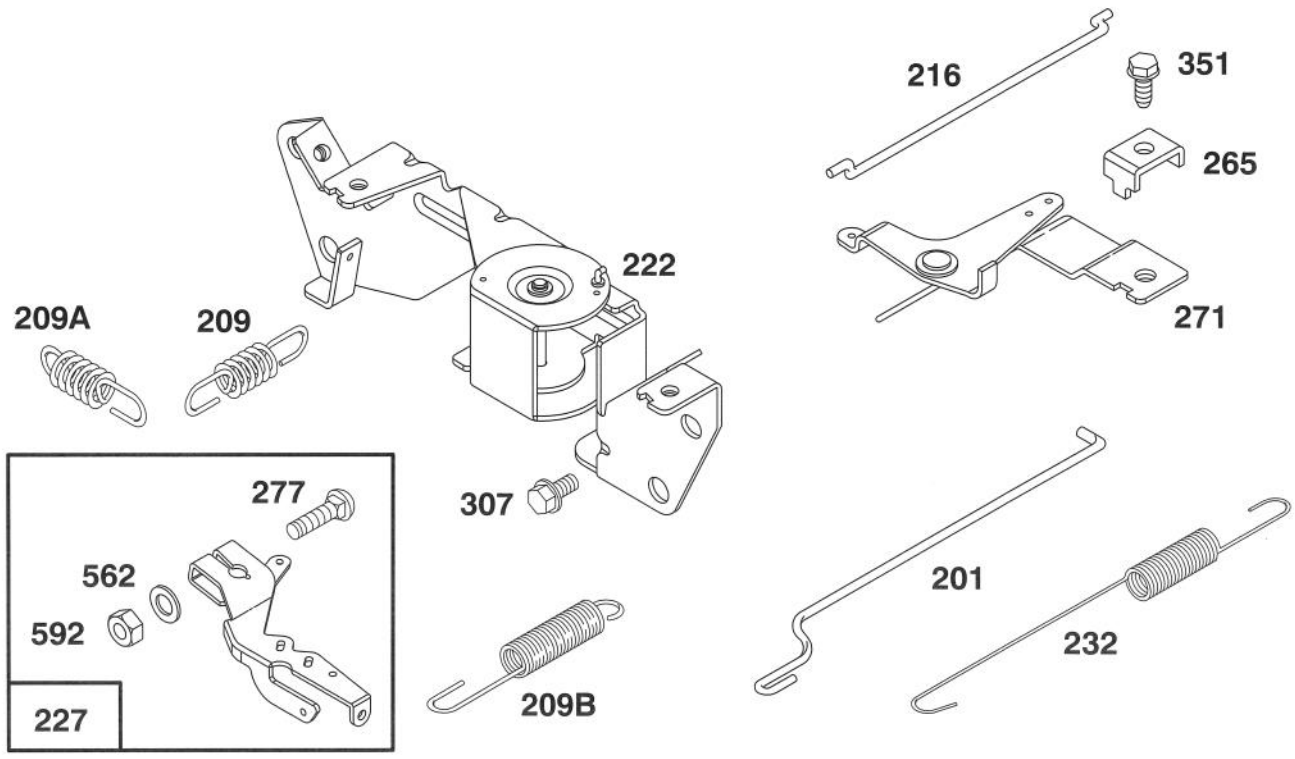


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01

Ref. No.	Part No.	Description	No. Used
201	805480	Link – Governor	
209	805464	Spring – Governor	
209A	805453	Spring – Governed Idle	
209B	805450	Spring – Governed Idle (Secondary)	
216	805439	Link – Choke	
222	807610	Bracket – Governor Control	
227	807528	Lever Assembly – Governor	

Ref. No.	Part No.	Description	No. Used
232	805465	Spring – Governor Link	
265	221535	Clamp – Casing	
271	807609	Bracket – Choke Control	
277	805018	Washer	
307	805025	Screw	
351	805169	Screw – Hex. Head	
562	805381	Bolt	
592	805383	Nut – Hex.	

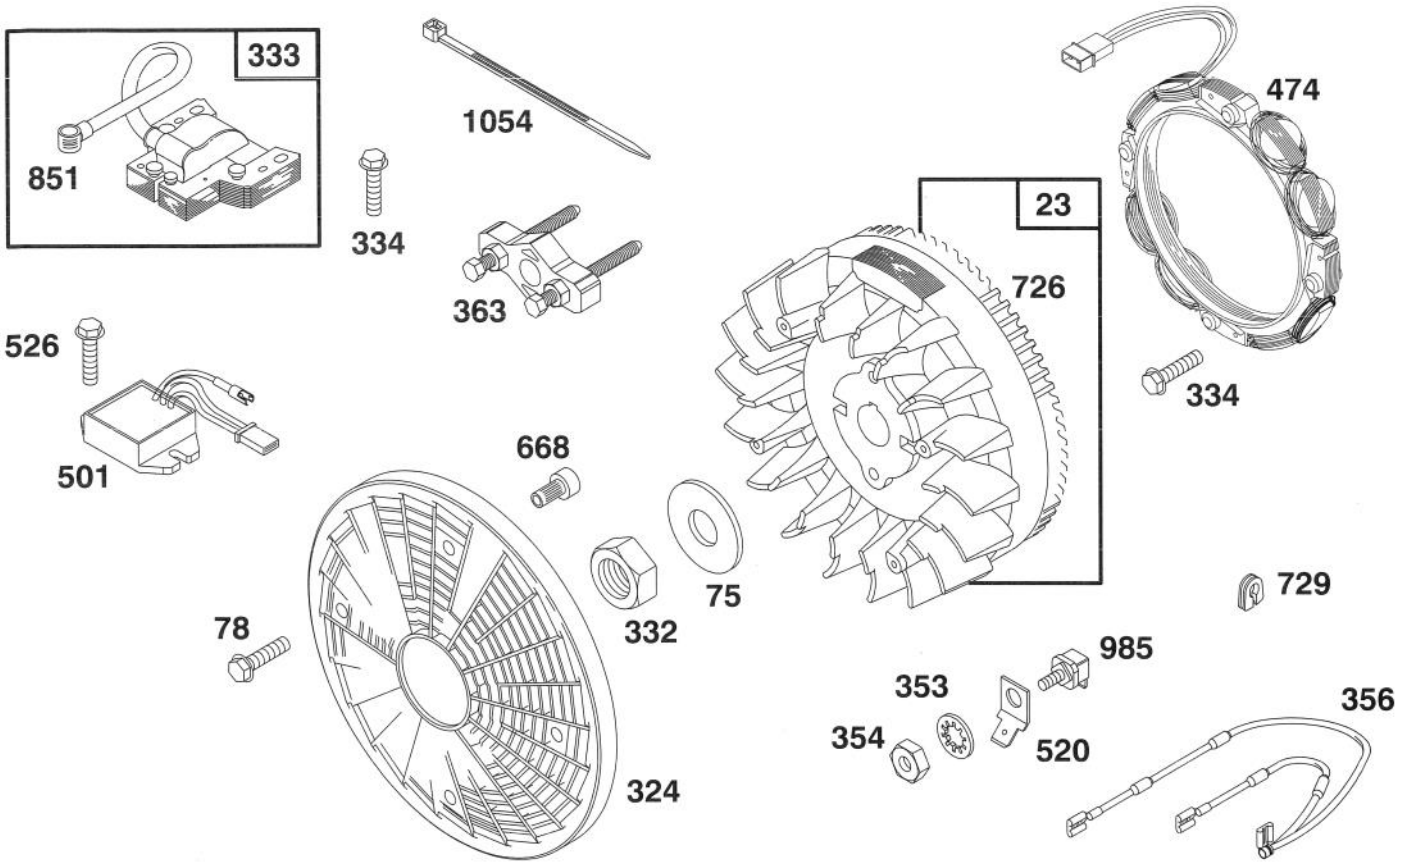


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01

Ref. No.	Part No.	Description	No. Used
23	808128	Flywheel	
75	805007	Washer – Spring	
78	805447	Screw	
324	280829	Screen – Rotating	
332	805021	Nut – Hex	
333	492341	Armature – Magneto	
334	805407	Screw – Mounting	
353	92791	Lockwasher (Internal Tooth)	
354	90576	Nut – Hex.	
356	493792	Wire Assy.	
363	19203	Puller – Flywheel	

Ref. No.	Part No.	Description	No. Used
474	393295	Stator – Alternator	
501	394890	Regulator – Alternator	
520	93722	Terminal – Ground	
526	805448	Screw – Mtg.	
668	805402	Spacer	
726	808162	Gear – Flywheel Ring	
729	805641	Grommet	
851	221798	Terminal – Ignition Cable	
985	398525	Insulator	
1054	280275	Tie – Cable	

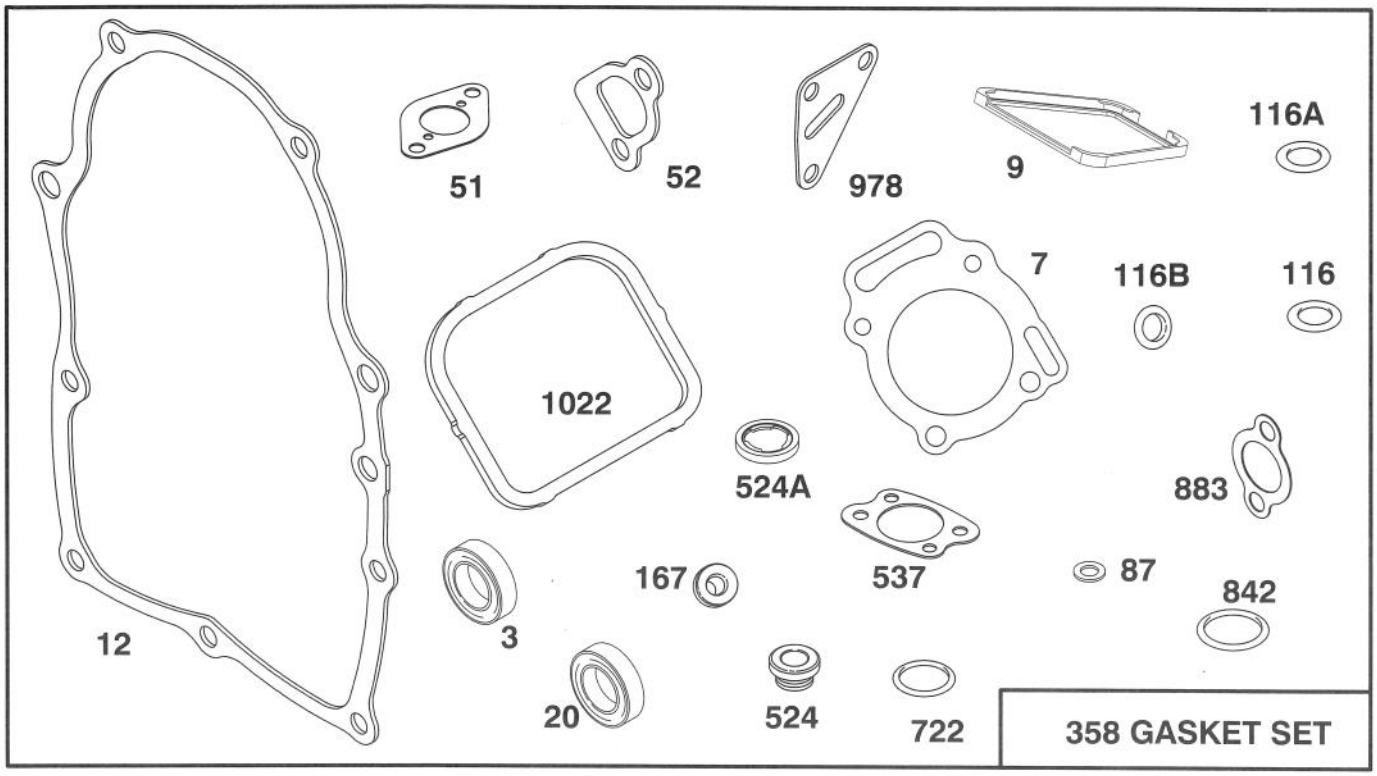


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01


Ref. No.	Part No.	Description	No. Used
*3	805101	Seal – Oil	
*‡7	807986	Gasket – Cylinder Head	
*9	805379	Gasket – Breather	
*12	805112	Gasket – Crankcase Cover	
*20	805049	Seal – Oil	
*51	805264	Gasket – Carburetor Mtg.	
*‡52	805023	Gasket – Intake Manifold	
*87	805054	Seal – Governor Shaft	
*116	805058	O–Ring (Oil Pump)	
*116A	805198	O–Ring (Crankcase Cover)	
*116B	805316	O–Ring (Pick – Up Tube)	

Ref. No.	Part No.	Description	No. Used
‡*167	805420	Washer – Valve Cover	
358	807989	Gasket Set	
*524	805259	Seal – Filler Tube	
‡*524A	271983	Seal – Filler Plug	
*537	805655	Gasket – Air Cleaner	
*722	805483	Seal – Breather Screw	
‡*842	805386	O–Ring	
*883	805024	Gasket – Exhaust Manifold	
*978	805250	Gasket – Oil Filter Adapter	
‡*1022	805028	Gasket – Valve Cover	

*Included in Gasket Set – Part No. 807989.
‡Included in Valve Overhaul Kit – Part No. 807990.

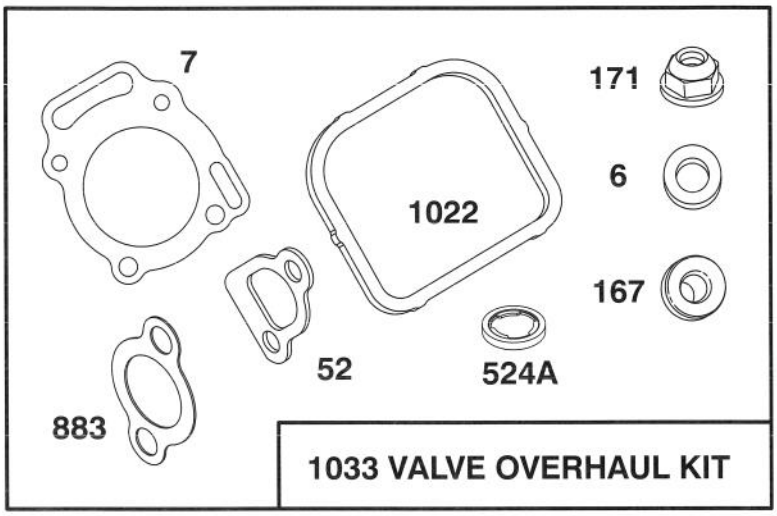



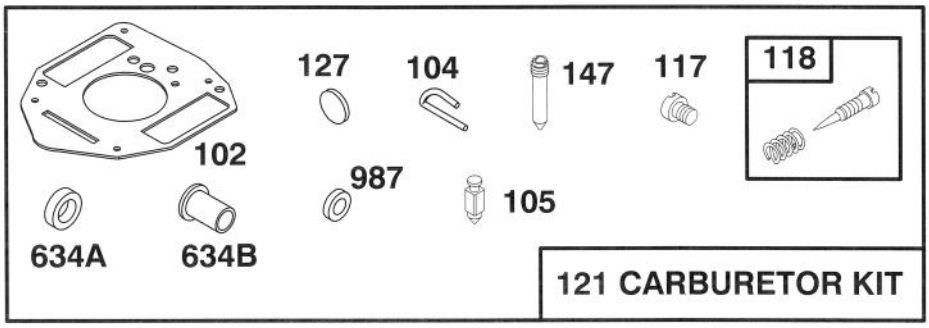


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01

Ref. No.	Part No.	Description	No. Used
‡6	805193	Washer – Cylinder Head	
*‡7	807986	Gasket – Cylinder Head	
*9	805379	Gasket – Breather	
*‡52	805023	Gasket – Carburetor Mtg.	
†102	805541	Gasket – Intake Elbow	
†104	805545	Pin – Float Hinge	
†105	805547	Valve – Fuel Inlet	
†117	805548	Jet – Main	
†118	807719	Valve – Idle Adjusting Needle	
121	807726	Carburetor Kit	
†127	805559	Plug – Welch	

Ref. No.	Part No.	Description	No. Used
†147	805553	Jet – Slow Speed	
*‡167	805420	Washer – Valve Cover	
‡171	805019	Nut – Nylock	
‡*524A	271983	Seal – Filler Plug	
†634A	805557	Collar – Throttle	
†634B	805543	Collar – Choke	
*722	805483	Seal – Breather Screw	
*‡883	805024	Gasket – Exhaust Manifold	
†987	805544	Seal – Shaft	
*‡1022	805028	Gasket – Valve Cover	
1033	807990	Overhaul Kit – Valve	
1036	807688	Gasket Set – Breather	

*Included in Gasket Set – Part No. 807989.
†Included in Carburetor Kit – Part No. 807726.
‡Included in Valve Overhaul Kit – Part No. 807990.

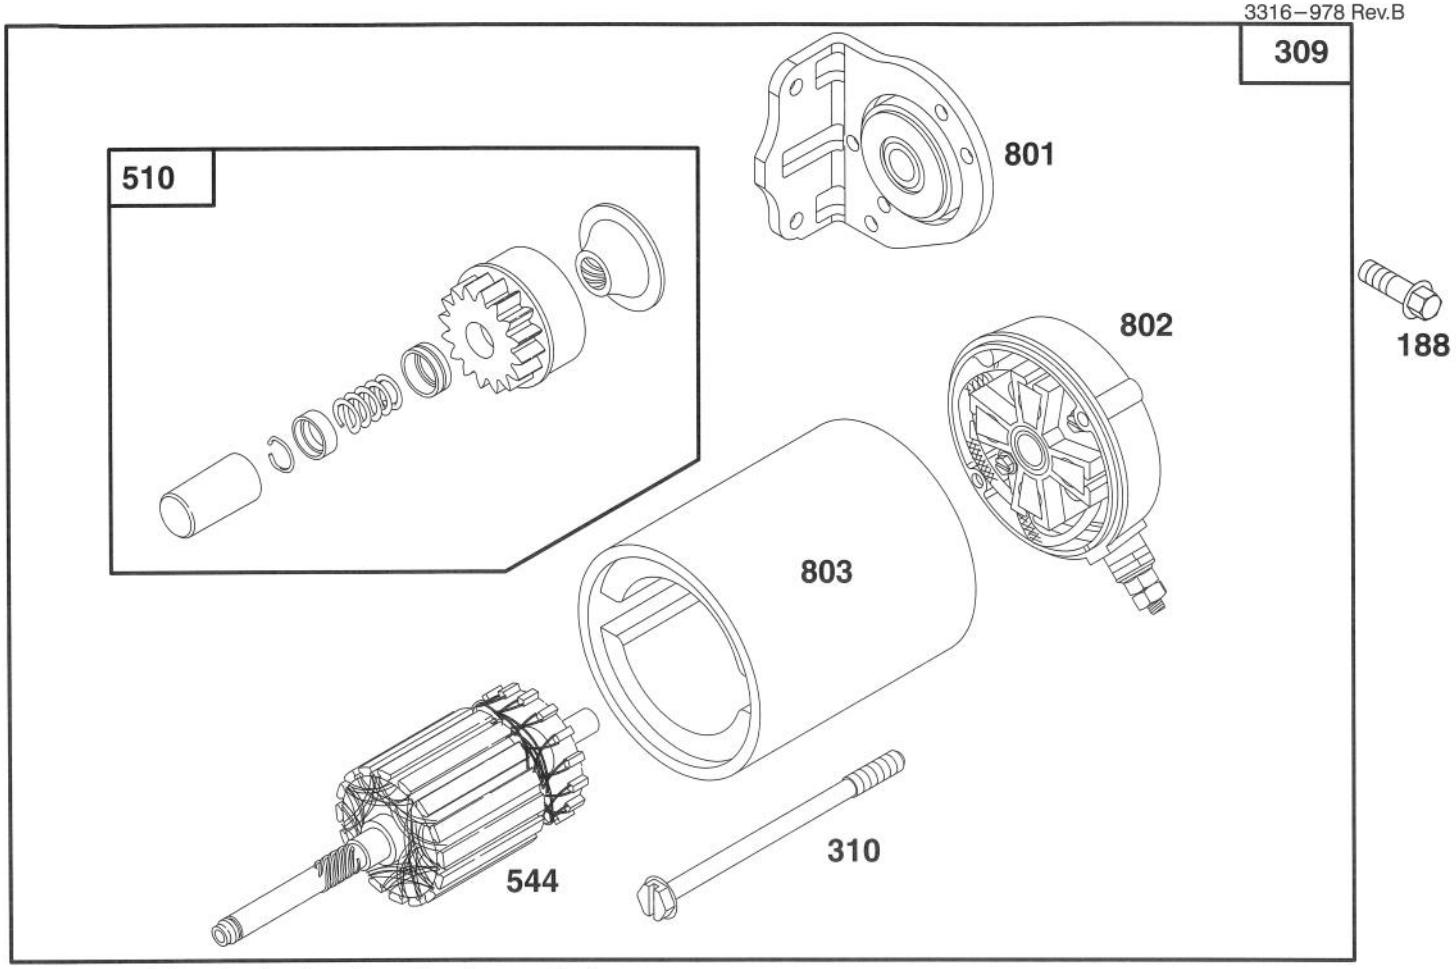

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 303447–0479–01

Ref. No.	Part No.	Description	No. Used
188	805247	Screw – Hex. Head	
309	808106	Motor – Starting	
310	496880	Bolt – Thru	
510	496881	Drive – Starter	
544	496816	Armature – Starter	

Ref. No.	Part No.	Description	No. Used
801	496814	Cap Assy. – Drive	
802	496813	Cap Assy. – Commutator **Includes:** 496887 Brush Set	
803	496815	Housing – Starter	

INTERNATIONAL PARTS REFERENCE

EUROPEAN PARTS KIT NO. 93–7649

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	EUROPEAN
Decal Parking Brake	Footrest Plate	27–2830	93–8062
Decal Hydraulic Oil	Seat Back	58–6530	93–8067
Decal Warning	Cutting Unit Pull Frame	62–5070	93–8064
Decal Engine RPM	Air Cleaner	71–3620	93–8073
Decal Hot Surface	Engine Housing	63–8440	93–8069
Decal Warning	Steering Arm	83–1790	93–8063
Decal Traction	Right Hand Shield	83–1850	93–8065
Decal Service	Seat Back	92–9779	DANISH 93–7260 DUTCH 93–7261 ITALIAN 84–9280 SPANISH 84–9240 GERMAN 84–9260 FRENCH 84–9250 SWEDISH 84–9270 PORTUGESE 93–7257 NORWEGIAN 93–7258 FINNISH 93–7259
Decal Steering Arm	Steering Arm	83–2050	93–8068
Decal ANSI	Frame Tube	88–6700	93–8074
Decal CE Mark	Panel	–	93–7252
Decal Bolt Eccentric	SPA CU Side Plate	77–0490	93–6691
Decal Traction Speed	Left Hand Panel	83–2260	93–8066
Plate Control	Control Panel	83–0850	93–8061
Cap Fuel	Fuel Tank	93–3101	93–7170

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	EUROPEAN
Assy. Foot Shield	Foot Rest Area	–	93–7421
Decal Danger	Battery Case	–	93–6668
Decal Danger	Battery Cap	–	93–7276
Decal Caution	Grooming Unit	–	93–7292
Bracket WA. Lock Out, Mow	Left Front Frame	–	93–9901
Pin Lock Out, Mow	Left Front Frame	–	93–9903
Arm Lock Out, Mow	Left Front Frame	–	93–9904
Spacer Lock Out, Mow	Left Front Frame	–	93–9907
Nut – Lock	Left Front Frame	–	3296–39
Washer, Flat	Left Front Frame	–	3256–38
Screw–Cap Hex. Head	Left Front Frame	–	323–13
Spring Compression	Left Front Frame	–	56–7730

INTERNATIONAL PARTS REFERENCE
JAPANESE KIT NO. 83–2600

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Parking Brake	Footrest Plate	27–2830	83–2480
Decal Hydraulic Oil	Seat Back	58–6530	84–3180
Decal Warning	Cutting Unit Pull Frame	62–5070	84–6560
Decal Engine RPM	Air Cleaner	71–3620	83–2550
Decal Hot Surface	Engine Housing	63–8440	83–2560
Decal Warning	Steering Arm	83–1790	83–2520
Decal Traction	Right Hand Shield	83–1850	83–2540
Decal Service	Seat Back	92–9779	83–2490
Decal Steering Arm	Steering Arm	83–2050	83–2510
Decal ANSI	Frame Tube	88–6700	84–3020
Decal Traction Speed	Left Hand Panel	83–2260	83–2500
Plate Control	Control Panel	83–0850	83–2570

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–0348	Bushing – Sleeve	3	11	6
3–0348	Bushing – Sleeve	4	14	6
3–0348	Bushing – Sleeve	6	22	6
3–1506	Bushing – Flange	3	16	4
3–1506	Bushing – Flange	4	30	4
3–1506	Bushing – Flange	6	38	4
3–4808	Nut – Wing	36	1	1
3–6657	Clip – Skid	36	4	2
3–6685	Spring – Compression	20	17	1
5–0946	Key – Square	28	12	1
5–0946	Key – Square	29	16	1
5–0946	Key – Square	30	16	1
5–1226	Washer – Shim	3	10	2
5–1226	Washer – Shim	4	16	2
5–1226	Washer – Shim	6	24	2
5–3934	Bolt – Castor	31	20	1
8–7710	Ball Joint Receiver Assy.	4	4	2
8–7710	Ball Joint Receiver Assy.	6	4	2
8–7710	Ball Joint Receiver Assy.	3	25	2
10–6060	Pin – Lift Cylinder	3	7	1
10–6060	Pin – Pivot	4	19	1
10–6090	Pin – Pivot	4	33	1
10–6090	Pin – Pivot	3	37	1
10–6090	Pin – Pivot	6	41	1
10–6110	Pin – Hinge	3	3	1
10–6110	Pin – Pivot	4	24	1
10–6821	Brake Drum Assembly	8	*	2
10–6830	Stud – Drive	31	17	4
10–6850	Drum – Brake	8	6	2
10–6870	Hub – Wheel	8	5	2
10–7070	Key – Square	28	20	1
10–7820	Pivot Hinge Assembly	3	12	1
10–7820	Pivot Hinge Assembly	4	25	1
10–7820	Pivot Hinge Assembly	6	33	1
10–7850	Latch – Parking Brake	1	23	1
10–7880	Hinge – Upper	1	8	1
10–7890	Hinge – Lower	1	22	1
10–8100	Strap – Brake Shaft	1	31	2
10–8110	Washer – Thrust	3	9	6
10–8110	Washer – Thrust	4	15	6
10–8110	Washer – Thrust	6	23	6
10–8140	Spring – Torsion	1	7	1
11–0160	Roller Shaft Screw Assy.	3	14	2
11–0160	Roller Shaft Screw Assy.	4	28	2
11–0160	Roller Shaft Screw Assy.	6	36	2
12–3270	Screw – Hex. Washer Hd.	27	17	4
12–3270	Screw – Hex. Washer Hd.	11	38	1
12–3270	Screw – Thread Forming	13	50	1
12–9140	Decal	35	1	1
18–6320	Washer – Steering	31	7	4
20–0070	Tube	36	5	1
20–0080	Rod	36	7	1
20–0110	Bracket – Alignment	36	2	1
21–8470	Shaft – Roller	3	21	1
21–8470	Shaft – Roller	4	36	1
21–8470	Shaft – Roller	6	44	1
22–6090	Washer – Thrust	35	4	1
23–8840	Puller – Bolt	35	3	1
23–8850	Tube – Support	35	5	1
23–8860	Pin – Bearing Rplcmnt.	35	6	1
23–8880	Driver – Bearing	35	1	2
26–3790	Nut – Lock	8	4	2
27–1960	Hub – Engine	28	21	1
27–1970	Hub – Pump	28	22	1
27–2270	Rod – Brake Adjusting	1	29	2
27–2320	Bearing – Flange	11	7	2
27–2320	Bearing – Flange	1	33	2
27–2380	Spacer	21	32	2
27–2540	Spacer – Hub	6	31	1
27–2550	Pin – Pivot	6	27	1
27–2830	Decal – Parking Brake	1	9	1
27–6600	Spacer – Coupling	28	15	4
28–1400	Battery	21	11	1
28–3680	Tire	8	2	2
28–3680	Tire	31	9	1
28–4210	Solenoid – Starter	21	5	1
28–7890	Module – Interlock	22	26	1
28–8080	Boot Terminal	21	13	1
29–9080	Handle	35	3	1
29–9090	Hose – Handle	35	4	1
36–4310	Brush	35	5	1
37–8130	Basket – Grass	2	*	3
38–0410	Nut – Hex.	15	53	1
38–0410	Nut – Hex.	17	59	1
39–9600	Clamp – Mounting	22	9	1
42–2680	Race R. Detent	14	46	1
43–2830	Nut – Hex	27	33	1
43–5220	Ring – Retaining	7	10	1
43–5230	Shaft & Clevis	7	11	1
43–5930	Washer – Lock	27	25	2
43–8600	Spring – Compression	20	21	1
43–8610	Seat – Ball	20	20	1
43–8620	Guide – Switch	20	23	1
43–8860	Plunger – Switch	20	22	1
43–8870	Boot – Switch	20	26	1
43–9071	Seat Switch Assembly	20	*	1
44–0870	Shaft – Cam	11	5	1
44–2230	Coupling – Rubber	28	16	1
44–5560	Head – Oil Filter	21	27	1
46–8560	Screw – Self Taping	21	20	3
47–2890	Bushing – Sleeve	18	20	2
47–5320	Lever – Control	11	40	1
47–6990	Nut – Steering Wheel	18	10	1
48–7610	Screw – Cap Hex. Hd.	25	9	1
48–7620	Screw – Cap Hex. Hd.	27	36	1
49–5430	Rod – Control	11	1	1
49–5430	Rod – Control	1	4	1
49–5880	Shaft – Seat Support	20	27	1
49–6110	Guard – Transfer Rod	1	6	1
49–6120	Pad – Footrest	1	13	1
49–6200	Lever – Cutting Control	2	42	1
49–6220	Bracket – Control Arm	11	9	1
49–6250	Bracket – Traction Pivot	11	35	1
49–6260	Assy. – Pivot, Traction	11	21	1
49–6290	Shaft – Traction Pivot	11	37	1
49–6440	Pedal – Forward	11	42	1
51–0350	Pin – Seat Spring	20	16	1
51–0780	Slider – Seat	20	31	1
51–0790	Adjuster – Seat	20	6	1
52–1990	Piston	5	3	1
52–2720	Roller Assembly	3	20	1
52–2720	Roller Assembly	4	35	1
52–2720	Roller Assembly	6	43	1
52–5860	Collar – Spool	17	51	1
52–5880	Ball – Steel	14	47	12
52–5900	Screw – Fillister Hd.	16	37	4
52–9230	Ring – Retaining	19	2	1
52–9260	Screw – Set	19	26	1
52–9270	Seat – Ball Check	19	24	1
52–9280	Ball – Check	19	22	1
52–9290	Retainer – Ball Check	19	21	
56–2230	Hose – Fuel	25	17	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
56–7720	Bolt – Battery	21	17	2
56–7970	Clamp Half – Tube	2	45	2
57–6140	Clamp Half – Tube	8	20	2
57–6220	Link	11	17	5
57–7650	Spring – Torsion	4	11	1
57–7650	Spring – Torsion	6	18	1
57–7650	Spring – Torsion	3	32	1
58–6520	Decal – Grease	31	36	2
58–6530	Decal – Hydraulic Oil	20	33	1
59–6730	Race – Bearing	19	8	2
59–6740	Bearing – Needle Thrust	19	9	1
59–6830	Centering Pin Kit	19	20	1
61–3310	Plate – Logo	21	21	1
62–2390	Bar – Lift L.H.	3	30	1
62–2420	Bar – Lift	6	8	1
62–2420	Bar – Lift	4	9	1
62–2440	Lift Arm Assembly	4	8	1
62–2460	Lift Arm Assembly L.H.	3	29	1
62–5070	Decal – Danger	3	13	1
62–5070	Decal – Danger	4	3	1
62–5070	Decal – Danger	6	3	1
63–3810	Hose – Hydraulic	33	1	1
63–3820	Hose – Hydraulic	33	2	1
63–3830	Hose – Hydraulic	33	13	1
63–3840	Hose – Hydraulic	33	5	1
63–3840	Hose – Hydraulic	12	36	1
63–3850	Hose – Hydraulic	12	31	1
63–3850	Hose – Hydraulic	3	39	1
63–3870	Hose – Hydraulic	33	16	1
63–3880	Hose – Hydraulic	12	18	1
63–3880	Hose – Hydraulic	12	29	1
63–3880	Hose – Hydraulic	4	39	2
63–4020	Tube – Hydraulic	33	17	1
63–4020	Tube – Hydraulic	12	40	1
63–4030	Tube – Hydraulic	33	18	1
63–4030	Tube – Hydraulic	12	41	1
63–4040	Hydraulic Tube Assembly	33	4	1
63–4040	Tube – Hydraulic	12	35	1
63–4050	Fitting – Tee	12	42	2
63–8360	Key – Ignition	22	17	1
63–8410	Washer – Flat	25	4	4
63–8410	Washer – Flat	24	36	3
63–8440	Decal – Warning Hot	27	34	1
63–8750	Pin – Pivot	6	9	1
63–8750	Pin – Pivot	4	10	1
63–8750	Pin – Pivot	3	33	1
65–4860	Head	5	9	1
65–6390	Washer – Thrust	18	13	1
65–8320	Bar – Gauge	2	*	1
66–2950	Gauge – Hourmeter	22	5	1
67–1300	Decal – TORO	21	39	1
67–8113	Cap – End	19	18	1
68–4940	Hydraulic Pump Assembly	28	9	2
68–5100	Rod – Seat Prop	20	10	1
68–5130	Steering Wheel Assembly	18	11	1
68–5140	Cap – Steering Wheel	18	9	1
68–5260	Fitting – Manifold Tee	12	37	1
68–5310	Clip – Seat Rod	20	12	1
68–5380	Lift Arm Assembly	6	21	1
68–5560	Pin – Cylinder Pivot	6	26	1
68–5880	Hose – Hydraulic	21	30	1
68–6150	Breather	24	44	1
69–9760	Plate – Cover	2	50	1
70–2770	Head	7	8	1
70–2780	Piston	7	4	1
70–7130	Tube Assy.	12	3	1
70–7150	Hose – Hydraulic	13	48	1
70–8130	Barrel	7	1	1
70–8250	Drive	19	16	1
70–8610	Hose – Hydraulic	13	51	1
70–9800	Reel Motor Assembly	33	8	3
70–9840	Shoe – Brake	8	8	4
70–9850	Clip – Retaining	8	23	2
70–9860	Cam – Brake	8	27	2
70–9870	Plate – Backing	8	10	2
70–9880	Spring – Return	8	7	4
71–0990	Orifice	12	43	1
71–1500	Brake Assembly	8	*	2
71–1510	Arm – Brake	8	24	2
71–3620	Decal – Engine RPM	27	13	1
72–3850	Seal – Filter	21	28	1
72–4320	Switch – Ball	20	18	1
72–4380	Seal Kit	34	*	1
72–4390	Repair Kit	34	*	
72–4790	Hold–Down – Battery	21	16	1
74–0720	Tube – Manual	20	3	1
74–3570	Filter – Hydraulic Oil	21	29	1
74–3730	Spacer – Hub	31	11	2
74–3830	Hose – Hydraulic	33	12	1
74–3830	Hose – Hydraulic	12	28	1
74–9100	Pad – Forward Pedal	11	25	1
74–9110	Pad – Reverse Pedal	11	23	1
75–0540	Tether – Cap	24	9	1
75–9440	Hub – Wheel	31	15	1
75–9990	Motor – Hydraulic	8	22	2
76–0800	Seal Kit	9	*	1
76–0800	Seal Kit	10	*	1
76–0810	Housing Assembly	9	*	1
76–0810	Housing Assembly	10	*	1
76–0840	Manifold	9	22	1
76–0840	Manifold	10	22	1
76–0850	Bearing – Thrust	9	12	1
76–0850	Bearing – Thrust	10	12	1
76–0860	Shaft – Coupling	9	11	1
76–0860	Shaft – Coupling	10	11	1
76–0870	Plate – Wear	9	18	1
76–0870	Plate – Wear	10	18	1
76–0880	Commutator Assembly	9	*	1
76–0880	Commutator Assembly	10	*	1
76–0940	End Cover Assembly	10	24	1
76–0940	End Cover Assembly	9	24	1
76–0960	Link – Drive	9	13	7
76–0970	Rotor Set	9	*	1
76–1010	Screw – Cap Hex. Hd.	9	14	1
76–1850	Clevis	5	13	1
76–1860	Shaft	5	6	1
77–0480	Screw – Traction Stop	11	34	1
80–9330	Audio Alarm Assembly	22	25	1
83–0010	Engine Assembly	27	15	1
83–0020	Ignition Switch Assembly	22	14	1
83–0030	Control – Throttle	22	12	1
83–0040	Control – Choke	22	13	1
83–0060	Lift – Pivot	1	26	1
83–0080	Spring – Torsion	1	25	1
83–0140	Pedal – Mow	2	38	1
83–0160	Shaft – Brake	2	48	1
83–0190	Cover – R.H.	8	18	1
83–0200	Cover – L.H.	1	17	1
83–0540	Pedal – Traction	11	24	1
83–0580	Rod – Traction Control	11	32	1
83–0590	Traction Handle Assembly	11	12	1
83–0630	Arm – Traction Pivot	11	29	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
83–0640	Plate – Footrest	1	12	1
83–0650	Arm – Steering	18	3	1
83–0700	Handle – Lockup	18	18	1
83–0730	Spacer – Lockup	18	15	1
83–0740	Disc – Friction	18	14	2
83–0750	Screw – Cap Hex. Hd. L.H.	18	6	1
83–0760	Plate – Lockup	18	16	1
83–0780	Support – Steering Valve	18	4	1
83–0810	Cover – Steering Valve	18	25	1
83–0820	Gauge – Ammeter	22	4	1
83–0830	Panel – Control Upper	21	33	1
83–0840	Fender – L.H.	21	19	1
83–0850	Plate – Control Panel	22	2	1
83–0870	Fitting – Hydraulic Straight	24	32	3
83–0910	Hose – Hydraulic	24	30	2
83–0910	Hose – Pump	28	11	2
83–1030	Mount – Engine	27	4	3
83–1040	Washer – Mount	27	2	3
83–1050	Spacer – Mount	27	3	2
83–1060	Adapter – Pump	27	10	1
83–1080	Pipe – Exhaust	27	7	1
83–1100	Harness – Wire (Main)	23	1	1
83–1100	Harness – Wire (Main)	22	8	1
83–1110	Harness – Wire (Engine)	23	2	1
83–1150	Wire – Engine Ground	23	5	1
83–1160	Wire – Solenoid–Starter	23	3	1
83–1170	Hose – Hydraulic	12	22	1
83–1170	Hose – Hydraulic	28	28	1
83–1180	Hose – Hydraulic	12	6	1
83–1180	Hose – Hydraulic	28	8	1
83–1190	Hose – Hydraulic	28	1	2
83–1190	Hose – Hydraulic	12	10	2
83–1200	Tube Assy.	12	5	1
83–1220	Plate – Clamp	8	21	1
83–1270	Seat Support Assembly	20	7	1
83–1320	Filter – Fuel	25	13	1
83–1350	Hose – Hydraulic	28	7	1
83–1350	Hose – Hydraulic	18	26	2
83–1350	Hose – Hydraulic	31	28	1
83–1350	Hose – Hydraulic	13	45	1
83–1360	Hose – Hydraulic	18	27	1
83–1360	Hose – Hydraulic	31	30	1
83–1370	Hose – Hydraulic	18	28	1
83–1390	Fitting – Fuel Shut–Off	25	15	1
83–1400	Shield – Muffler	27	16	1
83–1420	Column – Steering	18	23	1
83–1430	Hose – Hydraulic	21	23	1
83–1430	Hose – Hydraulic	24	34	1
83–1450	Sensor – Oil Level	24	3	1
83–1460	Solenoid Valve Assembly	24	28	1
83–1470	Washer – Neoprene	24	18	4
83–1520	Screen – Filler	24	6	1
83–1530	Bracket – Alarm	22	23	1
83–1550	Spacer – Tank (Short)	24	17	2
83–1560	Spacer – Tank (Long)	24	23	2
83–1630	Bracket – Muffler Support	27	24	1
83–1640	Rod End Assembly	31	6	1
83–1660	Switch Assembly	22	6	1
83–1670	Fitting – Special	12	27	1
83–1680	Hose – Hydraulic	6	13	1
83–1680	Hose – Hydraulic	12	30	1
83–1690	Hose – Hydraulic	12	21	1
83–1690	Hose – Hydraulic	3	40	1
83–1700	Bushing – Flange	8	33	2
83–1700	Bushing – Flange	18	35	1
83–1780	Decal – Service	20	34	1
83–1790	Decal – Warning	18	5	1
83–1830	Cover – R.H.	21	2	1
83–1840	Cover – R.H.	20	32	1
83–1850	Decal – Traction	21	38	1
83–1860	Centering Spring Kit	19	12	1
83–1870	Gerotor	19	17	1
83–1880	Control Parts Assembly	19	*	1
83–1890	Switch – Ball	15	54	1
83–1890	Switch – Ball	17	60	1
83–1940	Guard – Pump	28	30	1
83–2000	Spool – Valve	24	42	1
83–2010	Coil – Valve	24	43	1
83–2030	Plate – Filler	22	3	1
83–2040	Hose – Fuel	25	14	1
83–2041	Hose – Fuel	25	11	1
83–2050	Decal – Steering Arm	18	32	1
83–2070	Hose – Valve	24	14	1
83–2080	Hose – Valve–Tank	24	29	1
83–2090	Hose – Overflow	24	15	1
83–2100	Tank – Auxiliary Hydraulic	24	26	1
83–2200	Nut – Special	25	8	1
83–2220	Deflector – Exhaust	27	20	1
83–2230	Screw – Cap Hex. Hd.	27	22	4
83–2240	Arrestor – Spark	27	*	1
83–2250	Guage – Sight	24	25	1
83–2280	Timer – Relay	22	27	1
83–2310	Shield	27	35	1
83–2330	Hydraulic Cylinder Assy.	31	33	1
83–2340	Cap – Threaded	32	2	2
83–2350	Cap – Head, Thread	32	5	2
83–2360	Assembly – Rod	32	9	1
83–2370	Assembly – Barrel	32	12	1
83–2380	Kit – Seal Repair	32	*	1
83–2390	Pad – Tank	24	2	1
83–2400	Spacer – Tank	24	1	2
83–2420	Wire – Solenoid–Battery	23	4	1
83–2450	Hose – Hydraulic	12	1	1
83–2450	Hose – Hydraulic (Top)	8	34	1
83–2460	Hose – Hydraulic	12	4	1
83–2460	Hose – Hydraulic (Bottom)	8	*	1
83–2580	Cylinder – Lift	3	6	1
83–2580	Hydraulic Cylinder Assy.	4	22	1
83–2590	Bolt – Shoulder	2	47	1
83–7230	Hydraulic Cylinder Assembly	6	10	1
84–2000	Bracket – Brake	8	12	2
84–2203	Control Valve Assembly	17	*	1
84–2203	Control Valve Assembly	12	16	1
84–5300	Nut – Jam	31	5	1
85–6540	Stud – Drive	8	28	8
85–8120	Plate – Engine Mount	27	28	1
86–5360	Repair Kit	7	*	1
86–5390	Seal Kit	5	*	1
88–9500	Needle Valve Assembly	13	*	1
88–9620	Decal – Greensmaster 3100	2	46	1
88–9630	Lift Pivot Bracket R.H.	2	40	1
88–9640	Lift Pivot Bracket L.H.	1	28	1
88–9660	Shaft – Cutting Control	2	36	1
88–9700	Hose – Hydraulic	6	15	1
88–9700	Hose – Hydraulic	12	20	1
92–0585	Pull Arm Assembly R.H.	3	19	1
92–0585	Pull Arm Assembly R.H.	4	34	1
92–0585	Pull Arm Assembly R.H.	6	42	1
92–0586	Pull Arm Assembly L.H.	3	17	1
92–0586	Pull Arm Assembly L.H.	4	31	1
92–0586	Pull Arm Assembly L.H.	6	39	1
92–0587	Fitting – Valve Body	12	17	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–0588	Valve – Needle	13	53	1
92–1180	Seat Assembly	20	5	1
92–2545	Seals – Spool	15	*	1
92–2545	Seals – Spool	17	*	1
92–2546	Wiper – Seal	14	25	4
92–2546	Wiper – Seal	17	64	5
92–2547	Plate – Seal Retainer	16	18	5
92–2547	Plate – Seal Retainer	14	24	4
92–2548	Seals – Spool	15	*	1
92–2548	Seals – Spool	17	*	1
92–2549	Seals – Spool	17	*	1
92–3058	Spring – Centering	14	41	1
92–3148	Spring	16	23	1
92–4063	Plug – Filler Cap	24	7	1
92–6533	Kit – Cushion	20	35	1
92–6534	Shell	20	36	1
92–7189	Tank – Fuel	25	2	1
92–8020	Adapter – Breather	24	21	1
92–8690	Steering – Valve Assembly	18	24	1
92–8691	Bushing – Seal Gland	19	3	1
92–8695	Seal Kit	19	*	1
92–8696	Screw – Torx Hd.	19	19	7
92–8697	Plate – Wear	19	15	1
92–8966	Reservoir – Hydraulic	24	5	1
92–9164	Frame Assembly	21	18	1
92–9176	Frame – Pull L.H.	3	24	1
92–9177	Frame – Pull R.H.	4	1	1
92–9177	Frame – Pull Rear	6	1	1
92–9199	Motor – Hydraulic	8	22	2
92–9761	Link – Drive	10	13	7
92–9762	Screw – Cap Hex. Hd.	10	14	1
92–9764	Hydraulic Pump Assembly	28	9	2
92–9766	Plate – Gear 66B	30	14	1
92–9772	Shaft – Drive	30	20	1
92–9773	Gear – 66B	30	21	1
92–9774	Idler Shaft – Gear Assy.	30	12	1
93–1386	Section #5 Assembly	17	*	1
93–2524	Fork – Castor	31	19	1
93–3101	Cap – Fuel	25	1	1
93–3651	Retainer – Boot	14	22	2
93–3651	Retainer – Boot	16	47	3
93–3652	Boot – Spool Assembly	15	*	2
93–3652	Boot – Spool Assembly	17	*	3
93–7160	Cap – Hydraulic Reservoir	24	8	1
93–7629	Pad – Brake	2	49	1
93–7630	Pad – Mow	2	39	1
93–7631	Pad – Lift	2	37	1
93–8075	Decal – Mow/Lift	1	14	1
217–60	Rim	8	3	2
217–60	Rim	31	10	1
218–461	Nut – Hex.	22	16	1
218–461	Nut – Hex.	20	25	2
218–594	Fuse – 20 Amp	22	7	1
2112–11	Clamp – Muffler	27	14	1
232–24	Stem – Valve	8	1	2
232–24	Valve Stem w/Cap	31	18	1
233–48	Knob	11	11	1
233–48	Knob	18	17	1
237–7	Seal – O–Ring	20	24	1
237–21	Seal – O–Ring	28	6	1
237–21	Seal – O–Ring	12	19	6
237–21	Seal – O–Ring	18	29	4
237–21	Seal – O–Ring	31	31	2
237–22	Seal – O–Ring	28	2	3
237–22	Seal – O–Ring	12	11	6
237–22	Seal – O–Ring	33	11	5
237–30	Seal – O–Ring	33	3	5
237–30	Seal – O–Ring	12	7	2
237–30	Seal – O–Ring	20	19	1
237–30	Seal – O–Ring	28	27	1
237–35	Seal – O–Ring	6	11	2
237–42	Seal – O–Ring	28	4	4
237–42	Seal – O–Ring	33	9	3
237–42	Seal – O–Ring	12	15	4
237–42	Seal – O–Ring	18	31	4
237–54	O–Ring	16	3	6
237–54	O–Ring	14	6	8
237–58	Seal – O–Ring	12	34	1
237–65	Seal – O–Ring	12	2	6
237–65	Seal – O–Ring	8	15	4
237–78	Seal – O–Ring	6	14	2
237–78	Seal – O–Ring	31	32	2
237–78	Seal – O–Ring	3	38	2
237–78	Seal – O–Ring	4	38	2
237–79	Seal – O–Ring	33	7	3
237–79	Seal – O–Ring	12	9	4
237–79	Seal – O–Ring	24	11	5
237–80	Seal – O–Ring	24	4	1
237–80	Seal – O–Ring	8	13	4
237–80	Seal – O–Ring	28	25	1
237–80	Seal – O–Ring	12	32	3
237–81	Seal – O–Ring	12	38	1
237–101	Seal – O–Ring	21	26	2
237–123	Seal – O–Ring	24	24	1
237–143	Grommet	21	40	2
237–177	Seal – O–Ring	24	33	3
240–11	Grommet	25	3	4
240–11	Grommet	24	37	3
242–50	Nut – Lug	31	8	4
242–50	Nut – Lug	8	29	8
2410–18	Plug	35	2	1
2410–73	Retainer – Tether	24	10	1
2411–42	Joint – Ball L.H. Thread	11	30	1
2411–43	Joint – Ball R.H. Thread	11	33	1
2412–34	Clamp – Hose	28	10	2
2412–34	Clamp – Hose	21	24	2
2412–34	Clamp – Hose	24	31	3
2412–36	Clamp – Hose	24	13	4
2412–36	Clamp – Hose	25	16	2
2412–41	Clamp – R	25	5	3
2412–41	Clamp–R	13	47	2
2412–94	Clamp – R	25	10	1
2412–39	Clamp – R	22	28	1
2412–108	Clamp – Hose	25	12	4
2412–133	Clamp – R	20	4	2
2412–141	Clamp – Hose	24	41	2
250–6	Tie – Cable	27	*	2
251–141	Bearing – Ball	3	22	2
251–141	Bearing – Ball	4	37	2
251–141	Bearing – Ball	6	45	2
253–111	Seal – Shaft	31	12	2
254–61	Cup – Bearing	31	3	2
254–70	Cone – Bearing	31	4	2
254–78	Cone – Bearing	31	13	2
254–79	Cup – Bearing	31	14	2
256–2	Bushing – Sleeve	11	20	2
256–155	Bushing – Flange	11	26	2
256–155	Bushing –Flange	20	28	2
256–251	Bushing – Sleeve	11	10	2
282–2	Clevis – Adjusting	1	2	5
282–2	Clevis – Rod	11	3	1
283–8	Pin – Clevis	3	4	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
283–8	Pin – Clevis	4	18	1
283–57	Pin – Clevis	11	8	1
283–61	Pin – Clevis	1	1	5
283–61	Pin – Clevis	11	4	1
302–2	Fitting – Grease	6	17	1
302–2	Fitting – Grease	4	23	1
302–2	Fitting – Grease Straight	3	34	1
302–5	Fitting – Grease	32	13	1
302–5	Fitting – Grease	1	27	1
302–5	Fitting – Grease	4	29	4
302–5	Fitting – Grease Straight	3	15	4
302–5	Fitting – Grease Straight	6	37	5
302–11	Fitting – Grease	31	2	1
302–55	Fitting – Grease	31	16	1
302–60	Fitting – Grease 90°	3	8	2
302–60	Fitting – Grease 90°	4	17	2
302–60	Fitting – Grease 90°	6	32	1
304–61	Clamp – R	12	23	1
321–2	Screw – Cap Hex. Hd.	24	16	1
321–3	Screw – Cap Hex. Hd.	21	10	4
321–3	Screw – Cap Hex. Hd.	20	13	1
321–3	Screw – Cap Hex. Hd.	2	52	3
321–4	Screw – Cap Hex. Hd.	22	21	1
321–4	Screw – Cap Hex. Hd.	27	27	4
321–4	Screw – Cap Hex. Hd.	8	31	1
321–4	Screw – Hex. Flange Hd.	1	16	2
321–5	Screw – Cap Hex. Hd.	8	26	8
321–11	Screw – Cap Hex. Hd.	24	40	2
321–11	Screw – Cap Hex. Hd.	2	43	1
321–11	Screw – Hex. Washer Hd.	8	17	1
322–1	Screw – Cap Hex. Hd.	3	1	3
322–1	Screw – Cap Hex. Hd.	4	21	3
322–1	Screw – Cap Hex. Hd.	6	30	2
322–1	Screw – Cap Hex. Hd.	28	31	2
322–2	Screw – Cap Hex. Hd.	20	1	2
322–3	Screw – Cap Hex. Hd.	6	25	1
322–3	Screw – Cap Hex. Hd.	27	32	6
322–4	Screw – Cap Hex. Hd.	28	32	2
322–4	Screw – Cap Hex. Hd.	21	36	4
322–5	Screw – Cap Hex. Hd.	11	36	2
322–6	Screw – Cap Hex. Hd.	28	18	4
322–8	Screw – Cap Hex. Hd.	27	21	2
322–14	Screw – Cap Hex. Hd.	24	20	2
322–14	Screw – Cap Hex. Hd.	12	39	3
322–29	Screw – Cap Hex. Hd.	24	22	2
323–4	Screw – Cap Hex. Hd.	18	7	2
323–6	Screw – Cap Hex. Hd.	25	6	3
323–6	Screw – Cap Hex. Hd.	24	35	3
323–8	Screw – Cap Hex. Hd.	28	24	2
323–12	Screw – Cap Hex. Hd.	27	1	3
323–13	Screw – Cap Hex. Hd.	1	5	4
324–7	Screw – Cap Hex. Hd.	27	30	4
325–4	Screw – Cap Hex. Hd.	18	19	2
325–11	Screw – Cap Hex. Hd.	8	9	8
3211–2	Screw – Cap Hex. Hd.	11	19	2
3217–5	Nut – Hex.	21	12	2
3217–6	Nut – Lock	29	1	4
3217–6	Nut – Lock	30	1	4
3217–7	Nut – Hex	14	33	3
3217–12	Nut – Lock	31	26	1
3218–13	Nut – Jam	21	8	2
3219–2	Nut – Hex.	36	6	1
3219–14	Nut – Hex.	21	7	2
3219–14	Nut – Hex.	22	10	6
3219–18	Nut – Hex.	35	2	1
3220–2	Nut – Jam	11	2	2
3220–2	Nut – Jam	1	3	5
3220–3	Nut – Jam	4	2	2
3220–3	Nut – Jam	6	2	2
3220–3	Nut – Jam	3	23	2
3220–6	Nut – Jam	5	14	1
3220–6	Nut – Jam	31	21	2
3220–20	Nut – Jam L.H. Thread	11	31	1
3229–22	Bolt – Carriage	1	10	2
3234–1	Screw – Cap Hex. Hd.	2	53	4
3234–1	Screw – Hex. Flange Hd.	11	6	4
3234–4	Screw – Cap Hex. Hd.	13	46	1
3241–2	Screw – Set Square Hd.	28	19	2
3241–6	Screw – Set Square Hd.	28	13	2
3245–1	Screw – Set, Hex. Soc. Hd.	32	1	2
3246–3	Screw – Set	18	12	1
3253–3	Washer – Lock	27	26	4
3253–3	Washer – Lock	24	39	2
3253–3	Washer – Lock	17	57	4
3253–4	Washer – Lock	20	2	2
3253–4	Washer – Lock	21	9	2
3253–4	Washer – Lock	6	46	1
3253–6	Washer – Lock	27	29	4
3253–21	Washer – Lock	28	23	2
3253–21	Washer – Lock	4	27	2
3253–21	Washer – Lock	3	35	2
3253–21	Washer – Lock	6	35	2
3254–1	Washer – Lock	21	6	2
3254–5	Washer – Lock	22	15	1
3254–6	Washer – I.T.L.W.	11	18	2
3255–7	Washer – Lock	22	29	1
3255–8	Washer – Lock, Int. Tooth	36	9	1
3256–1	Washer – Flat	27	18	8
3256–1	Washer – Flat	22	20	8
3256–1	Washer – Flat	2	51	9
3256–22	Washer – Flat	21	3	5
3256–22	Washer – Flat	8	30	2
3256–22	Washer – Flat	24	45	1
3256–22	Washer – Flat	13	52	1
3256–22	Washer – Flat	2	44	1
3256–23	Washer – Flat	3	2	3
3256–23	Washer – Flat	6	28	3
3256–23	Washer – Flat	28	17	8
3256–23	Washer – Flat	24	19	4
3256–23	Washer – Flat	4	20	3
3256–23	Washer – Flat	27	23	2
3256–23	Washer – Flat	20	30	4
3256–23	Washer – Flat	21	35	4
3256–24	Washer – Flat	11	14	6
3256–24	Washer – Flat	4	26	2
3256–24	Washer – Flat	6	34	2
3256–24	Washer – Flat	2	35	9
3256–24	Washer – Flat	3	36	2
3256–26	Washer – Flat	4	12	1
3256–26	Washer – Flat	6	20	1
3256–26	Washer – Flat	3	31	1
3256–26	Washer – Flat	18	34	2
3256–28	Washer – Flat	31	27	1
3256–63	Washer – Flat	25	7	1
3256–80	Washer – Flat	18	2	3
3257–42	Key – Woodruff	8	11	2
3257–42	Key – Woodruff	9	17	1
3257–42	Key – Woodruff	10	17	1
3272–4	Pin – Cotter	11	13	1
3272–6	Pin – Cotter	1	30	5
3272–6	Pin – Cotter	11	41	1
3272–11	Pin – Cotter	3	5	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3272–11	Pin – Cotter	20	9	1
3272–11	Pin – Cotter	4	13	2
3272–11	Pin – Cotter	6	19	1
3272–37	Pin – Cotter	31	1	1
3273–26	Screw – Hex. Socket Hd.	22	18	4
3274–7	Screw – Socket Hd.	27	9	2
3274–12	Screw – Hex. Socket Hd.	20	29	4
3274–15	Screw – Fillister Hd.	14	43	2
3274–31	Screw – Hex. Socket Hd.	1	15	4
3274–39	Screw – Cap Hex. Hd.	18	21	6
3274–52	Screw – Hex, Socket Hd.	14	20	4
3274–52	Screw – Hex. Socket Hd.	16	45	6
3274–63	Screw – Hex. Socket Hd.	18	33	2
3274–64	Screw – Hex. Socket Hd.	21	4	3
3274–69	Screw – Hex. Socket Hd.	22	1	8
3274–70	Screw – Hex, Socket Hd.	14	1	2
3274–80	Screw – Cap Hex. Hd.	18	1	3
3274–84	Screw – Cap, Hex. Hd.	17	58	4
3284–3	Pin – Groove	20	15	1
3290–277	Nut – Speed	18	22	6
3290–317	Washer – Wave	3	18	2
3290–317	Washer – Wave	4	32	2
3290–317	Washer – Wave	6	40	2
3290–357	Nut – Flange Lock	27	8	3
3290–378	Tie – Cable	27	*	2
3290–379	Tie – Cable	6	47	1
3290–470	Screw – Flat Hd.	21	22	2
3296–4	Nut – Lock	11	22	2
3296–16	Nut – Lock	20	11	1
3296–16	Nut – Lock	1	21	2
3296–16	Nut – Lock	22	24	9
3296–16	Nut – Lock	21	34	3
3296–16	Nut – Lock	13	49	1
3296–23	Nut – Lock	8	19	8
3296–27	Nut – Lock	22	11	4
3296–29	Nut – Lock	20	8	4
3296–29	Nut – Lock	28	14	4
3296–29	Nut – Lock	11	16	2
3296–29	Nut – Lock	6	29	1
3296–39	Nut – Lock	1	20	1
3296–42	Nut – Lock	8	25	8
3296–59	Nut – Lock	11	15	4
3296–59	Nut – Lock	2	34	8
3296–67	Nut – Lock	31	25	1
32103–12	Nut – Wing	21	14	2
32104–76	Screw – Self Tapping	21	1	5
32108–100	Screw – Flat Hd.	8	16	1
32120–8	Ring – Retaining	5	10	1
32121–6	Pin – Roll	11	39	1
32121–6	Pin – Roll	2	41	1
32121–35	Pin – Roll	1	32	8
32121–45	Pin – Roll	20	14	1
32121–45	Pin – Roll	11	28	1
32121–51	Pin – Roll	11	43	1
32122–35	Screw – Truss Head	36	8	1
32128–20	Nut – Flange Lock	12	24	3
32128–20	Nut – Flange Lock	11	27	1
32128–20	Nut – Flange Lock	28	29	2
32128–20	Nut – Flange Lock	27	31	8
32128–20	Nut – Lock, Flange	36	3	1
32128–33	Nut – Flange Lock	1	18	2
32128–33	Nut – Lock	8	32	1
32136–9	Nut – Hex. Slotted	31	34	1
32141–111	Nut Flange Lock	1	11	1
32144–21	Screw – Round Hd.	18	8	2
32148–6	Insert – Threaded	1	19	8
32149–2	Nut – Keps	21	37	2
32149–7	Nut – Keps	21	41	2
32151–41	Ring – Retaining	34	9	1
32152–10	Nut – Hex.	7	2	1
32152–10	Nut – Lock	5	2	1
340–1	Fitting – Hydraulic Straight	18	30	4
340–14	Fitting – Hydraulic 45°	8	14	4
340–16	Fitting – Hydraulic 90°	12	33	1
340–18	Fitting – Hydraulic 90°	12	13	1
340–77	Fitting – Hydraulic 90°	33	10	2
340–77	Fitting – Hydraulic 90°	12	14	2
340–82	Fitting – Hydraulic 90°	28	5	1
340–87	Fitting – Hydraulic 45°	28	3	3
340–87	Fitting – Hydraulic 45°	33	15	1
340–98	Fitting – Hydraulic 90°	33	14	2
340–101	Fitting – Hydraulic 45°	33	6	1
340–101	Fitting – Hydraulic 45°	12	8	1
340–103	Fitting – Hydraulic 45°	6	12	2
340–105	Fitting – Hydraulic 90°	28	26	1
340–132	Fitting – Hydraulic 90°	31	29	2
340–137	Fitting – Hydraulic 45°	12	44	1
340–138	Fitting – Hydraulic 45°	12	12	2
351–78	Edging	20	40	1
353–301	Poppet	14	27	1
353–302	O–Ring	16	7	3
353–302	O–Ring	14	10	3
353–303	Ring – Backup	16	8	6
353–303	Ring – Backup	14	9	6
353–304	Spring	14	28	1
353–305	O–Ring	16	5	5
353–305	O–Ring	14	8	4
353–306	Ring – Backup	16	4	5
353–306	Ring – Backup	14	7	4
353–328	Washer – Shim	14	15	A/R
353–328	Washer – Shim	16	32	A/R
353–329	Washer – Shim	14	16	A/R
353–329	Washer – Shim	16	33	A/R
353–330	Washer – Shim	14	17	A/R
353–330	Washer – Shim	16	34	A/R
353–331	O–Ring	14	29	1
353–334	Cap – Relief	14	19	2
353–334	Cap – Relief	16	36	2
353–392	Seal – Relief Poppet PTFE	14	13	2
353–392	Seal – Relief Poppet PTFE	16	30	2
353–398	Spring	16	35	1
353–417	Collar Spring	16	20	2
353–417	Collar Spring	14	40	2
353–481	Plug – Load Check	16	2	3
353–481	Plug – Load Check	14	5	3
353–483	Body – Anticavitation	17	61	1
353–484	Retainer – Ball	17	62	1
353–529	Plate Seal	16	22	1
353–531	Poppet Assembly	16	31	2
353–531	Poppet Assy.	14	14	2
353–550	Plug – Hydraulic	24	38	1
353–550	Plug Assembly	16	13	1
353–563	Fitting – Hydraulic Straight	21	25	1
353–564	Fitting – Hydraulic 90°	21	31	1
353–575	Boot – Dust Cap	14	21	2
353–575	Boot – Dust Cap	16	46	3
353–579	Spring	14	45	1
353–586	Bearing – Needle	34	13	4
353–588	Cover – Motor	34	3	1
353–591	Block – Anti–Extrusion	34	8	1
353–592	Drive Shaft Assembly	34	16	1
353–593	Idler Gear Assembly	34	7	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
353–594	Seal Assembly	34	14	1
353–595	Plate – Wear	34	15	1
353–596	O–Ring	34	17	1
353–597	Bridging – Insert	34	5	1
353–598	Gasket – Insert	34	6	1
353–599	Pin – Dowel	34	4	2
353–600	Washer	34	2	4
353–601	Screw – Hex Socket Hd.	34	1	4
353–642	Relief – RC Mod.	15	*	2
353–642	Relief – RC Mod. Assembly	17	*	1
353–668	Plate – Cap, Cover RH	16	11	1
353–721	Plug	14	35	2
353–727	Bonnet	14	2	1
353–728	Sleeve	15	49	1
353–729	Spud – Detent	14	3	1
353–730	Spring	16	42	1
353–731	Ball	16	43	1
353–732	Sleeve – Detent	15	52	1
353–733	Spacer – Bonnet	14	4	1
353–733	Spacer – Bonnet	16	19	2
353–737	Ball	17	63	1
353–754	Bonnet – R. Detent	14	42	1
353–758	Seal – O–Ring	14	31	1
353–760	Body Relief	14	30	1
353–762	Spud – Detent Out	15	50	1
353–763	Cap – Adjustment	14	44	1
353–766	Relief WH (2000) PSI Assy.	15	*	1
353–768	Section #1 Complete	15	*	1
353–772	Left End Cover	14	34	1
353–777	Body – Motor	34	12	1
353–780	Positioner – R. Detent (Out)	15	*	1
353–808	Collar – Spring	16	24	1
353–829	Collar Spool	16	26	1
353–830	O–Ring	16	25	1
353–831	Spring	16	21	1
353–833	Positioner Assembly	17	*	1
353–835	Seals – Section Set	15	*	1
353–835	Seals – Section Set	17	*	1
353–837	Section #2 Complete	15	*	1
353–839	Positioner – DI (SPL) Assy.	15	*	1
353–840	Position – DI (SP) Assy.	17	*	1
353–841	Position – Spool Assembly	17	*	1
353–844	Plus Series	17	55	1
353–845	Sleeve – Detent	16	41	1
353–846	Spud – DI (SPL)	16	40	1
353–847	Bonnet (SPL)	16	38	1
353–848	O–Ring	16	14	1
353–849	Sleeve	16	39	1
353–850	O–Ring	17	56	1
353–851	Body – Relief CP–RC Mod.	14	12	1
353–851	Body – Relief CP–RC Mod.	16	29	2
353–853	Bolt – Hex Hd.	16	10	3
353–855	Spring	14	18	2
353–855	Spring	16	44	1
353–884	Key – Woodruff	29	19	4
353–884	Key – Woodruff	30	19	4
353–886	Ring – Retaining	29	18	2
353–886	Ring – Retaining	30	18	2
353–922	Seal – Ring	29	23	10
353–922	Seal – Ring	30	23	10
353–923	Bearing Plate Assembly	29	26	2
353–923	Bearing Plate Assembly	30	26	2
353–952	Ring – Backup	14	32	1
353–953	Plug Assembly	17	54	1
353–957	Seal – Lip	16	15	6
353–957	Seal – Lip	14	26	4
353–958	Ring – Backup	16	16	1
353–964	Gear – 66B	29	21	1
353–967	Gear – 33B	29	24	6
353–967	Gear – 33B	30	24	6
353–969	Plate – Gear 33B	29	25	3
353–969	Plate – Gear 33B	30	25	3
353–971	Plate – Gear 66B	29	14	1
354–1	Shaft – Drive	29	20	1
354–2	Body Assembly	29	15	1
354–2	Body Assembly	30	15	1
354–3	Bearing Plate Assembly	29	22	1
354–3	Bearing Plate Assembly	30	22	1
354–4	Bearing Plate Assembly	29	28	1
354–4	Bearing Plate Assembly	30	28	1
354–5	Adapter – Splined	29	27	1
354–5	Adapter – Splined	30	27	1
354–6	Plate – Gear 18B	29	30	1
354–6	Plate – Gear 18B	30	30	1
354–7	Cover Assembly	29	31	1
354–7	Cover Assembly	30	31	1
354–8	Drive Shaft – Gear Assy.	29	29	1
354–8	Drive Shaft – Gear Assy.	30	29	1
354–9	Idler Shaft – Gear Assy.	29	5	1
354–9	Idler Shaft – Gear Assy.	30	5	1
354–10	Idler Shaft – Gear Assy.	29	12	1
354–11	Pin – Dowel	29	4	2
354–11	Pin – Dowel	30	4	2
354–12	Pin – Dowel	29	6	2
354–12	Pin – Dowel	30	6	2
354–13	Pin – Dowel	29	11	4
354–13	Pin – Dowel	30	11	4
354–14	Pin – Dowel	29	13	2
354–14	Pin – Dowel	30	13	2
354–15	Seal – Shaft	29	17	1
354–15	Seal – Shaft	30	17	1
354–16	Washer – Lock	29	2	4
354–16	Washer – Lock	30	2	4
354–17	Stud – Threaded	29	3	4
354–17	Stud – Threaded	30	3	4
354–25	Section #4 Assembly	17	*	1
354–26	Bonnet	16	27	2
354–28	Screw – Hex, Socket Hd.	16	28	2
354–29	Plate – Thrust	15	48	1
354–35	Gasket	29	32	1
354–35	Gasket	30	32	1
354–120	Fitting – Hydraulic 90°	24	27	3
354–121	Fitting – Hydraulic Straight	24	12	1
354–122	Disc – Seal	17	52	1
354–129	Anticavitation Check Assy.	17	*	1
354–131	Section #3 Assembly	17	*	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Greensmaster 3100 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Grensmaster 3100, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Greensmaster 3100.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Control Pedal Assembly	1–2
Pull Frame Assembly L.H.	3
Pull Frame Assembly R.H.	4
Hydraulic Cylinder Assembly No. 83–1250	5
Pull Frame Assembly Rear	6
Hydraulic Cylinder Assembly No. 83–7230	7
Front Wheel & Brake Assembly	8
Hydraulic Drive Motor Assembly No. 75–9990	9
Hydraulic Drive Motor Assembly No. 92–9199	10
Traction Controls Assembly	11
Control Valve Installation Assembly	12–13
Control Valve Assembly No. 84–2203 (Sections 1 & 2)	14–15
Control Valve Assembly No. 84–2203 (Sections 3 thru 5)	16–17
Steering Arm Assembly	18
Power Steering Valve Assembly No. 92–8690	19
Seat Assembly	20
Frame Assembly	21
Control Panel Assembly	22
Electrical Schematic	23
Hydraulic Reservoir Assembly	24
Fuel Tank Assembly	25
Hydraulic Schematic	26
Engine Installation Assembly	27
Hydraulic Pump Installation Assembly	28
Hydraulic Pump Assembly No. 68–4949	29
Hydraulic Pump Assembly No. 92–9764	30
Rear Wheel Assembly	31
Hydraulic Cylinder Assembly No. 83–2330	32
Reel Motor Installation Assembly	33
Reel Motor Assembly No. 70–9800	34
Special Tools	35–36
Briggs & Stratton Engine Assembly Model 303447–0479–01	37–47
International Parts Reference	48–49
Part Number Index	50–56

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								