Form Number 3362-184 Rev C

LX468 Lawn Tractor

Model No. 13AP61RH848 - 1 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Front and Rear Wheel Assembly	3
Steering and Front Axle Assembly	4
Frame, Battery and Electric PTO Assembly	6
Seat, Fender and Deck Lift Assembly	8
Fuel Tank, Hood and Dash Assembly	10
Transmission, Belt and Control Pedal Assembly	12
Transmission Assembly No. 112-6019	14
46 Inch Deck Assembly	16
Muffler and Shield Assembly	18
Attachments and Accessories List	19


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated

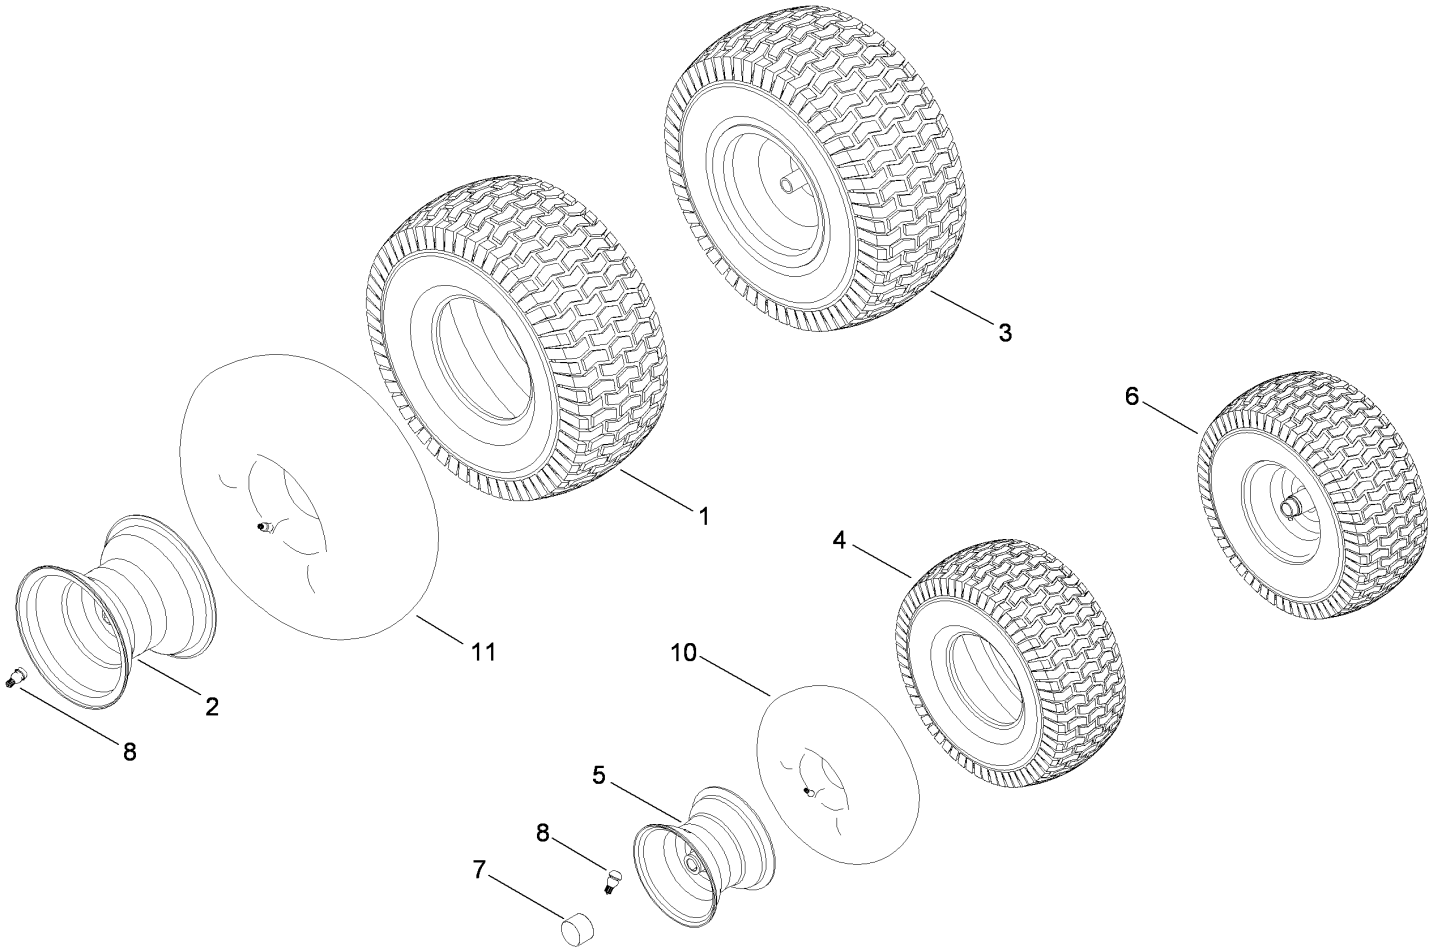

Front and Rear Wheel Assembly

Ref	Part No.	Qty.	Description
1	112-0608	1	Tire-Turf
2	112-6201	1	Rim-Wheel, Rear
3	112-0531	1	Wheel ASM
4	112-0576	1	Tire-Front
5	112-0468	1	Rim-Wheel, Front
6	112-0439	1	Wheel ASM
7	112-5968	1	Cap-Hub
8	112-0503	1	Valve-Air, Tubeless
10	232-39	1	Tube-Inner
11	93-3893	1	Tube-Inner


Steering and Front Axle Assembly

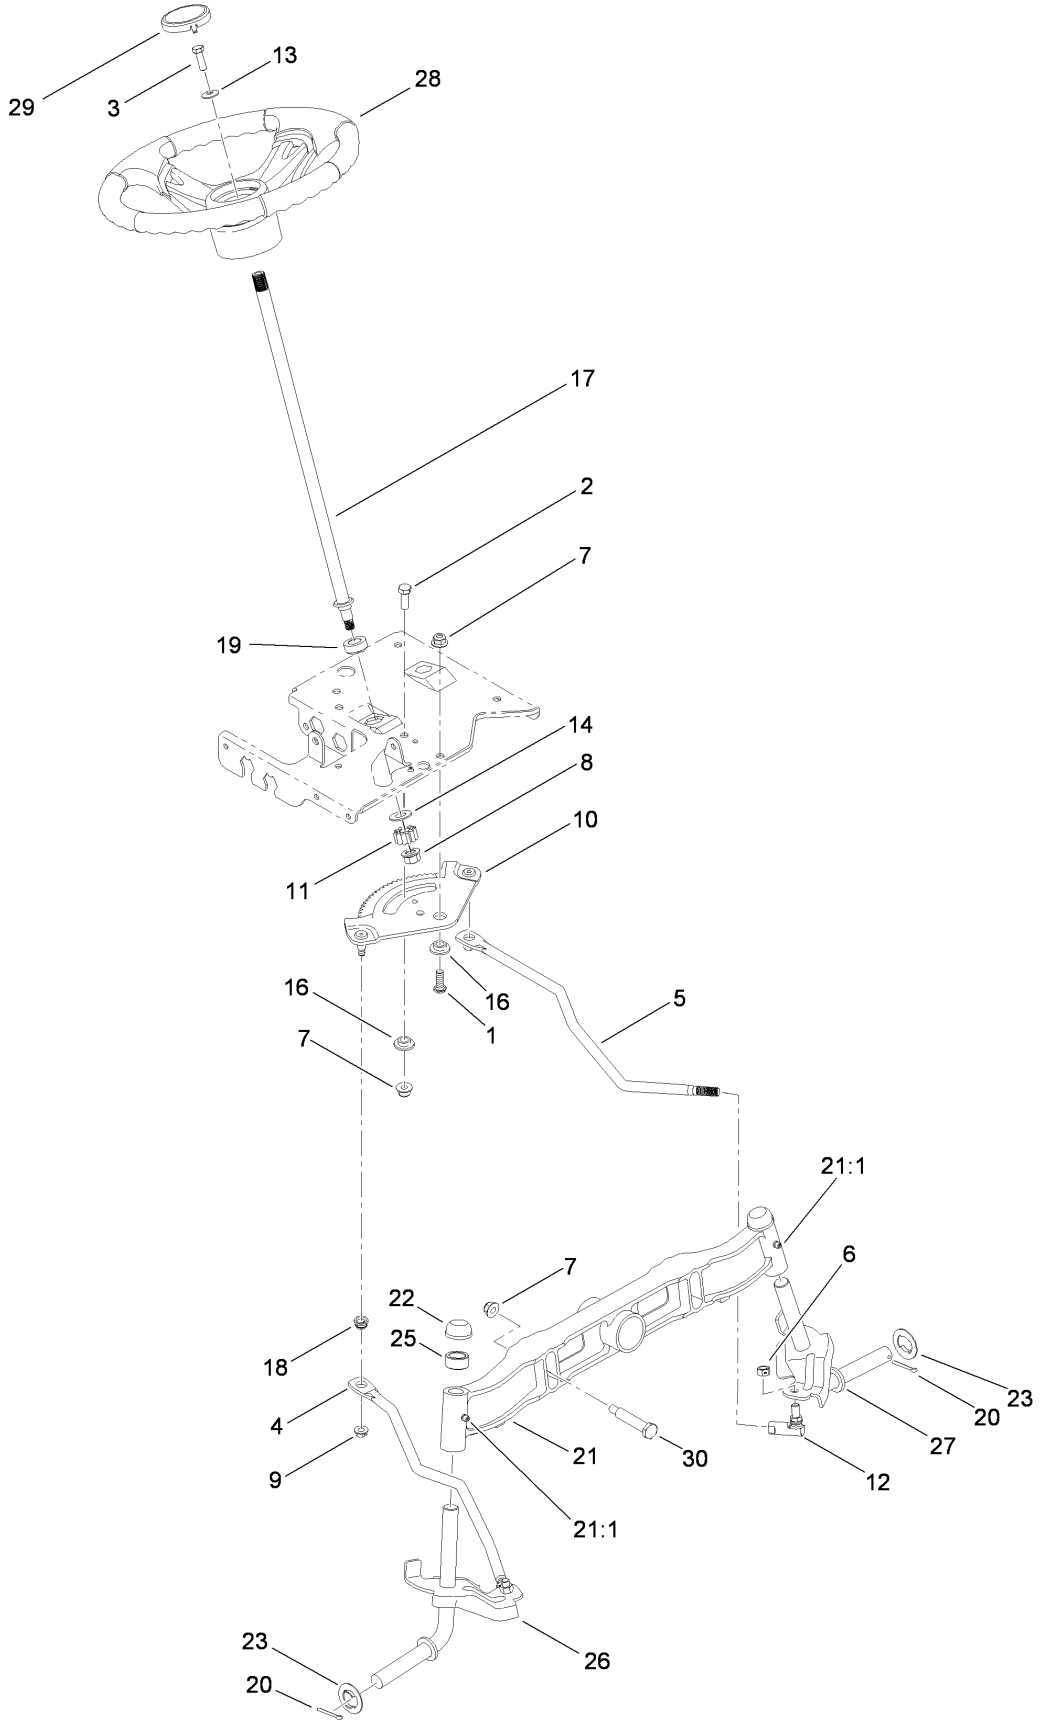

Steering and Front Axle Assembly

Ref	Part No.	Qty.	Description
1	112-0631	1	Screw-HH
2	112-0492	1	Screw-HH
3	112-0473	1	Screw-HH
4	112-0355	1	Link-Drag, RH
5	112-0346	1	Link-Drag, LH
6	112-0483	1	Nut-Hex, Lock
7	112-0668	1	Nut-Lock, Flange
8	112-0859	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange
10	112-0862	1	Gear-Steering
11	112-0863	1	Gear-Pinion, Steering
12	112-0917	1	Ball Joint ASM
13	112-0924	1	Washer-Flat
14	112-0925	1	Washer-Flat
16	112-0881	1	Spacer-Shoulder
17	112-6097	1	Shaft-Steering
18	112-0929	1	Bushing
19	112-6257	1	Bearing-Flange, Hex
20	112-0860	1	Pin-Cotter
21	112-6099	1	Pivot-Axle, Cast Iron
21:1	112-0926	1	Fitting-Grease
22	112-0323	1	Cap
23	112-6258	1	Washer-Flat
25	112-6136	1	Spacer
26	112-6015	1	RH Axle ASM
27	112-6016	1	LH Axle ASM
28	112-6100	1	3 Spoke Wheel Steering ASM
29	112-3734	1	Cap-Wheel, Steering
30	112-0699	1	Bolt-Shoulder


Frame, Battery and Electric PTO Assembly

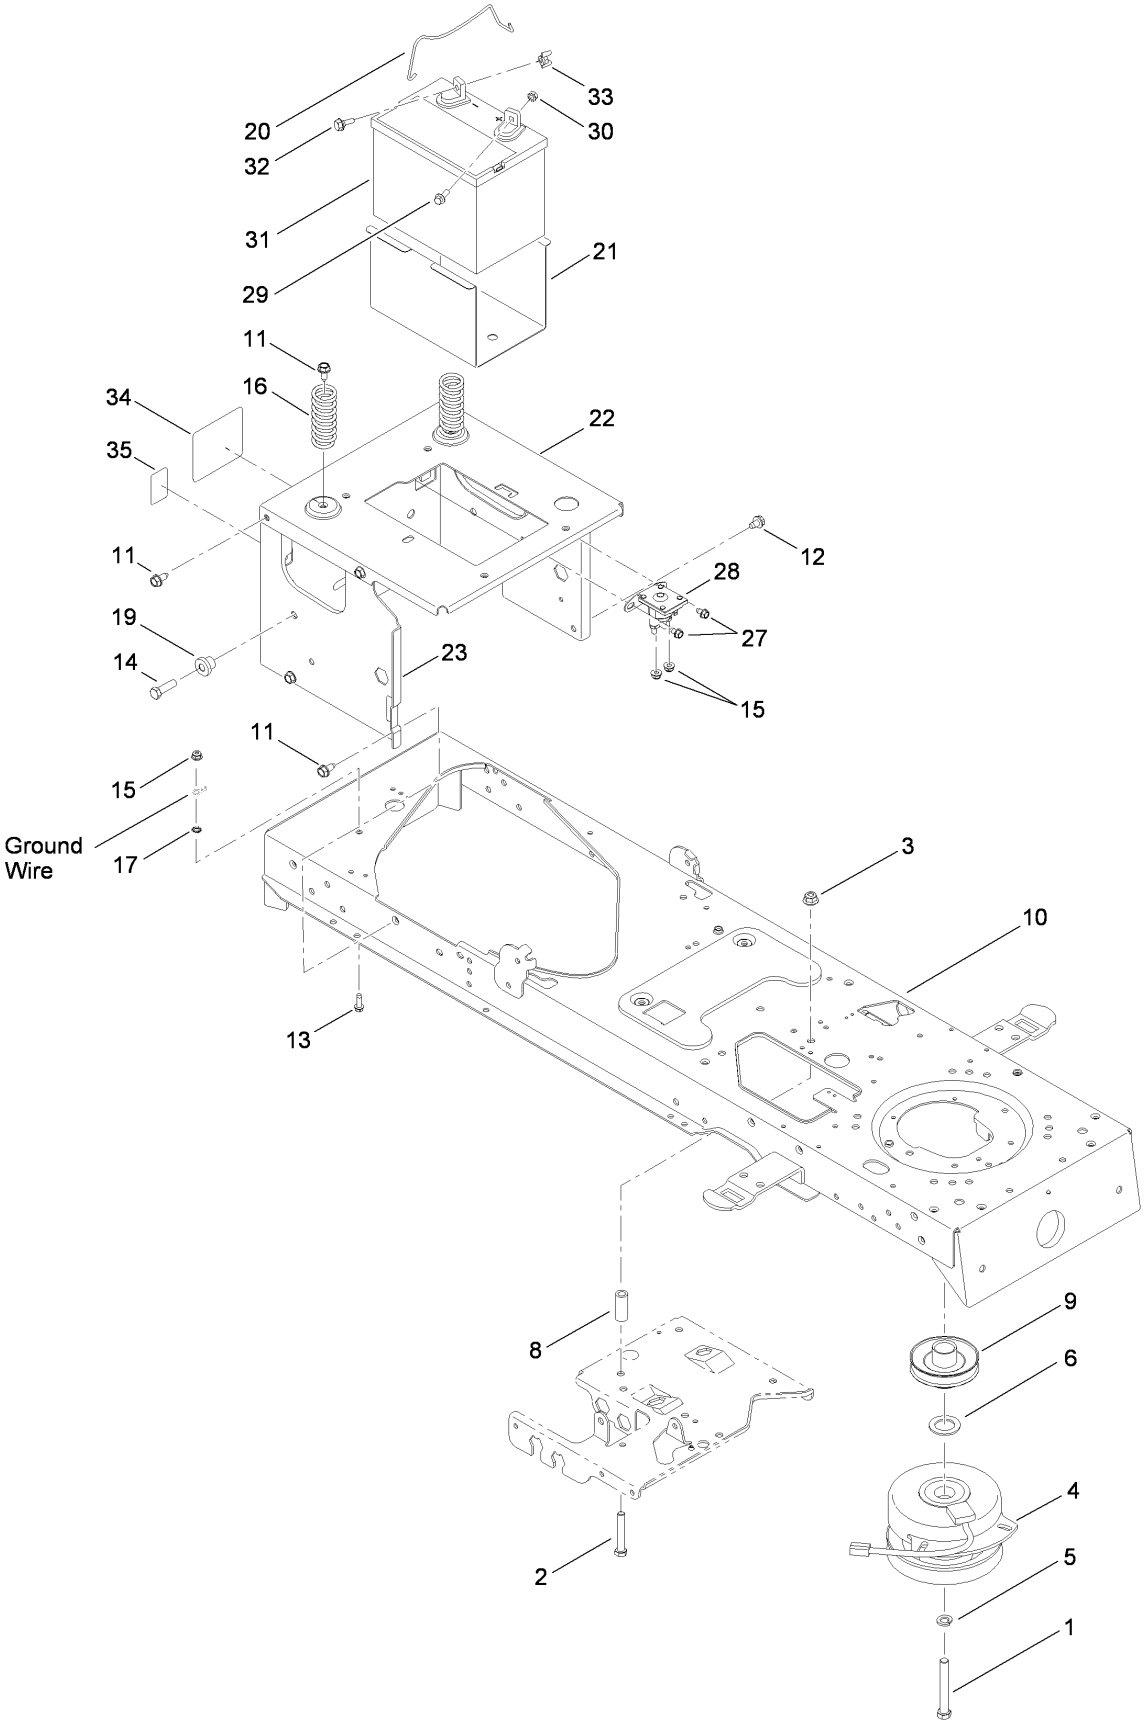

Frame, Battery and Electric PTO Assembly

Ref	Part No.	Qty.	Description
1	112-0561	1	Screw-HH
2	112-6009	1	Screw-HH
3	112-0668	1	Nut-Lock, Flange
4	112-6044	1	Clutch-Electric
5	112-0428	1	Washer-Lock
6	112-0420	1	Washer-Flat
8	112-0433	1	Spacer
9	112-6045	1	Pulley-Engine
10	112-5974	1	Lower Frame ASM
11	112-6070	1	Screw-TAP
12	112-0678	1	Rod-Support
13	112-0587	1	Screw-TAP
14	112-0557	1	Screw-HH
15	112-0636	1	Nut-Lock, Flange
16	112-6208	1	Spring-Compression
17	112-0703	1	Washer-Lock, External
19	112-0661	1	Spacer-Shoulder
20	112-0581	1	Rod-Holddown, Battery
21	112-0570	1	Tray-Battery
22	112-6209	1	Bracket-Frame, Seat
23	112-6254	1	Frame-Upper
27	112-0524	1	Screw-HWHTF
28	112-6073	1	Solenoid-12V, 2 Post 2 Tab
29	112-1070	1	Bolt-Carriage
30	112-0546	1	Nut-Sems
31	112-0425	1	Battery-245, Cca (Dry Flat Top)
32	112-6182	1	Bolt-Shoulder
33	112-3694	1	Nut-Wing, Plastic
34	112-1284	1	Decal
35	112-6289	1	Decal-Hydro Release


Seat, Fender and Deck Lift Assembly

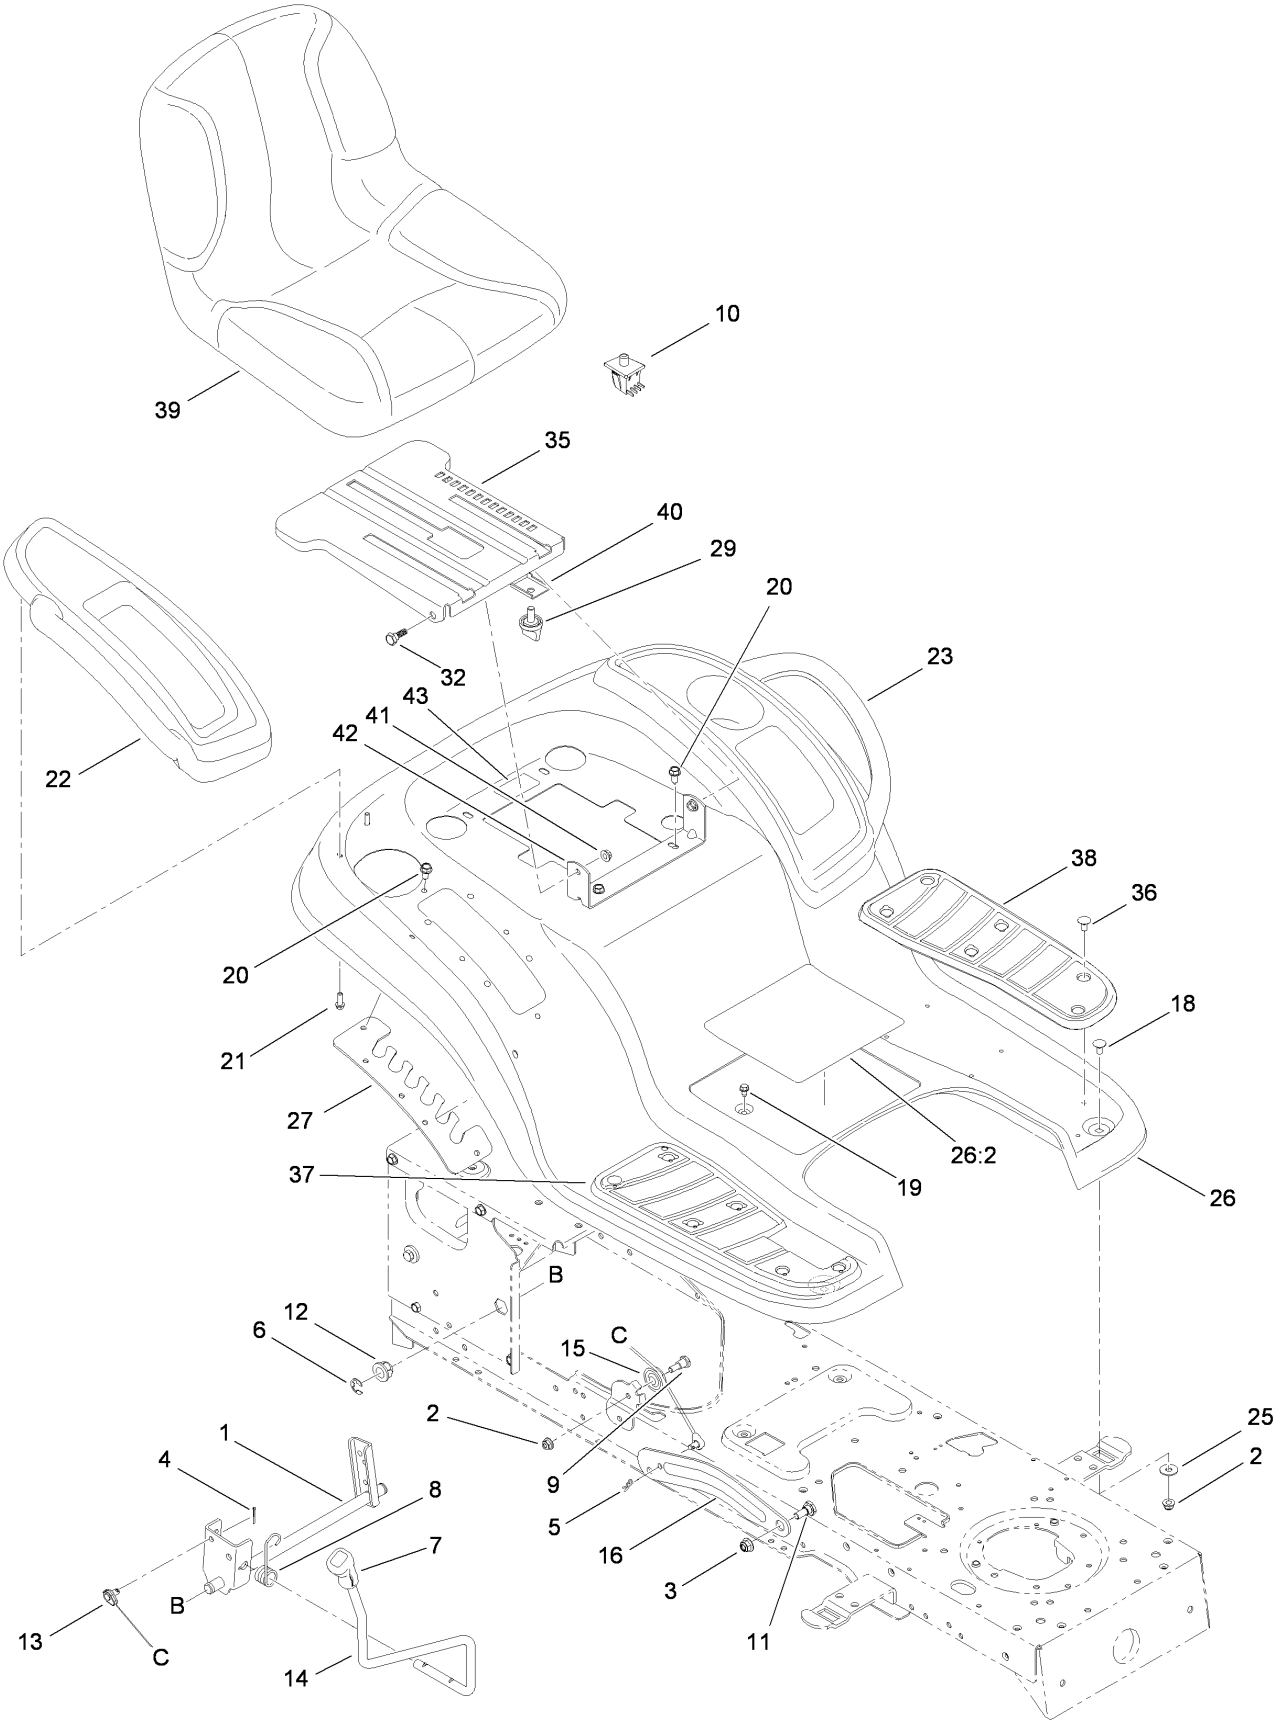

Seat, Fender and Deck Lift Assembly

Ref	Part No.	Qty.	Description
1	112-5969	1	Lift Shaft ASM
2	112-0650	1	Nut-Lock, Flange
3	112-0668	1	Nut-Lock, Flange
4	112-0459	1	Pin-Cotter
5	112-0568	1	Pin-Cotter
6	112-0586	1	Ring-E
7	112-0585	1	Grip-Handle
8	112-0477	1	Spring-Torsion
9	112-0433	1	Spacer
10	110-9889	10	Switch-Seat
11	112-0442	1	Bolt-Shoulder
12	112-0347	1	Bearing-Flange
13	112-0374	1	Cable-Lift
14	112-5970	1	Handle-Lift
15	112-0502	1	Pulley-Roller
16	112-6165	1	Arm-Lift
18	112-6140	1	Screw
19	112-0524	1	Screw-HWHTF
20	112-6070	1	Screw-TAP
21	112-0509	1	Screw-TAP
22	112-6212	1	Cover-Fender, RH
23	112-6065	1	Cover-Fender, LH (W/Cupholder)
25	112-0582	1	Washer-Flat
26	112-6294	1	Fender With Decal
26:2	112-6290	1	Decal-Safety
27	112-0629	1	Bracket-Adjusting, Lift
29	112-0409	1	Knob
32	112-0575	1	Bolt-Shoulder
35	112-6214	1	Bracket-Mount, Seat
36	112-0549	1	Clip-Ratchet, Fastener
37	112-0540	1	Pad-Foot, RH
38	112-0545	1	Pad-Foot, LH
39	112-6215	1	Seat-High
40	112-6216	1	Bracket-Knob, Adjustment
41	112-0511	1	Nut-Lock, Flange
42	112-6217	1	Bracket-Pivot, Seat
43	112-6282	1	Decal-Toro Hotline


Fuel Tank, Hood and Dash Assembly

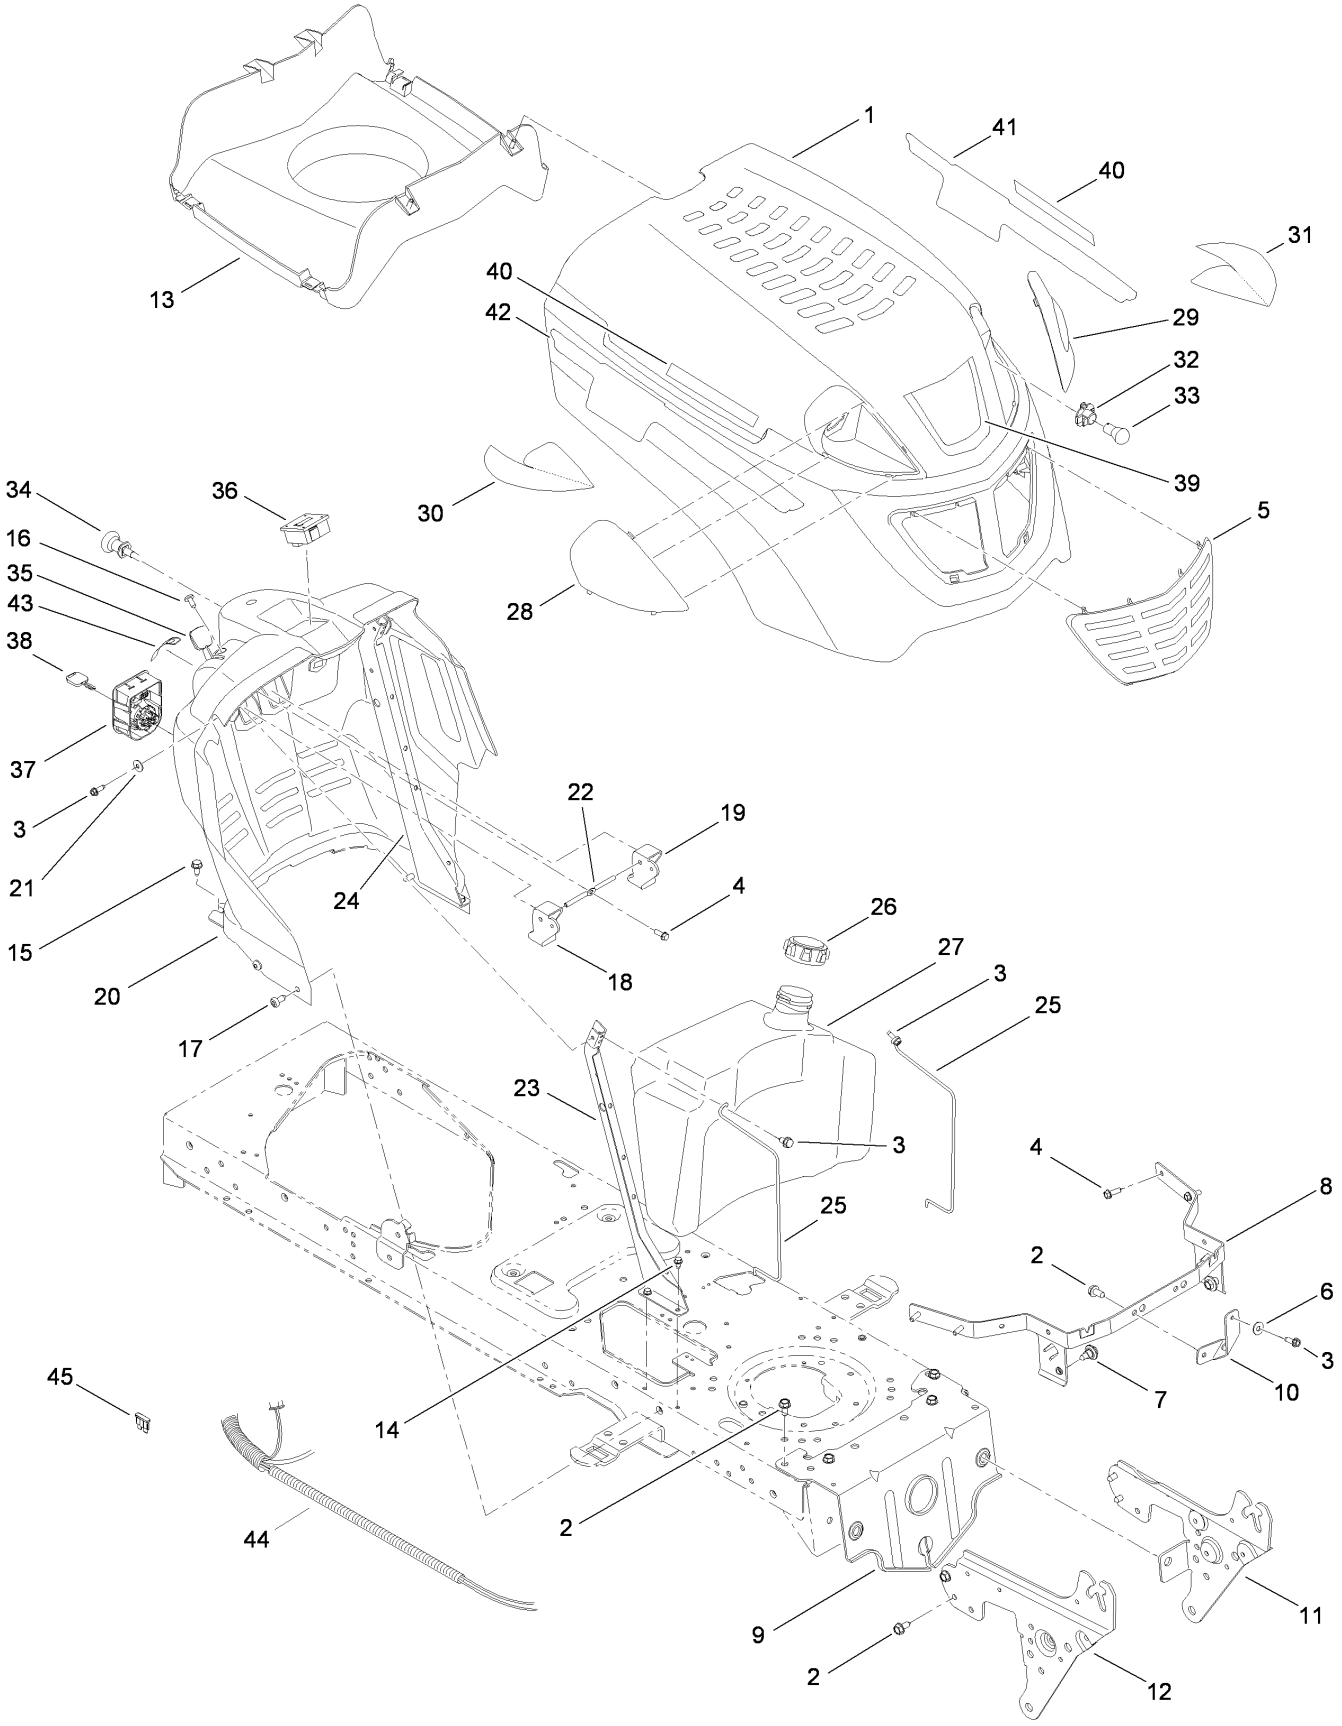

Fuel Tank, Hood and Dash Assembly

Ref	Part No.	Qty.	Description
1	112-0444	1	Hood
2	112-6070	1	Screw-TAP
3	112-0587	1	Screw-TAP
4	112-0509	1	Screw-TAP
5	112-0381	1	Grill
6	112-5989	1	Washer-Flat
7	112-6128	1	Bolt-Shoulder, TAP
8	112-5985	1	Bracket-Pivot
9	112-6127	1	Bracket-Pivot
10	112-5986	1	Bracket-Support, Hood
11	112-6218	1	Bracket-Support, Pivot (LH)
12	112-6219	1	Bracket-Support, Pivot (RH)
13	112-6141	1	Plenum-Hood
14	112-0524	1	Screw-HWHTF
15	112-0676	1	Screw-TAP
16	112-0550	1	Screw-TAP
17	112-0563	1	Screw-TAP
18	112-0526	1	Lever-Cruise
19	112-0580	1	Lever-Brake
20	112-6226	1	Cover-Lift, Lever
21	112-0485	1	Washer-Spring
22	112-0604	1	Rod-Lever, Bent
23	112-6262	1	Support-Dash, Plate (RH)
24	112-6263	1	Support-Dash, Plate (LH)
25	112-0678	1	Rod-Support
26	112-6264	1	Cap-Fuel
27	112-6233	1	Tank-Fuel, 3 Gal
28	112-0447	1	Lens-RH
29	112-0446	1	Lens-LH
30	112-5810	1	Reflector-RH
31	112-5811	1	Reflector-LH
32	112-0408	1	Socket-Headlight
33	112-0402	1	Lamp-12V, Miniature
34	112-0310	1	Cable Control ASM (W/Choke Knob)
35	112-6166	1	Cable-Throttle
36	112-6117	1	Meter-Hour
37	112-6236	1	Module-Switch, Ignition
38	112-6115	1	Key-Ignition
39	112-3716	1	Decal-Hood
40	112-6162	2	Decal
41	112-5952	1	Decal-Hood, Left Side
42	112-5953	1	Decal-Hood, Right Side
43	112-6283	1	Decal-Throttle
44	112-6299	1	Harness-Wire
45	112-5943	1	Fuse-20 Amp


Transmission, Belt and Control Pedal Assembly

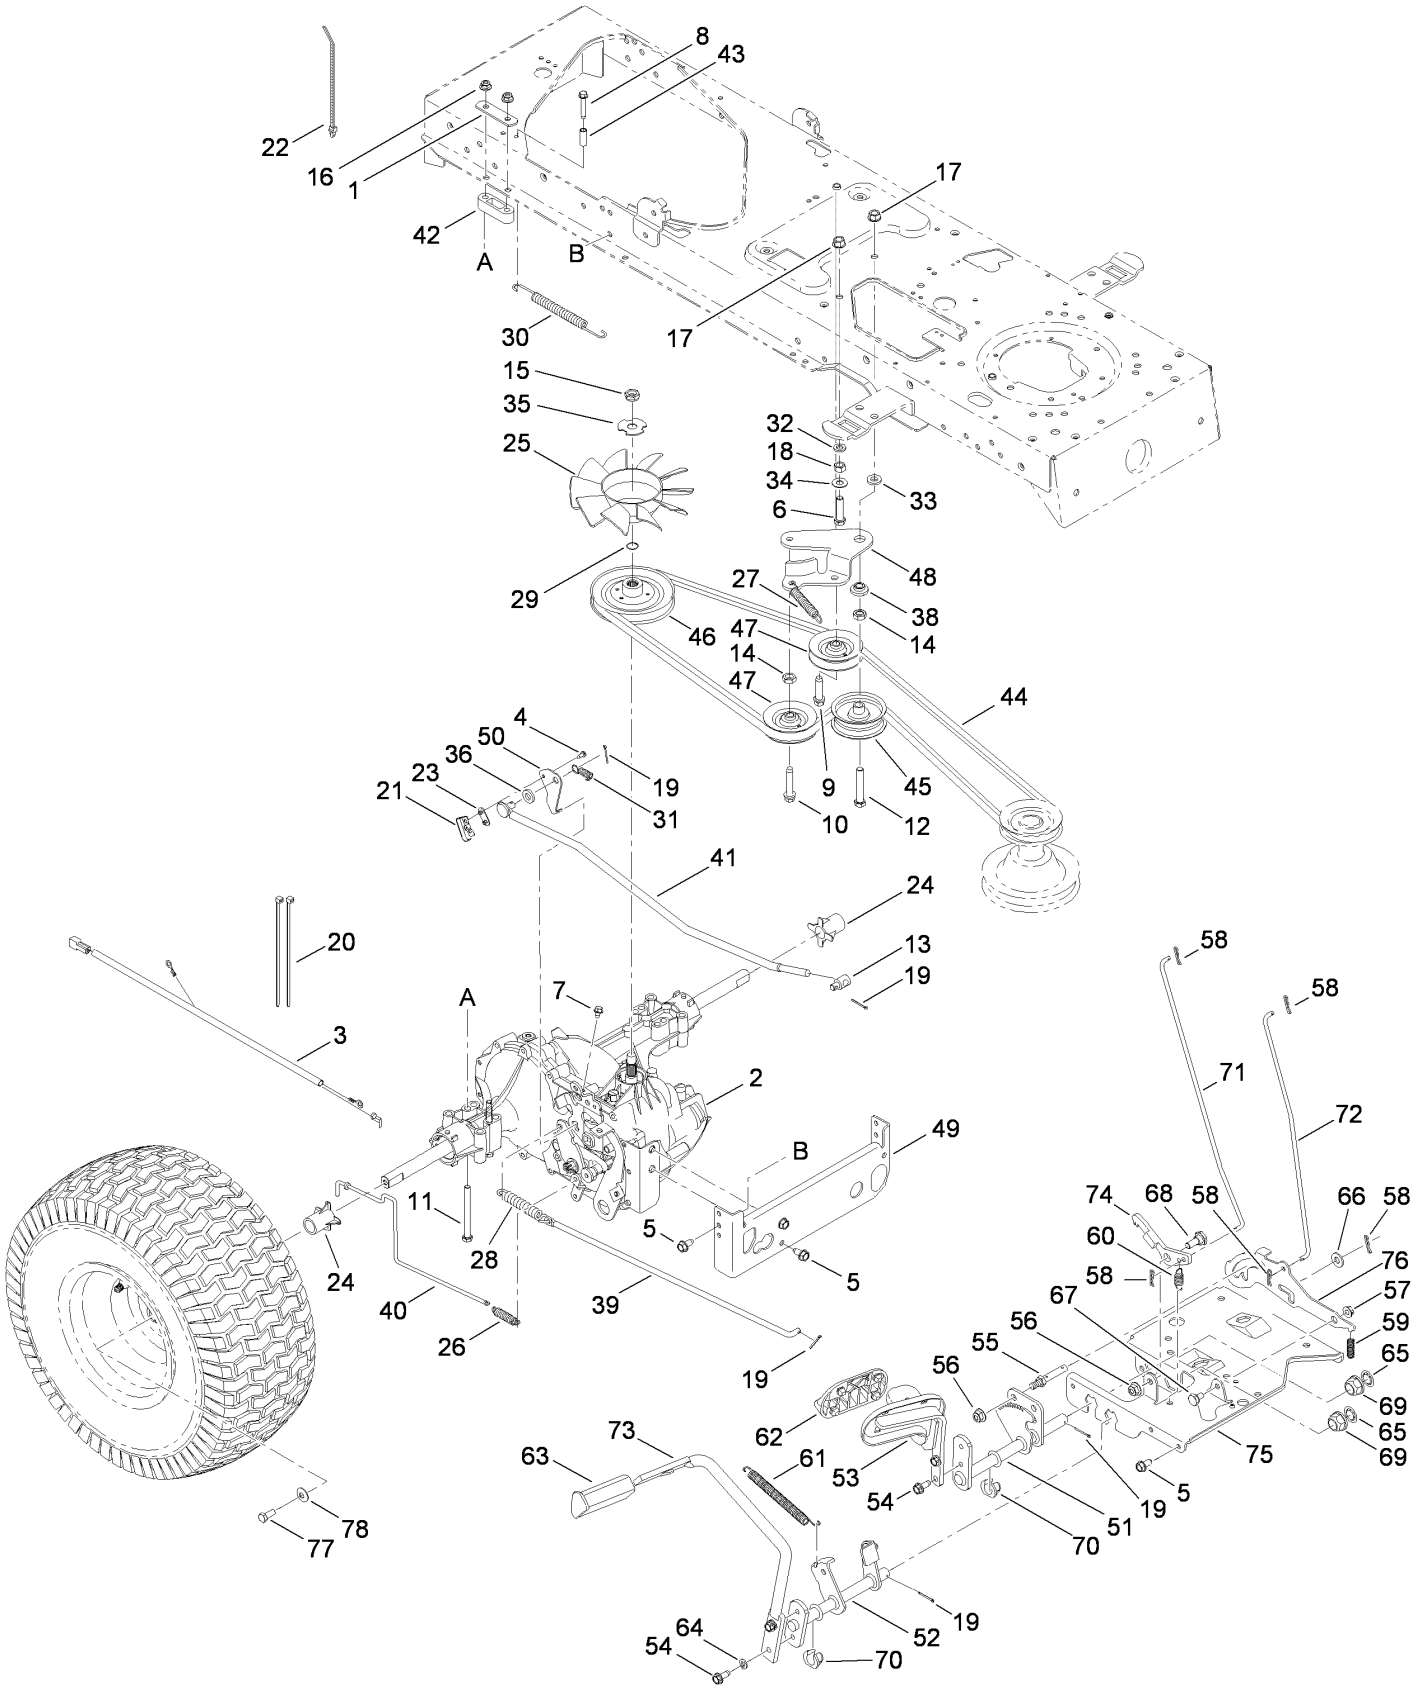

Transmission, Belt and Control Pedal Assembly

Ref	Part No.	Qty.	Description
1	112-0628	1	Bracket-Mounting, Transmission
2	112-6019	1	Hydro Transmission ASM
3	112-6020	1	Harness ASM
4	112-0626	1	Screw-HWHTF
5	112-6070	1	Screw-TAP
6	112-0578	1	Screw-HH
7	112-0653	1	50 Inch Side Discharge Deck ASM
8	112-0843	1	Screw-HWH
9	112-0469	1	Screw-TAP
10	112-6143	1	Screw-TAP
11	112-0667	1	Screw-HH
12	112-6009	1	Screw-HH
13	112-0908	1	Ferrule
14	112-0493	1	Nut-Jam
15	112-6144	1	Nut-Jam
16	112-0650	1	Nut-Lock, Flange
17	112-0385	1	Nut-Lock, Flange
18	112-0668	1	Nut-Lock, Flange
19	112-0568	1	Pin-Cotter
20	112-0527	1	Tie-Cable
21	112-0602	1	Switch-Spring, Short
22	112-0866	1	Tie-Cable
23	112-0625	1	Plate-Insulator
24	112-6025	1	Sleeve
25	112-6145	1	Fan
26	112-6027	1	Spring-Extension
27	112-0873	1	Spring-Extension
28	112-0350	1	Spring-Extension
29	112-6028	1	Ring-Wire
30	112-6029	1	Spring-Extension
31	112-0875	1	Spring-Extension
32	112-0415	1	Washer-Lock
33	112-0920	1	Washer-Flat
34	112-0572	1	Washer-Flat
35	112-6146	1	Washer-Lock
36	112-0544	1	Washer-Flat
38	112-0345	1	Spacer-Shoulder
39	112-6030	1	Rod-Brake
40	112-6031	1	Rod-Hydro
41	112-6032	1	Rod-Control
42	112-0673	1	Spacer-Transaxle
43	112-0644	1	Spacer
44	112-6147	1	Belt-V
45	112-0313	1	Pulley-Idler, Flat
46	112-6148	1	Pulley-Input
47	112-6149	1	Pulley-Idler, Y Type
48	112-0525	1	Bracket-Idler, Center Double
49	112-6034	1	Bracket-Torq, Transmission
50	112-6035	1	Bracket-Actuator
51	112-0850	1	Control ASM
52	112-5998	1	Speed Control ASM
53	112-0851	1	Control Pedal ASM
54	112-0395	1	Screw-HWH
55	112-0599	1	Pin
56	112-0668	1	Nut-Lock, Flange
57	112-0511	1	Nut-Lock, Flange
58	112-0459	1	Pin-Cotter
59	112-0506	1	Spring
60	112-0510	1	Spring-Extension
61	112-0348	1	Spring-Extension
62	112-0543	1	Pad-Pedal
63	112-6001	1	Pad-Brake
64	112-0366	1	Washer-Lock
65	112-0339	1	Washer-Flat
66	112-0541	1	Washer-Flat
67	112-0542	1	Bolt-Shoulder
68	112-0442	1	Bolt-Shoulder
69	112-0347	1	Bearing-Flange
70	112-0387	1	Bearing-Flange, Hex (Split)
71	112-6150	1	Rod-Brake, Lock
72	112-0662	1	Rod-Control, Cruise
73	112-6005	1	Pedal-Brake
74	112-6004	1	Latch-Cruise
75	112-0681	1	Bracket-Support, Steering
76	112-5812	1	Bracket-Lockout
77	112-0551	1	Screw-HH
78	112-0435	1	Washer-Bell

Transmission Assembly No. 112-6019

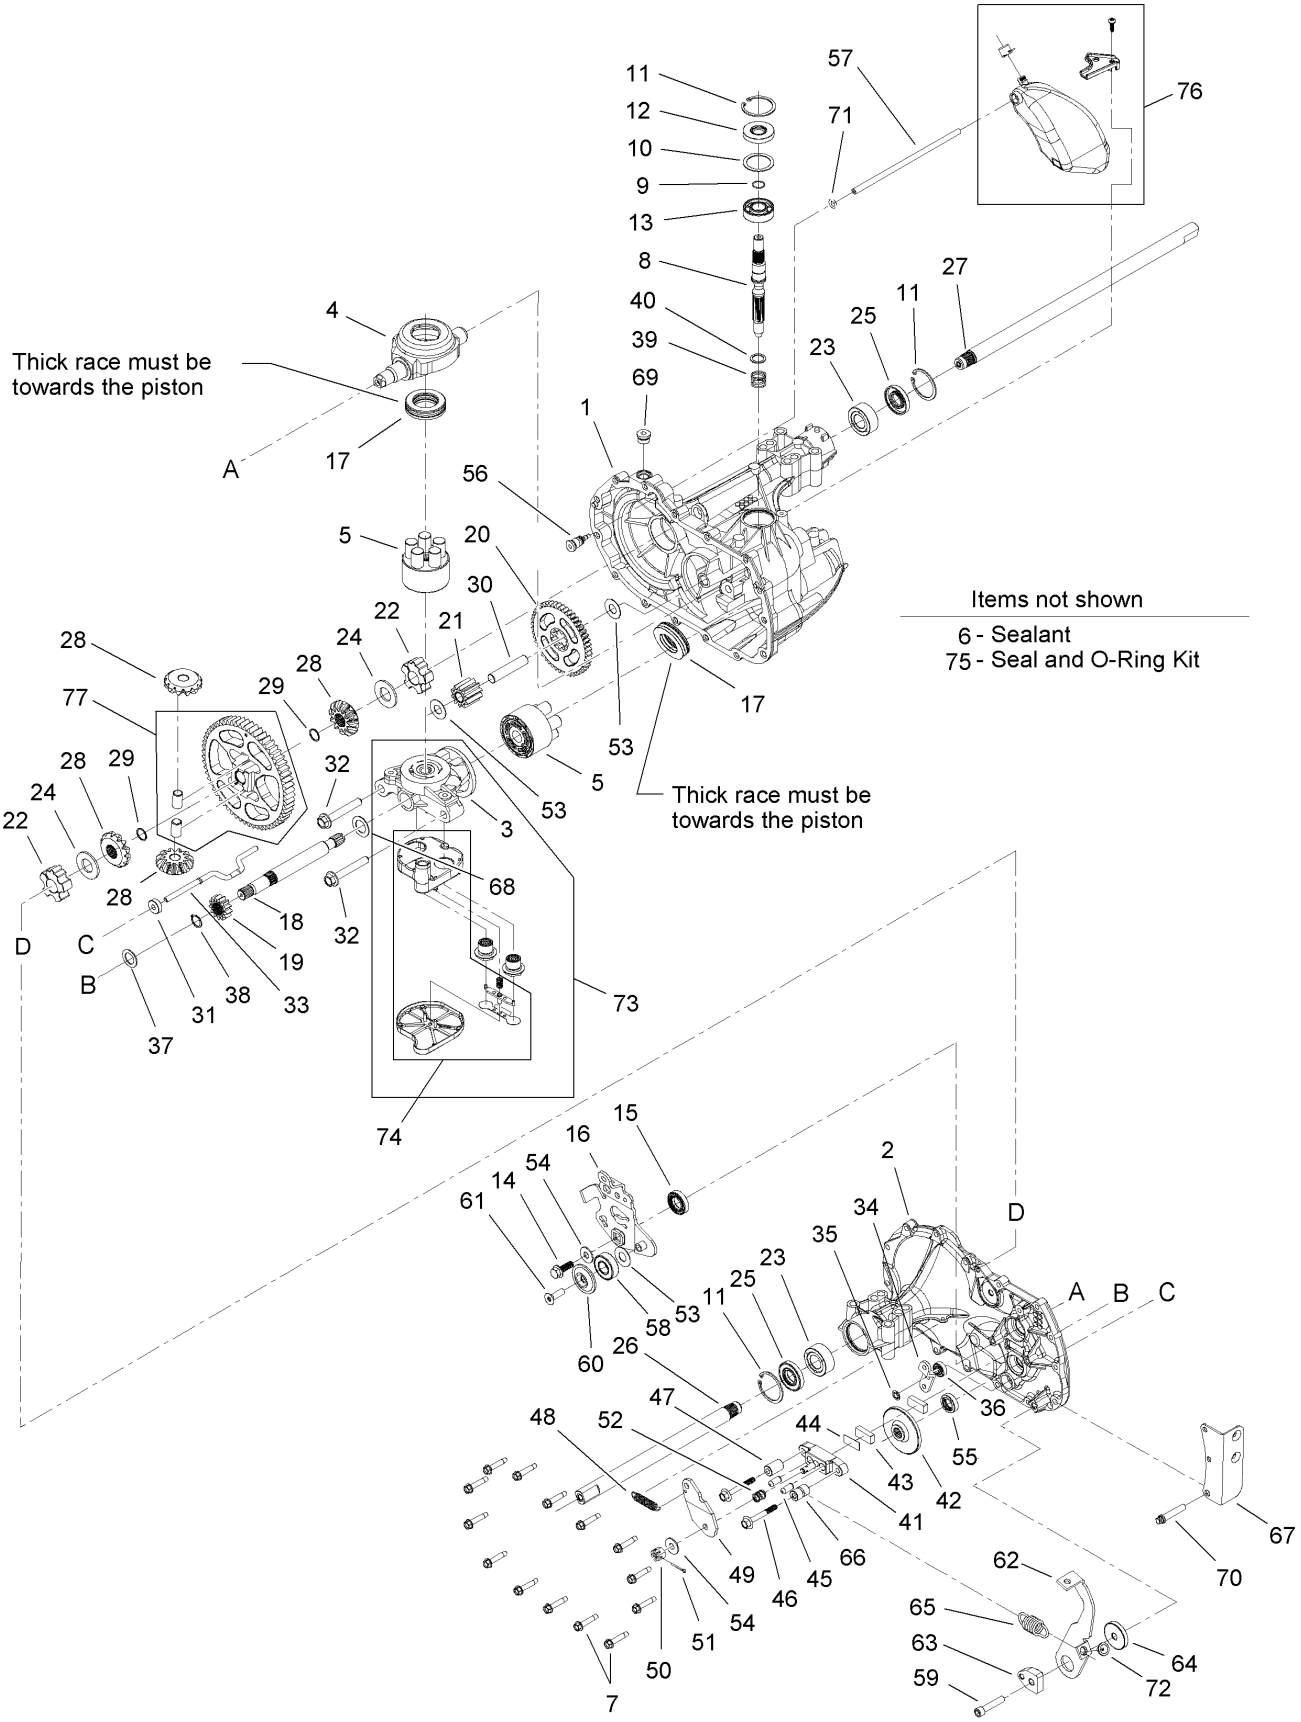


Transmission Assembly No. 112-6019

Ref	Part No.	Qty.	Description
1	104-5301	1	Main Housing ASM
2	104-5302	1	Side Housing ASM
3	104-5303	1	Center Section ASM
4	104-5304	1	Swashplate-Trunnion
5	103-2666	2	Cylinder Block Kit
❶6	104-2147	1	Sealant
7	104-5305	14	Screw-HHF
8	104-5306	1	Shaft-Input
9	104-5307	1	Ring-Retaining
10	104-5308	1	Spacer
11	104-5309	3	Ring-Retaining
12	104-5310	1	Seal-Lip
13	104-5311	1	Bearing-Ball
14	104-5312	1	Screw-HF
15	104-5313	1	Seal-Lip
16	112-6190	1	Control-Arm
17	94-6922	2	Bearing-Thrust
18	104-5315	1	Shaft-Motor
19	104-5316	1	Gear-Pinnion, 13T
20	104-5317	1	Gear
21	104-5318	1	Gear-Jackshaft, 10T
22	104-5320	2	Bearing-Sleeve
23	104-5321	2	Bearing-Sleeve, Outboard
24	94-1943	2	Washer
25	104-5322	2	Seal-Lip
26	112-6191	1	Axle-Shaft
27	112-6192	1	Axle-Shaft
28	112-6193	1	Miter Gear Kit
29	104-5328	2	Ring-Retaining, Spiral
30	104-5329	1	Pin-Jackshaft
31	104-5330	1	Magnet-Ring
32	94-6926	2	Bolt
33	104-5335	1	Rod-Actuator, Bypass
34	104-5336	1	Arm-Bypass
35	104-5337	1	Ring-Retaining
36	104-5338	1	Seal-Lip
37	104-5339	1	Washer-Flat
38	104-5340	1	Ring-Retaining
39	94-1936	1	Spring-Block
40	94-1937	1	Washer-Thrust, Block
41	104-5343	1	Yoke-Brake
42	104-5344	1	Rotor-Brake
43	104-2171	2	Puck-Brake
44	104-2181	1	Puck-Plate
45	104-2176	2	Pin-Brake
46	104-5345	2	Screw-HF
47	104-2180	1	Spacer
48	112-6194	1	Spring Kit
49	112-6195	1	Brake-Arm
50	93-3807	1	Nut-Castle
51	3272-7	1	Pin-Cotter
52	104-2188	1	Spring-Brake, Anti Drag

Ref	Part No.	Qty.	Description
53	94-1933	3	Washer
54	5-4460	2	Washer-Pivot
55	104-5347	1	Seal-Oil
56	104-5349	1	Fitting-Sae
57	104-5350	1	Hose-Expansion, Tank
58	104-2156	1	Bearing
59	104-2155	1	Screw
60	104-2157	1	Spacer-Locating
61	104-2158	1	Screw-Countersunk
62	112-6196	1	Return-Arm
63	104-2119	1	Puck-Adjusting
64	112-6197	1	Washer-Flat
65	104-5356	1	Spring-Extension
66	104-5357	1	Spacer
67	112-6198	1	Bracket-Torque
68	104-5360	1	Washer-Shaft, Motor
69	104-2189	1	Plug-Thread, Straight
70	104-2148	1	Screw-TTH
71	104-5361	1	O-Ring
72	104-5363	1	Guide-Spring
73	106-6522	1	Center Section Filter Bypass ASM
74	106-6523	1	Filter ASM
❶75	104-5368	1	Seal Kit
76	104-5369	1	Expansion Tank Kit
77	112-6199	1	60T Bull Gear Differential Kit (W/Pins)


46 Inch Deck Assembly

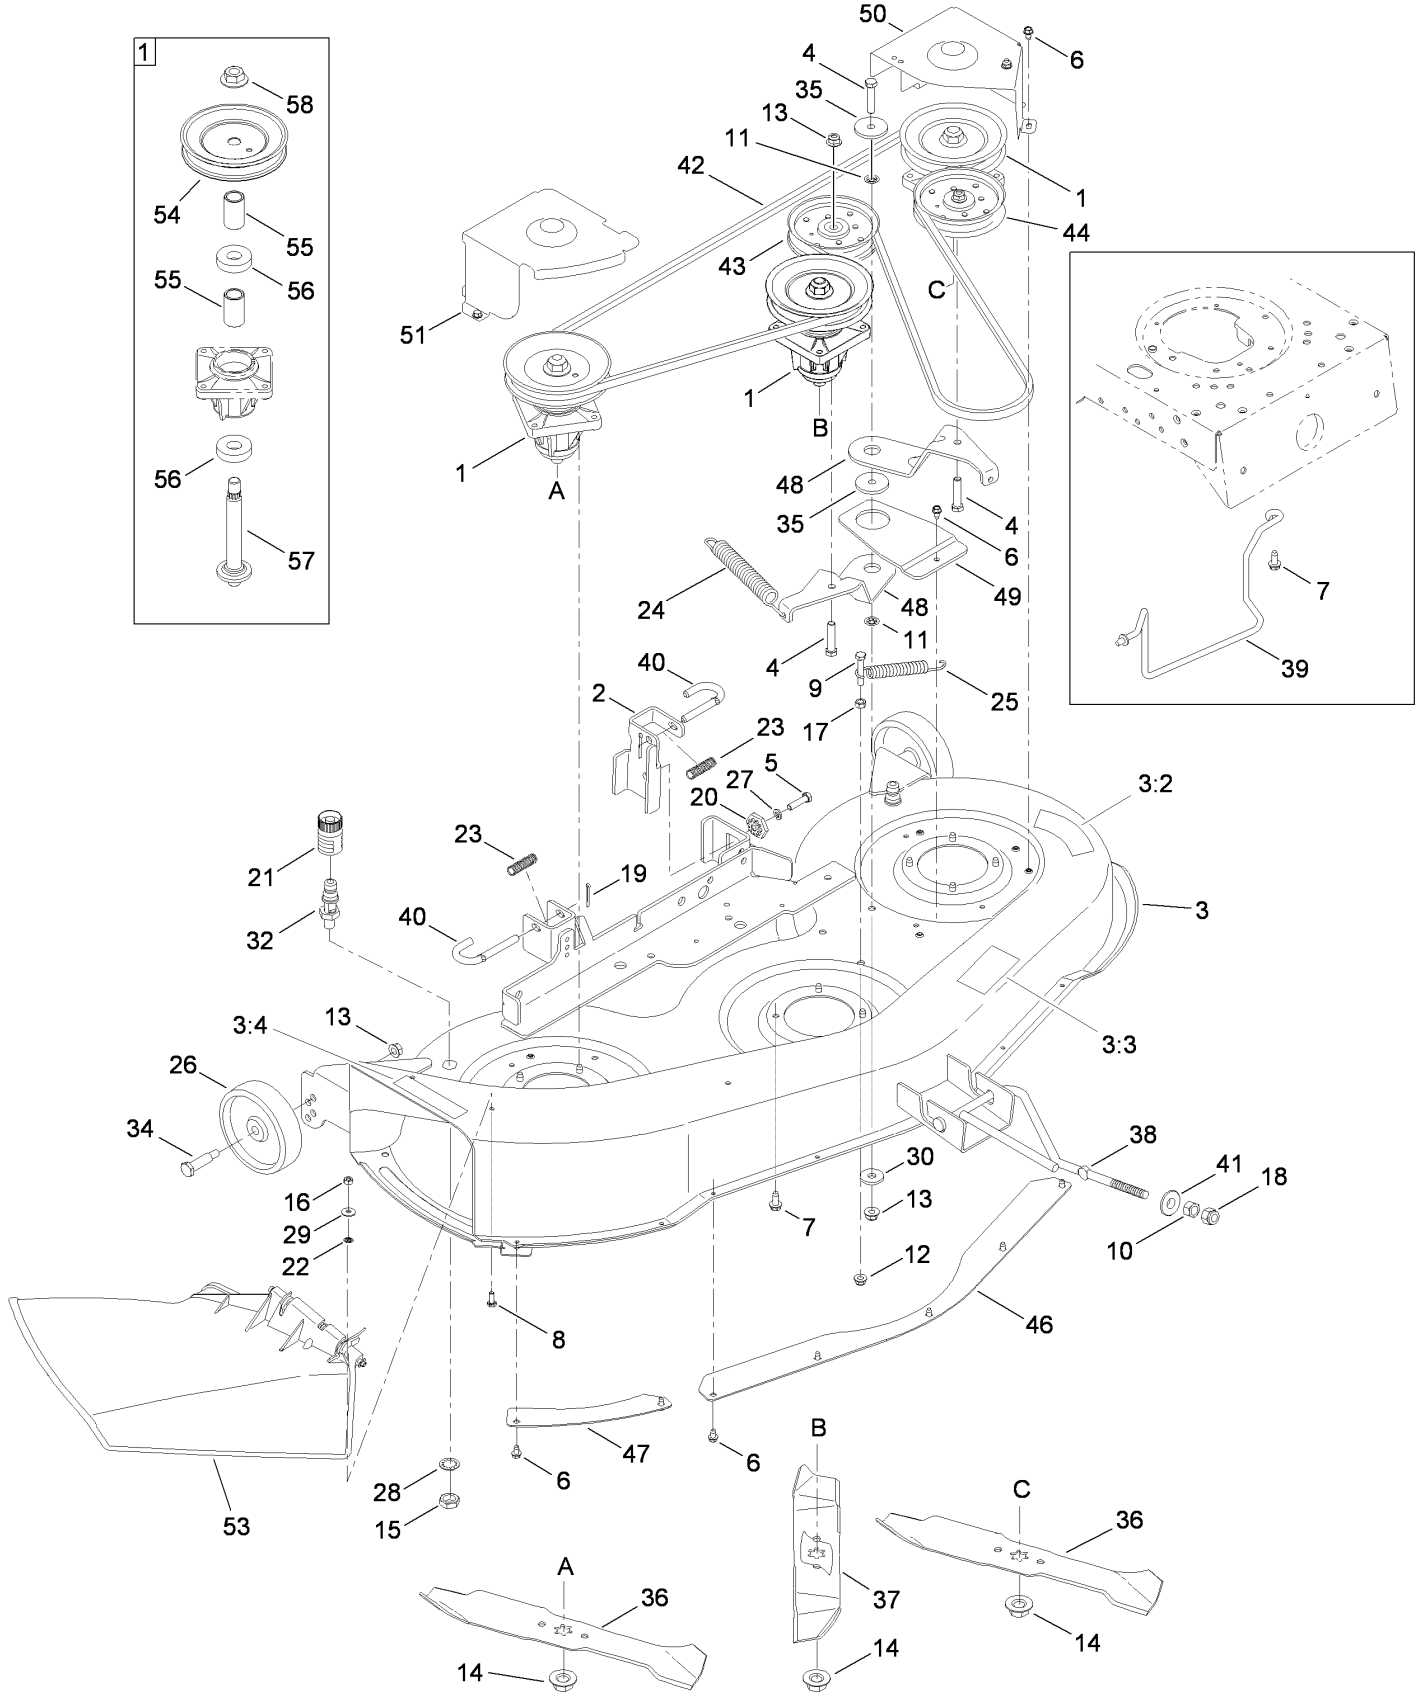

46 Inch Deck Assembly

Ref	Part No.	Qty.	Description
1	112-6276	1	Spindle ASM
2	112-0413	1	LH Hanger Bracket ASM
3	112-6296	1	Deck ASM (With Decals)
3:2	112-6284	1	Decal-Deck
3:3	112-6178	1	Decal-Belt Routing
3:4	112-6285	1	Decal-Chute
4	112-0513	1	Screw-HH
5	112-0373	1	Screw-HH
6	112-0524	1	Screw-HWHTF
7	112-0395	1	Screw-HWH
8	112-0499	1	Screw-HH
9	112-0590	1	Screw-HH
10	112-0458	1	Nut-Hex
11	112-0440	1	Nut-Push
12	112-0650	1	Nut-Lock, Flange
13	112-0668	1	Nut-Lock, Flange
14	112-0330	1	Nut-Lock, Flange
15	112-0351	1	Nut-Hex
16	112-0522	1	Nut-Hex
17	112-0437	1	Nut-Hex
18	112-0476	1	Nut-Lock, Hex (Nylon)
19	112-0568	1	Pin-Cotter
20	112-0327	1	Gear-Adjustment, Deck
21	112-0916	1	Adapter-Nozzle, Water
22	112-0623	1	Retainer-Bolt
23	112-0406	1	Spring-Compression
24	112-0324	1	Spring-Extension
25	112-6169	1	Spring-Extension
26	112-0337	1	Wheel-Deck, Rear
27	112-0366	1	Washer-Lock
28	112-0643	1	Washer-Lock
29	112-0485	1	Washer-Spring
30	112-0380	1	Washer-Flat
32	112-6274	1	Nozzle-Water, Deck
34	112-0334	1	Bolt-Shoulder
35	112-0584	1	Spacer-Shoulder
36	112-0304	1	Blade-16.28 Inch
37	112-0302	1	Blade-14.88 Inch
38	112-6155	1	Rod-Deck
39	112-6170	1	Rod-Keeper, Belt
40	112-0436	1	Pin-Handle, Deck Release
41	112-0641	1	Cup-Pivot, Lift
42	112-6171	1	Belt-Type A
43	112-6277	1	Pulley-Idler, 4.25 Inch
44	112-0303	1	Pulley-Idler, 3.50 Inch
46	112-0464	1	Skirt-Center, Deck
47	112-0400	1	Skirt-RH, Deck
48	112-6172	1	Bracket-Idler
49	112-6173	1	Bracket-Support
50	112-6174	1	Cover-Belt
51	112-6175	1	Cover-Belt
53	112-6255	1	Chute ASM

Ref	Part No.	Qty.	Description
54	112-0382	1	Pulley-Deck
55	112-6252	1	Spacer
56	112-0377	1	Bearing-Ball
57	112-6278	1	Shaft-Spindle
58	112-0330	1	Nut-Lock, Flange

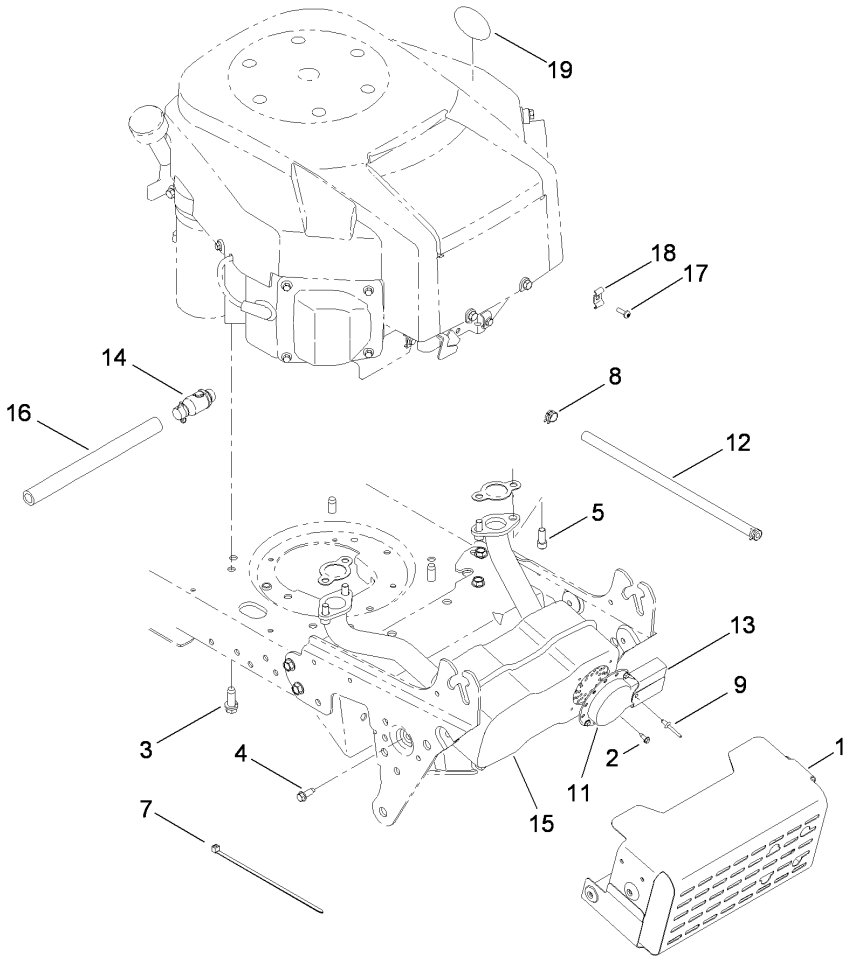

Muffler and Shield Assembly

Ref	Part No.	Qty.	Description
1	112-6202	1	Shield-Muffler
2	112-0626	1	Screw-HWHTF
3	112-6163	1	Screw-HH, TAP
4	112-0587	1	Screw-TAP
5	112-6012	1	Screw-HSH
7	112-0527	1	Tie-Cable
8	112-0573	1	Clamp-Hose
9	112-3741	1	Rivet-Pop
11	112-0453	1	Deflector-Muffler
12	112-0720	1	Hose-Fuel
13	112-0730	1	Deflector-Muffler, Long
14	112-6094	1	Drain-Oil
15	112-6164	1	Muffler-Twin
16	112-0553	1	Hose-Drain
17	112-6223	1	Screw-TAP
18	112-6224	1	Clamp-Dual
19	112-5960	1	Decal-Check Oil

Attachments and Accessories

For 13AP61RH848 - LX468 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
Extreme Blade Kit (3 Blades, 46 Inch Decks)	112-6049
42 Inch Two-Stage Snowthrower	190-032-101
46 Inch Twin Bagger	190-182-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Spark Plug	77-7330
46 Inch Mulch Kit	77215
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Filter-Air	98018
Filter-Oil	98020
Filter-Fuel	98021
Blade Kit (3 Blades, 46 Inch Decks)	98023


TORO®