Form Number 3362-350 Rev C

GT2200 Garden Tractor

Model No. 14AQ81RP848 - 1 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com


Contents

Description	Page
Front and Rear Wheel Assembly	3
Steering and Front Axle Assembly	4
Frame, Battery and Electric PTO Assembly	6
Seat, Fender and Deck Lift Assembly	8
Fuel Tank, Hood and Dash Assembly	10
Transmission, Belt and Control Pedal Assembly	12
50 Inch Deck Assembly	14
Spindle Assembly No. 112-6042	16
Muffler and Shield Assembly	17
Attachments and Accessories List	18

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

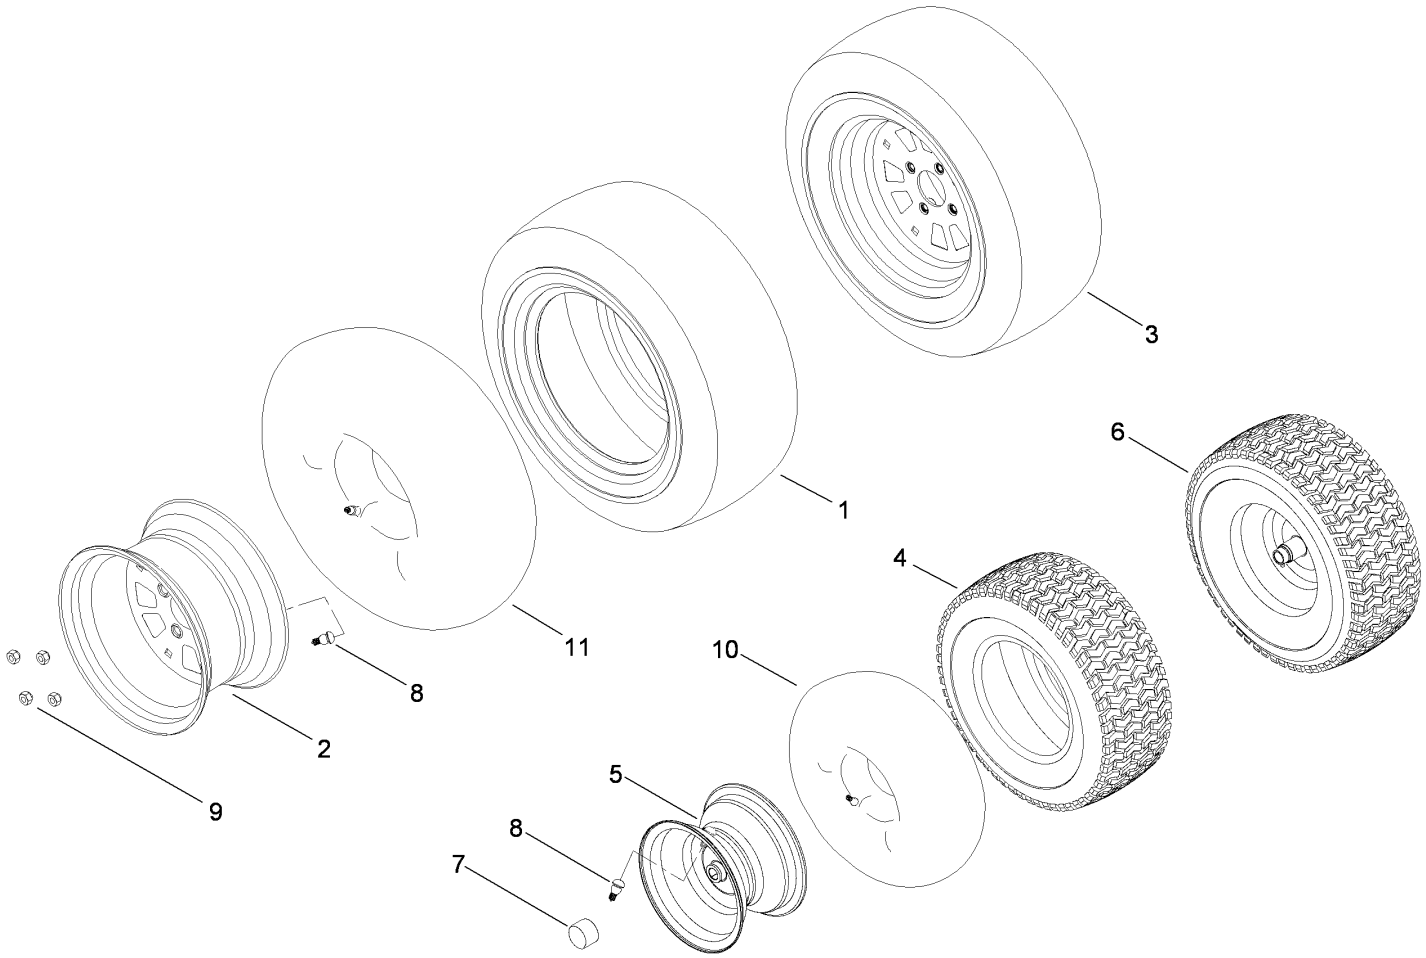

Front and Rear Wheel Assembly

Ref	Part No.	Qty.	Description
1	112-0876	1	Tire-Turf
2	112-0849	1	Rim ASM
3	112-0847	1	Wheel ASM
4	112-0877	1	Tire-Turf
5	112-0919	1	Rim ASM
6	112-0848	1	Wheel ASM
7	112-5968	1	Cap-Hub
8	112-0503	1	Valve-Air, Tubeless
9	112-0911	1	Nut-Lug
10	112819	1	Tube-Inner
11	231-90	1	Tube


Steering and Front Axle Assembly

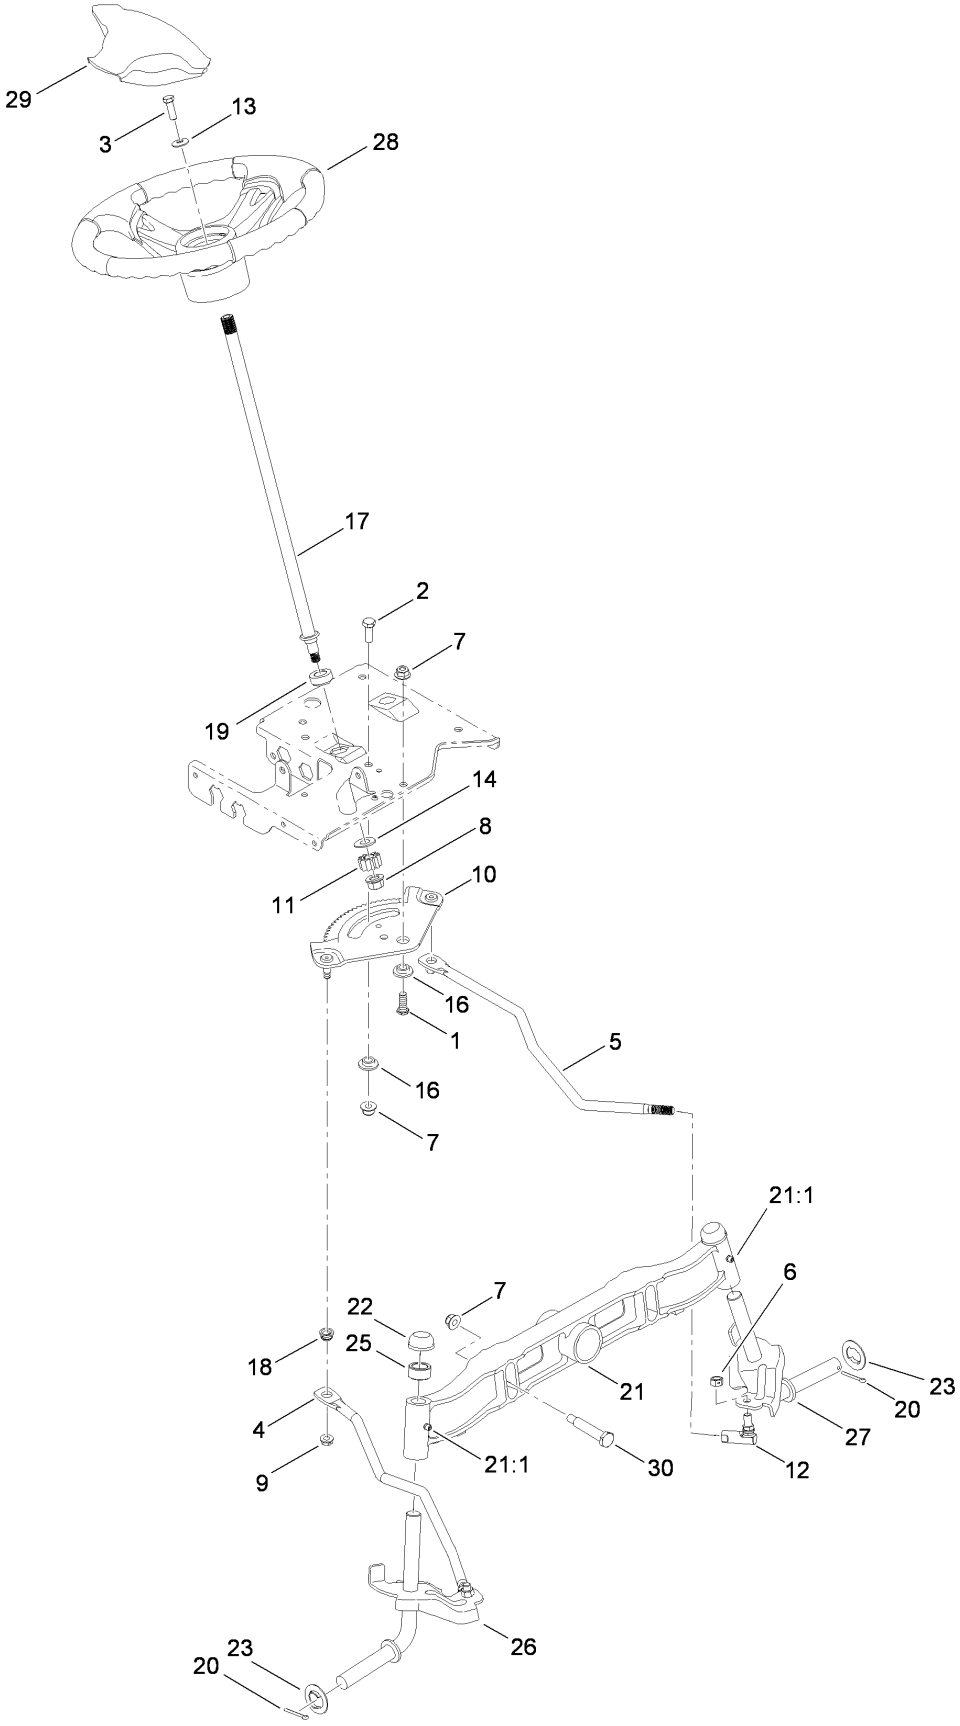

Steering and Front Axle Assembly

Ref	Part No.	Qty.	Description
1	112-0631	1	Screw-HH
2	112-0492	1	Screw-HH
3	112-0473	1	Screw-HH
4	112-0355	1	Link-Drag, RH
5	112-0346	1	Link-Drag, LH
6	112-0483	1	Nut-Hex, Lock
7	112-0668	1	Nut-Lock, Flange
8	112-0859	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange
10	112-0862	1	Gear-Steering
11	112-0863	1	Gear-Pinion, Steering
12	112-0917	1	Ball Joint ASM
13	112-0924	1	Washer-Flat
14	112-0925	1	Washer-Flat
16	112-0881	1	Spacer-Shoulder
17	112-6097	1	Shaft-Steering
18	112-0929	1	Bushing
19	112-6257	1	Bearing-Flange, Hex
20	112-0860	1	Pin-Cotter
21	112-6099	1	Pivot-Axle, Cast Iron
21:1	112-0926	1	Fitting-Grease
22	112-0323	1	Cap
23	112-6258	1	Washer-Flat
25	112-6136	1	Spacer
26	112-6015	1	RH Axle ASM
27	112-6016	1	LH Axle ASM
28	112-0438	1	Wheel-Steering, Softgrip
29	112-0341	1	Cover-Wheel, Steering
30	112-0699	1	Bolt-Shoulder


Frame, Battery and Electric PTO Assembly

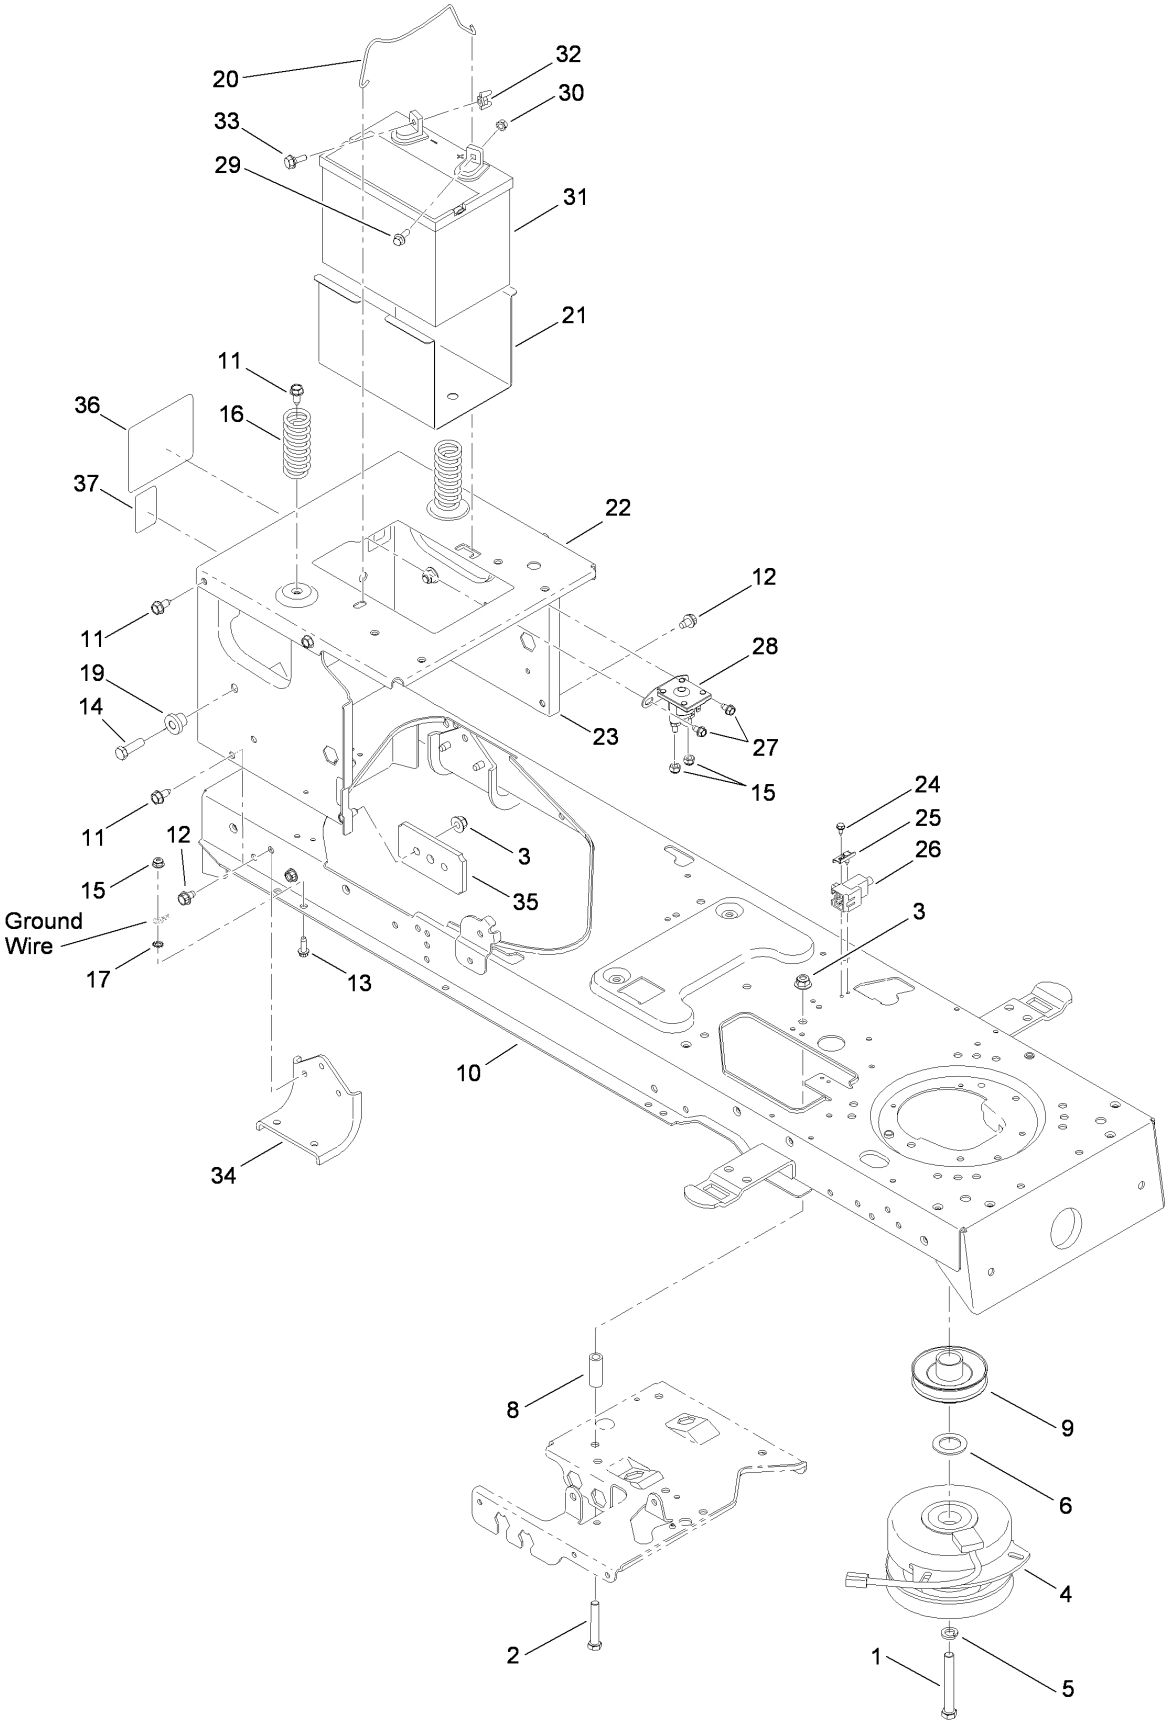

Frame, Battery and Electric PTO Assembly

Ref	Part No.	Qty.	Description
1	112-0561	1	Screw-HH
2	112-6009	1	Screw-HH
3	112-0668	1	Nut-Lock, Flange
4	112-6044	1	Clutch-Electric
5	112-0428	1	Washer-Lock
6	112-0420	1	Washer-Flat
8	112-0433	1	Spacer
9	112-6045	1	Pulley-Engine
10	112-5974	1	Lower Frame ASM
11	112-6070	1	Screw-TAP
12	112-0676	1	Screw-TAP
13	112-0587	1	Screw-TAP
14	112-0578	1	Screw-HH
15	112-0636	1	Nut-Lock, Flange
16	112-6208	1	Spring-Compression
17	112-0703	1	Washer-Lock, External
19	112-0661	1	Spacer-Shoulder
20	112-0581	1	Rod-Holddown, Battery
21	112-0570	1	Tray-Battery
22	112-6209	1	Bracket-Frame, Seat
23	112-6227	1	Frame-Upper
24	112-0651	1	Screw-TAP
25	112-0671	1	Plate-Switch
26	112-0455	1	Switch-Interlock
27	112-0524	1	Screw-HWHTF
28	112-6073	1	Solenoid-12V, 2 Post 2 Tab
29	112-1070	1	Bolt-Carriage
30	112-0546	1	Nut-Sems
31	112-0425	1	Battery-245, Cca (Dry Flat Top)
32	112-1121	1	Nut-Wing
33	112-6182	1	Bolt-Shoulder
34	112-0710	1	Bracket-Axle
35	112-6291	1	Plate-Support
36	112-1284	1	Decal
37	112-6289	1	Decal-Hydro Release


Seat, Fender and Deck Lift Assembly

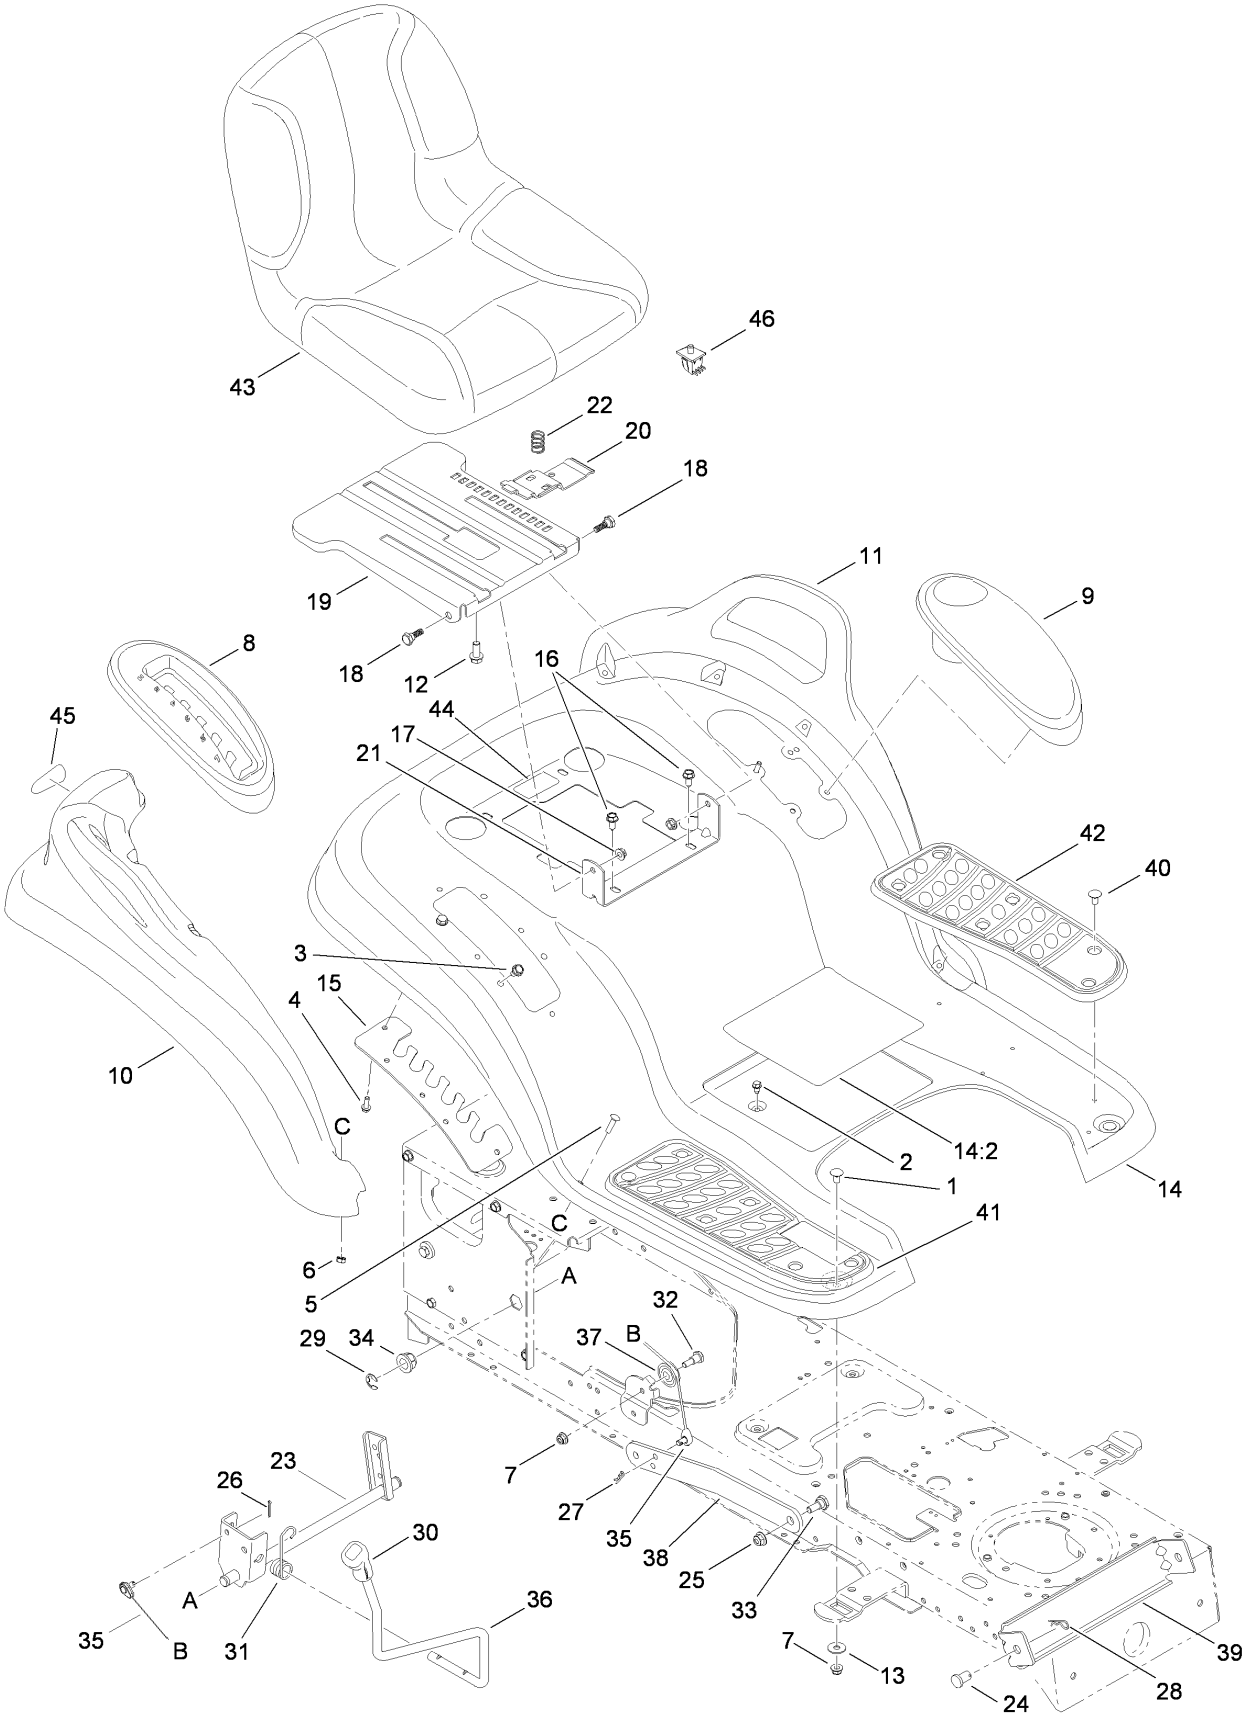

Seat, Fender and Deck Lift Assembly

Ref	Part No.	Qty.	Description
1	112-0426	1	Bolt-CARR
2	112-0524	1	Screw-HWHTF
3	112-6070	1	Screw-TAP
4	112-0509	1	Screw-TAP
5	112-0907	1	Screw-CARR
6	112-0546	1	Nut-Sems
7	112-0650	1	Nut-Lock, Flange
8	112-6228	1	Cover-Lever, Lift
9	112-0870	1	Cover (W/Cup Holder)
10	112-0871	1	Flare-Fender, RH
11	112-0872	1	Flare-Fender, LH
12	112-6229	1	Screw-HH
13	112-0582	1	Washer-Flat
14	112-6297	1	Fender With Decal
14:2	112-6290	1	Decal-Safety
15	112-0629	1	Bracket-Adjusting, Lift
16	112-6070	1	Screw-TAP
17	112-0511	1	Nut-Lock, Flange
18	112-0575	1	Bolt-Shoulder
19	112-6214	1	Bracket-Mount, Seat
20	112-6232	1	Lever-Adjustment, Seat
21	112-6217	1	Bracket-Pivot, Seat
22	112-6234	1	Spring-Compression
23	112-5969	1	Lift Shaft ASM
24	112-0376	1	Pin-Bracket, Lift
25	112-0668	1	Nut-Lock, Flange
26	112-0459	1	Pin-Cotter
27	112-0568	1	Pin-Cotter
28	112-0394	1	Pin-Hair
29	112-0586	1	Ring-E
30	112-0585	1	Grip-Handle
31	112-0477	1	Spring-Torsion
32	112-0443	1	Bolt-Shoulder
33	112-0442	1	Bolt-Shoulder
34	112-0347	1	Bearing-Flange
35	112-0374	1	Cable-Lift
36	112-5970	1	Handle-Lift
37	112-0502	1	Pulley-Roller
38	112-6165	1	Arm-Lift
39	112-0707	1	Bracket-Stabilizer
40	112-0549	1	Clip-Ratchet, Fastener
41	112-0540	1	Pad-Foot, RH
42	112-0545	1	Pad-Foot, LH
43	112-6215	1	Seat-High
44	112-6282	1	Decal-Toro Hotline
45	112-5873	2	Reflector
46	110-9889	1	Switch-Seat


Fuel Tank, Hood and Dash Assembly

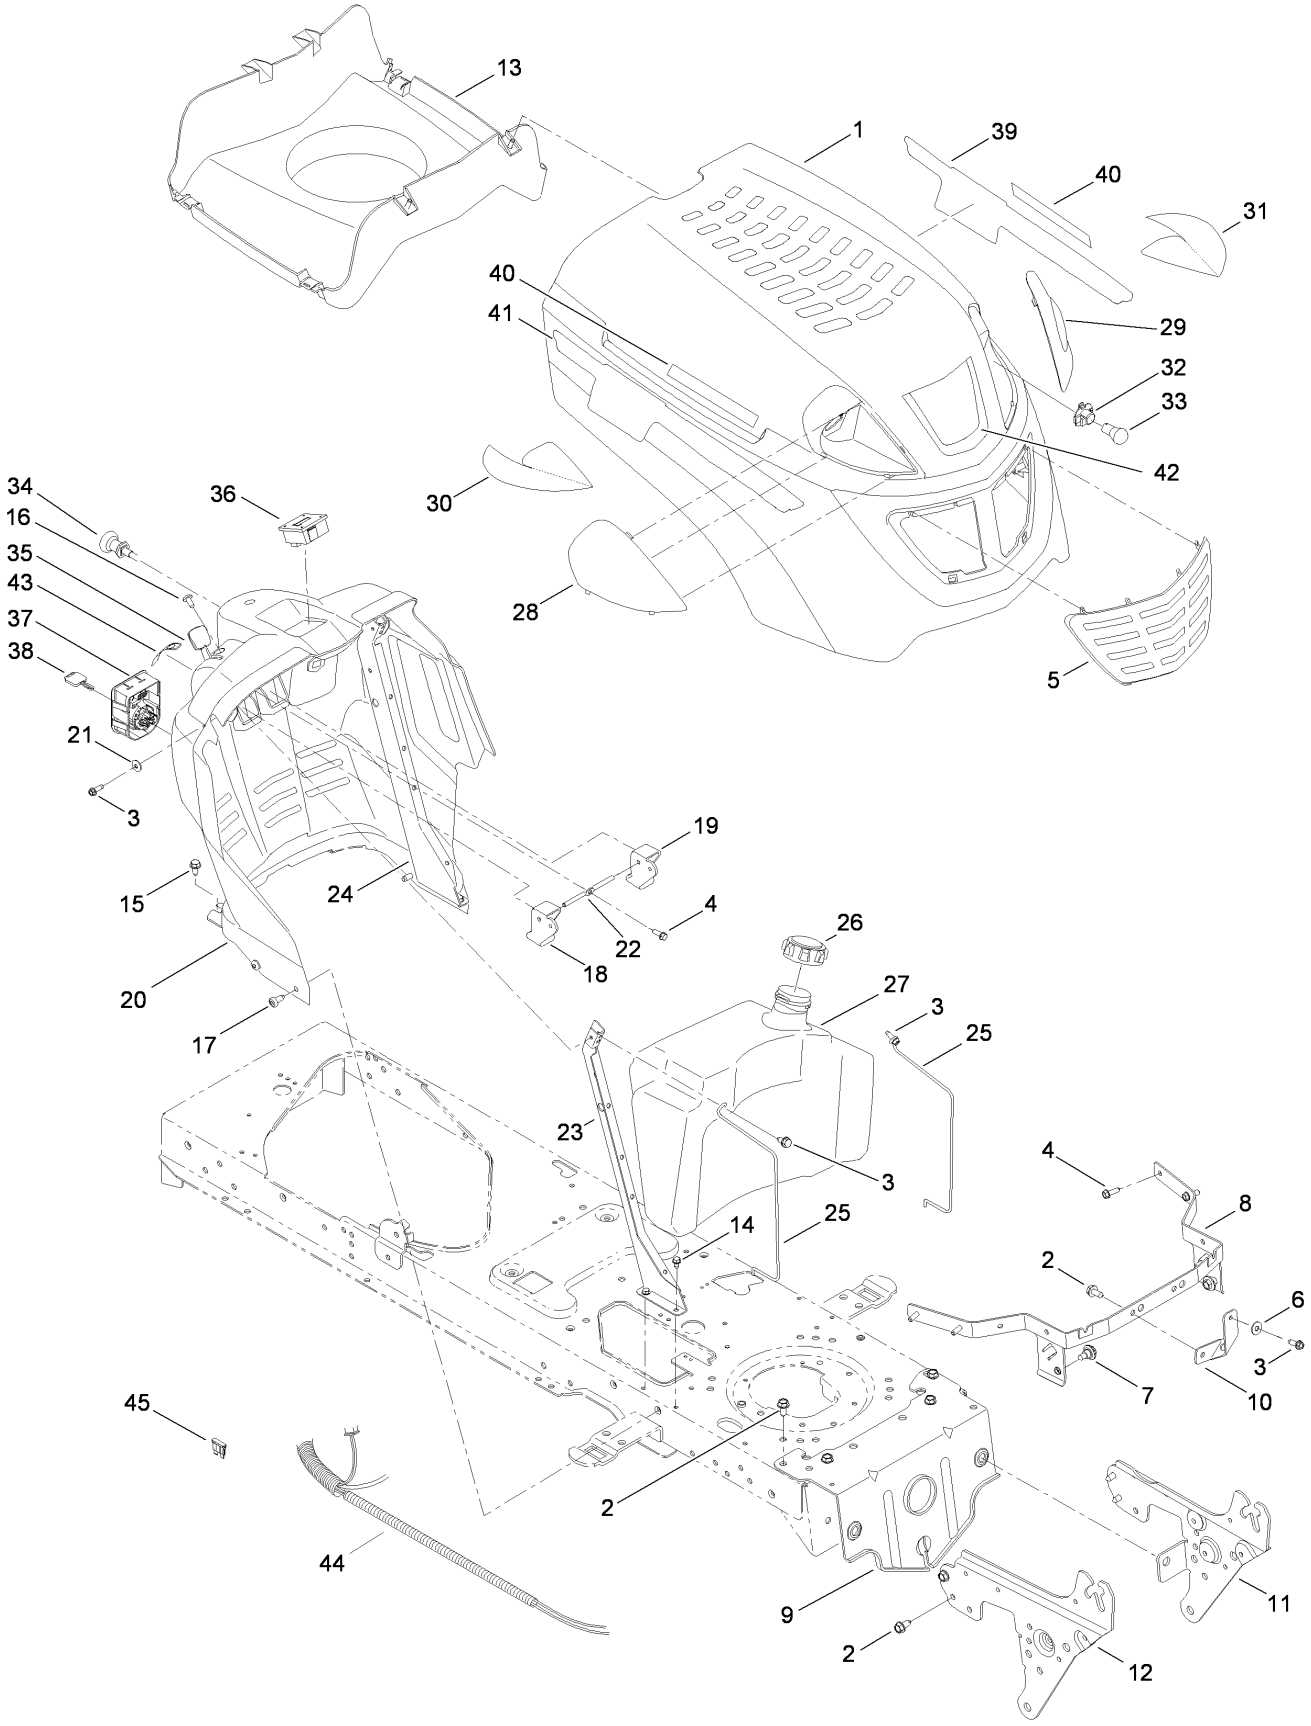

Fuel Tank, Hood and Dash Assembly

Ref	Part No.	Qty.	Description
1	112-0444	1	Hood
2	112-6070	1	Screw-TAP
3	112-0587	1	Screw-TAP
4	112-0509	1	Screw-TAP
5	112-0381	1	Grill
6	112-5989	1	Washer-Flat
7	112-6128	1	Bolt-Shoulder, TAP
8	112-6267	1	Bracket-Pivot, Hood
9	112-6127	1	Bracket-Pivot
10	112-5986	1	Bracket-Support, Hood
11	112-6126	1	Bracket-Pivot, Support (LH)
12	112-6125	1	Bracket-Pivot, Support (RH)
13	112-6141	1	Plenum-Hood
14	112-0524	1	Screw-HWHTF
15	112-0676	1	Screw-TAP
16	112-0550	1	Screw-TAP
17	112-0563	1	Screw-TAP
18	112-0526	1	Lever-Cruise
19	112-0580	1	Lever-Brake
20	112-6266	1	Dash-Electric, PTO
21	112-0485	1	Washer-Spring
22	112-0604	1	Rod-Lever, Bent
23	112-6262	1	Support-Dash, Plate (RH)
24	112-6263	1	Support-Dash, Plate (LH)
25	112-0678	1	Rod-Support
26	112-6264	1	Cap-Fuel
27	112-6119	1	Tank-Fuel, 3 Gal
28	112-0447	1	Lens-RH
29	112-0446	1	Lens-LH
30	112-5810	1	Reflector-RH
31	112-5811	1	Reflector-LH
32	112-0408	1	Socket-Headlight
33	112-0402	1	Lamp-12V, Miniature
34	112-0310	1	Cable Control ASM (W/Choke Knob)
35	112-6166	1	Cable-Throttle
36	112-6117	1	Meter-Hour
37	112-6236	1	Module-Switch, Ignition
38	112-6115	1	Key-Ignition
39	112-5952	1	Decal-Hood, Left Side
40	112-5967	2	Decal-Side Panel
41	112-5953	1	Decal-Hood, Right Side
42	112-3716	1	Decal-Hood
43	112-6283	1	Decal-Throttle
44	112-6299	1	Harness-Wire
45	112-5943	1	Fuse-20 Amp

Transmission, Belt and Control Pedal Assembly

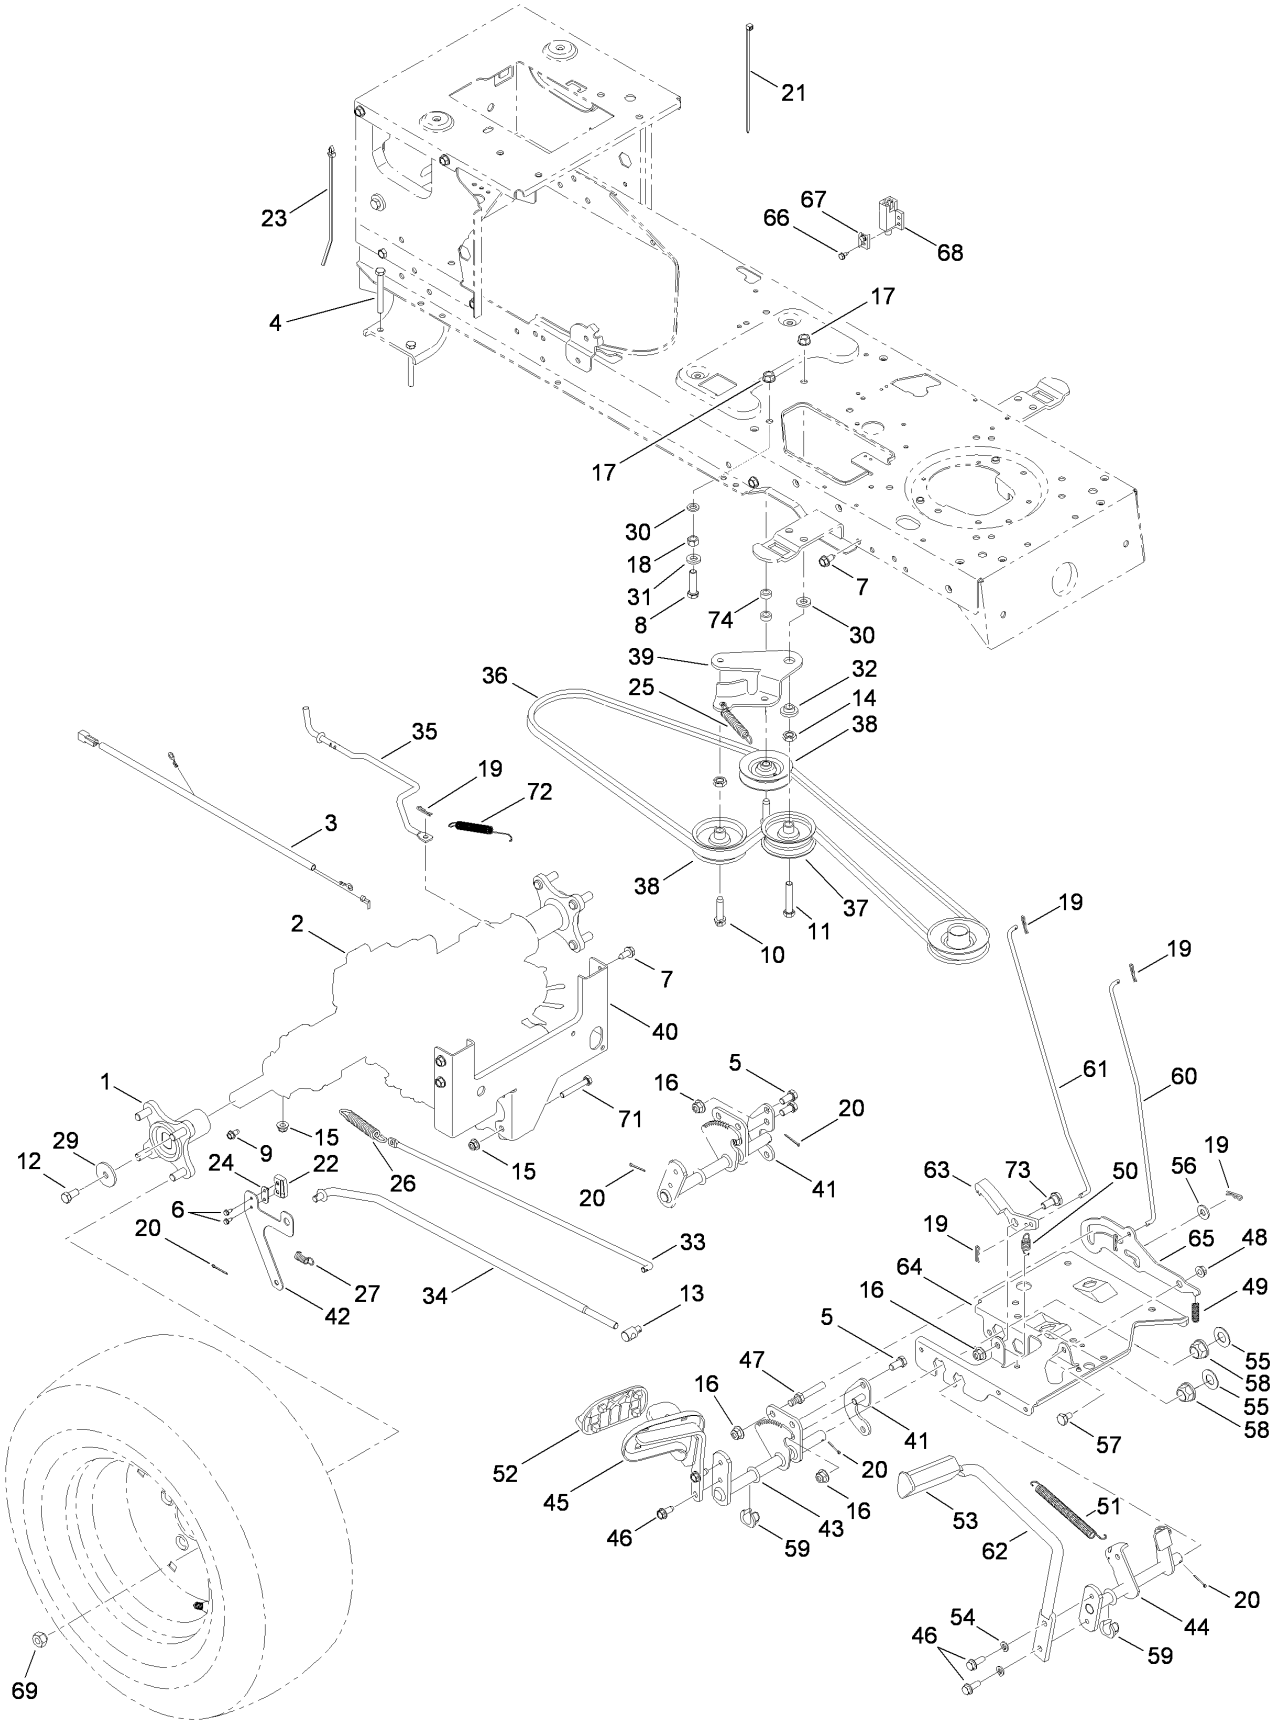


Transmission, Belt and Control Pedal Assembly

Ref	Part No.	Qty.	Description
1	112-0738	1	Wheel Hub ASM
2	112-6237	1	Hydrostatic Transmission ASM
3	112-6020	1	Harness ASM
4	112-6238	1	Screw-HH
5	112-0855	1	Screw-HH
6	112-0626	1	Screw-HWHTF
7	112-6070	1	Screw-TAP
8	112-0578	1	Screw-HH
9	112-0524	1	Screw-HWHTF
10	112-6143	1	Screw-TAP
11	112-6009	1	Screw-HH
12	112-0768	1	Screw-HH
13	112-0908	1	Ferrule
14	112-0493	1	Nut-Jam
15	112-0650	1	Nut-Lock, Flange
16	112-0668	1	Nut-Lock, Flange
17	112-0385	1	Nut-Lock, Flange
18	112-0668	1	Nut-Lock, Flange
19	112-0459	1	Pin-Cotter
20	112-0568	1	Pin-Cotter
21	112-0527	1	Tie-Cable
22	112-0602	1	Switch-Spring, Short
23	112-0866	1	Tie-Cable
24	112-0625	1	Plate-Insulator
25	112-0873	1	Spring-Extension
26	112-6268	1	Spring-Extension
27	112-0875	1	Spring-Extension
29	112-0534	1	Washer-Flat
30	112-0920	1	Washer-Flat
31	112-0572	1	Washer-Flat
32	112-0345	1	Spacer-Shoulder
33	112-6239	1	Rod-Brake, Hydrostatic
34	112-6240	1	Rod-Control, Hydrostatic
35	112-6241	1	Rod-Bypass, Hydrostatic
36	112-5951	1	Belt-V, Type
37	112-0313	1	Pulley-Idler, Flat
38	112-6149	1	Pulley-Idler, Y Type
39	112-0525	1	Bracket-Idler, Center Double
40	112-6242	1	Bracket-Torque, Transmission
41	112-0899	1	Bracket-Control
42	112-6243	1	Bracket-Actuator, Switch
43	112-0850	1	Control ASM
44	112-5998	1	Speed Control ASM
45	112-0851	1	Control Pedal ASM
46	112-0395	1	Screw-HWH
47	112-0599	1	Pin
48	112-0511	1	Nut-Lock, Flange
49	112-0506	1	Spring
50	112-0510	1	Spring-Extension
51	112-0348	1	Spring-Extension
52	112-0543	1	Pad-Pedal
53	112-6001	1	Pad-Brake

Ref	Part No.	Qty.	Description
54	112-0366	1	Washer-Lock
55	112-0339	1	Washer-Flat
56	112-0541	1	Washer-Flat
57	112-0542	1	Bolt-Shoulder
58	112-0347	1	Bearing-Flange
59	112-0387	1	Bearing-Flange, Hex (Split)
60	112-6150	1	Rod-Brake, Lock
61	112-0662	1	Rod-Control, Cruise
62	112-6005	1	Pedal-Brake
63	112-6004	1	Latch-Cruise
64	112-0681	1	Bracket-Support, Steering
65	112-5812	1	Bracket-Lockout
66	112-0651	1	Screw-TAP
67	112-0671	1	Plate-Switch
68	112-0455	1	Switch-Interlock
69	112-0911	1	Nut-Lug
71	112-0590	1	Screw-HH
72	112-6244	1	Spring-Extension
73	112-0442	1	Bolt-Shoulder
74	112-6245	1	Spacer


50 Inch Deck Assembly

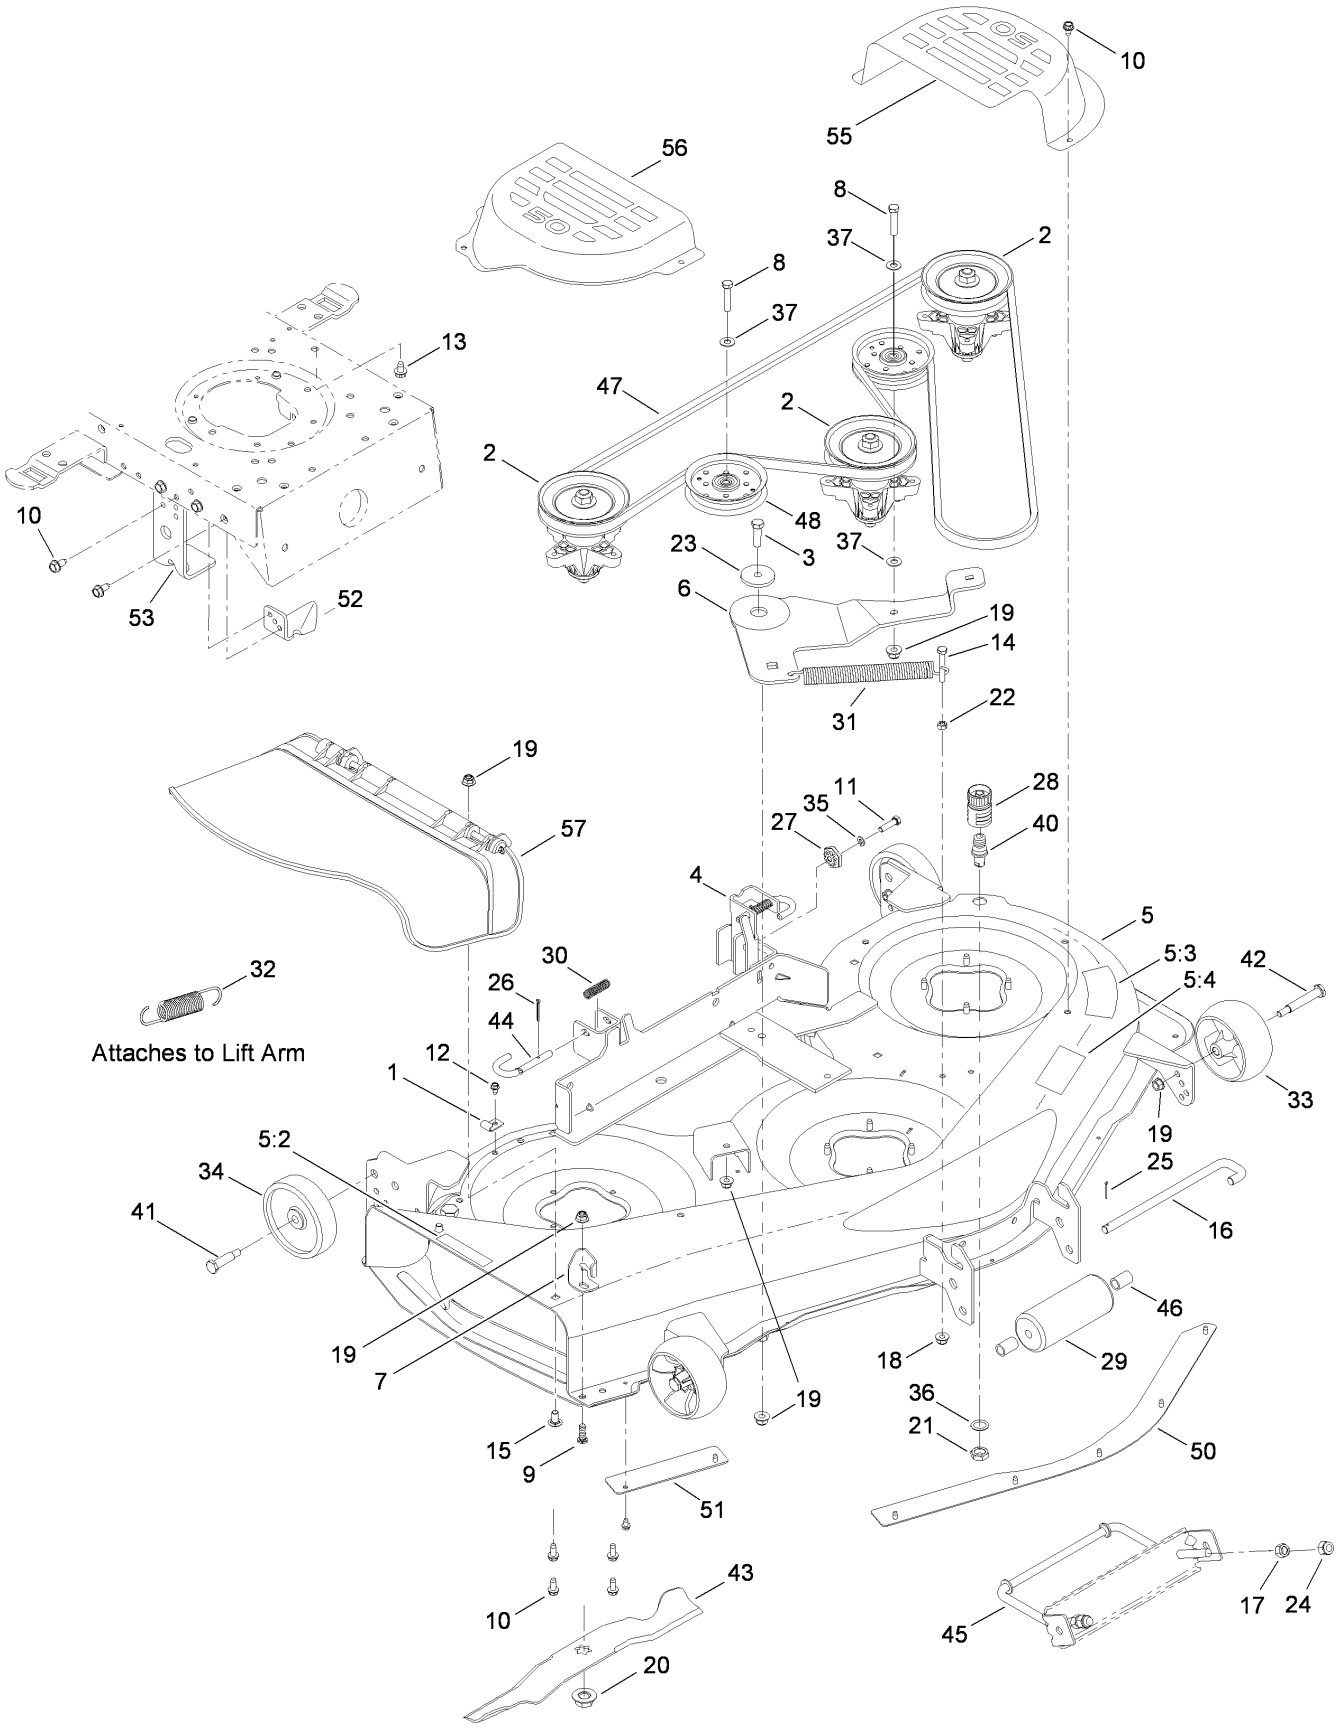

50 Inch Deck Assembly


Ref	Part No.	Qty.	Description
1	112-0378	1	Bracket-Retain, Hook
2	112-6042	1	Spindle ASM
3	112-0557	1	Screw-HH
4	112-0413	1	LH Hanger Bracket ASM
5	112-6298	1	Deck With Decals
5:2	112-6284	1	Decal-Deck
5:3	112-1273	1	Decal-Belt Routing, Deck
5:4	112-6285	1	Decal-Chute
6	112-6057	1	Bracket-Idler
7	112-0854	1	Stop-Chute
8	112-0513	1	Screw-HH
9	112-0631	1	Screw-HH
10	112-6070	1	Screw-TAP
11	112-0373	1	Screw-HH
12	112-0524	1	Screw-HWHTF
13	112-0676	1	Screw-TAP
14	112-0590	1	Screw-HH
15	112-0452	1	Bolt-CARR
16	112-0682	1	Pin-Roller
17	112-0458	1	Nut-Hex
18	112-0650	1	Nut-Lock, Flange
19	112-0668	1	Nut-Lock, Flange
20	112-0330	1	Nut-Lock, Flange
21	112-0351	1	Nut-Hex
22	112-0437	1	Nut-Hex
23	112-0584	1	Spacer-Shoulder
24	112-0476	1	Nut-Lock, Hex (Nylon)
25	112-0568	1	Pin-Cotter
26	112-0412	1	Pin-Cotter
27	112-0327	1	Gear-Adjustment, Deck
28	112-0916	1	Adapter-Nozzle, Water
29	112-6185	1	Roller-Front
30	112-0406	1	Spring-Compression
31	112-6043	1	Spring-Extension
32	112-0399	1	Spring-Lift, Assist
33	112-0677	1	Wheel-Deck, Front
34	112-0337	1	Wheel-Deck, Rear
35	112-0366	1	Washer-Lock
36	112-0643	1	Washer-Lock
37	112-0572	1	Washer-Flat
40	112-6274	1	Nozzle-Water, Deck
41	112-0334	1	Bolt-Shoulder
42	112-0325	1	Bolt-Shoulder
43	112-6280	1	Blade-Star, 17.90
44	112-0436	1	Pin-Handle, Deck Release
45	112-0497	1	Rod-Front, Adjust
46	112-0691	1	Spacer
47	112-6186	1	Belt-V, Section A
48	112-6277	1	Pulley-Idler, 4.25 Inch
50	112-5837	1	Skirt-Center
51	112-0612	1	Skirt-RH
52	112-0571	1	Bracket-Clutch

Ref	Part No.	Qty.	Description
53	112-0689	1	Bracket-Deck, Up Stop
55	112-6041	1	Cover-Belt, LH
56	112-6040	1	Cover-Belt, RH
57	112-5846	1	Chute Deflector ASM

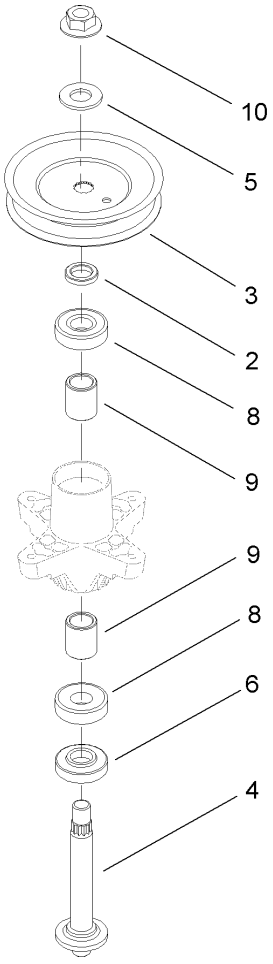

Spindle Assembly No. 112-6042

Ref	Part No.	Qty.	Description
2	112-6038	1	Spacer
3	112-5926	1	Pulley
4	112-0884	1	Shaft-Spindle, Blade (Star)
5	112-0921	1	Washer-Flat
6	112-0721	1	Spacer
8	112-0377	1	Bearing-Ball
9	112-0389	1	Spacer
10	112-0330	1	Nut-Lock, Flange

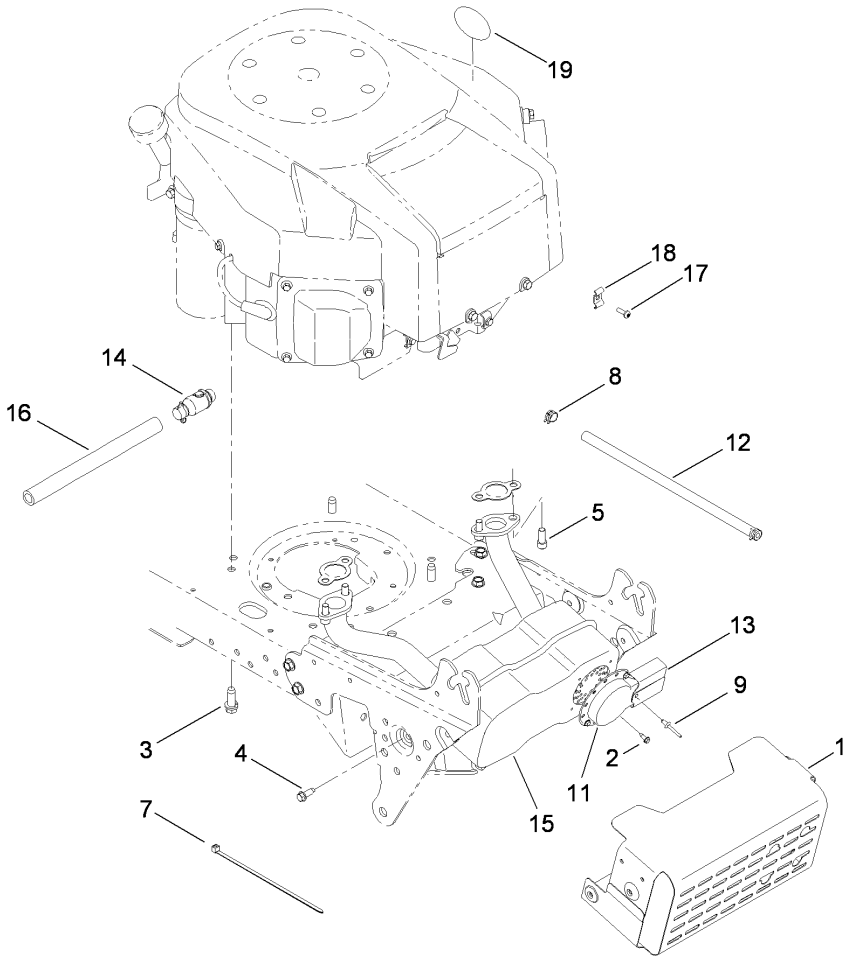

Muffler and Shield Assembly

Ref	Part No.	Qty.	Description
1	112-6202	1	Shield-Muffler
2	112-0626	1	Screw-HWHTF
3	112-6163	1	Screw-HH, TAP
4	112-0587	1	Screw-TAP
5	112-6012	1	Screw-HSH
7	112-0527	1	Tie-Cable
8	112-0573	1	Clamp-Hose
9	112-3741	1	Rivet-Pop
11	112-0453	1	Deflector-Muffler
12	112-0720	1	Hose-Fuel
13	112-0730	1	Deflector-Muffler, Long
14	112-6094	1	Drain-Oil
15	112-6164	1	Muffler-Twin
16	112-0553	1	Hose-Drain
17	112-6223	1	Screw-TAP
18	112-6224	1	Clamp-Dual
19	112-5960	1	Decal-Check Oil

Attachments and Accessories

For 14AQ81RP848 - GT2200 Garden Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
42 Inch Two-Stage Snowthrower	190-032-101
50 Inch Triple Bagger	190-192-190
46 Inch Front Blade	190-833-000
50 Inch Mulch Kit	77220
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
12 Inch Rear Wheel Weights	81115
Tire Chains (23 x 9.50-12)	82531
Filter-Air	98019
Filter-Oil	98020
Filter-Fuel	98021
Blade Kit (3 Blades, 50 Inch Decks)	98024

NOTES


TORO®