FORM NO. 3317–275


TORO®

Wheel Horse®
Yard And Garden Tractor
48” Snow Blade

Model No. 79252–5900001 & Up

Parts Catalog

3317−275

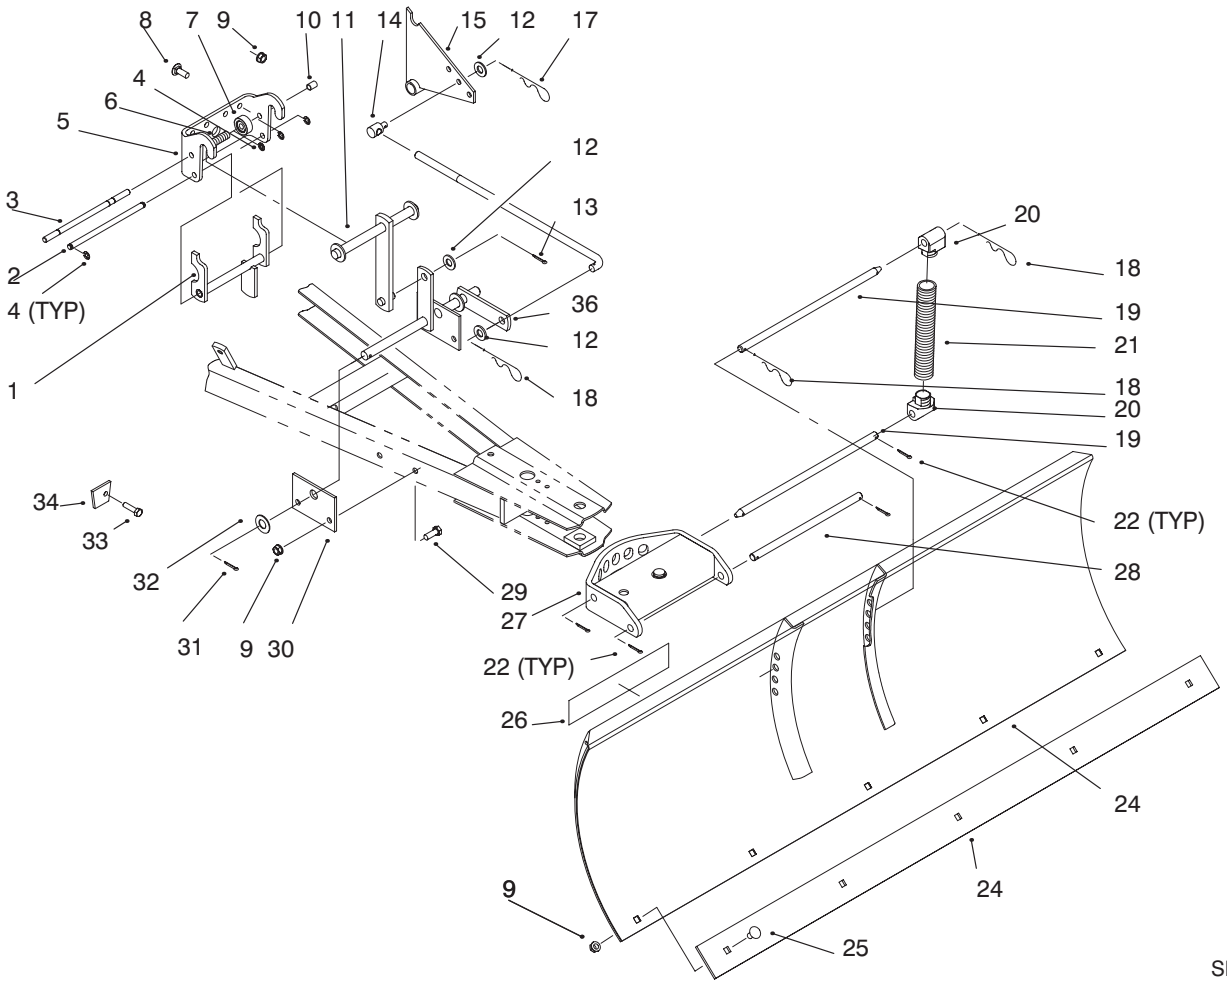


Sheet No. : 3

Snow Blade And Front Mounting Hitch

Ref. No.	Part No.	Description	No. Used
1	93−1613	Latch	1
2	101750	Rod−Latch Pivot	1
3	101751	Rod Lock	1
4	105797	Ring−Retaining	5
5	78−1720−01	Hitch−Front	1
6	8616	Spring	1
7	101707	Lock−Attachment	1
8	3231−22	Bolt−Carr	4
9	3296−39	Nut−Lock	13
10	105316	Cap−Rod	1
11	79−5430−01	Arm	1
12	3256−26	Washer−Flat	2
13	3272−7	Pin−Cotter	1
14	7736	Stud Trunion	1
15	79−5510−01	Plate	1
16	79−5530	Rod	1
17	9335054	Hairpin	1
18	9335124	Hairpin	3
19	5120	Rod Blade Pivot	2
	*Not Illustrated		

Ref. No.	Part No.	Description	No. Used
20	88−2080−01	Lug−Spring	4
21	93−1611−01	Spring−Trip Return	2
22	3272−11	Pin−Cotter	4
23	78−1330−01	Blade	1
24	93−1612−01	Plate−Blade Edge	1
25	3231−1	Screw−Carr	5
26	92−8748	Decal−Attachment	1
27	78−8760−01	Quadrant	1
28	4564	Rod−Lower	1
29	323−6	Screw−HH	4
30	79−5490−01	Plate	1
31	3272−22	Pin−Cotter	1
32	3256−27	Washer−Flat	1
33	9267204	Screw	2
34	79−4770−01	Stop	2
36	79−5460−01	Lift Arm	1
*	92–6840	Blade Skid Kit (Optional)	2

*Not Illustrated

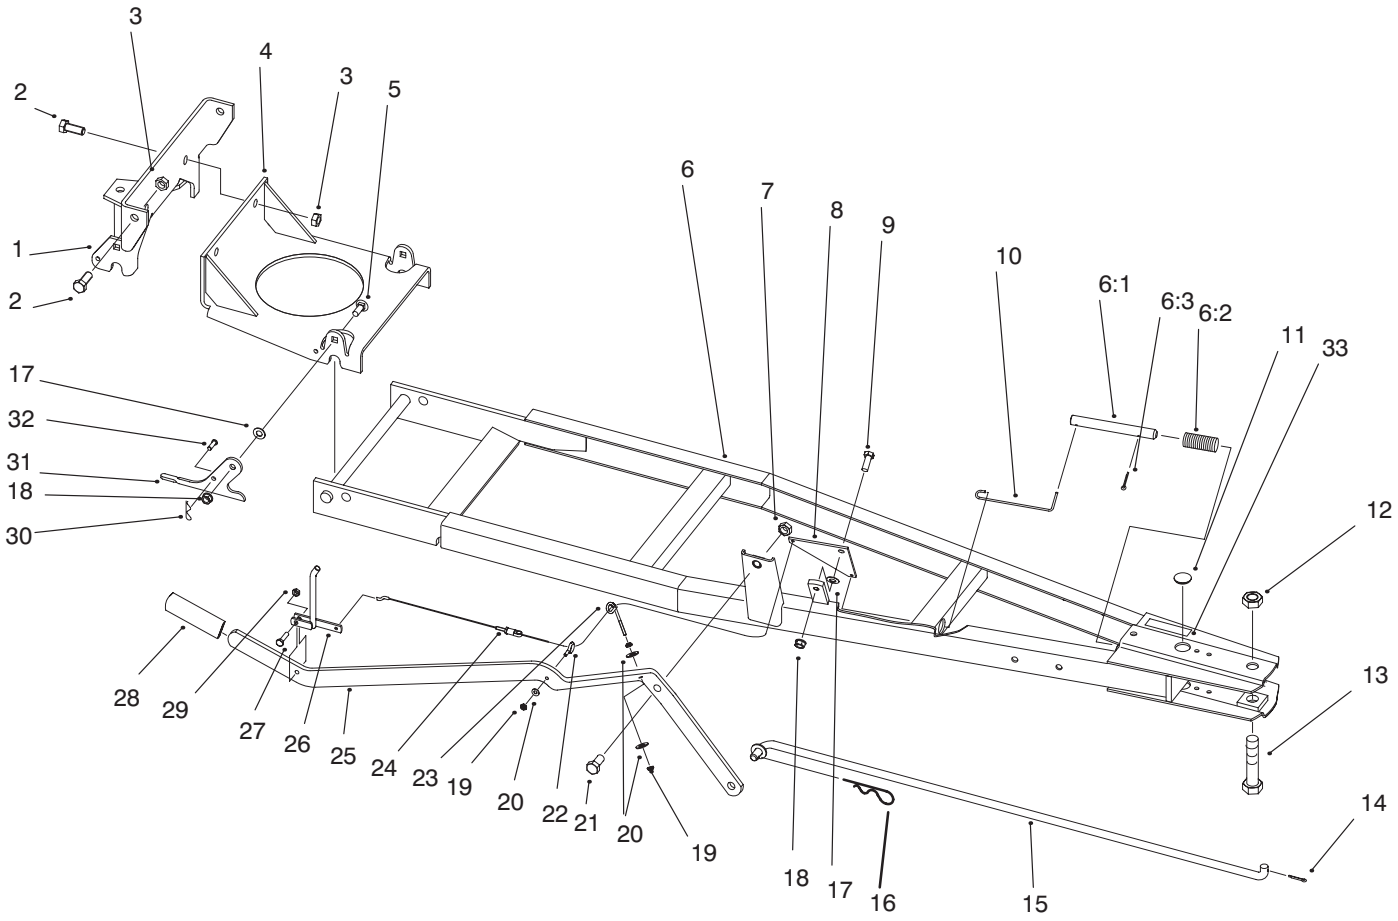

Sheet No. : 2

Frame And Rear Mounting Hitch

Ref. No.	Part No.	Description	No. Used
1	93−1389−03	Bracket−Mounting	1
2	325−5	Screw−HH	5
3	3296−23	Nut−HH	5
4	92−7070−03	Bracket−Blade Mount	1
5	3231−25	Screw−Carr	2
6	79−5080	Frame Blade	1
6:1	88−6520	Index Pin	1
6:2	2354	Spring−Compression	1
6:3	3272−11	Pin−Cotter	1
7	3218−18	Nut−Jam	1
8	92−7037	Plate Index	1
9	323−6	Screw−HH	1
10	79−6130	Rod−Lower, Index	1
11	4944	Plug	2
12	9156404	Nut−Lock	1
13	3216−7	Screw−HH	1
14	3272−11	Pin−Cotter	1
15	79−4790	Rod	1

Ref. No.	Part No.	Description	No. Used
16	9335124	Hairpin	1
17	3256−24	Washer−Flat	3
18	3296−39	Nut−Lock	3
19	3296−12	Nut−Lock	3
20	3256−14	Washer−Flat	3
21	325−4	Screw−HH	1
22	108566	Eyebolt	1
23	92−7039	Cable−Eyelet	1
24	93−3168	Cable Asm Lift	1
25	92−7034	Lever−Blade	1
26	92−7036	Index Lever	1
27	321−6	Screw HH	1
28	5359	Grip−Handle	1
29	32146−17	Nut−Lock	1
30	9335044	Hairpin	2
31	104657	Handle−Latch	2
32	9321204	Pin−Clevis	2

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
2354	Spring–Compression	3	6:2	1
4564	Rod–lower	2	28	1
4944	Plug	3	11	2
5120	Rod Blade Pivot	2	19	2
5359	Grip–Handle	3	28	1
7736	Stud Trunnion	2	14	1
8616	Spring	2	6	1
101707	Lock–Attachment	2	7	1
101750	Rod–Latch Pivot	2	2	1
101751	Rod Lock	2	3	1
104657	Handle–Latch	3	31	2
105316	Cap–Rod	2	10	1
105797	Ring–Retaining	2	4	5
108566	Eyebolt	3	22	1
9156404	Nut–Lock	3	12	1
9267204	Screw	2	33	2
9321204	Pin–Clevis	3	32	2
9335044	Hairpin	3	30	2
9335054	Hairpin	2	17	1
9335124	Hairpin	3	16	1
9335124	Hairpin	2	18	3
78–1330–01	Blade	2	23	1
78–1720–01	Hitch–Front	2	5	1
78–8760–01	Quadrant	2	27	1
79–4770–01	Stop	2	34	2
79–4790	Rod	3	15	1
79–5080–01	frame Blade	3	6	1
79–5430–01	Arm	2	11	1
79–5460–01	Lift Arm	2	36	1
79–5490–01	Plate	2	30	1
79–5510–01	Plate	2	15	1
79–5530	Rod	2	16	1
79–6130	Rod–Lower, Index	3	10	1
88–2080–01	Lug–Spring	2	20	4
88–6520	Index Pin	3	6:1	1
92–7034–01	Lever–Blade	3	25	1
92–7036	Index Lever	3	26	1
92–7037	Plate Index	3	8	1
92–7039	Cable–Eyelet	3	23	1
92–7070–03	Bracket–Blade Mount	3	4	1
92–8748	Decal–Attachment	2	26	1
93–1389–03	Bracket–Mounting	3	1	1
93–1611–01	Spring–Trip Return	2	21	2
93–1612–01	Plate–Blade Edge	2	24	1
93–1613	Latch	2	1	1
93–3168	Cable Asm Lift	3	24	1
321–6	Screw HH	3	27	1
323–6	Screw–HH	3	9	1
323–6	Screw–HH	2	29	4
325–4	Screw–HH	3	21	1
325–5	Screw–HH	3	2	5
3216–7	Screw–HH	3	13	1
3218–18	Nut–Jam	3	7	1
3231–1	Screw–Carr	2	25	5
3231–22	Bolt–Carr	2	8	4
3231–25	Screw–Carr	3	5	2
3256–14	Washer–Flat	3	20	3
3256–24	Washer–Flat	3	17	3
3256–26	Washer–Flat	2	12	2
3256–27	Washer–Flat	2	32	1
3272–7	Pin–Cotter	2	13	1
3272–11	Pin–Cotter	3	6:3	1
3272–11	Pin–Cotter	3	14	1
3272–11	Pin–Cotter	2	22	4
3272–22	Pin–Cotter	2	31	1
3296–12	Nut–Lock	3	19	3
3296–23	Nut–HH	3	3	5
3296–39	Nut–Lock	2	9	13
3296–39	Nut–Lock	3	18	3
32146–17	Nut–Lock	3	29	1

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Meaning	Abbreviation
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head

Meaning	
HWH	hex washer head
HSH	hex socket head
HWH	hex washer head
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWH	hex washer head

*Not Illustrated

© The TORO Company –1994
All Rights Reserved