
FORM NO. 3317–379

TORO®

MODEL NO. 71184–5910001 & UP

PARTS CATALOG

1238XL LAWN TRACTOR

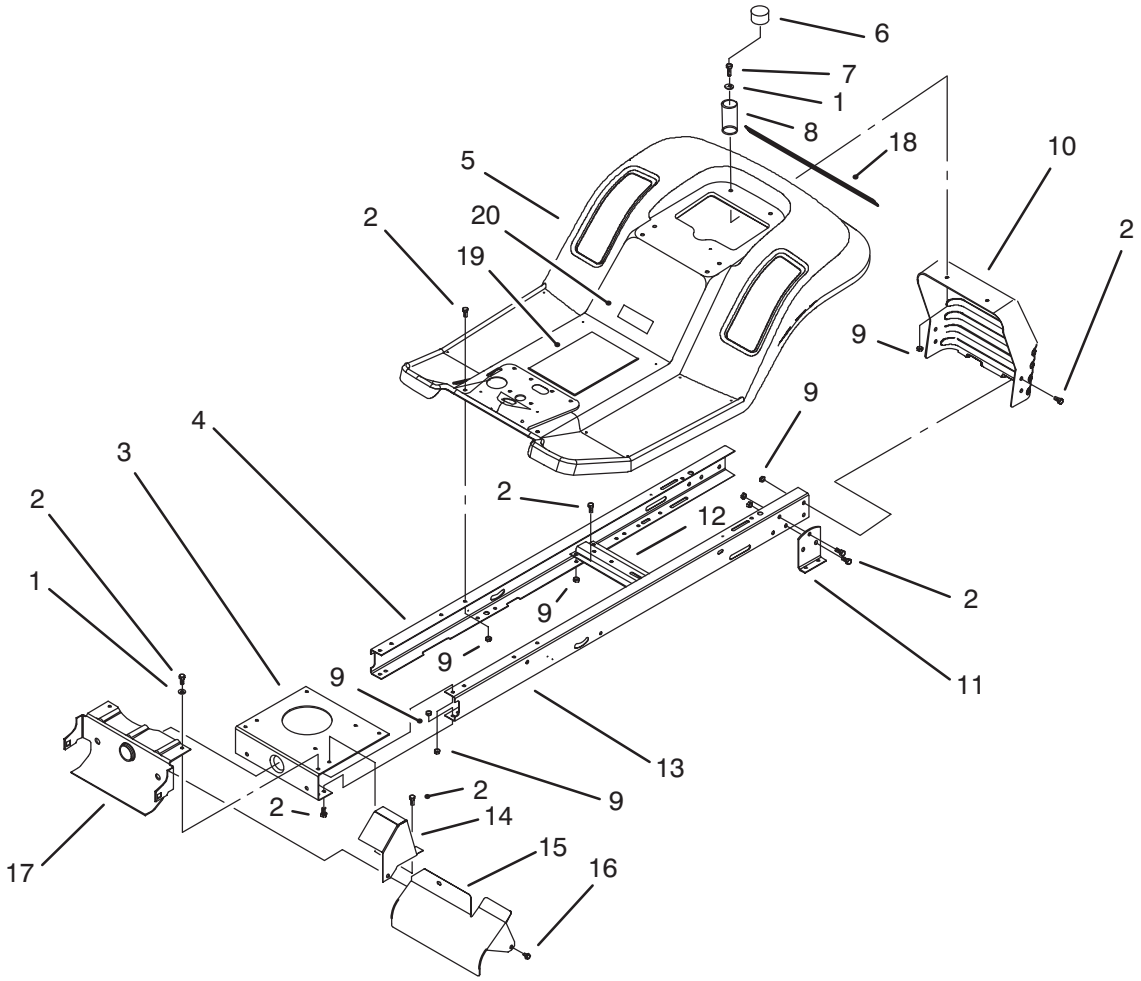

C–1307A


FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256–23	Washer – Flat	4
2	322–3	Screw – Hex Hd. Cap	22
3	88–4630	Plate – Engine Mount	1
4	88–4650	Rail – R.H. Frame	1
5	88–3840–01	Body – Rear	1
6	701178	Cap – Protector	2
7	322–5	Screw – Hex Hd. Cap	2
8	88–6220	Spring – Compression	2
9	3296–29	Nut – Lock	24
10	88–3940	Panel – Rear Hitch	1

Ref. No.	Part No.	Description	No. Used
11	88–5260	Bracket – Transaxle Mt.	2
12	88–4620	Bracket – Idler Pivot	1
13	88–4660	Rail – L.H. Frame	1
14	88–4960	Shield – Exhaust Pipe	1
15	88–6290	Shield – Muffler	1
16	32104–76	Screw – Thread Tapping	1
17	88–5120	Support – Front Axle	1
18	92–2490	Decal – Rear Body	1
19	92–2484	Decal – Instruction	1
20	117242	Decal – Made in USA	1

© The TORO Company –1994
All Rights Reserved

TPS

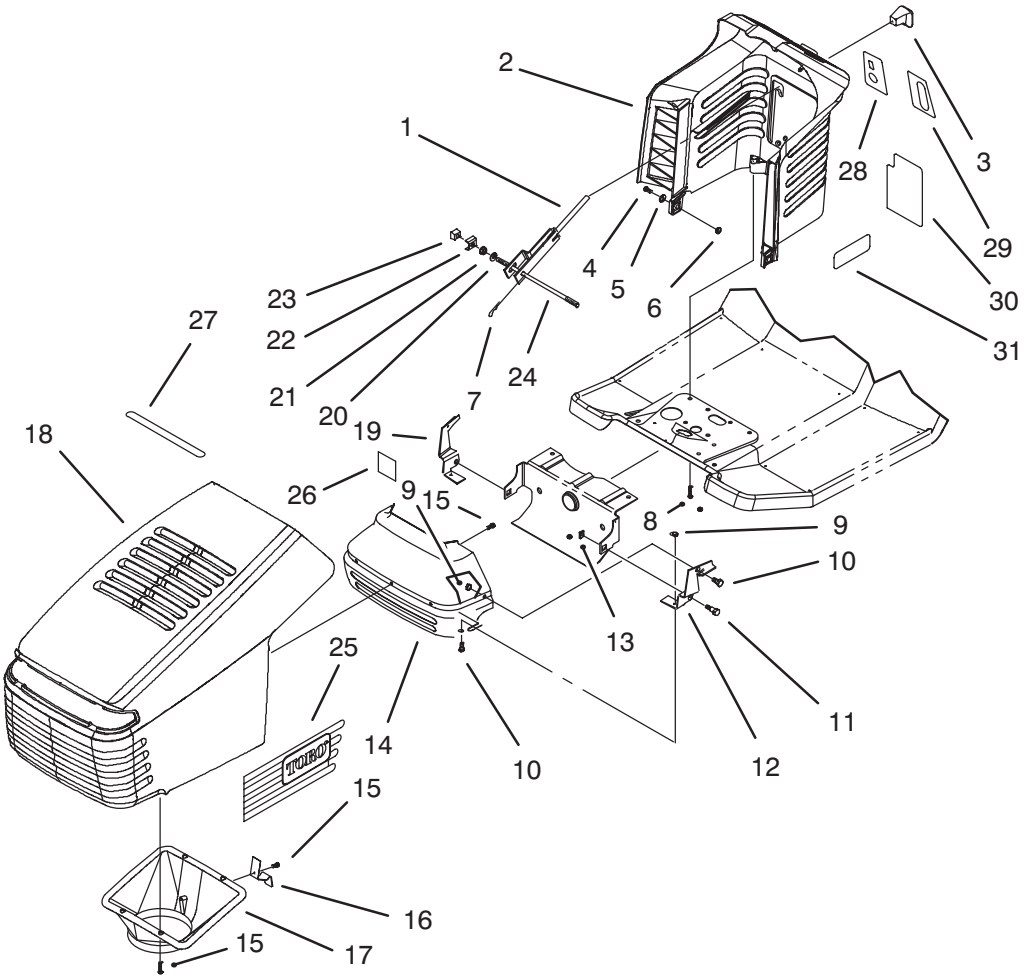


C–1308

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–5190	Lever – Deck Engage	1
2	93–0303	Tower – Steering	1
3	62–1292	Knob – Engage Lever	1
4	322–3	Screw – Hex Hd. Cap	2
5	3256–23	Washer – Flat	2
6	3296–29	Nut – Lock	2
7	3290–307	Pin – Cotter	2
8	46–8091	Screw – Plastite	2
9	3296–42	Nut – Lock	4
10	321–2	Screw – Hex Hd. Cap	4
11	28–0540	Bolt – Shoulder	2
12	88–6050	Bracket – Hood Pivot L.H.	1
13	3290–496	Nut – Retained	2
14	88–3930	Shield – Heat	1
15	46–8090	Screw – Plastite	8
16	88–4220	Latch – Hood	1

Ref. No.	Part No.	Description	No. Used
17	88–4050	Duct – Hood Air	1
18	92–8650	Hood	1
19	88–6040	Bracket – Hood Pivot R.H.	1
20	3256–24	Washer – Flat	2
21	32128–43	Nut – Flange	2
22	88–4160	Clamp – Pivot Rod	2
23	88–4140	Nut – Wedge	2
24	88–4170	Rod – Tower Pivot	1
25	92–2467	Decal – Hood R.H.	1
*	92–2468	Decal – Hood L.H.	1
26	92–5782	Patch – Heat Tape	1
27	92–5748	Decal – Air Duct	1
28	92–2460	Decal – Ignition/Lights	1
29	92–2461	Decal – Throttle	1
30	92–2462	Decal – Deck Engage	1
31	92–2474	Decal – Tower 1238XL	2

*Not Illustrated

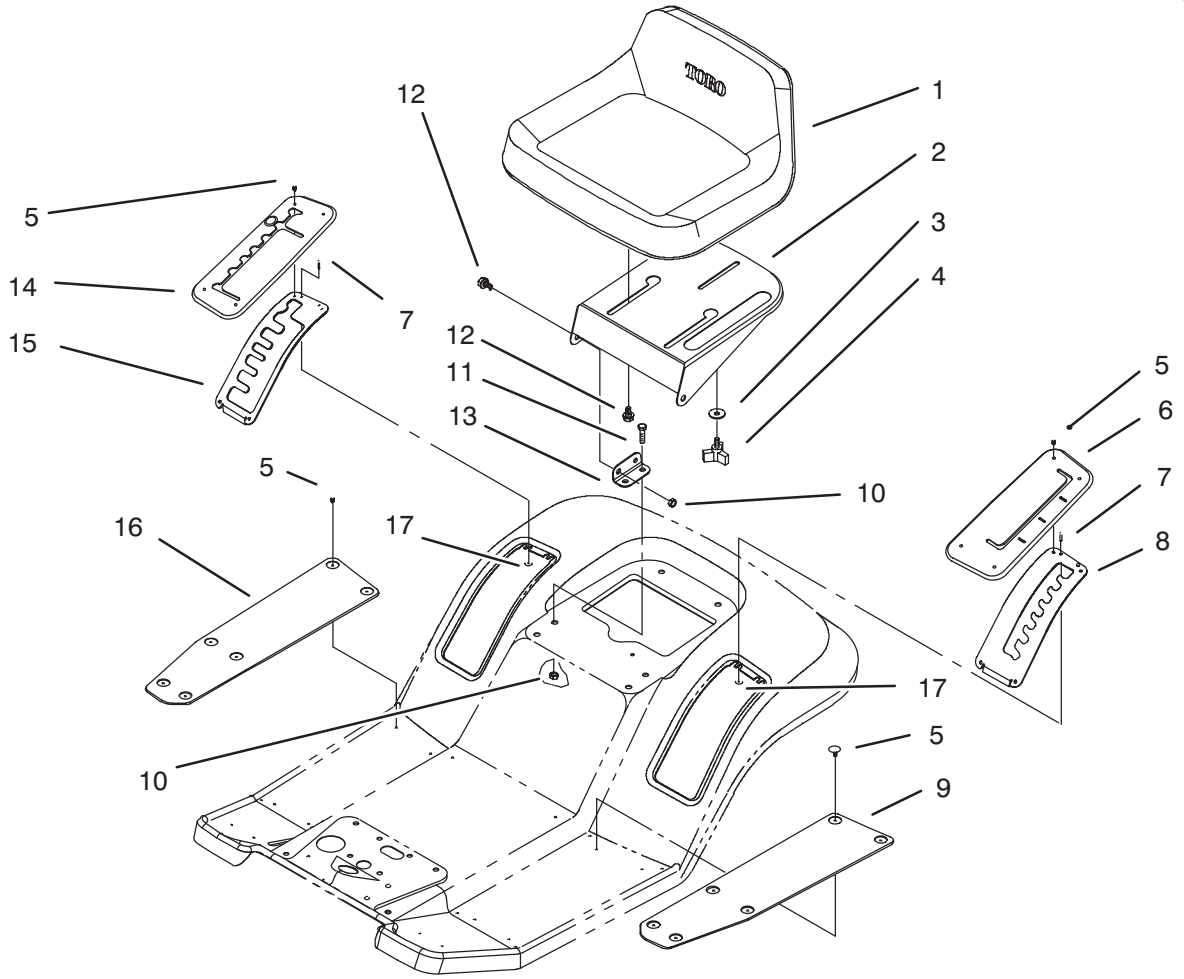


C–1830

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–3950	Seat	1
2	88–4910	Support – Seat	1
3	5–4460	Washer – Fender	1
4	92–9674	Knob – Studded	1
5	3290–479	Fastener – Panel	20
6	88–5170	Cover – H.O.C.	1
7	3290–282	Rivet – Pop	4
8	88–5030	Gate – H.O.C.	1
9	88–5240	Mat – L.H. Foot	1

Ref. No.	Part No.	Description	No. Used
10	3296–29	Nut – Lock	6
11	322–3	Screw – Hex Hd. Cap	4
12	37–8770	Bolt – Shoulder	4
13	88–4820	Bracket – Seat Hinge	2
14	88–5160	Cover – Shift Gate	1
15	88–5020	Gate – Shift	1
16	88–5220	Mat – R.H. Foot	1
17	3269–26	Washer – Backup	4

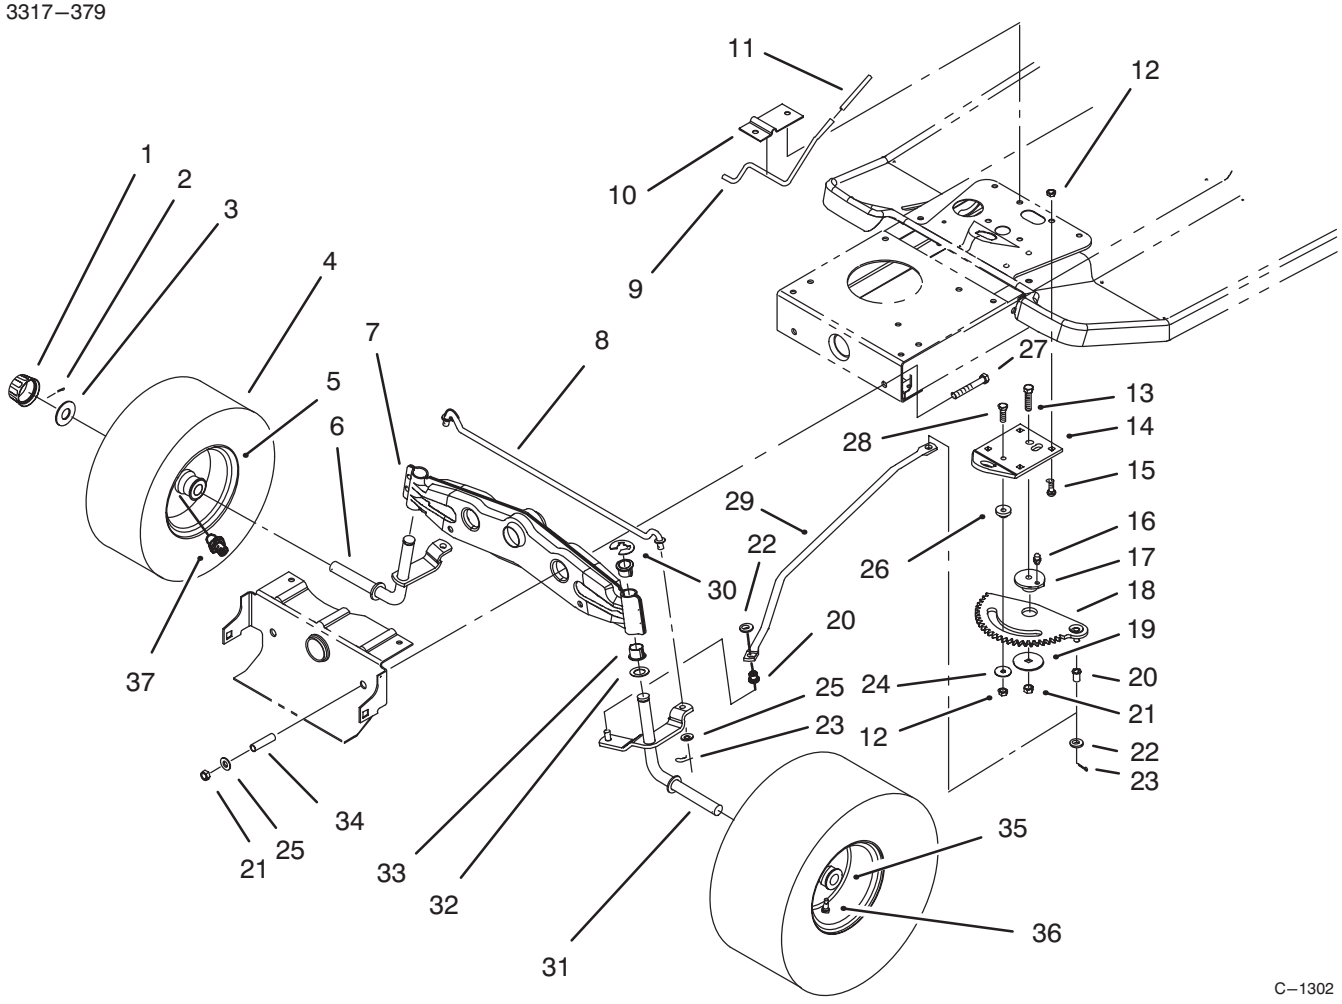


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61–9780	Cap – Hub	2
2	3272–12	Pin – Cotter	2
3	28–2480	Washer	2
4	88–4070	Tire – 13”	2
5	88–4370	Rim – Front Wheel	2
6	92–7889	Spindle – R.H.	1
7	88–4460	Axle – Front	1
8	88–5380	Rod – Steering Tie	1
9	88–5510	Rod – Parking Brake	1
10	88–5520	Bracket – Parking Brake	1
11	88–0890	Grip – Brake Rod	1
12	3296–29	Nut – Lock	5
13	3231–4	Screw – Carriage	1
14	88–5130	Bracket – Steering Rack	1
15	3230–1	Bolt – Carriage	4
16	302–26	Fitting – Grease	1
17	88–4670	Bushing – Eccentric	1
18	88–5200	Rack – Steering	1
19	111419	Washer – Fender	1
20	52–2891	Bushing – Steering Link	2
21	3296–39	Nut – Lock	3

Ref. No.	Part No.	Description	No. Used
22	3256–25	Washer – Flat	2
23	3272–10	Pin – Cotter	4
24	5–4460	Washer – Fender	1
25	3256–24	Washer – Flat	4
26	88–5010	Spacer – Steering Rack	1
27	323–13	Screw – Hex Hd. Cap	2
28	3230–3	Screw – Carriage	1
29	88–4830	Link – Drag	1
30	32151–48	E–Ring	2
31	92–7890	Spindle – L.H.	1
32	3–6498	Washer – Thrust	2
33	88–5800	Bushing – Steering Spindle	4
34	88–5470	Spacer – Front Axle	2
35	88–4400	Bearing – Wheel	4
36	232–27	Valve Stem w/Cap	2
37	302–5	Fitting – Grease	2
*	232–39	Inner Tube	2
*	88–4280	Wheel & Tire Assembly (Incl. Ref. #4 & 5)	2

*Not Illustrated

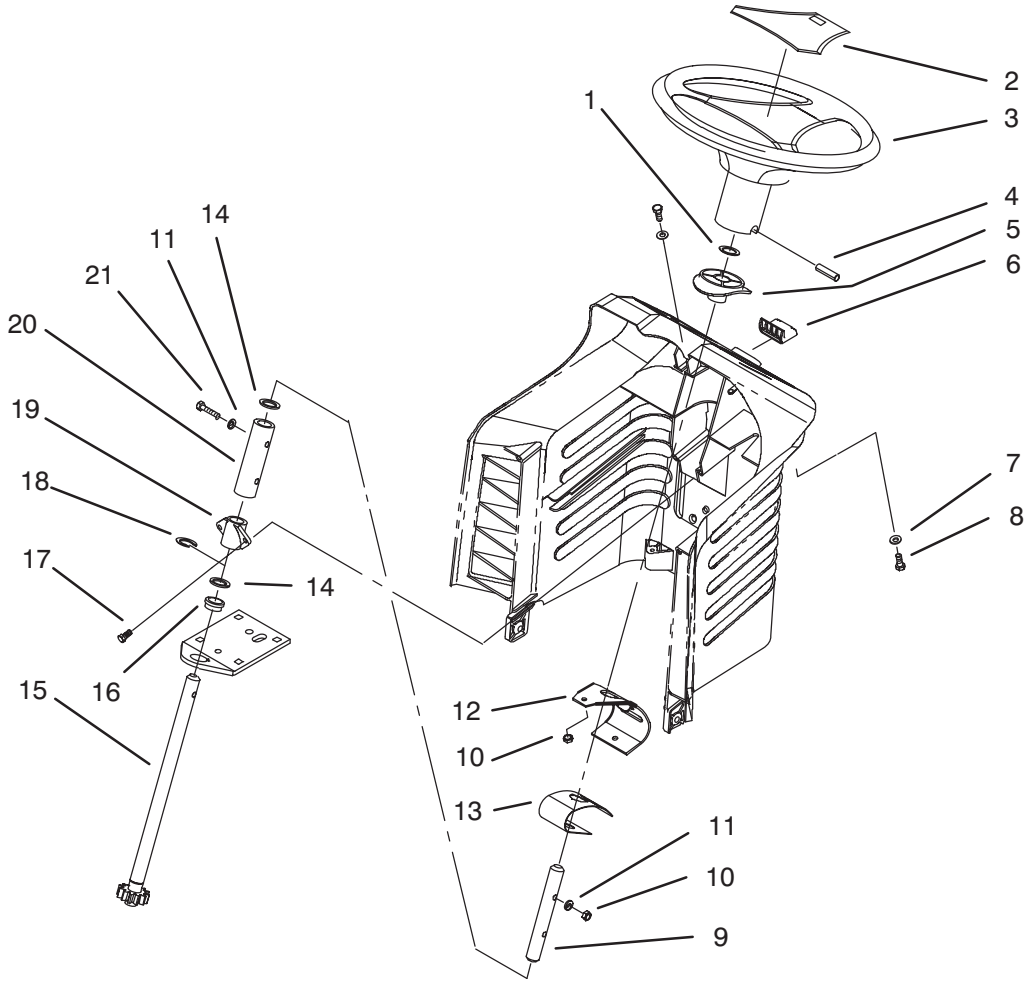


C–1344A

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32151–81	Ring – Retaining	1
2	88–3870	Cover – Steering Wheel	1
3	88–3850	Wheel – Steering (Incl. Ref. #2)	1
4	32121–78	Pin – Roll	1
5	88–4190	Bushing – Sliding	1
6	88–4180	Button – Release	1
7	3256–22	Washer – Flat	2
8	321–4	Screw – Hex Hd. Cap	2
9	88–6300	Shaft – Steering Upper	1
10	3296–42	Nut – Lock	4


Ref. No.	Part No.	Description	No. Used
11	3–7501	Washer – Curved	4
12	88–5180	Bracket – Backup	1
13	88–4890	Spring – Leaf	1
14	3–6498	Washer – Thrust	2
15	88–6370	Shaft – Steering Short	1
16	88–5150	Bushing – Flange	1
17	27–0220	Screw – Plastite	2
18	32151–48	E–Ring	1
19	88–4210	Bushing – Stationary	1
20	88–6090	Coupling – Steering	1
21	321–9	Screw – Hex Hd. Cap	2

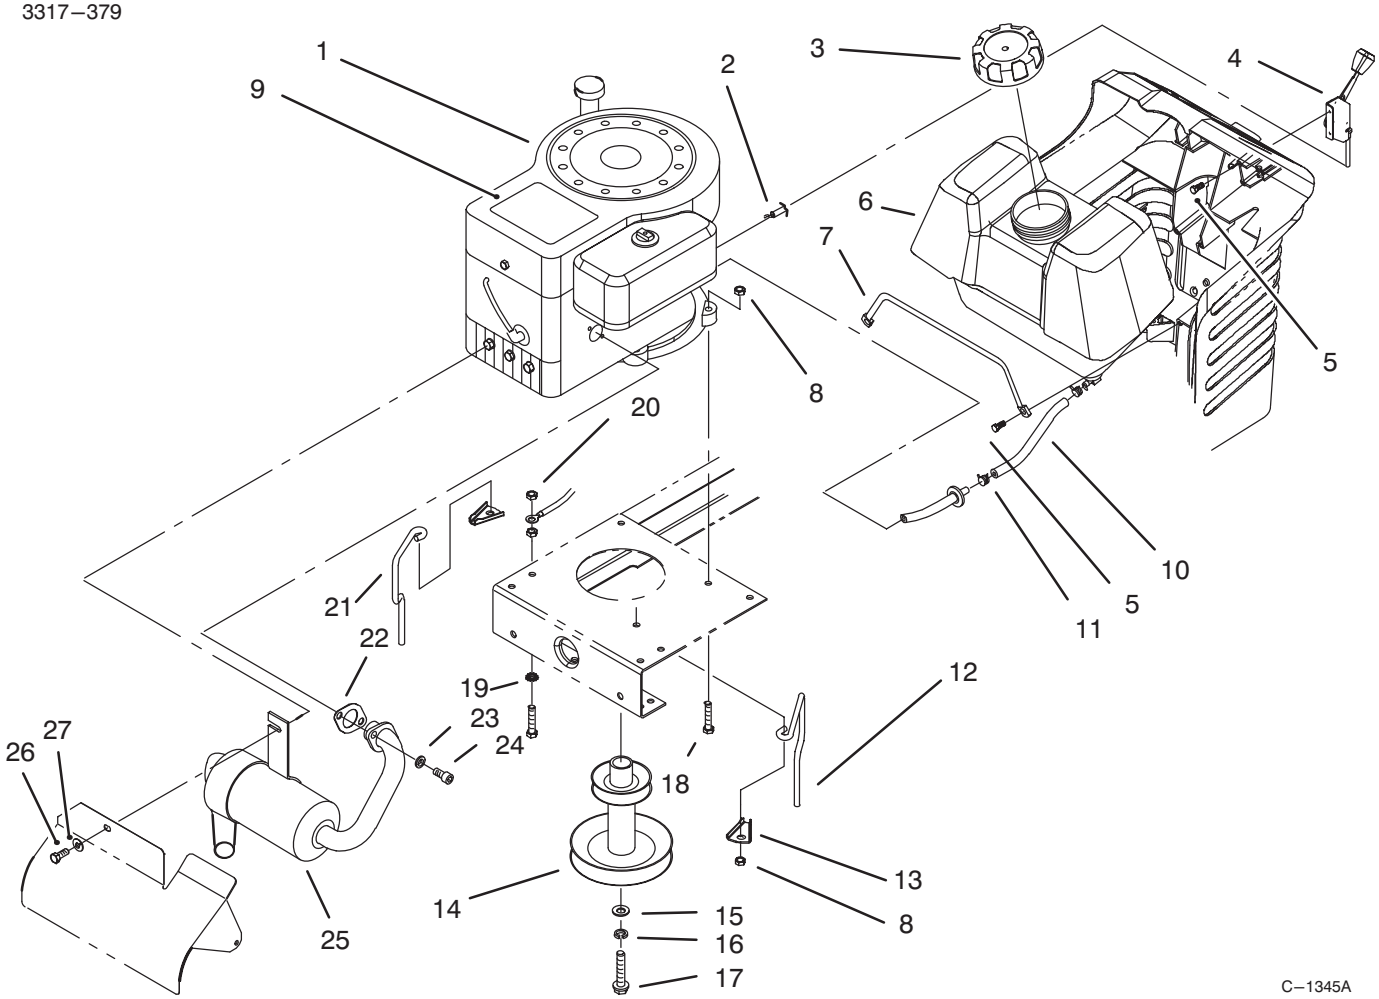

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine – 12.5 H.P.	1
2	88–4350	Cable – Throttle	1
3	88–3980	Cap – Gas	1
4	88–4340	Control – Throttle	1
5	27–0220	Screw – Plastite	4
6	88–3880	Tank – Gas	1
7	88–5920	Rod – Gas Tank	1
8	3296–29	Nut – Lock	3
9	92–2481	Decal – Engine 12.5)	1
10	47–2963	Line – Fuel	1
11	2412–98	Clamp – Hose	2
12	88–5830	Guide – Belt L.H.	1
13	76–3820	Anchor – Belt Guide	2
14	88–4850	Pulley – Engine	1

Ref. No.	Part No.	Description	No. Used
15	3256–25	Washer – Flat	1
16	3253–22	Washer – Lock	1
17	26–0671	Bolt – Blade	1
18	322–9	Screw – Hex Hd. Cap	4
19	3255–8	Washer – Ext. Tooth Lock	1
20	32149–1	Nut – Keps	2
21	88–5840	Guide – Belt R.H.	1
22	88–4410	Gasket – Muffler	1
23	3253–4	Washer – Lock	2
24	3274–12	Screw – Hex Soc. Hd.	2
25	88–6480	Muffler	1
26	321–4	Screw – Hex Hd. Cap	1
27	3253–3	Washer – Lock	1

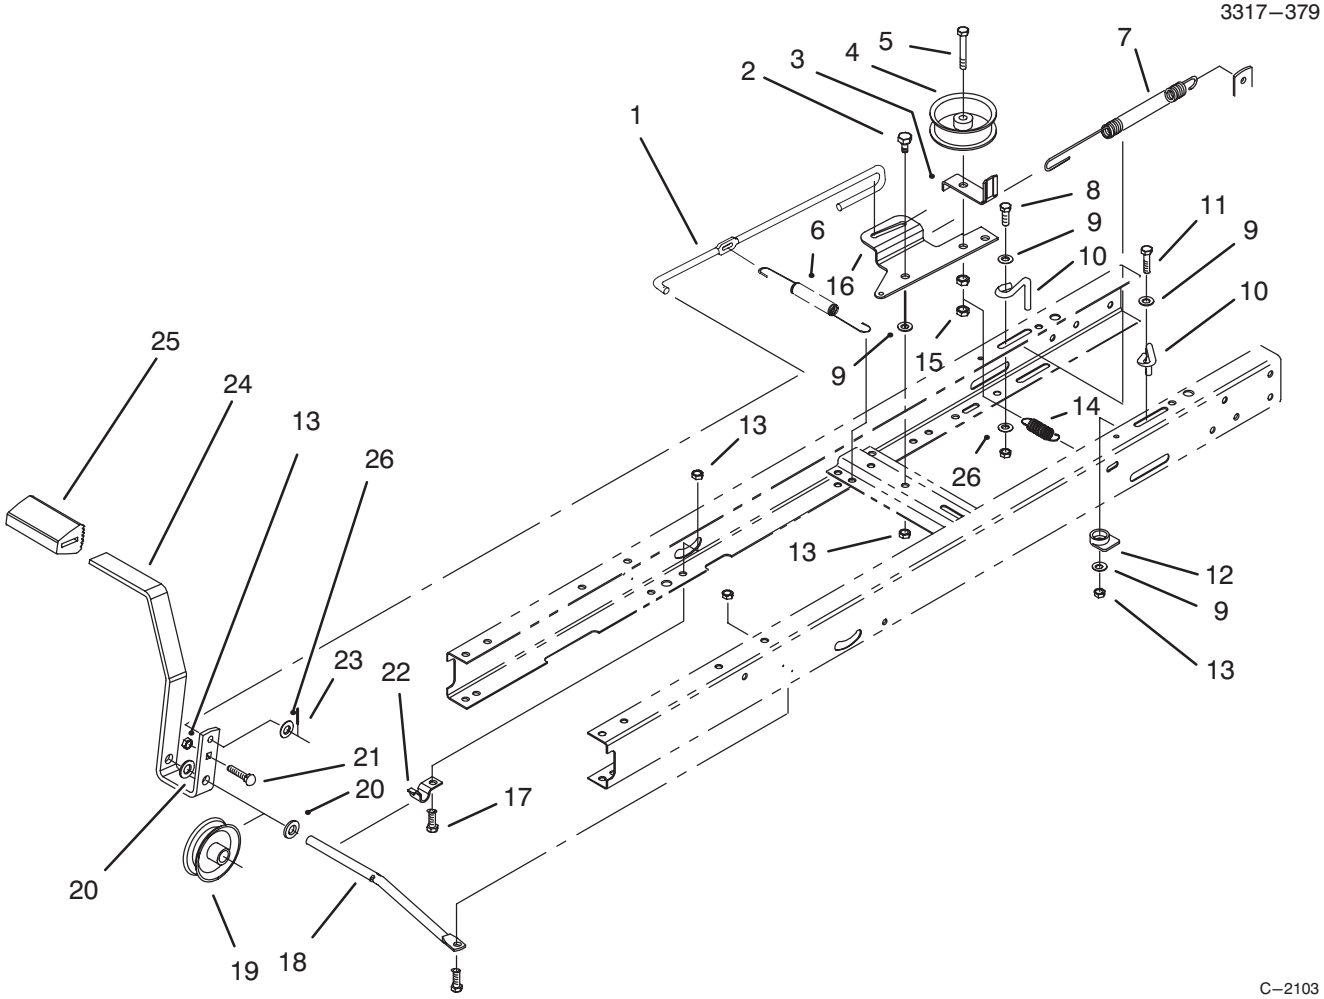


CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–5270	Rod – Clutch/Brake	1
2	37–8770	Bolt – Shoulder	1
3	88–5560	Guide – Idler Belt	1
4	88–5680	Pulley – Flat Idler	1
5	323–11	Screw – Hex Hd. Cap	1
6	27–8890	Spring – Pedal Return	1
7	88–6140	Spring – Brake	1
8	322–5	Screw – Hex Hd. Cap	1
9	5–4460	Washer – Flat	4
10	88–5460	Guide – Trans. Belt	2
11	322–7	Screw – Hex Hd. Cap	1
12	84–5610	Guide – Cable	2
13	3296–29	Nut – Lock	6

Ref. No.	Part No.	Description	No. Used
14	88–6330	Spring – Extension	1
15	3296–59	Nut – Lock	2
16	88–6070	Arm – Idler	1
17	322–3	Screw – Hex Hd. Cap	2
18	88–5500	Rod – Pedal Pivot	1
19	88–4700	Pulley – Cable	1
20	3256–26	Washer – Flat	2
21	3230–3	Bolt – Carriage	1
22	88–4810	Clamp – Shift Pivot	1
23	3272–10	Pin – Cotter	1
24	88–5000	Pedal – Clutch/Brake	1
25	65–2920	Pad – Pedal	1
26	3256–23	Washer – Flat	2

3317–379

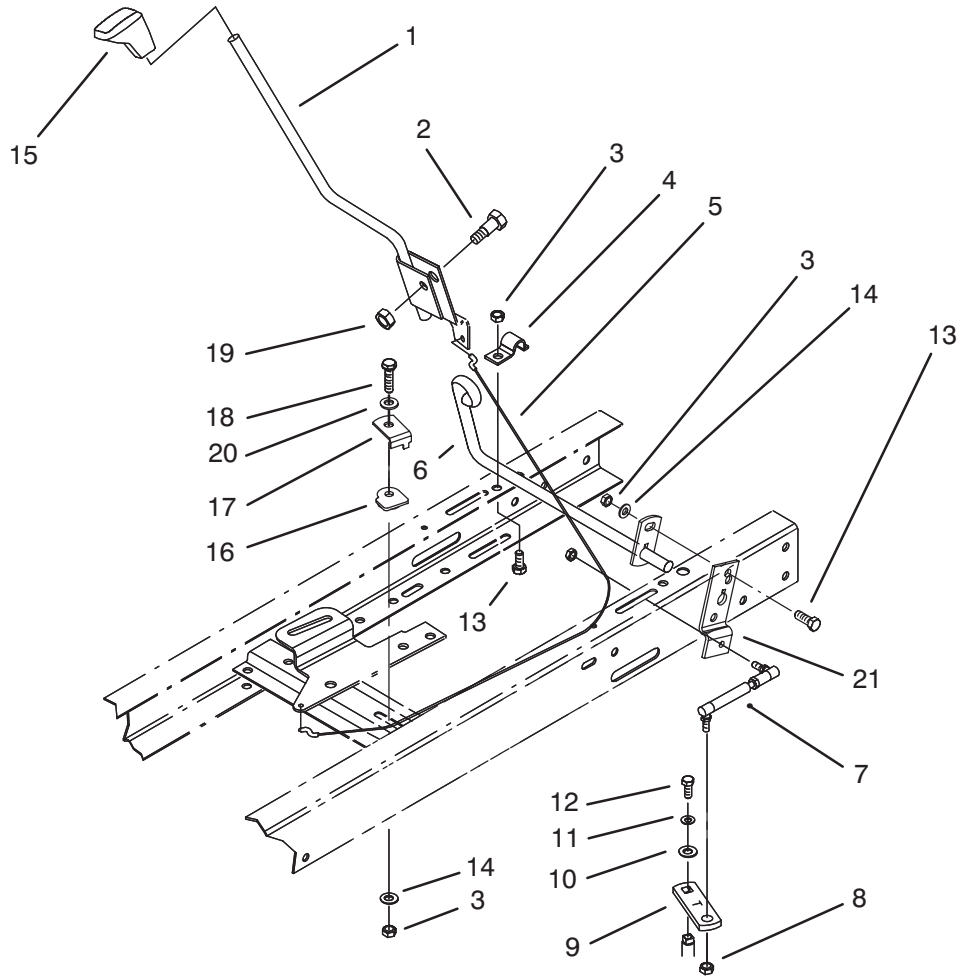


C–1317

SHIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–5300	Lever – Shift	1
2	5–4015	Bolt – Shoulder	1
3	3296–29	Nut – Lock	4
4	88–4810	Clamp – Shift Pivot	2
5	55–9321	Cable – Shotgo	1
6	92–5796	Pivot – Shift	1
7	88–5530	Rod – Shift Tie	1
8	3296–3	Nut – Lock	2
9	88–5340	Lever – Trans. Shift	1
10	7–5461	Washer – Hardened	1
11	3253–3	Washer – Lock	1

Ref. No.	Part No.	Description	No. Used
12	329–23	Screw – Hex Hd. Cap	1
13	322–3	Screw – Hex Hd. Cap	3
14	3256–23	Washer – Flat	2
15	62–1292	Knob – Shift	1
16	84–5610	Guide – Cable	2
17	88–5930	Keeper – Cable	1
18	3230–3	Bolt – Carriage	1
19	3296–39	Nut – Lock	1
20	3256–25	Washer – Flat	1
21	92–5794	Lever – Shift Pivot	1

3317–379

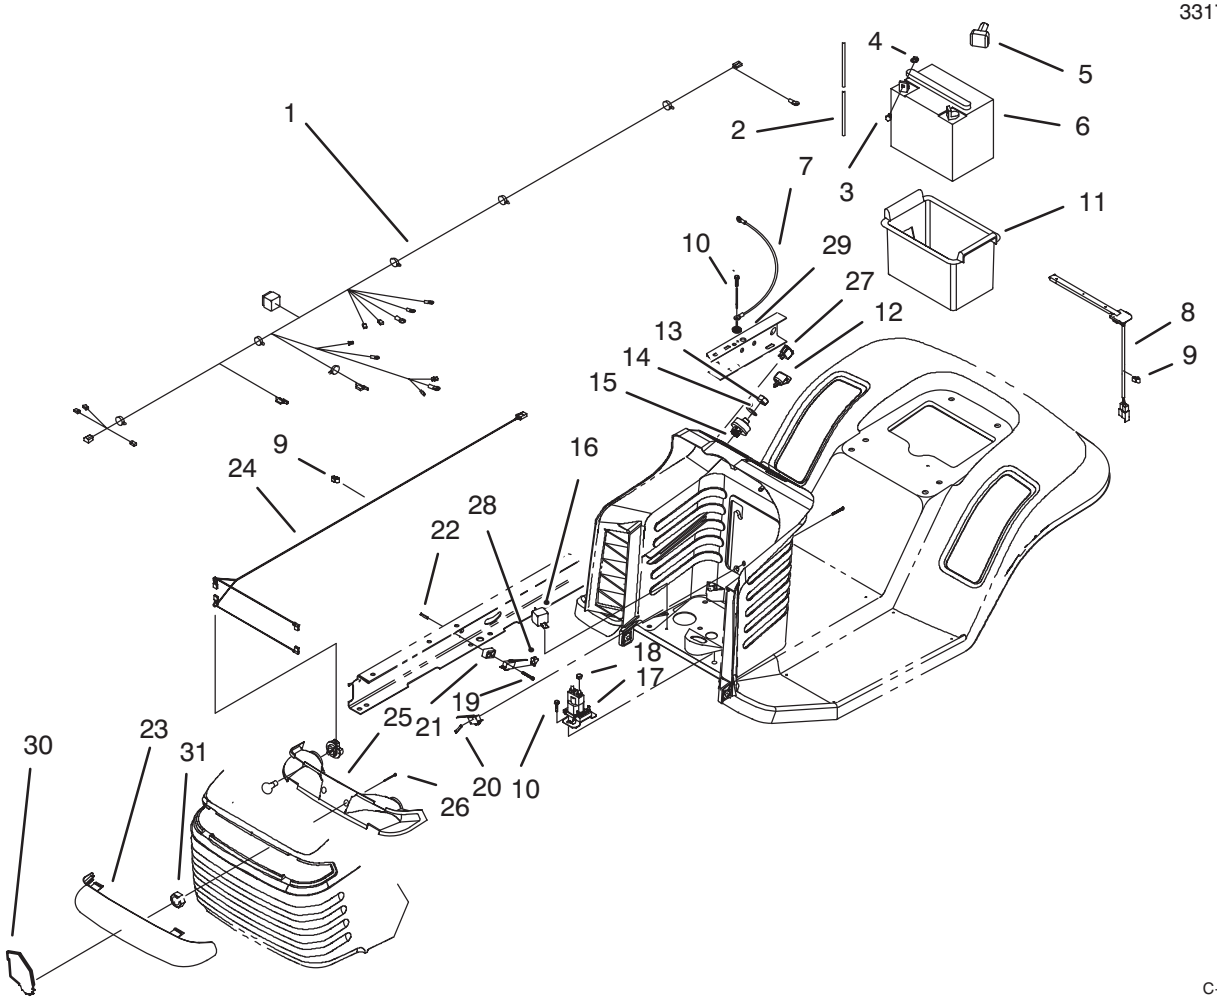


C–1831A

ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–3810	Harness – Wire	1
2	56–2540	Vent – Tube	1
3	321–4	Screw – Hex Hd. Cap	2
4	32103–22	Nut – Wing	2
5	28–8080	Boot – Battery Terminal	1
6	80–2600	Battery – 7 Plate	1
7	44–8110	Cable – Battery Negative	1
8	38–1420	Switch – Seat	1
9	702366	Clip – Wire Retainer	3
10	32144–4	Screw – Hex Hd. Thr'd Form.	3
11	88–4040	Box – Battery	1
12	63–8360	Key – Ignition	1
13	218–461	Nut – Hex	1
14	3254–5	Washer – Lock	1
15	88–9830	Switch – Ignition	1

Ref. No.	Part No.	Description	No. Used
16	116397	Relay	1
17	92–9845	Solenoid	1
18	32149–2	Nut – Keps	2
19	93–0539	Screw – Phillips Hd.	4
20	88–9932	Switch – Micro	2
21	88–4880	Spacer – Microswitch	1
22	3290–354	Speednut	2
23	88–3960	Lens – Headlights	1
24	88–4320	Harness – Wire	1
25	88–3970	Reflector & Lamp	1
26	32144–32	Screw – Plastite	2
27	92–8875	Switch – Rocker	1
28	93–3240	Seal – Plunger	2
29	3255–7	Washer – Ext. Tooth Lock	1
30	80–2240	Plate– Grille Panel	1
31	3290–299	Nut – Tinnerman	1

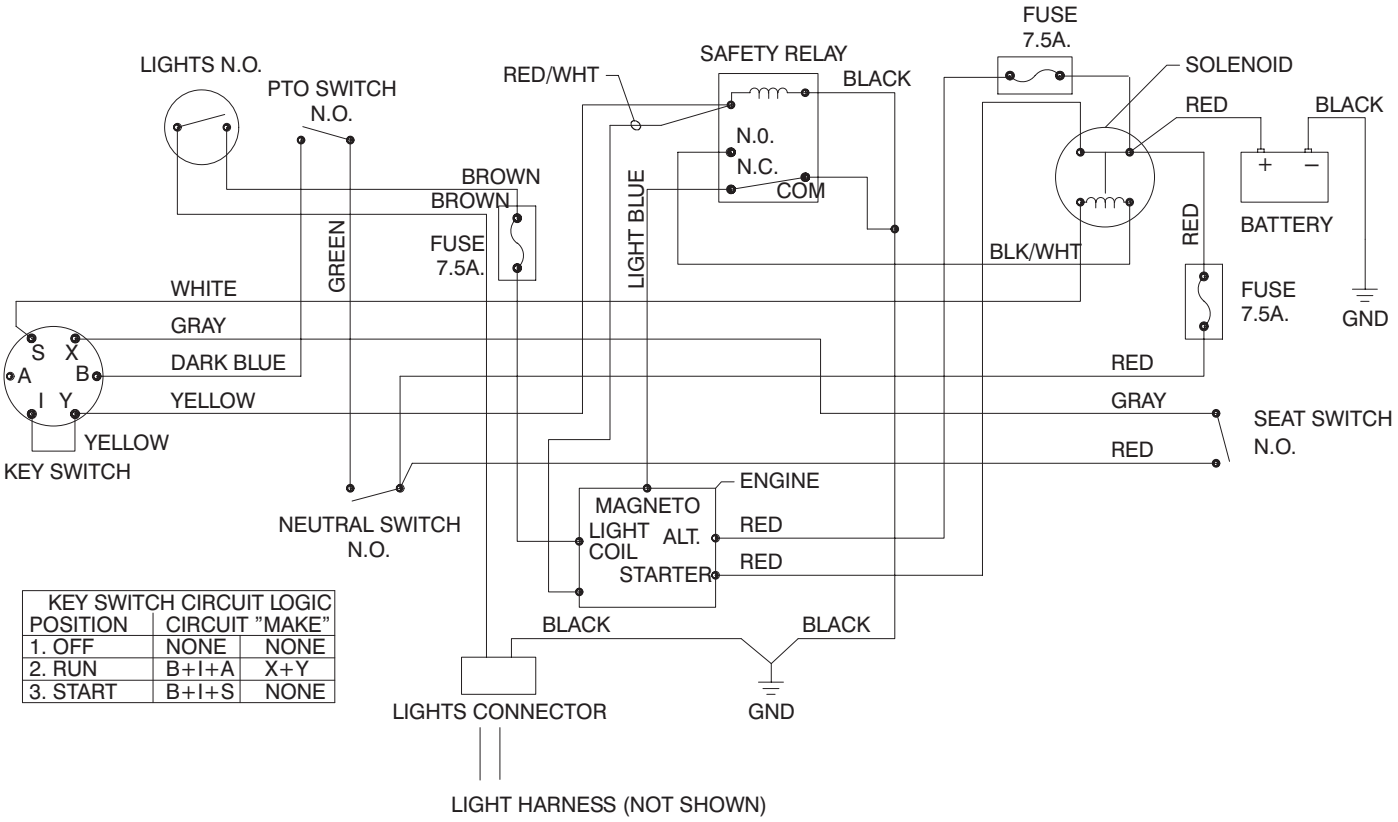


KEY SWITCH CIRCUIT LOGIC		
POSITION	CIRCUIT "MAKE"	
1. OFF	NONE	NONE
2. RUN	B+I+A	X+Y
3. START	B+I+S	NONE

C–2186

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

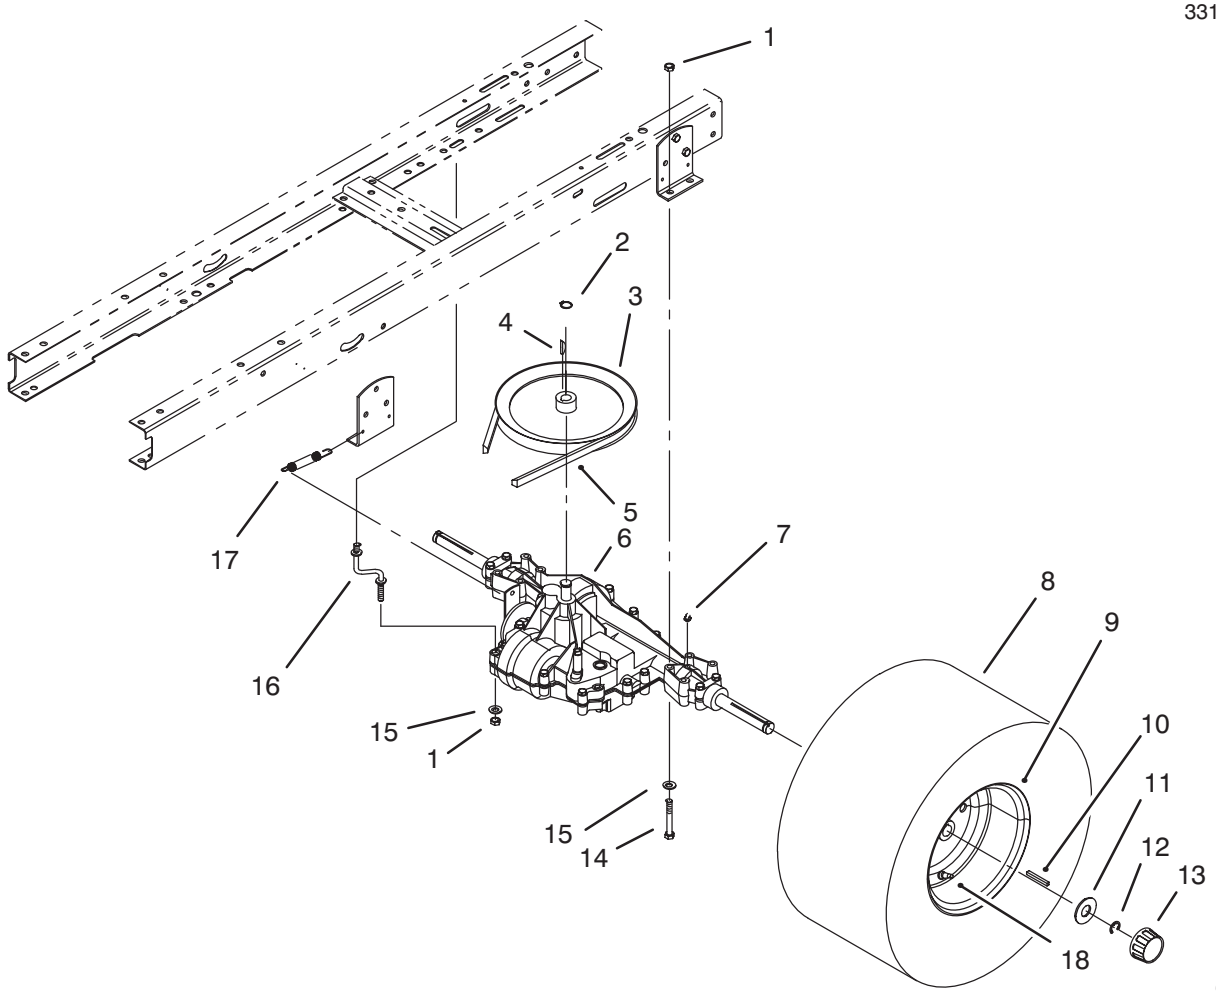


C–1305

TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–29	Nut – Lock	8
2	32120–64	Ring – Snap	1
3	88–4840	Pulley – Transmission	1
4	3257–23	Key – Woodruff	1
5	88–6240	V–Belt – Traction	1
6	88–6450	Transaxle	1
7	302–11	Fitting – Grease	2
8	88–4090	Tire	2
9	88–4390	Rim	2
10	7–0036	Key – Square	2
11	28–2480	Washer	2

Ref. No.	Part No.	Description	No. Used
12	32151–48	E–Ring	2
13	61–9780	Cap – Hub	2
14	322–12	Screw – Hex Hd. Cap	4
15	3256–23	Washer – Flat	8
16	88–5350	Strap – Torque	2
17	26–6700	Spring – Brake Return	1
18	232–27	Valve Stem w/Cap	2
*	232–41	Inner Tube (Optional)	2
*	88–4300	Wheel & Tire Assembly (Incl. Ref. #8 & 9)	2


*Not Illustrated

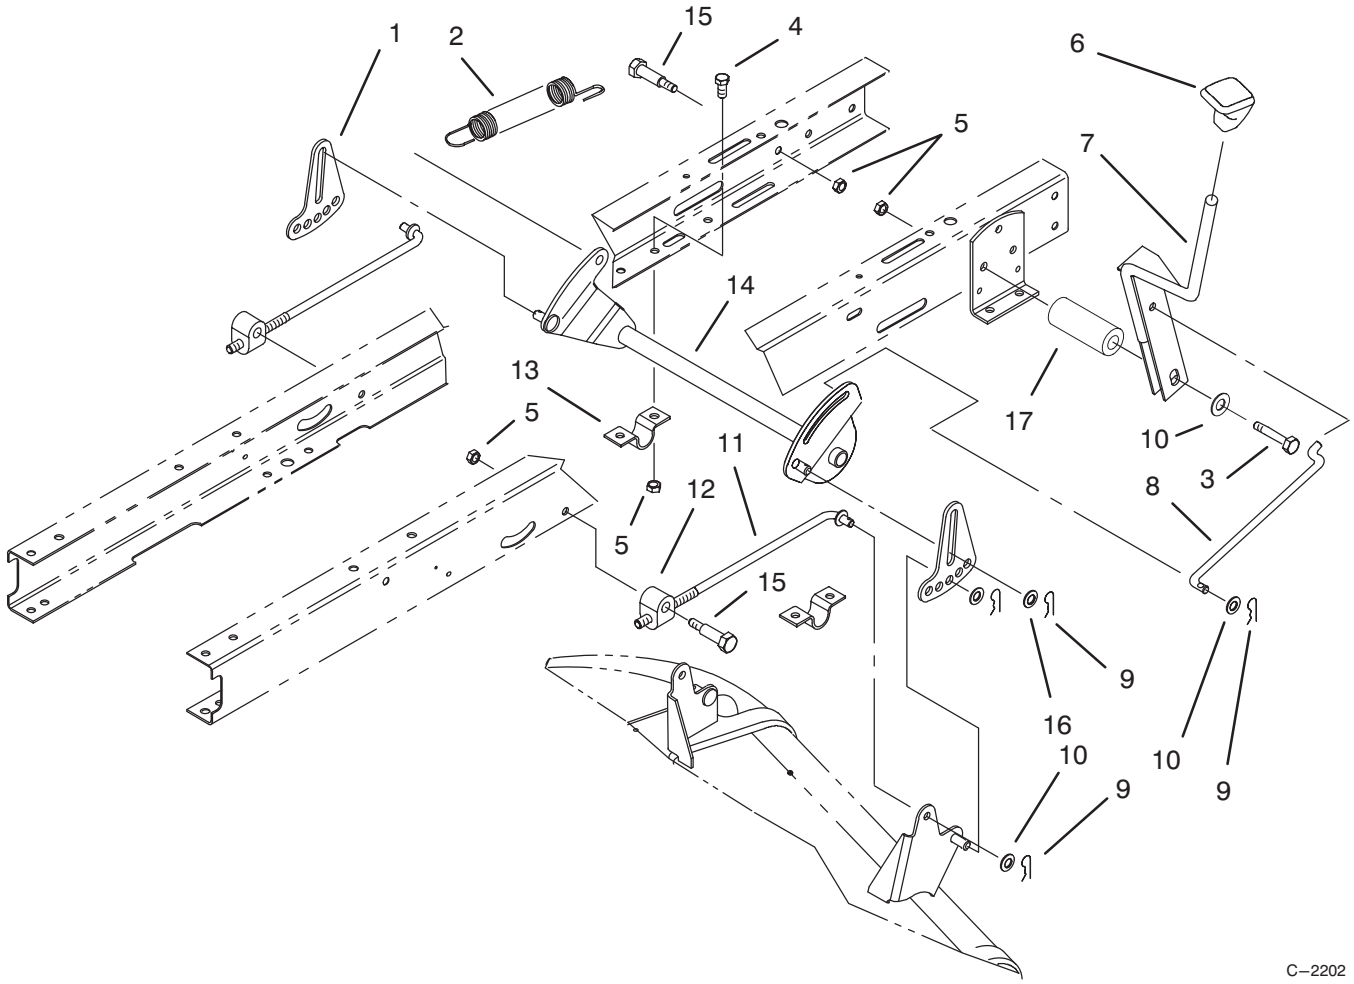

HEIGHT OF CUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–5570	Link – Adjusting H.O.C.	2
2	88–6460	Spring – Extension	1
3	322–9	Bolt – Shoulder	1
4	322–3	Screw – Hex Hd. Cap	4
5	3296–29	Nut – Lock	8
6	62–1292	Knob – Shift	1
7	93–3822	Lever – H.O.C.	1
8	88–5900	Link – H.O.C.	1
9	3290–307	Pin – Hair Cotter	7

Ref. No.	Part No.	Description	No. Used
10	3256–24	Washer – Flat	4
11	88–5450	Rod – Hanger Rear	2
12	88–4230	Trunnion – H.O.C. Rear	2
13	88–4730	Clamp – H.O.C. Pivot	2
14	88–5110	Pivot – H.O.C.	1
15	7–0030	Bolt – Shoulder	3
16	80–6990	Washer – Hardened	4
17	65–7210	Spacer	1

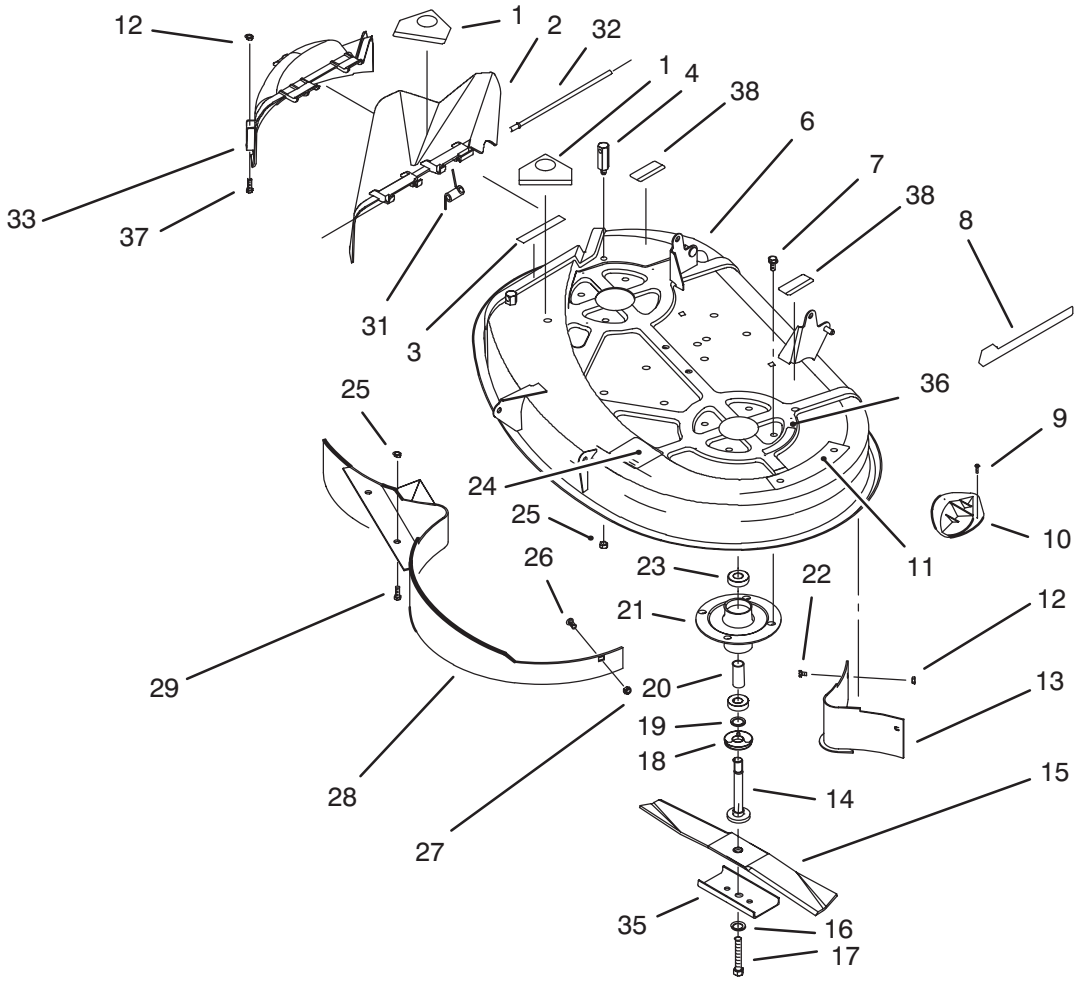


C–1320A

HOUSING & SPINDLE ASSEMBLY (38” CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	93–1122	Decal – Danger	2
2	93–0317	Deflector Ass’y (Incl. Ref. #1)	1
3	68–3650	Decal – Deflector Danger	1
4	57–4360	Post – Rear Pivot	1
6	88–5780–01	Deck – 38”	1
7	32144–41	Screw – Taptite	8
8	92–9520	Decal – Recycler	1
9	32144–111	Screw – Plastic	8
10	76–2160	Plate – Kicker	4
11	79–3140	Decal – Danger	1
12	3296–42	Nut – Lock	4
13	79–1640	Baffle – Rear	1
14	80–4341	Shaft – Spindle	2
15	79–3061	Blade – Recycler	2
16	3290–465	Washer – Belleville	2
17	26–0671	Bolt – Blade	2
18	80–4360	Shield – Bearing	2

Ref. No.	Part No.	Description	No. Used
19	80–4380	Spacer – Hardened	2
20	62–3661	Spacer – Bearing	2
21	88–4510	Housing – Spindle	2
22	321–4	Screw – Hex Hd. Cap	2
23	38–7820	Bearing – Spindle	4
24	93–6679	Decal – Belt Guide	1
25	3296–39	Nut – Lock	3
26	3230–1	Bolt – Carriage	1
27	3296–29	Nut – Lock	1
28	79–1600	Baffle – Recycler	1
29	323–5	Screw – Hex Hd. Cap	2
31	57–6950	Spring – Torsion	1
32	57–4380	Rod – Deflector Hinge	1
33	88–4430	Cover – Recycler	1
35	80–0510	Stiffener – Blade	2
36	68–3660	Decal – Shield Danger	1
37	321–14	Screw – Hex Hd. Cap	2
38	55–4300	Decal – Caution Spring	2

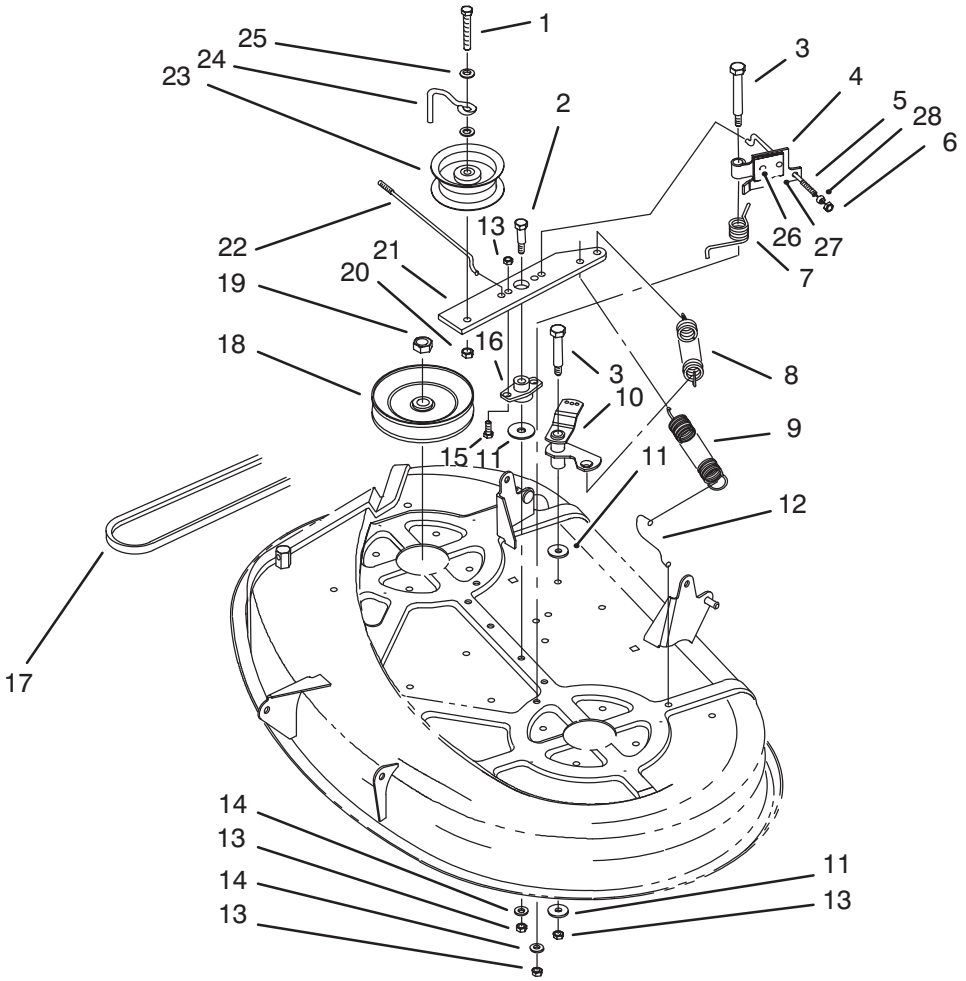


C–1347

BRAKE ASSEMBLY (38” CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	323–12	Screw – Hex Hd. Cap	1
2	7–0030	Bolt – Shoulder	1
3	88–4590	Bolt – Shoulder	3
4	88–6100	Brake – Deck (Incl. Ref. #26 & 27)	2
5	88–5550	Rod – Deck Brake L.H.	1
6	3296–42	Nut – Lock	2
7	88–5910	Spring – Torsion	2
8	88–6130	Spring – Deck Engage	1
9	92–8934	Spring – Extension	1
10	88–5390	Bellcrank	1
11	3256–68	Washer – Fender	3
12	88–5970	Hook –Spring Return	1
13	3296–29	Nut – Lock	6
14	3256–23	Washer – Flat	3

Ref. No.	Part No.	Description	No. Used
15	322–5	Screw – Hex Hd. Cap	2
16	88–4980	Bushing – Idler Arm	1
17	88–6250	V–Belt – Deck	1
18	88–5330	Pulley – Deck	2
19	3219–6	Nut – Lock	2
20	3296–39	Nut – Lock	1
21	88–4870	Arm – Idler	1
22	88–5540	Rod – Deck Brake R.H.	1
23	88–5630	Pulley – Idler	1
24	88–5070	Guide – Idler Belt	1
25	3256–24	Washer – Flat	2
26	3290–282	Rivet – Pop	4
27	56–9830	Pad – Brake	2
28	67–0710	Ball – Swivel	2

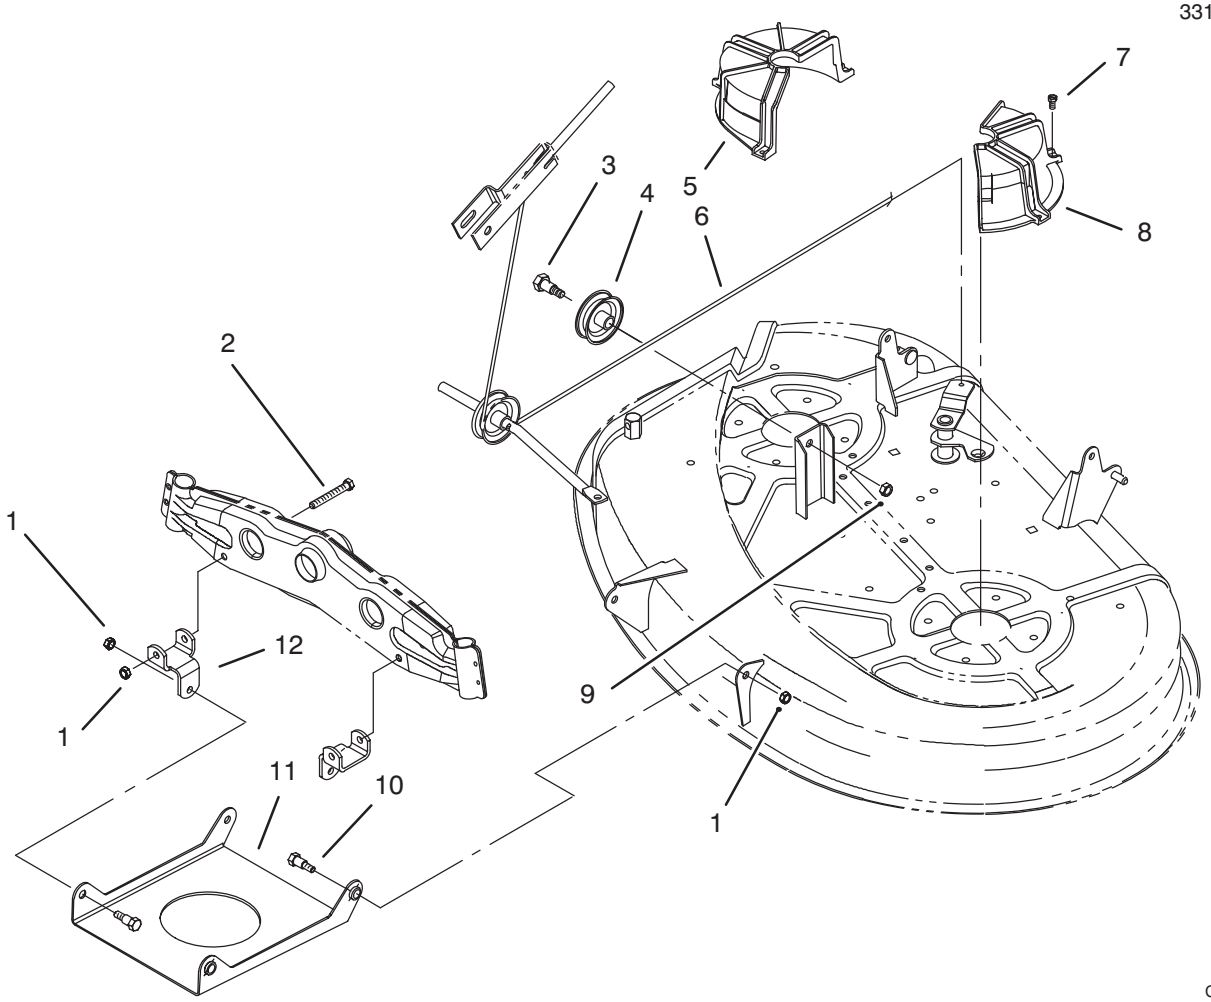


C–1348

CABLE & COVER ASSEMBLY (38” CUTTING UNIT)

Ref. No.	Part No.	Description	No. Used
1	3296–29	Nut – Lock	6
2	322–12	Screw – Hex Hd. Cap	2
3	23–0310	Bolt – Shoulder	1
4	88–4700	Pulley – Cable	1
5	88–4020	Guide – Deck Belt R.H.	1
6	88–6410	Cable – Deck Engage	1
7	32104–76	Screw – Thread Cutting	5

Ref. No.	Part No.	Description	No. Used
8	88–4030	Guide – Deck Belt L.H.	1
9	3296–39	Nut – Lock	1
10	28–0540	Bolt – Shoulder	4
11	88–4900	Pan – Front Deck Suspension	1
12	88–4640	Bracket – Deck Suspension	2

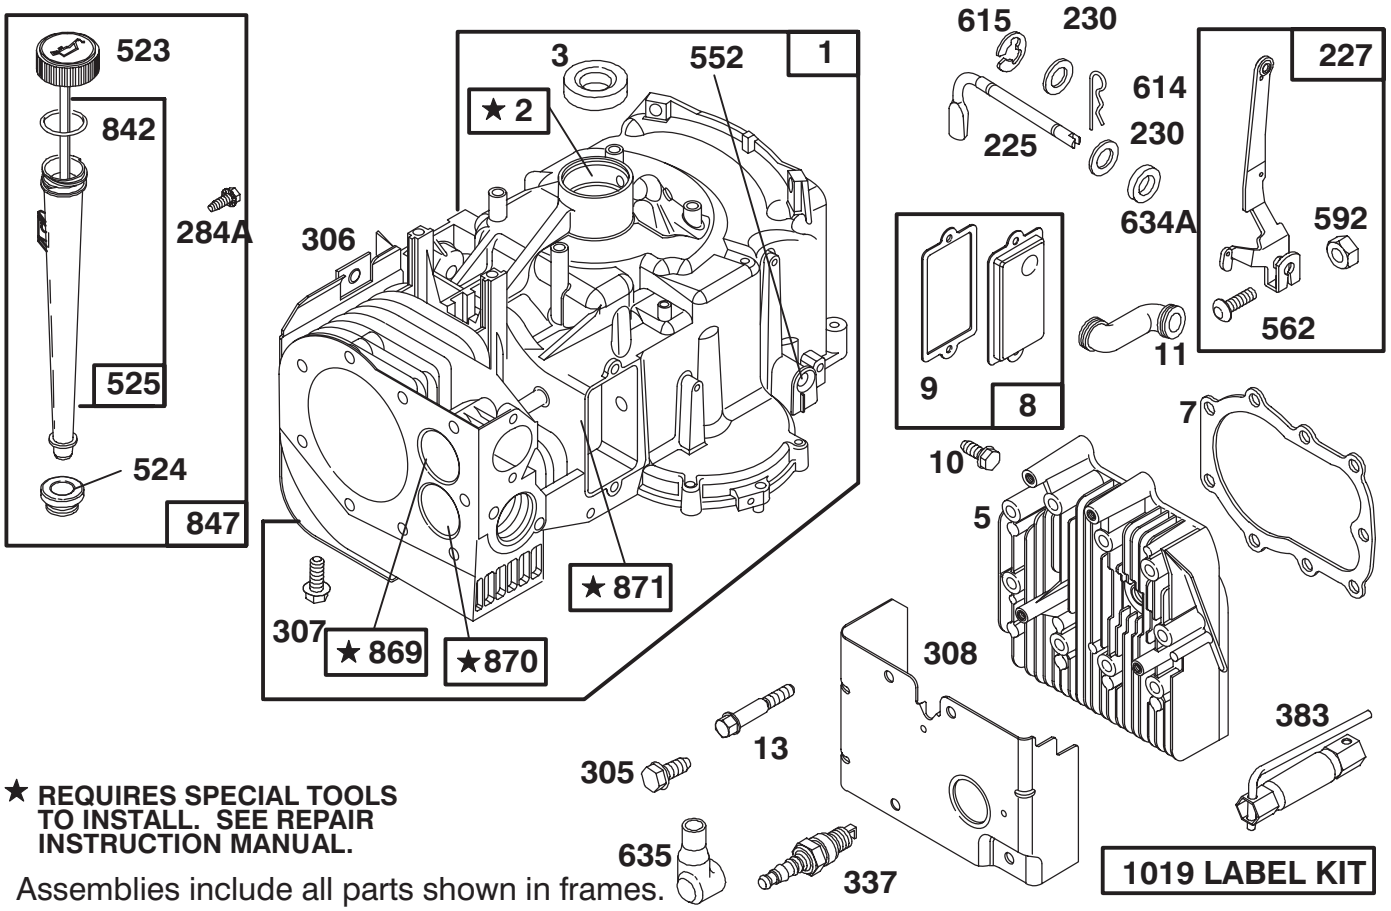

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 286707–0453–01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket–Crkcse. (1/64" Thick)	1
★	271997	Gasket–Crkcse. (.005" Thick)	1
★	271996	Gasket–Crkcse. (.009" Thick)	1
15	94239	Plug–Oil Drain	1
16	495162	Crankshaft	1
	94196	Key–Timing Gear	1
18	494238	Base–Engine	1
★20	291675	Seal–Oil	1
22	94624	Screw–Base Mtg. Sem	1
24	222698	Key–Flywheel	1
25	394661	Piston Assy. (Std.)	1
	394662	Piston Assy. (.010" O.S.)	1
	394663	Piston Assy. (.020" O.S.)	1
	394664	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set–Piston (Std.)	1
	391781	Ring Set–Piston (.010" O.S.)	1
	391782	Ring Set–Piston (.020" O.S.)	1
	391783	Ring Set–Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock–Piston Pin	1
28	299691	Pin Assy.–Piston (Std.)	1
	391286	Pin Assy.–Piston (.005" O.S.)	1
29	490348	Rod Assembly–Connecting	1
	490469	Rod–Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw–Connecting Rod	1
33	262246	Valve–Exhaust	1
34	262247	Valve–Intake	1
35	65906	Spring–Intake Valve	1
36	26828	Spring–Exhaust Valve	1
40	221596	Retainer–Intake Valve	1
41	292260	Rotocoil–Exhaust Valve	1
42	93630	Retainer–Ex. Valve Rotocoil	1
45	262248	Tappet–Valve	1
46	212897	Gear–Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear–Timing	1
757	212359	Link–Counterweight	1
758	399891	Counterweight Assy.	1
759	298909	Pin–Counterweight	1
761	93875	Screw–Counterweight	1

★ Included in Gasket Set–Part No. 494241.

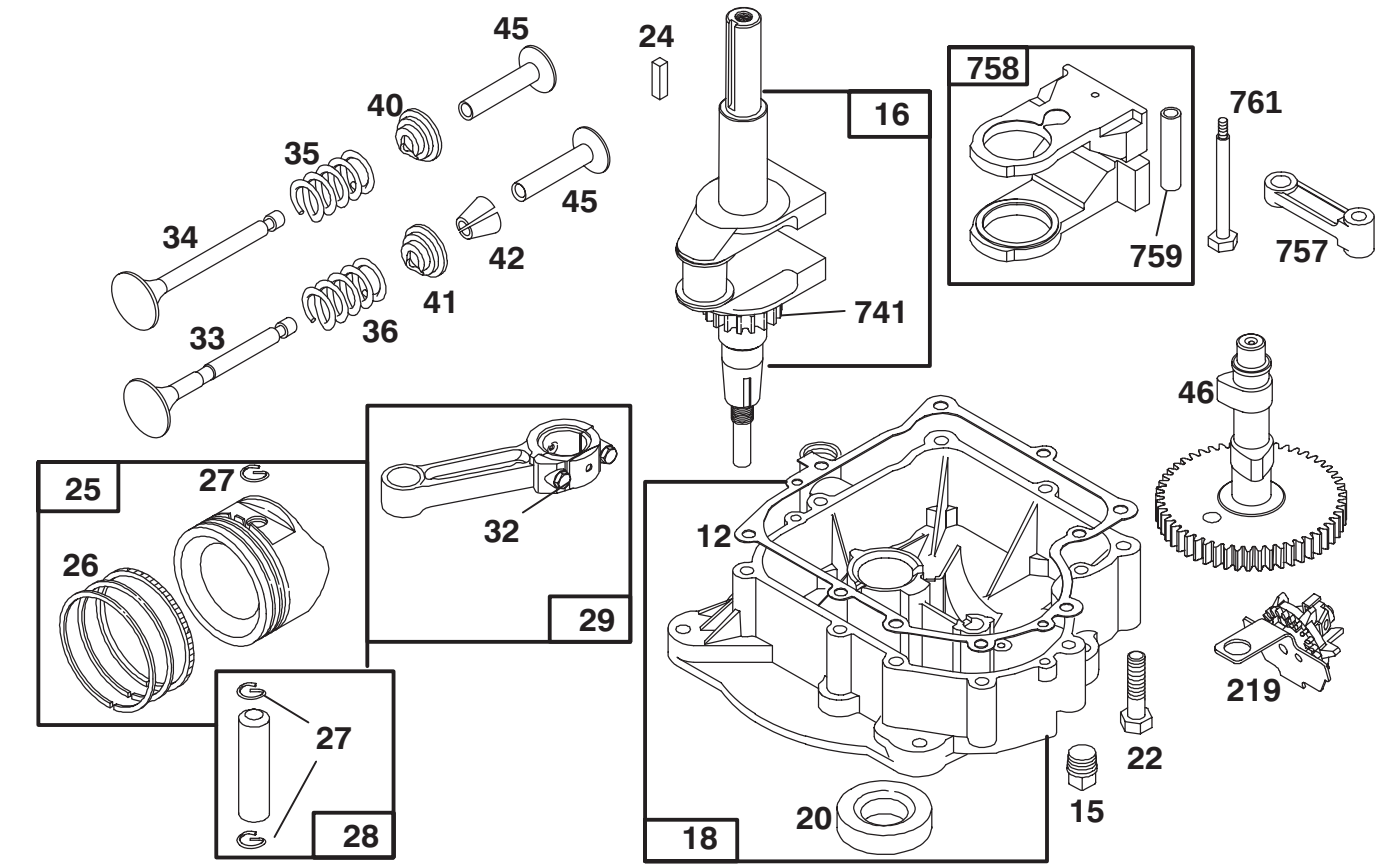


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 286707–0453–01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket–Crkcse. (1/64" Thick)	1
★	271997	Gasket–Crkcse. (.005" Thick)	1
★	271996	Gasket–Crkcse. (.009" Thick)	1
15	94239	Plug–Oil Drain	1
16	495162	Crankshaft	1
	94196	Key–Timing Gear	1
18	494238	Base–Engine	1
★20	291675	Seal–Oil	1
22	94624	Screw–Base Mtg. Sem	1
24	222698	Key–Flywheel	1
25	394661	Piston Assy. (Std.)	1
	394662	Piston Assy. (.010" O.S.)	1
	394663	Piston Assy. (.020" O.S.)	1
	394664	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set–Piston (Std.)	1
	391781	Ring Set–Piston (.010" O.S.)	1
	391782	Ring Set–Piston (.020" O.S.)	1
	391783	Ring Set–Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock–Piston Pin	1
28	299691	Pin Assy.–Piston (Std.)	1
	391286	Pin Assy.–Piston (.005" O.S.)	1
29	490348	Rod Assembly–Connecting	1
	490469	Rod–Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw–Connecting Rod	1
33	262246	Valve–Exhaust	1
34	262247	Valve–Intake	1
35	65906	Spring–Intake Valve	1
36	26828	Spring–Exhaust Valve	1
40	221596	Retainer–Intake Valve	1
41	292260	Rotocoil–Exhaust Valve	1
42	93630	Retainer–Ex. Valve Rotocoil	1
45	262248	Tappet–Valve	1
46	212897	Gear–Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear–Timing	1
757	212359	Link–Counterweight	1
758	399891	Counterweight Assy.	1
759	298909	Pin–Counterweight	1
761	93875	Screw–Counterweight	1

★ Included in Gasket Set–Part No. 494241.

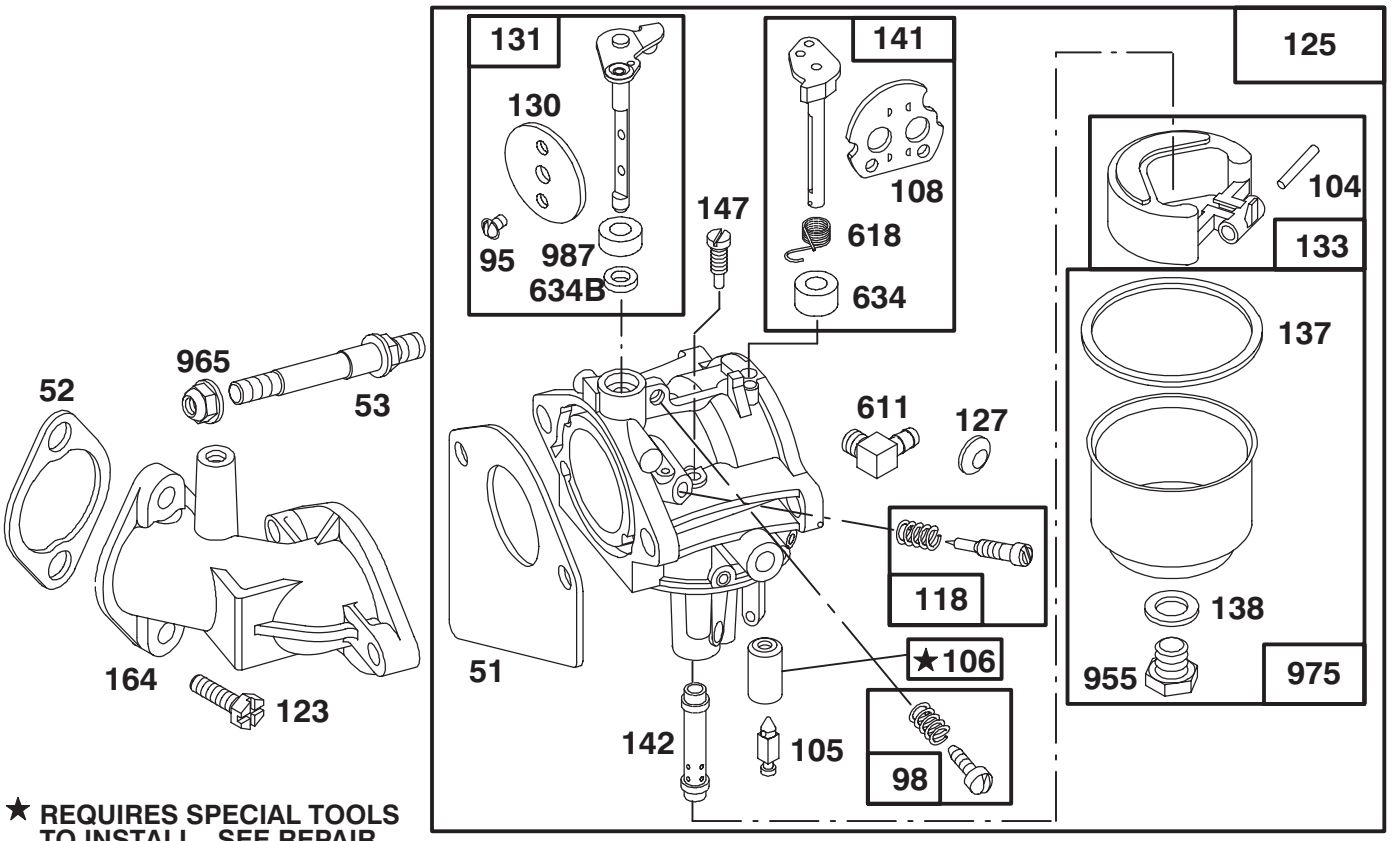

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 286707–0453–01


Ref. No.	Part No.	Description	No. Used
●51	272465	Gasket–Carburetor (Carb. to Elbow)	1
★52	272554	Gasket–Carburetor (Elbow to Cylinder)	1
53	94637	Stud–Carb. Mtg.	1
●95	94098	Screw–Throttle	1
98	495800	Screw–Idle Speed	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve Assy.–Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve–Choke	1
118	494383	Valve–Needle	1
121	495799	Carburetor Overhaul Kit	1
123	94616	Screw–Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug–Welch (Sold in Kit Only).	1
130	224539	Valve–Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft and Lever– Throttle	1
133	494381	Float–Carburetor	1
●◆137	281165	Gasket–Float Bowl	1
●◆138	281164	Washer–Float Bowl Screw	1
141	495931	Shaft and Lever–Choke	1
●142	494537	Nozzle–Carburetor	1
●147	231794	Pilot–Jet	1
164	213819	Carburetor–Elbow	1
611	494451	Fuel Inlet Tube	1
618	262803	Spring–Choke Return	1
●634	281168	Seal–Choke Shaft	1
●634B	398970	Washer–Throttle Shaft	1
955	94642	Screw–Fuel Bowl	1
965	94010	Locknut–Air Cleaner Mtg.	1
975	494378	Bowl Assy.–Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal–Throttle Shaft	1

◆ Included in Carburetor Gasket Set–Part No.494385.

★ Included in Gasket Set–Part No. 494241.

● Included in Carburetor Overhaul Kit–Part No. 495799.

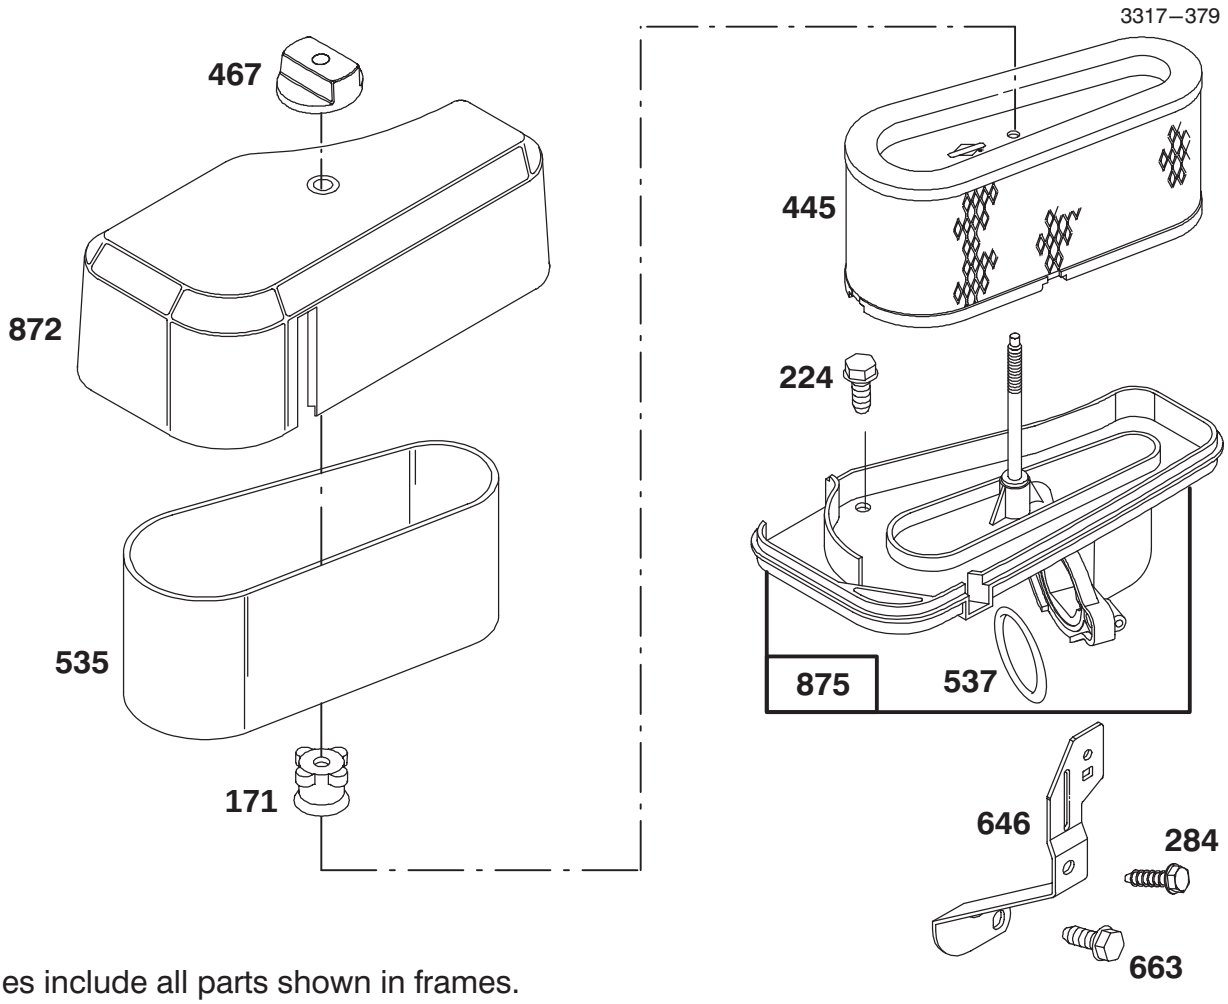


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 286707–0453–01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut–Air Cleaner Mtg.	1
224	94513	Screw–Air Cleaner Sem	1
284	94704	Screw Hex. Head	1
445	493909	Cartridge–Air Cleaner	1
467	493903	Knob–Air Cleaner	1
535	272403	Element–Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring–Air Cleaner	1
646	224546	Brace–Air Cleaner	1
663	94620	Screw–Hex. Hd.	1
872	281104	Cover–Air Cleaner	1
875	494237	Body–Air Cleaner	1

★ Included in Gasket Set–Part No. 494241.

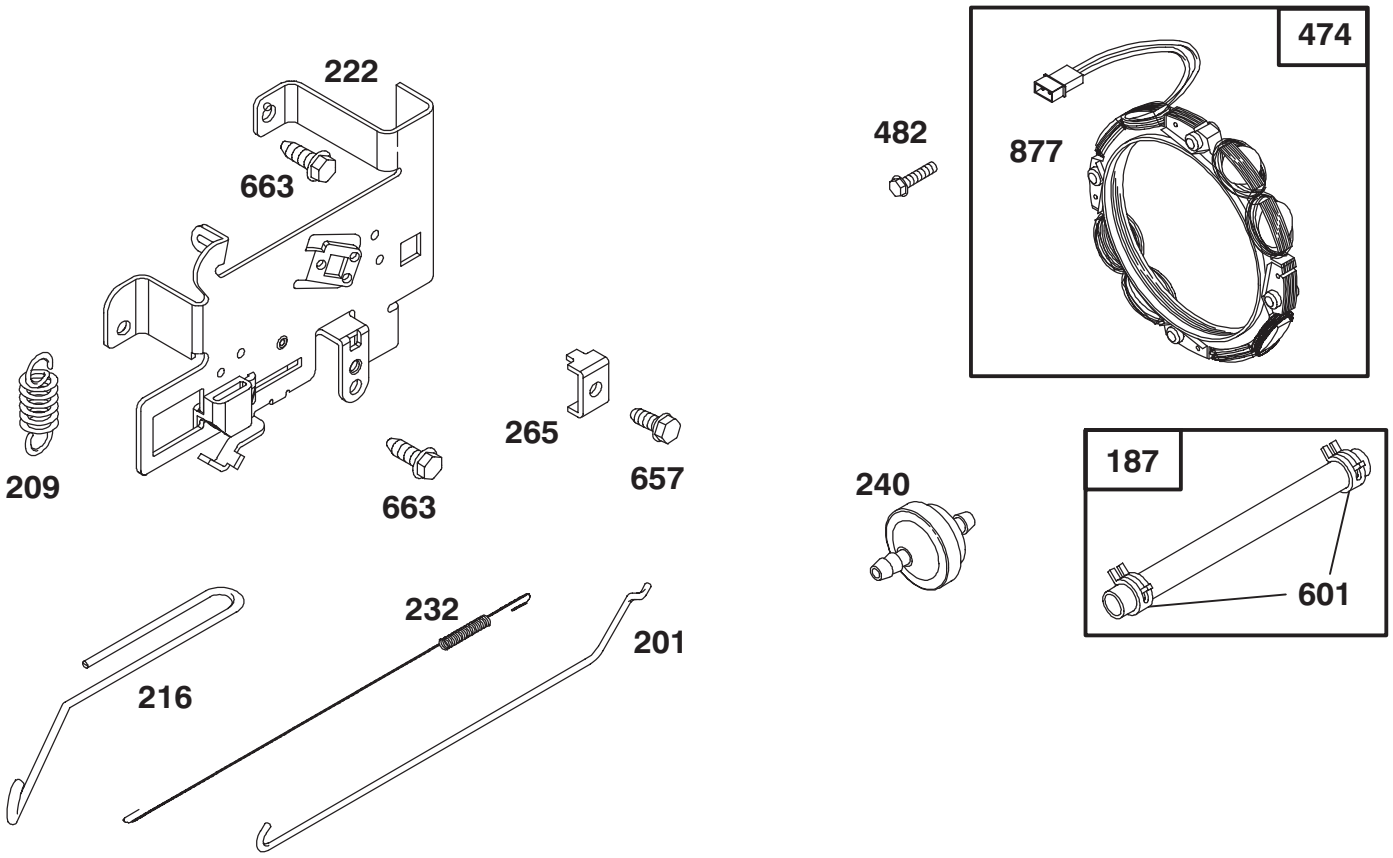


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 286707–0453–01

Ref. No.	Part No.	Description	No. Used
187	393815	Line–Fuel (11” Long, Cut to Suit)	1
201	262767	Link–Governor	1
209	260871	Spring–Governor	1
216	262766	Link–Choke	1
222	495611	Plate–Governor Control	1
232	262785	Spring–Governor Link	1
240	394358	Filter–Fuel	1
265	221535	Clamp–Casing	1

Ref. No.	Part No.	Description	No. Used
474	393474	Stator–Alternator (Dual Circuit)	1
482	93621	Screw–Sem	1
601	93053	Clamp–Fuel Pipe	1
657	93496	Screw–Sem	1
663	94620	Screw–Hex. Hd.	1
877	393456	Diode and Connector Assy. (Dual Circuit)	1

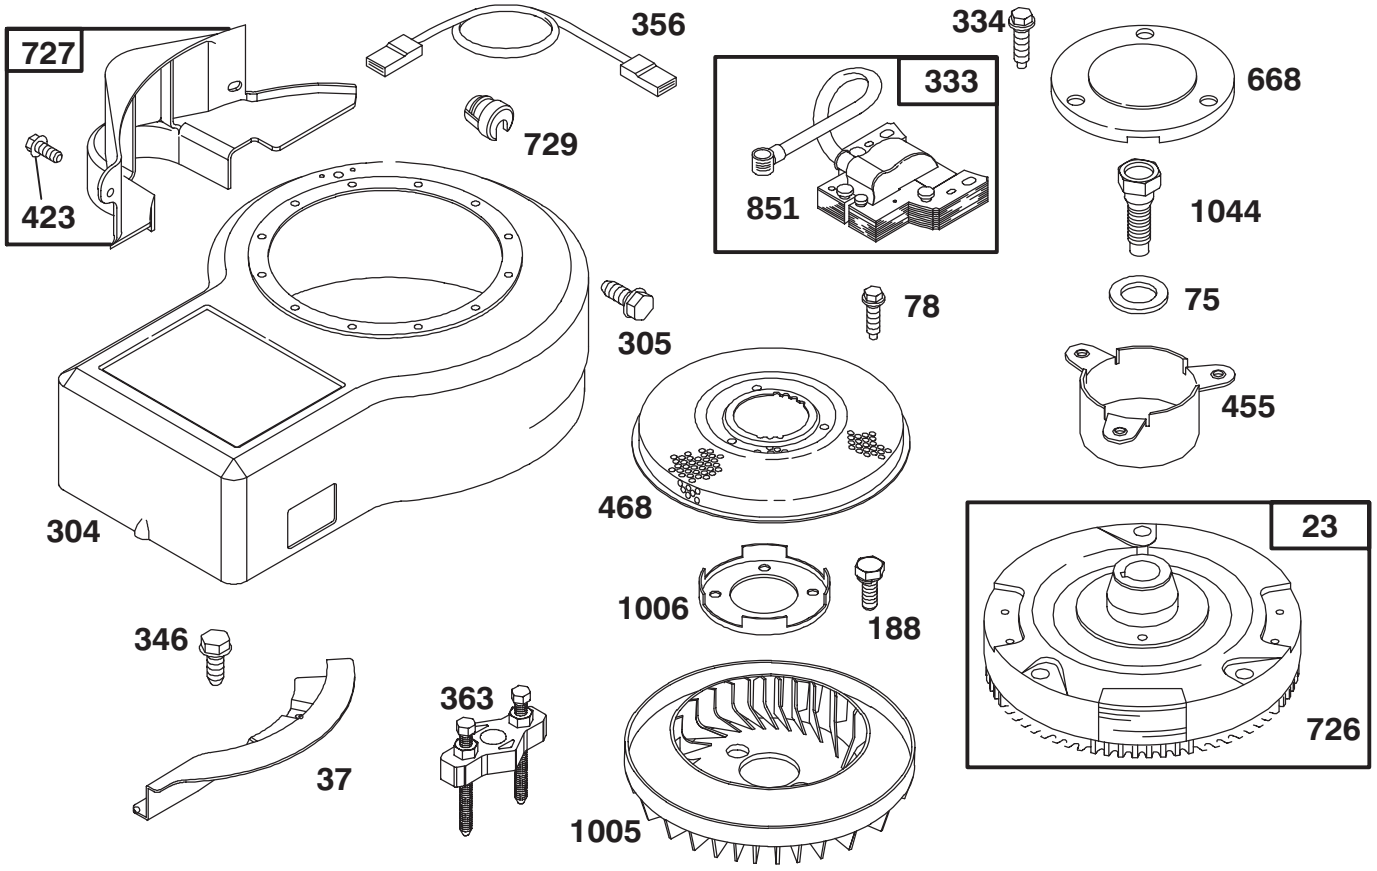


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 286707–0453–01

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel and Ring Gear Assy.–Magneto	1
37	224502	Guard–Flywheel	1
75	224061	Washer–Spring	1
78	93805	Screw–Sem	1
188	93535	Screw–Sem (3/4" Long)	1
304	496319	Housing–Blower	1
305	94619	Screw–Blower Housing Mounting	1
333	492341	Armature–Magneto	1
334	93381	Screw–Armature Mtg.	1
346	93705	Screw–Hex. Head	1
356	494328	Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
363	19203	Puller–Flywheel	1
423	94073	Screw–Sem	1
455	222561	Cup–Screen Mounting	1
468	222562	Screen–Flush Rotating	1
668	280848	Spacer	1
726	392134	Gear–Ring (Includes Mtg Hardware)	1
727	490324	Cover–Starter	1
729	281159	Clip–Lead Wire	1
851	221798	Terminal–Ignition Cable	1
1005	280687	Fan–Flywheel	1
1006	224413	Retainer–Fan	1
1044	94673	Screw–Hex. Head	1

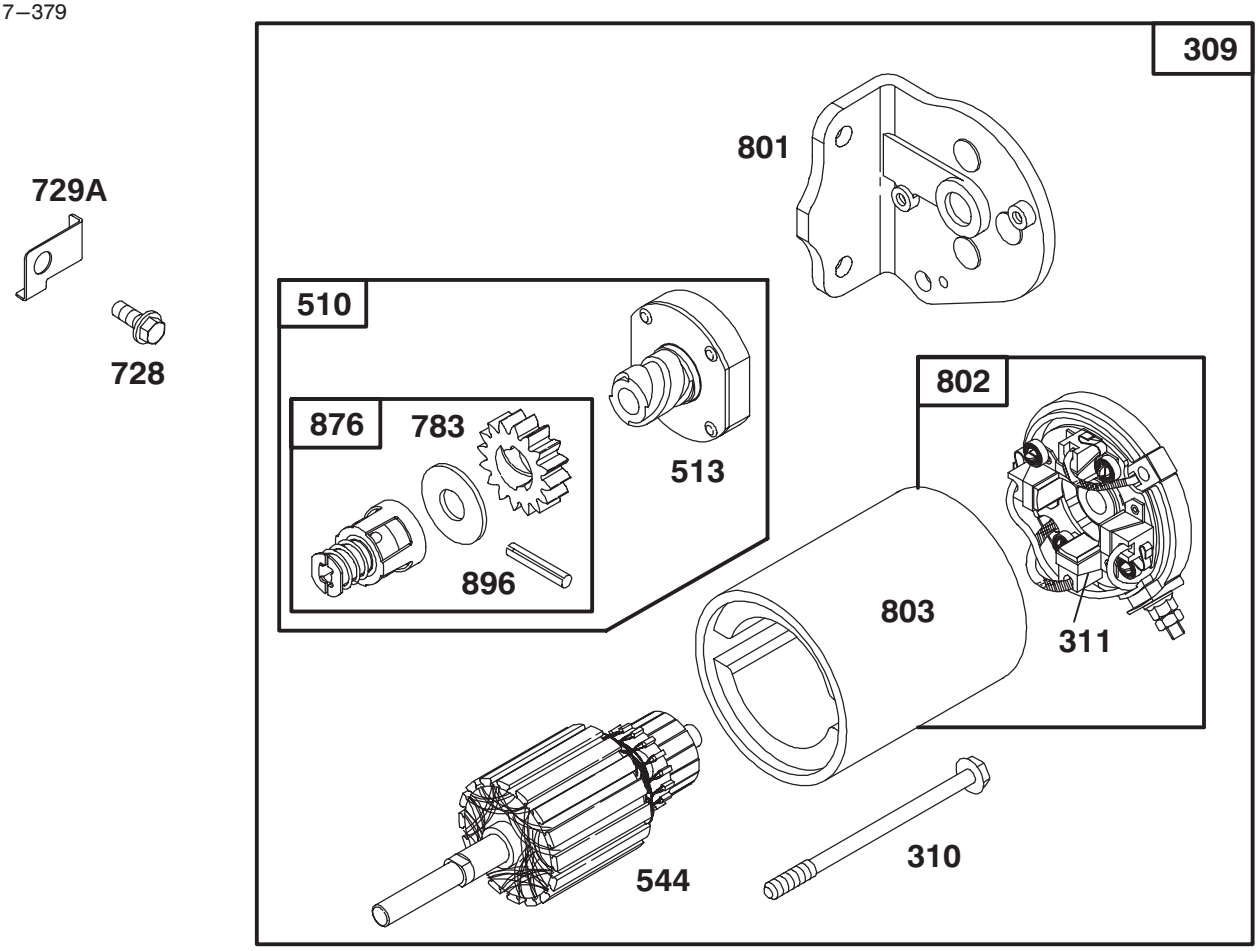


Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 286707—0453—01

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assy.	1
310	94003	Bolt Hex. Hd.	1
311	395538	Brush Assy.	1
510	495878	Starter Drive Assy.	1
513	398003	Clutch Assy.	1
544	390837	Armature Assy.	1
728	94627	Screw—Hex. Hd.	1
729A	224723	Retainer—Wire	1


Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	Drive End Cap Assy.	1
802	395537	End Cap Assy Commutator	1
803	398159	Housing Assy.	1
876	495877	Retainer And Pin	1
896	94288	Pin—Roll	1

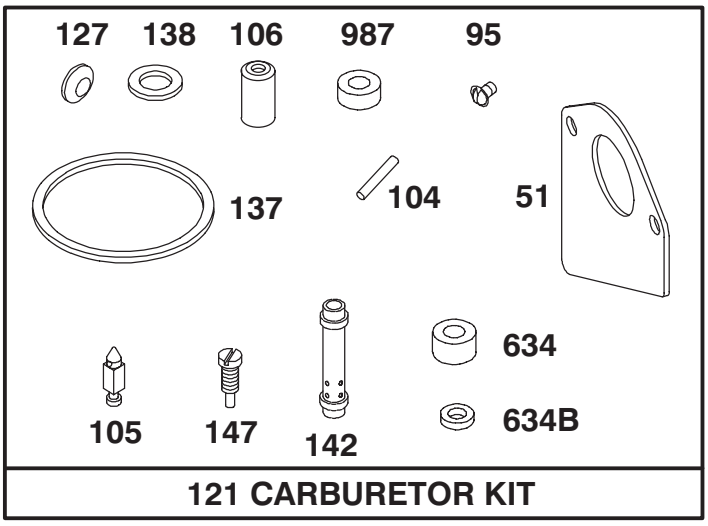

121 CARBURETOR KIT

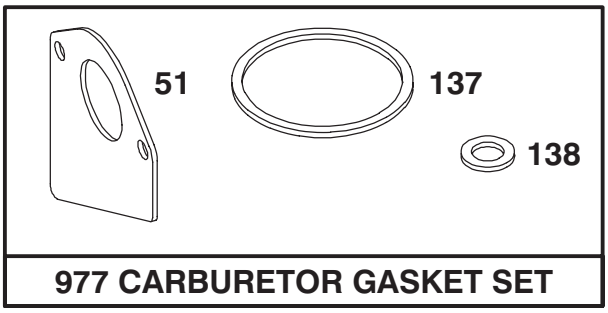

977 CARBURETOR GASKET SET

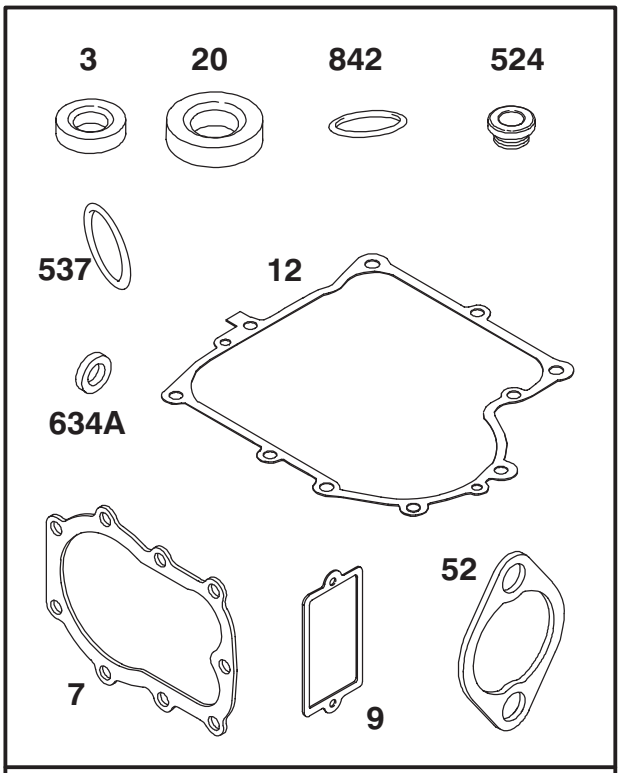

358 GASKET SET


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 286707–0453–01

Ref. No.	Part No.	Description	No. Used
⋆3	391086	Seal–Oil	1
⋆7	271866	Gasket–Cylinder Head	1
⋆9	27803	Gasket–Valve Cover	1
⋆12	271916	Gasket–Crankcase Cover (1/64” Thick)	1
⋆	271997	Gasket–Crankcase Cover (.005” Thick)	1
⋆	271996	Gasket–Crankcase Cover (.009” Thick)	1
⋆20	291675	Seal–Oil	1
◆●51	272465	Gasket–Carburetor (Carb. to Elbow)	1
⋆52	272554	Gasket–Carburetor (Elbow to Cylinder)	1
●95	94098	Screw–Throttle	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve Assy.–Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	495799	Carburetor Kit	1
●127		Plug–Welch (Sold in Kit Only).	1
◆●137	281165	Gasket–Float Bowl	1
◆●138	281164	Washer–Float Bowl Screw	1
●142	494537	Nozzle–Carburetor	1
●147	231794	Pilot–Jet	1
358	494241	Gasket Set	1
⋆524	68838	Seal–Filler Tube	1
⋆537	281106	O-Ring–Air Cleaner	1
●634	281168	Seal–Choke Shaft	1
⋆634A	491323	Seal–Governor	1
●634B	394970	Washer–Throttle Shaft	1
⋆842	270920	Seal–Oil Filler Cap	1
977	494358	Carburetor Gasket Set	1
●987	281166	Seal–Throttle Shaft	1


⋆ Included in Gasket Set–Part No. 494241.
● Included in Carburetor Kit–Part No. 495799.
◆ Included in Carburetor Gasket Set–Part No. 494385.

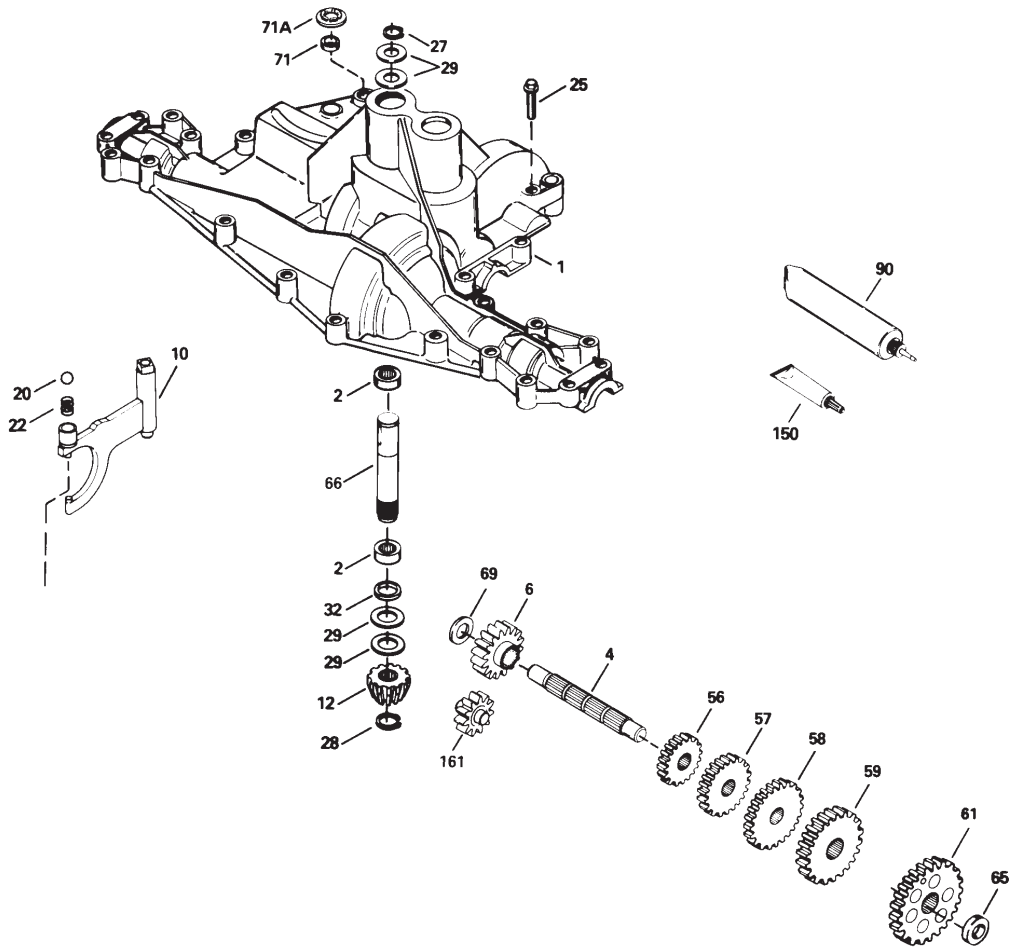

PEERLESS TRANSAXLE MODEL NO. 915–020

Ref. No.	Part No.	Description	No. Used
1	772128	Transaxle Cover	1
4	776300	Countershaft	1
6	778281	Spur Gear (16 Teeth)	1
10	784370	Shift Rod & Fork	1
12	778262	Bevel Pinion (14 Teeth)	1
20	792139	Ball (3/8” dia.)	1
22	792142	Spring	1
25	792073	Screw	17
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	4
32	792001	O–Ring	1
56	778151	Spur Gear (15 Teeth)	1
57	778249	Spur Gear (23 Teeth)	1

Ref. No.	Part No.	Description	No. Used
58	778314	Spur Gear (21 Teeth)	1
59	778129A	Spur Gear (30 Teeth)	1
61	778265	Spur Gear (34 Teeth)	1
65	780162	Washer	1
66	776299	Input Shaft (3.522” lg.)	1
69	780161	Thrust Washer	1
71	788069	Square Cut Ring	1
71A	792145	Pushnut	1
90	788067B	Grease (32 oz. btl. Bentonite grease)	1
150	510334	Gasket Eliminator (Loctite #515)	1
161	776302	Reverse Idler Assembly	1

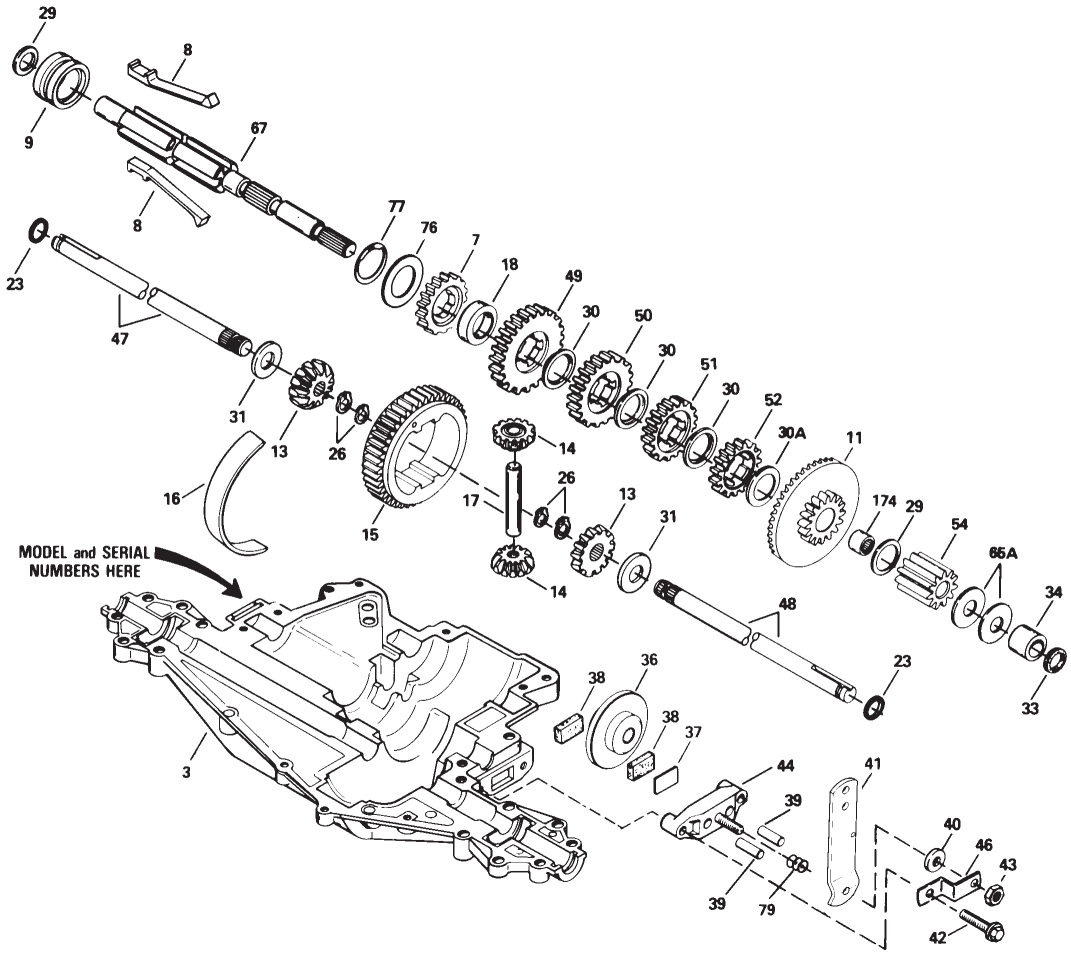

PEERLESS TRANSAXLE MODEL NO. 915–020 (Cont.)

Ref. No.	Part No.	Description	No. Used
3	770110	Transaxle Case	1
7	778122A	Spur Gear (22 Teeth)	1
8	792133	Shift Key	4
9	784352	Shift Collar	1
11	778261	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1
13	778221	Bevel Gear (16 Teeth)	2
14	778068	Differential Pinion	2
15	778260	Ring Gear	1
16	786150	Bearing Strip	1
17	78139	Drive Pin	1
18	786147	Neutral Spacer	1
23	788061	Seal Ring	2
26	792125	Retaining Ring (pkg. of 2)	4
29	780072	Washer	2
30	780108	Washer	3
30A	789145	Washer	1
31	780001	Washer	2
33	788076	O–Ring	1
34	780159	Bushing	1
36	790071	Brake Disk	1
37	790007	Brake Pad Plate	1

Ref. No.	Part No.	Description	No. Used
38	790006	Brake Pad	2
39	786026	Dowel Pin	2
40	792076A	Washer	1
41	790045	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774869	Axle (16–13/16" lg.)	1
48	774688	Axle (11–5/8" lg.) (Incl. Ref. #26)	1
49	778125	Spur Gear (35 Teeth)	1
50	778250	Spur Gear (17 Teeth)	1
51	778313	Spur Gear (19 Teeth)	1
52	778121A	Spur Gear (20 Teeth)	1
54	778263	Spur Gear (11 Teeth)	1
65A	780160	Washer	2
67	776352	Shifter & Brake Shaft	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring (pkg. of 2)	1
79	792144	Spring	1
174	780085	Needle Bearing	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
111419	Washer – Fender	4	19	1
116397	Relay	9	16	1
117242	Decal – Made in USA	1	20	1
701178	Cap – Protector	1	6	2
702366	Clip – Wire Retainer	9	9	3
3–6498	Washer – Thrust	5	14	2
3–6498	Washer – Thrust	4	32	2
3–7501	Washer – Curved	5	11	4
5–4015	Bolt – Shoulder	8	2	1
5–4460	Washer – Fender	3	3	1
5–4460	Washer – Fender	4	24	1
5–4460	Washer – Flat	7	9	4
7–0030	Bolt – Shoulder	14	2	1
7–0030	Bolt – Shoulder	12	15	3
7–0036	Key – Square	11	10	2
7–5461	Washer – Hardened	8	10	1
23–0310	Bolt – Shoulder	15	3	1
26–0671	Bolt – Blade	13	17	2
26–0671	Bolt – Blade	6	17	1
26–6700	Spring – Brake Return	11	17	1
27–0220	Screw – Plastite	6	5	4
27–0220	Screw – Plastite	5	17	2
27–8890	Spring – Pedal Return	7	6	1
28–0540	Bolt – Shoulder	15	10	4
28–0540	Bolt – Shoulder	2	11	2
28–2480	Washer	4	3	2
28–2480	Washer	11	11	2
28–8080	Boot – Battery Terminal	9	5	1
37–8770	Bolt – Shoulder	7	2	1
37–8770	Bolt – Shoulder	3	12	4
38–1420	Switch – Seat	9	8	1
38–7820	Bearing – Spindle	13	23	4
44–8110	Cable – Battery Negative	9	7	1
46–8090	Screw – Plastite	2	15	8
46–8091	Screw – Plastite	2	8	2
47–2963	Line – Fuel	6	10	1
52–2891	Bushing – Steering Link	4	20	2
55–4300	Decal – Caution Spring	13	38	2
55–9321	Cable – Shotgo	8	5	1
56–2540	Vent – Tube	9	2	1
56–9830	Pad – Brake	14	27	2
57–4360	Post – Rear Pivot	13	4	1
57–4380	Rod – Deflector Hinge	13	32	1
57–6950	Spring – Torsion	13	31	1
61–9780	Cap – Hub	4	1	2
61–9780	Cap – Hub	11	13	2
62–1292	Knob – Engage Lever	2	3	1
62–1292	Knob – Shift	12	6	1
62–1292	Knob – Shift	8	15	1
62–3661	Spacer – Bearing	13	20	2
63–8360	Key – Ignition	9	12	1
65–2920	Pad – Pedal	7	25	1
65–7210	Spacer	12	17	1
67–0710	Ball – Swivel	14	28	2
68–3650	Decal – Deflector Danger	13	3	1
68–3660	Decal – Shield Danger	13	36	1
76–2160	Plate – Kicker	13	10	4
76–3820	Anchor – Belt Guide	6	13	2
79–1600	Baffle – Recycler	13	28	1
79–1640	Baffle – Rear	13	13	1
79–3061	Blade – Recycler	13	15	2
79–3140	Decal – Danger	13	11	1
80–0510	Stiffener – Blade	13	35	2
80–2240	Plate– Grille Panel	9	30	1
80–2600	Battery – 7 Plate	9	6	1
80–4341	Shaft – Spindle	13	14	2
80–4360	Shield – Bearing	13	18	2
80–4380	Spacer – Hardened	13	19	2
80–6990	Washer – Hardened	12	16	4
84–5610	Guide – Cable	7	12	2
84–5610	Guide – Cable	8	16	2
88–0890	Grip – Brake Rod	4	11	1
88–3840–01	Body – Rear	1	5	1
88–3850	Wheel – Steering	5	3	1
88–3870	Cover – Steering Wheel	5	2	1
88–3880	Tank – Gas	6	6	1
88–3930	Shield – Heat	2	14	1
88–3940	Panel – Rear Hitch	1	10	1
88–3950	Seat	3	1	1
88–3960	Lens – Headlights	9	23	1
88–3970	Reflector & Lamp	9	25	1
88–3980	Cap – Gas	6	3	1
88–4020	Guide – Deck Belt R.H.	15	5	1
88–4030	Guide – Deck Belt L.H.	15	8	1
88–4040	Box – Battery	9	11	1
88–4050	Duct – Hood Air	2	17	1
88–4070	Tire – 13	4	4	2
88–4090	Tire	11	8	2
88–4140	Nut – Wedge	2	23	2
88–4160	Clamp – Pivot Rod	2	22	2
88–4170	Rod – Tower Pivot	2	24	1
88–4180	Button – Release	5	6	1
88–4190	Bushing – Sliding	5	5	1
88–4210	Bushing – Stationary	5	19	1
88–4220	Latch – Hood	2	16	1
88–4230	Trunnion – H.O.C. Rear	12	12	2
88–4280	Wheel & Tire Assembly	4	*	2
88–4300	Wheel & Tire Assembly	11	*	2
88–4320	Harness – Wire	9	24	1
88–4340	Control – Throttle	6	4	1
88–4350	Cable – Throttle	6	2	1
88–4370	Rim – Front Wheel	4	5	2
88–4390	Rim	11	9	2
88–4400	Bearing – Wheel	4	35	4
88–4410	Gasket – Muffler	6	22	1
88–4430	Cover – Recycler	13	33	1
88–4460	Axle – Front	4	7	1
88–4510	Housing – Spindle	13	21	2
88–4590	Bolt – Shoulder	14	3	3
88–4620	Bracket – Idler Pivot	1	12	1
88–4630	Plate – Engine Mount	1	3	1
88–4640	Bracket – Deck	15	12	2
88–4650	Rail – R.H. Frame	1	4	1
88–4660	Rail – L.H. Frame	1	13	1
88–4670	Bushing – Eccentric	4	17	1
88–4700	Pulley – Cable	15	4	1
88–4700	Pulley – Cable	7	19	1
88–4730	Clamp – H.O.C. Pivot	12	13	2
88–4810	Clamp – Shift Pivot	8	4	2
88–4810	Clamp – Shift Pivot	7	22	1
88–4820	Bracket – Seat Hinge	3	13	2
88–4830	Link – Drag	4	29	1
88–4840	Pulley – Transmission	11	3	1
88–4850	Pulley – Engine	6	14	1
88–4870	Arm – Idler	14	21	1
88–4880	Spacer – Microswitch	9	21	1
88–4890	Spring – Leaf	5	13	1
88–4900	Pan – Front Deck	15	11	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
88–4910	Support – Seat	3	2	1
88–4960	Shield – Exhaust Pipe	1	14	1
88–4980	Bushing – Idler Arm	14	16	1
88–5000	Pedal – Clutch/Brake	7	24	1
88–5010	Spacer – Steering Rack	4	26	1
88–5020	Gate – Shift	3	15	1
88–5030	Gate – H.O.C.	3	8	1
88–5070	Guide – Idler Belt	14	24	1
88–5110	Pivot – H.O.C.	12	14	1
88–5120	Support – Front Axle	1	17	1
88–5130	Bracket – Steering Rack	4	14	1
88–5150	Bushing – Flange	5	16	1
88–5160	Cover – Shift Gate	3	14	1
88–5170	Cover – H.O.C.	3	6	1
88–5180	Bracket – Backup	5	12	1
88–5190	Lever – Deck Engage	2	1	1
88–5200	Rack – Steering	4	18	1
88–5220	Mat – R.H. Foot	3	16	1
88–5240	Mat – L.H. Foot	3	9	1
88–5260	Bracket – Transaxle Mt.	1	11	2
88–5270	Rod – Clutch/Brake	7	1	1
88–5300	Lever – Shift	8	1	1
88–5330	Pulley – Deck	14	18	2
88–5340	Lever – Trans. Shift	8	9	1
88–5350	Strap – Torque	11	16	2
88–5380	Rod – Steering Tie	4	8	1
88–5390	Bellcrank	14	10	1
88–5450	Rod – Hanger Rear	12	11	2
88–5460	Guide – Trans. Belt	7	10	2
88–5470	Spacer – Front Axle	4	34	2
88–5500	Rod – Pedal Pivot	7	18	1
88–5510	Rod – Parking Brake	4	9	1
88–5520	Bracket – Parking Brake	4	10	1
88–5530	Rod – Shift Tie	8	7	1
88–5540	Rod – Deck Brake R.H.	14	22	1
88–5550	Rod – Deck Brake L.H.	14	5	1
88–5560	Guide – Idler Belt	7	3	1
88–5570	Link – Adjusting H.O.C.	12	1	2
88–5630	Pulley – Idler	14	23	1
88–5680	Pulley – Flat Idler	7	4	1
88–5780–01	Deck – 38	13	6	1
88–5800	Bushing –	4	33	4
88–5830	Guide – Belt L.H.	6	12	1
88–5840	Guide – Belt R.H.	6	21	1
88–5900	Link – H.O.C.	12	8	1
88–5910	Spring – Torsion	14	7	2
88–5920	Rod – Gas Tank	6	7	1
88–5930	Keeper – Cable	8	17	1
88–5970	Hook –Spring Return	14	12	1
88–6040	Bracket – Hood Pivot R.H.	2	19	1
88–6050	Bracket – Hood Pivot L.H.	2	12	1
88–6070	Arm – Idler	7	16	1
88–6090	Coupling – Steering	5	20	1
88–6100	Brake – Deck	14	4	2
88–6130	Spring – Deck Engage	14	8	1
88–6140	Spring – Brake	7	7	1
88–6220	Spring – Compression	1	8	2
88–6240	V–Belt – Traction	11	5	1
88–6250	V–Belt – Deck	14	17	1
88–6290	Shield – Muffler	1	15	1
88–6300	Shaft – Steering Upper	5	9	1
88–6330	Spring – Extension	7	14	1
88–6370	Shaft – Steering Short	5	15	1
88–6410	Cable – Deck Engage	15	6	1
88–6450	Transaxle	11	6	1
88–6460	Spring – Extension	12	2	1
88–6480	Muffler	6	25	1
88–9830	Switch – Ignition	9	15	1
88–9932	Switch – Micro	9	20	2
92–2460	Decal – Ignition/Lights	2	28	1
92–2461	Decal – Throttle	2	29	1
92–2462	Decal – Deck Engage	2	30	1
92–2467	Decal – Hood R.H.	2	25	1
92–2468	Decal – Hood L.H.	2	*	1
92–2474	Decal – Tower 1238XL	2	31	2
92–2481	Decal – Engine 12.5)	6	9	1
92–2484	Decal – Instruction	1	19	1
92–2490	Decal – Rear Body	1	18	1
92–5748	Decal – Air Duct	2	27	1
92–5782	Patch – Heat Tape	2	26	1
92–5794	Lever – Shift Pivot	8	21	1
92–5796	Pivot – Shift	8	6	1
92–7889	Spindle – R.H.	4	6	1
92–7890	Spindle – L.H.	4	31	1
92–8650	Hood	2	18	1
92–8875	Switch – Rocker	9	27	1
92–8934	Spring – Extension	14	9	1
92–9520	Decal – Recycler	13	8	1
92–9674	Knob – Studded	3	4	1
92–9845	Solenoid	9	17	1
93–0303	Tower – Steering	2	2	1
93–0317	Deflector Ass'y	13	2	1
93–0539	Screw – Phillips Hd.	9	19	4
93–1122	Decal – Danger	13	1	2
93–3240	Seal – Plunger	9	28	2
93–3810	Harness – Wire	9	1	1
93–3822	Lever – H.O.C.	12	7	1
93–6679	Decal – Belt Guide	13	24	1
218–461	Nut – Hex	9	13	1
232–27	Valve Stem w/Cap	11	18	2
232–27	Valve Stem w/Cap	4	36	2
232–39	Inner Tube	4	*	2
232–41	Inner Tube (Optional)	11	*	2
2412–98	Clamp – Hose	6	11	2
302–5	Fitting – Grease	4	37	2
302–11	Fitting – Grease	11	7	2
302–26	Fitting – Grease	4	16	1
321–2	Screw – Hex Hd. Cap	2	10	4
321–4	Screw – Hex Hd. Cap	9	3	2
321–4	Screw – Hex Hd. Cap	5	8	2
321–4	Screw – Hex Hd. Cap	13	22	2
321–4	Screw – Hex Hd. Cap	6	26	1
321–9	Screw – Hex Hd. Cap	5	21	2
321–14	Screw – Hex Hd. Cap	13	37	2
322–3	Screw – Hex Hd. Cap	1	2	22
322–3	Screw – Hex Hd. Cap	12	4	4
322–3	Screw – Hex Hd. Cap	2	4	2
322–3	Screw – Hex Hd. Cap	3	11	4
322–3	Screw – Hex Hd. Cap	8	13	3
322–3	Screw – Hex Hd. Cap	7	17	2
322–5	Screw – Hex Hd. Cap	1	7	2
322–5	Screw – Hex Hd. Cap	7	8	1
322–5	Screw – Hex Hd. Cap	14	15	2
322–7	Screw – Hex Hd. Cap	7	11	1
322–9	Bolt – Shoulder	12	3	1
322–9	Screw – Hex Hd. Cap	6	18	4
322–12	Screw – Hex Hd. Cap	15	2	2
322–12	Screw – Hex Hd. Cap	11	14	4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
323–5	Screw – Hex Hd. Cap	13	29	2
323–11	Screw – Hex Hd. Cap	7	5	1
323–12	Screw – Hex Hd. Cap	14	1	1
323–13	Screw – Hex Hd. Cap	4	27	2
329–23	Screw – Hex Hd. Cap	8	12	1
3219–6	Nut – Lock	14	19	2
3230–1	Bolt – Carriage	4	15	4
3230–1	Bolt – Carriage	13	26	1
3230–3	Bolt – Carriage	8	18	1
3230–3	Bolt – Carriage	7	21	1
3230–3	Screw – Carriage	4	28	1
3231–4	Screw – Carriage	4	13	1
3253–3	Washer – Lock	8	11	1
3253–3	Washer – Lock	6	27	1
3253–4	Washer – Lock	6	23	2
3253–22	Washer – Lock	6	16	1
3254–5	Washer – Lock	9	14	1
3255–7	Washer – Ext. Tooth Lock	9	29	1
3255–8	Washer – Ext. Tooth Lock	6	19	1
3256–22	Washer – Flat	5	7	2
3256–23	Washer – Flat	1	1	4
3256–23	Washer – Flat	2	5	2
3256–23	Washer – Flat	14	14	3
3256–23	Washer – Flat	8	14	2
3256–23	Washer – Flat	11	15	8
3256–23	Washer – Flat	7	26	2
3256–24	Washer – Flat	12	10	4
3256–24	Washer – Flat	2	20	2
3256–24	Washer – Flat	14	25	2
3256–24	Washer – Flat	4	25	4
3256–25	Washer – Flat	6	15	1
3256–25	Washer – Flat	8	20	1
3256–25	Washer – Flat	4	22	2
3256–26	Washer – Flat	7	20	2
3256–68	Washer – Fender	14	11	3
3257–23	Key – Woodruff	11	4	1
3269–26	Washer – Backup	3	17	4
3272–10	Pin – Cotter	4	23	4
3272–10	Pin – Cotter	7	23	1
3272–12	Pin – Cotter	4	2	2
3274–12	Screw – Hex Soc. Hd.	6	24	2
3290–282	Rivet – Pop	3	7	4
3290–282	Rivet – Pop	14	26	4
3290–299	Nut – Tinnerman	9	31	1
3290–307	Pin – Cotter	2	7	2
3290–307	Pin – Hair Cotter	12	9	7
3290–354	Speednut	9	22	2
3290–465	Washer – Belleville	13	16	2
3290–479	Fastener – Panel	3	5	20
3290–496	Nut – Retained	2	13	2
3296–3	Nut – Lock	8	8	2
3296–29	Nut – Lock	11	1	8
3296–29	Nut – Lock	15	1	6
3296–29	Nut – Lock	8	3	4
3296–29	Nut – Lock	12	5	8
3296–29	Nut – Lock	2	6	2
3296–29	Nut – Lock	6	8	3
3296–29	Nut – Lock	1	9	24
3296–29	Nut – Lock	3	10	6
3296–29	Nut – Lock	4	12	5
3296–29	Nut – Lock	14	13	6
3296–29	Nut – Lock	7	13	6
3296–29	Nut – Lock	13	27	1
3296–39	Nut – Lock	15	9	1
3296–39	Nut – Lock	8	19	1
3296–39	Nut – Lock	14	20	1
3296–39	Nut – Lock	4	21	3
3296–39	Nut – Lock	13	25	3
3296–42	Nut – Lock	14	6	2
3296–42	Nut – Lock	2	9	4
3296–42	Nut – Lock	5	10	4
3296–42	Nut – Lock	13	12	4
3296–59	Nut – Lock	7	15	2
32103–22	Nut – Wing	9	4	2
32104–76	Screw – Thread Cutting	15	7	5
32104–76	Screw – Thread Tapping	1	16	1
32120–64	Ring – Snap	11	2	1
32121–78	Pin – Roll	5	4	1
32128–43	Nut – Flange	2	21	2
32144–4	Screw – Hex Hd. Thr'd	9	10	3
32144–32	Screw – Plastite	9	26	2
32144–41	Screw – Taptite	13	7	8
32144–111	Screw – Plastic	13	9	8
32149–1	Nut – Keps	6	20	2
32149–2	Nut – Keps	9	18	2
32151–48	E–Ring	11	12	2
32151–48	E–Ring	5	18	1
32151–48	E–Ring	4	30	2
32151–81	Ring – Retaining	5	1	1

OPTIONAL EQUIPMENT

Easy Empty Bagger Kit . . . . . Model No. 79116
Twin Bagger . . . . . Model No. 79101
Anti–Scalp Kit . . . . . Model No. 79181
Recycler Kit (Standard) . . . . . Model No. 79170
Wheel Weight Kit . . . . . Model No. 59159
42" Snowblade Kit . . . . . Model No. 79150
Tire Chains . . . . . Part No. 11–0430
Hi–Sail Bagging Blade . . . . . Part No. 57–4700
Headlight Kit (Standard) . . . . . Model No. 79180

*Not Illustrated