Form No. 3355-988 Rev B

TORO®

Count on it.

Parts Catalog

42in Two-Stage Snowthrower

Model No. 190-032-101—Serial No. 260000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake clutch

CARR: carriage

CCW: counter clock wise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


© 2009—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Contents

Auger Housing, Discharge Chute and Impeller Assembly 4
Handle, Crank Rod and Drive Assembly 6
Spindle and Belt Assembly 8


Auger Housing, Discharge Chute and Impeller Assembly

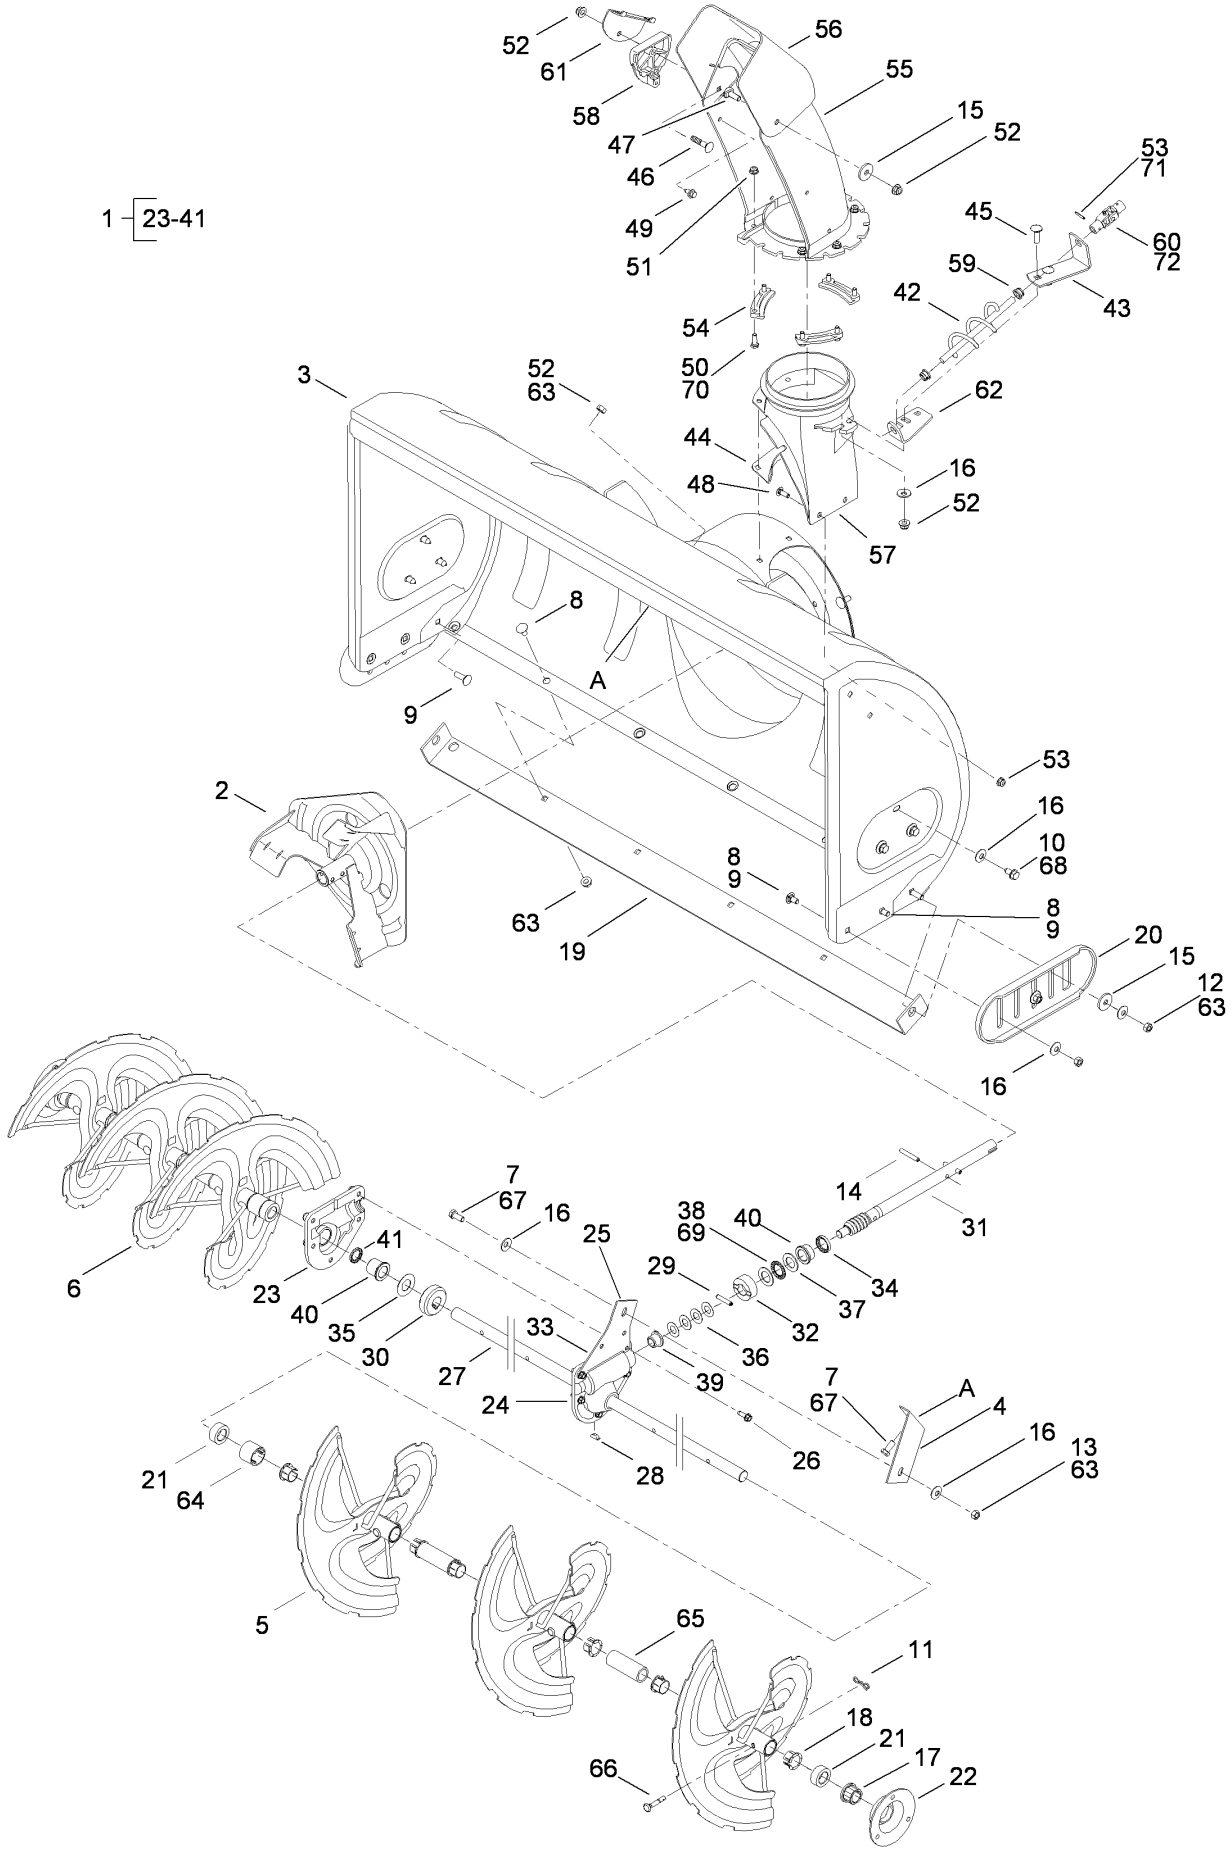

Auger Housing, Discharge Chute and Impeller Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-1135	1	Auger Gear Box ASM
2	112-0959	1	Impeller ASM
3	112-0957	1	Housing ASM
4	112-0965	1	Bracket-Housing, Brace
5	112-0961	3	LH Spiral Auger ASM
6	112-0962	3	RH Spiral Auger ASM
7	112-1071	2	Screw-HH
8	112-1072	10	Bolt-CARR
9	112-0598	2	Bolt-CARR
10	112-0598	8	Bolt-CARR
11	112-0990	8	Pin-Cotter
12	112-0437	6	Nut-Hex
13	112-1120	2	Nut-Hex
14	112-1130	2	Pin-Roll
15	112-1159	3	Washer-Flat
16	112-0435	17	Washer-Bell
17	112-1179	2	Bearing-Flange
18	112-1022	12	Bearing-Flange
19	112-1061	1	Bracket-Plate, Skid
20	112-1063	2	Shoe-Slide
21	112-0980	4	Spacer
22	112-1066	2	Housing-Bearing, Hex
23	112-3650	1	Housing-Reducer, RH
24	112-3651	1	Housing-Reducer, LH
25	112-3652	1	Plate-Brace, Housing
26	112-0587	5	Screw-TAP
27	112-3653	1	Axle-Spiral
28	112-3654	1	Key-Hi Pro
29	112-3655	1	Pin-Spirol, Spring
30	112-3656	1	Gear-Worm, 20T
31	112-3657	1	Shaft-Worm
32	112-3658	1	Collar-Thrust
33	112-3659	1	Plug-Grease
34	112-3660	1	Seal-Grease
35	112-0813	2	Washer-Thrust
36	112-3661	4	Washer-Flat
37	112-3662	2	Washer-Thrust
38	112-3663	1	Bearing-Thrust
39	112-3664	1	Bearing-Flange
40	112-3665	1	Bearing-Flange
41	112-3667	2	Seal-Grease
42	112-0956	1	Crank Chute ASM
43	112-0966	1	Bracket-Chute
44	112-0968	1	Reinforcement-Chute
45	112-0598	2	Bolt-CARR
46	112-1073	1	Bolt-CARR
47	112-0971	1	Bolt-CARR
48	112-0479	5	Bolt-CARR
49	112-1085	1	Screw-HH
50	112-0499	6	Screw-HH
51	112-0636	11	Nut-Lock, Flange
52	112-0650	5	Nut-Lock, Flange
53	112-0992	1	Pin-Spring, Spiral
54	112-1002	3	Keeper-Flange, Chute
55	112-1007	1	Chute-Lower
56	112-0999	1	Chute-Upper
57	112-1009	1	Adapter-Chute, Discharge
58	112-1008	1	Guide-Cable
59	112-0928	2	Bearing-Ball
60	112-1205	1	Joint Block ASM
61	112-1064	1	Bracket-Cable
62	112-1067	1	Bracket-Crank, Chute
63	112-0511	6	Nut-Lock, Flange
64	112-1000	2	Spacer
65	112-1006	4	Sleeve
66	112-1020	8	Pin-Shear
67	119-3956	2	Screw
68	112-6070	2	Screw-TAP
69	119-3957	1	Bearing-Thrust
70	112-6179	6	Screw-Hex
71	119-3958	1	Pin-Spirol
72	119-3959	1	Joint Block ASM


Handle, Crank Rod and Drive Assembly

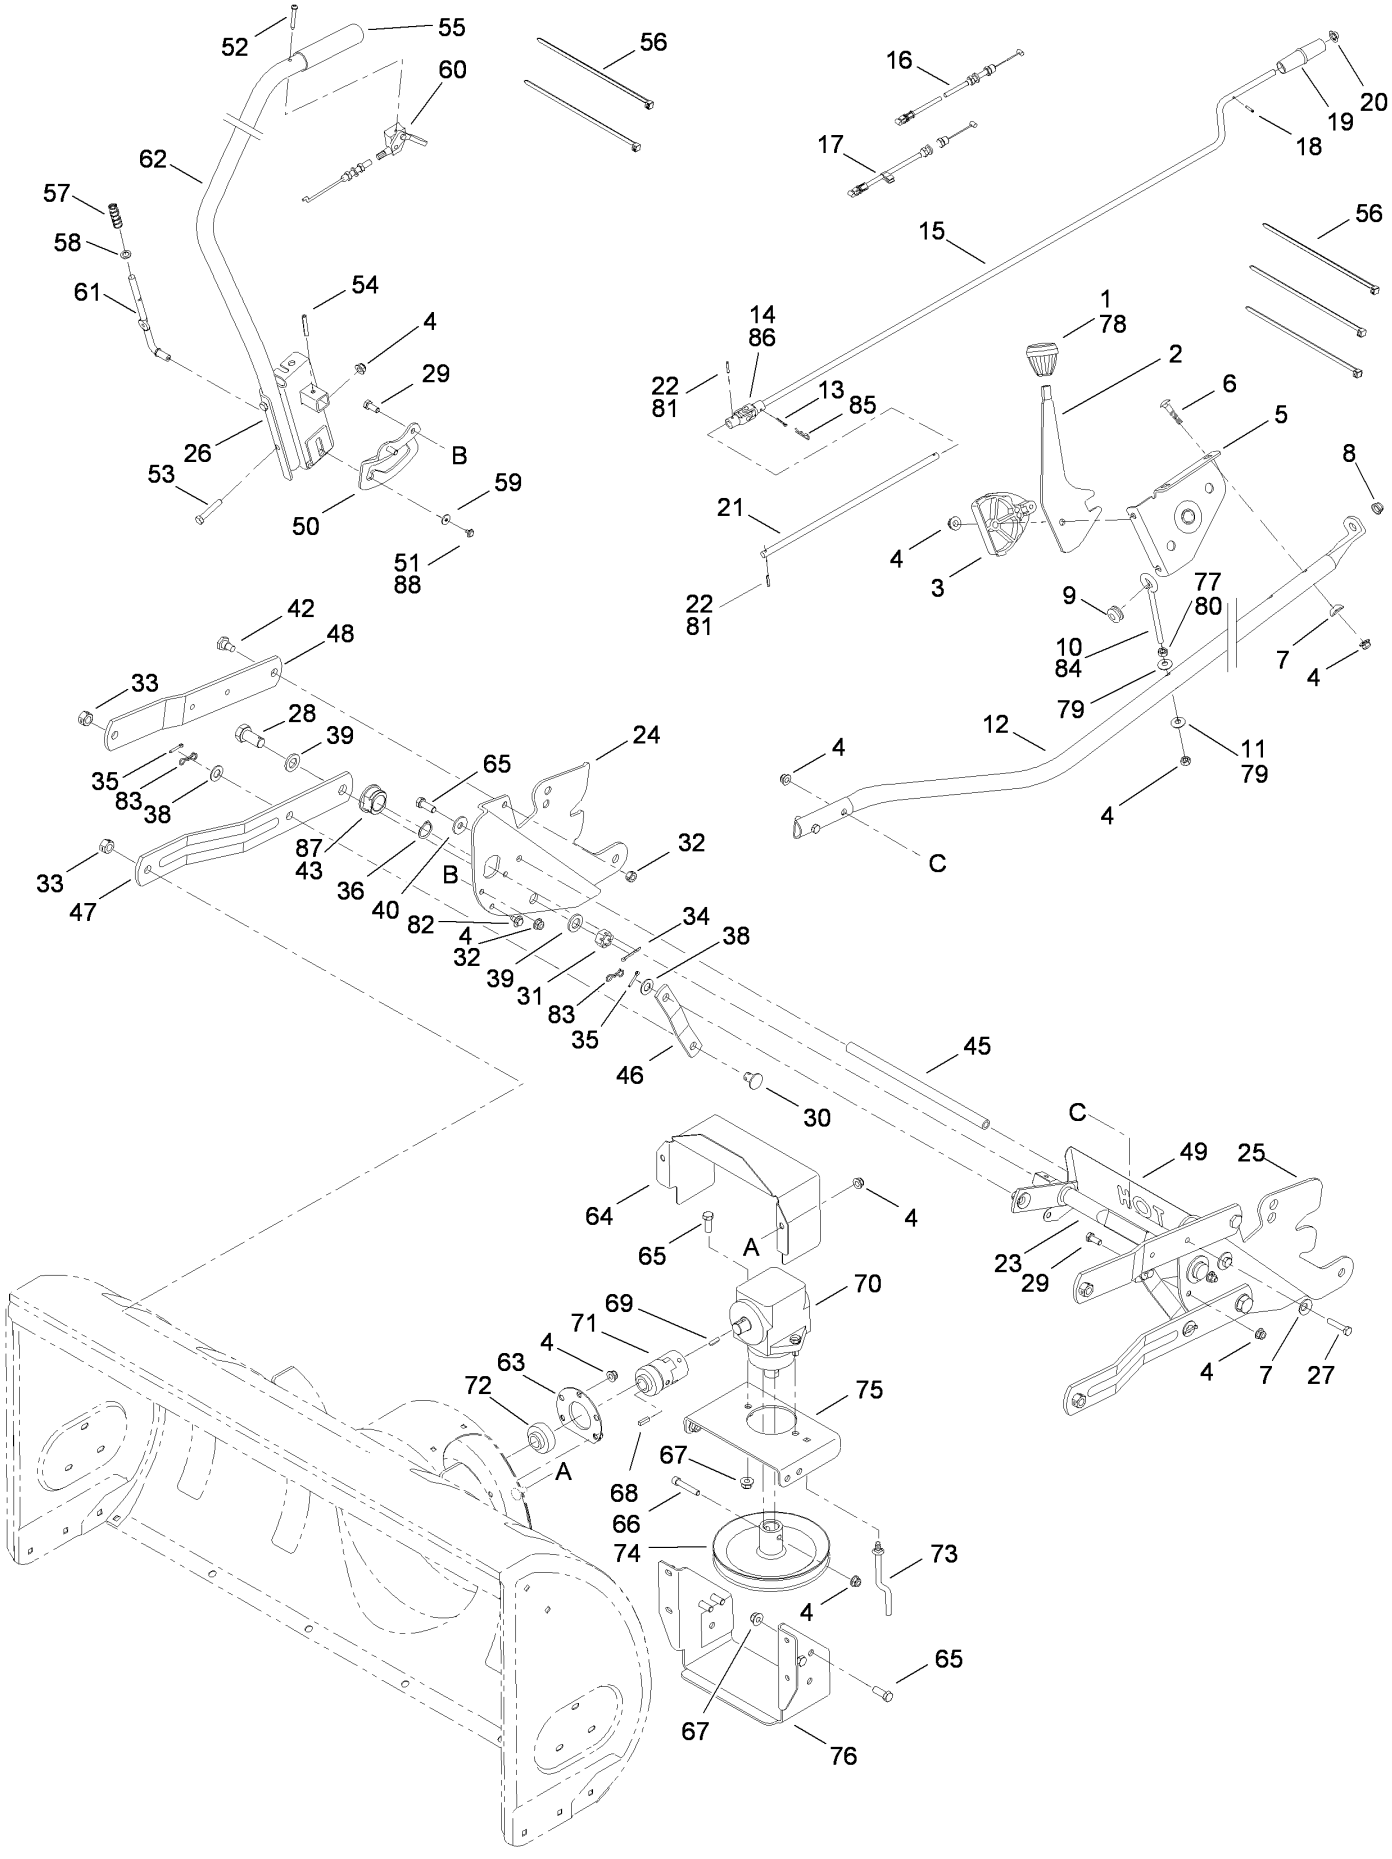

Handle, Crank Rod and Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-1138	1	Knob
2	112-1065	1	Handle-Tilt, Chute
3	112-1008	1	Guide-Cable
4	112-0650	22	Nut-Lock, Flange
5	112-0944	1	Bracket-Tilt, Chute
6	112-1073	2	Bolt-CARR
7	112-1169	2	Washer-Saddle
8	112-0929	1	Bushing
9	112-1015	1	Grommet
10	112-1029	1	Eyebolt
11	112-0435	1	Washer-Bell
12	112-1039	1	Tube-Support, Chute
13	112-0354	1	Pin-Cotter
14	112-1205	1	Joint Block ASM
15	112-1031	1	Rod-Crank, Chute
16	112-1025	1	Cable-Chute
17	112-1026	1	Cable-Chute
18	112-1131	1	Pin-Roll
19	112-0993	1	Knob-Crank, Chute
20	112-1141	1	Nut-Push
21	112-1028	1	Rod
22	112-0992	2	Pin-Spring, Spiral
23	112-0945	1	Rod ASM
24	112-3669	1	RH Support Plate ASM
25	112-3670	1	LH Support Plate ASM
26	112-0950	1	Lift Bracket ASM
27	112-0594	2	Screw-HH
28	112-0975	2	Screw-HH
29	112-1090	4	Screw-HH
30	112-0376	2	Pin-Bracket, Lift
31	112-0982	2	Nut-Hex Castle
32	112-0909	4	Nut-Lock
33	112-1117	4	Nut-Hex, Lock
34	112-0412	2	Pin-Cotter
35	112-1128	8	Pin-Cotter
36	112-1132	1	Ring-Snap
38	112-1163	4	Washer-Flat
39	112-1167	4	Washer-Flat
40	112-1170	2	Washer-Bell
42	112-1019	2	Bolt-Shoulder
43	112-1178	2	Bearing-Flange
45	112-1030	1	Rod
46	112-1048	2	Link
47	112-1049	2	Link
48	112-1050	2	Link
49	112-1056	1	Shield-Heat
50	112-1068	1	Bracket-Lift
51	112-0857	1	Screw-HH, TAP
52	112-1093	1	Screw-Pan HD
53	112-1095	2	Bolt-HH
54	112-1130	1	Pin-Roll
55	112-0995	1	Grip
56	112-0527	5	Tie-Cable
57	112-1013	1	Spring-Compression
58	112-0407	1	Washer-Flat
59	112-1168	1	Washer-Flat
60	112-1024	1	Cable-Lift, W/Trigger
61	112-1032	1	Rod-Index, Lift
62	112-1040	1	Tube-Handle, Lift
63	112-0937	1	Housing-Bearing
64	112-0967	1	Cover-Belt
65	112-0492	8	Screw-HH
66	112-1096	1	Screw-HSH
67	112-0668	6	Nut-Lock, Flange
68	112-1122	1	Key-Square
69	112-1123	1	Key-Hi Pro
70	112-1134	1	Drive-Angle, Right
71	112-1137	1	Coupler-Flexible
72	112-1180	1	Bearing-Ball (W/Out Collar)
73	112-1033	1	Rod-Keeper, Belt
74	112-1042	1	Pulley-Drive
75	112-1053	1	Bracket-Mounting
76	112-1062	1	Plate-Skid
77	112-0437	1	Nut-Hex
78	119-3955	1	Knob
79	112-0485	2	Washer-Spring
80	112-0522	1	Nut-Hex
81	119-3958	1	Pin-Spirol
82	112-0556	2	Screw-HWH
83	119-3960	2	Pin-Cotter, Bow Tie
84	119-3964	1	Bolt-Eye
85	119-3965	1	Pin-Cotter
86	119-3959	1	Joint Block ASM
87	119-3966	2	Bearing-Flange
88	119-3967	1	Screw-Washer, Hex Index

Spindle and Belt Assembly

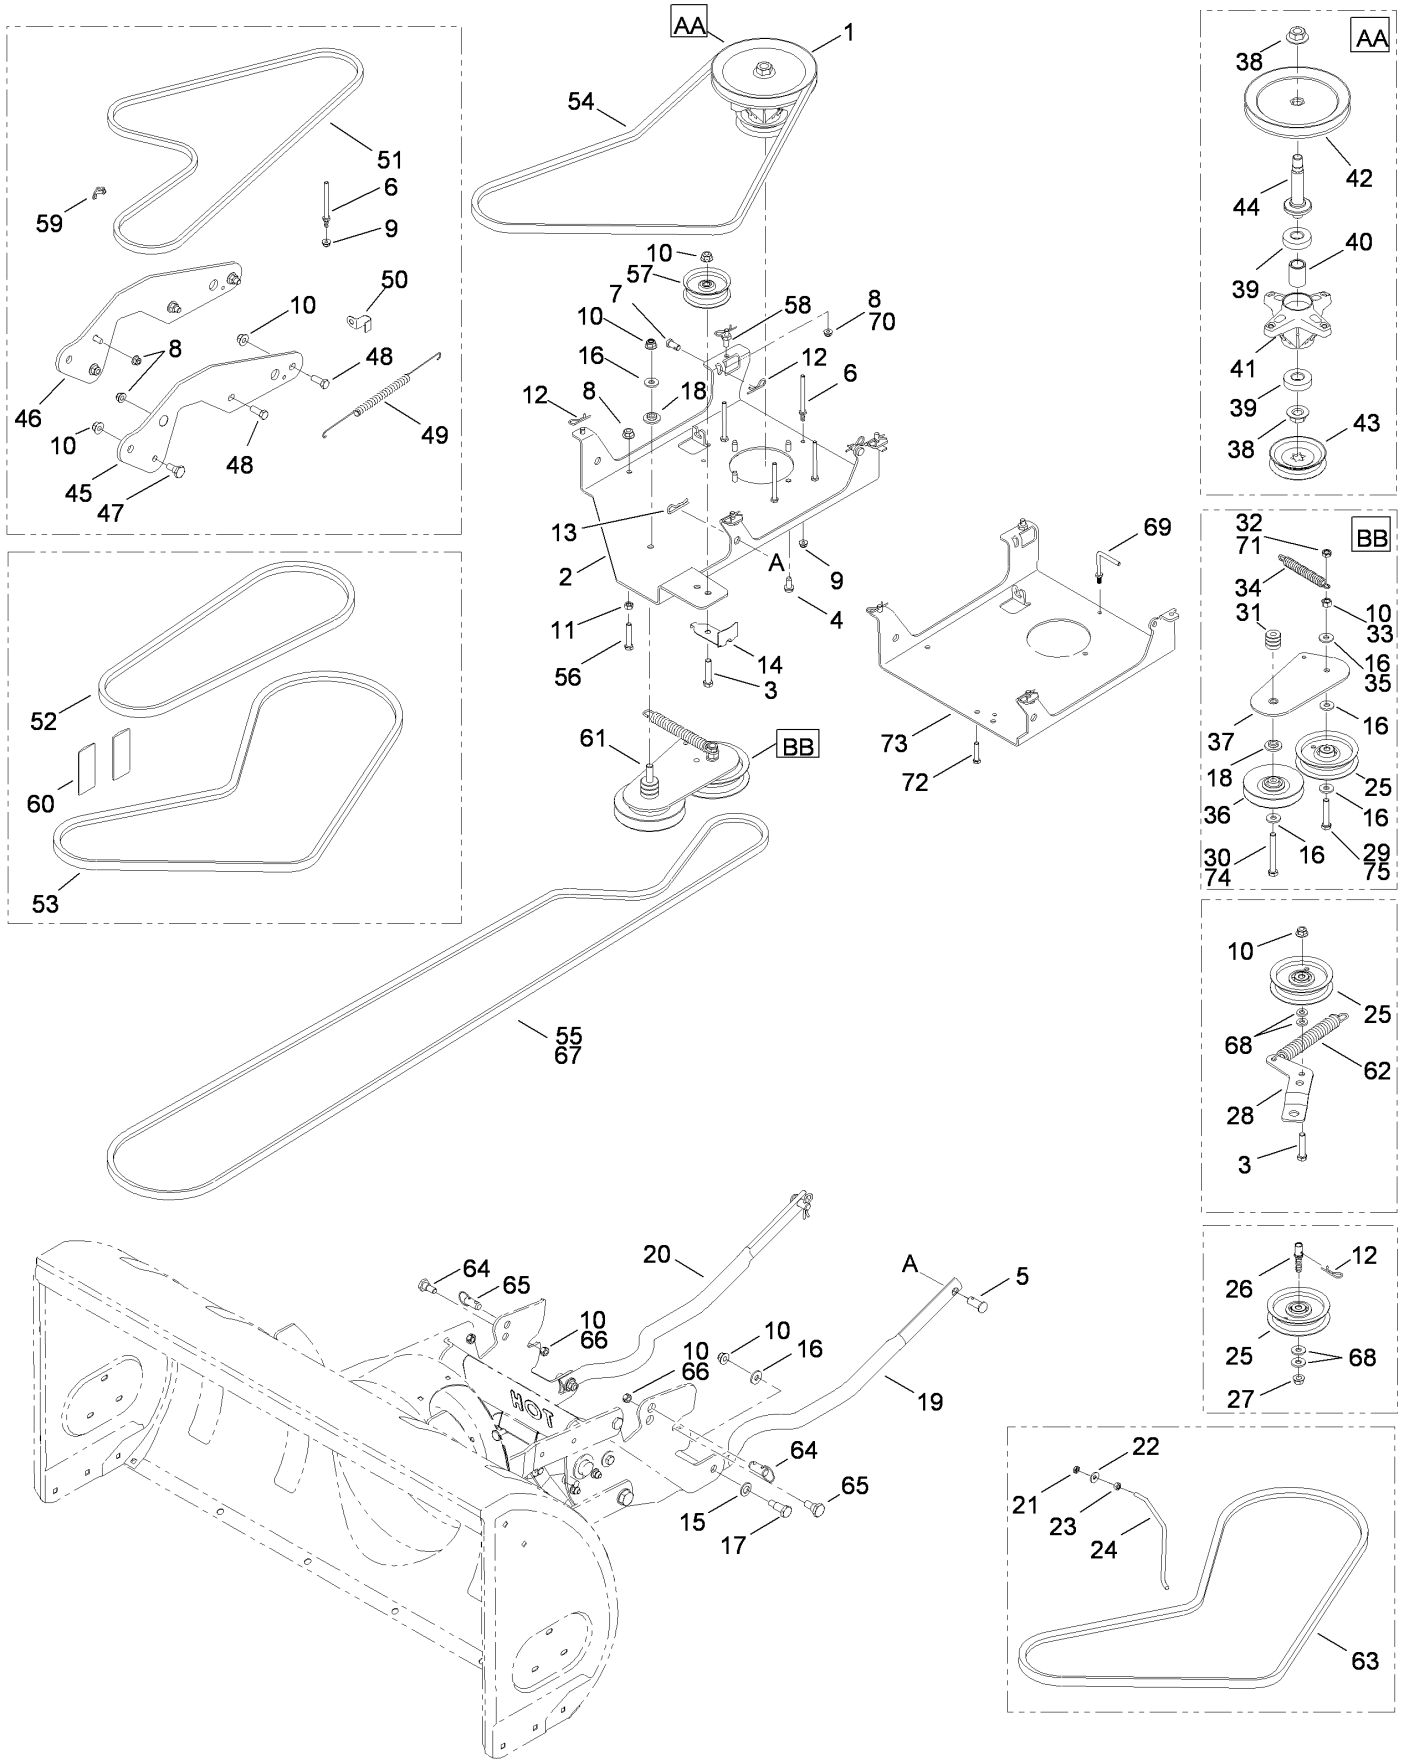

Spindle and Belt Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-0946	1	7 Inch Pulley Spindle ASM
2	112-0951	1	Bracket-Mounting, Pulley
3	112-0513	2	Screw-HH
4	112-0395	4	Screw-HWH
5	112-1097	2	Pin-Clevis
6	112-1101	4	Keeper-Belt
7	112-3674	2	Pin-Clevis
8	112-0650	4	Nut-Lock, Flange
9	112-0636	4	Nut-Lock, Flange
10	112-0668	11	Nut-Lock, Flange
11	112-0437	1	Nut-Hex
12	112-0398	7	Pin-Click
13	112-0989	2	Pin-Clip, Internal
14	112-1148	1	Keeper-Belt
15	112-1156	2	Washer-Flat
16	112-1018	4	Washer-Isomount
17	112-1174	2	Bolt-Shoulder
18	112-0508	2	Spacer-Shoulder
19	112-1037	1	Tube-Support, LH
20	112-1038	1	Tube-Support, RH
21	112-1108	1	Nut-Hex, Jam
22	112-0485	1	Washer-Spring
23	112-0522	1	Nut-Hex
24	112-1027	1	Rod-Keeper, Belt
25	112-0303	3	Pulley-Idler, 3.50 Inch
26	112-0948	1	Spacer-Idler
27	112-0385	1	Nut-Lock, Flange
28	112-1057	1	Bracket-Idler
29	112-3675	1	Screw-HH
30	112-0856	1	Screw-HH
31	112-3676	3	Spacer
32	112-3677	1	Nut-Nylon, Jam
33	112-0343	1	Nut-Hex
34	112-3678	1	Spring-Extension
35	112-0415	1	Washer-Lock
36	112-0365	1	Pulley
37	112-3679	1	Idler Pivot ASM
38	112-0330	2	Nut-Lock, Flange
39	112-0377	2	Bearing-Ball
40	112-3680	1	Spacer
41	112-3681	1	Housing-Spindle, Deck
42	112-3682	1	Pulley-Deck, 7 Inch
43	112-3683	1	Pulley-3.75 Inch
44	112-3684	1	Shaft-Spindle
45	112-0953	1	LH Bracket ASM
46	112-0952	1	RH Bracket ASM
47	112-3685	2	Bolt-Shoulder
48	112-0492	4	Screw-HH
49	112-1014	1	Spring-Extension
50	112-3686	1	Clamp
51	112-1196	1	Belt- V Type
52	112-1192	1	Belt-V, A Section
53	112-1194	1	Belt-V Type
54	112-1191	1	Belt-V
55	112-1189	1	Belt-V Type
56	112-1095	1	Bolt-HH
57	112-3687	1	Pulley-Idler, Flat
58	112-0972	1	Pin
59	112-0986	1	Nut-Wing
60	112-1145	2	Reflector
61	112-0958	1	Doubler Idler Bracket ASM
62	112-0324	1	Spring-Extension
63	112-1299	1	V-Belt, B Section
64	112-0565	1	Bolt-Shoulder
65	119-3954	1	Pin-Release, Quick
66	112-1113	2	Nut-Lock
67	119-3961	1	Belt-V
68	112-0544	2	Washer-Flat
69	119-3962	1	Pin-Keeper, Belt
70	112-1115	4	Nut-Hex, Center Lock
71	119-3963	1	Nut
72	112-0557	1	Screw-HH
73	119-3968	1	Bracket-Mounting, Pulley
74	112-0978	1	Bolt-Hex
75	112-0421	1	Screw-HH

Notes:

Notes:



Count on it.