
FORM NO. 3317–456 Rev. A

TORO®

MODEL NO. 07200–50195 & UP

PARTS CATALOG

# WORKMAN 3200

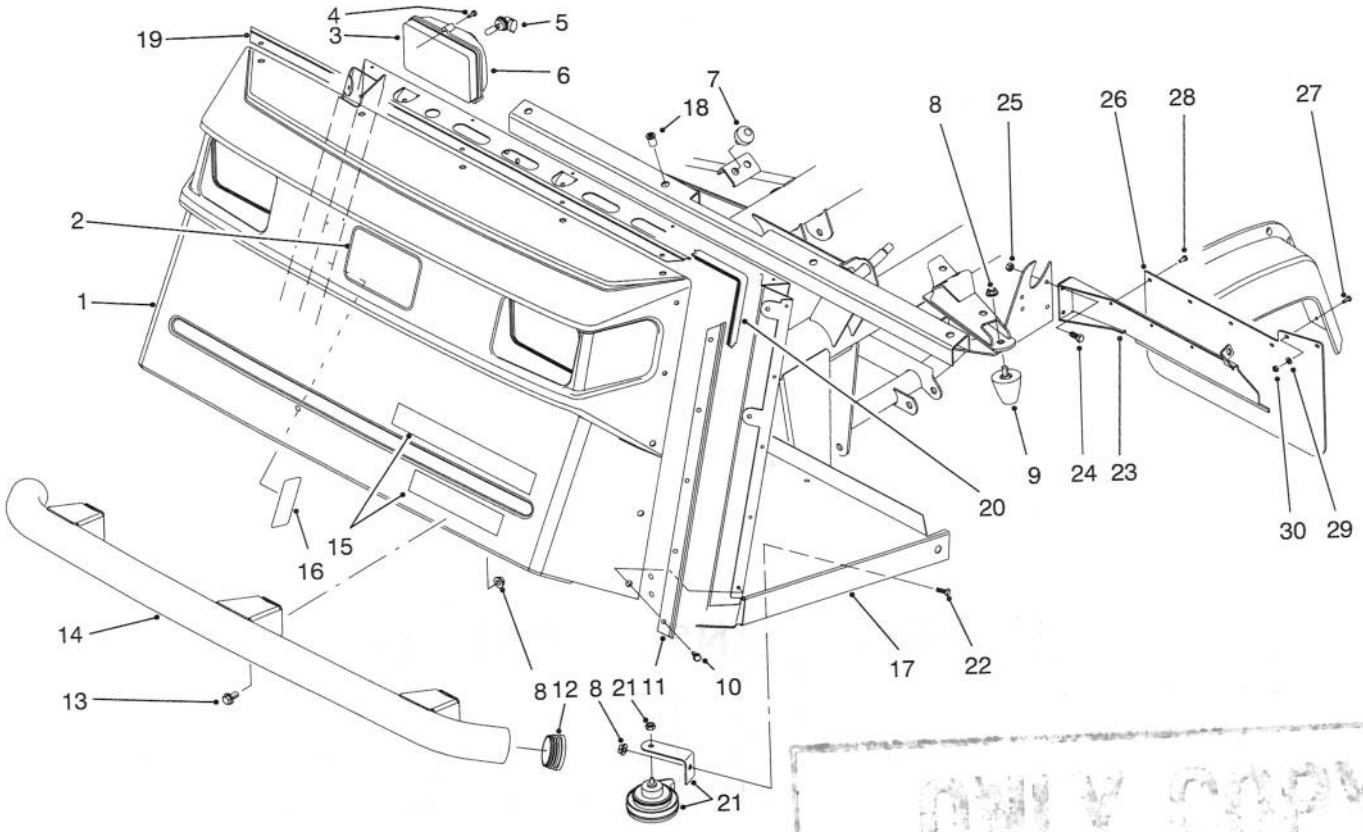


ONLY COPY

T–1581

## FRONT BUMPER & HOOD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–0710 | Hood | 1 |
| 2 | 62–5550 | Decal – TORO | 1 |
| 3 | 87–2120 | Headlight Assembly (Incl. Ref. #5–6) | 2 |
| 4 | 32104–88 | Screw | 6 |
| 5 | 87–6320 | Bulb – Headlight | 2 |
| 6 | 87–6330 | Lens – Headlight | 2 |
| 7 | 87–2440 | Bumper | 2 |
| 8 | 3290–357 | Nut – Flange Lock | 8 |
| 9 | 26–0071 | Bumper | 2 |
| 10 | 87–6620 | Screw | 15 |
| 11 | 87–8120 | Bracket – Trim Side | 2 |
| 12 | 2410–42 | Cap – Front Bumper | 2 |
| 13 | 3234–1 | Screw – Hex. Flange Hd. | 6 |
| 14 | 87–4070 | Bumper – Front | 1 |
| 15 | 87–6700 | Decal – Workman 3200 | 1 |
| ‡16 | 87–7000 | Decal – Load Rating (US) | 1 |
| ‡* | 94–1224 | Decal – Load Rating (CE) | 1 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 92–4197 | Operators Platform Assy. (Incl. Ref. #18) | 1 |
| 18 | 32148–7 | Nut – Clinch | 8 |
| 19 | 87–8130 | Bracket – Trim Top | 1 |
| 20 | 87–8160 | Trim | 1 |
| 21 | 116749 | Horn Assembly | 1 |
| 22 | 323–4 | Screw – Cap Hex. Hd. | 1 |
| 23 | 87–9330 | Bracket – Mudflap LH | 1 |
| * | 87–9340 | Bracket – Mudflap RH | 1 |
| 24 | 321–4 | Screw – Cap Hex. Hd. | 4 |
| 25 | 32128–33 | Nut – Lock | 4 |
| 26 | 87–9320 | Mudflap | 2 |
| 27 | 3250–13 | Screw – Pan Hd. | 4 |
| 28 | 146489 | Rivet – Pop | 8 |
| 29 | 3256–61 | Washer – Flat | 4 |
| 30 | 3296–2 | Nut – Lock | 4 |

‡For different language versions of this part, see International Decal Cross Reference.

*Not Illustrated

TPS

© The TORO Company – 1995

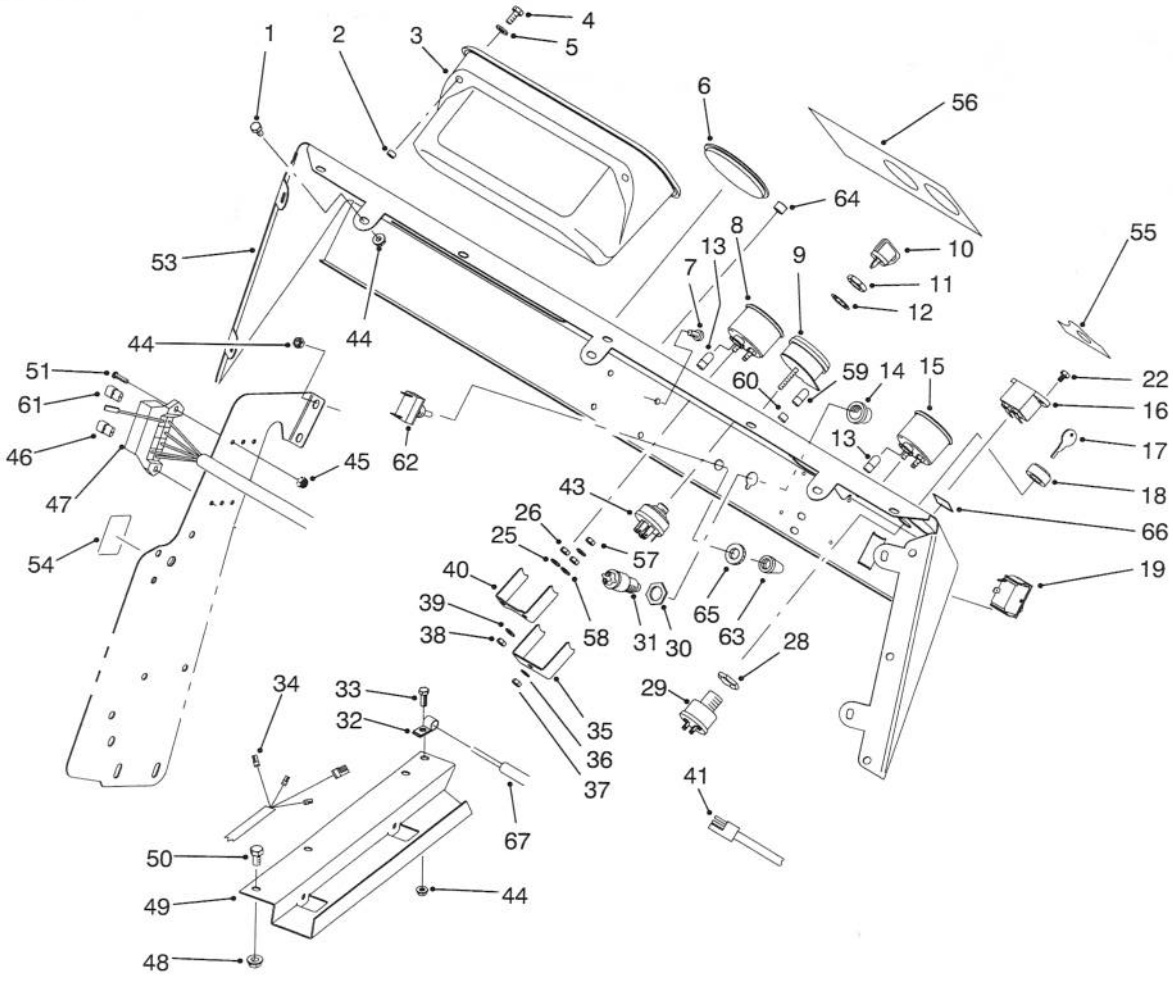



T–1706

# CONTROL PANEL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 321–2 | Screw – Cap Hex. Hd. | 7 |
| 2 | 32148–6 | Insert – Threaded | 2 |
| 3 | 87–3780 | Box – Glove | 1 |
| 4 | 321–3 | Screw – Cap Hex. Hd. | 2 |
| 5 | 3256–22 | Washer – Flat | 2 |
| 6 | 2410–35 | Plug – Hole | 1 |
| 7 | 3274–31 | Screw – Button Hd. | 4 |
| 8 | 87–5590 | Temperature Gauge Assy. (Incl. Ref. #38–40, 57 & 58) | 1 |
| 9 | 93–7053 | Warning Light Assembly (Incl. Ref. #35–37, 59 & 60) | 1 |
| 10 | 63–8360 | Key – Ignition | 1 |
| 11 | 218–446 | Nut – Hex. | 1 |
| 12 | 218–447 | Washer – Lock | 1 |
| 13 | 218–600 | Bulb | 2 |
| 14 | | Button – Horn | 1 |
| 15 | 87–5580 | Fuel Gauge Assembly (Incl. Ref. #38–40, 57 & 58) | 1 |
| 16 | 75–6820 | Hourmeter | 1 |
| 17 | 87–0740 | Key – Supervisor Switch | 1 |
| 18 | 87–1720 | Nut – Supervisor Switch | 1 |
| 19 | 87–3790 | Switch – Light | 1 |
| 22 | 32144–18 | Screw – Cap Hex. Hd. | 2 |
| 28 | | Nut – Hex. | 1 |
| 29 | 87–4030 | Supervisor Switch Assembly (Incl. Ref. #17, 18 & 28) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 30 | | Nut – Hex. | 1 |
| 31 | 18–2830 | Horn Switch Assembly (Incl. Ref. #14 & 30) | 1 |
| 32 | 2412–89 | Clamp – R | 1 |
| 33 | 321–4 | Screw – Cap Hex. Hd. | 1 |
| 34 | 93–7129 | Harness – Wire Rear | 1 |
| 35 | | Clamp – Light | 1 |
| 36 | 3254–1 | Washer – Lock | 1 |
| 37 | 3217–26 | Hut – Hex. | 1 |
| 38 | 3217–25 | Nut – Hex. | 2 |
| 39 | 3253–15 | Washer – Lock | 2 |
| 40 | | Clamp – Temp. Gauge | 1 |
| 41 | 87–4230 | Harness – Wire Front LH | 1 |
| 43 | 27–2360 | Ignition Switch Assembly (Incl. Ref. #11 & 12) | 1 |
| 44 | 32128–33 | Nut – Flange | 12 |
| 45 | 3296–2 | Nut – Lock | 2 |
| 46 | 218–574 | Fuse – 7.5 Amp | 2 |
| 47 | 87–8500 | Front Wire Harness Assy. (Incl. Ref. #13) | 1 |
| 48 | 32128–20 | Nut – Flange | 3 |
| 49 | 93–7094 | Cover – Wire Harness | 1 |
| 50 | 322–2 | Screw – Cap Hex. Hd. | 3 |
| 51 | 3250–13 | Screw | 2 |
| 53 | 87–8540 | Control Panel Assembly (Incl. Ref. #55–56) | 1 |

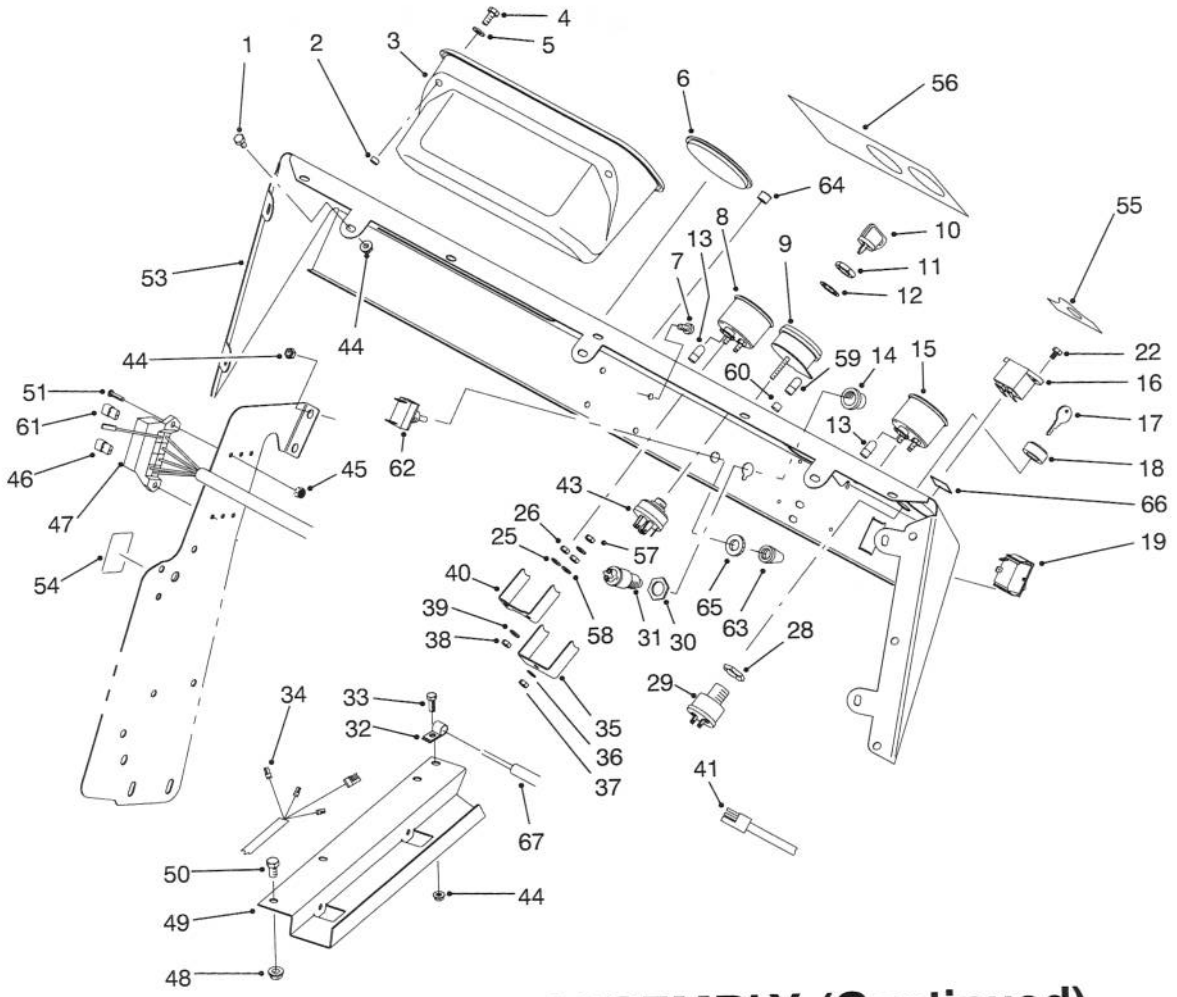


T–1706


# CONTROL PANEL ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| ‡54 | 87–6670 | Decal – Fuse Block (US) | 1 |
| ‡* | 93–9851 | Decal – Fuse Block (CE) | 1 |
| ‡55 | 87–5910 | Decal – Supervisor (US) | 1 |
| ‡* | 93–9856 | Decal – Supervisor (CE) | 1 |
| ‡56 | 87–8520 | Decal – Dash (US) | 1 |
| ‡* | 93–9446 | Decal – Dash (CE) | 1 |
| 57 | 3253–19 | Washer – Lock | 3 |
| 58 | 3217–29 | Nut – Jam | 3 |
| 59 | 219–17 | Bulb – Warning Light | 4 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 60 | 87–6270 | Socket & Bulb Assembly (Incl. Ref. #59) | 4 |
| 61 | 218–578 | Fuse – 10 Amp | 1 |
| 62 | 20–7150 | Toggle Switch Assembly (Incl. Ref. #65) | 1 |
| 63 | 218–473 | Boot – Switch | 1 |
| 64 | 2410–64 | Plug – Hole | 1 |
| 65 | | Nut – Lock | 1 |
| 66 | 93–7252 | Decal – CE (CE) | 1 |
| 67 | 87–8590 | Cable – Clutch | 1 |

‡For different language versions of this part, see International Decal Cross Reference.
*Not Illustrated

# ELECTRICAL SCHEMATIC

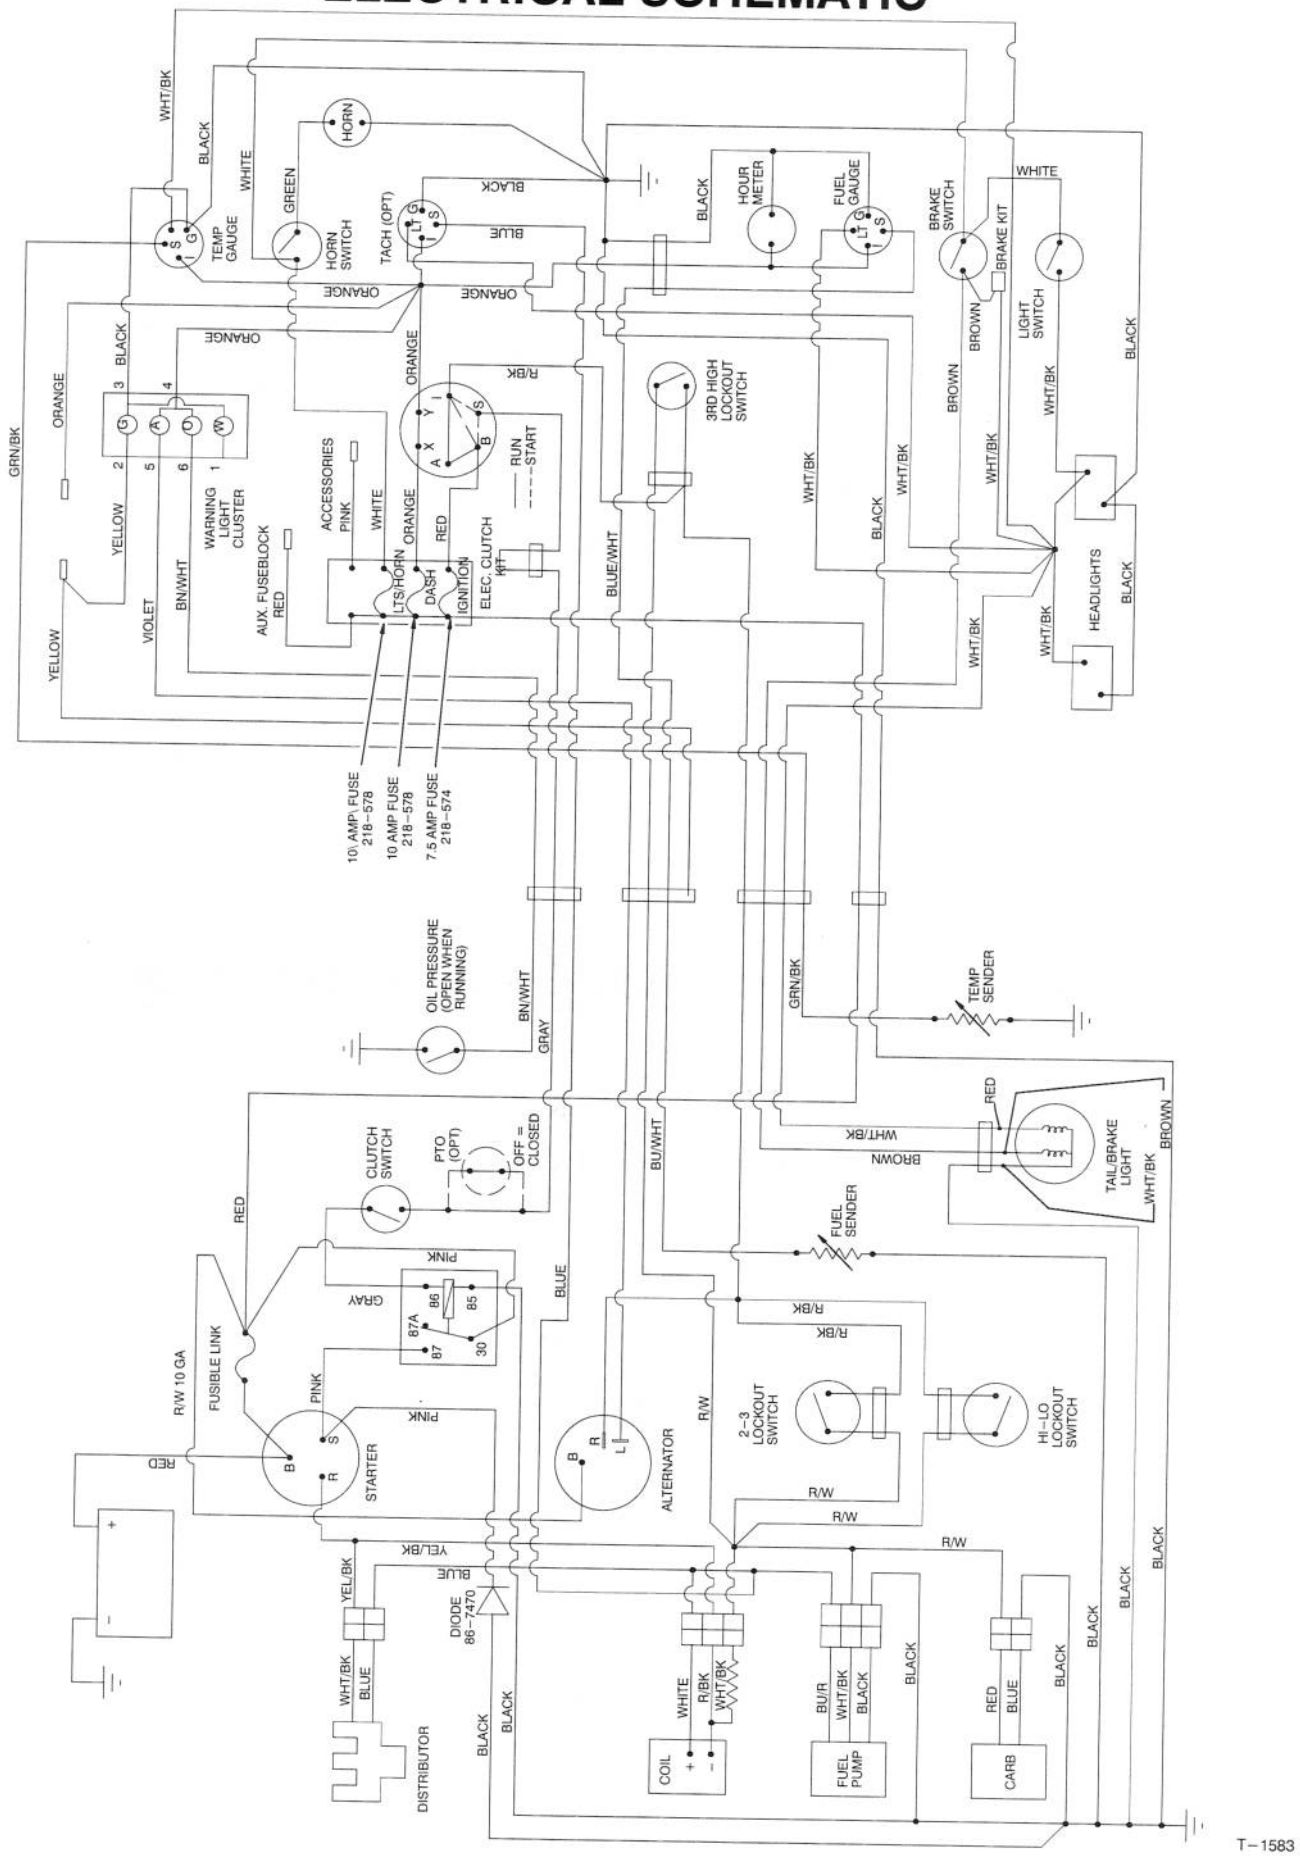


T–1583

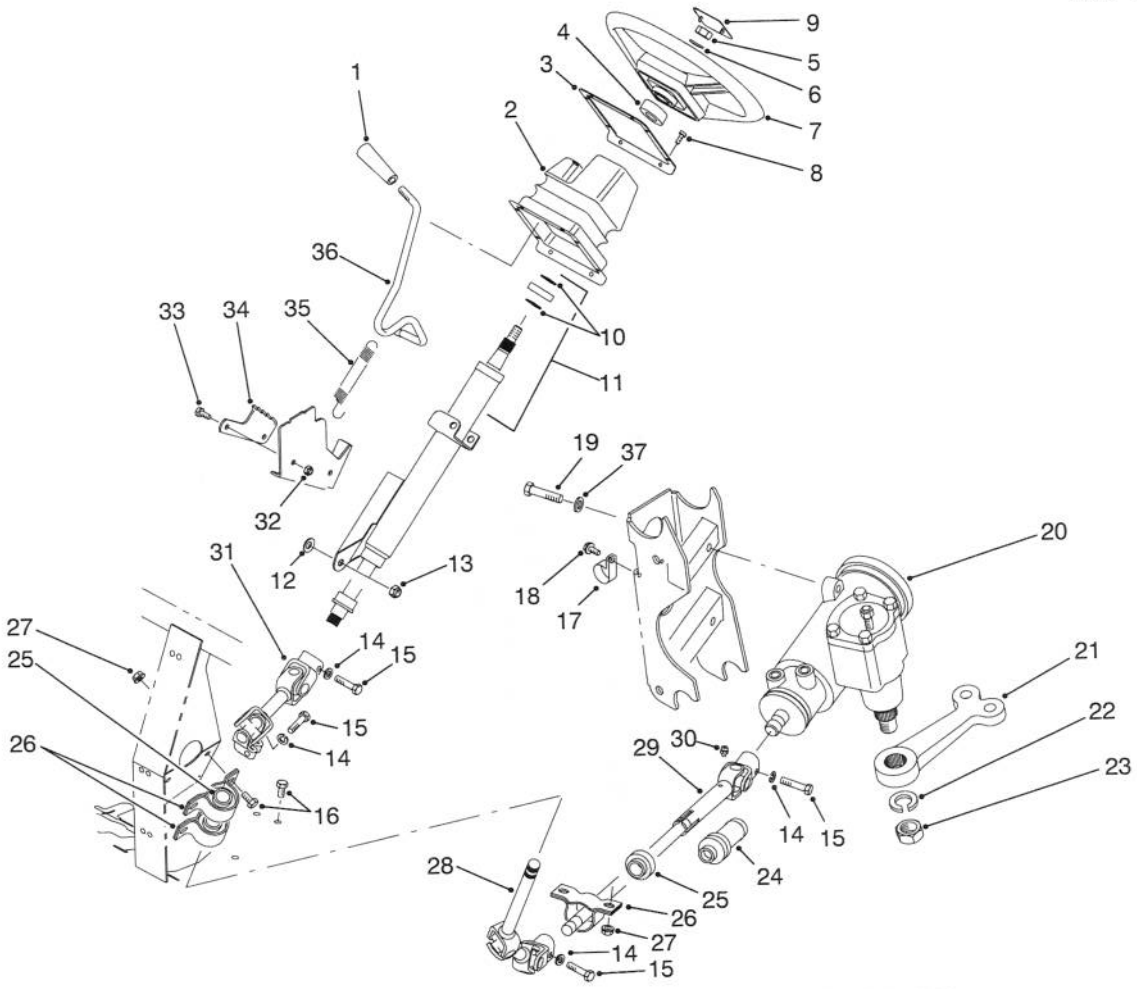



# STEERING LINKAGE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 233–39 | Knob | 1 |
| 2 | 87–3460 | Boot – Tilt Steering | 1 |
| 3 | 87–4720 | Plate – Steering Boot | 1 |
| 4 | 21–9260 | Spacer | 1 |
| 5 | 3277–1 | Nut – Hex. | 1 |
| 6 | 48–8070 | Washer – Flat | 1 |
| 7 | 87–3820 | Wheel – Steering | 1 |
| 8 | 32144–116 | Screw – Pan Head | 8 |
| 9 | 87–3750 | Cover – Steering Wheel | 1 |
| 10 | 43–6550 | Ring – Retaining | 2 |
| 11 | 92–4153 | Assembly –Steering Column (Incl. Ref. #10) | 1 |
| 12 | 3290–455 | Washer | 1 |
| 13 | 3296–59 | Nut – Lock | 1 |
| 14 | 3253–4 | Washer – Lock | 4 |
| 15 | 48–7740 | Screw – Cap Hex. Hd. | 4 |
| 16 | 322–2 | Screw – Cap Hex. Hd. | 6 |
| 17 | 2412–105 | Clamp – R | 2 |
| 18 | 32144–10 | Screw – Self Tapping | 2 |
| 19 | 93–7145 | Screw – Cap Hex. Hd. | 3 |
| 20 | 87–1500 | Steering Gear Assembly (Incl. Ref. #22 & 23) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 21 | 87–0370 | Arm – Pitman | 1 |
| 22 | 39–7420 | Washer – Lock | 1 |
| 23 | 39–7440 | Nut – Lock | 1 |
| 24 | 92–4157 | Boot – Steering Shaft | 1 |
| 25 | 87–2280 | Bearing | 3 |
| 26 | 87–3250 | Mount – Bearing | 3 |
| 27 | 32128–20 | Nut – Flange | 6 |
| 28 | 92–4155 | Slip Joint Assembly – Upper | 1 |
| 29 | 92–4156 | Slip Joint Assembly – Lower (Incl. Ref. #24 & 30) | 1 |
| 30 | 302–5 | Fitting – Grease | 1 |
| 31 | 92–4154 | Universal Joint Assembly | 1 |
| 32 | 3296–42 | Nut – Lock | 2 |
| 33 | 321–3 | Screw – Cap Hex. Hd. | 2 |
| 34 | 87–3610 | Bracket – Detent | 1 |
| 35 | 65–5360 | Spring – Extension | 1 |
| 36 | 87–3130 | Lever – Tilt Steering | 1 |
| 37 | 87–7480 | Washer – Lock | 3 |
| * | 87–3100 | Lower Shaft Assembly (Incl. Ref. #24 & 28–30) | 1 |
| * | 87–3120 | Steering Column & Shaft (Incl. Ref. #10, 11 & 31) | 1 |

*Not Illustrated

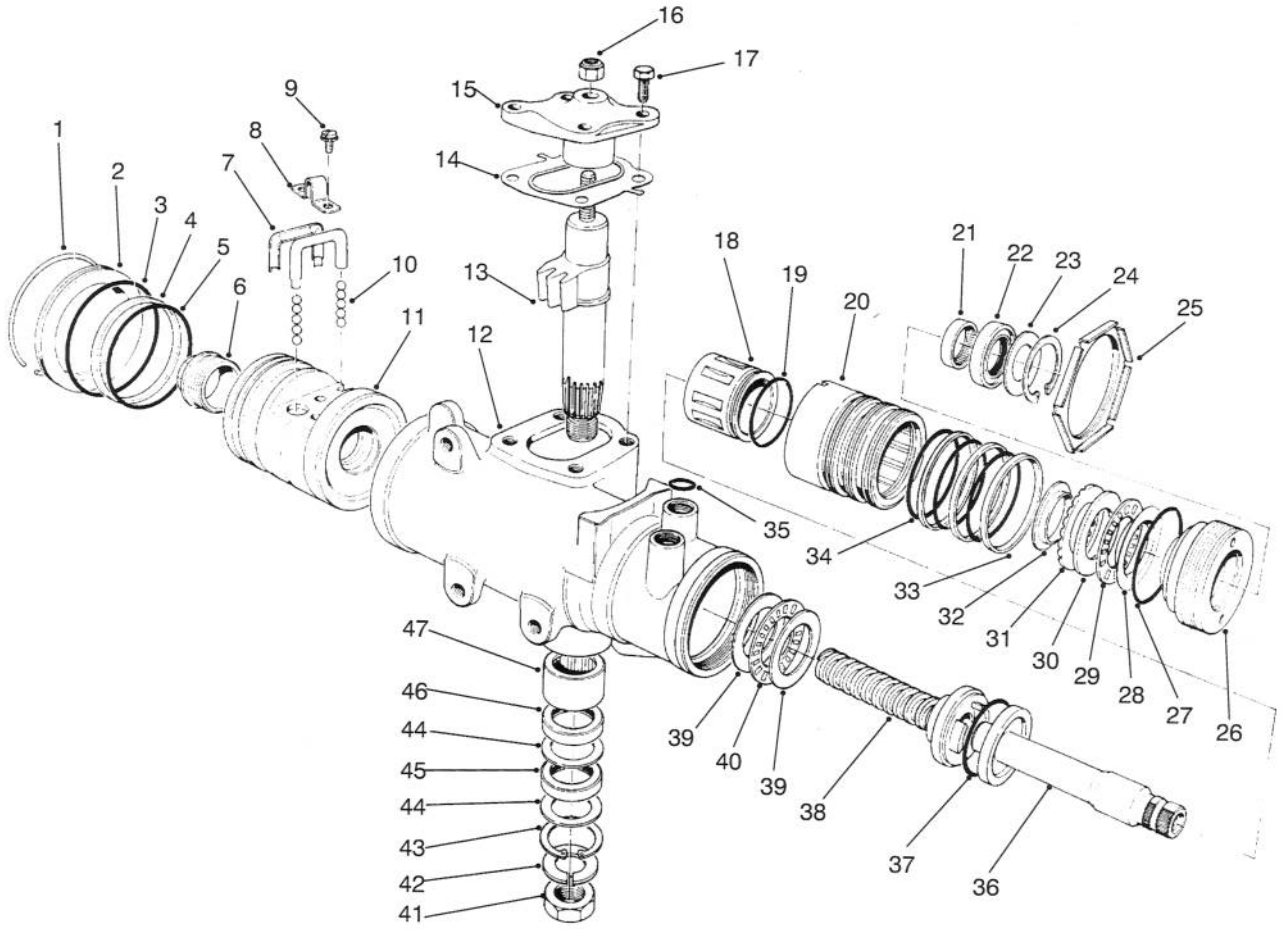



T–1580

# STEERING GEAR ASSEMBLY NO. 87–1500

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | | Ring – Retaining | 1 |
| 2 | 92–4165 | Plug – Housing End | 1 |
| 3 | | Seal – Housing End Plug | 1 |
| 4 | | Ring – Rack Piston | 1 |
| 5 | | O–Ring, Rack Piston | 1 |
| 6 | 18–4340 | Plug – Rack Piston End | 1 |
| 7 | 92–4168 | Return – Guide Ball | 2 |
| 8 | 18–4270 | Clamp – Ball Return Guide | 1 |
| 9 | 18–4260 | Assy. – Screw/Lockwasher | 2 |
| 10 | 18–5190 | Ball – Chrome Alloy | 11 |
| 11 | | Nut – Rack Piston | 1 |
| 12 | | Housing – Steering Gear | 1 |
| 13 | | Gear – Pitman Shaft | 1 |
| 14 | 28–8280 | Seal Kit – Side Cover (Incl. Ref. #17) | 1 |
| 15 | | Cover – Housing Side | 1 |
| 16 | 28–8220 | Nut – Lash Adjuster | 1 |
| 17 | 28–8210 | Bolt – Flange Hex. Hd. | 4 |
| 18 | | Spool Valve | 1 |
| 19 | | O–Ring, Spool Valve | 1 |
| 20 | | Valve Body | 1 |
| 21 | 92–4169 | Bearing – Needle | 1 |
| 22 | | Seal – Stub Shaft | 1 |
| 23 | | Seal – Stub Shaft Dust | 1 |
| 24 | | Ring – Retaining | 1 |
| 25 | 92–4159 | Nut – Adjuster Plug Lock | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 26 | | Plug – Adjuster | 1 |
| 27 | 28–8200 | O–Ring | 1 |
| 28 | | Race – Upper Bearing | 1 |
| 29 | | Bearing – Roller, Thrust | 1 |
| 30 | | Race – Thrust Bearing | 1 |
| 31 | | Spacer – Thrust Bearing | 1 |
| 32 | | Retainer – Bearing | 1 |
| 33 | | Ring – Valve Body | 3 |
| 34 | | O–Ring | 3 |
| 35 | 39–7310 | O–Ring | 3 |
| 36 | | Shaft – Stub | 1 |
| 37 | | O–Ring | 1 |
| 38 | | Worm – Steering | 1 |
| 39 | | Race – Thrust Bearing | 2 |
| 40 | | Bearing – Roller, Thrust | 1 |
| 41 | 39–7440 | Nut – Pitman Arm | 1 |
| 42 | 39–7420 | Washer – Lock | 1 |
| 43 | | Ring – Retaining | 1 |
| 44 | | Washer – Seal, Backup | 2 |
| 45 | | Seal – Pitman Shaft | 1 |
| 46 | | Seal – Pitman Shaft | 1 |
| 47 | 92–4170 | Bearing – Pitman Shaft | 1 |
| * | 92–4161 | Assembly – Cover Service Housing Side (Incl. Ref. #14–17) | 1 |

*Not Illustrated

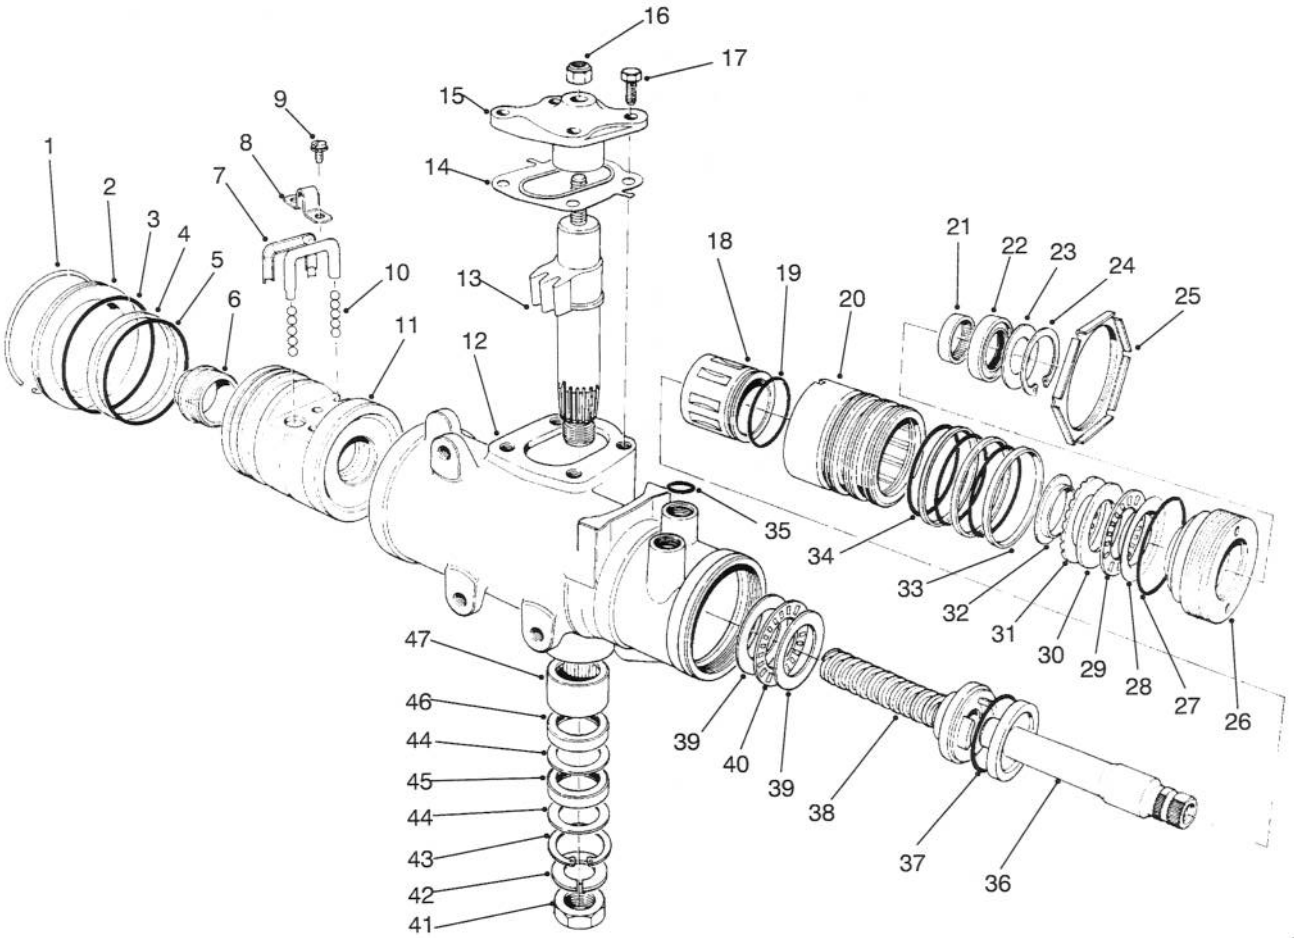



T–1580

# STEERING GEAR ASSEMBLY NO. 87–1500

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| * | 28–8270 | Seal Service Kit – End Plug (Incl. Ref. #1 & 3) | 1 |
| * | 28–8290 | Seal Service Kit Rack/Piston (Incl. Ref. #4 & 5) | 1 |
| * | 18–5180 | Bearing Kit – Lower Thrust (Incl. Ref. #39–40) | 1 |
| * | 18–5160 | Seal Kit – Pitman Shaft (Incl. Ref. #43–46 | 1 |
| * | 18–5170 | Seal Kit – Valve Ring (Incl. Ref. #19, 33, 34 & 37) | 1 |
| * | 92–4163 | Assy. – Steering Housing (Incl. Ref. #12 & 43–47) | 1 |
| * | 92–4167 | Assembly – Plug Service (Incl. Ref. #22–24 & 27) | 1 |
| * | 92–4162 | Pitman Shaft – Gear Service (Incl. Ref. #13–15 & 17) | 1 |
| * | 92–4158 | Valve Assy. – Hyd. Gear (Incl. Ref. #18–20, 33, 34, 36 & 37) | 1 |
| * | 92–4160 | Bearing Service Kit – Upper (Incl. Ref. #28–32) | 1 |
| * | 92–4166 | Rack/Piston/Nut Assembly (Incl. Ref. #1–11 & 38) | 1 |
| * | 92–4164 | Plug Assy. – Service Adjust. (Incl. Ref. #21–24 & 26–32) | 1 |
| * | 87–1500 | Steering Gear (Complete) | 1 |

*Not Illustrated

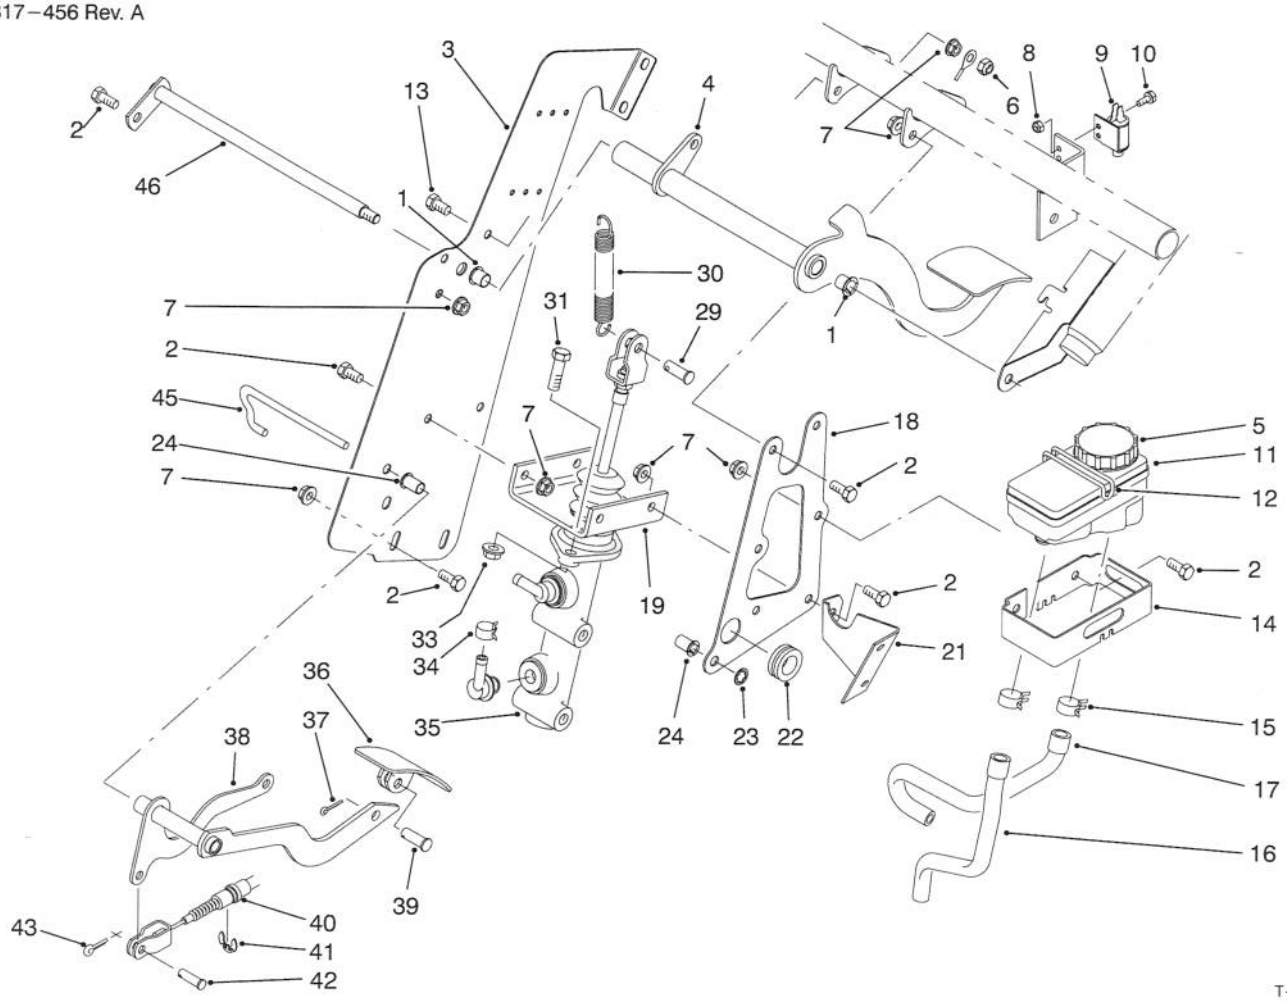



T–1585

# BRAKE & ACCELERATOR PEDAL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 256–257 | Bushing – Flange | 2 |
| 2 | 322–2 | Screw – Cap Hex. Hd. | 12 |
| 3 | 87–2910 | Support – Pedal RH | 1 |
| 4 | 87–2540 | Pedal – Brake | 1 |
| 5 | 92–4112 | Assembly – Cap | 1 |
| 6 | 3296–29 | Nut – Lock | 1 |
| 7 | 32128–20 | Nut – Flange Lock | 13 |
| 8 | 3296–2 | Nut – Lock | 2 |
| 9 | 55–7120 | Switch – Brake Light | 1 |
| 10 | 3290–321 | Screw – Hex. Flange Hd. | 2 |
| 11 | 87–3040 | Brake Fluid Reservoir Assy. (Incl. Ref. #5) | 1 |
| 12 | 87–7570 | Retainer – Reservoir | 1 |
| 13 | 322–5 | Screw – Cap Hex. Hd. | 1 |
| 14 | 87–2890 | Cradle – Reservoir | 1 |
| 15 | 2412–143 | Clamp – Hose | 2 |
| 16 | 87–0670 | Hose – Reservoir Front | 1 |
| 17 | 87–0660 | Hose – Reservoir Rear | 1 |
| 18 | 87–2660 | Support – Pedal LH | 1 |
| 19 | 87–2640 | Support – Master Cylinder | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 21 | 87–2650 | Gusset | 1 |
| 22 | 240–6 | Grommet | 1 |
| 23 | 32151–56 | Ring – Push–On | 1 |
| 24 | 52–2890 | Bushing – Flange | 2 |
| 29 | 283–2 | Pin – Clevis | 1 |
| 30 | 21–1830 | Spring – Extension | 1 |
| 31 | 323–7 | Screw – Cap Hex. Hd. | 2 |
| 33 | 3290–357 | Nut – Flange Lock | 2 |
| 34 | 2412–144 | Clamp – Hose | 2 |
| 35 | 87–3030 | Master Cylinder Assembly | 1 |
| 36 | 87–2670 | Pedal – Accelerator | 1 |
| 37 | 3272–6 | Pin – Cotter | 1 |
| 38 | 87–4790 | Arm – Accelerator Pedal | 1 |
| 39 | 283–85 | Pin – Clevis | 1 |
| 40 | 87–8600 | Cable – Accelerator | 1 |
| 41 | 32120–47 | Ring – E | 1 |
| 42 | 283–30 | Pin – Clevis | 1 |
| 43 | 3272–10 | Pin – Cotter | 1 |
| 45 | 87–2880 | Shaft – Accelerator Pedal | 1 |
| 46 | 87–2590 | Shaft – Brake Pedal | 1 |

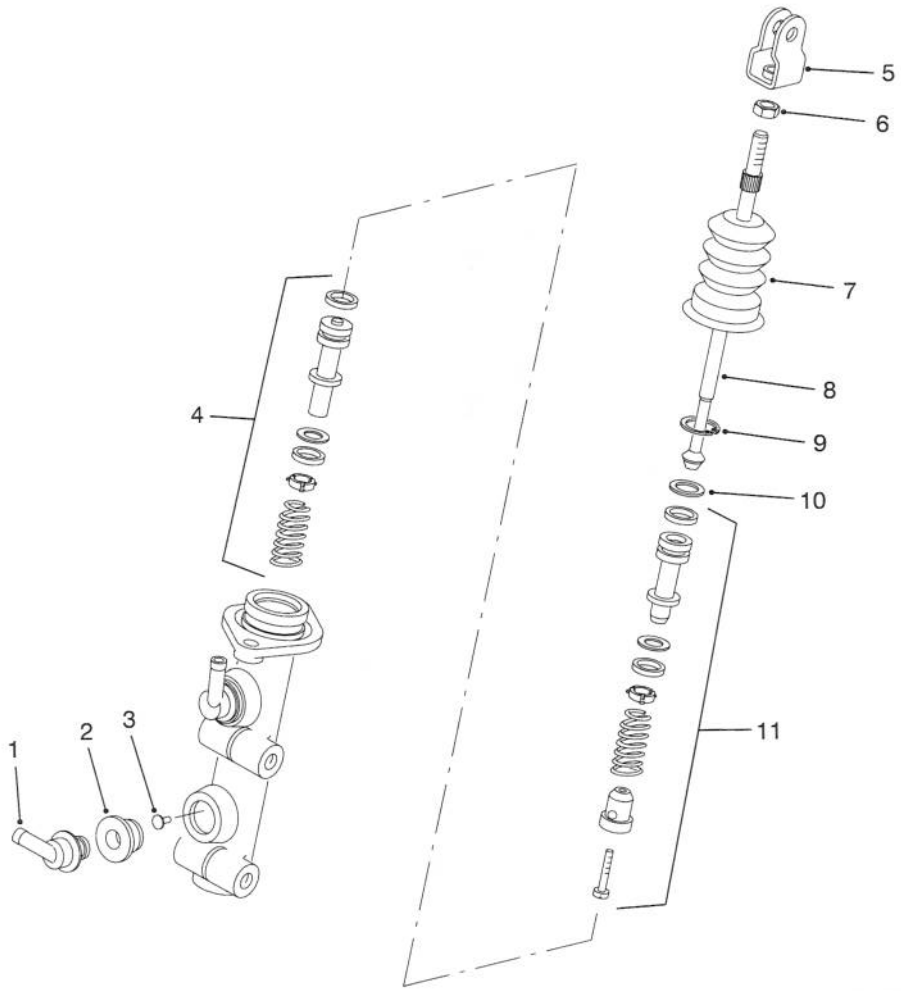



T–1586

# MASTER BRAKE CYLINDER NO. 87–3030

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–4104 | Adaptor – Pipe Fitting | 2 |
| 2 | 92–4172 | Seal | 2 |
| 3 | 92–4103 | Pin – Stop | 1 |
| 4 | 92–4102 | Secondary Piston Assembly | 1 |
| 5 | 92–4110 | Clevis | 1 |
| 6 | 21–0360 | Nut | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 7 | 92–4107 | Dust Cover | 1 |
| 8 | 92–4106 | Rod – Push | 1 |
| 9 | 92–4109 | Circlip | 1 |
| 10 | 92–4108 | Washer – Retainer | 1 |
| 11 | 92–4101 | Primary Piston Assembly | 1 |

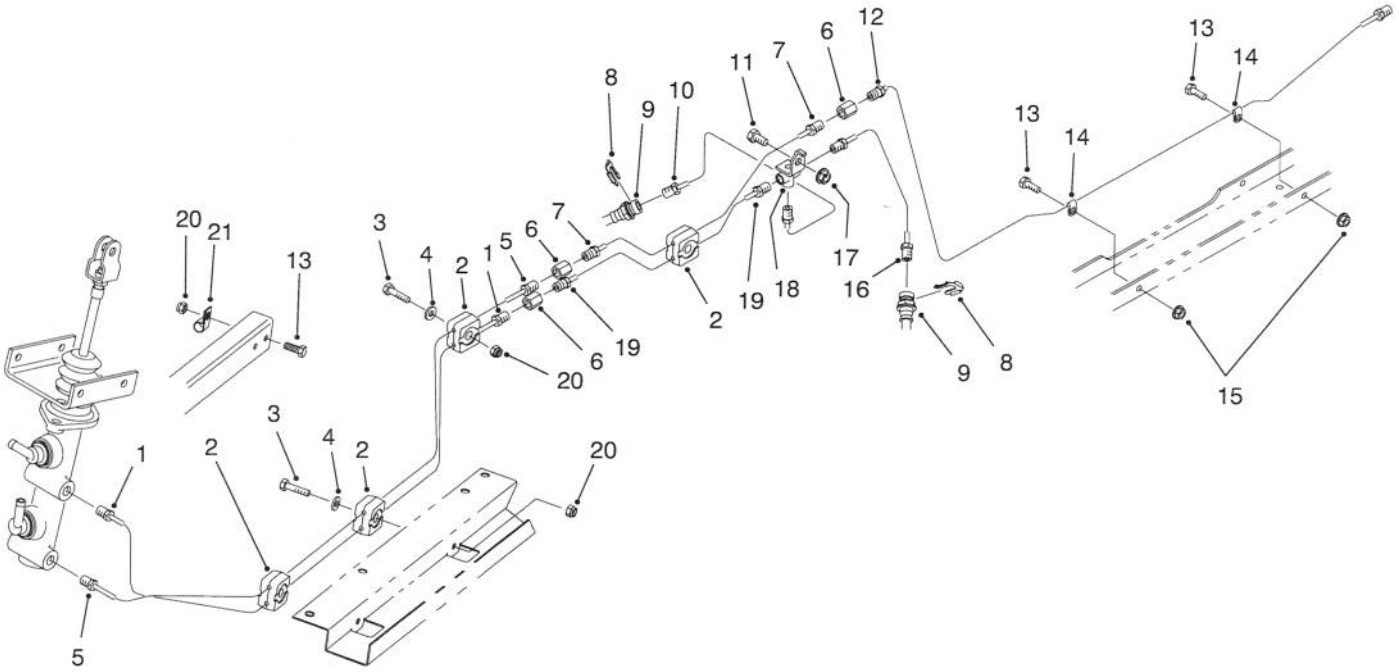



T–1587

# HYDRAULIC BRAKE LINE ROUTING ASSEMBLY


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93–7083 | Tube – Brake Front | 1 |
| 2 | 87–7660 | Clamp – Brake Line | 8 |
| 3 | 321–9 | Screw – Cap Hex. Hd. | 4 |
| 4 | 3256–22 | Washer – Flat | 5 |
| 5 | 93–7084 | Tube – Brake Rear | 1 |
| 6 | 87–3570 | Fitting – Union | 3 |
| 7 | 93–7086 | Tube – Brake Rear | 1 |
| 8 | 87–3580 | Retainer – Brake Hose | 2 |
| 9 | 93–7123 | Hose – Brake Front | 2 |
| 10 | 93–7081 | Tube – Brake Front RH | 1 |
| 11 | 322–2 | Screw – Cap Hex. Hd. | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 12 | 93–7087 | Tube – Brake Rear | 1 |
| 13 | 321–4 | Screw – Cap Hex. Hd. | 3 |
| 14 | 2412–149 | R–Clamp | 2 |
| 15 | 32128–33 | Nut – Flange Head | 2 |
| 16 | 93–7082 | Tube – Brake Front LH | 1 |
| 17 | 32128–20 | Nut – Flange | 1 |
| 18 | 87–3560 | Tee – Brake Line | 1 |
| 19 | 93–7085 | Tube – Brake Front | 1 |
| 20 | 3296–42 | Nut – Lock | 5 |
| 21 | 2412–89 | Clamp – R | 1 |

# HYDRAULIC SCHEMATIC

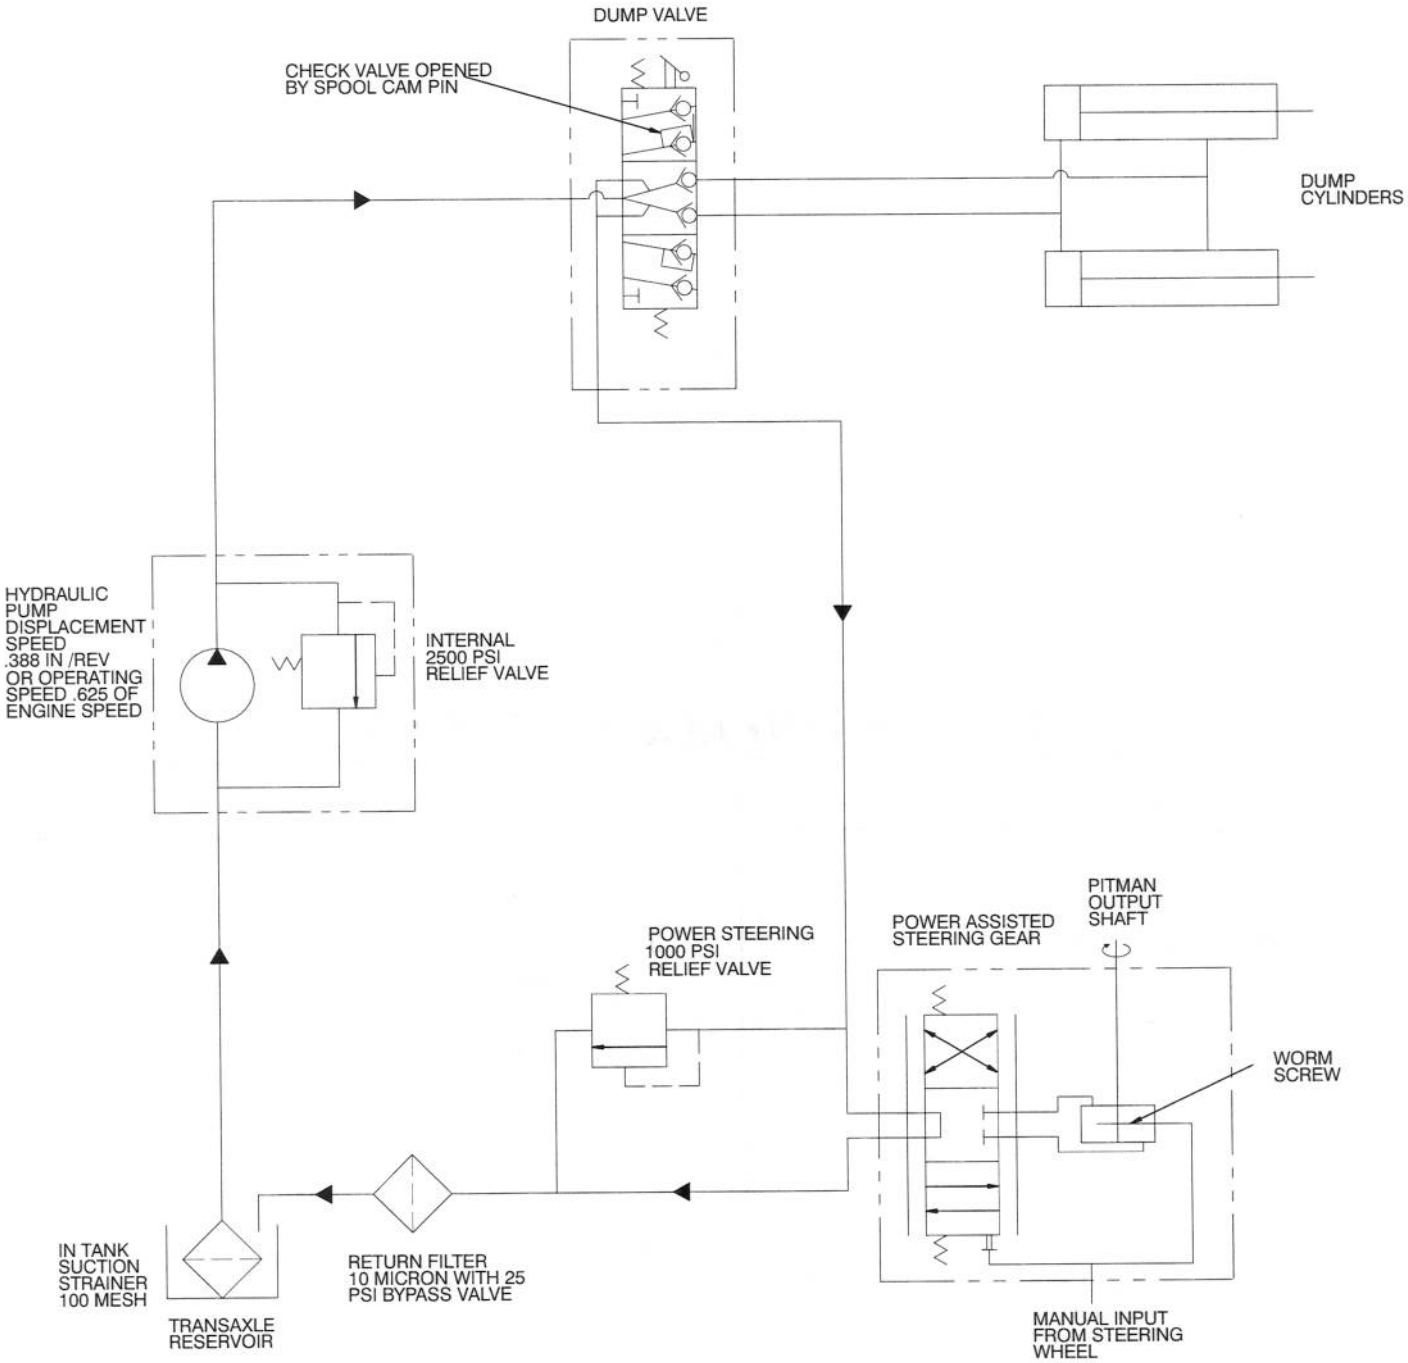



T–1626

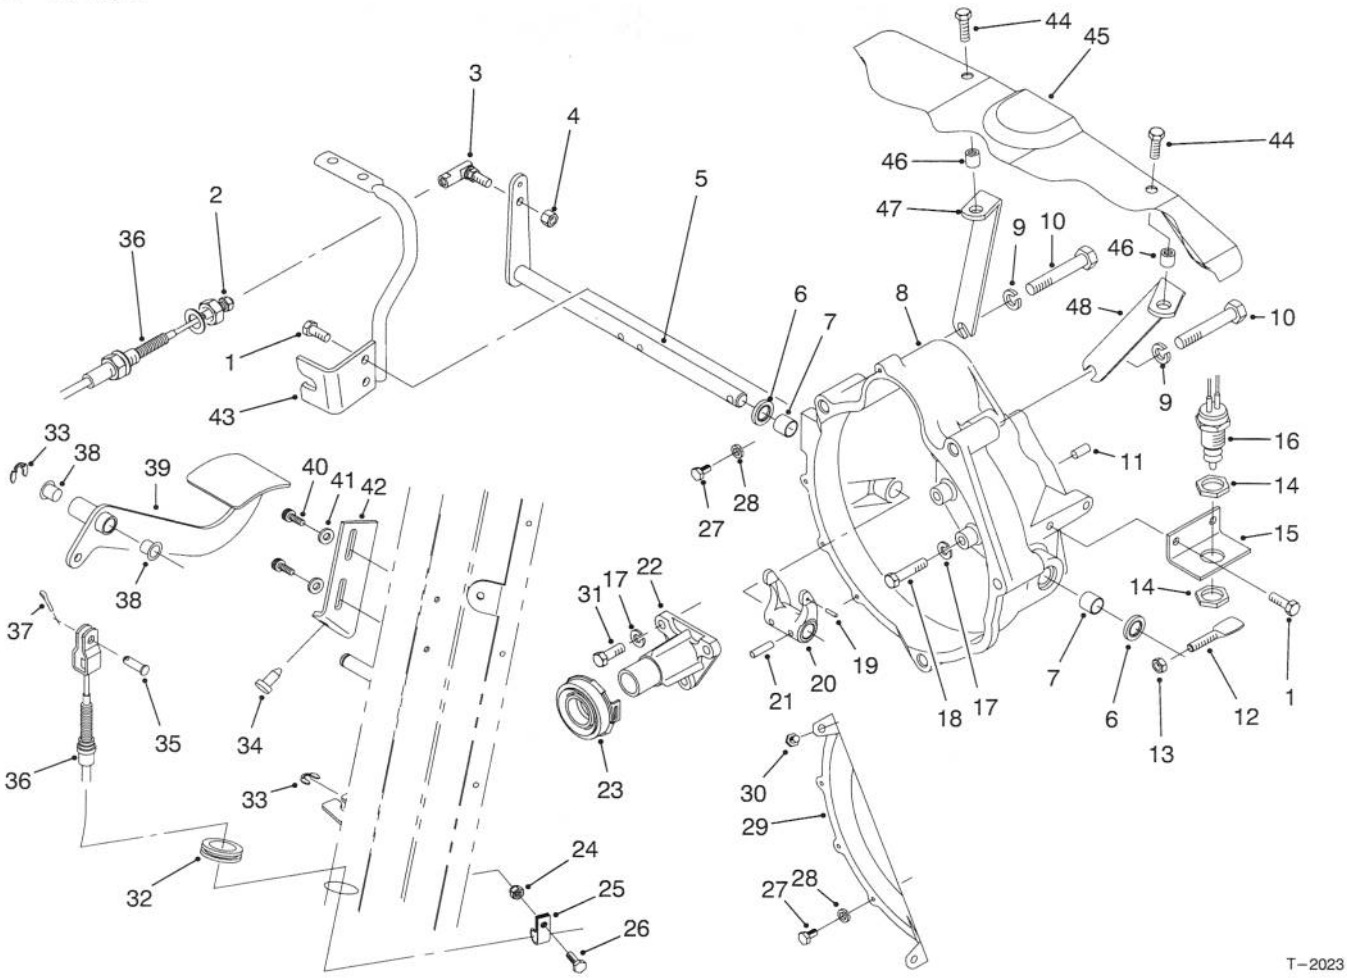


# CLUTCH LINKAGE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 66–3160 | Screw – Cap Hex. Hd. | 2 |
| 2 | 3220–2 | Nut – Jam | 1 |
| 3 | 2411–33 | Joint – Ball | 1 |
| 4 | 3296–4 | Nut – Lock | 1 |
| 5 | 87–5290 | Shaft – Release | 1 |
| 6 | 87–1920 | Seal – Shaft | 2 |
| 7 | 87–3770 | Bushing – Sleeve | 2 |
| 8 | 93–7121 | Housing – Bell | 1 |
| 9 | 3253–22 | Washer – Lock | 4 |
| 10 | 56–2150 | Screw – Cap Hex. Hd. | 4 |
| 11 | 87–1910 | Pin – Alignment | 2 |
| 12 | 87–5360 | Lever | 1 |
| 13 | 3296–29 | Nut – Lock | 1 |
| 14 | 3218–20 | Nut – Jam | 2 |
| 15 | 87–5350 | Bracket – Switch | 1 |
| 16 | 87–5490 | Switch – Neutral | 1 |
| 17 | 42–9850 | Washer – Lock | 12 |
| 18 | 42–9530 | Screw – Cap Hex. Hd. | 9 |
| 19 | 32121–7 | Pin – Roll | 1 |
| 20 | 87–5300 | Fork – Clutch | 1 |
| 21 | 32121–24 | Pin – Roll | 2 |
| 22 | 87–5320 | Guide – Release | 1 |
| 23 | 87–2100 | Bearing – Release | 1 |
| 24 | 32128–33 | Nut – Flange Lock | 1 |
| 25 | 2412–89 | Clamp – R | 1 |
| 26 | 321–4 | Screw – Cap Hex. Hd. | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 27 | 48–7610 | Screw – Cap Hex. Hd. | 4 |
| 28 | 3253–3 | Washer – Lock | 4 |
| 29 | 92–1938 | Cover – Bell Housing | 1 |
| 30 | 92–2129 | Screw – Cap Hex. Hd. | 2 |
| 31 | 57–6380 | Screw – Cap Hex. Hd. | 3 |
| 32 | 240–5 | Grommet | 1 |
| 33 | 32120–47 | Ring – E | 2 |
| 34 | 87–8460 | Bumper | 1 |
| 35 | 283–30 | Pin – Clevis | 1 |
| 36 | 87–8590 | Clutch Cable Assembly (Incl. Ref. #2) | 1 |
| 37 | 3272–10 | Pin – Cotter | 1 |
| 38 | 256–257 | Bushing – Flange | 2 |
| 39 | 87–2610 | Pin – Cotter | 1 |
| 40 | 87–6620 | Screw – Torx Pan Hd. | 2 |
| 41 | 3256–22 | Washer – Flat | 2 |
| 42 | 87–8710 | Tab – Clutch | 1 |
| 43 | 87–8480 | Bracket – Clutch | 1 |
| 44 | 3234–5 | Screw – Flange Hd. (CE) | 2 |
| 45 | 92–1345 | Cover – Engine (CE) | 1 |
| 46 | 32148–8 | Nut – Insert (CE) | 2 |
| 47 | 93–8956 | Rear Brace Assy. RH (CE) (Incl. Ref. #46) | 1 |
| 48 | 93–8955 | Rear Brace Assy. LH (CE) (Incl. Ref. #46) | 1 |

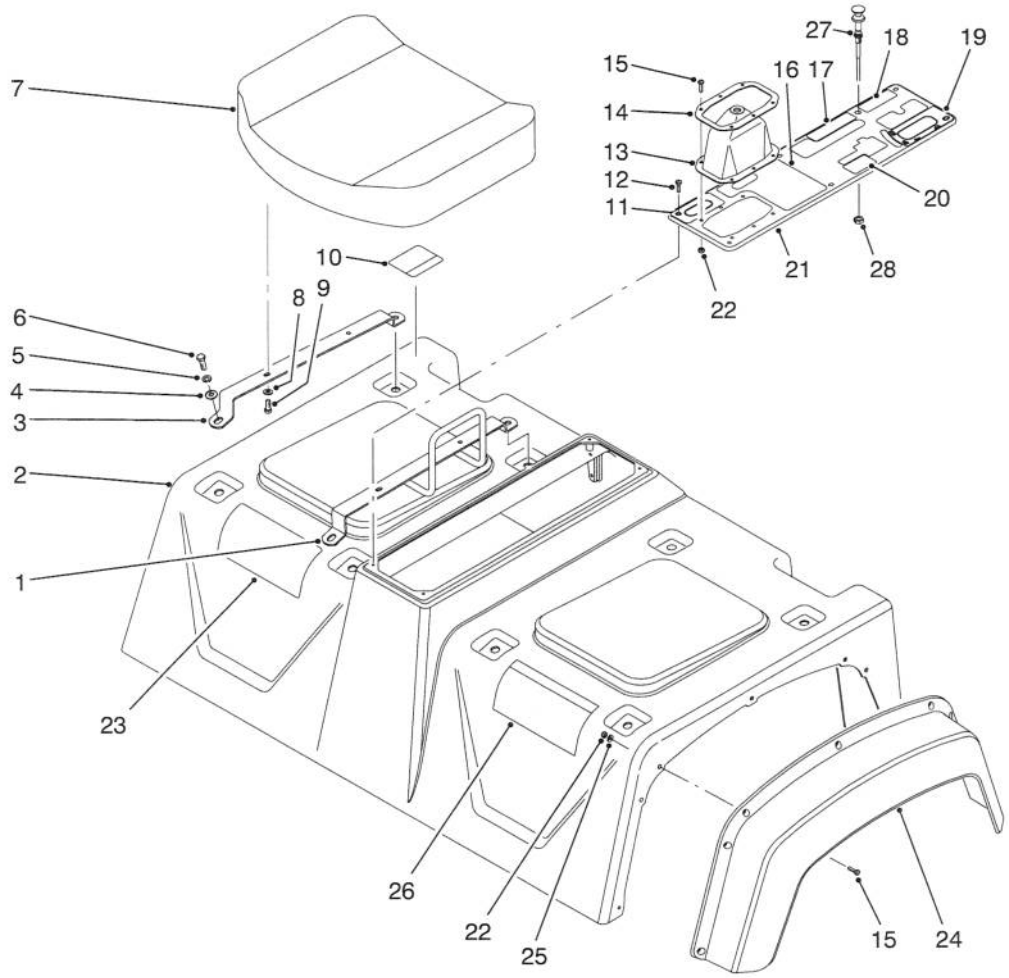



T–1589

# SEAT BASE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–6890 | Hold – Hand | 1 |
| 2 | 87–7070 | Skirt Assembly (Incl. Ref. #10 & 26) | 1 |
| 3 | 87–3800 | Bracket – Seat Bottom | 3 |
| 4 | 3256–23 | Washer – Flat | 4 |
| 5 | 3253–4 | Washer – Lock | 8 |
| 6 | 322–5 | Screw – Cap Hex. Hd. | 8 |
| 7 | 87–5060 | Cushion – Seat Bottom | 2 |
| 8 | 3256–22 | Washer – Flat | 8 |
| 9 | 321–4 | Screw – Cap Hex. Hd. | 8 |
| ‡10 | 87–5930 | Decal – Caution (US) | 1 |
| ‡* | 93–9448 | Decal – Caution (CE) | 1 |
| ‡11 | 87–5960 | Decal – Axle Range (US) | 1 |
| ‡* | 93–9857 | Decal – Axle Range (CE) | 1 |
| 12 | 32144–52 | Screw – Hex. Hd. | 6 |
| 13 | 87–8620 | Boot – Shift | 1 |
| 14 | 87–3760 | Plate – Shift Boot | 1 |
| 15 | 3250–13 | Screw – Hex. Hd. | 20 |
| ‡16 | 87–5970 | Decal – PTO (US) | 1 |
| ‡* | 93–9861 | Decal – PTO (CE) | 1 |
| ‡17 | 87–6000 | Decal – Differential (US) | 1 |
| ‡* | 93–9430 | Decal – Differential (CE) | 1 |
| ‡18 | 92–2609 | Decal – Remote Hyd. (US) | 1 |
| ‡* | 93–9866 | Decal – Remote Hyd. (CE) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| ‡19 | 87–6010 | Decal – Dump Hyd. (US) | 1 |
| ‡* | 93–9444 | Decal – Dump Hyd. (CE) | 1 |
| ‡20 | 87–6020 | Decal – Parking Brake (US) | 1 |
| ‡* | 93–9443 | Decal – Parking Brake (CE) | 1 |
| 21 | 87–8080 | Console Plate Assembly (Incl. Ref. #11 & 16–20) | 1 |
| 22 | 3296–2 | Nut – Lock | 20 |
| ‡23 | 87–9060 | Decal – Quick Ref. (EN) | 1 |
| ‡* | 92–5490 | Decal – Quick Ref. (DU) | 1 |
| ‡* | 92–5491 | Decal – Quick Ref. (FR) | 1 |
| ‡* | 92–5492 | Decal – Quick Ref. (GR) | 1 |
| ‡* | 92–5493 | Decal – Quick Ref. (IT) | 1 |
| ‡* | 92–5495 | Decal – Quick Ref. (SP) | 1 |
| ‡* | 92–5496 | Decal – Quick Ref. (SW) | 1 |
| ‡* | 93–9436 | Decal – Quick Ref. (DN) | 1 |
| ‡* | 93–9437 | Decal – Quick Ref. (FN) | 1 |
| ‡* | 93–9438 | Decal – Quick Ref. (NO) | 1 |
| ‡* | 93–9439 | Decal – Quick Ref. (PO) | 1 |
| 24 | 87–9480 | Fender – Front | 2 |
| 25 | 3256–61 | Washer – Flat | 14 |
| ‡26 | 87–5920 | Decal – Danger (US) | 1 |
| ‡* | 93–9860 | Decal – Danger (CE) | 1 |

‡For different language versions of this part, see International Decal Cross Reference.
*Not Illustrated

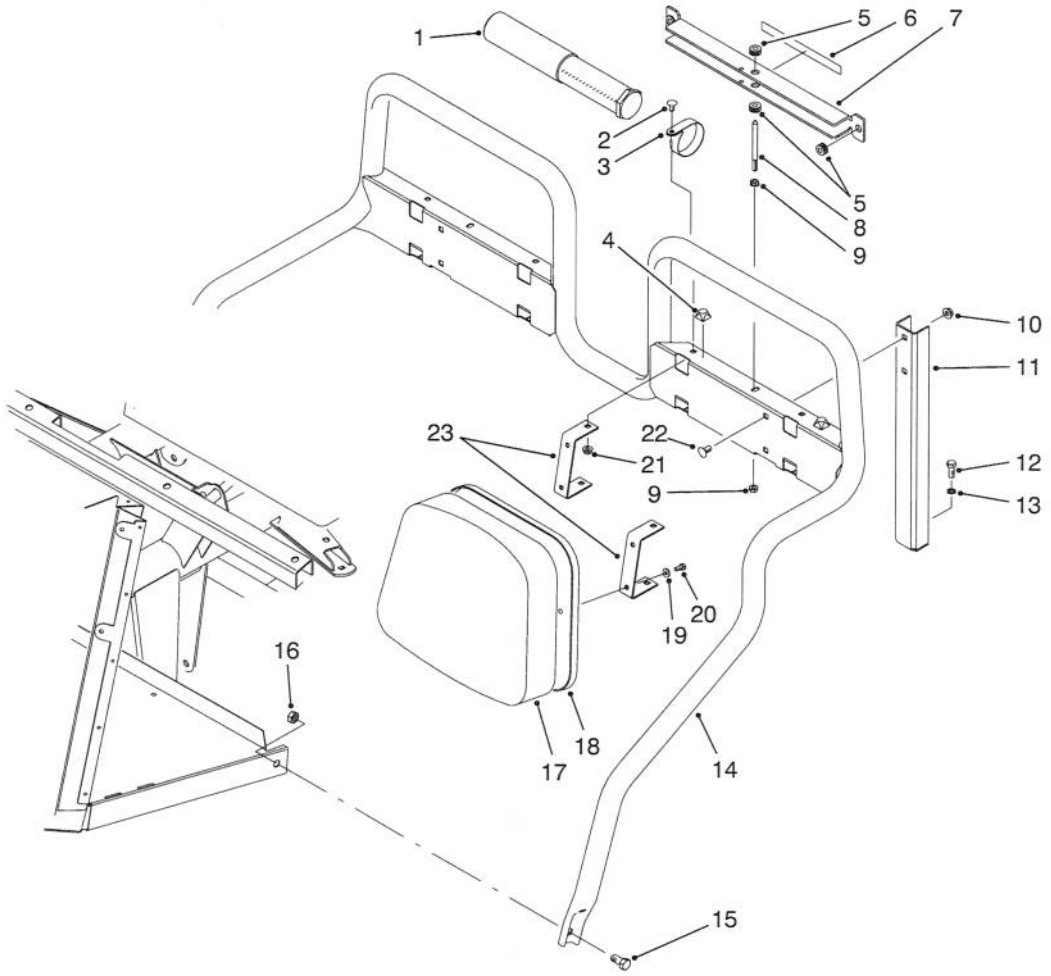



T–1779

# SEAT BACK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 74–0720 | Tube – Manual | 1 |
| 2 | 3230–18 | Bolt – Carriage | 2 |
| 3 | 2412–133 | Clamp – R | 2 |
| 4 | 111071 | Bumper | 2 |
| 5 | 92–5972 | Grommet | 4 |
| ‡6 | 87–7930 | Decal – Danger (US) | 1 |
| ‡* | 93–9852 | Decal – Danger (CE) | 1 |
| 7 | 87–7950 | Bed Support Assembly (Incl. Ref. #5 & 6) | 1 |
| 8 | 87–7940 | Stud | 1 |
| 9 | 32128–44 | Nut – Flange Lock | 2 |
| 10 | 3290–357 | Nut – Flange Lock | 4 |
| 11 | 87–2510 | Bracket – Seat Frame | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 12 | 323–6 | Screw – Cap Hex. Hd. | 2 |
| 13 | 3253–21 | Washer – Lock | 2 |
| 14 | 87–6170 | Frame – Seat | 1 |
| 15 | 325–4 | Screw – Cap Hex. Hd. | 2 |
| 16 | 3296–23 | Nut – Lock | 2 |
| 17 | 87–6290 | Cushion – Seat Back | 2 |
| 18 | 87–6280 | Plate – Seat Back | 2 |
| 19 | 3256–22 | Washer – Flat | 8 |
| 20 | 321–4 | Screw – Cap Hex. Hd. | 8 |
| 21 | 32128–20 | Nut – Flange Lock | 8 |
| 22 | 3231–21 | Bolt – Carriage | 4 |
| 23 | 87–6240 | Bracket – Seat Back | 4 |


‡For different language versions of this part, see International Decal Cross Reference.
*Not Illustrated

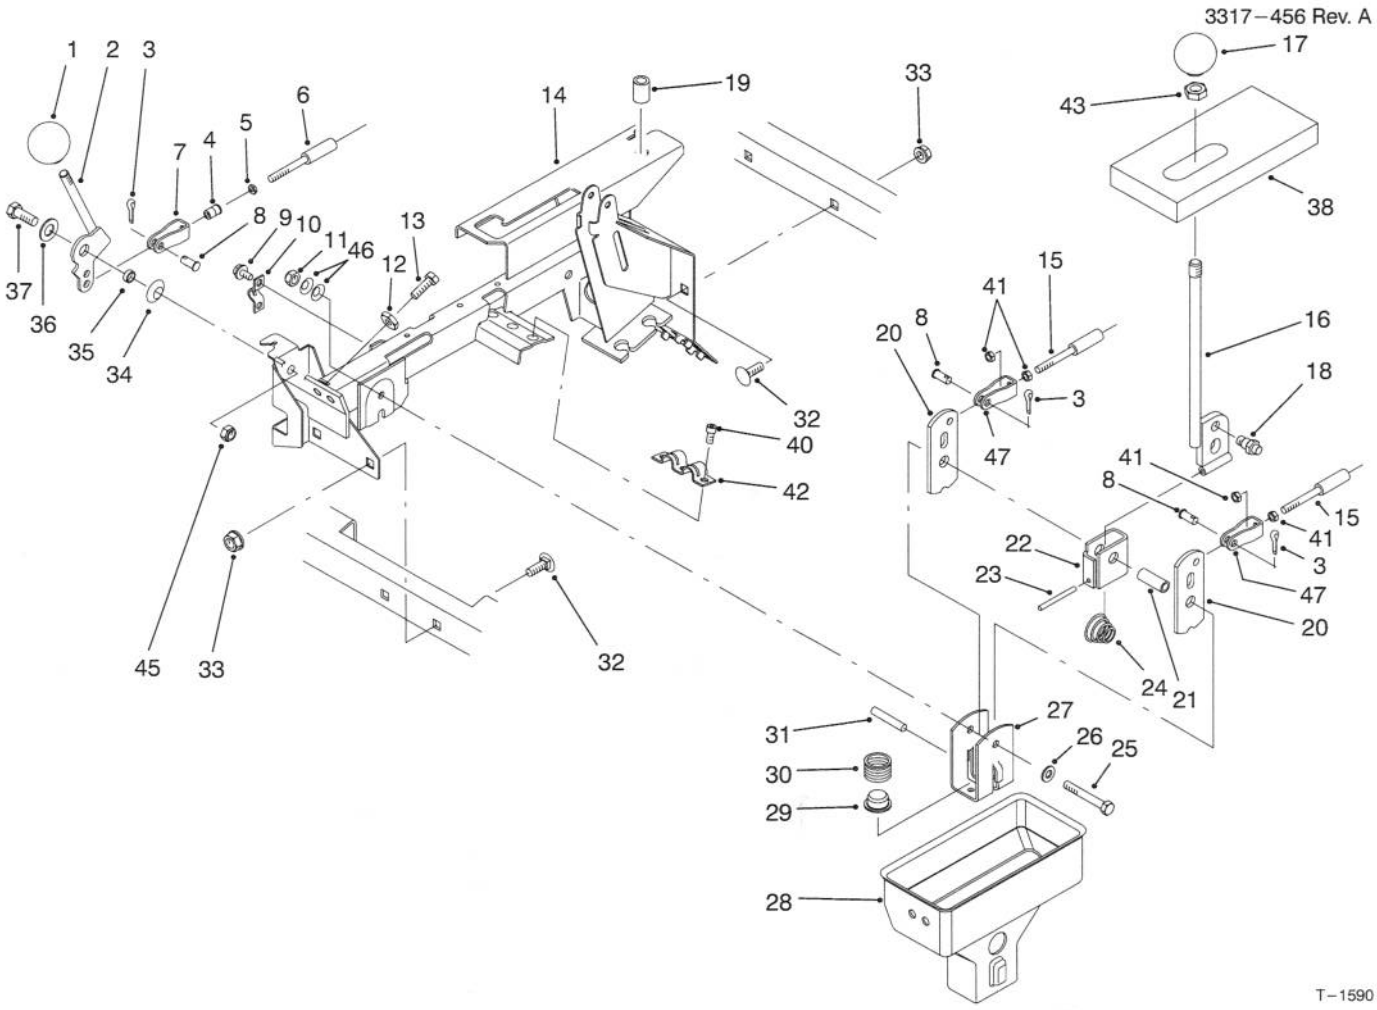


# HI–LO & SHIFT LEVER ASSEMBLIES

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 233–37 | Knob | 1 |
| 2 | 87–4350 | Lever – Hi–Lo | 1 |
| 3 | 3272–6 | Pin – Cotter | 3 |
| 4 | 32148–15 | Insert – Threaded | 1 |
| 5 | 3219–14 | Nut | 1 |
| 6 | 87–4420 | Hi–Lo Cable Assembly (Incl. Ref. #5) | 1 |
| 7 | 87–7160 | Assembly – Clevis, Cable (Incl. Ref. #4) | 1 |
| 8 | 283–62 | Pin – Clevis | 3 |
| 9 | 32144–4 | Screw – Hex. Washer Hd. | 2 |
| 10 | 87–4340 | Clamp – Cable | 1 |
| 11 | 3296–58 | Nut – Lock | 2 |
| 12 | 3220–3 | Nut – Jam | 2 |
| 13 | 3211–8 | Screw – Cap Hex. Hd. | 2 |
| 14 | 87–8110 | Lever Support Assembly (Incl. Ref. #19) | 1 |
| 15 | 87–4260 | Cable Assembly (Incl. Ref. #41) | 2 |
| 16 | 87–2040 | Lever – Shift | 1 |
| 17 | 87–6720 | Knob | 1 |
| 18 | 87–3650 | Pin – Shift | 1 |
| 19 | 32148–7 | Nut – Clinch | 2 |
| 20 | 87–3540 | Link – Shift | 2 |
| 21 | 87–2520 | Tube – Pivot | 1 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 22 | 87–6040 | Bracket – Shifter | 1 |
| 23 | 32121–48 | Pin – Roll | 1 |
| 24 | 87–2900 | Spring – Compression | 1 |
| 25 | 322–12 | Screw – Cap Hex. Hd. | 1 |
| 26 | 87–8640 | Washer – Flat | 1 |
| 27 | 87–3520 | Clevis | 1 |
| 28 | 87–2260 | Boot – Shift Lower | 1 |
| 29 | 87–3530 | Button – Shifter | 1 |
| 30 | 87–3660 | Spring – Compression | 1 |
| 31 | 3290–507 | Pin – Dowel | 1 |
| 32 | 3231–21 | Bolt – Carriage | 4 |
| 33 | 3290–357 | Nut – Flange Lock | 4 |
| 34 | 3290–221 | Washer – Spring | 1 |
| 35 | 76–9100 | Spacer – Hi–Lo Lever | 1 |
| 36 | 49–9150 | Washer – Flat | 1 |
| 37 | 323–6 | Screw – Cap Hex. Hd. | 1 |
| 38 | 87–6570 | Foam – Seal | 1 |
| 40 | 65–5220 | Screw – Hex. Socket Hd. | 3 |
| 41 | 3220–1 | Nut – Jam | 4 |
| 42 | 87–4960 | Clamp – Cable | 1 |
| 43 | 3218–18 | Nut – Jam | 1 |
| 45 | 3296–39 | Nut – Lock | 1 |
| 46 | 3290–456 | Washer – Belleville | 2 |
| 47 | 87–2310 | Clevis – Cable | 2 |

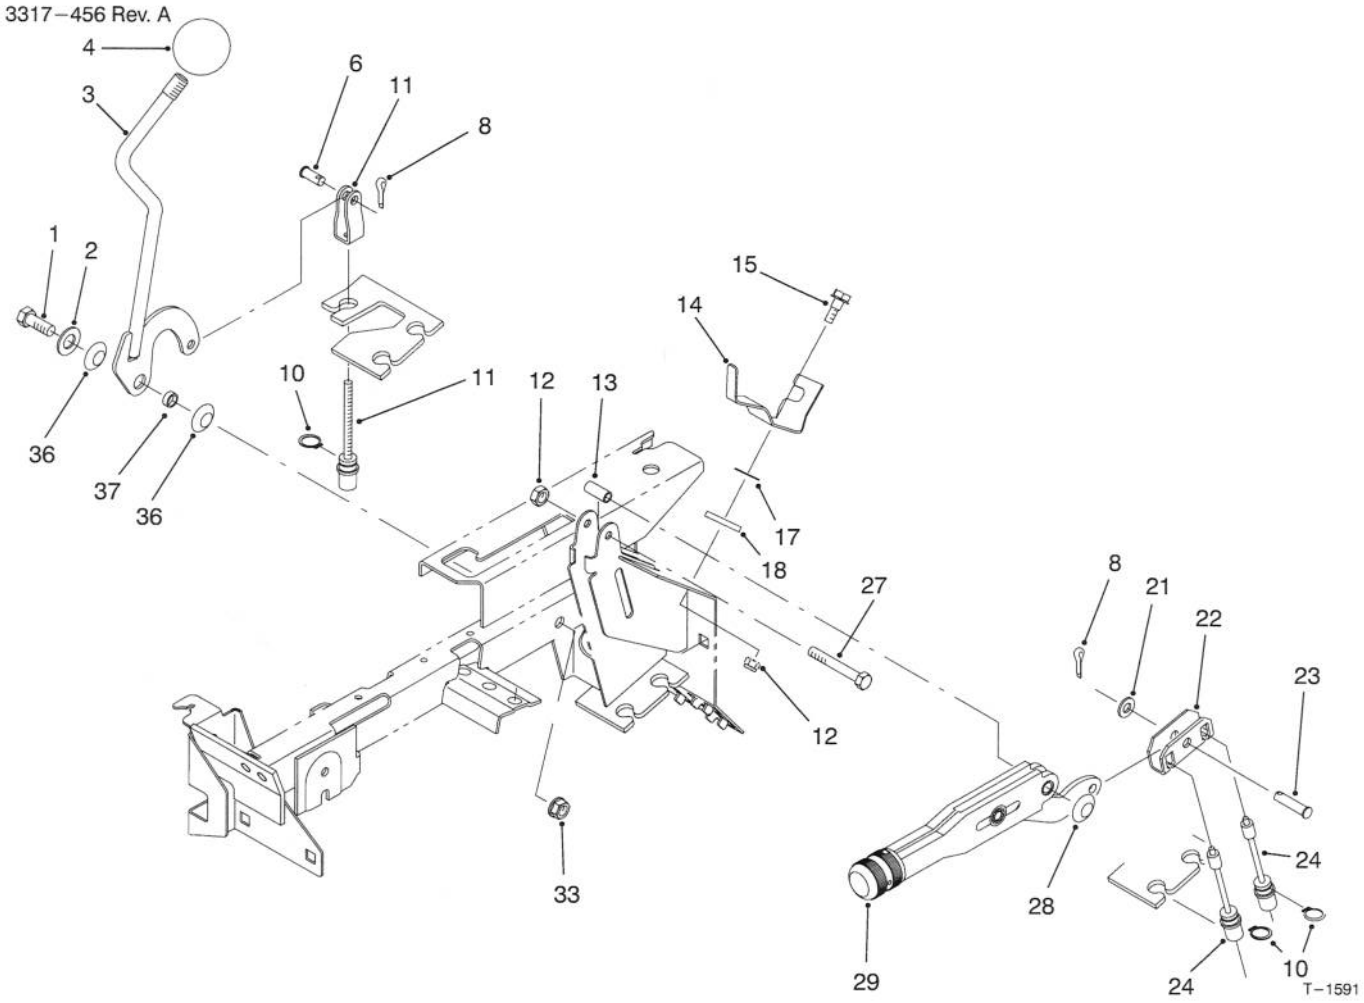


# DIFFERENTIAL LOCK & PARKING BRAKE ASSEMBLIES

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 323–6 | Screw – Cap Hex. Hd. | 1 |
| 2 | 49–9150 | Washer – Flat | 1 |
| 3 | 87–5030 | Lever – Differential Lock | 1 |
| 4 | 233–48 | Knob | 1 |
| 6 | 283–62 | Pin – Clevis | 1 |
| 8 | 3272–10 | Pin – Cotter | 1 |
| 10 | 32120–47 | Ring – Retaining | 3 |
| 11 | 87–4460 | Differential Lock Cable | 1 |
| 12 | 3296–42 | Nut – Lock | 1 |
| 13 | 87–4710 | Spacer – Barking Brake | 1 |
| 14 | 87–6640 | Lever – Dump Stop | 1 |
| 15 | 42–3560 | Screw – Shoulder | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 3290–478 | Washer – Belleville | 1 |
| 18 | 71–5320 | Washer – Flat | 1 |
| 21 | 3256–23 | Washer – Flat | 1 |
| 22 | 87–3480 | Plate – Brake Equalizer | 1 |
| 23 | 283–14 | Pin – Clevis | 1 |
| 24 | 87–8240 | Cable – Parking Brake | 2 |
| 27 | 321–9 | Screw – Cap Hex. Hd. | 1 |
| 28 | 3290–477 | Washer – Curved | 1 |
| 29 | 87–2710 | Lever – Parking Brake | 1 |
| 33 | 3296–39 | Nut – Lock | 1 |
| 36 | 3290–221 | Washer – Spring | 2 |
| 37 | 76–2290 | Spacer | 1 |

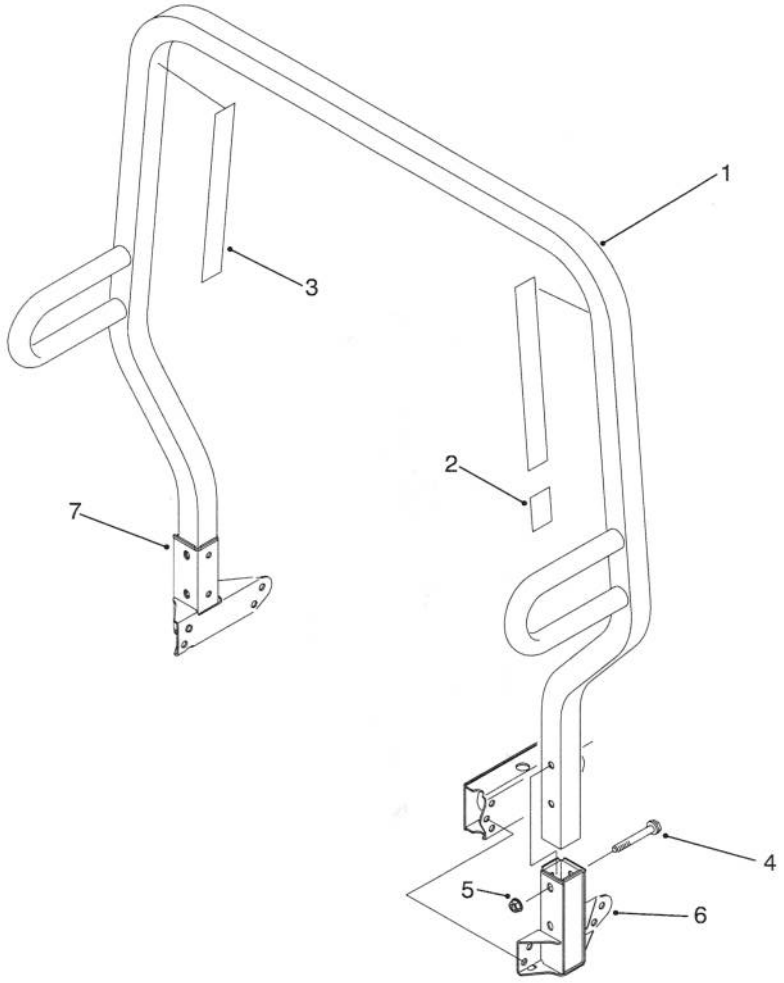



T–1592

# R.O.P.S. ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–7090 | Assembly – Frame, R.O.P.S. (Incl. Ref. #2 & 3) | 1 |
| ‡2 | 87–5940 | Decal – Rollover (US) | 1 |
| * | 93–9850 | Decal – Rollover (CE) | 1 |
| ‡3 | 87–5980 | Decal – ROPS (US) | 2 |
| * | 93–9859 | Decal – ROPS (CE) | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 4 | 3234–40 | Screw – Hex. Flange Hd. | 4 |
| 5 | 32128–23 | Nut – Flange Lock | 4 |
| 6 | 87–6950 | Receiver – LH | 1 |
| 7 | 87–6960 | Receiver – RH | 1 |

‡For different language versions of this part, see International Decal Cross Reference.
*Not Illustrated

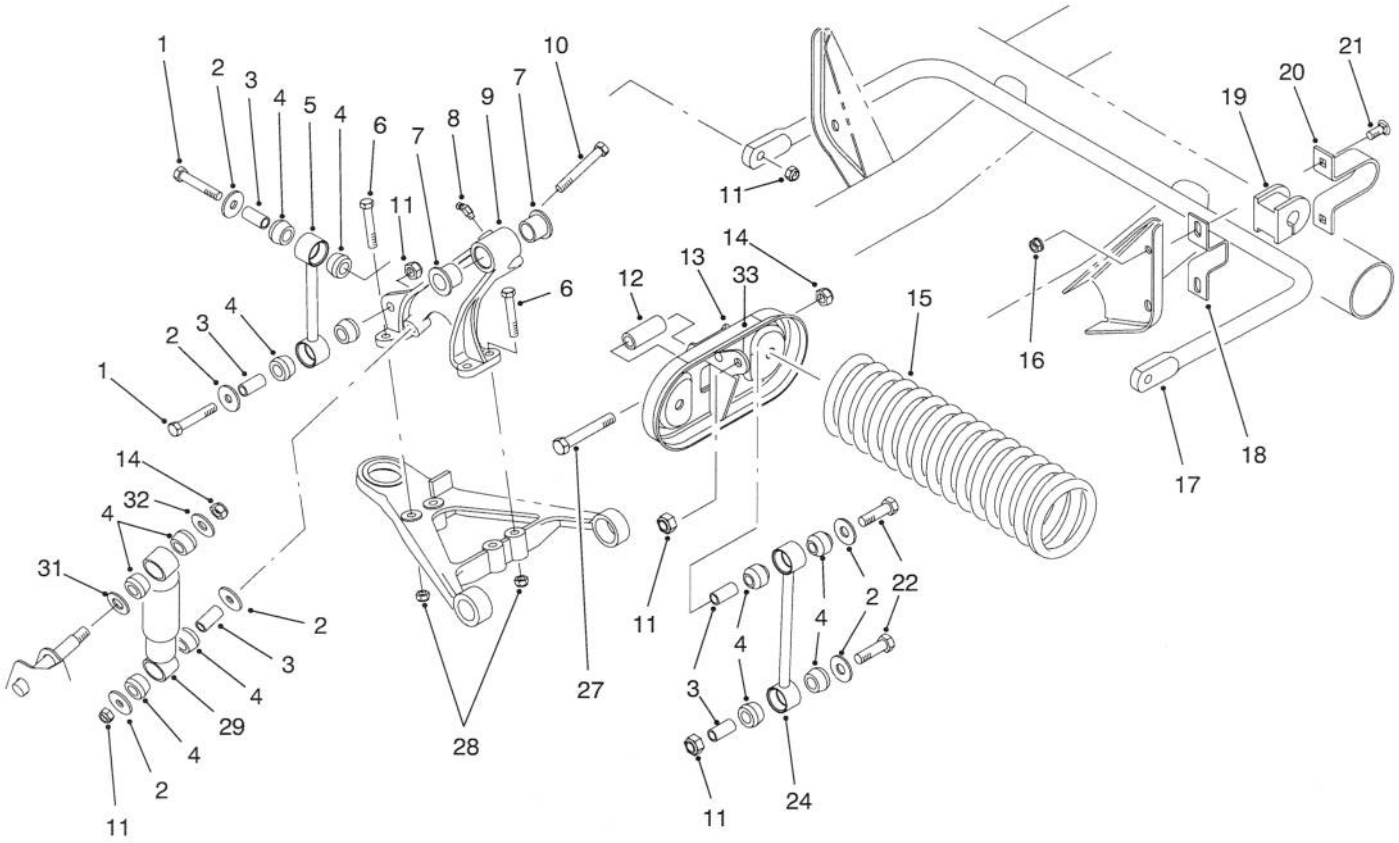


T–1593


# FRONT SUSPENSION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 324–10 | Screw – Cap Hex. Hd. | 4 |
| 2 | 87–5330 | Washer | 8 |
| 3 | 87–3600 | Spacer | 10 |
| 4 | 87–3920 | Bushing – Rubber | 16 |
| 5 | 87–3860 | Link – Anti–Sway Bar | 2 |
| 6 | 323–12 | Screw – Cap Hex. Hd. | 8 |
| 7 | 33–3090 | Bushing – Flange | 4 |
| 8 | 302–11 | Fitting – Grease | 1 |
| 9 | 87–0150 | Tower – Control Arm RH | 1 |
| * | 87–0160 | Tower – Control Arm LH | 1 |
| 10 | 324–13 | Screw – Cap Hex. Hd. | 2 |
| 11 | 3296–48 | Nut – Lock | 10 |
| 12 | 87–2500 | Sleeve –Spring Pivot | 2 |
| 13 | 87–7150 | Assembly – Cradle, Spring (Incl. Ref. #33) | 2 |
| 14 | 3296–23 | Nut – Lock | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 15 | 87–0690 | Spring – Compression | 2 |
| 16 | 3290–357 | Nut – Flange Lock | 4 |
| 17 | 87–3850 | Bar – Anti–Sway | 1 |
| 18 | 87–3890 | Bracket – Anti–Sway Bar | 2 |
| 19 | 87–3910 | Bushing – Anti–Sway Bar | 2 |
| 20 | 87–4010 | Clamp – Anti–Sway Bar | 2 |
| 21 | 3231–3 | Bolt – Carriage | 4 |
| 22 | 324–9 | Screw – Cap Hex. Hd. | 4 |
| 24 | 87–2480 | Link – Stabilizer | 2 |
| 27 | 325–13 | Screw – Cap Hex. Hd. | 4 |
| 28 | 3296–39 | Nut – Lock | 8 |
| 29 | 87–3110 | Absorber – Shock | 2 |
| 31 | 3256–27 | Washer – Flat | 2 |
| 32 | 3256–6 | Washer – Flat | 2 |
| ‡33 | 44–0760 | Decal – Warning (US) | 2 |
| ‡* | 93–9879 | Decal – Warning (CE) | 2 |

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

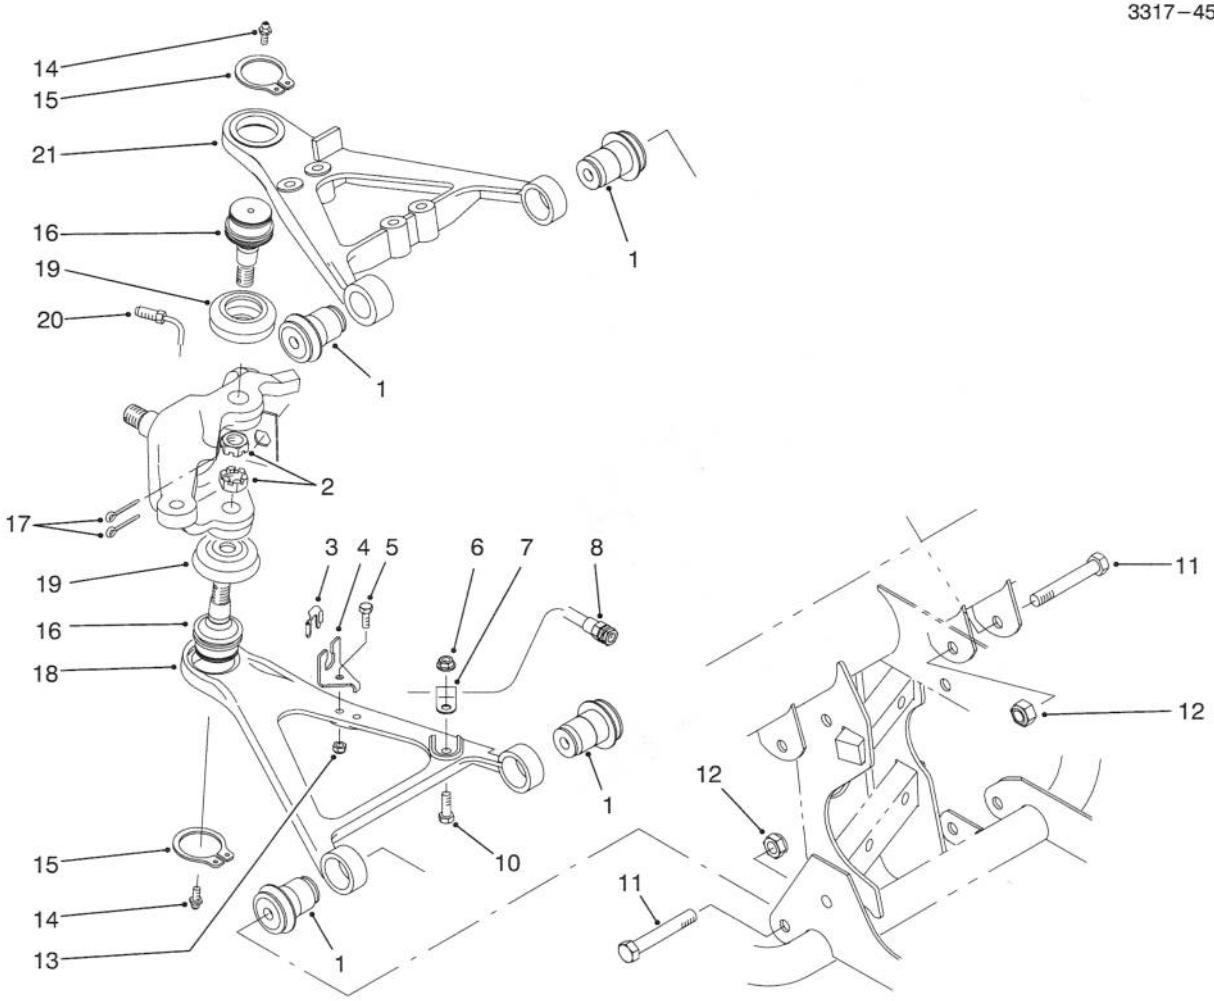



T–1594

# FRONT SUSPENSION CONTROL ARM ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–1450 | Bushing – Rubber | 8 |
| 2 | 32136–2 | Nut – Slotted | 2 |
| 3 | 87–3580 | Retainer – Brake Hose | 2 |
| 4 | 87–2870 | Bracket – Brake Hose | 2 |
| 5 | 321–6 | Screw – Cap Hex. Hd. | 2 |
| 6 | 32128–20 | Nut – Flange Lock | 2 |
| 7 | 2412–10 | Clamp – R | 2 |
| 8 | 93–7123 | Hose – Brake Front | 2 |
| 10 | 322–5 | Screw – Cap Hex. Hd. | 2 |
| 11 | 325–13 | Screw – Cap Hex. Hd | 8 |
| 12 | 3296–23 | Nut – Flange Lock | 8 |
| 13 | 3296–42 | Nut – Lock | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 14 | 302–5 | Fitting – Grease | 4 |
| 15 | 32151–104 | Ring – Snap | 4 |
| 16 | 87–1430 | Joint – Ball | 4 |
| 17 | 3272–12 | Pin – Cotter | 4 |
| 18 | 87–0210 | Arm – Control Lower RH | 1 |
| * | 87–0220 | Arm – Control Lower LH | 1 |
| 19 | 87–2420 | Boot | 4 |
| 20 | 87–2800 | Tube – Brake RH | 1 |
| * | 87–2790 | Tube – Brake LH | 1 |
| 21 | 93–7135 | Arm – Control Upper RH | 1 |
| * | 93–7133 | Arm – Control Upper LH | 1 |

*Not Illustrated

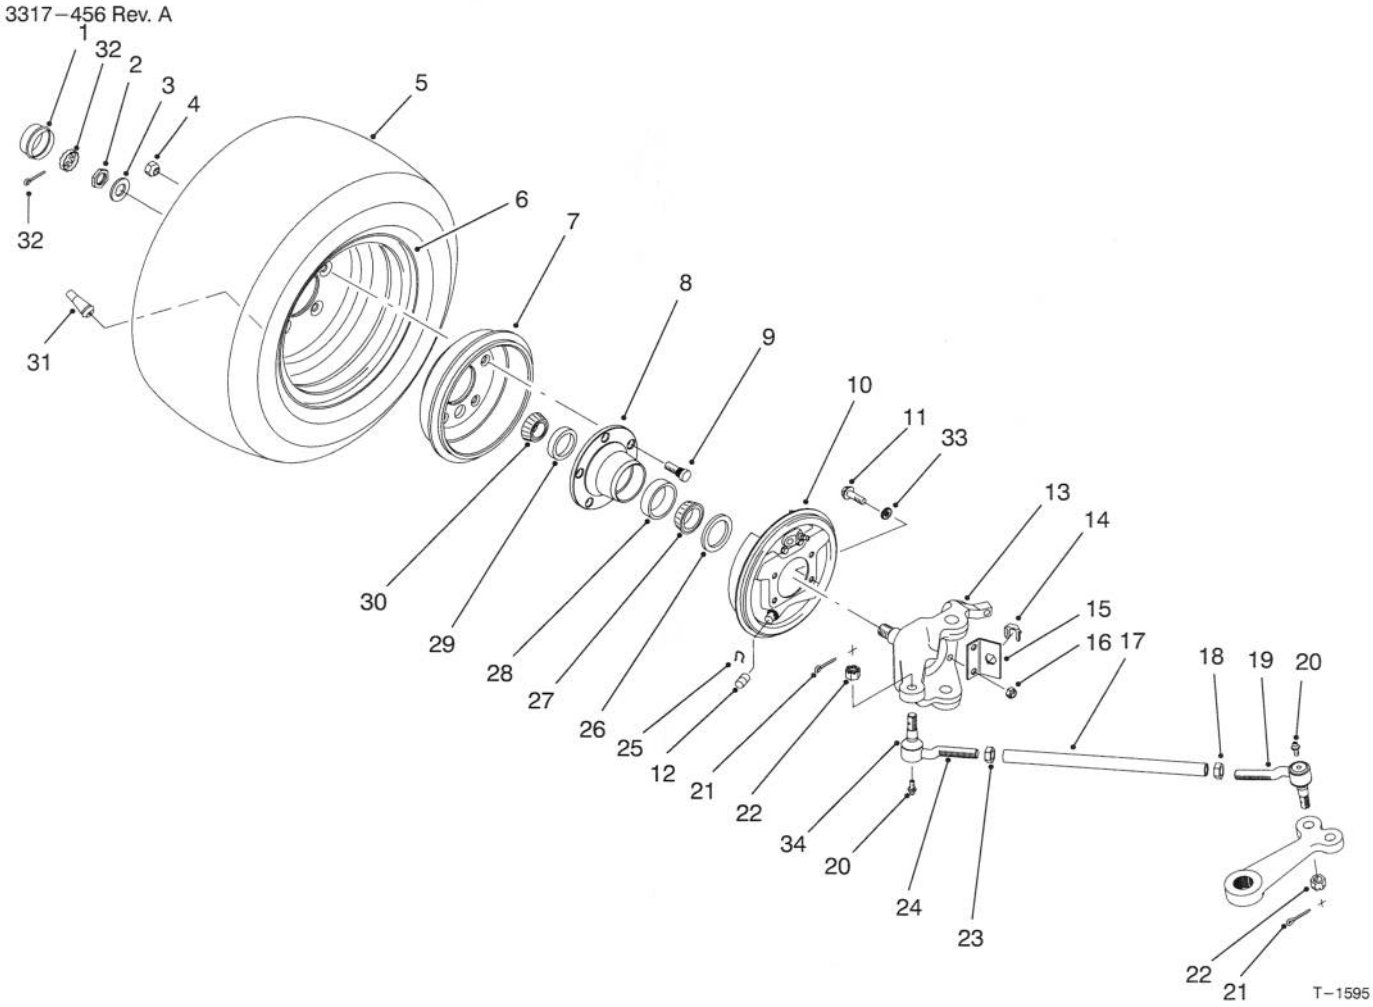



# FRONT WHEEL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 241–119 | Cap Dust | 2 |
| 2 | 3220–7 | Nut – Jam | 2 |
| 3 | 93–0309 | Washer – Tab | 2 |
| 4 | 23–7270 | Nut – Lug | 10 |
| 5 | 87–3300 | Tire | 2 |
| 6 | 87–5720 | Rim | 2 |
| 7 | 87–0270 | Drum – Brake | 2 |
| 8 | 87–5560 | Hub – Wheel | 2 |
| 9 | 87–8730 | Stud – Drive | 10 |
| 10 | 87–3010 | Brake Assembly – RH | 1 |
| * | 87–3020 | Brake Assembly – LH | 1 |
| 11 | 323–8 | Screw – Hex. Flange Hd. | 8 |
| 12 | 87–3450 | Plug | 2 |
| 13 | 87–9430 | Spindle – RH | 1 |
| * | 87–9440 | Spindle – LH | 1 |
| 14 | 87–3580 | Retainer | 2 |
| 15 | 87–2820 | Bracket – Hose | 2 |
| 16 | 3296–39 | Nut – Lock | 8 |
| 17 | 87–2410 | Rod – Tie | 2 |
| 18 | 3218–21 | Nut – Jam | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 19 | 87–1470 | Rod End Assy. – LH Thread (Incl. Ref. # 20–22 & 34) | 2 |
| 20 | 302–5 | Fitting – Grease | 4 |
| 21 | 3272–12 | Pin – Cotter | 4 |
| 22 | 32136–3 | Nut – Slotted | 4 |
| 23 | 3220–11 | Nut – Jam | 2 |
| 24 | 87–1480 | Rod End Assy. – RH Thread (Incl. Ref. #20–22 & 34) | 2 |
| 25 | 87–3310 | Clip – Brake Cable | 2 |
| 26 | 87–3590 | Seal – Bearing | 2 |
| 27 | 254–106 | Cone – Bearing | 2 |
| 28 | 254–107 | Cup – Bearing | 2 |
| 29 | 254–72 | Cup – Bearing | 2 |
| 30 | 254–94 | Cone – Bearing | 2 |
| 31 | 232–27 | Stem – Valve | 2 |
| 32 | 3272–12 | Pin – Cotter | 2 |
| 33 | 3253–21 | Washer – Lock | 8 |
| 34 | | Seal – Rod End | 4 |
| 35 | 93–0307 | Nut – Retainer | 2 |
| * | 87–5340 | Seal Kit – Tie Rod End (Incl. Ref. #20–22 & 34) | 4 |

*Not Illustrated

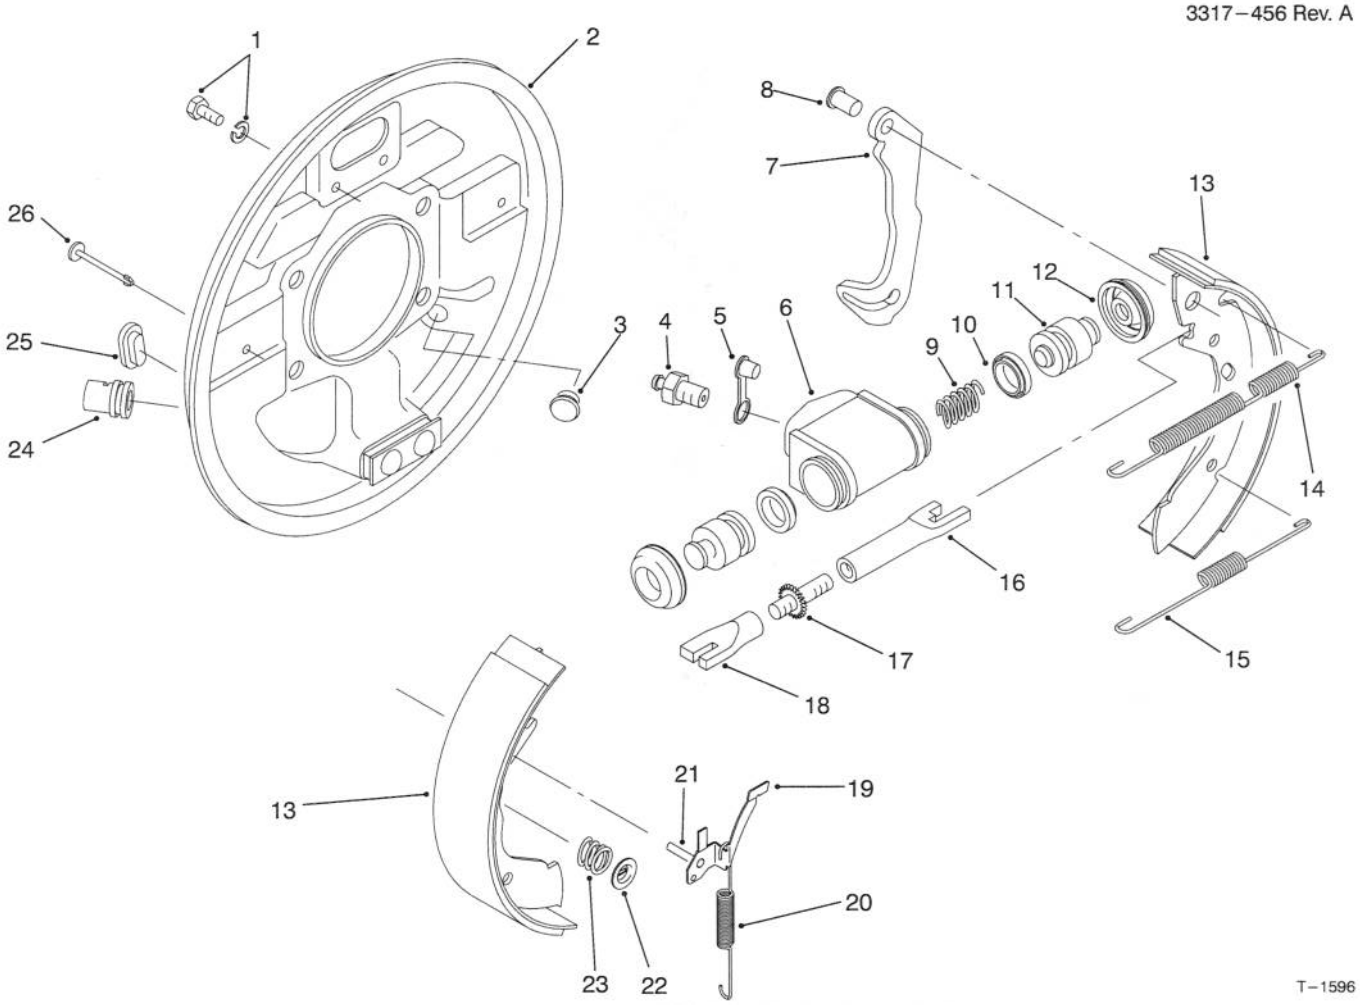



T–1596

# FRONT BRAKE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–4135 | Set Bolt | 2 |
| 2 | 92–4115 | Backplate Assembly LH (Incl. Ref. #24) | 1 |
| * | 92–4116 | Backplate Assembly RH (Incl. Ref. #24) | 1 |
| 3 | 92–4125 | Plug | 1 |
| 4 | 92–4113 | Screw – Bleed | 1 |
| 5 | 92–4114 | Cap – Bleed Screw | 1 |
| 6 | | Body | 1 |
| 7 | | Lever – Operating LH/RH | 1 |
| 8 | | Pin | 1 |
| 9 | | Spring | 1 |
| 10 | | Seal – 'L' Type | 2 |
| 11 | | Piston | 2 |
| 12 | | Cover – Dust | 2 |
| 13 | 92–4120 | Shoe & Lining Set (Incl. Ref. #7 & 8) | 1 |
| 14 | 92–4126 | Spring – Shoe, Upper LH | 1 |
| * | 92–4127 | Spring – Shoe, Upper RH | 1 |
| 15 | 92–4128 | Spring – Shoe, Lower | 1 |
| 16 | | Pushrod – Female LH | 1 |
| * | | Pushrod – Female RH | 1 |
| 17 | | Bolt – Adjuster | 1 |
| 18 | | Sleeve – Adjuster | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 19 | 92–4123 | Assembly – Pawl LH (Incl. Ref. #21) | 1 |
| * | 92–4124 | Assembly – Pawl RH (Incl. Ref. #21) | 1 |
| 20 | 92–4129 | Spring – Adjuster, LH | 1 |
| * | 92–4130 | Spring – Adjuster, RH | 1 |
| 21 | | Pin – Pawl | 1 |
| 22 | 92–4131 | Washer – Hold Down | 2 |
| 23 | 92–4132 | Spring – Hold Down | 2 |
| 24 | | Guide – Pipe | 1 |
| 25 | 92–4134 | Plug – Inspection | 1 |
| 26 | 92–4133 | Pin – Hold Down | 2 |
| * | 92–4121 | Assembly – Adjuster LH (Inc. Ref. #16–18) | 1 |
| * | 92–4122 | Assembly – Adjuster RH (Incl. Ref. #16–18) | 1 |
| * | 92–4117 | Assy. – Wheel Cylinder LH (Incl. Ref. #4–6 & 9–12) | 1 |
| * | 92–4118 | Assy. – Wheel Cylinder RH (Incl. Ref. #4–6 & 9–12) | 1 |
| * | 92–4119 | Kit – Seal (Incl. Ref. #10 & 12) | 1 |
| * | 87–3010 | Front Brake Assembly – RH (Complete) | 1 |
| * | 87–3020 | Front Brake Assembly – LH (Complete) | 1 |

*Not Illustrated

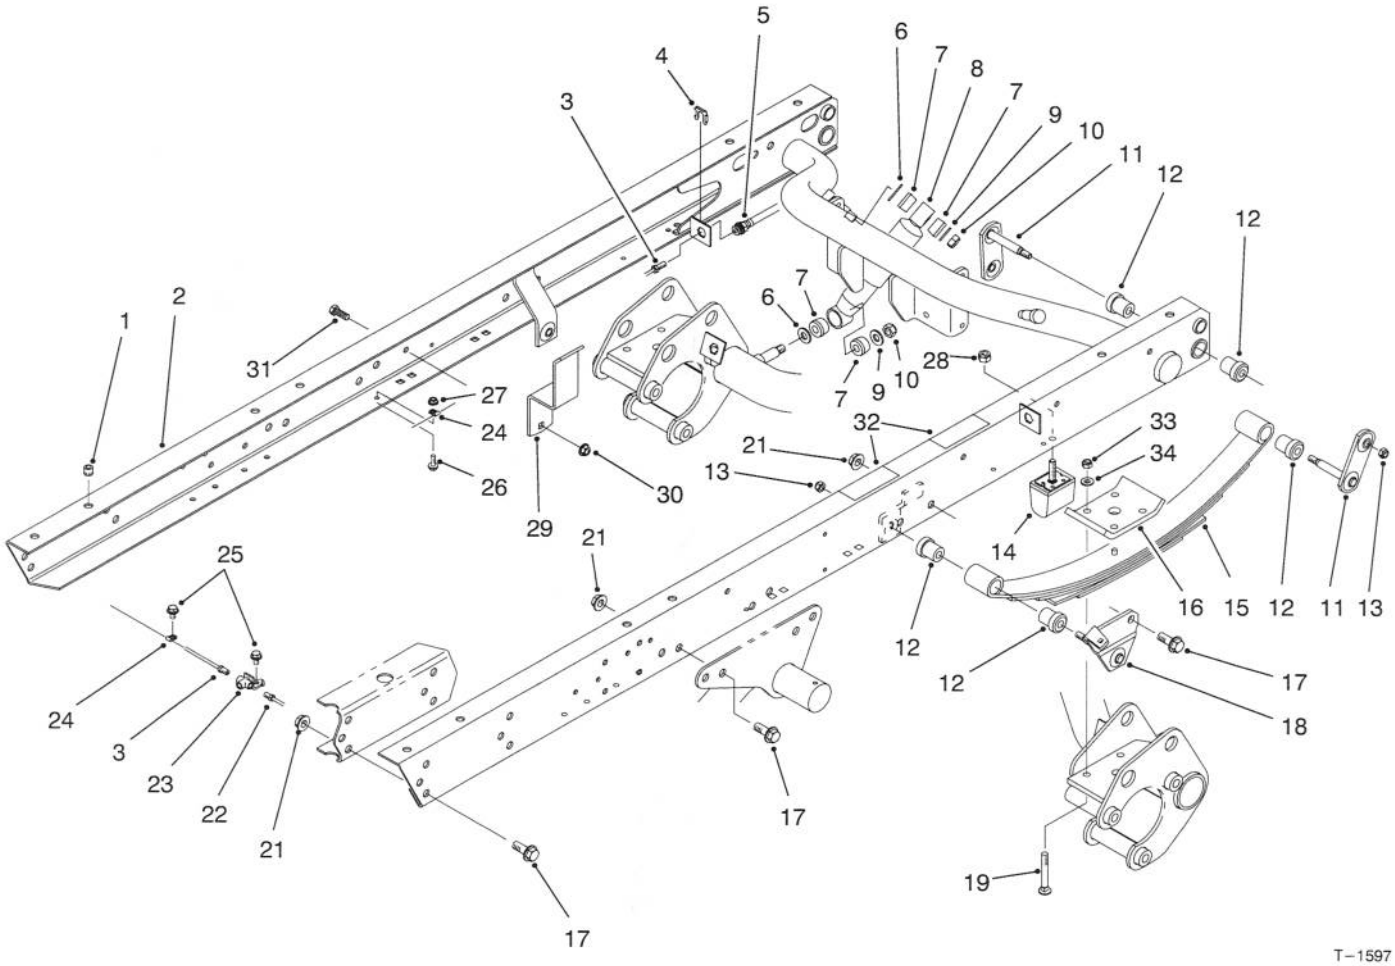



# REAR FRAME ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32148–9 | Insert – Threaded | 8 |
| 2 | 87–8440 | Assembly – Rear Frame (Incl. Ref. #1 & 32) | 1 |
| 3 | 87–3270 | Tube – Brake RH | 1 |
| 4 | 87–3580 | Retainer | 2 |
| 5 | 87–4100 | Hose – Brake | 2 |
| 6 | 3256–27 | Washer – Flat | 4 |
| 7 | 87–3920 | Bushing – Rubber | 8 |
| 8 | 87–3110 | Shock Absorber | 2 |
| 9 | 3256–6 | Washer – Flat | 4 |
| 10 | 3296–23 | Nut – Lock | 4 |
| 11 | 87–3980 | Shackle – Spring | 4 |
| 12 | 87–4760 | Bushing | 12 |
| 13 | 3296–39 | Nut – Lock | 6 |
| 14 | 87–3470 | Bumper – Spring | 2 |
| 15 | 87–1490 | Spring – Leaf | 2 |
| 16 | 87–7470 | Plate – Clamp | 2 |
| 17 | 3234–38 | Screw – Hex. Flange Hd. | 22 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 18 | 87–3960 | Mount – Spring LH | 1 |
| * | 87–3940 | Mount – Spring RH | 1 |
| 19 | 3232–17 | Bolt – Carriage | 8 |
| 21 | 32128–23 | Nut – Flange Lock | 22 |
| 22 | 87–3280 | Tube – Brake LH | 1 |
| 23 | 87–3560 | Tee – Brake Tube | 1 |
| 24 | 2412–149 | Clamp – Tube | 5 |
| 25 | 32104–82 | Screw – Hex. Flange Hd. | 2 |
| 26 | 321–4 | Screw – Hex. Flange Hd. | 4 |
| 27 | 32128–33 | Nut – Flange Lock | 4 |
| 28 | 48–9520 | Nut – Lock | 2 |
| 29 | 87–6690 | Guard – Induction Chamber | 1 |
| 30 | 3290–357 | Nut – Flange Head | 2 |
| 31 | 323–6 | Screw – Cap Hex. Hd. | 2 |
| ‡32 | 66–6840 | Decal – Caution (US) | 2 |
| ‡* | 93–8071 | Decal – Caution (CE) | 2 |
| 33 | 3296–76 | Nut – Lock | 8 |
| 34 | 87–7480 | Washer – Flat | 8 |

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

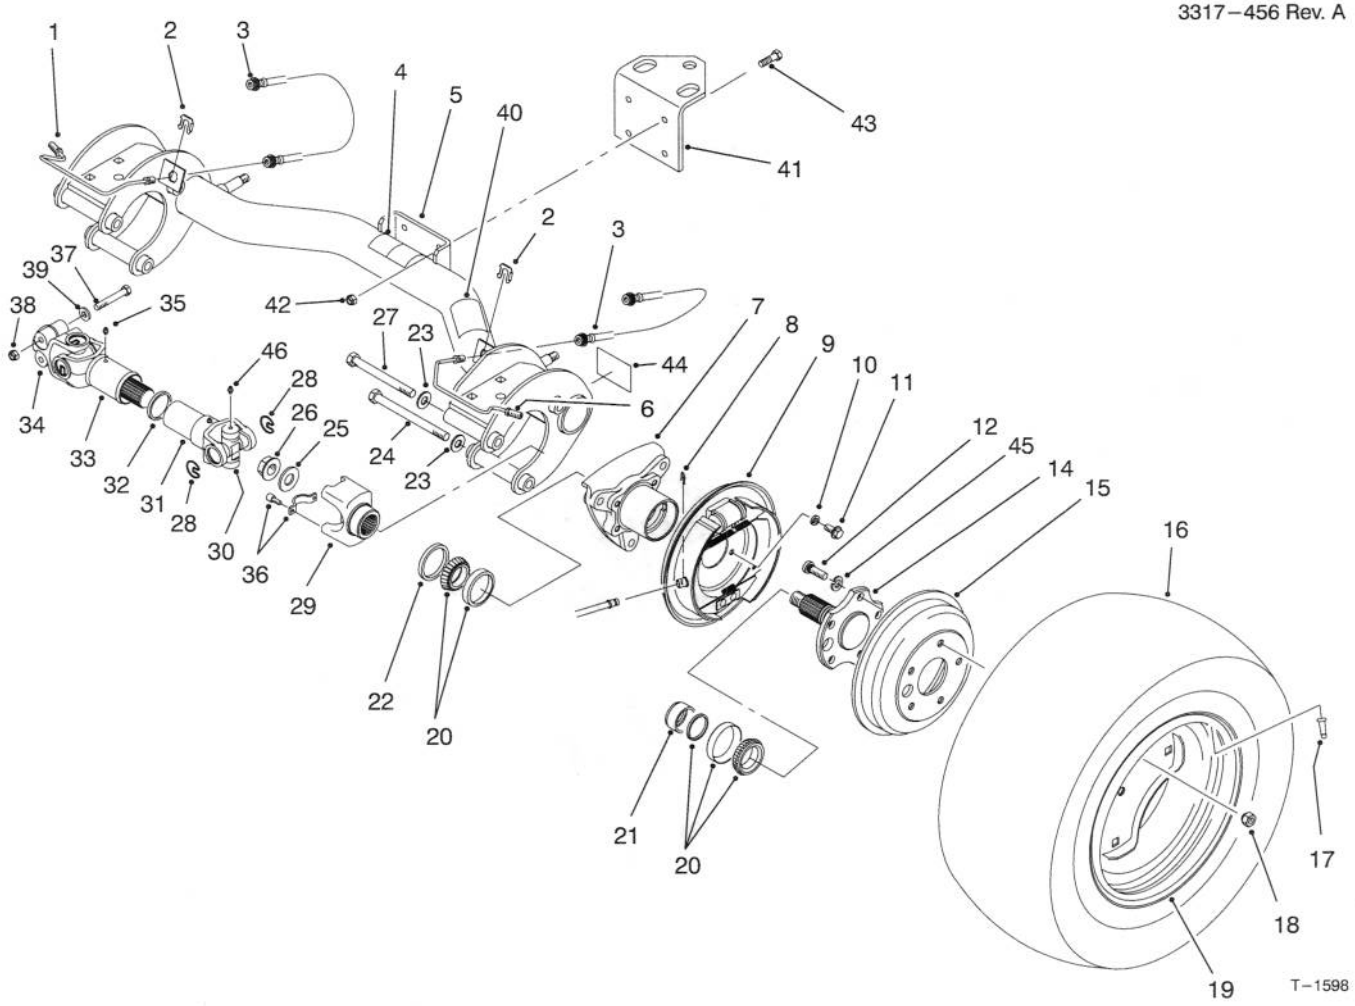



# REAR AXLE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–4090 | Tube – Brake RH | 1 |
| 2 | 87–3580 | Retainer – Brake Hose | 2 |
| 3 | 87–4100 | Hose – Brake | 2 |
| ‡4 | 87–6060 | Decal – ATF (US) | 1 |
| ‡* | 93–9442 | Decal – ATF (CE) | 1 |
| 5 | 87–7110 | Assembly – Axle, Rear (Incl. Ref. #4, 40 & 44) | 1 |
| 6 | 87–4080 | Tube – Brake LH | 1 |
| 7 | 87–2240 | Housing – Axle | 2 |
| 8 | 87–3310 | Clip – Brake Cable | 2 |
| 9 | 93–7126 | Brake Assembly LH | 1 |
| * | 93–7125 | Brake Assembly RH | 1 |
| 10 | 3253–21 | Washer – Lock | 8 |
| 11 | 323–6 | Screw – Cap Hex. Hd. | 8 |
| 12 | 87–2080 | Stud – Drive | 10 |
| 14 | 93–7090 | Stub – Axle | 2 |
| 15 | 93–7128 | Drum – Brake | 2 |
| 16 | 87–6740 | Tire – Rear 24" | 2 |
| * | 87–3290 | Tire – Rear 23" (Optional) | 2 |
| 17 | 232–27 | Valve – Stem | 2 |
| 18 | 23–7270 | Nut – Lug | 10 |
| 19 | 87–6750 | Rim – Rear 24" | 2 |
| * | 87–3000 | Rim – Rear 23" (Optional) | 2 |
| 20 | 87–1970 | Bearing Matched Set | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 21 | 87–4060 | Spacer – Bearing | 2 |
| 22 | 87–3590 | Seal – Bearing | 2 |
| 23 | 87–7270 | Washer – Flat | 6 |
| 24 | 325–20 | Screw – Cap Hex. Hd. | 5 |
| 25 | 87–3060 | Washer – Flat | 2 |
| 26 | 32128–53 | Nut – Flange Lock | 2 |
| 27 | 325–19 | Screw – Cap Hex. Hd. | 1 |
| 28 | 92–4188 | Ring – Snap | 12 |
| 29 | 92–4190 | Yoke – End | 2 |
| 30 | 92–4187 | Cross & Bearing Kit | 4 |
| 31 | 92–4182 | Yoke & Hub | 2 |
| 32 | 92–4180 | Seal | 2 |
| 33 | 92–4179 | Yoke, Shaft & Seal Tube | 2 |
| 34 | 92–4177 | Yoke – Double Clamp | 2 |
| 35 | 302–5 | Fitting – Grease | 4 |
| 36 | 92–4189 | Strap & Bolt Kit | 4 |
| 37 | 87–8700 | Screw – Cap Hex. Hd. | 4 |
| 38 | 32128–36 | Nut – Lock | 4 |
| 39 | 80–6990 | Washer | 4 |
| ‡40 | 87–5990 | Decal – PTO (US) | 1 |
| ‡* | 93–9862 | Decal – PTO (CE) | 1 |
| 41 | 92–5951 | Angle – Hitch | 1 |
| 42 | 3296–39 | Nut – Lock | 4 |
| 43 | 323–7 | Screw – Cap Hex. Hd. | 4 |
| ‡44 | 87–9080 | Decal – Grease (US) | 2 |
| ‡* | 93–9449 | Decal – Grease (CE) | 2 |

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

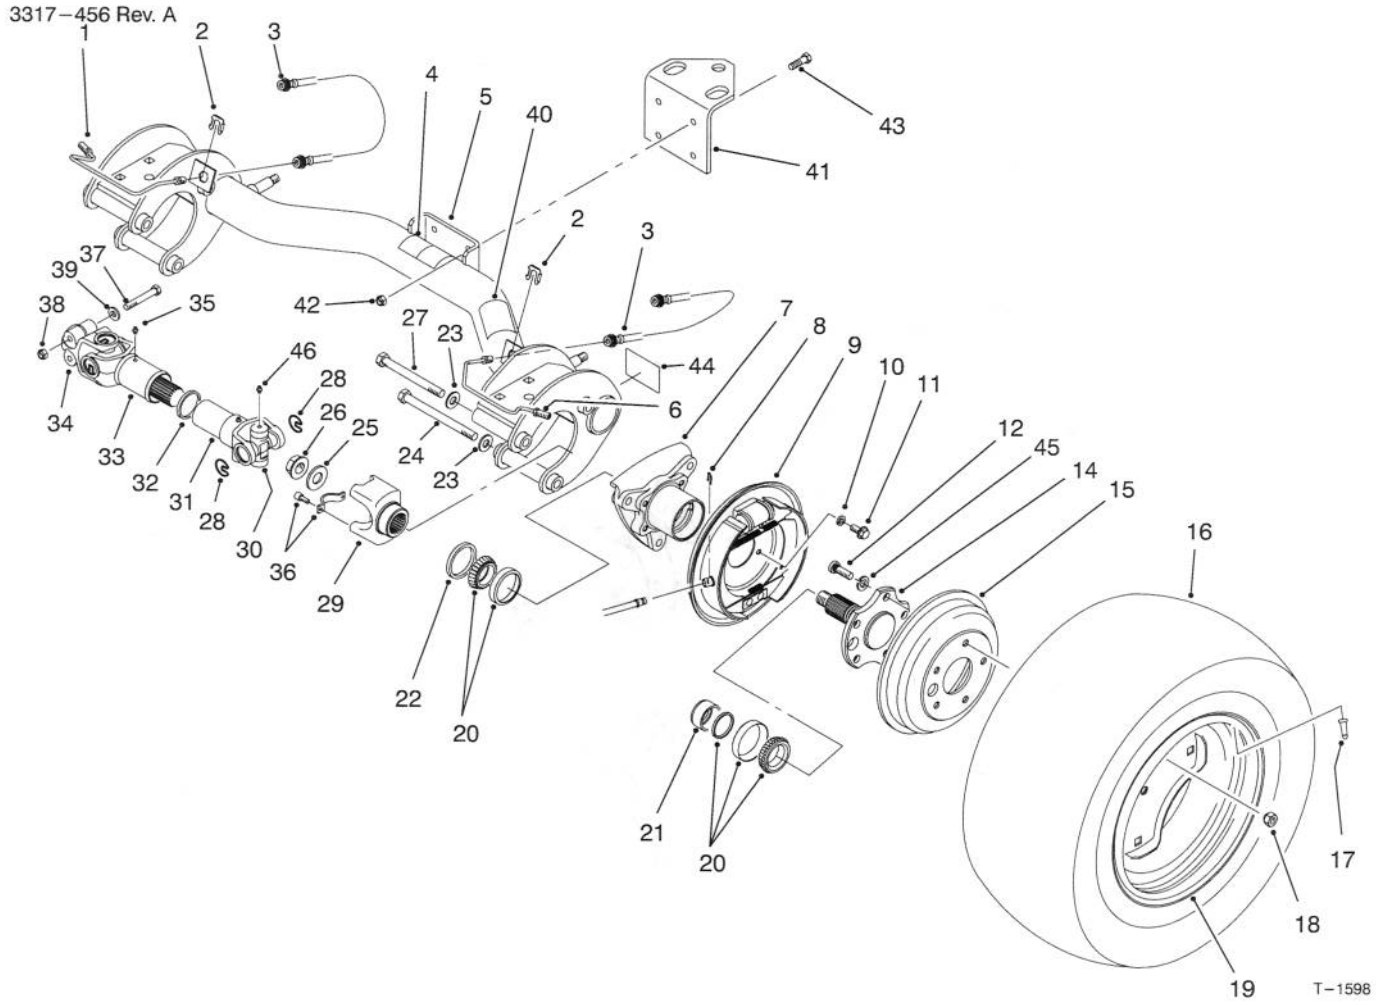



# REAR AXLE ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 45 | 3253–6 | Washer – Lock | 10 |
| 46 | 302–58 | Fitting – Grease | 16 |
| * | 93–7124 | Driveshaft Assembly (Incl. Ref. #28–36 & 46) | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| * | 87–5370 | Rear Tire & Wheel Assembly (24") | 2 |
| * | 87–6370 | Rear Tire & Wheel Assembly (Optional 23") | 2 |

*Not Illustrated

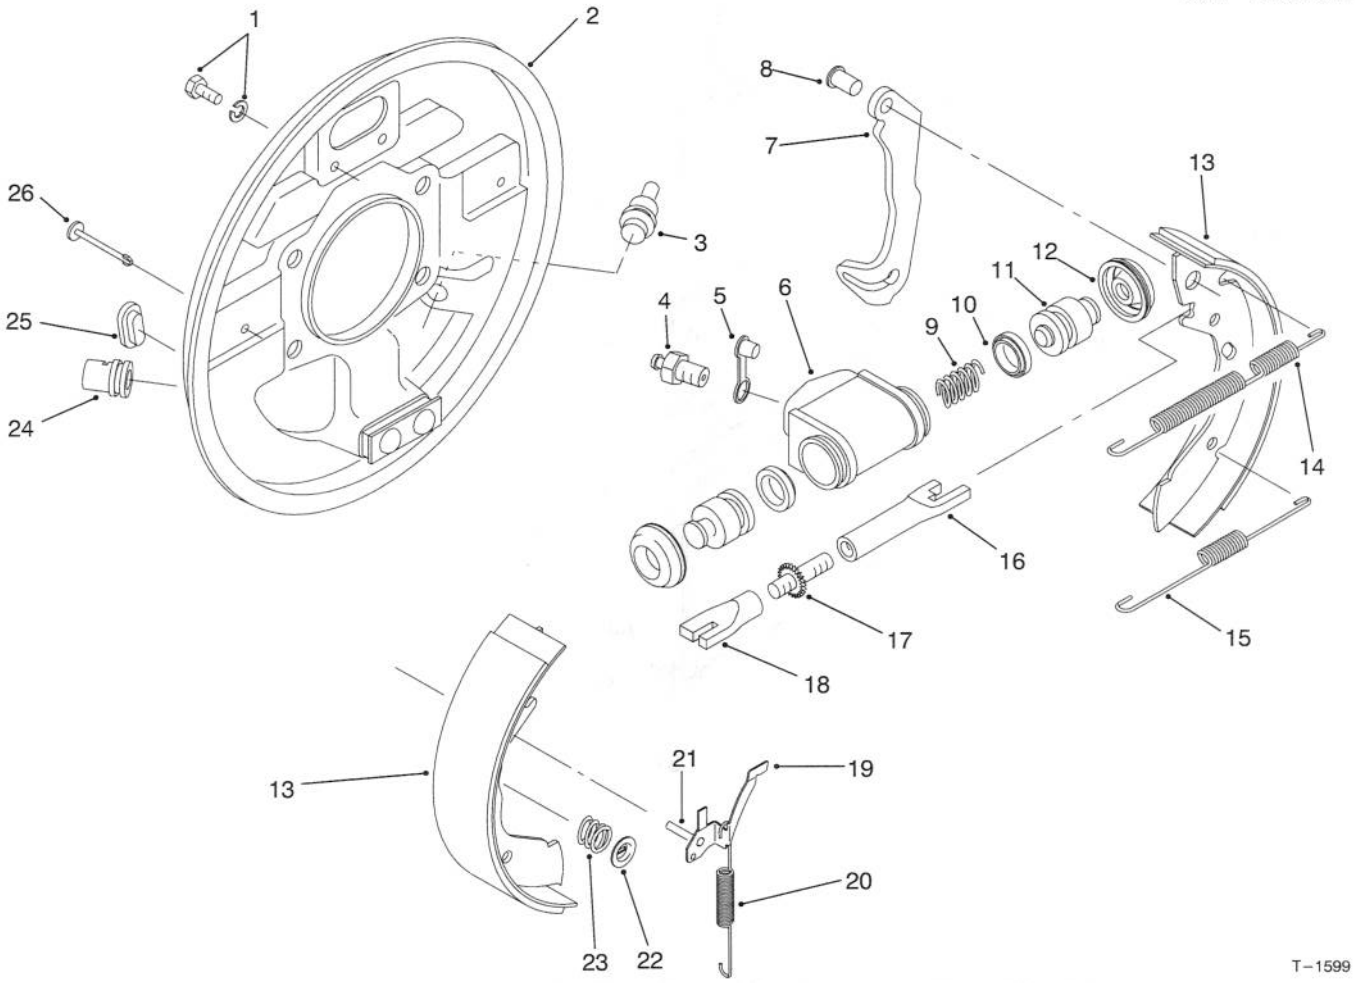



# REAR BRAKE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–4135 | Set Bolt | 2 |
| 2 | 92–4136 | Backplate Assembly LH (Incl. Ref. #24) | 1 |
| * | 92–4100 | Backplate Assembly RH (Incl. Ref. #24) | 1 |
| 3 | 92–4146 | Plug | 1 |
| 4 | 92–4137 | Screw – Bleed | 1 |
| 5 | 92–4114 | Cap – Bleed Screw | 1 |
| 6 | | Body | 1 |
| 7 | | Lever – Operating LH/RH | 1 |
| 8 | | Pin | 1 |
| 9 | | Spring | 1 |
| 10 | | Seal – 'L' Type | 2 |
| 11 | | Piston | 2 |
| 12 | | Cover – Dust | 2 |
| 13 | 92–4143 | Shoe & Lining Set (Incl. Ref. #7 & 8) | 1 |
| 14 | 92–4147 | Spring – Shoe, Upper LH | 1 |
| * | 92–4148 | Spring – Shoe, Upper RH | 1 |
| 15 | 92–4149 | Spring – Shoe, Lower | 1 |
| 16 | | Pushrod – Female LH | 1 |
| * | | Pushrod – Female RH | 1 |
| 17 | | Bolt – Adjuster | 1 |
| 18 | | Sleeve – Adjuster | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 19 | 92–4123 | Assembly – Pawl LH (Incl. Ref. #21) | 1 |
| * | 92–4124 | Assembly – Pawl RH (Incl. Ref. #21) | 1 |
| 20 | 92–4150 | Spring – Adjuster, LH | 1 |
| * | 92–4151 | Spring – Adjuster, RH | 1 |
| 21 | | Pin – Pawl | 1 |
| 22 | 92–4131 | Washer – Hold Down | 2 |
| 23 | 92–4152 | Spring – Hold Down | 2 |
| 24 | | Guide – Pipe | 1 |
| 25 | 92–4134 | Plug – Inspection | 1 |
| 26 | 92–4133 | Pin – Hold Down | 2 |
| * | 92–4144 | Assembly – Adjuster LH (Inc. Ref. #16–18) | 1 |
| * | 92–4145 | Assembly – Adjuster RH (Incl. Ref. #16–18) | 1 |
| * | 92–4140 | Assy. – Wheel Cylinder LH (Incl. Ref. #4–6 & 9–12) | |
| * | 92–4141 | Assy. – Wheel Cylinder RH (Incl. Ref. #4–6 & 9–12) | 1 |
| * | 92–4142 | Seal Kit (Incl. Ref. #10 & 12) | 1 |
| * | 93–7125 | Rear Brake Assembly – RH (Complete) | 1 |
| * | 93–7126 | Rear Brake Assembly – LH (Complete) | 1 |

*Not Illustrated

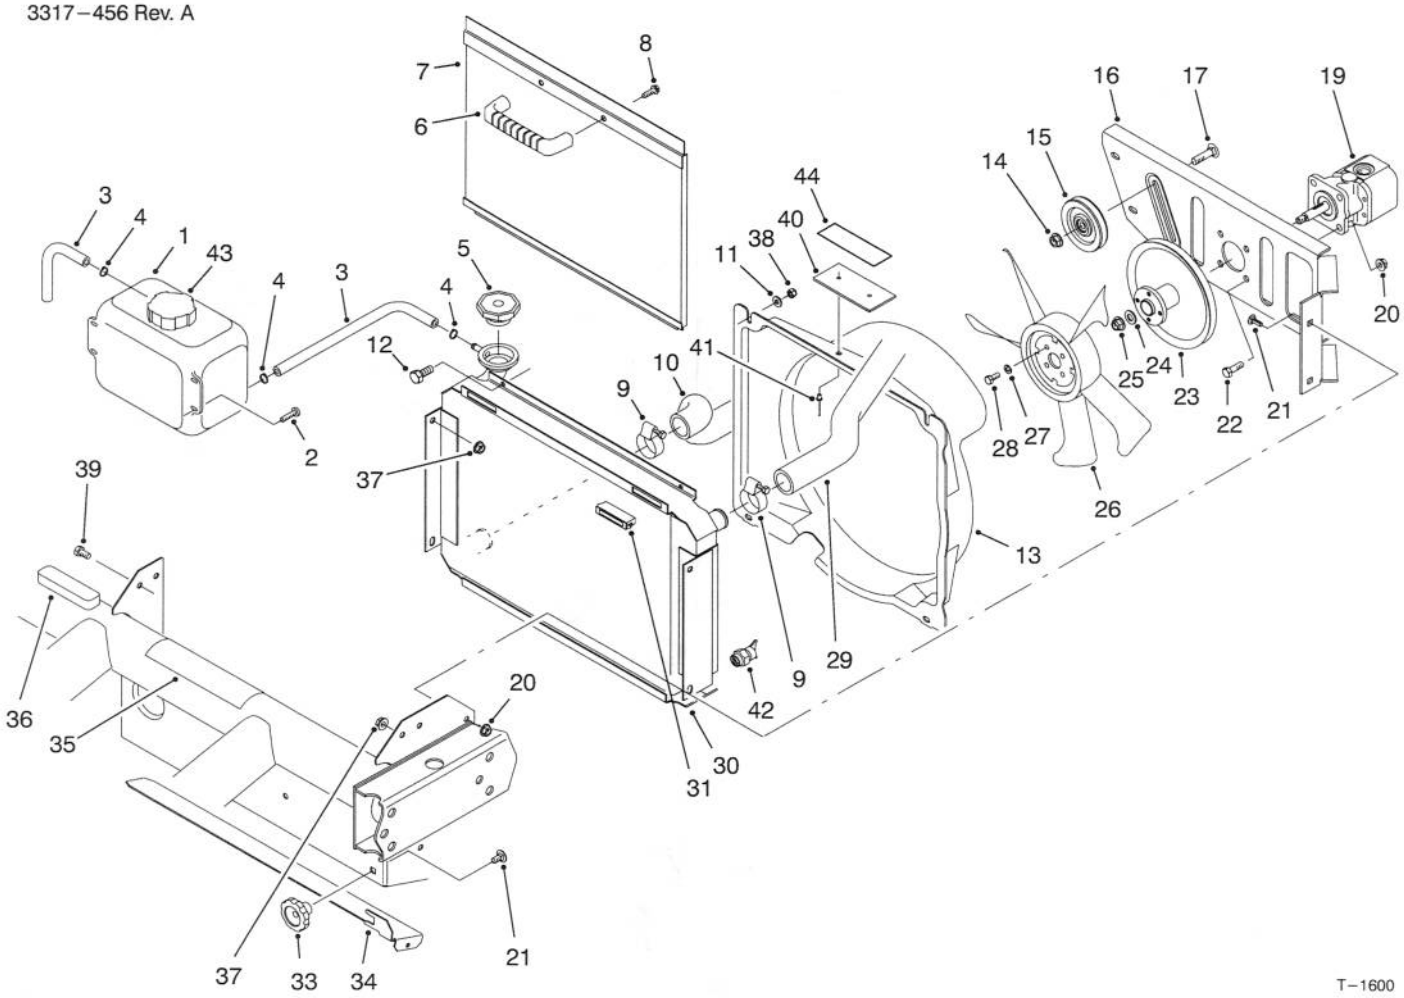



# RADIATOR & HYDRAULIC PUMP ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–3710 | Overflow Reservoir Assy. (Incl. Ref. #43) | 1 |
| 2 | 3250–20 | Screw – Round Hd. | 4 |
| 3 | 71–3381 | Tube – Overflow | 2 |
| 4 | 92–2379 | Clamp – Hose | 3 |
| 5 | 66–3240 | Cap – Radiator | 1 |
| 6 | 65–5100 | Handle | 1 |
| 7 | 93–7103 | Screen – Radiator | 1 |
| 8 | 46–8091 | Screw – Hex. Flange Hd. | 2 |
| 9 | 2412–34 | Clamp – Hose | 2 |
| 10 | 87–5050 | Hose – Radiator Lower | 1 |
| 11 | 3256–22 | Washer – Flat | 4 |
| 12 | 321–4 | Screw – Cap Hex. Hd. | 4 |
| 13 | 92–4198 | Fan Shroud Assembly (Incl. Ref. #40 & 41) | 1 |
| 14 | 3290–357 | Nut – Flange Lock | 1 |
| 15 | 63–8140 | Pulley | 1 |
| 16 | 93–7088 | Support – Fan | 1 |
| 17 | 3231–28 | Bolt – Carriage | 1 |
| 19 | 87–5700 | Hydraulic Pump Assembly | 1 |
| 20 | 3296–29 | Nut – Flange Lock | 8 |
| 21 | 3230–23 | Bolt – Carriage | 5 |
| 22 | 322–5 | Screw – Cap Hex. Hd. | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 23 | 87–3390 | Pulley | 1 |
| 24 | 3256–45 | Washer – Flat | 1 |
| 25 | 3296–5 | Nut – Flange Lock | 1 |
| 26 | 43–1911 | Fan | 1 |
| 27 | 3253–3 | Washer – Lock | 4 |
| 28 | 321–3 | Screw – Cap Hex. Hd. | 4 |
| 29 | 87–3430 | Hose – Radiator Upper | 1 |
| 30 | 93–7050 | Radiator Assembly (Incl. Ref. #42) | 1 |
| 31 | 58–4250 | Magnet | 2 |
| 33 | 19–4050 | Knob | 1 |
| 34 | 87–9300 | Door – Clean Out | 1 |
| ‡35 | 87–9420 | Decal – Caution (US) | 1 |
| ‡* | 93–9447 | Decal – Caution (CE) | 1 |
| 36 | 87–9810 | Foam – Overflow Tank | 1 |
| 37 | 32128–20 | Nut – Lock | 4 |
| 38 | 3296–42 | Nut – Lock | 4 |
| 39 | 322–2 | Screw – Cap Hex. Hd. | 4 |
| ‡40 | 76–8750 | Plate – Warning | 1 |
| 41 | 3290–271 | Rivet – Pop | 2 |
| 42 | 92–4111 | Petcock – Radiator | 1 |
| 43 | 87–7050 | Cap – Reservoir | 1 |
| ‡44 | 93–6681 | Decal – Warning (CE) | 1 |

‡For different language versions of this part, see International Decal Cross Reference.
*Not Illustrated

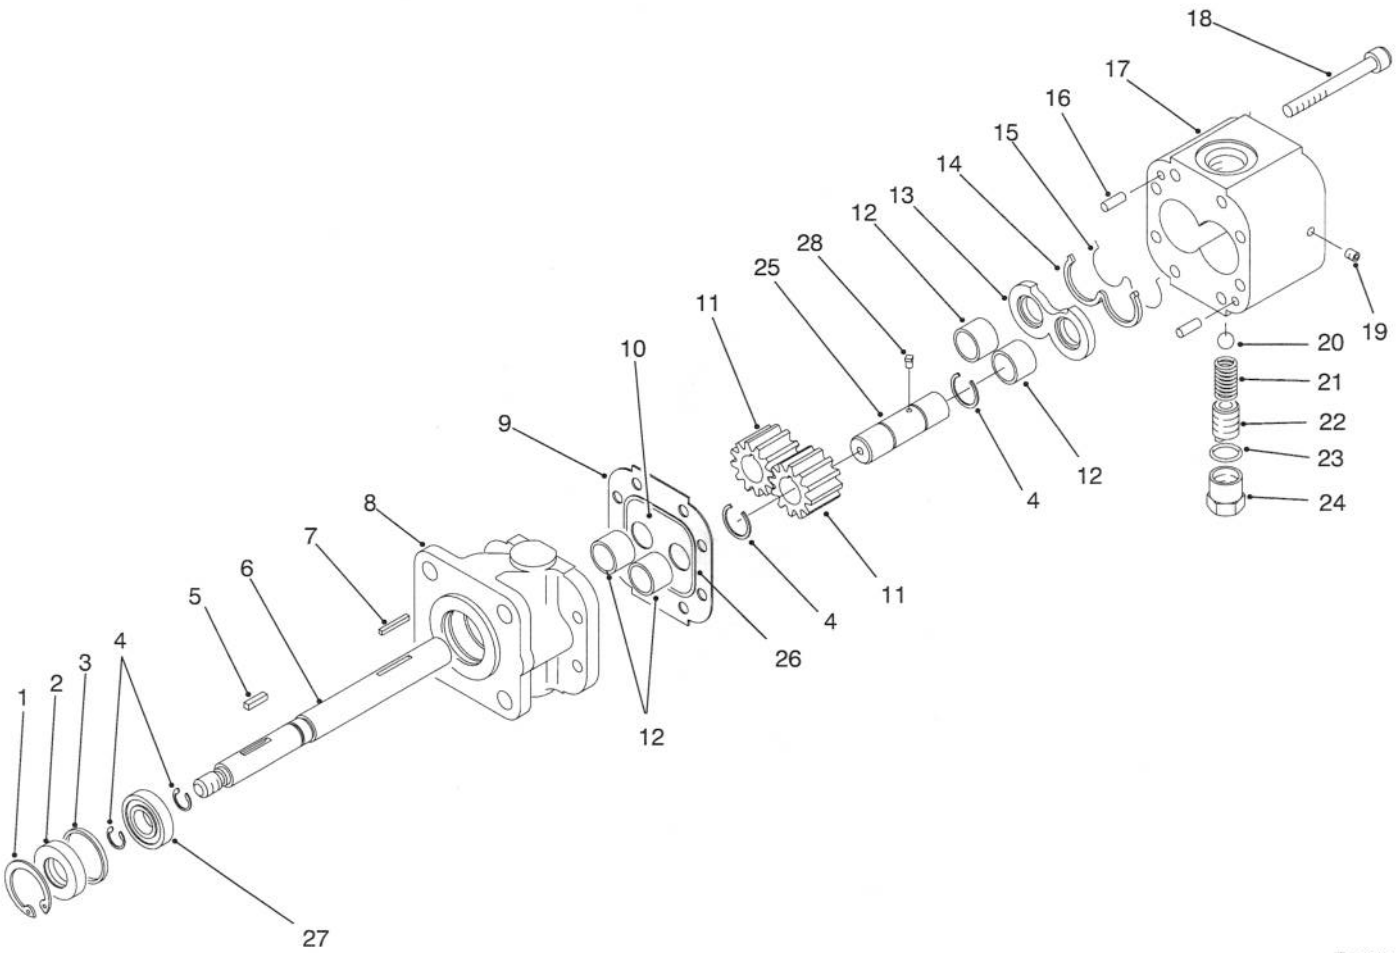



T–1601

# HYDRAULIC PUMP ASSEMBLY NO. 87–5700

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32151–41 | Ring – Retaining | 1 |
| 2 | 92–2195 | Seal – Oil | 1 |
| 3 | 92–2186 | Spacer | 1 |
| 4 | 92–2178 | Ring – Crescent | 4 |
| 5 | 92–2179 | Key – Square | 1 |
| 6 | 92–2189 | Shaft – Drive | 1 |
| 7 | 92–2177 | Pin – Shear | 1 |
| 8 | 92–2188 | Stator | 1 |
| 9 | 92–2182 | Plate – Seal | 1 |
| 10 | 92–2183 | Plate – Wear | 1 |
| 11 | 92–2175 | Gear | 2 |
| 12 | 92–2192 | Bearing | 4 |
| 13 | 92–2181 | Plate – Pressure | 1 |
| 14 | 92–2197 | Seal – Back Up | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 15 | 92–2196 | Seal – Pressure Plate | 1 |
| 16 | 92–2176 | Pin – Dowel | 2 |
| 17 | 92–2187 | Housing – Gear, End | 1 |
| 18 | 92–2173 | Screw – Cap Socket Head | 8 |
| 19 | 92–2185 | Plug | 1 |
| 20 | 92–2193 | Ball | 1 |
| 21 | 92–2194 | Spring | 1 |
| 22 | 92–2174 | Screw – Adjusting | 1 |
| 23 | 92–2180 | Gasket – Copper | 1 |
| 24 | 92–2184 | Cap – Relief Valve | 1 |
| 25 | 92–2190 | Shaft – Idler | 1 |
| 26 | 92–2198 | Seal | 1 |
| 27 | 92–2191 | Bearing | 1 |
| 28 | 92–2199 | Key – Ball | 1 |

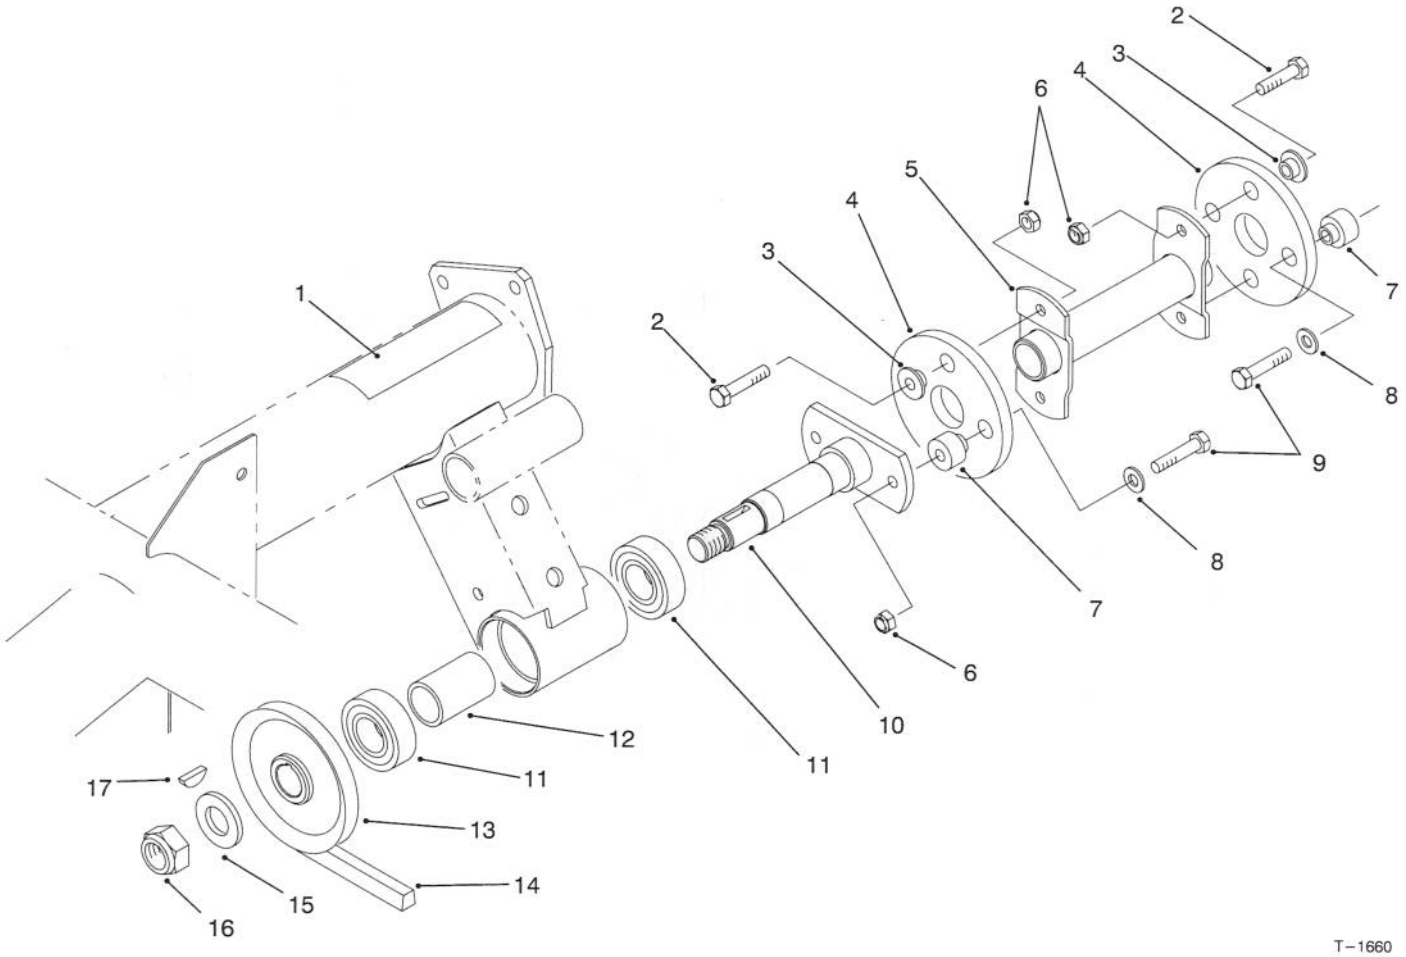



T–1660

# HYDRAULIC PUMP DRIVE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| ‡1 | 80–8040 | Decal – Caution (US) | 1 |
| ‡* | 93–7814 | Decal – Caution (CE) | 1 |
| 2 | 322–5 | Screw – Cap Hex. Hd. | 4 |
| 3 | 27–6600 | Spacer – Thin | 4 |
| 4 | 44–2230 | Disc – Rubber | 2 |
| 5 | 87–4440 | Driveshaft | 1 |
| 6 | 3296–29 | Nut – Lock | 6 |
| 7 | 27–6590 | Spacer – Thick | 4 |
| 8 | 3256–3 | Washer – Flat | 4 |
| 9 | 322–7 | Screw – Cap Hex. Hd. | 4 |
| 10 | 87–2720 | Driveshaft | 1 |
| 11 | 251–82 | Bearing – Ball | 2 |
| 12 | 87–2750 | Spacer – Bearing | 1 |
| 13 | 87–3370 | Pulley | 1 |
| 14 | 87–3210 | Belt – V | 1 |
| 15 | 3256–28 | Washer – Flat | 1 |
| 16 | 3296–15 | Nut – Lock | 1 |
| 17 | 3257–7 | Key – Woodruff | 1 |

‡For different language versions of this part, see International Decal Cross Reference.
*Not Illustrated

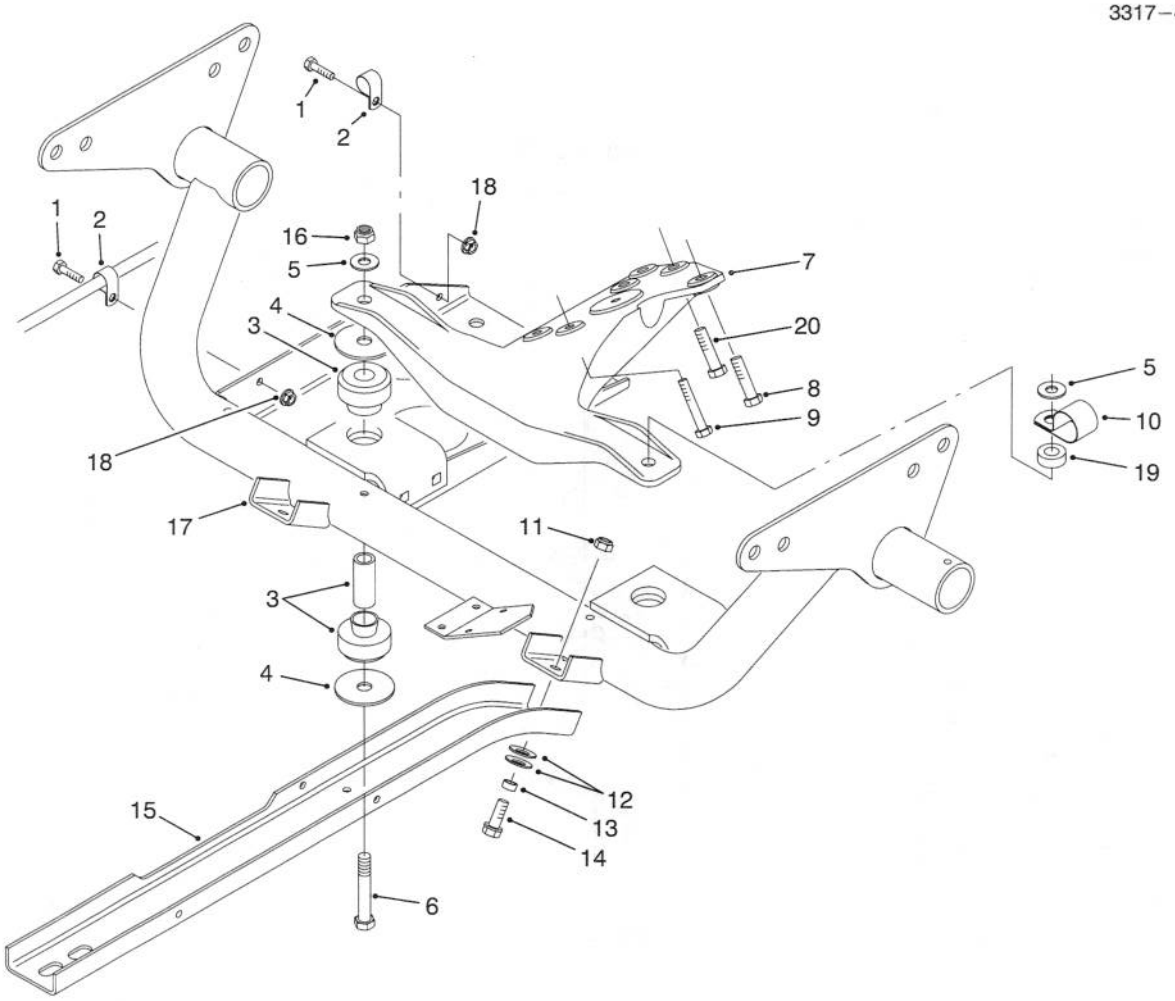



T–1603

# ENGINE FRAME ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 321–4 | Screw – Cap Hex. Hd. | 2 |
| 2 | 2412–89 | Clamp – R | 2 |
| 3 | 87–4970 | Engine Mount Assembly | 2 |
| 4 | 87–5100 | Washer – Flat | 4 |
| 5 | 3256–25 | Washer – Flat | 2 |
| 6 | 324–19 | Screw – Cap Hex. Hd. | 2 |
| 7 | 87–9830 | Mount – Engine | 1 |
| 8 | 87–3700 | Screw – Cap Hex. Hd. | 3 |
| 9 | 48–7560 | Screw – Cap Hex. Hd. | 3 |
| 10 | 2412–82 | Clamp – R | 1 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 3296–39 | Nut – Lock | 6 |
| 12 | 3290–413 | Washer – Belleville | 12 |
| 13 | 76–9100 | Spacer | 6 |
| 14 | 3234–11 | Screw – Cap Hex. Hd. | 6 |
| 15 | 87–4730 | Guard – Belly | 2 |
| 16 | 3296–48 | Nut – Lock | 2 |
| 17 | 93–7095 | Frame – Engine | 1 |
| 18 | 32128–33 | Nut – Flange | 2 |
| 19 | 59–2290 | Spacer | 1 |
| 20 | 43–0090 | Screw – Cap Hex. Hd. | 1 |

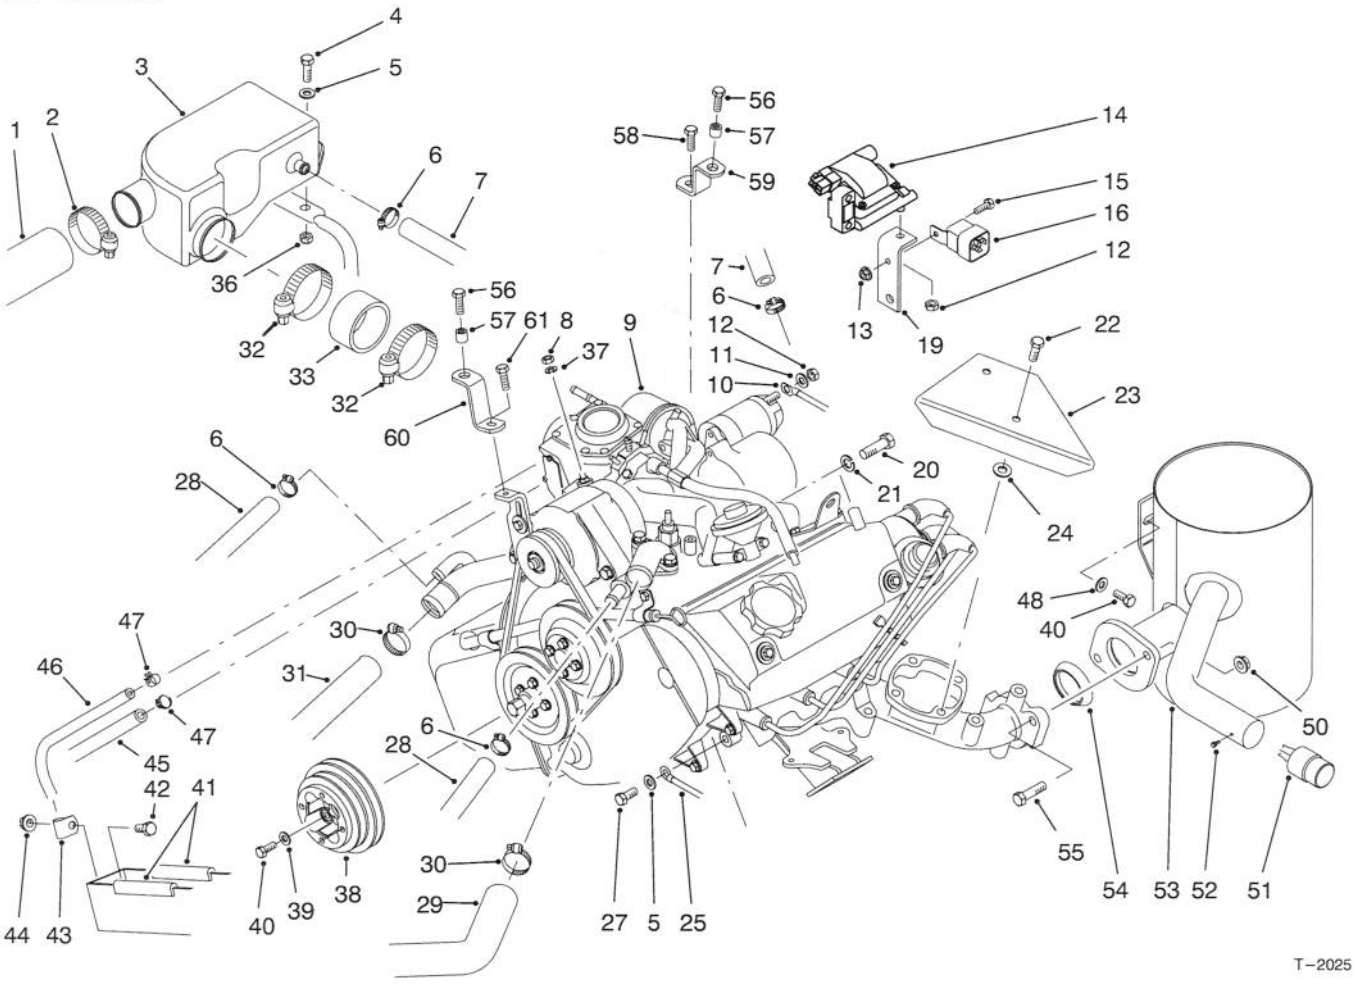


# ENGINE INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–3420 | Hose – Air Cleaner | 1 |
| 2 | 2412–92 | Clamp – Hose | 1 |
| 3 | 87–1680 | Chamber – Air | 1 |
| 4 | 322–6 | Screw – Cap Hex. Hd. | 2 |
| 5 | 3256–23 | Washer – Flat | 2 |
| 6 | 2412–119 | Clamp – Hose | 3 |
| 7 | 87–3740 | Hose – Breather | 1 |
| 8 | 48–7890 | Nut – Hex. | 1 |
| 9 | 87–1960 | Engine Assembly (Incl. Ref. #11, 12 & 14) | 1 |
| 10 | 87–3070 | Cable – Positive | 1 |
| 11 | 3254–2 | Washer – Lock | 1 |
| 12 | 42–9580 | Nut – Hex. | 3 |
| 13 | 32128–33 | Nut – Flange | 1 |
| 14 | 92–2027 | Coil – Ignition | 1 |
| 15 | 321–4 | Screw – Cap Hex. Hd. | 1 |
| 16 | 70–1480 | Relay | 1 |
| 19 | 87–2760 | Bracket – Ignition Coil | 1 |
| 20 | 48–9480 | Screw – Cap Hex. Hd. | 2 |
| 21 | 3253–6 | Washer – Lock | 2 |
| 22 | 57–6380 | Screw – Cap Hex. Hd. | 2 |
| 23 | 87–3620 | Shield – Heat | 1 |
| 24 | 52–2480 | Spacer | 2 |
| 25 | 87–3080 | Wire – Ground | 1 |
| 27 | 66–3160 | Screw – Cap Hex. Hd. | 1 |
| 28 | 87–3730 | Hose – Coolant | 2 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 29 | 87–3430 | Hose – Radiator Upper | 1 |
| 30 | 2412–34 | Clamp – Hose | 2 |
| 31 | 87–5050 | Hose – Radiator Lower | 1 |
| 32 | 2412–130 | Clamp – Hose | 2 |
| 33 | 87–3500 | Hose – Air Cleaner | 1 |
| 36 | 3296–29 | Nut – Lock | 2 |
| 37 | 3253–3 | Washer – Lock | 1 |
| 38 | 87–5070 | Pulley – Crankshaft | 1 |
| 39 | 65–5390 | Washer – Flat | 4 |
| 40 | 66–3160 | Screw – Cap Hex. Hd. | 4 |
| 41 | 43–4300 | Trim | 2 |
| 42 | 322–2 | Screw – Cap Hex. Hd. | 1 |
| 43 | 2412–10 | Clamp – R | 1 |
| 44 | 32128–20 | Nut – Flange Lock | 1 |
| 45 | 63–6940 | Hose – Fuel | 1 |
| 46 | 75–4701 | Hose – Fuel | 1 |
| 47 | 2412–108 | Clamp – Hose | 2 |
| 48 | 87–8640 | Washer – Flat | 1 |
| 49 | 66–3160 | Screw – Cap Hex. Hd. | 1 |
| 50 | 3290–357 | Nut – Flange Lock | 2 |
| 51 | 75–6880 | Spark Arrestor (Optional) (Incl. Ref. #52) | 1 |
| 52 | 32144–42 | Screw – Spark Arrestor | 1 |
| 53 | 87–1510 | Muffler & Tailpipe | 1 |
| 54 | 92–2044 | Gasket – Exhaust | 1 |
| 55 | 323–29 | Screw – Cap Hex. Hd. | 2 |

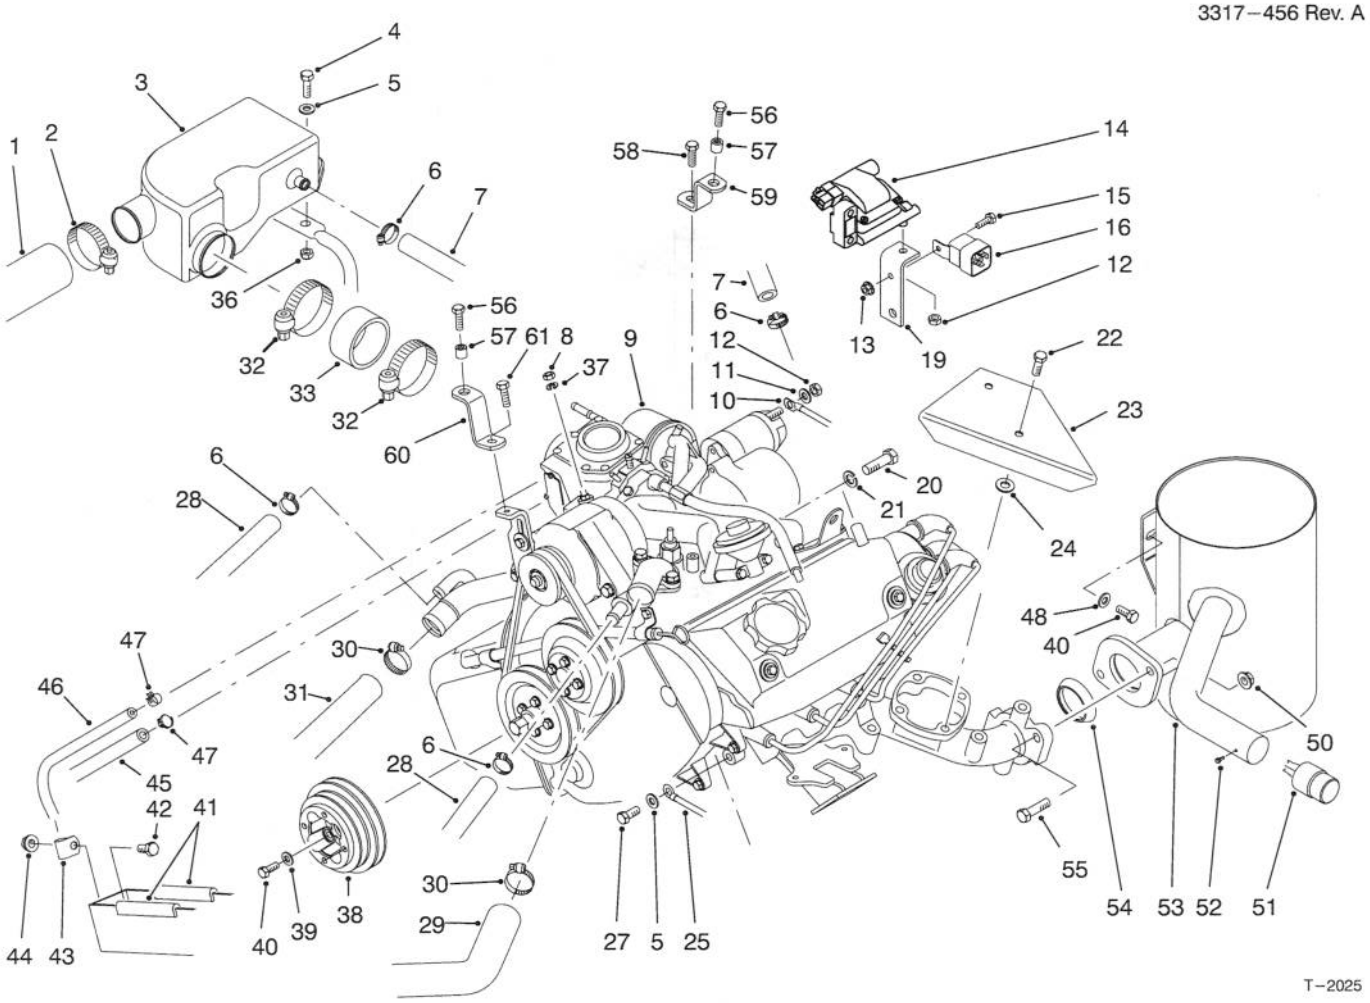


# ENGINE INSTALLATION ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 56 | 3234–5 | Screw – Cap Hex. Hd. (CE) | 2 |
| 57 | 32148–8 | Insert – Threaded (CE) | 2 |
| 58 | 48–7620 | Screw – Cap Hex. Hd. (CE) | 1 |
| 59 | 93–8953 | Front Bracket Assy. LH (CE) (Incl. Ref. #57) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 60 | 93–8954 | Front Bracket Assy. RH (CE) (Incl. Ref. #57) | 1 |
| 61 | 42–9230 | Screw – Cap Hex. Hd. (CE) | 1 |

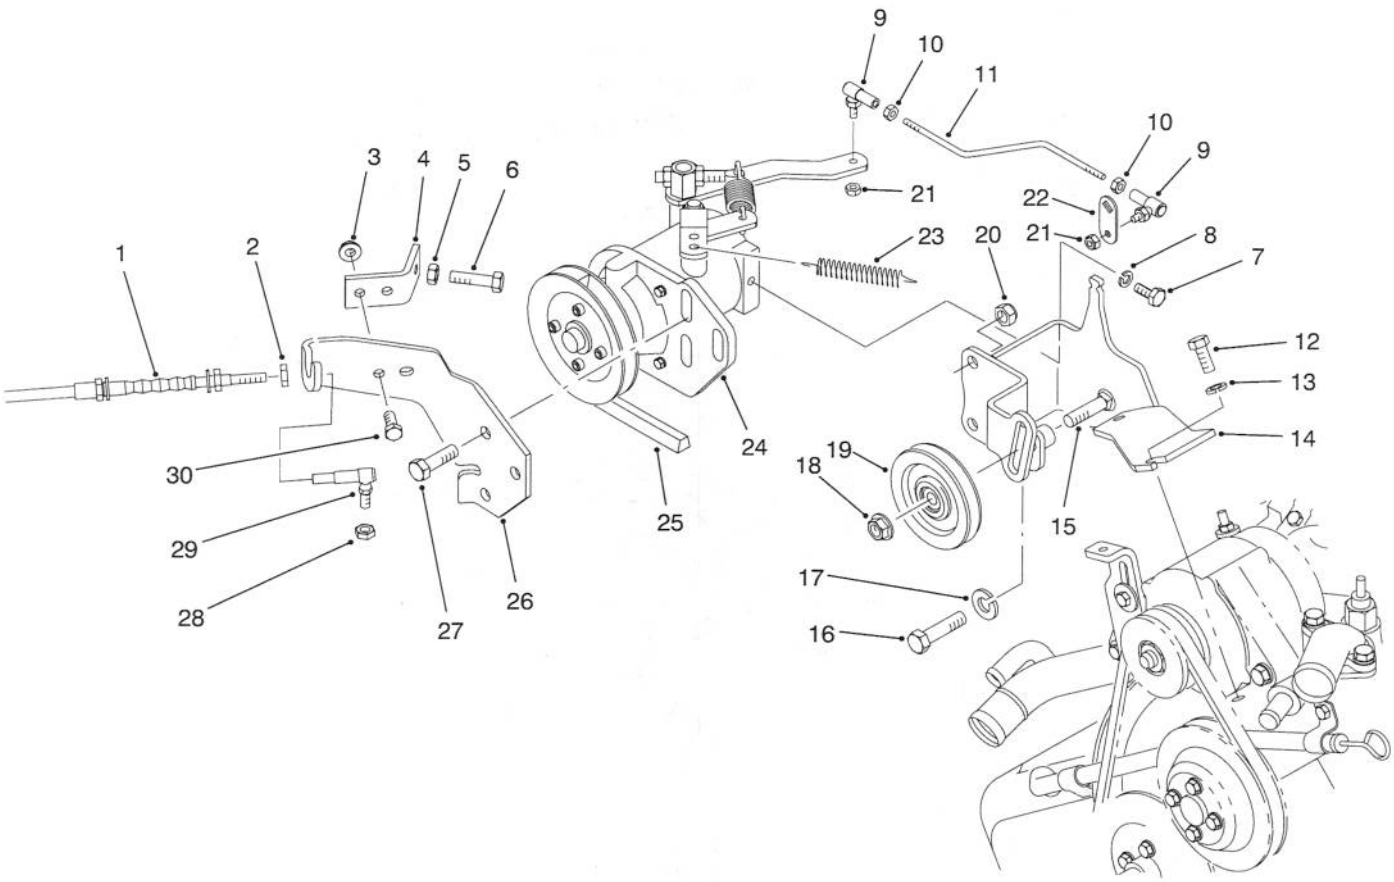



T–1605

# GOVERNOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–8600 | Accelerator Cable Assembly (Incl. Ref. #2) | 1 |
| 2 | 3220–1 | Nut – Jam | 1 |
| 3 | 32128–33 | Nut – Flange | 2 |
| 4 | 87–4770 | Bracket – High Idle Stop | 1 |
| 5 | 3220–2 | Nut – Jam | 1 |
| 6 | 3210–9 | Screw – Cap Hex. Hd. | 1 |
| 7 | 321–3 | Screw – Cap Hex. Hd. | 1 |
| 8 | 3253–3 | Washer – Lock | 1 |
| 9 | 21–5640 | Joint – Ball | 2 |
| 10 | 3219–14 | Nut – Jam | 2 |
| 11 | 87–4210 | Rod – Linkage | 1 |
| 12 | 66–3160 | Screw – Cap Hex. Hd. | 2 |
| 13 | 3253–4 | Washer – Lock | 2 |
| 14 | 87–4750 | Bracket – Governor | 1 |
| 15 | 3231–26 | Bolt – Carriage | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 16 | 87–3700 | Screw – Cap Hex. Hd. | 1 |
| 17 | 3253–22 | Washer – Lock | 1 |
| 18 | 3290–357 | Nut – Flange | 1 |
| 19 | 63–8140 | Pulley | 1 |
| 20 | 3296–39 | Nut – Lock | 3 |
| 21 | 3296–27 | Nut – Lock | 2 |
| 22 | 87–2400 | Lever – Throttle | 1 |
| 23 | 87–4020 | Spring – Extension | 1 |
| 24 | 87–8720 | Governor Assembly | 1 |
| 25 | 87–3200 | Belt – V | 1 |
| 26 | 87–3900 | Bracket – Cable | 1 |
| 27 | 323–7 | Screw – Cap Hex. Hd. | 3 |
| 28 | 3296–3 | Nut – Lock | 1 |
| 29 | 18–1720 | Joint – Ball | 1 |
| 30 | 321–4 | Screw – Cap Hex. Hd. | 2 |

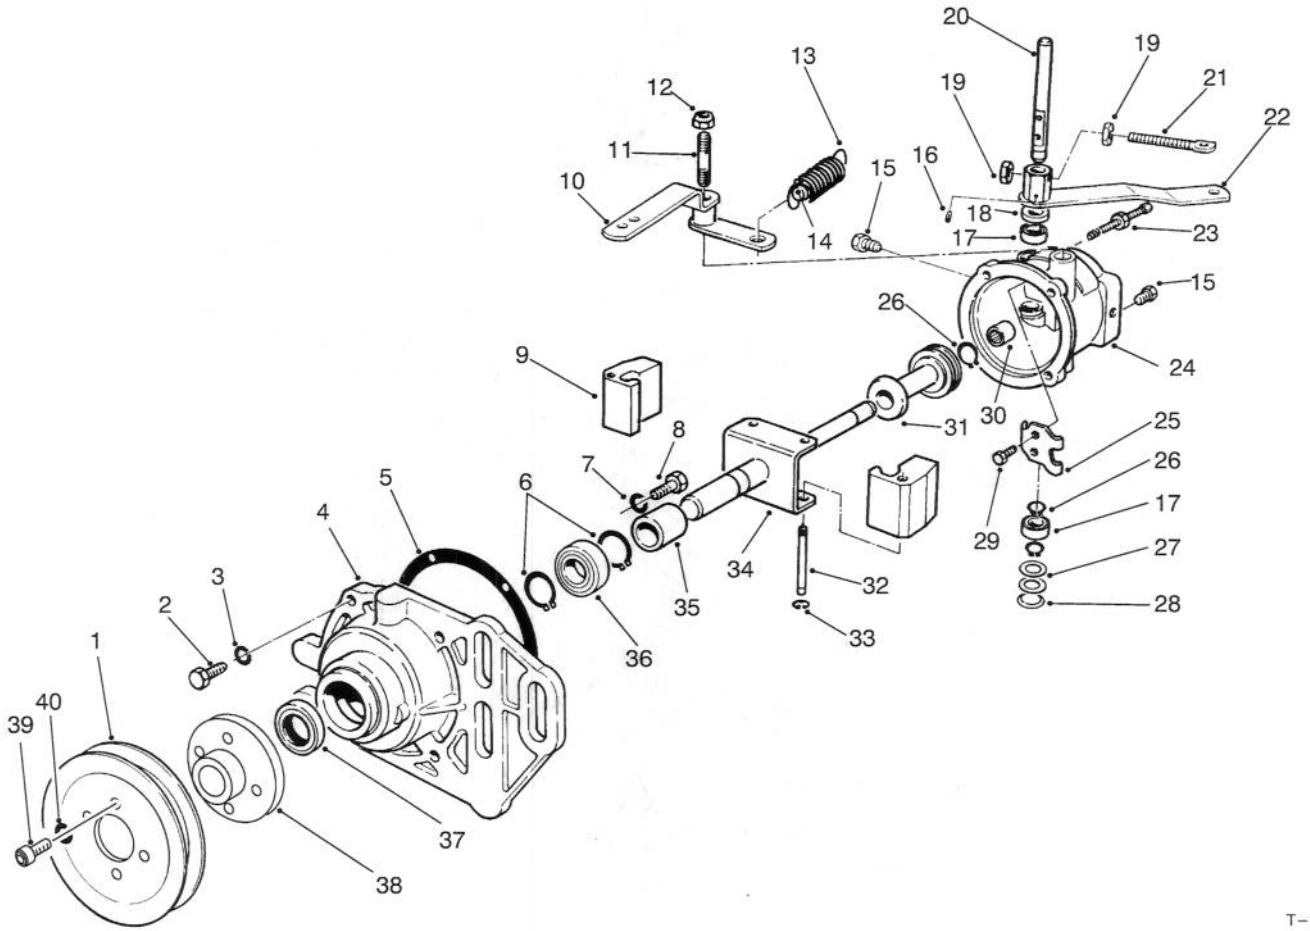



T–1606

# GOVERNOR

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–8830 | Pulley | 1 |
| 2 | 18–5620 | Screw | 4 |
| 3 | 18–5630 | Washer – Lock | 4 |
| 4 | 87–6560 | Cover | 1 |
| 5 | 18–5790 | Gasket | 1 |
| 6 | 18–5640 | Ring – Retaining | 2 |
| 7 | 18–5770 | Washer – Lock | 2 |
| 8 | 32113–14 | Screw | 2 |
| 9 | 70–2150 | Flyweight | 2 |
| 10 | 87–6590 | Assy. Lever & Fitting | 1 |
| 11 | 87–6580 | Stud – Lever Pivot | 1 |
| 12 | 3296–5 | Nut – Lock | 1 |
| 13 | 87–6490 | Spring | 1 |
| 14 | 87–6550 | Pin – Forced Idle | 1 |
| 15 | 285–17 | Plug – Pipe | 2 |
| 16 | 18–5750 | Pin | 1 |
| 17 | 18–5450 | Bearing | 2 |
| 18 | 71–4780 | Seal – Oil, Rocker Shaft | 1 |
| 19 | 3219–2 | Nut | 2 |
| 20 | 72–5890 | Shaft – Rocker | 1 |
| 21 | 87–6540 | Bolt – Eye | 1 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 22 | 87–6530 | Assembly – Throttle Lever | 1 |
| 23 | 72–5910 | Assembly – Bumper Screw | 1 |
| 24 | 87–6520 | Body | 1 |
| 25 | 18–5520 | Lever – Rocker | 1 |
| 26 | 18–5540 | Retainer – Sleeve Stop | 3 |
| 27 | 18–5440 | Spacer | 2 |
| 28 | 18–5430 | Plug – Expansion | 1 |
| 29 | 18–5530 | Screw & Lockwasher | 2 |
| 30 | 72–5940 | Bearing – Needle | 1 |
| 31 | 70–2100 | Assembly – Thrust Sleeve & Bearing | 1 |
| 32 | 18–5660 | Pin – Pivot, Flyweight | 2 |
| 33 | 18–5670 | Retainer – Pivot Pin | 2 |
| 34 | 87–6510 | Assembly – Shaft & Yoke | 1 |
| 35 | 70–2120 | Spacer | 1 |
| 36 | 70–2140 | Bearing – Front | 1 |
| 37 | 18–5580 | Seal – Oil, Front | 1 |
| 38 | 87–8820 | Hub – Pulley | 1 |
| 39 | 3274–52 | Screw – Hex. Socket Hd. | 4 |
| 40 | 3253–18 | Washer – Lock | 4 |

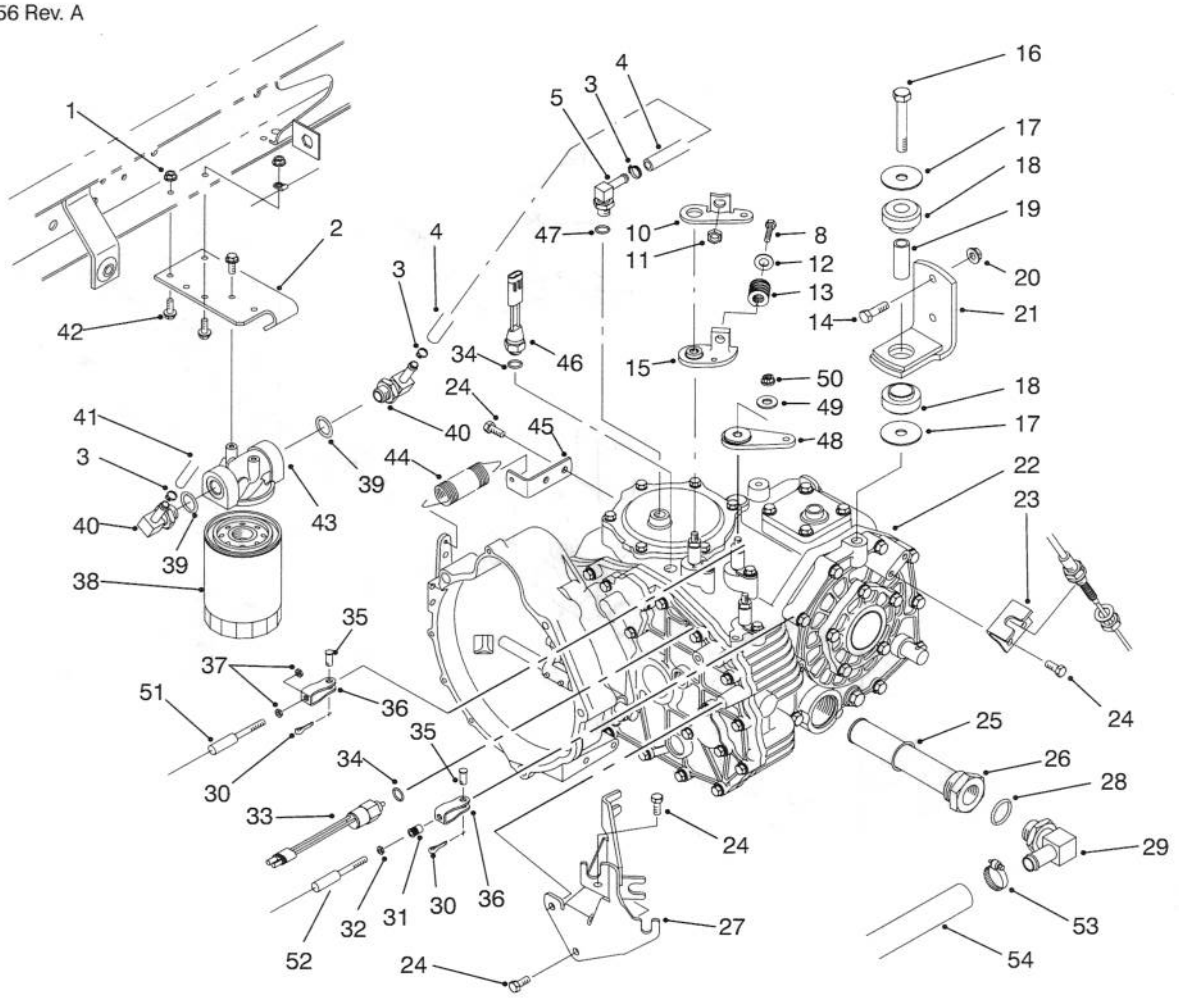


# TRANSAXLE INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32128–33 | Nut – Flange Lock | 1 |
| 2 | 87–7040 | Bracket – Oil Filter | 1 |
| 3 | 2412–36 | Clamp – Hose | 3 |
| 4 | 87–5730 | Hose – Hydraulic | 1 |
| 5 | 354–135 | Fitting – Hydraulic 90° (Incl. Ref. #47) | 1 |
| 8 | 323–10 | Screw – Cap Hex. Hd. | 1 |
| 10 | 87–8250 | Plate – Shift Arm | 1 |
| 11 | 32128–21 | Nut – Lock | 1 |
| 12 | 3256–4 | Washer – Flat | 1 |
| 13 | 87–6910 | Spring – Compression | 1 |
| 14 | 323–7 | Screw – Cap Hex. Hd. | 4 |
| 15 | 87–7970 | Arm – Shift | 1 |
| 16 | 3215–1 | Screw – Cap Hex. Hd. | 1 |
| 17 | 87–5100 | Washer | 4 |
| 18 | 87–4970 | Transaxle Mount Assembly (Incl. Ref. #19) | 2 |
| 19 | | Spacer – Mount | 2 |
| 20 | 3296–39 | Nut – Flange Lock | 4 |
| 21 | 87–5800 | Bracket – Mount | 2 |
| 22 | 87–9250 | Transaxle Assembly | 1 |
| 23 | 87–4470 | Bracket | 1 |
| 24 | 66–3160 | Screw – Cap Hex. Hd. | 7 |
| 25 | 237–123 | Seal – O–Ring | 1 |
| 26 | 87–3990 | Oil Strainer Assembly (Incl. Ref. #25) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 27 | 87–4820 | Bracket – Cable | 1 |
| 28 | 237–81 | Seal – O–Ring | 1 |
| 29 | 353–987 | Fitting – Hydraulic 90° (Incl. Ref. #28) | 1 |
| 30 | 3272–6 | Pin – Cotter | 3 |
| 31 | 32148–15 | Nut – Clinch | 1 |
| 32 | 3219–14 | Nut – Hex. | 1 |
| 33 | 87–6710 | Switch – Supervisor | 1 |
| 34 | 237–30 | Seal – O–Ring | 2 |
| 35 | 283–62 | Pin – Clevis | 3 |
| 36 | 87–2310 | Clevis – Cable | 3 |
| 37 | 3220–1 | Nut – Jam | 4 |
| 38 | 54–0110 | Element – Oil Filter | 1 |
| 39 | 237–79 | Seal – O–Ring | 2 |
| 40 | 354–134 | Fitting – Hydraulic 90° (Incl. Ref. #39) | 2 |
| 41 | 87–4920 | Hose – Hydraulic | 1 |
| 42 | 3234–4 | Screw – Hex. Flange Hd. | 4 |
| 43 | 87–8780 | Head – Oil Filter | 1 |
| 44 | 68–9950 | Spring – Extension | 1 |
| 45 | 87–7170 | Bracket – Clutch Spring | 1 |
| 46 | 72–4310 | Switch – Ball N.C. | 1 |
| 47 | 237–42 | Seal – O–Ring | 1 |
| 48 | 87–7960 | Lever – Shift Arm | 2 |
| 49 | 80–6990 | Washer – Flat | 3 |
| 50 | 48–9520 | Nut – Lock | 3 |

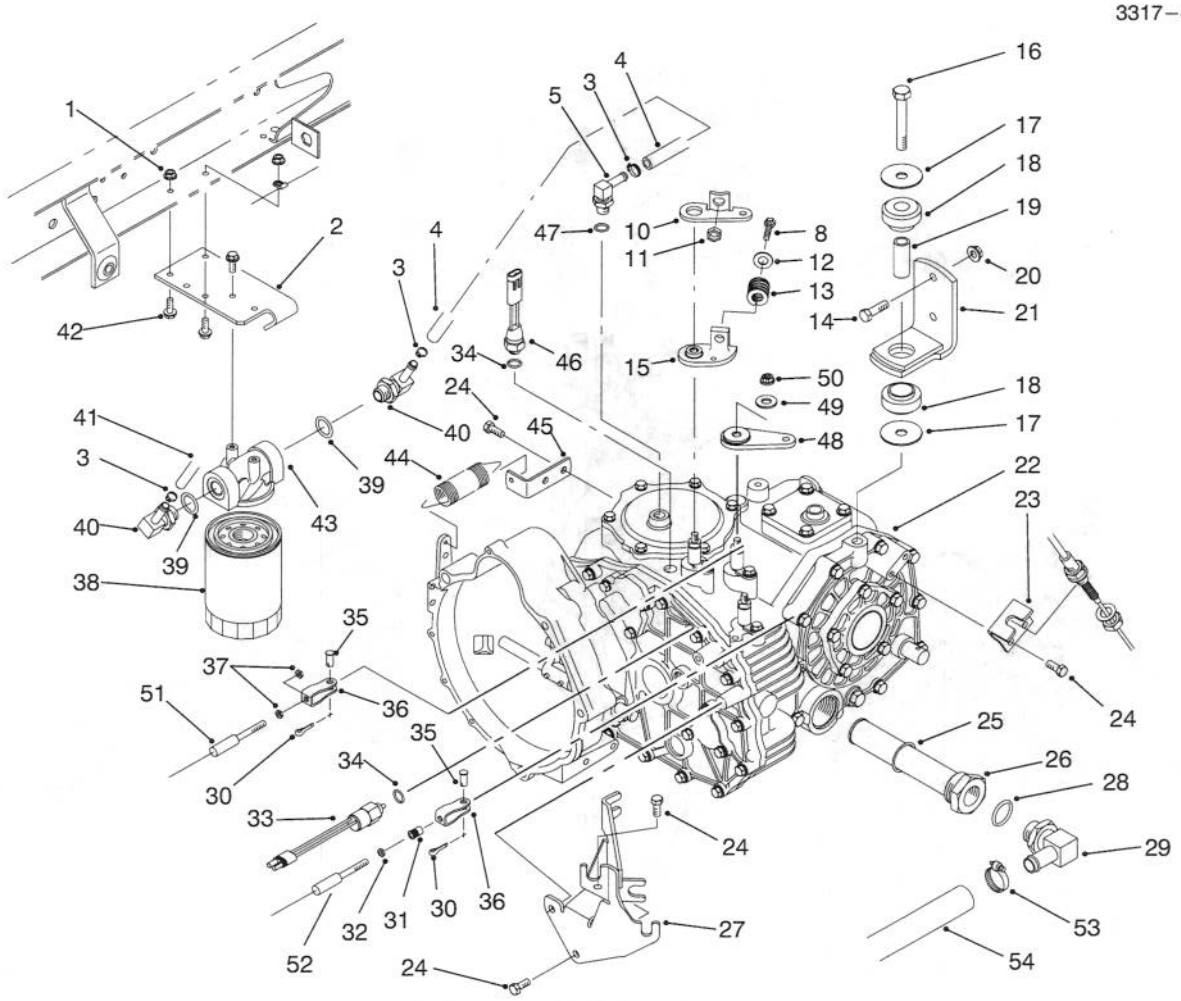



T–1607

# TRANSAXLE INSTALLATION ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 51 | 87–4260 | Shift Cable Assembly (Incl. Ref. #37) | 2 |
| 52 | 87–4420 | Hi–Lo Cable Assembly (Incl. Ref. #32) | 1 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 53 | 2412–34 | Clamp – Hose | 1 |
| 54 | 87–3670 | Hose – Hydraulic | 1 |

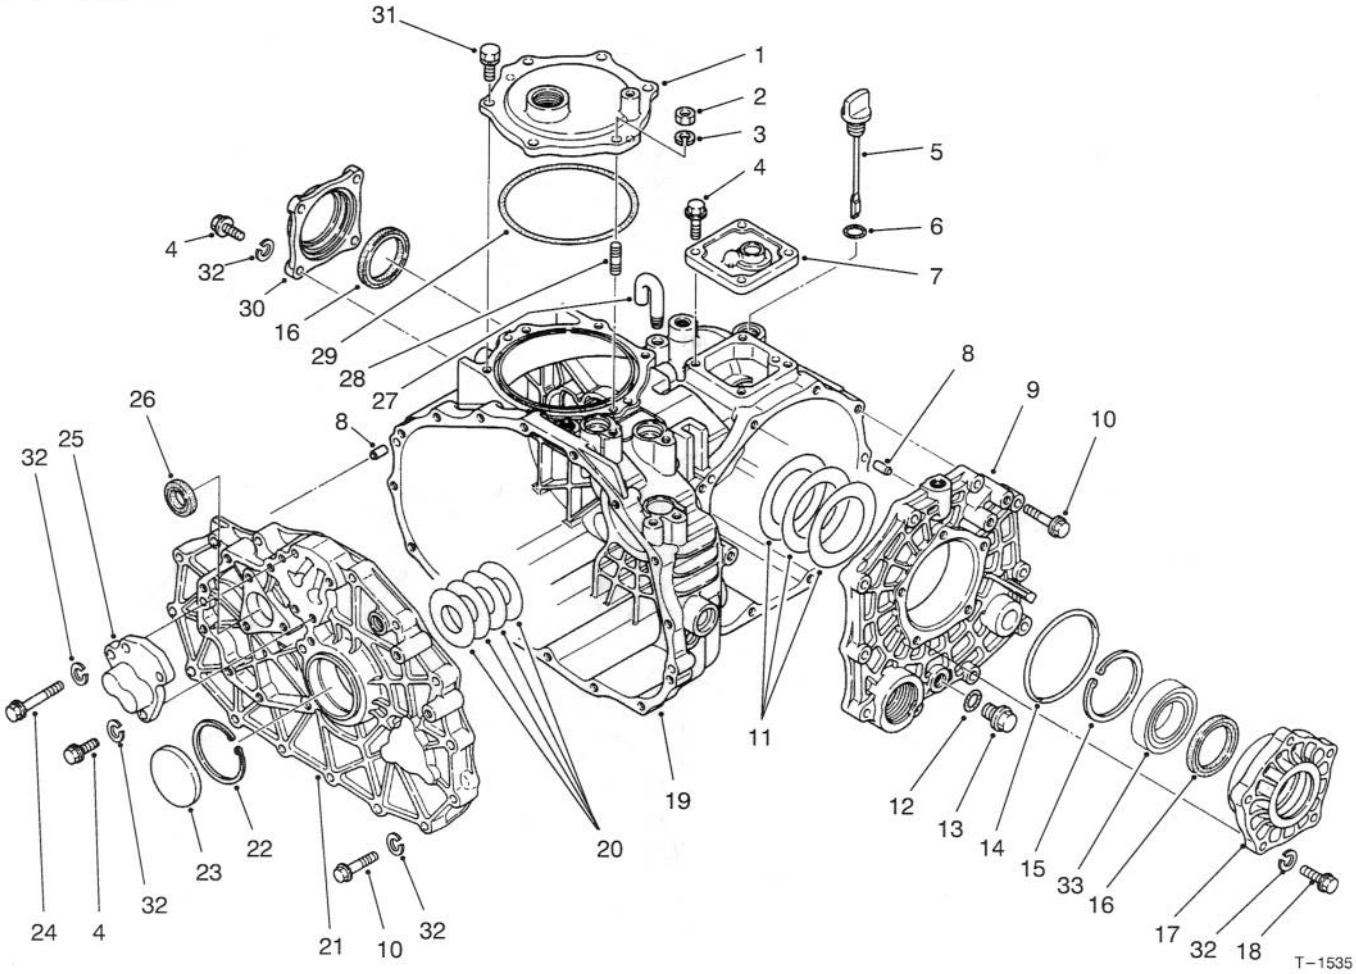


# TRANSAXLE CASE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–0656 | Cover – P.T.O. | 1 |
| 2 | 48–7930 | Nut – Hex. | 1 |
| 3 | 92–0762 | Washer – Lock | 1 |
| 4 | 60–6750 | Screw – Cap Hex. Hd. | 11 |
| 5 | 92–0662 | Cap – Oil | 1 |
| 6 | 92–0788 | O–Ring | 1 |
| 7 | 92–0652 | Cover – Upper | 1 |
| 8 | 92–0765 | Pin – Alignment | 4 |
| 9 | 92–0653 | Cover – Side | 1 |
| 10 | 42–9530 | Screw – Cap Hex. Hd. | 25 |
| 11 | 92–0809 | Shim Set | 1 |
| 12 | | O–Ring | 1 |
| 13 | 92–0773 | Drain Plug Assembly (Incl. Ref. #12) | 1 |
| 14 | 92–0789 | O–Ring | 1 |
| 15 | 92–0760 | Ring – Retaining | 1 |
| 16 | 92–0793 | Seal – Oil | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 92–0654 | Carrier – Differential | 1 |
| 18 | 48–7730 | Screw – Cap Hex. Hd. | 5 |
| 19 | 92–0651 | Case – Transaxle | 1 |
| 20 | 92–0808 | Shim Set | 1 |
| 21 | 92–0657 | Plate – Center | 1 |
| 22 | 92–0759 | Ring – Retaining | 1 |
| 23 | 92–0807 | Cap – Sealing | 1 |
| 24 | 48–7560 | Screw – Cap Hex. Hd. | 1 |
| 25 | 92–0706 | Cap – Fork Shaft | 1 |
| 26 | 92–0791 | Seal – Oil | 1 |
| 27 | 92–0743 | Breather – Air | 1 |
| 28 | 92–0804 | Stud | 1 |
| 29 | 92–0790 | O–Ring | 1 |
| 30 | 92–0655 | Cover – Seal | 1 |
| 31 | 92–0796 | Screw – Cap Hex. Hd. | 5 |
| 32 | 42–9850 | Washer – Lock | 42 |
| 33 | 92–0775 | Bearing – Ball | 2 |

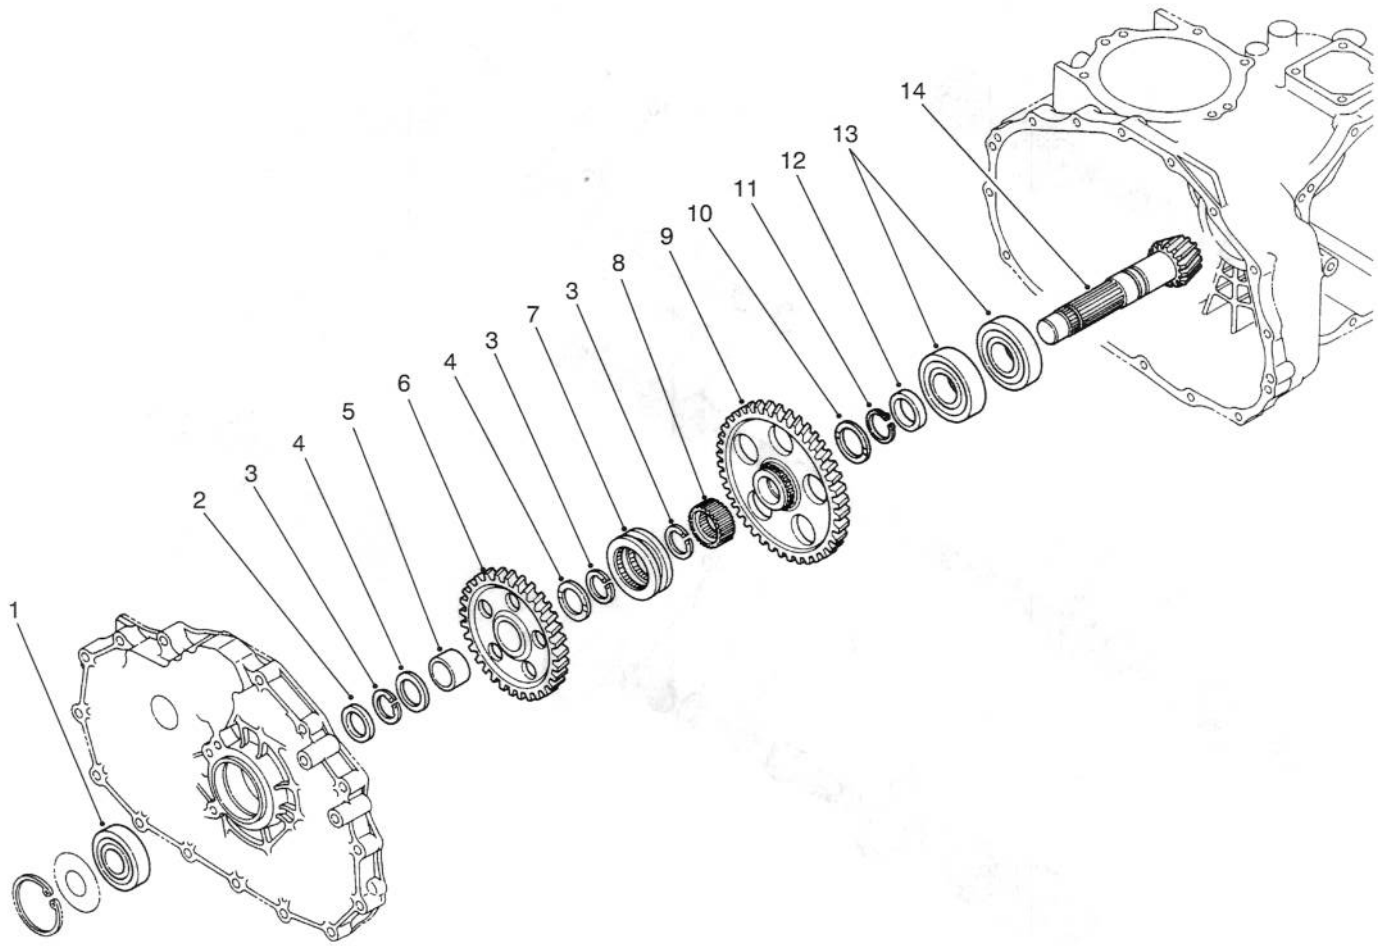



T–1536

# COUNTERSHAFT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–0712 | Bearing – Ball | 1 |
| 2 | 92–0716 | Collar | 1 |
| 3 | 92–0764 | Ring – Retaining | 3 |
| 4 | 92–0711 | Washer – Thrust | 2 |
| 5 | 92–0783 | Sleeve – Inner | 1 |
| 6 | 92–0715 | Gear – 49T | 1 |
| 7 | 92–0718 | Shifter – Hi–Lo | 1 |
| 8 | 92–0719 | Collar – Spline | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | 92–0717 | Gear – 71T | 1 |
| 10 | 92–0741 | Washer – Thrust | 1 |
| 11 | 92–0755 | Ring – Retaining | 1 |
| 12 | 92–0713 | Collar | 1 |
| 13 | 92–0714 | Bearing – Ball | 2 |
| 14 | 92–0710 | Counter Shaft Assembly (Incl. Ring Gear) | 1 |

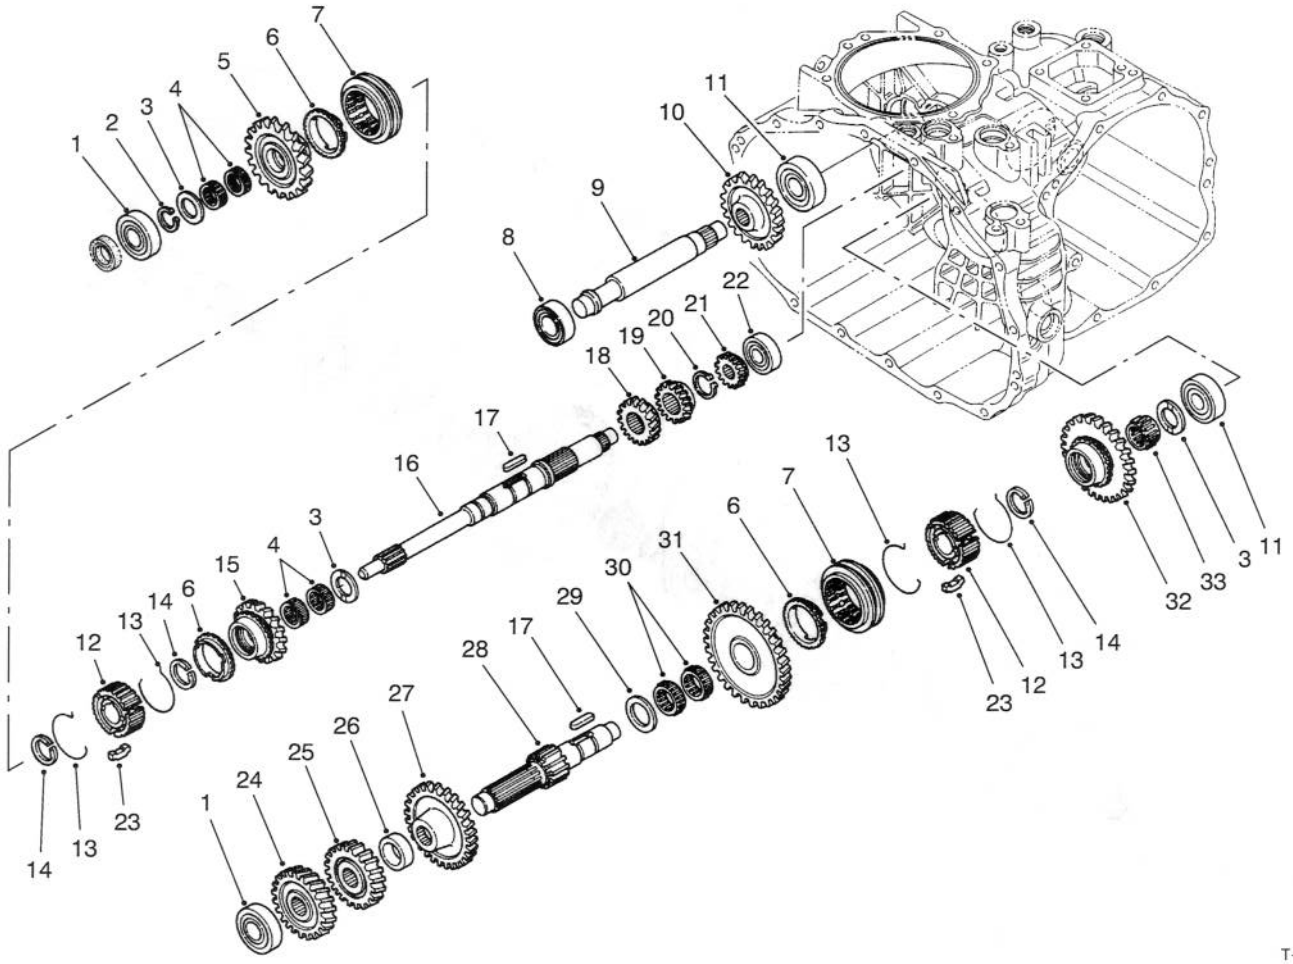



T–1533

# TRANSAXLE GEAR SHAFTS ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 251–8 | Bearing – Ball | 2 |
| 2 | 92–0753 | Ring – Retaining | 1 |
| 3 | 92–0740 | Washer – Thrust | 3 |
| 4 | 92–0781 | Bearing – Needle | 4 |
| 5 | 92–0820 | Gear – 27T | 1 |
| 6 | 92–0667 | Ring – Synchro | 3 |
| 7 | 92–0668 | Shifter – Synchro | 2 |
| 8 | 251–346 | Bearing – Ball | 1 |
| 9 | 92–0824 | Shaft – Reverse Idler | 1 |
| 10 | 92–0684 | Gear – 33T | 1 |
| 11 | 92–0778 | Bearing – Ball | 2 |
| 12 | 92–0664 | Hub – Synchro | 2 |
| 13 | 92–0666 | Spring – Synchro | 4 |
| 14 | 92–0763 | Ring – Retaining | 3 |
| 15 | 92–0821 | Gear – 24T | 1 |
| 16 | 92–0663 | Shaft – Main | 1 |
| 17 | 92–0772 | Key | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 18 | 92–0687 | Gear – 16T | 1 |
| 19 | 92–0672 | Gear – 18T | 1 |
| 20 | 92–0754 | Ring – Retaining | 1 |
| 21 | 92–0673 | Gear – 14T | 1 |
| 22 | 92–0650 | Bearing – Ball | 1 |
| 23 | 92–0665 | Key – Synchro | 6 |
| 24 | 92–0822 | Gear – 28T | 1 |
| 25 | 92–0679 | Gear – 23T | 1 |
| 26 | 92–0680 | Collar | 1 |
| 27 | 92–0823 | Gear – 43T | 1 |
| 28 | 92–0674 | Shaft – Reduction | 1 |
| 29 | 92–0682 | Washer – Thrust | 1 |
| 30 | 92–0681 | Bearing – Needle | 2 |
| 31 | 92–0677 | Gear – 49T | 1 |
| 32 | 92–0819 | Gear – 40T | 1 |
| 33 | 92–0782 | Bearing – Needle | 1 |

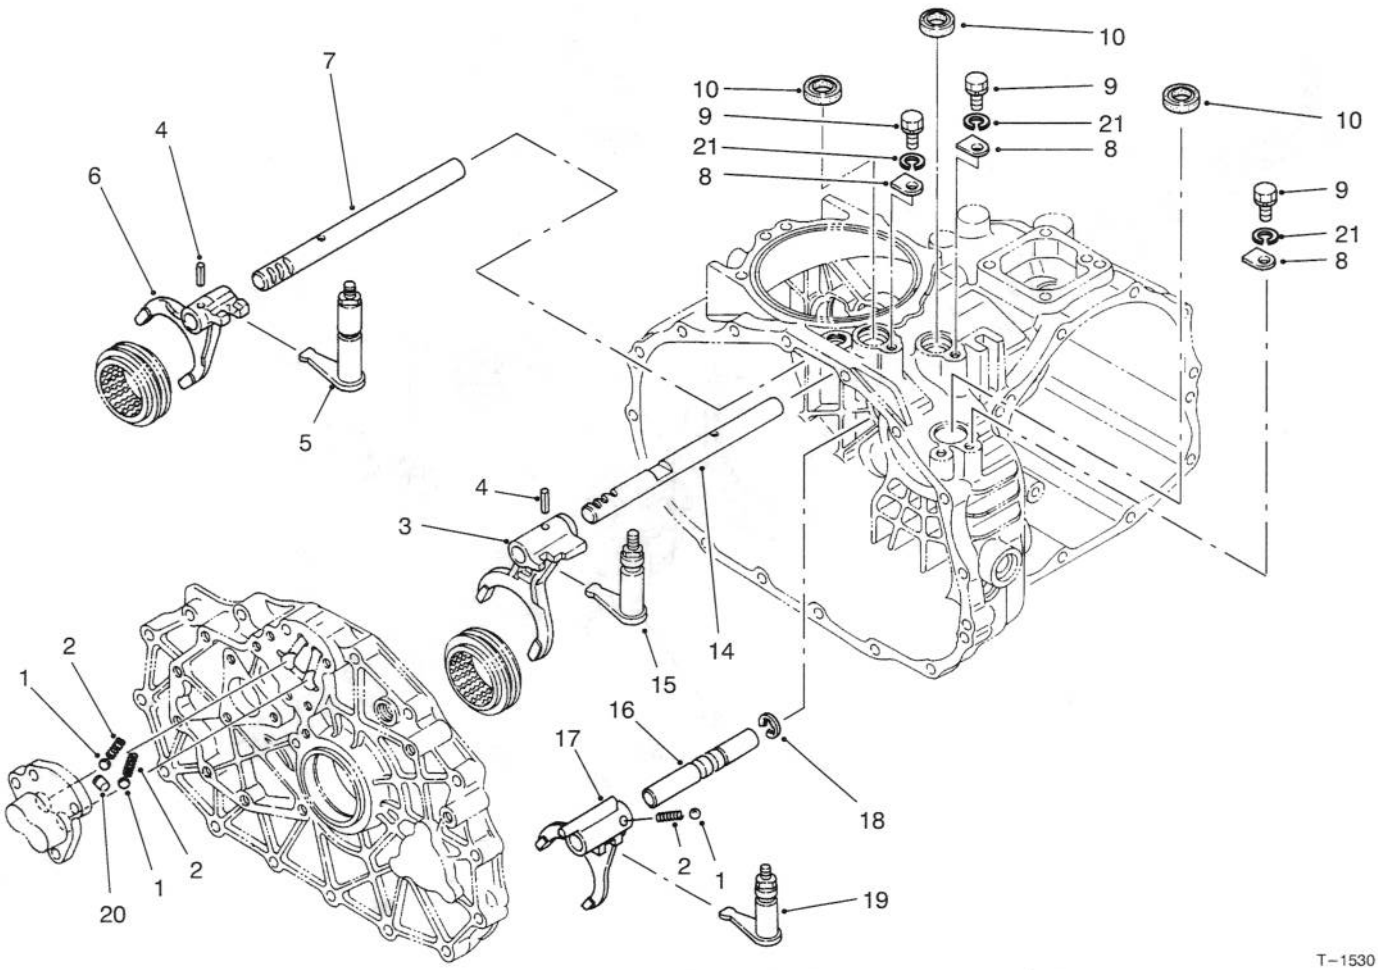



T–1530

# SHIFT FORK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–0785 | Ball | 3 |
| 2 | 92–0731 | Spring – Compression | 3 |
| 3 | 92–0700 | Fork – Shift R–1 | 1 |
| 4 | 92–0769 | Pin – Spring | 2 |
| 5 | 92–0817 | Arm – Shift Fork 2–3 | 1 |
| 6 | 92–0701 | Fork – Shift 2–3 | 1 |
| 7 | 92–0699 | Shaft – Fork 2–3 | 1 |
| 8 | 92–0732 | Plate – Keeper | 3 |
| 9 | 48–7700 | Screw – Cap Hex. Hd. | 3 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 10 | 92–0729 | Seal – Oil | 3 |
| 14 | 92–0698 | Shaft – Fork R–1 | 1 |
| 15 | 92–0816 | Arm – Shift Fork R–1 | 1 |
| 16 | 92–0708 | Shaft – Fork Hi–Lo | 1 |
| 17 | 92–0709 | Fork – Shift Hi–Lo | 1 |
| 18 | 92–0761 | Ring – Retaining | 1 |
| 19 | 92–0818 | Arm – Shift Fork Hi–Lo | 1 |
| 20 | 92–0705 | Lock – Spindle | 1 |
| 21 | 42–9850 | Washer – Lock | 3 |

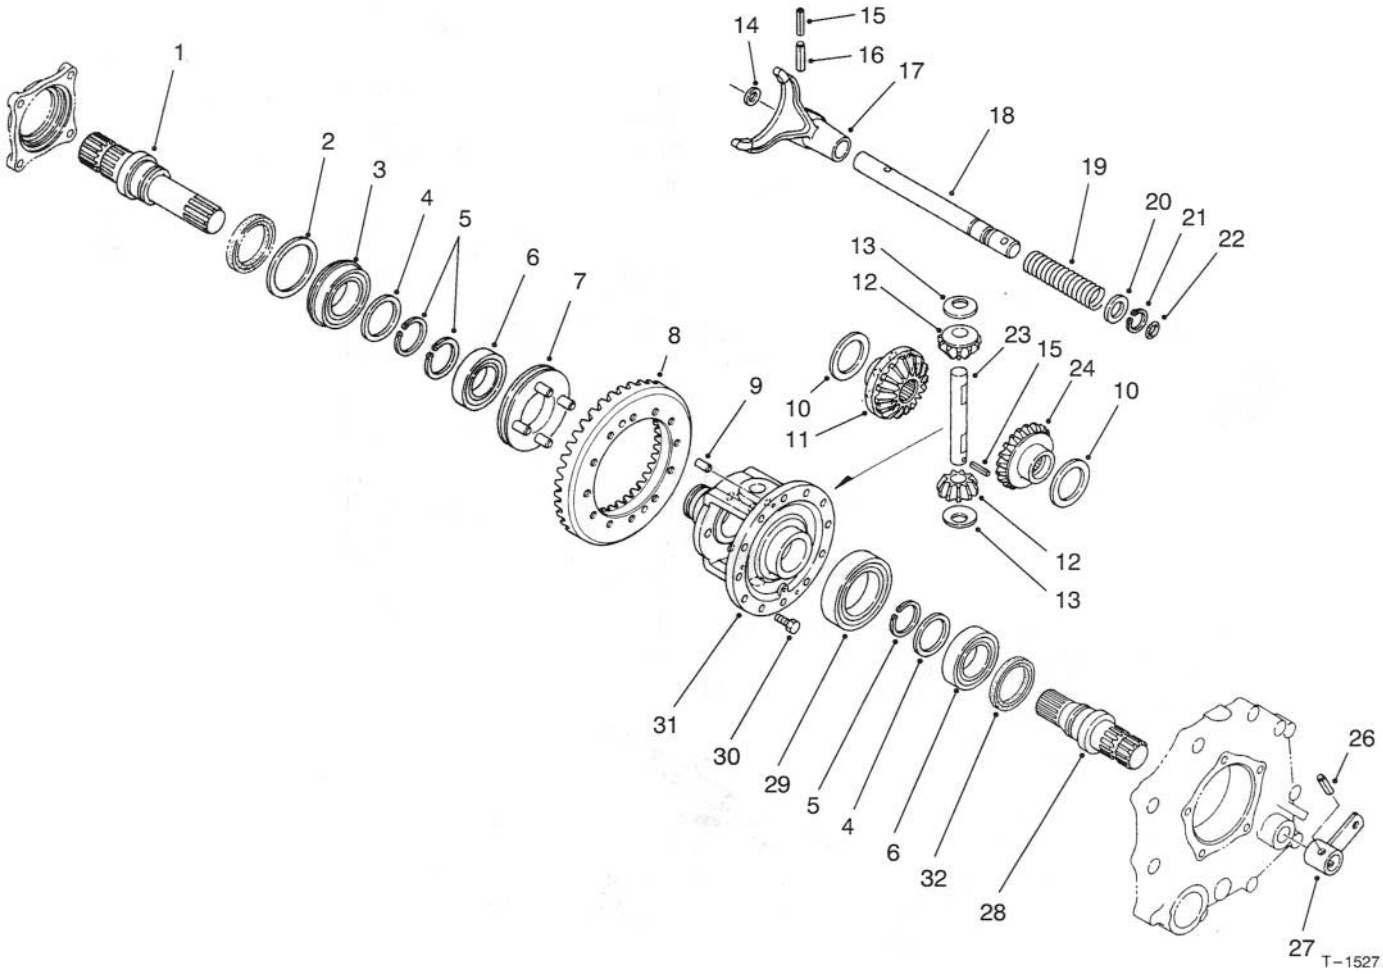


# DIFFERENTIAL GEAR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–0726 | Shaft – Axle R.H. | 1 |
| 2 | 92–0728 | Washer | 1 |
| 3 | 92–0780 | Bearing – Ball | 1 |
| 4 | 92–0727 | Washer | 2 |
| 5 | 92–0756 | Ring – Retaining | 3 |
| 6 | 92–0775 | Bearing – Ball | 2 |
| 7 | 92–0730 | Slider – Differential Lock | 1 |
| 8 | 92–0710 | Ring Gear Assembly (Incl. Counter Shaft) | 1 |
| 9 | 92–0765 | Pin – Alignment | 2 |
| 10 | 92–0747 | Washer – Thrust | 2 |
| 11 | 92–0746 | Gear – Side R.H. | 1 |
| 12 | 92–0748 | Gear – Pinion | 2 |
| 13 | 92–0750 | Washer | 2 |
| 14 | 92–0744 | Washer | 1 |
| 15 | 92–0768 | Pin – Spring | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 16 | 92–0771 | Pin – Spring | 1 |
| 17 | 92–0721 | Fork – Differential Lock | 1 |
| 18 | 92–0722 | Shaft – Lock Fork | 1 |
| 19 | 92–0723 | Spring – Compression | 1 |
| 20 | 92–0733 | Washer | 1 |
| 21 | 92–0753 | Ring – Retaining | 1 |
| 22 | 92–0787 | O–Ring | 1 |
| 23 | 92–0749 | Shaft – Pinion | 1 |
| 24 | 92–0745 | Gear – Side L.H. | 1 |
| 26 | 92–0770 | Pin – Spring | 1 |
| 27 | 92–0724 | Arm – Differential Lock | 1 |
| 28 | 92–0725 | Shaft – Axle L.H. | 1 |
| 29 | 92–0776 | Bearing – Ball | 1 |
| 30 | 92–0803 | Screw – Hex. Flange Hd. | 12 |
| 31 | 92–0720 | Case – Differential | 1 |
| 32 | 92–0793 | Seal – Oil | 2 |

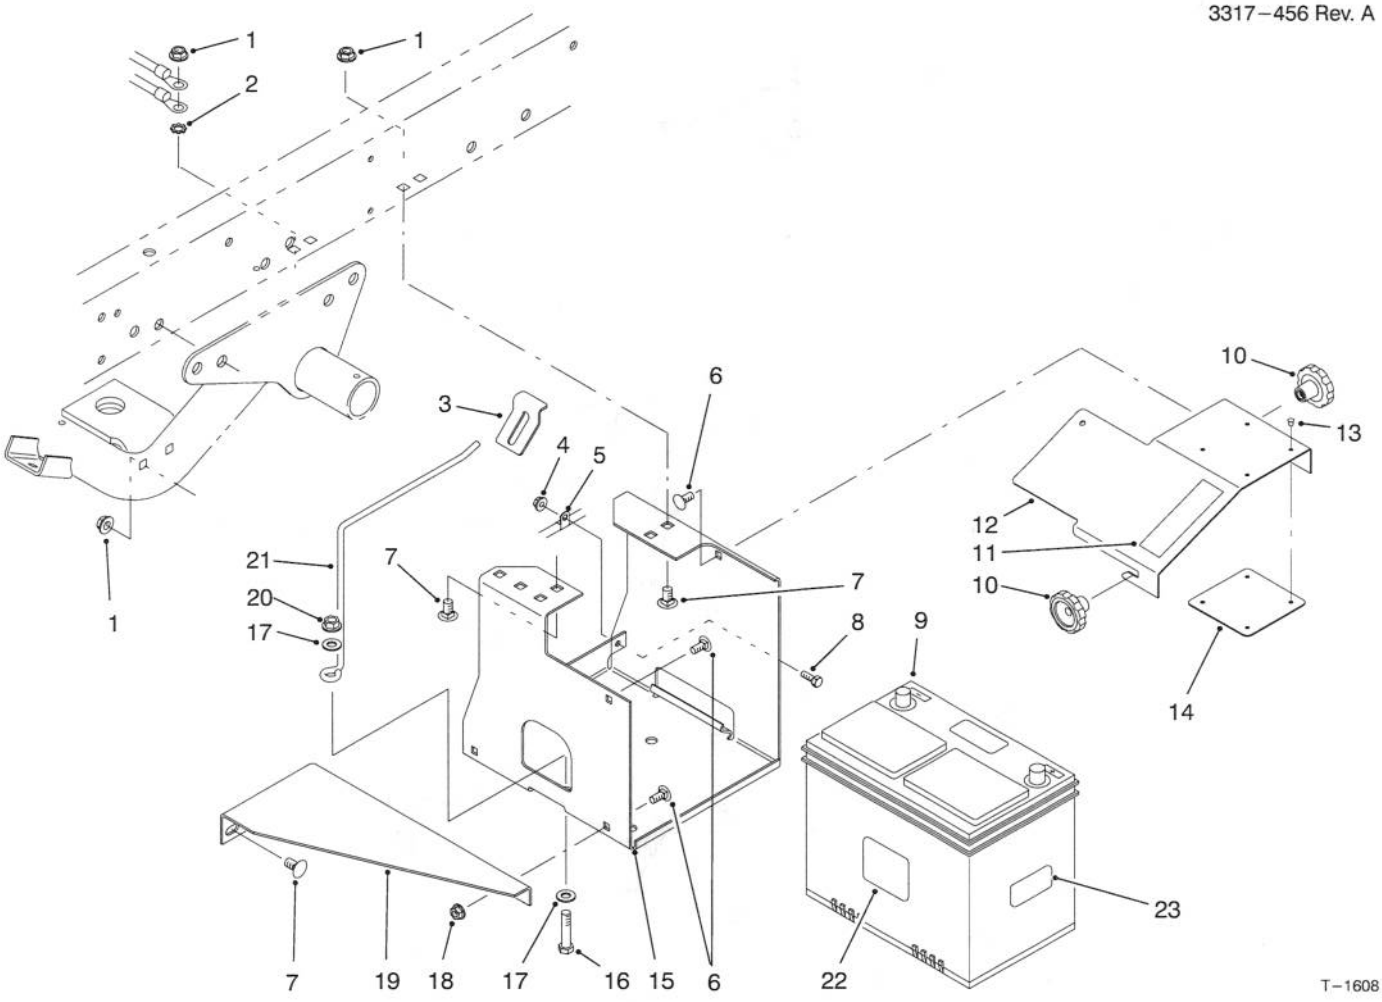



# BATTERY MOUNT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 3290–357 | Nut – Flange Lock | 6 |
| 2 | 3255–9 | Washer – Lock ETLW | 1 |
| 3 | 87–7610 | Tab – Battery Support | 1 |
| 4 | 32128–33 | Nut – Flange Lock | 1 |
| 5 | 2412–89 | Clamp – R | 1 |
| 6 | 3230–23 | Bolt – Carriage | 4 |
| 7 | 3231–21 | Bolt – Carriage | 6 |
| 8 | 321–4 | Screw – Cap Hex. Hd. | 1 |
| 9 | 55–7290 | Battery | 1 |
| 10 | 19–4050 | Knob | 2 |
| ‡11 | 36–3400 | Decal – No Step (US) | 1 |
| * | 93–6687 | Decal – No Step (CE) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 12 | 87–5130 | Cover – Battery Base | 1 |
| 13 | 3296–27 | Rivet – Plastic | 4 |
| 14 | 87–7620 | Shield – Plastic | 1 |
| 15 | 87–5120 | Bracket – Battery Base | 1 |
| 16 | 323–9 | Screw – Cap Hex. Hd. | 1 |
| 17 | 3256–24 | Washer – Flat | 2 |
| 18 | 32128–20 | Nut – Flange Lock | 2 |
| 19 | 87–5110 | Support – Lower | 1 |
| 20 | 3296–39 | Nut – Flange Lock | 1 |
| 21 | 87–7600 | Rod – Battery Support | 1 |
| 22 | 93–6668 | Decal – Charging (CE) | 1 |
| 23 | 93–7276 | Decal – Danger (CE) | 1 |

‡For different language versions of this part, see International Decal Cross Reference.

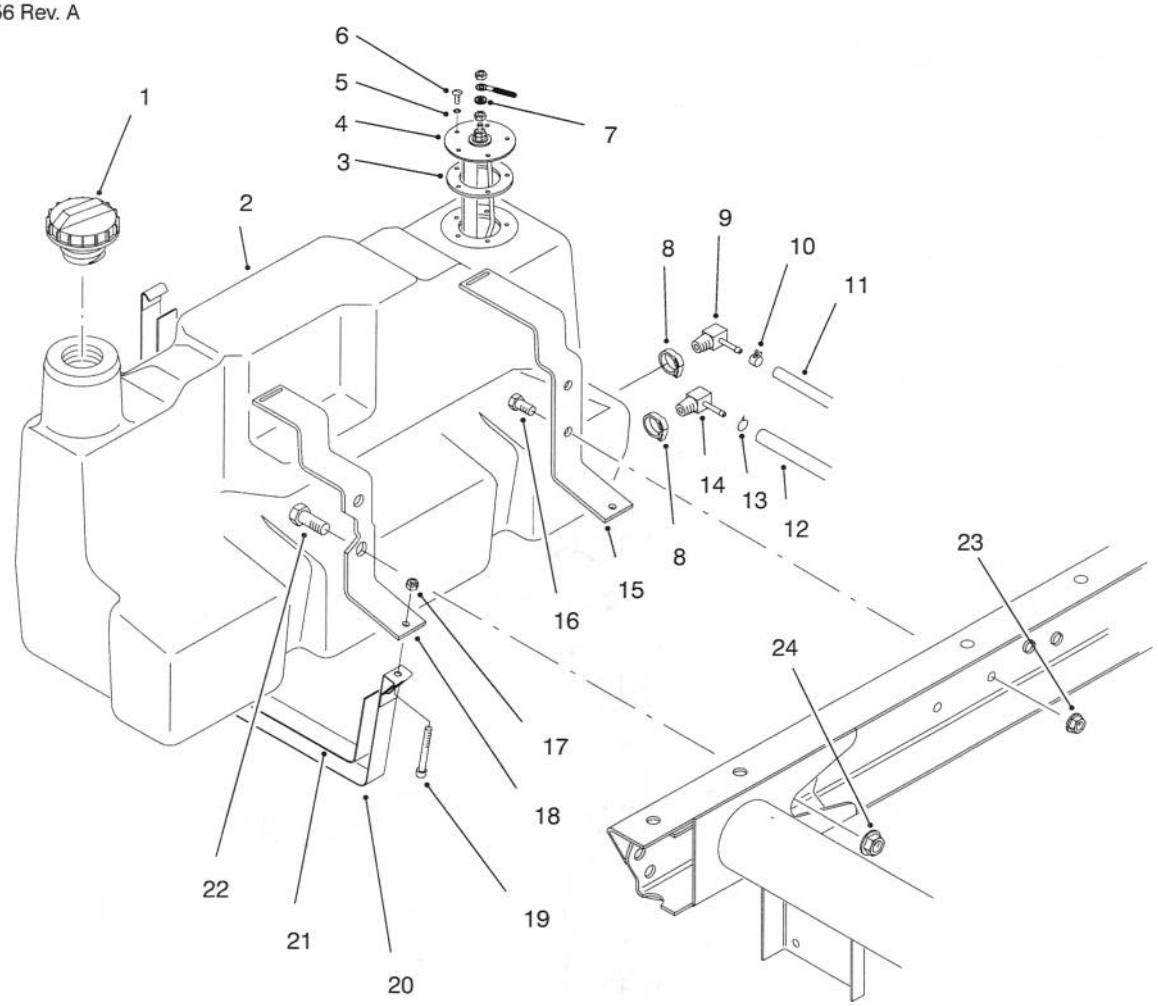



# FUEL TANK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93–3101 | Cap – Fuel (US) | 1 |
| * | 93–7170 | Cap – Fuel (CE) | 1 |
| 2 | 87–0650 | Fuel Tank Assembly (Incl. Ref. #8, 9 & 14) | 1 |
| 3 | 62–7650 | Gasket – Sending Unit | 1 |
| 4 | 63–7640 | Unit – Sending | 1 |
| 5 | 3253–15 | Washer – Lock | 5 |
| 6 | 32122–24 | Screw – Round Hd | 5 |
| 7 | 5–3637 | Washer – Flat | 1 |
| 8 | 2412–36 | Clamp | 2 |
| 9 | 76–4430 | Fitting – Fuel 90° | 1 |
| 10 | 2412–108 | Clamp – Hose | 1 |
| 11 | 75–4701 | Hose – Fuel | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 12 | 63–9640 | Hose – Fuel | 2 |
| 13 | 92–2379 | Clamp – Hose | 1 |
| 14 | 353–781 | Fitting – Fuel 90° | 1 |
| 15 | 87–3140 | Support – Rear | 1 |
| 16 | 323–4 | Screw – Cap Hex. Hd. | 2 |
| 17 | 3296–42 | Nut – Lock | 2 |
| 18 | 87–3150 | Support – Front | 1 |
| 19 | 3274–54 | Screw – Hex. Socket Hd. | 2 |
| 20 | 87–3160 | Strap – Tank Support | 2 |
| 21 | 87–3170 | Pad – Tank Support Strap | 2 |
| 22 | 3234–38 | Screw – Cap Hex. Hd. | 2 |
| 23 | 3290–357 | Nut – Flange | 2 |
| 24 | 32128–23 | Nut – Flange | 2 |

*Not Illustrated

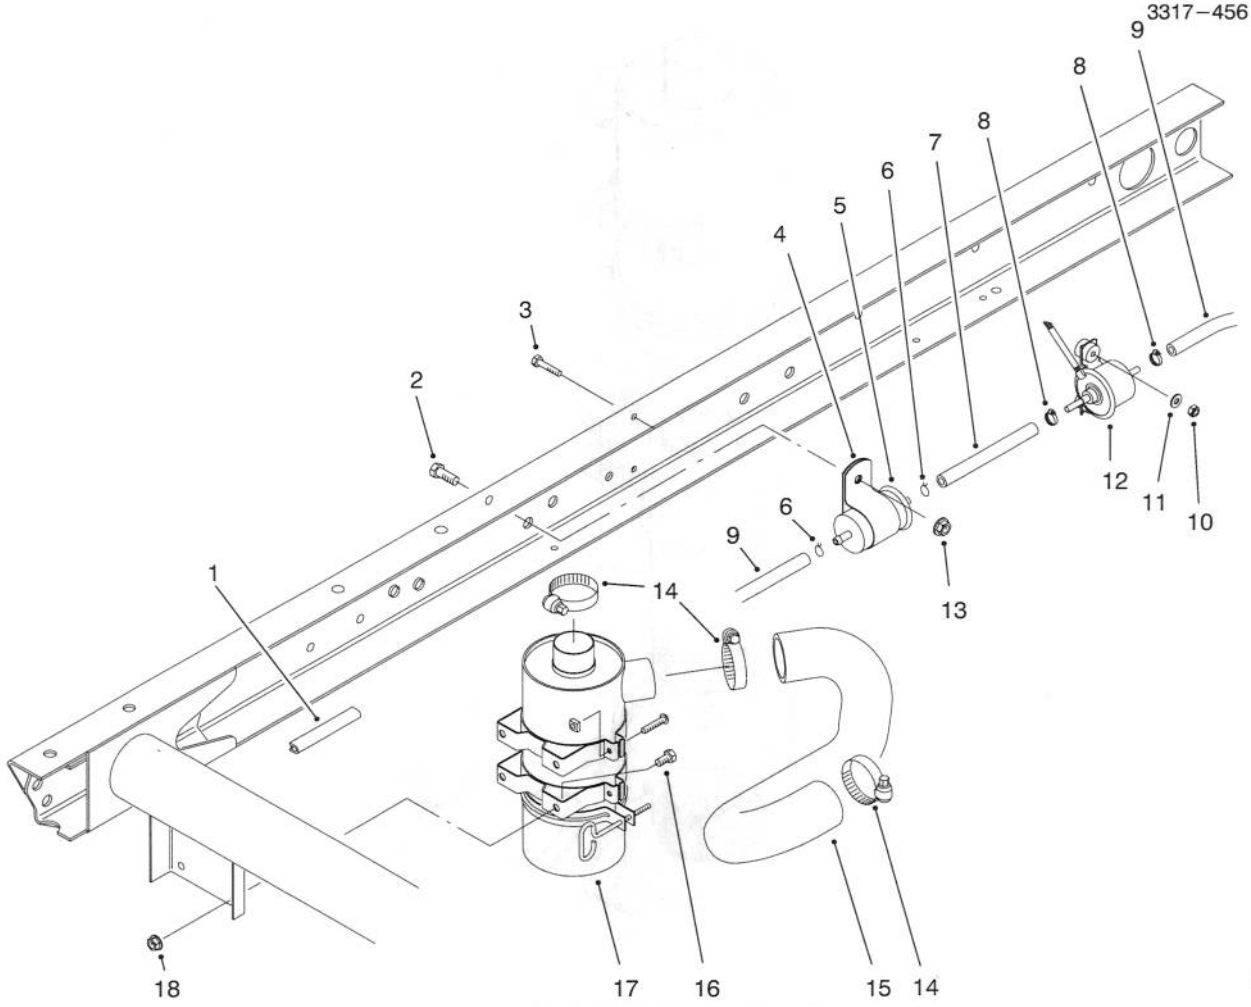



T–1738

# AIR CLEANER & FUEL SUPPLY ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 43–4300 | Trim | 1 |
| 2 | 323–6 | Screw – Cap Hex. Hd. | 1 |
| 3 | 48–7650 | Screw – Cap Hex. Hd. | 2 |
| 4 | 2412–96 | Clamp – R | 1 |
| 5 | 18–1520 | Filter – Fuel | 1 |
| 6 | 92–2379 | Clamp – Hose | 2 |
| 7 | 71–2690 | Hose – Fuel | 1 |
| 8 | 2412–108 | Clamp – Hose | 2 |
| 9 | 47–2964 | Hose – Fuel | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 10 | 49–7810 | Nut – Lock | 2 |
| 11 | 3256–67 | Washer – Flat | 2 |
| 12 | 92–2007 | Pump – Fuel | 2 |
| 13 | 3290–357 | Nut – Flange | 1 |
| 14 | 2412–92 | Clamp – Hose | 3 |
| 15 | 87–9310 | Hose – Air Cleaner | 1 |
| 16 | 322–2 | Screw – Cap Hex. Hd. | 4 |
| 17 | 87–9410 | Air Cleaner Assembly | 1 |
| 18 | 32128–20 | Nut – Flange | 4 |

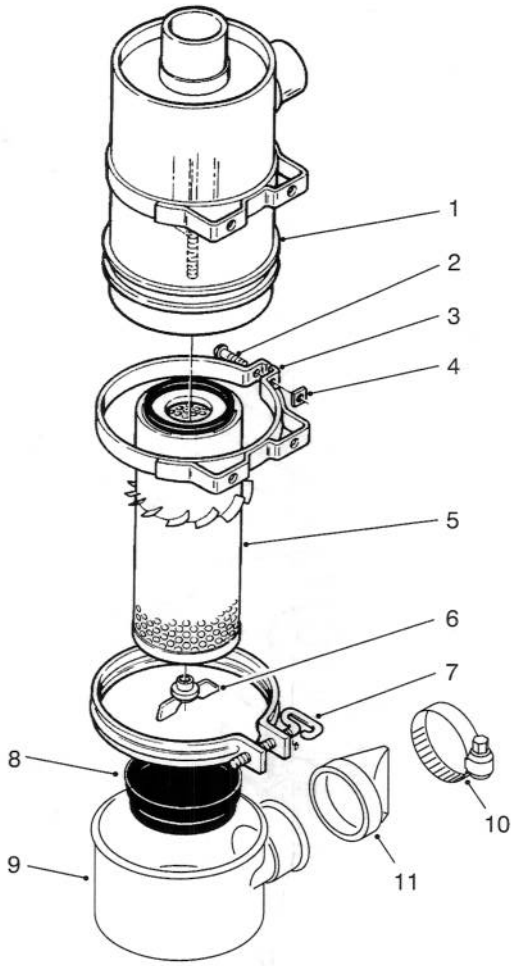



T–1349

# AIR CLEANER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | | Body | 1 |
| 2 | 3258–19 | Screw – Round Head | 2 |
| 3 | 33–1350 | Band Assembly (Incl. Ref. #2 & 4) | 2 |
| 4 | 32107–11 | Nut – Square | 2 |
| 5 | 33–1300 | Assembly – Element | 1 |
| 6 | 33–1330 | Assembly – Nut | 1 |
| 7 | 33–1340 | Clamp Assembly | 1 |
| 8 | 33–1310 | Baffle | 1 |
| 9 | 87–9390 | Cup | 1 |
| 10 | 2412–130 | Clamp – Hose | 1 |
| 11 | 87–9400 | Valve | 1 |
| * | 87–9410 | Air Cleaner (Complete) (Incl. Ref. #1 & 5–11) | 1 |

*Not Illustrated

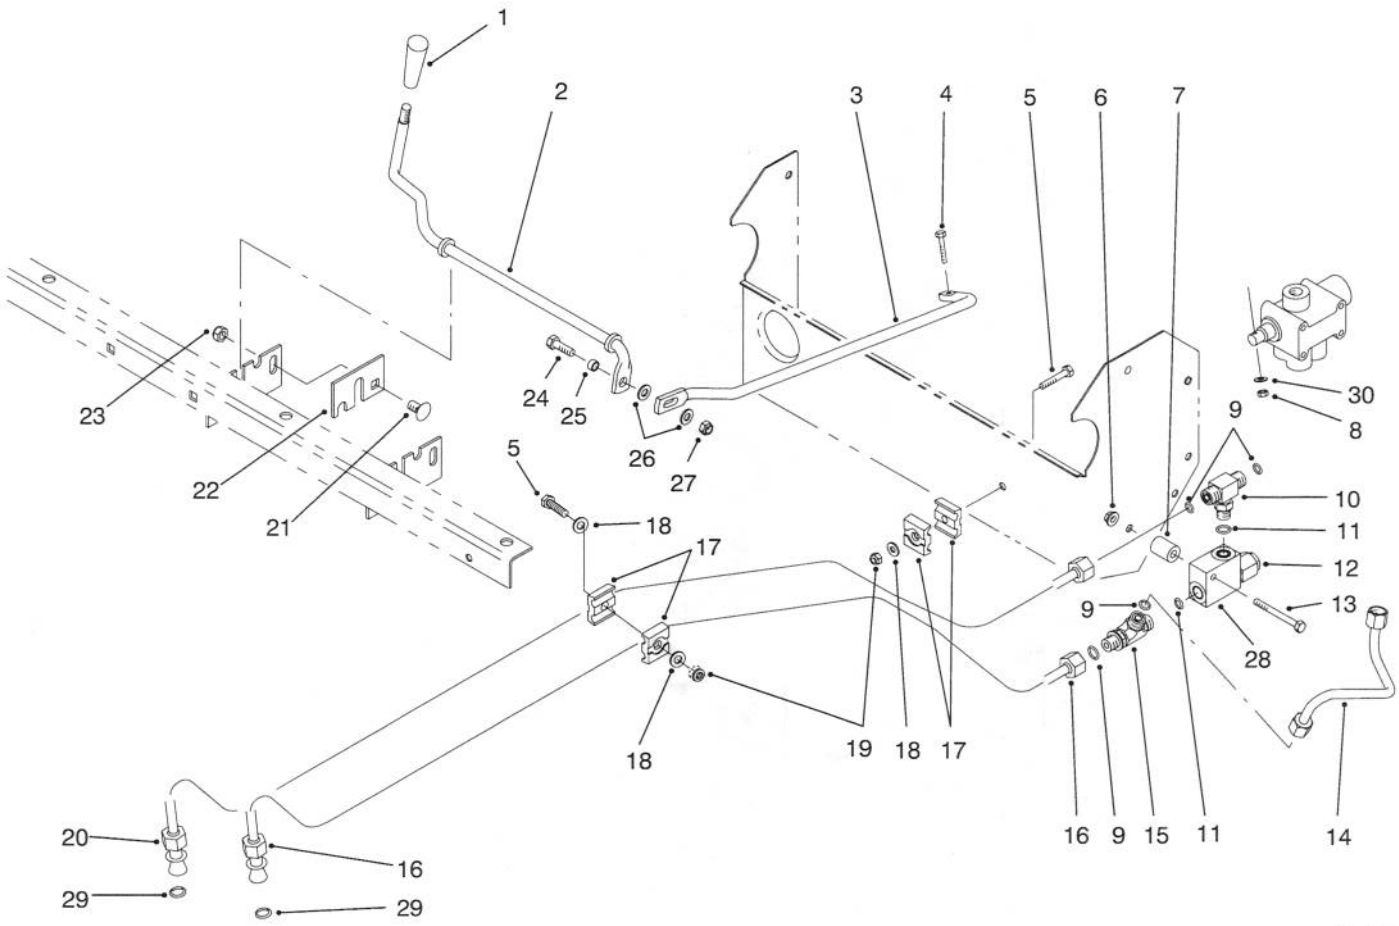



T–1610

# LIFT VALVE LINKAGE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 233–39 | Knob | 1 |
| 2 | 87–4500 | Rod – Pivot | 1 |
| 3 | 87–4510 | Rod – Connecting | 1 |
| 4 | 87–5150 | Screw – Cap Hex. Hd. | 1 |
| 5 | 321–9 | Screw – Cap Hex. Hd. | 2 |
| 6 | 32128–33 | Nut – Flange Lock | 1 |
| 7 | 75–9610 | Spacer | 1 |
| 8 | 87–5140 | Nut – Lock | 1 |
| 9 | 237–22 | Seal – O–Ring | 4 |
| 10 | 340–94 | Fitting – Hydraulic Tee (Incl. Ref. #9 & 11) | 1 |
| 11 | 237–42 | Seal – O–Ring | 2 |
| 12 | 92–2160 | Cartridge – Relief Valve | 1 |
| 13 | 321–15 | Screw – Cap Hex. Hd. | 1 |
| 14 | 87–4560 | Tube – Hydraulic | 1 |
| 15 | 340–86 | Fitting – Hydraulic Tee (Incl. Ref. #9 & 11) | 1 |
| 16 | 87–9350 | Hydraulic Tube Assembly (Incl. Ref. #29) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 56–7973 | Clamp – Hydraulic Tube | 4 |
| 18 | 3256–22 | Washer – Flat | 3 |
| 19 | 3296–42 | Nut – Lock | 2 |
| 20 | 87–4540 | Hydraulic Tube Assembly (Incl. Ref. #29) | 1 |
| 21 | 3231–21 | Bolt – Carriage | 1 |
| 22 | 87–4490 | Bracket – Hold–Down | 1 |
| 23 | 3296–39 | Nut – Lock | 1 |
| 24 | 322–5 | Screw – Cap Hex. Hd. | 1 |
| 25 | 87–5080 | Spacer – Connecting | 1 |
| 26 | 3256–23 | Washer – Flat | 2 |
| 27 | 3296–29 | Nut – Lock | 1 |
| 28 | 92–2161 | Body – Relief Valve | 1 |
| 29 | 39–7310 | Seal – O–Ring | 2 |
| 30 | 3256–14 | Washer – Flat | 1 |
| * | 87–3680 | Assembly – Relief Valve (Incl. Ref. #12 & 28) | 1 |

*Not Illustrated

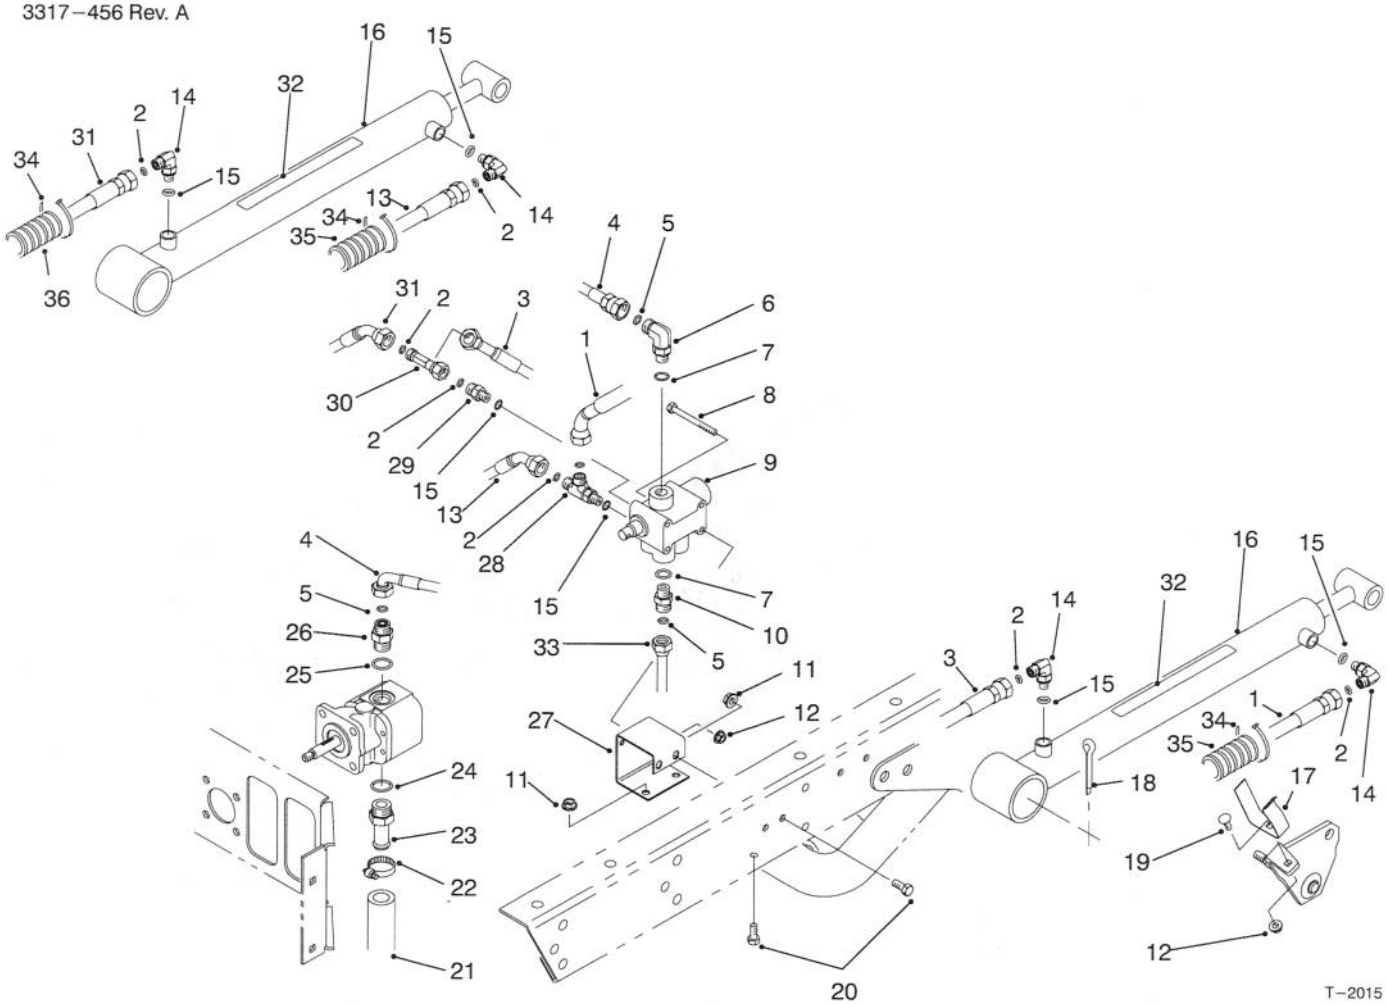



# LIFT VALVE & CYLINDER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–2697 | Hose – Hydraulic LH | 1 |
| 2 | 237–21 | Seal – O–Ring | 6 |
| 3 | 87–4880 | Hose – Hydraulic LH | 1 |
| 4 | 87–4870 | Hose – Hydraulic | 1 |
| 5 | 237–22 | Seal – O–Ring | 3 |
| 6 | 340–77 | Fitting – Hydraulic 90° (Incl. Ref. #5 & 7) | 1 |
| 7 | 237–42 | Seal – O–Ring | 2 |
| 8 | 321–14 | Screw – Cap Hex. Hd. | 2 |
| 9 | 43–1950 | Valve | 1 |
| 10 | 340–2 | Fitting – Straight | 1 |
| 11 | 32128–20 | Nut – Flange Head | 4 |
| 12 | 32128–33 | Nut – Flange Head | 4 |
| 13 | 87–4910 | Hose – Hydraulic RH | 1 |
| 14 | 340–132 | Fitting – Hydraulic 90° (Incl. Ref. #2 & 15) | 4 |
| 15 | 237–78 | Seal – O–Ring | 4 |
| 16 | 87–7990 | Hydraulic Cylinder Assy. (Incl. Ref. #32) | 2 |
| 17 | 87–3720 | Retainer – Cylinder | 2 |
| 18 | 3272–37 | Pin – Cotter | 2 |
| 19 | 3229–25 | Screw – Carriage | 2 |
| 20 | 322–3 | Screw – Cap Hex. Hd. | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 21 | 87–3670 | Hose – Hydraulic | 1 |
| 22 | 2412–34 | Clamp | 1 |
| 23 | 354–136 | Fitting – Hydraulic Straight (Incl. Ref. #24) | 1 |
| 24 | 237–80 | Seal – O–Ring | 1 |
| 25 | 237–79 | Seal – O–Ring | 1 |
| 26 | 340–3 | Fitting – Hydraulic Straight (Incl. Ref. #5 & 25) | 1 |
| 27 | 87–4520 | Bracket – Dump Valve | 1 |
| 28 | 340–140 | Fitting – Hydraulic Tee (Incl. Ref. #2 & 15) | 1 |
| 29 | 340–92 | Fitting – Hydraulic Straight (Incl. Ref. #2 & 15) | 1 |
| 30 | 340–151 | Fitting – Hydraulic Tee (Incl. Ref. #2) | 1 |
| 31 | 87–4900 | Hose – Hydraulic RH | 1 |
| ‡32 | 87–7930 | Decal – Warning (US) | 2 |
| ‡* | 93–9852 | Decal – Warning (CE) | 2 |
| 33 | 87–4560 | Tube – Hydraulic | 1 |
| 34 | 3290–378 | Tie – Cable (CE) | 6 |
| 35 | 24–7923 | Conduit – Hose (CE) | 2 |
| 36 | 24–7922 | Conduit – Hose (CE) | 1 |

‡For different language versions of this part, see International Decal Cross Reference.

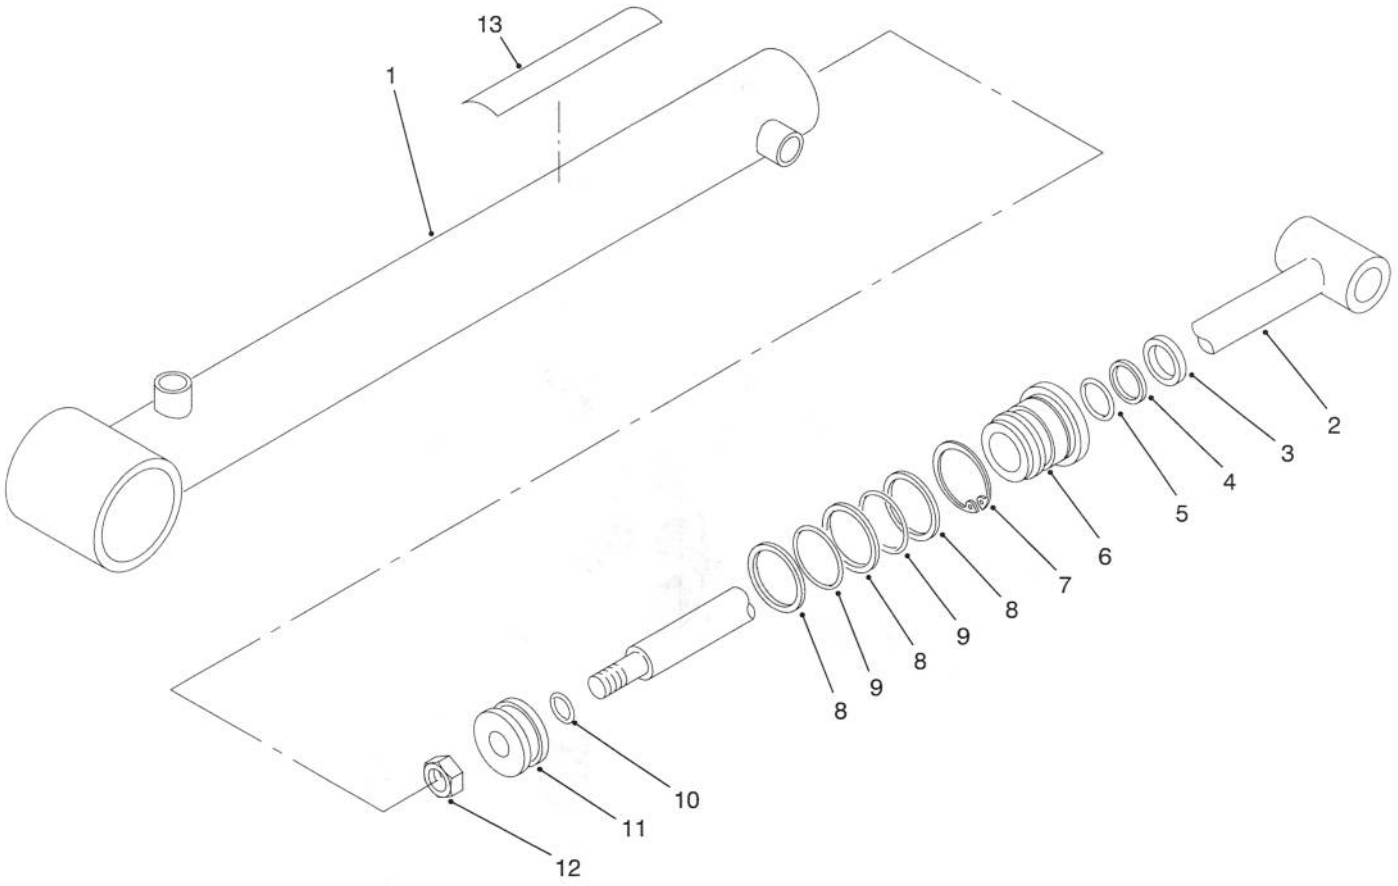



T–1612

# LIFT CYLINDER 87–7990

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | | Barrel Assembly | 1 |
| 2 | 92–2163 | Shaft | 1 |
| 3 | | Seal – Dust | 1 |
| 4 | | Backup | 1 |
| 5 | | Seal – O–Ring | 1 |
| 6 | 92–2162 | Head | 1 |
| 7 | 84–1680 | Ring – Retaining | 1 |
| 8 | | Backup | 3 |
| 9 | | Seal – O–Ring | 2 |
| 10 | | Seal – O–Ring | 1 |
| 11 | 43–5150 | Piston | 1 |
| 12 | 32152–10 | Nut | 1 |
| ‡13 | 87–7930 | Decal – Warning (US) | 1 |
| ‡* | 93–9852 | Decal – Warning (CE) | 1 |
| * | 92–2165 | Kit – Repair (Incl. Ref. #3–5 & 8–10) | 1 |

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

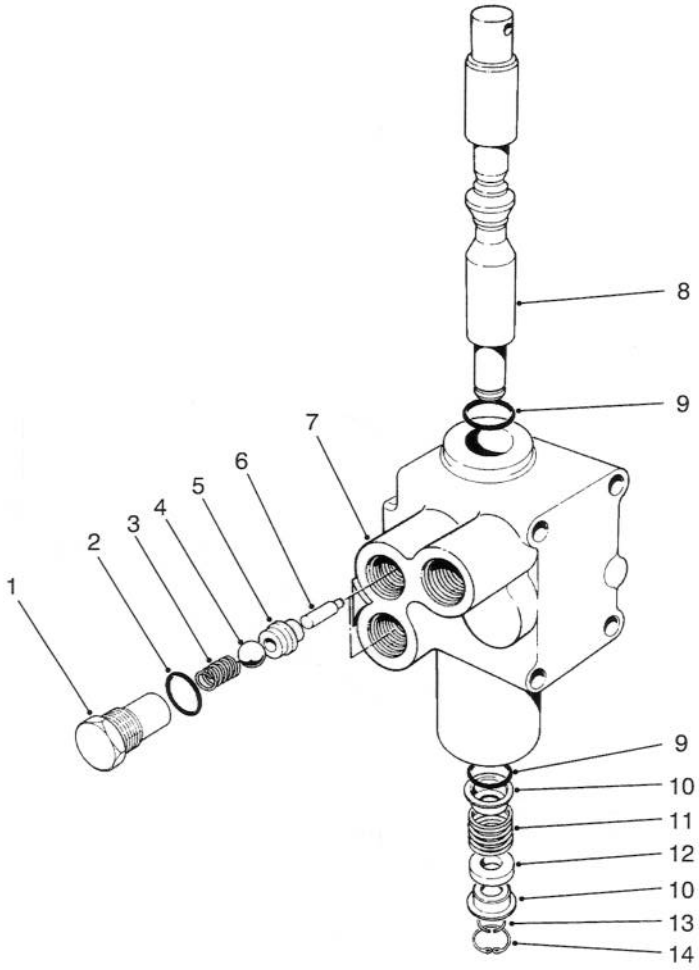



T–0280

# CONTROL VALVE ASSEMBLY NO. 43–1950

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 22–8330 | Plug | 2 |
| 2 | 237–42 | O–Ring | 2 |
| 3 | 22–8340 | Spring | 2 |
| 4 | 22–8350 | Ball | 2 |
| 5 | 22–8370 | Seat–Check Valve | 2 |
| 6 | 22–8360 | Pin – Cam | 2 |
| 7 | | Body | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 8 | 22–8420 | Spool | 1 |
| 9 | 22–8500 | O–Ring | 2 |
| 10 | 22–8380 | Retainer – Spring | 2 |
| 11 | 22–8410 | Spring | 1 |
| 12 | 23–3030 | Spacer | 1 |
| 13 | 22–8480 | Ring – Retaining, Spool | 1 |
| 14 | 22–8490 | Ring – Retaining | 1 |

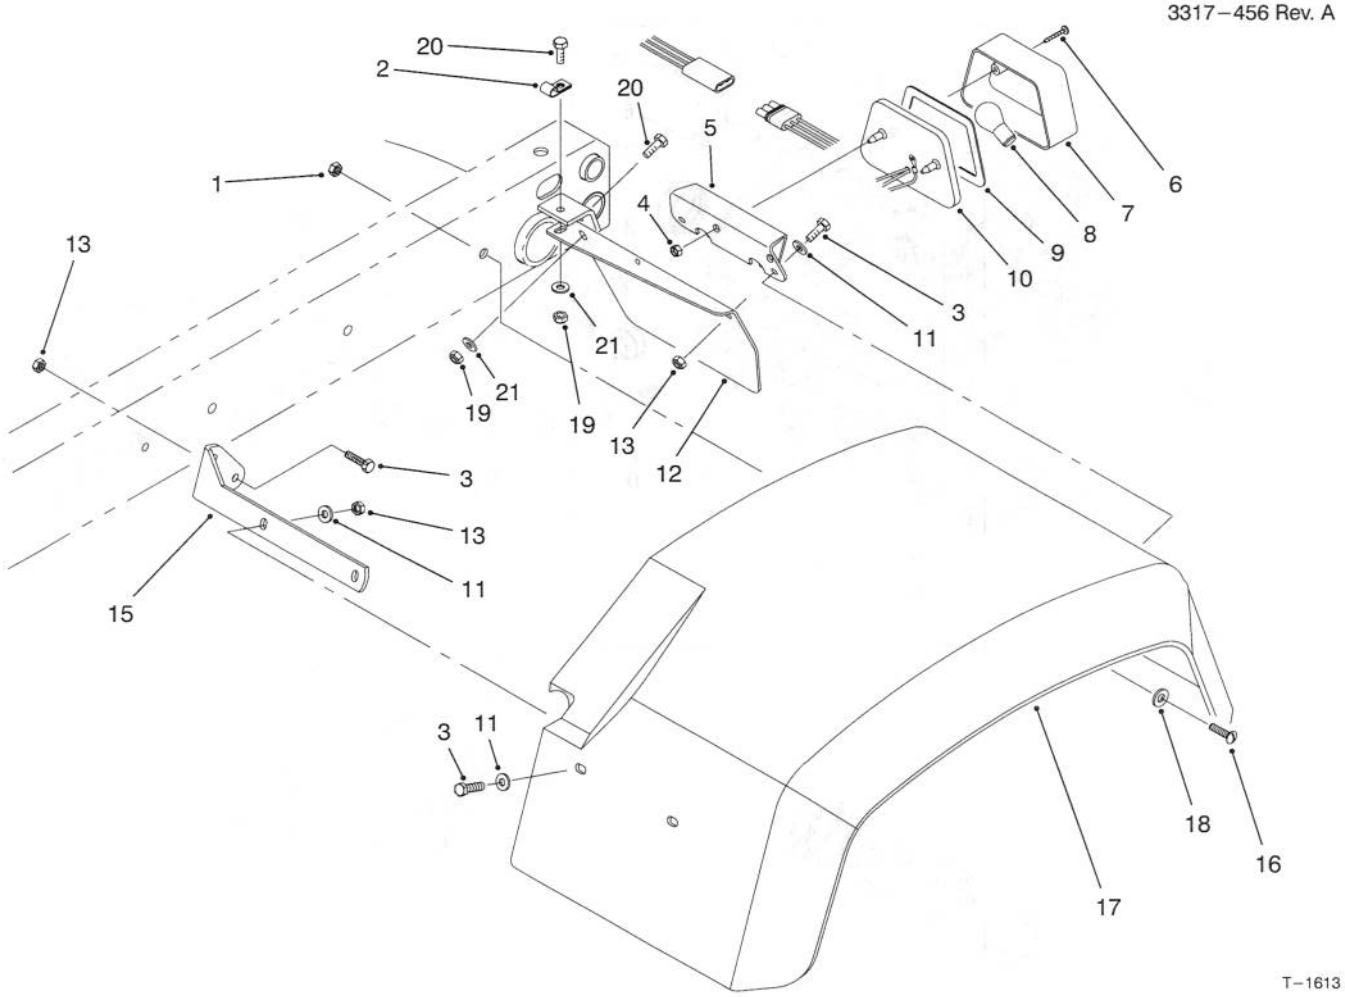



T–1613

# REAR FENDER & TAIL LIGHT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 3296–39 | Nut – Lock | 6 |
| 2 | 2412–93 | Clamp – R | 1 |
| 3 | 321–6 | Screw – Cap Hex. Hd. | 12 |
| 4 | 3290–506 | Palnut | 2 |
| 5 | 87–5770 | U–Bracket – Tail Light | 1 |
| 6 | 32144–93 | Screw – Self Tapping | 2 |
| 7 | 87–6300 | Lens | 1 |
| 8 | | Bulb (#1157 Std. 12 Volt) | 1 |
| 9 | 87–6310 | Gasket | 1 |
| 10 | 87–2110 | Tail Light Assembly (Incl. Ref. #6–9) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 3256–22 | Washer – Flat | 12 |
| 12 | 93–8943 | Plate – Tail Light LH | 1 |
| * | 93–8944 | Plate – Tail Light RH | 1 |
| 13 | 3296–42 | Nut – Lock | 16 |
| 15 | 93–8941 | Bracket – Front LH | 1 |
| * | 93–8942 | Brackrt – Front RH | 1 |
| 16 | 3274–94 | Screw – Socket Button Hd. | 6 |
| 17 | 87–6660 | Fender – Rear 24" | 2 |
| 18 | 3256–24 | Washer – Flat | 6 |
| 19 | 3296–29 | Nut – Lock | 4 |
| 20 | 322–5 | Screw – Cap Hex. Hd. | 4 |
| 21 | 3256–23 | Washer – Flat | 4 |


*Not Illustrated

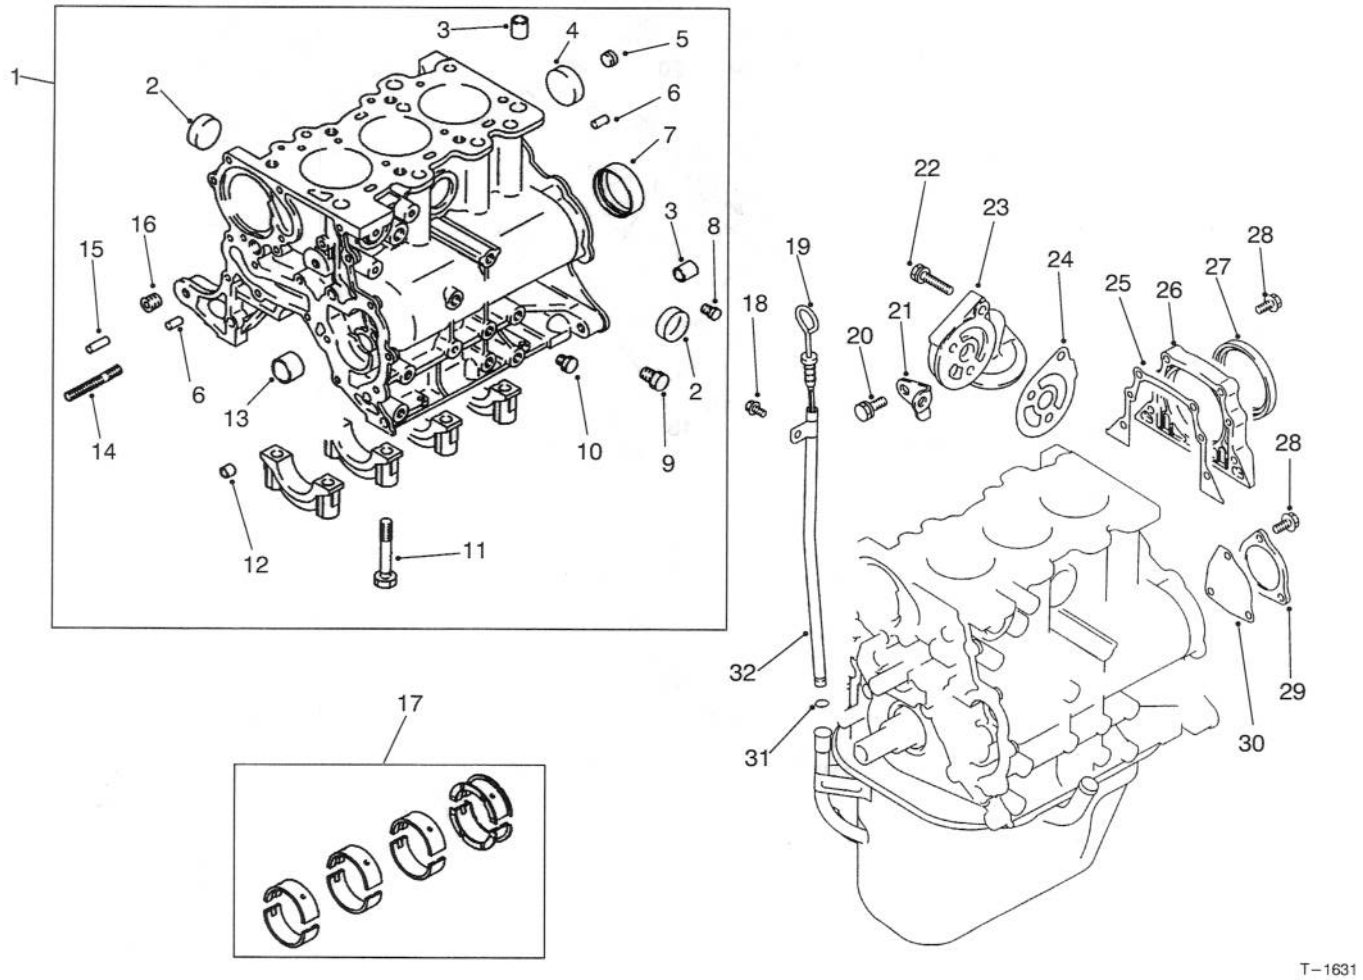


# CYLINDER BLOCK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–2006 | Assembly – Crankcase (Incl. Ref. #2–16) | 1 |
| 2 | 92–2151 | Cap – Sealing | 3 |
| 3 | 92–2152 | Bushing | 4 |
| 4 | 92–1994 | Cap – Sealing | 1 |
| 5 | 92–1935 | Plug – Taper | 1 |
| 6 | 92–2148 | Pin – Dowel | 2 |
| 7 | 92–1982 | Bearing – Ring | 1 |
| 8 | 92–1902 | Plug – Taper | 1 |
| 9 | 56–0100 | Plug – Taper | 1 |
| 10 | 92–1910 | Plug – Taper | 1 |
| 11 | 67–2250 | Bolt | 8 |
| 12 | 67–2360 | Bushing | 4 |
| 13 | 92–1981 | Bearing – Front | 1 |
| 14 | 92–5107 | Stud | 1 |
| 15 | 92–1958 | Pin – Dowel | 1 |
| 16 | 67–2390 | Plug – Taper | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 92–1956 | Bearing – Set, Main | 1 |
| 18 | 92–5112 | Bolt – Flange Head | 1 |
| 19 | 92–5110 | Gauge – Oil Level | 1 |
| 20 | 92–2144 | Bolt | 2 |
| 21 | 92–5109 | Stay – Oil Filter | 1 |
| 22 | 92–2143 | Bolt | 3 |
| 23 | 92–2012 | Bracket – Oil Filter | 1 |
| 24 | 92–5108 | Gasket – Bracket | 1 |
| 25 | 92–1987 | Gasket | 1 |
| 26 | 92–2045 | Housing – Seal, Oil | 1 |
| 27 | 92–1952 | Seal – Oil | 1 |
| 28 | 92–2131 | Bolt – Flange Head | 7 |
| 29 | 92–1945 | Cover – Rear | 1 |
| 30 | 92–1991 | Gasket | 1 |
| 31 | 92–1925 | O–Ring | 1 |
| 32 | 92–5111 | Guide – Oil Level Gauge | 1 |

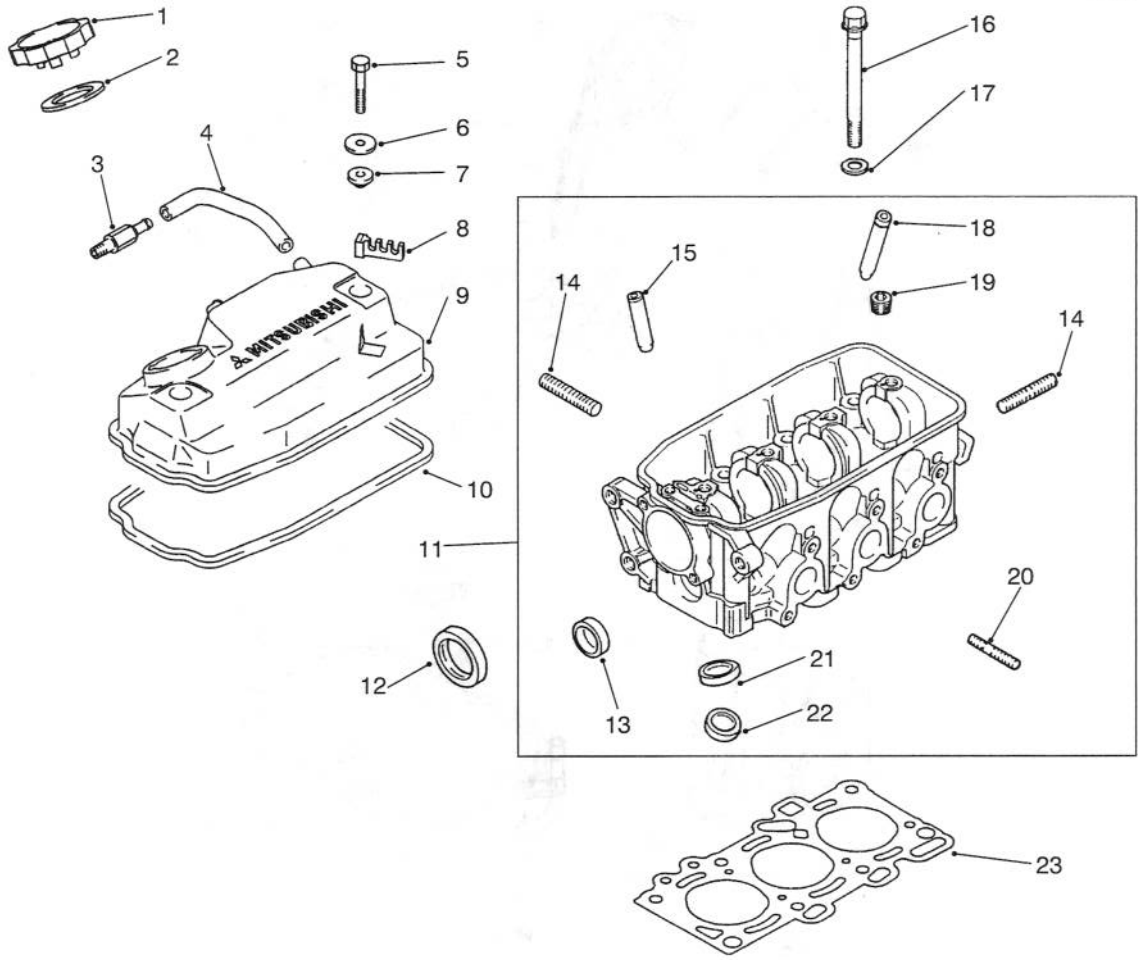



T–1630

# ROCKER COVER & CYLINDER HEAD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–1975 | Cap – Oil (Incl. Ref. #2) | 1 |
| 2 | 92–1943 | Packing | 1 |
| 3 | 92–2050 | PCV Valve | 1 |
| 4 | 92–2026 | Hose – PCV Valve | 1 |
| 5 | 92–2128 | Bolt – Cover | 2 |
| 6 | 92–2063 | Washer | 2 |
| 7 | 92–1929 | Seal – Oil | 2 |
| 8 | 92–1915 | Clamp – Cable | 1 |
| 9 | 92–2020 | Assembly – Cover (Incl. Ref. #8 & 10) | 1 |
| 10 | 92–1944 | Gasket – Cover, Rocker | 1 |
| 11 | 92–2034 | Head – Cylinder (Incl. Ref. #13–15 & 18–22) | 1 |
| 12 | 92–2021 | Seal – Oil | 1 |
| 13 | 92–2151 | Cap – Sealing | 1 |
| 14 | 42–9560 | Stud | 3 |
| 15 | 92–1926 | Guide – Intake Valve (.05 mm OS) | 3 |
| * | 92–5103 | Guide – Intake Valve (.25 mm OS) | 3 |
| * | 92–5104 | Guide – Intake Valve (.50 mm OS) | 3 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 16 | 92–1971 | Bolt | 8 |
| 17 | 92–1903 | Washer | 8 |
| 18 | 92–1911 | Guide – Exhaust Valve (.05 mm OS) | 1 |
| * | 92–5105 | Guide – Exhaust Valve (.25 mm OS) | 1 |
| * | 92–5106 | Guide – Exhaust Valve (.50 mm OS) | 1 |
| 19 | 92–1916 | Plug – Taper | 1 |
| 20 | 92–1905 | Stud | 6 |
| 21 | 92–1959 | Seat – Intake Valve (.30 mm OS) | 3 |
| * | 92–5102 | Seat – Intake Valve (.60 mm OS) | 3 |
| 22 | 92–1976 | Seat – Exhaust Valve (.30 mm OS) | 3 |
| * | 92–5101 | Seat – Exhaust Valve (.60 mm OS) | 3 |
| 23 | 92–1997 | Gasket – Cylinder | 1 |

*Not Illustrated

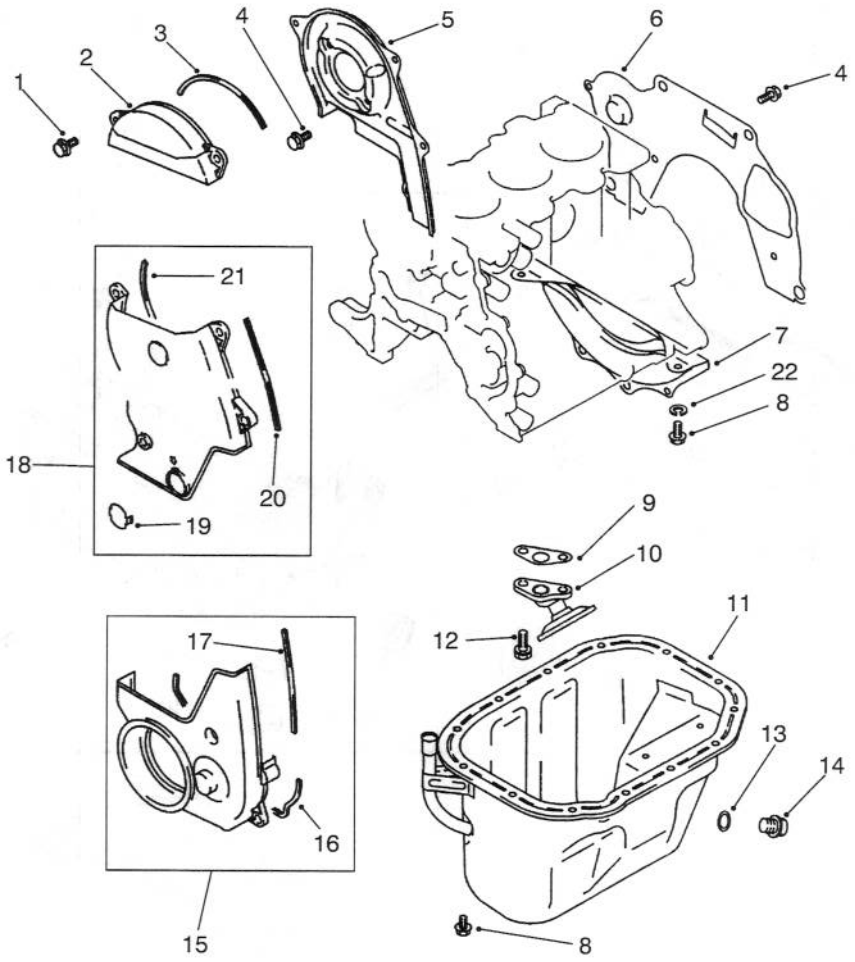



T–1632

# COVERS & OIL PAN ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–5113 | Bolt – Flange Head | 3 |
| 2 | 92–1965 | Assembly – Cover (Incl. Ref.#3) | 1 |
| 3 | 92–1962 | Gasket | 1 |
| 4 | 92–2131 | Bolt – Flange Head | 2 |
| 5 | 92–2035 | Cover – Front | 1 |
| 6 | 92–1937 | Plate – Rear | 1 |
| 7 | 92–1938 | Cover – Bell Housing | 1 |
| 8 | 48–7610 | Bolt – Hex. Head | 2 |
| 9 | 92–1988 | Gasket – Oil | 1 |
| 10 | 92–2019 | Strainer – Oil | 1 |
| 11 | 92–2053 | Assembly – Oil Pan (Incl. Ref.#13–14) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 12 | 92–2137 | Bolt/washer | 2 |
| 13 | 92–1921 | Gasket – Oil | 1 |
| 14 | 92–1920 | Plug – Oil | 1 |
| 15 | 92–1967 | Assembly – Cover (Incl. Ref. #16–17) | 1 |
| 16 | 92–1939 | Gasket | 1 |
| 17 | 92–1940 | Gasket | 1 |
| 18 | 92–1996 | Assembly – Cover, Front (Incl. Ref.#19–21) | 1 |
| 19 | 92–1907 | Cover – Access | 1 |
| 20 | 92–1962 | Gasket | 1 |
| 21 | 92–1966 | Gasket | 1 |
| 22 | 3253–3 | Washer – Lock | 2 |

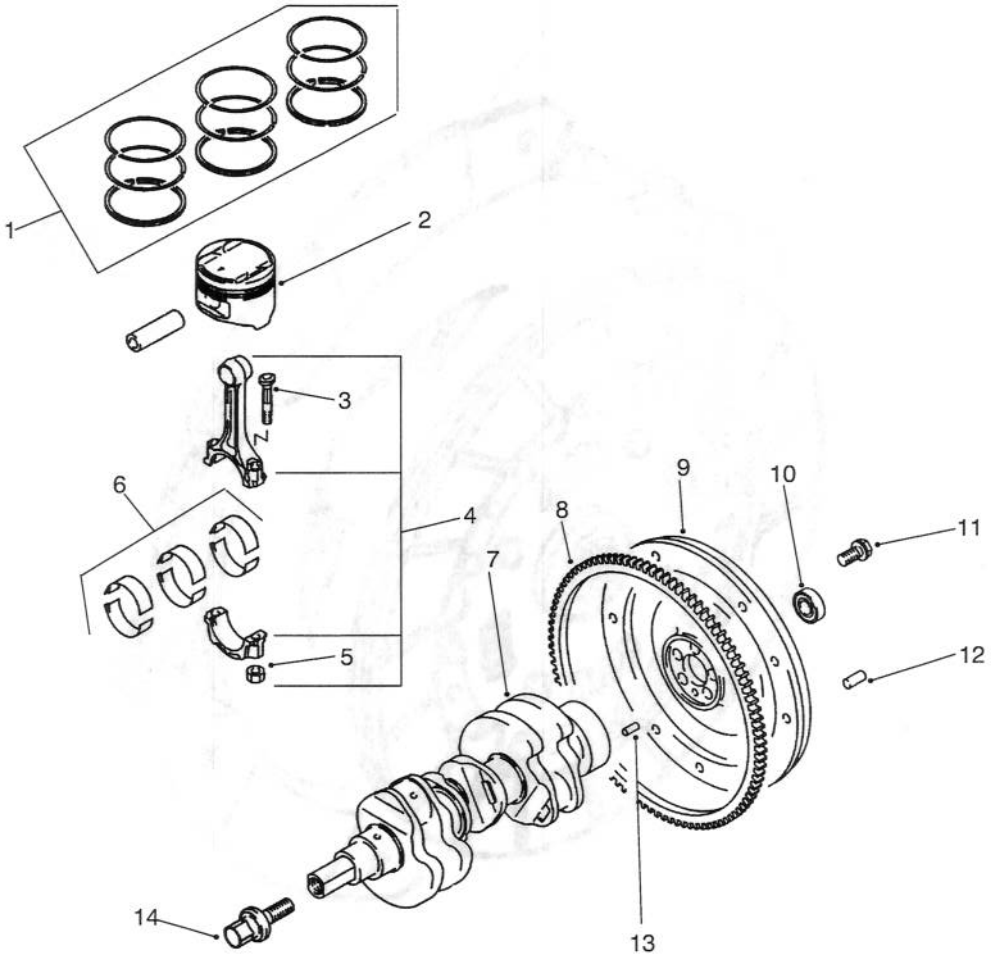



T–1633

# PISTON & CRANKSHAFT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–2014 | Piston Ring Set (Std.) | 1 |
| * | 92–5118 | Piston Ring Set (.25 mm OS) | 1 |
| * | 92–2015 | Piston Ring Set (.50 mm OS) | 1 |
| * | 92–5120 | Piston Ring Set (.75 mm OS) | 1 |
| * | 92–5121 | Piston Ring Set (1.00 mm OS) | 1 |
| 2 | 92–2005 | Piston & Pin (Std.) | 3 |
| * | 92–5114 | Piston & Pin (.25 mm OS) | 3 |
| * | 92–2013 | Piston & Pin (.50 mm OS) | 3 |
| * | 92–5116 | Piston & Pin (.75 mm OS) | 3 |
| * | 92–5117 | Piston & Pin (1.00 mm OS) | 3 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 3 | 92–2003 | Bolt – Connnecting Rod | 6 |
| 4 | 92–1999 | Rod – Connecting (Incl. Ref. #3 & 5) | 3 |
| 5 | 92–1923 | Nut | 6 |
| 6 | 92–1957 | Rod Bearing Set | 1 |
| 7 | 92–1995 | Assembly – Crankshaft | 1 |
| 8 | 92–1942 | Gear – Ring | 1 |
| 9 | 92–1980 | Flywheel | 1 |
| 10 | 92–1914 | Bearing – Ball | 1 |
| 11 | 92–1934 | Bolt – Flywheel | 5 |
| 12 | 42–7160 | Pin – Dowel | 3 |
| 13 | 92–2148 | Pin – Dowel | 1 |
| 14 | 92–2057 | Bolt – Crankshaft PTO | 1 |

*Not Illustrated

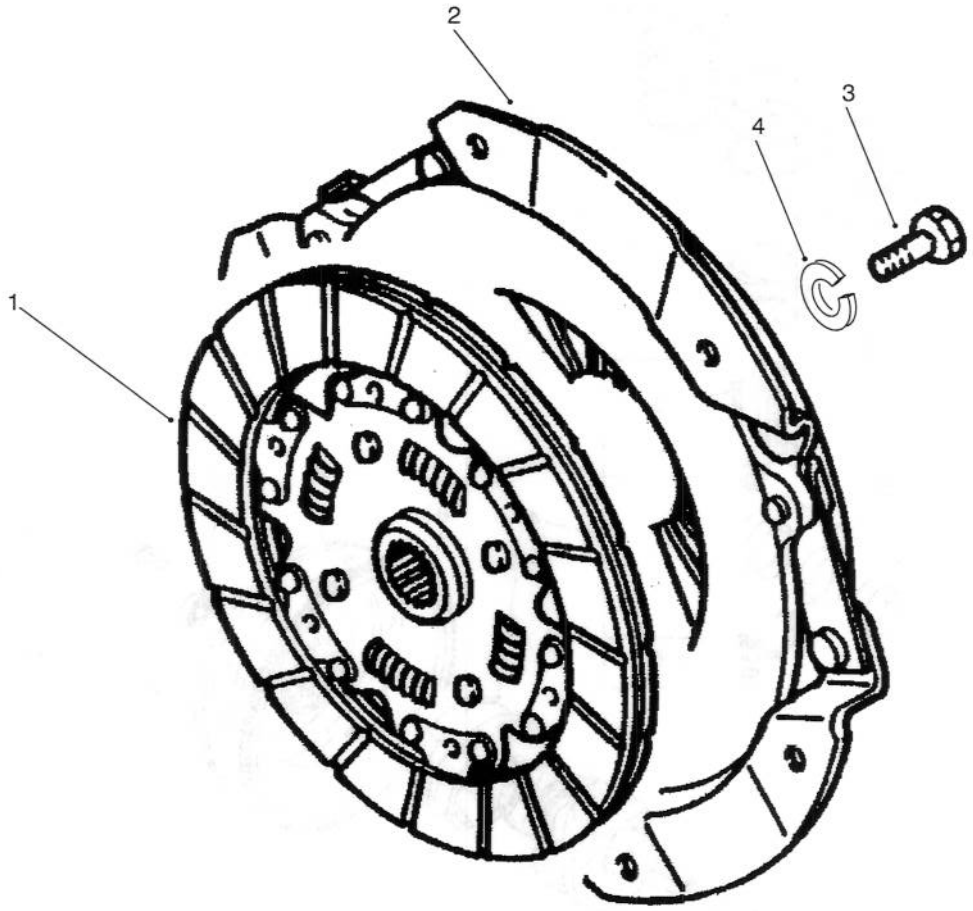



T–1644

# CLUTCH & CLUTCH RELEASE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 87–3190 | Disc – Clutch | 1 |
| 2 | 87–3180 | Cover – Clutch | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 3 | 48–7700 | Bolt | 6 |
| 4 | 3253–4 | Washer – Lock | 6 |

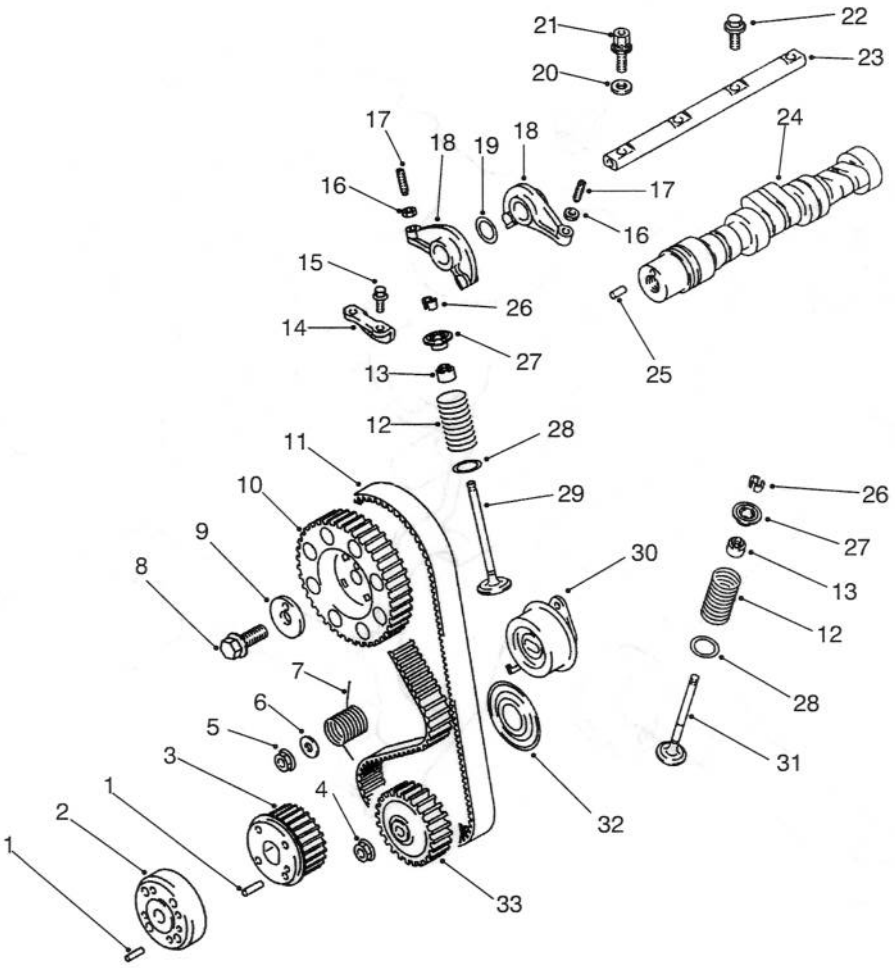



T–1634

# CAMSHAFT & VALVES ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–2149 | Pin | 2 |
| 2 | 92–2062 | Assembly – PTO Adapter (Incl. Ref.#1) | 1 |
| 3 | 92–2061 | Assembly – PTO Sprocket (Incl. Ref.#1) | 1 |
| 4 | 92–5122 | Nut – Timing Belt | 1 |
| 5 | 92–2145 | Nut – Flange | 1 |
| 6 | 92–2147 | Washer | 1 |
| 7 | 92–2001 | Spring | 1 |
| 8 | 92–2135 | Bolt – Flange Head | 1 |
| 9 | 92–1922 | Washer | 1 |
| 10 | 92–2000 | Sprocket | 1 |
| 11 | 92–2059 | Belt – Timing | 1 |
| 12 | 92–1977 | Spring – Valve | 6 |
| 13 | 92–1961 | Seal – Valve | 6 |
| 14 | 92–1964 | Plate – Cam | 1 |
| 15 | 92–2130 | Bolt – Flange Head | 2 |
| 16 | 92–1909 | Nut | 6 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 92–1953 | Screw – Adjusting | 6 |
| 18 | 92–1947 | Arm – Rocker | 6 |
| 19 | 92–1930 | Washer – Wave | 2 |
| 20 | 92–1972 | Washer | 2 |
| 21 | 92–2017 | Bolt – Rocker Shaft | 2 |
| 22 | 92–2018 | Bolt – Rocker Shaft | 2 |
| 23 | 92–1973 | Shaft – Rocker Arm | 1 |
| 24 | 92–2049 | Assembly – Camshaft (Incl. Ref.#25) | 1 |
| 25 | 92–2010 | Pin – Dowel | 1 |
| 26 | 42–7860 | Lock – Valve | 12 |
| 27 | 92–1931 | Retainer | 6 |
| 28 | 92–1936 | Seal – Valve | 6 |
| 29 | 92–1954 | Valve – Inlet | 3 |
| 30 | 92–1968 | Tensioner – Belt | 1 |
| 31 | 92–1955 | Valve – Exhaust | 3 |
| 32 | 92–2056 | Flange – PTO | 1 |
| 33 | 92–2042 | Sprocket – Oil | 1 |

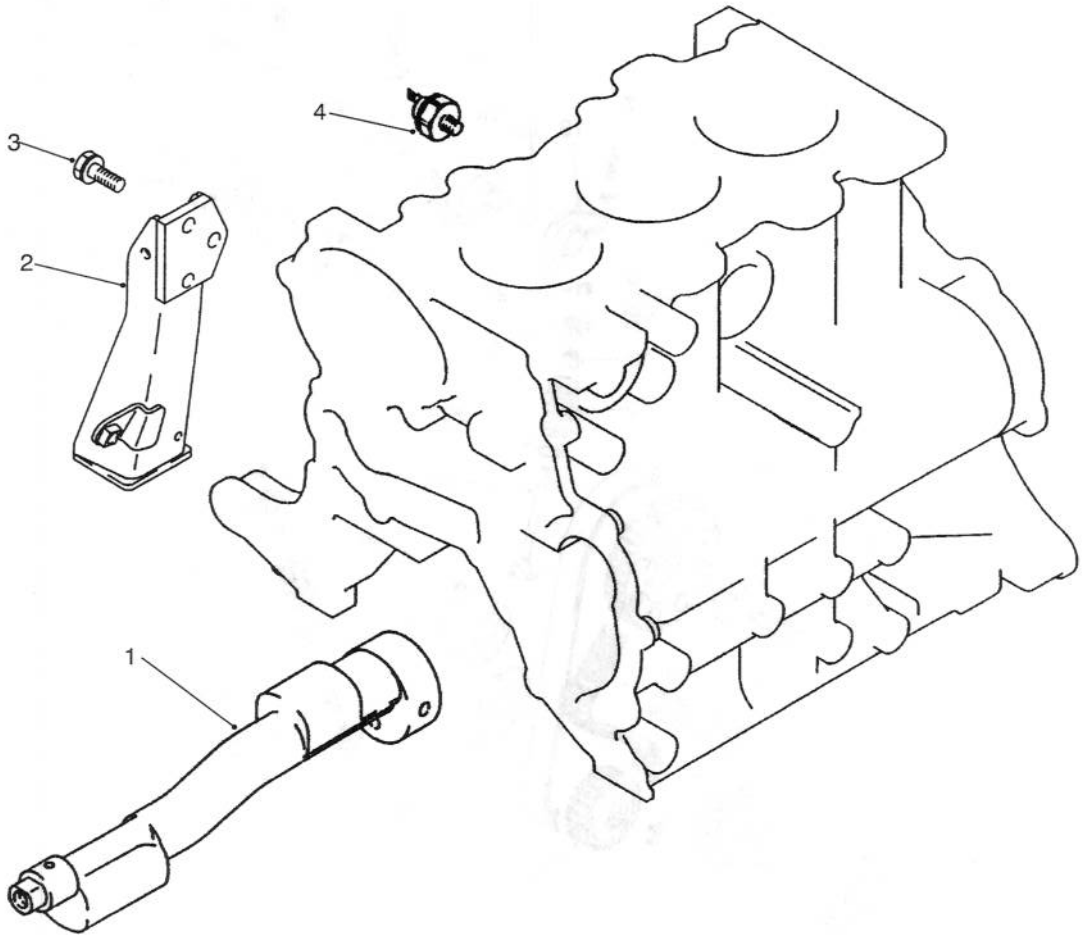



T–1635

# BALANCER & OIL PRESSURE SWITCH & ENGINE MOUNT

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–1998 | Shaft – Balancer | 1 |
| 2 | 92–2022 | Mount – Engine | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 3 | 92–5123 | Bolt – Engine Mount | 3 |
| 4 | 92–1978 | Switch – Oil Pressure | 1 |

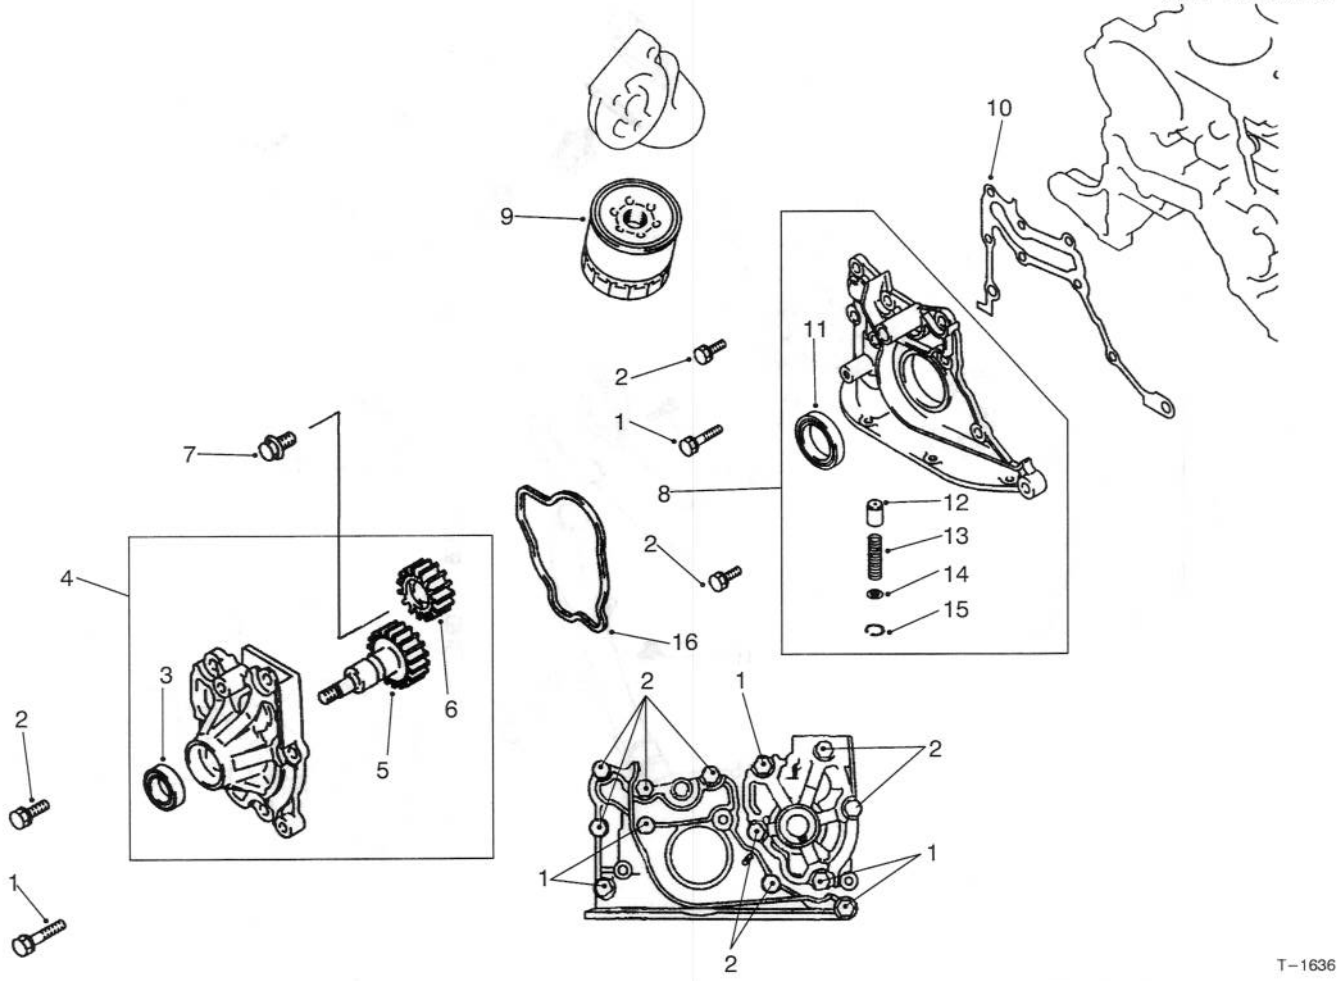



T–1636

# OIL PUMP & FILTER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 67–2560 | Bolt/washer | 5 |
| 2 | 42–9400 | Bolt/washer | 8 |
| 3 | 92–2032 | Seal – Oil | 1 |
| 4 | 92–2046 | Assembly – Oil Pump (Incl. Ref.#3, 5 & 6) | 1 |
| 5 | 92–1948 | Gear – Oil Pump | 1 |
| 6 | 92–1949 | Gear – Oil Pump | 1 |
| 7 | 92–1918 | Bolt – Flange Head | 1 |
| 8 | 92–1974 | Assembly – Case (Incl. Ref.#11–15) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | 67–4330 | Filter – Oil | 1 |
| 10 | 92–1946 | Gasket – Front | 1 |
| 11 | 92–1960 | Seal – Oil | 1 |
| 12 | 92–1927 | Plunger – Relief | 1 |
| 13 | 92–1928 | Spring – Relief | 1 |
| 14 | 92–1983 | Retainer | 1 |
| 15 | 92–2150 | Ring – Snap | 1 |
| 16 | 92–1941 | Gasket – Oil | 1 |

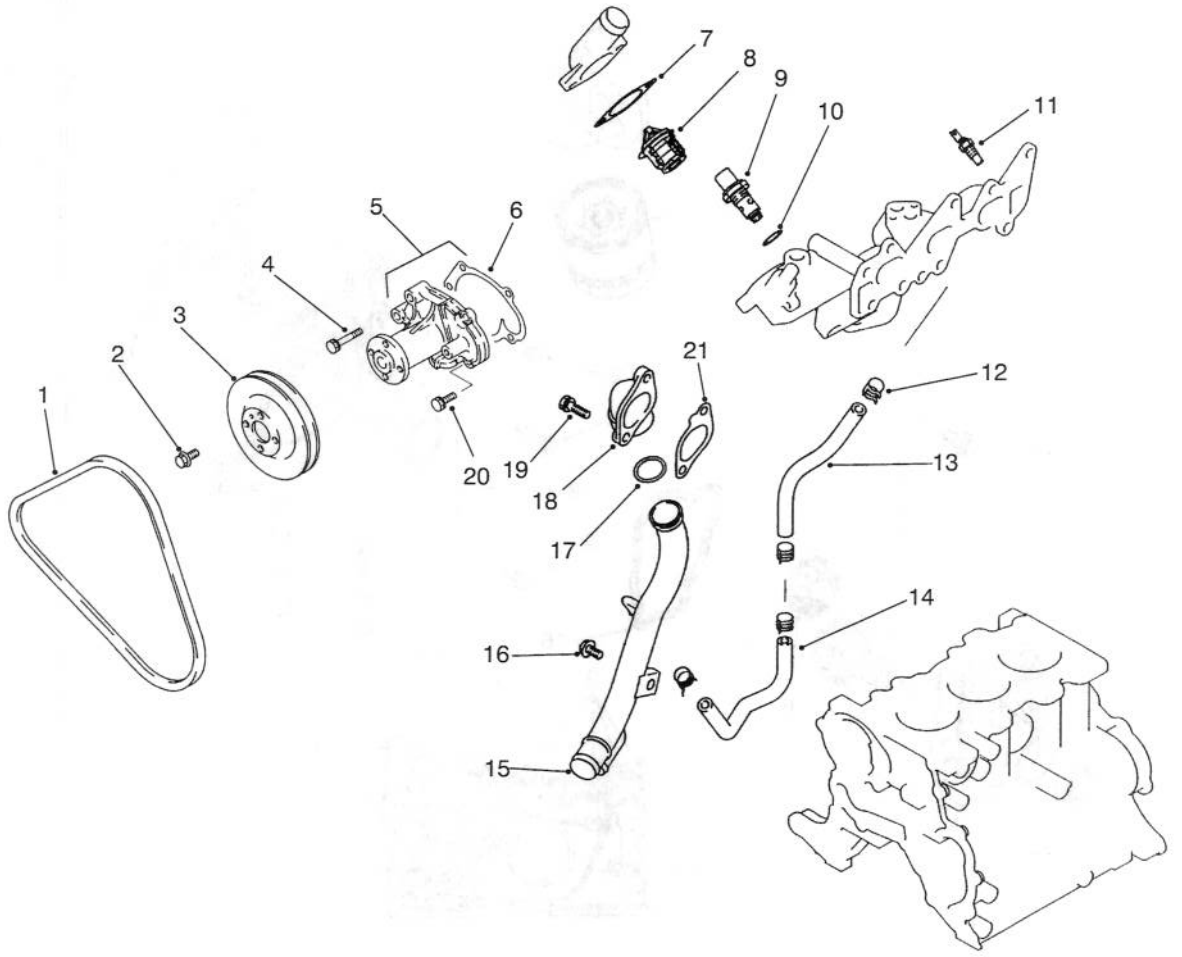



T–1639

# WATER PUMP & THERMOSTAT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–2041 | V–Belt | 1 |
| 2 | 92–5112 | Bolt – Flange Head | 4 |
| 3 | 92–2040 | Pulley | 1 |
| 4 | 92–2142 | Bolt/washer | 3 |
| 5 | 92–2060 | Assembly – Water Pump (Incl. Ref.#6) | 1 |
| 6 | 92–1989 | Gasket | 1 |
| 7 | 92–1950 | Gasket | 1 |
| 8 | 92–2039 | Kit – Thermostat (Incl. Ref.#7) | 1 |
| 9 | 92–5160 | Valve – Thermostat | 1 |
| 10 | 92–5161 | Gasket | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 92–1933 | Gauge – Water Temperature | 1 |
| 12 | 54–1400 | Clip | 4 |
| 13 | 92–1924 | Hose – Water By–Pass | 1 |
| 14 | 92–2009 | Hose – By–Pass | 1 |
| 15 | 92–2024 | Pipe – Water | 1 |
| 16 | 92–2132 | Bolt | 1 |
| 17 | 92–1908 | O–Ring | 1 |
| 18 | 92–2008 | Cover | 1 |
| 19 | 92–2138 | Bolt | 2 |
| 20 | 42–9400 | Bolt | 2 |
| 21 | 92–2155 | Gasket – Water Inlet | 1 |

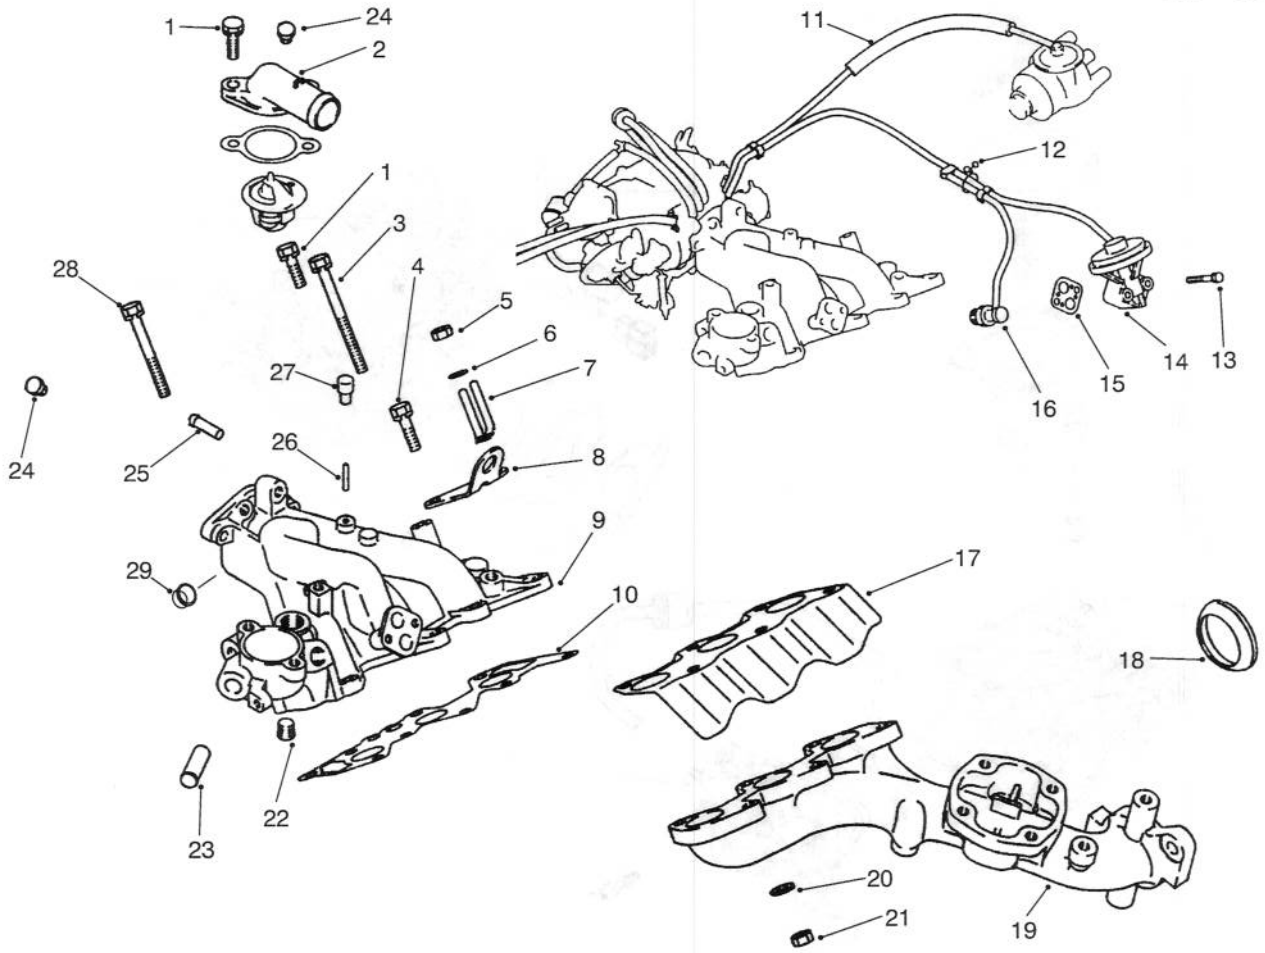



T–1640

# EXHAUST & INTAKE MANIFOLD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–2138 | Bolt | 3 |
| 2 | 92–2157 | Outlet – Water | 1 |
| 3 | 92–2141 | Bolt | 2 |
| 4 | 92–2139 | Bolt | 1 |
| 5 | 67–4670 | Nut | 2 |
| 6 | 67–3260 | Washer | 2 |
| 7 | 92–1901 | Clip | 1 |
| 8 | 92–1963 | Mount – Engine | 1 |
| 9 | 92–2054 | Manifold – Intake (Incl. Ref.#22, 23, 25 & 26) | 1 |
| 10 | 92–1993 | Gasket – Intake | 1 |
| 11 | 92–5164 | Assembly – Hose | 1 |
| 12 | 92–5165 | Clip | 1 |
| 13 | 92–5166 | Bolt | 2 |
| 14 | 92–2016 | Valve – EGR | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 15 | 92–5163 | Gasket – EGR Valve | 1 |
| 16 | 92–1906 | Assembly – Valve | 1 |
| 17 | 92–2036 | Cover – Exhaust Manifold | 1 |
| 18 | 92–2044 | Gasket – Exhaust Ring | 1 |
| 19 | 92–2023 | Manifold – Exhaust | 1 |
| 20 | 48–8030 | Washer | 6 |
| 21 | 48–7930 | Nut | 6 |
| 22 | 67–2390 | Plug – Taper | 1 |
| 23 | 92–1912 | Pipe – Manifold | 1 |
| 24 | 92–5162 | Plug – Inlet | 2 |
| 25 | 92–1917 | Nipple | 1 |
| 26 | 92–1951 | Nipple | 1 |
| 27 | 92–2002 | Cap Inlet | 1 |
| 28 | 92–2140 | Bolt | 1 |
| 29 | 92–2151 | Cap – Plug | 1 |

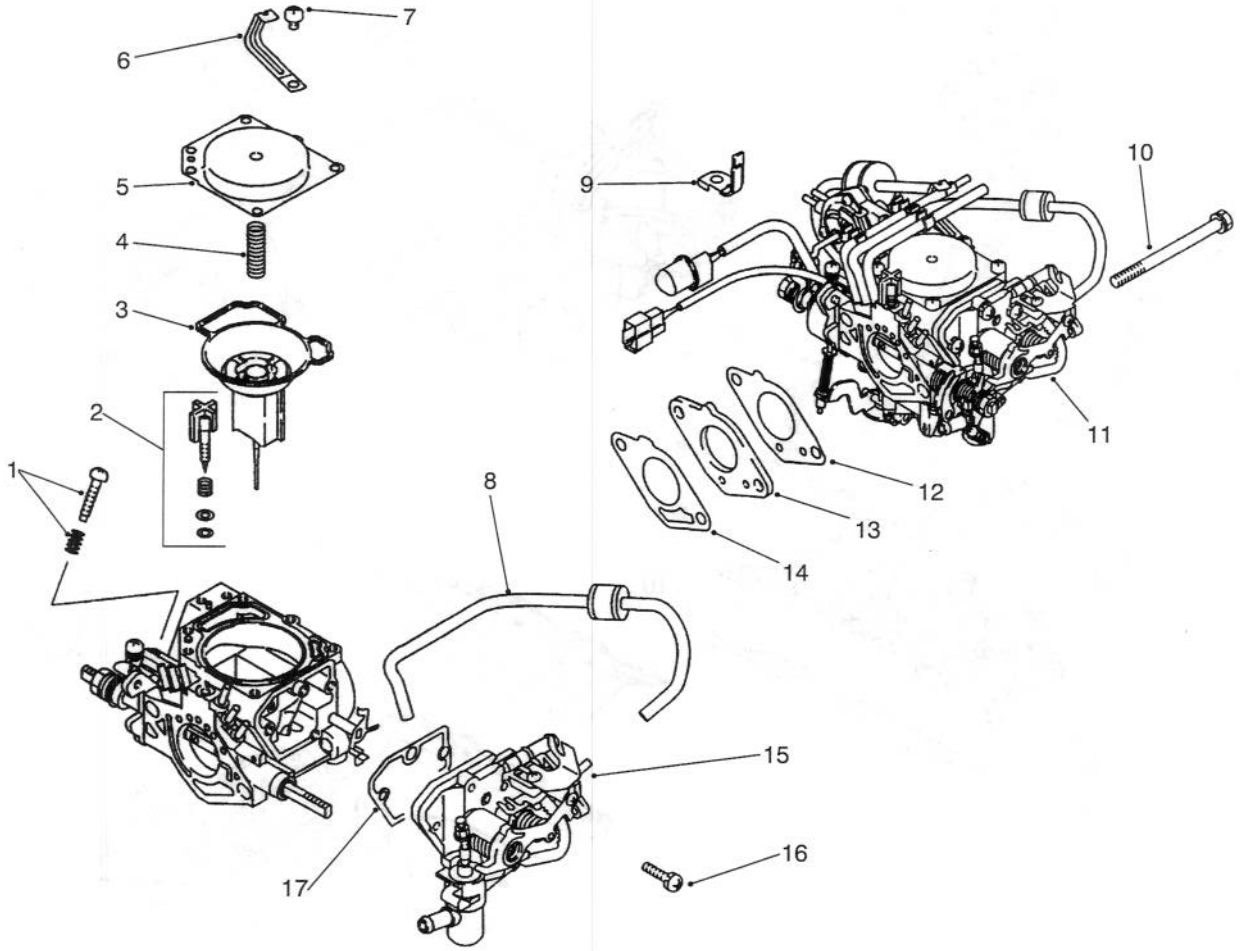



T–1637

# CARBURETOR INSTALLATION ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–5136 | Kit – Adjusting Screw | 1 |
| 2 | 92–2111 | Kit – Mixing Screw | 1 |
| 3 | 92–5142 | Valve – Carburetor Piston | 1 |
| 4 | 92–5137 | Spring | 1 |
| 5 | 92–5126 | Cover – Carburetor Top | 1 |
| 6 | 92–5156 | Clamp – Carburetor INR | 1 |
| 7 | 92–5145 | Screw | 6 |
| 8 | 92–5134 | Orifice – Choke | 1 |
| 9 | 92–5155 | Clamp – Carburetor | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 10 | 92–5157 | Bolt | 2 |
| 11 | 92–2058 | Carburetor | 1 |
| 12 | 92–2038 | Kit – Gasket | 1 |
| 13 | 92–5128 | Insulator – Carburetor | 1 |
| 14 | 92–2037 | Kit – Gasket | 1 |
| 15 | 92–5124 | Body – Choke, Auto | 1 |
| 16 | 92–5149 | Screw | 1 |
| 17 | 92–5143 | Gasket – Choke, Auto | 1 |

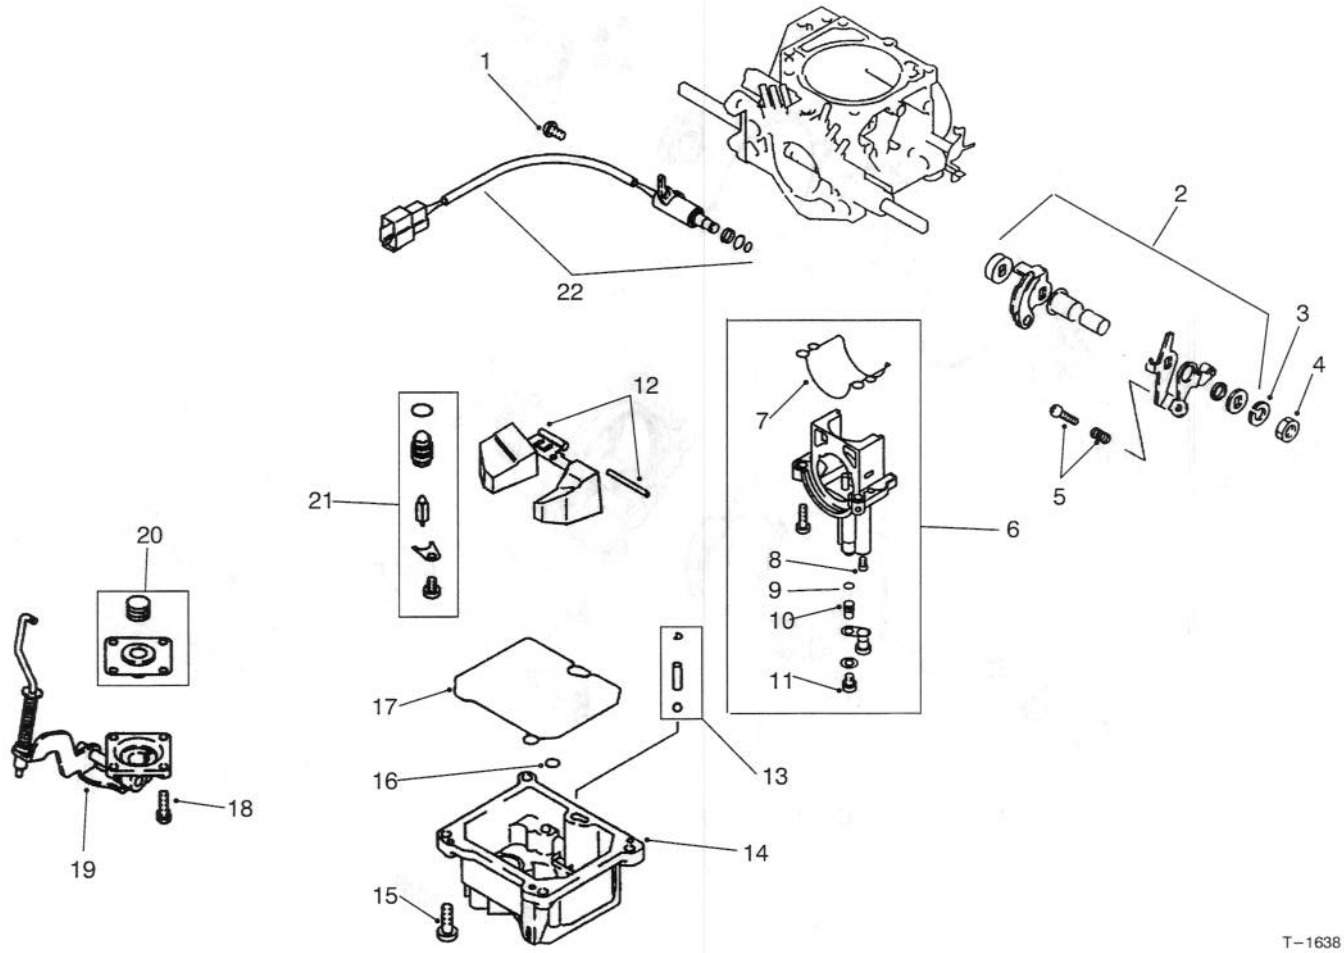



T–1638

# CARBURETOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–5148 | Screw | 1 |
| 2 | 92–5133 | Kit – Lever, Throttle | 1 |
| 3 | 67–3260 | Washer | 1 |
| 4 | 92–5154 | Nut – Carburetor, INR | 1 |
| 5 | 92–5135 | Kit – Screw Adjusting, Idle | 1 |
| 6 | 92–5132 | Kit – Holder, Main Jet (Incl. Ref.#7–11) | 1 |
| 7 | 92–5152 | O–Ring | 1 |
| 8 | 92–5129 | Jet – Pilot | 1 |
| 9 | 92–5150 | O–Ring | 1 |
| 10 | 92–5130 | Jet – Main | 1 |
| 11 | 92–5131 | Jet – Power | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 12 | 92–5127 | Kit – Float & Pin | 1 |
| 13 | 92–5125 | Kit – Check Valve | 1 |
| 14 | 92–5144 | Cover – Float Chamber | 1 |
| 15 | 92–5147 | Screw | 4 |
| 16 | 92–5151 | O–Ring | 1 |
| 17 | 92–5153 | O–Ring | 1 |
| 18 | 92–5146 | Screw | 4 |
| 19 | 92–2110 | Cover – Acc. Pump | 1 |
| 20 | 92–2154 | Kit – Diaphragm | 1 |
| 21 | 92–5140 | Kit – Needle Valve | 1 |
| 22 | 92–5141 | Valve – Fuel Cut–Off | 1 |

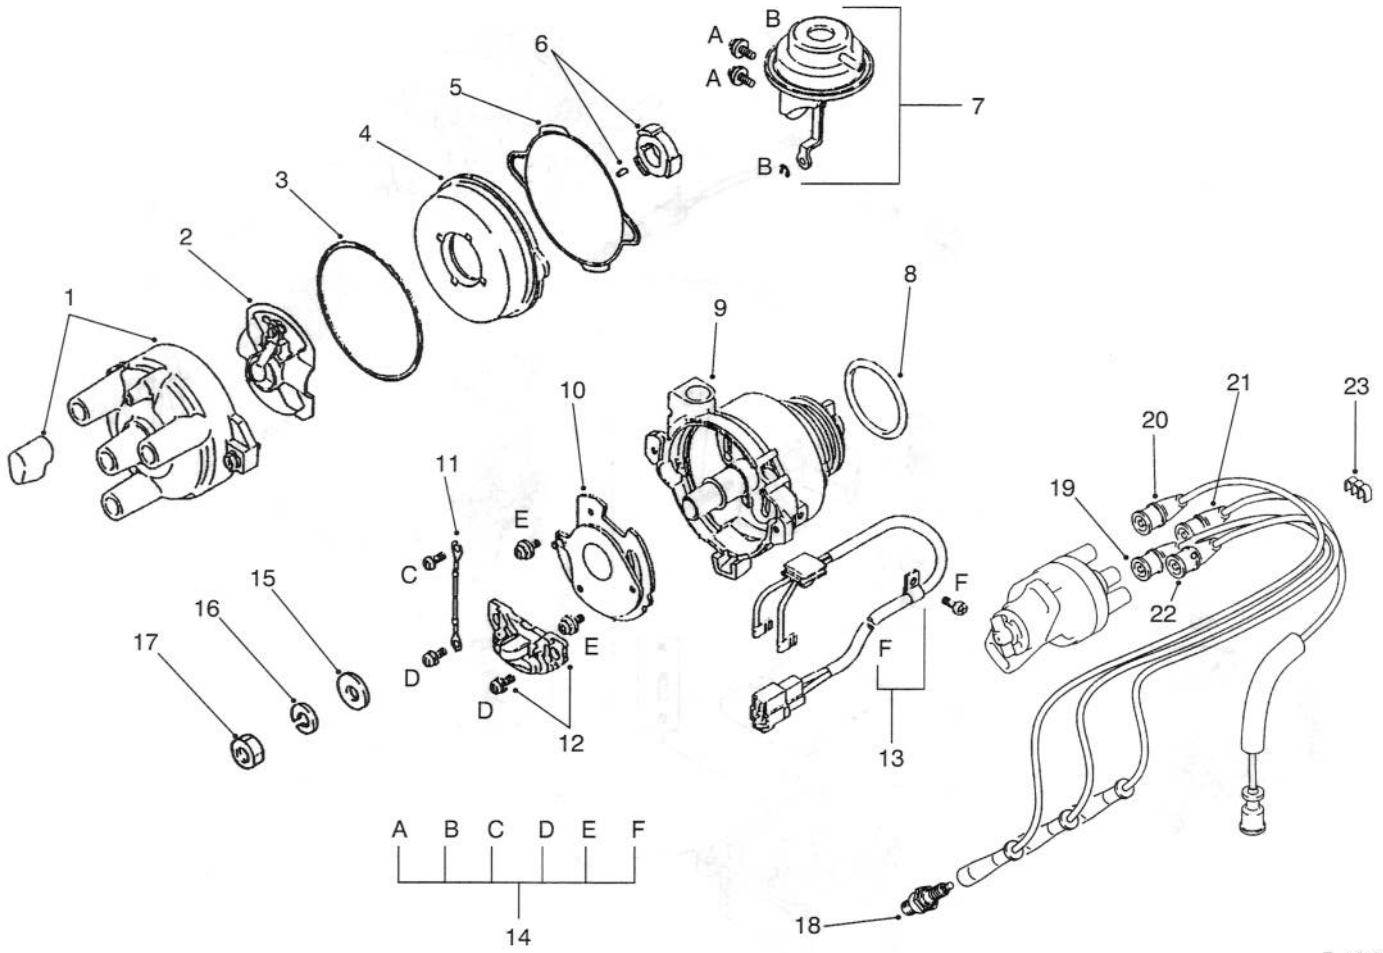



T–1643

# DISTRIBUTOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–2114 | Assembly – Cap | 1 |
| 2 | 92–2113 | Rotor | 1 |
| 3 | 92–2120 | Gasket | 1 |
| 4 | 92–5170 | Cover | 1 |
| 5 | 92–5171 | Gasket – Cover | 1 |
| 6 | 92–2116 | Assembly – Signal Rotor | 1 |
| 7 | 92–2117 | Chamber – Vacuum | 1 |
| 8 | 92–2109 | O–Ring | 1 |
| 9 | 92–2122 | Housing | 1 |
| 10 | 92–2118 | Plate | 1 |
| 11 | 92–2119 | Wire – Lead | 1 |
| 12 | 92–2108 | Igniter Set | 1 |
| 13 | 92–2121 | Wire Assembly – Lead | 1 |
| 14 | 92–2115 | Screw Set | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 15 | 92–2146 | Washer | 1 |
| 16 | 67–3260 | Washer | 1 |
| 17 | 67–4670 | Nut | 1 |
| 18 | 92–2153 | Plug – Spark | 3 |
| 19 | 92–2030 | Wire – Spark Plug, #2 | 1 |
| 20 | 92–2029 | Wire – Spark Plug, #1 | 1 |
| 21 | 92–2028 | Wire – High Tension | 1 |
| 22 | 92–2031 | Wire – Spark Plug, #3 | 1 |
| 23 | 92–5172 | Clamp | 1 |
| * | 92–2043 | Assembly – Distributor (Incl. Ref.#1–14) | 1 |
| * | 92–2125 | Assy. – Spark Plug Wire Set (Incl. Ref.#19–22) | 1 |

*Not Illustrated

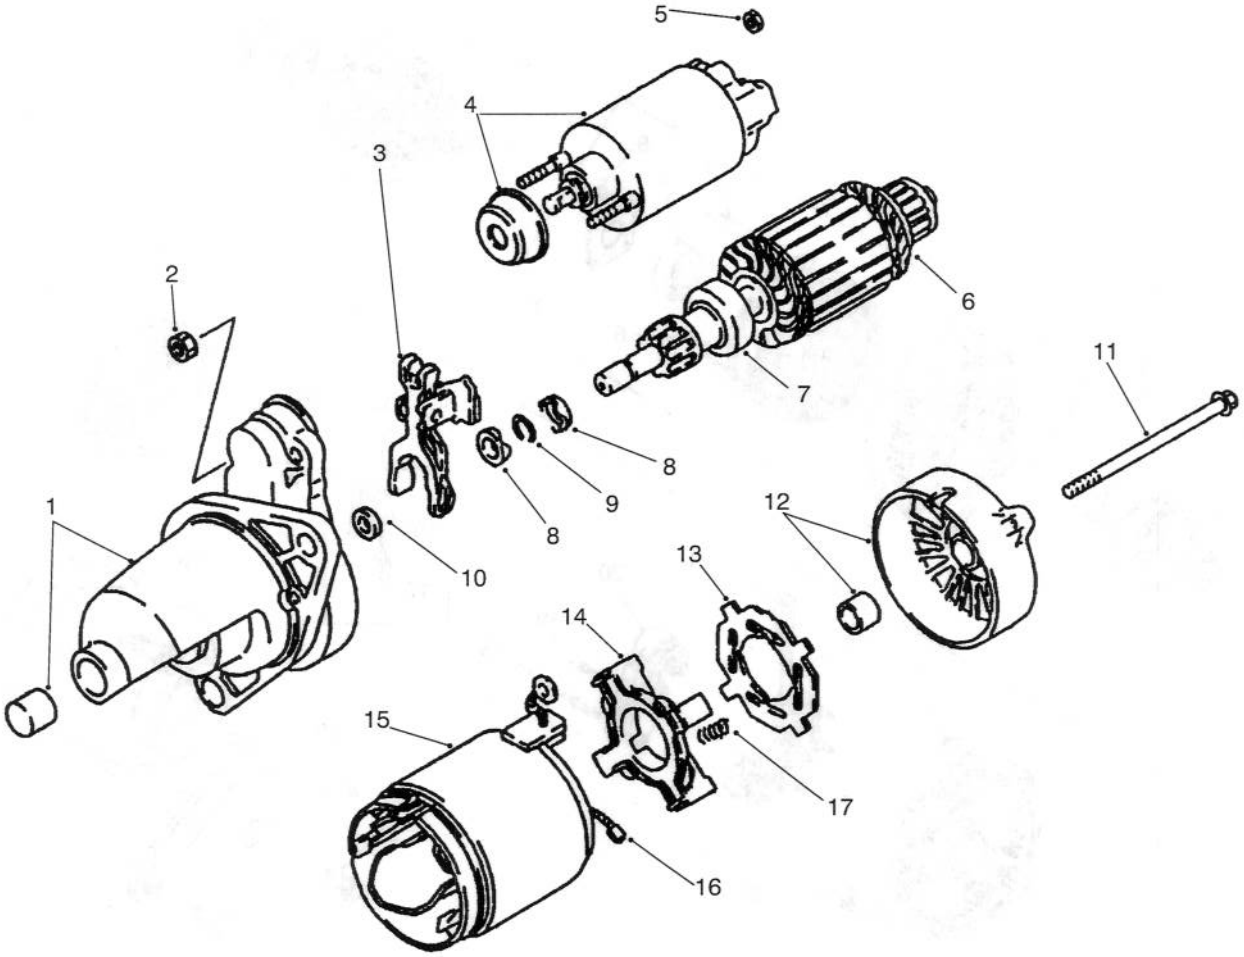



T–1641

# STARTER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–5167 | Bracket – Front | 1 |
| 2 | 92–2106 | Nut | 2 |
| 3 | 92–2102 | Lever – Clutch | 1 |
| 4 | 92–2095 | Kit – Switch | 1 |
| 5 | 92–2107 | Nut | 1 |
| 6 | 92–2093 | Armature | 1 |
| 7 | 92–2094 | Clutch | 1 |
| 8 | 92–2097 | Nut | 2 |
| 9 | 92–2096 | Ring – Snap | 1 |
| 10 | 92–2098 | Washer | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 92–2099 | Bolt | 2 |
| 12 | 92–5168 | Bracket – Rear | 1 |
| 13 | 92–2092 | Insulator | 1 |
| 14 | 92–2091 | Assembly – Holder | 1 |
| 15 | 92–2088 | Yoke (Incl. Ref.#16) | 1 |
| 16 | 92–2089 | Brush | 4 |
| 17 | 92–2090 | Spring | 4 |
| * | 92–2055 | Assembly – Starter (Incl. Ref.#1–17) | 1 |

*Not Illustrated

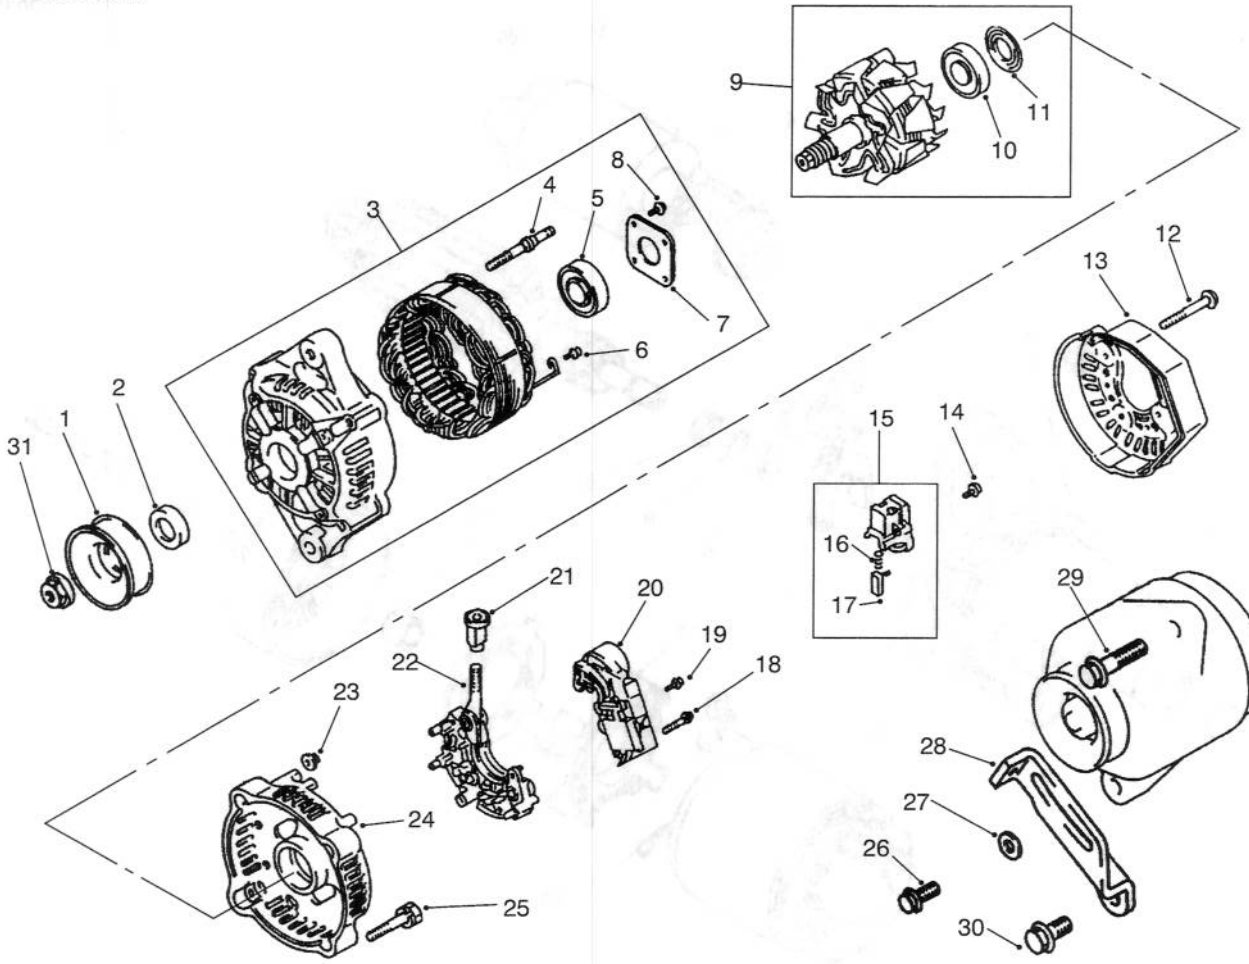



T–1642

# ALTERNATOR ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–5169 | Pulley | 1 |
| 2 | 92–2079 | Collar | 1 |
| 3 | 92–2103 | Assembly – Bracket, Front (Incl. Ref.#4–8) | 1 |
| 4 | 92–2078 | Bolt | 2 |
| 5 | 92–2065 | Bearing | 1 |
| 6 | 92–2085 | Screw W/washer | 6 |
| 7 | 92–2076 | Plate | 1 |
| 8 | 92–2077 | Screw | 4 |
| 9 | 92–2075 | Assembly – Rotor (Incl. Ref.#10–11) | 1 |
| 10 | 92–2070 | Bearing | 1 |
| 11 | 92–2069 | Cover – Bearing | 1 |
| 12 | 92–2087 | Bolt W/washer | 3 |
| 13 | 92–2081 | Cover – End | 1 |
| 14 | 92–2085 | Screw W/washer | 6 |
| 15 | 92–2073 | Assembly – Holder (Incl. Ref.#16–17) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 16 | 92–2067 | Spring – Brush | 2 |
| 17 | 92–2068 | Brush | 2 |
| 18 | 92–2071 | Screw | 2 |
| 19 | 92–2086 | Screw W/washer | 1 |
| 20 | 92–2084 | Regulator | 1 |
| 21 | 92–2083 | Bushing | 1 |
| 22 | 92–2082 | Rectifier | 1 |
| 23 | 92–2066 | Nut | 2 |
| 24 | 92–2080 | Frame – End | 1 |
| 25 | 92–2100 | Bolt | 2 |
| 26 | 92–2133 | Bolt – Flange Head | 1 |
| 27 | 92–1984 | Washer | 1 |
| 28 | 92–2011 | Brace | 1 |
| 29 | 92–1932 | Bolt | 1 |
| 30 | 92–2134 | Bolt – Flange Head | 1 |
| 31 | 92–2156 | Nut – Alternator | 1 |
| * | 92–2025 | Assembly – Alternator (Incl. Ref.#1–25 & 31) | 1 |

*Not Illustrated

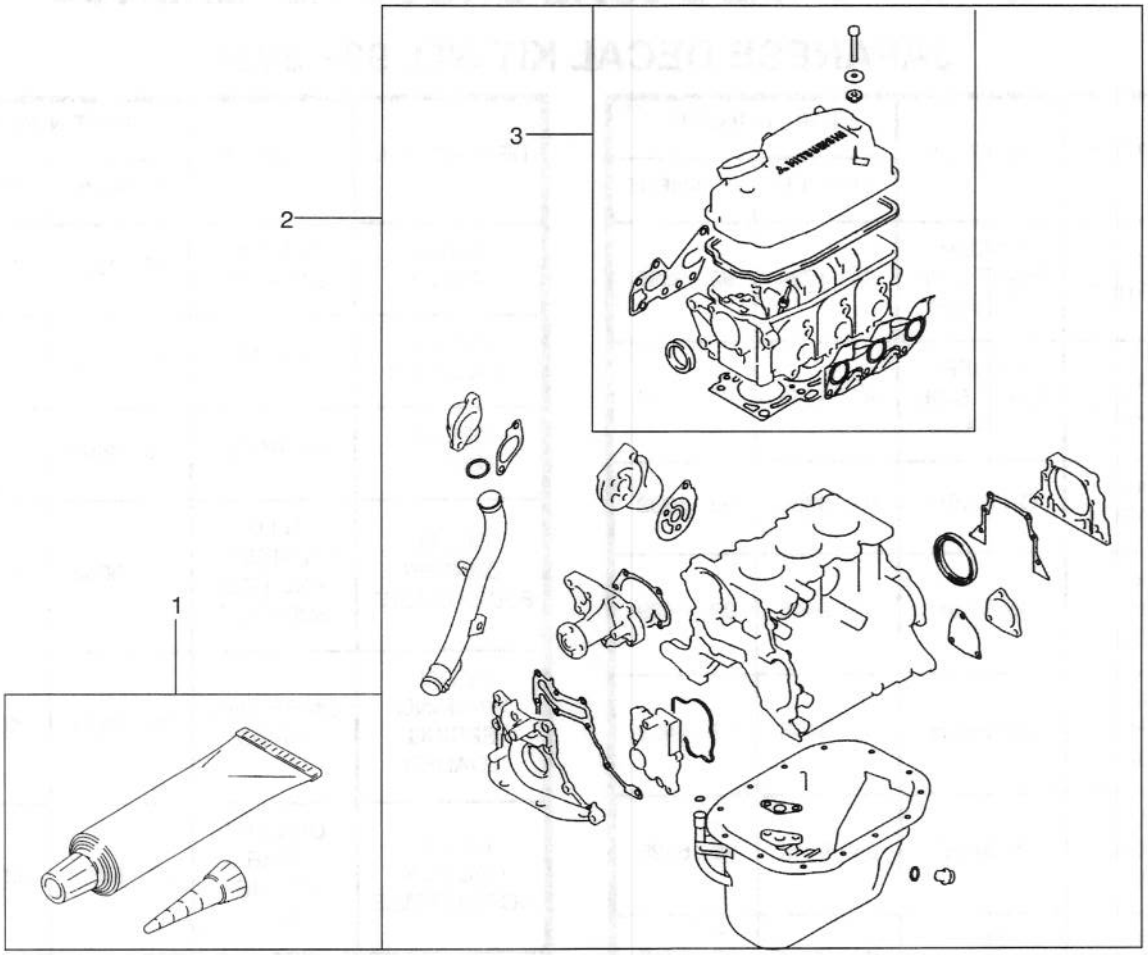


T–1629

# GASKET KIT

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92–5100 | Gasket – Liquid | 1 |
| 2 | 92–2127 | Kit – Overhaul Gasket | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 3 | 92–2126 | Kit – Gasket, Upper | 1 |

# INTERNATIONAL DECAL CROSS REFERENCE

## JAPANESE DECAL KIT NO. 93–8951

| DESCRIPTION | LOCATION | PART NUMBER | |
|---|---|---|---|
| | | EUROPE | JAPANESE |
| DECAL LOAD RATING | UNDER RIGHT SIDE OF DASH | 94–1224 | 92–5395 |
| DECAL FUSE BLOCK | UNDER RIGHT SIDE OF DASH | 93–9851 | 92–5374 |
| DECAL SUPERVISOR | ON DASH | 93–9856 | 92–5332 |
| DECAL DASH (DIESEL) | ON DASH | 93–9445 | 92–6429 |
| DECAL DASH (GAS) | ON DASH | 93–9446 | 92–6422 |
| DECAL CAUTION FUEL | ON SKIRT | 93–9448 | 92–5325 |
| DECAL AXLE RANGE | ON CONSOLE | 93–9857 | 92–5318 |
| DECAL PTO | ON CONSOLE | 93–9861 | 92–5360 |
| DECAL DIFFERENTIAL LOCK | ON CONSOLE | 93–9430 | 92–5311 |
| DECAL REMOTE HYDRAULICS | ON CONSOLE | 93–9866 | 92–5346 |
| DECAL DUMP HYDRAULICS | ON CONSOLE | 93–9444 | 92–5353 |
| DECAL PARKING BRAKE | ON CONSOLE | 93–9443 | 92–5304 |
| DECAL QUICK REF. (DIESEL) | ON REAR OF SKIRT | 87–9070 | 92–6401 |
| DECAL QUICK REF. (GAS) | ON REAR OF SKIRT | 87–9060 | 92–5494 |

| DESCRIPTION | LOCATION | PART NUMBER | |
|---|---|---|---|
| | | EUROPE | JAPANESE |
| DECAL DANGER | ON FRONT OF SKIRT | 93–9860 | 92–6408 |
| DECAL ROLLOVER | ON ROPS | 93–9850 | 92–5388 |
| DECAL ROPS | ON ROPS | 93–9859 | 92–5381 |
| DECAL DANGER BED SUPPORT | ON LIFT CYLINDERS AND BED SUPPORT | 93–9852 | 92–6415 |
| DECAL WARNING SPRING LOADED | ON SPRING CRADLE | 93–9879 | 92–6493 |
| DECAL CAUTION HOT SURFACE | ON LEFT REAR FRAME RAIL | 93–8071 | 92–6479 |
| DECAL ATF | ON REAR AXLE TUBE | 93–9442 | 92–5473 |
| DECAL DANGER | ON REAR AXLE TUBE | 93–9862 | 92–5367 |
| DECAL GREASE DRIVE SHAFTS | ON REAR AXLE TUBE | 93–9449 | 92–6444 |
| DECAL WARNING | ON FAN SHROUD | 93–6681 | 92–7240 |
| DECAL WARNING ROTATING MEMBER | ON FAN SUPPORT | 93–7814 | 83–6030 |
| DECAL CAUTION | ON FAN SUPPORT | 93–9447 | 93–3766 |
| DECAL NO STEP | ON BATTERY COVER | 93–6687 | 84–2780 |
| DECAL STARTING FLUID (DIESEL) | IN FRONT OF RADIATOR | 93–7275 | 84–6660 |

# TORO PART NUMBER INDEX



| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 111071 | Bumper | 14 | 4 | 2 |
| 116749 | Horn Assembly | 1 | 21 | 1 |
| 146489 | Rivet – Pop | 1 | 28 | 8 |
| 5–3637 | Washer – Flat | 42 | 7 | 1 |
| 18–1520 | Filter – Fuel | 43 | 5 | 1 |
| 18–1720 | Joint – Ball | 32 | 29 | 1 |
| 18–2830 | Horn Switch Assembly | 2 | 31 | 1 |
| 18–4260 | Assy. – Screw/Lockwasher | 6 | 9 | 2 |
| 18–4270 | Clamp – Ball Return Guide | 6 | 8 | 1 |
| 18–4340 | Plug – Rack Piston End | 6 | 6 | 1 |
| 18–5160 | Seal Kit – Pitman Shaft | 7 | * | 1 |
| 18–5170 | Seal Kit – Valve Ring | 7 | * | 1 |
| 18–5180 | Bearing Kit – Lower Thrust | 7 | * | 1 |
| 18–5190 | Ball – Chrome Alloy | 6 | 10 | 11 |
| 18–5430 | Plug – Expansion | 33 | 28 | 1 |
| 18–5440 | Spacer | 33 | 27 | 2 |
| 18–5450 | Bearing | 33 | 17 | 2 |
| 18–5520 | Lever – Rocker | 33 | 25 | 1 |
| 18–5530 | Screw & Lockwasher | 33 | 29 | 2 |
| 18–5540 | Retainer – Sleeve Stop | 33 | 26 | 3 |
| 18–5580 | Seal – Oil, Front | 33 | 37 | 1 |
| 18–5620 | Screw | 33 | 2 | 4 |
| 18–5630 | Washer – Lock | 33 | 3 | 4 |
| 18–5640 | Ring – Retaining | 33 | 6 | 2 |
| 18–5660 | Pin – Pivot, Flyweight | 33 | 32 | 2 |
| 18–5670 | Retainer – Pivot Pin | 33 | 33 | 2 |
| 18–5750 | Pin | 33 | 16 | 1 |
| 18–5770 | Washer – Lock | 33 | 7 | 2 |
| 18–5790 | Gasket | 33 | 5 | 1 |
| 19–4050 | Knob | 41 | 10 | 2 |
| 19–4050 | Knob | 26 | 33 | 1 |
| 20–7150 | Toggle Switch Assembly | 3 | 62 | 1 |
| 21–0360 | Nut | 9 | 6 | 1 |
| 21–1830 | Spring – Extension | 8 | 30 | 1 |
| 21–5640 | Joint – Ball | 32 | 9 | 2 |
| 21–9260 | Spacer | 5 | 4 | 1 |
| 22–8330 | Plug | 48 | 1 | 2 |
| 22–8340 | Spring | 48 | 3 | 2 |
| 22–8350 | Ball | 48 | 4 | 2 |
| 22–8360 | Pin – Cam | 48 | 6 | 2 |
| 22–8370 | Seat–Check Valve | 48 | 5 | 2 |
| 22–8380 | Retainer – Spring | 48 | 10 | 2 |
| 22–8410 | Spring | 48 | 11 | 1 |
| 22–8420 | Spool | 48 | 8 | 1 |
| 22–8480 | Ring – Retaining, Spool | 48 | 13 | 1 |
| 22–8490 | Ring – Retaining | 48 | 14 | 1 |
| 22–8500 | O–Ring | 48 | 9 | 2 |
| 23–3030 | Spacer | 48 | 12 | 1 |
| 23–7270 | Nut – Lug | 20 | 4 | 10 |
| 23–7270 | Nut – Lug | 23 | 18 | 10 |
| 24–7922 | Conduit – Hose (CE) | 46 | 36 | 1 |
| 24–7923 | Conduit – Hose (CE) | 46 | 35 | 2 |
| 26–0071 | Bumper | 1 | 9 | 2 |
| 27–2360 | Ignition Switch Assembly | 2 | 43 | 1 |
| 27–6590 | Spacer – Thick | 28 | 7 | 4 |
| 27–6600 | Spacer – Thin | 28 | 3 | 4 |
| 28–8200 | O–Ring | 6 | 27 | 1 |
| 28–8210 | Bolt – Flange Hex. Hd. | 6 | 17 | 4 |
| 28–8220 | Nut – Lash Adjuster | 6 | 16 | 1 |
| 28–8270 | Seal Service Kit – End Plug | 7 | * | 1 |
| 28–8280 | Seal Kit – Side Cover | 6 | 14 | 1 |
| 28–8290 | Seal Service Kit | 7 | * | 1 |
| 33–1300 | Assembly – Element | 44 | 5 | 1 |
| 33–1310 | Baffle | 44 | 8 | 1 |
| 33–1330 | Assembly – Nut | 44 | 6 | 1 |
| 33–1340 | Clamp Assembly | 44 | 7 | 1 |
| 33–1350 | Band Assembly | 44 | 3 | 2 |
| 33–3090 | Bushing – Flange | 18 | 7 | 4 |
| 36–3400 | Decal – No Step (US) | 41 | 11 | 1 |
| 39–7310 | O–Ring | 6 | 35 | 3 |
| 39–7310 | Seal – O–Ring | 45 | 29 | 2 |
| 39–7420 | Washer – Lock | 5 | 22 | 1 |
| 39–7420 | Washer – Lock | 6 | 42 | 1 |
| 39–7440 | Nut – Lock | 5 | 23 | 1 |
| 39–7440 | Nut – Pitman Arm | 6 | 41 | 1 |
| 42–3560 | Screw – Shoulder | 16 | 15 | 1 |
| 42–7160 | Pin – Dowel | 53 | 12 | 3 |
| 42–7860 | Lock – Valve | 55 | 26 | 12 |
| 42–9230 | Screw – Cap Hex. Hd. (CE) | 31 | 61 | 1 |
| 42–9400 | Bolt | 58 | 20 | 2 |
| 42–9400 | Bolt/washer | 57 | 2 | 8 |
| 42–9530 | Screw – Cap Hex. Hd. | 36 | 10 | 25 |
| 42–9530 | Screw – Cap Hex. Hd. | 12 | 18 | 9 |
| 42–9560 | Stud | 51 | 14 | 3 |
| 42–9580 | Nut – Hex. | 30 | 12 | 3 |
| 42–9850 | Washer – Lock | 12 | 17 | 12 |
| 42–9850 | Washer – Lock | 39 | 21 | 3 |
| 42–9850 | Washer – Lock | 36 | 32 | 42 |
| 43–0090 | Screw – Cap Hex. Hd. | 29 | 20 | 1 |
| 43–1911 | Fan | 26 | 26 | 1 |
| 43–1950 | Valve | 46 | 9 | 1 |
| 43–4300 | Trim | 43 | 1 | 1 |
| 43–4300 | Trim | 30 | 41 | 2 |
| 43–5150 | Piston | 47 | 11 | 1 |
| 43–6550 | Ring – Retaining | 5 | 10 | 2 |
| 44–0760 | Decal – Warning (US) | 18 | 33 | 2 |
| 44–2230 | Disc – Rubber | 28 | 4 | 2 |
| 46–8091 | Screw – Hex. Flange Hd. | 26 | 8 | 2 |
| 47–2964 | Hose – Fuel | 43 | 9 | 1 |
| 48–7560 | Screw – Cap Hex. Hd. | 29 | 9 | 3 |
| 48–7560 | Screw – Cap Hex. Hd. | 36 | 24 | 1 |
| 48–7610 | Bolt – Hex. Head | 52 | 8 | 2 |
| 48–7610 | Screw – Cap Hex. Hd. | 12 | 27 | 4 |
| 48–7620 | Screw – Cap Hex. Hd. (CE) | 31 | 58 | 1 |
| 48–7650 | Screw – Cap Hex. Hd. | 43 | 3 | 2 |
| 48–7700 | Bolt | 54 | 3 | 6 |
| 48–7700 | Screw – Cap Hex. Hd. | 39 | 9 | 3 |
| 48–7730 | Screw – Cap Hex. Hd. | 36 | 18 | 5 |
| 48–7740 | Screw – Cap Hex. Hd. | 5 | 15 | 4 |
| 48–7890 | Nut – Hex. | 30 | 8 | 1 |
| 48–7930 | Nut | 59 | 21 | 6 |
| 48–7930 | Nut – Hex. | 36 | 2 | 1 |
| 48–8030 | Washer | 59 | 20 | 6 |
| 48–8070 | Washer – Flat | 5 | 6 | 1 |
| 48–9480 | Screw – Cap Hex. Hd. | 30 | 20 | 2 |
| 48–9520 | Nut – Lock | 22 | 28 | 2 |
| 48–9520 | Nut – Lock | 34 | 50 | 3 |
| 49–7810 | Nut – Lock | 43 | 10 | 2 |
| 49–9150 | Washer – Flat | 16 | 2 | 1 |
| 49–9150 | Washer – Flat | 15 | 36 | 1 |
| 52–2480 | Spacer | 30 | 24 | 2 |
| 52–2890 | Bushing – Flange | 8 | 24 | 2 |
| 54–0110 | Element – Oil Filter | 34 | 38 | 1 |
| 54–1400 | Clip | 58 | 12 | 4 |
| 55–7120 | Switch – Brake Light | 8 | 9 | 1 |
| 55–7290 | Battery | 41 | 9 | 1 |
| 56–0100 | Plug – Taper | 50 | 9 | 1 |
| 56–2150 | Screw – Cap Hex. Hd. | 12 | 10 | 4 |
| 56–7973 | Clamp – Hydraulic Tube | 45 | 17 | 4 |
| 57–6380 | Screw – Cap Hex. Hd. | 30 | 22 | 2 |
| 57–6380 | Screw – Cap Hex. Hd. | 12 | 31 | 3 |
| 58–4250 | Magnet | 26 | 31 | 2 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 59–2290 | Spacer | 29 | 19 | 1 |
| 60–6750 | Screw – Cap Hex. Hd. | 36 | 4 | 11 |
| 62–5550 | Decal – TORO | 1 | 2 | 1 |
| 62–7650 | Gasket – Sending Unit | 42 | 3 | 1 |
| 63–6940 | Hose – Fuel | 30 | 45 | 1 |
| 63–7640 | Unit – Sending | 42 | 4 | 1 |
| 63–8140 | Pulley | 26 | 15 | 1 |
| 63–8140 | Pulley | 32 | 19 | 1 |
| 63–8360 | Key – Ignition | 2 | 10 | 1 |
| 63–9640 | Hose – Fuel | 42 | 12 | 2 |
| 65–5100 | Handle | 26 | 6 | 1 |
| 65–5220 | Screw – Hex. Socket Hd. | 15 | 40 | 3 |
| 65–5360 | Spring – Extension | 5 | 35 | 1 |
| 65–5390 | Washer – Flat | 30 | 39 | 4 |
| 66–3160 | Screw – Cap Hex. Hd. | 12 | 1 | 2 |
| 66–3160 | Screw – Cap Hex. Hd. | 32 | 12 | 2 |
| 66–3160 | Screw – Cap Hex. Hd. | 34 | 24 | 7 |
| 66–3160 | Screw – Cap Hex. Hd. | 30 | 27 | 1 |
| 66–3160 | Screw – Cap Hex. Hd. | 30 | 40 | 4 |
| 66–3160 | Screw – Cap Hex. Hd. | 30 | 49 | 1 |
| 66–3240 | Cap – Radiator | 26 | 5 | 1 |
| 66–6840 | Decal – Caution (US) | 22 | 32 | 2 |
| 67–2250 | Bolt | 50 | 11 | 8 |
| 67–2360 | Bushing | 50 | 12 | 4 |
| 67–2390 | Plug – Taper | 50 | 16 | 1 |
| 67–2390 | Plug – Taper | 59 | 22 | 1 |
| 67–2560 | Bolt/washer | 57 | 1 | 5 |
| 67–3260 | Washer | 61 | 3 | 1 |
| 67–3260 | Washer | 59 | 6 | 2 |
| 67–3260 | Washer | 62 | 16 | 1 |
| 67–4330 | Filter – Oil | 57 | 9 | 1 |
| 67–4670 | Nut | 59 | 5 | 2 |
| 67–4670 | Nut | 62 | 17 | 1 |
| 68–9950 | Spring – Extension | 34 | 44 | 1 |
| 70–1480 | Relay | 30 | 16 | 1 |
| 70–2100 | Assembly – Thrust Sleeve & | 33 | 31 | 1 |
| 70–2120 | Spacer | 33 | 35 | 1 |
| 70–2140 | Bearing – Front | 33 | 36 | 1 |
| 70–2150 | Flyweight | 33 | 9 | 2 |
| 71–2690 | Hose – Fuel | 43 | 7 | 1 |
| 71–3381 | Tube – Overflow | 26 | 3 | 2 |
| 71–4780 | Seal – Oil, Rocker Shaft | 33 | 18 | 1 |
| 71–5320 | Washer – Flat | 16 | 18 | 1 |
| 72–4310 | Switch – Ball N.C. | 34 | 46 | 1 |
| 72–5890 | Shaft – Rocker | 33 | 20 | 1 |
| 72–5910 | Assembly – Bumper Screw | 33 | 23 | 1 |
| 72–5940 | Bearing – Needle | 33 | 30 | 1 |
| 74–0720 | Tube – Manual | 14 | 1 | 1 |
| 75–4701 | Hose – Fuel | 42 | 11 | 1 |
| 75–4701 | Hose – Fuel | 30 | 46 | 1 |
| 75–6820 | Hourmeter | 2 | 16 | 1 |
| 75–6880 | Spark Arrestor (Optional) | 30 | 51 | 1 |
| 75–9610 | Spacer | 45 | 7 | 1 |
| 76–2290 | Spacer | 16 | 37 | 1 |
| 76–4430 | Fitting – Fuel 90° | 42 | 9 | 1 |
| 76–8750 | Plate – Warning | 26 | 40 | 1 |
| 76–9100 | Spacer | 29 | 13 | 6 |
| 76–9100 | Spacer – Hi–Lo Lever | 15 | 35 | 1 |
| 80–6990 | Washer | 23 | 39 | 4 |
| 80–6990 | Washer – Flat | 34 | 49 | 3 |
| 80–8040 | Decal – Caution (US) | 28 | 1 | 1 |
| 84–1680 | Ring – Retaining | 47 | 7 | 1 |
| 87–0150 | Tower – Control Arm RH | 18 | 9 | 1 |
| 87–0160 | Tower – Control Arm LH | 18 | * | 1 |
| 87–0210 | Arm – Control Lower RH | 19 | 18 | 1 |
| 87–0220 | Arm – Control Lower LH | 19 | * | 1 |
| 87–0270 | Drum – Brake | 20 | 7 | 2 |
| 87–0370 | Arm – Pitman | 5 | 21 | 1 |
| 87–0650 | Fuel Tank Assembly | 42 | 2 | 1 |
| 87–0660 | Hose – Reservoir Rear | 8 | 17 | 1 |
| 87–0670 | Hose – Reservoir Front | 8 | 16 | 1 |
| 87–0690 | Spring – Compression | 18 | 15 | 2 |
| 87–0710 | Hood | 1 | 1 | 1 |
| 87–0740 | Key – Supervisor Switch | 2 | 17 | 1 |
| 87–1430 | Joint – Ball | 19 | 16 | 4 |
| 87–1450 | Bushing – Rubber | 19 | 1 | 8 |
| 87–1470 | Rod End Assy. – LH Thread | 20 | 19 | 2 |
| 87–1480 | Rod End Assy. – RH Thread | 20 | 24 | 2 |
| 87–1490 | Spring – Leaf | 22 | 15 | 2 |
| 87–1500 | Steering Gear (Complete) | 7 | * | 1 |
| 87–1500 | Steering Gear Assembly | 5 | 20 | 1 |
| 87–1510 | Muffler & Tailpipe | 30 | 53 | 1 |
| 87–1680 | Chamber – Air | 30 | 3 | 1 |
| 87–1720 | Nut – Supervisor Switch | 2 | 18 | 1 |
| 87–1910 | Pin – Alignment | 12 | 11 | 2 |
| 87–1920 | Seal – Shaft | 12 | 6 | 2 |
| 87–1960 | Engine Assembly | 30 | 9 | 1 |
| 87–1970 | Bearing Matched Set | 23 | 20 | 2 |
| 87–2040 | Lever – Shift | 15 | 16 | 1 |
| 87–2080 | Stud – Drive | 23 | 12 | 10 |
| 87–2100 | Bearing – Release | 12 | 23 | 1 |
| 87–2110 | Tail Light Assembly | 49 | 10 | 1 |
| 87–2120 | Headlight Assembly | 1 | 3 | 2 |
| 87–2240 | Housing – Axle | 23 | 7 | 2 |
| 87–2260 | Boot – Shift Lower | 15 | 28 | 1 |
| 87–2280 | Bearing | 5 | 25 | 3 |
| 87–2310 | Clevis – Cable | 34 | 36 | 3 |
| 87–2310 | Clevis – Cable | 15 | 47 | 2 |
| 87–2400 | Lever – Throttle | 32 | 22 | 1 |
| 87–2410 | Rod – Tie | 20 | 17 | 2 |
| 87–2420 | Boot | 19 | 19 | 4 |
| 87–2440 | Bumper | 1 | 7 | 2 |
| 87–2480 | Link – Stabilizer | 18 | 24 | 2 |
| 87–2500 | Sleeve –Spring Pivot | 18 | 12 | 2 |
| 87–2510 | Bracket – Seat Frame | 14 | 11 | 2 |
| 87–2520 | Tube – Pivot | 15 | 21 | 1 |
| 87–2540 | Pedal – Brake | 8 | 4 | 1 |
| 87–2590 | Shaft – Brake Pedal | 8 | 46 | 1 |
| 87–2610 | Pin – Cotter | 12 | 39 | 1 |
| 87–2640 | Support – Master Cylinder | 8 | 19 | 1 |
| 87–2650 | Gusset | 8 | 21 | 1 |
| 87–2660 | Support – Pedal LH | 8 | 18 | 1 |
| 87–2670 | Pedal – Accelerator | 8 | 36 | 1 |
| 87–2710 | Lever – Parking Brake | 16 | 29 | 1 |
| 87–2720 | Driveshaft | 28 | 10 | 1 |
| 87–2750 | Spacer – Bearing | 28 | 12 | 1 |
| 87–2760 | Bracket – Ignition Coil | 30 | 19 | 1 |
| 87–2790 | Tube – Brake LH | 19 | * | 1 |
| 87–2800 | Tube – Brake RH | 19 | 20 | 1 |
| 87–2820 | Bracket – Hose | 20 | 15 | 2 |
| 87–2870 | Bracket – Brake Hose | 19 | 4 | 2 |
| 87–2880 | Shaft – Accelerator Pedal | 8 | 45 | 1 |
| 87–2890 | Cradle – Reservoir | 8 | 14 | 1 |
| 87–2900 | Spring – Compression | 15 | 24 | 1 |
| 87–2910 | Support – Pedal RH | 8 | 3 | 1 |
| 87–3000 | Rim – Rear 23 | 23 | * | 2 |
| 87–3010 | Brake Assembly – RH | 20 | 10 | 1 |
| 87–3010 | Front Brake Assembly – RH | 21 | * | 1 |
| 87–3020 | Brake Assembly – LH | 20 | * | 1 |
| 87–3020 | Front Brake Assembly – LH | 21 | * | 1 |
| 87–3030 | Master Cylinder Assembly | 8 | 35 | 1 |
| 87–3040 | Brake Fluid Reservoir Assy. | 8 | 11 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 87–3060 | Washer – Flat | 23 | 25 | 2 |
| 87–3070 | Cable – Positive | 30 | 10 | 1 |
| 87–3080 | Wire – Ground | 30 | 25 | 1 |
| 87–3100 | Lower Shaft Assembly | 5 | * | 1 |
| 87–3110 | Absorber – Shock | 18 | 29 | 2 |
| 87–3110 | Shock Absorber | 22 | 8 | 2 |
| 87–3120 | Steering Column & Shaft | 5 | * | 1 |
| 87–3130 | Lever – Tilt Steering | 5 | 36 | 1 |
| 87–3140 | Support – Rear | 42 | 15 | 1 |
| 87–3150 | Support – Front | 42 | 18 | 1 |
| 87–3160 | Strap – Tank Support | 42 | 20 | 2 |
| 87–3170 | Pad – Tank Support Strap | 42 | 21 | 2 |
| 87–3180 | Cover – Clutch | 54 | 2 | 1 |
| 87–3190 | Disc – Clutch | 54 | 1 | 1 |
| 87–3200 | Belt – V | 32 | 25 | 1 |
| 87–3210 | Belt – V | 28 | 14 | 1 |
| 87–3250 | Mount – Bearing | 5 | 26 | 3 |
| 87–3270 | Tube – Brake RH | 22 | 3 | 1 |
| 87–3280 | Tube – Brake LH | 22 | 22 | 1 |
| 87–3290 | Tire – Rear 23 | 23 | * | 2 |
| 87–3300 | Tire | 20 | 5 | 2 |
| 87–3310 | Clip – Brake Cable | 23 | 8 | 2 |
| 87–3310 | Clip – Brake Cable | 20 | 25 | 2 |
| 87–3370 | Pulley | 28 | 13 | 1 |
| 87–3390 | Pulley | 26 | 23 | 1 |
| 87–3420 | Hose – Air Cleaner | 30 | 1 | 1 |
| 87–3430 | Hose – Radiator Upper | 26 | 29 | 1 |
| 87–3430 | Hose – Radiator Upper | 30 | 29 | 1 |
| 87–3450 | Plug | 20 | 12 | 2 |
| 87–3460 | Boot – Tilt Steering | 5 | 2 | 1 |
| 87–3470 | Bumper – Spring | 22 | 14 | 2 |
| 87–3480 | Plate – Brake Equalizer | 16 | 22 | 1 |
| 87–3500 | Hose – Air Cleaner | 30 | 33 | 1 |
| 87–3520 | Clevis | 15 | 27 | 1 |
| 87–3530 | Button – Shifter | 15 | 29 | 1 |
| 87–3540 | Link – Shift | 15 | 20 | 2 |
| 87–3560 | Tee – Brake Line | 10 | 18 | 1 |
| 87–3560 | Tee – Brake Tube | 22 | 23 | 1 |
| 87–3570 | Fitting – Union | 10 | 6 | 3 |
| 87–3580 | Retainer | 22 | 4 | 2 |
| 87–3580 | Retainer | 20 | 14 | 2 |
| 87–3580 | Retainer – Brake Hose | 23 | 2 | 2 |
| 87–3580 | Retainer – Brake Hose | 19 | 3 | 2 |
| 87–3580 | Retainer – Brake Hose | 10 | 8 | 2 |
| 87–3590 | Seal – Bearing | 23 | 22 | 2 |
| 87–3590 | Seal – Bearing | 20 | 26 | 2 |
| 87–3600 | Spacer | 18 | 3 | 10 |
| 87–3610 | Bracket – Detent | 5 | 34 | 1 |
| 87–3620 | Shield – Heat | 30 | 23 | 1 |
| 87–3650 | Pin – Shift | 15 | 18 | 1 |
| 87–3660 | Spring – Compression | 15 | 30 | 1 |
| 87–3670 | Hose – Hydraulic | 46 | 21 | 1 |
| 87–3670 | Hose – Hydraulic | 35 | 54 | 1 |
| 87–3680 | Assembly – Relief Valve | 45 | * | 1 |
| 87–3700 | Screw – Cap Hex. Hd. | 29 | 8 | 3 |
| 87–3700 | Screw – Cap Hex. Hd. | 32 | 16 | 1 |
| 87–3710 | Overflow Reservoir Assy. | 26 | 1 | 1 |
| 87–3720 | Retainer – Cylinder | 46 | 17 | 2 |
| 87–3730 | Hose – Coolant | 30 | 28 | 2 |
| 87–3740 | Hose – Breather | 30 | 7 | 1 |
| 87–3750 | Cover – Steering Wheel | 5 | 9 | 1 |
| 87–3760 | Plate – Shift Boot | 13 | 14 | 1 |
| 87–3770 | Bushing – Sleeve | 12 | 7 | 2 |
| 87–3780 | Box – Glove | 2 | 3 | 1 |
| 87–3790 | Switch – Light | 2 | 19 | 1 |
| 87–3800 | Bracket – Seat Bottom | 13 | 3 | 3 |
| 87–3820 | Wheel – Steering | 5 | 7 | 1 |
| 87–3850 | Bar – Anti–Sway | 18 | 17 | 1 |
| 87–3860 | Link – Anti–Sway Bar | 18 | 5 | 2 |
| 87–3890 | Bracket – Anti–Sway Bar | 18 | 18 | 2 |
| 87–3900 | Bracket – Cable | 32 | 26 | 1 |
| 87–3910 | Bushing – Anti–Sway Bar | 18 | 19 | 2 |
| 87–3920 | Bushing – Rubber | 18 | 4 | 16 |
| 87–3920 | Bushing – Rubber | 22 | 7 | 8 |
| 87–3940 | Mount – Spring RH | 22 | * | 1 |
| 87–3960 | Mount – Spring LH | 22 | 18 | 1 |
| 87–3980 | Shackle – Spring | 22 | 11 | 4 |
| 87–3990 | Oil Strainer Assembly | 34 | 26 | 1 |
| 87–4010 | Clamp – Anti–Sway Bar | 18 | 20 | 2 |
| 87–4020 | Spring – Extension | 32 | 23 | 1 |
| 87–4030 | Supervisor Switch Assembly | 2 | 29 | 1 |
| 87–4060 | Spacer – Bearing | 23 | 21 | 2 |
| 87–4070 | Bumper – Front | 1 | 14 | 1 |
| 87–4080 | Tube – Brake LH | 23 | 6 | 1 |
| 87–4090 | Tube – Brake RH | 23 | 1 | 1 |
| 87–4100 | Hose – Brake | 23 | 3 | 2 |
| 87–4100 | Hose – Brake | 22 | 5 | 2 |
| 87–4210 | Rod – Linkage | 32 | 11 | 1 |
| 87–4230 | Harness – Wire Front LH | 2 | 41 | 1 |
| 87–4260 | Cable Assembly | 15 | 15 | 2 |
| 87–4260 | Shift Cable Assembly | 35 | 51 | 2 |
| 87–4340 | Clamp – Cable | 15 | 10 | 1 |
| 87–4350 | Lever – Hi–Lo | 15 | 2 | 1 |
| 87–4420 | Hi–Lo Cable Assembly | 15 | 6 | 1 |
| 87–4420 | Hi–Lo Cable Assembly | 35 | 52 | 1 |
| 87–4440 | Driveshaft | 28 | 5 | 1 |
| 87–4460 | Differential Lock Cable | 16 | 11 | 1 |
| 87–4470 | Bracket | 34 | 23 | 1 |
| 87–4490 | Bracket – Hold–Down | 45 | 22 | 1 |
| 87–4500 | Rod – Pivot | 45 | 2 | 1 |
| 87–4510 | Rod – Connecting | 45 | 3 | 1 |
| 87–4520 | Bracket – Dump Valve | 46 | 27 | 1 |
| 87–4540 | Hydraulic Tube Assembly | 45 | 20 | 1 |
| 87–4560 | Tube – Hydraulic | 45 | 14 | 1 |
| 87–4560 | Tube – Hydraulic | 46 | 33 | 1 |
| 87–4710 | Spacer – Barking Brake | 16 | 13 | 1 |
| 87–4720 | Plate – Steering Boot | 5 | 3 | 1 |
| 87–4730 | Guard – Belly | 29 | 15 | 2 |
| 87–4750 | Bracket – Governor | 32 | 14 | 1 |
| 87–4760 | Bushing | 22 | 12 | 12 |
| 87–4770 | Bracket – High Idle Stop | 32 | 4 | 1 |
| 87–4790 | Arm – Accelerator Pedal | 8 | 38 | 1 |
| 87–4820 | Bracket – Cable | 34 | 27 | 1 |
| 87–4870 | Hose – Hydraulic | 46 | 4 | 1 |
| 87–4880 | Hose – Hydraulic LH | 46 | 3 | 1 |
| 87–4900 | Hose – Hydraulic RH | 46 | 31 | 1 |
| 87–4910 | Hose – Hydraulic RH | 46 | 13 | 1 |
| 87–4920 | Hose – Hydraulic | 34 | 41 | 1 |
| 87–4960 | Clamp – Cable | 15 | 42 | 1 |
| 87–4970 | Engine Mount Assembly | 29 | 3 | 2 |
| 87–4970 | Transaxle Mount Assembly | 34 | 18 | 2 |
| 87–5030 | Lever – Differential Lock | 16 | 3 | 1 |
| 87–5050 | Hose – Radiator Lower | 26 | 10 | 1 |
| 87–5050 | Hose – Radiator Lower | 30 | 31 | 1 |
| 87–5060 | Cushion – Seat Bottom | 13 | 7 | 2 |
| 87–5070 | Pulley – Crankshaft | 30 | 38 | 1 |
| 87–5080 | Spacer – Connecting | 45 | 25 | 1 |
| 87–5100 | Washer | 34 | 17 | 4 |
| 87–5100 | Washer – Flat | 29 | 4 | 4 |
| 87–5110 | Support – Lower | 41 | 19 | 1 |
| 87–5120 | Bracket – Battery Base | 41 | 15 | 1 |
| 87–5130 | Cover – Battery Base | 41 | 12 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 87–5140 | Nut – Lock | 45 | 8 | 1 |
| 87–5150 | Screw – Cap Hex. Hd. | 45 | 4 | 1 |
| 87–5290 | Shaft – Release | 12 | 5 | 1 |
| 87–5300 | Fork – Clutch | 12 | 20 | 1 |
| 87–5320 | Guide – Release | 12 | 22 | 1 |
| 87–5330 | Washer | 18 | 2 | 8 |
| 87–5340 | Seal Kit – Tie Rod End | 20 | * | 4 |
| 87–5350 | Bracket – Switch | 12 | 15 | 1 |
| 87–5360 | Lever | 12 | 12 | 1 |
| 87–5370 | Rear Tire & Wheel Assembly | 24 | * | 2 |
| 87–5490 | Switch – Neutral | 12 | 16 | 1 |
| 87–5560 | Hub – Wheel | 20 | 8 | 2 |
| 87–5580 | Fuel Gauge Assembly | 2 | 15 | 1 |
| 87–5590 | Temperature Gauge Assy. | 2 | 8 | 1 |
| 87–5700 | Hydraulic Pump Assembly | 26 | 19 | 1 |
| 87–5720 | Rim | 20 | 6 | 2 |
| 87–5730 | Hose – Hydraulic | 34 | 4 | 1 |
| 87–5770 | U–Bracket – Tail Light | 49 | 5 | 1 |
| 87–5800 | Bracket – Mount | 34 | 21 | 2 |
| 87–5910 | Decal – Supervisor (US) | 3 | 55 | 1 |
| 87–5920 | Decal – Danger (US) | 13 | 26 | 1 |
| 87–5930 | Decal – Caution (US) | 13 | 10 | 1 |
| 87–5940 | Decal – Rollover (US) | 17 | 2 | 1 |
| 87–5960 | Decal – Axle Range (US) | 13 | 11 | 1 |
| 87–5970 | Decal – PTO (US) | 13 | 16 | 1 |
| 87–5980 | Decal – ROPS (US) | 17 | 3 | 2 |
| 87–5990 | Decal – PTO (US) | 23 | 40 | 1 |
| 87–6000 | Decal – Differential (US) | 13 | 17 | 1 |
| 87–6010 | Decal – Dump Hyd. (US) | 13 | 19 | 1 |
| 87–6020 | Decal – Parking Brake (US) | 13 | 20 | 1 |
| 87–6040 | Bracket – Shifter | 15 | 22 | 1 |
| 87–6060 | Decal – ATF (US) | 23 | 4 | 1 |
| 87–6170 | Frame – Seat | 14 | 14 | 1 |
| 87–6240 | Bracket – Seat Back | 14 | 23 | 4 |
| 87–6270 | Socket & Bulb Assembly | 3 | 60 | 4 |
| 87–6280 | Plate – Seat Back | 14 | 18 | 2 |
| 87–6290 | Cushion – Seat Back | 14 | 17 | 2 |
| 87–6300 | Lens | 49 | 7 | 1 |
| 87–6310 | Gasket | 49 | 9 | 1 |
| 87–6320 | Bulb – Headlight | 1 | 5 | 2 |
| 87–6330 | Lens – Headlight | 1 | 6 | 2 |
| 87–6370 | Rear Tire & Wheel Assembly | 24 | * | 2 |
| 87–6490 | Spring | 33 | 13 | 1 |
| 87–6510 | Assembly – Shaft & Yoke | 33 | 34 | 1 |
| 87–6520 | Body | 33 | 24 | 1 |
| 87–6530 | Assembly – Throttle Lever | 33 | 22 | 1 |
| 87–6540 | Bolt – Eye | 33 | 21 | 1 |
| 87–6550 | Pin – Forced Idle | 33 | 14 | 1 |
| 87–6560 | Cover | 33 | 4 | 1 |
| 87–6570 | Foam – Seal | 15 | 38 | 1 |
| 87–6580 | Stud – Lever Pivot | 33 | 11 | 1 |
| 87–6590 | Assy. Lever & Fitting | 33 | 10 | 1 |
| 87–6620 | Screw | 1 | 10 | 15 |
| 87–6620 | Screw – Torx Pan Hd. | 12 | 40 | 2 |
| 87–6640 | Lever – Dump Stop | 16 | 14 | 1 |
| 87–6660 | Fender – Rear 24 | 49 | 17 | 2 |
| 87–6670 | Decal – Fuse Block (US) | 3 | 54 | 1 |
| 87–6690 | Guard – Induction Chamber | 22 | 29 | 1 |
| 87–6700 | Decal – Workman 3200 | 1 | 15 | 1 |
| 87–6710 | Switch – Supervisor | 34 | 33 | 1 |
| 87–6720 | Knob | 15 | 17 | 1 |
| 87–6740 | Tire – Rear 24 | 23 | 16 | 2 |
| 87–6750 | Rim – Rear 24 | 23 | 19 | 2 |
| 87–6890 | Hold – Hand | 13 | 1 | 1 |
| 87–6910 | Spring – Compression | 34 | 13 | 1 |
| 87–6950 | Receiver – LH | 17 | 6 | 1 |
| 87–6960 | Receiver – RH | 17 | 7 | 1 |
| 87–7000 | Decal – Load Rating (US) | 1 | 16 | 1 |
| 87–7040 | Bracket – Oil Filter | 34 | 2 | 1 |
| 87–7050 | Cap – Reservoir | 26 | 43 | 1 |
| 87–7070 | Skirt Assembly | 13 | 2 | 1 |
| 87–7090 | Assembly – Frame, R.O.P.S. | 17 | 1 | 1 |
| 87–7110 | Assembly – Axle, Rear | 23 | 5 | 1 |
| 87–7150 | Assembly – Cradle, Spring | 18 | 13 | 2 |
| 87–7160 | Assembly – Clevis, Cable | 15 | 7 | 1 |
| 87–7170 | Bracket – Clutch Spring | 34 | 45 | 1 |
| 87–7270 | Washer – Flat | 23 | 23 | 6 |
| 87–7470 | Plate – Clamp | 22 | 16 | 2 |
| 87–7480 | Washer – Flat | 22 | 34 | 8 |
| 87–7480 | Washer – Lock | 5 | 37 | 3 |
| 87–7570 | Retainer – Reservoir | 8 | 12 | 1 |
| 87–7600 | Rod – Battery Support | 41 | 21 | 1 |
| 87–7610 | Tab – Battery Support | 41 | 3 | 1 |
| 87–7620 | Shield – Plastic | 41 | 14 | 1 |
| 87–7660 | Clamp – Brake Line | 10 | 2 | 8 |
| 87–7930 | Decal – Danger (US) | 14 | 6 | 1 |
| 87–7930 | Decal – Warning (US) | 46 | 32 | 2 |
| 87–7930 | Decal – Warning (US) | 47 | 13 | 1 |
| 87–7940 | Stud | 14 | 8 | 1 |
| 87–7950 | Bed Support Assembly | 14 | 7 | 1 |
| 87–7960 | Lever – Shift Arm | 34 | 48 | 2 |
| 87–7970 | Arm – Shift | 34 | 15 | 1 |
| 87–7990 | Hydraulic Cylinder Assy. | 46 | 16 | 2 |
| 87–8080 | Console Plate Assembly | 13 | 21 | 1 |
| 87–8110 | Lever Support Assembly | 15 | 14 | 1 |
| 87–8120 | Bracket – Trim Side | 1 | 11 | 2 |
| 87–8130 | Bracket – Trim Top | 1 | 19 | 1 |
| 87–8160 | Trim | 1 | 20 | 1 |
| 87–8240 | Cable – Parking Brake | 16 | 24 | 2 |
| 87–8250 | Plate – Shift Arm | 34 | 10 | 1 |
| 87–8440 | Assembly – Rear Frame | 22 | 2 | 1 |
| 87–8460 | Bumper | 12 | 34 | 1 |
| 87–8480 | Bracket – Clutch | 12 | 43 | 1 |
| 87–8500 | Front Wire Harness Assy. | 2 | 47 | 1 |
| 87–8520 | Decal – Dash (US) | 3 | 56 | 1 |
| 87–8540 | Control Panel Assembly | 2 | 53 | 1 |
| 87–8590 | Cable – Clutch | 3 | 67 | 1 |
| 87–8590 | Clutch Cable Assembly | 12 | 36 | 1 |
| 87–8600 | Accelerator Cable Assembly | 32 | 1 | 1 |
| 87–8600 | Cable – Accelerator | 8 | 40 | 1 |
| 87–8620 | Boot – Shift | 13 | 13 | 1 |
| 87–8640 | Washer – Flat | 15 | 26 | 1 |
| 87–8640 | Washer – Flat | 30 | 48 | 1 |
| 87–8700 | Screw – Cap Hex. Hd. | 23 | 37 | 4 |
| 87–8710 | Tab – Clutch | 12 | 42 | 1 |
| 87–8720 | Governor Assembly | 32 | 24 | 1 |
| 87–8730 | Stud – Drive | 20 | 9 | 10 |
| 87–8780 | Head – Oil Filter | 34 | 43 | 1 |
| 87–8820 | Hub – Pulley | 33 | 38 | 1 |
| 87–8830 | Pulley | 33 | 1 | 1 |
| 87–9060 | Decal – Quick Ref. (EN) | 13 | 23 | 1 |
| 87–9080 | Decal – Grease (US) | 23 | 44 | 2 |
| 87–9250 | Transaxle Assembly | 34 | 22 | 1 |
| 87–9300 | Door – Clean Out | 26 | 34 | 1 |
| 87–9310 | Hose – Air Cleaner | 43 | 15 | 1 |
| 87–9320 | Mudflap | 1 | 26 | 2 |
| 87–9330 | Bracket – Mudflap LH | 1 | 23 | 1 |
| 87–9340 | Bracket – Mudflap RH | 1 | * | 1 |
| 87–9350 | Hydraulic Tube Assembly | 45 | 16 | 1 |
| 87–9390 | Cup | 44 | 9 | 1 |
| 87–9400 | Valve | 44 | 11 | 1 |
| 87–9410 | Air Cleaner (Complete) | 44 | * | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 87–9410 | Air Cleaner Assembly | 43 | 17 | 1 |
| 87–9420 | Decal – Caution (US) | 26 | 35 | 1 |
| 87–9430 | Spindle – RH | 20 | 13 | 1 |
| 87–9440 | Spindle – LH | 20 | * | 1 |
| 87–9480 | Fender – Front | 13 | 24 | 2 |
| 87–9810 | Foam – Overflow Tank | 26 | 36 | 1 |
| 87–9830 | Mount – Engine | 29 | 7 | 1 |
| 92–0650 | Bearing – Ball | 38 | 22 | 1 |
| 92–0651 | Case – Transaxle | 36 | 19 | 1 |
| 92–0652 | Cover – Upper | 36 | 7 | 1 |
| 92–0653 | Cover – Side | 36 | 9 | 1 |
| 92–0654 | Carrier – Differential | 36 | 17 | 1 |
| 92–0655 | Cover – Seal | 36 | 30 | 1 |
| 92–0656 | Cover – P.T.O. | 36 | 1 | 1 |
| 92–0657 | Plate – Center | 36 | 21 | 1 |
| 92–0662 | Cap – Oil | 36 | 5 | 1 |
| 92–0663 | Shaft – Main | 38 | 16 | 1 |
| 92–0664 | Hub – Synchro | 38 | 12 | 2 |
| 92–0665 | Key – Synchro | 38 | 23 | 6 |
| 92–0666 | Spring – Synchro | 38 | 13 | 4 |
| 92–0667 | Ring – Synchro | 38 | 6 | 3 |
| 92–0668 | Shifter – Synchro | 38 | 7 | 2 |
| 92–0672 | Gear – 18T | 38 | 19 | 1 |
| 92–0673 | Gear – 14T | 38 | 21 | 1 |
| 92–0674 | Shaft – Reduction | 38 | 28 | 1 |
| 92–0677 | Gear – 49T | 38 | 31 | 1 |
| 92–0679 | Gear – 23T | 38 | 25 | 1 |
| 92–0680 | Collar | 38 | 26 | 1 |
| 92–0681 | Bearing – Needle | 38 | 30 | 2 |
| 92–0682 | Washer – Thrust | 38 | 29 | 1 |
| 92–0684 | Gear – 33T | 38 | 10 | 1 |
| 92–0687 | Gear – 16T | 38 | 18 | 1 |
| 92–0698 | Shaft – Fork R–1 | 39 | 14 | 1 |
| 92–0699 | Shaft – Fork 2–3 | 39 | 7 | 1 |
| 92–0700 | Fork – Shift R–1 | 39 | 3 | 1 |
| 92–0701 | Fork – Shift 2–3 | 39 | 6 | 1 |
| 92–0705 | Lock – Spindle | 39 | 20 | 1 |
| 92–0706 | Cap – Fork Shaft | 36 | 25 | 1 |
| 92–0708 | Shaft – Fork Hi–Lo | 39 | 16 | 1 |
| 92–0709 | Fork – Shift Hi–Lo | 39 | 17 | 1 |
| 92–0710 | Counter Shaft Assembly | 37 | 14 | 1 |
| 92–0710 | Ring Gear Assembly | 40 | 8 | 1 |
| 92–0711 | Washer – Thrust | 37 | 4 | 2 |
| 92–0712 | Bearing – Ball | 37 | 1 | 1 |
| 92–0713 | Collar | 37 | 12 | 1 |
| 92–0714 | Bearing – Ball | 37 | 13 | 2 |
| 92–0715 | Gear – 49T | 37 | 6 | 1 |
| 92–0716 | Collar | 37 | 2 | 1 |
| 92–0717 | Gear – 71T | 37 | 9 | 1 |
| 92–0718 | Shifter – Hi–Lo | 37 | 7 | 1 |
| 92–0719 | Collar – Spline | 37 | 8 | 1 |
| 92–0720 | Case – Differential | 40 | 31 | 1 |
| 92–0721 | Fork – Differential Lock | 40 | 17 | 1 |
| 92–0722 | Shaft – Lock Fork | 40 | 18 | 1 |
| 92–0723 | Spring – Compression | 40 | 19 | 1 |
| 92–0724 | Arm – Differential Lock | 40 | 27 | 1 |
| 92–0725 | Shaft – Axle L.H. | 40 | 28 | 1 |
| 92–0726 | Shaft – Axle R.H. | 40 | 1 | 1 |
| 92–0727 | Washer | 40 | 4 | 2 |
| 92–0728 | Washer | 40 | 2 | 1 |
| 92–0729 | Seal – Oil | 39 | 10 | 3 |
| 92–0730 | Slider – Differential Lock | 40 | 7 | 1 |
| 92–0731 | Spring – Compression | 39 | 2 | 3 |
| 92–0732 | Plate – Keeper | 39 | 8 | 3 |
| 92–0733 | Washer | 40 | 20 | 1 |
| 92–0740 | Washer – Thrust | 38 | 3 | 3 |
| 92–0741 | Washer – Thrust | 37 | 10 | 1 |
| 92–0743 | Breather – Air | 36 | 27 | 1 |
| 92–0744 | Washer | 40 | 14 | 1 |
| 92–0745 | Gear – Side L.H. | 40 | 24 | 1 |
| 92–0746 | Gear – Side R.H. | 40 | 11 | 1 |
| 92–0747 | Washer – Thrust | 40 | 10 | 2 |
| 92–0748 | Gear – Pinion | 40 | 12 | 2 |
| 92–0749 | Shaft – Pinion | 40 | 23 | 1 |
| 92–0750 | Washer | 40 | 13 | 2 |
| 92–0753 | Ring – Retaining | 38 | 2 | 1 |
| 92–0753 | Ring – Retaining | 40 | 21 | 1 |
| 92–0754 | Ring – Retaining | 38 | 20 | 1 |
| 92–0755 | Ring – Retaining | 37 | 11 | 1 |
| 92–0756 | Ring – Retaining | 40 | 5 | 3 |
| 92–0759 | Ring – Retaining | 36 | 22 | 1 |
| 92–0760 | Ring – Retaining | 36 | 15 | 1 |
| 92–0761 | Ring – Retaining | 39 | 18 | 1 |
| 92–0762 | Washer – Lock | 36 | 3 | 1 |
| 92–0763 | Ring – Retaining | 38 | 14 | 3 |
| 92–0764 | Ring – Retaining | 37 | 3 | 3 |
| 92–0765 | Pin – Alignment | 36 | 8 | 4 |
| 92–0765 | Pin – Alignment | 40 | 9 | 2 |
| 92–0768 | Pin – Spring | 40 | 15 | 2 |
| 92–0769 | Pin – Spring | 39 | 4 | 2 |
| 92–0770 | Pin – Spring | 40 | 26 | 1 |
| 92–0771 | Pin – Spring | 40 | 16 | 1 |
| 92–0772 | Key | 38 | 17 | 2 |
| 92–0773 | Drain Plug Assembly | 36 | 13 | 1 |
| 92–0775 | Bearing – Ball | 40 | 6 | 2 |
| 92–0775 | Bearing – Ball | 36 | 33 | 2 |
| 92–0776 | Bearing – Ball | 40 | 29 | 1 |
| 92–0778 | Bearing – Ball | 38 | 11 | 2 |
| 92–0780 | Bearing – Ball | 40 | 3 | 1 |
| 92–0781 | Bearing – Needle | 38 | 4 | 4 |
| 92–0782 | Bearing – Needle | 38 | 33 | 1 |
| 92–0783 | Sleeve – Inner | 37 | 5 | 1 |
| 92–0785 | Ball | 39 | 1 | 3 |
| 92–0787 | O–Ring | 40 | 22 | 1 |
| 92–0788 | O–Ring | 36 | 6 | 1 |
| 92–0789 | O–Ring | 36 | 14 | 1 |
| 92–0790 | O–Ring | 36 | 29 | 1 |
| 92–0791 | Seal – Oil | 36 | 26 | 1 |
| 92–0793 | Seal – Oil | 36 | 16 | 2 |
| 92–0793 | Seal – Oil | 40 | 32 | 2 |
| 92–0796 | Screw – Cap Hex. Hd. | 36 | 31 | 5 |
| 92–0803 | Screw – Hex. Flange Hd. | 40 | 30 | 12 |
| 92–0804 | Stud | 36 | 28 | 1 |
| 92–0807 | Cap – Sealing | 36 | 23 | 1 |
| 92–0808 | Shim Set | 36 | 20 | 1 |
| 92–0809 | Shim Set | 36 | 11 | 1 |
| 92–0816 | Arm – Shift Fork R–1 | 39 | 15 | 1 |
| 92–0817 | Arm – Shift Fork 2–3 | 39 | 5 | 1 |
| 92–0818 | Arm – Shift Fork Hi–Lo | 39 | 19 | 1 |
| 92–0819 | Gear – 40T | 38 | 32 | 1 |
| 92–0820 | Gear – 27T | 38 | 5 | 1 |
| 92–0821 | Gear – 24T | 38 | 15 | 1 |
| 92–0822 | Gear – 28T | 38 | 24 | 1 |
| 92–0823 | Gear – 43T | 38 | 27 | 1 |
| 92–0824 | Shaft – Reverse Idler | 38 | 9 | 1 |
| 92–1345 | Cover – Engine (CE) | 12 | 45 | 1 |
| 92–1901 | Clip | 59 | 7 | 1 |
| 92–1902 | Plug – Taper | 50 | 8 | 1 |
| 92–1903 | Washer | 51 | 17 | 8 |
| 92–1905 | Stud | 51 | 20 | 6 |
| 92–1906 | Assembly – Valve | 59 | 16 | 1 |
| 92–1907 | Cover – Access | 52 | 19 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 92–1908 | O–Ring | 58 | 17 | 1 |
| 92–1909 | Nut | 55 | 16 | 6 |
| 92–1910 | Plug – Taper | 50 | 10 | 1 |
| 92–1911 | Guide – Exhaust Valve | 51 | 18 | 1 |
| 92–1912 | Pipe – Manifold | 59 | 23 | 1 |
| 92–1914 | Bearing – Ball | 53 | 10 | 1 |
| 92–1915 | Clamp – Cable | 51 | 8 | 1 |
| 92–1916 | Plug – Taper | 51 | 19 | 1 |
| 92–1917 | Nipple | 59 | 25 | 1 |
| 92–1918 | Bolt – Flange Head | 57 | 7 | 1 |
| 92–1920 | Plug – Oil | 52 | 14 | 1 |
| 92–1921 | Gasket – Oil | 52 | 13 | 1 |
| 92–1922 | Washer | 55 | 9 | 1 |
| 92–1923 | Nut | 53 | 5 | 6 |
| 92–1924 | Hose – Water By–Pass | 58 | 13 | 1 |
| 92–1925 | O–Ring | 50 | 31 | 1 |
| 92–1926 | Guide – Intake Valve | 51 | 15 | 3 |
| 92–1927 | Plunger – Relief | 57 | 12 | 1 |
| 92–1928 | Spring – Relief | 57 | 13 | 1 |
| 92–1929 | Seal – Oil | 51 | 7 | 2 |
| 92–1930 | Washer – Wave | 55 | 19 | 2 |
| 92–1931 | Retainer | 55 | 27 | 6 |
| 92–1932 | Bolt | 64 | 29 | 1 |
| 92–1933 | Gauge – Water Temperature | 58 | 11 | 1 |
| 92–1934 | Bolt – Flywheel | 53 | 11 | 5 |
| 92–1935 | Plug – Taper | 50 | 5 | 1 |
| 92–1936 | Seal – Valve | 55 | 28 | 6 |
| 92–1937 | Plate – Rear | 52 | 6 | 1 |
| 92–1938 | Cover – Bell Housing | 52 | 7 | 1 |
| 92–1938 | Cover – Bell Housing | 12 | 29 | 1 |
| 92–1939 | Gasket | 52 | 16 | 1 |
| 92–1940 | Gasket | 52 | 17 | 1 |
| 92–1941 | Gasket – Oil | 57 | 16 | 1 |
| 92–1942 | Gear – Ring | 53 | 8 | 1 |
| 92–1943 | Packing | 51 | 2 | 1 |
| 92–1944 | Gasket – Cover, Rocker | 51 | 10 | 1 |
| 92–1945 | Cover – Rear | 50 | 29 | 1 |
| 92–1946 | Gasket – Front | 57 | 10 | 1 |
| 92–1947 | Arm – Rocker | 55 | 18 | 6 |
| 92–1948 | Gear – Oil Pump | 57 | 5 | 1 |
| 92–1949 | Gear – Oil Pump | 57 | 6 | 1 |
| 92–1950 | Gasket | 58 | 7 | 1 |
| 92–1951 | Nipple | 59 | 26 | 1 |
| 92–1952 | Seal – Oil | 50 | 27 | 1 |
| 92–1953 | Screw – Adjusting | 55 | 17 | 6 |
| 92–1954 | Valve – Inlet | 55 | 29 | 3 |
| 92–1955 | Valve – Exhaust | 55 | 31 | 3 |
| 92–1956 | Bearing – Set, Main | 50 | 17 | 1 |
| 92–1957 | Rod Bearing Set | 53 | 6 | 1 |
| 92–1958 | Pin – Dowel | 50 | 15 | 1 |
| 92–1959 | Seat – Intake Valve | 51 | 21 | 3 |
| 92–1960 | Seal – Oil | 57 | 11 | 1 |
| 92–1961 | Seal – Valve | 55 | 13 | 6 |
| 92–1962 | Gasket | 52 | 3 | 1 |
| 92–1962 | Gasket | 52 | 20 | 1 |
| 92–1963 | Mount – Engine | 59 | 8 | 1 |
| 92–1964 | Plate – Cam | 55 | 14 | 1 |
| 92–1965 | Assembly – Cover | 52 | 2 | 1 |
| 92–1966 | Gasket | 52 | 21 | 1 |
| 92–1967 | Assembly – Cover | 52 | 15 | 1 |
| 92–1968 | Tensioner – Belt | 55 | 30 | 1 |
| 92–1971 | Bolt | 51 | 16 | 8 |
| 92–1972 | Washer | 55 | 20 | 2 |
| 92–1973 | Shaft – Rocker Arm | 55 | 23 | 1 |
| 92–1974 | Assembly – Case | 57 | 8 | 1 |
| 92–1975 | Cap – Oil | 51 | 1 | 1 |
| 92–1976 | Seat – Exhaust Valve | 51 | 22 | 3 |
| 92–1977 | Spring – Valve | 55 | 12 | 6 |
| 92–1978 | Switch – Oil Pressure | 56 | 4 | 1 |
| 92–1980 | Flywheel | 53 | 9 | 1 |
| 92–1981 | Bearing – Front | 50 | 13 | 1 |
| 92–1982 | Bearing – Ring | 50 | 7 | 1 |
| 92–1983 | Retainer | 57 | 14 | 1 |
| 92–1984 | Washer | 64 | 27 | 1 |
| 92–1987 | Gasket | 50 | 25 | 1 |
| 92–1988 | Gasket – Oil | 52 | 9 | 1 |
| 92–1989 | Gasket | 58 | 6 | 1 |
| 92–1991 | Gasket | 50 | 30 | 1 |
| 92–1993 | Gasket – Intake | 59 | 10 | 1 |
| 92–1994 | Cap – Sealing | 50 | 4 | 1 |
| 92–1995 | Assembly – Crankshaft | 53 | 7 | 1 |
| 92–1996 | Assembly – Cover, Front | 52 | 18 | 1 |
| 92–1997 | Gasket – Cylinder | 51 | 23 | 1 |
| 92–1998 | Shaft – Balancer | 56 | 1 | 1 |
| 92–1999 | Rod – Connecting | 53 | 4 | 3 |
| 92–2000 | Sprocket | 55 | 10 | 1 |
| 92–2001 | Spring | 55 | 7 | 1 |
| 92–2002 | Cap Inlet | 59 | 27 | 1 |
| 92–2003 | Bolt – Connnecting Rod | 53 | 3 | 6 |
| 92–2005 | Piston & Pin (Std.) | 53 | 2 | 3 |
| 92–2006 | Assembly – Crankcase | 50 | 1 | 1 |
| 92–2007 | Pump – Fuel | 43 | 12 | 2 |
| 92–2008 | Cover | 58 | 18 | 1 |
| 92–2009 | Hose – By–Pass | 58 | 14 | 1 |
| 92–2010 | Pin – Dowel | 55 | 25 | 1 |
| 92–2011 | Brace | 64 | 28 | 1 |
| 92–2012 | Bracket – Oil Filter | 50 | 23 | 1 |
| 92–2013 | Piston & Pin | 53 | * | 3 |
| 92–2014 | Piston Ring Set (Std.) | 53 | 1 | 1 |
| 92–2015 | Piston Ring Set | 53 | * | 1 |
| 92–2016 | Valve – EGR | 59 | 14 | 1 |
| 92–2017 | Bolt – Rocker Shaft | 55 | 21 | 2 |
| 92–2018 | Bolt – Rocker Shaft | 55 | 22 | 2 |
| 92–2019 | Strainer – Oil | 52 | 10 | 1 |
| 92–2020 | Assembly – Cover | 51 | 9 | 1 |
| 92–2021 | Seal – Oil | 51 | 12 | 1 |
| 92–2022 | Mount – Engine | 56 | 2 | 1 |
| 92–2023 | Manifold – Exhaust | 59 | 19 | 1 |
| 92–2024 | Pipe – Water | 58 | 15 | 1 |
| 92–2025 | Assembly – Alternator | 64 | * | 1 |
| 92–2026 | Hose – PCV Valve | 51 | 4 | 1 |
| 92–2027 | Coil – Ignition | 30 | 14 | 1 |
| 92–2028 | Wire – High Tension | 62 | 21 | 1 |
| 92–2029 | Wire – Spark Plug, #1 | 62 | 20 | 1 |
| 92–2030 | Wire – Spark Plug, #2 | 62 | 19 | 1 |
| 92–2031 | Wire – Spark Plug, #3 | 62 | 22 | 1 |
| 92–2032 | Seal – Oil | 57 | 3 | 1 |
| 92–2034 | Head – Cylinder | 51 | 11 | 1 |
| 92–2035 | Cover – Front | 52 | 5 | 1 |
| 92–2036 | Cover – Exhaust Manifold | 59 | 17 | 1 |
| 92–2037 | Kit – Gasket | 60 | 14 | 1 |
| 92–2038 | Kit – Gasket | 60 | 12 | 1 |
| 92–2039 | Kit – Thermostat | 58 | 8 | 1 |
| 92–2040 | Pulley | 58 | 3 | 1 |
| 92–2041 | V–Belt | 58 | 1 | 1 |
| 92–2042 | Sprocket – Oil | 55 | 33 | 1 |
| 92–2043 | Assembly – Distributor | 62 | * | 1 |
| 92–2044 | Gasket – Exhaust | 30 | 54 | 1 |
| 92–2044 | Gasket – Exhaust Ring | 59 | 18 | 1 |
| 92–2045 | Housing – Seal, Oil | 50 | 26 | 1 |
| 92–2046 | Assembly – Oil Pump | 57 | 4 | 1 |
| 92–2049 | Assembly – Camshaft | 55 | 24 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 92–2050 | PCV Valve | 51 | 3 | 1 |
| 92–2053 | Assembly – Oil Pan | 52 | 11 | 1 |
| 92–2054 | Manifold – Intake | 59 | 9 | 1 |
| 92–2055 | Assembly – Starter | 63 | * | 1 |
| 92–2056 | Flange – PTO | 55 | 32 | 1 |
| 92–2057 | Bolt – Crankshaft PTO | 53 | 14 | 1 |
| 92–2058 | Carburetor | 60 | 11 | 1 |
| 92–2059 | Belt – Timing | 55 | 11 | 1 |
| 92–2060 | Assembly – Water Pump | 58 | 5 | 1 |
| 92–2061 | Assembly – PTO Sprocket | 55 | 3 | 1 |
| 92–2062 | Assembly – PTO Adapter | 55 | 2 | 1 |
| 92–2063 | Washer | 51 | 6 | 2 |
| 92–2065 | Bearing | 64 | 5 | 1 |
| 92–2066 | Nut | 64 | 23 | 2 |
| 92–2067 | Spring – Brush | 64 | 16 | 2 |
| 92–2068 | Brush | 64 | 17 | 2 |
| 92–2069 | Cover – Bearing | 64 | 11 | 1 |
| 92–2070 | Bearing | 64 | 10 | 1 |
| 92–2071 | Screw | 64 | 18 | 2 |
| 92–2073 | Assembly – Holder | 64 | 15 | 1 |
| 92–2075 | Assembly – Rotor | 64 | 9 | 1 |
| 92–2076 | Plate | 64 | 7 | 1 |
| 92–2077 | Screw | 64 | 8 | 4 |
| 92–2078 | Bolt | 64 | 4 | 2 |
| 92–2079 | Collar | 64 | 2 | 1 |
| 92–2080 | Frame – End | 64 | 24 | 1 |
| 92–2081 | Cover – End | 64 | 13 | 1 |
| 92–2082 | Rectifier | 64 | 22 | 1 |
| 92–2083 | Bushing | 64 | 21 | 1 |
| 92–2084 | Regulator | 64 | 20 | 1 |
| 92–2085 | Screw W/washer | 64 | 6 | 6 |
| 92–2085 | Screw W/washer | 64 | 14 | 6 |
| 92–2086 | Screw W/washer | 64 | 19 | 1 |
| 92–2087 | Bolt W/washer | 64 | 12 | 3 |
| 92–2088 | Yoke | 63 | 15 | 1 |
| 92–2089 | Brush | 63 | 16 | 4 |
| 92–2090 | Spring | 63 | 17 | 4 |
| 92–2091 | Assembly – Holder | 63 | 14 | 1 |
| 92–2092 | Insulator | 63 | 13 | 1 |
| 92–2093 | Armature | 63 | 6 | 1 |
| 92–2094 | Clutch | 63 | 7 | 1 |
| 92–2095 | Kit – Switch | 63 | 4 | 1 |
| 92–2096 | Ring – Snap | 63 | 9 | 1 |
| 92–2097 | Nut | 63 | 8 | 2 |
| 92–2098 | Washer | 63 | 10 | 1 |
| 92–2099 | Bolt | 63 | 11 | 2 |
| 92–2100 | Bolt | 64 | 25 | 2 |
| 92–2102 | Lever – Clutch | 63 | 3 | 1 |
| 92–2103 | Assembly – Bracket, Front | 64 | 3 | 1 |
| 92–2106 | Nut | 63 | 2 | 2 |
| 92–2107 | Nut | 63 | 5 | 1 |
| 92–2108 | Igniter Set | 62 | 12 | 1 |
| 92–2109 | O–Ring | 62 | 8 | 1 |
| 92–2110 | Cover – Acc. Pump | 61 | 19 | 1 |
| 92–2111 | Kit – Mixing Screw | 60 | 2 | 1 |
| 92–2113 | Rotor | 62 | 2 | 1 |
| 92–2114 | Assembly – Cap | 62 | 1 | 1 |
| 92–2115 | Screw Set | 62 | 14 | 1 |
| 92–2116 | Assembly – Signal Rotor | 62 | 6 | 1 |
| 92–2117 | Chamber – Vacuum | 62 | 7 | 1 |
| 92–2118 | Plate | 62 | 10 | 1 |
| 92–2119 | Wire – Lead | 62 | 11 | 1 |
| 92–2120 | Gasket | 62 | 3 | 1 |
| 92–2121 | Wire Assembly – Lead | 62 | 13 | 1 |
| 92–2122 | Housing | 62 | 9 | 1 |
| 92–2125 | Assy. – Spark Plug Wire Set | 62 | * | 1 |
| 92–2126 | Kit – Gasket, Upper | 65 | 3 | 1 |
| 92–2127 | Kit – Overhaul Gasket | 65 | 2 | 1 |
| 92–2128 | Bolt – Cover | 51 | 5 | 2 |
| 92–2129 | Screw – Cap Hex. Hd. | 12 | 30 | 2 |
| 92–2130 | Bolt – Flange Head | 55 | 15 | 2 |
| 92–2131 | Bolt – Flange Head | 52 | 4 | 2 |
| 92–2131 | Bolt – Flange Head | 50 | 28 | 7 |
| 92–2132 | Bolt | 58 | 16 | 1 |
| 92–2133 | Bolt – Flange Head | 64 | 26 | 1 |
| 92–2134 | Bolt – Flange Head | 64 | 30 | 1 |
| 92–2135 | Bolt – Flange Head | 55 | 8 | 1 |
| 92–2137 | Bolt/washer | 52 | 12 | 2 |
| 92–2138 | Bolt | 59 | 1 | 3 |
| 92–2138 | Bolt | 58 | 19 | 2 |
| 92–2139 | Bolt | 59 | 4 | 1 |
| 92–2140 | Bolt | 59 | 28 | 1 |
| 92–2141 | Bolt | 59 | 3 | 2 |
| 92–2142 | Bolt/washer | 58 | 4 | 3 |
| 92–2143 | Bolt | 50 | 22 | 3 |
| 92–2144 | Bolt | 50 | 20 | 2 |
| 92–2145 | Nut – Flange | 55 | 5 | 1 |
| 92–2146 | Washer | 62 | 15 | 1 |
| 92–2147 | Washer | 55 | 6 | 1 |
| 92–2148 | Pin – Dowel | 50 | 6 | 2 |
| 92–2148 | Pin – Dowel | 53 | 13 | 1 |
| 92–2149 | Pin | 55 | 1 | 2 |
| 92–2150 | Ring – Snap | 57 | 15 | 1 |
| 92–2151 | Cap – Plug | 59 | 29 | 1 |
| 92–2151 | Cap – Sealing | 50 | 2 | 3 |
| 92–2151 | Cap – Sealing | 51 | 13 | 1 |
| 92–2152 | Bushing | 50 | 3 | 4 |
| 92–2153 | Plug – Spark | 62 | 18 | 3 |
| 92–2154 | Kit – Diaphragm | 61 | 20 | 1 |
| 92–2155 | Gasket – Water Inlet | 58 | 21 | 1 |
| 92–2156 | Nut – Alternator | 64 | 31 | 1 |
| 92–2157 | Outlet – Water | 59 | 2 | 1 |
| 92–2160 | Cartridge – Relief Valve | 45 | 12 | 1 |
| 92–2161 | Body – Relief Valve | 45 | 28 | 1 |
| 92–2162 | Head | 47 | 6 | 1 |
| 92–2163 | Shaft | 47 | 2 | 1 |
| 92–2165 | Kit – Repair | 47 | * | 1 |
| 92–2173 | Screw – Cap Socket Head | 27 | 18 | 8 |
| 92–2174 | Screw – Adjusting | 27 | 22 | 1 |
| 92–2175 | Gear | 27 | 11 | 2 |
| 92–2176 | Pin – Dowel | 27 | 16 | 2 |
| 92–2177 | Pin – Shear | 27 | 7 | 1 |
| 92–2178 | Ring – Crescent | 27 | 4 | 4 |
| 92–2179 | Key – Square | 27 | 5 | 1 |
| 92–2180 | Gasket – Copper | 27 | 23 | 1 |
| 92–2181 | Plate – Pressure | 27 | 13 | 1 |
| 92–2182 | Plate – Seal | 27 | 9 | 1 |
| 92–2183 | Plate – Wear | 27 | 10 | 1 |
| 92–2184 | Cap – Relief Valve | 27 | 24 | 1 |
| 92–2185 | Plug | 27 | 19 | 1 |
| 92–2186 | Spacer | 27 | 3 | 1 |
| 92–2187 | Housing – Gear, End | 27 | 17 | 1 |
| 92–2188 | Stator | 27 | 8 | 1 |
| 92–2189 | Shaft – Drive | 27 | 6 | 1 |
| 92–2190 | Shaft – Idler | 27 | 25 | 1 |
| 92–2191 | Bearing | 27 | 27 | 1 |
| 92–2192 | Bearing | 27 | 12 | 4 |
| 92–2193 | Ball | 27 | 20 | 1 |
| 92–2194 | Spring | 27 | 21 | 1 |
| 92–2195 | Seal – Oil | 27 | 2 | 1 |
| 92–2196 | Seal – Pressure Plate | 27 | 15 | 1 |
| 92–2197 | Seal – Back Up | 27 | 14 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 92–2198 | Seal | 27 | 26 | 1 |
| 92–2199 | Key – Ball | 27 | 28 | 1 |
| 92–2379 | Clamp – Hose | 26 | 4 | 3 |
| 92–2379 | Clamp – Hose | 43 | 6 | 2 |
| 92–2379 | Clamp – Hose | 42 | 13 | 1 |
| 92–2609 | Decal – Remote Hyd. (US) | 13 | 18 | 1 |
| 92–2697 | Hose – Hydraulic LH | 46 | 1 | 1 |
| 92–4100 | Backplate Assembly RH | 25 | * | 1 |
| 92–4101 | Primary Piston Assembly | 9 | 11 | 1 |
| 92–4102 | Secondary Piston Assembly | 9 | 4 | 1 |
| 92–4103 | Pin – Stop | 9 | 3 | 1 |
| 92–4104 | Adaptor – Pipe Fitting | 9 | 1 | 2 |
| 92–4106 | Rod – Push | 9 | 8 | 1 |
| 92–4107 | Dust Cover | 9 | 7 | 1 |
| 92–4108 | Washer – Retainer | 9 | 10 | 1 |
| 92–4109 | Circlip | 9 | 9 | 1 |
| 92–4110 | Clevis | 9 | 5 | 1 |
| 92–4111 | Petcock – Radiator | 26 | 42 | 1 |
| 92–4112 | Assembly – Cap | 8 | 5 | 1 |
| 92–4113 | Screw – Bleed | 21 | 4 | 1 |
| 92–4114 | Cap – Bleed Screw | 21 | 5 | 1 |
| 92–4114 | Cap – Bleed Screw | 25 | 5 | 1 |
| 92–4115 | Backplate Assembly LH | 21 | 2 | 1 |
| 92–4116 | Backplate Assembly RH | 21 | * | 1 |
| 92–4117 | Assy. – Wheel Cylinder LH | 21 | * | 1 |
| 92–4118 | Assy. – Wheel Cylinder RH | 21 | * | 1 |
| 92–4119 | Kit – Seal | 21 | * | 1 |
| 92–4120 | Shoe & Lining Set | 21 | 13 | 1 |
| 92–4121 | Assembly – Adjuster LH | 21 | * | 1 |
| 92–4122 | Assembly – Adjuster RH | 21 | * | 1 |
| 92–4123 | Assembly – Pawl LH | 21 | 19 | 1 |
| 92–4123 | Assembly – Pawl LH | 25 | 19 | 1 |
| 92–4124 | Assembly – Pawl RH | 21 | * | 1 |
| 92–4124 | Assembly – Pawl RH | 25 | * | 1 |
| 92–4125 | Plug | 21 | 3 | 1 |
| 92–4126 | Spring – Shoe, Upper LH | 21 | 14 | 1 |
| 92–4127 | Spring – Shoe, Upper RH | 21 | * | 1 |
| 92–4128 | Spring – Shoe, Lower | 21 | 15 | 1 |
| 92–4129 | Spring – Adjuster, LH | 21 | 20 | 1 |
| 92–4130 | Spring – Adjuster, RH | 21 | * | 1 |
| 92–4131 | Washer – Hold Down | 21 | 22 | 2 |
| 92–4131 | Washer – Hold Down | 25 | 22 | 2 |
| 92–4132 | Spring – Hold Down | 21 | 23 | 2 |
| 92–4133 | Pin – Hold Down | 21 | 26 | 2 |
| 92–4133 | Pin – Hold Down | 25 | 26 | 2 |
| 92–4134 | Plug – Inspection | 21 | 25 | 1 |
| 92–4134 | Plug – Inspection | 25 | 25 | 1 |
| 92–4135 | Set Bolt | 21 | 1 | 2 |
| 92–4135 | Set Bolt | 25 | 1 | 2 |
| 92–4136 | Backplate Assembly LH | 25 | 2 | 1 |
| 92–4137 | Screw – Bleed | 25 | 4 | 1 |
| 92–4140 | Assy. – Wheel Cylinder LH | 25 | * | |
| 92–4141 | Assy. – Wheel Cylinder RH | 25 | * | 1 |
| 92–4142 | Seal Kit | 25 | * | 1 |
| 92–4143 | Shoe & Lining Set | 25 | 13 | 1 |
| 92–4144 | Assembly – Adjuster LH | 25 | * | 1 |
| 92–4145 | Assembly – Adjuster RH | 25 | * | 1 |
| 92–4146 | Plug | 25 | 3 | 1 |
| 92–4147 | Spring – Shoe, Upper LH | 25 | 14 | 1 |
| 92–4148 | Spring – Shoe, Upper RH | 25 | * | 1 |
| 92–4149 | Spring – Shoe, Lower | 25 | 15 | 1 |
| 92–4150 | Spring – Adjuster, LH | 25 | 20 | 1 |
| 92–4151 | Spring – Adjuster, RH | 25 | * | 1 |
| 92–4152 | Spring – Hold Down | 25 | 23 | 2 |
| 92–4153 | Assembly –Steering Column | 5 | 11 | 1 |
| 92–4154 | Universal Joint Assembly | 5 | 31 | 1 |
| 92–4155 | Slip Joint Assembly – Upper | 5 | 28 | 1 |
| 92–4156 | Slip Joint Assembly – Lower | 5 | 29 | 1 |
| 92–4157 | Boot – Steering Shaft | 5 | 24 | 1 |
| 92–4158 | Valve Assy. – Hyd. Gear | 7 | * | 1 |
| 92–4159 | Nut – Adjuster Plug Lock | 6 | 25 | 1 |
| 92–4160 | Bearing Service Kit – Upper | 7 | * | 1 |
| 92–4161 | Assembly – Cover Service | 6 | * | 1 |
| 92–4162 | Pitman Shaft – Gear Service | 7 | * | 1 |
| 92–4163 | Assy. – Steering Housing | 7 | * | 1 |
| 92–4164 | Plug Assy. – Service Adjust. | 7 | * | 1 |
| 92–4165 | Plug – Housing End | 6 | 2 | 1 |
| 92–4166 | Rack/Piston/Nut Assembly | 7 | * | 1 |
| 92–4167 | Assembly – Plug Service | 7 | * | 1 |
| 92–4168 | Return – Guide Ball | 6 | 7 | 2 |
| 92–4169 | Bearing – Needle | 6 | 21 | 1 |
| 92–4170 | Bearing – Pitman Shaft | 6 | 47 | 1 |
| 92–4172 | Seal | 9 | 2 | 2 |
| 92–4177 | Yoke – Double Clamp | 23 | 34 | 2 |
| 92–4179 | Yoke, Shaft & Seal Tube | 23 | 33 | 2 |
| 92–4180 | Seal | 23 | 32 | 2 |
| 92–4182 | Yoke & Hub | 23 | 31 | 2 |
| 92–4187 | Cross & Bearing Kit | 23 | 30 | 4 |
| 92–4188 | Ring – Snap | 23 | 28 | 12 |
| 92–4189 | Strap & Bolt Kit | 23 | 36 | 4 |
| 92–4190 | Yoke – End | 23 | 29 | 2 |
| 92–4197 | Operators Platform Assy. | 1 | 17 | 1 |
| 92–4198 | Fan Shroud Assembly | 26 | 13 | 1 |
| 92–5100 | Gasket – Liquid | 65 | 1 | 1 |
| 92–5101 | Seat – Exhaust Valve | 51 | * | 3 |
| 92–5102 | Seat – Intake Valve | 51 | * | 3 |
| 92–5103 | Guide – Intake Valve | 51 | * | 3 |
| 92–5104 | Guide – Intake Valve | 51 | * | 3 |
| 92–5105 | Guide – Exhaust Valve | 51 | * | 1 |
| 92–5106 | Guide – Exhaust Valve | 51 | * | 1 |
| 92–5107 | Stud | 50 | 14 | 1 |
| 92–5108 | Gasket – Bracket | 50 | 24 | 1 |
| 92–5109 | Stay – Oil Filter | 50 | 21 | 1 |
| 92–5110 | Gauge – Oil Level | 50 | 19 | 1 |
| 92–5111 | Guide – Oil Level Gauge | 50 | 32 | 1 |
| 92–5112 | Bolt – Flange Head | 50 | 18 | 1 |
| 92–5112 | Bolt – Flange Head | 58 | 2 | 4 |
| 92–5113 | Bolt – Flange Head | 52 | 1 | 3 |
| 92–5114 | Piston & Pin | 53 | * | 3 |
| 92–5116 | Piston & Pin | 53 | * | 3 |
| 92–5117 | Piston & Pin | 53 | * | 3 |
| 92–5118 | Piston Ring Set | 53 | * | 1 |
| 92–5120 | Piston Ring Set | 53 | * | 1 |
| 92–5121 | Piston Ring Set | 53 | * | 1 |
| 92–5122 | Nut – Timing Belt | 55 | 4 | 1 |
| 92–5123 | Bolt – Engine Mount | 56 | 3 | 3 |
| 92–5124 | Body – Choke, Auto | 60 | 15 | 1 |
| 92–5125 | Kit – Check Valve | 61 | 13 | 1 |
| 92–5126 | Cover – Carburetor Top | 60 | 5 | 1 |
| 92–5127 | Kit – Float & Pin | 61 | 12 | 1 |
| 92–5128 | Insulator – Carburetor | 60 | 13 | 1 |
| 92–5129 | Jet – Pilot | 61 | 8 | 1 |
| 92–5130 | Jet – Main | 61 | 10 | 1 |
| 92–5131 | Jet – Power | 61 | 11 | 1 |
| 92–5132 | Kit – Holder, Main Jet | 61 | 6 | 1 |
| 92–5133 | Kit – Lever, Throttle | 61 | 2 | 1 |
| 92–5134 | Orifice – Choke | 60 | 8 | 1 |
| 92–5135 | Kit – Screw Adjusting, Idle | 61 | 5 | 1 |
| 92–5136 | Kit – Adjusting Screw | 60 | 1 | 1 |
| 92–5137 | Spring | 60 | 4 | 1 |
| 92–5140 | Kit – Needle Valve | 61 | 21 | 1 |
| 92–5141 | Valve – Fuel Cut–Off | 61 | 22 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 92–5142 | Valve – Carburetor Piston | 60 | 3 | 1 |
| 92–5143 | Gasket – Choke, Auto | 60 | 17 | 1 |
| 92–5144 | Cover – Float Chamber | 61 | 14 | 1 |
| 92–5145 | Screw | 60 | 7 | 6 |
| 92–5146 | Screw | 61 | 18 | 4 |
| 92–5147 | Screw | 61 | 15 | 4 |
| 92–5148 | Screw | 61 | 1 | 1 |
| 92–5149 | Screw | 60 | 16 | 1 |
| 92–5150 | O–Ring | 61 | 9 | 1 |
| 92–5151 | O–Ring | 61 | 16 | 1 |
| 92–5152 | O–Ring | 61 | 7 | 1 |
| 92–5153 | O–Ring | 61 | 17 | 1 |
| 92–5154 | Nut – Carburetor, INR | 61 | 4 | 1 |
| 92–5155 | Clamp – Carburetor | 60 | 9 | 1 |
| 92–5156 | Clamp – Carburetor INR | 60 | 6 | 1 |
| 92–5157 | Bolt | 60 | 10 | 2 |
| 92–5160 | Valve – Thermostat | 58 | 9 | 1 |
| 92–5161 | Gasket | 58 | 10 | 1 |
| 92–5162 | Plug – Inlet | 59 | 24 | 2 |
| 92–5163 | Gasket – EGR Valve | 59 | 15 | 1 |
| 92–5164 | Assembly – Hose | 59 | 11 | 1 |
| 92–5165 | Clip | 59 | 12 | 1 |
| 92–5166 | Bolt | 59 | 13 | 2 |
| 92–5167 | Bracket – Front | 63 | 1 | 1 |
| 92–5168 | Bracket – Rear | 63 | 12 | 1 |
| 92–5169 | Pulley | 64 | 1 | 1 |
| 92–5170 | Cover | 62 | 4 | 1 |
| 92–5171 | Gasket – Cover | 62 | 5 | 1 |
| 92–5172 | Clamp | 62 | 23 | 1 |
| 92–5490 | Decal – Quick Ref. (DU) | 13 | * | 1 |
| 92–5491 | Decal – Quick Ref. (FR) | 13 | * | 1 |
| 92–5492 | Decal – Quick Ref. (GR) | 13 | * | 1 |
| 92–5493 | Decal – Quick Ref. (IT) | 13 | * | 1 |
| 92–5495 | Decal – Quick Ref. (SP) | 13 | * | 1 |
| 92–5496 | Decal – Quick Ref. (SW) | 13 | * | 1 |
| 92–5951 | Angle – Hitch | 23 | 41 | 1 |
| 92–5972 | Grommet | 14 | 5 | 4 |
| 93–0307 | Nut – Retainer | 20 | 35 | 2 |
| 93–0309 | Washer – Tab | 20 | 3 | 2 |
| 93–3101 | Cap – Fuel (US) | 42 | 1 | 1 |
| 93–6668 | Decal – Charging (CE) | 41 | 22 | 1 |
| 93–6681 | Decal – Warning (CE) | 26 | 44 | 1 |
| 93–6687 | Decal – No Step (CE) | 41 | * | 1 |
| 93–7050 | Radiator Assembly | 26 | 30 | 1 |
| 93–7053 | Warning Light Assembly | 2 | 9 | 1 |
| 93–7081 | Tube – Brake Front RH | 10 | 10 | 1 |
| 93–7082 | Tube – Brake Front LH | 10 | 16 | 1 |
| 93–7083 | Tube – Brake Front | 10 | 1 | 1 |
| 93–7084 | Tube – Brake Rear | 10 | 5 | 1 |
| 93–7085 | Tube – Brake Front | 10 | 19 | 1 |
| 93–7086 | Tube – Brake Rear | 10 | 7 | 1 |
| 93–7087 | Tube – Brake Rear | 10 | 12 | 1 |
| 93–7088 | Support – Fan | 26 | 16 | 1 |
| 93–7090 | Stub – Axle | 23 | 14 | 2 |
| 93–7094 | Cover – Wire Harness | 2 | 49 | 1 |
| 93–7095 | Frame – Engine | 29 | 17 | 1 |
| 93–7103 | Screen – Radiator | 26 | 7 | 1 |
| 93–7121 | Housing – Bell | 12 | 8 | 1 |
| 93–7123 | Hose – Brake Front | 19 | 8 | 2 |
| 93–7123 | Hose – Brake Front | 10 | 9 | 2 |
| 93–7124 | Driveshaft Assembly | 24 | * | 2 |
| 93–7125 | Brake Assembly RH | 23 | * | 1 |
| 93–7125 | Rear Brake Assembly – RH | 25 | * | 1 |
| 93–7126 | Brake Assembly LH | 23 | 9 | 1 |
| 93–7126 | Rear Brake Assembly – LH | 25 | * | 1 |
| 93–7128 | Drum – Brake | 23 | 15 | 2 |
| 93–7129 | Harness – Wire Rear | 2 | 34 | 1 |
| 93–7133 | Arm – Control Upper LH | 19 | * | 1 |
| 93–7135 | Arm – Control Upper RH | 19 | 21 | 1 |
| 93–7145 | Screw – Cap Hex. Hd. | 5 | 19 | 3 |
| 93–7170 | Cap – Fuel (CE) | 42 | * | 1 |
| 93–7252 | Decal – CE (CE) | 3 | 66 | 1 |
| 93–7276 | Decal – Danger (CE) | 41 | 23 | 1 |
| 93–7814 | Decal – Caution (CE) | 28 | * | 1 |
| 93–8071 | Decal – Caution (CE) | 22 | * | 2 |
| 93–8941 | Bracket – Front LH | 49 | 15 | 1 |
| 93–8942 | Brackrt – Front RH | 49 | * | 1 |
| 93–8943 | Plate – Tail Light LH | 49 | 12 | 1 |
| 93–8944 | Plate – Tail Light RH | 49 | * | 1 |
| 93–8953 | Front Bracket Assy. LH (CE) | 31 | 59 | 1 |
| 93–8954 | Front Bracket Assy. RH (CE) | 31 | 60 | 1 |
| 93–8955 | Rear Brace Assy. LH (CE) | 12 | 48 | 1 |
| 93–8956 | Rear Brace Assy. RH (CE) | 12 | 47 | 1 |
| 93–9430 | Decal – Differential (CE) | 13 | * | 1 |
| 93–9436 | Decal – Quick Ref. (DN) | 13 | * | 1 |
| 93–9437 | Decal – Quick Ref. (FN) | 13 | * | 1 |
| 93–9438 | Decal – Quick Ref. (NO) | 13 | * | 1 |
| 93–9439 | Decal – Quick Ref. (PO) | 13 | * | 1 |
| 93–9442 | Decal – ATF (CE) | 23 | * | 1 |
| 93–9443 | Decal – Parking Brake (CE) | 13 | * | 1 |
| 93–9444 | Decal – Dump Hyd. (CE) | 13 | * | 1 |
| 93–9446 | Decal – Dash (CE) | 3 | * | 1 |
| 93–9447 | Decal – Caution (CE) | 26 | * | 1 |
| 93–9448 | Decal – Caution (CE) | 13 | * | 1 |
| 93–9449 | Decal – Grease (CE) | 23 | * | 2 |
| 93–9850 | Decal – Rollover (CE) | 17 | * | 1 |
| 93–9851 | Decal – Fuse Block (CE) | 3 | * | 1 |
| 93–9852 | Decal – Danger (CE) | 14 | * | 1 |
| 93–9852 | Decal – Warning (CE) | 46 | * | 2 |
| 93–9852 | Decal – Warning (CE) | 47 | * | 1 |
| 93–9856 | Decal – Supervisor (CE) | 3 | * | 1 |
| 93–9857 | Decal – Axle Range (CE) | 13 | * | 1 |
| 93–9859 | Decal – ROPS (CE) | 17 | * | 2 |
| 93–9860 | Decal – Danger (CE) | 13 | * | 1 |
| 93–9861 | Decal – PTO (CE) | 13 | * | 1 |
| 93–9862 | Decal – PTO (CE) | 23 | * | 1 |
| 93–9866 | Decal – Remote Hyd. (CE) | 13 | * | 1 |
| 93–9879 | Decal – Warning (CE) | 18 | * | 2 |
| 94–1224 | Decal – Load Rating (CE) | 1 | * | 1 |
| 218–446 | Nut – Hex. | 2 | 11 | 1 |
| 218–447 | Washer – Lock | 2 | 12 | 1 |
| 218–473 | Boot – Switch | 3 | 63 | 1 |
| 218–574 | Fuse – 7.5 Amp | 2 | 46 | 2 |
| 218–578 | Fuse – 10 Amp | 3 | 61 | 1 |
| 218–600 | Bulb | 2 | 13 | 2 |
| 219–17 | Bulb – Warning Light | 3 | 59 | 4 |
| 232–27 | Stem – Valve | 20 | 31 | 2 |
| 232–27 | Valve – Stem | 23 | 17 | 2 |
| 233–37 | Knob | 15 | 1 | 1 |
| 233–39 | Knob | 45 | 1 | 1 |
| 233–39 | Knob | 5 | 1 | 1 |
| 233–48 | Knob | 16 | 4 | 1 |
| 237–21 | Seal – O–Ring | 46 | 2 | 6 |
| 237–22 | Seal – O–Ring | 46 | 5 | 3 |
| 237–22 | Seal – O–Ring | 45 | 9 | 4 |
| 237–30 | Seal – O–Ring | 34 | 34 | 2 |
| 237–42 | O–Ring | 48 | 2 | 2 |
| 237–42 | Seal – O–Ring | 46 | 7 | 2 |
| 237–42 | Seal – O–Ring | 45 | 11 | 2 |
| 237–42 | Seal – O–Ring | 34 | 47 | 1 |
| 237–78 | Seal – O–Ring | 46 | 15 | 4 |
| 237–79 | Seal – O–Ring | 46 | 25 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 237–79 | Seal – O–Ring | 34 | 39 | 2 |
| 237–80 | Seal – O–Ring | 46 | 24 | 1 |
| 237–81 | Seal – O–Ring | 34 | 28 | 1 |
| 237–123 | Seal – O–Ring | 34 | 25 | 1 |
| 240–5 | Grommet | 12 | 32 | 1 |
| 240–6 | Grommet | 8 | 22 | 1 |
| 241–119 | Cap Dust | 20 | 1 | 2 |
| 2410–35 | Plug – Hole | 2 | 6 | 1 |
| 2410–42 | Cap – Front Bumper | 1 | 12 | 2 |
| 2410–64 | Plug – Hole | 3 | 64 | 1 |
| 2411–33 | Joint – Ball | 12 | 3 | 1 |
| 2412–10 | Clamp – R | 19 | 7 | 2 |
| 2412–10 | Clamp – R | 30 | 43 | 1 |
| 2412–34 | Clamp | 46 | 22 | 1 |
| 2412–34 | Clamp – Hose | 26 | 9 | 2 |
| 2412–34 | Clamp – Hose | 30 | 30 | 2 |
| 2412–34 | Clamp – Hose | 35 | 53 | 1 |
| 2412–36 | Clamp | 42 | 8 | 2 |
| 2412–36 | Clamp – Hose | 34 | 3 | 3 |
| 2412–82 | Clamp – R | 29 | 10 | 1 |
| 2412–89 | Clamp – R | 29 | 2 | 2 |
| 2412–89 | Clamp – R | 41 | 5 | 1 |
| 2412–89 | Clamp – R | 10 | 21 | 1 |
| 2412–89 | Clamp – R | 12 | 25 | 1 |
| 2412–89 | Clamp – R | 2 | 32 | 1 |
| 2412–92 | Clamp – Hose | 30 | 2 | 1 |
| 2412–92 | Clamp – Hose | 43 | 14 | 3 |
| 2412–93 | Clamp – R | 49 | 2 | 1 |
| 2412–96 | Clamp – R | 43 | 4 | 1 |
| 2412–105 | Clamp – R | 5 | 17 | 2 |
| 2412–108 | Clamp – Hose | 43 | 8 | 2 |
| 2412–108 | Clamp – Hose | 42 | 10 | 1 |
| 2412–108 | Clamp – Hose | 30 | 47 | 2 |
| 2412–119 | Clamp – Hose | 30 | 6 | 3 |
| 2412–130 | Clamp – Hose | 44 | 10 | 1 |
| 2412–130 | Clamp – Hose | 30 | 32 | 2 |
| 2412–133 | Clamp – R | 14 | 3 | 2 |
| 2412–143 | Clamp – Hose | 8 | 15 | 2 |
| 2412–144 | Clamp – Hose | 8 | 34 | 2 |
| 2412–149 | Clamp – Tube | 22 | 24 | 5 |
| 2412–149 | R–Clamp | 10 | 14 | 2 |
| 251–8 | Bearing – Ball | 38 | 1 | 2 |
| 251–82 | Bearing – Ball | 28 | 11 | 2 |
| 251–346 | Bearing – Ball | 38 | 8 | 1 |
| 254–72 | Cup – Bearing | 20 | 29 | 2 |
| 254–94 | Cone – Bearing | 20 | 30 | 2 |
| 254–106 | Cone – Bearing | 20 | 27 | 2 |
| 254–107 | Cup – Bearing | 20 | 28 | 2 |
| 256–257 | Bushing – Flange | 8 | 1 | 2 |
| 256–257 | Bushing – Flange | 12 | 38 | 2 |
| 283–2 | Pin – Clevis | 8 | 29 | 1 |
| 283–14 | Pin – Clevis | 16 | 23 | 1 |
| 283–30 | Pin – Clevis | 12 | 35 | 1 |
| 283–30 | Pin – Clevis | 8 | 42 | 1 |
| 283–62 | Pin – Clevis | 16 | 6 | 1 |
| 283–62 | Pin – Clevis | 15 | 8 | 3 |
| 283–62 | Pin – Clevis | 34 | 35 | 3 |
| 283–85 | Pin – Clevis | 8 | 39 | 1 |
| 285–17 | Plug – Pipe | 33 | 15 | 2 |
| 302–5 | Fitting – Grease | 19 | 14 | 4 |
| 302–5 | Fitting – Grease | 20 | 20 | 4 |
| 302–5 | Fitting – Grease | 5 | 30 | 1 |
| 302–5 | Fitting – Grease | 23 | 35 | 4 |
| 302–11 | Fitting – Grease | 18 | 8 | 1 |
| 302–58 | Fitting – Grease | 24 | 46 | 16 |
| 321–2 | Screw – Cap Hex. Hd. | 2 | 1 | 7 |
| 321–3 | Screw – Cap Hex. Hd. | 2 | 4 | 2 |
| 321–3 | Screw – Cap Hex. Hd. | 32 | 7 | 1 |
| 321–3 | Screw – Cap Hex. Hd. | 26 | 28 | 4 |
| 321–3 | Screw – Cap Hex. Hd. | 5 | 33 | 2 |
| 321–4 | Screw – Cap Hex. Hd. | 29 | 1 | 2 |
| 321–4 | Screw – Cap Hex. Hd. | 41 | 8 | 1 |
| 321–4 | Screw – Cap Hex. Hd. | 13 | 9 | 8 |
| 321–4 | Screw – Cap Hex. Hd. | 26 | 12 | 4 |
| 321–4 | Screw – Cap Hex. Hd. | 10 | 13 | 3 |
| 321–4 | Screw – Cap Hex. Hd. | 30 | 15 | 1 |
| 321–4 | Screw – Cap Hex. Hd. | 14 | 20 | 8 |
| 321–4 | Screw – Cap Hex. Hd. | 1 | 24 | 4 |
| 321–4 | Screw – Cap Hex. Hd. | 12 | 26 | 1 |
| 321–4 | Screw – Cap Hex. Hd. | 32 | 30 | 2 |
| 321–4 | Screw – Cap Hex. Hd. | 2 | 33 | 1 |
| 321–4 | Screw – Hex. Flange Hd. | 22 | 26 | 4 |
| 321–6 | Screw – Cap Hex. Hd. | 49 | 3 | 12 |
| 321–6 | Screw – Cap Hex. Hd. | 19 | 5 | 2 |
| 321–9 | Screw – Cap Hex. Hd. | 10 | 3 | 4 |
| 321–9 | Screw – Cap Hex. Hd. | 45 | 5 | 2 |
| 321–9 | Screw – Cap Hex. Hd. | 16 | 27 | 1 |
| 321–14 | Screw – Cap Hex. Hd. | 46 | 8 | 2 |
| 321–15 | Screw – Cap Hex. Hd. | 45 | 13 | 1 |
| 322–2 | Screw – Cap Hex. Hd. | 8 | 2 | 12 |
| 322–2 | Screw – Cap Hex. Hd. | 10 | 11 | 1 |
| 322–2 | Screw – Cap Hex. Hd. | 43 | 16 | 4 |
| 322–2 | Screw – Cap Hex. Hd. | 5 | 16 | 6 |
| 322–2 | Screw – Cap Hex. Hd. | 26 | 39 | 4 |
| 322–2 | Screw – Cap Hex. Hd. | 30 | 42 | 1 |
| 322–2 | Screw – Cap Hex. Hd. | 2 | 50 | 3 |
| 322–3 | Screw – Cap Hex. Hd. | 46 | 20 | 4 |
| 322–5 | Screw – Cap Hex. Hd. | 28 | 2 | 4 |
| 322–5 | Screw – Cap Hex. Hd. | 13 | 6 | 8 |
| 322–5 | Screw – Cap Hex. Hd. | 19 | 10 | 2 |
| 322–5 | Screw – Cap Hex. Hd. | 8 | 13 | 1 |
| 322–5 | Screw – Cap Hex. Hd. | 49 | 20 | 4 |
| 322–5 | Screw – Cap Hex. Hd. | 26 | 22 | 4 |
| 322–5 | Screw – Cap Hex. Hd. | 45 | 24 | 1 |
| 322–6 | Screw – Cap Hex. Hd. | 30 | 4 | 2 |
| 322–7 | Screw – Cap Hex. Hd. | 28 | 9 | 4 |
| 322–12 | Screw – Cap Hex. Hd. | 15 | 25 | 1 |
| 323–4 | Screw – Cap Hex. Hd. | 42 | 16 | 2 |
| 323–4 | Screw – Cap Hex. Hd. | 1 | 22 | 1 |
| 323–6 | Screw – Cap Hex. Hd. | 16 | 1 | 1 |
| 323–6 | Screw – Cap Hex. Hd. | 43 | 2 | 1 |
| 323–6 | Screw – Cap Hex. Hd. | 23 | 11 | 8 |
| 323–6 | Screw – Cap Hex. Hd. | 14 | 12 | 2 |
| 323–6 | Screw – Cap Hex. Hd. | 22 | 31 | 2 |
| 323–6 | Screw – Cap Hex. Hd. | 15 | 37 | 1 |
| 323–7 | Screw – Cap Hex. Hd. | 34 | 14 | 4 |
| 323–7 | Screw – Cap Hex. Hd. | 32 | 27 | 3 |
| 323–7 | Screw – Cap Hex. Hd. | 8 | 31 | 2 |
| 323–7 | Screw – Cap Hex. Hd. | 23 | 43 | 4 |
| 323–8 | Screw – Hex. Flange Hd. | 20 | 11 | 8 |
| 323–9 | Screw – Cap Hex. Hd. | 41 | 16 | 1 |
| 323–10 | Screw – Cap Hex. Hd. | 34 | 8 | 1 |
| 323–12 | Screw – Cap Hex. Hd. | 18 | 6 | 8 |
| 323–29 | Screw – Cap Hex. Hd. | 30 | 55 | 2 |
| 324–9 | Screw – Cap Hex. Hd. | 18 | 22 | 4 |
| 324–10 | Screw – Cap Hex. Hd. | 18 | 1 | 4 |
| 324–13 | Screw – Cap Hex. Hd. | 18 | 10 | 2 |
| 324–19 | Screw – Cap Hex. Hd. | 29 | 6 | 2 |
| 325–4 | Screw – Cap Hex. Hd. | 14 | 15 | 2 |
| 325–13 | Screw – Cap Hex. Hd | 19 | 11 | 8 |
| 325–13 | Screw – Cap Hex. Hd. | 18 | 27 | 4 |
| 325–19 | Screw – Cap Hex. Hd. | 23 | 27 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 325–20 | Screw – Cap Hex. Hd. | 23 | 24 | 5 |
| 3210–9 | Screw – Cap Hex. Hd. | 32 | 6 | 1 |
| 3211–8 | Screw – Cap Hex. Hd. | 15 | 13 | 2 |
| 3215–1 | Screw – Cap Hex. Hd. | 34 | 16 | 1 |
| 3217–25 | Nut – Hex. | 2 | 38 | 2 |
| 3217–26 | Hut – Hex. | 2 | 37 | 1 |
| 3217–29 | Nut – Jam | 3 | 58 | 3 |
| 3218–18 | Nut – Jam | 15 | 43 | 1 |
| 3218–20 | Nut – Jam | 12 | 14 | 2 |
| 3218–21 | Nut – Jam | 20 | 18 | 2 |
| 3219–2 | Nut | 33 | 19 | 2 |
| 3219–14 | Nut | 15 | 5 | 1 |
| 3219–14 | Nut – Hex. | 34 | 32 | 1 |
| 3219–14 | Nut – Jam | 32 | 10 | 2 |
| 3220–1 | Nut – Jam | 32 | 2 | 1 |
| 3220–1 | Nut – Jam | 34 | 37 | 4 |
| 3220–1 | Nut – Jam | 15 | 41 | 4 |
| 3220–2 | Nut – Jam | 12 | 2 | 1 |
| 3220–2 | Nut – Jam | 32 | 5 | 1 |
| 3220–3 | Nut – Jam | 15 | 12 | 2 |
| 3220–7 | Nut – Jam | 20 | 2 | 2 |
| 3220–11 | Nut – Jam | 20 | 23 | 2 |
| 3229–25 | Screw – Carriage | 46 | 19 | 2 |
| 3230–18 | Bolt – Carriage | 14 | 2 | 2 |
| 3230–23 | Bolt – Carriage | 41 | 6 | 4 |
| 3230–23 | Bolt – Carriage | 26 | 21 | 5 |
| 3231–3 | Bolt – Carriage | 18 | 21 | 4 |
| 3231–21 | Bolt – Carriage | 41 | 7 | 6 |
| 3231–21 | Bolt – Carriage | 45 | 21 | 1 |
| 3231–21 | Bolt – Carriage | 14 | 22 | 4 |
| 3231–21 | Bolt – Carriage | 15 | 32 | 4 |
| 3231–26 | Bolt – Carriage | 32 | 15 | 1 |
| 3231–28 | Bolt – Carriage | 26 | 17 | 1 |
| 3232–17 | Bolt – Carriage | 22 | 19 | 8 |
| 3234–1 | Screw – Hex. Flange Hd. | 1 | 13 | 6 |
| 3234–4 | Screw – Hex. Flange Hd. | 34 | 42 | 4 |
| 3234–5 | Screw – Cap Hex. Hd. (CE) | 31 | 56 | 2 |
| 3234–5 | Screw – Flange Hd. (CE) | 12 | 44 | 2 |
| 3234–11 | Screw – Cap Hex. Hd. | 29 | 14 | 6 |
| 3234–38 | Screw – Cap Hex. Hd. | 42 | 22 | 2 |
| 3234–38 | Screw – Hex. Flange Hd. | 22 | 17 | 22 |
| 3234–40 | Screw – Hex. Flange Hd. | 17 | 4 | 4 |
| 3250–13 | Screw | 2 | 51 | 2 |
| 3250–13 | Screw – Hex. Hd. | 13 | 15 | 20 |
| 3250–13 | Screw – Pan Hd. | 1 | 27 | 4 |
| 3250–20 | Screw – Round Hd. | 26 | 2 | 4 |
| 3253–3 | Washer – Lock | 32 | 8 | 1 |
| 3253–3 | Washer – Lock | 52 | 22 | 2 |
| 3253–3 | Washer – Lock | 26 | 27 | 4 |
| 3253–3 | Washer – Lock | 12 | 28 | 4 |
| 3253–3 | Washer – Lock | 30 | 37 | 1 |
| 3253–4 | Washer – Lock | 54 | 4 | 6 |
| 3253–4 | Washer – Lock | 13 | 5 | 8 |
| 3253–4 | Washer – Lock | 32 | 13 | 2 |
| 3253–4 | Washer – Lock | 5 | 14 | 4 |
| 3253–6 | Washer – Lock | 30 | 21 | 2 |
| 3253–6 | Washer – Lock | 24 | 45 | 10 |
| 3253–15 | Washer – Lock | 42 | 5 | 5 |
| 3253–15 | Washer – Lock | 2 | 39 | 2 |
| 3253–18 | Washer – Lock | 33 | 40 | 4 |
| 3253–19 | Washer – Lock | 3 | 57 | 3 |
| 3253–21 | Washer – Lock | 23 | 10 | 8 |
| 3253–21 | Washer – Lock | 14 | 13 | 2 |
| 3253–21 | Washer – Lock | 20 | 33 | 8 |
| 3253–22 | Washer – Lock | 12 | 9 | 4 |
| 3253–22 | Washer – Lock | 32 | 17 | 1 |
| 3254–1 | Washer – Lock | 2 | 36 | 1 |
| 3254–2 | Washer – Lock | 30 | 11 | 1 |
| 3255–9 | Washer – Lock ETLW | 41 | 2 | 1 |
| 3256–3 | Washer – Flat | 28 | 8 | 4 |
| 3256–4 | Washer – Flat | 34 | 12 | 1 |
| 3256–6 | Washer – Flat | 22 | 9 | 4 |
| 3256–6 | Washer – Flat | 18 | 32 | 2 |
| 3256–14 | Washer – Flat | 45 | 30 | 1 |
| 3256–22 | Washer – Flat | 10 | 4 | 5 |
| 3256–22 | Washer – Flat | 2 | 5 | 2 |
| 3256–22 | Washer – Flat | 13 | 8 | 8 |
| 3256–22 | Washer – Flat | 26 | 11 | 4 |
| 3256–22 | Washer – Flat | 49 | 11 | 12 |
| 3256–22 | Washer – Flat | 45 | 18 | 3 |
| 3256–22 | Washer – Flat | 14 | 19 | 8 |
| 3256–22 | Washer – Flat | 12 | 41 | 2 |
| 3256–23 | Washer – Flat | 13 | 4 | 4 |
| 3256–23 | Washer – Flat | 30 | 5 | 2 |
| 3256–23 | Washer – Flat | 16 | 21 | 1 |
| 3256–23 | Washer – Flat | 49 | 21 | 4 |
| 3256–23 | Washer – Flat | 45 | 26 | 2 |
| 3256–24 | Washer – Flat | 41 | 17 | 2 |
| 3256–24 | Washer – Flat | 49 | 18 | 6 |
| 3256–25 | Washer – Flat | 29 | 5 | 2 |
| 3256–27 | Washer – Flat | 22 | 6 | 4 |
| 3256–27 | Washer – Flat | 18 | 31 | 2 |
| 3256–28 | Washer – Flat | 28 | 15 | 1 |
| 3256–45 | Washer – Flat | 26 | 24 | 1 |
| 3256–61 | Washer – Flat | 13 | 25 | 14 |
| 3256–61 | Washer – Flat | 1 | 29 | 4 |
| 3256–67 | Washer – Flat | 43 | 11 | 2 |
| 3257–7 | Key – Woodruff | 28 | 17 | 1 |
| 3258–19 | Screw – Round Head | 44 | 2 | 2 |
| 3272–6 | Pin – Cotter | 15 | 3 | 3 |
| 3272–6 | Pin – Cotter | 34 | 30 | 3 |
| 3272–6 | Pin – Cotter | 8 | 37 | 1 |
| 3272–10 | Pin – Cotter | 16 | 8 | 1 |
| 3272–10 | Pin – Cotter | 12 | 37 | 1 |
| 3272–10 | Pin – Cotter | 8 | 43 | 1 |
| 3272–12 | Pin – Cotter | 19 | 17 | 4 |
| 3272–12 | Pin – Cotter | 20 | 21 | 4 |
| 3272–12 | Pin – Cotter | 20 | 32 | 2 |
| 3272–37 | Pln – Cotter | 46 | 18 | 2 |
| 3274–31 | Screw – Button Hd. | 2 | 7 | 4 |
| 3274–52 | Screw – Hex. Socket Hd. | 33 | 39 | 4 |
| 3274–54 | Screw – Hex. Socket Hd. | 42 | 19 | 2 |
| 3274–94 | Screw – Socket Button Hd. | 49 | 16 | 6 |
| 3277–1 | Nut – Hex. | 5 | 5 | 1 |
| 3290–221 | Washer – Spring | 15 | 34 | 1 |
| 3290–221 | Washer – Spring | 16 | 36 | 2 |
| 3290–271 | Rivet – Pop | 26 | 41 | 2 |
| 3290–321 | Screw – Hex. Flange Hd. | 8 | 10 | 2 |
| 3290–357 | Nut – Flange | 43 | 13 | 1 |
| 3290–357 | Nut – Flange | 32 | 18 | 1 |
| 3290–357 | Nut – Flange | 42 | 23 | 2 |
| 3290–357 | Nut – Flange Head | 22 | 30 | 2 |
| 3290–357 | Nut – Flange Lock | 41 | 1 | 6 |
| 3290–357 | Nut – Flange Lock | 1 | 8 | 8 |
| 3290–357 | Nut – Flange Lock | 14 | 10 | 4 |
| 3290–357 | Nut – Flange Lock | 26 | 14 | 1 |
| 3290–357 | Nut – Flange Lock | 18 | 16 | 4 |
| 3290–357 | Nut – Flange Lock | 15 | 33 | 4 |
| 3290–357 | Nut – Flange Lock | 8 | 33 | 2 |
| 3290–357 | Nut – Flange Lock | 30 | 50 | 2 |
| 3290–378 | Tie – Cable (CE) | 46 | 34 | 6 |
| 3290–413 | Washer – Belleville | 29 | 12 | 12 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 3290–455 | Washer | 5 | 12 | 1 |
| 3290–456 | Washer – Belleville | 15 | 46 | 2 |
| 3290–477 | Washer – Curved | 16 | 28 | 1 |
| 3290–478 | Washer – Belleville | 16 | 17 | 1 |
| 3290–506 | Palnut | 49 | 4 | 2 |
| 3290–507 | Pin – Dowel | 15 | 31 | 1 |
| 3296–2 | Nut – Lock | 8 | 8 | 2 |
| 3296–2 | Nut – Lock | 13 | 22 | 20 |
| 3296–2 | Nut – Lock | 1 | 30 | 4 |
| 3296–2 | Nut – Lock | 2 | 45 | 2 |
| 3296–3 | Nut – Lock | 32 | 28 | 1 |
| 3296–4 | Nut – Lock | 12 | 4 | 1 |
| 3296–5 | Nut – Flange Lock | 26 | 25 | 1 |
| 3296–5 | Nut – Lock | 33 | 12 | 1 |
| 3296–15 | Nut – Lock | 28 | 16 | 1 |
| 3296–23 | Nut – Flange Lock | 19 | 12 | 8 |
| 3296–23 | Nut – Lock | 22 | 10 | 4 |
| 3296–23 | Nut – Lock | 18 | 14 | 4 |
| 3296–23 | Nut – Lock | 14 | 16 | 2 |
| 3296–27 | Nut – Lock | 32 | 21 | 2 |
| 3296–27 | Rivet – Plastic | 41 | 13 | 4 |
| 3296–29 | Nut – Flange Lock | 26 | 20 | 8 |
| 3296–29 | Nut – Lock | 28 | 6 | 6 |
| 3296–29 | Nut – Lock | 8 | 6 | 1 |
| 3296–29 | Nut – Lock | 12 | 13 | 1 |
| 3296–29 | Nut – Lock | 49 | 19 | 4 |
| 3296–29 | Nut – Lock | 45 | 27 | 1 |
| 3296–29 | Nut – Lock | 30 | 36 | 2 |
| 3296–39 | Nut – Flange Lock | 34 | 20 | 4 |
| 3296–39 | Nut – Flange Lock | 41 | 20 | 1 |
| 3296–39 | Nut – Lock | 49 | 1 | 6 |
| 3296–39 | Nut – Lock | 29 | 11 | 6 |
| 3296–39 | Nut – Lock | 22 | 13 | 6 |
| 3296–39 | Nut – Lock | 20 | 16 | 8 |
| 3296–39 | Nut – Lock | 32 | 20 | 3 |
| 3296–39 | Nut – Lock | 45 | 23 | 1 |
| 3296–39 | Nut – Lock | 18 | 28 | 8 |
| 3296–39 | Nut – Lock | 16 | 33 | 1 |
| 3296–39 | Nut – Lock | 23 | 42 | 4 |
| 3296–39 | Nut – Lock | 15 | 45 | 1 |
| 3296–42 | Nut – Lock | 16 | 12 | 1 |
| 3296–42 | Nut – Lock | 19 | 13 | 2 |
| 3296–42 | Nut – Lock | 49 | 13 | 16 |
| 3296–42 | Nut – Lock | 42 | 17 | 2 |
| 3296–42 | Nut – Lock | 45 | 19 | 2 |
| 3296–42 | Nut – Lock | 10 | 20 | 5 |
| 3296–42 | Nut – Lock | 5 | 32 | 2 |
| 3296–42 | Nut – Lock | 26 | 38 | 4 |
| 3296–48 | Nut – Lock | 18 | 11 | 10 |
| 3296–48 | Nut – Lock | 29 | 16 | 2 |
| 3296–58 | Nut – Lock | 15 | 11 | 2 |
| 3296–59 | Nut – Lock | 5 | 13 | 1 |
| 3296–76 | Nut – Lock | 22 | 33 | 8 |
| 32104–82 | Screw – Hex. Flange Hd. | 22 | 25 | 2 |
| 32104–88 | Screw | 1 | 4 | 6 |
| 32107–11 | Nut – Square | 44 | 4 | 2 |
| 32113–14 | Screw | 33 | 8 | 2 |
| 32120–47 | Ring – E | 12 | 33 | 2 |
| 32120–47 | Ring – E | 8 | 41 | 1 |
| 32120–47 | Ring – Retaining | 16 | 10 | 3 |
| 32121–7 | Pin – Roll | 12 | 19 | 1 |
| 32121–24 | Pin – Roll | 12 | 21 | 2 |
| 32121–48 | Pin – Roll | 15 | 23 | 1 |
| 32122–24 | Screw – Round Hd | 42 | 6 | 5 |
| 32128–20 | Nut – Flange | 10 | 17 | 1 |
| 32128–20 | Nut – Flange | 43 | 18 | 4 |
| 32128–20 | Nut – Flange | 5 | 27 | 6 |
| 32128–20 | Nut – Flange | 2 | 48 | 3 |
| 32128–20 | Nut – Flange Head | 46 | 11 | 4 |
| 32128–20 | Nut – Flange Lock | 19 | 6 | 2 |
| 32128–20 | Nut – Flange Lock | 8 | 7 | 13 |
| 32128–20 | Nut – Flange Lock | 41 | 18 | 2 |
| 32128–20 | Nut – Flange Lock | 14 | 21 | 8 |
| 32128–20 | Nut – Flange Lock | 30 | 44 | 1 |
| 32128–20 | Nut – Lock | 26 | 37 | 4 |
| 32128–21 | Nut – Lock | 34 | 11 | 1 |
| 32128–23 | Nut – Flange | 42 | 24 | 2 |
| 32128–23 | Nut – Flange Lock | 17 | 5 | 4 |
| 32128–23 | Nut – Flange Lock | 22 | 21 | 22 |
| 32128–33 | Nut – Flange | 32 | 3 | 2 |
| 32128–33 | Nut – Flange | 30 | 13 | 1 |
| 32128–33 | Nut – Flange | 29 | 18 | 2 |
| 32128–33 | Nut – Flange | 2 | 44 | 12 |
| 32128–33 | Nut – Flange Head | 46 | 12 | 4 |
| 32128–33 | Nut – Flange Head | 10 | 15 | 2 |
| 32128–33 | Nut – Flange Lock | 34 | 1 | 1 |
| 32128–33 | Nut – Flange Lock | 41 | 4 | 1 |
| 32128–33 | Nut – Flange Lock | 45 | 6 | 1 |
| 32128–33 | Nut – Flange Lock | 12 | 24 | 1 |
| 32128–33 | Nut – Flange Lock | 22 | 27 | 4 |
| 32128–33 | Nut – Lock | 1 | 25 | 4 |
| 32128–36 | Nut – Lock | 23 | 38 | 4 |
| 32128–44 | Nut – Flange Lock | 14 | 9 | 2 |
| 32128–53 | Nut – Flange Lock | 23 | 26 | 2 |
| 32136–2 | Nut – Slotted | 19 | 2 | 2 |
| 32136–3 | Nut – Slotted | 20 | 22 | 4 |
| 32144–4 | Screw – Hex. Washer Hd. | 15 | 9 | 2 |
| 32144–10 | Screw – Self Tapping | 5 | 18 | 2 |
| 32144–18 | Screw – Cap Hex. Hd. | 2 | 22 | 2 |
| 32144–42 | Screw – Spark Arrestor | 30 | 52 | 1 |
| 32144–52 | Screw – Hex. Hd. | 13 | 12 | 6 |
| 32144–93 | Screw – Self Tapping | 49 | 6 | 2 |
| 32144–116 | Screw – Pan Head | 5 | 8 | 8 |
| 32148–6 | Insert – Threaded | 2 | 2 | 2 |
| 32148–7 | Nut – Clinch | 1 | 18 | 8 |
| 32148–7 | Nut – Clinch | 15 | 19 | 2 |
| 32148–8 | Insert – Threaded (CE) | 31 | 57 | 2 |
| 32148–8 | Nut – Insert (CE) | 12 | 46 | 2 |
| 32148–9 | Insert – Threaded | 22 | 1 | 8 |
| 32148–15 | Insert – Threaded | 15 | 4 | 1 |
| 32148–15 | Nut – Clinch | 34 | 31 | 1 |
| 32151–41 | Ring – Retaining | 27 | 1 | 1 |
| 32151–56 | Ring – Push–On | 8 | 23 | 1 |
| 32151–104 | Ring – Snap | 19 | 15 | 4 |
| 32152–10 | Nut | 47 | 12 | 1 |
| 340–2 | Fitting – Straight | 46 | 10 | 1 |
| 340–3 | Fitting – Hydraulic Straight | 46 | 26 | 1 |
| 340–77 | Fitting – Hydraulic 90° | 46 | 6 | 1 |
| 340–86 | Fitting – Hydraulic Tee | 45 | 15 | 1 |
| 340–92 | Fitting – Hydraulic Straight | 46 | 29 | 1 |
| 340–94 | Fitting – Hydraulic Tee | 45 | 10 | 1 |
| 340–132 | Fitting – Hydraulic 90° | 46 | 14 | 4 |
| 340–140 | Fitting – Hydraulic Tee | 46 | 28 | 1 |
| 340–151 | Fitting – Hydraulic Tee | 46 | 30 | 1 |
| 353–781 | Fitting – Fuel 90° | 42 | 14 | 1 |
| 353–987 | Fitting – Hydraulic 90° | 34 | 29 | 1 |
| 354–134 | Fitting – Hydraulic 90° | 34 | 40 | 2 |
| 354–135 | Fitting – Hydraulic 90° | 34 | 5 | 1 |
| 354–136 | Fitting – Hydraulic Straight | 46 | 23 | 1 |

*Not Illustrated

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

**MODEL AND SERIAL NUMBERS**

The Workman 3200 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Workman 3200, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Workman 3200.
2. Part number, description, and the quantity of part(s) desired.

**NOTE**: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

# TABLE OF CONTENTS


| Description | Page |
|---|---|
| Front Bumper & Hood Assembly | 1 |
| Control Panel Assembly | 2–3 |
| Electrical Schematic | 4 |
| Steering Linkage Assembly | 5 |
| Steering Gear Assembly No. 87–1500 | 6–7 |
| Brake & Accelerator Pedal Assembly | 8 |
| Master Brake Cylinder No. 87–3030 | 9 |
| Hydraulic Brake Line Routing Assembly | 10 |
| Hydraulic Schematic | 11 |
| Clutch Linkage Assembly | 12 |
| Seat Base Assembly | 13 |
| Seat Back Assembly | 14 |
| Hi–Lo Shift Levers Assemblies | 15 |
| Differential Lock & Parking Brake Assemblies | 16 |
| R.O.P.S. Assembly | 17 |
| Front Suspension Assembly | 18 |
| Front Suspension Control Arm Assembly | 19 |
| Front Wheel Assembly | 20 |
| Front Brake Assembly | 21 |
| Rear Frame Assembly | 22 |
| Rear Axle Assembly | 23–24 |
| Rear Brake Assembly | 25 |
| Radiator & Hydraulic Pump Assembly | 26 |
| Hydraulic Pump Assembly No. 87–5700 | 27 |
| Hydraulic Pump Drive Assembly | 28 |
| Engine Frame Assembly | 29 |
| Engine Installation Assembly | 30–31 |
| Governor Assembly | 32 |
| Governor | 33 |
| Transaxle Installation Assembly | 34–35 |
| Transaxle Case Assembly | 36 |
| Countershaft Assembly | 37 |
| Transaxle Gear Shafts Assembly | 38 |
| Shift Fork Assembly | 39 |
| Differential Gear Assembly | 40 |
| Battery Mount Assembly | 41 |
| Fuel Tank Assembly | 42 |
| Air Cleaner & Fuel Supply Assembly | 43 |
| Air Cleaner Assembly | 44 |
| Lift Valve Linkage Assembly | 45 |
| Lift Valve & Cylinder Assembly | 46 |
| Lift Cylinder No. 87–7990 | 47 |
| Control Valve Assembly No. 43–1950 | 48 |
| Rear Fender & Tail Light Assembly | 49 |
| Cylinder Block Assembly | 50 |
| Rocker Cover & Cylinder Head Assembly | 51 |
| Covers & Oil Pan Assembly | 52 |
| Piston & Crankshaft Assembly | 53 |
| Clutch & Clutch Release Assembly | 54 |
| Camshaft & Valves Assembly | 55 |
| Balancer & Oil Pressure Switch & Engine Mount | 56 |
| Oil Pump & Filter Assembly | 57 |
| Water Pump & Thermostat Assembly | 58 |
| Exhaust & Intake Manifold Assembly | 59 |
| Carburetor Installation Assembly | 60 |
| Carburetor Assembly | 61 |
| Distributor Assembly | 62 |
| Starter Assembly | 63 |
| Alternator Assembly | 64 |
| Gasket Kit | 65 |
| International Decal Cross Reference | 66 |
| TORO Part Number Index | 67–78 |

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.



Litho in U.S.A.
GG–95459