Form No. 3364-104 Rev A

TORO®

Count on it.

Parts Catalog

DH 140 Lawn Tractor

Model No. 74560—Serial No. 310000001 and Up

Register at www.Toro.com.

CE

Original Instructions (EN)

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


© 2010—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Contents

Engine, Muffler and Fuel Tank Assembly 4
Front Axle and Wheel Assembly 6
Steering Control Assembly 8
Transmission, Belt, Clutch and Rear Wheel Assembly 10
Main Housing and Shaft Transmission Assembly No. 119-5386 12
Center Section Transmission Assembly No. 119-5386 13
Side Housing and Shaft Transmission Assembly No. 119-5386-4 14
Frame Assembly 15
Mower Lift Assembly 16
92cm Deck Assembly 18
Operation - Travel Pedal Assembly 20
Operation - Brake Pedal Assembly 22
Electrical Assembly 24
Hood, Seat and Fender Assembly 26
Grass Collector Assembly 28
Tunnel Assembly 30
Mulch Plug Assembly 31
Attachments and Accessories 32

Engine, Muffler and Fuel Tank Assembly

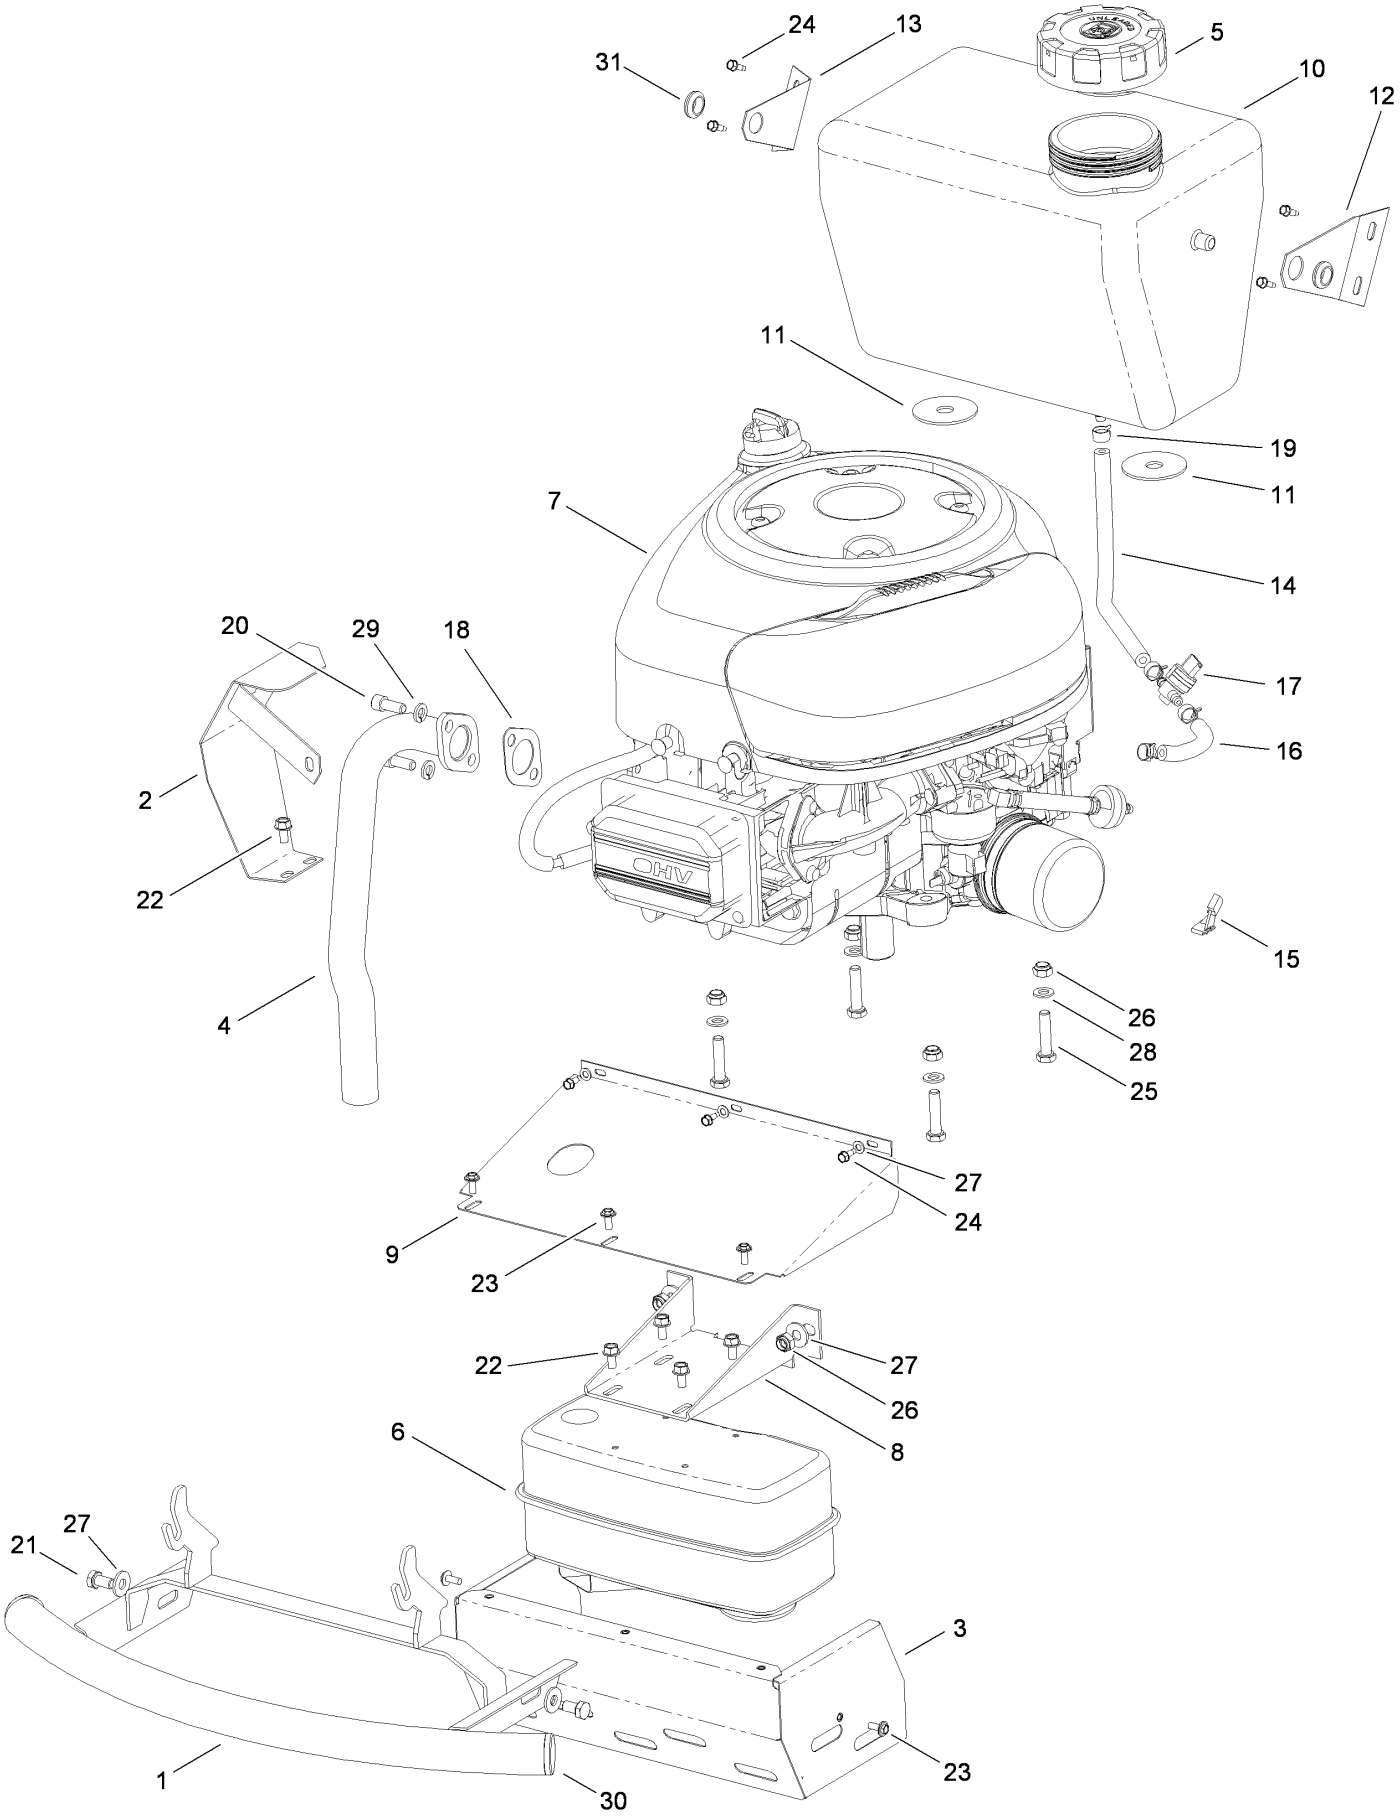


Engine, Muffler and Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5350	1	Bumper
2	119-5351	1	Shield-Exhaust Tube
3	119-5352	1	Shield-Muffler
4	119-5353	1	Tube-Exhaust
5	119-5354	1	Cap-Fuel
6	104-3229	1	Muffler
7		1	Engine-Briggs, 21B977-0198-B1 ●
8	119-5356	1	Bracket-Muffler Mount
9	119-5357	1	Cover-Top
10	119-5358	1	Tank-Fuel
11	119-5500	2	Washer-Rubber
12	119-5359	1	Bracket-Fuel Tank, Left
13	119-5360	1	Bracket-Fuel Tank, Right
14	119-5361	1	Hose-Fuel
15	88-4490	1	Reducer-Throttle, Rpm
16	104-3213	1	Line-Fuel
17	104-3224	1	Valve-Tank, Fuel
18	119-5362	1	Gasket
19	104-3212	4	Clamp-Line, Fuel
20	322-3	2	Screw-HH
21	33114-016	2	Screw-HH
22	110-7170	5	Screw-HH
23	104-2980	5	Screw
24	104-2977	7	Screw-TAP
25	48-7740	4	Screw
26	33024-00	6	Nut-Lock
27	104-2946	4	Washer-Plain
28	106-4756	4	Washer-Plain
29	104-2927	2	Washer-Spring
30	119-5363	2	Cap-Bumper
31	119-5364	2	Bushing

● Not serviced separately

Front Axle and Wheel Assembly

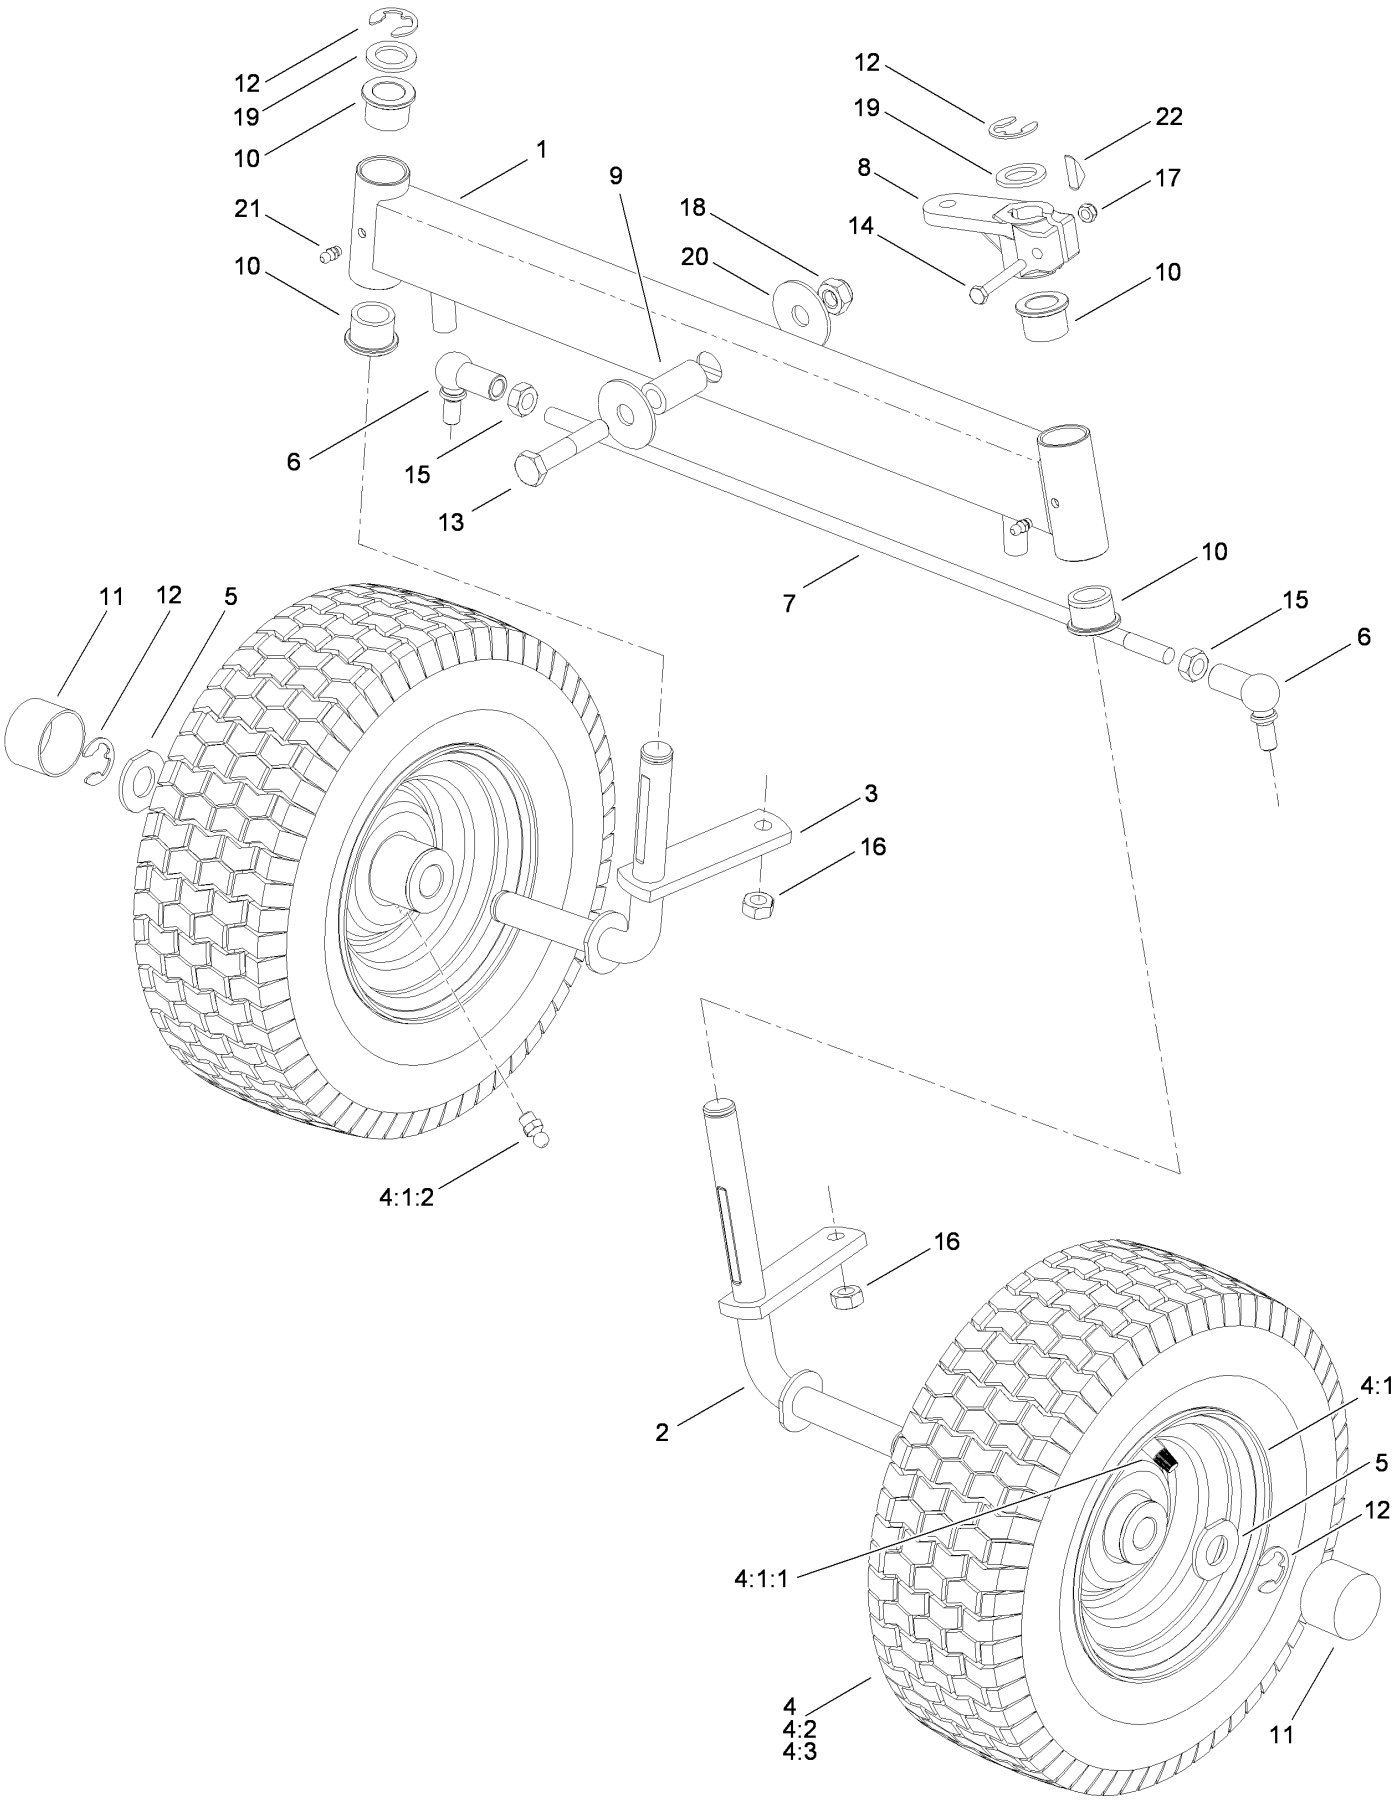


Front Axle and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5365	1	Front Axle Assembly
2	119-5366	1	Spindle-LH
3	119-5367	1	Spindle-RH
4		2	Wheel ASM ●
4:1	119-5521	1	Front Rim ASM
4:1:1	106-8596	1	Valve-Tire
4:1:2	104-2904	1	Fitting-Grease
4:2	119-5522	1	Tire
4:3	232-38	1	Tube
5	107-8998	2	Retainer-Cap, Hub
6	104-2876	2	Joint-Ball, Angle
7	119-5369	1	Tie Rod-Axle, Front
8	104-2862	1	Lever-Spindle, Steering
9	119-5370	1	Spacer
10	119-5371	4	Bushing-Swivel
11	104-2857	2	Cap-Hub
12	104-2891	4	Clip-Spring
13	33116-060	1	Screw-HH
14	33113-045	1	Screw-HH
15	33015-00	2	Nut-Hex
16	33025-00	2	Nut-Lock
17	33023-00	1	Nut-Lock
18	48-9540	1	Nut-Lock, Hex NI
19	104-2905	2	Washer-Flat
20	119-5372	2	Washer
21	104-2904	2	Fitting-Grease
22	104-2856	1	Key-Woodruff

● Not serviced separately


Steering Control Assembly

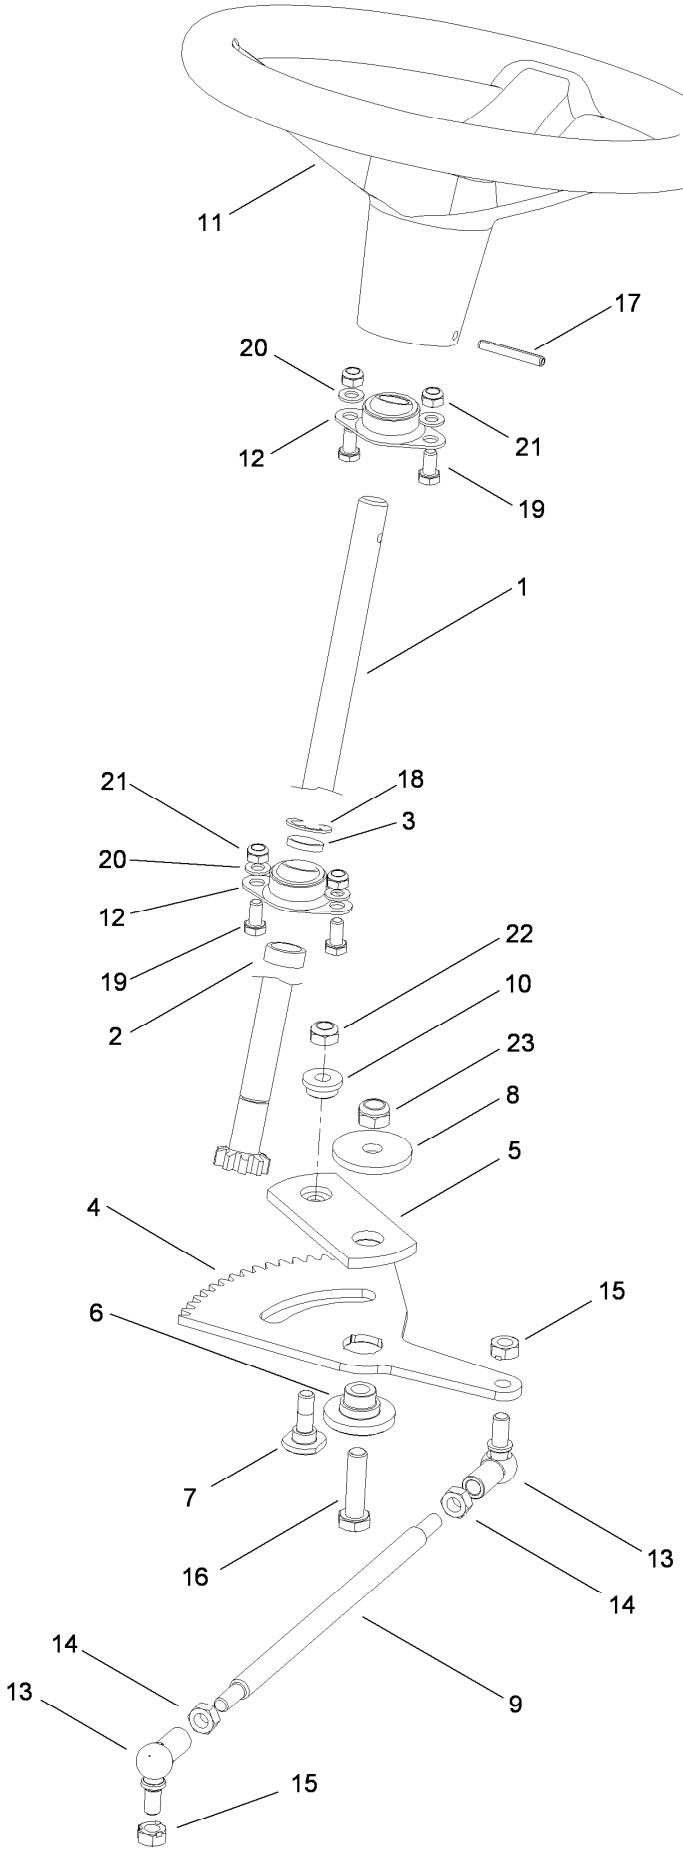

Steering Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5373	1	Shaft-Steering
2	104-2879	1	Spacer-Lower
3	104-2877	1	Spacer-Upper
4	119-5374	1	Gear-Sector
5	105-1238	1	Plate-Steering
6	105-1240	1	Pivot-Steering
7	105-1239	1	Bolt-Shoulder
8	108-8892	1	Washer
9	119-5375	1	Link-Drag
10	105-1241	1	Bushing
11	119-5376	1	Wheel-Steering
12	104-2878	2	Bearing-Spherical
13	104-2876	2	Joint-Ball, Angle
14	33015-00	2	Nut-Hex
15	33025-00	2	Nut-Lock
16	104-2910	1	Screw-Hex
17	119-5377	1	Pin-Spirol
18	104-2891	1	Clip-Spring
19	33114-016	4	Screw-HH
20	106-4756	4	Washer-Plain
21	33024-00	4	Nut-Lock
22	33023-00	1	Nut-Lock
23	33016-00	1	Nut-Hex


Transmission, Belt, Clutch and Rear Wheel Assembly

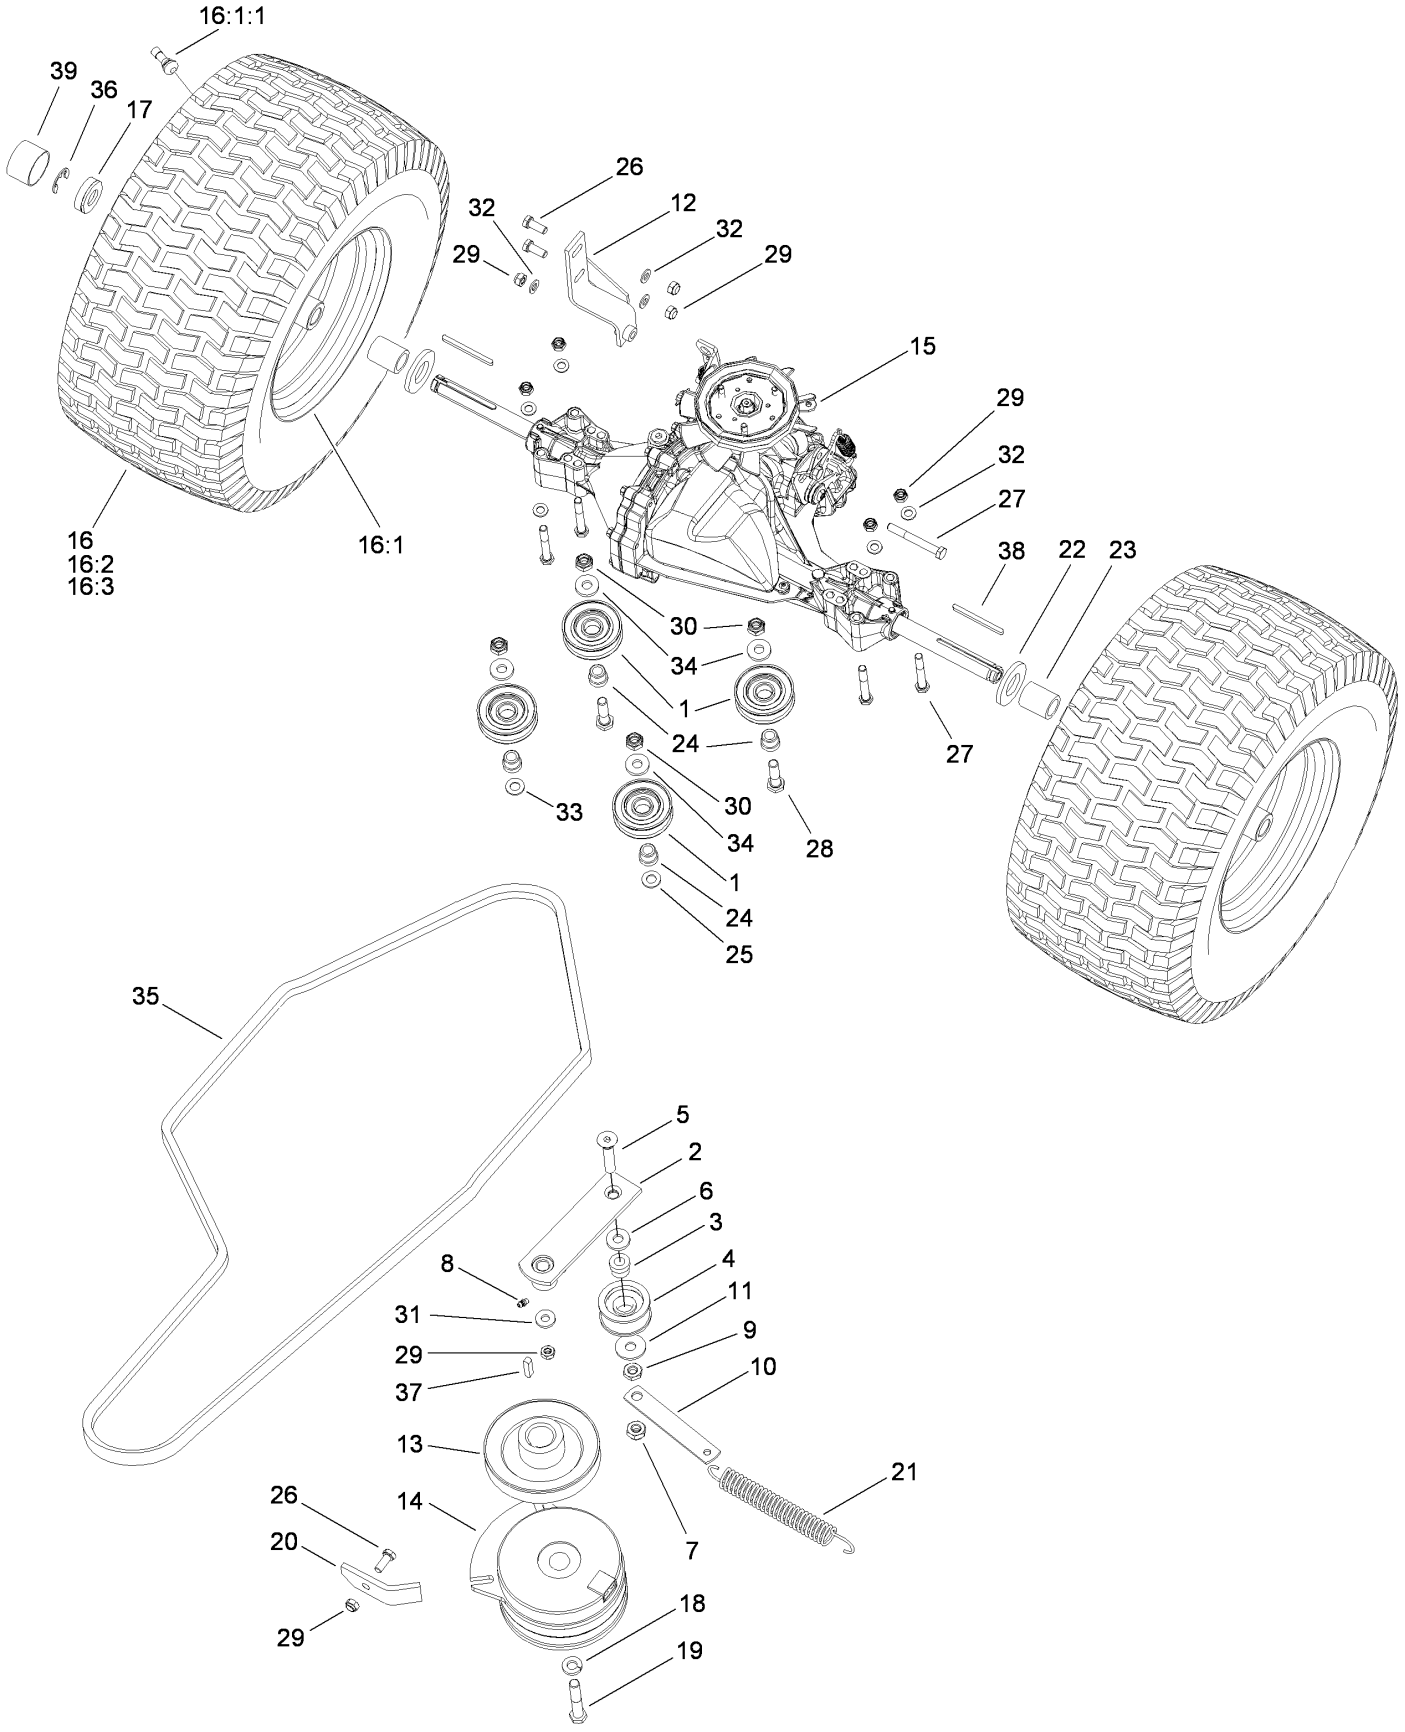

Transmission, Belt, Clutch and Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5378	4	Pulley-Idler
2	119-5379	1	Arm-Idler
3	104-2896	1	Bushing-Idler
4	119-5380	1	Pulley-Idler
5	119-5381	1	Screw
6	33095-00	1	Washer-Flat
7	33023-00	1	Nut-Lock
8	104-2904	1	Fitting-Grease
9	33035-00	1	Nut-Hex
10	119-5382	1	Bracket-Tention
11	119-5383	1	Washer
12	119-5384	1	Bracket
13	119-5385	1	Pulley-Engine
14	119-5501	1	Clutch-Electric
15	119-5386	1	Transmission ASM
16		2	Wheel ASM ●
16:1	119-5523	1	Rim-Rear
16:1:1	106-8596	1	Valve-Tire
16:2	119-5524	1	Tire
16:3	232-41	1	Tube
17	107-8998	1	Retainer-Cap, Hub
18	93-9043	1	Washer-Spring, Belleville
19	3212-10	1	Screw-HH
20	119-5502	1	Bracket-Retainer
21	104-2897	1	Spring
22	104-3206	2	Washer
23	119-5387	2	Spacer-Axle
24	119-5388	4	Bushing
25	119-5389	1	Spacer
26	33114-020	3	Screw-HH
27	60-6690	5	Capscrew
28	117-5664	2	Screw-HH
29	33024-00	9	Nut-Lock
30	33023-00	4	Nut-Lock
31	104-2946	1	Washer-Plain
32	106-4756	11	Washer-Plain
33	106-5768	1	Washer
34	108-8709	4	Washer-Flat
35	119-5390	1	V-Belt, Traction
36	104-2891	2	Clip-Spring
37	104-2899	1	Key-Square
38	104-2892	2	Key-Square
39	104-2857	2	Cap-Hub

● Not serviced separately

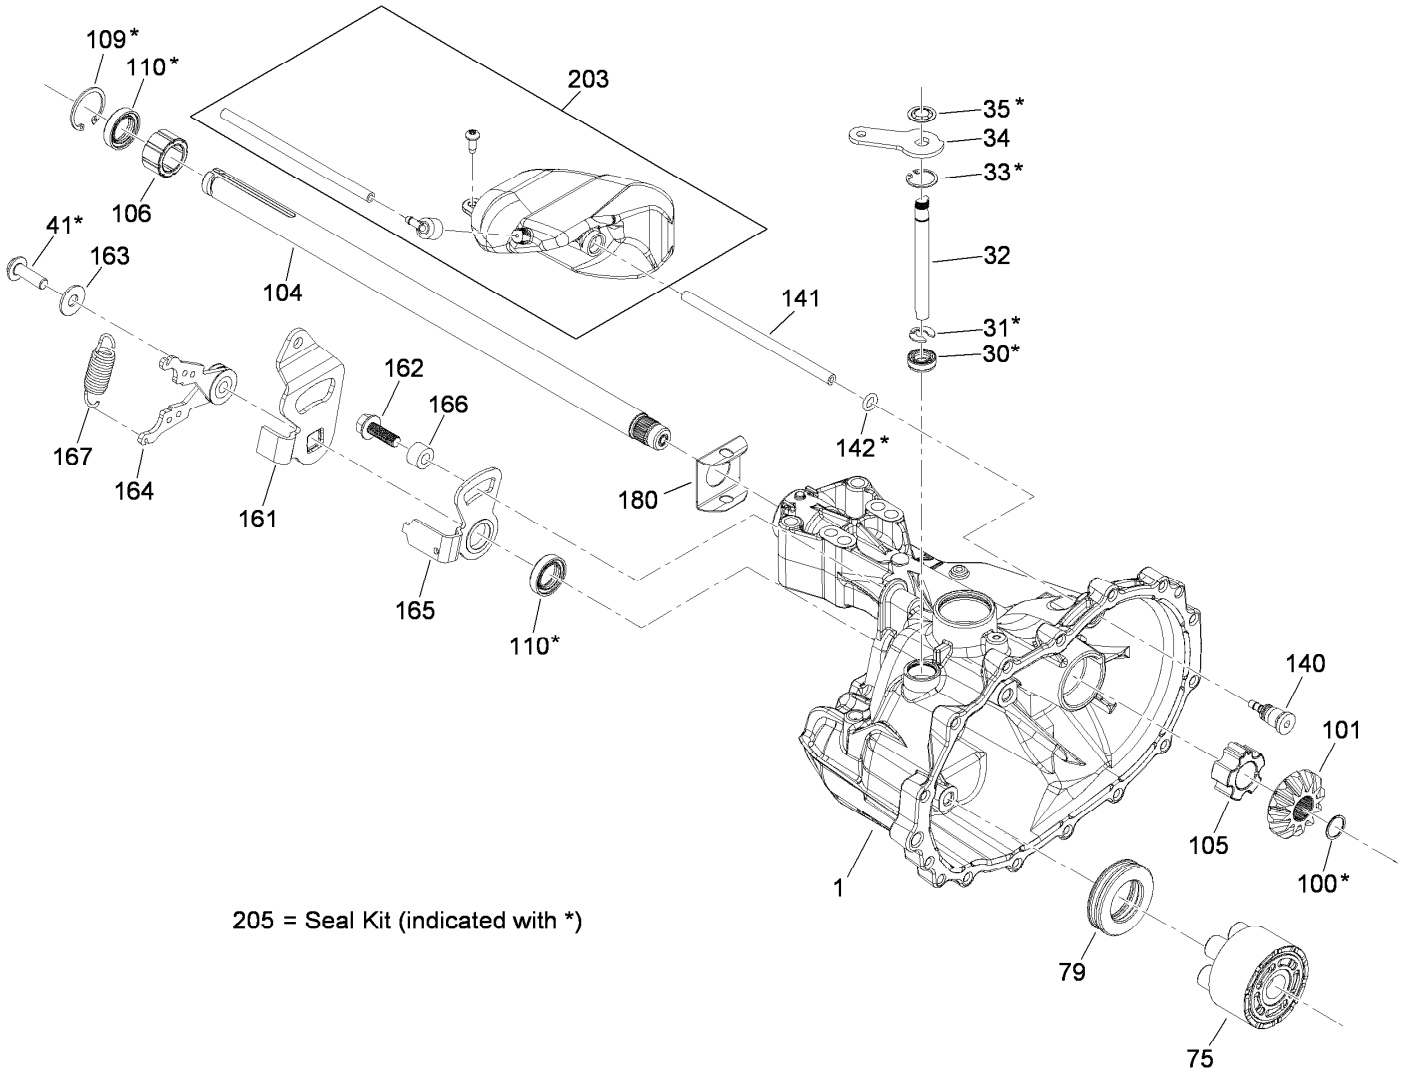


Main Housing and Shaft
Transmission Assembly No. 119-5386

Ref.	Part Number	Qty.	Description
1	115-8313	1	Main Housing Kit
10	104-2147	1	Sealant ●
11	104-5342	1	Oil, 20W-50 ●
30	106-8676	1	Seal-Lip
31	106-8677	1	Ring-Retaining, EXT
32	115-8312	1	Rod-Bypass, Actuator
33	106-8679	1	Ring-Retaining, Int
34	115-8311	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, EXT
41	107-2488	1	Screw
75	103-2666	1	Cylinder Block Kit
79	94-6922	1	Bearing-Thrust
100	104-5328	1	Ring-Retaining, Spiral
101	115-8315	1	Gear-Bevel, 12T (Spline, Id)
104	115-8305	1	Shaft-Axle, Keyed
105	115-8314	1	Bushing-Inboard

Ref.	Part Number	Qty.	Description
106	115-8304	1	Bushing-Outboard
109	115-8303	1	Ring-Retaining, Int
110	119-5526	2	Seal-Lip
140	104-5349	1	Fitting-Sae
141	115-8302	1	Hose
142	104-5361	1	O-Ring
161	115-8308	1	Arm-Control, Return
162	104-5312	1	Screw-HF
163	114-8491	1	Washer
164	115-8306	1	Bi Directional Return Kit
165	115-8310	1	Arm-Neutral
166	115-8309	1	Bushing
167	115-8307	1	Spring-Extension
180	119-5527	1	Spring Clip-Housing Thrust
203	115-8301	1	Expansion Tank Kit
205	115-8316	1	Seal Kit


● Not illustrated

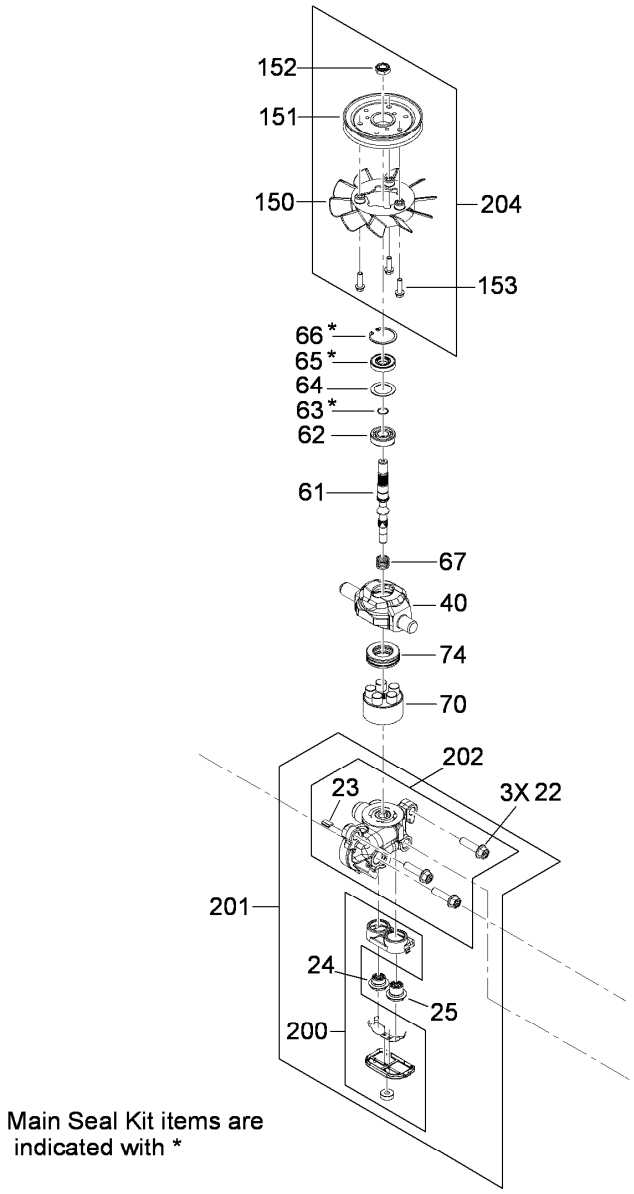

Center Section
Transmission Assembly No. 119-5386

Ref.	Part Number	Qty.	Description
22	114-1684	3	Screw-Hfhc
23	119-5528	1	Plate-Bypass
24	104-5348	1	Check Plug ASM
25	119-5529	1	Check Plug ASM
40	115-8319	1	Trunnion-Plate, Swash
61	115-8317	1	Shaft-Input
62	119-5530	1	Bearing-Ball
63	119-5531	1	Ring-Retaining, Wire
64	104-2104	1	Spacer
65	119-5532	1	Seal-Lip
66	119-5533	1	Ring-Retaining


Ref.	Part Number	Qty.	Description
67	115-8318	1	Spring-Helical
70	115-8321	1	Cylinder Block Kit
74	115-8320	1	Bearing-Thrust, Ball
150	105-1927	1	Fan
151	119-5534	1	Pulley ASM
152	105-1875	1	Nut-Lock
153	105-1897	3	Screw
200	115-8323	1	Filter Kit
201	119-5535	1	Center Section Kit
202	119-5536	1	Center Section Kit
204	119-5537	1	Fan Pulley Kit

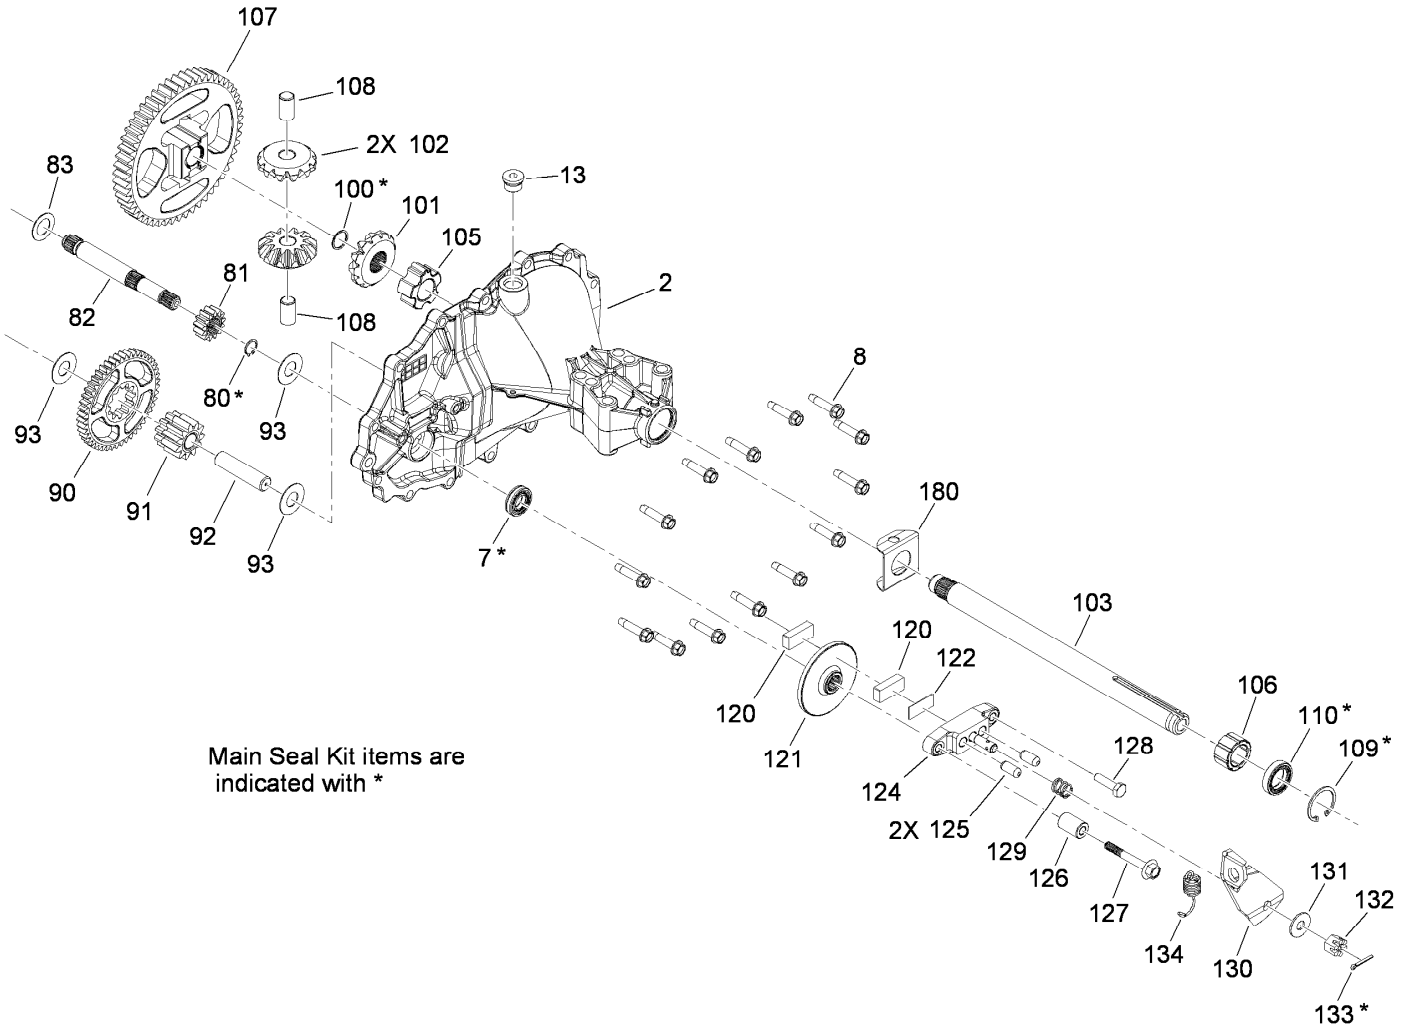

Side Housing and Shaft
Transmission Assembly No. 119-5386-4

Ref.	*Part Number*	*Qty.*	*Description*
2	119-5538	1	Housing Side Kit
7	115-8335	1	Seal-Lip
8	117-5359	14	Screw-Hfhcs
13	104-2189	1	Plug-Thread, Straight
80	115-8331	1	Ring-Retaining, EXT
81	119-5539	1	Gear-Pinion
82	115-8329	1	Shaft-Motor
83	115-8328	1	Washer
90	119-5540	1	Gear
91	115-8333	1	Gear-Jackshaft, 11T
92	115-8334	1	Pin-Jackshaft
93	119-5541	3	Washer
100	104-5328	1	Ring-Retaining, Spiral
101	115-8315	1	Gear-Bevel, 12T (Spline, Id)
102	115-8327	2	Gear-Bevel, 12T (.50 Id)
103	115-8336	1	Shaft-Axle, Keyed
105	115-8314	1	Bushing-Inboard
106	115-8304	1	Bushing-Outboard
107	115-8325	1	Gear-53T, Bull


Ref.	*Part Number*	*Qty.*	*Description*
108	115-8326	2	Pin-Differential
109	115-8303	1	Ring-Retaining, Int
110	119-5526	1	Seal-Lip
120	104-2171	2	Puck-Brake
121	115-8337	1	Rotor-Brake
122	104-2181	1	Puck-Plate
124	104-5343	1	Yoke-Brake
125	104-2176	2	Pin-Brake
126	104-2180	1	Spacer
127	104-5345	1	Screw-HF
128	115-8339	1	Screw-Hhcs
129	104-2188	1	Spring-Brake, Anti Drag
130	119-5542	1	Arm-Brake
131	114-8491	1	Washer
132	119-5543	1	Nut-Castle
133	3272-7	1	Pin-Cotter
134	115-8338	1	Spring-Brake, Arm
180	119-5527	1	Spring Clip-Housing Thrust

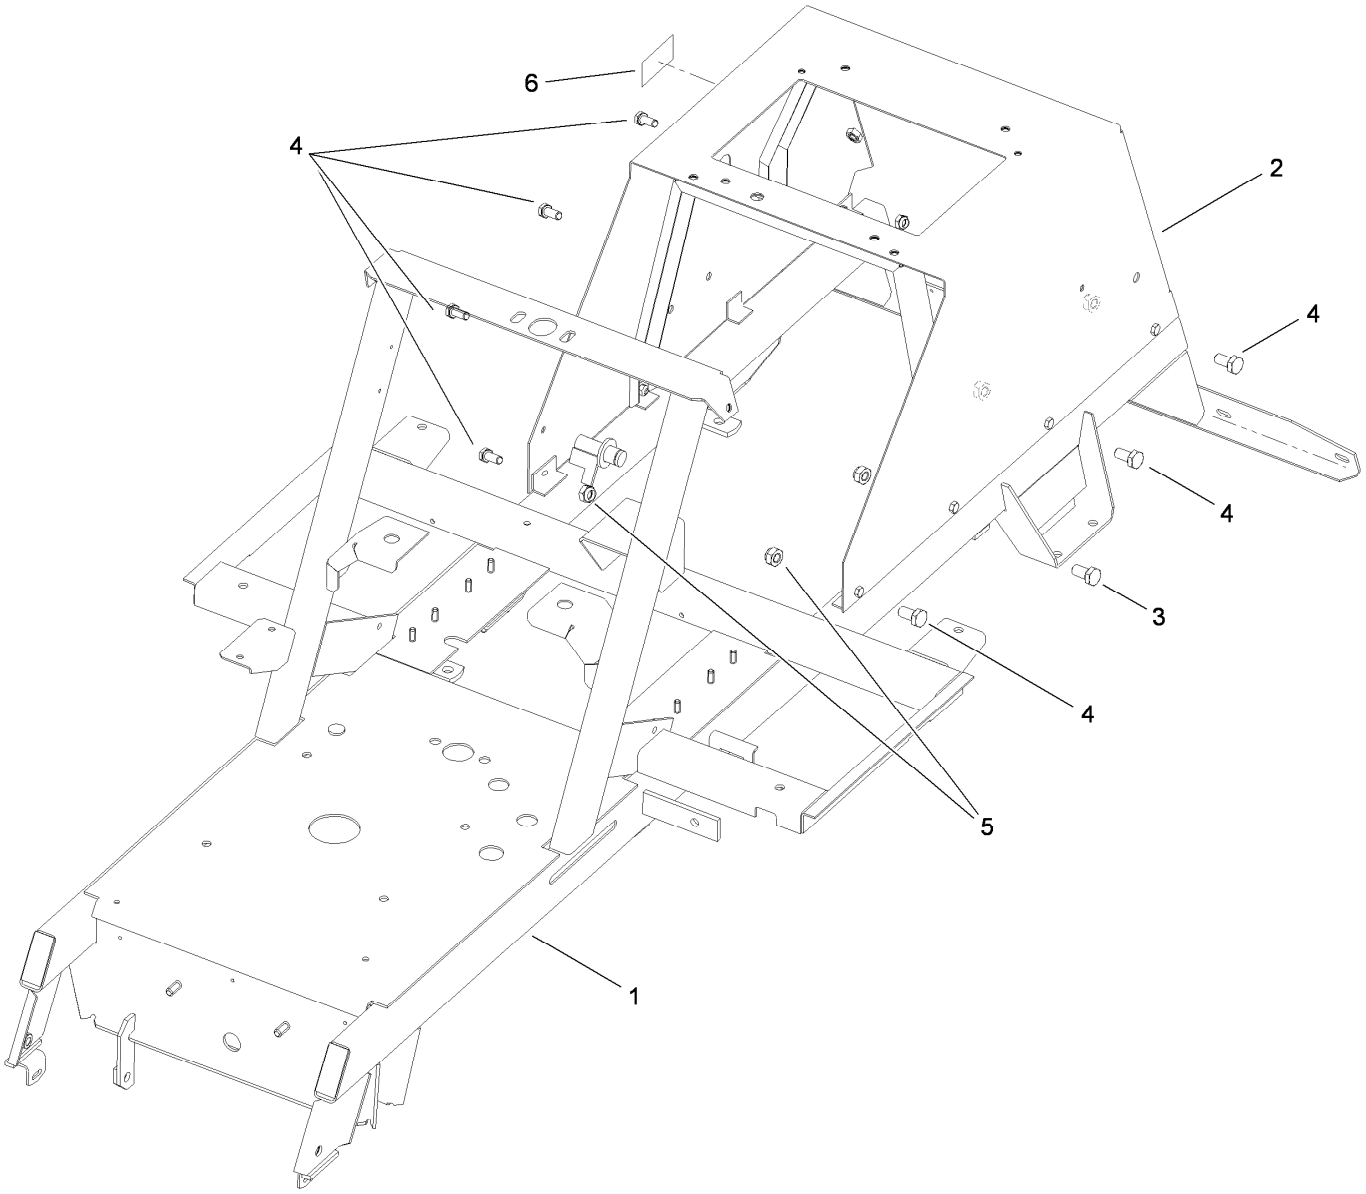

Frame Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	119-5498	1	Frame Assembly
2	119-5499	1	Bracket-Seat
3	33113-016	1	Screw-HH
4	33113-012	7	Screw-HH
5	33023-00	8	Nut-Lock
6	119-5515	1	Decal-Bypass


Mower Lift Assembly

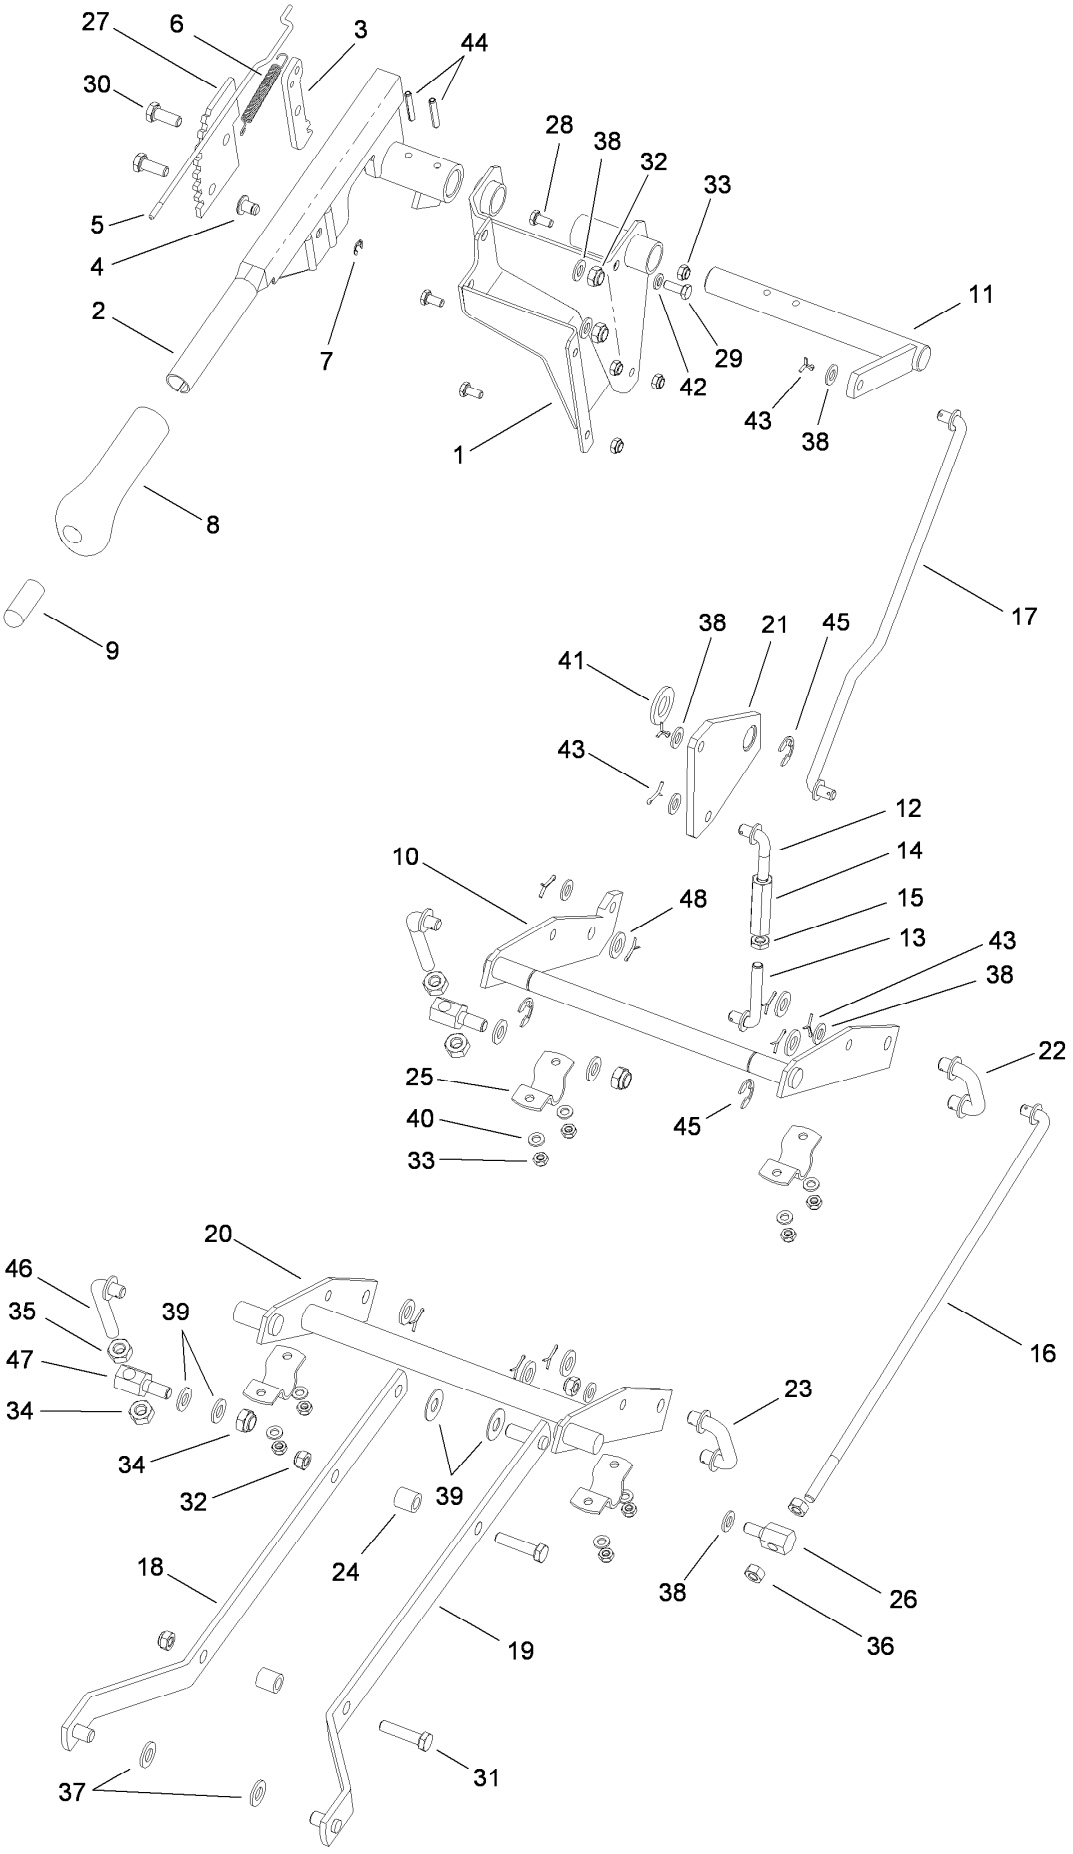

Mower Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5391	1	Bracket
2	119-5392	1	Lever Arm
3	104-3130	1	Ratchet-Plate, Pivot
4	104-3135	1	Pin-Lever, Arm
5	104-3132	1	Rod-Connection
6	104-3134	1	Spring
7	104-3137	1	Clip-Pin
8	104-3129	1	Grip-Handle
9	104-3131	1	Button-Plunger
10	119-5393	1	Hanger-Rear
11	119-5394	1	Shaft-Adjustment, Height
12	119-5395	1	Rod-Top
13	119-5396	1	Rod-Lower
14	119-5504	1	Nut-Turnbuckle
15	33014-00	1	Nut-Hex
16	119-5397	1	Rod-Linkage
17	119-5398	1	Rod-Linkage
18	119-5399	1	Bracket-Right Deck Support
19	119-5400	1	Bracket-Left Deck Support
20	119-5401	1	Hanger-Front
21	119-5402	1	Bracket-Linkage
22	119-5403	1	Deck Link, U-Shape, 50
23	119-5404	1	Deck Link, U-Shape, 55
24	119-5405	2	Spacer
25	119-5406	4	Clamp
26	119-5407	1	Trunion
27	119-5408	1	Gear-Sector
28	33113-012	4	Screw-HH
29	33113-016	1	Screw-HH
30	33114-020	2	Screw-HH
31	33114-035	2	Screw-HH
32	33024-00	5	Nut-Lock
33	33023-00	12	Nut-Lock
34	33025-00	8	Nut-Lock
35	33015-00	4	Nut-Hex
36	33014-00	2	Nut-Hex
37	106-5768	2	Washer
38	106-4756	9	Washer-Plain
39	104-2906	11	Washer-Flat
40	104-3193	8	Washer
41	33098-00	1	Washer-Flat
42	104-3186	1	Washer-Spring
43	104-3151	11	Pin-Cotter
44	104-2994	2	Pin-Spring
45	119-5503	3	E-Clip
46	119-5544	2	Link-Deck, L-Shape (Adjustable)
47	119-5545	2	Trunion
48	119-5546	1	Washer-Plain


92cm Deck Assembly

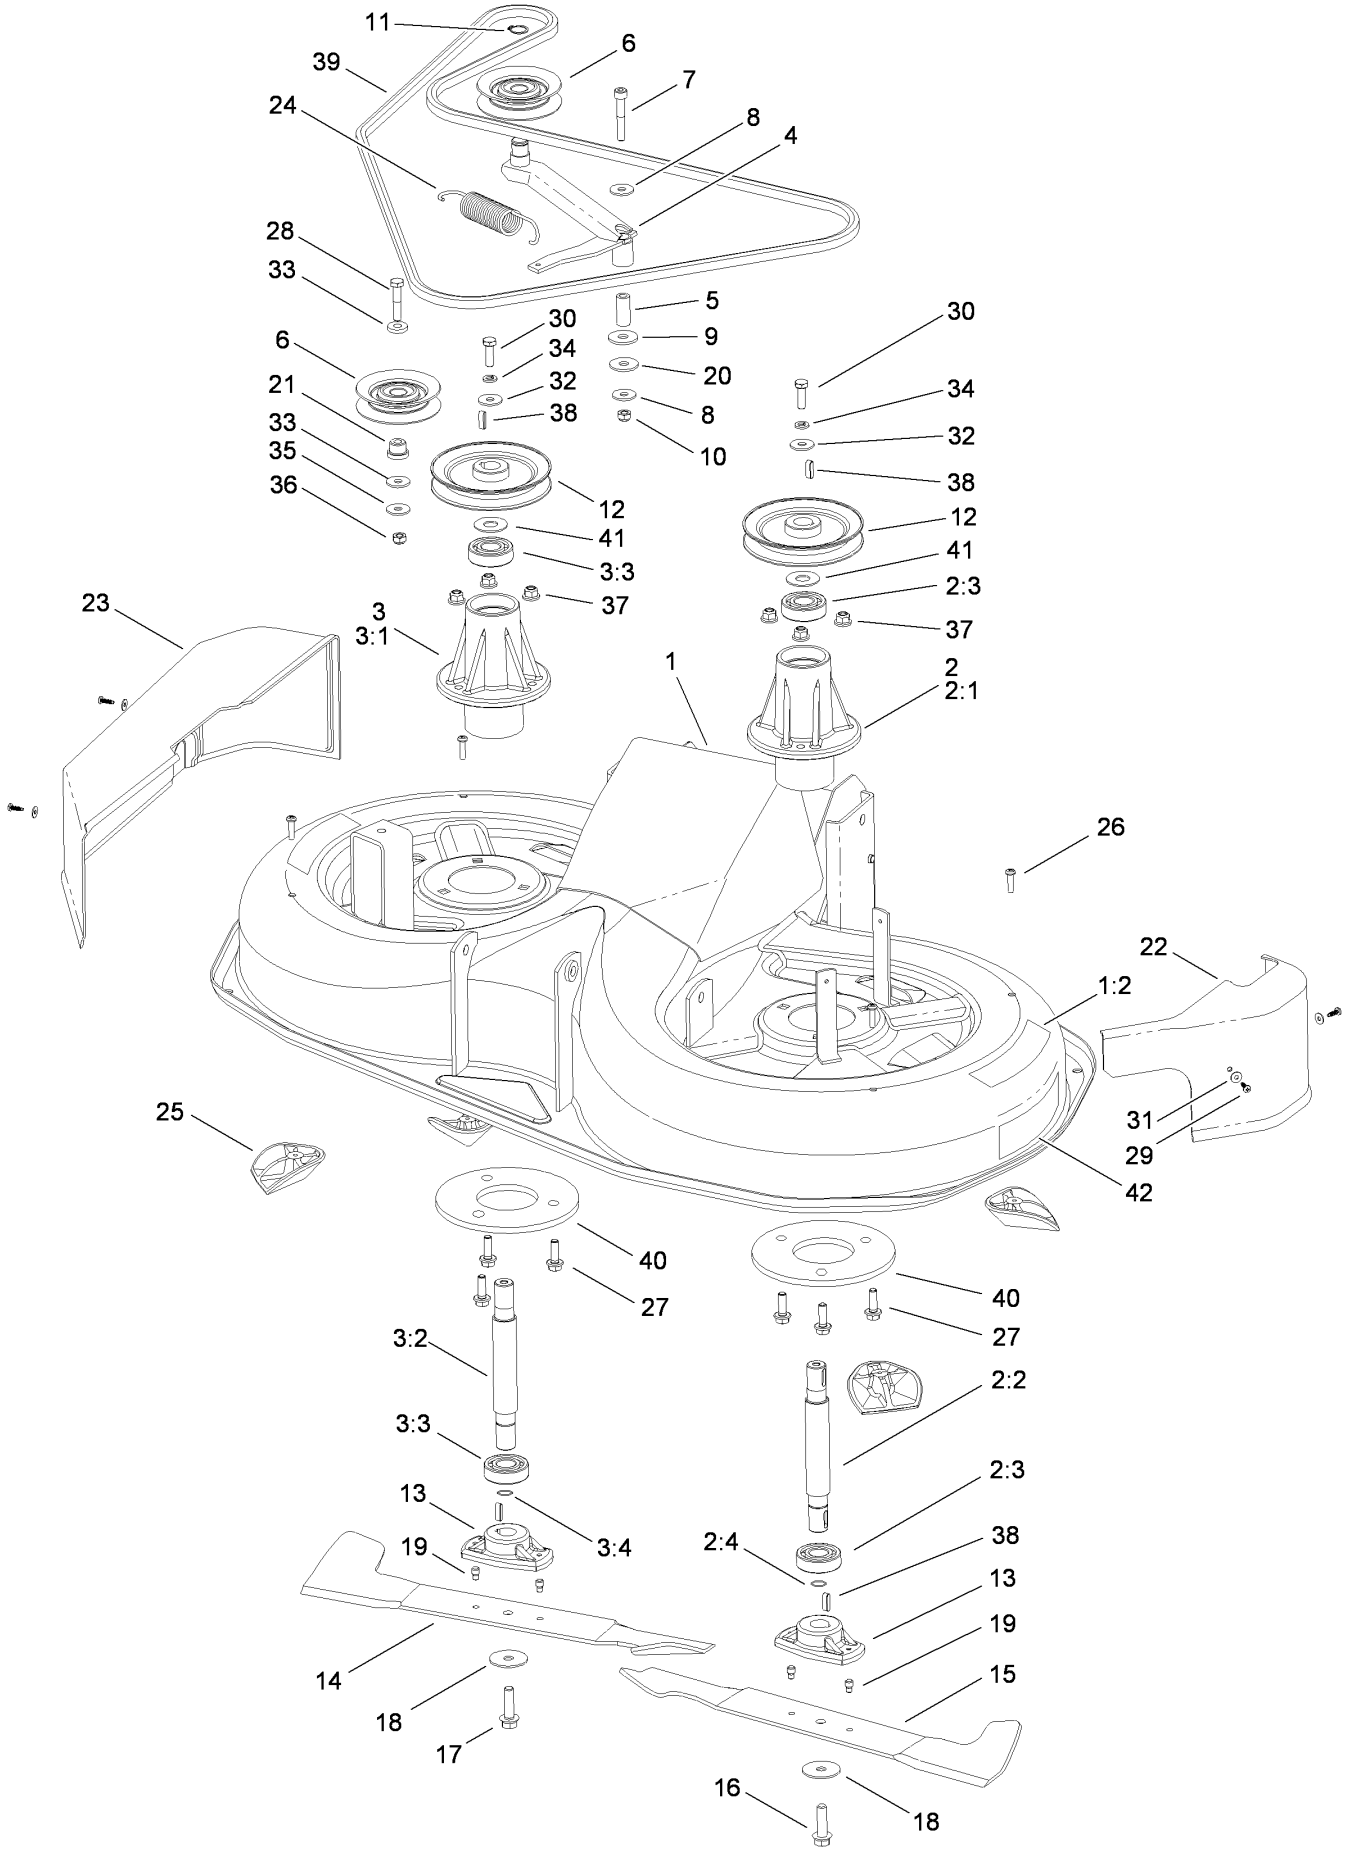

92cm Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5508	1	Deck ASM
1:2	119-2726	2	Decal-Danger
2	119-5425	1	Left Spindle ASM
2:1	119-5426	1	Housing-Spindle
2:2	119-5409	1	Shaft-Blade, Left
2:3	119-5505	2	Bearing
2:4	119-5410	1	Ring-Lock
3	119-5427	1	Right Spindle ASM
3:1	119-5426	1	Housing-Spindle
3:2	119-5411	1	Shaft-Blade, Right
3:3	119-5505	2	Bearing
3:4	119-5410	1	Ring-Lock
4	119-5412	1	Arm-Idler
5	119-5547	1	Spacer
6	119-5414	2	Pulley-Idler
7	60-6700	1	Bolt-HH
8	104-2946	2	Washer-Plain
9	119-5548	1	Washer-Plain
10	33024-00	1	Nut-Lock
11	119-5525	1	Ring-Lock
12	119-5416	2	Pulley-Mowing Belt, 4.5In
13	119-5506	2	Adapter-Mount, Blade
14	117-0035	1	Blade-RH
15	117-0036	1	Blade-LH
16	104-3088	1	Screw-Hex
17	104-3091	1	Screw-HH, Left
18	104-3092	2	Washer-Belleville
19	104-3093	4	Pin-Shear, Grooved
20	119-5415	1	Washer
21	104-3104	1	Bushing
22	119-5419	1	Guard-Belt, Left
23	119-5420	1	Guard-Belt, Right
24	119-5421	1	Spring
25	119-0369	4	Kicker
26	119-5423	4	Screw
27	33104-030	6	Screw-HHF
28	33114-040	1	Screw-HH
29	104-3190	4	Screw
30	33114-025	2	Screw-HH
31	104-2984	4	Washer
32	119-5507	2	Washer
33	106-8588	2	Washer-Flat
34	104-2927	2	Washer-Spring
35	106-4756	1	Washer-Plain
36	33024-00	1	Nut-Lock
37	104-3082	6	Nut-Lock, HF
38	119-2424	4	Key
39	119-2425	1	Belt-Wedge, Double
40	104-3084	2	Support-Ring
41	119-5549	2	Washer-Plain
42	114-3255	1	Decal-Recycler


Operation - Travel Pedal Assembly

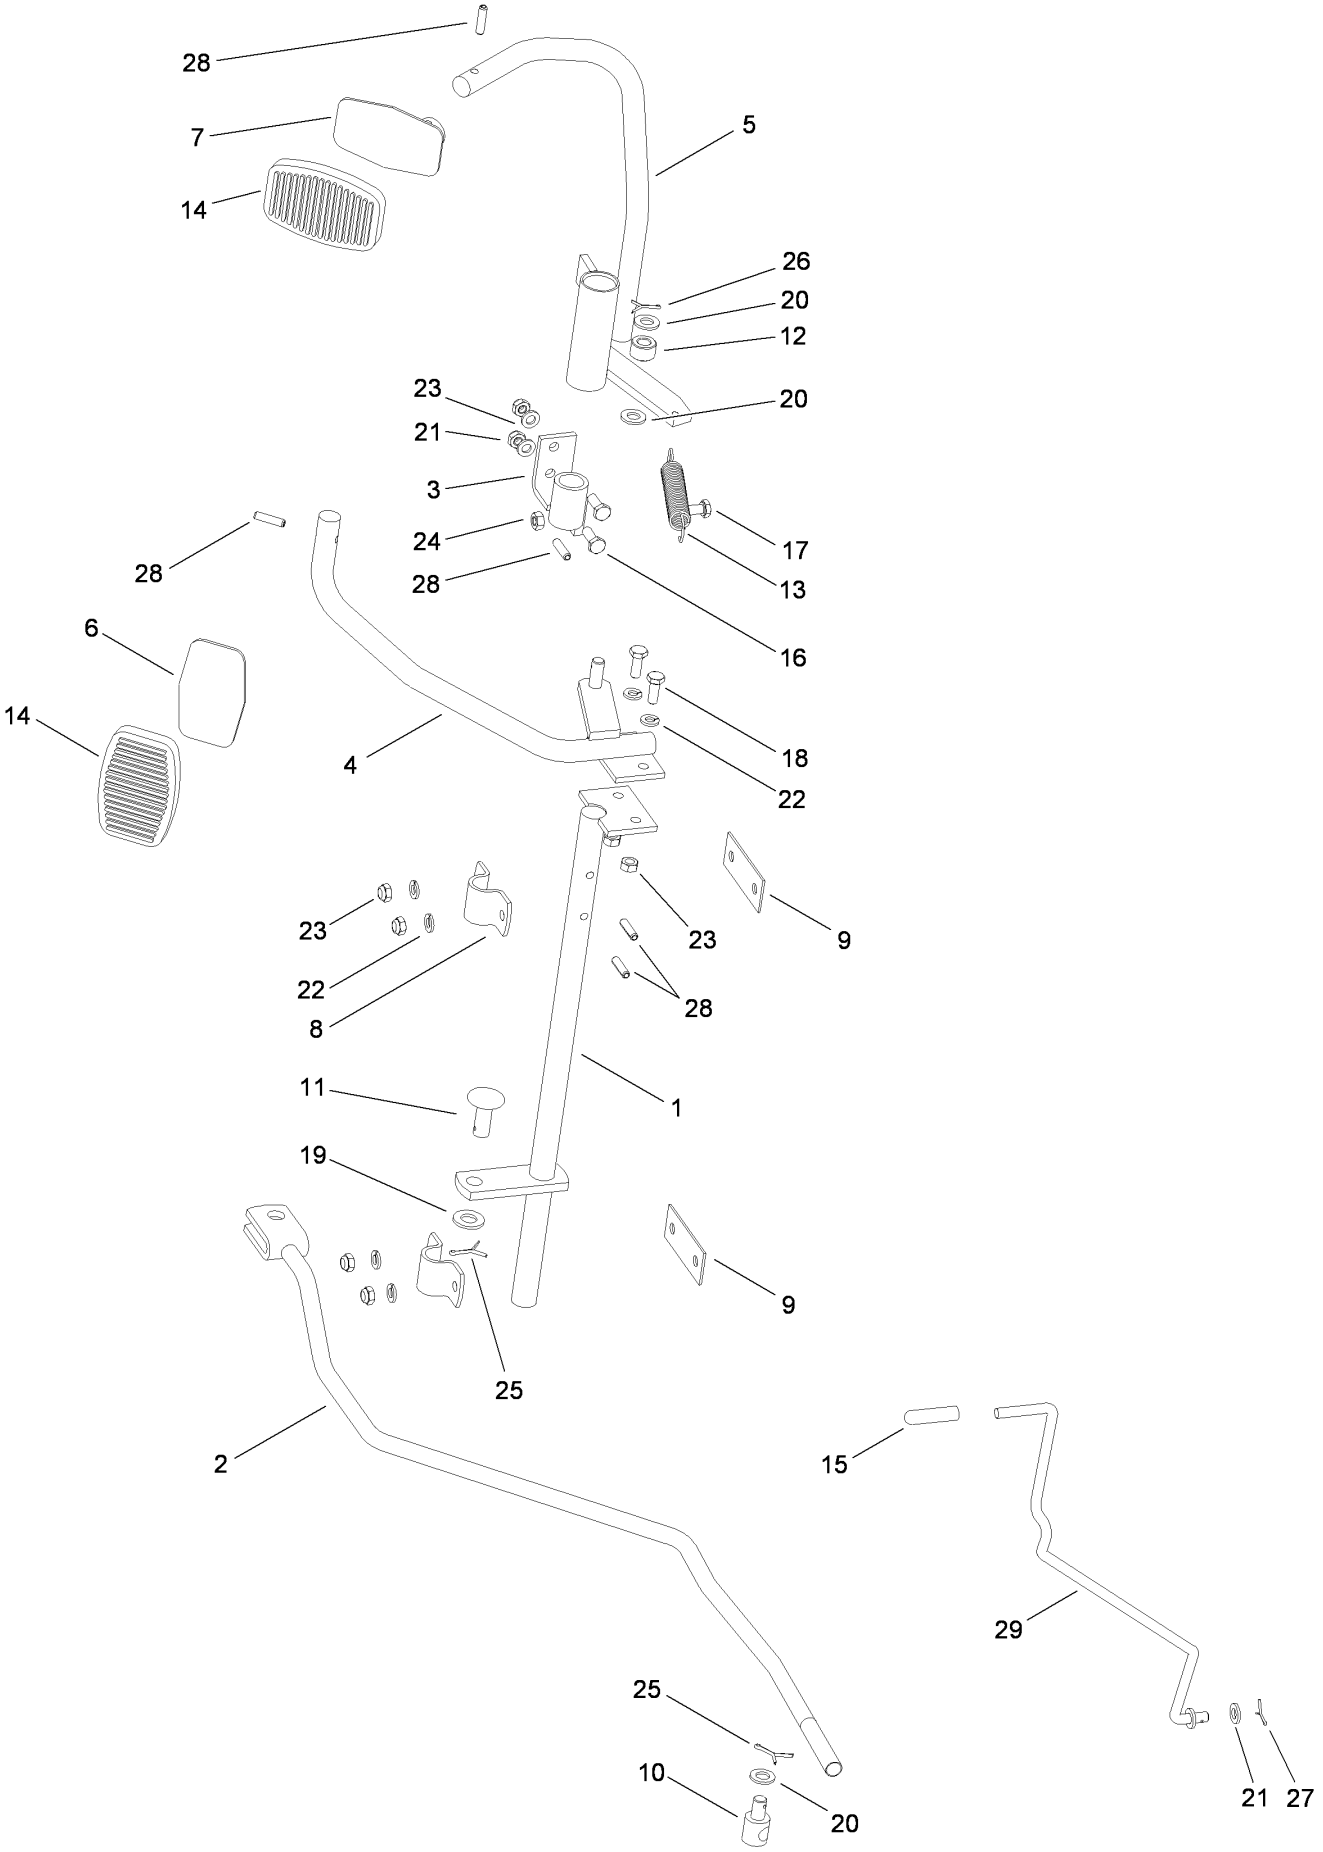

Operation - Travel Pedal Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-2426	1	Shaft-Pivot
2	119-2427	1	Rod-Linkage
3	119-2428	1	Bracket-Pedal Support
4	119-2429	1	Pedal-Travel, Forward
5	119-2430	1	Pedal-Travel, Reverse
6	119-2431	1	Pedal-Pad, Forward
7	119-5551	1	Pedal-Pad
8	119-2433	2	Clamp
9	119-2434	2	Spacer
10	119-2435	1	Pin
11	104-3026	1	Pin
12	106-8581	1	Roller
13	119-2436	1	Spring
14	104-3018	2	Pad-Pedal
15	108-8708	1	Cap-Bypass Lever, Hydro
16	33113-016	2	Screw-HH
17	33113-030	1	Screw-HH
18	105-2409	2	Screw-HSH
19	104-2906	1	Washer-Flat
20	106-4756	3	Washer-Plain
21	104-3193	3	Washer
22	104-3186	6	Washer-Spring
23	33023-00	8	Nut-Lock
24	104-2991	1	Nut-Hex
25	104-3027	2	Pin-Cotter
26	104-3151	1	Pin-Cotter
27	104-2997	1	Pin-Cotter
28	104-3008	3	Pin-Spring
29	119-2432	1	Rod-Lever, Bypass


Operation - Brake Pedal Assembly

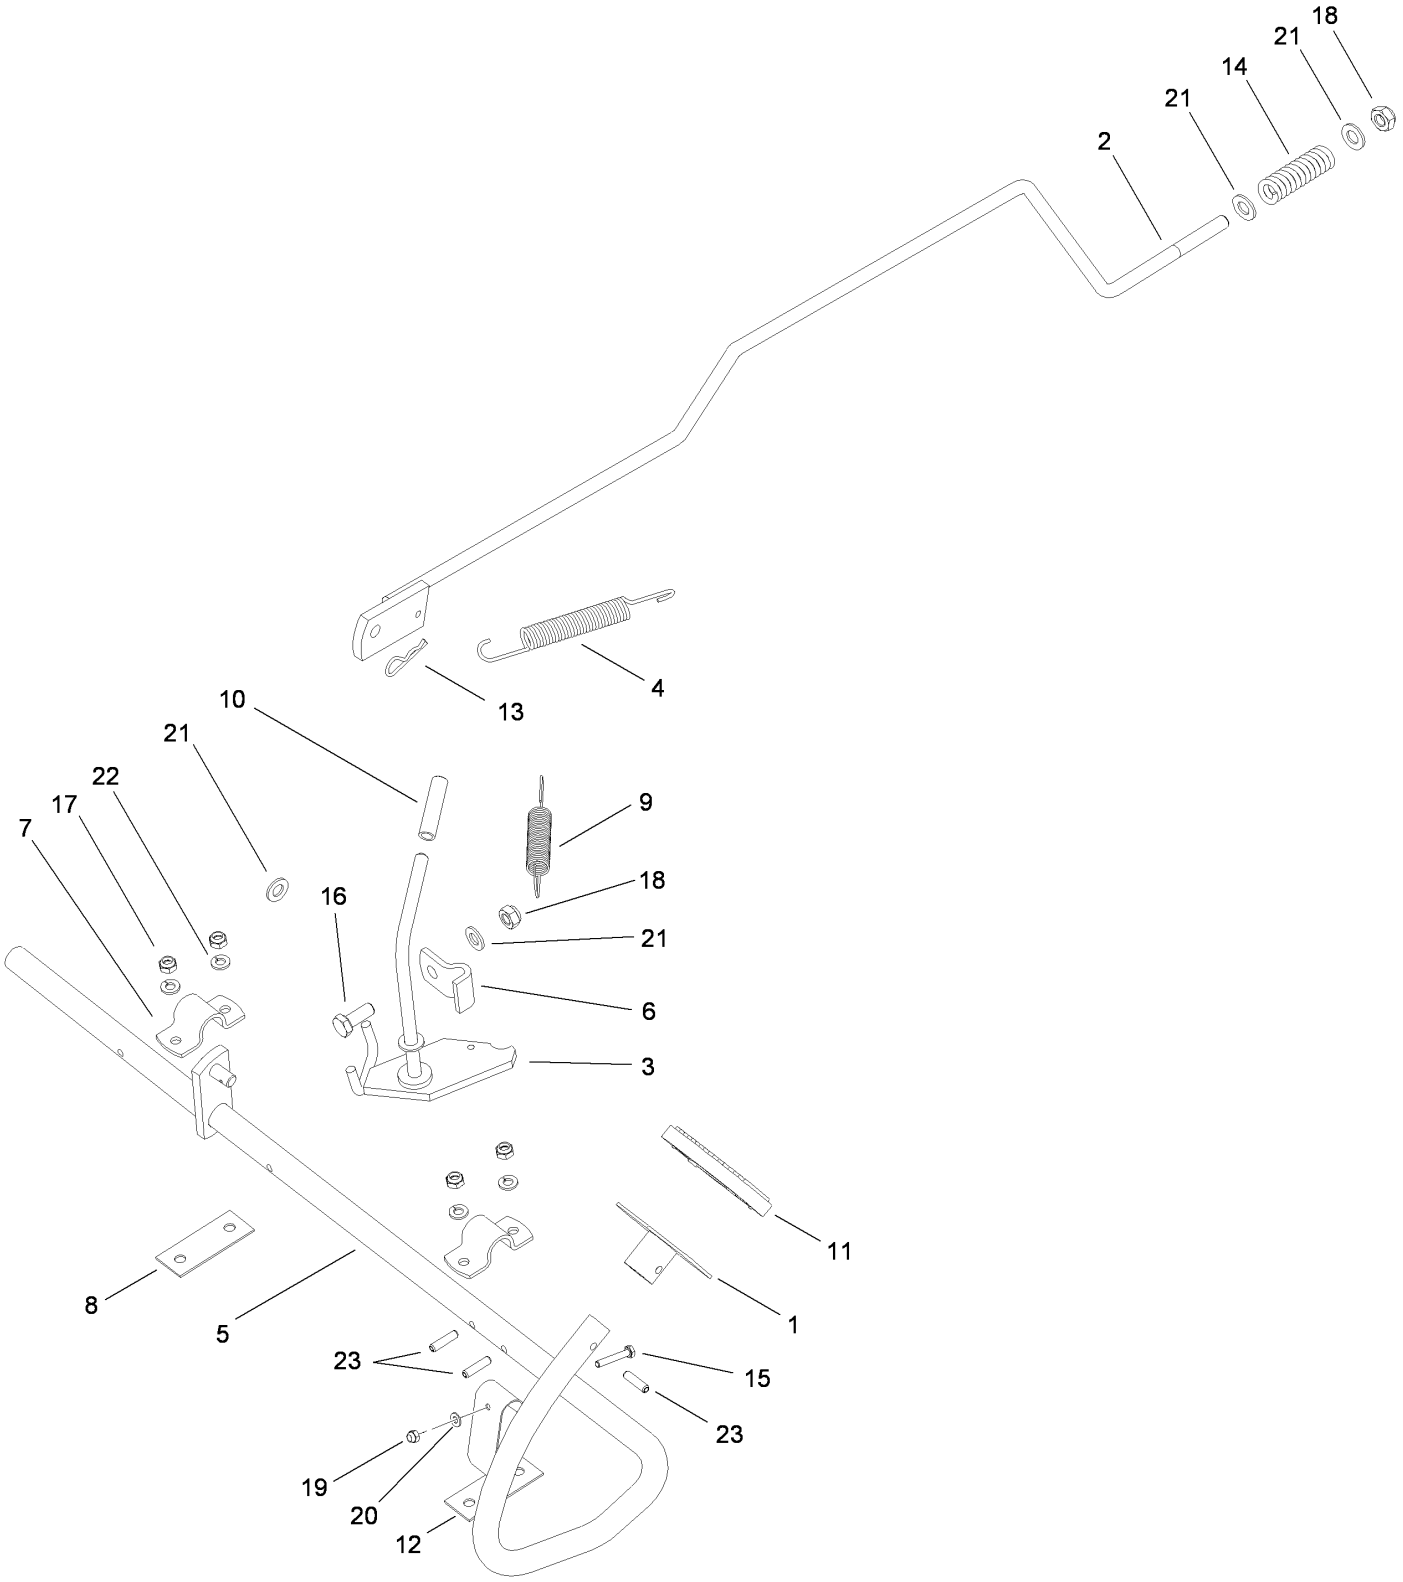

Operation - Brake Pedal Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-2437	1	Pedal-Pad,
2	119-2438	1	Rod-Brake Linkage
3	119-2439	1	Lever-Parking Brake
4	104-3001	1	Spring
5	119-2440	1	Pedal-Travel, Brake
6	104-3007	1	Clamp-Lever, Parking Brake
7	119-5406	2	Clamp
8	119-2434	1	Spacer
9	104-3005	1	Spring-Brake, Hand
10	104-3247	1	Cap
11	104-3018	1	Pad-Pedal
12	119-5509	1	Bracket-Parking Brake
13	104-3016	1	Pin-Cotter
14	104-3002	1	Spring-Brake
15	104-3009	1	Screw-Hex
16	33114-020	1	Screw-HH
17	33023-00	4	Nut-Lock
18	33024-00	2	Nut-Lock
19	104-2985	1	Nut-Hex
20	106-5766	1	Washer
21	106-4756	4	Washer-Plain
22	104-3186	4	Washer-Spring
23	104-3008	3	Pin-Spring


Electrical Assembly

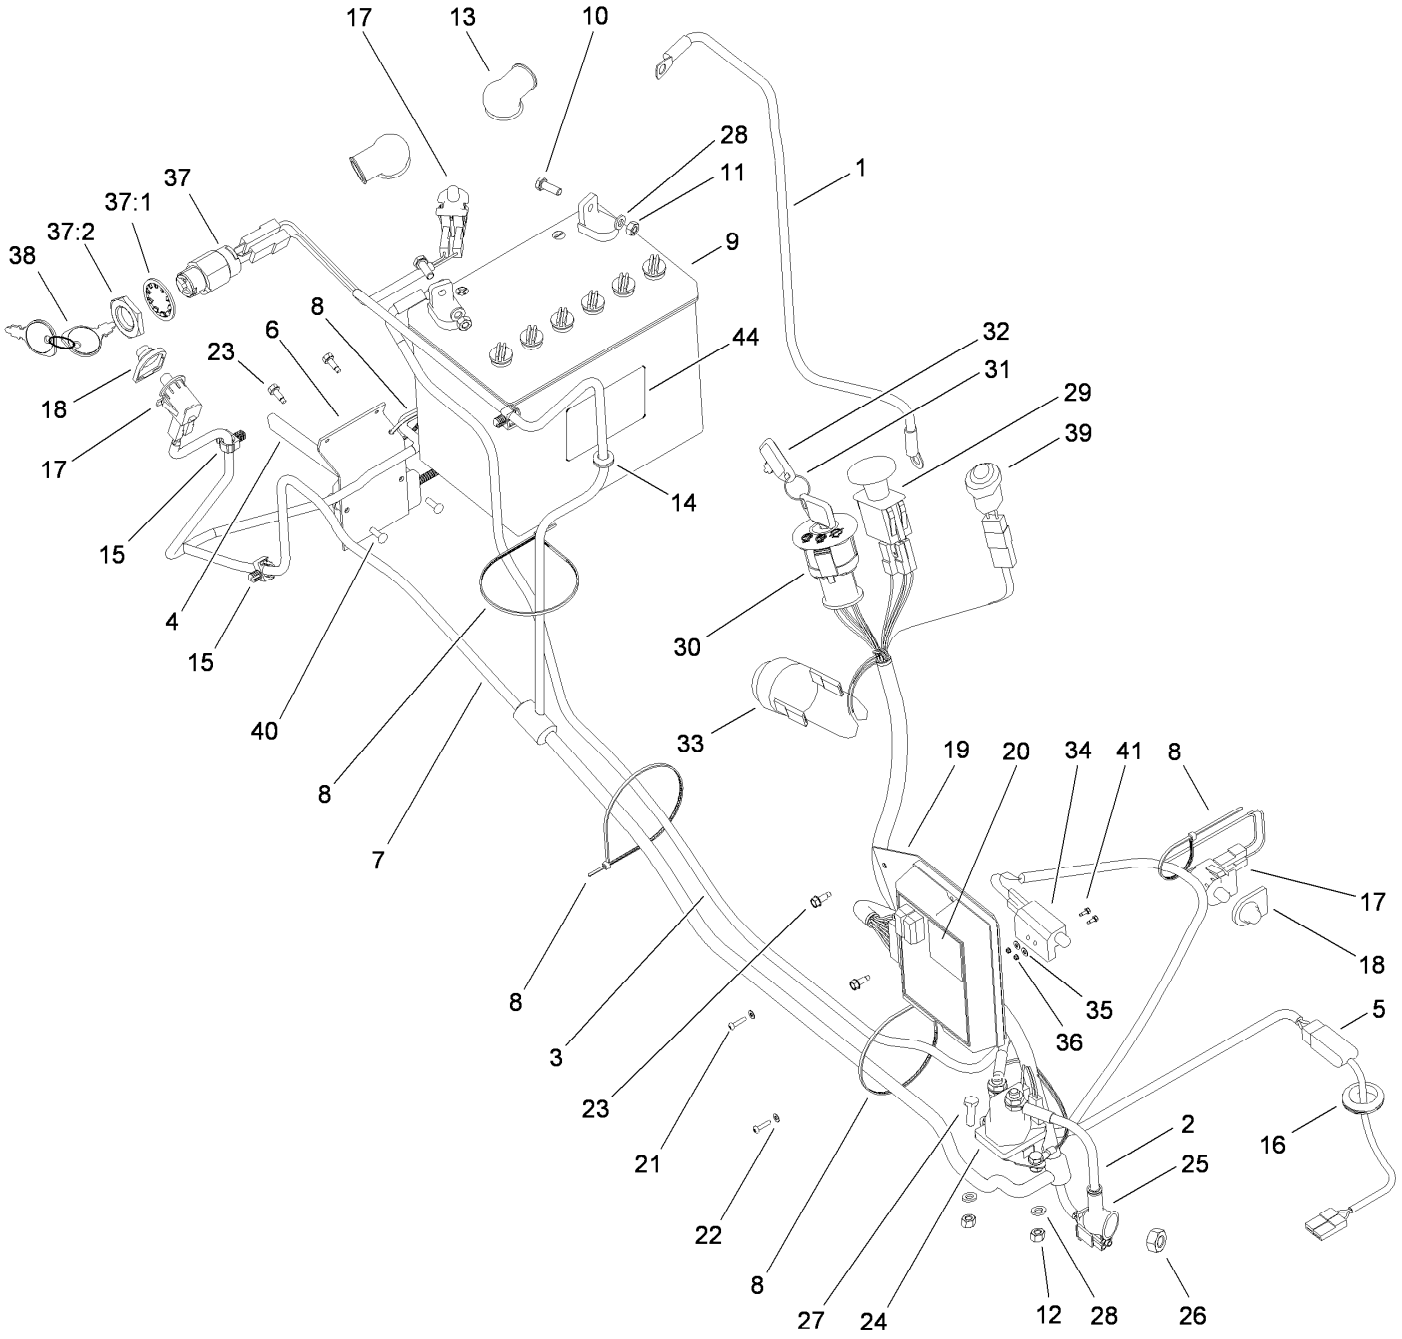

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5417	1	Cable-Battery, Negative
2	119-5418	1	Lead-Starter, Electric
3	119-5428	1	Cable-Battery, Positive
4	119-5429	1	Switch-Omron
5	119-5430	1	Harness-Clutch
6	119-5431	1	Bracket-Switch Omron
7	119-5432	1	Harness-Wiring
8	3334-945	9	Tie-Cable
9	104-2491	1	Battery
10	33113-016	2	Screw-HH
11	104-2991	2	Nut-Hex
12	33023-00	2	Nut-Lock
13	104-3154	2	Boot-Rubber
14	104-3164	1	Bushing
15	104-3157	5	Clip-Snap
16	104-2959	1	Bushing
17	104-3179	3	Switch-Delta
18	104-3178	2	Cover-Protective
19	119-5433	1	Bracket-Module Support
20	119-5434	1	Module-Control
21	119-5436	2	Screw
22	119-5437	2	Washer
23	104-2977	4	Screw-TAP
24	104-3189	1	Solenoid
25	104-3187	1	Boot-Rubber
26	32128-32	1	Nut-HHF
27	33113-012	2	Screw-HH
28	104-3193	4	Washer
29	93-9998	1	Switch-PTO
30	119-5438	1	Switch-Ignition
31	119-5439	1	Ring
32	119-5510	2	Key-Ignition
33	119-5511	1	Buzzer
34	119-5440	1	Switch-Delta
35	104-2984	2	Washer
36	104-2985	2	Nut-Hex
37	46-5780	1	Starter Switch ASM
37:1	3254-5	1	Washer-Tooth, Internal
37:2	218-461	1	Nut-HH
38	62-7770	2	Key-Ignition
39	119-5441	1	Lamp-Indicator
40	104-3349	2	Screw
41	104-3331	2	Bolt
44	93-7276	1	Decal-Danger


Hood, Seat and Fender Assembly

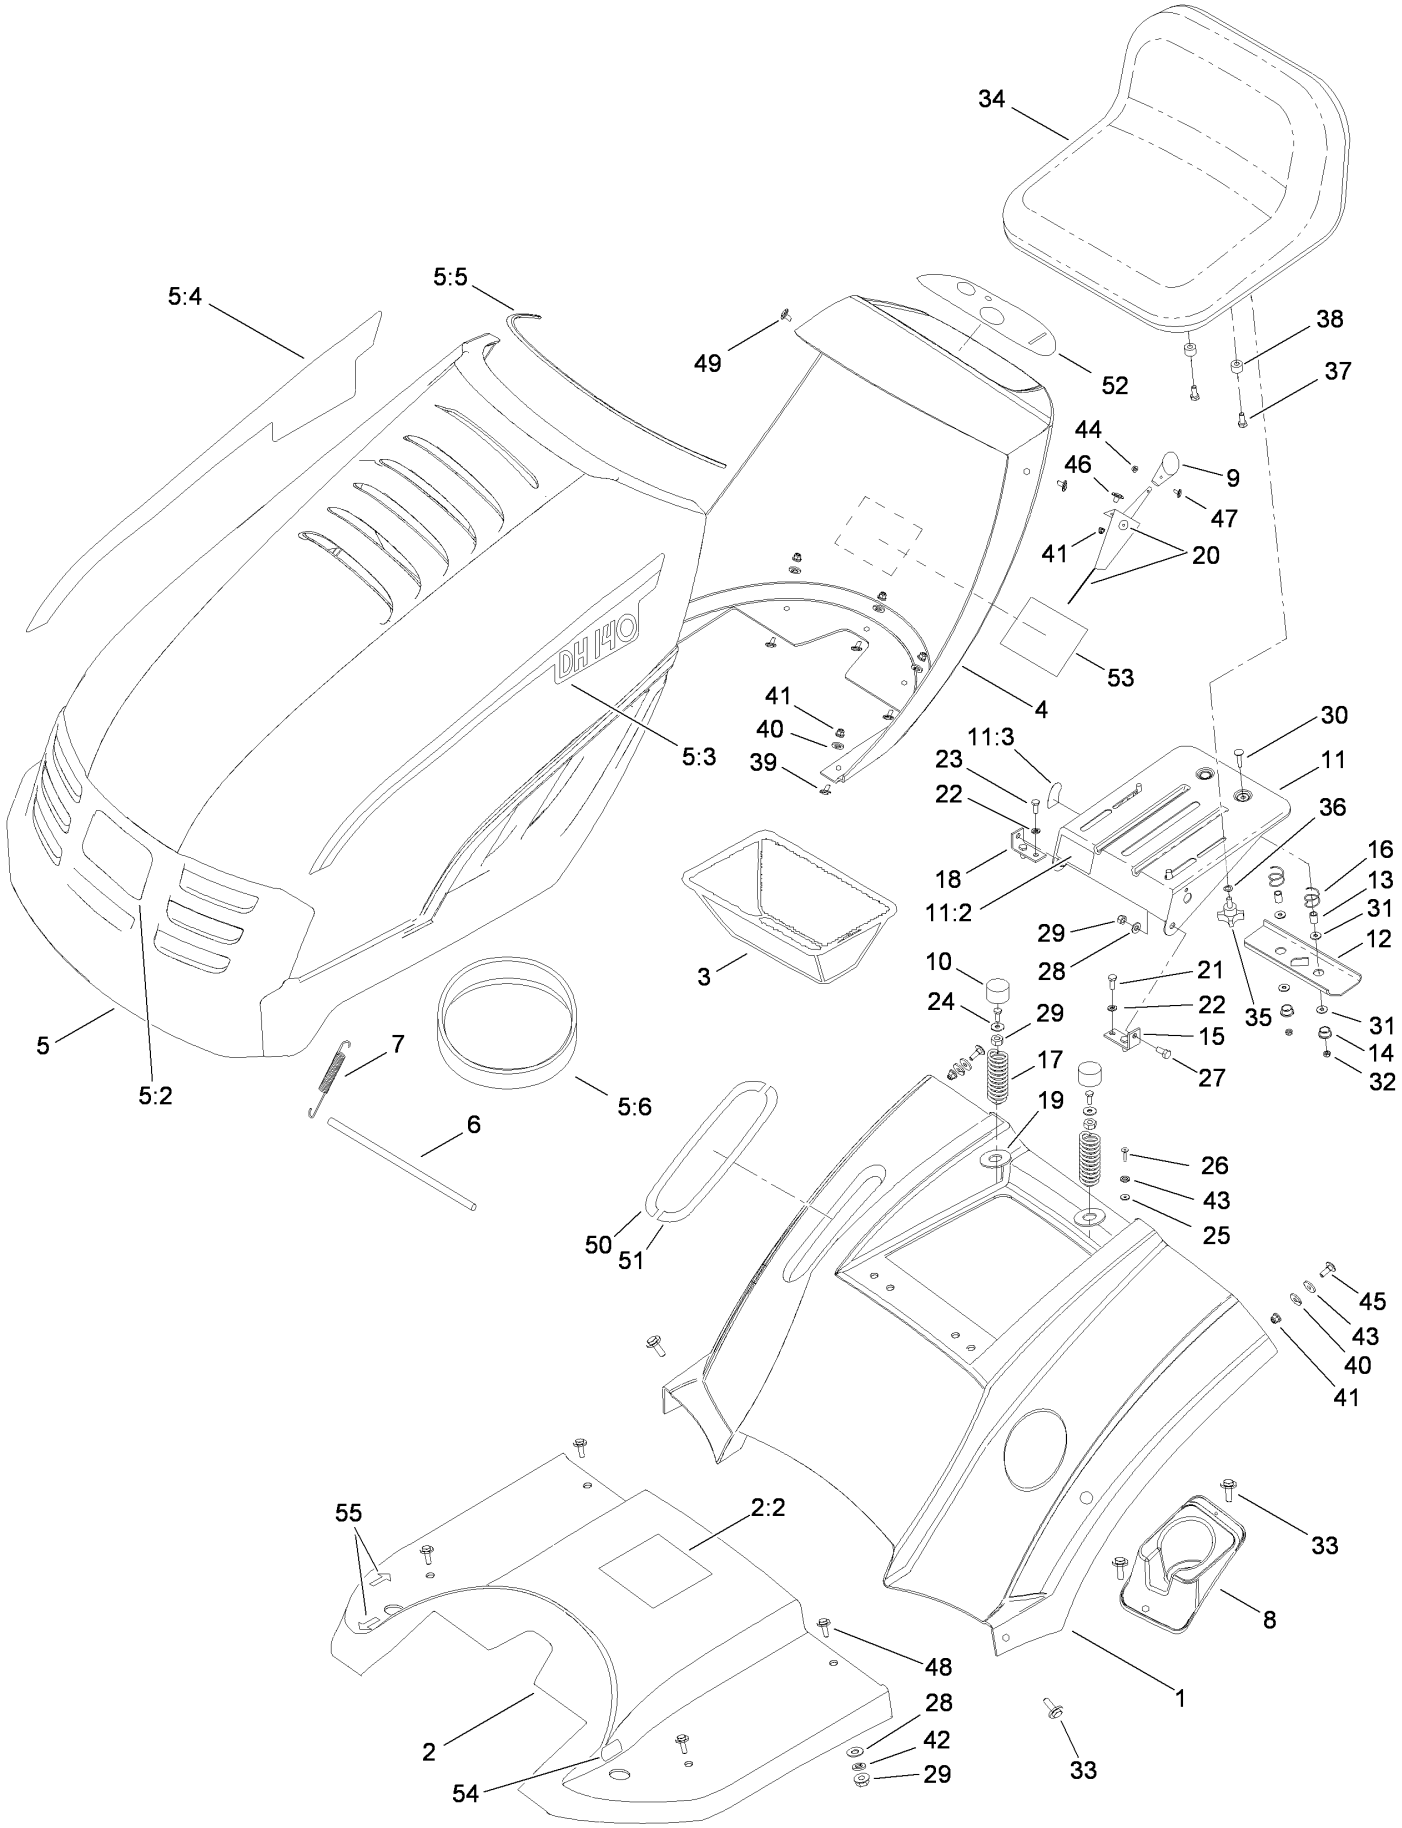

Hood, Seat and Fender Assembly (continued)


Ref.	Part Number	Qty.	Description
1	119-5422	1	Fender-Rear
2	119-2752	1	Foot Rest Assembly
2:2	119-2725	1	Decal-Danger
3	119-5443	1	Box-Battery
4	119-5444	1	Panel-Dash
5	119-5520	1	Hood Assembly
5:2	117-0871	1	Decal-Toro
5:3	119-2718	1	Decal-Dh 140 (LH)
5:4	119-2719	1	Decal-Dh 140 (RH)
5:5	119-5445	1	Rubber-Purl
5:6	119-5446	1	Gasket-Foam
6	104-2974	1	Bar-Safety
7	104-2975	1	Spring-Hood
8	119-5447	1	Box-Drink
9	119-5448	1	Knob-Throttle/Choke
10	104-2857	2	Cap-Hub
11	119-5513	1	Bracket-Support, Seat
11:2	119-2730	1	Decal-Danger
11:3	99-5340	1	Decal-Switch
12	104-2934	1	Bracket
13	104-2933	2	Spacer-Split
14	104-2935	2	Bushing
15	119-5450	1	Holder-Support, Left
16	119-5514	2	Seat-Spring
17	104-2945	2	Spring-Seat
18	119-5451	1	Holder-Support, Right
19	119-5452	2	Washer-Seat Spring
20	119-5453	1	Cable-Throttle And Choke
21	33114-025	1	Screw-HH
22	104-2927	4	Washer-Spring
23	33114-020	5	Screw-HH
24	104-2946	2	Washer-Plain
25	104-2941	2	Washer-Finish
26	119-5454	2	Screw
27	104-2939	2	Screw-Support, Seat
28	33094-00	6	Washer-Plain
29	33024-00	8	Nut-Lock
30	33123-030	2	Screw-CARR
31	104-2931	2	Washer-Flat
32	33023-00	2	Nut-Lock
33	119-5550	4	Rivet
34	119-5455	1	Seat
35	119-5456	2	Knob-Adjust
36	104-2936	2	Washer-Spring
37	33104-020	2	Screw-HHF
38	119-5457	2	Spacer
39	104-2978	5	Screw-Hex
40	104-2943	12	Washer-Flat
41	87-5140	7	Nut-Lock
42	104-2949	4	Washer-Rubber
43	104-2952	4	Washer-Rubber
44	104-2985	1	Nut-Hex
45	104-2980	2	Screw
46	104-2966	2	Screw-Flat Head
47	119-5458	1	Screw
48	119-5459	4	Screw
49	119-5460	2	Screw
50	119-5484	1	Decal-Mowing Lift, Right
51	119-5485	1	Decal-Mowing Lift, Left
52	119-5486	1	Decal-Panel
53	119-5517	1	Decal-Operating Instructions
54	104-3237	1	Decal-Brake, Parking
55	119-5487	1	Decal-Travel

Grass Collector Assembly

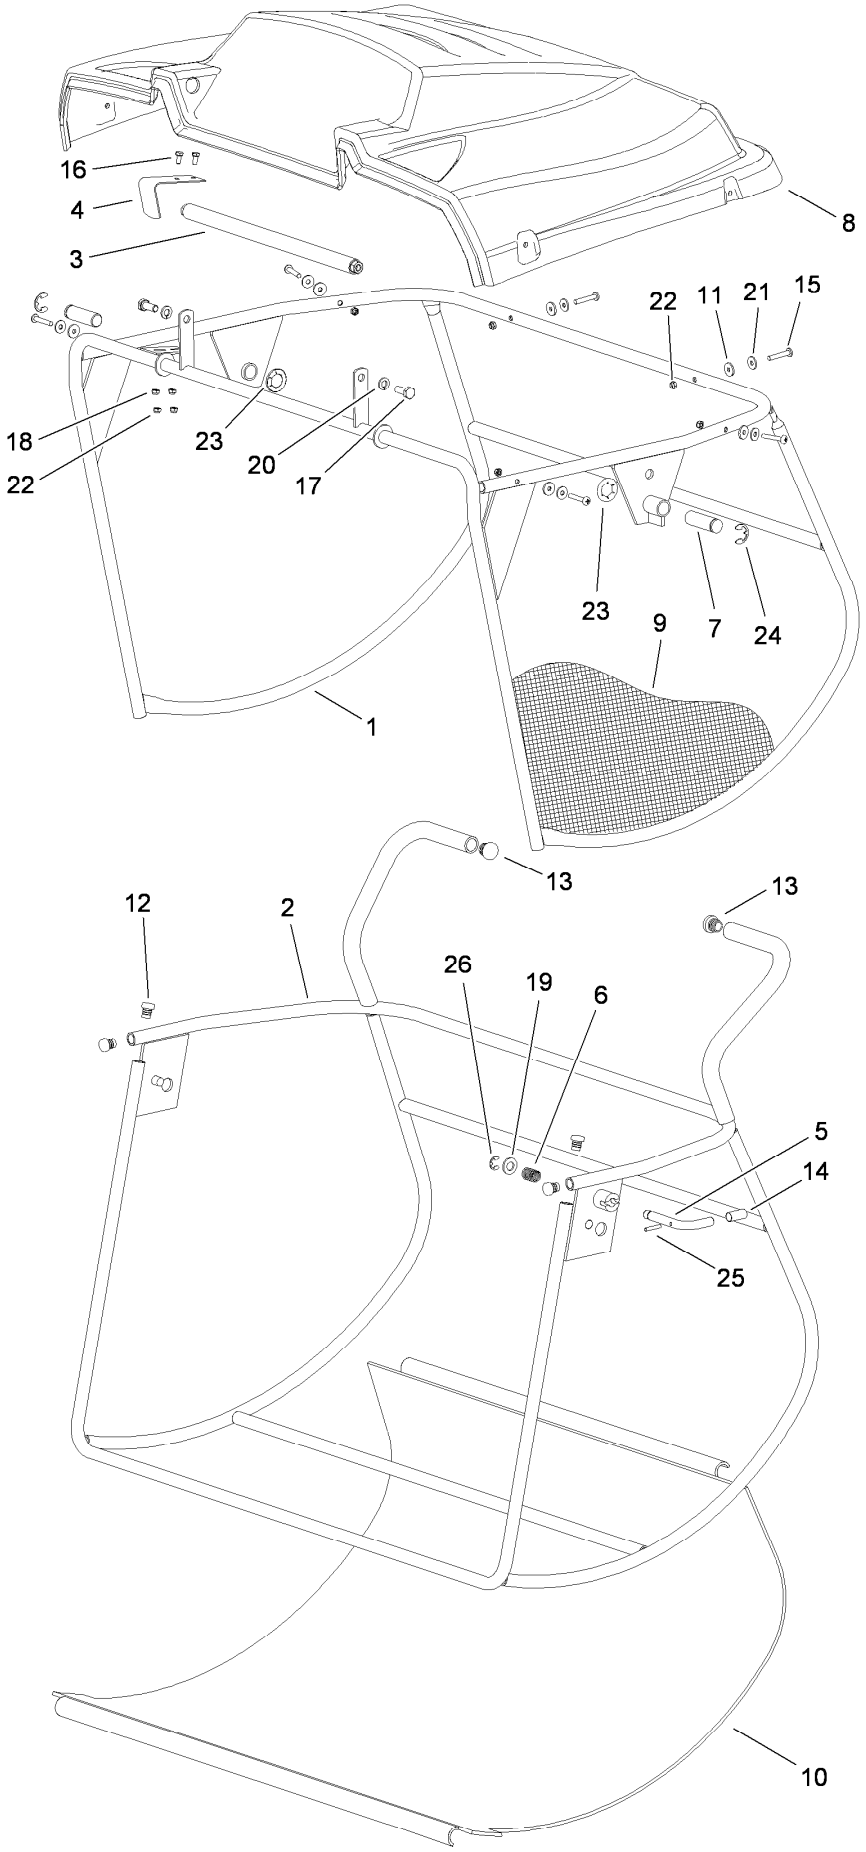


Grass Collector Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5463	1	Upper Frame ASM
2	119-5464	1	Frame Assembly - Lower
3	119-5465	1	Handle-Lift
4	119-5466	1	Bracket-Collector, Interlock
5	119-5467	1	Lever-Collector Lock
6	119-5468	1	Spring
7	119-5469	2	Pin
8	119-5470	1	Cover-Collector
9	119-5471	1	Bag-Grass
10	119-5472	1	Bag-Lower
11	104-2952	6	Washer-Rubber
12	119-5475	4	Cap
13	119-5474	2	Cap
14	119-5473	1	Cap
15	119-5476	6	Screw
16	119-5477	2	Screw
17	33114-020	2	Screw-HH
18	52-6430	2	Washer
19	33095-00	1	Washer-Flat
20	104-2927	2	Washer-Spring
21	104-2943	2	Washer-Flat
22	87-5140	8	Nut-Lock
23	119-5478	2	Ring-Lock, 16
24	119-5503	2	E-Clip
25	119-5479	1	Pin
26	104-3015	1	E-Clip

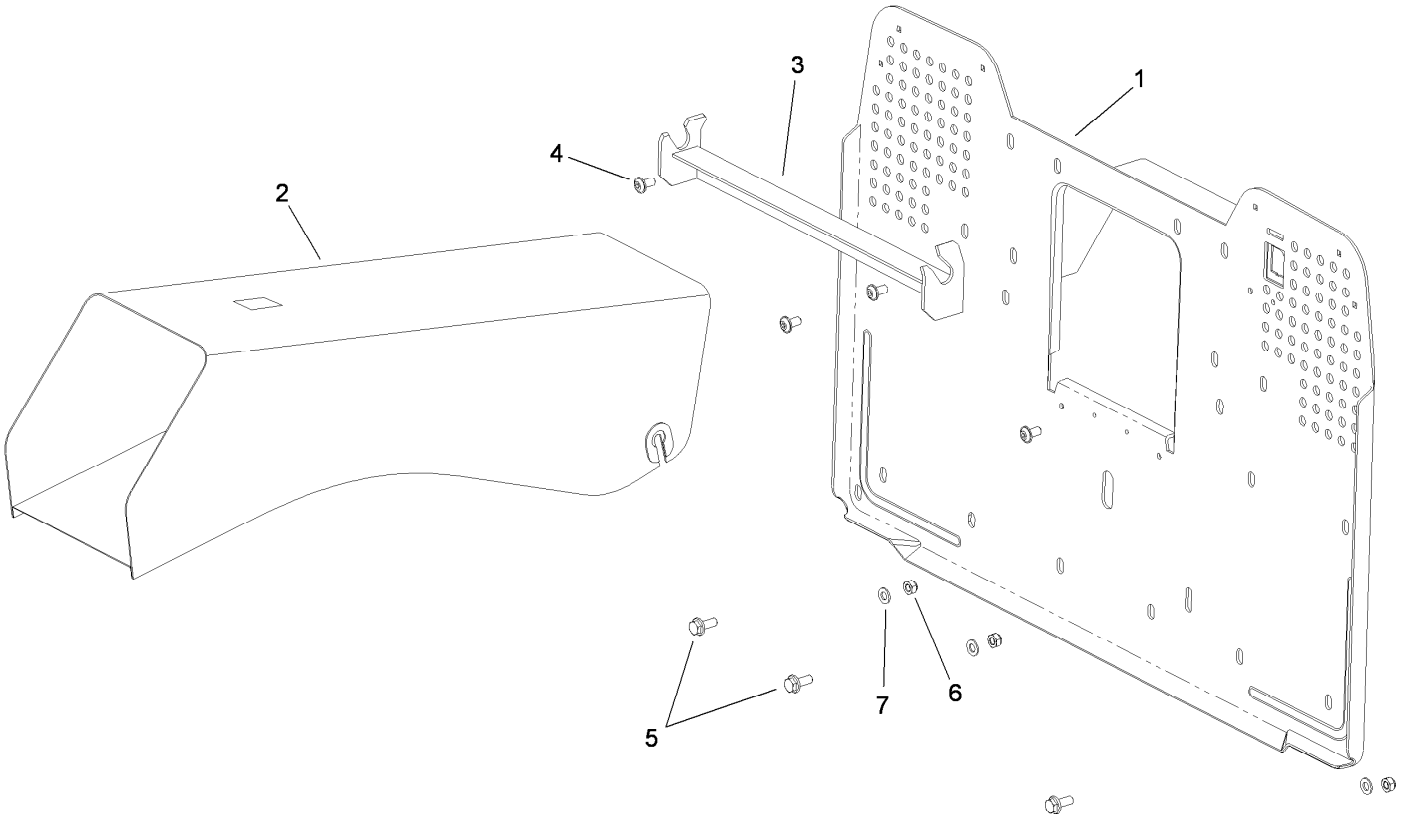

Tunnel Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	119-5480	1	Collector Plate Assembly
2	119-5481	1	Tunnel
3	119-5482	1	Support-Collector
4	104-3060	4	Bolt-Carriage
5	119-5483	4	Screw
6	33024-00	4	Nut-Lock
7	33094-00	4	Washer-Plain

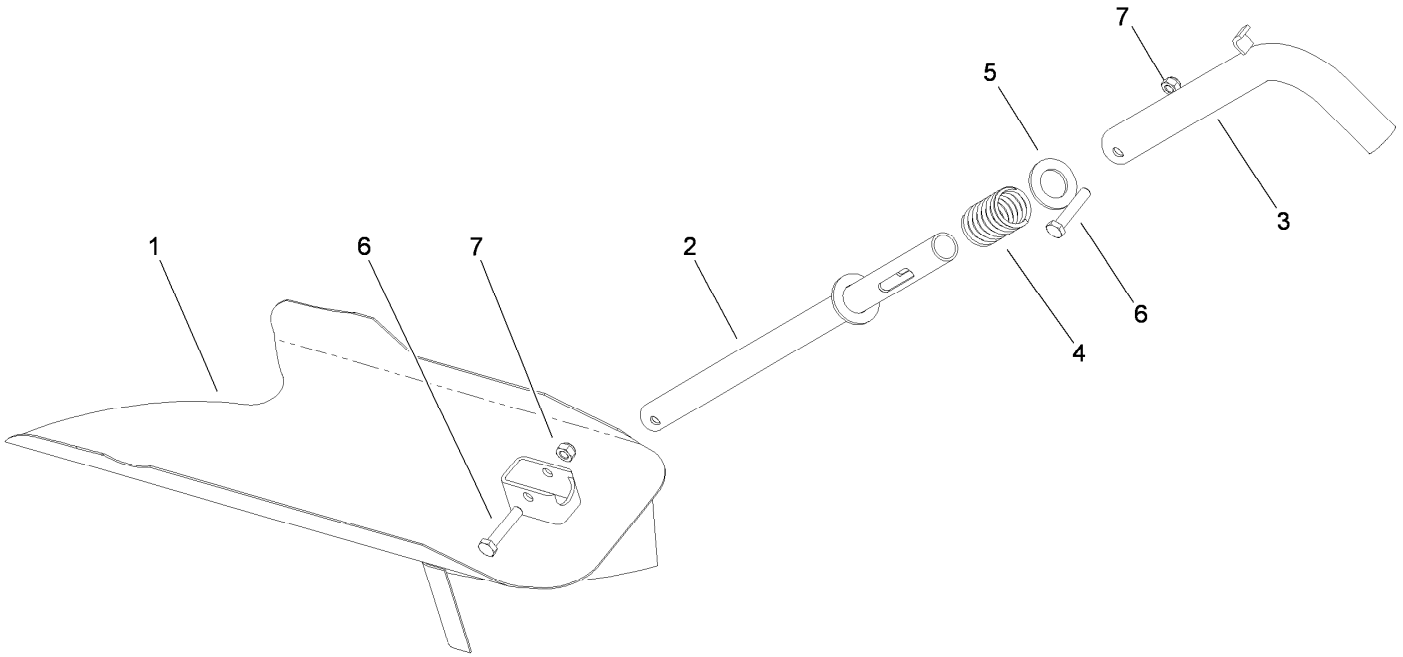

Mulch Plug Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	119-5488	1	Shield-Mulching
2	119-5490	1	Tube-Bottom
3	119-5491	1	Tube-Top
4	119-5492	1	Spring
5	119-5493	1	Washer
6	33114-040	2	Screw-HH
7	33024-00	2	Nut-Lock

Attachments and Accessories

For 74560 DH 140 Lawn Tractor

Product Name	Model/Part
Rear Discharge Chute Kit	117-0054
Towing Hitch Kit	119-5555

Notes:

Notes:

Notes:



Count on it.