Form No. 3364-759 Rev A

TORO®

Count on it.

Parts Catalog

GT2200 Garden Tractor

Model No. 14AQ94RP848—Serial No. 1 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

© 2010—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Contents

Front and Rear Wheel Assembly 4
Engine Component Assembly 5
Steering and Front Axle Assembly 6
Frame, Battery and Electric PTO Assembly 8
Seat, Fender and Deck Lift Assembly 10
Fuel Tank, Hood and Dash Assembly 12
Drive System Assembly 14
50 Inch Deck Assembly 16
Attachments and Accessories 18

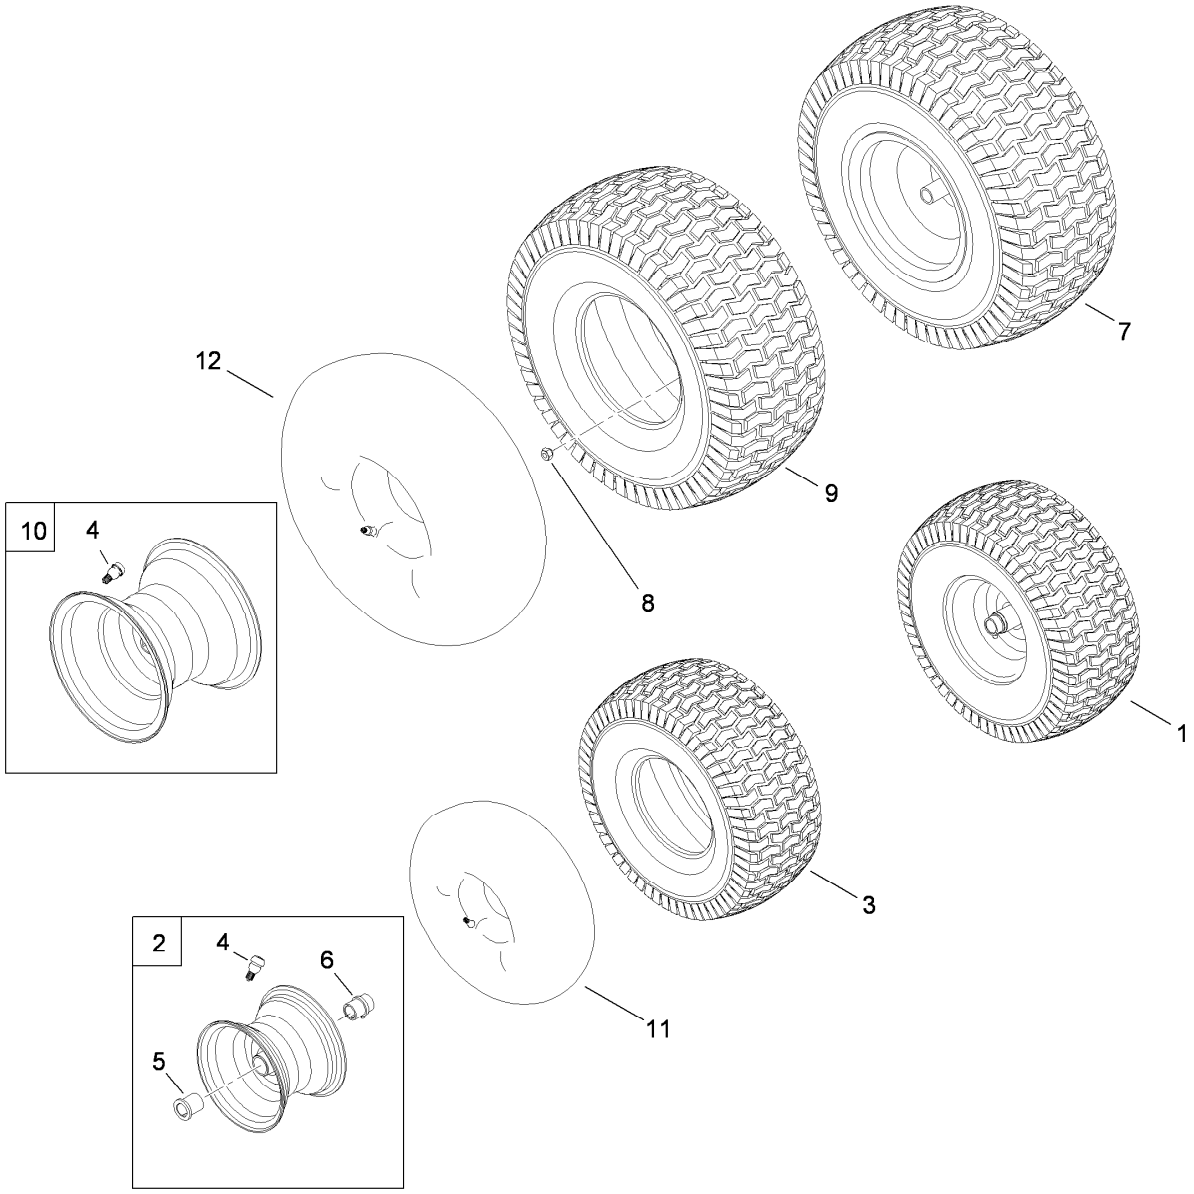

Front and Rear Wheel Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	119-9078	1	Tire And Wheel ASM
2	112-0919	1	Rim ASM
3	119-9079	1	Tire
4	112-0503	1	Valve-Air, Tubeless
5	112-0331	1	Bearing-Flange
6	112-0375	1	Bearing-Flange (W/Zerk)
7	112-0847	1	Wheel ASM
8	112-0911	1	Nut-Lug
9	112-0876	1	Tire-Turf
10	112-0849	1	Rim ASM
11	112819	1	Tube-Inner
12	231-90	1	Tube

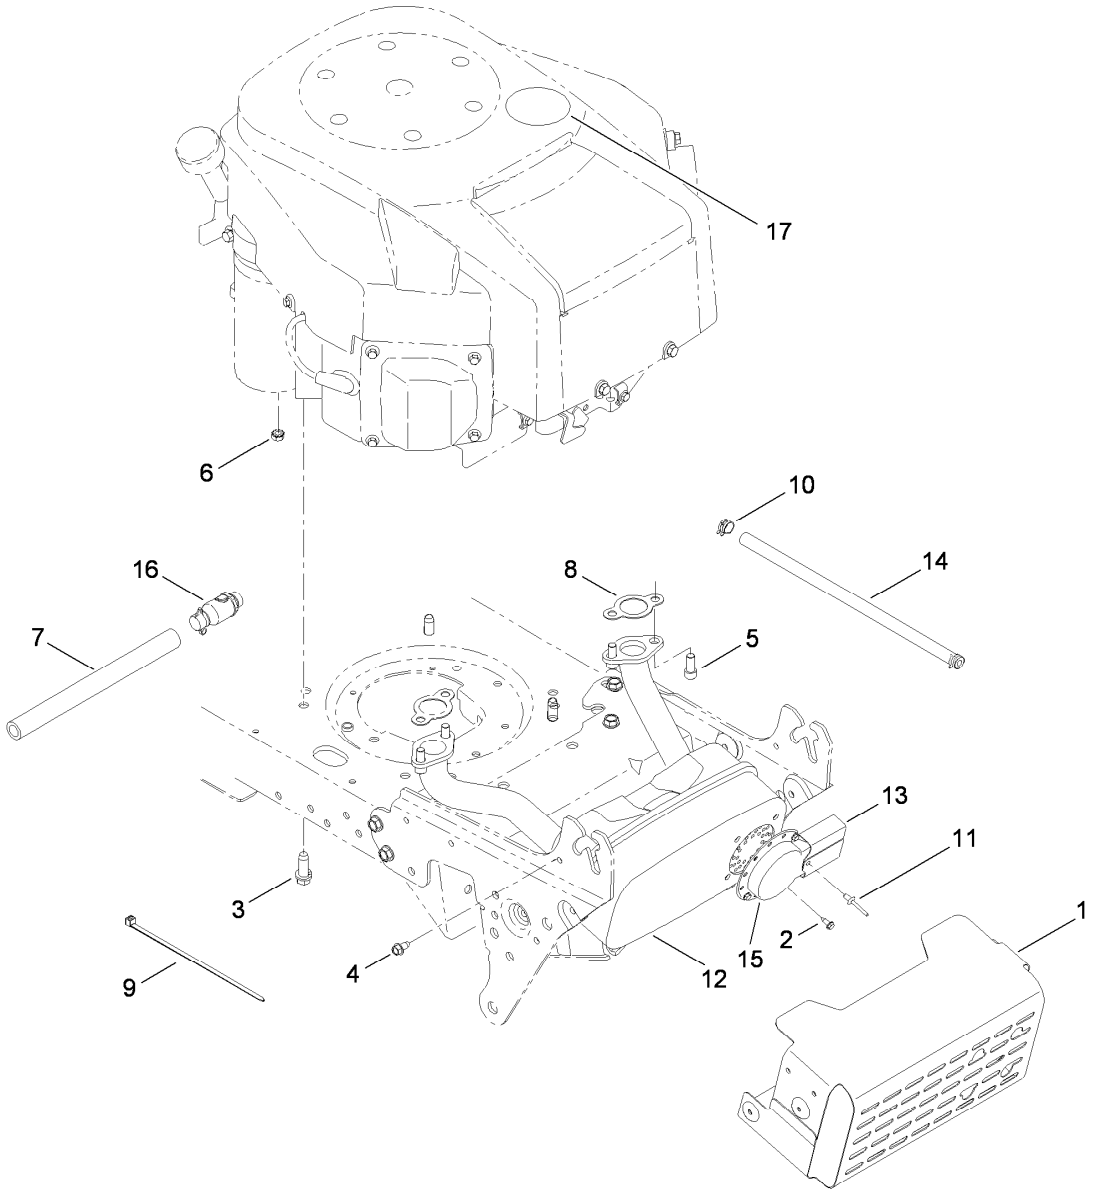

Engine Component Assembly

Ref.	Part Number	Qty.	Description
1	112-6202	1	Shield-Muffler
2	112-0626	1	Screw-HWHTF
3	112-6163	1	Screw-HH, TAP
4	112-0524	1	Screw-HWHTF
5	112-6012	1	Screw-HSH
6	112-0546	1	Nut-Sems
7	112-0553	1	Hose-Drain
8	119-9053	1	Gasket-Exhaust
9	112-0527	1	Tie-Cable
10	112-0573	1	Clamp-Hose
11	112-3741	1	Rivet-Pop
12	112-6164	1	Muffler-Twin
13	112-0453	1	Deflector-Muffler
14	112-0720	1	Hose-Fuel
15	112-0730	1	Deflector-Muffler, Long
16	110-9890	1	Drain-Oil
17	112-5960	1	Decal-Check Oil


Steering and Front Axle Assembly

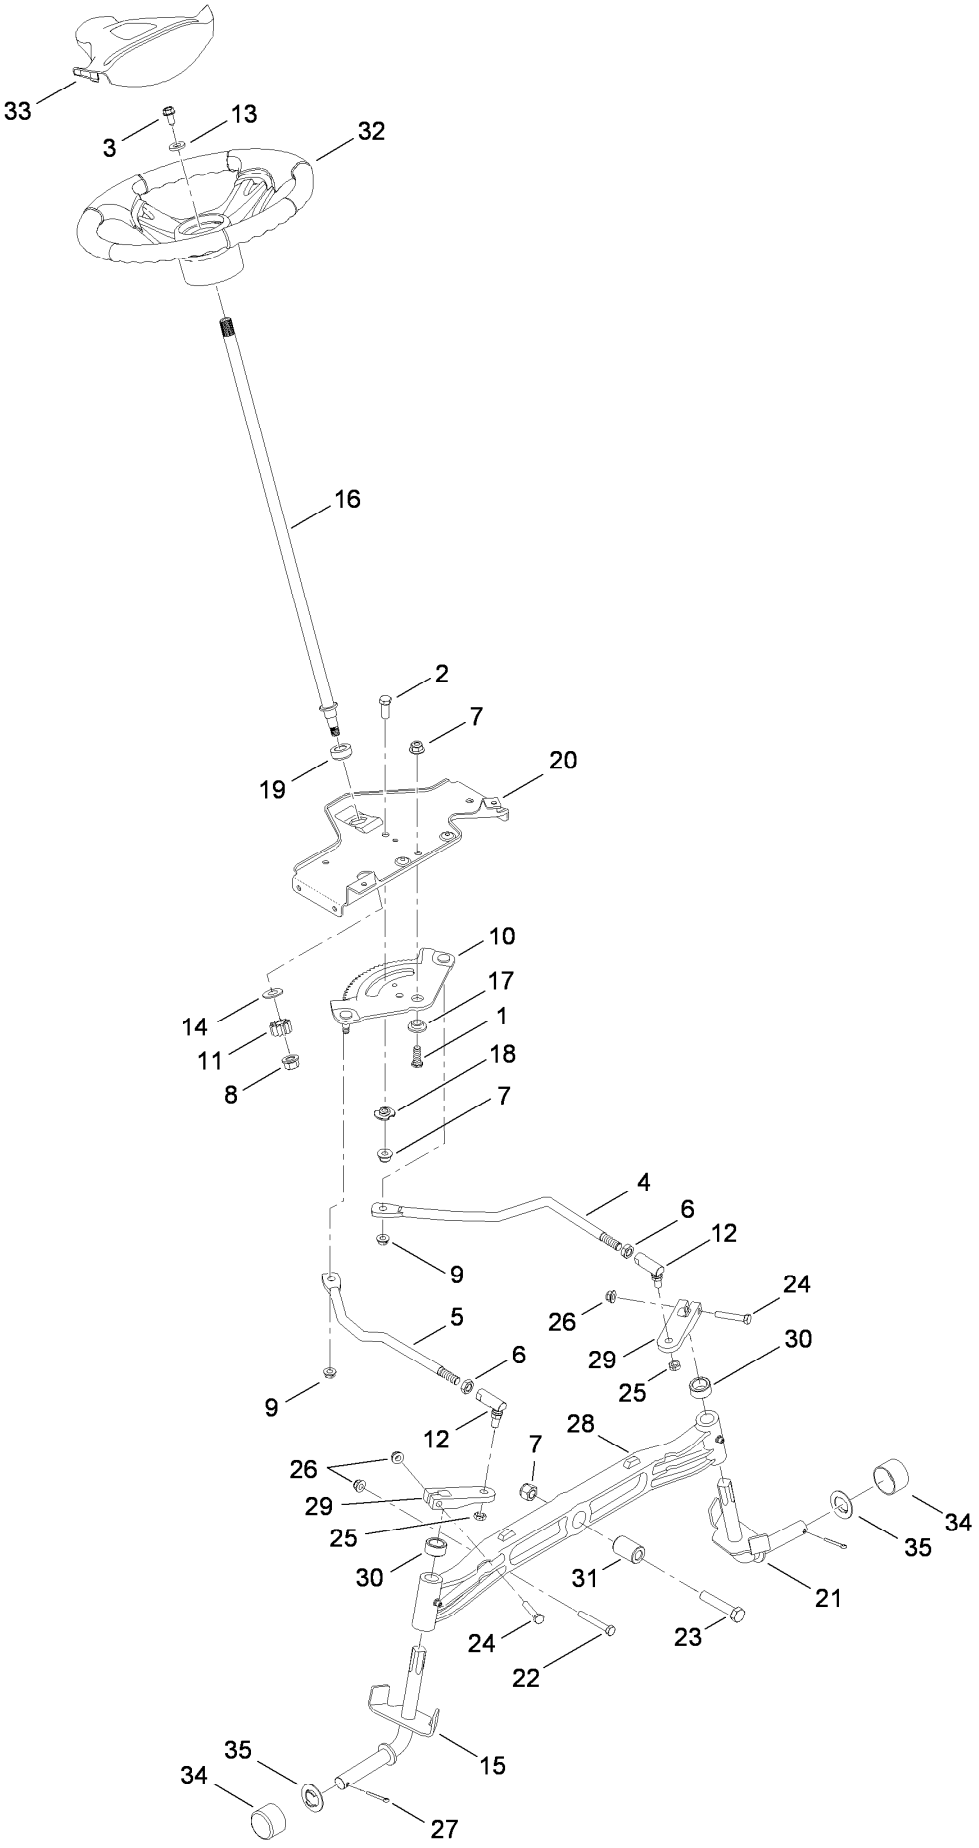

Steering and Front Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-0631	1	Screw-HH
2	112-0492	1	Screw-HH
3	112-0473	1	Screw-HH
4	119-3974	1	Link-Drag, LH
5	119-3975	1	Link-Drag, RH
6	112-0493	1	Nut-Jam
7	112-0668	1	Nut-Lock, Flange
8	112-0859	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange
10	119-3976	1	Gear-Steering
11	112-0863	1	Gear-Pinion, Steering
12	112-0917	1	Ball Joint ASM
13	112-0924	1	Washer-Flat
14	112-0925	1	Washer-Flat
15	119-9080	1	RH Axle ASM
16	112-6097	1	Shaft-Steering
17	119-3977	1	Spacer-Shoulder
18	119-3978	1	Spacer
19	112-6257	1	Bearing-Flange, Hex
20	119-3979	1	Bracket-Support, Steering
21	119-9081	1	LH Axle ASM
22	112-5843	1	Screw-HH
23	112-0611	1	Screw-HH
24	112-1095	1	Bolt-HH
25	112-0483	1	Nut-Hex, Lock
26	112-0650	1	Nut-Lock, Flange
27	112-0860	1	Pin-Cotter
28	119-3982	1	Axle-Cast
29	119-3983	1	Block-Steering
30	112-6136	1	Spacer
31	119-3984	1	Spacer
32	112-0438	1	Wheel-Steering, Softgrip
33	112-0341	1	Cover-Wheel, Steering
34	112-5968	1	Cap-Hub
35	112-6258	1	Washer-Flat


Frame, Battery and Electric PTO Assembly

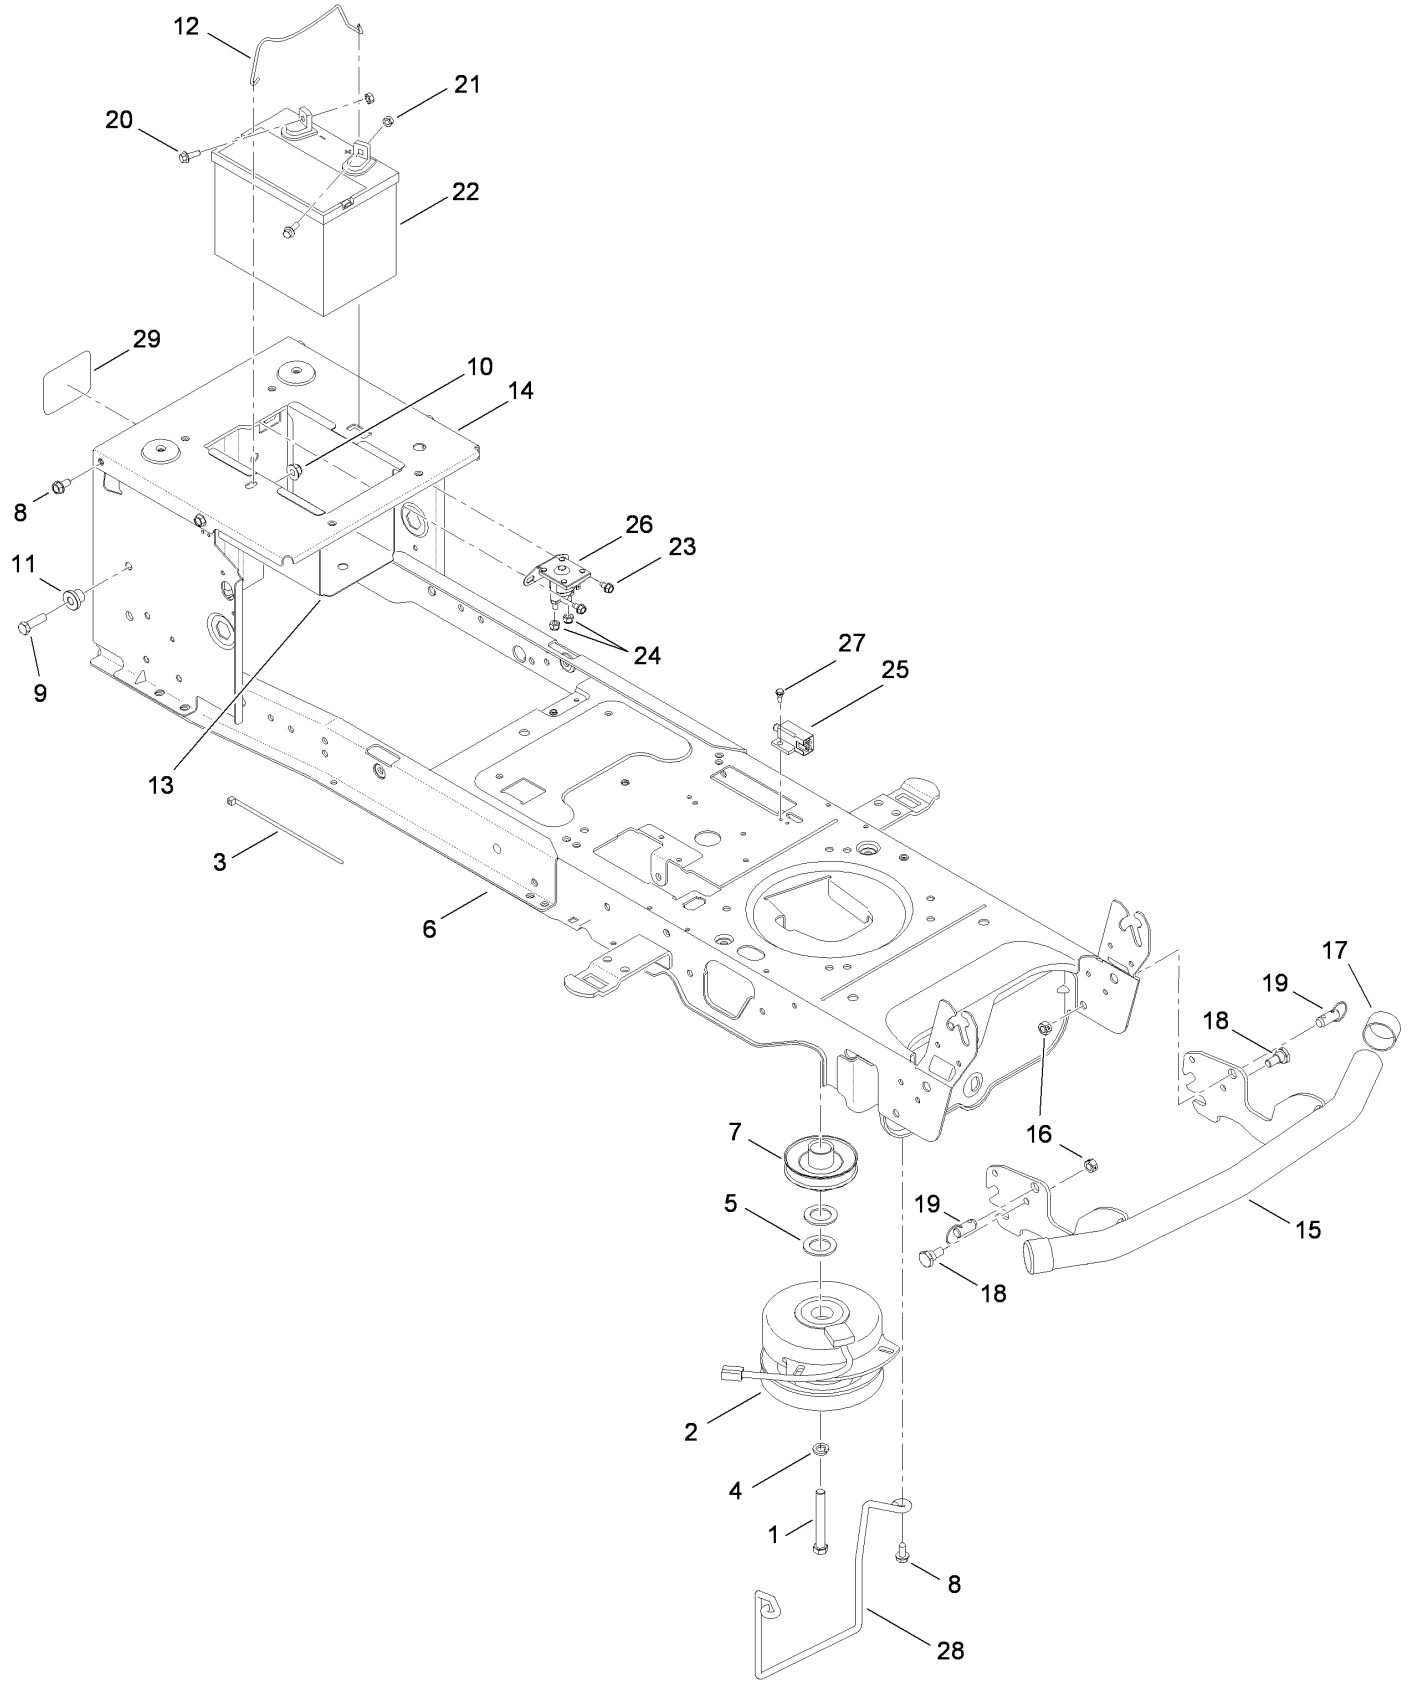

Frame, Battery and Electric PTO Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-0561	1	Screw-HH
2	112-6044	1	Clutch-Electric
3	112-0527	1	Tie-Cable
4	112-0428	1	Washer-Lock
5	112-0420	1	Washer-Flat
6	119-3993	1	Lower Frame ASM
7	112-6045	1	Pulley-Engine
8	112-6070	1	Screw-TAP
9	112-0557	1	Screw-HH
10	112-0668	1	Nut-Lock, Flange
11	112-0661	1	Spacer-Shoulder
12	112-0581	1	Rod-Holddown, Battery
13	112-0570	1	Tray-Battery
14	112-6209	1	Bracket-Frame, Seat
15	119-9071	1	Bumper-Universal
16	112-0909	1	Nut-Lock
17	112-5968	1	Cap-Hub
18	112-0565	1	Bolt-Shoulder
19	119-3954	1	Pin-Release, Quick
20	119-3994	1	Bolt
21	112-0546	1	Nut-Sems
22	112-0425	1	Battery-245, Cca (Dry Flat Top)
23	112-6022	1	Screw-TAP
24	112-0636	1	Nut-Lock, Flange
25	112-6210	1	Switch-Interlock, No/Nc
26	112-6073	1	Solenoid-12V, 2 Post 2 Tab
27	112-6206	1	Bolt-Shoulder
28	119-9082	1	Rod-Keeper, Belt
29	119-8485	1	Decal-Release, Hydro


Seat, Fender and Deck Lift Assembly

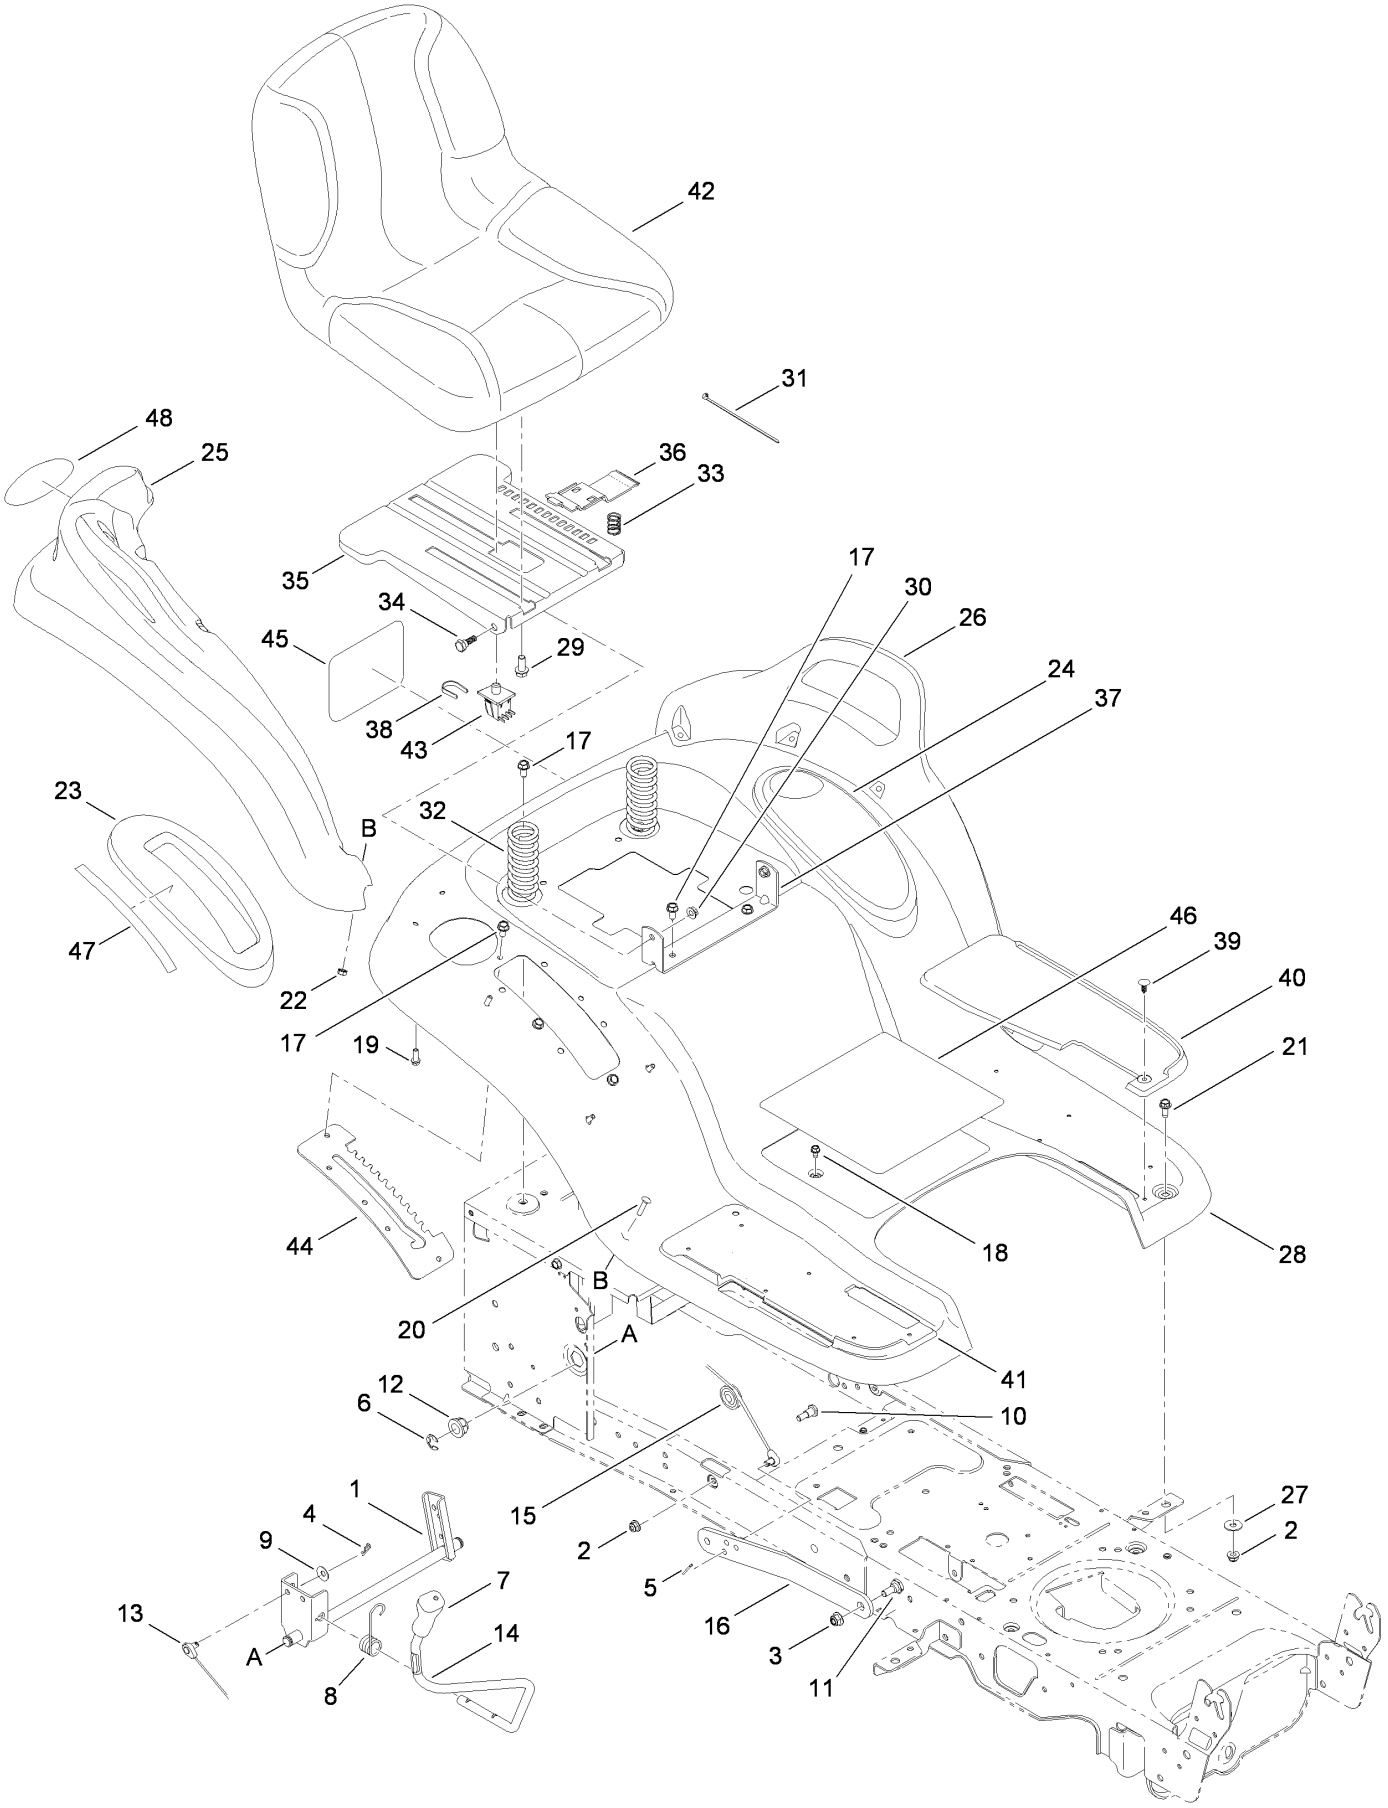

Seat, Fender and Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-6183	1	Lift Shaft ASM
2	112-0650	1	Nut-Lock, Flange
3	112-0668	1	Nut-Lock, Flange
4	112-0459	1	Pin-Cotter
5	112-0990	1	Pin-Cotter
6	112-0586	1	Ring-E
7	112-0585	1	Grip-Handle
8	112-0477	1	Spring-Torsion
9	112-0660	1	Washer-Spring
10	112-0443	1	Bolt-Shoulder
11	112-0442	1	Bolt-Shoulder
12	112-0347	1	Bearing-Flange
13	112-0374	1	Cable-Lift
14	119-3998	1	Handle-Lift
15	119-3999	1	Pulley-Cable
16	119-9106	1	Arm-Lift
17	112-6070	1	Screw-TAP
18	112-0524	1	Screw-HWHTF
19	112-0509	1	Screw-TAP
20	112-0907	1	Screw-CARR
21	112-0395	1	Screw-HWH
22	112-0546	1	Nut-Sems
23	112-6226	1	Cover-Lift, Lever
24	112-0870	1	Cover (W/Cup Holder)
25	112-0871	1	Flare-Fender, RH
26	112-0872	1	Flare-Fender, LH
27	112-0582	1	Washer-Flat
28	119-9083	1	Fender
29	112-6229	1	Screw-HH
30	112-0511	1	Nut-Lock, Flange
31	112-0527	1	Tie-Cable
32	112-6208	1	Spring-Compression
33	112-6234	1	Spring-Compression
34	112-0575	1	Bolt-Shoulder
35	112-6214	1	Bracket-Mount, Seat
36	112-6232	1	Lever-Adjustment, Seat
37	112-6217	1	Bracket-Pivot, Seat
38	119-8400	1	Clip-Retension
39	112-0549	1	Clip-Ratchet, Fastener
40	119-8402	1	Pad-Foot, LH
41	119-8403	1	Pad-Foot, RH
42	112-6215	1	Seat-High
43	119-8404	1	Switch-Seat
44	119-9084	1	Bracket-Lift
45	119-9050	1	Decal-Toro
46	119-8481	1	Decal-Safety
47	119-8477	1	Decal-HOC
48	112-5873	1	Reflector


Fuel Tank, Hood and Dash Assembly

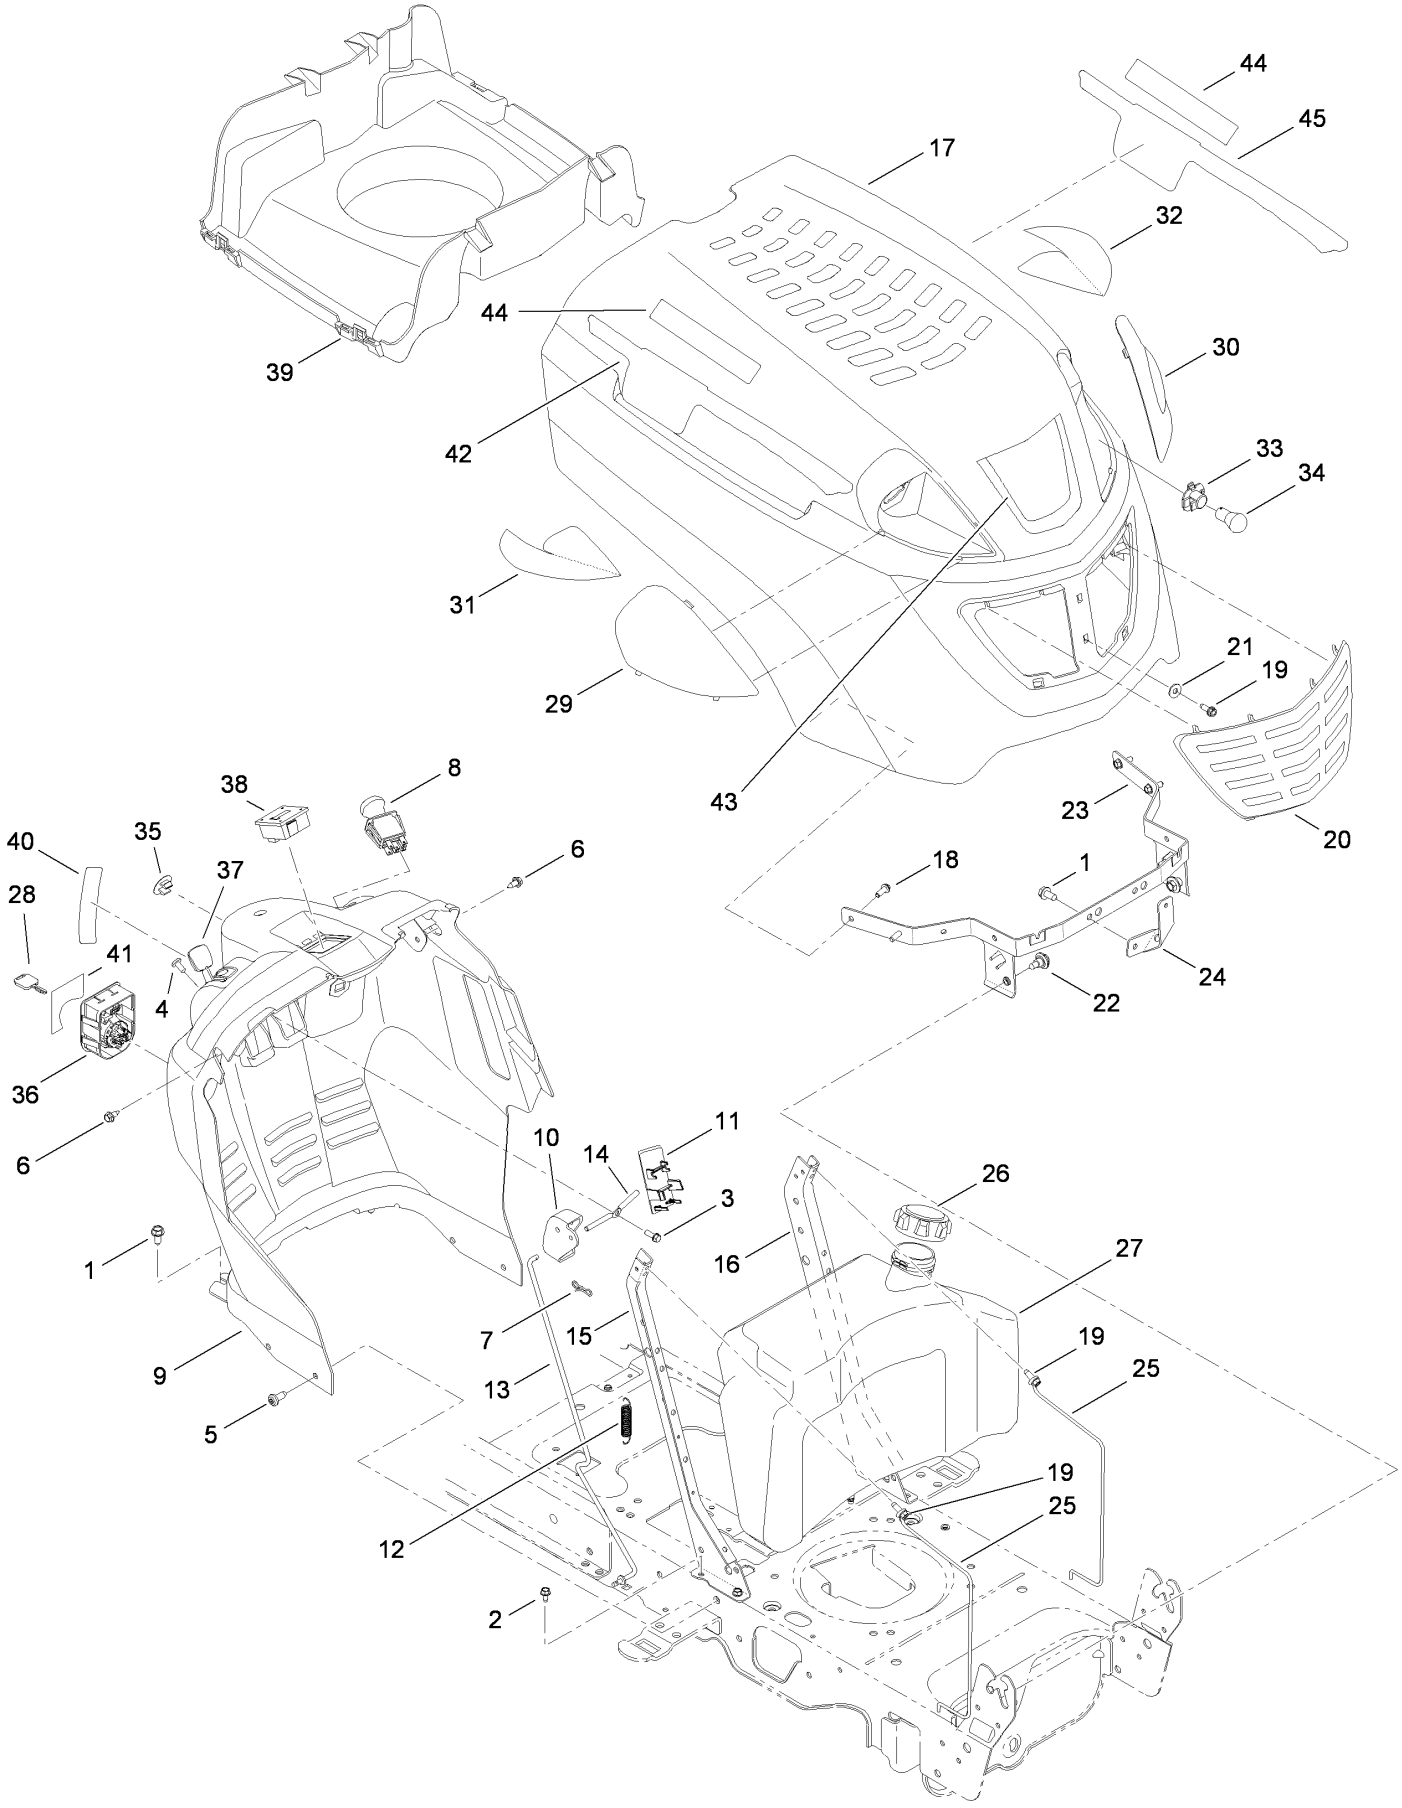

Fuel Tank, Hood and Dash Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-6070	1	Screw-TAP
2	112-0524	1	Screw-HWHTF
3	112-0509	1	Screw-TAP
4	112-0550	1	Screw-TAP
5	112-0563	1	Screw-TAP
6	112-0659	1	Screw-HWH
7	112-0990	1	Pin-Cotter
8	112-0411	1	Switch-Electric, PTO
9	112-6266	1	Dash-Electric, PTO
10	119-8407	1	Lever-Dash
11	119-8408	1	Cover-Cruise
12	119-8409	1	Spring-Extension
13	119-8410	1	Rod-Latch
14	112-0604	1	Rod-Lever, Bent
15	112-6262	1	Support-Dash, Plate (RH)
16	112-6263	1	Support-Dash, Plate (LH)
17	112-0444	1	Hood
18	119-8411	1	Screw
19	112-0587	1	Screw-TAP
20	112-0381	1	Grill
21	112-5989	1	Washer-Flat
22	112-6128	1	Bolt-Shoulder, TAP
23	112-5985	1	Bracket-Pivot
24	112-5986	1	Bracket-Support, Hood
25	112-0678	1	Rod-Support
26	112-6264	1	Cap-Fuel
27	112-6119	1	Tank-Fuel, 3 Gal
28	112-6115	1	Key-Ignition
29	112-0447	1	Lens-RH
30	112-0446	1	Lens-LH
31	112-5810	1	Reflector-RH
32	112-5811	1	Reflector-LH
33	112-0408	1	Socket-Headlight
34	112-0402	1	Lamp-12V, Miniature
35	112-0535	1	Plug-Choke
36	119-8412	1	Module-Switch, Ignition
37	112-6265	1	Cable-Throttle
38	112-6117	1	Meter-Hour
39	112-6141	1	Plenum-Hood
40	112-6283	1	Decal-Throttle
41	119-8479	1	Decal-Switch, Ignition
42	112-5953	1	Decal-Hood, Right Side
43	112-3716	1	Decal-Hood
44	112-5967	1	Decal-Side Panel
45	112-5952	1	Decal-Hood, Left Side


Drive System Assembly

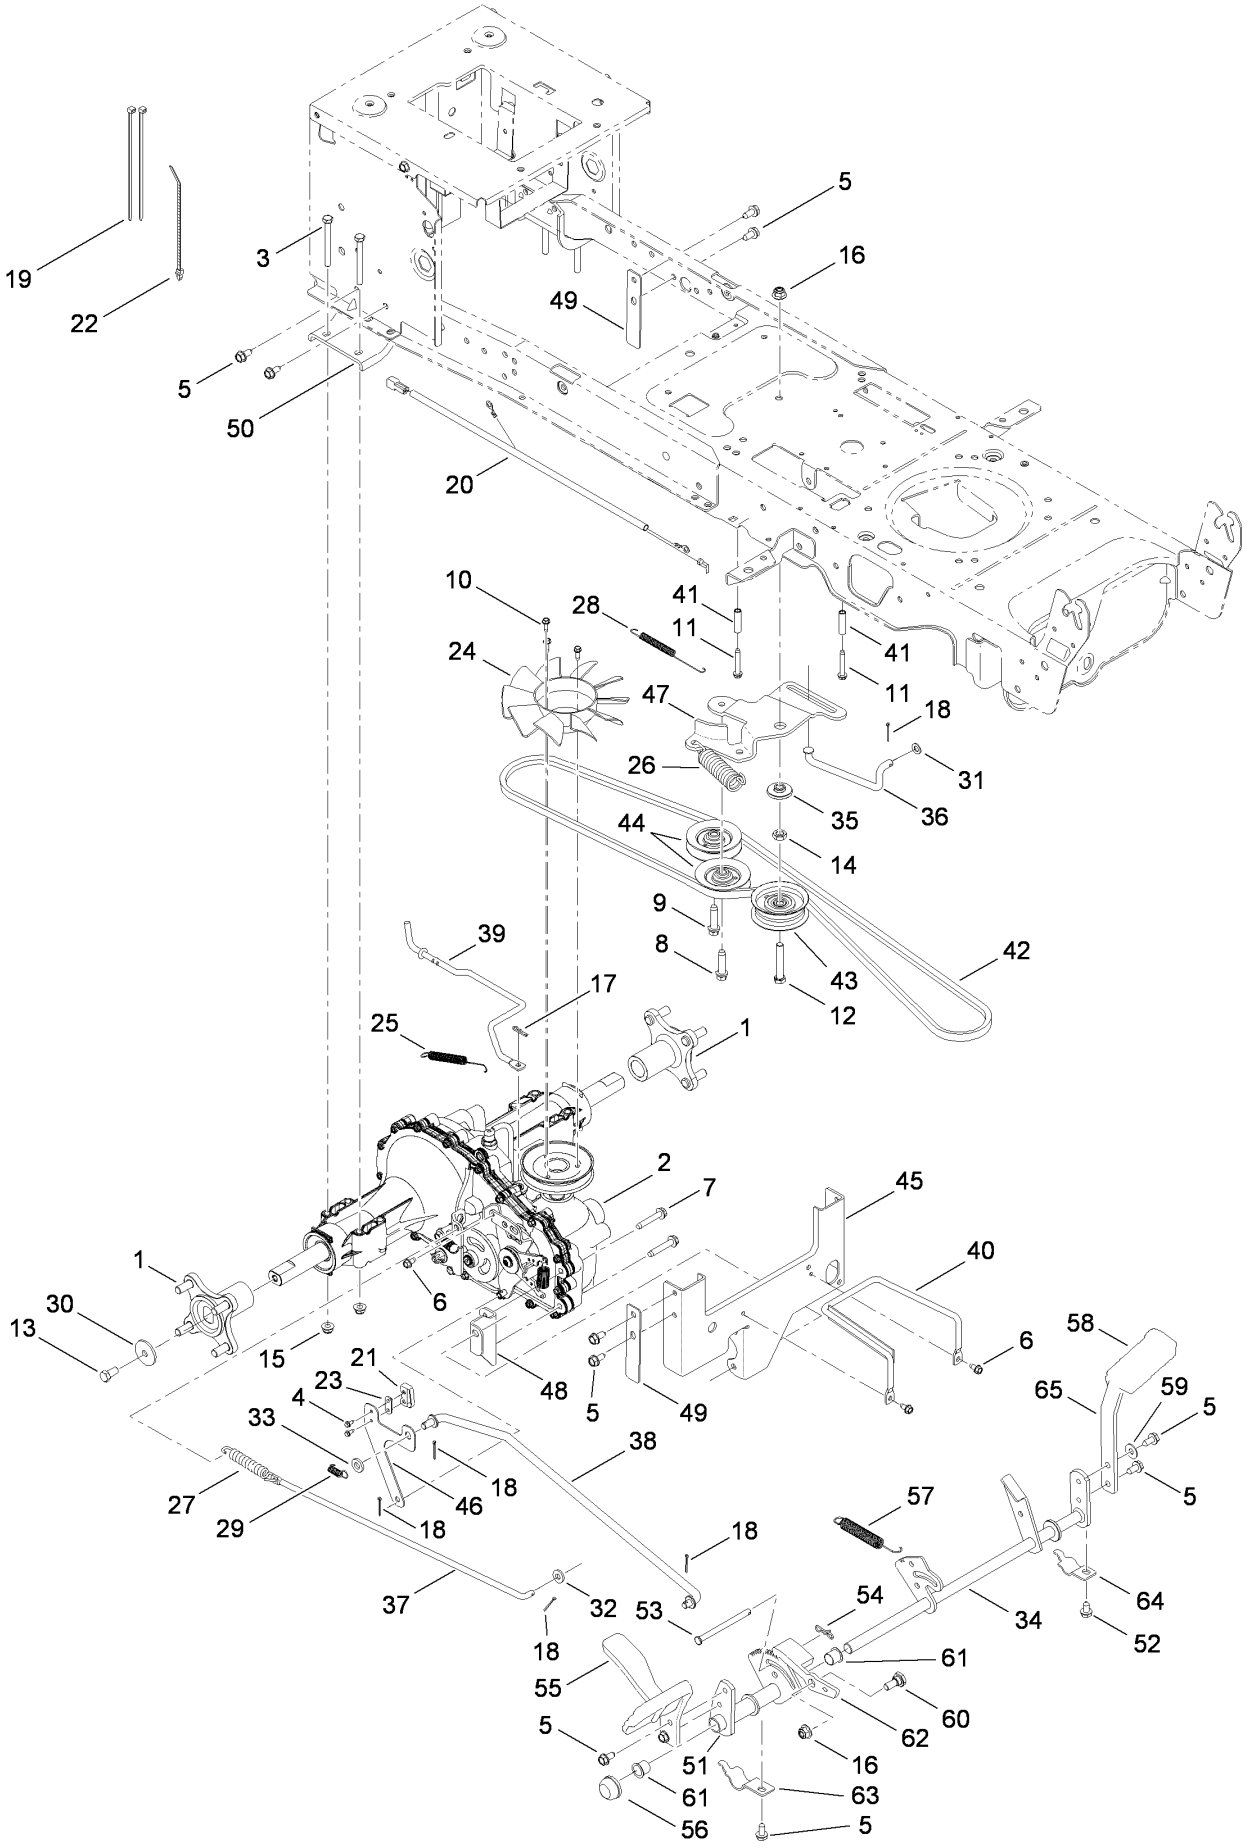

Drive System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-0738	1	Wheel Hub ASM
2	119-9085	1	Transmisson
3	112-6238	1	Screw-HH
4	112-0626	1	Screw-HWHTF
5	112-6070	1	Screw-TAP
6	112-0524	1	Screw-HWHTF
7	119-9086	1	Screw-Taptite
8	112-0469	1	Screw-TAP
9	112-6143	1	Screw-TAP
10	119-9087	1	Screw
11	112-0839	1	Screw-TAP
12	112-6009	1	Screw-HH
13	112-0768	1	Screw-HH
14	112-0493	1	Nut-Jam
15	112-0650	1	Nut-Lock, Flange
16	112-0668	1	Nut-Lock, Flange
17	112-0459	1	Pin-Cotter
18	112-0568	1	Pin-Cotter
19	112-0527	1	Tie-Cable
20	119-8489	1	Harness-Jumper
21	112-0602	1	Switch-Spring, Short
22	112-0866	1	Tie-Cable
23	112-0625	1	Plate-Insulator
24	119-9088	1	Fan-Blade
25	112-6244	1	Spring-Extension
26	119-8491	1	Spring-Extension
27	112-0350	1	Spring-Extension
28	119-3989	1	Spring-Extension
29	112-0875	1	Spring-Extension
30	112-0534	1	Washer-Flat
31	119-8492	1	Washer-Flat
32	112-0579	1	Washer-Flat
33	112-0544	1	Washer-Flat
34	119-8429	1	Brake Control ASM
35	119-8419	1	Spacer-Shoulder
36	119-8420	1	Rod-Bypass, Foot Pedal
37	119-9089	1	Rod-Brake
38	119-9090	1	Rod-Control
39	119-9091	1	Rod-Disengage
40	119-9092	1	Keeper-Belt
41	112-5831	1	Spacer
42	119-9093	1	Belt-V
43	112-0313	1	Pulley-Idler, Flat
44	112-6149	1	Pulley-Idler, Y Type
45	119-9104	1	Bracket-Torque
46	112-6243	1	Bracket-Actuator, Switch
47	119-8427	1	Bracket-Idler, Center Double
48	119-9094	1	Bracket-Deck
49	119-9095	1	Bracket-Plate
50	119-9105	1	Bracket-Axle
51	119-9096	1	Bracket-Pedal, Hydro
52	112-0556	1	Screw-HWH
53	119-8431	1	Pin-Clevis
54	112-0990	1	Pin-Cotter
55	119-8499	1	Pedal-Control
56	119-8432	1	Cap-Push
57	119-8433	1	Spring-Extension
58	119-8434	1	Pad-Pedal, Brake
59	112-0435	1	Washer-Bell
60	112-0442	1	Bolt-Shoulder
61	119-8435	1	Bearing-Flange
62	119-8436	1	Latch-Cruise
63	119-8437	1	Bracket-Strap, Pedal Support
64	119-8438	1	Bracket-Strap, Pedal Support
65	119-8439	1	Bracket-Pedal, Brake

50 Inch Deck Assembly

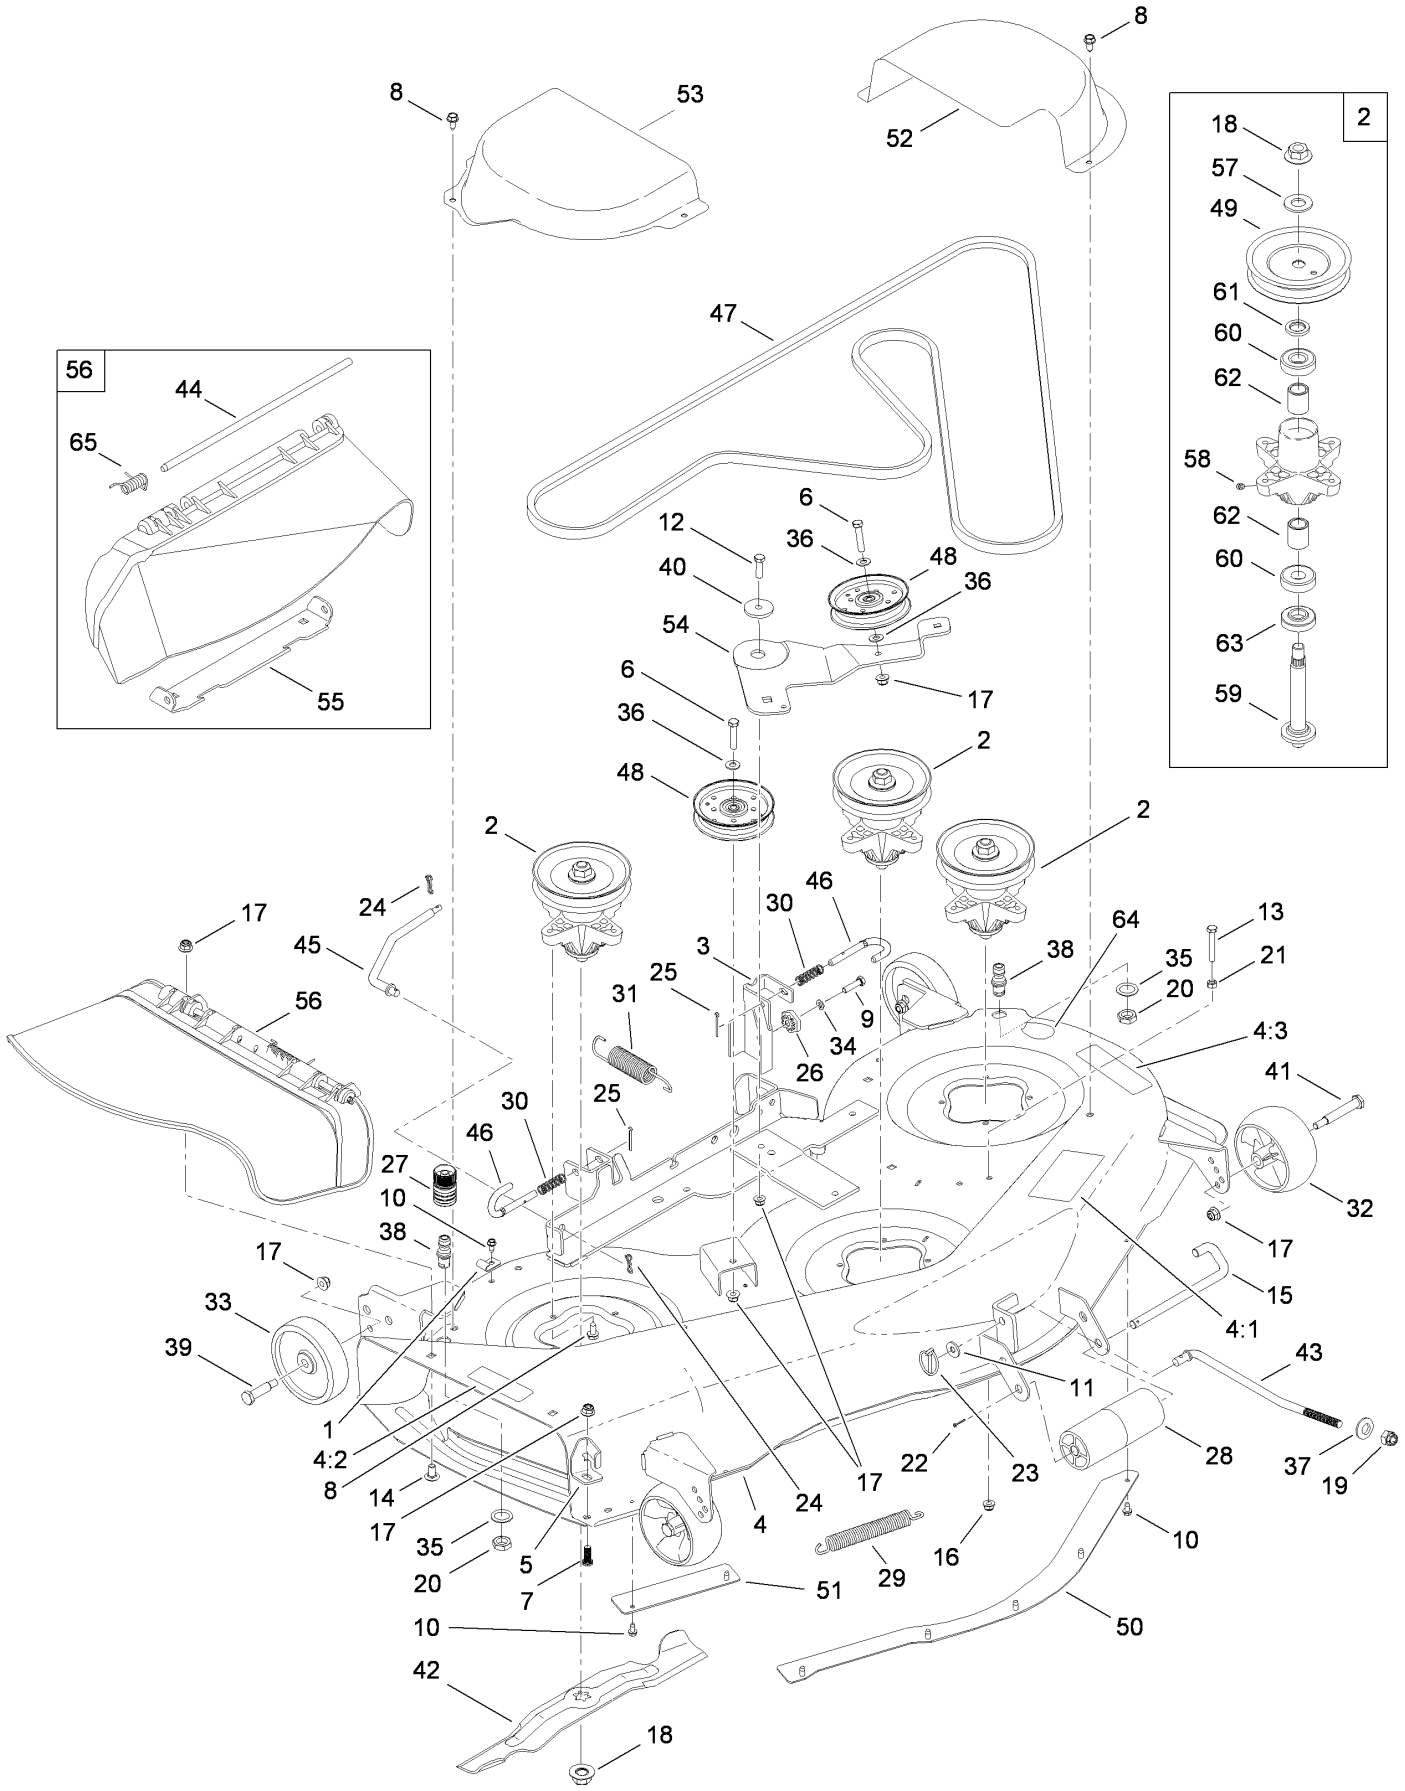

50 Inch Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-0378	1	Bracket-Retain, Hook
2	112-0370	1	Spindle ASM
3	112-0413	1	LH Hanger Bracket ASM
4	119-9097	1	50 Inch Deck ASM
4:1	112-1273	1	Decal-Belt Routing, Deck
4:2	112-6285	1	Decal-Chute
4:3	112-6284	1	Decal-Deck
5	112-0854	1	Stop-Chute
6	112-0513	1	Screw-HH
7	112-0631	1	Screw-HH
8	112-6070	1	Screw-TAP
9	112-0373	1	Screw-HH
10	112-0524	1	Screw-HWHTF
11	119-8454	1	Washer-Flat
12	112-0557	1	Screw-HH
13	112-0590	1	Screw-HH
14	112-0452	1	Bolt-CARR
15	119-9098	1	Pin-Roller
16	112-0650	1	Nut-Lock, Flange
17	112-0668	1	Nut-Lock, Flange
18	112-0330	1	Nut-Lock, Flange
19	119-8449	1	Nut
20	112-0351	1	Nut-Hex
21	112-0437	1	Nut-Hex
22	112-0568	1	Pin-Cotter
23	119-8450	1	Pin-Lynch
24	112-0990	1	Pin-Cotter
25	112-0412	1	Pin-Cotter
26	112-0327	1	Gear-Adjustment, Deck
27	112-0916	1	Adapter-Nozzle, Water
28	112-6185	1	Roller-Front
29	112-6043	1	Spring-Extension
30	119-8451	1	Spring-Compression
31	112-0399	1	Spring-Lift, Assist
32	112-0677	1	Wheel-Deck, Front
33	112-0337	1	Wheel-Deck, Rear
34	112-0366	1	Washer-Lock
35	112-0643	1	Washer-Lock
36	112-0572	1	Washer-Flat
37	119-8455	1	Washer-Bellville
38	112-6274	1	Nozzle-Water, Deck
39	112-0334	1	Bolt-Shoulder
40	112-0584	1	Spacer-Shoulder
41	112-0325	1	Bolt-Shoulder
42	112-6280	1	Blade-Star, 17.90
43	119-9099	1	Rod-Deck Lift, Front
44	119-9100	1	Pin-Hinge
45	119-9101	1	Rod-Deck Sway
46	112-0436	1	Pin-Handle, Deck Release
47	112-0729	1	Belt-V Type
48	112-0314	1	Pulley-Idler
49	112-5926	1	Pulley
50	112-5837	1	Skirt-Center
51	112-0612	1	Skirt-RH
52	112-6041	1	Cover-Belt, LH
53	112-6040	1	Cover-Belt, RH
54	112-6057	1	Bracket-Idler
55	119-9102	1	Bracket-Chute
56	119-9103	1	Chute ASM
57	112-0921	1	Washer-Flat
58	112-0926	1	Fitting-Grease
59	112-0884	1	Shaft-Spindle, Blade (Star)
60	112-0377	1	Bearing-Ball
61	112-6038	1	Spacer
62	112-0389	1	Spacer
63	119-9110	1	Spacer
64	119-8474	1	Decal-Deck Wash System
65	119-9111	1	Spring-Torsion

Attachments and Accessories

For 14AQ94RP848 GT2200 Garden Tractor

Product Name	Model/Part
42 Inch Two-Stage Snowthrower	190-032-101
46 Inch Front Blade	190-833-000
50 Inch Triple Bagger	19A40002000
50 Inch Mulch Kit	77220
10 cu. ft. Poly Dump Cart	79991
17 cu. ft. Poly Dump Cart	79992
125 lb. Tow Spreader	79993
42 Inch Sweeper	79994
48 Inch Dethatcher	79995
40 Inch Spike Aerator	79996
Stake Side Kit	79997

Notes:



Count on it.