FORM NO. 3317–887


TORO®

MODEL NO. 73401–590261 & UP

PARTS CATALOG


WHEEL HORSE®

314–H Garden Tractor

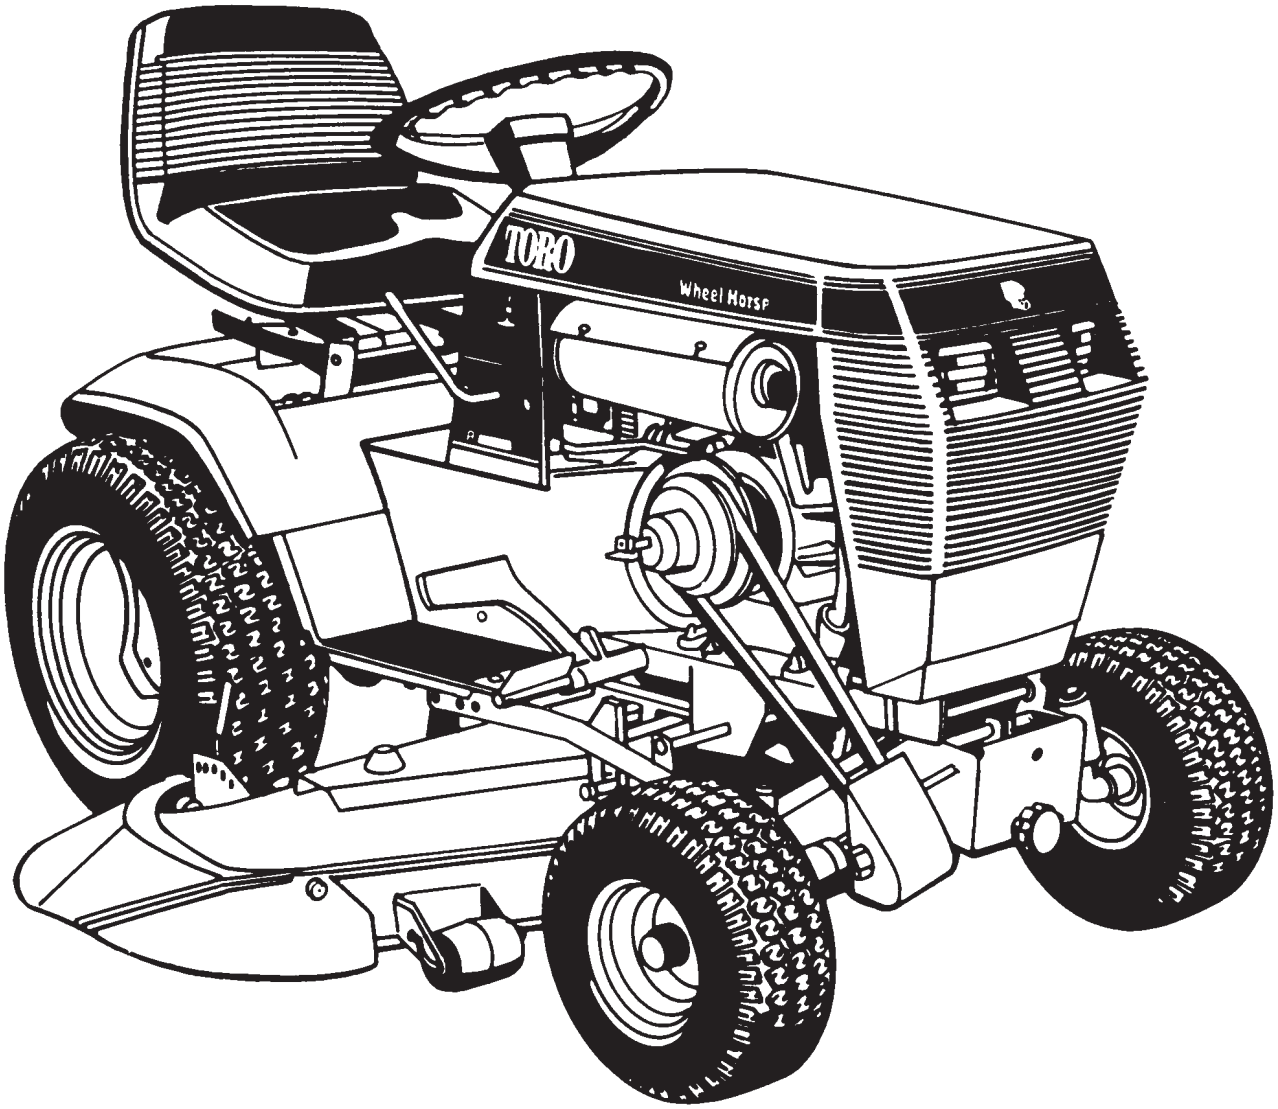

© The TORO Company –1995
All Rights Reserved

TPS

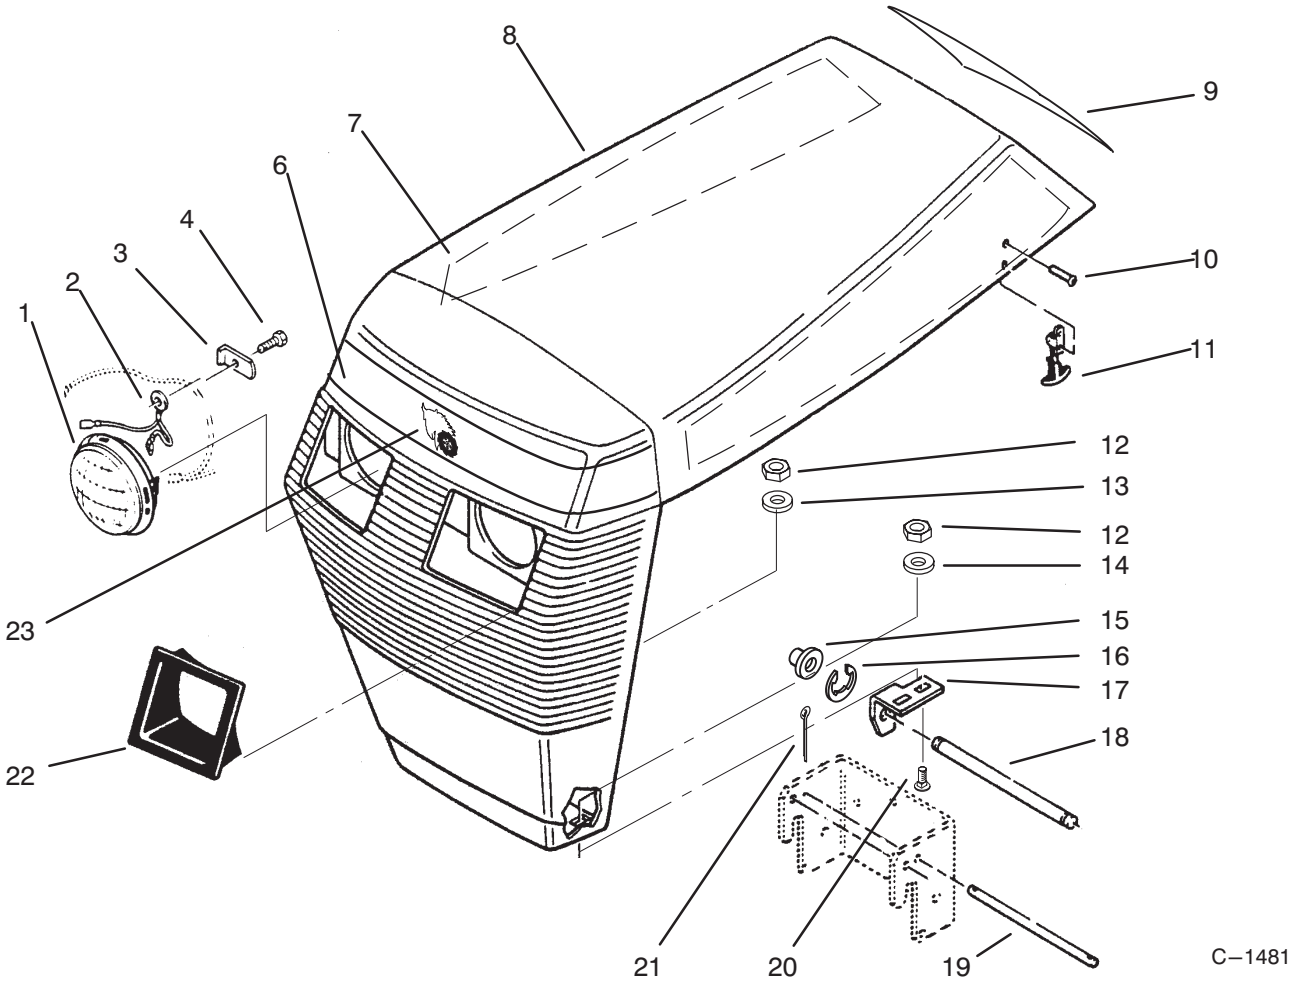


HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	102881	Headlight	2
2	108130	Wire − Headlight Ground	1
3	109459	Clamp	2
4	926671	Bolt	2
6	92−9826	Decal − Hood, Front	1
7	92−9825	Decal − Hood RH	1
*	92−9824	Decal − Hood LH	1
8	88−2782	Hood (Incl. Ref. # 9)	1
9	92−9837	Decal − Danger	1
10	117432	Rivet − Pop	4
11	117344	Handle Assembly	2
12	3296−42	Nut	4

Ref. No.	Part No.	Description	No. Used
13	3254−2	Washer − Intl. T	1
14	3256−22	Washer	3
15	5979	Bushing − Hood Pivot	2
16	105797	Ring − Retaining	2
17	116747	Bracket − LH	1
*	116746	Bracket − RH	1
18	116745	Rod − Pivot	1
19	101850	Rod − Hood Stop	1
20	3229−25	Bolt − Carriage	4
21	3272−1	Pin − Cotter	2
22	109495	Retainer − Headlight LH	1
*	109494	Retainer − Headlight RH	1
23	92−9836	Decal − Logo	1


*Not Illustrated

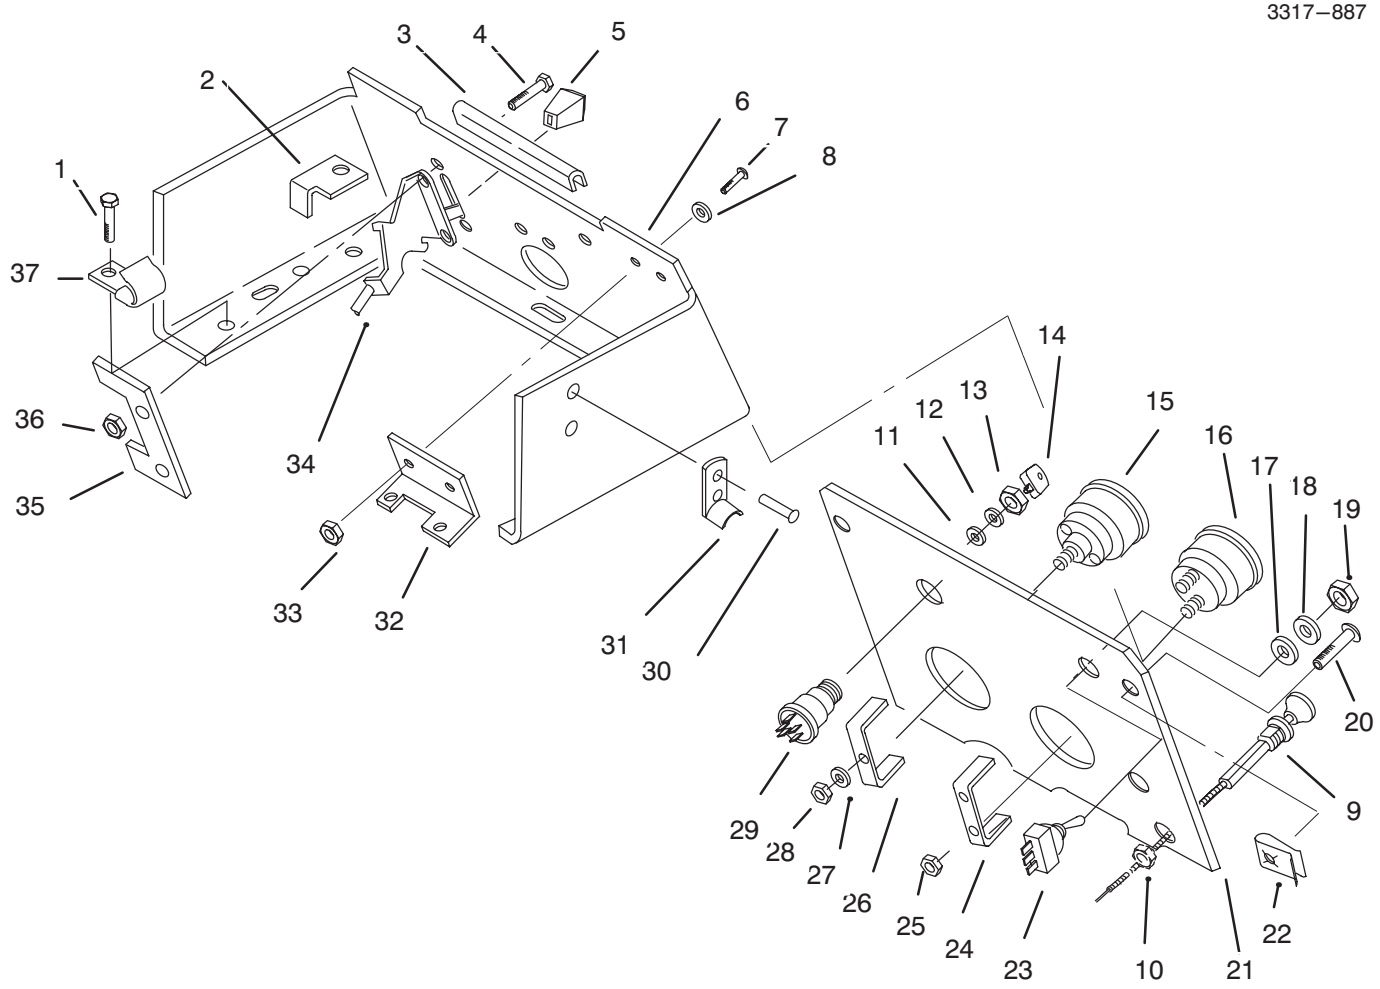

CONTROL PANEL

Ref. No.	Part No.	Description	No. Used
1	9266944	Screw – Hex. Washer Hd.	3
2	112415	Stop – PTO	1
3	111757	Edging – Console	1
4	910792	Screw	6
5	66–0120	Knob – Control	1
6	78–5610	Console	1
7	910762	Screw	2
8	920150	Washer – Lock	2
9	112214	Control – Choke	1
10	109530	Nut	1
11	920262	Washer – Special	1
12	920160	Washer – IntL. T	1
13	101884	Nut – Special	1
14	62–7770	Key – Ignition, Padded	1
15	78–0020	Meter – Hour (Incl. Ref.# 27–28)	1
16	79–0060	Meter – Volt (Incl. Ref.# 24–25)	1
17	9202594	Washer – Special	1
18	102950	Ring – Retaining	1
19	113179	Nut	1

Ref. No.	Part No.	Description	No. Used
20	910837	Screw	7
21	78–5620	Plate – Hood Stand	1
22	8830	"J"Clip	2
23	102138	Switch – Light (Incl. Ref. #17–19)	1
24	78–0080	Clamp – Volt Meter	1
25	5924	Nut	2
26	78–3320	Clamp – Steel	1
27	3255–25	Washer – Lock	1
28	3217–27	Nut – Hex	1
29	116338	Switch – Ignition (Incl. Ref.#11–13)	1
30	117431	Rivet – Pop	4
31	117343	Latch – Hood	2
32	112506	Bracket – Indicator Lights	1
33	915960	Nut	2
34	115854	Control – Throttle	1
35	120590	Stop – Throttle	1
36	915740	Nut – Lock	2
37	111392	"J"Clip	1

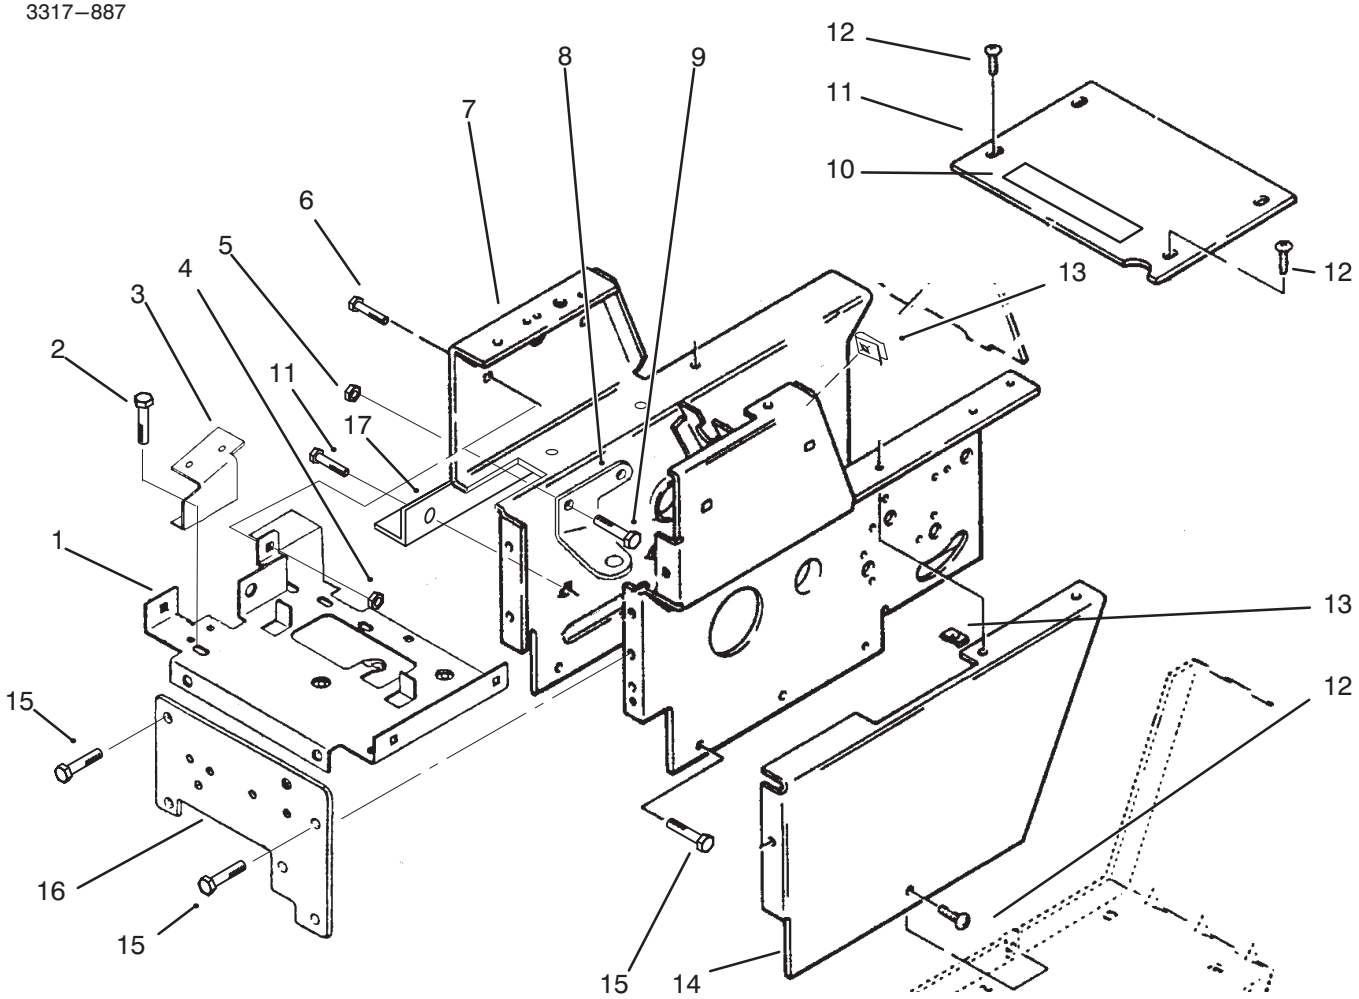


HOOD STAND AND SUPPORTS

Ref. No.	Part No.	Description	No. Used
1	78–3010	Bracket – Battery Support	1
2	9266714	Screw – Hex. Hd..	13
3	115411	Support – Switch	1
4	9151126	Nut	4
5	3296–29	Nut – Lock	2
6	117371	Bolt – Carriage	4
7	92–1525	Hoodstand	1
8	78–1540	Bracket – Lower Control	1
9	322–3	Screw – Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
10	92–8946	Decal – Danger	1
11	92–7296	Plate – Shift Cover (Incl. Ref.#10)	1
12	910837	Screw	7
13	107069	Nut – Speed	7
14	79–5130	Cover – Side, LH	1
15	9266944	Screw – Hex. Hd.	11
16	78–3020	Plate – Front	1
17	106209	Angle – Belt Guard	1


*Not Illustrated

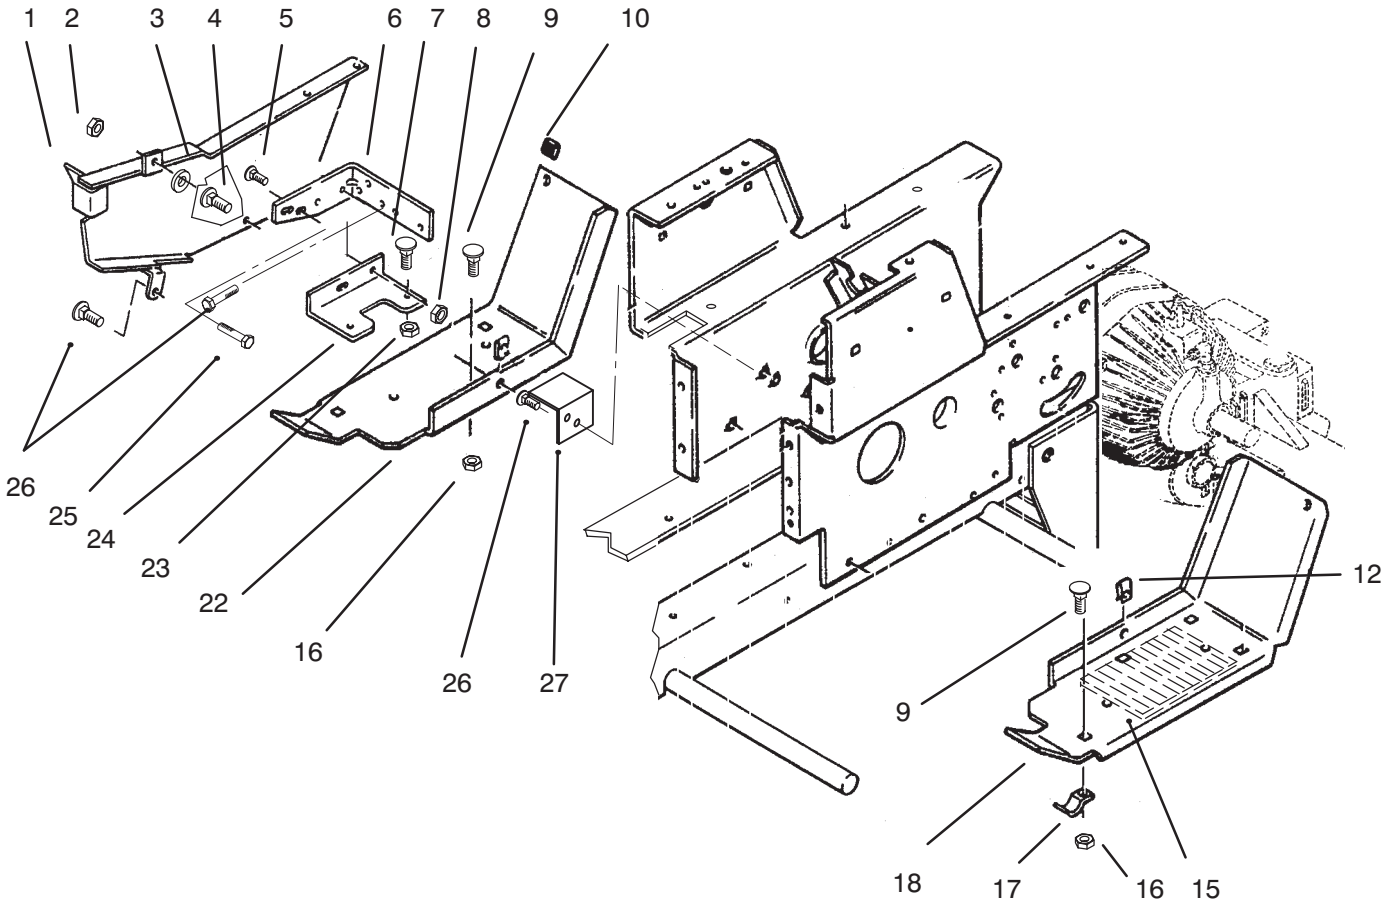

BELT GUARD & FOOTRESTS

Ref. No.	Part No.	Description	No. Used
1	107975	Belt Guard Asm	1
2	3296—29	Nut — Lock	7
3	108457	Nut — Push	1
4	910837	Bolt — Carriage	9
5	321—4	Bolt	2
6	109554	Bracket — Belt Guard	1
7	910794	Screw — Machine	2
8	3296—42	Nut	1
9	116000	Bolt — Carriage	4
10	518211	Bumper	2
12	107069	Clip	3

Ref. No.	Part No.	Description	No. Used
15	110636	Pad — Footrest	2
16	3296—29	Nut	11
17	7456	Clamp	4
18	106223	Footrest — LH	1
22	106222	Footrest — RH	1
23	915740	Nut	4
24	117331	Bracket — Fuse Holder	1
25	3230—1	Bolt	1
26	9266944	Bolt	6
27	108537	Bracket Belt	1

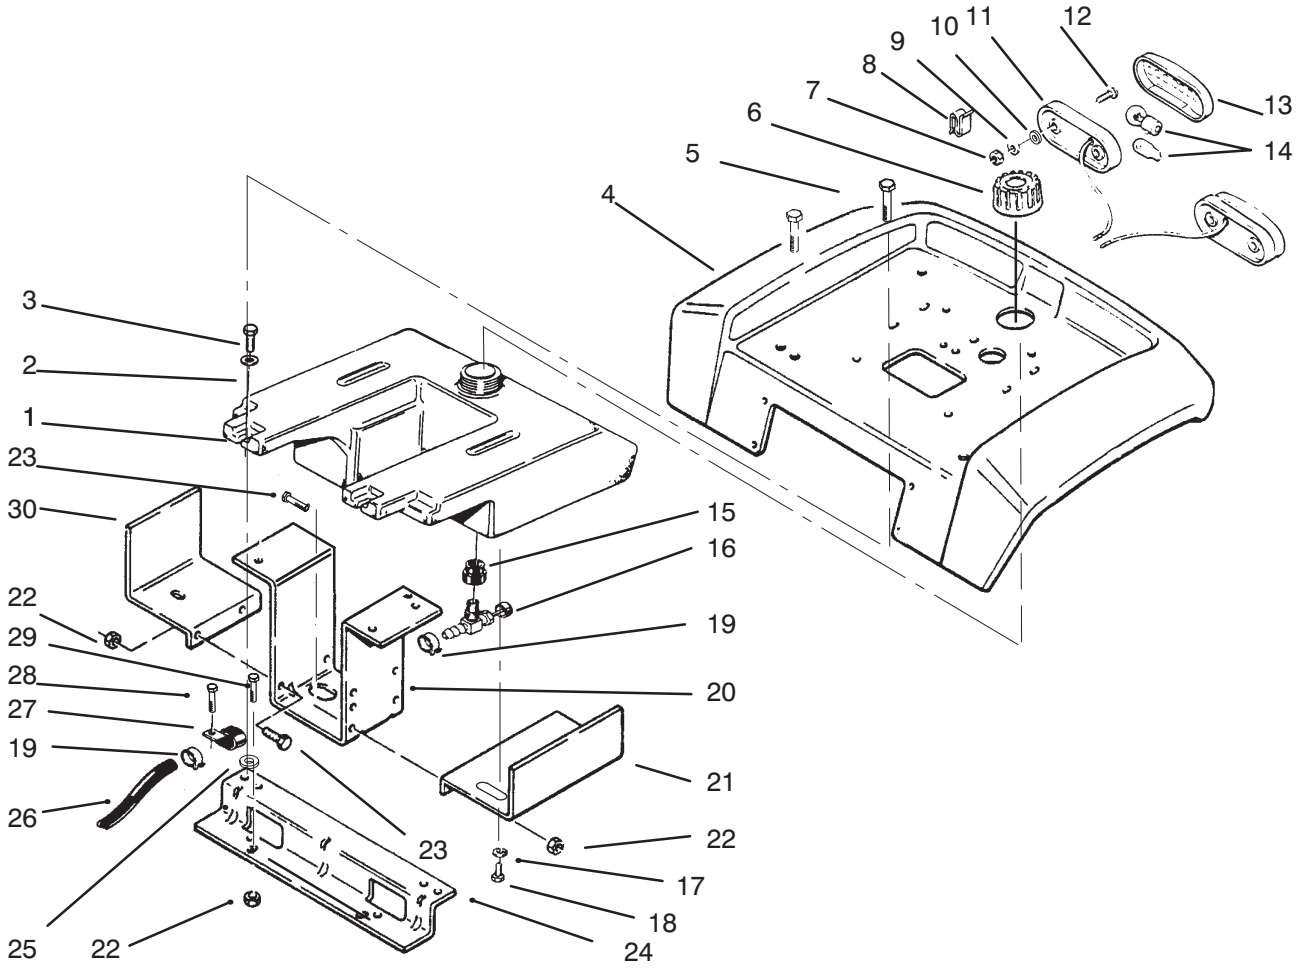


FENDER, FENDER SUPPORTS AND FUEL TANK

Ref. No.	Part No.	Description	No. Used
1	106234	Tank – Fuel	1
2	3256–4	Washer	2
3	926697	Bolt	2
4	110960	Fender	1
5	9266944	Bolt	2
6	55–3570	Fuel Cap	1
7	3296–27	Nut	4
8	3023	Clip – Small	1
9	3256–21	Washer	4
10	3254–1	Washer – Lock	4
11	105202	Base – Taillight, w/Bulb	2
12	910808	Screw	4
13	112564	Lens – Taillight	2
14	8043	Bulb – Light, Metal Base	2
*	109045	Bulb – Light, All Glass	2
15	104047	Bushing	1

Ref. No.	Part No.	Description	No. Used
16	104048	Valve – Fuel Shut–Off	1
17	3253–4	Washer – Lock	2
18	322–2	Bolt	2
19	2412–98	Clamp	2
20	79–4990	Bracket – Fender Support	1
21	108464	Support – Fuel Tank, LH	1
22	3296–29	Nut	6
23	322–3	Bolt	6
24	107951	Bracket – Fender Front	1
25	3256–23	Washer	2
26	92–9511	Line – Fuel 62”	1
27	8830	”J”Clip	1
28	3235–22	Screw – Hex. Hd.	1
29	322–5	Screw – Hex. Hd.	2
30	106236	Support – Fuel Tank, RH	1

*Not Illustrated

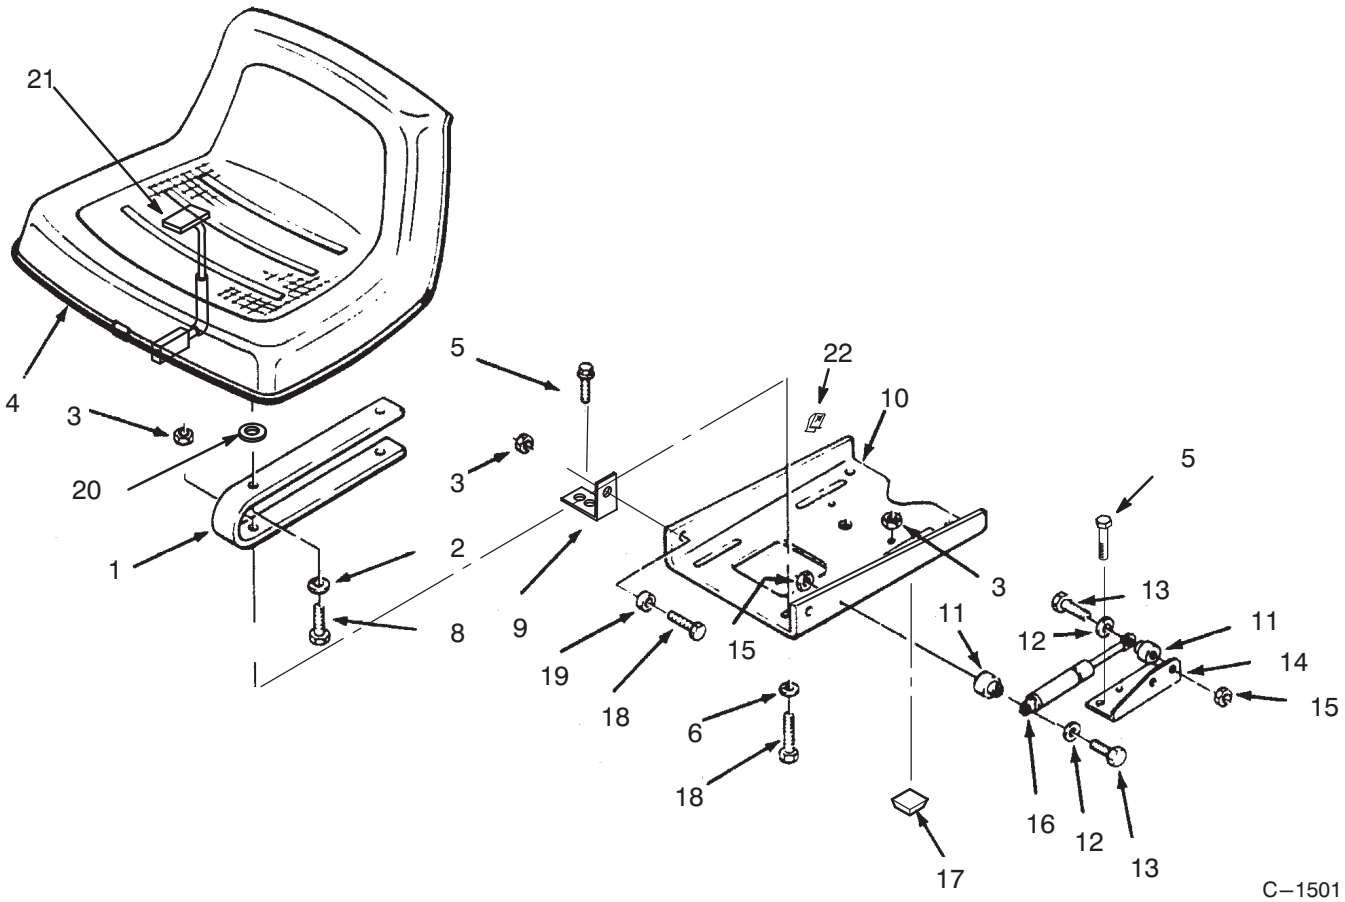


SEAT

Ref. No.	Part No.	Description	No. Used
1	110920	Spring – Seat	2
2	3253–4	Washer – Lock	4
3	3296–29	Nut – Lock	6
4	79–0670	Seat	1
5	92–6697	Screw	4
6	3256–23	Washer	4
8	322–5	Screw – Hex. Hd.	4
9	105524	Bracket – Pivot	2
10	78–2990	Plate – Seat Pivot	1
11	114344	Spacer	2
12	3256–22	Washer	2

Ref. No.	Part No.	Description	No. Used
13	321–8	Screw – Hex. Hd.	2
14	114345	Bracket	1
15	3296–42	Nut – Lock	2
16	114343	Spring – Gas	1
17	111071	Bumper	2
18	322–4	Screw – Hex. Hd.	6
19	105503	Bushing	2
20	109989	Spacer	4
21	38–1420	Switch – Seat	1
22	3023	Clip – Speed	1

*Not Illustrated


FRONT AXLE AND STEERING

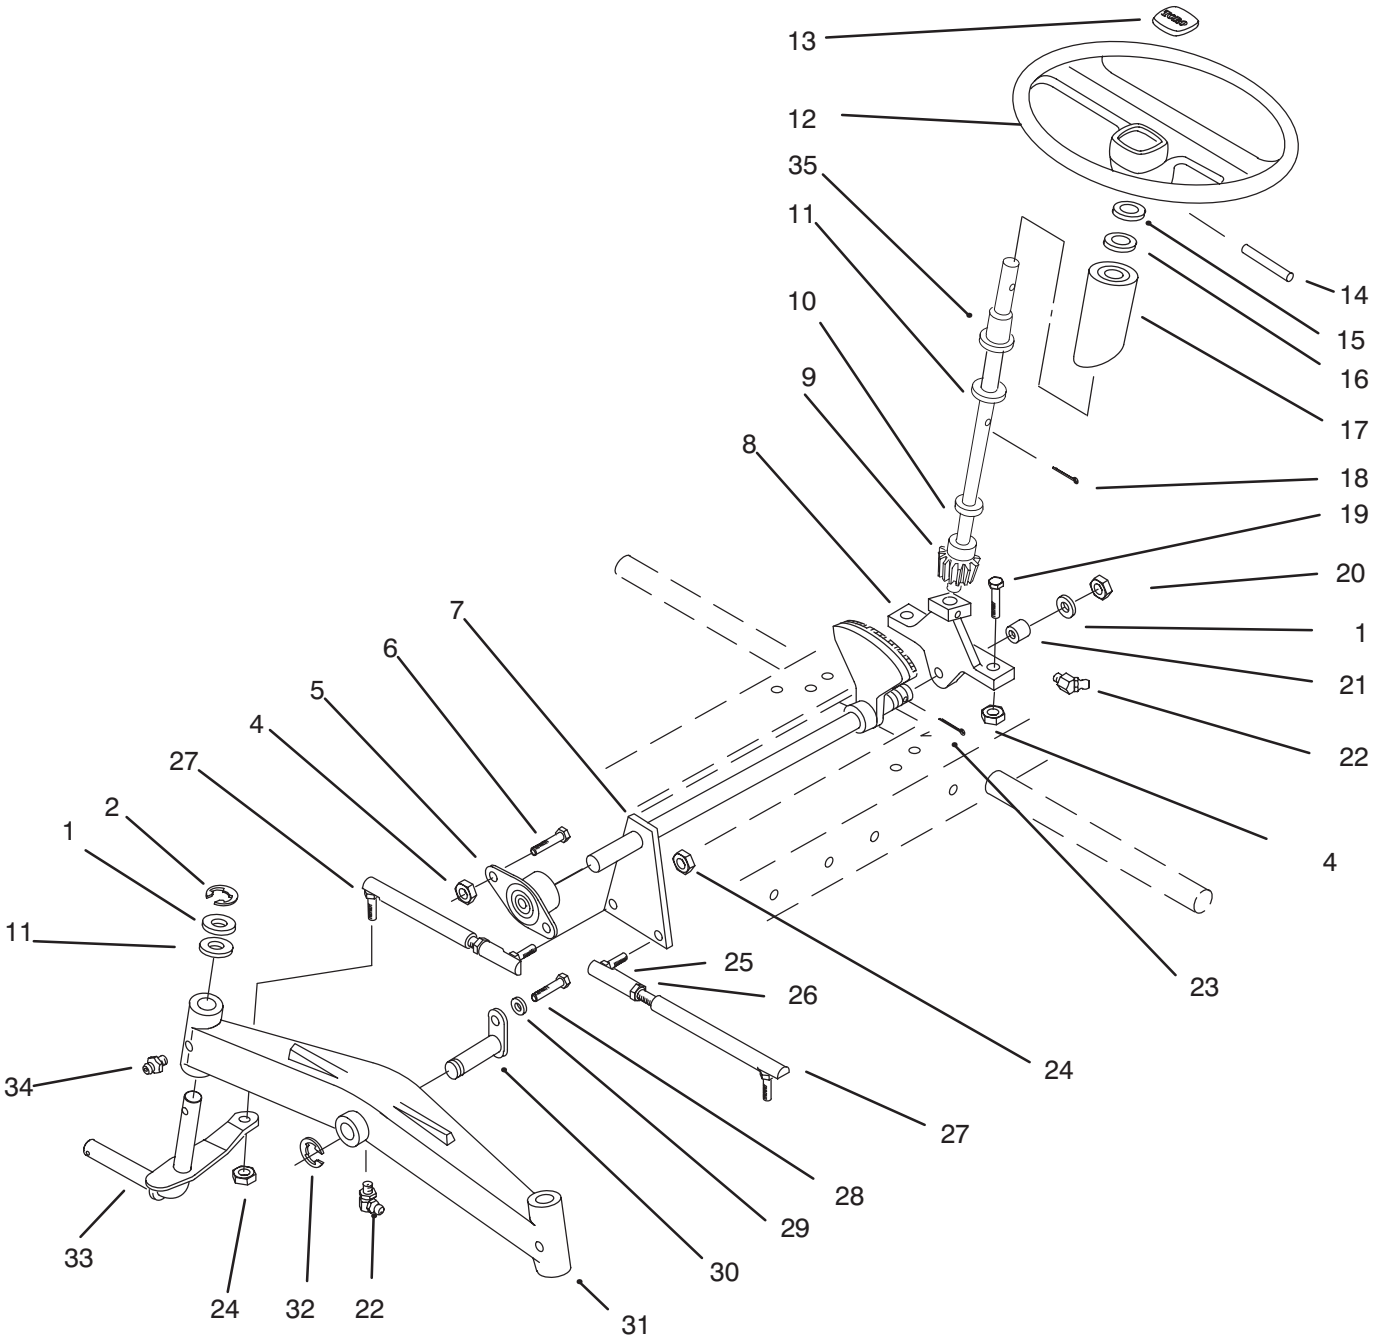

FRONT AXLE AND STEERING

Ref. No.	Part No.	Description	No. Used
1	1278	Washer – Shim	3
2	32120–93	Ring – Retaining	2
4	3296–39	Nut – Lock	4
5	6472	Bearing – Flanged	1
6	323–6	Bolt	2
7	78–2880	Shaft – Lower	1
8	88–2710	Support – Steering Shaft	1
9	92–4987	Shaft – Upper	1
10	237–69	”O”Ring	1
11	5210	Washer – Shim	A/R
12	76–1420	Steering Wheel (Incl. Ref. #13)	1
13	78–0370	Insert	1
14	32121–111	Pin – Spirol	1
15	7896	Washer – Bowed	1
16	109262	Washer – Special	2
17	113443	Tube – Steering	1
18	3272–21	Pin – Cotter	1
19	323–8	Bolt	2
20	32136–5	Nut – Slotted	1
21	6397	Bearing	1
22	1481	Fitting – Grease, 45°	2
23	3272–19	Pin – Cotter	1
24	3296–6	Nut	4
25	78–2920	Tie Rod End	2
26	3219–3	Nut	2
27	78–2900	Tie Rod Assembly (Incl. Ref. # 25 & 26)	2
28	322–1	Bolt	1
29	3253–4	Washer – Lock	1
30	6216	Pin & Plate	1
31	5638	Axle	1
32	5618	Ring – Retaining	1
33	113381	Spindle – LH	1
*	113382	Spindle – RH	1
34	302–5	Fitting – Grease, Straight	2
35	109189	Bearing	1


*Not Illustrated

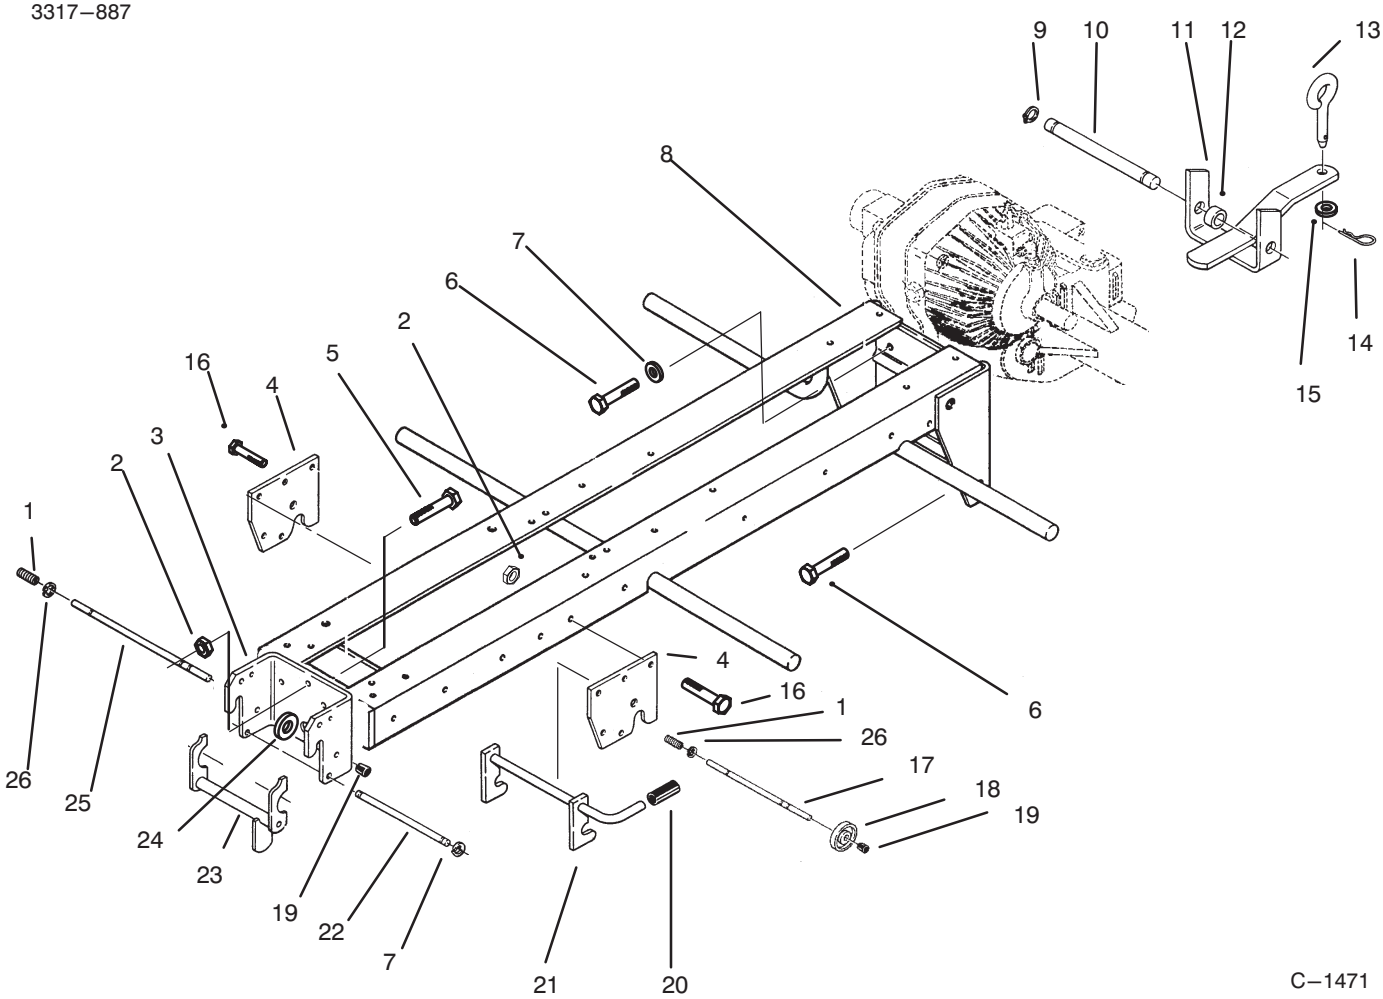

FRAME & HITCHES

Ref. No.	Part No.	Description	No. Used
1	8616	Spring	2
2	3296–39	Nut	9
3	101711	Housing – Front Hitch	1
4	102644	Plate – Mid Hitch	2
5	3231–25	Bolt – Carriage	3
6	323–5	Bolt	4
7	3253–21	Washer – Lock	4
8	78–2680	Frame	1
9	5618	Ring – Retaining	2
10	105269	Shaft – Drawbar Hitch	1
11	1644	Hitch – Drawbar	1
12	9791204	Spacer	2
13	106634	Pin – Hitch	1


Ref. No.	Part No.	Description	No. Used
14	9335054	Pin – Cotter	1
15	3256–26	Washer – Flat	1
16	323–44	Screw – Hex. Hd..	6
17	101017	Rod – Mid Hitch Lock	1
18	83–6520	Rod – Lock	1
19	105316	Cap – Lock Rod	2
20	9038	Grip	1
21	117930	Latch – Mid Hitch	1
22	101750	Rod – Pivot Latch	1
23	93–1613	Latch – Front Hitch	1
24	101707	Lock – Attachment	1
25	101751	Rod – Lock	1
26	105797	Ring – Retaining	6

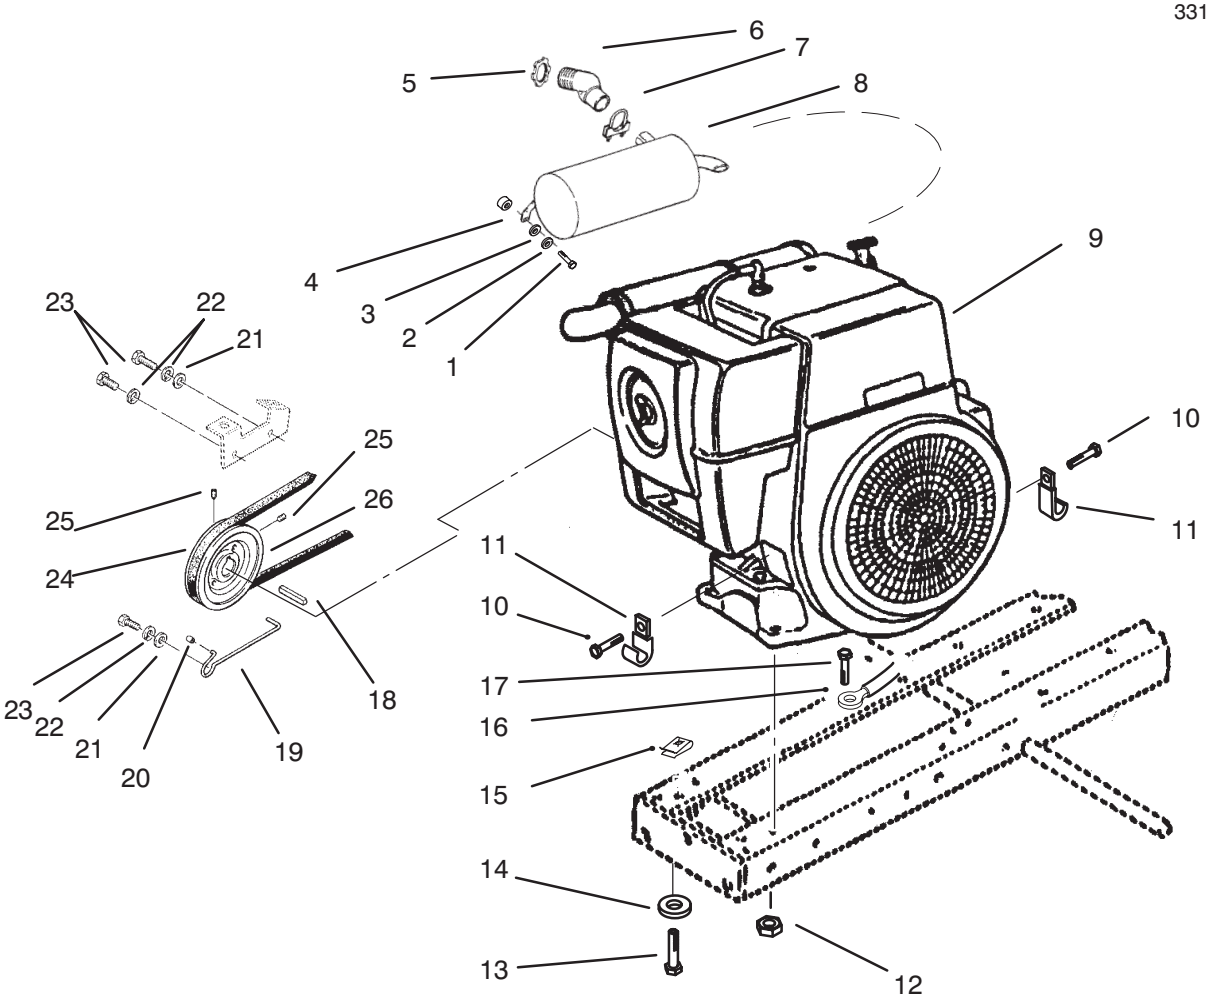

ENGINE, MUFFLER, PULLEY & DRIVE BELT

Ref. No.	Part No.	Description	No. Used
1	322–7	Bolt	1
2	3253–4	Washer	1
3	3256–23	Washer	1
4	6876	Spacer	1
5	KH10535	Nut – Lock	1
6	KH10278	Elbow	1
7	106858	Clamp	1
8	112213	Muffler	1
9	92–1532	Engine – 14HP Kohler	1
10		Screw (Engine) Ref	
11	8830	”J”Clip	1
12	3296–39	Nut	2
13	323–6	Bolt	2

Ref. No.	Part No.	Description	No. Used
14	3253–21	Washer – Lock	2
15	3023	Clip – Wire	1
16	109910	Wire – Ground	1
17	323–8	Bolt	2
18	105453	Key	1
19	111242	Guide – Belt, Bottom	1
20	112841	Cap	1
21	3256–25	Washer	3
22	3253–6	Washer – Lock	3
23	324–5	Bolt	3
24	108501	Belt – Drive	1
25	3246–2	Screw – Set	2
26	7443	Pulley – Engine Drive	1

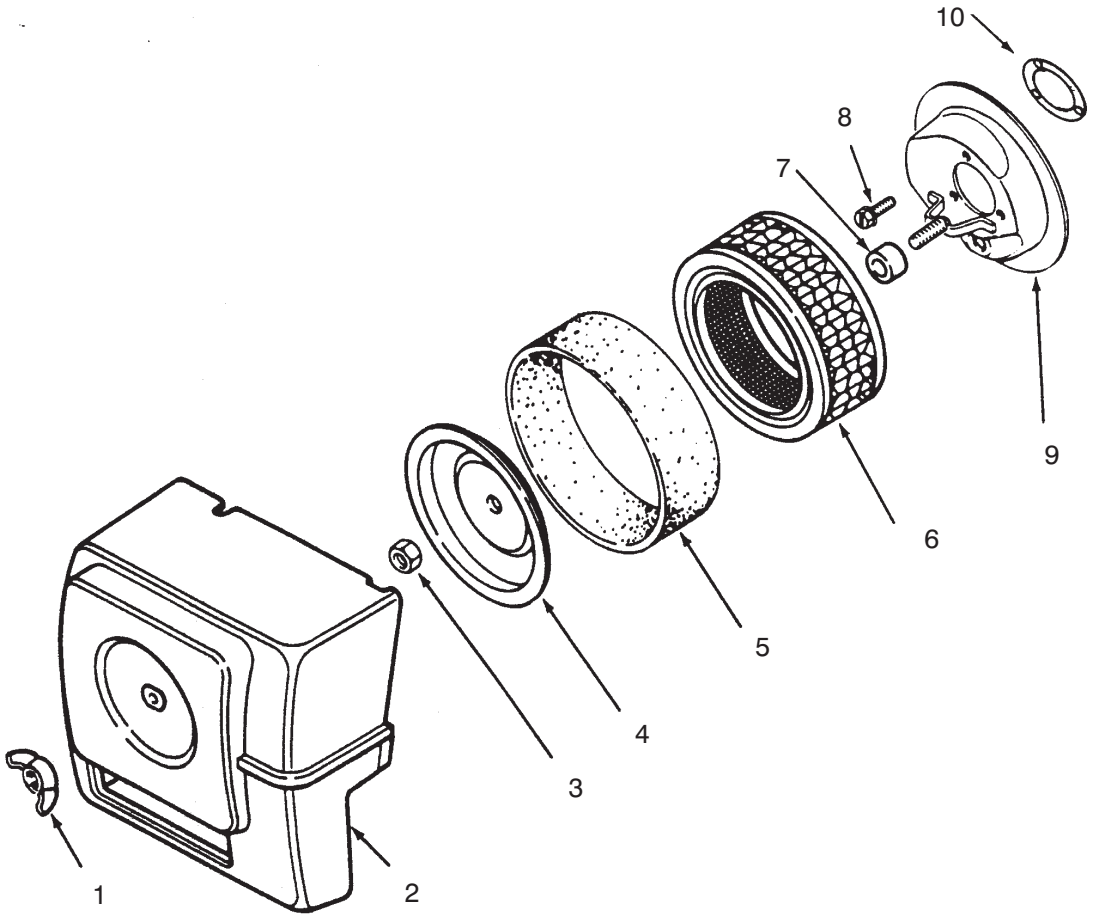


C–1482

AIR INTAKE

Ref. No.	Part No.	Description	No. Used
1	KH10576	Nut – Wing	1
2	KH10299	Cover	1
3	KH10189	Nut	1
4	KH10412	Cover – Air Cleaner Element	1
5	KH10235	Element – Precleaner	1
6	KH10236	Element	1

Ref. No.	Part No.	Description	No. Used
7	KH10034	Seal	1
8	KH10609	Screw	3
9	KH10297	Base – Air Cleaner	1
10	KH10697	Gasket	1
*	KH10191	Decal – Air Cleaner	1


*Not Illustrated

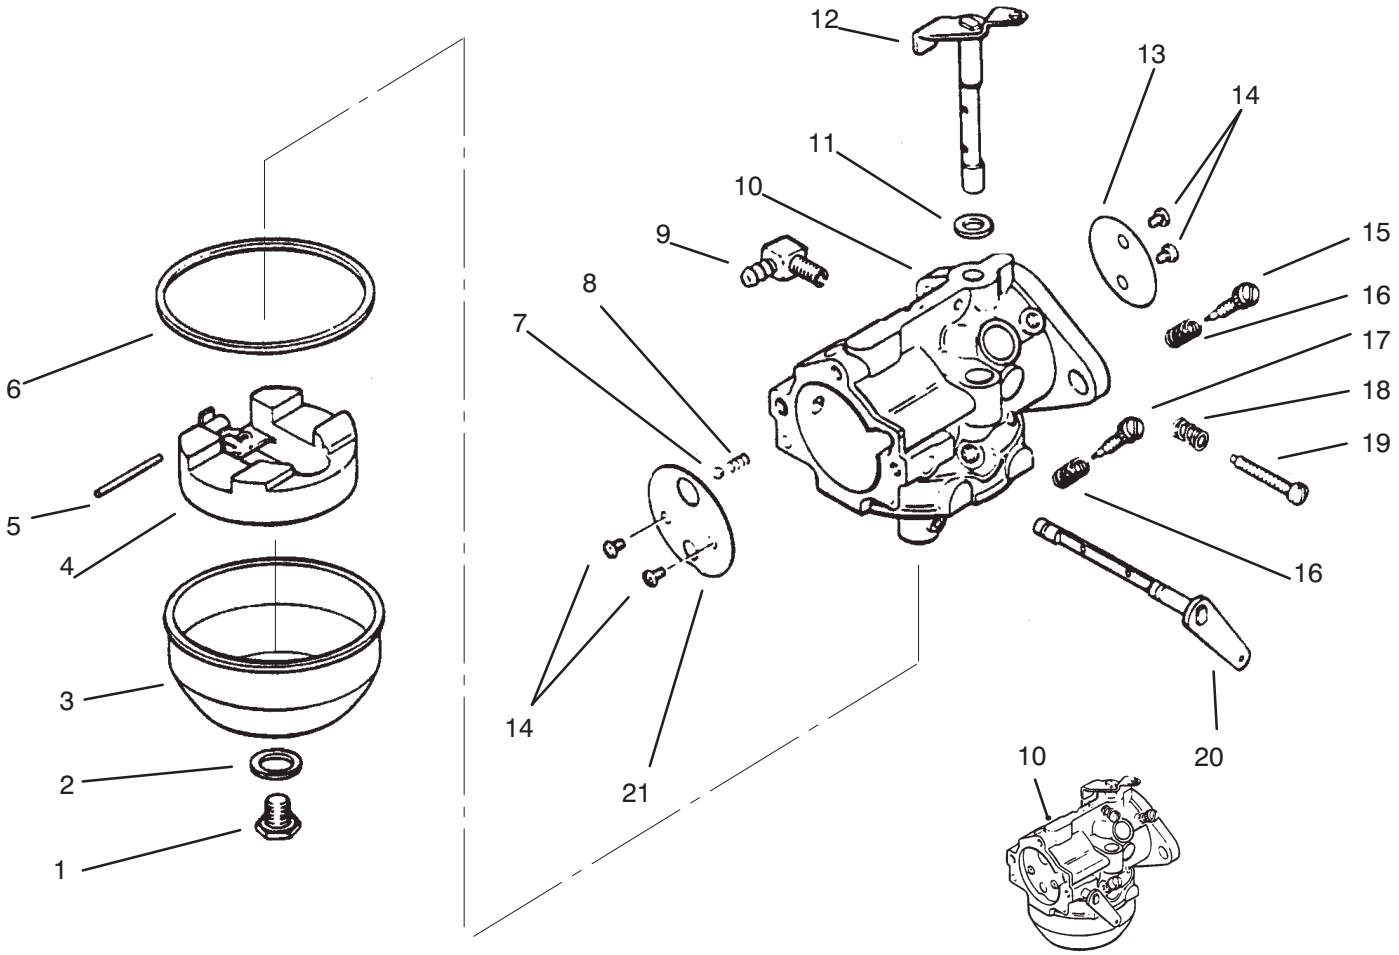

CARBURETOR

Ref. No.	Part No.	Description	No. Used
1	KH10116	Screw	1
2	KH10093	Gasket	1
3	KH10117	Bowl – Fuel	1
4	KH10663	Kit – Float (Incl. Ref.#5)	1
5		Pin – Float	1
6	KH10094	Gasket	1
7	KH10128	Ball	1
8	KH10113	Spring	1
9		Connector 90°	1
10	92–7252	Carburetor Assembly (Complete)	1
11		Seal	1
12	92–7256	Shaft w/Lever & Seal (Incl. Ref# 11)	1
13	92–7257	Plate – Throttle	1
14	KH10110	Screw	4
15	KH10132	Needle – Idle Fuel Adj.	1
16	KH10112	Spring – Idle Fuel	1
17	KH10694	Main – Needle	1
18	KH10114	Spring – Adj.	1
19	KH10109	Screw – Idle Speed Adj.	1
20	KH10702	Shaft – Choke	1
21	92–7255	Plate – Choke	1
*	KH10696	Kit – Carburetor Repair (Includes	
	KH10009	Gasket – Flange	
	KH10146	Gasket – Carburetor	
	KH10733	Gasket	
	KH10093	Gasket – Bowl Screen	
	KH10094	Gasket– Bowl	
	KH10677	Gasket – Air Cleaner	
	KH10697	Gasket	
	KH10274	Gasket – Carburetor	
*	KH10358	Kit – Choke & Throttle Repair	1
*	KH10710	Kit – High Altitude Jet (Includes	
	KH10682	Bushing	
	KH10709	Jet – Main	1
*	92–7251	Kit – Carburetor w/Linkage (Includes	
	KH10682	Bushing &	
	KH10709	Main Jet	1
*	KH10693	Kit – Adjustable Jet w/Linkage (Includes	
	KH10701	Carburetor Linkage	
	KH10682	Bushing – Linkage Natural	
	KH10686	Bushing Linkage Black	
	KH10697	Gasket – Air Cleaner	
	KH10693	Carburetor Assembly	
	KH10146	Gasket	
	KH10274	Gasket	1


*Not Illustrated

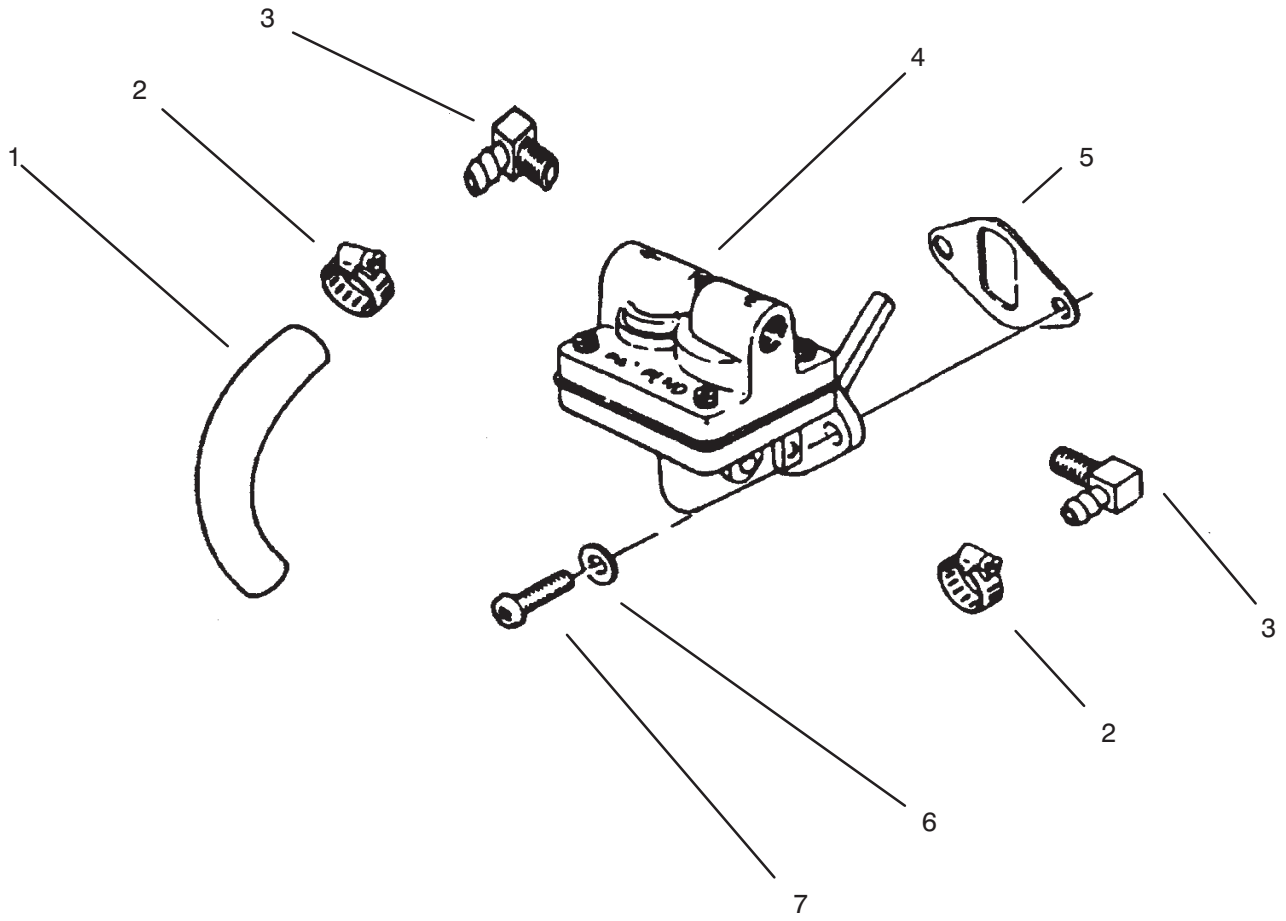

FUEL PUMP

Ref. No.	Part No.	Description	No. Used
1	KH10130	Line – Fuel	1
2	KH10586	Clamp	2
3	KH10123	Connector – 90°	2
4	KH10319	Pump Assy – Fuel (Incl. Ref.#5 &7)	1


Ref. No.	Part No.	Description	No. Used
5	KH10095	Gasket	1
6	KH10569	Washer	2
7	KH10552	Screw – Pozidrive	2

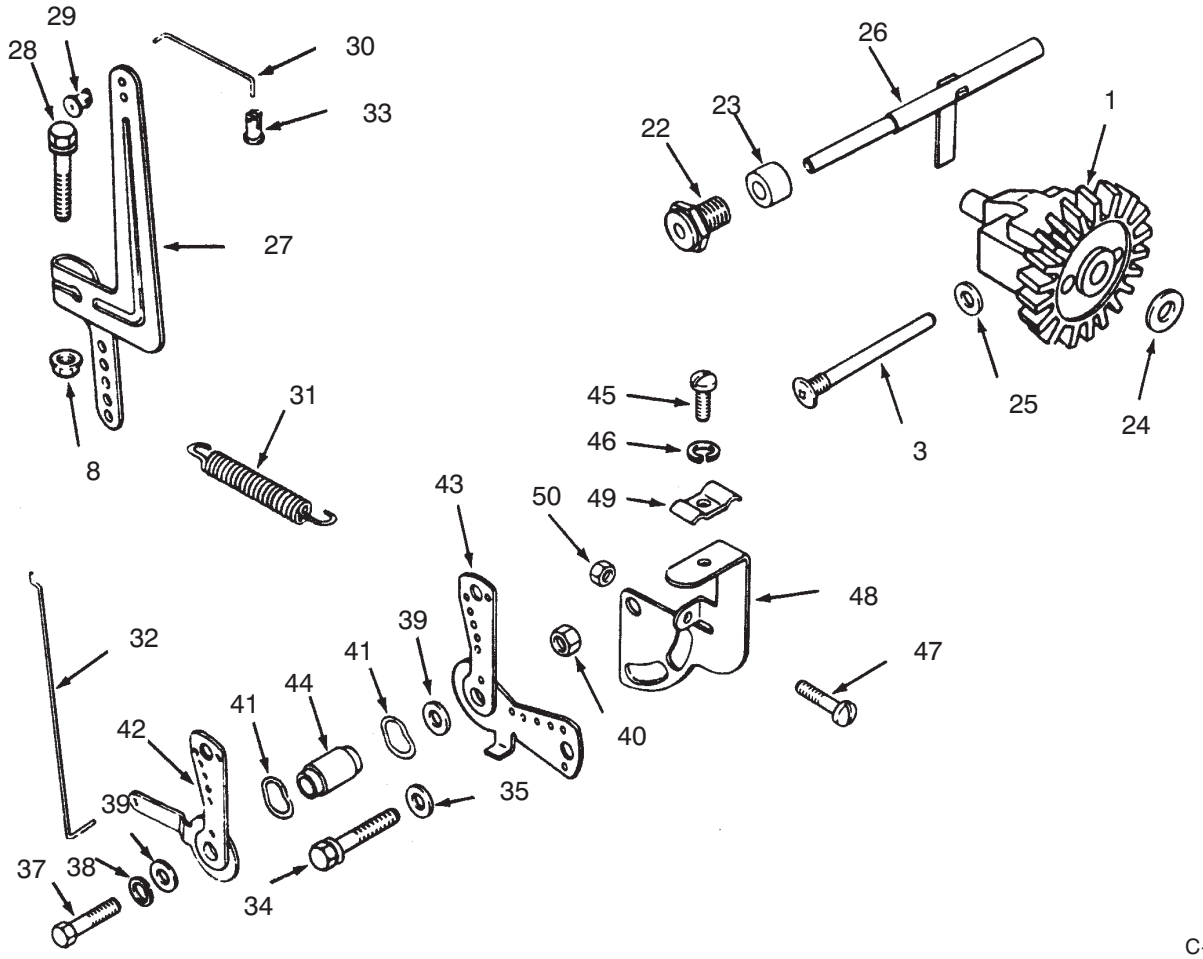

C–1492

GOVERNOR LINKAGE

Ref. No.	Part No.	Description	No. Used
1	KH10660	Kit – Governor Gear (Includes 24)	1
3	KH10035	Pin – Governor Stop	1
8	KH10629	Nut – Pal	1
22	KH10070	Bushing	1
23	KH10585	Spacer	1
24	KH10087	Washer	1
25	KH10136	Washer	1
26	92–7262	Kit – Governor Cross Shaft	1
27	KH10295	Lever – Governor	1
28	KH10626	Screw	1
29	92–7254	Bushing	1
30	KH10701	Linkage (Governor to Carb.)	1
31	KH10296	Spring (Governor to Carb.)	1
32	KH10287	Linkage – Choke (Carb. to Choke Shaft)	1
33	92–7253	Bushing	1
34	KH10545	Screw	1
35	KH10570	Washer	1
37	KH10600	Screw	1
38	KH10556	Washer – Lock	1
39	KH10569	Washer	1
40	KH10624	Nut	1
41	KH10152	Washer	2
42	KH10293	Lever – Choke Control	1
43	KH10294	Lever – Throttle Control	1
44	KH10302	Space	1
45	KH10605	Screw	1
46	KH10695	Washer	1
47	KH10040	Screw	1
48	KH10303	Bracket – Clutch Control	1
49	KH10308	Clamp	1
50	KH10619	Nut	1
*	92–7263	Choke Lever Assembly (Incl. Ref. #37 thru 44)	1

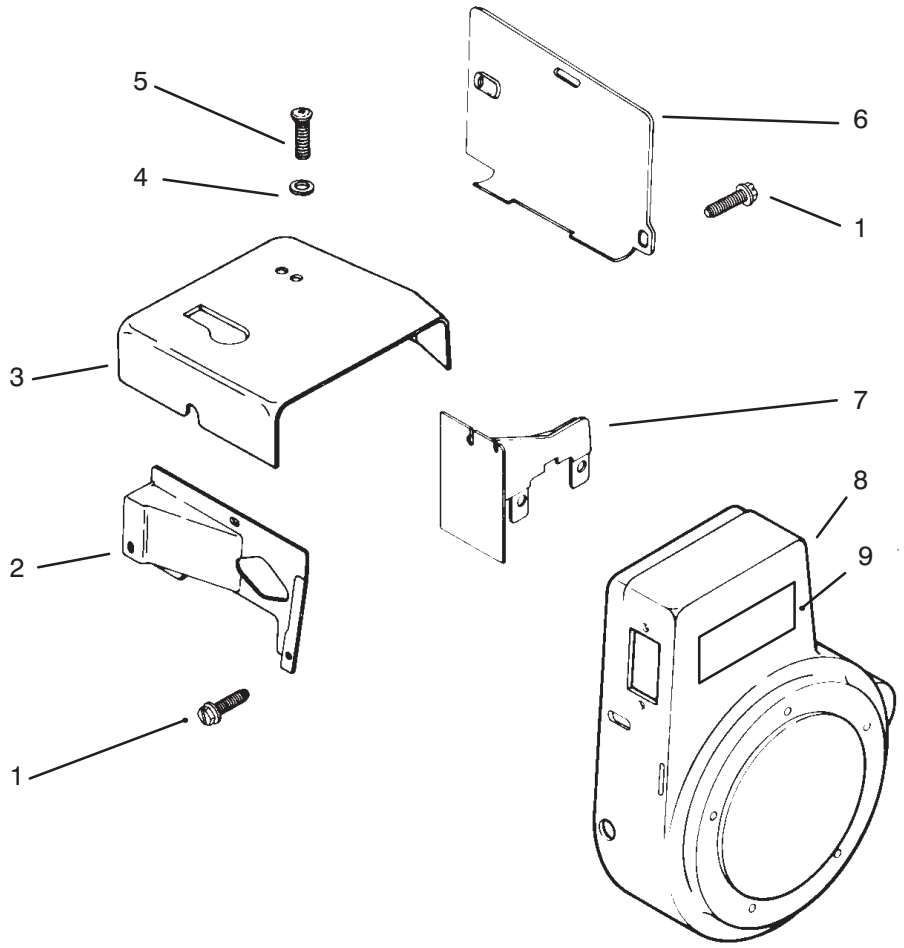


C–1559

BAFFLES AND SHROUDS

Ref. No.	Part No.	Description	No. Used
1	KH10413	Screw – Hex .Hd.	6
2	KH10279	Baffle – Side Air	1
3	KH10231	Baffle – Head	1
4	KH10567	Washer	1
5	KH10289	Screw – Pozidrive T.H.	3

Ref. No.	Part No.	Description	No. Used
6	KH10282	Baffle – Cylinder	1
7	KH10280	Baffle – Inner	1
8	KH10265	Housing – Blower	1
9	92–7281	Decal – HP	1

*Not Illustrated

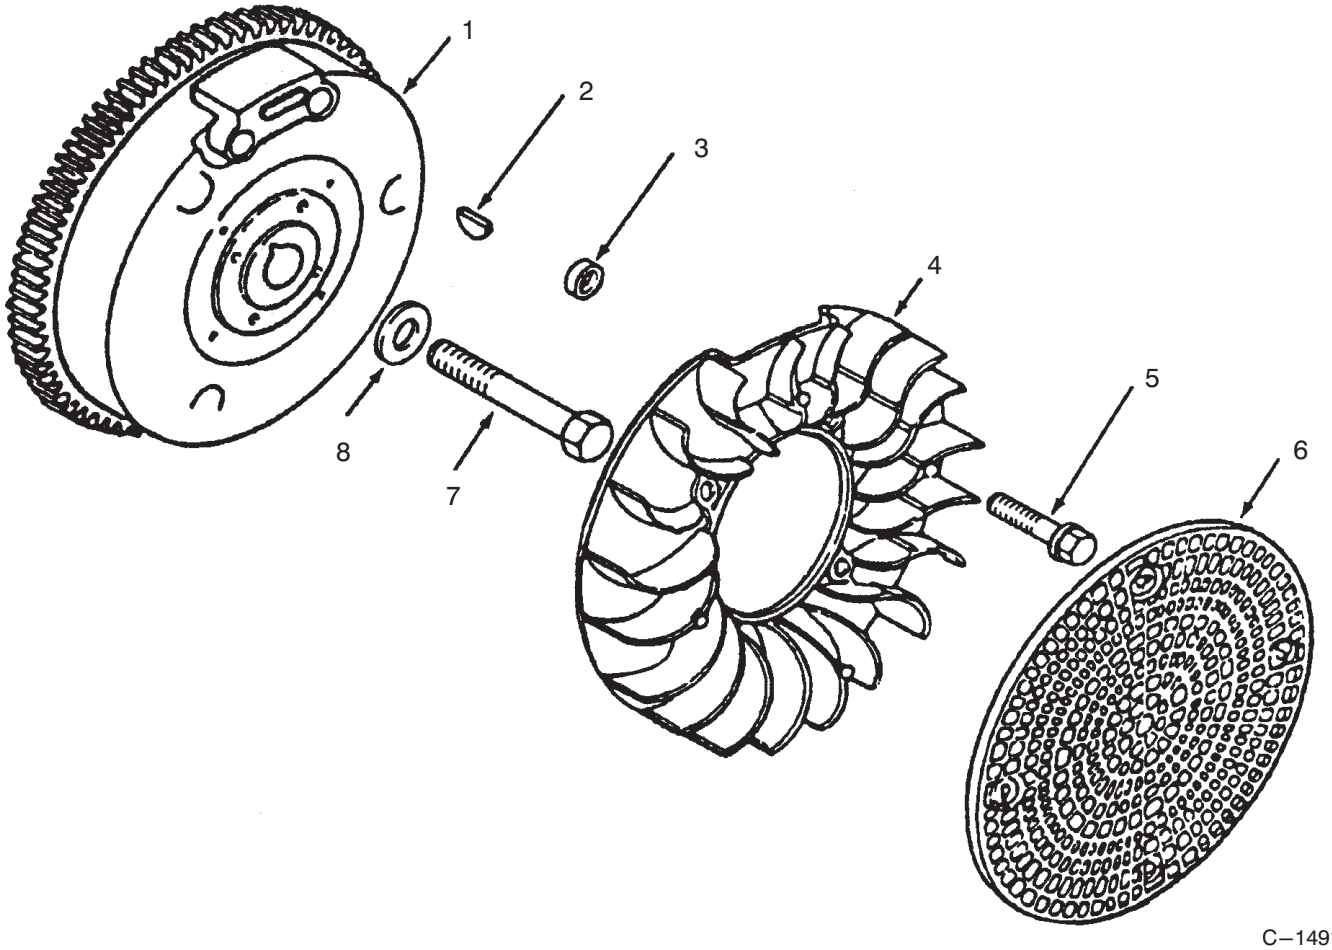


C–1491

FLYWHEEL

Ref. No.	Part No.	Description	No. Used
1	KH10263	Flywheel	1
2	KH10588	Key – Woodruff	1
3	KH10188	Spacer	4
4	KH10124	Fan	1

Ref. No.	Part No.	Description	No. Used
5	KH10107	Screw – Hex. Hd.	4
6	KH10126	Screen	1
7	KH10108	Screw	1
8	KH10666	Washer	1

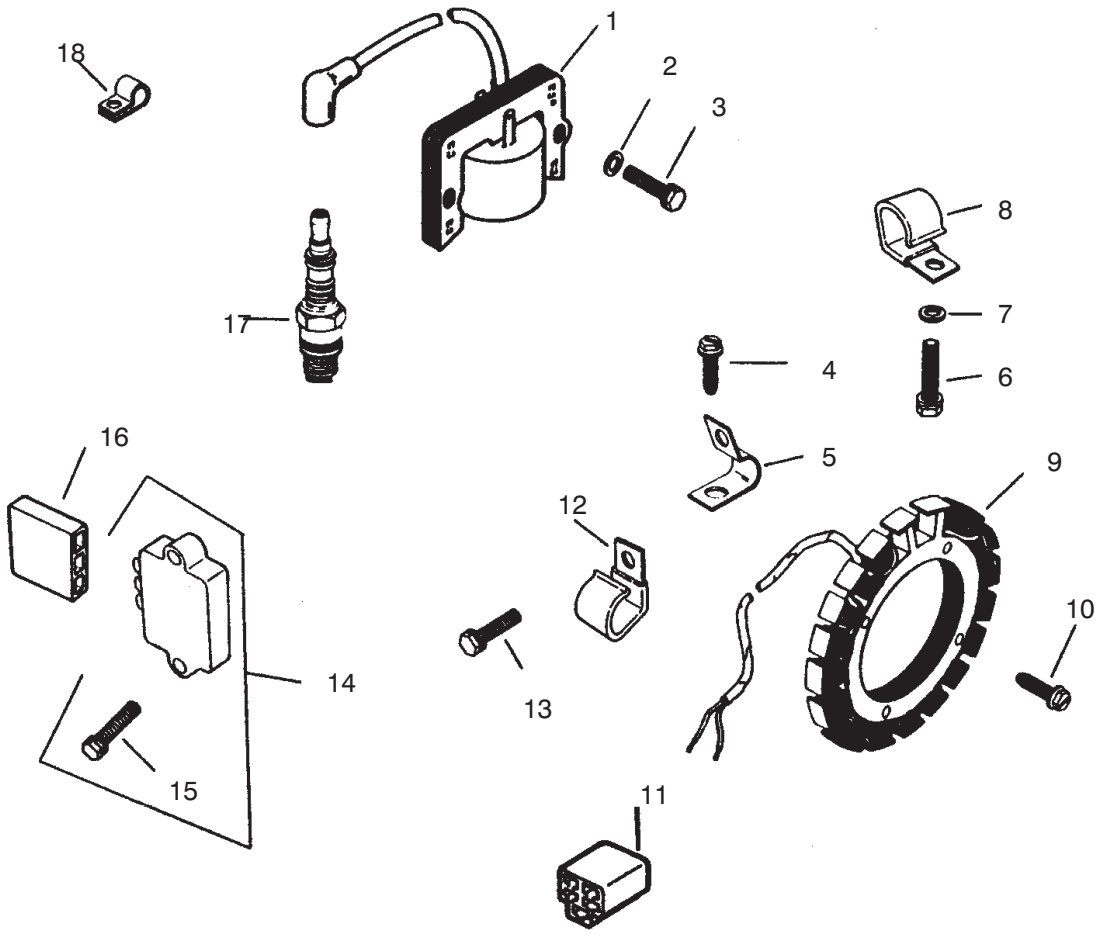


C–1493

IGNITION SYSTEM

Ref. No.	Part No.	Description	No. Used
1	KH10321	Module – Ignition	1
2	KH10570	Washer	2
3	KH10548	Screw	2
4	KH10606	Screw – Hex. Hd.	1
5	KH10618	Clip	1
6	KH10610	Screw	1
7	KH10570	Washer – Flat	1
8	92–7264	Clip	1
9	KH10091	Kit – Stator 15 am (Incl. Ref.#8)	1
10	KH10605	Screw – Pozidrive	4
11	KH10345	Connector	1

Ref. No.	Part No.	Description	No. Used
12	8830	”J”Clip	1
13	321–2	Screw	1
14	KH10673	Regulator – Rectifier	2
15	92–7266	Screw	2
16	KH10082	Connector	1
17	92–7265	Plug – Spark	1
18	KH10010	Clip – Hi–Tension	1
*	KH10313	Lead –Violet, Regulator–Rectifier to Connector (23”)	1
*	KH10315	Lead – Wire, Module to Connector	1

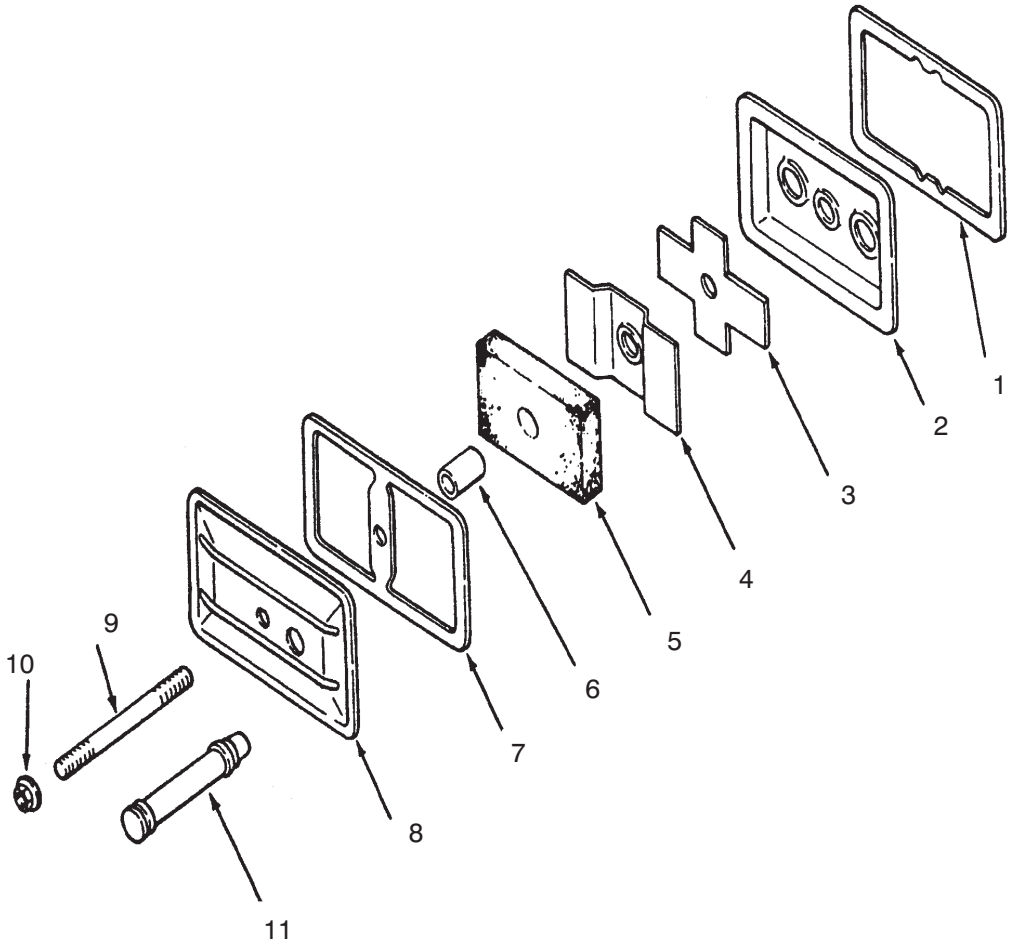


C–1485

BREATHER AND VENT

Ref. No.	Part No.	Description	No. Used
1	KH10058	Gasket	1
2	KH10072	Plate	1
3	KH10057	Reed	1
4	KH10143	Baffle	1
5	KH10275	Filter	1
6	KH10034	Seal	1


Ref. No.	Part No.	Description	No. Used
7	KH10149	Gasket	1
8	KH10298	Cover	1
9	KH10150	Stud	1
10	KH10629	Palnut	1
11	KH10309	Hose	1

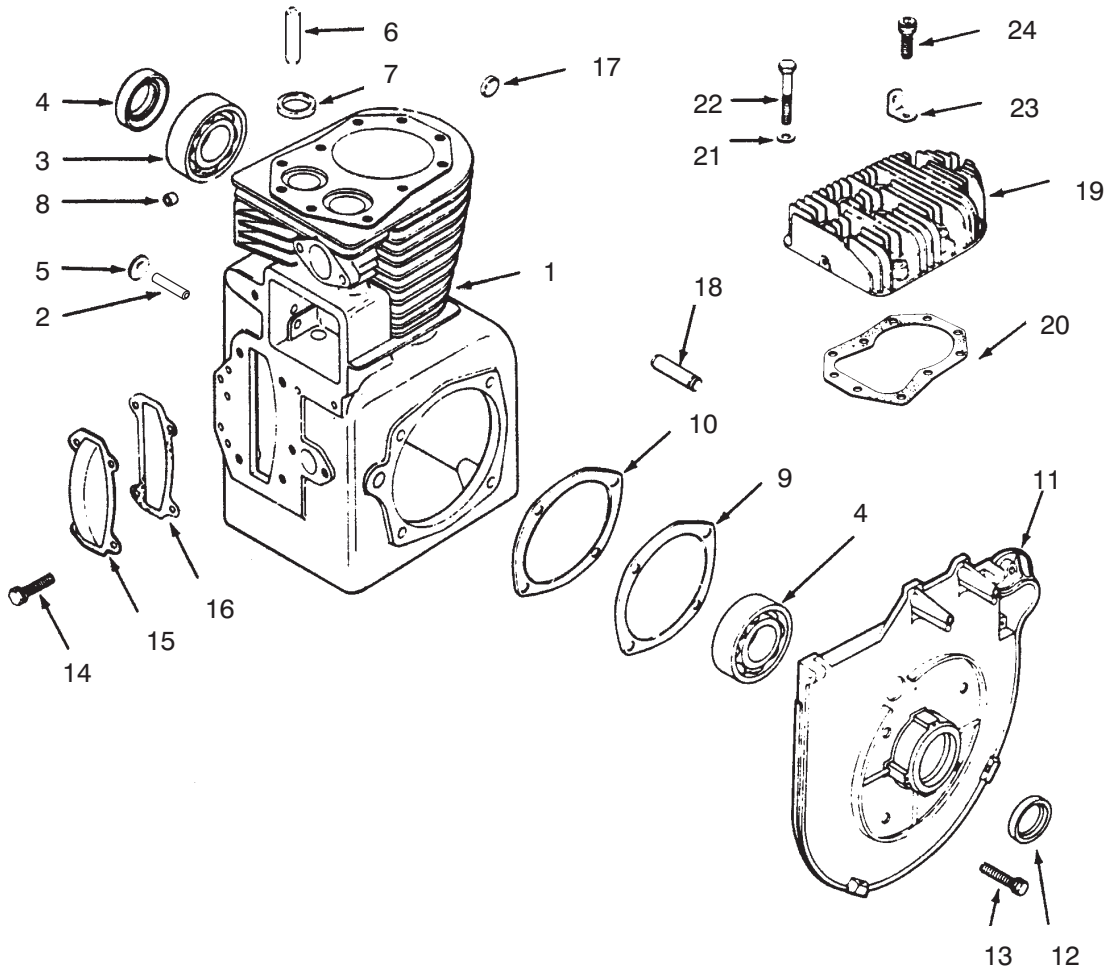

CRANKCASE AND CYLINDER HEAD

Ref. No.	Part No.	Description	No. Used
1	92–7279	Short Block (Includes Crankshaft)	1
	92–7280	Miniblock (w/Out Crankshaft)	1
2	92–7258	Shaft – Governor Gear	1
3	KH10067	Ball Bearing	2
4	KH10269	Seal	1
5	KH10562	Plug	1
6	92–7259	Guide – Valve	2
7	KH10029	Insert – Exhaust Valve	1
8	KH10049	Bearing	1
9	KH10272	Gasket	1
10	KH10311	Gasket	1
11	KH10687	Plate – Bearing	1
12	KH10268	Seal	1

Ref. No.	Part No.	Description	No. Used
13	KH10549	Screw	4
14	KH10545	Screw	4
15	KH10661	Cover	1
16	KH10055	Gasket	1
18	KH10081	Shaft – Balance Gear	1
19	KH10261	Head – Cylinder	1
20	KH10700	Gasket	1
21	KH10145	Washer	9
22	KH10144	Screw	8
23	KH10312	Strap – Lifting	1
24	KH10290	Screw	1
*	KH10325	Set – Gasket w/ Seals	1
*	KH10258	Set – Gasket w/o Seals	1

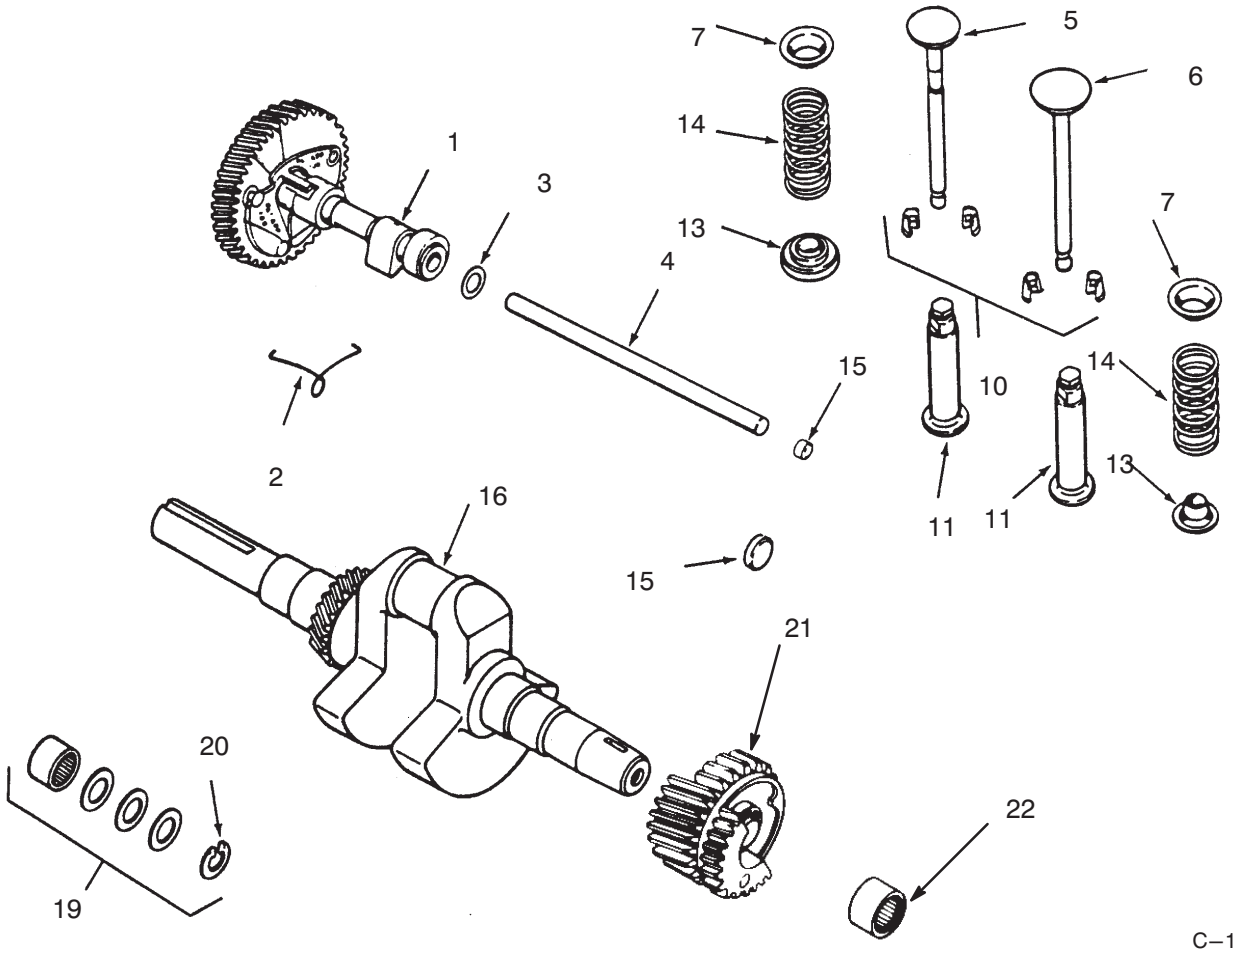


C–1560

CAMSHAFT, CRANKSHAFT AND VALVES

Ref. No.	Part No.	Description	No. Used
1	KH10259	Camshaft Assy (Incl. Ref.# 2)	1
2	KH10292	Spring	1
3	KH10147	Spacer .005	1
*	KH10148	Spacer .010	1
4	KH10310	Pin – Camshaft	1
5	KH10090	Valve – Exhaust	1
6	KH10071	Valve – Intake	1
7	KH10054	Retainer – Upper Spring	2
10	KH10221	Kit – Retainer	2
11	KH10539	Tappet – Intake Valve	2


Ref. No.	Part No.	Description	No. Used
13	KH10496	Rotator – Valve	2
14	KH10062	Spring	2
15	KH10617	Plug – Cup	1
16	KH10245	Kit – Crankshaft (Includes Flywheel Hdwr.)	1
19	KH10322	Kit – Spacer (Incl. Ref.#20)	2
20	KH10574	Retainer	1
21	KH10228	Gear Assembly (Incl. Ref. #22)	2
22	KH10267	Bearing – Needle	2

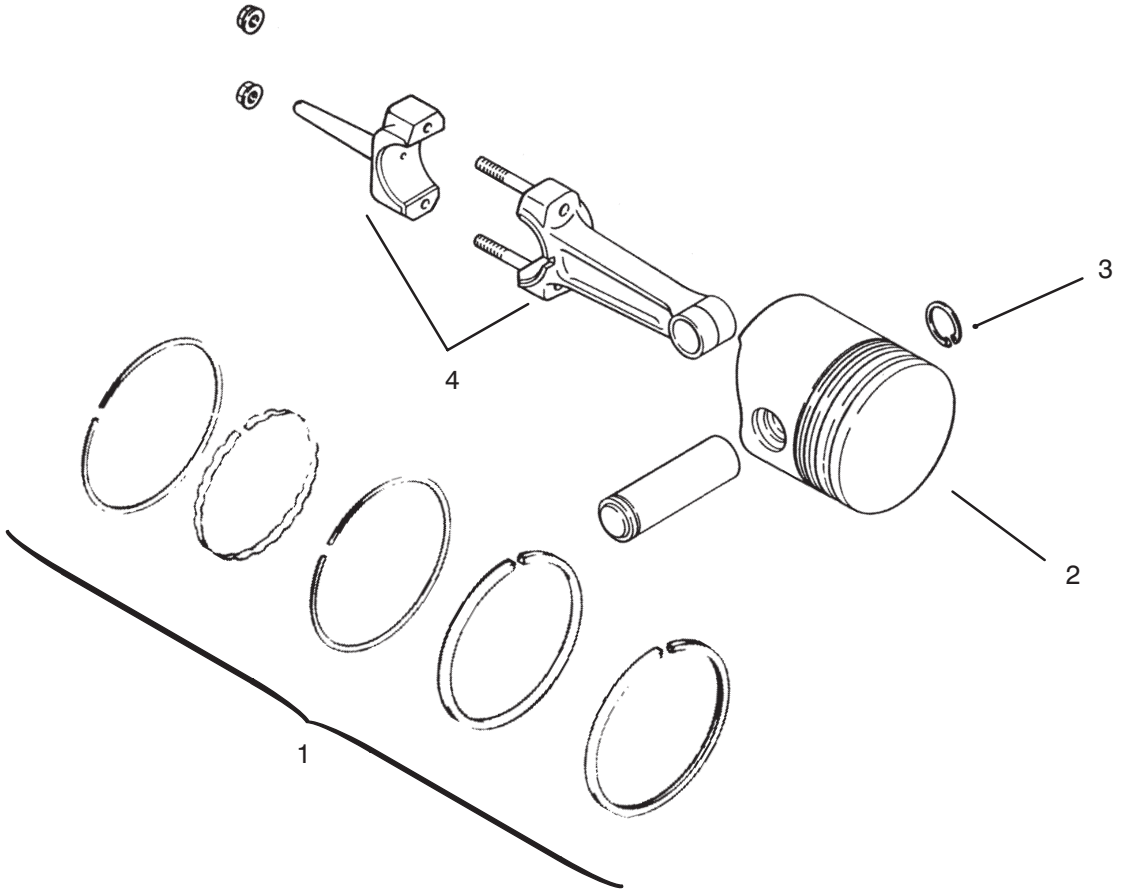

C–1563

PISTON AND RINGS

Ref. No.	Part No.	Description	No. Used
1	92–7273	Set – Ring, Std. & .003	1
*	92–7274	Set – Ring .010	1
*	92–7275	Set – Ring .020	1
*	92–7276	Set – Ring .030	1
2	92–7268	Piston w/Ring Set Std.	1
*	92–7269	Piston w/Ring Set .003	1
*	92–7270	Piston w/Ring Set .010	1
*	92–7271	Piston w/Ring Set .020	1
*	92–7272	Piston w/Ring Set .030	1
3	KH10262	Retainer – Piston Pin	2
4	92–7267	Rod – Connecting Std.	1
*	KH10695	Rod – Connecting .010	1

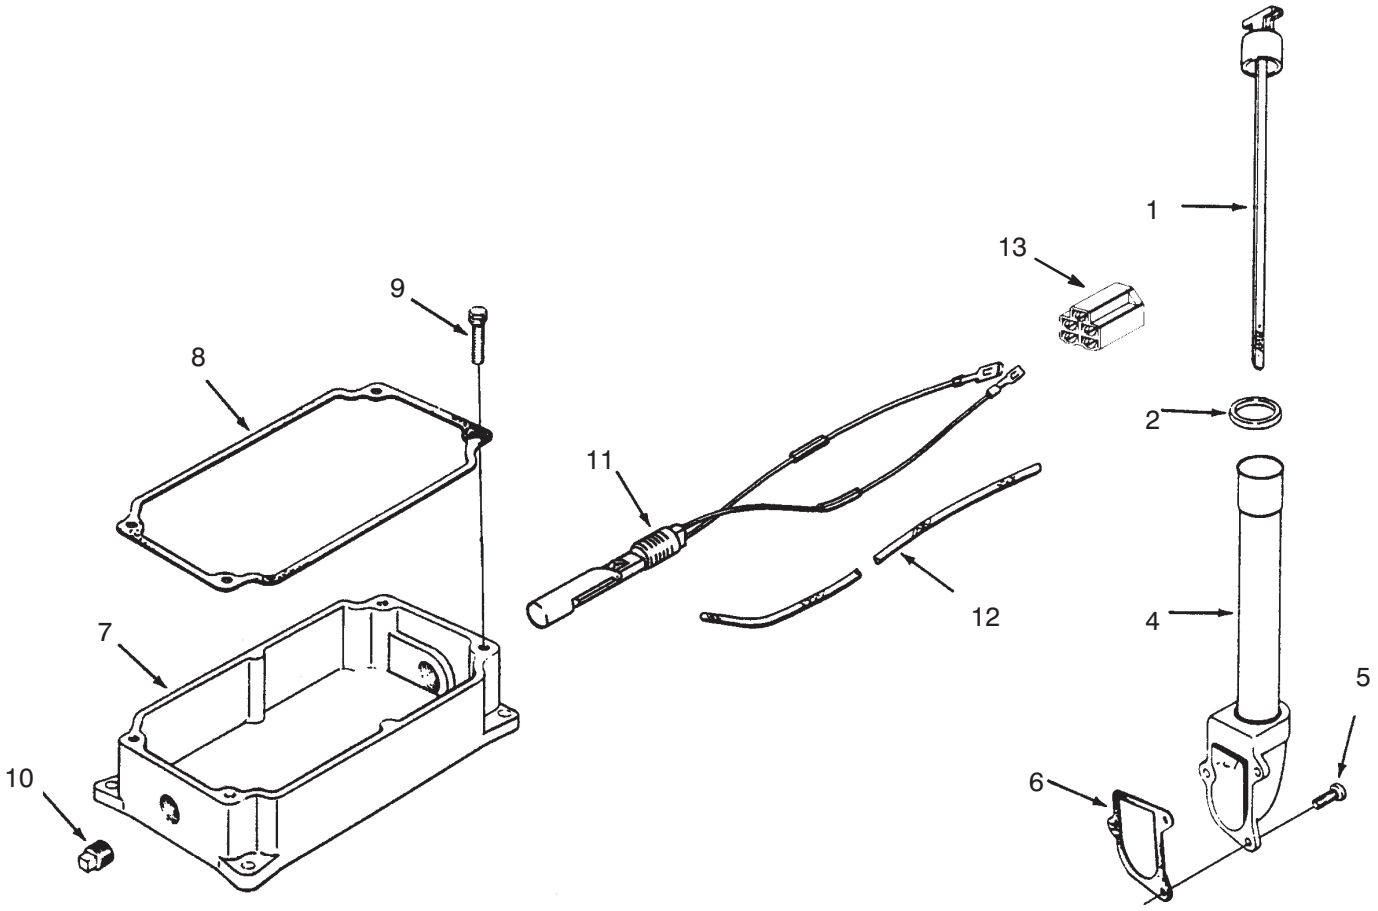


C–1562

OIL PAN AND DIPSTICK

Ref. No.	Part No.	Description	No. Used
1	KH10270	Dipstick	1
2	KH10201	”O”Ring	1
4	KH10266	Adapter – Oil Fill	1
5	KH10541	Screw	3
6	KH10088	Gasket	1
7	KH10248	Pan – Oil	1
8	KH10059	Gasket	1
9	KH10550	Screw	4


Ref. No.	Part No.	Description	No. Used
10	KH10620	Plug	4
11	92–7278	Kit – Float Switch (Incl. Ref.#12 & Decal)	1
12	KH10134	Sleeve	1
13	KH10345	Connector – Female (5–Contact)	1
*	KH10119	Decal – Float Switch	1

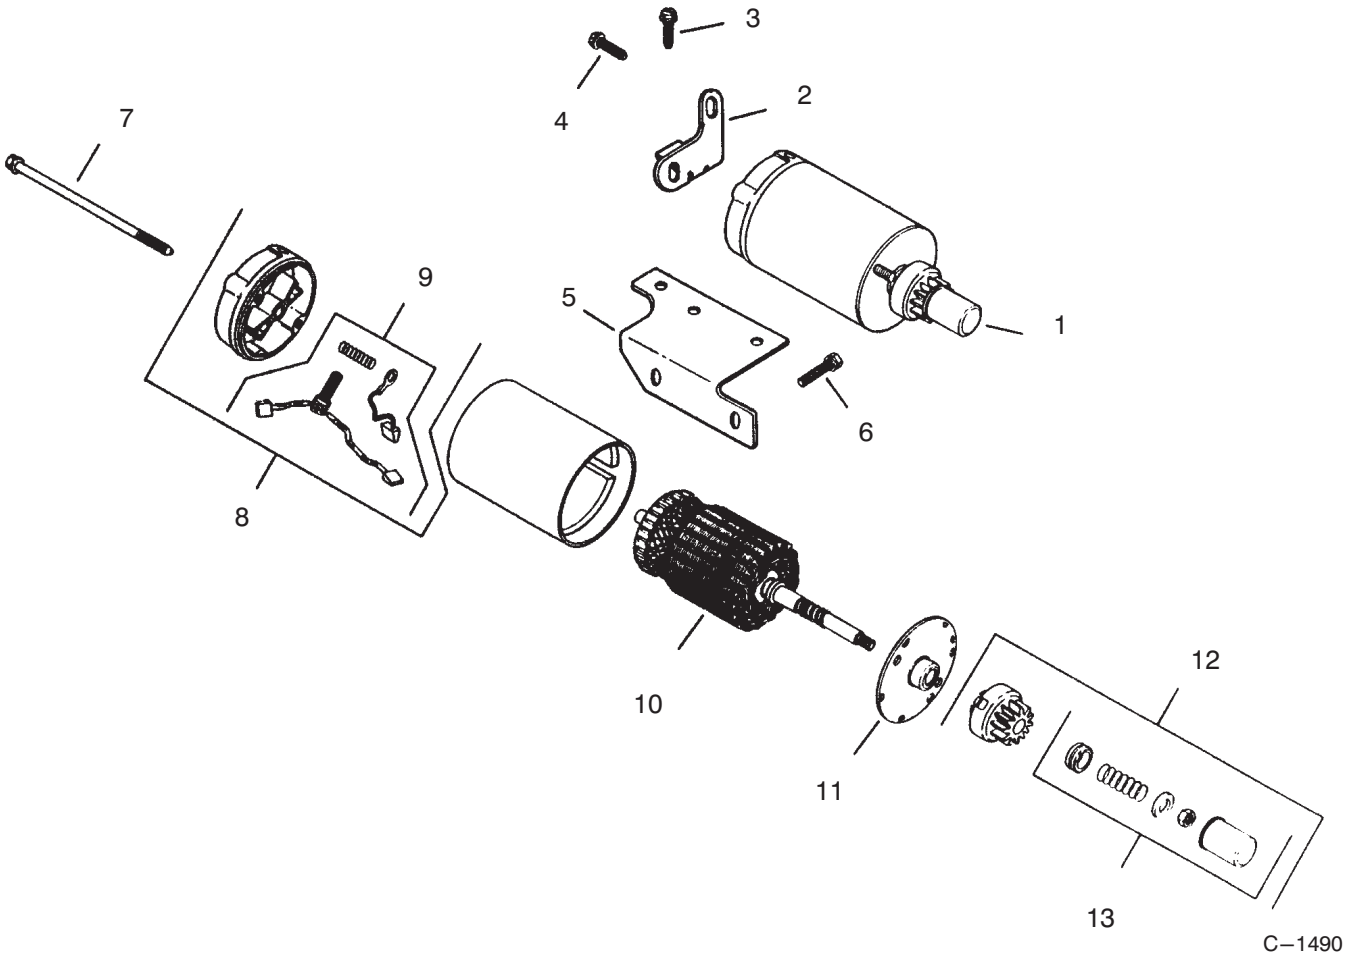

STARTER

Ref. No.	Part No.	Description	No. Used
1	92–7260	Starter Assembly (Includes Items 9 thru 15)	1
2	KH10244	Brace – Starter Tail	1
3	KH10607	Screw – Hex. Hd.	1
4	KH10610	Screw – Hex. Hd.	1
5	KH10304	Bracket – Starter	1
6	KH10549	Screw	2
7	KH10181	Bolt	2
8	KH10210	End Cap Ass'Y (Incl. Ref.#9)	1

Ref. No.	Part No.	Description	No. Used
9	KH10515	Kit – Brush	1
10	KH10247	Armature	1
11	KH10209	Cap – Drive End	1
12	KH10323	Kit – Drive (Incl. Ref. #15)	1
13	KH10324	Kit – Drive Parts	1
*	KH10135	Tag – Caution	1
*	KH10304	Bracket – Solenoid	1
*	KH10549	Screw	1

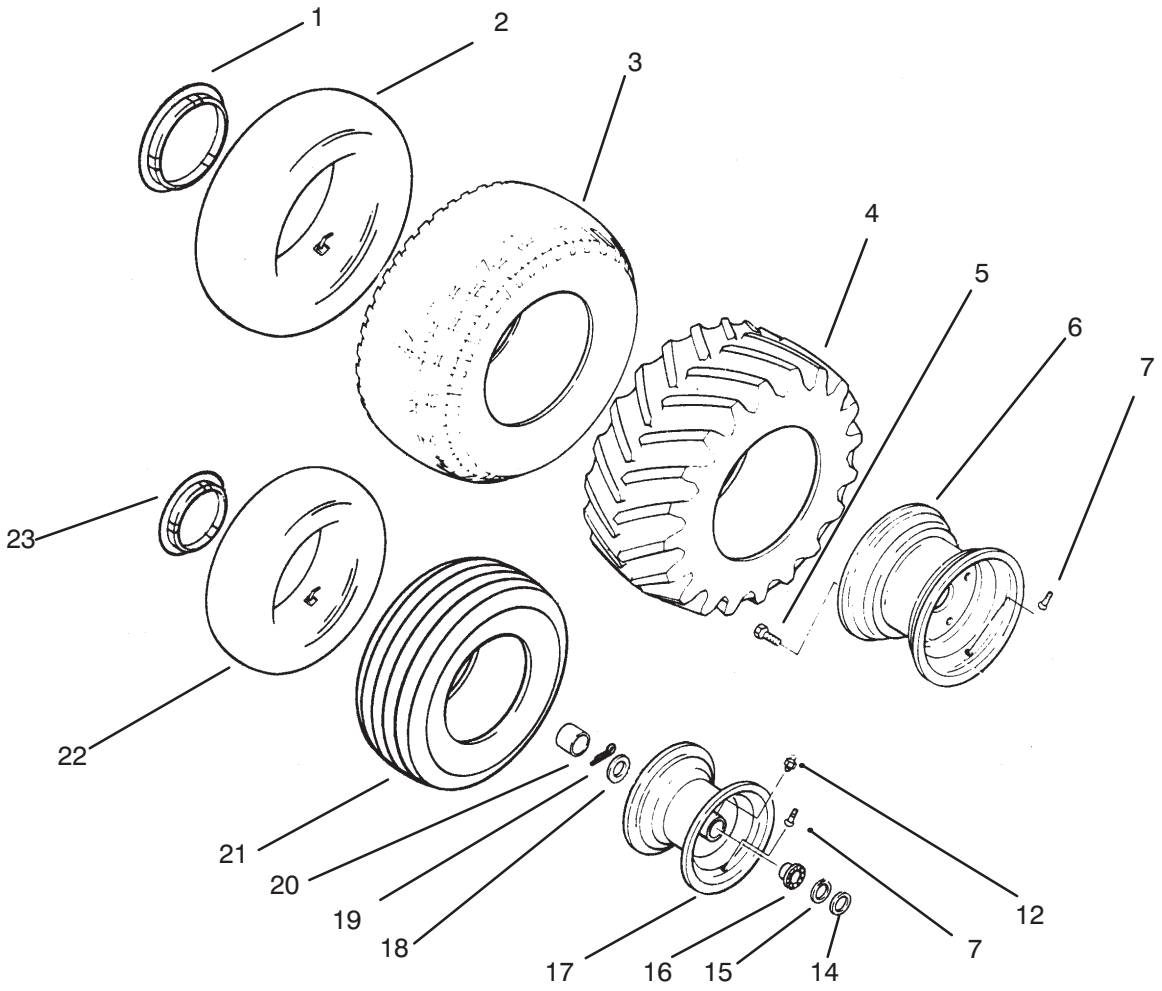


WHEELS AND TIRES

Ref. No.	Part No.	Description	No. Used
1	114428	Logo – Hub Cap 12” (Opt.)	2
2	7007	Tube – Rear	2
3	116744	Tire – Turf Trac, Rear	2
4	7607	Tire – Cleat, (Opt.)	2
5	83–2720	Bolt – Lug	10
6	111516	Wheel – Rear	2
*	110677	Wheel – Cleat (Opt.)	2
7	5108	Stem – Valve	4
12	109500	Fitting – Grease	2
14	5210	Washer – Shim .015	2
15	1278	Washer – Shim .050	4

Ref. No.	Part No.	Description	No. Used
16	110513	Bearing – Ball	4
17	93–9801	Rim – Front (Incl. Ref. #12)	2
18	11952	Washer – Special Hub Cap	2
19	3272–17	Pin – Cotter	2
20	111951	Hubcap	2
21	117127	Tire – Turf Trac, Front	2
22	100079	Tube – Front” (Opt.)	2
23	114427	Logo – Hub Cap 8” (Opt.)	2
*	93–9800	Wheel Assembly – Front (Incl. Ref.# 7,12, 16 & 21)	2

*Not Illustrated

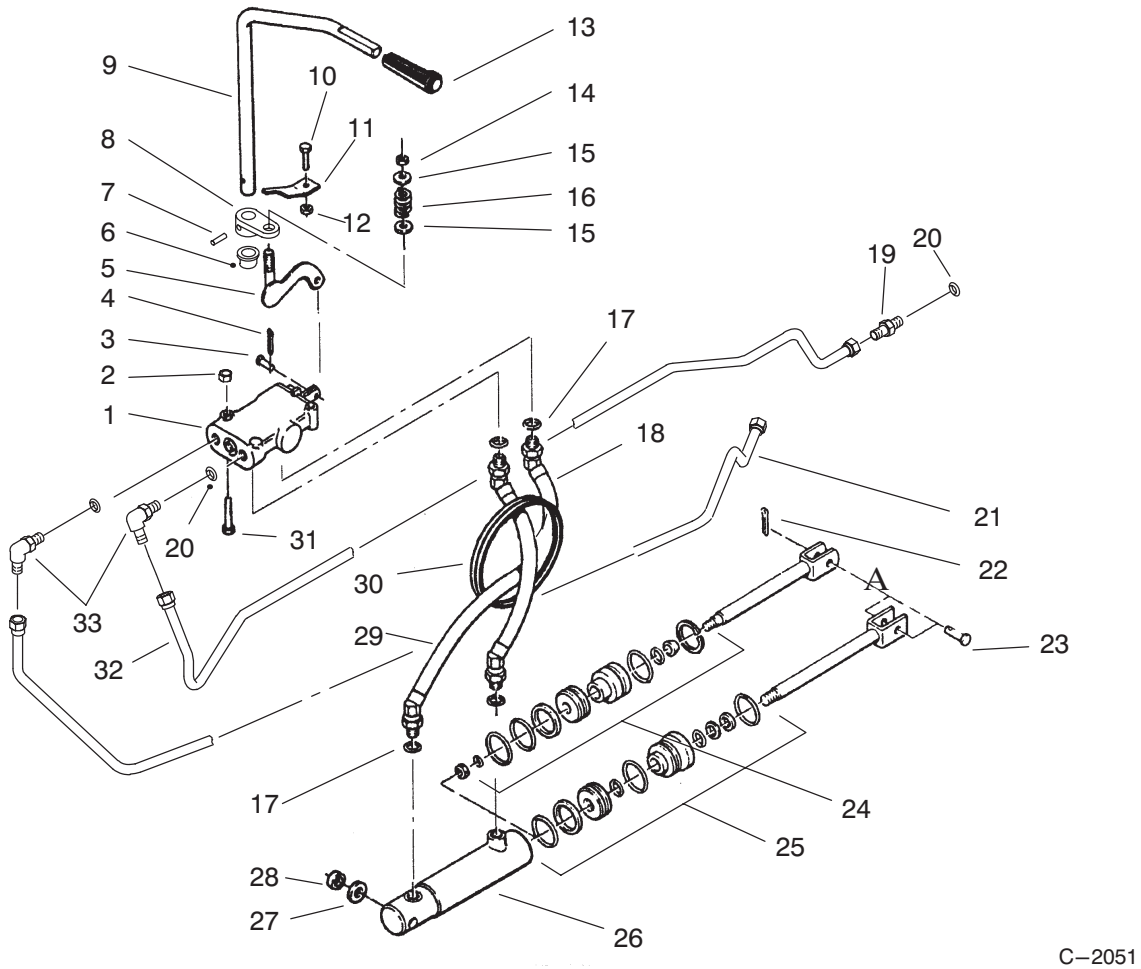


HYDRAULIC CONTROL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	114000	Valve – Hydraulic (Incl. Ref.#3–4)	1
2	3296–42	Nut	2
3	9321204	Pin – Clevis	1
4	3272–1	Pin – Cotter	1
5	78–5640	Bar – Lift	1
6	5983	Bushing	1
7	933198	Pin – Spirol	1
8	116302	Arm – Control	1
9	78–5670	Rod – Lift Control	1
10	321–4	Screw	1
11	116305	Bracket – Control Rod	1
12	3296–42	Nut	1
13	116634	Knob – Hydraulic Lift	1
14	3296–29	Nut	1
15	3256–23	Washer – Flat	2
16	104841	Spring	1
17	973310	”O”Ring	4
18	110125	Hose – Valve To Cylinder	1
19	102628	Fitting – Straight Adapter (Incl. Ref. #20)	1

Ref. No.	Part No.	Description	No. Used
20	973370	”O”Ring	4
21	86–9280	Tube – Hydraulic (Pressure)	1
22	3272–11	Pin – Cotter	1
23	9329974	Pin – Clevis	1
24	101699	Kit – Service, Cylinder Repair	1
25	109088	Kit – Service, Cylinder Repair	1
26	119340	Cylinder – Hydraulic (Incl. Ref.#24–25)	1
27	9202324	Washer	1
28	101757	Spacer	1
29	110124	Hose – Valve To Cylinder	1
30	106267	Grommet – Rubber	1
31	321–11	Bolt	2
32	94–1802	Tube – Hydraulic (Return)	1
33	108365	Fitting – 90˚ (Incl. Ref. #20)	2
*	109081	Kit – Service, Valve Repair	1
*	100571	Tie – Cable	1

*Not Illustrated


Note : In Illustration Center lines A Continue on next page

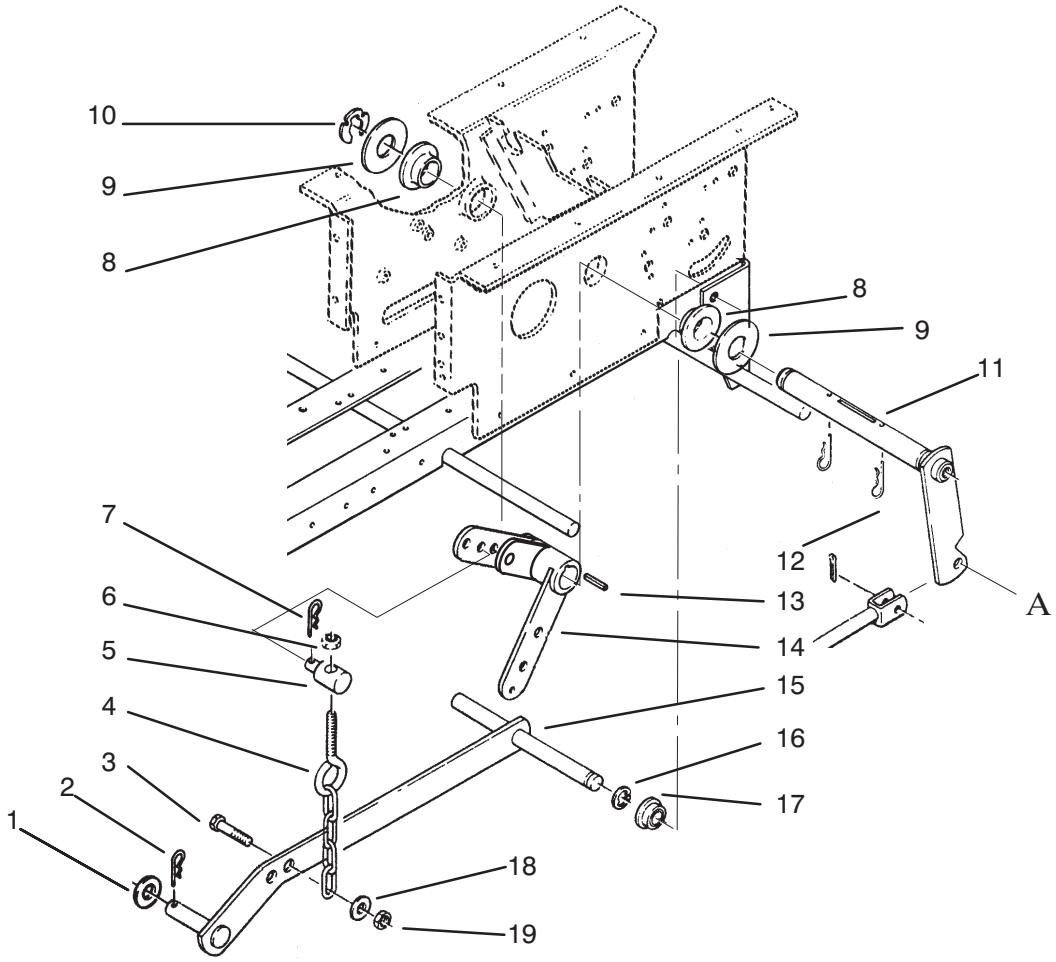

HYDROSTATIC LIFT LINKAGE

Ref. No.	Part No.	Description	No. Used
1	3256–26	Washer	1
2	9335054	Pin – Cotter	1
3	322–5	Bolt	1
4	106522	Chain – Lift	1
5	6739	Trunnion	1
6	3296–39	Nut	1
7	9335054	Pin – Cotter	1
8	106269	Bearing – Flanged	2
9	3256–62	Washer	2
10	32151–91	Retainer	2

Ref. No.	Part No.	Description	No. Used
11	121100	Lever – Lift	1
12	9335074	Pin – Cotter	2
13	1121	Key – Sq.	1
14	78–1550	Bellcrank	1
15	113445	Bar – Lift	1
16	32120–47	Ring – Retaining	1
17	6229	Bearing	1
18	3256–23	Washer	1
19	3296–29	Nut	1

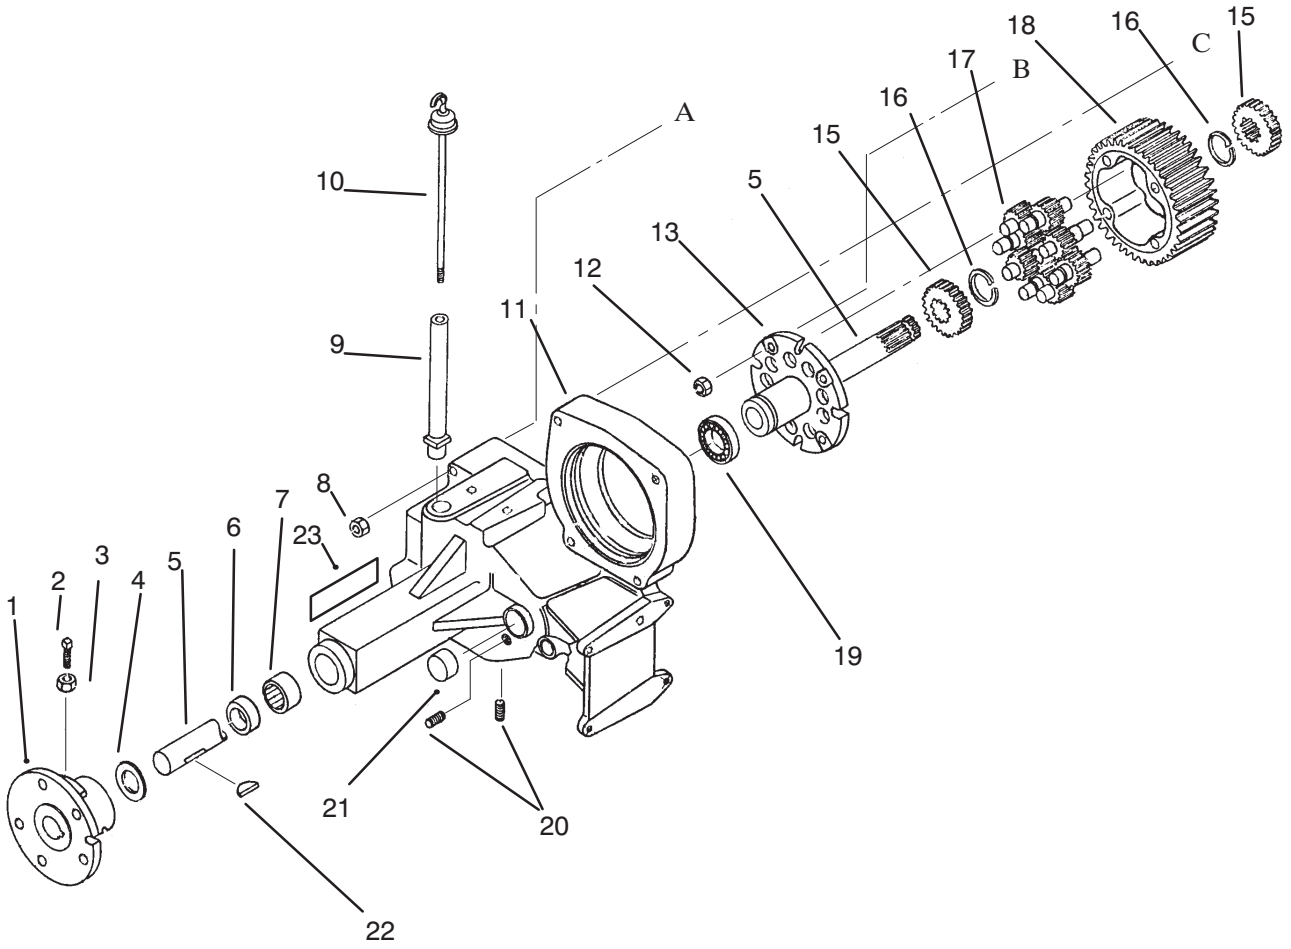


TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	105763	Hub – Rear	1
2	3243–5	Screw – Set	2
3	3218–3	Nut	2
4	106826	Washer – Thrust	1
5	108362	Axle – Rear, RH Long 13–1/8 in./33 cm	1
6	6449	Axle – Seal	1
7	9416	Bearing – Needle	1
8	3296–39	Nut	6
9	106448	Tube – Filler	1
10	110768	Dipstick	1
11	92–7298	Case – Transaxle, RH (Incl. Ref.#23)	1
12	108881	Nut	4

Ref. No.	Part No.	Description	No. Used
13	111196	Cap – Differential End	1
15	101889	Gear – Differential Axle 24 Tooth	2
16	105876	Ring – Retaining	2
17	101623	Gear – Differential Pinion 11 Tooth	8
18	105061	Gear – Differential Ring 43 Tooth	1
19	111199	Bearing – Ball	1
20	281–10	Plug – Pipe	2
21	1532	Bearing – Needle	1
22	937108	Key – Woodruff	1
*	93–9814	Transaxle (Incl.. Ref. #23)	1
23	88–2790	Decal – Danger	1

Note : In Illustration Center lines A,B and C

Continue on next page

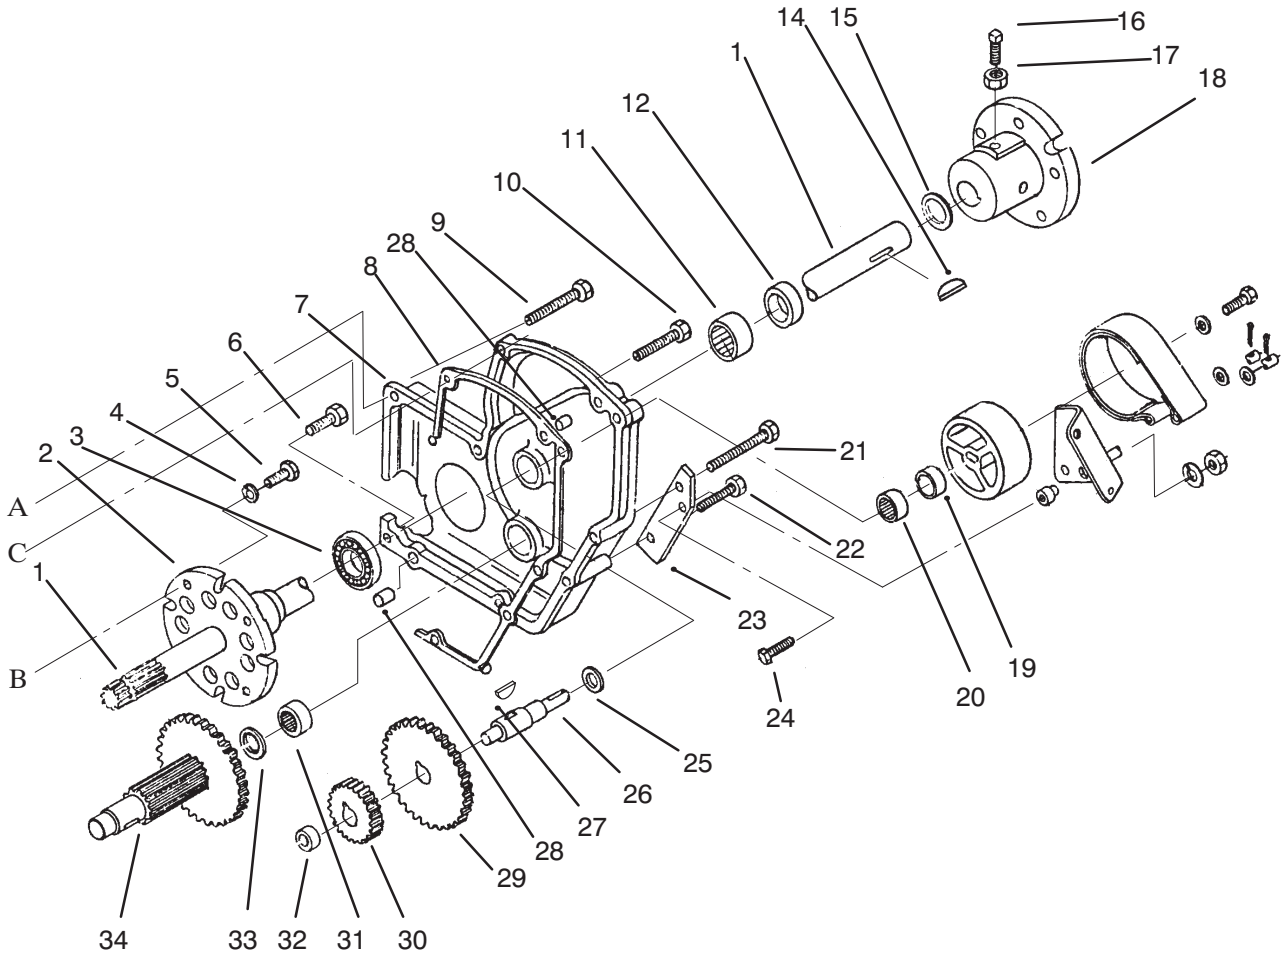


TRANSAXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	108361	Axle – Rear, LH Short 10–1/8 in./26 cm	1
2	111196	Cap – Differential End	1
3	111199	Bearing – Ball	1
4	107374	Washer – Special	4
5	911423	Bolt	4
6	9080356	Bolt	1
7	111201	Case – Transaxle, LH	1
8	108312	Gasket – Case	1
9	323–15	Bolt	2
10	9080406	Bolt	1
11	9416	Bearing – Needle	1
12	6449	Axle – Seal	1
14	937108	Key – Woodruff	1
15	106826	Washer – Thrust	1
16	3243–5	Screw – Set	2
17	3218–3	Nut	2

Ref. No.	Part No.	Description	No. Used
18	105763	Hub – Rear	1
19	108357	Seal – Oil	1
20	1538	Bearing – Needle	1
21	323–26	Screw – Hex. Hd.	1
22	323–25	Screw – Hex. Hd.	3
23	109367	Bracket – Brake	1
24	323–9	Screw – Hex. Hd.	1
25	7956	Washer – Thrust	1
26	109370	Shaft	1
27	937099	Key – Woodruff	1
28	108363	Pin – Dowel	2
29	109752	Gear 46 Tooth	1
30	109742	Gear 20 Tooth	1
31	1532	Bearing – Needle	1
32	1518	Bearing – Needle	1
33	9547	Washer – Thrust	1
34	109703	Gear Assembly	1

3317–887

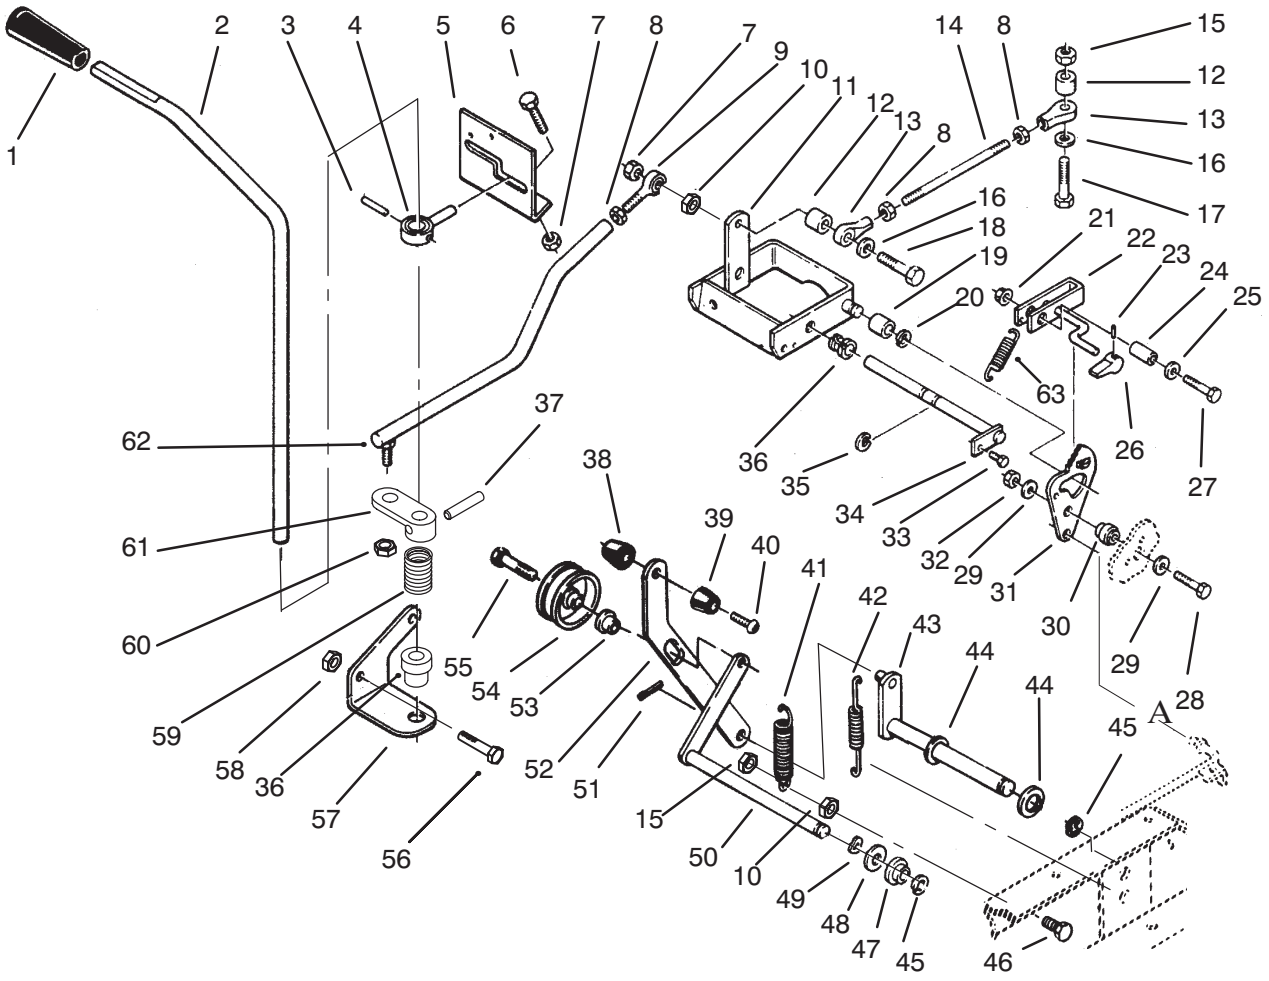


CLUTCH, BRAKE MOTION CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
1	116635	Knob – Motion Control	1
2	78–5660	Lever – Motion Control	1
3	933198	Pin – Spirol	1
4	118660	Guide – Control	1
5	78–5631	Bracket – Control	1
6	321–4	Bolt	2
7	3296–42	Nut	4
8	3220–1	Nut	3
9	116407	Rod End	1
10	3217–5	Nut	2
11	113454	Control – Cam	1
12	100304	Spacer	2
13	110189	Rod End Asm	2
14	108904	Rod Control 9” Long	1
15	32146–17	Nut	1
16	3256–22	Washer	2

Ref. No.	Part No.	Description	No. Used
17	321–9	Screw – Hex. Hd.	1
18	9114584	Bolt	1
19	100656	Bearing – Cam	1
20	32120–47	Ring – Retaining	4
21	102809	Nut – Special, Flanged	1
22	78–8500	Lever – Parking Brake	1
23	933135	Pin – Spirol	1
24	102025	Spacer	1
25	9202414	Washer	1
26	118860	Knob – Parking Brake Lever	1
27	323–9	Bolt	1
28	323–8	Bolt	1
29	3256–4	Washer	2
30	108717	Spacer	1
31	108716	Plate – Cam	1
32	3296–39	Nut	1

* Not Illustrated

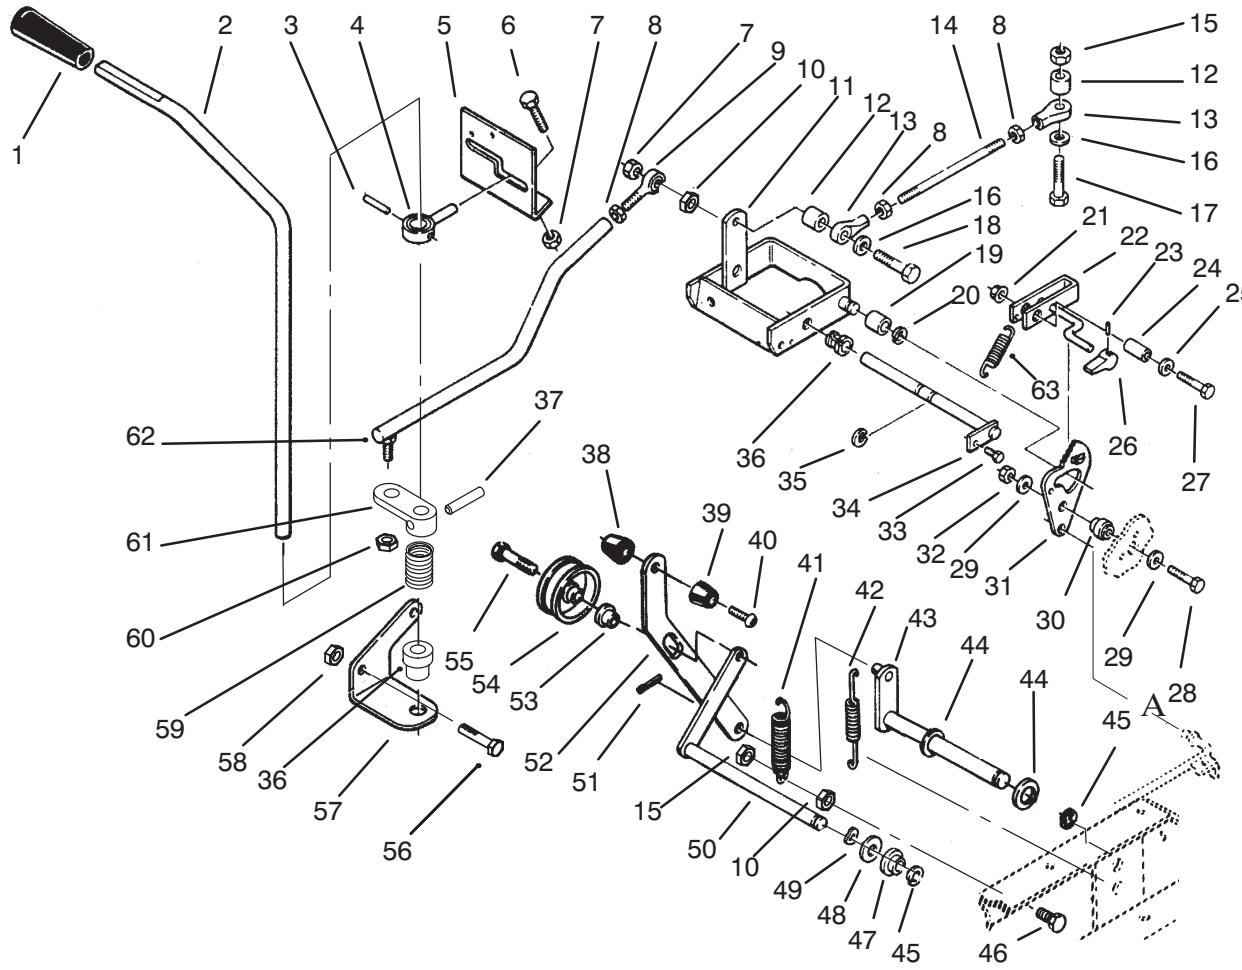


CLUTCH, BRAKE MOTION CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
33	9266944	Bolt	1
34	108496	Rod – Pivot	1
35	32120–47	Ring – Retaining	1
36	5983	Bushing	3
37	32121–94	Pin – Spirol	1
38	8722	Knob	1
39	8693	Knob	1
40	9117474	Screw	1
41	107938	Spring	1
42	110769	Spring	1
43	106369	Shaft	1
44	9202634	Washer	4
45	5701	Ring – Retaining	4
46	321–6	Bolt	1
47	7879	Bushing	1
48	3765	Washer – Shim	1

Ref. No.	Part No.	Description	No. Used
49	114823	Washer – Wave	1
50	78–6020	Rod – Pivot	1
51	3272–2	Pin – Cotter	1
52	110780	Handle	1
52	106368	Rod – Pivot	1
53	106450	Spacer	1
54	112426	Pulley – Idler	1
55	106193	Bolt – Special	1
56	322–3	Bolt	2
57	78–1540	Bracket – Control, Lower	1
58	3296–29	Nut	2
59	101853	Spring	1
60	3296–4	Nut	1
61	116321	Arm – Control	1
62	116324	Rod Assembly	1
63	83–2820	Spring	1

* Not Illustrated

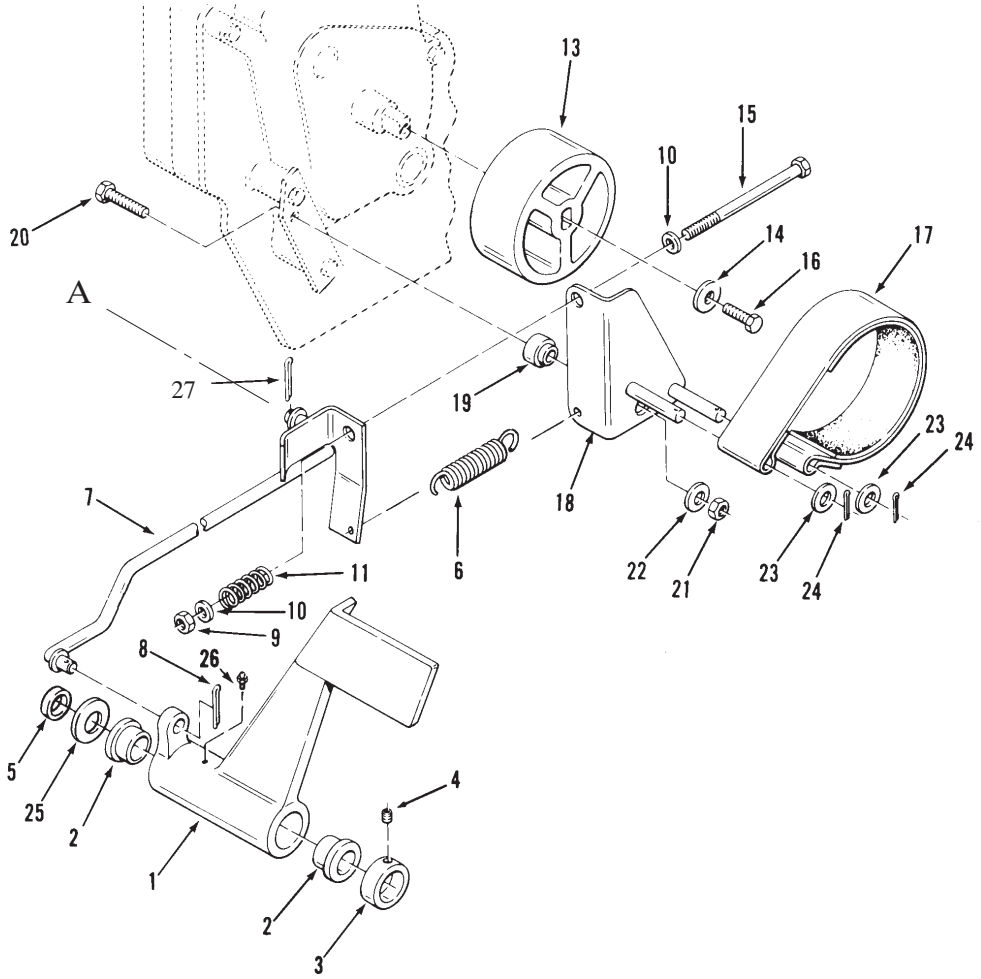


CLUTCH, BRAKE AND SPEED CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
1	79–1350	Pedal – Brake/Return To Neutral	1
2	6254	Bushing	2
3	111383	Collar	2
4	3245–32	Screw – Set	2
5	107691	Spacer	1
6	103125	Spring – Brake Return	1
7	109372	Rod – Brake, Front	1
8	3272–11	Pin – Cotter	2
9	3296–39	Nut	1
10	3256–24	Washer	2
11	108680	Spring	1
13	106719	Drum – Brake	1
14	2844	Special Washer	1

Ref. No.	Part No.	Description	No. Used
15	323–23	Bolt	1
16	3235–22	Bolt	1
17	109371	Band – Brake	1
18	78–7740	Arm – Brake Pivot	1
19	109356	Bushing	1
20	323–9	Bolt	1
21	3296–39	Nut	1
22	3256–4	Washer	1
23	3256–6	Washer	2
24	3272–6	Pin – Cotter	2
25	1278	Washer – Shim	1
26	302–5	Fitting – Grease	1
27	9335044	Pin – Cotter	1

Note : In Illustration Center lines A Continue on next page

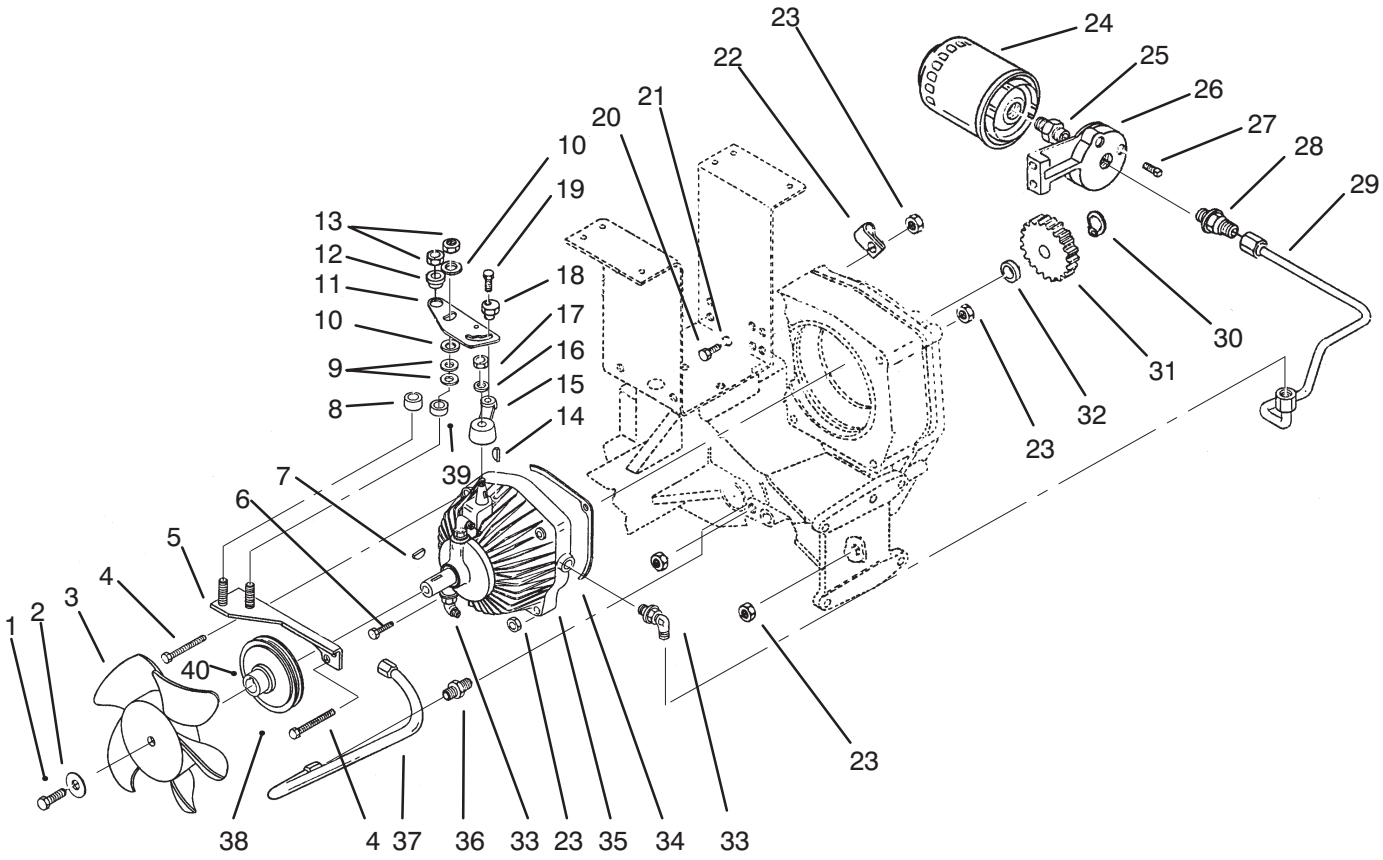


HYDROSTATIC TRANSMISSION

Ref. No.	Part No.	Description	No. Used
1	9080–26	Bolt	1
2	103995	Washer – Special	1
3	108393	Fan	1
4	323–25	Screw – Hex. Hd.	2
5	108329	Assembly – Plate, Control	1
6	9080406	Screw – Hex. Hd.	1
7	937089	Key – Hi–Pro	1
8	108326	Spacer – Pivot, Long	1
9	100365	Washer – Spring, Disc	2
10	100305	Washer – Friction	2
11	108333	Plate – Control, Speed	1
12	100309	Bushing – Pivot, Cam	1
13	108881	Nut	2
14	3257–24	Key – Woodruff	1
15	108325	Arm – Control, Speed	1
16	3256–26	Washer – Flat	1
17	3296–45	Nut – Lock	1
18	106661	Cam – Eccentric	1
19	9080196	Screw – Hex. Hd.	1
20	322–3	Screw – Hex. Hd.	2
21	3253–4	Washer – Lock	2

Ref. No.	Part No.	Description	No. Used
22	8830	”J”Clip	1
23	3296–39	Nut – Lock	4
24	79–5270	Filter – Oil	1
25	5991	Fitting – Filter	1
26	108323	Base – Filter	1
27	281–10	Plug – Pipe	3
28	102628	Fitting – Hyd., Straight (Incl. ”O”Ring)	1
*	973370	”O”Ring	1
29	79–5020	Tube – Filter to Pump	1
30	32120–64	Ring – Retaining	1
31	109751	Gear – 20 Teeth	1
32	108366	Spacer – Drive, Gear	1
33	108365	Fitting – Hydraulic 90°	2
34	108319	Gasket – Pump	1
35	108368	Assembly – Pump & Motor	1
36	108364	Fitting – Hyd., Straight	1
37	111217	Tube – Suction	1
38	108316	Pulley – Transmission Drive	1
39	108327	Spacer – Pivot, Short	1
*40	3242–2	Screw – Set	2

* Not Illustrated

EATON HYDROSTATIC TRANSMISSION # 1100–062

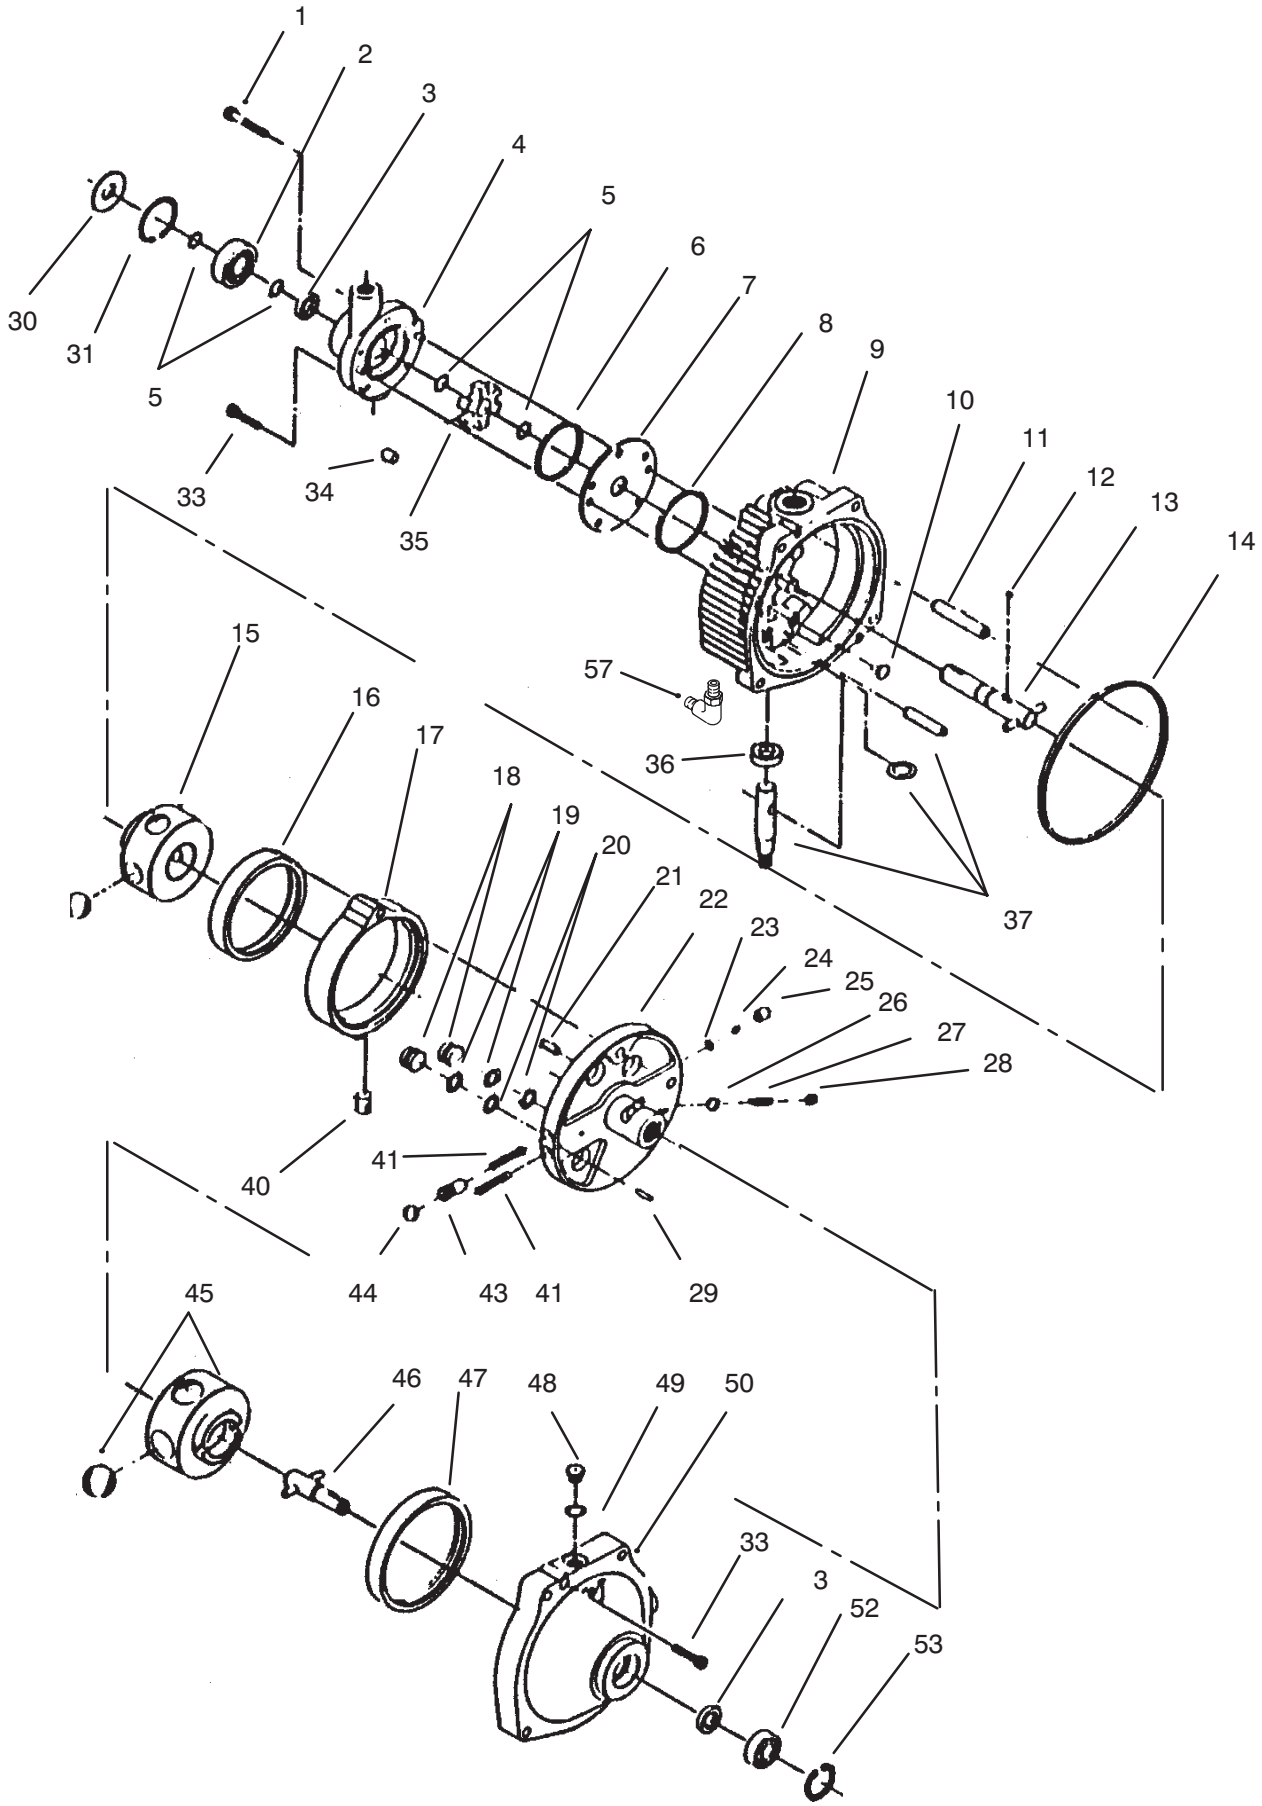


C–1572

EATON HYDROSTATIC TRANSMISSION # 1100–062

Ref. No.	Part No.	Description	No. Used
1	56–2800	Screw – Hex. Hd. Soc.	1
2	56–2810	Bearing – Ball	1
3	56–2820	Seal	2
4	112637	Housing – Pump Assembly (Incl. Ref.# 3)	1
5	56–3090	Ring – Retaining	4
6	56–2850	Ring – Seal	1
7	56–2860	Plate – Pump	1
8	56–2870	Ring – Seal	1
9	112641	Cover Assembly (Incl. Ref. #11, 36 & 37)	1
10	56–2880	Button	2
11	56–2890	Pin – Dowel	1
12	56–2900	Pin – Drive	1
13	56–2910	Shaft – Input	1
14	56–2920	Ring – Seal	1
15	56–2930	Rotor / Ball – Pump	1
16	113136	Race – Pump	1
17	93–9810	Ring –Cam	1
18	56–2950	Piston	2
19	56–2960	Ring – Back Up	2
20	56–2970	”O”Ring	2
21	56–2980	Pin – Coil	1
22	56–2990	Pintle Assembly (Inc. Ref. #1, 18–21, 23–29 41, 43 & 44)	1
23	56–3000	Ring – Retaining	2
24	56–3010	Ball	2
25	56–3020	Body – Check Valve	2
26	56–3030	Ball	1
27	56–3040	Spring – Relief Valve	1
28	56–3050	Plug – Relief Valve	1
29	56–3060	Pin – Dowel	1
30	112652	Shield – Grass	1
31	112653	Ring – Retaining	1
33	56–3100	Screw – Soc. Hd.	6
34	56–3110	Roller	6
35	56–3120	Carrier	1
36	56–3130	Seal – Oil	1
37	56–3140	Kit – Control Shaft	1
40	56–3170	Insert – Cam Ring	1
41	56–3180	Spring	2
43	56–3200	Body – Acc. Valve	2
44	56–3210	Ball	2
45	56–3220	Rotor / Ball – Motor	1
46	56–3230	Shaft – Output	1
47	56–3240	Race – Motor	1
48	56–3250	Plug – Asm (Incl. Ref. #49)	1
49	56–3260	”O”Ring	1
50	93–9811	Body Assembly	1
52	112666	Bearing – Output Before Serial No. 5901261	1
*	112602	Bearing – Output After Serial No. 5901260	1
53	56–3290	Ring – Retaining	1
56	56–2940	Ring – Cam (Incl. Ref.#16–17)	1
57	93–9813	Fitting – 90°	1
*	56–3310	Kit – Seal, Overhaul (Incl. Ref.# 3, 6, 8, 14, 19, 20, 36, & 49)	1
*	93–9812	Body Assembly (Incl. Ref. # 3, 33, 46–50. 52, 53 & 57)	1

ELECTRICAL SYSTEM

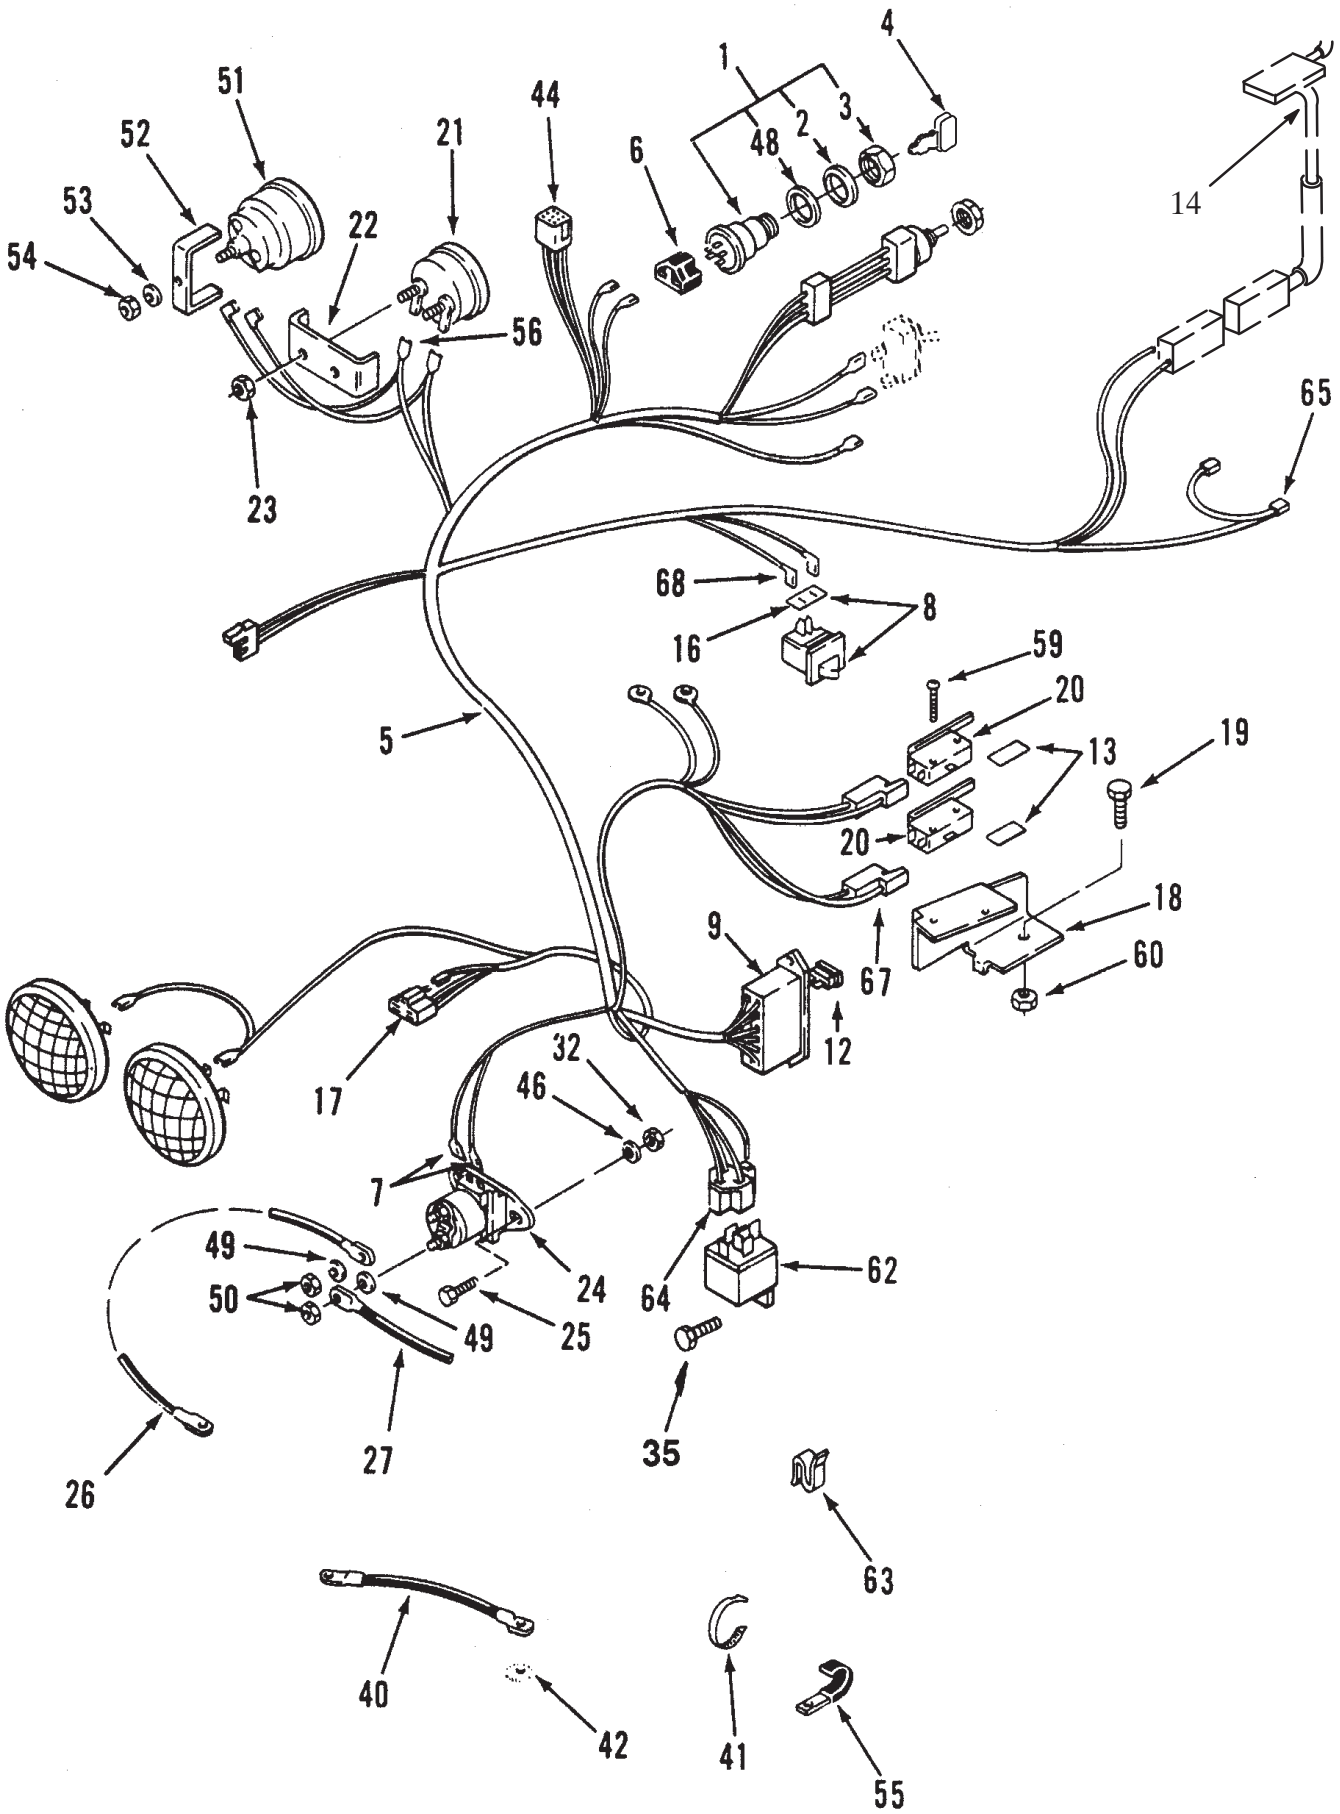


C–1496

ELECTRICAL SYSTEM


Ref. No.	Part No.	Description	No. Used
1	116338	Switch – Ignition	1
	111216	Switch – Ignition	1
2	920160	Washer – IntL. T	1
3	101884	Nut – Special	1
4	62–7770	Key – Ignition, Padded	1
5	79–3610	Harness Assy – Wiring (Incl. Ref.#6,7,9,44 & 64–68)	1
6	104926	Switch – Connector Body Ignition	1
7	518105	Terminal	1
8	115230	Switch – Clutch Interlock	1
9	120930	Body – Fuse	1
12	109355	Fuse 15 Amp ATO or ATC	1
	109102	Fuse 25 Amp ATO or ATC	1
	NN10277	Fuse 30 Amp ATO or ATC	1
13	111642	Barrier – Switch Insulator	2
14	38–1420	Switch – Seat	1
17	112185	Body – Connector	1
18	115411	Support – Switch	1
19	926671	Bolt	1
20	111332	Switch – PTO Interlock	3
21	79–0060	Voltmeter	1
22	78–0080	Clamp – Voltmeter, Back	1
23	5924	Nut	2
24	92–9845	Solenoid	1
25	9601524	Bolt – Whizlock	2
26	111069	Cable – Solenoid To Starter	1
27	111074	Cable – Battery, Positive	1
32	116497	Nut	4
35	910794	Screw	1
40	109910	Cable – Ground	1
41	100571	Tie – Cable	1
42	3254–2	Washer – Intl. T	1
44	102651	Terminal – Female	8
48	920262	Washer – Special	1
49	3253–3	Washer – Lock	2
50	3218–1	Nut	2
51	78–0020	Meter – Hour (Incl. Ref.# 52–54)	1
52	114017	Clamp – Steel	1
53	920120	Washer – Lock	1
54	915962	Nut – Hex	1
55	8830	”J”Clip	1
59	9104784	Screw	2
60	915732	Nut	2
62	116397	Relay	2
63	519337	Clip – Cable	1
64	518105	Terminal	1
65	6921	Terminal	1
68	518077	Terminal	2

ELECTRICAL SCHEMATIC

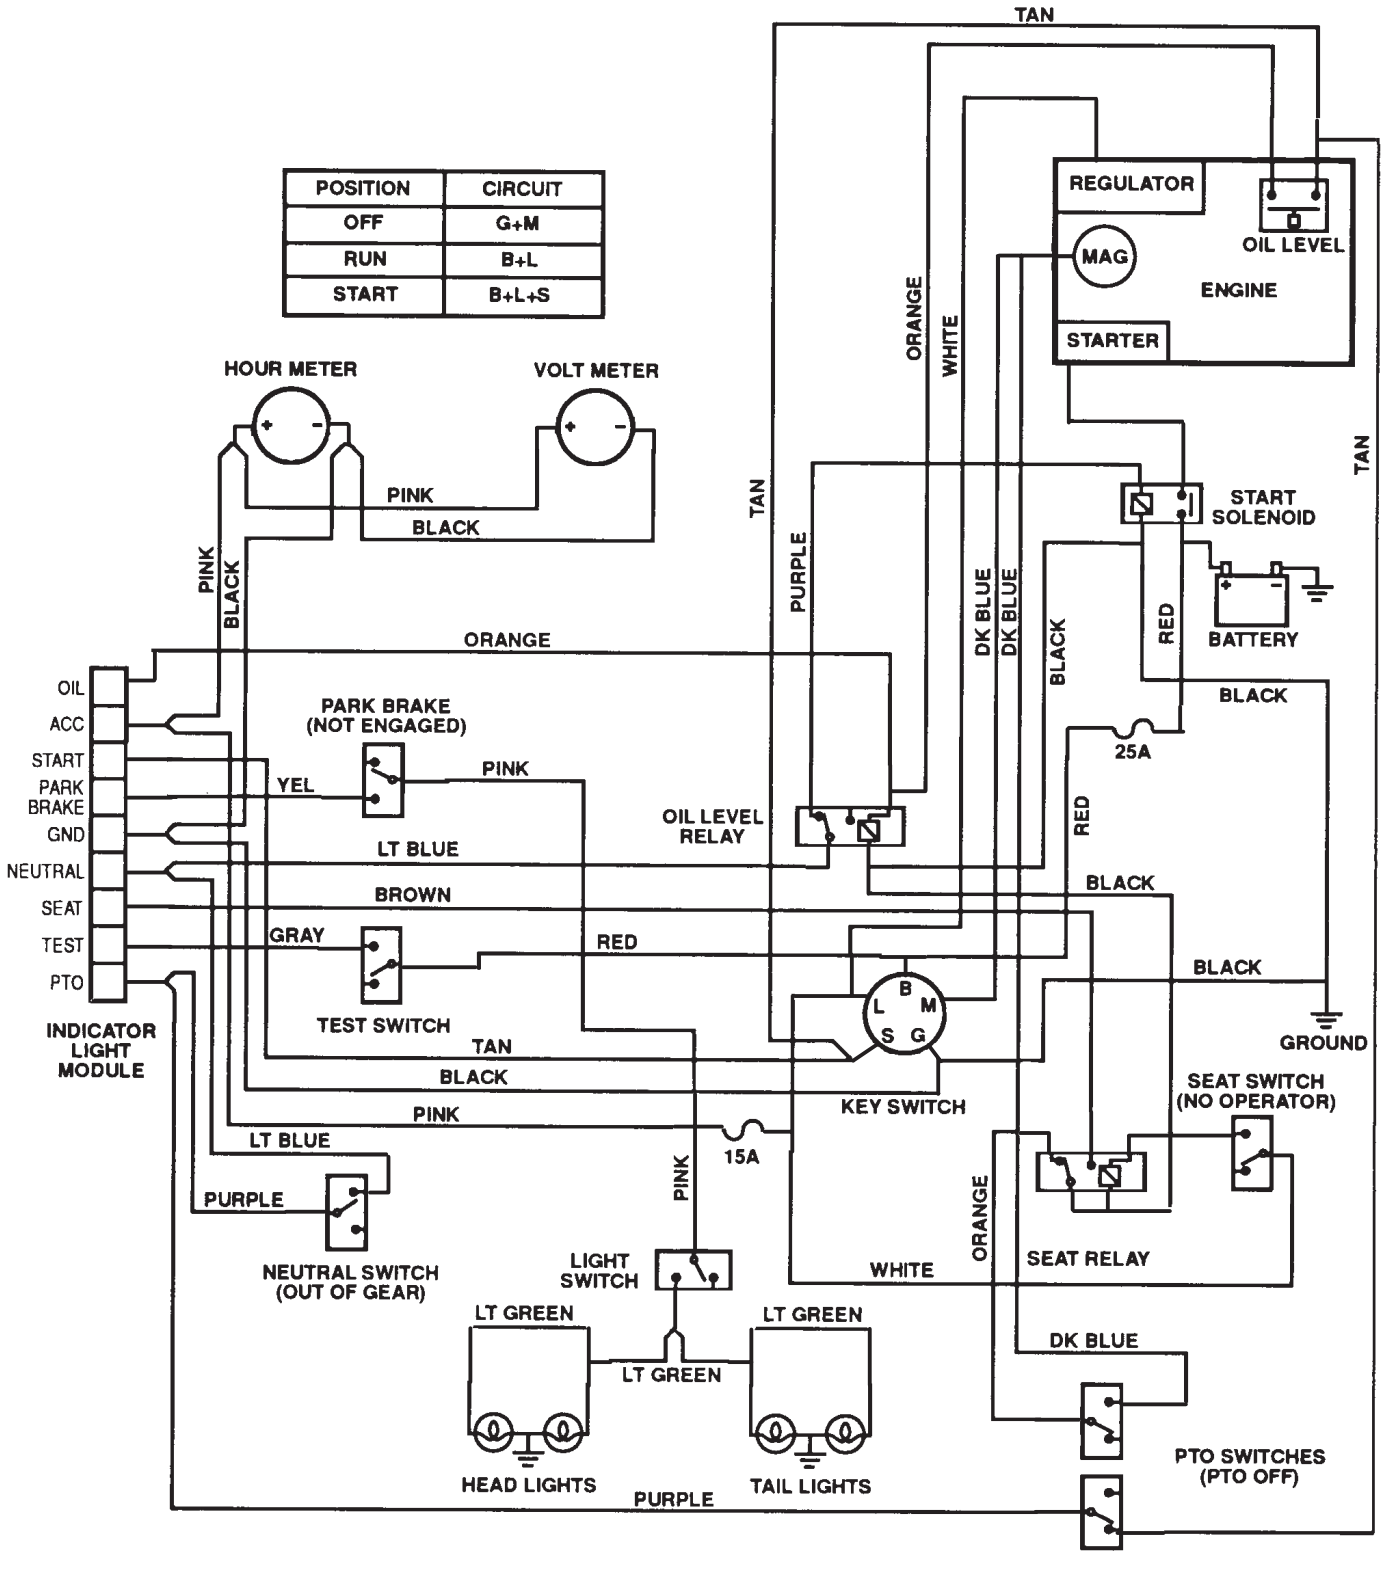

1142

3317–887

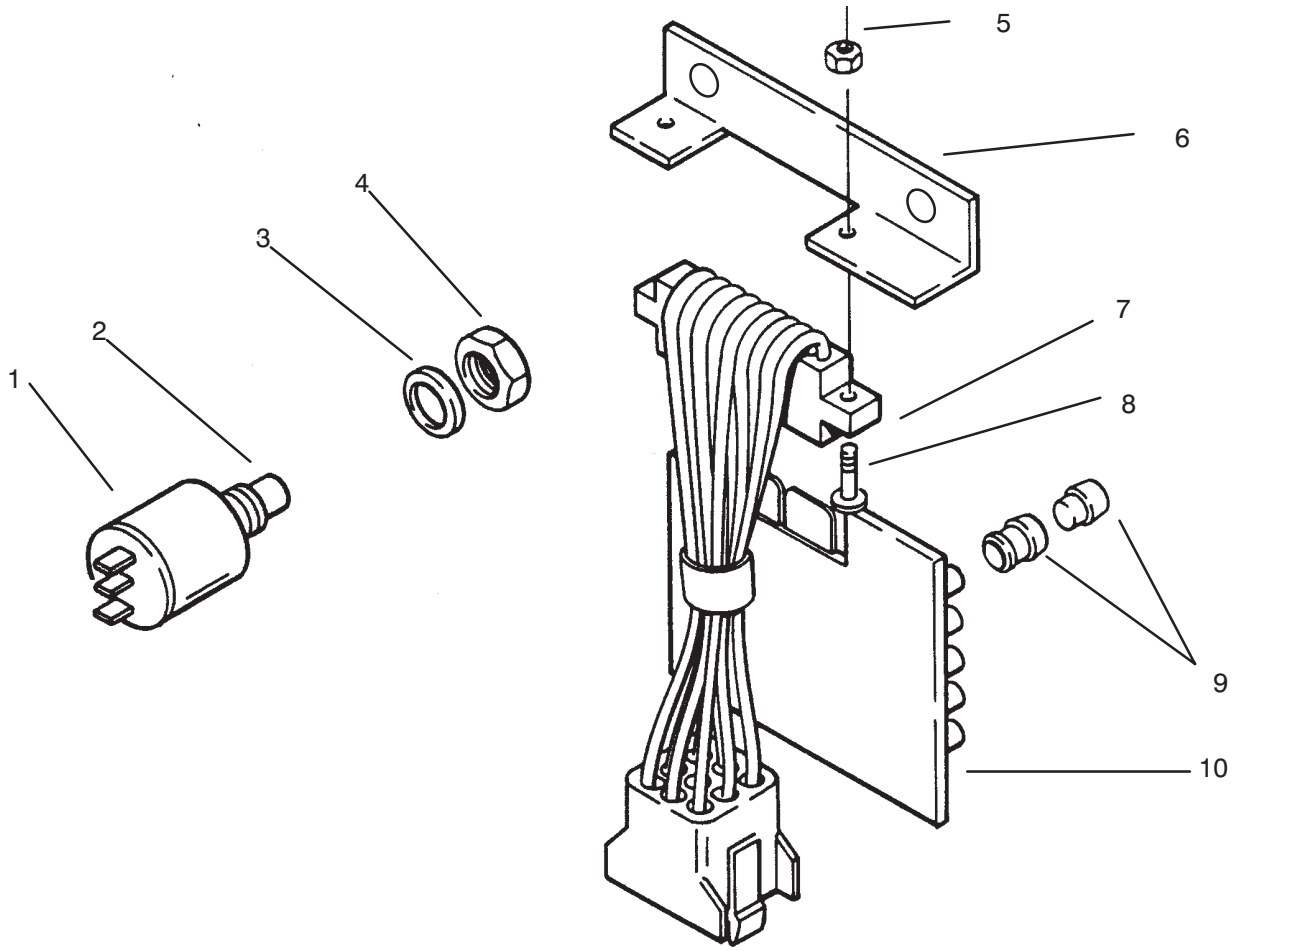


C–1497

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	116796	Test Switch	1
2	117217	Switch – Button (Incl. Ref. #2–4)	1
3	111767	Washer	1
4	111359	Nut – Hex	4
5	915732	Nut – Lock	2
6	112506	Bracket	1
7	116723	Harness – Wiring	1
8	9107562	Screw	2
9	111343	Bushing Assembly & Indicator Lens	5
10	114825	PC Board w/Lights	1


3317–887

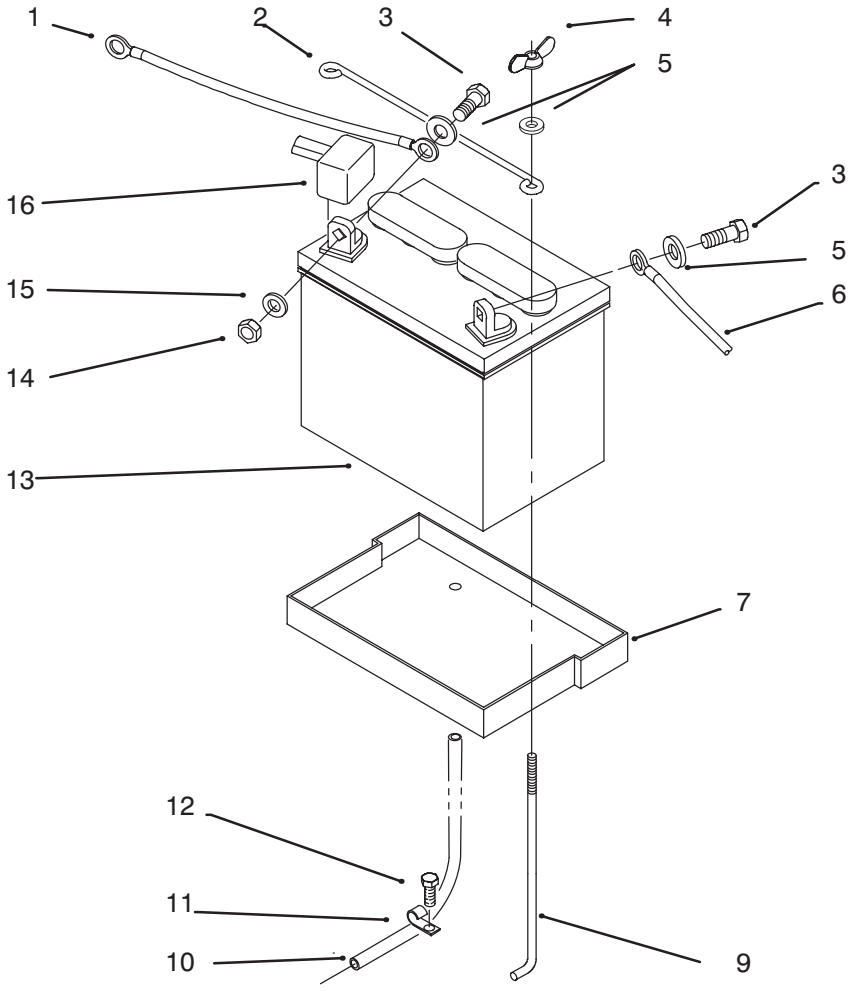

BATTERY

Ref. No.	Part No.	Description	No. Used
1	111074	Cable – Battery	1
2	113010	Rod – Battery Hold Down	1
3	321–3	Screw – Hex. Hd.	2
4	32103–22	Nut – Wing	2
5	3256–22	Washer	4
6	111069	Cable – Battery	1
7	106948	Tray – Battery	1
9	113969	Hook – Battery	2

Ref. No.	Part No.	Description	No. Used
10	114720	Tube – Battery	1
11	8830	”J”Clip	1
12	322–2	Screw – Hex. Hd.	1
13	93–4134	Battery	1
14	3296–42	Nut	2
15	3253–3	Washer – Lock	2
16	109553	Boot – Battery Cable	1

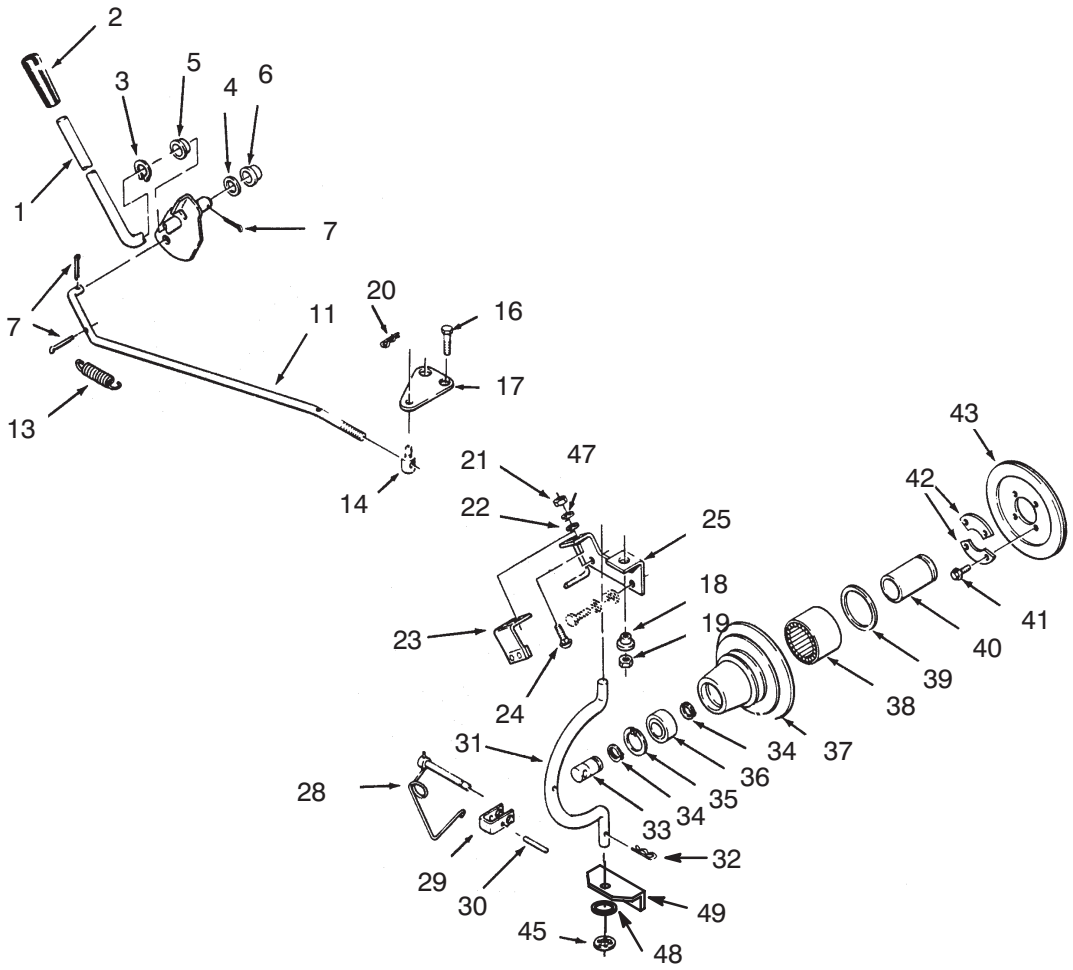


C–1500

PTO CLUTCH AND CONTROL

Ref. No.	Part No.	Description	No. Used
1	111234	Lever – PTO Clutch	1
2	9038	Grip	1
3	32151–11	Ring – Grip	1
4	3765	Washer – Shim	1
5	5666	Bushing – Nyliner	1
6	5983	Bushing	1
7	3272–10	Pin – Cotter	3
11	111052	Rod – PTO Clutch	1
13	103125	Spring	1
14	110656	Trunnion	1
16	323–7	Screw – Hex. Hd.	1
17	110669	Plate – PTO	1
18	104859	Spacer	1
19	3296–39	Nut	1
20	9335054	Pin – Cotter	1
21	3218–1	Nut	2
22	3256–22	Washer	2
23	110665	Brake Assembly – PTO	1
24	3229–25	Bolt – Carriage	2
25	111241	Bracket – Engine	1

Ref. No.	Part No.	Description	No. Used
28	111314	Pin – Locking	1
29	113107	Clevis	1
30	933274	Pin – Spirol	1
31	113108	Rod – PTO Housing	1
32	9335064	Pin – Cotter	1
33	102872	Shaft – Stub	1
34	32120–72	Ring – Retaining	2
35	32120–62	Ring – Retaining	1
36	109842	Bearing – Ball	1
37	103478	Housing – Pulley	1
38	6662	Bearing – Needle	1
39	6663	Seal	1
40	6658	Race – Bearing	1
41	321–8	Bolt – Nylok	4
42	6659	Retainer	2
43	114881	Facing – Clutch Plate	1
45	106695	Push–On Ring	2
47	3253–3	Washer – Lock	1
48	3256–27	Washer	1
49	102870	Bracket Support	1

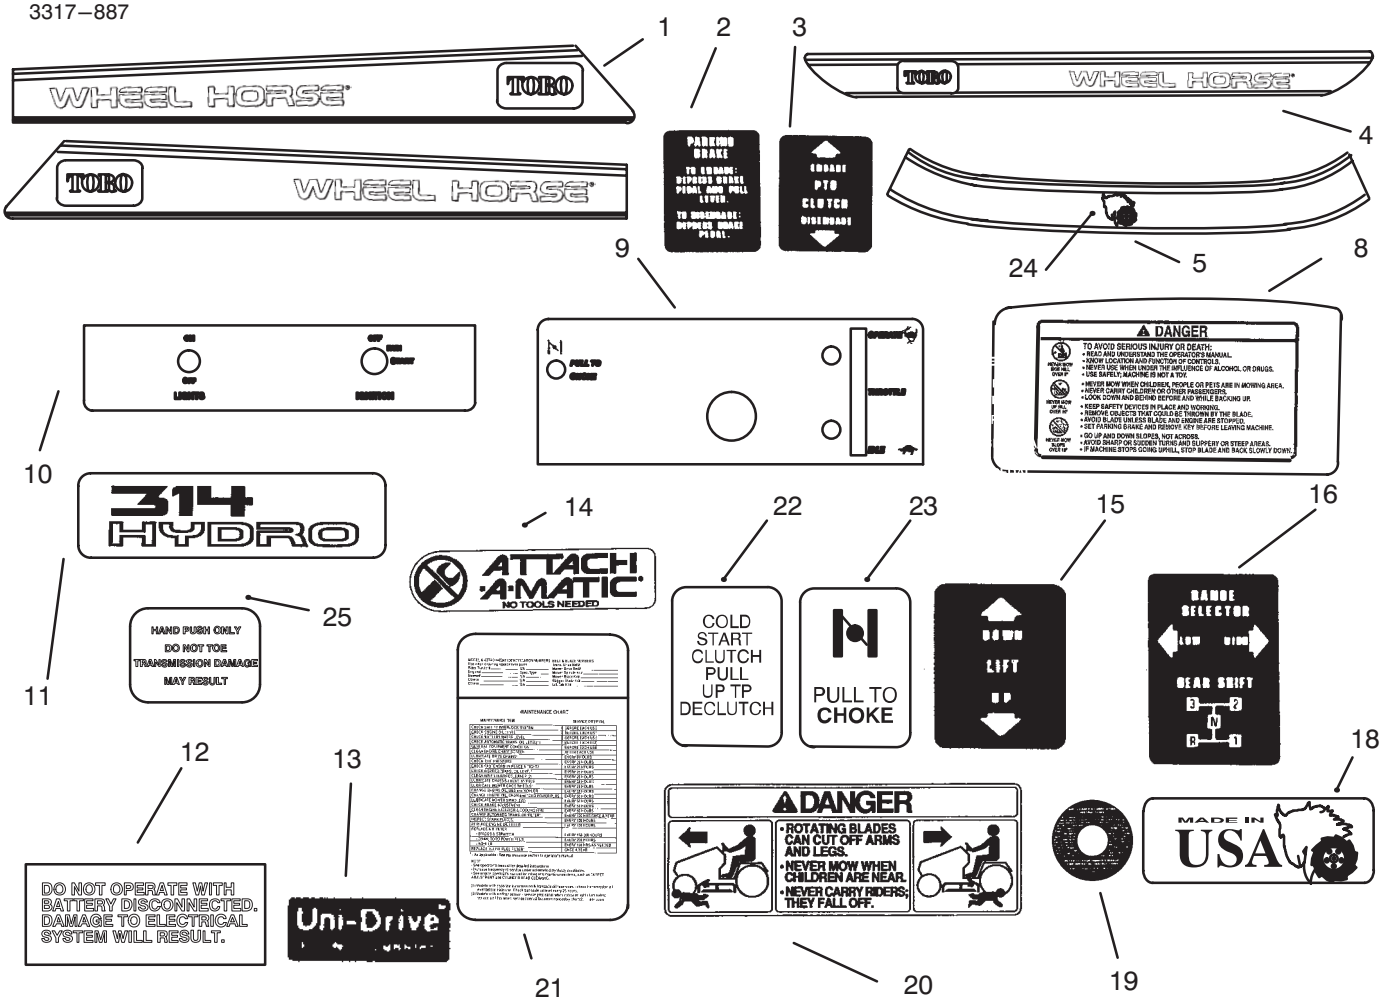

DECALS

Ref. No.	Part No.	Description	No. Used
1	92–9825	Decal – Hood RH	1
	92–9824	Decal – Hood LH	1
2	116445	Decal – Parking Brake	1
3	111960	Decal – PTO Clutch	1
4	92–9827	Decal – Rear Fender	1
5	92–9826	Decal – Front Hood	1
8	92–9837	Decal – Rear Hood Danger	1
9	78–7190	Decal – Lower Dash	1
10	79–2470	Decal – Switch Plate	1
11	92–9830	Decal – 314–Hydro	2
12	111926	Decal – Electrical System	1
13	92–8749	Decal – Unidrive	1

Ref. No.	Part No.	Description	No. Used
14	92–8747	Decal – Attach–A–Matic	2
15	112168	Decal – Lift	1
16	111534	Decal – Hi–Low Shift	1
18	76–1340	Decal – Made in U.S.A.	1
19	KH10191	Decal – Air Cleaner/Lub	1
20	92–8946	Decal – Danger	1
21	88–3200	Decal – Maintenance	1
22	78–9130	Decal – Cold Start	1
23	78–7300	Decal – Choke	1
24	92–9836	Plate – Logo, Wheel Horse	1
25	116446	Decal – Do Not Tow	1
*	92–1536	Loose Parts Package	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
1121	Key – Sq.	27	13	1
1278	Washer – Shim	32	25	1
1278	Washer – Shim .050	25	15	4
1481	Fitting – Grease, 45°	9	22	2
1518	Bearing – Needle	29	32	1
1532	Bearing – Needle	28	21	1
1532	Bearing – Needle	29	31	1
1538	Bearing – Needle	29	20	1
1644	Hitch – Drawbar	10	11	1
2844	Special Washer	32	14	1
3023	Clip – Small	6	8	1
3023	Clip – Speed	7	22	1
3023	Clip – Wire	11	15	1
3765	Washer – Shim	41	4	1
3765	Washer – Shim	31	48	1
5108	Stem – Valve	25	7	4
5210	Washer – Shim	9	11	A/R
5210	Washer – Shim .015	25	14	2
5618	Ring – Retaining	10	9	2
5618	Ring – Retaining	9	32	1
5638	Axle	9	31	1
5666	Bushing – Nyliner	41	5	1
5701	Ring – Retaining	31	45	4
5924	Nut	37	23	2
5924	Nut	3	25	2
5979	Bushing – Hood Pivot	2	15	2
5983	Bushing	26	6	1
5983	Bushing	41	6	1
5983	Bushing	31	36	3
5991	Fitting – Filter	33	25	1
6216	Pin & Plate	9	30	1
6229	Bearing	27	17	1
6254	Bushing	32	2	2
6397	Bearing	9	21	1
6449	Axle – Seal	28	6	1
6449	Axle – Seal	29	12	1
6472	Bearing – Flanged	9	5	1
6658	Race – Bearing	41	40	1
6659	Retainer	41	42	2
6662	Bearing – Needle	41	38	1
6663	Seal	41	39	1
6739	Trunnion	27	5	1
6876	Spacer	11	4	1
6921	Terminal	37	65	1
7007	Tube – Rear	25	2	2
7443	Pulley – Engine Drive	11	26	1
7456	Clamp	5	17	4
7607	Tire – Cleat, (Opt.)	25	4	2
7879	Bushing	31	47	1
7896	Washer – Bowed	9	15	1
7956	Washer – Thrust	29	25	1
8043	Bulb – Light, Metal Base	6	14	2
8616	Spring	10	1	2
8693	Knob	31	39	1
8722	Knob	31	38	1
8830	”J”Clip	11	11	1
8830	”J”Clip	40	11	1
8830	”J”Clip	18	12	1
8830	”J”Clip	3	22	2
8830	”J”Clip	33	22	1
8830	”J”Clip	6	27	1
8830	”J”Clip	37	55	1
9038	Grip	41	2	1
9038	Grip	10	20	1
9416	Bearing – Needle	28	7	1
9416	Bearing – Needle	29	11	1
9547	Washer – Thrust	29	33	1
11952	Washer – Special Hub Cap	25	18	2
100079	Tube – Front (Opt.)	25	22	2
100304	Spacer	30	12	2
100305	Washer – Friction	33	10	2
100309	Bushing – Pivot, Cam	33	12	1
100365	Washer – Spring, Disc	33	9	2
100571	Tie – Cable	26	*	1
100571	Tie – Cable	37	41	1
100656	Bearing – Cam	30	19	1
101017	Rod – Mid Hitch Lock	10	17	1
101623	Gear – Differential Pinion	28	17	8
101699	Kit – Service, Cylinder	26	24	1
101707	Lock – Attachment	10	24	1
101711	Housing – Front Hitch	10	3	1
101750	Rod – Pivot Latch	10	22	1
101751	Rod – Lock	10	25	1
101757	Spacer	26	28	1
101850	Rod – Hood Stop	2	19	1
101853	Spring	31	59	1
101884	Nut – Special	37	3	1
101884	Nut – Special	3	13	1
101889	Gear – Differential Axle	28	15	2
102025	Spacer	30	24	1
102138	Switch – Light	3	23	1
102628	Fitting – Hyd., Straight	33	28	1
102628	Fitting – Straight Adapter	26	19	1
102644	Plate – Mid Hitch	10	4	2
102651	Terminal – Female	37	44	8
102809	Nut – Special, Flanged	30	21	1
102870	Bracket Support	41	49	1
102872	Shaft – Stub	41	33	1
102950	Ring – Retaining	3	18	1
103125	Spring	41	13	1
103125	Spring – Brake Return	32	6	1
103478	Housing – Pulley	41	37	1
103995	Washer – Special	33	2	1
104047	Bushing	6	15	1
104048	Valve – Fuel Shut–Off	6	16	1
104841	Spring	26	16	1
104859	Spacer	41	18	1
104926	Switch – Connector Body	37	6	1
105061	Gear – Differential Ring	28	18	1
105202	Base – Taillight, w/Bulb	6	11	2
105269	Shaft – Drawbar Hitch	10	10	1
105316	Cap – Lock Rod	10	19	2
105453	Key	11	18	1
105503	Bushing	7	19	2
105524	Bracket – Pivot	7	9	2
105763	Hub – Rear	28	1	1
105763	Hub – Rear	29	18	1
105797	Ring – Retaining	2	16	2
105797	Ring – Retaining	10	26	6
105876	Ring – Retaining	28	16	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
106193	Bolt – Special	31	55	1
106209	Angle – Belt Guard	4	17	1
106222	Footrest – RH	5	22	1
106223	Footrest – LH	5	18	1
106234	Tank – Fuel	6	1	1
106236	Support – Fuel Tank, RH	6	30	1
106267	Grommet – Rubber	26	30	1
106269	Bearing – Flanged	27	8	2
106368	Rod – Pivot	31	52	1
106369	Shaft	31	43	1
106448	Tube – Filler	28	9	1
106450	Spacer	31	53	1
106522	Chain – Lift	27	4	1
106634	Pin – Hitch	10	13	1
106661	Cam – Eccentric	33	18	1
106695	Push–On Ring	41	45	2
106719	Drum – Brake	32	13	1
106826	Washer – Thrust	28	4	1
106826	Washer – Thrust	29	15	1
106858	Clamp	11	7	1
106948	Tray – Battery	40	7	1
107069	Clip	5	12	3
107069	Nut – Speed	4	13	7
107374	Washer – Special	29	4	4
107691	Spacer	32	5	1
107938	Spring	31	41	1
107951	Bracket – Fender Front	6	24	1
107975	Belt Guard Asm	5	1	1
108130	Wire – Headlight Ground	2	2	1
108312	Gasket – Case	29	8	1
108316	Pulley – Transmission Drive	33	38	1
108319	Gasket – Pump	33	34	1
108323	Base – Filter	33	26	1
108325	Arm – Control, Speed	33	15	1
108326	Spacer – Pivot, Long	33	8	1
108327	Spacer – Pivot, Short	33	39	1
108329	Assembly – Plate, Control	33	5	1
108333	Plate – Control, Speed	33	11	1
108357	Seal – Oil	29	19	1
108361	Axle – Rear, LH Short	29	1	1
108362	Axle – Rear, RH Long	28	5	1
108363	Pin – Dowel	29	28	2
108364	Fitting – Hyd., Straight	33	36	1
108365	Fitting – Hydraulic 90°	33	33	2
108366	Spacer – Drive, Gear	33	32	1
108368	Assembly – Pump & Motor	33	35	1
108393	Fan	33	3	1
108457	Nut – Push	5	3	1
108464	Support – Fuel Tank, LH	6	21	1
108496	Rod – Pivot	31	34	1
108501	Belt – Drive	11	24	1
108537	Bracket Belt	5	27	1
108680	Spring	32	11	1
108716	Plate – Cam	30	31	1
108717	Spacer	30	30	1
108881	Nut	28	12	4
108881	Nut	33	13	2
108904	Rod Control 9 Long	30	14	1
109045	Bulb – Light, All Glass	6	*	2
109081	Kit – Service, Valve	26	*	1
109088	Kit – Service, Cylinder	26	25	1
109102	Fuse 25 Amp ATO or ATC	37		1
109189	Bearing	9	35	1
109262	Washer – Special	9	16	2
109355	Fuse 15 Amp ATO or ATC	37	12	1
109356	Bushing	32	19	1
109367	Bracket – Brake	29	23	1
109370	Shaft	29	26	1
109371	Band – Brake	32	17	1
109372	Rod – Brake, Front	32	7	1
109459	Clamp	2	3	2
109494	Retainer – Headlight RH	2	*	1
109495	Retainer – Headlight LH	2	22	1
109500	Fitting – Grease	25	12	2
109530	Nut	3	10	1
109553	Boot – Battery Cable	40	16	1
109554	Bracket – Belt Guard	5	6	1
109703	Gear Assembly	29	34	1
109742	Gear 20 Tooth	29	30	1
109751	Gear – 20 Teeth	33	31	1
109752	Gear 46 Tooth	29	29	1
109842	Bearing – Ball	41	36	1
109910	Cable – Ground	37	40	1
109910	Wire – Ground	11	16	1
109989	Spacer	7	20	4
110124	Hose – Valve To Cylinder	26	29	1
110125	Hose – Valve To Cylinder	26	18	1
110189	Rod End Asm	30	13	2
110513	Bearing – Ball	25	16	4
110636	Pad – Footrest	5	15	2
110656	Trunnion	41	14	1
110665	Brake Assembly – PTO	41	23	1
110669	Plate – PTO	41	17	1
110677	Wheel – Cleat (Opt.)	25	*	2
110768	Dipstick	28	10	1
110769	Spring	31	42	1
110780	Handle	31	52	1
110920	Spring – Seat	7	1	2
110960	Fender	6	4	1
111052	Rod – PTO Clutch	41	11	1
111069	Cable – Battery	40	6	1
111069	Cable – Solenoid To Starter	37	26	1
111071	Bumper	7	17	2
111074	Cable – Battery	40	1	1
111074	Cable – Battery, Positive	37	27	1
111196	Cap – Differential End	29	2	1
111196	Cap – Differential End	28	13	1
111199	Bearing – Ball	29	3	1
111199	Bearing – Ball	28	19	1
111201	Case – Transaxle, LH	29	7	1
111216	Switch – Ignition	37		1
111217	Tube – Suction	33	37	1
111234	Lever – PTO Clutch	41	1	1
111241	Bracket – Engine	41	25	1
111242	Guide – Belt, Bottom	11	19	1
111314	Pin – Locking	41	28	1
111332	Switch – PTO Interlock	37	20	3
111343	Bushing Assembly	39	9	5
111359	Nut – Hex	39	4	4
111383	Collar	32	3	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
111392	”J”Clip	3	37	1
111516	Wheel – Rear	25	6	2
111534	Decal – Hi–Low Shift	42	16	1
111642	Barrier – Switch Insulator	37	13	2
111757	Edging – Console	3	3	1
111767	Washer	39	3	1
111926	Decal – Electrical System	42	12	1
111951	Hubcap	25	20	2
111960	Decal – PTO Clutch	42	3	1
112168	Decal – Lift	42	15	1
112185	Body – Connector	37	17	1
112213	Muffler	11	8	1
112214	Control – Choke	3	9	1
112415	Stop – PTO	3	2	1
112426	Pulley – Idler	31	54	1
112506	Bracket	39	6	1
112506	Bracket – Indicator Lights	3	32	1
112564	Lens – Taillight	6	13	2
112602	Bearing – Output After	35	*	1
112637	Housing – Pump Assembly	35	4	1
112641	Cover Assembly	35	9	1
112652	Shield – Grass	35	30	1
112653	Ring – Retaining	35	31	1
112666	Bearing – Output Before	35	52	1
112841	Cap	11	20	1
113010	Rod – Battery Hold Down	40	2	1
113107	Clevis	41	29	1
113108	Rod – PTO Housing	41	31	1
113136	Race – Pump	35	16	1
113179	Nut	3	19	1
113381	Spindle – LH	9	33	1
113382	Spindle – RH	9	*	1
113443	Tube – Steering	9	17	1
113445	Bar – Lift	27	15	1
113454	Control – Cam	30	11	1
113969	Hook – Battery	40	9	2
114000	Valve – Hydraulic		261	1
114017	Clamp – Steel	37	52	1
114343	Spring – Gas	7	16	1
114344	Spacer	7	11	2
114345	Bracket	7	14	1
114427	Logo – Hub Cap 8 (Opt.)	25	23	2
114428	Logo – Hub Cap 12 (Opt.)	25	1	2
114720	Tube – Battery	40	10	1
114823	Washer – Wave	31	49	1
114825	PC Board w/Lights	39	10	1
114881	Facing – Clutch Plate	41	43	1
115230	Switch – Clutch Interlock	37	8	1
115411	Support – Switch	4	3	1
115411	Support – Switch	37	18	1
115854	Control – Throttle	3	34	1
116000	Bolt – Carriage	5	9	4
116302	Arm – Control	26	8	1
116305	Bracket – Control Rod	26	11	1
116321	Arm – Control	31	61	1
116324	Rod Assembly	31	62	1
116338	Switch – Ignition	3	29	1
116338	Switch – Ignition	37	1	1
116397	Relay	37	62	2
116407	Rod End	30	9	1
116445	Decal – Parking Brake	42	2	1
116446	Decal – Do Not Tow	42	25	1
116497	Nut	37	32	4
116634	Knob – Hydraulic Lift	26	13	1
116635	Knob – Motion Control	30	1	1
116723	Harness – Wiring	39	7	1
116744	Tire – Turf Trac, Rear	25	3	2
116745	Rod – Pivot	2	18	1
116746	Bracket – RH	2	*	1
116747	Bracket – LH	2	17	1
116796	Test Switch	39	1	1
117127	Tire – Turf Trac, Front	25	21	2
117217	Switch – Button	39	2	1
117331	Bracket – Fuse Holder	5	24	1
117343	Latch – Hood	3	31	2
117344	Handle Assembly	2	11	2
117371	Bolt – Carriage	4	6	4
117431	Rivet – Pop	3	30	4
117432	Rivet – Pop	2	10	4
117930	Latch – Mid Hitch	10	21	1
118660	Guide – Control	30	4	1
118860	Knob – Parking Brake Lever	30	26	1
119340	Cylinder – Hydraulic	26	26	1
120590	Stop – Throttle	3	35	1
120930	Body – Fuse	37	9	1
121100	Lever – Lift	27	11	1
518077	Terminal	37	68	2
518105	Terminal	37	7	1
518105	Terminal	37	64	1
518211	Bumper	5	10	2
519337	Clip – Cable	37	63	1
910762	Screw	3	7	2
910792	Screw	3	4	6
910794	Screw	37	35	1
910794	Screw – Machine	5	7	2
910808	Screw	6	12	4
910837	Bolt – Carriage	5	4	9
910837	Screw	4	12	7
910837	Screw	3	20	7
911423	Bolt	29	5	4
915732	Nut	37	60	2
915732	Nut – Lock	39	5	2
915740	Nut	5	23	4
915740	Nut – Lock	3	36	2
915960	Nut	3	33	2
915962	Nut – Hex	37	54	1
920120	Washer – Lock	37	53	1
920150	Washer – Lock	3	8	2
920160	Washer – IntL. T	37	2	1
920160	Washer – IntL. T	3	12	1
920262	Washer – Special	3	11	1
920262	Washer – Special	37	48	1
926671	Bolt	2	4	2
926671	Bolt	37	19	1
926697	Bolt	6	3	2
933135	Pin – Spirol	30	23	1
933198	Pin – Spirol	30	3	1
933198	Pin – Spirol	26	7	1
933274	Pin – Spirol	41	30	1
937089	Key – Hi–Pro	33	7	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
937099	Key – Woodruff	29	27	1
937108	Key – Woodruff	29	14	1
937108	Key – Woodruff	28	22	1
973310	”O”Ring	26	17	4
973370	”O”Ring	33	*	1
973370	”O”Ring	26	20	4
9080196	Screw – Hex. Hd,	33	19	1
9080356	Bolt	29	6	1
9080406	Bolt	29	10	1
9080406	Screw – Hex. Hd,.	33	6	1
9104784	Screw	37	59	2
9107562	Screw	39	8	2
9114584	Bolt	30	18	1
9117474	Screw	31	40	1
9151126	Nut	4	4	4
9202324	Washer	26	27	1
9202414	Washer	30	25	1
9202594	Washer – Special	3	17	1
9202634	Washer	31	44	4
9266714	Screw – Hex. Hd..	4	2	13
9266944	Bolt	6	5	2
9266944	Bolt	5	26	6
9266944	Bolt	31	33	1
9266944	Screw – Hex. Hd.	4	15	11
9266944	Screw – Hex. Washer Hd.	3	1	3
9321204	Pin – Clevis	26	3	1
9329974	Pin – Clevis	26	23	1
9335044	Pin – Cotter	32	27	1
9335054	Pin – Cotter	27	2	1
9335054	Pin – Cotter	27	7	1
9335054	Pin – Cotter	10	14	1
9335054	Pin – Cotter	41	20	1
9335064	Pin – Cotter	41	32	1
9335074	Pin – Cotter	27	12	2
9601524	Bolt – Whizlock	37	25	2
9791204	Spacer	10	12	2
KH10009	Gasket – Flange	13		
KH10010	Clip – Hi–Tension	18	18	1
KH10029	Insert – Exhaust Valve	20	7	1
KH10034	Seal	19	6	1
KH10034	Seal	12	7	1
KH10035	Pin – Governor Stop	15	3	1
KH10040	Screw	15	47	1
KH10049	Bearing	20	8	1
KH10054	Retainer – Upper Spring	21	7	2
KH10055	Gasket	20	16	1
KH10057	Reed	19	3	1
KH10058	Gasket	19	1	1
KH10059	Gasket	23	8	1
KH10062	Spring	21	14	2
KH10067	Ball Bearing	20	3	2
KH10070	Bushing	15	22	1
KH10071	Valve – Intake	21	6	1
KH10072	Plate	19	2	1
KH10081	Shaft – Balance Gear	20	18	1
KH10082	Connector	18	16	1
KH10087	Washer	15	24	1
KH10088	Gasket	23	6	1
KH10090	Valve – Exhaust	21	5	1
KH10091	Kit – Stator 15 am	18	9	1
KH10093	Gasket	13	2	1
KH10093	Gasket – Bowl Screen	13		
KH10094	Gasket	13	6	1
KH10094	Gasket– Bowl	13		
KH10095	Gasket	14	5	1
KH10107	Screw – Hex. Hd.	17	5	4
KH10108	Screw	17	7	1
KH10109	Screw – Idle Speed Adj.	13	19	1
KH10110	Screw	13	14	4
KH10112	Spring – Idle Fuel	13	16	1
KH10113	Spring	13	8	1
KH10114	Spring – Adj.	13	18	1
KH10116	Screw	13	1	1
KH10117	Bowl – Fuel	13	3	1
KH10119	Decal – Float Switch	23	*	1
KH10123	Connector – 90°	14	3	2
KH10124	Fan	17	4	1
KH10126	Screen	17	6	1
KH10128	Ball	13	7	1
KH10130	Line – Fuel	14	1	1
KH10132	Needle – Idle Fuel Adj.	13	15	1
KH10134	Sleeve	23	12	1
KH10135	Tag – Caution	24	*	1
KH10136	Washer	15	25	1
KH10143	Baffle	19	4	1
KH10144	Screw	20	22	8
KH10145	Washer	20	21	9
KH10146	Gasket	13		
KH10146	Gasket – Carburetor	13		
KH10147	Spacer .005	21	3	1
KH10148	Spacer .010	21	*	1
KH10149	Gasket	19	7	1
KH10150	Stud	19	9	1
KH10152	Washer	15	41	2
KH10181	Bolt	24	7	2
KH10188	Spacer	17	3	4
KH10189	Nut	12	3	1
KH10191	Decal – Air Cleaner	12	*	1
KH10191	Decal – Air Cleaner/Lub	42	19	1
KH10201	”O”Ring	23	2	1
KH10209	Cap – Drive End	24	11	1
KH10210	End Cap Ass’Y	24	8	1
KH10221	Kit – Retainer	21	10	2
KH10228	Gear Assembly	21	21	2
KH10231	Baffle – Head	16	3	1
KH10235	Element – Precleaner	12	5	1
KH10236	Element	12	6	1
KH10244	Brace – Starter Tail	24	2	1
KH10245	Kit – Crankshaft	21	16	1
KH10247	Armature	24	10	1
KH10248	Pan – Oil	23	7	1
KH10258	Set – Gasket w/o Seals	20	*	1
KH10259	Camshaft Assy	21	1	1
KH10261	Head – Cylinder	20	19	1
KH10262	Retainer – Piston Pin	22	3	2
KH10263	Flywheel	17	1	1
KH10265	Housing – Blower	16	8	1
KH10266	Adapter – Oil Fill	23	4	1
KH10267	Bearing – Needle	21	22	2
KH10268	Seal	20	12	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
KH10269	Seal	20	4	1
KH10270	Dipstick	23	1	1
KH10272	Gasket	20	9	1
KH10274	Gasket	13		1
KH10274	Gasket – Carburetor	13		
KH10275	Filter	19	5	1
KH10278	Elbow	11	6	1
KH10279	Baffle – Side Air	16	2	1
KH10280	Baffle – Inner	16	7	1
KH10282	Baffle – Cylinder	16	6	1
KH10287	Linkage – Choke (Carb. to	15	32	1
KH10289	Screw – Pozidrive T.H.	16	5	3
KH10290	Screw	20	24	1
KH10292	Spring	21	2	1
KH10293	Lever – Choke Control	15	42	1
KH10294	Lever – Throttle Control	15	43	1
KH10295	Lever – Governor	15	27	1
KH10296	Spring (Governor to Carb.)	15	31	1
KH10297	Base – Air Cleaner	12	9	1
KH10298	Cover	19	8	1
KH10299	Cover	12	2	1
KH10302	Space	15	44	1
KH10303	Bracket – Clutch Control	15	48	1
KH10304	Bracket – Solenoid	24	*	1
KH10304	Bracket – Starter	24	5	1
KH10308	Clamp	15	49	1
KH10309	Hose	19	11	1
KH10310	Pin – Camshaft	21	4	1
KH10311	Gasket	20	10	1
KH10312	Strap – Lifting	20	23	1
KH10313	Lead –Violet, Regulator–	18	*	1
KH10315	Lead – Wire, Module	18	*	1
KH10319	Pump Assy – Fuel	14	4	1
KH10321	Module – Ignition	18	1	1
KH10322	Kit – Spacer	21	19	2
KH10323	Kit – Drive	24	12	1
KH10324	Kit – Drive Parts	24	13	1
KH10325	Set – Gasket w/ Seals	20	*	1
KH10345	Connector	18	11	1
KH10345	Connector – Female	23	13	1
KH10358	Kit – Choke & Throttle	13	*	1
KH10412	Cover – Air Cleaner Element	12	4	1
KH10413	Screw – Hex .Hd.	16	1	6
KH10496	Rotator – Valve	21	13	2
KH10515	Kit – Brush	24	9	1
KH10535	Nut – Lock	11	5	1
KH10539	Tappet – Intake Valve	21	11	2
KH10541	Screw	23	5	3
KH10545	Screw	20	14	4
KH10545	Screw	15	34	1
KH10548	Screw	18	3	2
KH10549	Screw	24	*	1
KH10549	Screw	24	6	2
KH10549	Screw	20	13	4
KH10550	Screw	23	9	4
KH10552	Screw – Pozidrive	14	7	2
KH10556	Washer – Lock	15	38	1
KH10562	Plug	20	5	1
KH10567	Washer	16	4	1
KH10569	Washer	14	6	2
KH10569	Washer	15	39	1
KH10570	Washer	18	2	2
KH10570	Washer	15	35	1
KH10570	Washer – Flat	18	7	1
KH10574	Retainer	21	20	1
KH10576	Nut – Wing	12	1	1
KH10585	Spacer	15	23	1
KH10586	Clamp	14	2	2
KH10588	Key – Woodruff	17	2	1
KH10600	Screw	15	37	1
KH10605	Screw	15	45	1
KH10605	Screw – Pozidrive	18	10	4
KH10606	Screw – Hex. Hd.	18	4	1
KH10607	Screw – Hex. Hd.	24	3	1
KH10609	Screw	12	8	3
KH10610	Screw	18	6	1
KH10610	Screw – Hex. Hd.	24	4	1
KH10617	Plug – Cup	21	15	1
KH10618	Clip	18	5	1
KH10619	Nut	15	50	1
KH10620	Plug	23	10	4
KH10624	Nut	15	40	1
KH10626	Screw	15	28	1
KH10629	Nut – Pal	15	8	1
KH10629	Palnut	19	10	1
KH10660	Kit – Governor Gear	15	1	1
KH10661	Cover	20	15	1
KH10663	Kit – Float	13	4	1
KH10666	Washer	17	8	1
KH10673	Regulator – Rectifier	18	14	2
KH10677	Gasket – Air Cleaner	13		
KH10682	Bushing &	13		
KH10682	Bushing	13		
KH10682	Bushing – Linkage Natural	13		
KH10686	Bushing Linkage Black	13		
KH10687	Plate – Bearing	20	11	1
KH10693	Carburetor Assembly	13		
KH10693	Kit – Adjustable Jet	13	*	
KH10694	Main – Needle	13	17	1
KH10695	Rod – Connecting .010	22	*	1
KH10695	Washer	15	46	1
KH10696	Kit – Carburetor Repair	13	*	
KH10697	Gasket	12	10	1
KH10697	Gasket	13		
KH10697	Gasket – Air Cleaner	13		
KH10700	Gasket	20	20	1
KH10701	Carburetor Linkage	13		
KH10701	Linkage (Governor to Carb.)	15	30	1
KH10702	Shaft – Choke	13	20	1
KH10709	Jet – Main	13		1
KH10709	Main Jet	13		1
KH10710	Kit – High Altitude Jet	13	*	
KH10733	Gasket	13		
NN10277	Fuse 30 Amp ATO or ATC	37		1
38–1420	Switch – Seat	7	21	1
38–1420	Switch – Seat	37	14	1
55–3570	Fuel Cap	6	6	1
56–2800	Screw – Hex. Hd. Soc.	35	1	1
56–2810	Bearing – Ball	35	2	1
56–2820	Seal	35	3	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
56–2850	Ring – Seal	35	6	1
56–2860	Plate – Pump	35	7	1
56–2870	Ring – Seal	35	8	1
56–2880	Button	35	10	2
56–2890	Pin – Dowel	35	11	1
56–2900	Pin – Drive	35	12	1
56–2910	Shaft – Input	35	13	1
56–2920	Ring – Seal	35	14	1
56–2930	Rotor / Ball – Pump	35	15	1
56–2940	Ring – Cam	35	56	1
56–2950	Piston	35	18	2
56–2960	Ring – Back Up	35	19	2
56–2970	”O”Ring	35	20	2
56–2980	Pin – Coil	35	21	1
56–2990	Pintle Assembly (Inc. Ref. #1,3	52		1
56–3000	Ring – Retaining	35	23	2
56–3010	Ball	35	24	2
56–3020	Body – Check Valve	35	25	2
56–3030	Ball	35	26	1
56–3040	Spring – Relief Valve	35	27	1
56–3050	Plug – Relief Valve	35	28	1
56–3060	Pin – Dowel	35	29	1
56–3090	Ring – Retaining	35	5	4
56–3100	Screw – Soc. Hd.	35	33	6
56–3110	Roller	35	34	6
56–3120	Carrier	35	35	1
56–3130	Seal – Oil	35	36	1
56–3140	Kit – Control Shaft	35	37	1
56–3170	Insert – Cam Ring	35	40	1
56–3180	Spring	35	41	2
56–3200	Body – Acc. Valve	35	43	2
56–3210	Ball	35	44	2
56–3220	Rotor / Ball – Motor	35	45	1
56–3230	Shaft – Output	35	46	1
56–3240	Race – Motor	35	47	1
56–3250	Plug – Asm	35	48	1
56–3260	”O”Ring	35	49	1
56–3290	Ring – Retaining	35	53	1
56–3310	Kit – Seal, Overhaul	35	*	1
62–7770	Key – Ignition, Padded	37	4	1
62–7770	Key – Ignition, Padded	3	14	1
66–0120	Knob – Control	3	5	1
76–1340	Decal – Made in U.S.A.	42‘	18	1
76–1420	Steering Wheel	9	12	1
78–0020	Meter – Hour	3	15	1
78–0020	Meter – Hour	37	51	1
78–0080	Clamp – Volt Meter	3	24	1
78–0080	Clamp – Voltmeter, Back	37	22	1
78–0370	Insert	9	13	1
78–1540	Bracket – Control, Lower	31	57	1
78–1540	Bracket – Lower Control	4	8	1
78–1550	Bellcrank	27	14	1
78–2680	Frame	10	8	1
78–2880	Shaft – Lower	9	7	1
78–2900	Tie Rod Assembly	9	27	2
78–2920	Tie Rod End	9	25	2
78–2990	Plate – Seat Pivot	7	10	1
78–3010	Bracket – Battery Support	4	1	1
78–3020	Plate – Front	4	16	1
78–3320	Clamp – Steel	3	26	1
78–5610	Console	3	6	1
78–5620	Plate – Hood Stand	3	21	1
78–5631	Bracket – Control	30	5	1
78–5640	Bar – Lift	26	5	1
78–5660	Lever – Motion Control	30	2	1
78–5670	Rod – Lift Control	26	9	1
78–6020	Rod – Pivot	31	50	1
78–7190	Decal – Lower Dash	42	9	1
78–7300	Decal – Choke	42	23	1
78–7740	Arm – Brake Pivot	32	18	1
78–8500	Lever – Parking Brake	30	22	1
78–9130	Decal – Cold Start	42	22	1
79–0060	Meter – Volt	3	16	1
79–0060	Voltmeter	37	21	1
79–0670	Seat	7	4	1
79–1350	Pedal – Brake/Return	32	1	1
79–2470	Decal – Switch Plate	42	10	1
79–3610	Harness Assy – Wiring	37	5	1
79–4990	Bracket – Fender Support	6	20	1
79–5020	Tube – Filter to Pump	33	29	1
79–5130	Cover – Side, LH	4	14	1
79–5270	Filter – Oil	33	24	1
83–2720	Bolt – Lug	25	5	10
83–2820	Spring	31	63	1
83–6520	Rod – Lock	10	18	1
86–9280	Tube – Hydraulic (Pressure)	26	21	1
88–2710	Support – Steering Shaft	9	8	1
88–2782	Hood	2	8	1
88–2790	Decal – Danger	28	23	1
88–3200	Decal – Maintenance	42	21	1
92–1525	Hoodstand	4	7	1
92–1532	Engine – 14HP Kohler	11	9	1
92–1536	Loose Parts Package	42	*	1
92–4987	Shaft – Upper	9	9	1
92–6697	Screw	7	5	4
92–7251	Kit – Carburetor w/Linkage	13	*	
92–7252	Carburetor Assembly	13	10	1
92–7253	Bushing	15	33	1
92–7254	Bushing	15	29	1
92–7255	Plate – Choke	13	21	1
92–7256	Shaft w/Lever & Seal	13	12	1
92–7257	Plate – Throttle	13	13	1
92–7258	Shaft – Governor Gear	20	2	1
92–7259	Guide – Valve	20	6	2
92–7260	Starter Assembly	24	1	1
92–7262	Kit – Governor Cross Shaft	15	26	1
92–7263	Choke Lever Assembly	15	*	1
92–7264	Clip	18	8	1
92–7265	Plug – Spark	18	17	1
92–7266	Screw	18	15	2
92–7267	Rod – Connecting Std.	22	4	1
92–7268	Piston w/Ring Set Std.	22	2	1
92–7269	Piston w/Ring Set .003	22	*	1
92–7270	Piston w/Ring Set .010	22	*	1
92–7271	Piston w/Ring Set .020	22	*	1
92–7272	Piston w/Ring Set .030	22	*	1
92–7273	Set – Ring, Std. & .003	22	1	1
92–7274	Set – Ring .010	22	*	1
92–7275	Set – Ring .020	22	*	1
92–7276	Set – Ring .030	22	*	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–7278	Kit – Float Switch	23	11	1
92–7279	Short Block	20	1	1
92–7280	Miniblock (w/Out Crankshaft)	20		1
92–7281	Decal – HP	16	9	1
92–7296	Plate – Shift Cover	4	11	1
92–7298	Case – Transaxle, RH	28	11	1
92–8747	Decal – Attach–A–Matic	42	14	2
92–8749	Decal – Unidrive	42	13	1
92–8946	Decal – Danger	4	10	1
92–8946	Decal – Danger	42	20	1
92–9511	Line – Fuel 62”	6	26	1
92–9824	Decal – Hood LH	2	*	1
92–9824	Decal – Hood LH	42		1
92–9825	Decal – Hood RH	42	1	1
92–9825	Decal – Hood RH	2	7	1
92–9826	Decal – Front Hood	42	5	1
92–9826	Decal – Hood, Front	2	6	1
92–9827	Decal – Rear Fender	42	4	1
92–9830	Decal – 314–Hydro	42	11	2
92–9836	Decal – Logo	2	23	1
92–9836	Plate – Logo, Wheel Horse	42	24	1
92–9837	Decal – Danger	2	9	1
92–9837	Decal – Rear Hood Danger	42	8	1
92–9845	Solenoid	37	24	1
93–1613	Latch – Front Hitch	10	23	1
93–4134	Battery	40	13	1
93–9800	Wheel Assembly – Front	25	*	2
93–9801	Rim – Front	25	17	2
93–9810	Ring –Cam	35	17	1
93–9811	Body Assembly	35	50	1
93–9812	Body Assembly	35	*	1
93–9813	Fitting – 90°	35	57	1
93–9814	Transaxle	28	*	1
94–1802	Tube – Hydraulic (Return)	26	32	1
237–69	”O”Ring	9	10	1
2412–98	Clamp	6	19	2
281–10	Plug – Pipe	28	20	2
281–10	Plug – Pipe	33	27	3
302–5	Fitting – Grease	32	26	1
302–5	Fitting – Grease, Straight	9	34	2
321–2	Screw	18	13	1
321–3	Screw – Hex. Hd.	40	3	2
321–4	Bolt	5	5	2
321–4	Bolt	30	6	2
321–4	Screw	26	10	1
321–6	Bolt	31	46	1
321–8	Bolt – Nylok	41	41	4
321–8	Screw – Hex. Hd.	7	13	2
321–9	Screw – Hex. Hd.	30	17	1
321–11	Bolt	26	31	2
322–1	Bolt	9	28	1
322–2	Bolt	6	18	2
322–2	Screw – Hex. Hd.	40	12	1
322–3	Bolt	6	23	6
322–3	Bolt	31	56	2
322–3	Screw – Hex. Hd.	33	20	2
322–3	Screw – Hex. Hd.	4	9	2
322–4	Screw – Hex. Hd.	7	18	6
322–5	Bolt	27	3	1
322–5	Screw – Hex. Hd.	7	8	4
322–5	Screw – Hex. Hd.	6	29	2
323–5	Bolt	10	6	4
323–6	Bolt	9	6	2
323–6	Bolt	11	13	2
323–7	Screw – Hex. Hd.	41	16	1
323–8	Bolt	11	17	2
323–8	Bolt	9	19	2
323–8	Bolt	30	28	1
323–9	Bolt	32	20	1
323–9	Bolt	30	27	1
323–9	Screw – Hex. Hd.	29	24	1
323–15	Bolt	29	9	2
323–23	Bolt	32	15	1
323–25	Screw – Hex. Hd.	33	4	2
323–25	Screw – Hex. Hd.	29	22	3
323–26	Screw – Hex. Hd.	29	21	1
323–44	Screw – Hex. Hd.	10	16	6
324–5	Bolt	11	23	3
3217–5	Nut	30	10	2
3217–27	Nut – Hex	3	28	1
3218–1	Nut	41	21	2
3218–1	Nut	37	50	2
3218–3	Nut	28	3	2
3218–3	Nut	29	17	2
3219–3	Nut	9	26	2
3220–1	Nut	30	8	3
3229–25	Bolt – Carriage	2	20	4
3229–25	Bolt – Carriage	41	24	2
3230–1	Bolt	5	25	1
3231–25	Bolt – Carriage	10	5	3
3235–22	Bolt	32	16	1
3235–22	Screw – Hex. Hd.	6	28	1
3242–2	Screw – Set	33	*40	2
3243–5	Screw – Set	28	2	2
3243–5	Screw – Set	29	16	2
3245–32	Screw – Set	32	4	2
3246–2	Screw – Set	11	25	2
3253–3	Washer – Lock	40	15	2
3253–3	Washer – Lock	41	47	1
3253–3	Washer – Lock	37	49	2
3253–4	Washer	11	2	1
3253–4	Washer – Lock	7	2	4
3253–4	Washer – Lock	6	17	2
3253–4	Washer – Lock	33	21	2
3253–4	Washer – Lock	9	29	1
3253–6	Washer – Lock	11	22	3
3253–21	Washer – Lock	10	7	4
3253–21	Washer – Lock	11	14	2
3254–1	Washer – Lock	6	10	4
3254–2	Washer – Intl. T	2	13	1
3254–2	Washer – Intl. T	37	42	1
3255–25	Washer – Lock	3	27	1
3256–4	Washer	6	2	2
3256–4	Washer	32	22	1
3256–4	Washer	30	29	2
3256–6	Washer	32	23	2
3256–21	Washer	6	9	4
3256–22	Washer	40	5	4
3256–22	Washer	7	12	2
3256–22	Washer	2	14	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3256–22	Washer	30	16	2
3256–22	Washer	41	22	2
3256–23	Washer	11	3	1
3256–23	Washer	7	6	4
3256–23	Washer	27	18	1
3256–23	Washer	6	25	2
3256–23	Washer – Flat	26	15	2
3256–24	Washer	32	10	2
3256–25	Washer	11	21	3
3256–26	Washer	27	1	1
3256–26	Washer – Flat	10	15	1
3256–26	Washer – Flat	33	16	1
3256–27	Washer	41	48	1
3256–62	Washer	27	9	2
3257–24	Key – Woodruff	33	14	1
3272–1	Pin – Cotter	2	21	2
3272–1	Pin – Cotter	26	4	1
3272–2	Pin – Cotter	31	51	1
3272–6	Pin – Cotter	32	24	2
3272–10	Pin – Cotter	41	7	3
3272–11	Pin – Cotter	32	8	2
3272–11	Pin – Cotter	26	22	1
3272–17	Pin – Cotter	25	19	2
3272–19	Pin – Cotter	9	23	1
3272–21	Pin – Cotter	9	18	1
3296–4	Nut	31	60	1
3296–6	Nut	9	24	4
3296–27	Nut	6	7	4
3296–29	Nut	5	16	11
3296–29	Nut	27	19	1
3296–29	Nut	6	22	6
3296–29	Nut	31	58	2
3296–29	Nut	26	14	1
3296–29	Nut – Lock	5	2	7
3296–29	Nut – Lock	7	3	6
3296–29	Nut – Lock	4	5	2
3296–39	Nut	10	2	9
3296–39	Nut	27	6	1
3296–39	Nut	28	8	6
3296–39	Nut	32	9	1
3296–39	Nut	41	19	1
3296–39	Nut	32	21	1
3296–39	Nut	30	32	1
3296–39	Nut	11	12	2
3296–39	Nut – Lock	9	4	4
3296–39	Nut – Lock	33	23	4
3296–42	Nut	26	2	2
3296–42	Nut	30	7	4
3296–42	Nut	5	8	1
3296–42	Nut	2	12	4
3296–42	Nut	40	14	2
3296–42	Nut	26	12	1
3296–42	Nut – Lock	7	15	2
3296–45	Nut – Lock	33	17	1
32103–22	Nut – Wing	40	4	2
32120–47	Ring – Retaining	27	16	1
32120–47	Ring – Retaining	31	35	1
32120–47	Ring – Retaining	30	20	4
32120–62	Ring – Retaining	41	35	1
32120–64	Ring – Retaining	33	30	1
32120–72	Ring – Retaining	41	34	2
32120–93	Ring – Retaining	9	2	2
32121–94	Pin – Spirol	31	37	1
32121–111	Pin – Spirol	9	14	1
32136–5	Nut – Slotted	9	20	1
32146–17	Nut	30	15	1
32151–11	Ring – Grip	41	3	1
32151–91	Retainer	27	10	2
9080–26	Bolt	33	1	1

*Not Illustrated

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number .
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Hood Assembly	2
Control Panel	3
Hood Stand And Supports	4
Belt Guard & Footrest	5
Fender, Fender Supports And Fuel Tank	6
Seat	7
Front Axle and Steering	8
Frame & Hitches	10
Engine, Muffler, Pulley And Drive Belt	11
Air Intake	12
Carburetors	13
Fuel Pump	14
Governor Linkage	15
Baffles And Shrouds	16
Flywheel	17
Ignition System	18
Breather And Vent	19
Crankcase And Cylinder Head	20
Camshaft, Crankshaft And Valves	21
Piston And Rings	22
Oil Pan And Dipstick	23
Starter	24
Wheel And Tires	25
Hydraulic Control System	26
Hydrostatic Lift Linkage	27
Transaxle Assembly	28
Clutch, Brake Motion Control Linkage	30
Clutch, Brake and Speed Control Linkage	32
Hydrostatic Transmission	33
Transmission Assembly	34
Electrical System & Schematic	36–39
Battery	40
P.T.O. Clutch And Control	41
Decals	42
Numerical Parts List	43

Optional Equipment

Description	Model / Part No.
36" Rear Discharge Deck	78305
42" Side Discharge Deck	78345
42" Rear Discharge Deck	78350
42" Recycler	78355
36" Tiller	79370
48" Dozer Blade	79350
50" Grader Blade	79351
42" Single Stage Snowthrower	79360
11 cu. ft. Twin Bagger (42" Mower)	79301
Wheel Weight, Rear	81115
Wheel Weight, Rear Flush	81117
Tire Chains	82522
Clevis Hitch	85518
Chrome Front LoGo Hub Cap	111427
Chrome Rear LoGo Hub Cap	114428
Auxiliary Fuel Tank	*83300
Kits	
H.D. Spindles, Wheels & Tires	80494
Recycler (42" R.D. Mower)	86001
Leaf Baffle (42" S.D. Mower)	85501

* CAN NOT BE USED WITH CLEVIS HITCH OR REAR BAGGER

MAINTENANCE RECORD

Date								