FORM NO. 3317–889


TORO®

MODEL NO. 73420–5900615 & UP
MODEL NO. 73440–5900223 & UP

PARTS CATALOG


WHEEL HORSE®

416–8 Garden Tractor
416–8e Garden Tractor

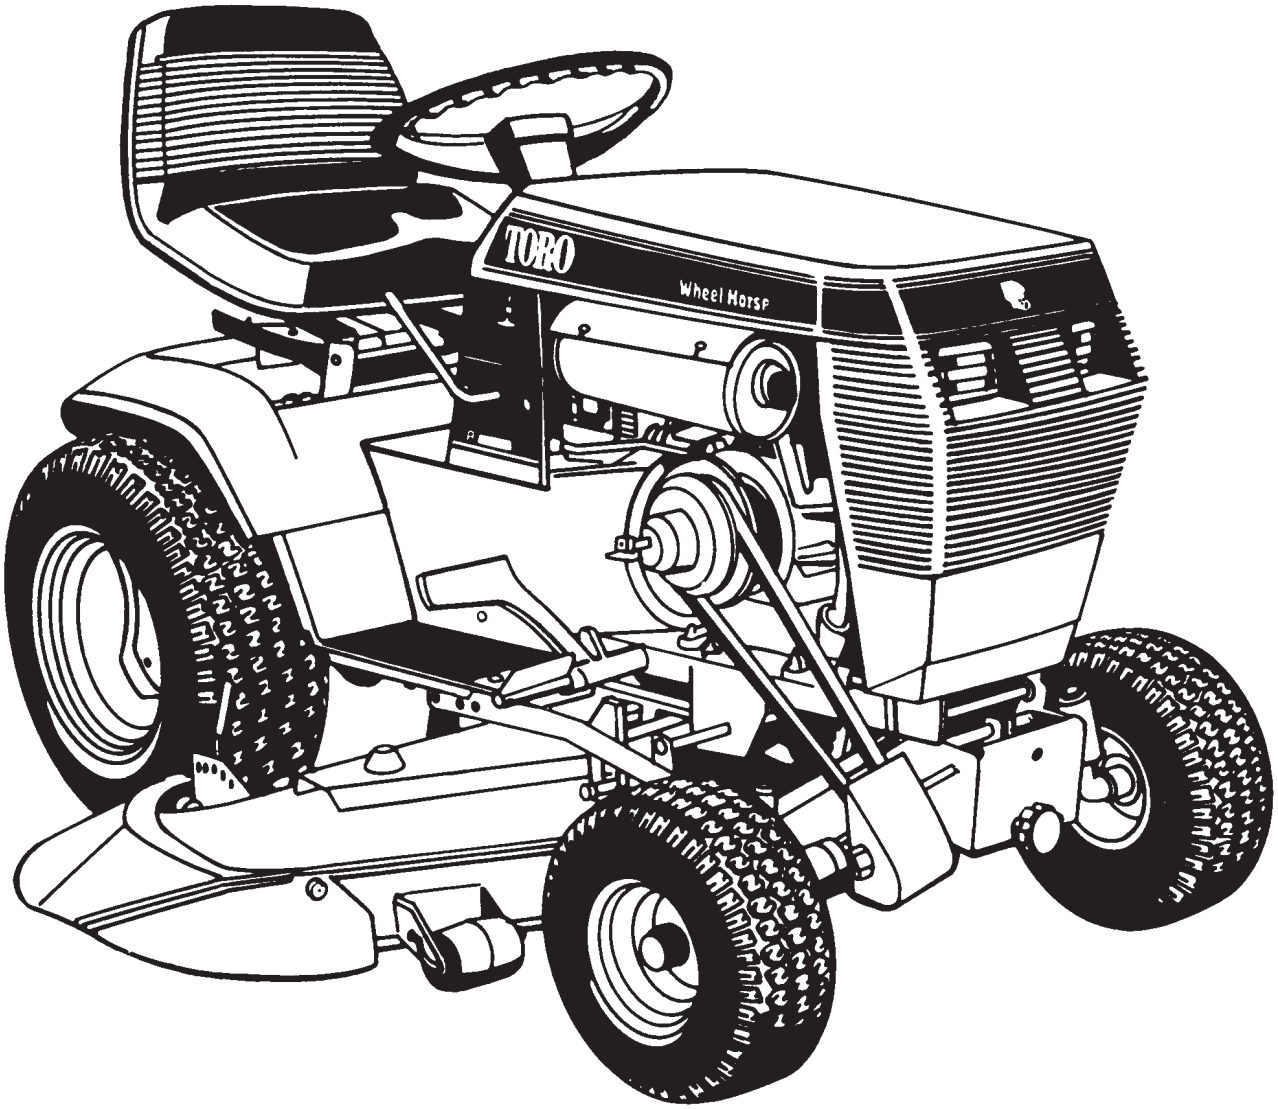

© The TORO Company –1995
All Rights Reserved

TPS

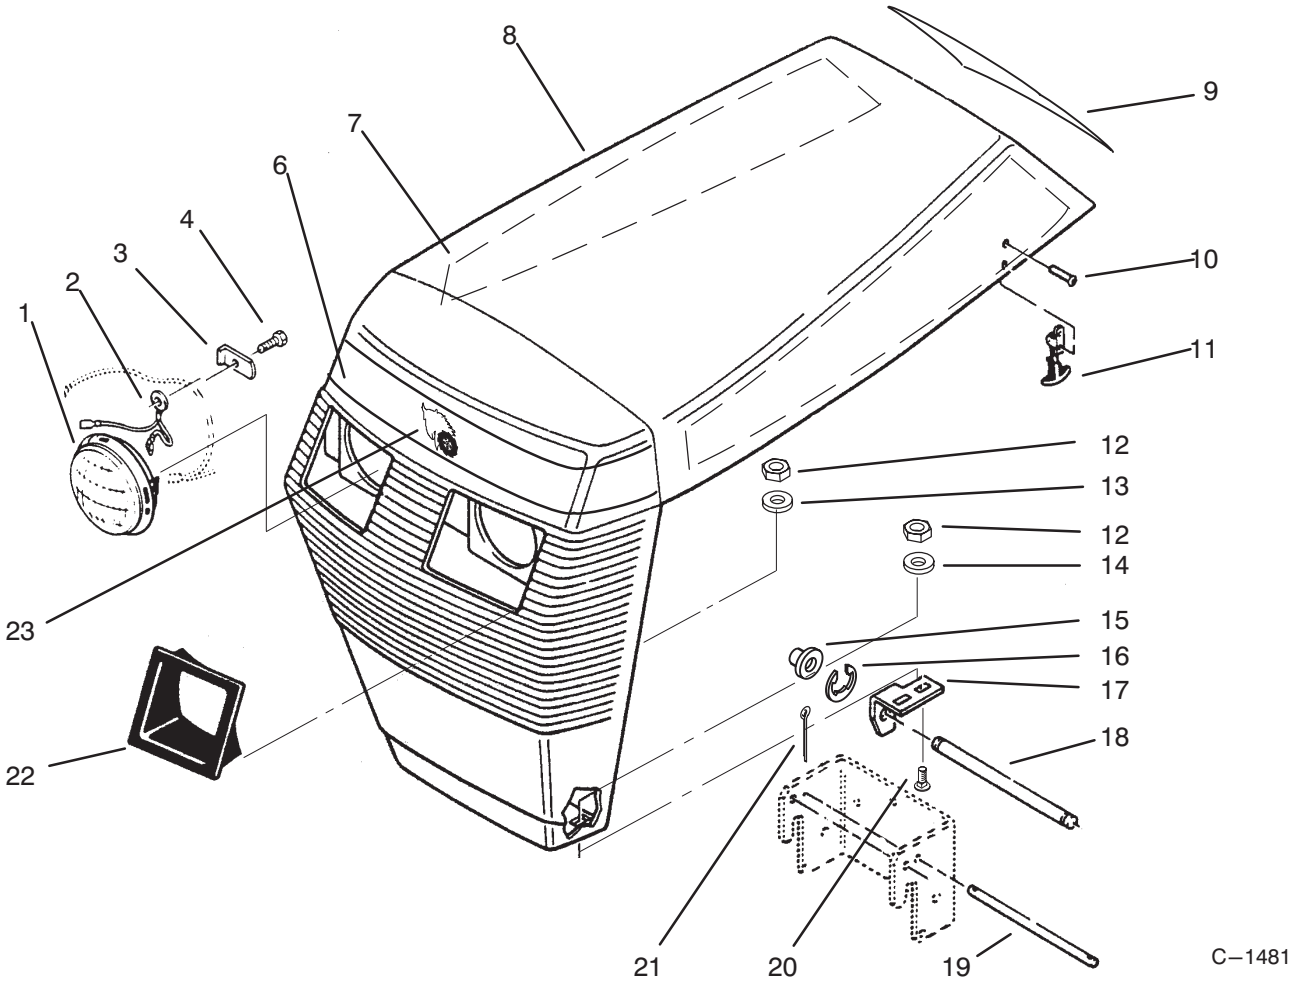


HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	102881	Headlight	2
2	108130	Wire − Headlight Ground	1
3	109459	Clamp	2
4	9266714	Bolt	2
6	92−9826	Decal − Hood, Front	1
7	92−9825	Decal − Hood RH	1
*	92−9824	Decal − Hood LH	1
8	88−2782	Hood (Incl. Ref. # 9)	1
9	92−9837	Decal − Danger	1
10	117432	Rivet − Pop	4
11	117344	Handle Assembly	2
12	3296−42	Nut	4

Ref. No.	Part No.	Description	No. Used
13	3254−2	Washer − Intl. T	1
14	3256−22	Washer	3
15	5979	Bushing − Hood Pivot	2
16	105797	Ring − Retaining	2
17	116747	Bracket − LH	1
*	116746	Bracket − RH	1
18	116745	Rod − Pivot	1
19	101850	Rod − Hood Stop	1
20	3229−25	Bolt − Carriage	4
21	3272−1	Pin − Cotter	2
22	109495	Retainer − Headlight LH	1
*	109494	Retainer − Headlight RH	1
23	92−9836	Decal − Logo	1


*Not Illustrated

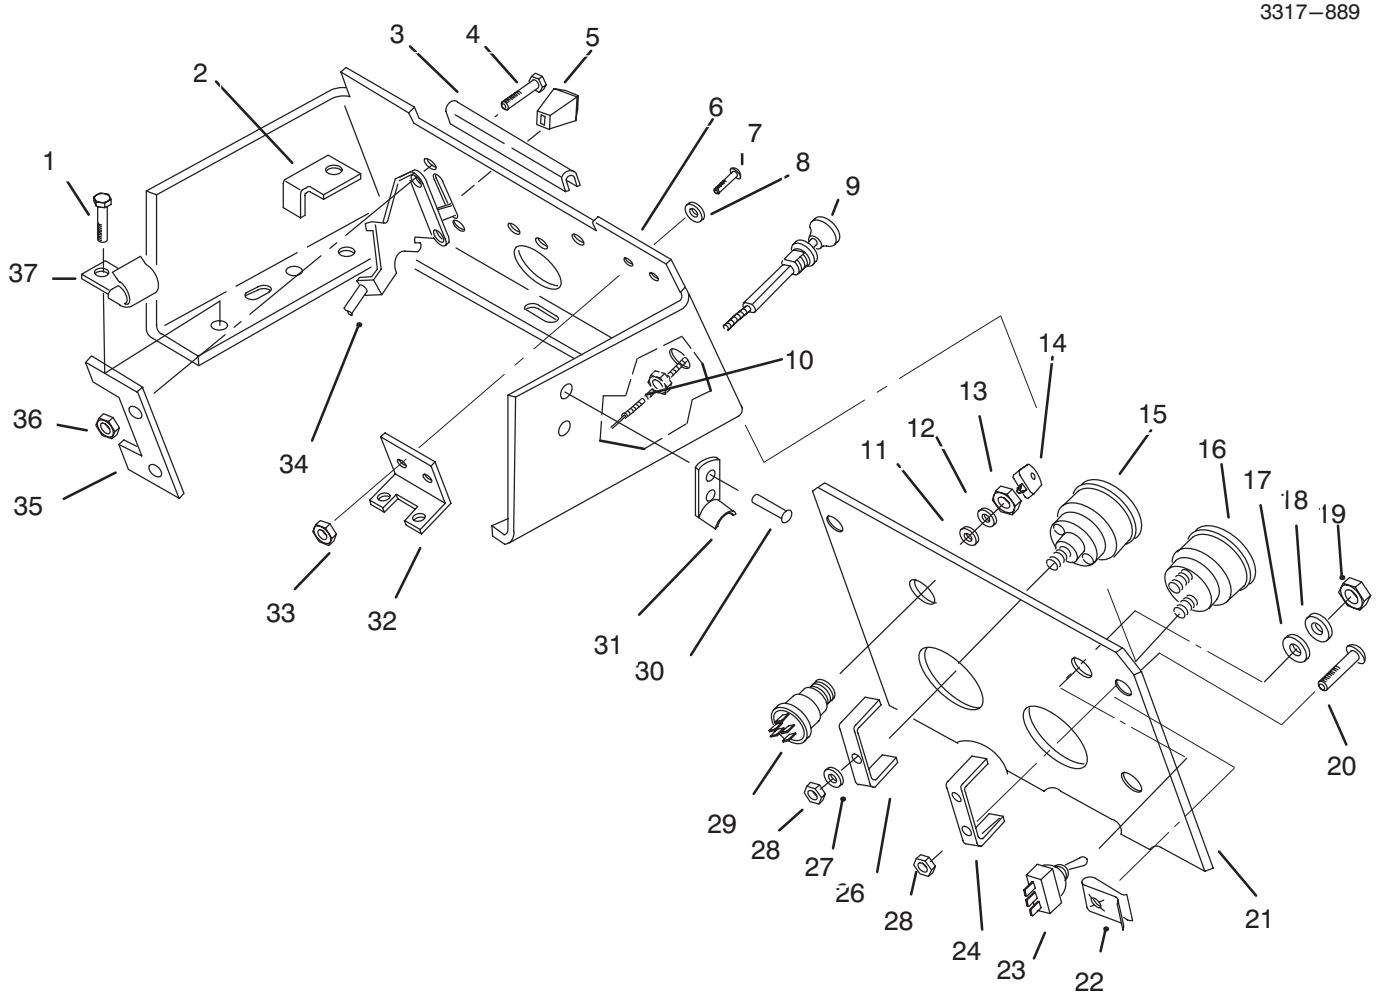

CONTROL PANEL

Ref. No.	Part No.	Description	No. Used
1	9266944	Screw – Hex. Washer Hd.	3
2	112415	Stop – PTO	1
3	111757	Edging – Console	1
4	910792	Screw	6
5	66–0120	Knob – Control	1
6	111271	Console	1
7	9107622	Screw	2
8	9201504	Washer – Lock	2
9	114951	Control – Choke	1
10	101884	Nut	1
11	9202624	Washer – Special	1
12	9201604	Washer – IntL. T	1
13	101884	Nut – Special	1
14	62–7770	Key – Ignition, Padded	1
15	78–0020	Meter – Hour (Incl. Ref.# 27–28)	1
16	79–0060	Meter – Volt (Incl. Ref.# 24–25)	1
17	920259	Washer – Special	1
18	102950	Ring – Retaining	1

Ref. No.	Part No.	Description	No. Used
19	113179	Nut	1
20	9108372	Screw	7
21	111034	Plate – Hood Stand	1
22	8830	Clip	2
23	102138	Switch – Light (Incl. Ref. #17–19)	1
24	78–0080	Clamp – Volt Meter	1
26	78–3320	Clamp – Steel	1
27	3255–25	Washer – Lock	3
28	3217–27	Nut – Hex	1
29	111216	Switch – Ignition (Incl. Ref.#11–13)	1
30	117431	Rivet – Pop	4
31	117343	Latch – Hood	2
32	112506	Bracket – Indicator Lights	1
33	915960	Nut	2
34	115392	Control – Throttle	1
35	120590	Stop – Throttle	1
36	915740	Nut – Lock	2
37	111392	”J”Clip	1

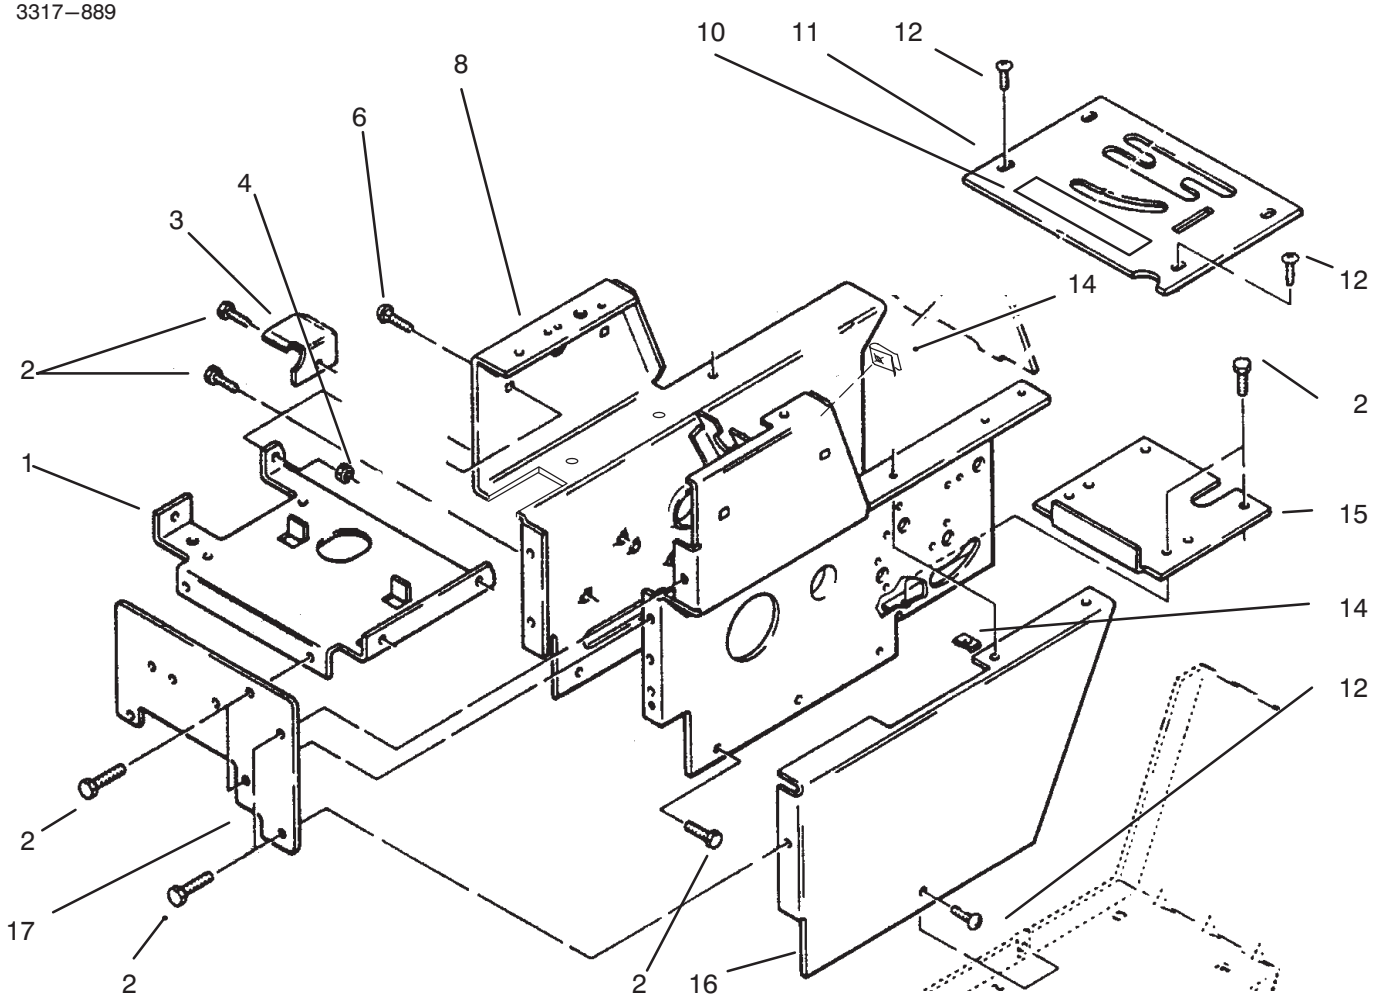


HOOD STAND AND SUPPORTS

Ref. No.	Part No.	Description	No. Used
1	78–3010	Bracket – Battery Support	1
2	9266944	Screw – Hex. Hd.	13
3	88–2170	Bracket – Belt	1
4	9151126	Nut	4
6	117371	Bolt – Carriage	4
8	92–1525	Hoodstand	1
10	92–8946	Decal – Danger	1

Ref. No.	Part No.	Description	No. Used
11	92–6529	Plate – Shift Cover (Incl. Ref.#10)	1
12	9108372	Screw	7
14	107069	Nut – Speed	7
15	106250	Cover – Dust	1
16	113935	Cover – Side, LH	1
17	78–3020	Plate – Front	


*Not Illustrated

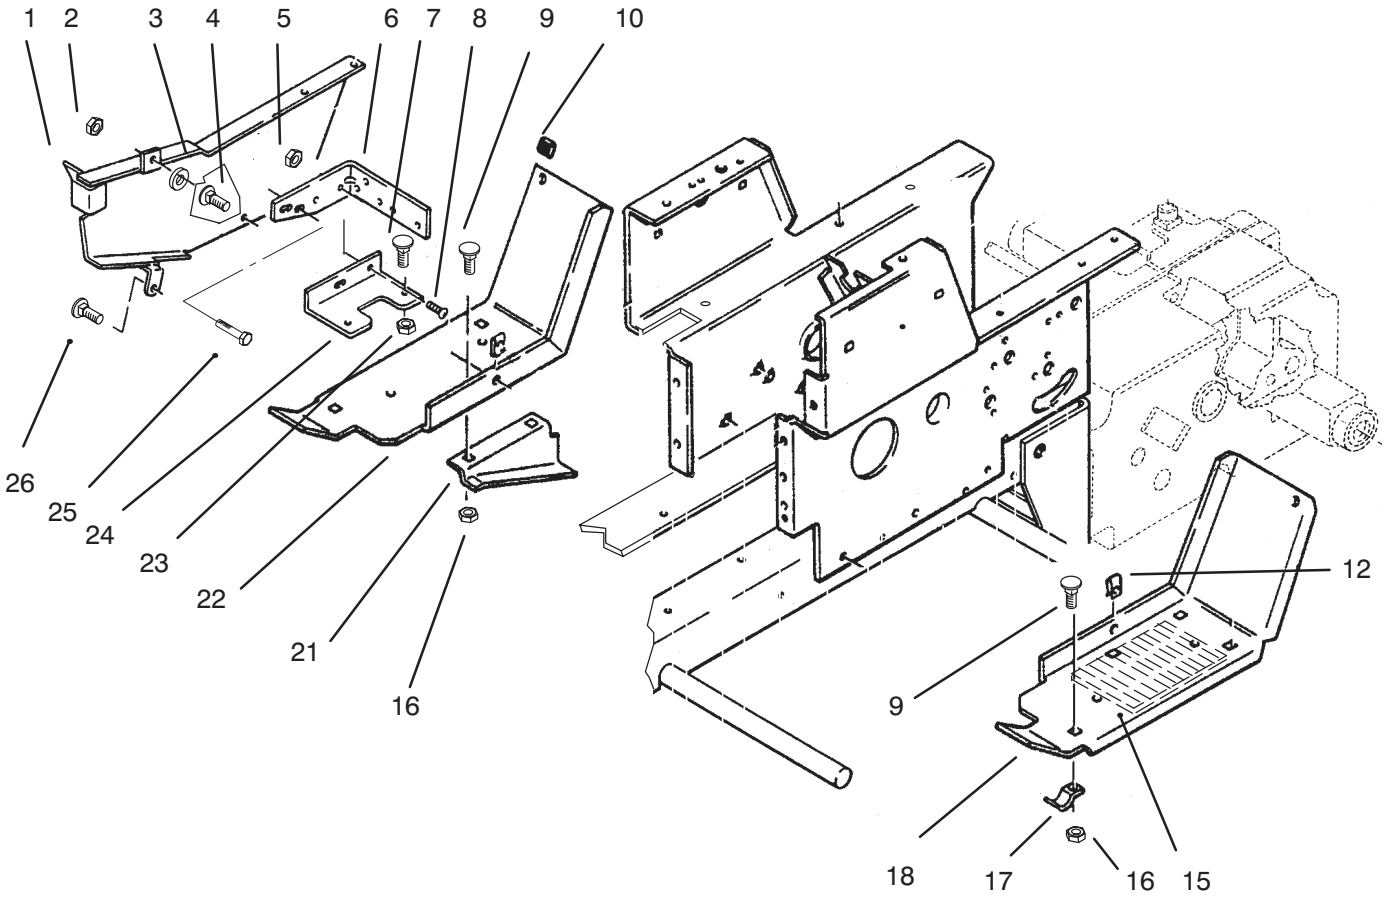

BELT GUARD & FOOTRESTS

Ref. No.	Part No.	Description	No. Used
1	107975	Guard — Belt	1
2	3296—29	Nut — Lock	7
3	108457	Nut — Push	1
4	9108372	Bolt — Carriage	9
5	3296—42	Nut	1
6	109554	Bracket — Belt Guard	1
7	9107944	Screw — Machine	2
8	321—4	Bolt	2
9	116000	Bolt — Carriage	6
10	518211	Bumper	2
12	107069	Clip	3

Ref. No.	Part No.	Description	No. Used
15	110636	Pad — Footrest	2
16	3296—29	Nut	11
17	7456	Clamp	4
18	106223	Footrest — LH	1
21	106352	Guard — Lower Belt	1
22	106222	Footrest — RH	1
23	915740	Nut	4
24	118280	Bracket — Fuse Holder	1
25	3230—1	Bolt	1
26	9266944	Bolt	6

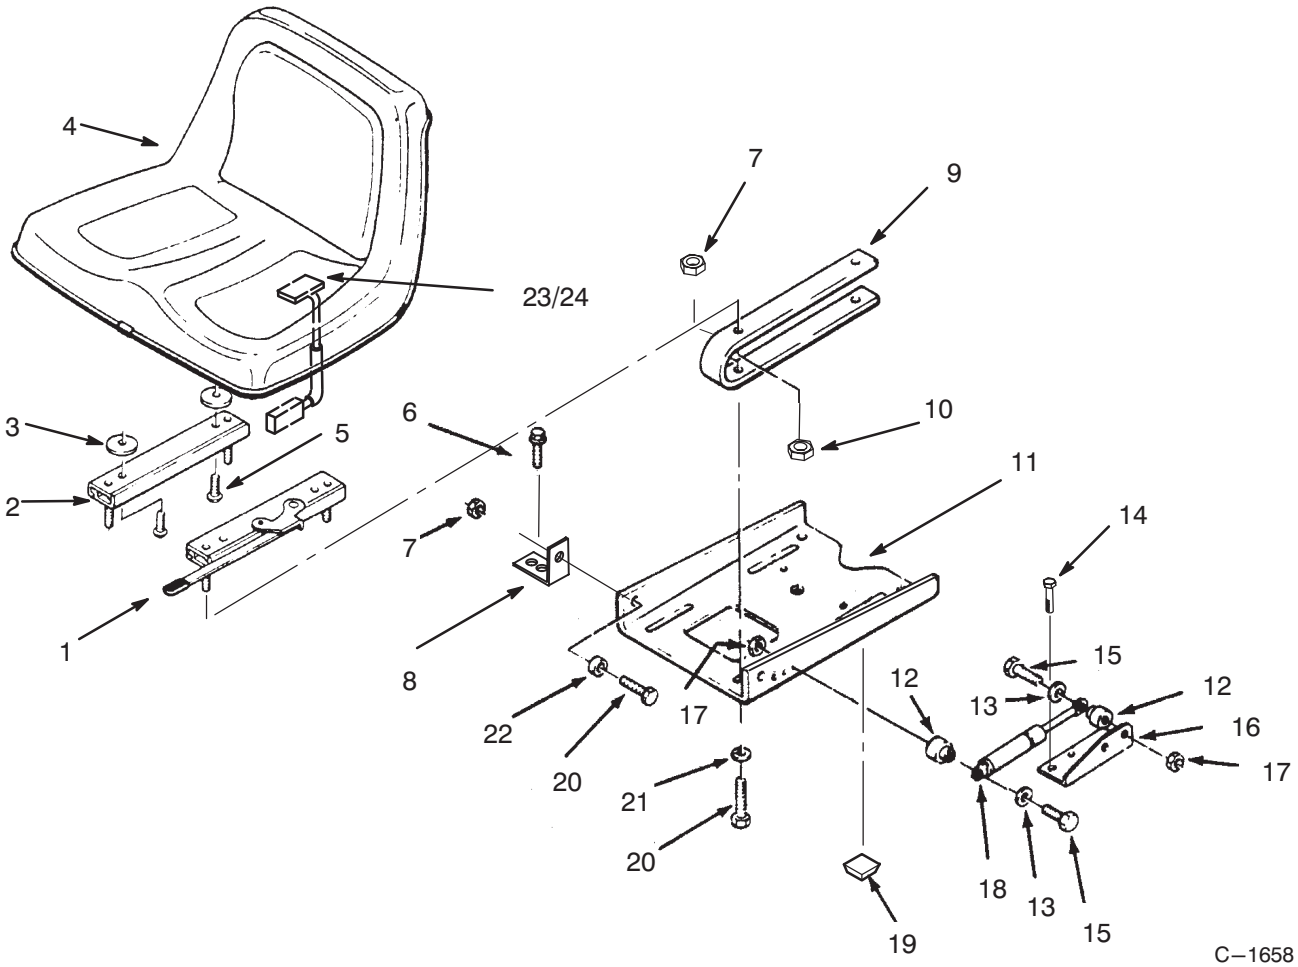


SEAT

Ref. No.	Part No.	Description	No. Used
1	114264	Adjuster – Seat, L.H.	1
2	114265	Slide – Seat, R.H.	1
3	109989	Spacer	4
4	79–3680	Seat	1
5	9108652	Bolt	4
6	913464	Bolt	4
7	3296–29	Nut	6
8	105524	Bracket – Pivot	2
9	114263	Spring – Seat	2
10	9151126	Nut	4
11	78–2990	Plate – Seat Pivot	1
12	114344	Spacer	2

Ref. No.	Part No.	Description	No. Used
13	3256–22	Washer	2
14	9266944	Bolt	2
15	321–8	Bolt	2
16	114345	Bracket	1
17	3296–42	Nut	2
18	114343	Spring – Gas	1
19	111071	Bumper	2
20	322–4	Bolt	6
21	3256–23	Washer	4
22	105503	Bushing	2
23	38–1420	Switch – Seat	1
24	3023	Clip – Speed	1

*Not Illustrated

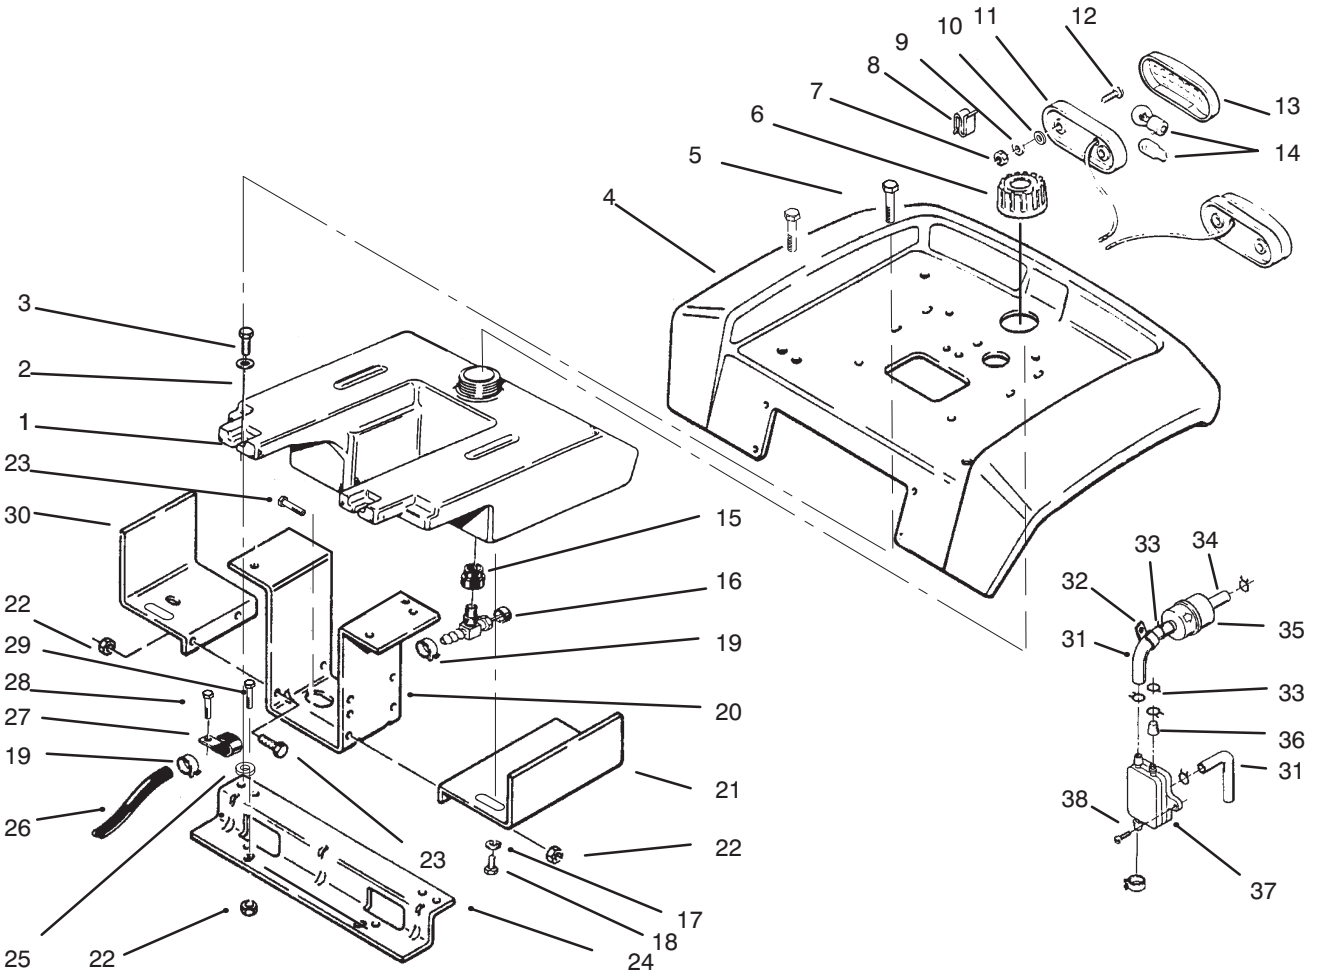


FUEL TANK, FUEL PUMP, FENDER AND SUPPORT

Ref. No.	Part No.	Description	No. Used
1	106234	Tank Asm – Fuel (Incl. Ref. #15–16)	1
2	3256–4	Washer	2
3	9266974	Bolt	2
4	110960	Fender	1
5	92669444	Bolt	6
6	55–3570	Fuel Cap	1
7	3296–27	Nut	4
8	3023	Clip – Small	1
9	3256–21	Washer	4
10	3254–1	Washer – Lock	4
11	105202	Base – Taillight, w/Bulb	2
12	910808	Screw	4
13	112564	Lens – Taillight	2
14	8043	Bulb – Light, Metal Base	2
*	109045	Bulb – Light, All Glass	2
15	104047	Bushing	1
16	104048	Valve – Fuel Shut–Off	1
17	3253–4	Washer – Lock	2
18	322–2	Bolt	5
19	2412–98	Clamp	2

Ref. No.	Part No.	Description	No. Used
20	79–4990	Bracket – Fender Support	1
21	108464	Support – Fuel Tank, LH	1
22	3296–29	Nut	6
23	322–3	Bolt	6
24	107951	Bracket – Fender Front	1
25	3256–23	Washer	2
26	92–9511	Line – Fuel 62”	1
*	92–9510	Line – Fuel 50”	1
27	8830	”J”Clip	1
28	3235–22	Screw – Hex. Hd.	2
29	322–5	Screw – Hex. Hd.	2
30	106236	Support – Fuel Tank, RH	1
31	71–6120	Line – Fuel 12”	2
32	NN10348	Clip – Wire	1
33	57–9550	Clamp – Hose	6
34	92–0923	Hose – Fuel	1
35	71–5960	Filter – Fuel	1
36	59–0370	Cap – Fuel Fitting	1
37	57–9080	Pump – Fuel	1
38	NN10403	Screw	1

*Not Illustrated

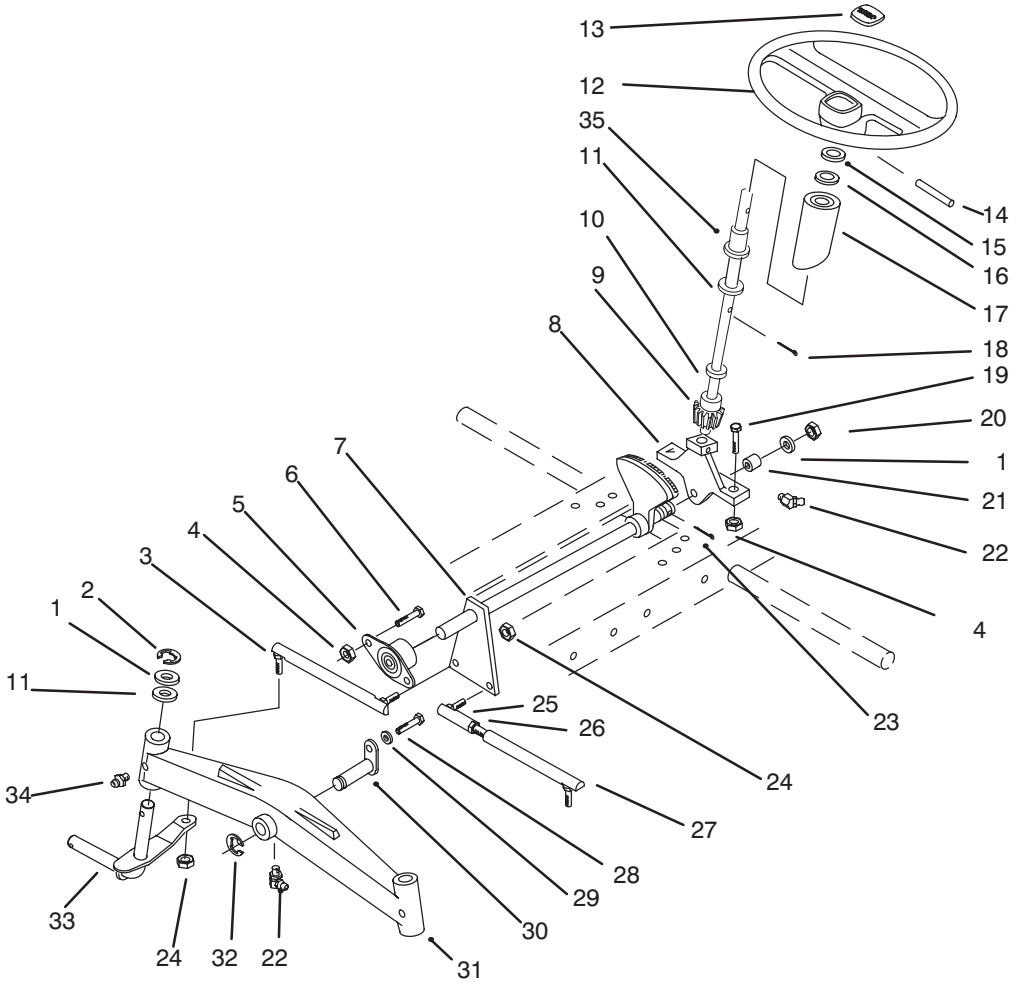


C–2376

FRONT AXLE AND STEERING

Ref. No.	Part No.	Description	No. Used
1	1278	Washer – Shim	3
2	32120–93	Ring – Retaining	2
3	102592	Tie Rod Asm, RH (Replace w/ Ref. # 27)	1
4	3296–39	Nut – Lock	4
5	6472	Bearing – Flanged	1
6	323–6	Bolt	2
7	78–2880	Shaft – Lower	1
8	88–2710	Support – Steering Shaft	1
9	92–4987	Shaft – Upper	1
10	237–69	"O"Ring	1
11	5210	Washer – Shim	A/R
12	76–1420	Steering Wheel (Incl. Ref. #13)	1
13	78–0370	Insert	1
14	32121–111	Pin – Spirol	1
15	7896	Washer – Bowed	1
16	109262	Washer – Special	2
17	113443	Tube – Steering	1
18	3272–21	Pin – Cotter	1


Ref. No.	Part No.	Description	No. Used
19	323–8	Bolt	2
20	32136–5	Nut – Slotted	1
21	6397	Bearing	1
22	1481	Fitting – Grease, 45°	2
23	3272–19	Pin – Cotter	1
24	3296–6	Nut	4
25	78–2920	Tie Rod End	1
26	3219–3	Nut	1
27	78–2900	Tie Rod Assembly, LH (Incl. Ref. # 25 & 26)	1
28	322–1	Bolt	1
29	3253–4	Washer – Lock	1
30	6216	Pin & Plate	1
31	5638	Axle	1
32	5618	Ring – Retaining	1
33	113381	Spindle – LH	1
*	113382	Spindle – RH	1
34	302–5	Fitting – Grease, Straight	2
35	109189	Bearing	1

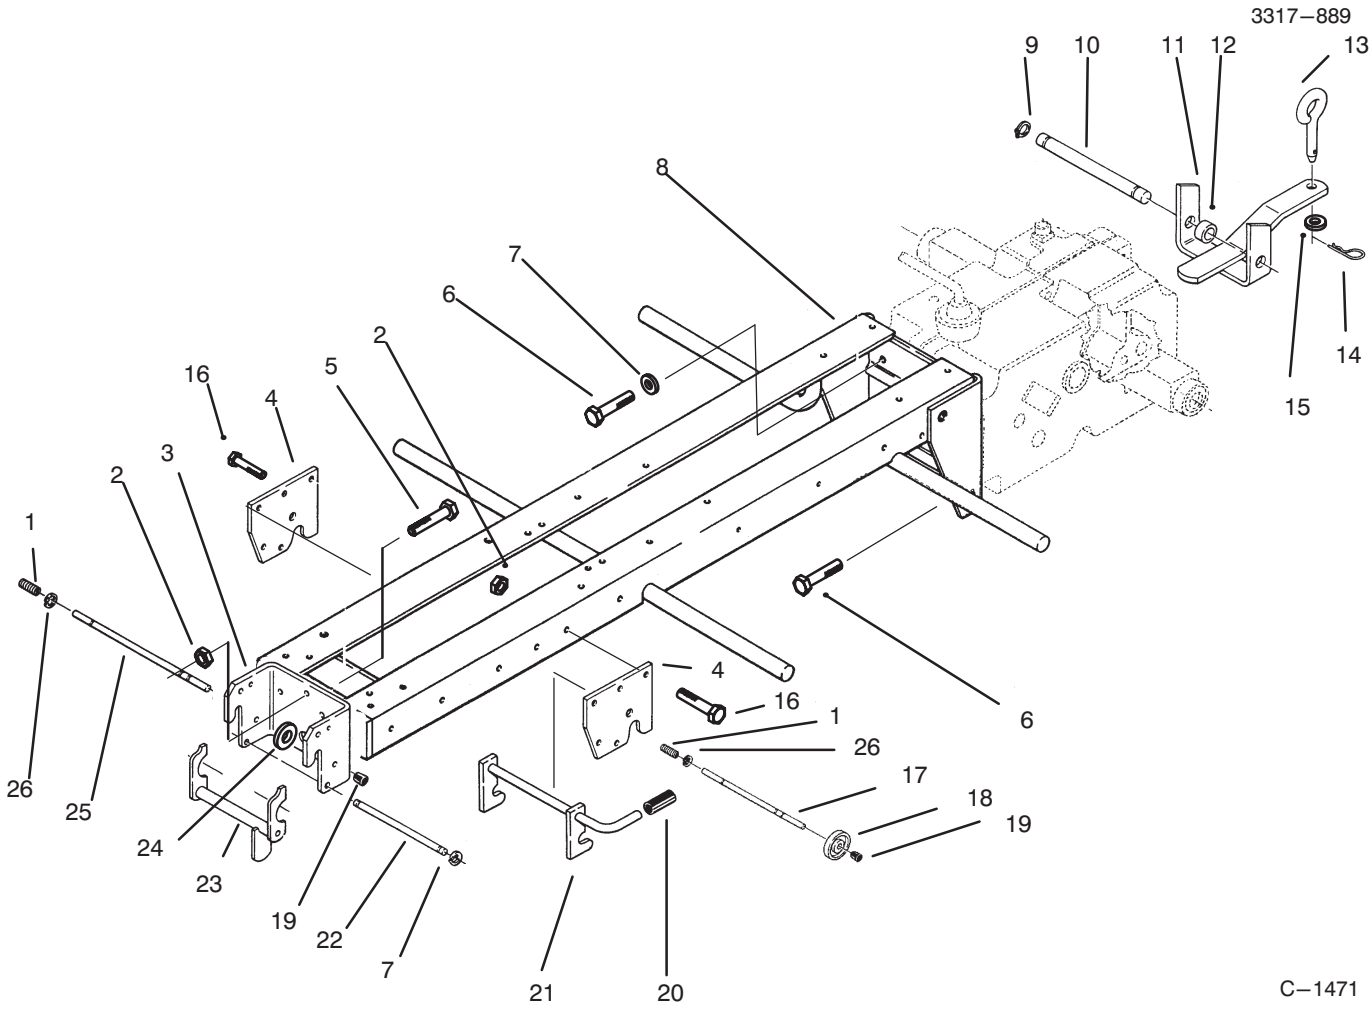

FRAME & HITCHES

Ref. No.	Part No.	Description	No. Used
1	8616	Spring	2
2	3296–39	Nut	9
3	101711	Housing – Front Hitch	1
4	102644	Plate – Mid Hitch	2
5	3231–25	Bolt – Carriage	3
6	323–5	Bolt	4
7	3253–21	Washer – Lock	4
8	78–2680	Frame	1
9	5618	Ring – Retaining	2
10	105269	Shaft – Drawbar Hitch	1
11	1644	Hitch – Drawbar	1
12	9791204	Spacer	2
13	106634	Pin – Hitch	1


Ref. No.	Part No.	Description	No. Used
14	9335054	Pin – Cotter	1
15	3256–26	Washer – Flat	1
16	323–44	Screw – Hex. Hd.	6
17	101017	Rod – Mid Hitch Lock	1
18	83–6520	Rod – Lock	1
19	105316	Cap – Plunger Rod	2
20	9038	Grip	1
21	117930	Latch – Mid Hitch	1
22	101750	Rod – Pivot Latch	1
23	93–1613	Latch – Front Hitch	1
24	101707	Lock – Attachment	1
25	101751	Rod – Lock	1
26	105797	Ring – Retaining	6

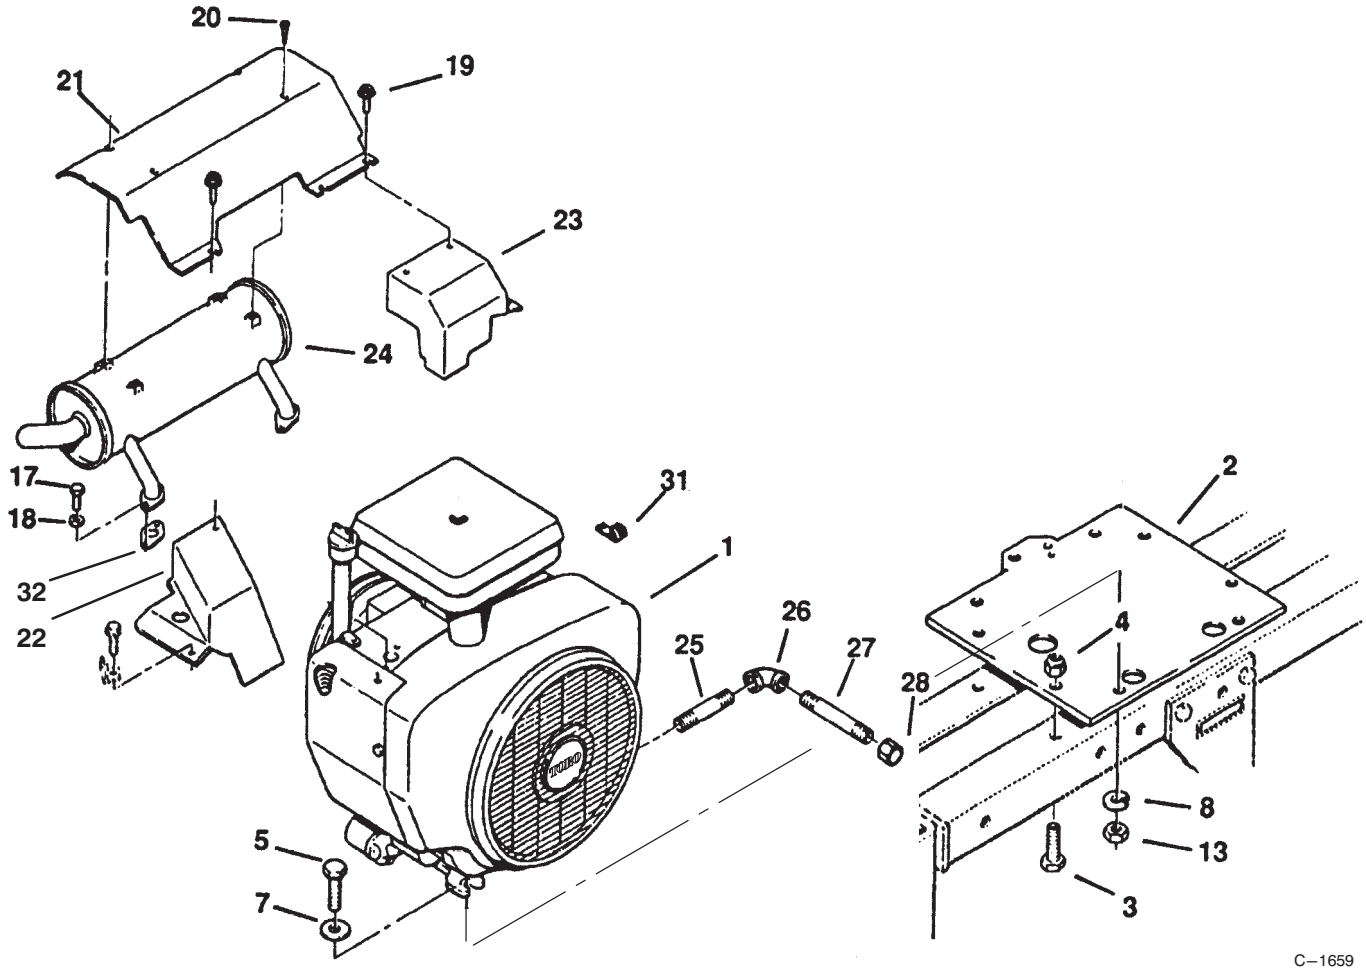

ENGINE, TORO POWER PLUS

Ref. No.	Part No.	Description	No. Used
1	94–1810	Engine – 16HP TORO Power Plus P216G–I/10976G	1
2	116609	Plate – Engine	1
3	323–7	Bolt	4
4	3296–39	Nut	4
5	323–8	Bolt	4
7	3256–24	Washer	4
8	3253–21	Washer – Lock	4
13	3217–7	Nut	4
17	322–3	Bolt	4
18	3253–4	Washer	4
19	12–3270	Bolt	3

Ref. No.	Part No.	Description	No. Used
20	9103312	Screw	4
21	94–1803	Deflector – Air	1
22	114215	Cover – Exhaust, L.H.	1
23	114216	Cover – Exhaust, RH	1
24	116470	Muffler	1
25	114636	Pipe	1
26	114764	Elbow – 90°	1
27	114763	Pipe	1
28	288–4	Cap	1
30	114214	Gasket – Exhaust	2
31	111357	Clip	1
32	57–9210	Gasket – Manifold	2

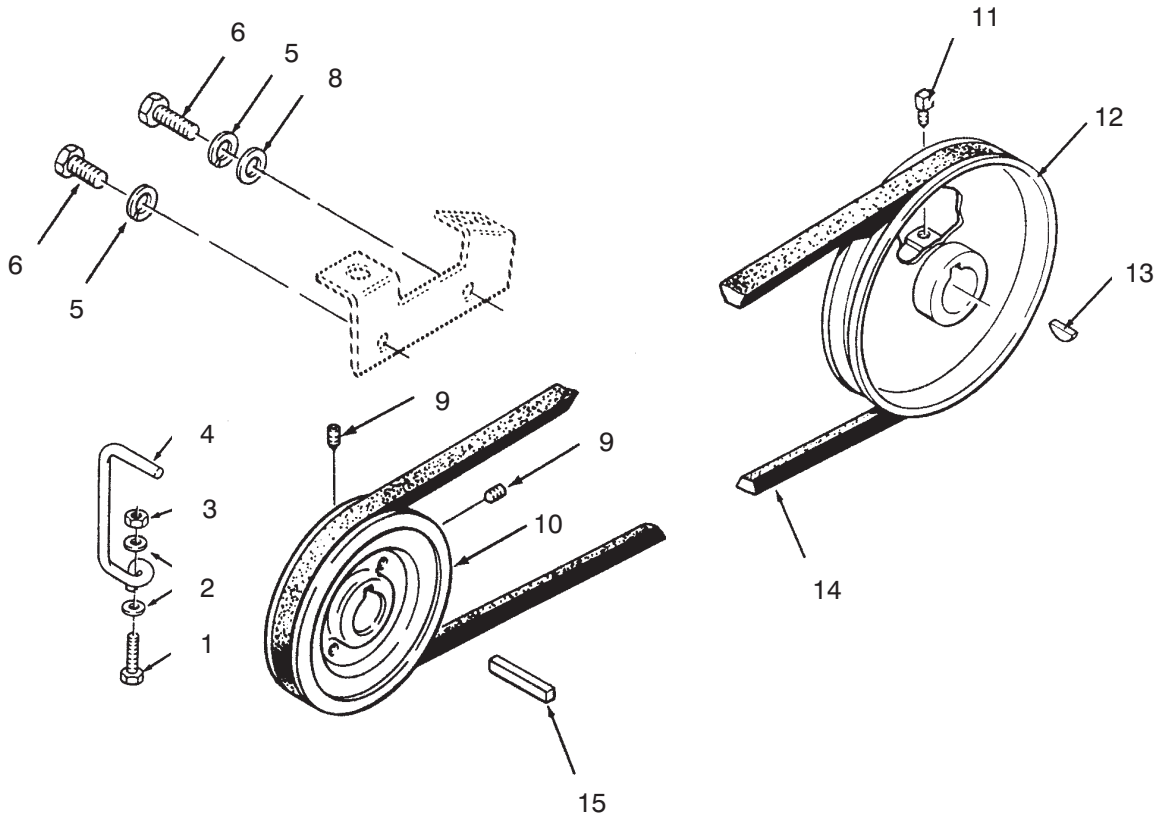


C–1656

DRIVE BELT AND PULLEYS

Ref. No.	Part No.	Description	No. Used
1	322–6	Bolt	2
2	3256–3	Washer	2
3	3296–29	Nut	2
4	120320	Guide – Belt	1
5	3253–21	Washer – Lock	3
6	323–6	Bolt	3
8	3256–25	Washer	3

Ref. No.	Part No.	Description	No. Used
9	3246–2	Screw – Set	2
10	7466	Pulley – Engine Drive	1
11	3242–2	Screw – Set	2
12	106165	Pulley – Transmission Drive	1
13	937221	Key – Hi–Pro	1
14	107939	Belt – Drive	1
15	105453	Key	1

3317–889

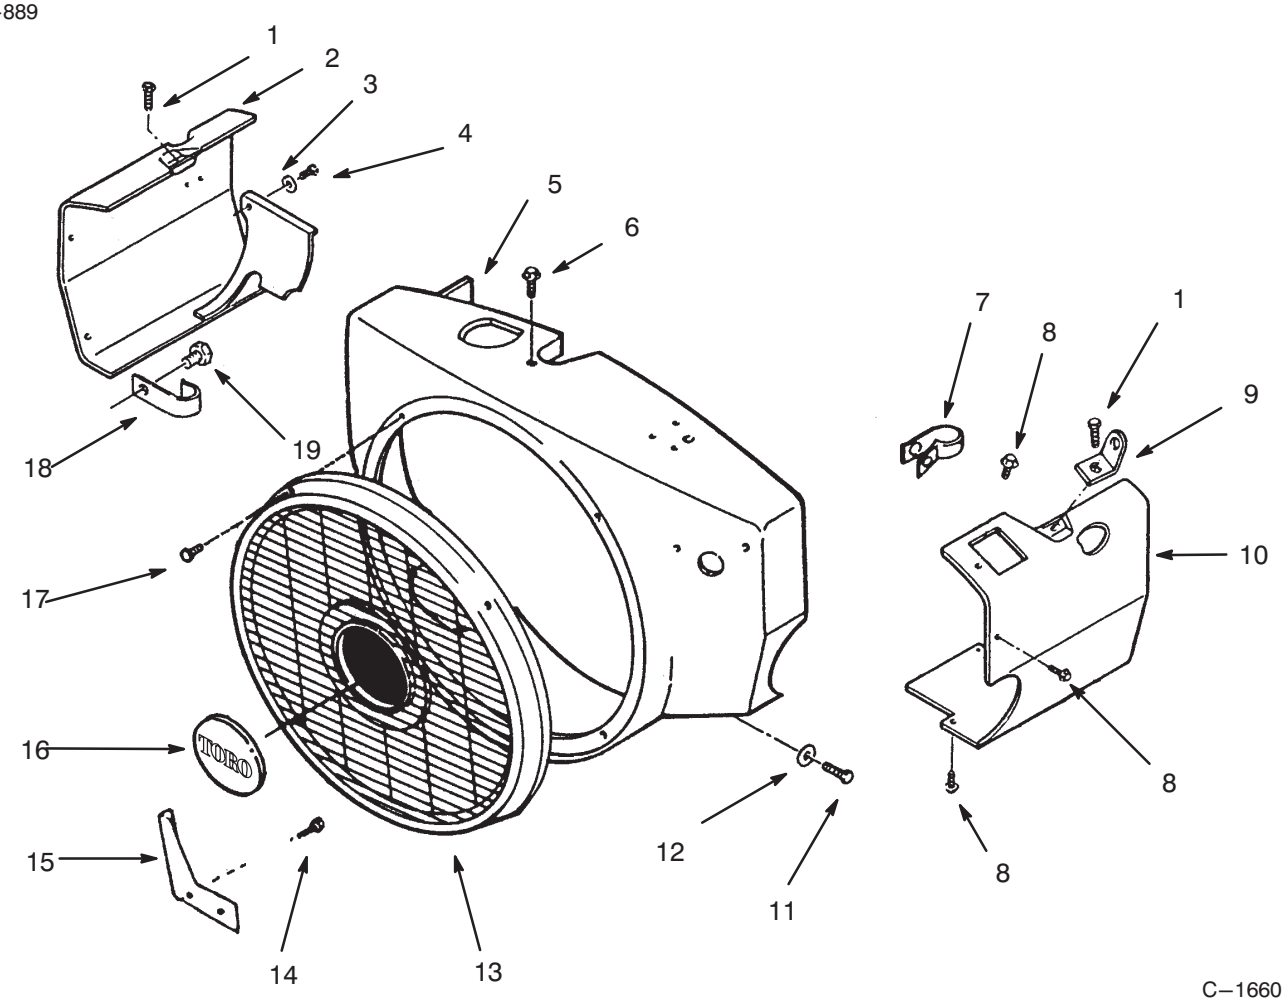


C–1660

BLOWER HOUSING

Ref. No.	Part No.	Description	No. Used
1	82–1600	Screw	2
2	92–0920	Housing – Cylinder Air, L.H.	1
3	NN10393	Washer	1
4	59–0980	Screw	1
5	NN10862	Housing – Blower	1
6	59–0970	Screw	1
7	NN10289	Clamp	1
8	NN10414	Screw	4
9	NN10296	Bracket – Lifting	2
10	92–0921	Housing – Cylinder Air, R.H.	1

Ref. No.	Part No.	Description	No. Used
11	NN10393	Screw	4
12	NN10356	Washer – Flat	1
13	82–0620	Guard – Stationary	1
14	82–0930	Screw	2
15	NN10832	Bracket	1
16	118530	Name Plate – Toro	1
17	82–1590	Screw	4
18	NN10348	Clip – Wire	1
19	82–1540	Screw	1

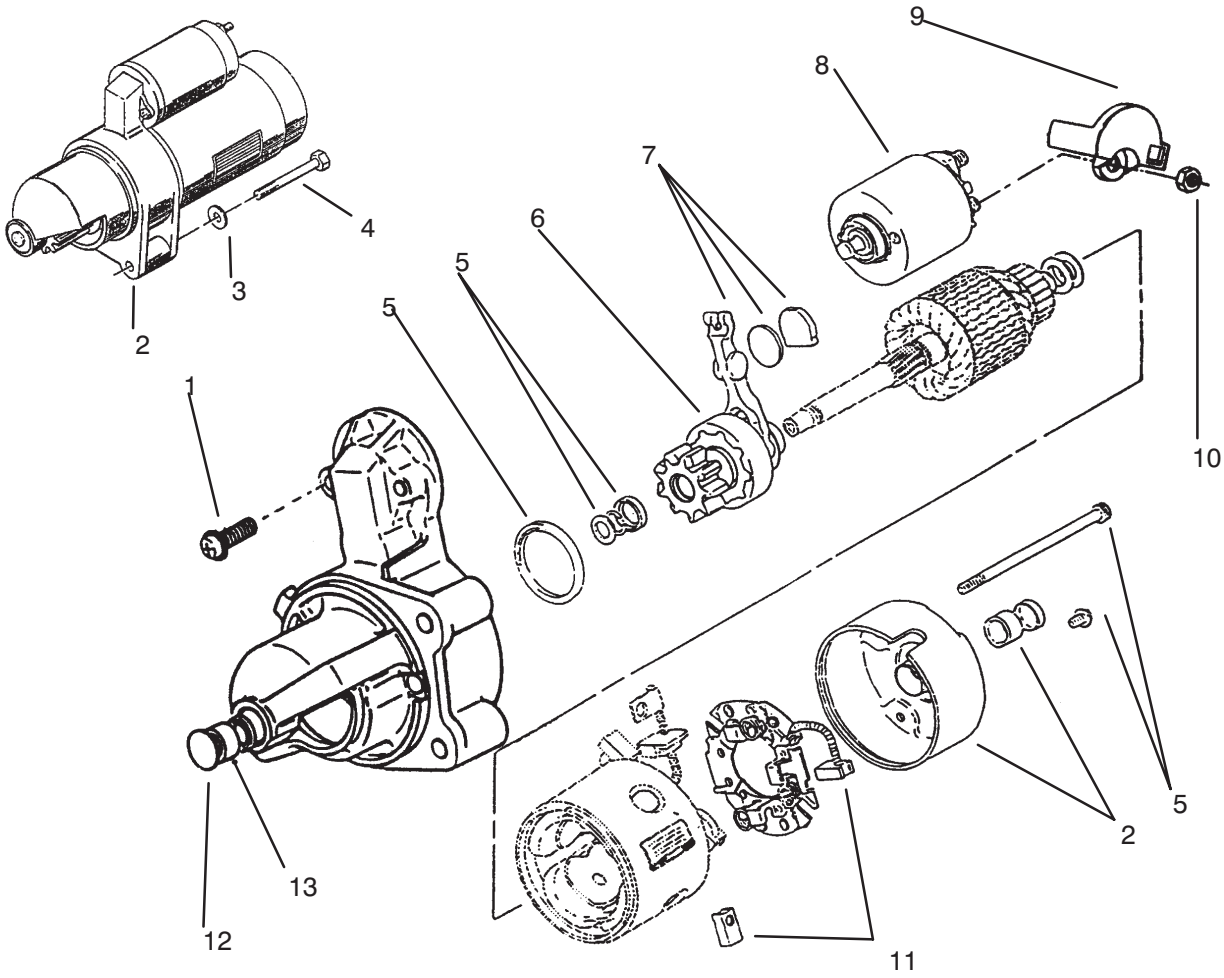


C–1671

STARTER

Ref. No.	Part No.	Description	No. Used
1	NN10885	Starter Hdwr Kit (Incl. Solenoid Screws [2] Brush Holder Screws [2], Thru Bolts[2], Armature Shims [2], Pinion Stop Collar, & Pinion Retaining Ring)	1
2	71–6040	Starter, Complete – See Components Below	1
3	57–9770	Washer – Flat	2
4	79–6580	Screw – Cap	2
5	NN10886	Seal – Dust	1
6	NN10884	Clutch – Starter (Incl. Pinion Gear w/Clutch)	1
7	NN10266	Kit – Starter Shift Lever (Incl. Shift Lever, Wear Plate & Rubber Plug)	1
8	NN10887	Kit – Starter Solenoid (Incl. Solenoid, Spring, & Plunger)	1
9	NN10930	Cap – Starter Solenoid	1
10	92–5935	Nut	1
11	NN10883	Kit – Starter Brush (Incl. Positive Brush [2] & Negative Brush w/Pigtail)	1
12	62–2730	Kit – Bushing (Incl. Front Bushing & Rear Cap w/Bushing)	1
13	NN10929	Holder – Starter Brush (Incl. Brush Holder w/Negative Brush)	1

CYLINDER BLOCK

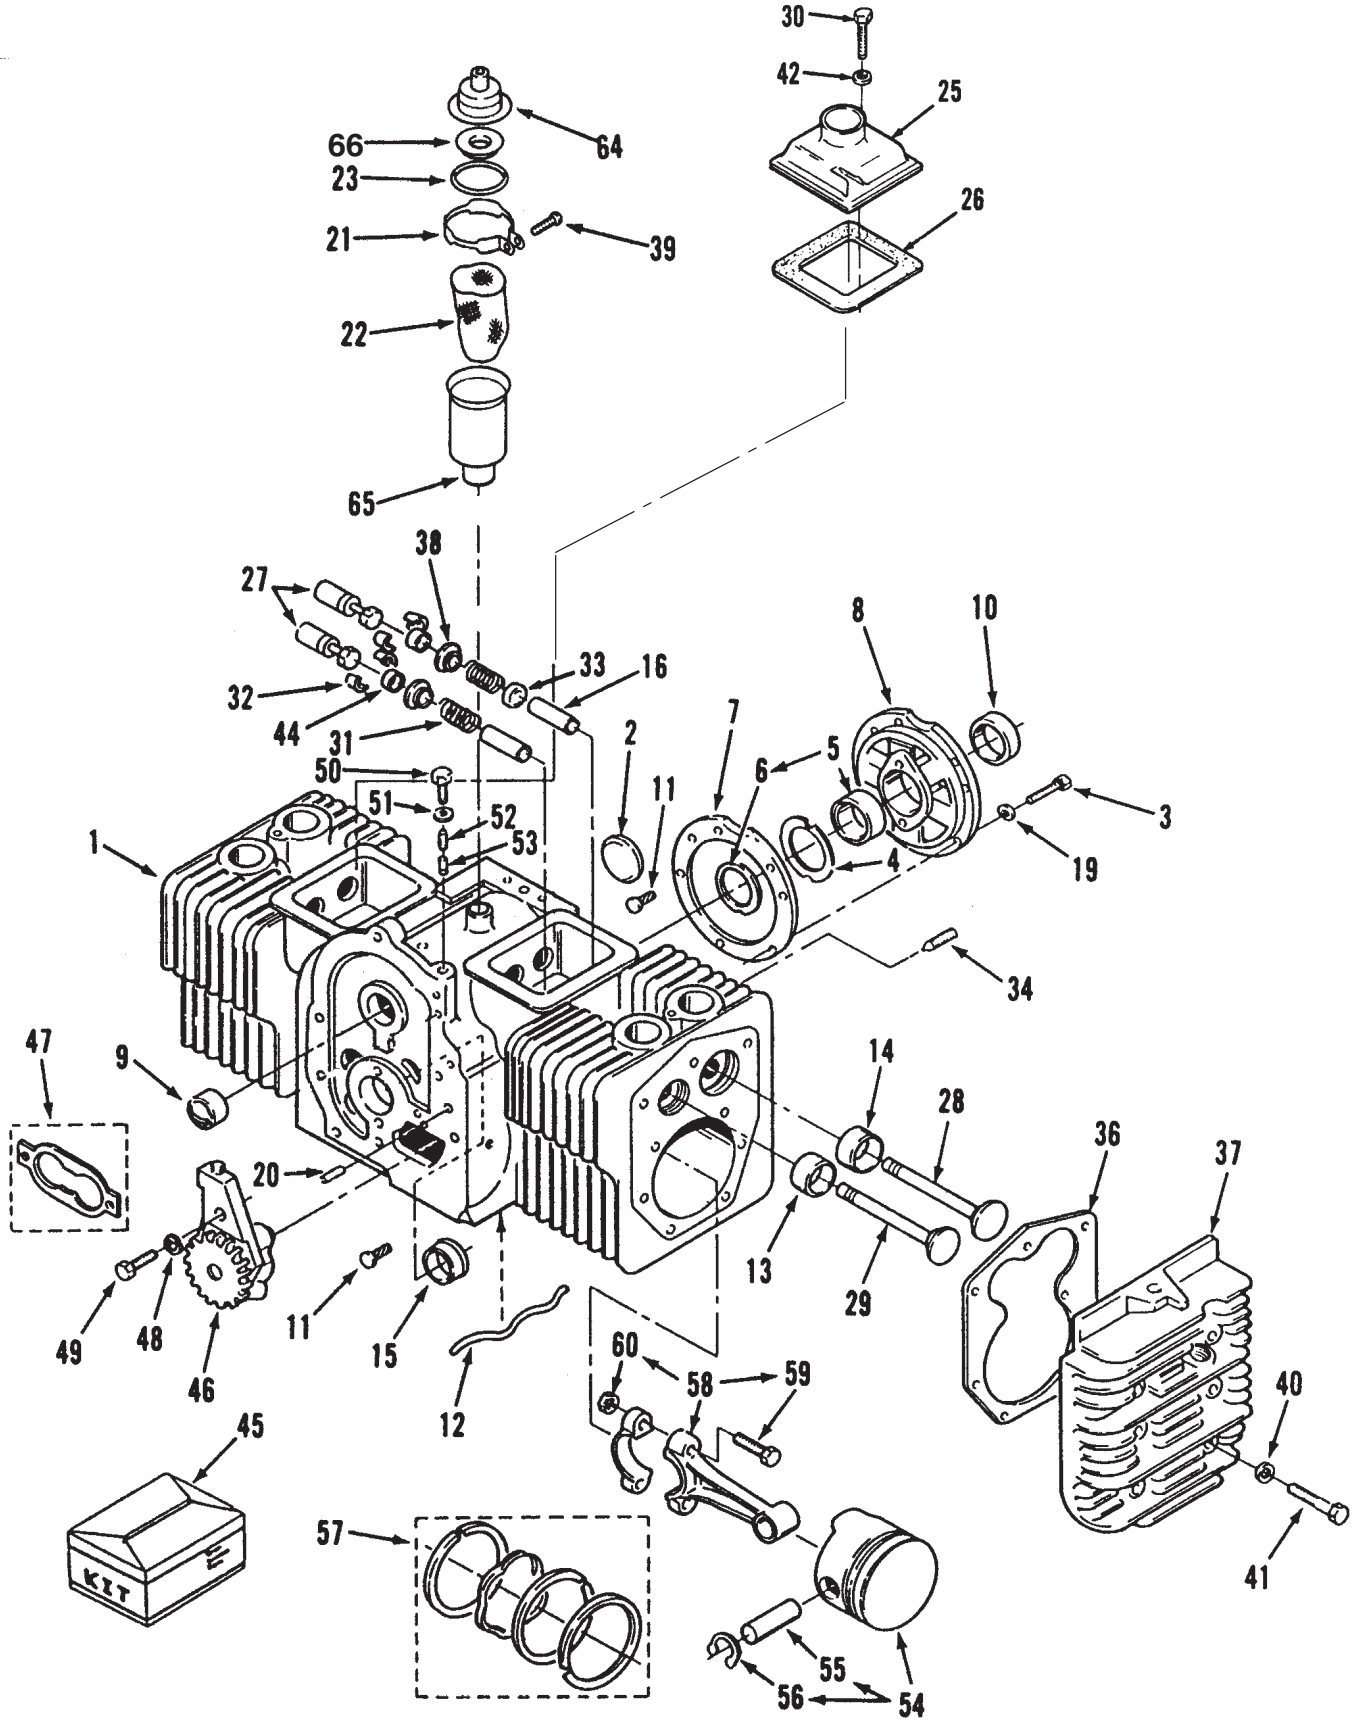

C–1661


CYLINDER BLOCK

Ref. No.	Part No.	Description	No. Used
1	92–0900	Block – Short	1
2	57–9690	Plug	1
3	59–0880	Bolt	5
4	57–8170	Shim 0.005”	A/R
5	57–8050	Bearing – Crankshaft, Rear, Standard	1
	59–0020	Bearing – Crankshaft, Rear .002” Under	1
	57–8060	Bearing – Crankshaft, Rear .010” Under	1
	59–0030	Bearing – Crankshaft, Rear .020” Under	1
	59–0040	Bearing – Crankshaft, Rear .030” Under	1
6	57–8160	Washer – Thrust	2
7	57–8010	Gasket	1
8	82–0020	Plate – Bearing	1
9	57–8000	Bearing – Camshaft	2
10	57–9590	Seal – Oil	1
11	59–0730	Pin – Stop	4
12+	120–1320	Tube – Oil	1
13	59–0100	Insert – Exhaust Seat, Std.	2
	59–0110	Insert – Exhaust Seat .002” O.S	2
	59–0120	Insert – Exhaust Seat .005 O.S	2
	59–0130	Insert – Exhaust Seat .010” O.S	2
	59–0140	Insert – Exhaust Seat .025” O.S	2
14	59–0050	Insert – Intake Seat, Std.	2
	59–0080	Insert – Intake Seat .010” O.S	2
15	57–8020	Bearing – Crankshaft, Front Standard	1
	57–9360	Bearing – Crankshaft, Front .002” Under	1
	57–8030	Bearing – Crankshaft, Front .010” Under	1
	57–9800	Bearing – Crankshaft, Front .020” Under	1
	59–0010	Bearing – Crankshaft, Front .030” Under	1
16	71–6250	Guide – Exhaust Valve	2
	71–6260	Guide – Intake Valve	2
19	3253–5	Washer – Spring	5
20	59–0750	Pin	2
21	82–0530	Clamp	1
22	57–8580	Breather – Baffle	1
23	82–0570	Seal	1
25	92–0910	Cover – Valve	2
26	57–8280	Gasket	2

Ref. No.	Part No.	Description	No. Used
27	57–8450	Tappet – Std.	4
	59–0260	Tappet .002” O.S	4
28	71–5770	Valve – Intake	4
29	71–5780	Valve – Exhaust	2
30	NN10370	Bolt	2
31	NN10077	Spring	4
32	NN10082	Lock – Spring	8
33	71–6180	Seal	2
34	3247–4	Screw	2
36	57–8330	Gasket	2
37	59–0180	Head – Right Cylinder	1
	NN10079	Head – Left Cylinder	1
38	NN10078	Washer	4
40	57–9770	Washer – Flat	18
41	59–0900	Bolt – Special	10
42	57–9740	Washer	2
44	71–5830	Cap – Valve	4
45	71–6290	Kit – Engine Gasket Valve Grind/Carbon Removal	1
46	57–8480	Pump – Oil, Complete	1
47	57–8460	Pump – Oil, Gasket Kit	1
48	82–1340	Washer – Flat	2
49	82–1370	Bolt	2
50	59–0910	Bolt	1
51	57–9760	Washer	1
52	59–0280	Spring	1
53	57–8470	Plunger	1
54	82–1800	Piston Pin & Retaining Rings STD	2
*	92–0902	Piston Pin & Retaining Rings .010”	2
*	92–0903	Piston Pin & Retaining Rings .020”	2
*	92–0904	Piston Pin & Retaining Rings .030”	2
55	71–6310	Piston Pin	2
56	57–9720	Retaining Ring	4
57	92–0905	Set – Piston Ring, Std.	2
	92–0906	Set – Piston Ring .005” O.S.	2
	92–0907	Set – Piston Ring .010” O.S	2
	92–0908	Set – Piston Ring .020” O.S	2
	92–0909	Set – Piston Ring .030” O.S	2
58+	114–0394	Rod w/Bolts & Nuts – STD	2
58	NN10125	Rod w/Bolts & Nuts – STD	2
	NN10126	Rod w/Bolts & Nuts – .010”	2
	NN10127	Rod w/Bolts & Nuts – .020”	2
	NN10128	Rod w/Bolts & Nuts – .030”	2
59	57–8410	Bolt – Special Rod	4
60	57–9790	Nut	4
64	82–0550	Breather Cap & Valve	1
65	82–0540	Tube – Baffle Breather	1
66	82–0560	Screen	2

*Not Illustrated
+ Onan Part No.

CRANKSHAFT, CAMSHAFT, FLYWHEEL

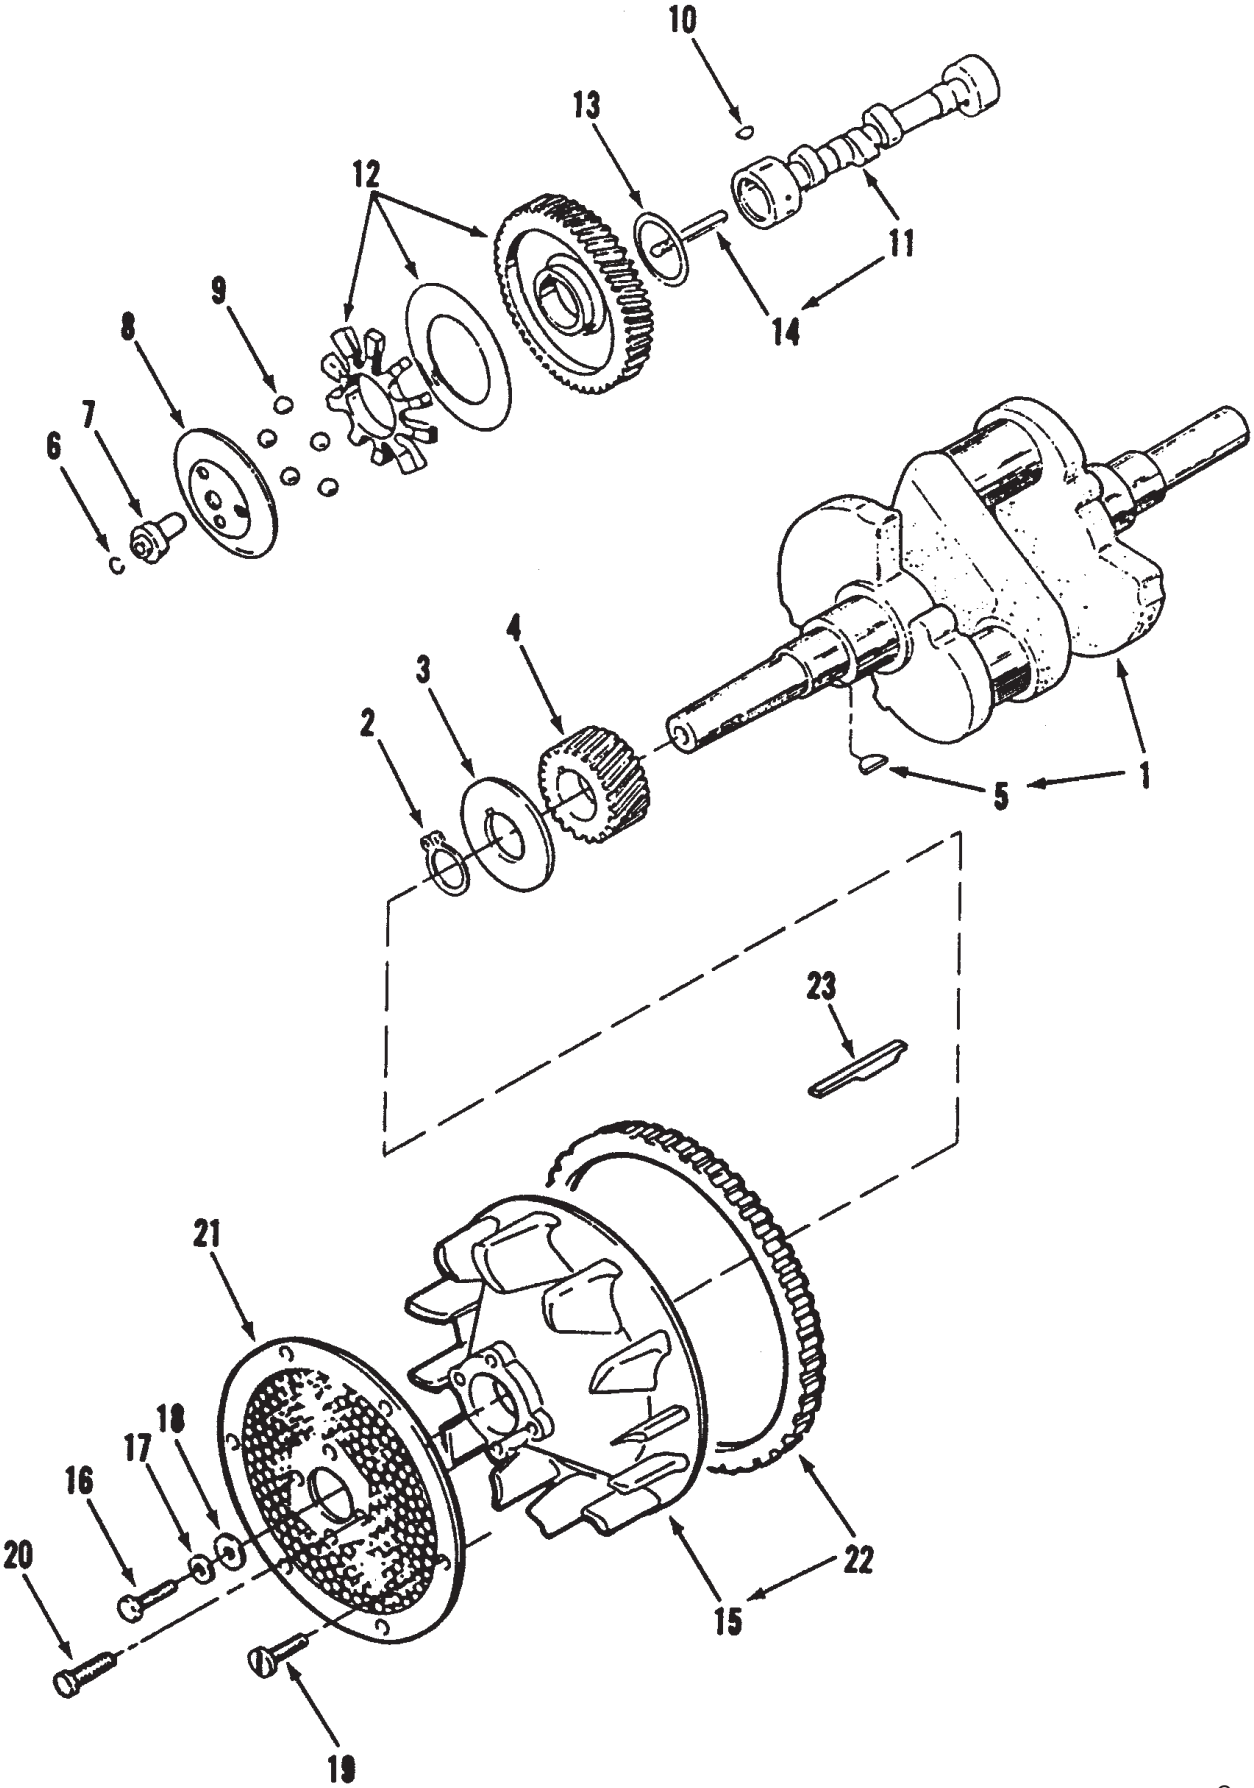


C–1662

CRANKSHAFT, CAMSHAFT, FLYWHEEL

Ref. No.	Part No.	Description	No. Used
1+	104–1887	Crankshaft	1
2	57–9710	Ring – Retaining	1
3	57–8140	Washer	1
4	57–8130	Gear	1
5	57–9660	Key	2
6	57–9090	Ring – Retaining	1
7	57–9130	Hub – Governor Cup	1
8	59–0450	Cup – Governor	1
9	57–9640	Ball	1
11	NN10032	Camshaft (Incl. Item 13)	1
12	57–8210	Camshaft Gear (Incl. Gear, Spacer, & Plate)	1
13	57–8230	Washer	1
14	59–0400	Pin	1
15	71–5920	Flywheel (Incl. Ring Gear)	1
16	57–8150	Screw	1
17	82–1320	Washer	1
18	59–0810	Washer	1
19	71–6340	Screw	6
20	82–1400	Screw	4
21	79–6440	Screen	1
22	57–8180	Gear – Ring	1
23	71–6190	Key	1

+ Onan Part No.

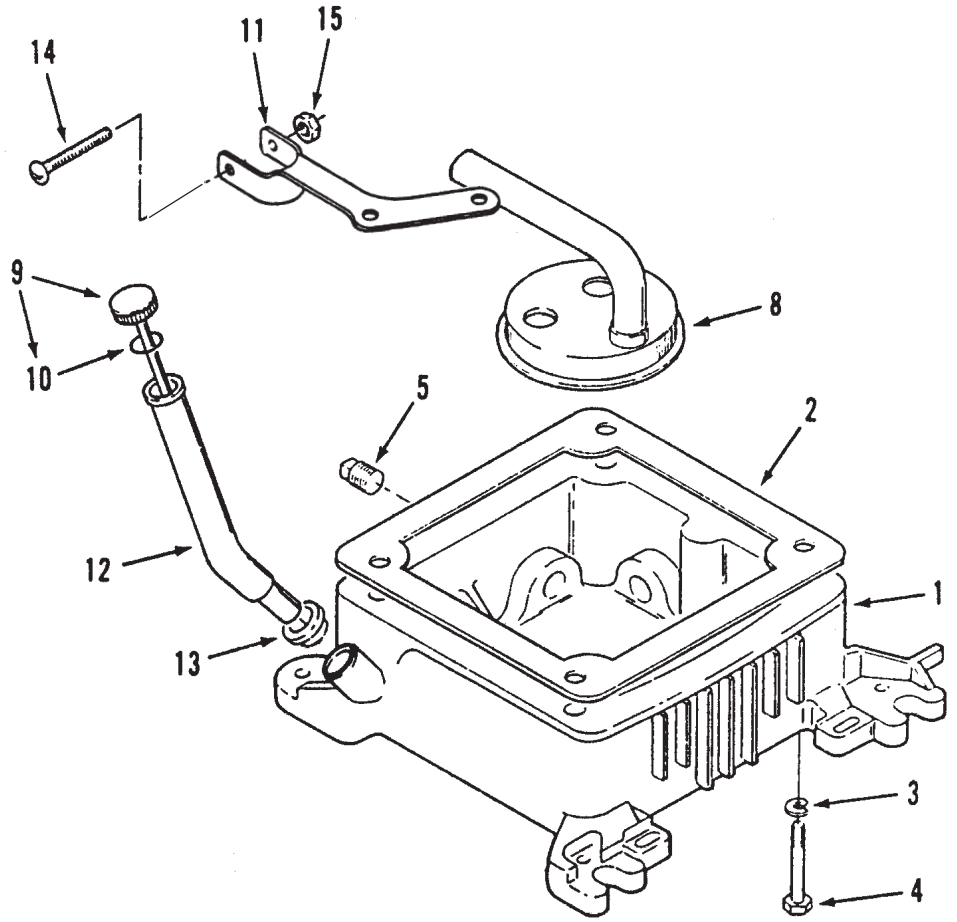


C–1663

OIL BASE AND FILL TUBE AND BRACKET

Ref. No.	Part No.	Description	No. Used
1	NN10018	Base – Oil (Incl. All Plugs & Plug Gasket)	1
2	57–8090	Gasket	1
3	82–1310	Washer – Lock	4
4	NN10379	Screw	4
5	82–1130	Plug – Sq Hd.	2
8	NN10138	Cup – Oil Pump Intake	1
9	NN10159	Cap – Oil Fill & Indicator (Incl. "O"Ring)	1

Ref. No.	Part No.	Description	No. Used
10	NN10323	Ring – Oil	1
11	79–6460	Bracket	1
12	NN10854	Tube – Oil Fill, Chrome	1
13	NN10690	Seal	1
14	82–1560	Screw	1
15	82–1700	Nut – Speed	1

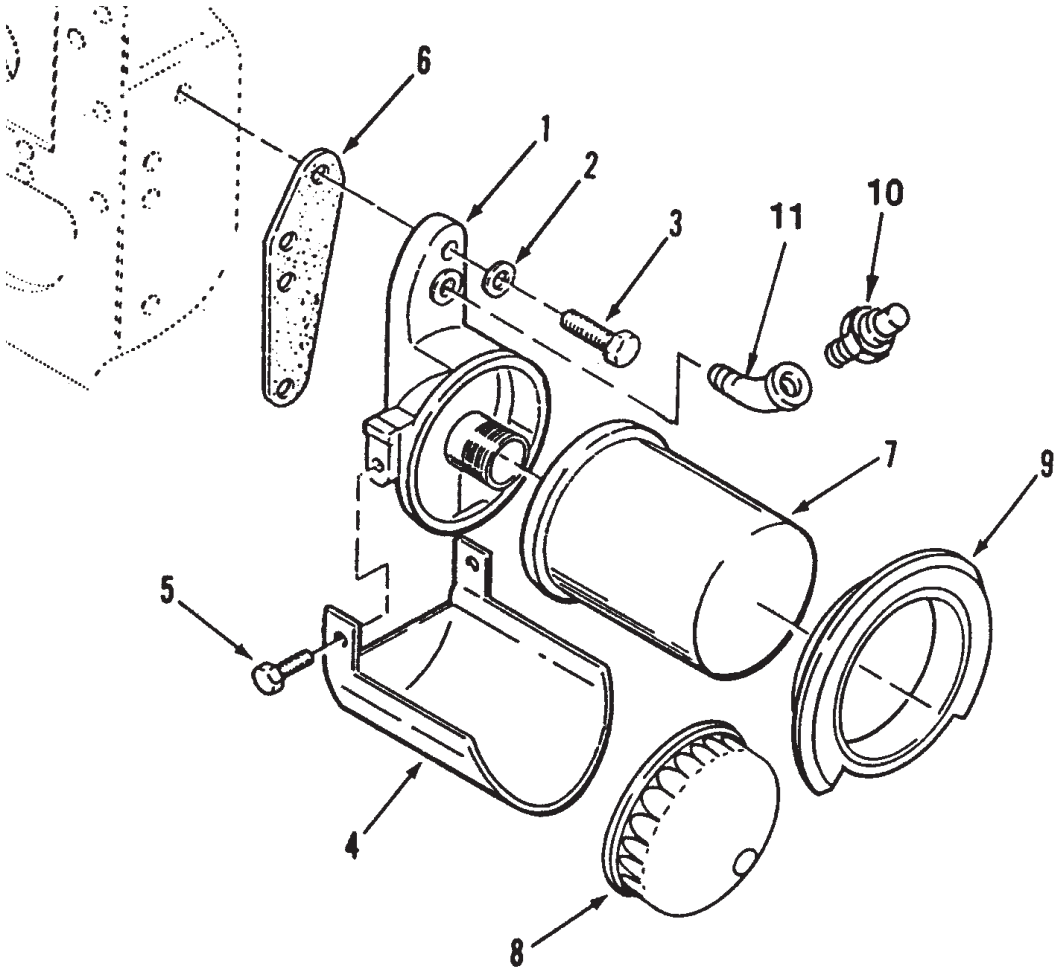


C—1664

OIL FILTER

Ref. No.	Part No.	Description	No. Used
1	82—0500	Adapter — Oil Filter	1
2	57—9750	Washer	2
3	NN10373	Screw	2
4	NN10894	Drain — Oil Filter	1
5	82—1510	Screw	2
6	79—6470	Gasket	1

Ref. No.	Part No.	Description	No. Used
7	NN10143	Filter — Oil	1
8	NN10465	Wrench	1
9	82—0680	Gasket	1
10	94—1845	Switch — Oil Pressure	1
11	92—0912	Elbow 45°	1

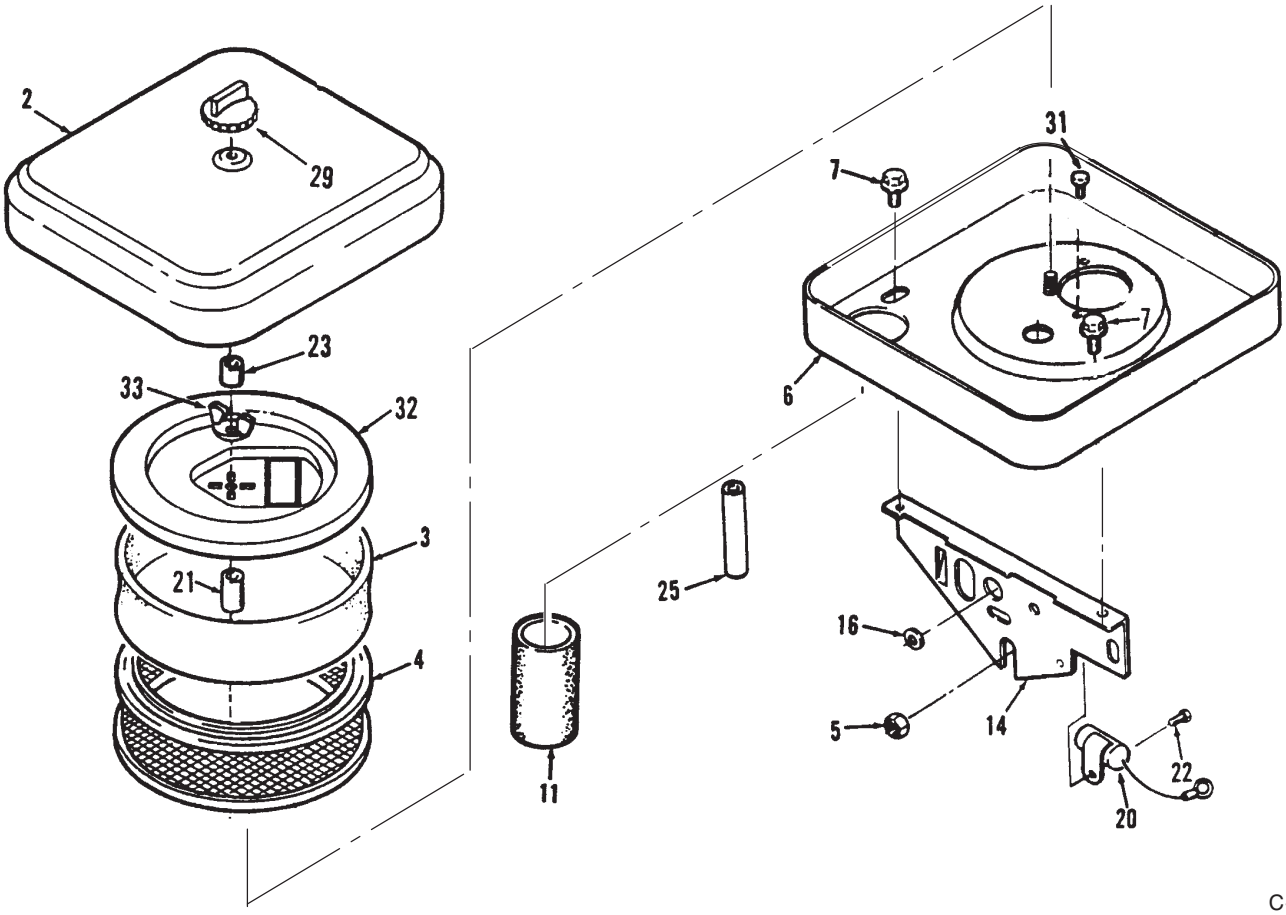


C–1665

AIR CLEANER

Ref. No.	Part No.	Description	No. Used
2	94–1840	Cover – Air Cleaner	1
3	NN10176	Element – Foam	1
4	NN10174	Element – Air Cleaner	1
5	82–1690	Nut – Flange	1
6	79–6330	Housing – Air Cleaner	1
7	82–1550	Screw – Hex. Hd.	.2
11	NN10187	Tube – Air Intake	1
14	79–6340	Support – Air Cleaner	1
16	71–6140	Grommet	1

Ref. No.	Part No.	Description	No. Used
20	59–1180	Capacitor (300 VD)	1
22	NN10390	Screw – Hex. Hd.	1
23	79–6520	Spacer	1
25	92–0917	Tube	1
29	79–6350	Knob – Tool less	1
31	92–0915	Screw	1
32	82–0650	Cover – Element	1
33	92–0913	Nut – Wing	1

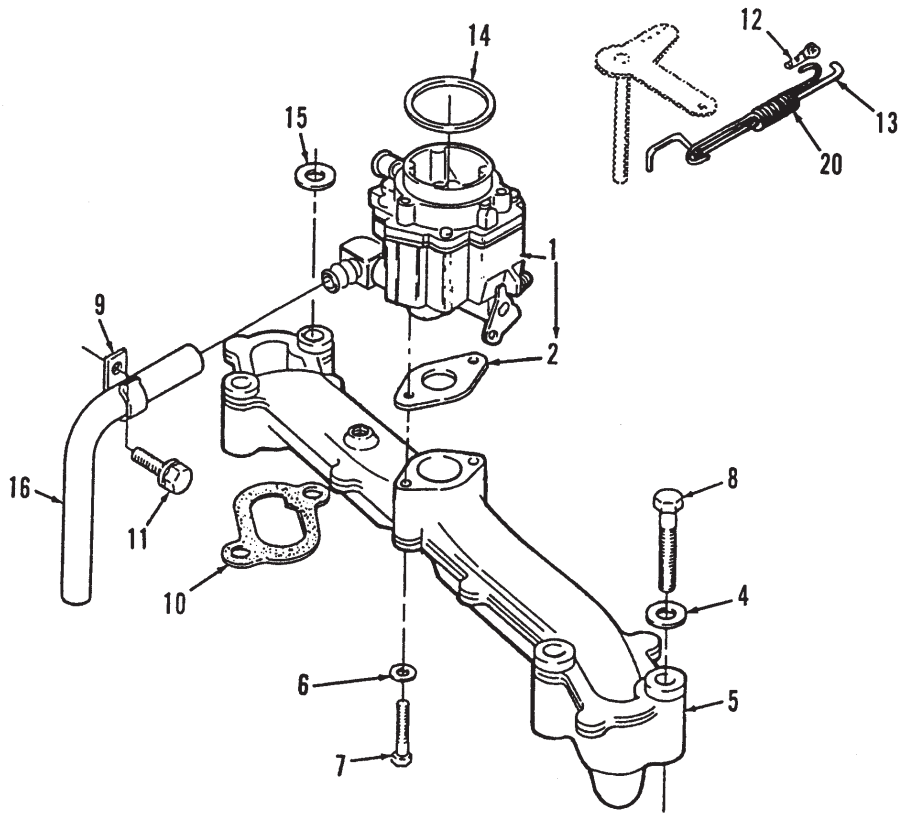


C–1666

INTAKE MANIFOLD AND CARBURETOR

Ref. No.	Part No.	Description	No. Used
+1	94–1841	Kit – Carburetor (Low Emissions)	1
+	94–1843	Kit – Float (Incl. Float & Gasket)	1
+	94–1842	Jet – (Fixed Main)	1
+	146–0658	Kit – Repair (Accelerator Pump)	1
2	82–0850	Gasket	1
4	82–1350	Washer – Flat	4
5	92–0918	Manifold – Intake	1
6	82–1350	Washer – Flat	2
7	82–1410	Screw – Hex. Hd.	2
8	NN10375	Screw – Hex. Hd.	4
9	71–6220	Clip – Fuel Line	1
10	71–5980	Gasket	2
11	82–1450	Screw	2
12	57–9700	Clip – Retaining, Rod to Carburetor	1
13	92–0919	Rod – Governor Control	1
14	57–9620	”O”Ring	1
15	NN10362	Washer – Flat	1
16	82–1100	Hose – Fuel	1
20	NN10877	Spring – Governor Rod	1

+ Low Emission Carburetor Not Repairable

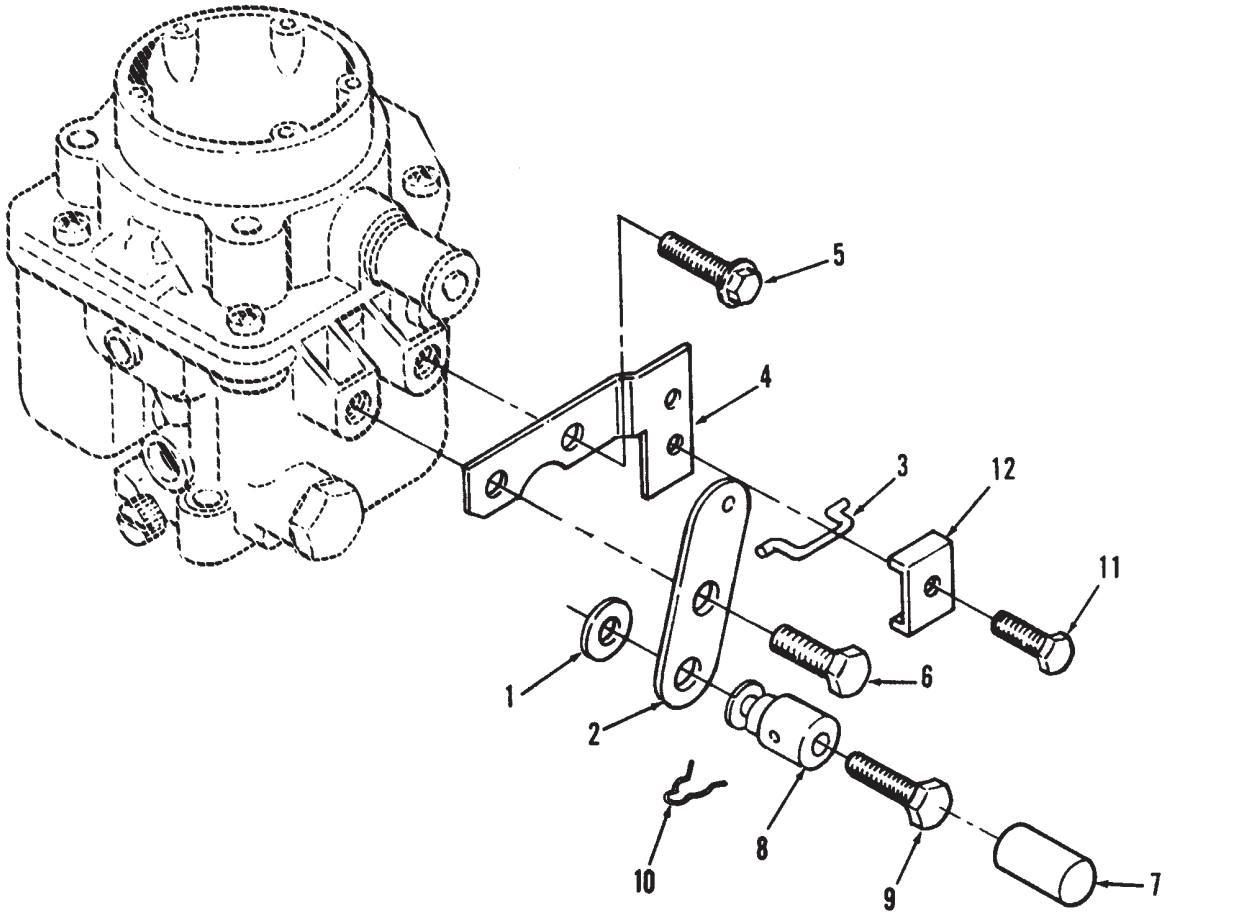


C–1668

CHOKE LINKAGE

Ref. No.	Part No.	Description	No. Used
1	59–0850	Washer	2
2	59–0460	Lever – Choke	1
3	57–9180	Link – Choke	1
4	59–0470	Bracket	1
5	NN10412	Screw	1
6	92–0916	Screw	1

Ref. No.	Part No.	Description	No. Used
7	NN10830	Plug	1
8	57–9170	Swivel – Choke Lever	1
9	NN10410	Screw	1
10	59–0720	Pin – Cotter	1
11	NN10784	Screw	1
12	57–9190	Clip	1

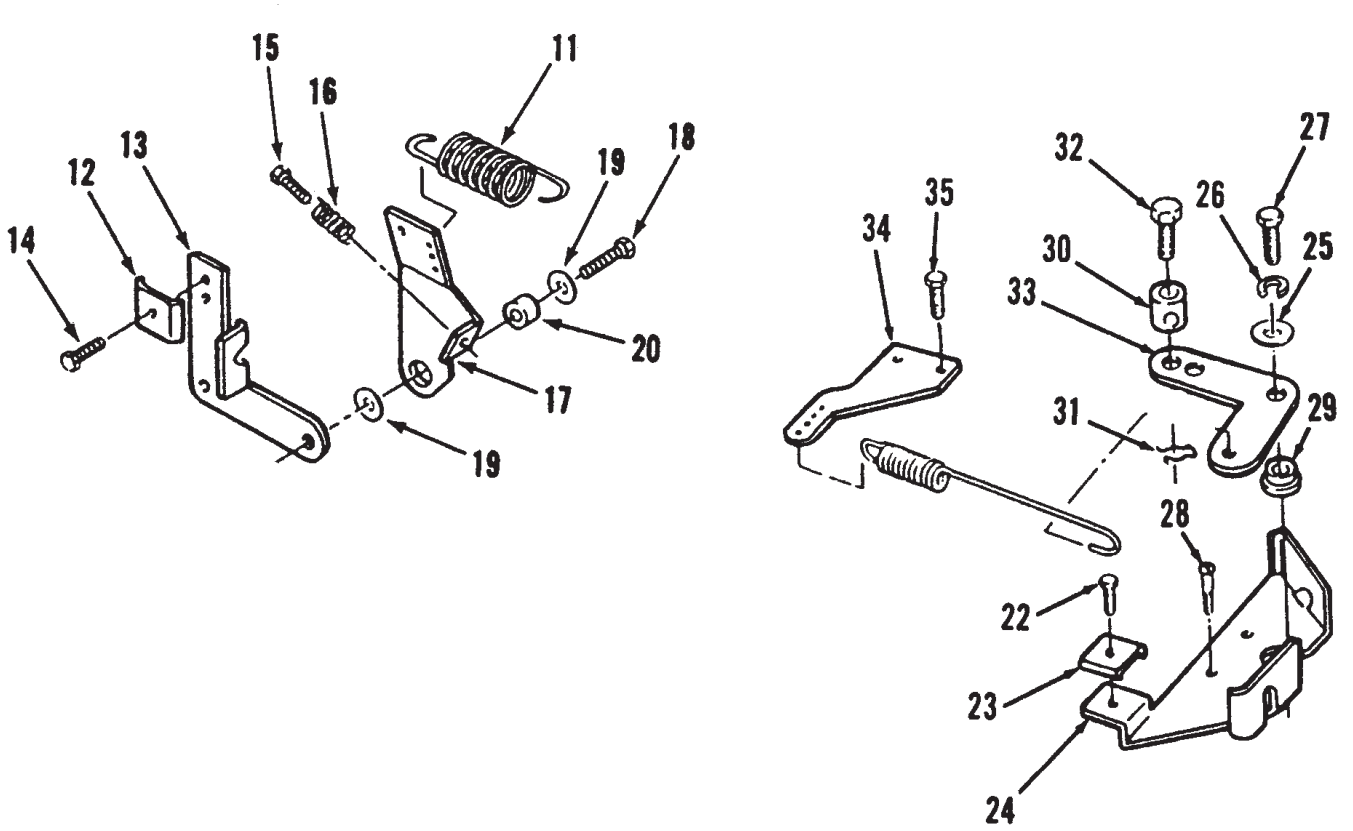


C–1669

GOVERNOR

Ref. No.	Part No.	Description	No. Used
11	57–9100	Spring – Governor, 5 Ball	1
12	57–9190	Clamp – Cable	1
13	79–6360	Bracket	1
14	NN10395	Screw	1
15	59–1030	Screw	1
16	NN10219	Spring	1
17	92–0922	Arm – Governor Control, w/o Swivel	1
18	59–1100	Screw	2
19	NN10357	Washer – Flat	1
20	NN10218	Bushing	1
22	59–1000	Screw	1
23	57–9190	Clamp – Throttle Cable	1

Ref. No.	Part No.	Description	No. Used
24	79–6390	Bracket – Governor Control	1
25	59–0830	Washer – Flat	1
26	82–1620	Washer – Lock	1
27	82–1370	Screw	1
28	201327	Screw	3
29	79–6400	Bushing – Governor Control	1
30	57–9580	Swivel – Throttle Control	1
31	59–0720	Pin – Cotter	1
32	NN10410	Screw – Machine	1
33	201256	Link – Governor Control	1
34	79–6420	Adapter – Governor Arm	1
35	NN10403	Screw	2

GEARCASE AND IGNITION CONTROLS

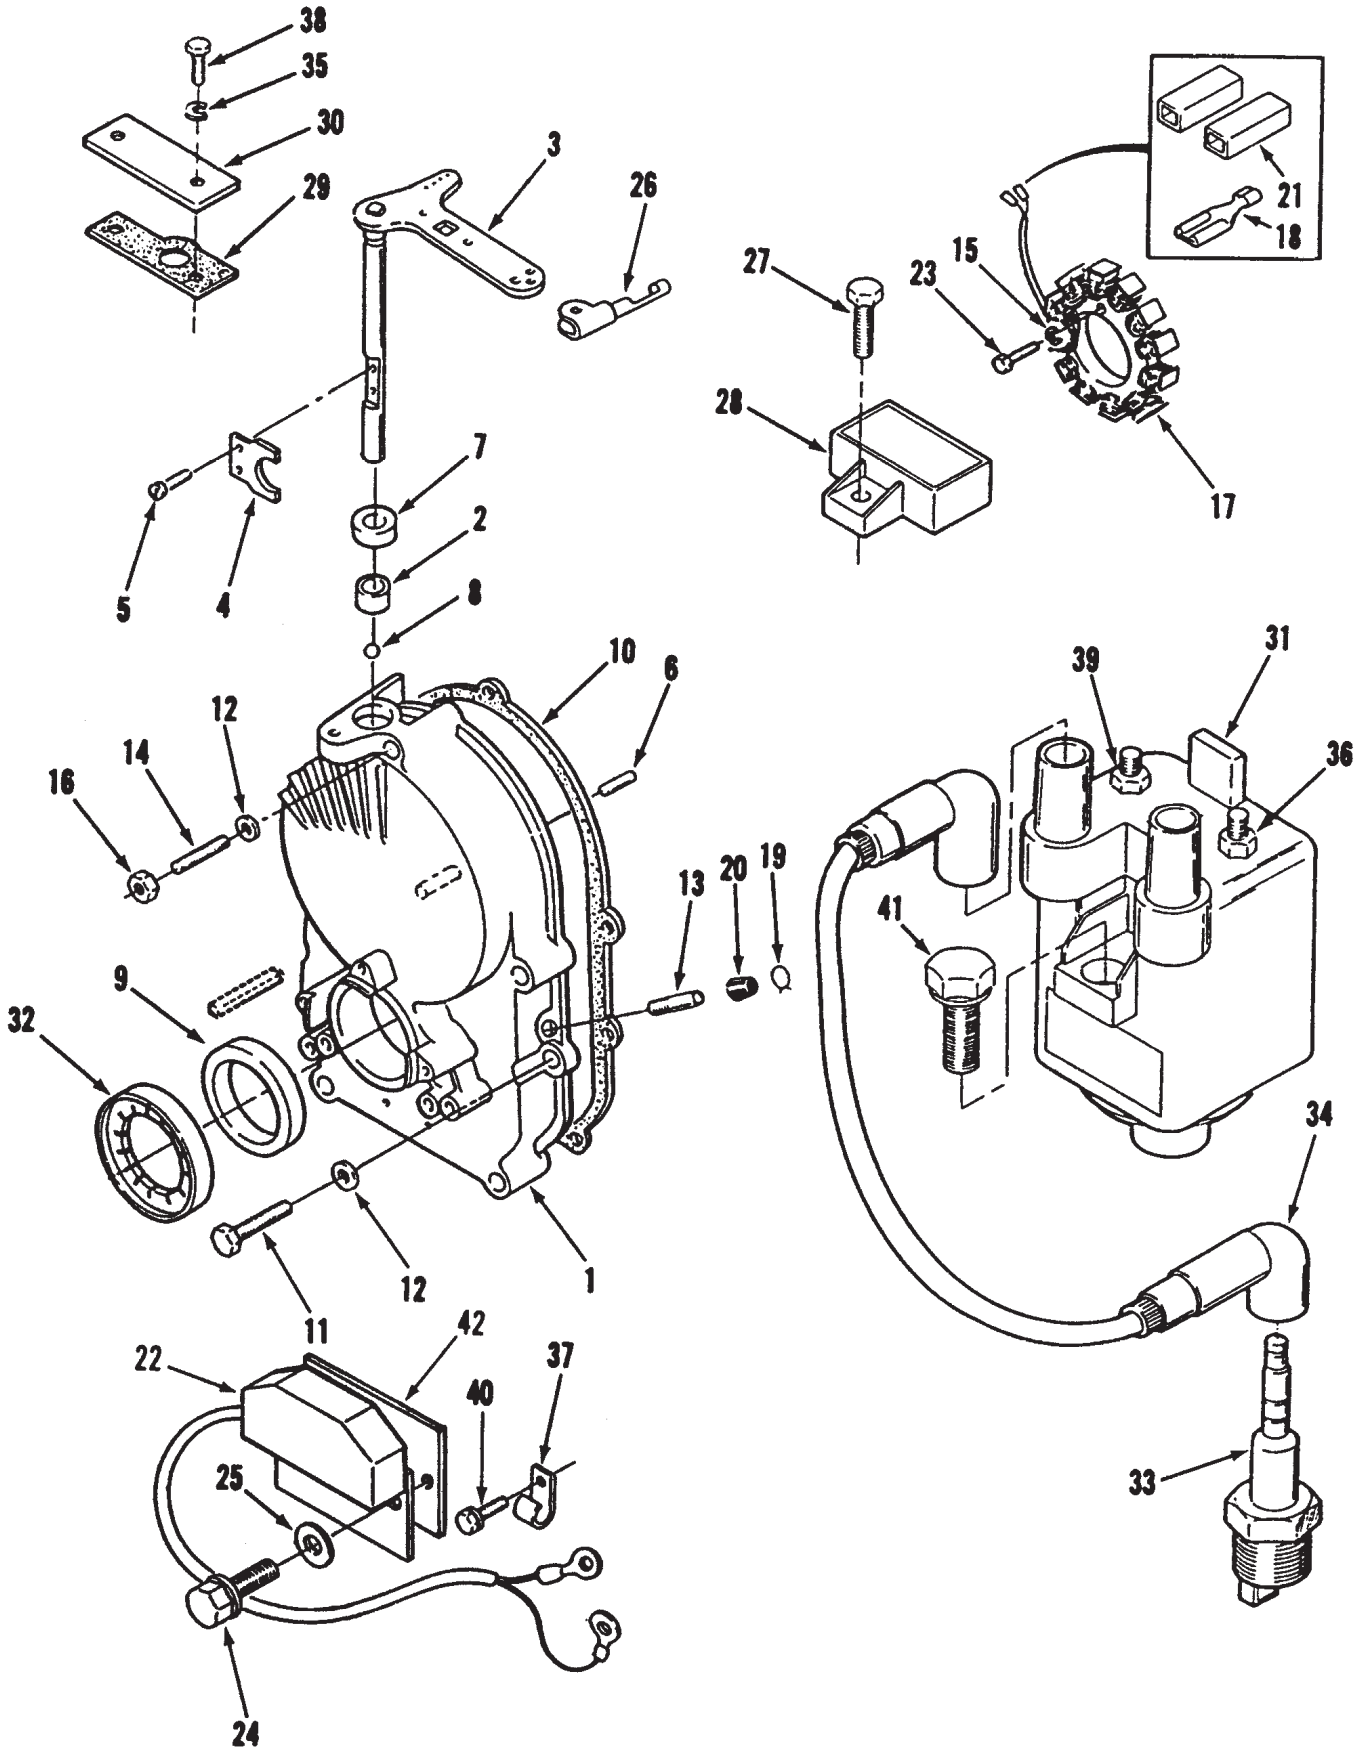


C–1670

GEARCASE AND IGNITION CONTROLS

Ref. No.	Part No.	Description	No. Used
1	NN10825	Kit – Gearcase (Incl. Ref.# 2–9, 13, 19, & 20)	1
2	57–9650	Bearing	1
3	NN10826	Governor Shaft & Arm–Chromed	1
4	59–0420	Yoke	1
5	59–0950	Screw	1
6	NN10335	Pin – Dowel	1
7	57–9570	Seal – Oil	1
8	NN10327	Bearing	1
9	57–9580	Seal – Oil	1
10	71–6360	Gasket	1
11	82–1410	Screw	4
12	57–9750	Washer	5
13	59–0360	Tube – Vacuum Port	1
14	NN10352	Stud – Gear Cover	1
15	82–1620	Washer – Lock	3
16	NN10426	Nut	1
17	NN10518	Stator w/Terminals	1
18	NN10290	Terminal – Stator Leads	3
19	57–9550	Clamp	1
20	59–0370	Cap	1
21	82–1000	Kit – Terminal	
		Connector Body	1
22	NN10444	Control – Ignition	1
23	82–1500	Screw – Hex. Hd.	3
24	NN10394	Screw – Hex. Hd.	2
25	82–1660	Washer – Lock	2
26	57–9730	Clip – Retaining	1
27	NN10414	Screw – Hex. Hd.	1
28	NN10261	Regulator – Voltage 20 amp	1
29	79–6490	Gasket – Plate	1
30	NN10515	Cover – Ignition Plunger	1
31	NN10245	Battery Ignition Coil	1
32	NN10247	Rotor – Ignition	1
33	57–9340	Plug – Spark	2
34	82–1340	Cable – Spark Plug	1
35	82–1340	Washer – Flat	2
36	NN10248	Nut	1
37	NN10348	Clip – Wire	1
38	82–1360	Screw – Hex. Hd.	1
39	NN10249	Nut	1
40	82–1410	Screw – Hex. Hd.	1
41	NN10408	Screw – Hex. Hd.	2
42	NN10516	Indicator – Ignition Module	1

TRANSMISSION 8–SPEED

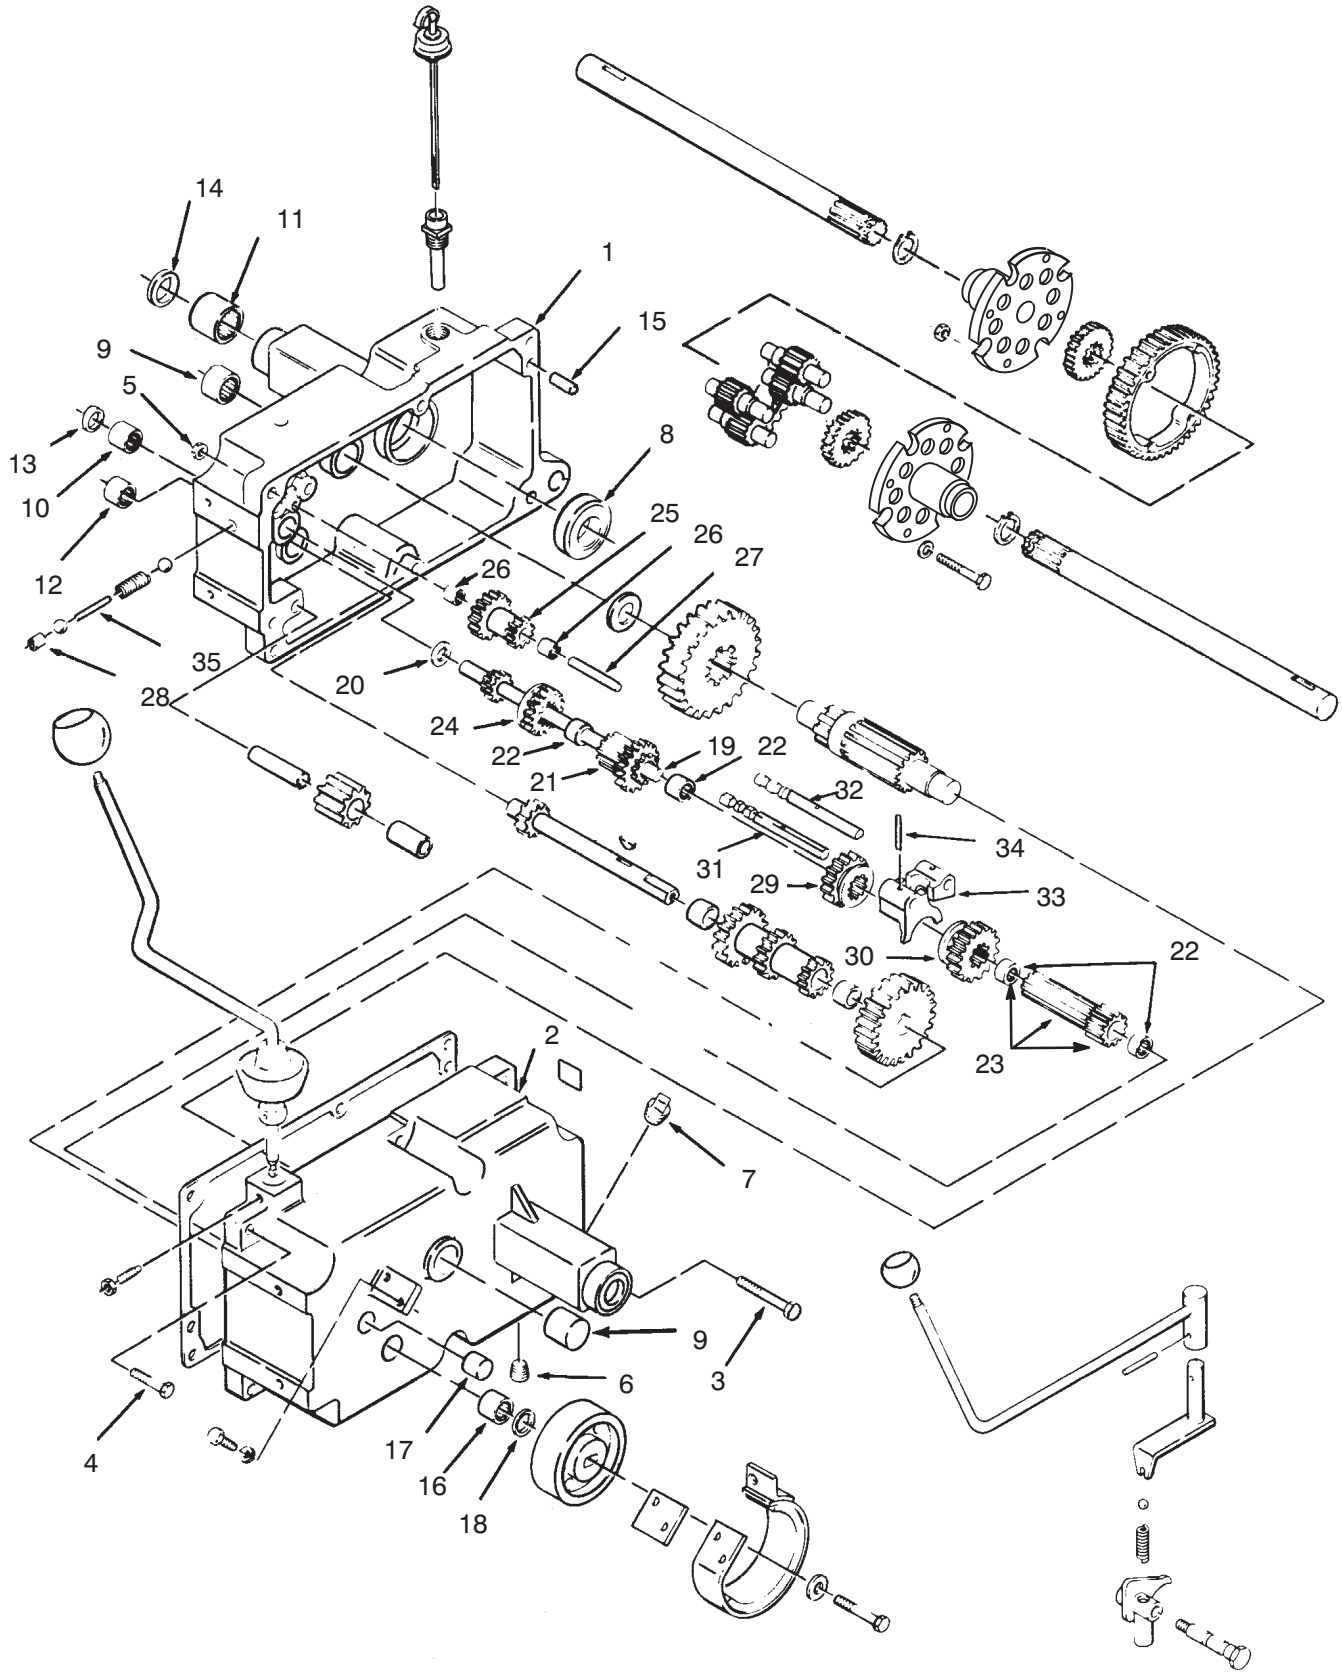


C–1473

TRANSMISSION 8–SPEED

Ref. No.	Part No.	Description	No. Used
*	92–8708	Transmission Assembly	1
1	111200	Case–Transmission, RH	1
2	111198	Case–Transmission, LH	1
3	323–16	Screw – Hex. Hd.	1
4	323–11	Screw – Hex. Hd.	5
5	3296–39	Nut	6
6	281–10	Plug – Pipe, Allen Hd.	1
7	281–2	Plug – Pipe, Sq. Hd.	1
8	111199	Bearing – Ball	2
9	1532	Bearing – Needle	2
10	1542	Bearing – Needle	1
11	9416	Bearing – Needle	2
12	1529	Bearing – Needle	1
13	100442	Seal – Input Shaft	1
14	100443	Seal – Axle	4
15	3915	Pin – Locating	2
16	1523	Bearing – Needle	1
17	83–2890	Bearing – Needle	1
18	100441	Seal – Brake Shaft	1
19	7201	Shaft – Input	1
20	7418	Washer – Thrust	1
21	7204	Gear Assembly (Incl. Ref. #22)	1
22	1518	Bearing – Needle	2
23	5175	Gear Assembly (Incl. Ref. # 22)	1
24	7205	Gear – Sliding	1
25	7206	Gear – Reduction	1
26	7207	Bearing – Needle	2
27	7208	Shaft – Reduction Gear	1
28	1243	Cup – Plug	1
29	5173	Gear – Hi &Second	1
30	5174	Gear Low & Reverse	1
31	5615	Rail – Shift, Front	1
32	5616	Rail – Shift, Rear	1
33	3503	Fork – Shift	2
34	933156	Pin – Spirol	2
35	5614	Pin – Shift	1

*Not Illustrated


TRANSMISSION 8–SPEED

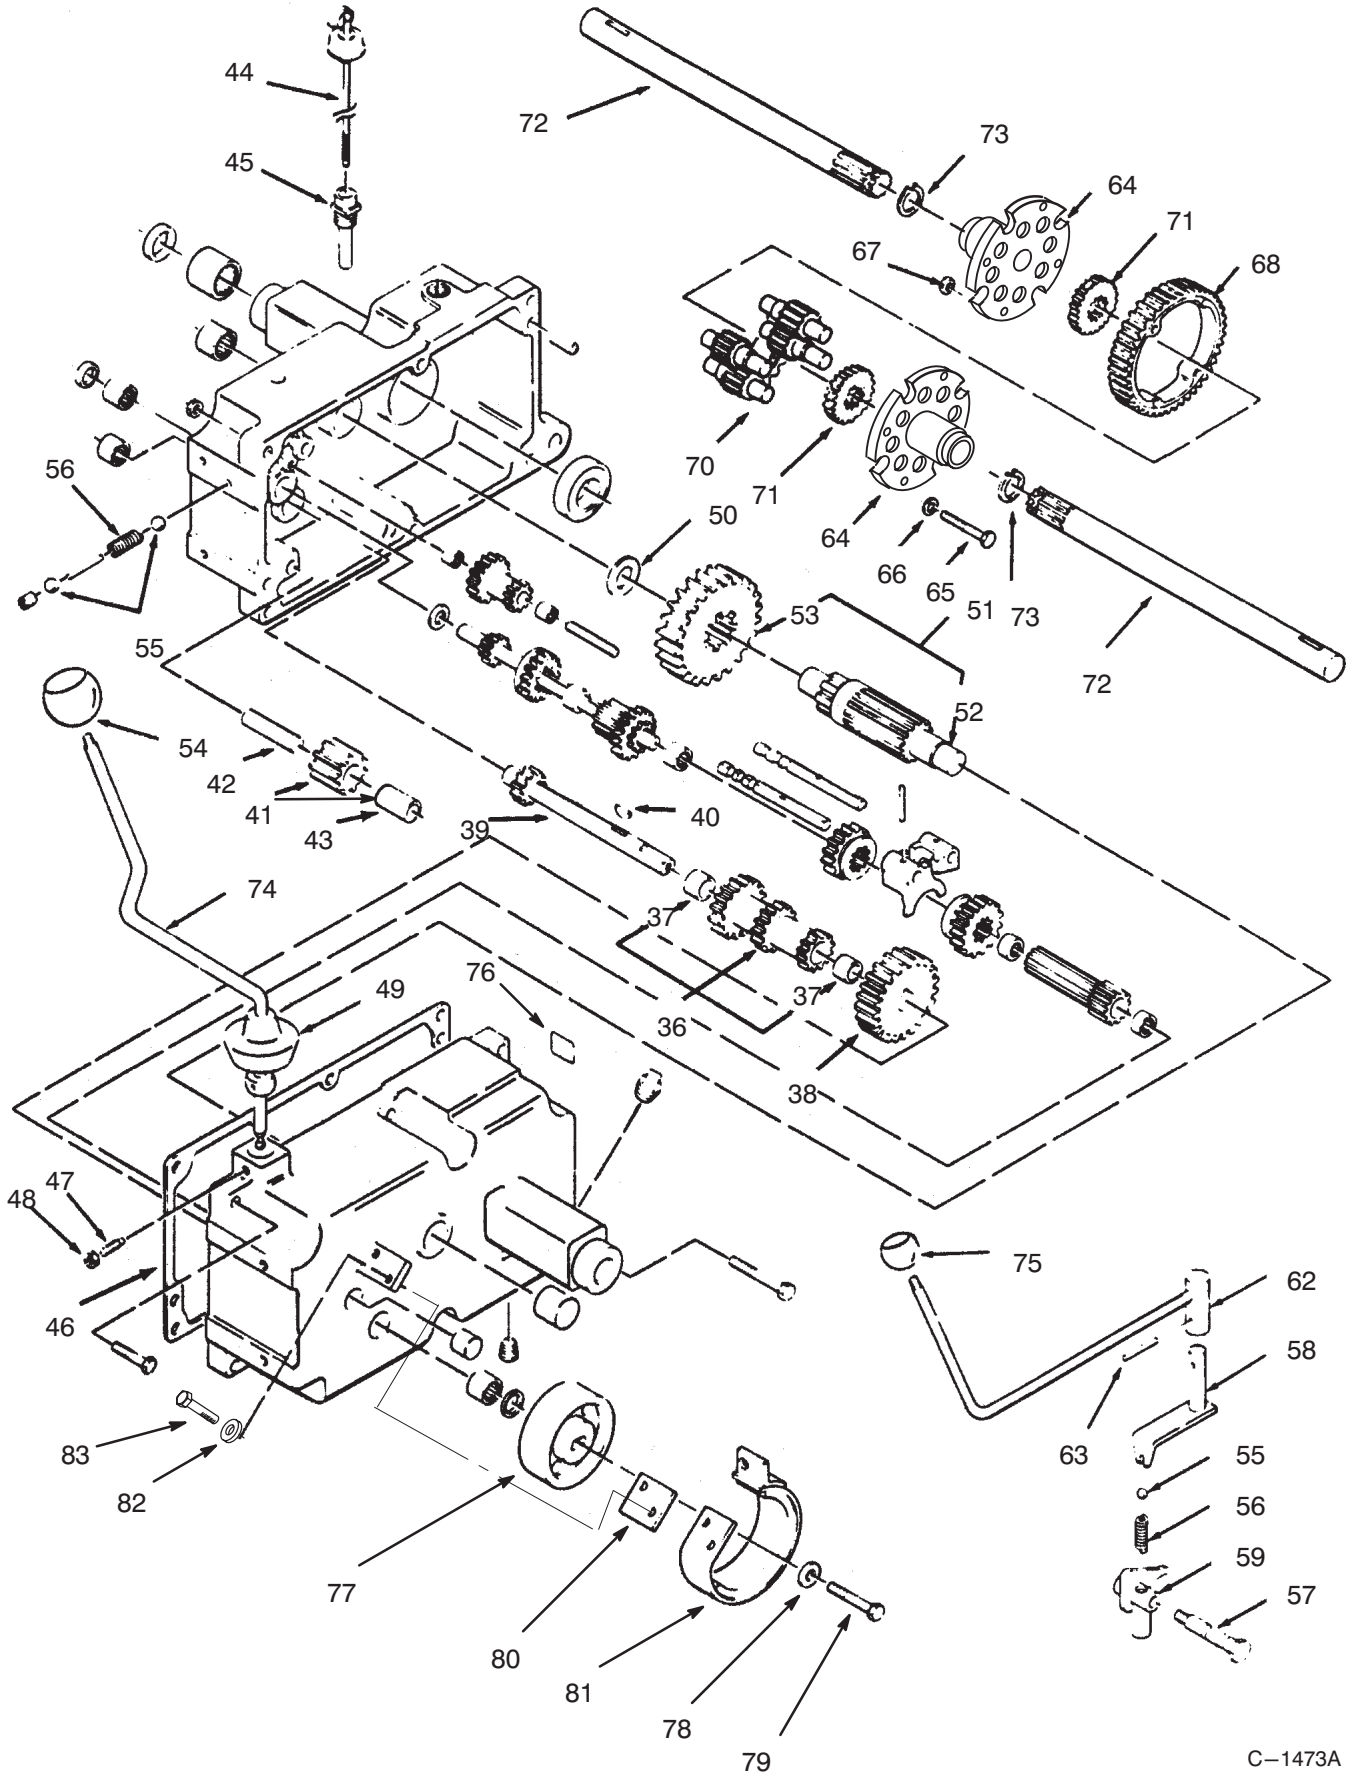

TRANSMISSION 8—SPEED

Ref. No.	Part No.	Description	No. Used
36	7269	Gear Assembly (Incl. Ref.#37)	1
37	1504	Bushing — Bronze	2
38	3527	Gear — Reduction	1
39	83—3530	Shaft — Cluster	1
40	937089	Key — Woodruff	1
41	4204	Gear Assembly, Reverse Idler (Incl. Ref. #43)	1
42	3909	Pin — Reverse Idler	1
43	1516	Bushing — Reverse Idler	1
44	101847	Dipstick	1
45	102703	Nipple — Transmission Fill	1
46	3912	Gasket — Transmission	1
47	1239	Screw — Set — Special	1
48	3217—5	Nut	1
49	3577	Cover — Dust	1
50	9547	Washer — Thrust	1
51	102974	Gear Assembly (Incl. Ref.# 52 & 53)	1
52	101625	Shaft — Pinion	1
53	101626	Gear 44 Tooth	1
54	108758	Knob — Gear Shift	1
55	3517	Ball — Detent	3
56	106030	Spring — Detent	2
57	7213	Bolt — Detent	1
58	7214	Lever — Shift Hi—Low Range	1
59	116636	Fork — Shift Hi—Low Range	1
62	110727	Rod — Shift Hi—Low Range	1
63	933184	Pin — Spirol	1
64	111196	Cap — Diff End	2
65	911423	Bolt	4
66	107374	Washer — Special	4
67	108881	Nut — Hex	4
68	105061	Gear — Differential Ring 43 Tooth	1
70	101623	Gear — Differential Pinion	8
71	101889	Gear — Differential Axle	2
72	105875	Axle — Rear	2
73	105876	Ring — Special, Snap	2
74	110725	Stick — Shift	1
75	83—2710	Knob — Hi—Lo Range Shift	1
76	92—8749	Decal — Unidrive	1
77	106719	Drum — Brake	1
78	2844	Washer — Special	1
79	110234	Screw — Hex. Hd.	1
80	9598	Plate — Stop	1
81	9593	Band — Brake	1
82	3253—3	Washer — Lock	2
83	321 — 3	Screw — Hex. Hd.	2

CLUTCH, BRAKE AND SPEED CONTROL LINKAGE

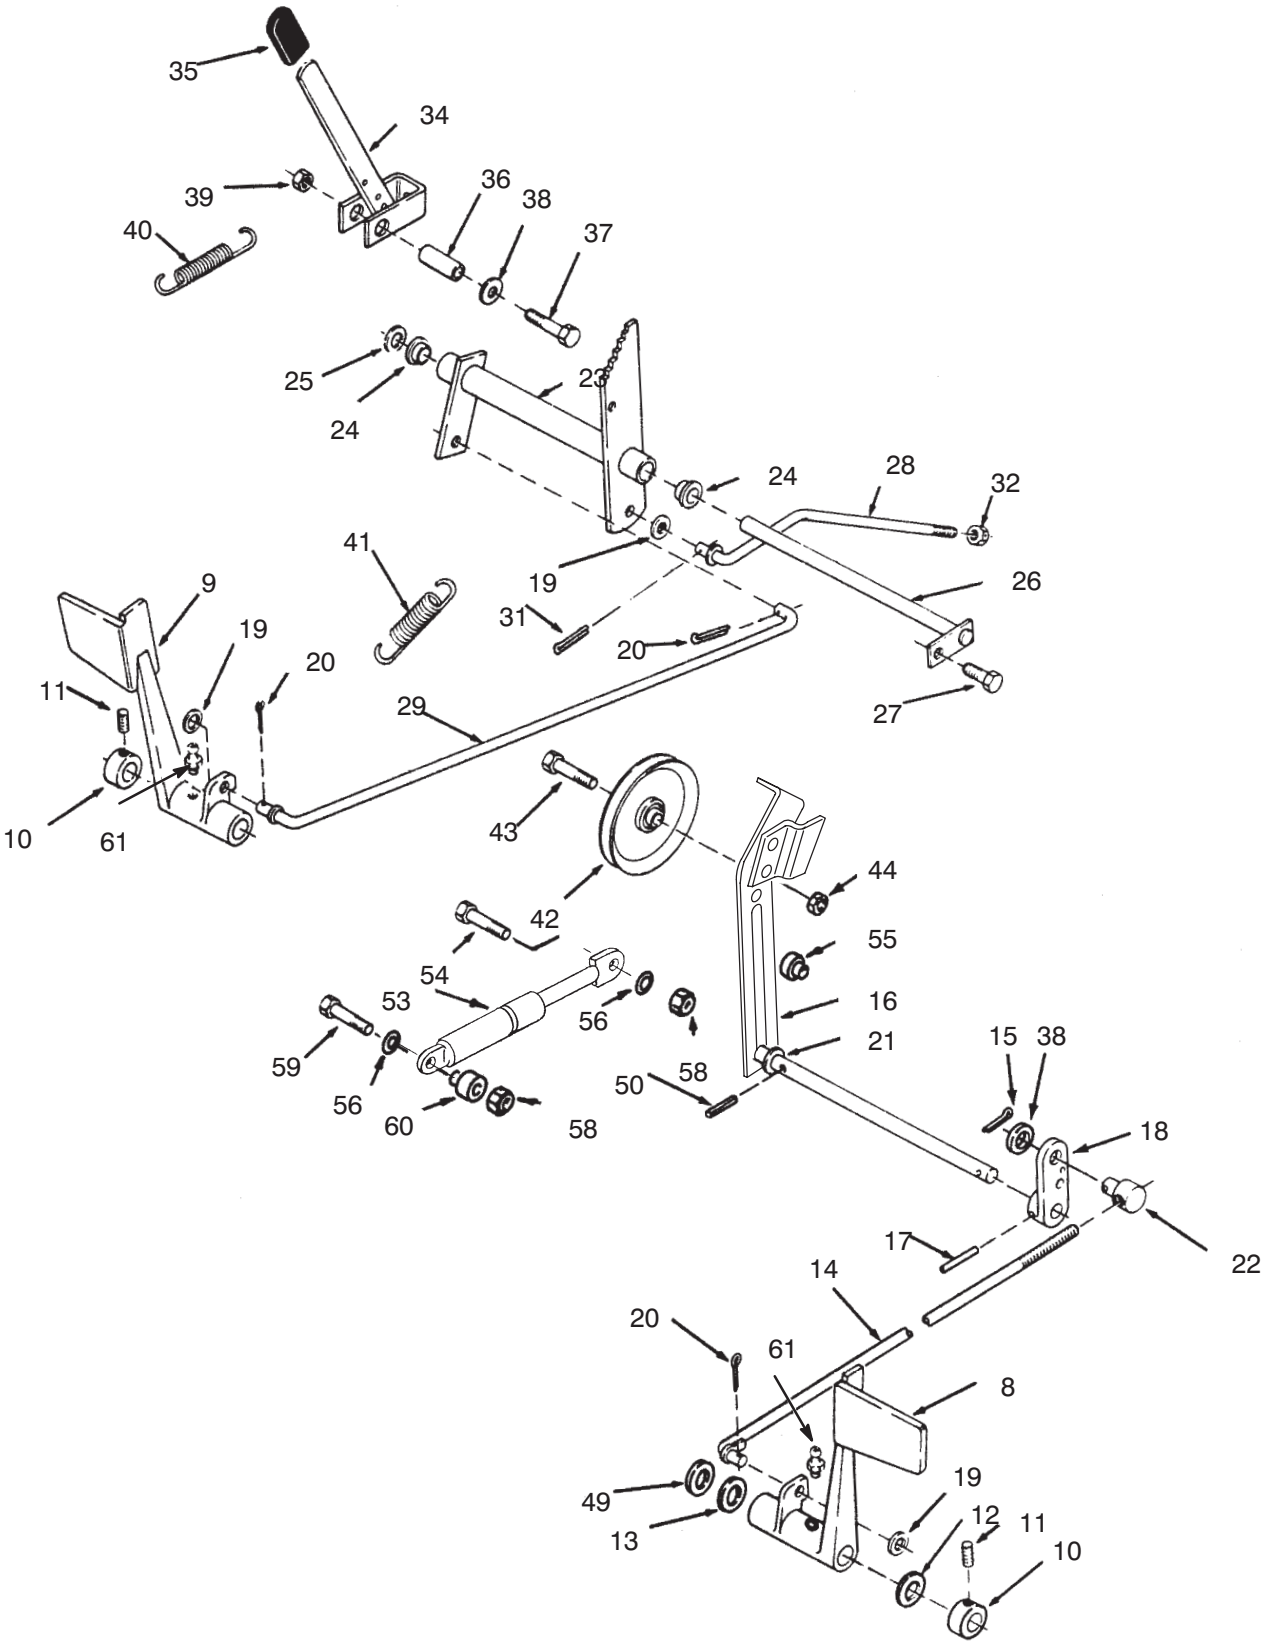


C–1475

CLUTCH, BRAKE AND SPEED CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used
8	114814	Pedal – Clutch	1
9	114813	Pedal – Brake	1
10	111383	Collar	3
11	3245–32	Screw –Set	3
12	7896	Washer – Bowed	1
13	1278	Washer – Shim	1
14	103347	Rod – Clutch	1
15	3272–6	Pin – Cotter	1
16	78–2970	Arm – Clutch Idler	1
17	933190	Pin – Spirol	1
18	105896	Arm – Clutch Rod	1
19	920248	Washer – Nylon	3
20	3272–10	Pin – Cotter	3
21	3765	Washer – Shim	1
22	101161	Trunnion – Clutch Rod	1
23	103543	Bell Crank – Brake Linkage	1
24	7879	Bushing	2
25	3256–26	Washer	1
26	106417	Rod – Bell Crank Pivot	1
27	9266944	Screw – Hex. Hd.	1
28	105900	Rod – Brake, Rear	1
29	105886	Rod – Brake, Front	1
31	9335054	Pin – Cotter	1

Ref. No.	Part No.	Description	No. Used
32	3296–39	Nut	1
34	106451	Lever – Parking Brake	1
35	6820	Grip	1
36	102025	Spacer	1
37	323–9	Screw Hex. Hd.	1
38	3256–24	Washer	2
39	102809	Nut – Special	1
40	107677	Spring – Brake Return	1
41	103628	Spring – Return	1
42	7451	Pulley – Idler	1
43	106193	Bolt – Special	1
44	32146–2	Nut	1
49	9202254	Washer – Special	1
50	933267	Pin – Spirol	1
53	78–3240	Spring – Gas	1
54	321–31	Screw – Hex. Hd.	1
55	78–3260	Spacer	1
56	3256–22	Washer	2
58	3296–42	Nut	2
59	321–9	Screw – Hex. Hd.	1
60	78–3250	Spacer	1
61	302–5	Fitting – Grease	2

MANUAL LIFT LINKAGE

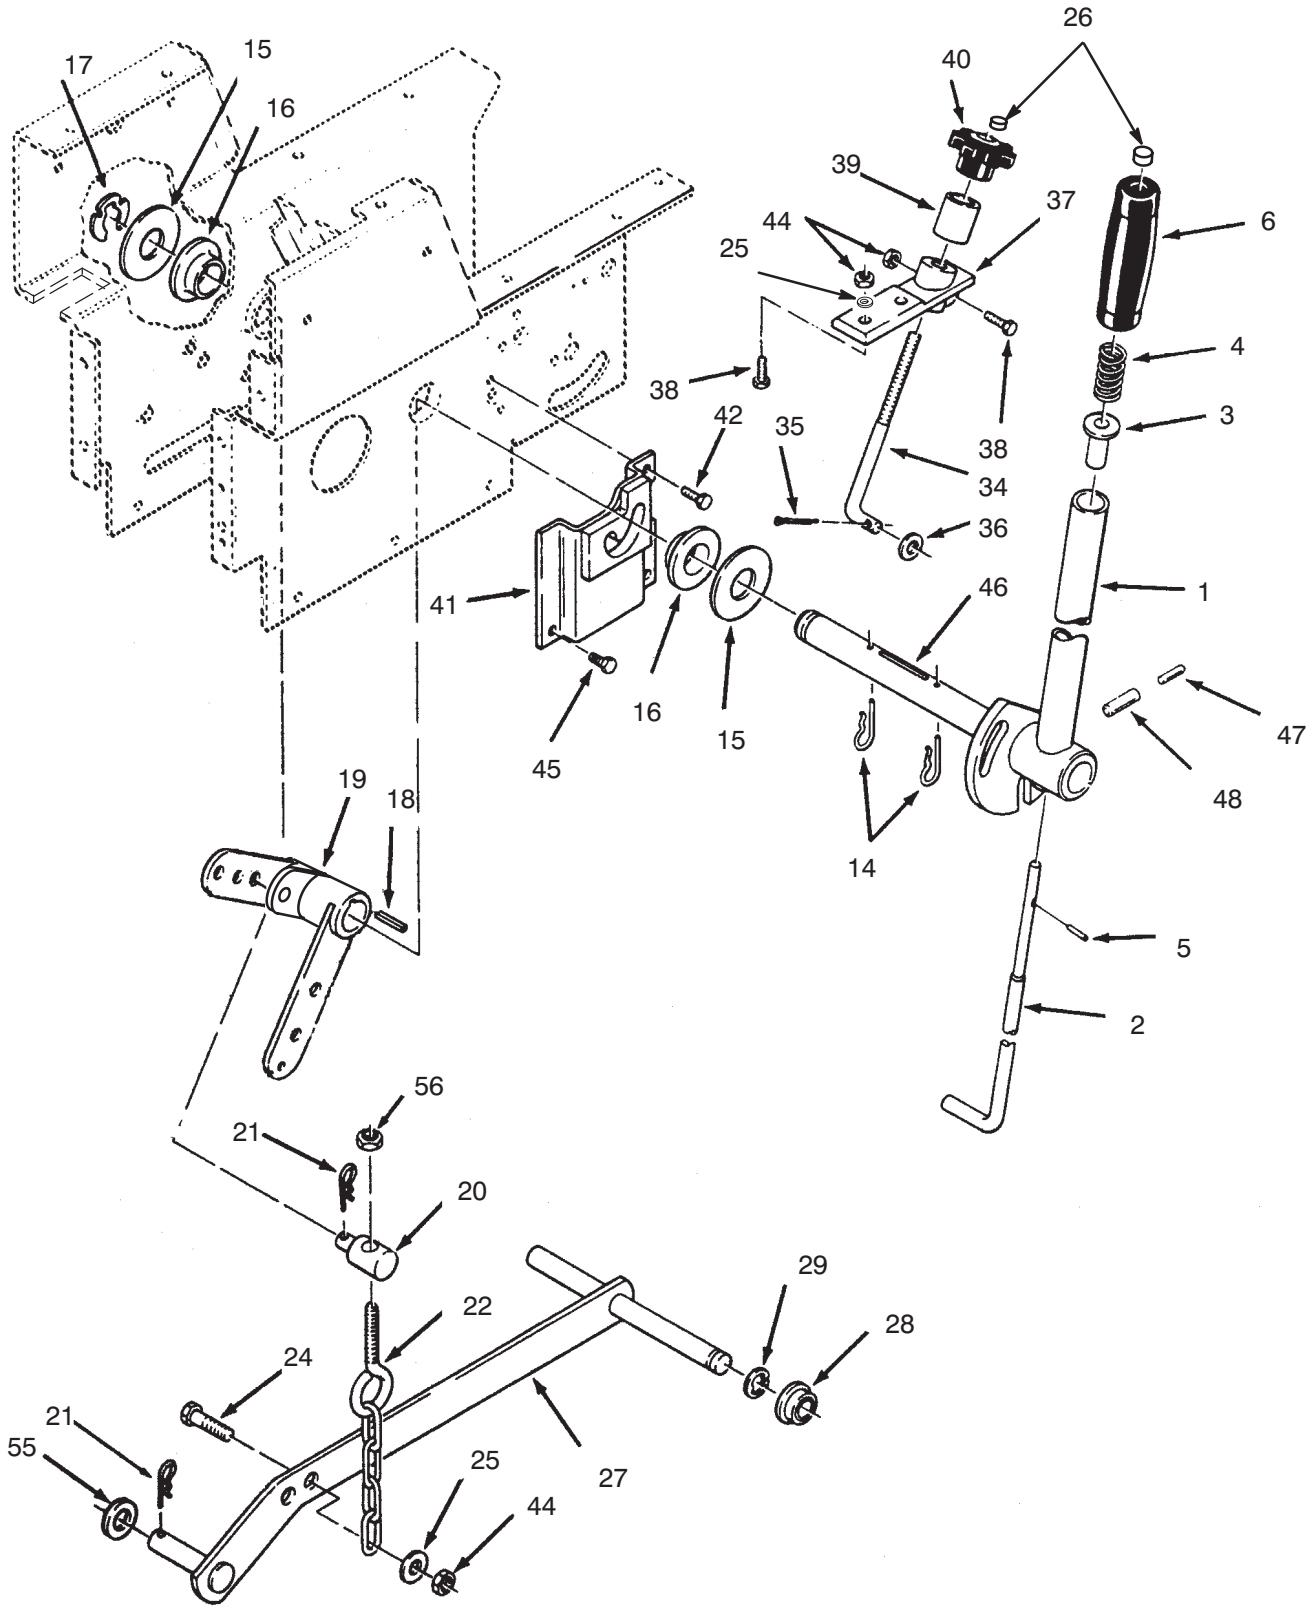



C–1477

MANUAL LIFT LINKAGE

Ref. No.	Part No.	Description	No. Used
1	108563	Lever – Lift (Incl. Ref.# 46, 47 & 48)	1
2	106257	Rod – Latch	1
3	8130	Retainer – Spring	1
4	3624	Spring	1
5	933148	Pin – Spirol	1
6	6542	Grip – Lift Lever	1
14	9335074	Pin – Cotter	2
15	3256–62	Washer	2
16	106269	Bushing	2
17	32151–91	Retainer	1
18	1121	Key	1
19	78–1550	Lever – Lift	1
20	6739	Trunnion	1
21	9335054	Pin – Cotter	2
22	106522	Chain – Lift	1
24	322–6	Screw – Hex. Hd.	1
25	3256–23	Washer	3
26	105316	Cap – Plunger Rod	2
27	113445	Bar – Lift	1
28	6229	Bearing	1
29	32120–47	Ring – Retaining	1
34	110653	Rod – Height Control	1
35	3272–10	Pin – Cotter	1
36	3256–5	Washer	1
37	106345	Casting – Lift Lever	1
38	322–5	Screw – Hex. Hd.	3
39	106258	Sleeve	1
40	5280	Knob – Height Control	1
41	106411	Latch – Bracket	1
42	9266944	Screw – Hex. Hd.	1
44	3296–29	Nut	4
45	926696	Screw – Hex. Hd.	2
46	108565	Shaft	1
47	32121–103	Pin – Spirol	1
48	32121–25	Pin – Roll	1
55	3256–25	Washer	1
56	3296–39	Nut	1

ELECTRIC SCHEMATIC 416

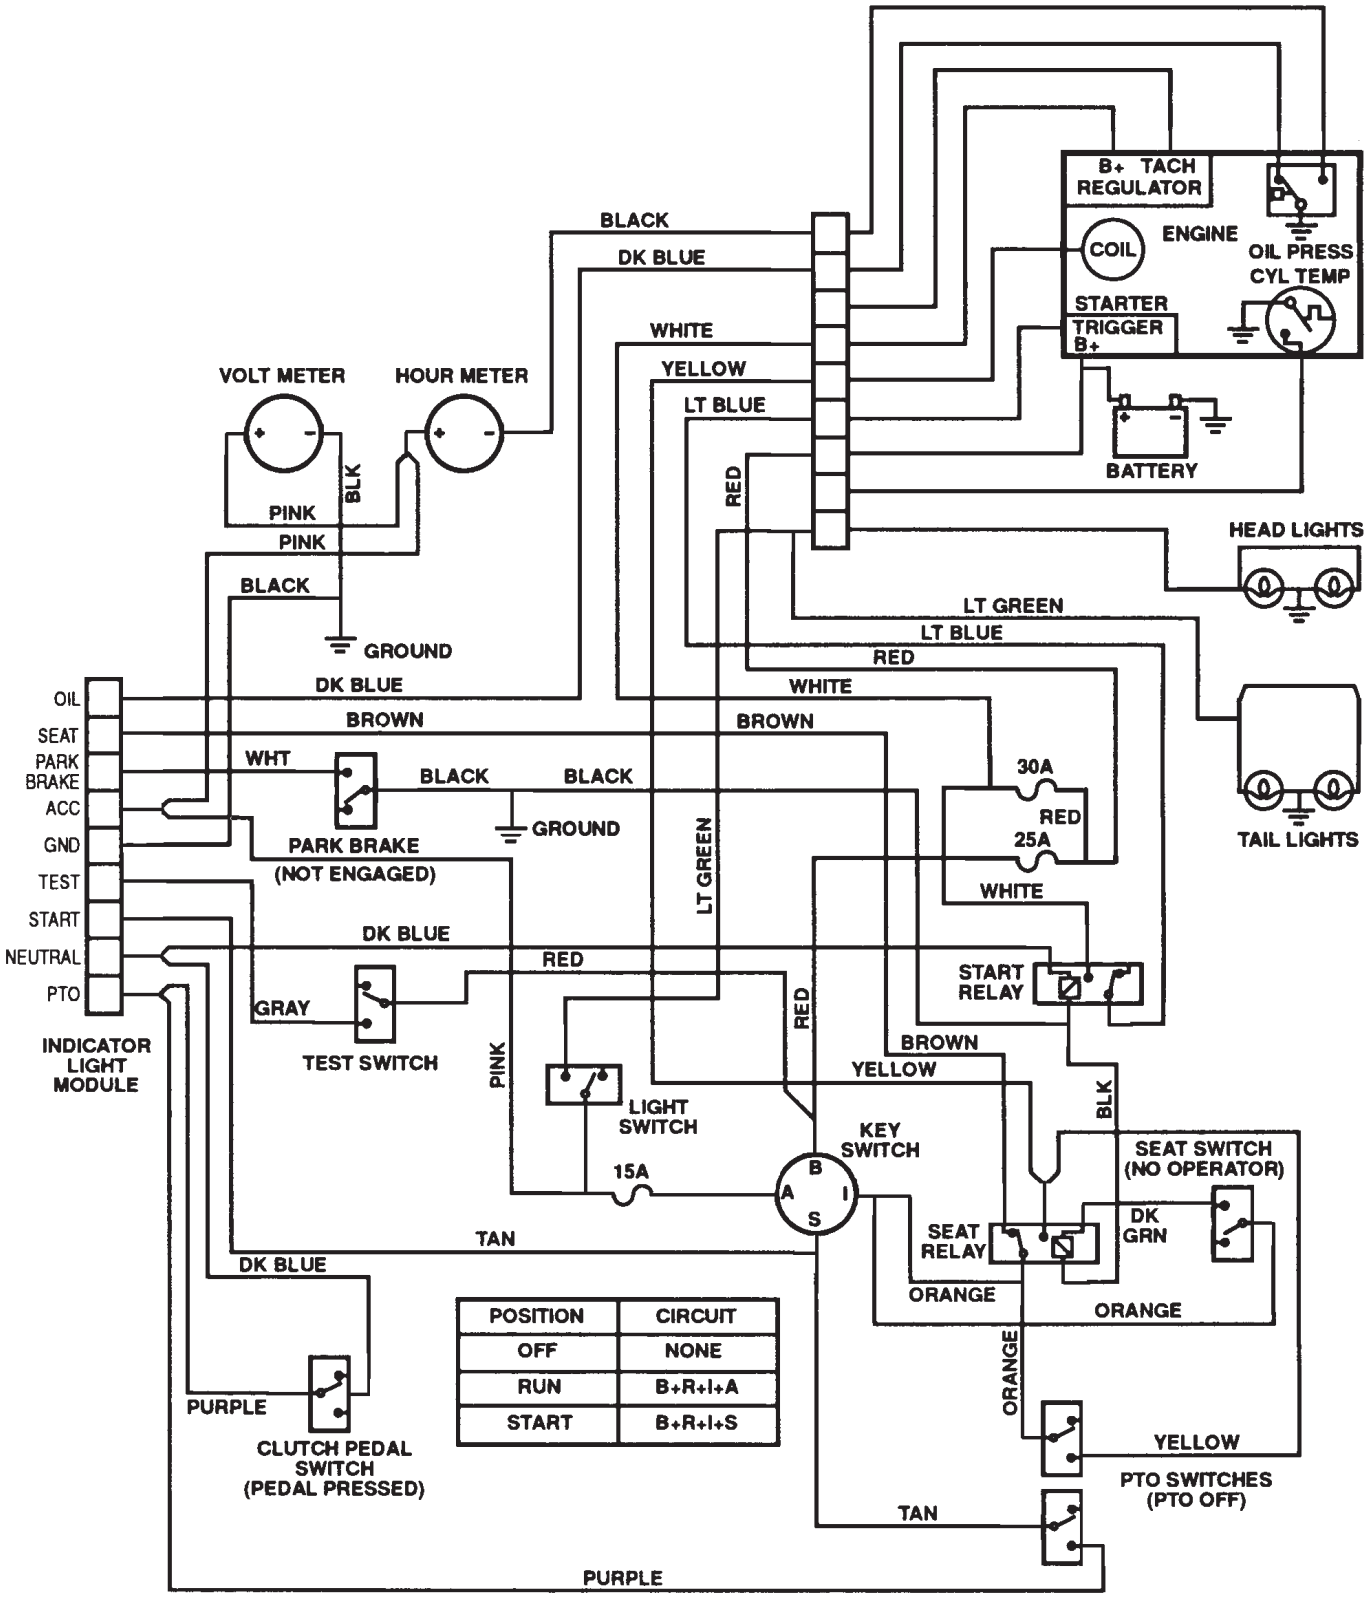

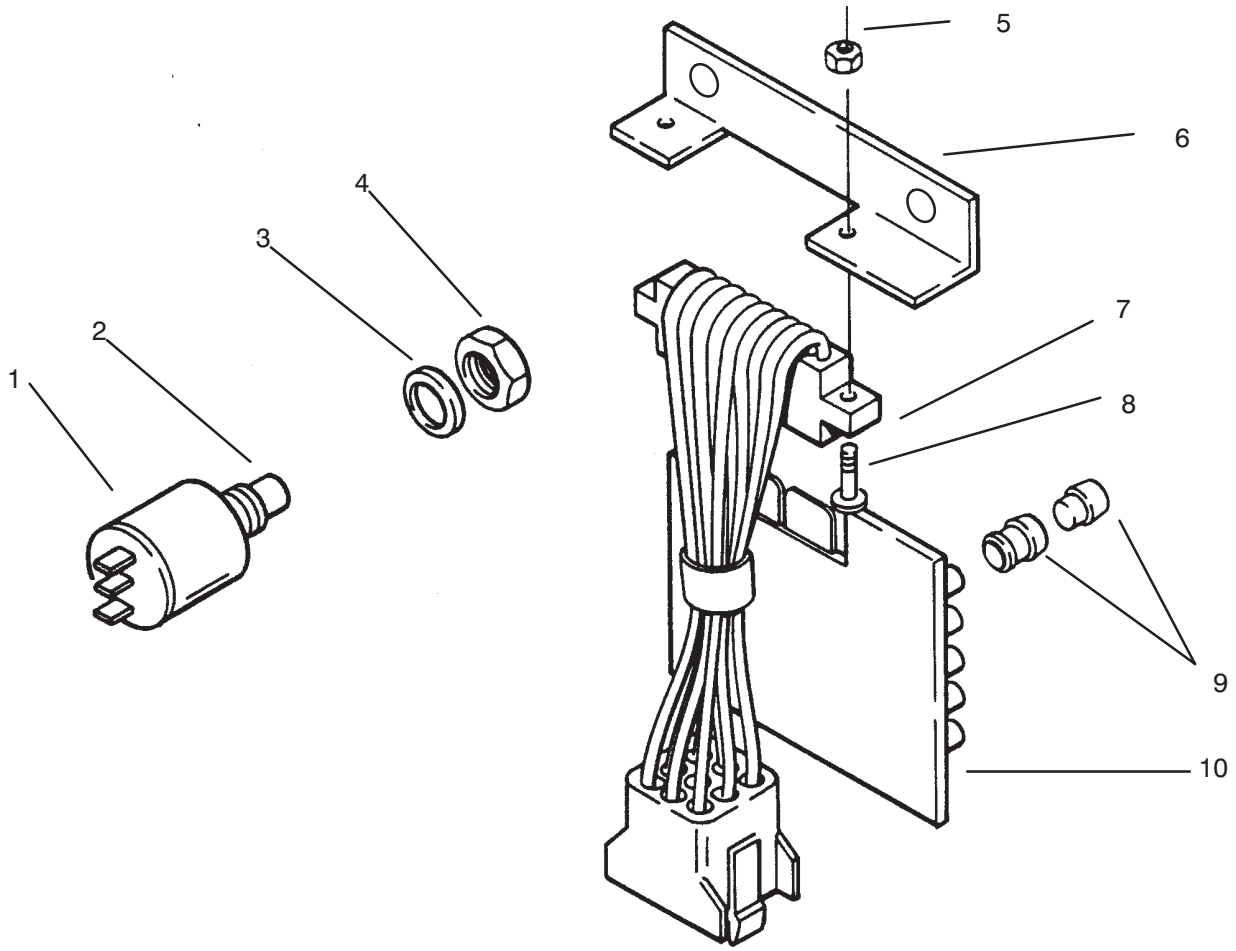


C–1497

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	116796	Test Switch (Incl. Ref. #2–4)	1
2	117217	Button – Switch	1
3	111767	Washer	1
4	111359	Nut – Hex	1
5	9157324	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
6	112506	Bracket	1
7	117377	Harness – Wiring	1
8	9107562	Screw	2
9	111343	Bushing Assembly & Indicator Lens	5
10	114825	PC Board w/Lights	1

ELECTRICAL SYSTEM

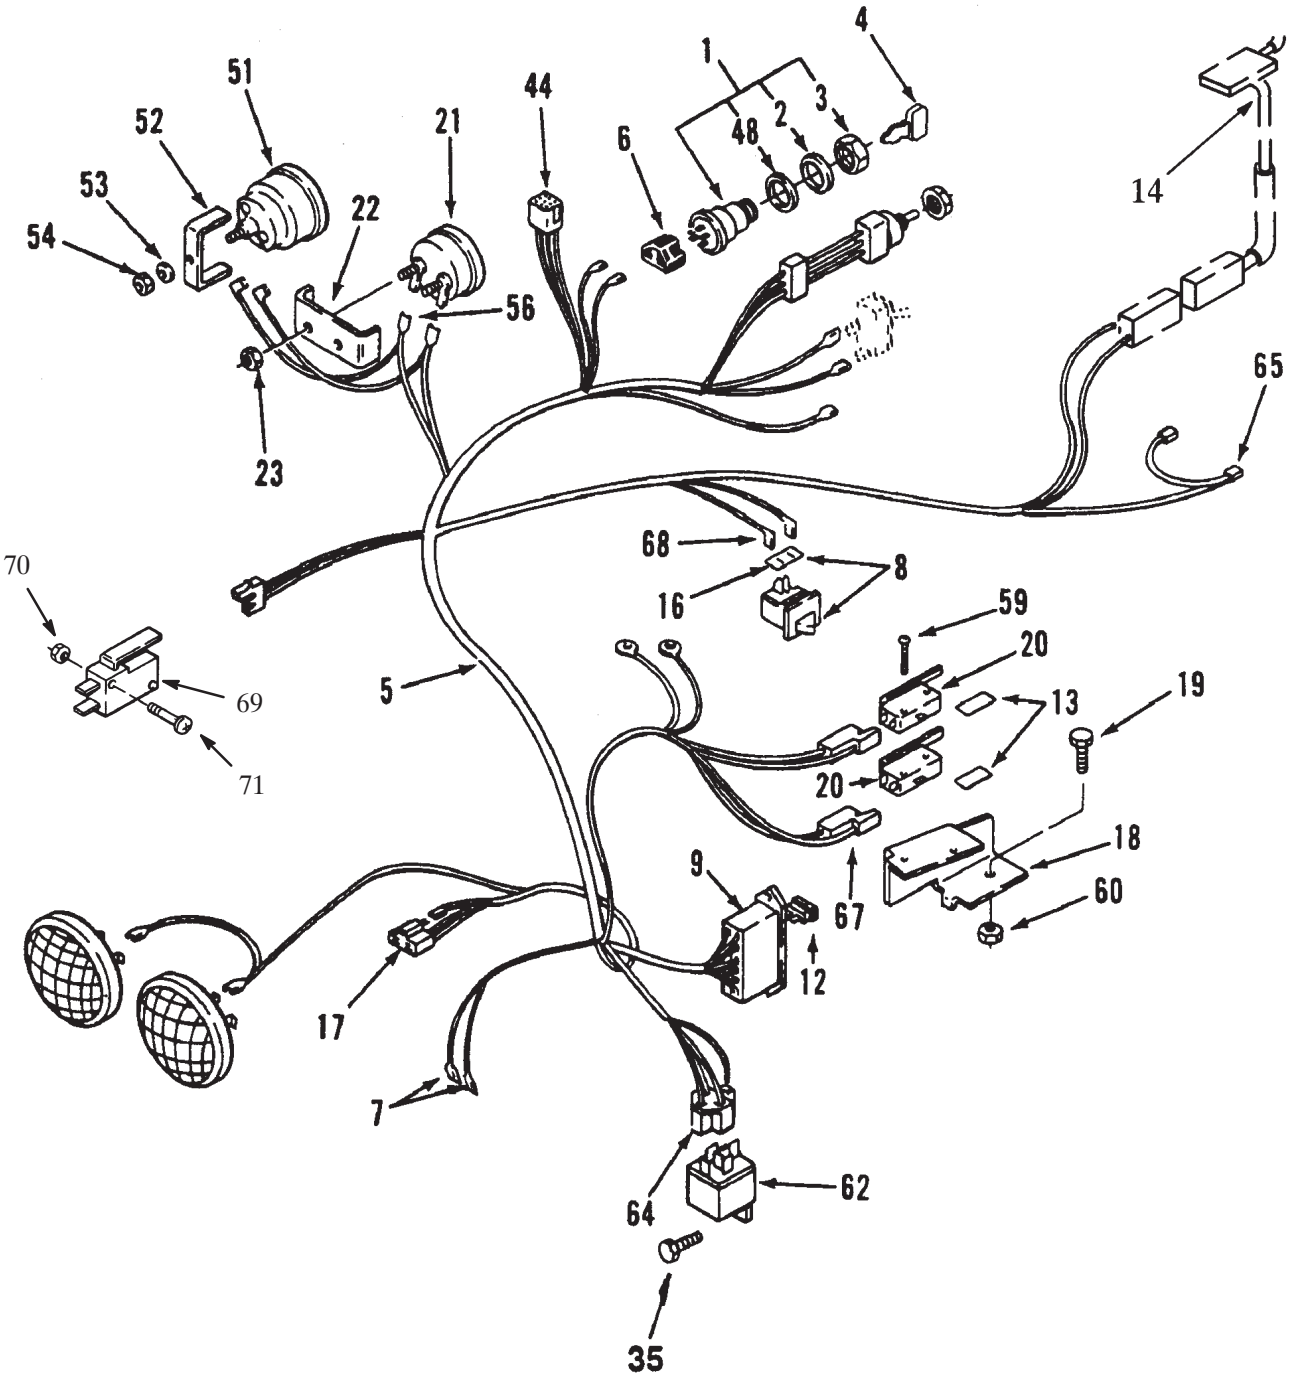

C–1657


ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	111216	Switch – Ignition	1
2	920160	Washer – Lock	1
3	101884	Nut – Special	1
4	62–7770	Key – Ignition, Padded	1
5	79–3600	Wiring Harness (Incl. Ref.# 6,7,9,17,44,65 & 68)	1
6	104926	Switch – Connector Body Ignition	1
7	518105	Terminal	1
8	103480	Switch – Clutch Interlock, (Incl. Ref.#16)	1
9	120930	Body – Fuse	1
12	109355	Fuse 15 Amp ATO or ATC	1
*	109102	Fuse 25 Amp ATO or ATC	1
*	NN10277	Fuse 30 Amp ATO or ATC	1
13	111642	Barrier – Switch Insulator	2
14	38–1420	Switch – Seat	1
16	110502	Shield – Dirt	1
17	112185	Body – Connector	1
18	115411	Support – Switch	1
19	9266714	Bolt	1

Ref. No.	Part No.	Description	No. Used
20	111332	Switch – PTO Interlock	2
21	79–0060	Voltmeter	1
22	78–0080	Clamp – Voltmeter	1
23	5924	Nut	2
35	9107944	Screw	1
48	9202624	Washer – Special	1
51	78–0020	Meter – Hour (Incl. Ref.# 52–54)	1
52	78–3320	Clamp – Hour Meter	1
53	920120	Washer – Lock	1
54	915962	Nut – Hex	1
59	9104784	Screw	2
60	9157324	Nut	2
62	116397	Relay	1
64	518105	Terminal	1
65	6921	Terminal	1
68	518077	Terminal	2
69	111332	Switch – Parking Brake	1
70	9157324	Nut – Hex	2
71	910948	Screw	2

*Not Illustrated

ELECTRICAL SYSTEM

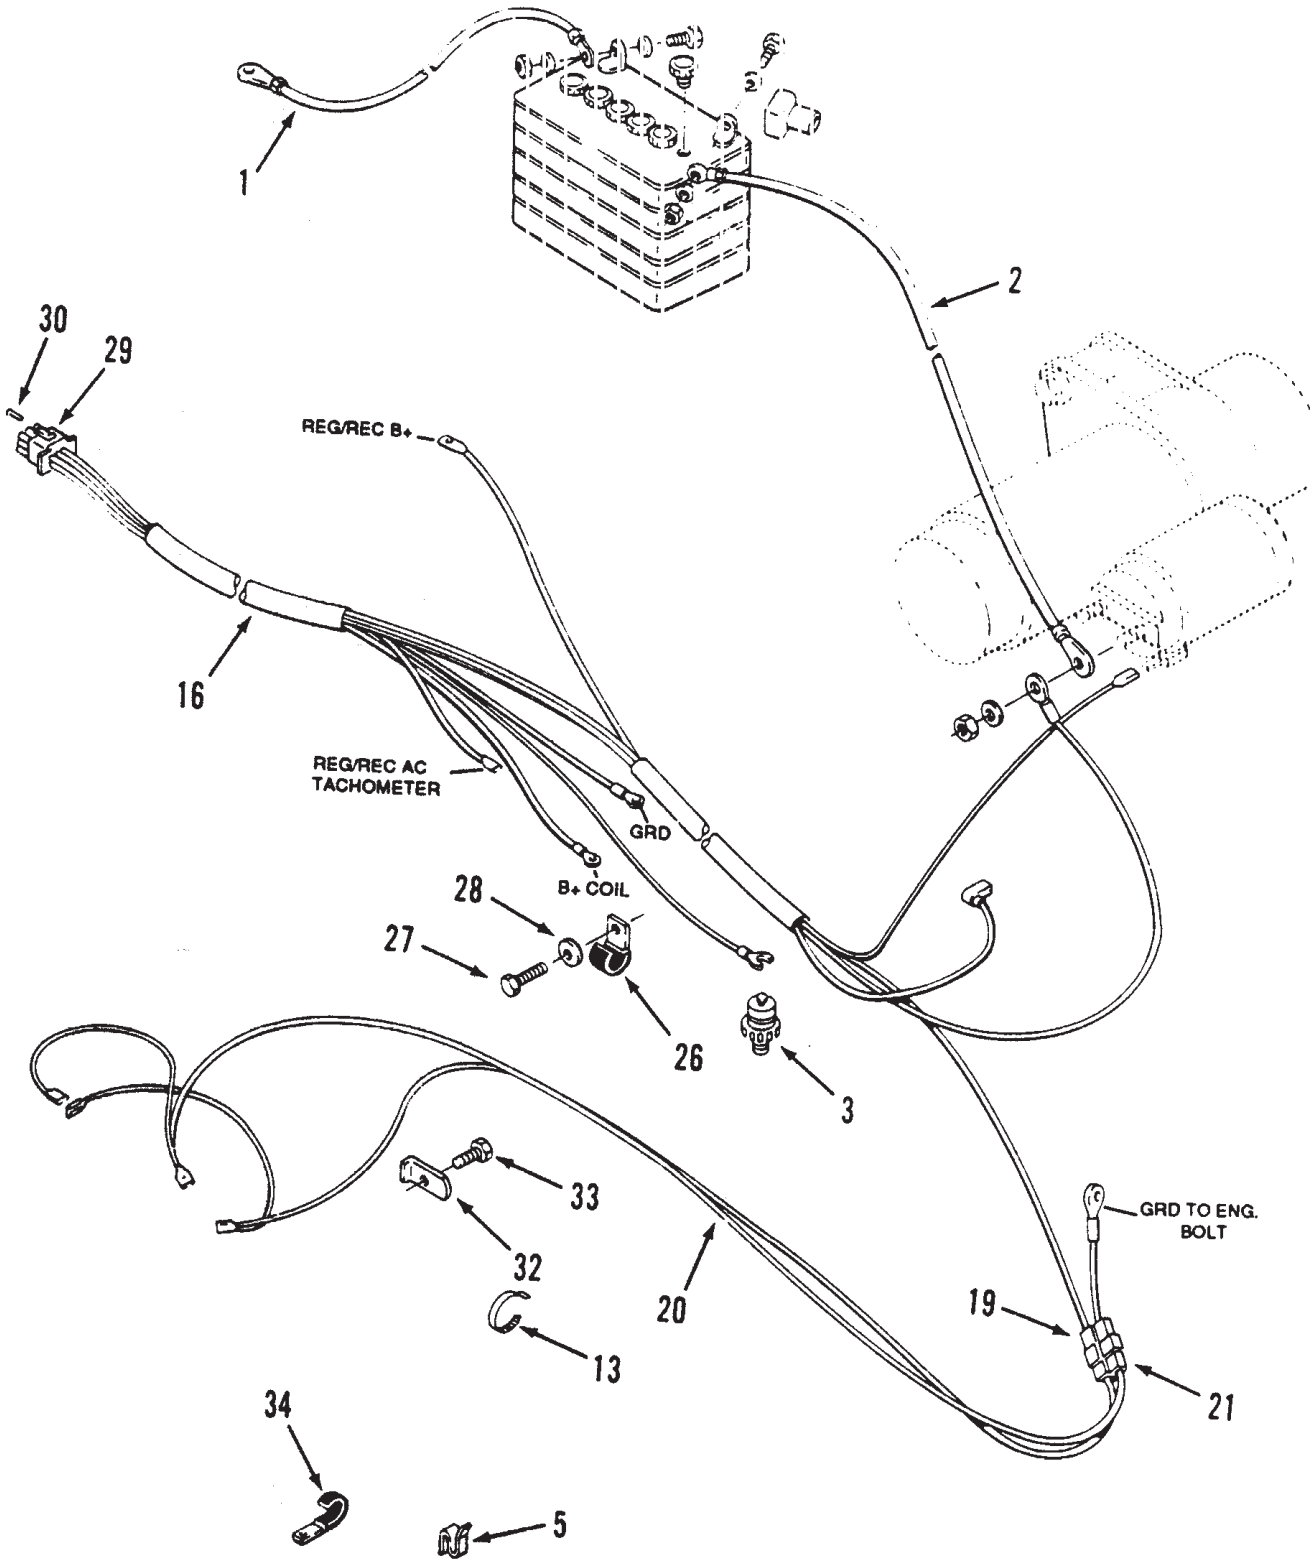


C–1673

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1		Cable – Battery Ground	1
2		Cable – Battery (+) to Solenoid	1
3	94–1845	Switch – Low Oil Pressure	1
4	109553	Cover – Terminal	2
5	3023	Clip – Small	1
13	3290–378	Tie – Cable	4
16	94–1846	Harness – Engine Wiring	1
19	NN10278	Connector	1
20	114052	Harness – Headlight	1
21	109357	Connector	1
26	NN10348	Clip	1
27	NN10399	Screw	1
28	NN10425	Washer – Lock	1
29	NN10281	Connector	1
30	NN10279	Contact – Socket	1
32	109459	Clamp	2
33	9266714	Bolt – Hex	2
34	8830	Clip	1


3317–889

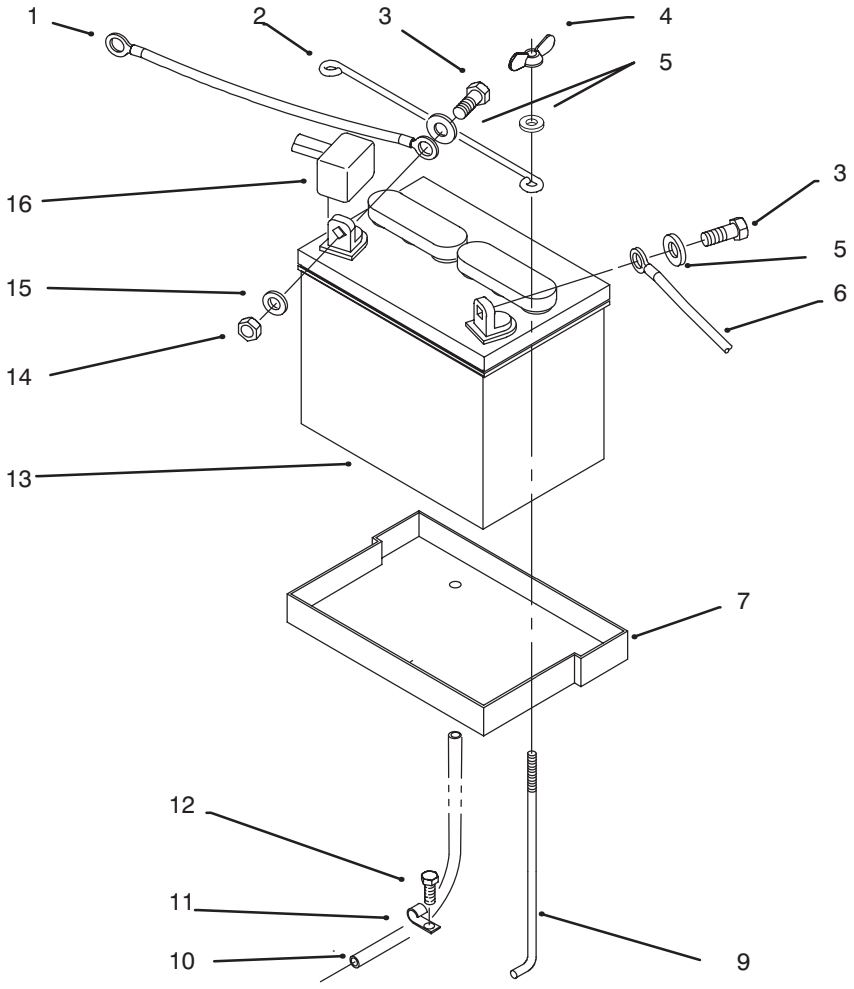

BATTERY

Ref. No.	Part No.	Description	No. Used
1	114210	Cable – Battery	1
2	113010	Rod – Battery Hold Down	1
3	321–3	Screw – Hex. Hd.	2
4	32103–22	Nut – Wing	4
5	3256–22	Washer	4
6	111069	Cable – Battery	1
7	106948	Tray – Battery	1
9	113969	Hook – Battery	2

Ref. No.	Part No.	Description	No. Used
10	114720	Tube – Battery	1
11	8830	Retainer	1
12	322–2	Screw – Hex. Hd.	1
13	105842	Battery	1
14	3296–42	Nut	2
15	3253–3	Washer – Lock	2
16	109553	Boot – Battery Cable	1

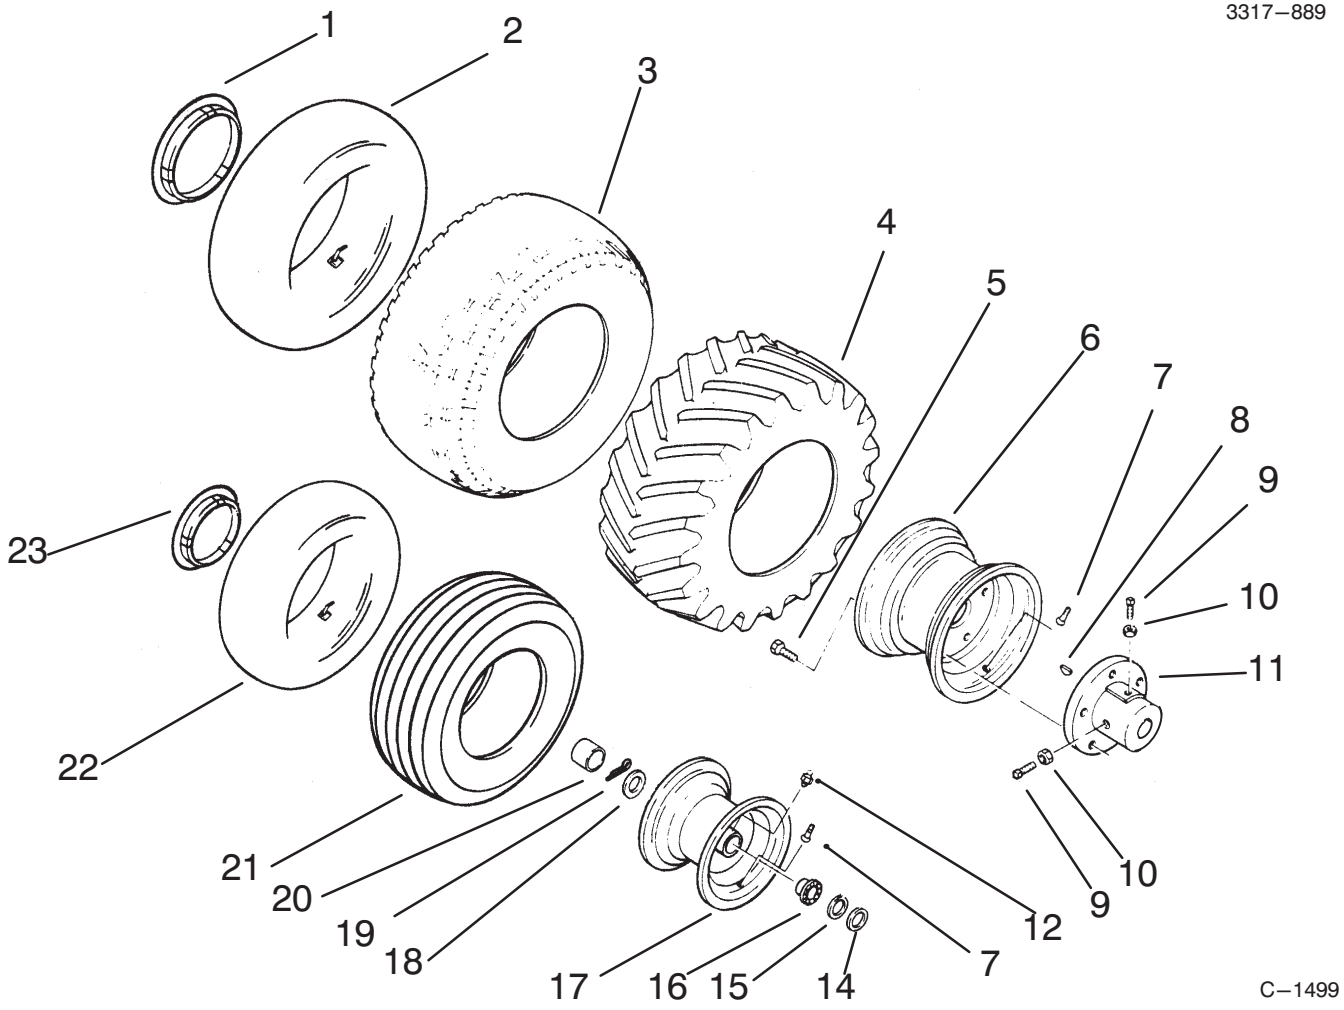


WHEELS AND TIRES

Ref. No.	Part No.	Description	No. Used
1	114428	Logo — Hub Cap 12” (Opt.)	2
2	7007	Tube — Rear (Opt.)	2
*	100291	Tube — Cleat Tire (Opt.)	2
3	116744	Tire — Turf Trac, Rear	2
4	7607	Tire — Cleat, (Opt.)	2
5	83—2720	Bolt — Lug	10
6	111516	Wheel — Rear	2
*	110677	Wheel — Cleat (Opt.)	2
7	5108	Stem — Valve	4
8	937108	Key — Woodruff	2
9	3243—5	Screw — Set	4
10	3218—3	Nut	4
11	105763	Hub — Rear	2

Ref. No.	Part No.	Description	No. Used
12	109500	Fitting — Grease	2
14	5210	Washer — Shim .015	2
15	1278	Washer — Shim .050	4
16	110513	Bearing — Ball	4
17	78—1680	Rim — Front	2
18	111952	Washer — Special Hub Cap	2
19	3272—17	Pin — Cotter	2
20	111591	Hubcap	2
21	117127	Tire — Turf Trac, Front	2
22	100079	Tube — Front” (Opt.)	2
23	114427	Logo — Hub Cap 6” (Opt.)	2
*	78—1660	Wheel Assembly — Front (Incl. Ref.# 7,12, 16 & 21)	2

*Not Illustrated

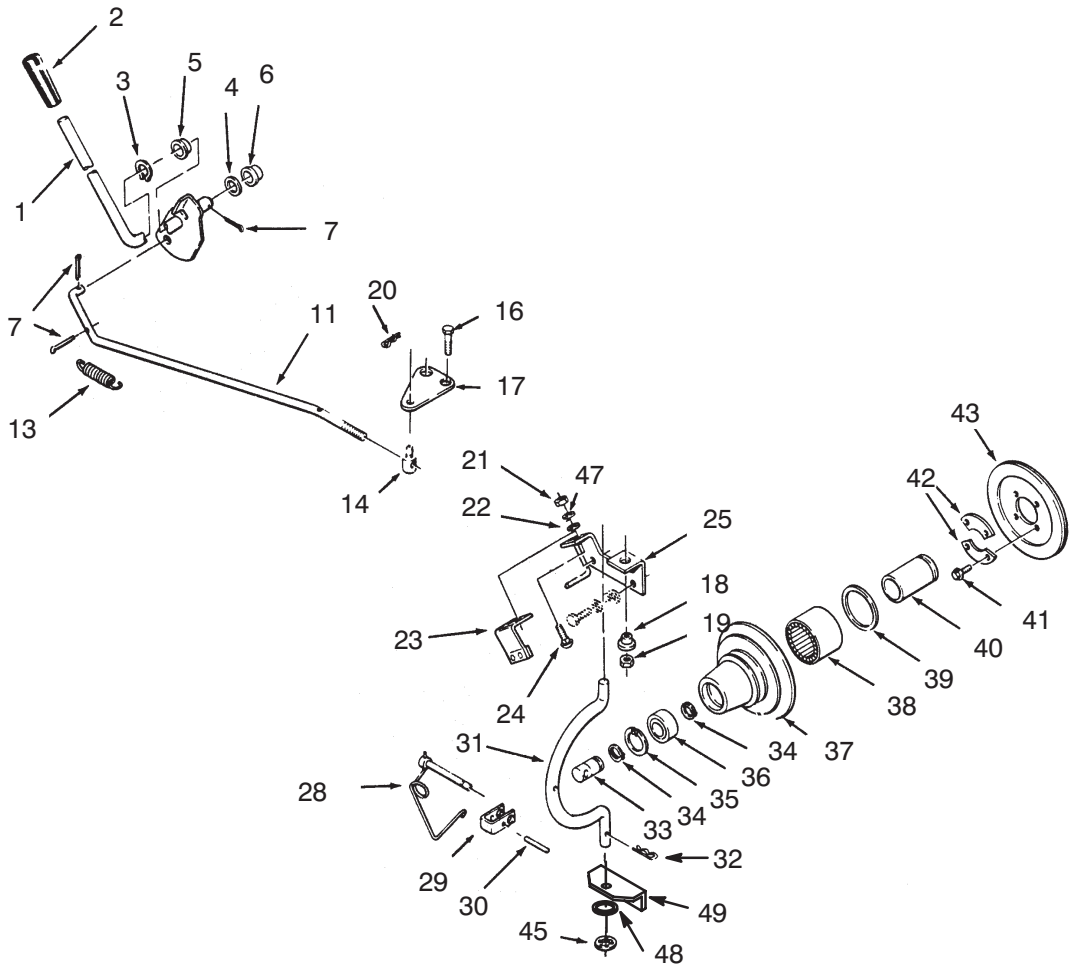


C–1500

PTO CLUTCH AND CONTROL

Ref. No.	Part No.	Description	No. Used
1	111234	Lever – PTO Clutch	1
2	9038	Grip	1
3	32151–11	Ring – Grip	1
4	3765	Washer – Shim	2
5	5666	Bushing – Nyliner	1
6	5983	Bushing	1
7	3272–10	Pin – Cotter	3
11	111052	Rod – PTO Clutch	1
13	103125	Spring	1
14	110656	Trunnion	1
16	323–7	Screw – Hex. Hd.	1
17	110669	Plate – PTO	1
18	104859	Spacer	1
19	3296–39	Nut	1
20	9335054	Pin – Cotter	1
21	3218–1	Nut	2
22	3256–22	Washer	2
23	110665	Brake Assembly – PTO	1
24	3229–25	Bolt – Carriage	2
25	111240	Bracket – Engine	1

Ref. No.	Part No.	Description	No. Used
28	111314	Pin – Locking	1
29	113107	Clevis	1
30	933274	Pin – Spirol	1
31	113108	Rod – PTO Housing	1
32	933506	Pin – Cotter	1
33	102872	Shaft – PTO	1
34	32120–72	Ring – Retaining	2
35	32120–62	Ring – Retaining	1
36	109842	Bearing – Ball	1
37	103478	Housing – Pulley	1
38	6662	Bearing – Needle	1
39	6663	Seal	1
40	6658	Race – Bearing	1
41	321–8	Bolt – Nylok	4
42	6659	Retainer	2
43	114881	Facing – Clutch Plate	1
45	106695	Push–On Ring	1
47	3253–3	Washer – Lock	2
48	3256–27	Washer	1
49	102870	Bracket Support	1

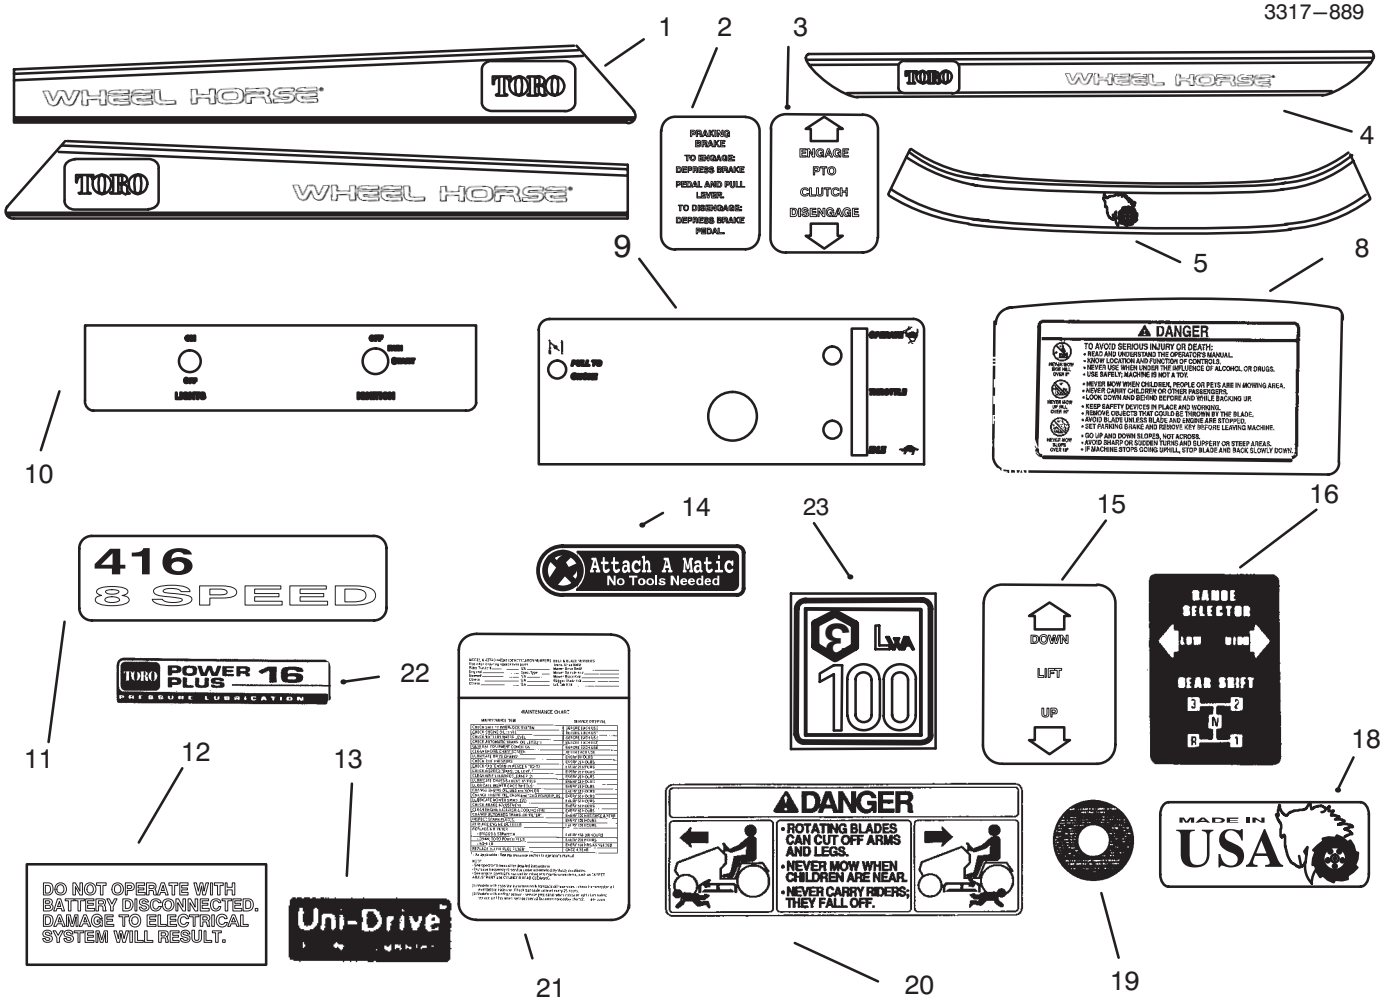

DECALS

Ref. No.	Part No.	Description	No. Used
1	92–9825	Decal – Hood RH	1
	92–9824	Decal – Hood LH	1
2	111510	Decal – Parking Brake	1
3	111960	Decal – PTO Clutch	1
4	92–9827	Decal – Rear Fender	1
5	92–9826	Decal – Front Hood	1
8	92–9837	Decal – Rear Hood Danger	1
9	119200	Decal – Lower Dash	1
10	74–2470	Decal – Black Plate	1
11	92–9831	Decal – 416–8 Speed	2
12	111926	Decal – Electrical System	1

Ref. No.	Part No.	Description	No. Used
13	92–8749	Decal – Unidrive	1
14	92–8747	Decal – Attach–A–Matic	2
15	112168	Decal – Lift	1
16	111534	Decal – Hi–Low Shift	1
*18	76–1340	Decal – Made in U.S.A.	1
19	KH10191	Decal – Air Cleaner/Lub	1
20	92–8946	Decal – Danger	1
21	88–3200	Decal – Maintenance	1
22	118540	Decal – Power Plus	1
23	114621	Decal – Noise (Model 73440 Only)	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
1121	Key	33	18	1
1239	Screw — Set — Special	29	47	1
1243	Cup — Plug	27	28	1
1278	Washer — Shim	8	1	3
1278	Washer — Shim	31	13	1
1278	Washer — Shim .050	41	15	4
1481	Fitting — Grease, 45°	8	22	2
1504	Bushing — Bronze	29	37	2
1516	Bushing — Reverse Idler	29	43	1
1518	Bearing — Needle	27	22	2
1523	Bearing — Needle	27	16	1
1529	Bearing — Needle	27	12	1
1532	Bearing — Needle	27	9	2
1542	Bearing — Needle	27	10	1
1644	Hitch — Drawbar	9	11	1
2844	Washer — Special	29	78	1
3023	Clip — Small	39	5	1
3023	Clip — Small	7	8	1
3023	Clip — Speed	6	24	1
3503	Fork — Shift	27	33	2
3517	Ball — Detent	29	55	3
3527	Gear — Reduction	29	38	1
3577	Cover — Dust	29	49	1
3624	Spring	33	4	1
3765	Washer — Shim	42	4	2
3765	Washer — Shim	31	21	1
3909	Pin — Reverse Idler	29	42	1
3912	Gasket — Transmission	29	46	1
3915	Pin — Locating	27	15	2
4204	Gear Assembly, Reverse	29	41	1
5108	Stem — Valve	41	7	4
5173	Gear — Hi &Second	27	29	1
5174	Gear Low & Reverse	27	30	1
5175	Gear Assembly	27	23	1
5210	Washer — Shim	8	11	A/R
5210	Washer — Shim .015	41	14	2
5280	Knob — Height Control	33	40	1
5614	Pin — Shift	27	35	1
5615	Rail — Shift, Front	27	31	1
5616	Rail — Shift, Rear	27	32	1
5618	Ring — Retaining	9	9	2
5618	Ring — Retaining	8	32	1
5638	Axle	8	31	1
5666	Bushing — Nyliner	42	5	1
5924	Nut	37	23	2
5979	Bushing — Hood Pivot	2	15	2
5983	Bushing	42	6	1
6216	Pin & Plate	8	30	1
6229	Bearing	33	28	1
6397	Bearing	8	21	1
6472	Bearing — Flanged	8	5	1
6542	Grip — Lift Lever	33	6	1
6658	Race — Bearing	42	40	1
6659	Retainer	42	42	2
6662	Bearing — Needle	42	38	1
6663	Seal	42	39	1
6739	Trunnion	33	20	1
6820	Grip	31	35	1
6921	Terminal	37	65	1
7007	Tube — Rear (Opt.)	41	2	2
7201	Shaft — Input	27	19	1
7204	Gear Assembly	27	21	1
7205	Gear — Sliding	27	24	1
7206	Gear — Reduction	27	25	1
7207	Bearing — Needle	27	26	2
7208	Shaft — Reduction Gear	27	27	1
7213	Bolt — Detent	29	57	1
7214	Lever — Shift Hi—Low Range	29	58	1
7269	Gear Assembly	29	36	1
7418	Washer — Thrust	27	20	1
7451	Pulley — Idler	31	42	1
7456	Clamp	5	17	4
7466	Pulley — Engine Drive	11	10	1
7607	Tire — Cleat, (Opt.)	41	4	2
7879	Bushing	31	24	2
7896	Washer — Bowed	31	12	1
7896	Washer — Bowed	8	15	1
8043	Bulb — Light, Metal Base	7	14	2
8130	Retainer — Spring	33	3	1
8616	Spring	9	1	2
8830	”J”Clip	7	27	1
8830	Clip	3	22	2
8830	Clip	39	34	1
8830	Retainer	40	11	1
9038	Grip	42	2	1
9038	Grip	9	20	1
9416	Bearing — Needle	27	11	2
9547	Washer — Thrust	29	50	1
9593	Band — Brake	29	81	1
9598	Plate — Stop	29	80	1
100079	Tube — Front (Opt.)	41	22	2
100291	Tube — Cleat Tire (Opt.)	41	*	2
100441	Seal — Brake Shaft	27	18	1
100442	Seal — Input Shaft	27	13	1
100443	Seal — Axle	27	14	4
101017	Rod — Mid Hitch Lock	9	17	1
101161	Trunnion — Clutch Rod	31	22	1
101623	Gear — Differential Pinion	29	70	8
101625	Shaft — Pinion	29	52	1
101626	Gear 44 Tooth	29	53	1
101707	Lock — Attachment	9	24	1
101711	Housing — Front Hitch	9	3	1
101750	Rod — Pivot Latch	9	22	1
101751	Rod — Lock	9	25	1
101847	Dipstick	29	44	1
101850	Rod — Hood Stop	2	19	1
101884	Nut	3	10	1
101884	Nut — Special	37	3	1
101884	Nut — Special	3	13	1
101889	Gear — Differential Axle	29	71	2
102025	Spacer	31	36	1
102138	Switch — Light	3	23	1
102592	Tie Rod Asm, RH	8	3	1
102644	Plate — Mid Hitch	9	4	2
102703	Nipple — Transmission Fill	29	45	1
102809	Nut — Special	31	39	1
102870	Bracket Support	42	49	1
102872	Shaft — PTO	42	33	1
102950	Ring — Retaining	3	18	1
102974	Gear Assembly	29	51	1
103125	Spring	42	13	1
103347	Rod — Clutch	31	14	1
103478	Housing — Pulley	42	37	1
103480	Switch — Clutch Interlock,	37	8	1
103543	Bell Crank — Brake Linkage	31	23	1
103628	Spring — Return	31	41	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
104047	Bushing	7	15	1
104048	Valve – Fuel Shut–Off	7	16	1
104859	Spacer	42	18	1
104926	Switch – Connector Body	37	6	1
105061	Gear – Differential Ring	29	68	1
105202	Base – Taillight, w/Bulb	7	11	2
105269	Shaft – Drawbar Hitch	9	10	1
105316	Cap – Plunger Rod	33	26	2
105316	Cap – Plunger Rod	9	19	2
105453	Key	11	15	1
105503	Bushing	6	22	2
105524	Bracket – Pivot	6	8	2
105763	Hub – Rear	41	11	2
105797	Ring – Retaining	2	16	2
105797	Ring – Retaining	9	26	6
105842	Battery	40	13	1
105875	Axle – Rear	29	72	2
105876	Ring – Special, Snap	29	73	2
105886	Rod – Brake, Front	31	29	1
105896	Arm – Clutch Rod	31	18	1
105900	Rod – Brake, Rear	31	28	1
106030	Spring – Detent	29	56	2
106165	Pulley – Transmission Drive	11	12	1
106193	Bolt – Special	31	43	1
106222	Footrest – RH	5	22	1
106223	Footrest – LH	5	18	1
106234	Tank Asm – Fuel	7	1	1
106236	Support – Fuel Tank, RH	7	30	1
106250	Cover – Dust	4	15	1
106257	Rod – Latch	33	2	1
106258	Sleeve	33	39	1
106269	Bushing	33	16	2
106345	Casting – Lift Lever	33	37	1
106352	Guard – Lower Belt	5	21	1
106411	Latch – Bracket	33	41	1
106417	Rod – Bell Crank Pivot	31	26	1
106451	Lever – Parking Brake	31	34	1
106522	Chain – Lift	33	22	1
106634	Pin – Hitch	9	13	1
106695	Push–On Ring	42	45	1
106719	Drum – Brake	29	77	1
106948	Tray – Battery	40	7	1
107069	Clip	5	12	3
107069	Nut – Speed	4	14	7
107374	Washer – Special	29	66	4
107677	Spring – Brake Return	31	40	1
107939	Belt – Drive	11	14	1
107951	Bracket – Fender Front	7	24	1
107975	Guard – Belt	5	1	1
108130	Wire – Headlight Ground	2	2	1
108457	Nut – Push	5	3	1
108464	Support – Fuel Tank, LH	7	21	1
108563	Lever – Lift	33	1	1
108565	Shaft	33	46	1
108758	Knob – Gear Shift	29	54	1
108881	Nut – Hex	29	67	4
109045	Bulb – Light, All Glass	7	*	2
109102	Fuse 25 Amp ATO or ATC	37	*	1
109189	Bearing	8	35	1
109262	Washer – Special	8	16	2
109355	Fuse 15 Amp ATO or ATC	37	12	1
109357	Connector	39	21	1
109459	Clamp	2	3	2
109459	Clamp	39	32	2
109494	Retainer – Headlight RH	2	*	1
109495	Retainer – Headlight LH	2	22	1
109500	Fitting – Grease	41	12	2
109553	Boot – Battery Cable	40	16	1
109553	Cover – Terminal	39	4	2
109554	Bracket – Belt Guard	5	6	1
109842	Bearing – Ball	42	36	1
109989	Spacer	6	3	4
110234	Screw – Hex. Hd.	29	79	1
110502	Shield – Dirt	37	16	1
110513	Bearing – Ball	41	16	4
110636	Pad – Footrest	5	15	2
110653	Rod – Height Control	33	34	1
110656	Trunnion	42	14	1
110665	Brake Assembly – PTO	42	23	1
110669	Plate – PTO	42	17	1
110677	Wheel – Cleat (Opt.)	41	*	2
110725	Stick – Shift	29	74	1
110727	Rod – Shift Hi–Low Range	29	62	1
110960	Fender	7	4	1
111034	Plate – Hood Stand	3	21	1
111052	Rod – PTO Clutch	42	11	1
111069	Cable – Battery	40	6	1
111071	Bumper	6	19	2
111196	Cap – Diff End	29	64	2
111198	Case–Transmission, LH	27	2	1
111199	Bearing – Ball	27	8	2
111200	Case–Transmission, RH	27	1	1
111216	Switch – Ignition	37	1	1
111216	Switch – Ignition	3	29	1
111234	Lever – PTO Clutch	42	1	1
111240	Bracket – Engine	42	25	1
111271	Console	3	6	1
111314	Pin – Locking	42	28	1
111332	Switch – PTO Interlock	37	20	2
111332	Switch – Parking Brake	37	69	1
111343	Bushing Assembly	35	9	5
111357	Clip	10	31	1
111359	Nut – Hex	35	4	1
111383	Collar	31	10	3
111392	”J”Clip	3	37	1
111510	Decal – Parking Brake	43	2	1
111516	Wheel – Rear	41	6	2
111534	Decal – Hi–Low Shift	43	16	1
111591	Hubcap	41	20	2
111642	Barrier – Switch Insulator	37	13	2
111757	Edging – Console	3	3	1
111767	Washer	35	3	1
111926	Decal – Electrical System	43	12	1
111952	Washer – Special Hub Cap	41	18	2
111960	Decal – PTO Clutch	43	3	1
112168	Decal – Lift	43	15	1
112185	Body – Connector	37	17	1
112415	Stop – PTO	3	2	1
112506	Bracket	35	6	1
112506	Bracket – Indicator Lights	3	32	1
112564	Lens – Taillight	7	13	2
113010	Rod – Battery Hold Down	40	2	1
113107	Clevis	42	29	1
113108	Rod – PTO Housing	42	31	1
113179	Nut	3	19	1
113381	Spindle – LH	8	33	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
113382	Spindle – RH	8	*	1
113443	Tube – Steering	8	17	1
113445	Bar – Lift	33	27	1
113935	Cover – Side, LH	4	16	1
113969	Hook – Battery	40	9	2
114052	Harness – Headlight	39	20	1
114210	Cable – Battery	40	1	1
114214	Gasket – Exhaust	10	30	2
114215	Cover – Exhaust, L.H.	10	22	1
114216	Cover – Exhaust, RH	10	23	1
114263	Spring – Seat	6	9	2
114264	Adjuster – Seat, L.H.	6	1	1
114265	Slide – Seat, R.H.	6	2	1
114343	Spring – Gas	6	18	1
114344	Spacer	6	12	2
114345	Bracket	6	16	1
114427	Logo – Hub Cap 6 (Opt.)	41	23	2
114428	Logo – Hub Cap 12 (Opt.)	41	1	2
114621	Decal – Noise	43	23	1
114636	Pipe	10	25	1
114720	Tube – Battery	40	10	1
114763	Pipe	10	27	1
114764	Elbow – 90°	10	26	1
114813	Pedal – Brake	31	9	1
114814	Pedal – Clutch	31	8	1
114825	PC Board w/Lights	35	10	1
114881	Facing – Clutch Plate	42	43	1
114951	Control – Choke	3	9	1
115392	Control – Throttle	3	34	1
115411	Support – Switch	37	18	1
116000	Bolt – Carriage	5	9	6
116397	Relay	37	62	1
116470	Muffler	10	24	1
116609	Plate – Engine	10	2	1
116636	Fork – Shift Hi–Low Range	29	59	1
116744	Tire – Turf Trac, Rear	41	3	2
116745	Rod – Pivot	2	18	1
116746	Bracket – RH	2	*	1
116747	Bracket – LH	2	17	1
116796	Test Switch	35	1	1
117127	Tire – Turf Trac, Front	41	21	2
117217	Button – Switch	35	2	1
117343	Latch – Hood	3	31	2
117344	Handle Assembly	2	11	2
117371	Bolt – Carriage	4	6	4
117377	Harness – Wiring	35	7	1
117431	Rivet – Pop	3	30	4
117432	Rivet – Pop	2	10	4
117930	Latch – Mid Hitch	9	21	1
118280	Bracket – Fuse Holder	5	24	1
118530	Name Plate – Toro	12	16	1
118540	Decal – Power Plus	43	22	1
119200	Decal – Lower Dash	43	9	1
120320	Guide – Belt	11	4	1
120590	Stop – Throttle	3	35	1
120930	Body – Fuse	37	9	1
201256	Link – Governor Control	23	33	1
201327	Screw	23	28	3
518077	Terminal	37	68	2
518105	Terminal	37	7	1
518105	Terminal	37	64	1
518211	Bumper	5	10	2
910792	Screw	3	4	6
910808	Screw	7	12	4
910948	Screw	37	71	2
911423	Bolt	29	65	4
913464	Bolt	6	6	4
915740	Nut	5	23	4
915740	Nut – Lock	3	36	2
915960	Nut	3	33	2
915962	Nut – Hex	37	54	1
920120	Washer – Lock	37	53	1
920160	Washer – Lock	37	2	1
920248	Washer – Nylon	31	19	3
920259	Washer – Special	3	17	1
926696	Screw – Hex. Hd.	33	45	2
933148	Pin – Spirol	33	5	1
933156	Pin – Spirol	27	34	2
933184	Pin – Spirol	29	63	1
933190	Pin – Spirol	31	17	1
933267	Pin – Spirol	31	50	1
933274	Pin – Spirol	42	30	1
933506	Pin – Cotter	42	32	1
937089	Key – Woodruff	29	40	1
937108	Key – Woodruff	41	8	2
937221	Key – Hi–Pro	11	13	1
9103312	Screw	10	20	4
9104784	Screw	37	59	2
9107562	Screw	35	8	2
9107622	Screw	3	7	2
9107944	Screw	37	35	1
9107944	Screw – Machine	5	7	2
9108372	Bolt – Carriage	5	4	9
9108372	Screw	4	12	7
9108372	Screw	3	20	7
9108652	Bolt	6	5	4
9151126	Nut	4	4	4
9151126	Nut	6	10	4
9157324	Nut	37	60	2
9157324	Nut – Hex	37	70	2
9157324	Nut – Lock	35	5	2
9201504	Washer – Lock	3	8	2
9201604	Washer – IntL. T	3	12	1
9202254	Washer – Special	31	49	1
9202624	Washer – Special	3	11	1
9202624	Washer – Special	37	48	1
9266714	Bolt	2	4	2
9266714	Bolt	37	19	1
9266714	Bolt – Hex	39	33	2
9266944	Bolt	6	14	2
9266944	Bolt	5	26	6
9266944	Screw – Hex. Hd.	4	2	13
9266944	Screw – Hex. Hd.	31	27	1
9266944	Screw – Hex. Hd.	33	42	1
9266944	Screw – Hex. Washer Hd.	3	1	3
9266974	Bolt	7	3	2
9335054	Pin – Cotter	9	14	1
9335054	Pin – Cotter	42	20	1
9335054	Pin – Cotter	33	21	2
9335054	Pin – Cotter	31	31	1
9335074	Pin – Cotter	33	14	2
9791204	Spacer	9	12	2
92669444	Bolt	7	5	6
12–3270	Bolt	10	19	3
KH10191	Decal – Air Cleaner/Lub	43	19	1
NN10018	Base – Oil	181		1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
NN10032	Camshaft	17	11	1
NN10077	Spring	15	31	4
NN10078	Washer	15	38	4
NN10079	Head – Left Cylinder	15		1
NN10082	Lock – Spring	15	32	8
NN10125	Rod w/Bolts & Nuts – STD	15	58	2
NN10126	Rod w/Bolts & Nuts – .010	15		2
NN10127	Rod w/Bolts & Nuts – .020	15		2
NN10128	Rod w/Bolts & Nuts – .030	15		2
NN10138	Cup – Oil Pump Intake	18	8	1
NN10143	Filter – Oil	19	7	1
NN10159	Cap – Oil Fill & Indicator	18	9	1
NN10174	Element – Air Cleaner	20	4	1
NN10176	Element – Foam	20	3	1
NN10187	Tube – Air Intake	20	11	1
NN10218	Bushing	23	20	1
NN10219	Spring	23	16	1
NN10245	Battery Ignition Coil	25	31	1
NN10247	Rotor – Ignition	25	32	1
NN10248	Nut	25	36	1
NN10249	Nut	25	39	1
NN10261	Regulator – Voltage	25	28	1
NN10266	Kit – Starter Shift Lever	13	7	1
NN10277	Fuse 30 Amp ATO or ATC	37	*	1
NN10278	Connector	39	19	1
NN10279	Contact – Socket	39	30	1
NN10281	Connector	39	29	1
NN10289	Clamp	12	7	1
NN10290	Terminal – Stator Leads	25	18	3
NN10296	Bracket – Lifting	12	9	2
NN10323	Ring – Oil	18	10	1
NN10327	Bearing	25	8	1
NN10335	Pin – Dowel	25	6	1
NN10348	Clip	39	26	1
NN10348	Clip – Wire	12	18	1
NN10348	Clip – Wire	7	32	1
NN10348	Clip – Wire	25	37	1
NN10352	Stud – Gear Cover	25	14	1
NN10356	Washer – Flat	12	12	1
NN10357	Washer – Flat	23	19	1
NN10362	Washer – Flat	21	15	1
NN10370	Bolt	15	30	2
NN10373	Screw	19	3	2
NN10375	Screw – Hex. Hd.	21	8	4
NN10379	Screw	18	4	4
NN10390	Screw – Hex. Hd.	20	22	1
NN10393	Screw	12	11	4
NN10393	Washer	12	3	1
NN10394	Screw – Hex. Hd.	25	24	2
NN10395	Screw	23	14	1
NN10399	Screw	39	27	1
NN10403	Screw	23	35	2
NN10403	Screw	7	38	1
NN10408	Screw – Hex. Hd.	25	41	2
NN10410	Screw	22	9	1
NN10410	Screw – Machine	23	32	1
NN10412	Screw	22	5	1
NN10414	Screw	12	8	4
NN10414	Screw – Hex. Hd.	25	27	1
NN10425	Washer – Lock	39	28	1
NN10426	Nut	25	16	1
NN10444	Control – Ignition	25	22	1
NN10465	Wrench	19	8	1
NN10515	Cover – Ignition Plunger	25	30	1
NN10516	Indicator – Ignition Module	25	42	1
NN10518	Stator w/Terminals	25	17	1
NN10553	Harness – Engine Wiring	39	16	1
NN10690	Seal	18	13	1
NN10784	Screw	22	11	1
NN10824	Switch – Low Oil Pressure	39	3	1
NN10824	Switch – Oil Pressure	19	10	1
NN10825	Kit – Gearcase	25	1	1
NN10826	Governor Shaft &	25	3	1
NN10830	Plug	22	7	1
NN10832	Bracket	12	15	1
NN10854	Tube – Oil Fill, Chrome	18	12	1
NN10862	Housing – Blower	12	5	1
NN10877	Spring – Governor Rod	21	20	1
NN10883	Kit – Starter Brush	13	11	1
NN10884	Clutch – Starter	13	6	1
NN10885	Starter Hdwr Kit	13	1	1
NN10886	Seal – Dust	13	5	1
NN10887	Kit – Starter Solenoid	13	8	1
NN10894	Drain – Oil Filter	19	4	1
NN10929	Holder – Starter Brush	13	13	1
NN10930	Cap – Starter Solenoid	13	9	1
38–1420	Switch – Seat	6	23	1
38–1420	Switch – Seat	37	14	1
55–3570	Fuel Cap	7	6	1
57–8000	Bearing – Camshaft	15	9	2
57–8010	Gasket	15	7	1
57–8020	Bearing – Crankshaft, Front	15	15	1
57–8030	Bearing – Crankshaft, Front	15		1
57–8050	Bearing – Crankshaft, Rear,	15	5	1
57–8060	Bearing – Crankshaft, Rear	15		1
57–8090	Gasket	18	2	1
57–8130	Gear	17	4	1
57–8140	Washer	17	3	1
57–8150	Screw	17	16	1
57–8160	Washer – Thrust	15	6	2
57–8170	Shim 0.005	15		4A/R
57–8180	Gear – Ring	17	22	1
57–8210	Camshaft Gear	17	12	1
57–8230	Washer	17	13	1
57–8280	Gasket	15	26	2
57–8330	Gasket	15	36	2
57–8410	Bolt – Special Rod	15	59	4
57–8450	Tappet – Std.	15	27	4
57–8460	Pump – Oil, Gasket Kit	15	47	1
57–8470	Plunger	15	53	1
57–8480	Pump – Oil, Complete	15	46	1
57–8580	Breather – Baffle	15	22	1
57–9080	Pump – Fuel	7	37	1
57–9090	Ring – Retaining	17	6	1
57–9100	Spring – Governor, 5 Ball	23	11	1
57–9130	Hub – Governor Cup	17	7	1
57–9170	Swivel – Choke Lever	22	8	1
57–9180	Link – Choke	22	3	1
57–9190	Clamp – Cable	23	12	1
57–9190	Clamp – Throttle Cable	23	23	1
57–9190	Clip	22	12	1
57–9210	Gasket – Manifold	10	32	2
57–9340	Plug – Spark	25	33	2
57–9360	Bearing – Crankshaft, Front	15		1
57–9550	Clamp	25	19	1
57–9550	Clamp – Hose	7	33	6

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
57–9570	Seal – Oil	25	7	1
57–9580	Seal – Oil	25	9	1
57–9580	Swivel – Throttle Control	23	30	1
57–9590	Seal – Oil	15	10	1
57–9620	”O”Ring	21	14	1
57–9640	Ball	17	9	1
57–9650	Bearing	25	2	1
57–9660	Key	17	5	2
57–9690	Plug	15	2	1
57–9700	Clip – Retaining, Rod to	21	12	1
57–9710	Ring – Retaining	17	2	1
57–9720	Retaining Ring	15	56	4
57–9730	Clip – Retaining	25	26	1
57–9740	Washer	15	42	2
57–9750	Washer	19	2	2
57–9750	Washer	25	12	5
57–9760	Washer	15	51	1
57–9770	Washer – Flat	13	3	2
57–9770	Washer – Flat	15	40	18
57–9790	Nut	15	60	4
57–9800	Bearing – Crankshaft, Front	15		1
59–0010	Bearing – Crankshaft, Front	15		1
59–0020	Bearing – Crankshaft, Rear	15		1
59–0030	Bearing – Crankshaft, Rear	15		1
59–0040	Bearing – Crankshaft, Rear	15		1
59–0050	Insert – Intake Seat, Std.	15	14	2
59–0080	Insert – Intake Seat .010	15		2
59–0100	Insert – Exhaust Seat, Std.	15	13	2
59–0110	Insert – Exhaust Seat .002	15		2
59–0120	Insert – Exhaust Seat .005	15		2
59–0130	Insert – Exhaust Seat .010	15		2
59–0140	Insert – Exhaust Seat .025	15		2
59–0180	Head – Right Cylinder	15	37	1
59–0260	Tappet .002 O.S	15		4
59–0280	Spring	15	52	1
59–0360	Tube – Vacuum Port	25	13	1
59–0370	Cap	25	20	1
59–0370	Cap – Fuel Fitting	7	36	1
59–0400	Pin	17	14	1
59–0420	Yoke	25	4	1
59–0450	Cup – Governor	17	8	1
59–0460	Lever – Choke	22	2	1
59–0470	Bracket	22	4	1
59–0720	Pin – Cotter	22	10	1
59–0720	Pin – Cotter	23	31	1
59–0730	Pin – Stop	15	11	4
59–0750	Pin	15	20	2
59–0810	Washer	17	18	1
59–0830	Washer – Flat	23	25	1
59–0850	Washer	22	1	2
59–0880	Bolt	15	3	5
59–0900	Bolt – Special	15	41	10
59–0910	Bolt	15	50	1
59–0950	Screw	25	5	1
59–0970	Screw	12	6	1
59–0980	Screw	12	4	1
59–1000	Screw	23	22	1
59–1030	Screw	23	15	1
59–1100	Screw	23	18	2
59–1180	Capacitor (300 VD)	20	20	1
62–2730	Kit – Bushing	13	12	1
62–7770	Key – Ignition, Padded	37	4	1
62–7770	Key – Ignition, Padded	3	14	1
66–0120	Knob – Control	3	5	1
71–5770	Valve – Intake	15	28	4
71–5780	Valve – Exhaust	15	29	2
71–5830	Cap – Valve	15	44	4
71–5920	Flywheel	17	15	1
71–5960	Filter – Fuel	7	35	1
71–5980	Gasket	21	10	2
71–6040	Starter, Complete – See	13	2	1
71–6120	Line – Fuel 12”	7	31	2
71–6140	Grommet	20	16	1
71–6180	Seal	15	33	2
71–6190	Key	17	23	1
71–6220	Clip – Fuel Line	21	9	1
71–6250	Guide – Exhaust Valve	15	16	2
71–6260	Guide – Intake Valve	15		2
71–6290	Kit – Engine Gasket Valve	15	45	1
71–6310	Piston Pin	15	55	2
71–6340	Screw	17	19	6
71–6360	Gasket	25	10	1
74–2470	Decal – Black Plate	43	10	1
76–1340	Decal – Made in U.S.A.	43‘	18	1
76–1420	Steering Wheel	8	12	1
78–0020	Meter – Hour	3	15	1
78–0020	Meter – Hour	37	51	1
78–0080	Clamp – Volt Meter	3	24	1
78–0080	Clamp – Voltmeter	37	22	1
78–0370	Insert	8	13	1
78–1550	Lever – Lift	33	19	1
78–1660	Wheel Assembly – Front	41	*	2
78–1680	Rim – Front	41	17	2
78–2680	Frame	9	8	1
78–2880	Shaft – Lower	8	7	1
78–2900	Tie Rod Assembly, LH	8	27	1
78–2920	Tie Rod End	8	25	1
78–2970	Arm – Clutch Idler	31	16	1
78–2990	Plate – Seat Pivot	6	11	1
78–3010	Bracket – Battery Support	4	1	1
78–3020	Plate – Front	4	17	
78–3240	Spring – Gas	31	53	1
78–3250	Spacer	31	60	1
78–3260	Spacer	31	55	1
78–3320	Clamp – Hour Meter	37	52	1
78–3320	Clamp – Steel	3	26	1
79–0060	Meter – Volt	3	16	1
79–0060	Voltmeter	37	21	1
79–3600	Wiring Harness	37	5	1
79–3680	Seat	6	4	1
79–4990	Bracket – Fender Support	7	20	1
79–6330	Housing – Air Cleaner	20	6	1
79–6340	Support – Air Cleaner	20	14	1
79–6350	Knob – Tool less	20	29	1
79–6360	Bracket	23	13	1
79–6390	Bracket – Governor Control	23	24	1
79–6400	Bushing – Governor Control	23	29	1
79–6420	Adapter – Governor Arm	23	34	1
79–6440	Screen	17	21	1
79–6460	Bracket	18	11	1
79–6470	Gasket	19	6	1
79–6490	Gasket – Plate	25	29	1
79–6520	Spacer	20	23	1
79–6580	Screw – Cap	13	4	2
82–0020	Plate – Bearing	15	8	1
82–0500	Adapter – Oil Filter	191		1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
82–0530	Clamp	15	21	1
82–0540	Tube – Baffle Breather	15	65	1
82–0550	Breather Cap & Valve	15	64	1
82–0560	Screen	15	66	2
82–0570	Seal	15	23	1
82–0620	Guard – Stationary	12	13	1
82–0650	Cover – Element	20	32	1
82–0680	Gasket	19	9	1
82–0850	Gasket	21	2	1
82–0930	Screw	12	14	2
82–1000	Kit – Terminal	25	21	1
82–1100	Hose – Fuel	21	16	1
82–1130	Plug – Sq Hd.	18	5	2
82–1310	Washer – Lock	18	3	4
82–1320	Washer	17	17	1
82–1340	Cable – Spark Plug	25	34	1
82–1340	Washer – Flat	25	35	2
82–1340	Washer – Flat	15	48	2
82–1350	Washer – Flat	21	4	4
82–1350	Washer – Flat	21	6	2
82–1360	Screw – Hex. Hd.	25	38	1
82–1370	Bolt	15	49	2
82–1370	Screw	23	27	1
82–1400	Screw	17	20	4
82–1410	Screw	25	11	4
82–1410	Screw – Hex. Hd.	21	7	2
82–1410	Screw – Hex. Hd.	25	40	1
82–1450	Screw	21	11	2
82–1500	Screw – Hex. Hd.	25	23	3
82–1510	Screw	19	5	2
82–1540	Screw	12	19	1
82–1550	Screw – Hex. Hd.	20	7	.2
82–1560	Screw	18	14	1
82–1590	Screw	12	17	4
82–1600	Screw	12	1	2
82–1620	Washer – Lock	25	15	3
82–1620	Washer – Lock	23	26	1
82–1660	Washer – Lock	25	25	2
82–1690	Nut – Flange	20	5	1
82–1700	Nut – Speed	18	15	1
82–1800	Piston Pin & Retaining	15	54	2
83–2710	Knob – Hi–Lo Range Shift	29	75	1
83–2720	Bolt – Lug	41	5	10
83–2890	Bearing – Needle	27	17	1
83–3530	Shaft – Cluster	29	39	1
83–6520	Rod – Lock	9	18	1
88–2170	Bracket – Belt	4	3	1
88–2710	Support – Steering Shaft	8	8	1
88–2782	Hood	2	8	1
88–3200	Decal – Maintenance	43	21	1
92–0900	Block – Short	15	1	1
92–0902	Piston Pin & Retaining	15	*	2
92–0903	Piston Pin & Retaining	15	*	2
92–0904	Piston Pin & Retaining	15	*	2
92–0905	Set – Piston Ring, Std.	15	57	2
92–0906	Set – Piston Ring .005 O.S.	15		2
92–0907	Set – Piston Ring .010 O.S	15		2
92–0908	Set – Piston Ring .020 O.S	15		2
92–0909	Set – Piston Ring .030 O.S	15		2
92–0910	Cover – Valve	15	25	2
92–0912	Elbow 45°	19	11	1
92–0913	Nut – Wing	20	33	1
92–0915	Screw	20	31	1
92–0916	Screw	22	6	1
92–0917	Tube	20	25	1
92–0918	Manifold – Intake	21	5	1
92–0919	Rod – Governor Control	21	13	1
92–0920	Housing – Cylinder Air, L.H.	12	2	1
92–0921	Housing – Cylinder Air, R.H.	12	10	1
92–0922	Arm – Governor Control,	23	17	1
92–0923	Hose – Fuel	7	34	1
92–1525	Hoodstand	4	8	1
92–4987	Shaft – Upper	8	9	1
92–5935	Nut	13	10	1
92–6529	Plate – Shift Cover	4	11	1
92–8708	Transmission Assembly	27	*	1
92–8747	Decal – Attach–A–Matic	43	14	2
92–8749	Decal – Unidrive	43	13	1
92–8749	Decal – Unidrive	29	76	1
92–8946	Decal – Danger	4	10	1
92–8946	Decal – Danger	43	20	1
92–9511???	Line – Fuel 62" 92–9510 50"	7	26	1
92–9824	Decal – Hood LH	2	*	1
92–9824	Decal – Hood LH	43		1
92–9825	Decal – Hood RH	43	1	1
92–9825	Decal – Hood RH	2	7	1
92–9826	Decal – Front Hood	43	5	1
92–9826	Decal – Hood, Front	2	6	1
92–9827	Decal – Rear Fender	43	4	1
92–9831	Decal – 416–8 Speed	43	11	2
92–9836	Decal – Logo	2	23	1
92–9837	Decal – Danger	2	9	1
92–9837	Decal – Rear Hood Danger	43	8	1
93–1613	Latch – Front Hitch	9	23	1
94–1803	Deflector – Air	10	21	1
94–1810	Engine – 16HP TORO Power	10	1	1
94–1840	Cover – Air Cleaner	20	+2	1
94–1841	Kit – Carburetor	21	+1	1
94–1842	Jet – (Fixed Main)	21	+	1
94–1743	Kit – Float	21	+	1
94–1844	Kit – Repair (Accelerator	21	+	1
114–0394	Rod w/Bolts & Nuts – STD	15	58+	2
120–1320	Tube – Oil	15	12+	1
237–69	"O"Ring	8	10	1
2412–98	Clamp	7	19	2
281–2	Plug – Pipe, Sq. Hd.	27	7	1
281–10	Plug – Pipe, Allen Hd.	27	6	1
288–4	Cap	10	28	1
302–5	Fitting – Grease	31	61	2
302–5	Fitting – Grease, Straight	8	34	2
321–3	Screw – Hex. Hd.	40	3	2
321 – 3	Screw – Hex. Hd.	29	83	2
321–4	Bolt	5	8	2
321–8	Bolt	6	15	2
321–8	Bolt – Nylok	42	41	4
321–9	Screw – Hex. Hd.	31	59	1
321–31	Screw – Hex. Hd.	31	54	1
322–1	Bolt	8	28	1
322–2	Bolt	7	18	5
322–2	Screw – Hex. Hd.	40	12	1
322–3	Bolt	10	17	4
322–3	Bolt	7	23	6
322–4	Bolt	6	20	6
322–5	Screw – Hex. Hd.	7	29	2
322–5	Screw – Hex. Hd.	33	38	3
322–6	Screw – Hex. Hd.	33	24	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
323−5	Bolt	9	6	4
323−6	Bolt	11	6	3
323−6	Bolt	8	6	2
323−7	Bolt	10	3	4
323−7	Screw − Hex. Hd.	42	16	1
323−8	Bolt	10	5	4
323−8	Bolt	8	19	2
323−9	Screw Hex. Hd.	31	37	1
323−11	Screw − Hex. Hd.	27	4	5
323−16	Screw − Hex. Hd.	27	3	1
323−44	Screw − Hex. Hd.	9	16	6
3217−5	Nut	29	48	1
3217−7	Nut	10	13	4
3217−27	Nut − Hex.	3	28	1
3218−1	Nut	42	21	2
3218−3	Nut	41	10	4
3219−3	Nut	8	26	1
3229−25	Bolt − Carriage	2	20	4
3229−25	Bolt − Carriage	42	24	2
3230−1	Bolt	5	25	1
3231−25	Bolt − Carriage	9	5	3
3235−22	Screw − Hex. Hd.	7	28	2
3242−2	Screw − Set	11	11	2
3243−5	Screw − Set	41	9	4
3245−32	Screw −Set	31	11	3
3246−2	Screw − Set	11	9	2
3247−4	Screw	15	34	2
3253−3	Washer − Lock	40	15	2
3253−3	Washer − Lock	42	47	2
3253−3	Washer − Lock	29	82	2
3253−4	Washer	10	18	4
3253−4	Washer − Lock	7	17	2
3253−4	Washer − Lock	8	29	1
3253−5	Washer − Spring	15	19	5
3253−21	Washer − Lock	11	5	3
3253−21	Washer − Lock	9	7	4
3253−21	Washer − Lock	10	8	4
3254−1	Washer − Lock	7	10	4
3254−2	Washer − Intl. T	2	13	1
3255−25	Washer − Lock	3	27	3
3256−3	Washer	11	2	2
3256−4	Washer	7	2	2
3256−5	Washer	33	36	1
3256−21	Washer	7	9	4
3256−22	Washer	40	5	4
3256−22	Washer	6	13	2
3256−22	Washer	2	14	3
3256−22	Washer	42	22	2
3256−22	Washer	31	56	2
3256−23	Washer	6	21	4
3256−23	Washer	33	25	3
3256−23	Washer	7	25	2
3256−24	Washer	10	7	4
3256−24	Washer	31	38	2
3256−25	Washer	11	8	3
3256−25	Washer	33	55	1
3256−26	Washer	31	25	1
3256−26	Washer − Flat	9	15	1
3256−27	Washer	42	48	1
3256−62	Washer	33	15	2
3272−1	Pin − Cotter	2	21	2
3272−6	Pin − Cotter	31	15	1
3272−10	Pin − Cotter	42	7	3
3272−10	Pin − Cotter	31	20	3
3272−10	Pin − Cotter	33	35	1
3272−17	Pin − Cotter	41	19	2
3272−19	Pin − Cotter	8	23	1
3272−21	Pin − Cotter	8	18	1
3290−378	Tie − Cable	39	13	4
3296−6	Nut	8	24	4
3296−27	Nut	7	7	4
3296−29	Nut	11	3	2
3296−29	Nut	6	7	6
3296−29	Nut	5	16	11
3296−29	Nut	7	22	6
3296−29	Nut	33	44	4
3296−29	Nut	5	2	7
3296−39	Nut	9	2	9
3296−39	Nut	10	4	4
3296−39	Nut	27	5	6
3296−39	Nut	42	19	1
3296−39	Nut	31	32	1
3296−39	Nut	33	56	1
3296−39	Nut	8	4	4
3296−42	Nut	5	5	1
3296−42	Nut	2	12	4
3296−42	Nut	40	14	2
3296−42	Nut	6	17	2
3296−42	Nut	31	58	2
32103−22	Nut − Wing	40	4	4
32120−47	Ring − Retaining	33	29	1
32120−62	Ring − Retaining	42	35	1
32120−72	Ring − Retaining	42	34	2
32120−93	Ring − Retaining	8	2	2
32121−25	Pin − Roll	33	48	1
32121−103	Pin − Spirol	33	47	1
32121−111	Pin − Spirol	8	14	1
32136−5	Nut − Slotted	8	20	1
32146−2	Nut	31	44	1
32151−11	Ring − Grip	42	3	1
32151−91	Retainer	33	17	1

*Not Illustrated

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number .
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Hood Assembly	2
Control Panel	3
Hood Stand And Supports	4
Belt Guard & Footrest	5
Seat	6
Fuel Tank, Fuel Pump, Fender And Supports	7
Front Axle and Steering	8
Frame & Hitches	9
Engine, Toro Power Plus And Exhaust	10
Drive Belt And Pulleys	11
Blower Housing	12
Starter	13
Cylinder Block	14
Crankshaft, Camshaft, Flywheel	16
Oil , Base Fill Tube and Bracket	18
Oil Filter	19
Air Cleaner	20
Intake Manifold And Carburetor	21
Choke Linkage	22
Governor	23
Gear Case & Ignition Controls	24
Mechanical Transmission 8–Speed	26–29
Clutch, Brake and Speed Control Linkage	30
Manual Lift Linkage	32
Electrical Schematic	34
Electrical System	35–39
Battery	40
Wheel And Tires	41
P.T.O. Clutch And Control	42
Decals	43
Numerical Parts List	44

Optional Equipment

Description	Model / Part No.
36" Rear Discharge Deck	78305
42" Side Discharge Deck	78345
42" Rear Discharge Deck	78350
42" Recycler	78355
48"Side Discharge Deck	78360
36" Tiller	79370
48" Dozer Blade	79350
50" Grader Blade	79351
42" Single Stage Snowthrower	79360
44" Two Stage Snowthrower	79361
11 cu. ft. Twin Bagger (42" Mower)	79301
Wheel Weight, Rear	81115
Wheel Weight, Rear Flush	81117
Wheel Weights, Front	81214
Tire Chains	82522
Clevis Hitch	85518
Chrome Front LoGo Hub Cap	111427
Chrome Rear LoGo Hub Cap	114428
Auxiliary Fuel Tank	*83300
Kits	
Dual Wheel	80753
H.D. Spindles, Wheels & Tires	80494
Recycler (42" R.D. Mower)	86001
Leaf Baffle (42" S.D. Mower)	85501
Front Weight	81125
Electric Lift	84224

* CAN NOT BE USED WITH CLEVIS HITCH OR REAR BAGGER

MAINTENANCE RECORD

Date								