
FORM NO. 3317–913 REV. A

TORO®

MODEL NO. 22038B–6900001 & UP
MODEL NO. 22038–7900001 & UP

PARTS CATALOG

# PROLINE 53cm
## Recycler® Mower

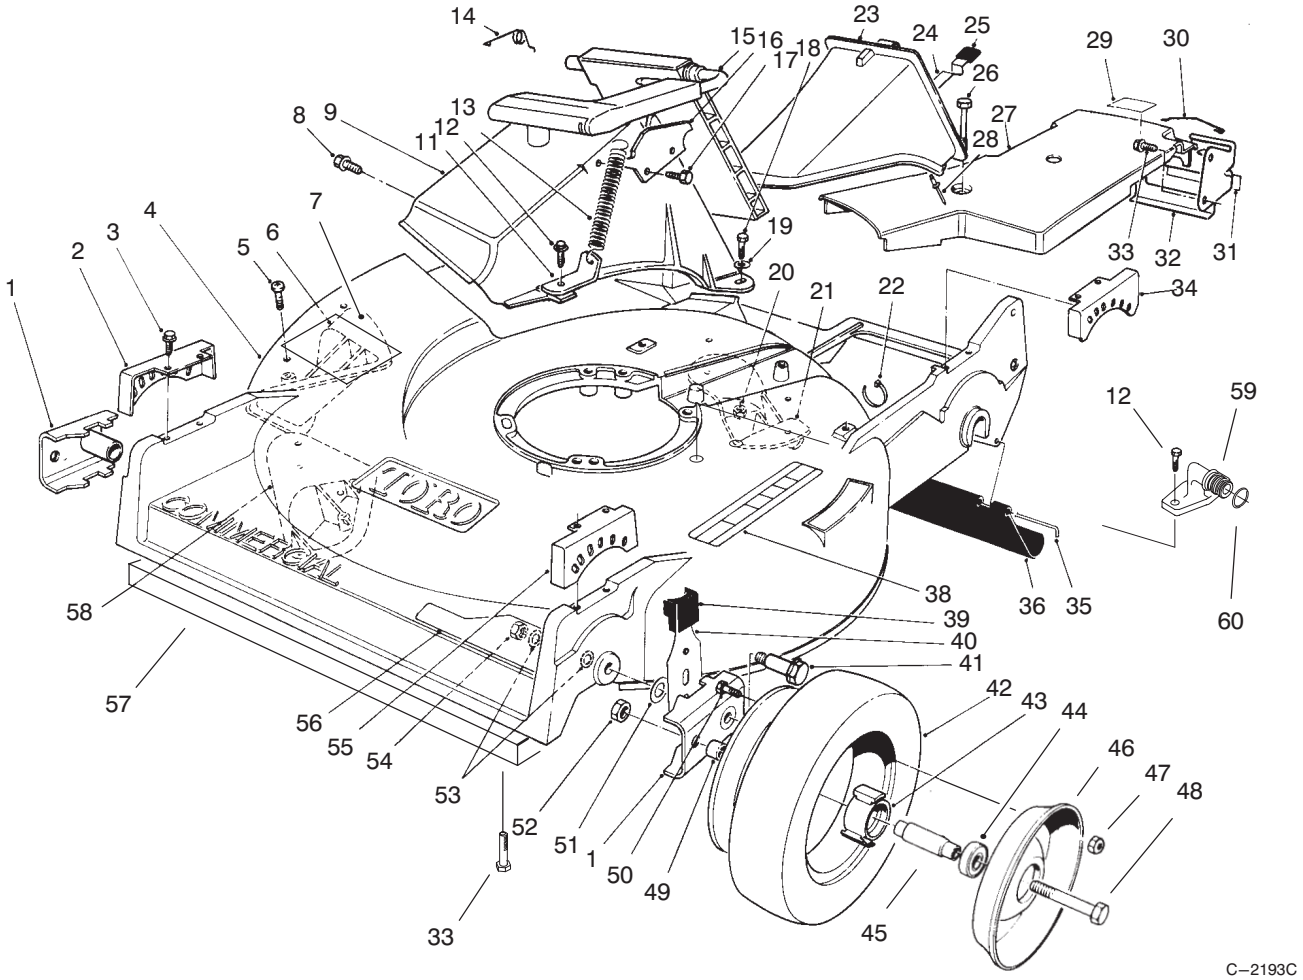


C–2193C


## HOUSING ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 61–8300 | Pivot Arm Assembly | 2 |
| 2 | 49–8770 | Quadrant – Front, R.H. | 1 |
| 3 | 49–2040 | Screw – Thread Forming | 8 |
| 4 | 95–5614 | Housing – Commercial (Incl. Ref. #5–7, 12, 21, 33, 38, & 57–60) | 1 |
| 5 | 32144–111 | Screw – Pan Hd. | 6 |
| 6 | 92–1730 | Kicker | 1 |
| 7 | 93–6654 | Decal – Covers | 1 |
| 8 | 46–6810 | Screw – Thr'd Forming | 1 |
| 9 | 82–9151 | Chute – Discharge | 1 |
| 11 | 71–9350 | Bracket – Spring | 1 |
| 12 | 46–6811 | Screw – Hex Washer Hd. (Model No. 22038B Only) | 1 |
| 12 | 46–6811 | Screw – Hex Washer Hd. (Model No. 22038 Only) | 3 |
| 13 | 76–4660 | Spring | 1 |
| 14 | 80–3770 | Retainer – Door | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 15 | 77–0200 | Door Ass'y | 1 |
| 16 | 76–4570 | Plate – Latch | 1 |
| 17 | 46–8090 | Screw – Cap, Hex. Hd. | 2 |
| 18 | 321–7 | Screw – Cap, Hex. Hd. | 2 |
| 19 | 3256–22 | Washer – Flat | 2 |
| 20 | 3296–42 | Nut – Lock | 2 |
| 21 | 92–1750 | Kicker | 1 |
| 22 | 3290–378 | Tie – Cable | 1 |
| 23 | 77–0502 | Plug Assembly (Incl. Ref. #24, 25, & 28) | 1 |
| 24 | 76–4640 | Latch – Plug | 1 |
| 25 | 76–4650 | Grip – Latch | 1 |
| 26 | 37–7260 | Screw – Special | 2 |
| 27 | 74–1770 | Cover – Belt | 1 |
| 28 | 3295–35 | Rivet | 1 |
| 29 | 93–6664 | Label – Grease | 1 |
| 30 | 46–7030 | Retainer – Cable | 1 |
| 31 | 74–1970 | Decal – Traction Drive | 1 |

© The TORO Company –1995 Rev. 1996
All Rights Reserved

TPS

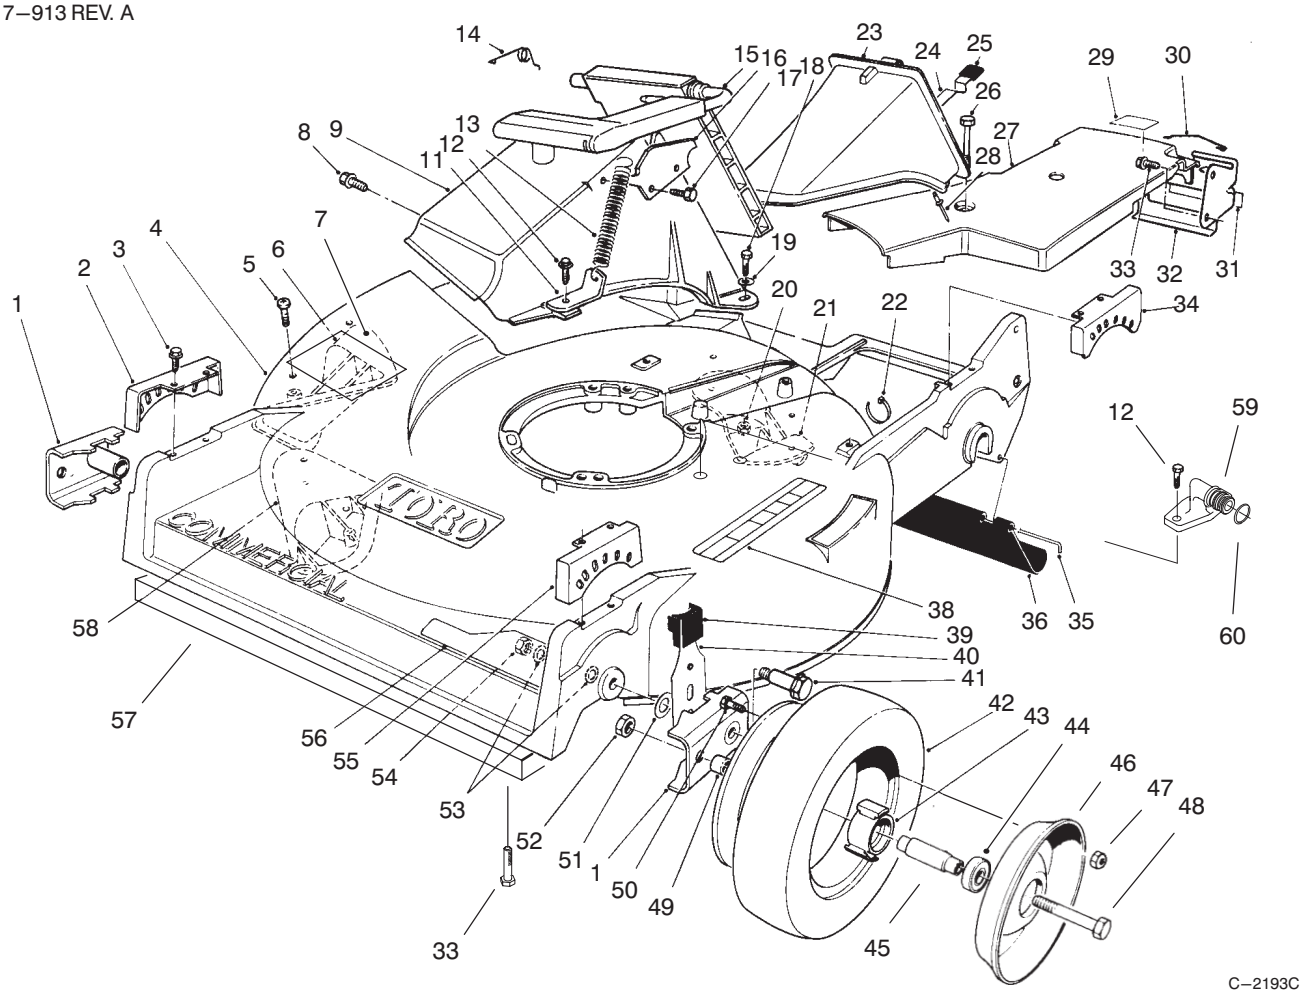



# HOUSING ASSEMBLY (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 32 | 74–1741 | Bracket – Traction Adj. | 1 |
| 33 | 32144–70 | Screw – Thread Forming | 5 |
| 34 | 49–8740 | Quadrant – Rear, L.H. | 1 |
| * | 49–8750 | Quadrant – Rear, R.H. | 1 |
| 35 | 33–3208 | Rod – Shield | 1 |
| 36 | 44–0580 | Shield – Rear, Safety | 1 |
| 38 | 93–6657 | Decal – Danger | 1 |
| 39 | 25–7740 | Knob – Arm | 2 |
| 40 | 66–7560 | Spring Arm Assy. Front | 2 |
| 41 | 27–6232 | Screw – Pivot | 2 |
| 42 | 53–7740 | Tire | 2 |
| 43 | 52–2410 | Hub | 2 |
| 44 | 52–2450 | Bearing – Wheel | 4 |
| 45 | 52–2440 | Spacer – Bearing | 2 |
| 46 | 53–7780 | Plate – Wheel Half | 4 |
| 47 | 3296–42 | Nut – Lock | 8 |
| 48 | 323–12 | Screw – Cap, Hex. Hd. | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 49 | 52–2480 | Spacer – Wheel | 2 |
| 50 | 321–2 | Screw – Cap, Hex. Hd. | 8 |
| 51 | 257–3 | Washer – Pivot | 2 |
| 52 | 32152–2 | Nut – Lock | 2 |
| 53 | 40–1940 | Washer – Hardened | 4 |
| 54 | 3296–6 | Nut – Lock | 2 |
| 55 | 49–8760 | Quadrant – Front, L.H. | 1 |
| 56 | 92–8781 | Decal – Recycler | 1 |
| 57 | 46–5400 | Shield – Front | 1 |
| 58 | 92–1720 | Kicker | 1 |
| 59 | 95–2747 | Fitting – Washout (Model No. 22038 Only) | 1 |
| 60 | 46–6290 | O–Ring – Seal (Model No. 22038 Only) | 1 |
| * | 53–7720 | Wheel & Tire Assembly (Incl. Ref. #42–47, & 50) | 2 |

*Not Illustrated

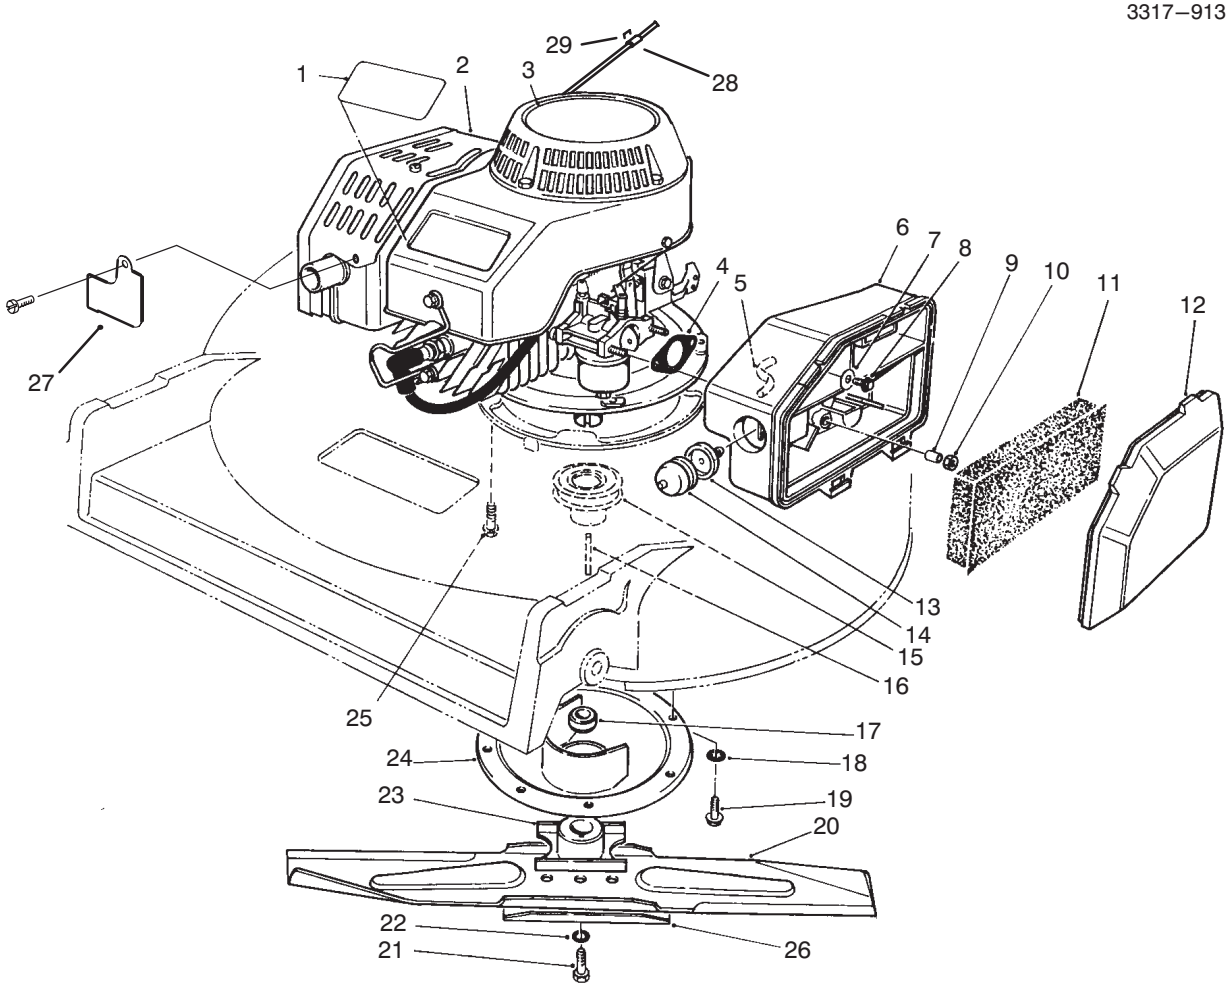



C–2194A

# ENGINE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 71–1260 | Decal – Pro Line | 1 |
| 2 | 61–8062 | Engine – Complete | 1 |
| 3 | 77–0040 | Decal – Recoil | 1 |
| 4 | 81–0090 | Gasket | 1 |
| 5 | 44–3172 | Hose – Primer | 1 |
| 6 | 63–9330 | Body – Air Cleaner | 1 |
| 7 | 3256–16 | Washer | 1 |
| 8 | 51–2690 | Screw – Hex. Flange Hd. | 1 |
| 9 | 62–3980 | Sleeve | 2 |
| 10 | 50–7180 | Nut – Lock | 2 |
| 11 | 63–9380 | Filter – Foam | 1 |
| 12 | 63–9340 | Cover – Air Cleaner | 1 |
| 13 | 44–2750 | Body – Primer | 1 |
| 14 | 66–7460 | Bulb – Primer | 1 |
| 15 | 46–7910 | Pulley – Driver | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 16 | 27–6300 | Key – Square | 1 |
| 17 | 52–2190 | Spacer – Retainer, Blade | 1 |
| 18 | 3254–6 | Washer – Internal Tooth | 3 |
| 19 | 32144–70 | Screw – Thread Forming | 3 |
| 20 | 14–9419 | Blade | 1 |
| 21 | 26–0670 | Screw – Blade | 1 |
| 22 | 3253–22 | Washer – Lock | 1 |
| 23 | 52–2170 | Retainer – Blade | 1 |
| 24 | 65–5860 | Protector – Crankshaft | 1 |
| 25 | 66–9300 | Screw – Hex. Flange Hd. | 4 |
| 26 | 92–1599 | Stiffener – Blade | 1 |
| 27 | 93–7661 | Extension – Muffler Guard | 1 |
| 28 | 81–3980 | Stop – Rope | 1 |
| †29 | | Staple | 1 |

† Obtain Locally

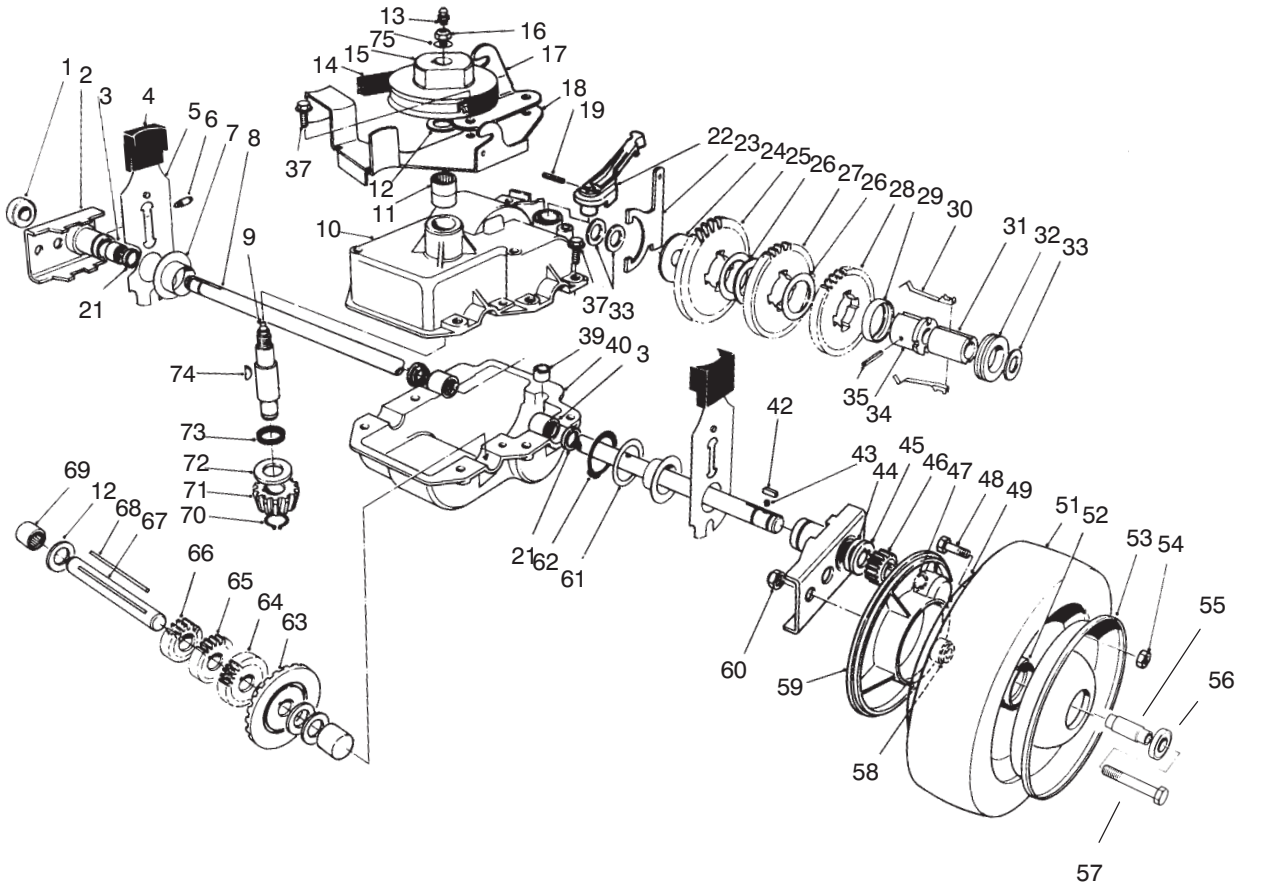



T–0678A

# GEAR CASE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 52–2450 | Bearing | 2 |
| 2 | 74–1851 | Pivot Arm Assembly (Incl. Ref. #1, 3, 6 & 21) | 2 |
| 3 | 48–2060 | Bearing – Needle | 4 |
| 4 | 25–7740 | Knob – Arm | 2 |
| 5 | 66–7561 | Spring Arm Assy. – Rear | 2 |
| 6 | 92–6316 | Fitting – Grease | 2 |
| 7 | 48–2170 | Cap – End | 2 |
| 8 | 74–1890 | Shaft – Output | 1 |
| 9 | 13–5149 | Shaft – Input (Incl Ref. #13) | 1 |
| 10 | 13–9739 | Upper Case Assembly (Incl. Ref. #11 & 73) | 1 |
| 11 | 47–7270 | Bearing – Needle | 2 |
| 12 | 36–4792 | Washer – Thrust | 4 |
| 13 | 302–63 | Fitting – Grease | 1 |
| 14 | 36–8070 | V–Belt | 1 |
| 15 | 39–6740 | Pulley | 1 |
| 16 | 3296–5 | Nut – Lock | 1 |
| 17 | 74–1750 | Bracket – Traction, Engage | 1 |
| 18 | 49–8461 | Bracket – Guide, Belt | 1 |
| 19 | 32121–99 | Pin – Roll | 1 |
| 21 | 47–6730 | Seal | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 22 | 74–1960 | Lever – Shift | 1 |
| 23 | 60–8870 | Yoke – Shift | 1 |
| 24 | 29–9690 | Washer – Flat | 1 |
| 25 | 46–3560 | Gear – 52T | 1 |
| 26 | 36–4770 | Spacer – Gear | 3 |
| 27 | 29–9271 | Gear – 42T | 1 |
| 28 | 42–4740 | Gear – 38T | 1 |
| 29 | 55–8020 | Retainer – Key | 1 |
| 30 | 29–9330 | Key – Shift | 2 |
| 31 | 39–6720 | Sleeve | 1 |
| 32 | 29–9340 | Collar – Shift | 1 |
| 33 | 36–4780 | Washer – Flat | 3 |
| 34 | 55–8010 | Sleeve – Gear | 1 |
| 35 | 3285–19 | Pin – Groove | 1 |
| 37 | 49–2040 | Screw – Self Tapping | 6 |
| 39 | 29–9570 | Bushing – Yoke | 1 |
| 40 | 74–1920 | Case – Lower | 1 |
| 42 | 612066 | Key | 2 |
| 43 | 39–9650 | Spring | 2 |
| 44 | 49–7700 | Washer – Thrust, Keyed | 2 |
| 45 | 62–3830 | Washer – Thrust, Keyed | 2 |
| 46 | 39–9160 | Pinion | 2 |
| 47 | 32151–68 | Ring – Klip | 4 |

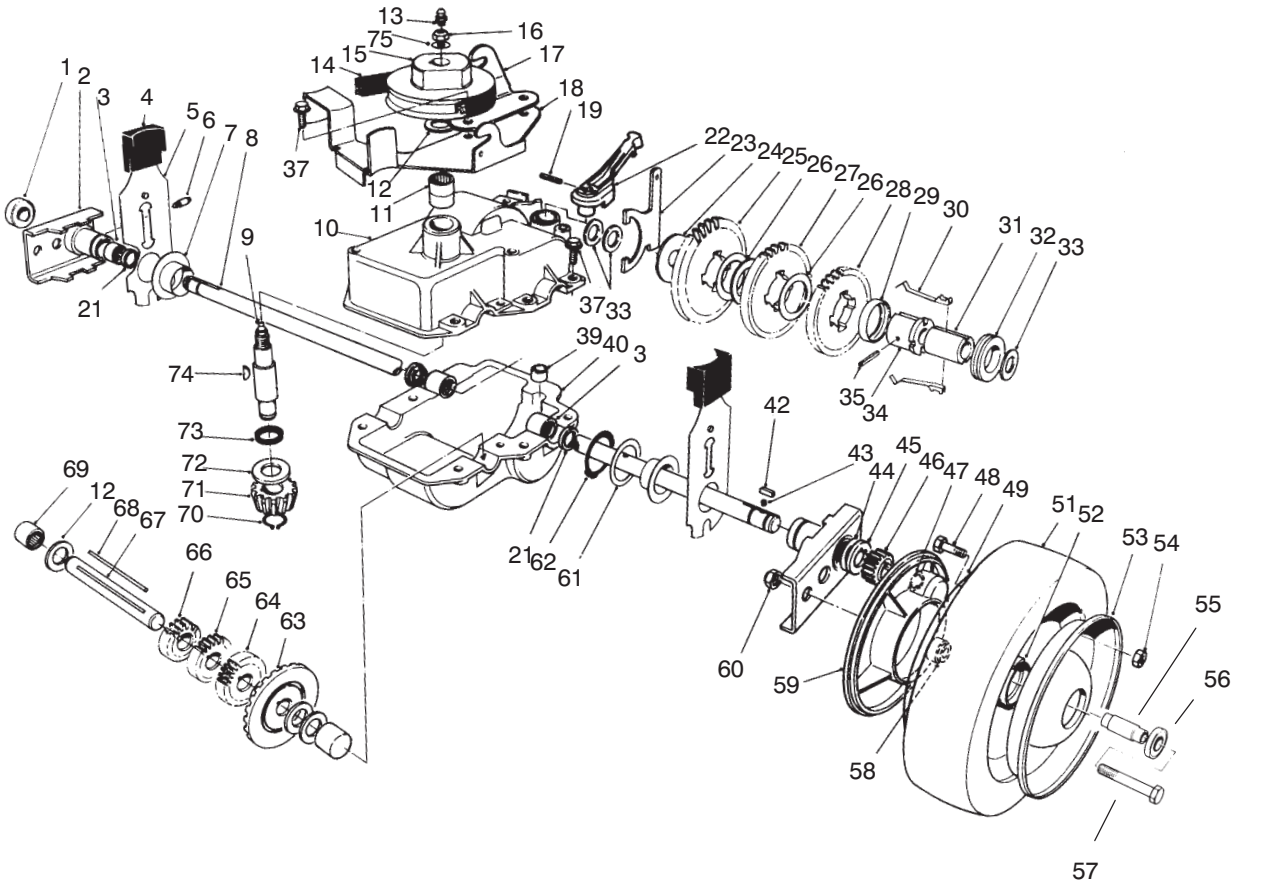



T–0678A

# GEAR CASE ASSEMBLY(Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 48 | 321–2 | Screw – Cap, Hex. Hd. | 8 |
| 49 | 92–4957 | Wheel – Half & Gear | 2 |
| 51 | 53–7740 | Tire | 2 |
| 52 | 52–2410 | Hub | 2 |
| 53 | 53–7780 | Plate – Wheel Half | 2 |
| 54 | 3296–42 | Nut – Lock | 8 |
| 55 | 52–2440 | Spacer – Bearing | 2 |
| 56 | 52–2450 | Bearing – Wheel | 4 |
| 57 | 323–13 | Screw – Cap, Hex. Hd. | 2 |
| 58 | 74–1650 | Spacer – Wheel | 2 |
| 59 | 74–1640 | Cover – Wheel | 2 |
| 60 | 32152–2 | Nut – Lock | 2 |
| 61 | 74–1810 | Washer | 2 |
| 62 | 32151–36 | Ring – Retaining | 2 |
| 63 | 74–1760 | Gear – Bevel | 1 |
| 64 | 39–6650 | Gear – 18T | 1 |
| 65 | 46–3550 | Gear – 14T | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 66 | 46–3540 | Gear – 12T | 1 |
| 67 | 53–7950 | Shaft – Intermediate | 1 |
| 68 | 39–7842 | Key – Square | 1 |
| 69 | 252–103 | Bearing – Closed | 2 |
| 70 | 32151–57 | Ring – Retaining | 1 |
| 71 | 39–6660 | Pinion – Bevel | 1 |
| 72 | 47–2910 | Washer – Thrust | 1 |
| 73 | 47–7260 | Seal | 1 |
| 74 | 3257–1 | Key – Woodruff | 2 |
| 75 | 3256–45 | Washer – Flat | 1 |
| * | 74–1861 | Gear Case Assembly (Incl. Ref. #3, 8–13, 15–16, 21, 23–40 & 63–74) | 1 |
| * | 74–1720 | Wheel & Tire Assembly (Incl. Ref. #48–49 & 51–56) | 2 |

*Not Illustrated

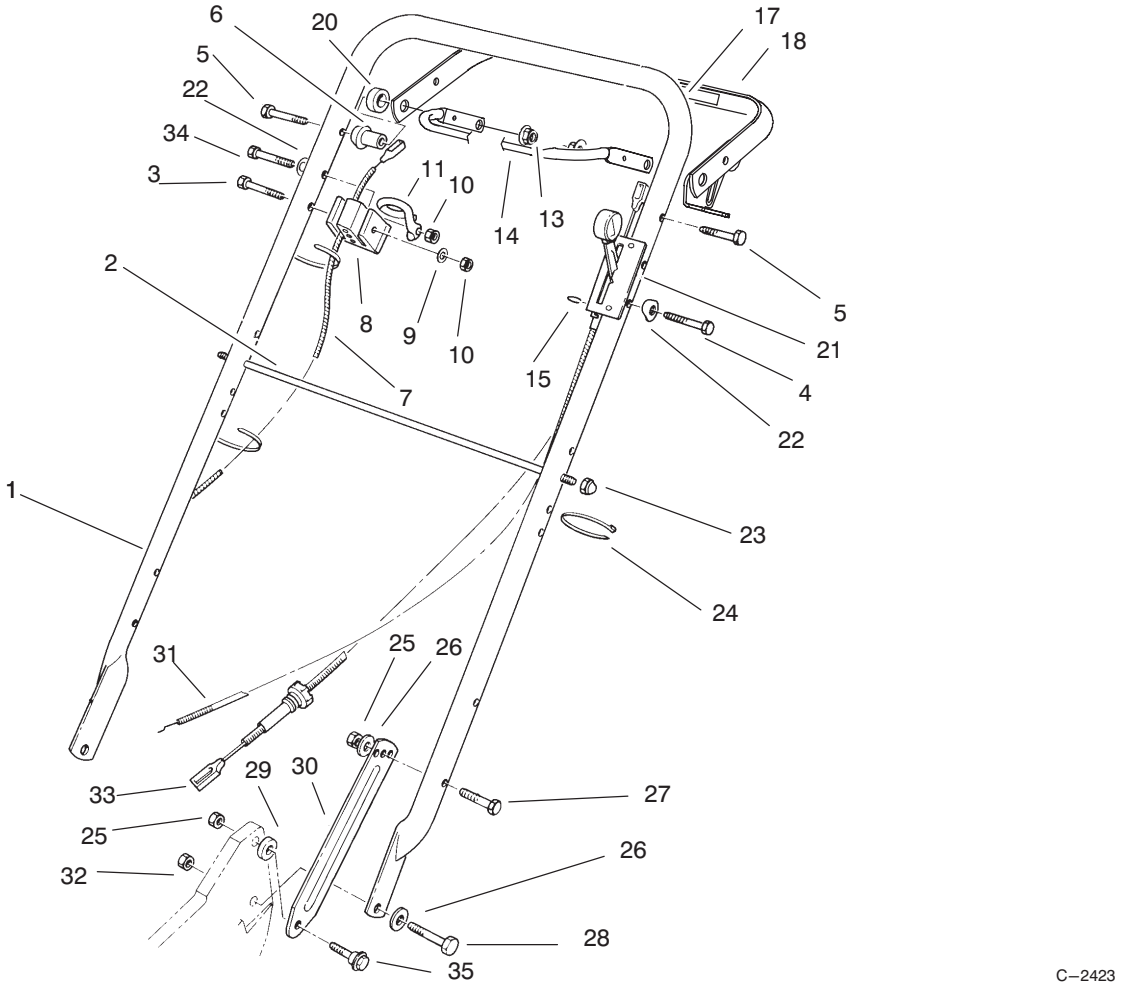



# HANDLE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94–4372 | Handle | 1 |
| 2 | 48–2810 | Rod – Bag Support | 1 |
| 3 | 321–15 | Screw – Hex Hd. Cap | 1 |
| 4 | 321–13 | Screw – Hex Hd. Cap | 2 |
| 5 | 322–12 | Screw – Hex Hd. Cap | 2 |
| 6 | 49–1631 | Support – Spacer | 2 |
| 7 | 94–5829 | Cable – Brake | 1 |
| 8 | 46–6980 | Support – Cable | 1 |
| 9 | 3256–22 | Washer – Flat | 1 |
| 10 | 3296–42 | Nut – Lock | 2 |
| 11 | 46–8081 | Guide – Rope | 1 |
| 13 | 3296–58 | Nut – Lock | 2 |
| 14 | 94–4370 | Bail – Brake | 1 |
| 15 | 32151–86 | E–Ring | 2 |
| 17 | 94–6046 | Decal – Traction Control | 1 |
| 18 | 94–4371 | Bail – Traction | 1 |
| 20 | 256–276 | Spacer | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 21 | 82–9952 | Bracket – Control Throttle | 1 |
| 22 | 3–7501 | Washer – Curved | 4 |
| 23 | 32111–7 | Nut – Acorn | 2 |
| 24 | 3290–378 | Tie – Cable | 3 |
| 25 | 3296–29 | Nut – Lock | 4 |
| 26 | 3290–456 | Washer – Flat | 4 |
| 27 | 322–7 | Screw – Hex Hd. Cap | 2 |
| 28 | 322–6 | Screw – Hex Hd. Cap | 2 |
| 29 | 3–3287 | Spacer | 2 |
| 30 | 84–8361 | Latch – Handle – L.H. | 1 |
| * | 84–8401 | Latch – Handle – R.H. | 1 |
| 31 | 70–1061 | Cable – Throttle | 1 |
| 32 | 3296–47 | Nut – Lock | 2 |
| 33 | 74–1791 | Cable – Traction | 1 |
| 34 | 321–9 | Screw – Hex Hd. Cap | 1 |
| 35 | 27–7210 | Screw – Shoulder | 2 |

*Not Illustrated

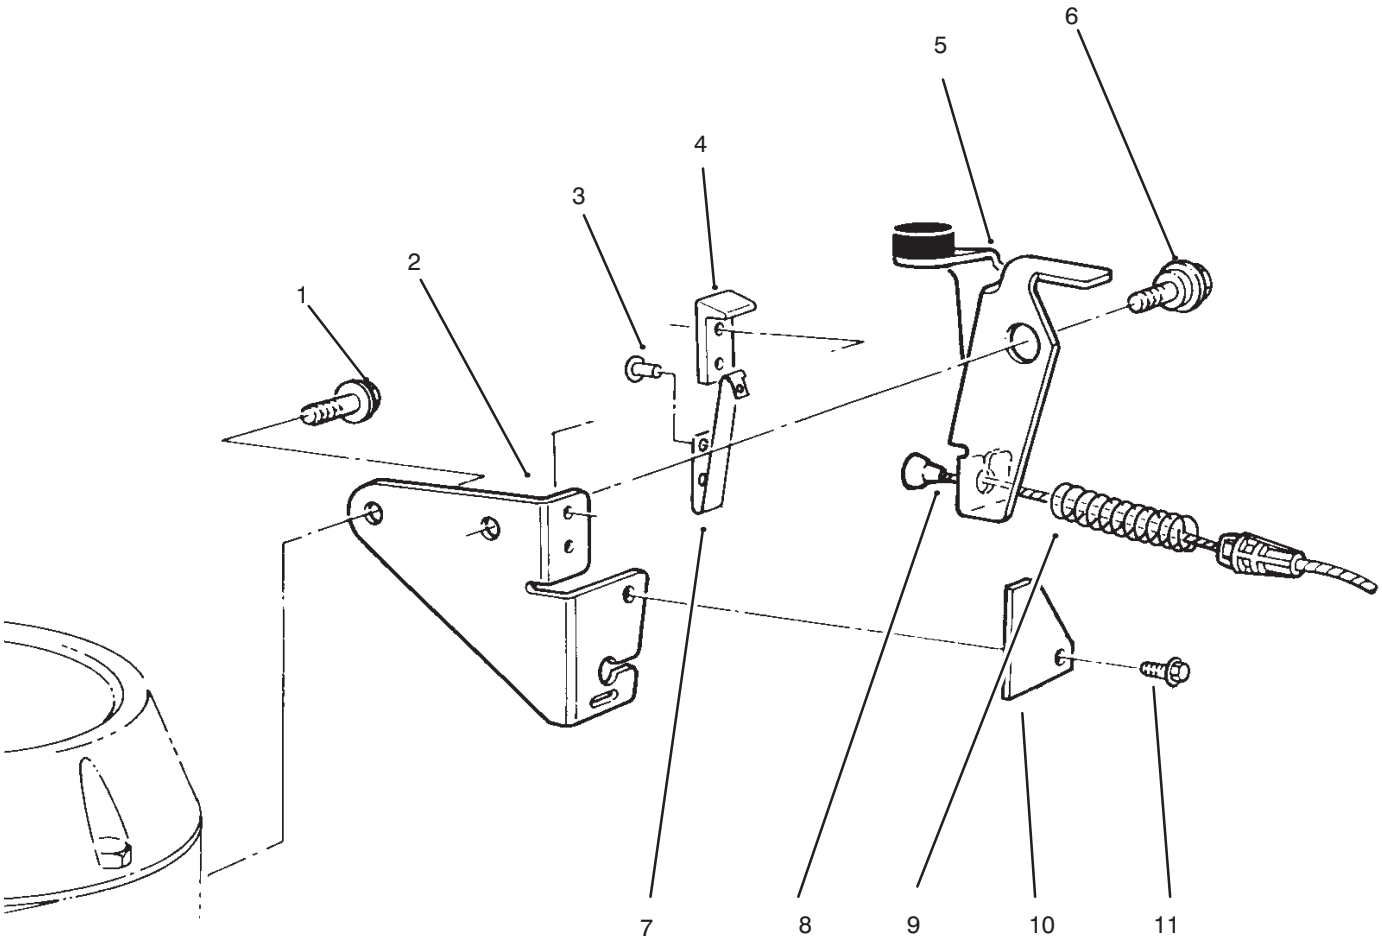



# BRAKE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32144–10 | Screw | 1 |
| 2 | 84–7820 | Plate – Mounting | 1 |
| 3 | 3290–459 | Rivet | 2 |
| 4 | 77–5260 | Strap – Insulation | 1 |
| 5 | 66–5380 | Brake Plate Assembly | 1 |
| 6 | 92–9698 | Screw – Shoulder | 1 |
| 7 | 60–9010 | Strap – Ground | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 8 | 94–5829 | Cable – Brake | 1 |
| 9 | 66–5370 | Spring – Compression | 1 |
| 10 | 53–4690 | Stop – Ground Strap | 1 |
| 11 | 32144–112 | Screw – Self Tapping | 1 |
| * | 14–6009 | Mounting Plate Assembly (Incl. Ref. #2–4, & 7) | 1 |

*Not Illustrated

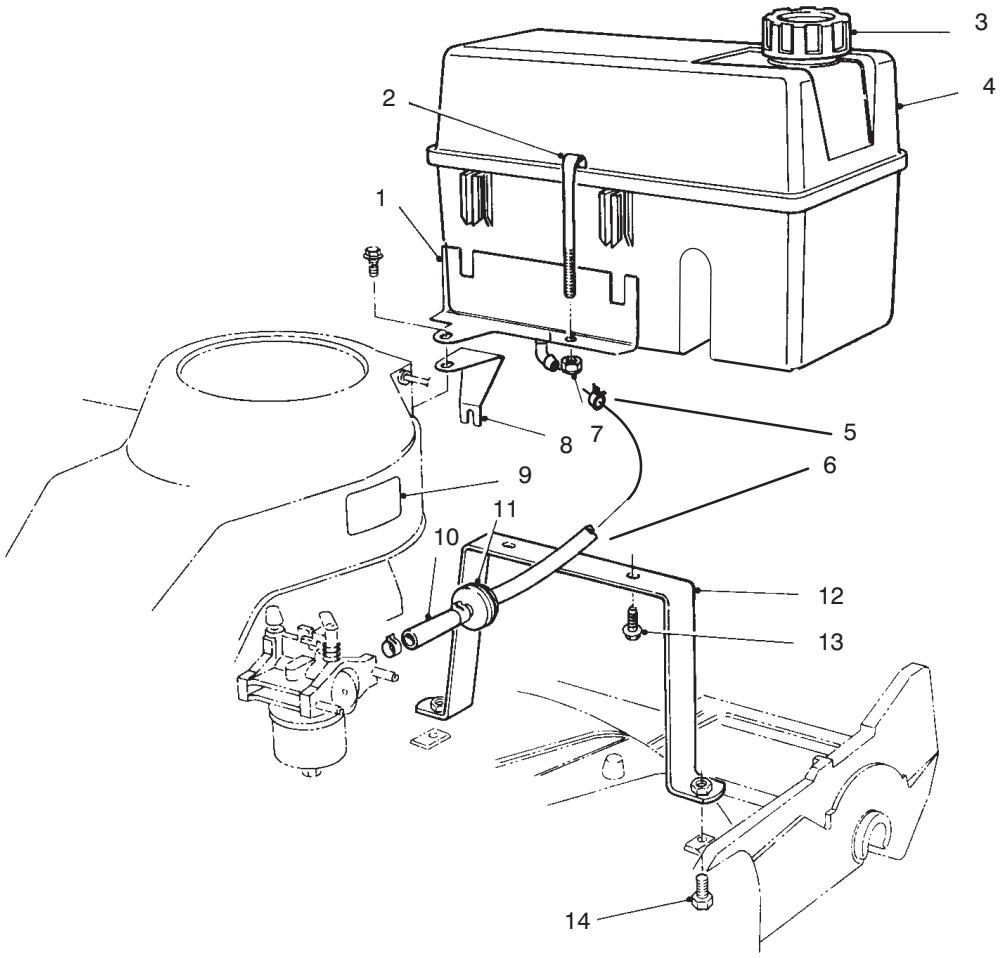



C–1019A

# GAS TANK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 74–2110 | Bracket – Tank | 1 |
| 2 | 77–2840 | Retainer – Tank, Fuel | 1 |
| 3 | 93–7199 | Cap – Gas | 1 |
| 4 | 94–5827 | Tank – Gas | 1 |
| 5 | 2412–95 | Clamp – Fuel Line | 4 |
| 6 | 68–3633 | Hose – Fuel | 1 |
| 7 | 3296–42 | Nut – Lock | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 8 | 77–0520 | Support – Bracket | 1 |
| 9 | 93–6659 | Decal – Fuel | 1 |
| 10 | 51–3211 | Hose – Fuel | 1 |
| 11 | 71–9280 | Filter – Fuel | 1 |
| 12 | 84–9160 | Mount – Tank, Bottom | 1 |
| 13 | 46–8091 | Screw – Hex. Washer Hd. | 2 |
| 14 | 323–6 | Screw – Hex Hd. Cap | 2 |

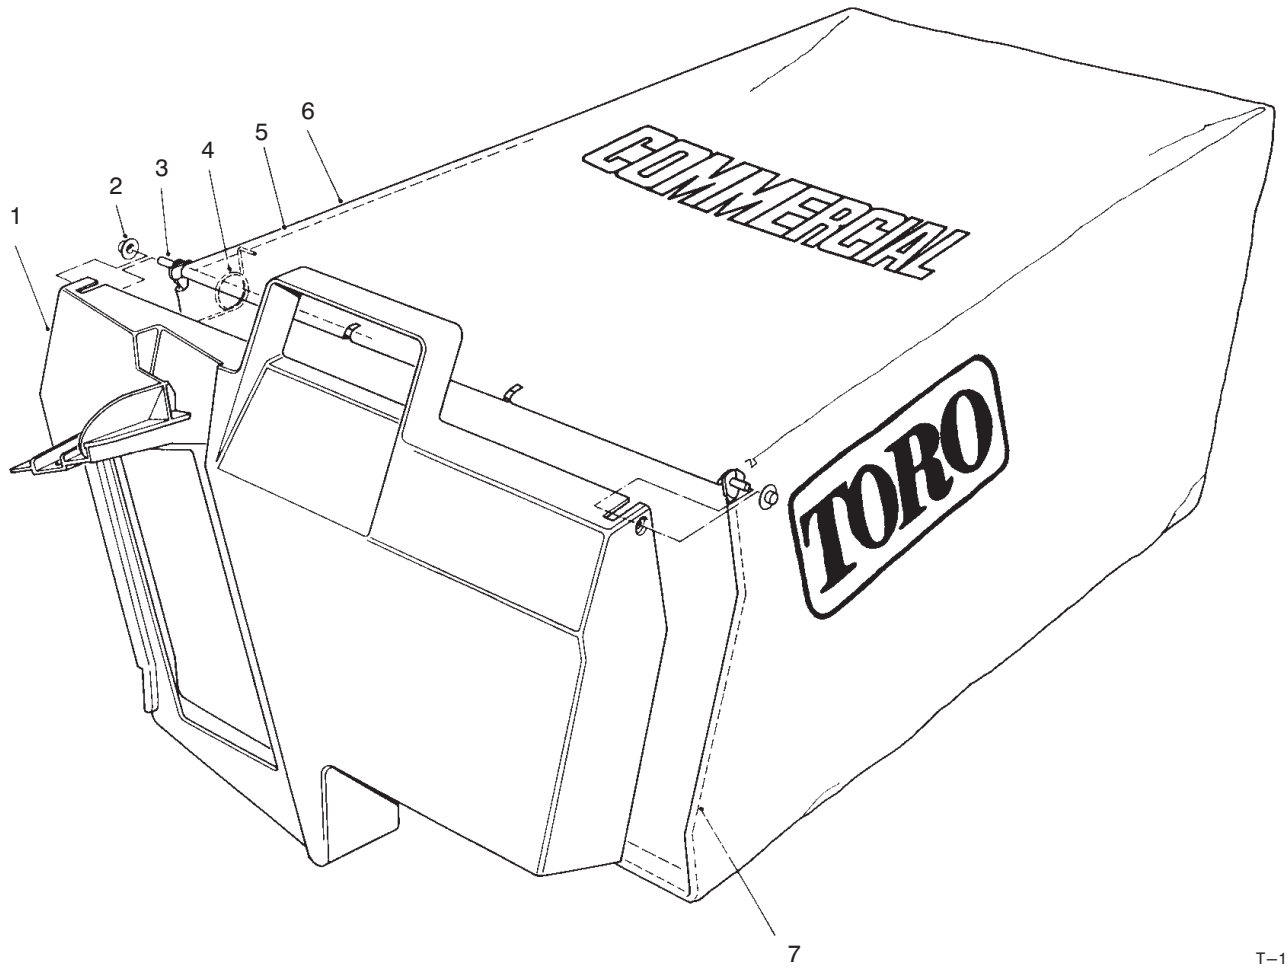



T–1100

# GRASS BAG ASSEMBLY No. 11–5609

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 48–2840 | Door – Bag, Grass | 1 |
| 2 | 3290–422 | Nut – Push, Washer Cap | 2 |
| 3 | 33–4820 | Hinge – Door, Bag | 1 |
| 4 | 36–6910 | Spring | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 5 | 42–4030 | Frame – Bag, Upper | 1 |
| 6 | 8–2759 | Bag – Grass | 1 |
| 7 | 42–4020 | Frame – Bag | 1 |

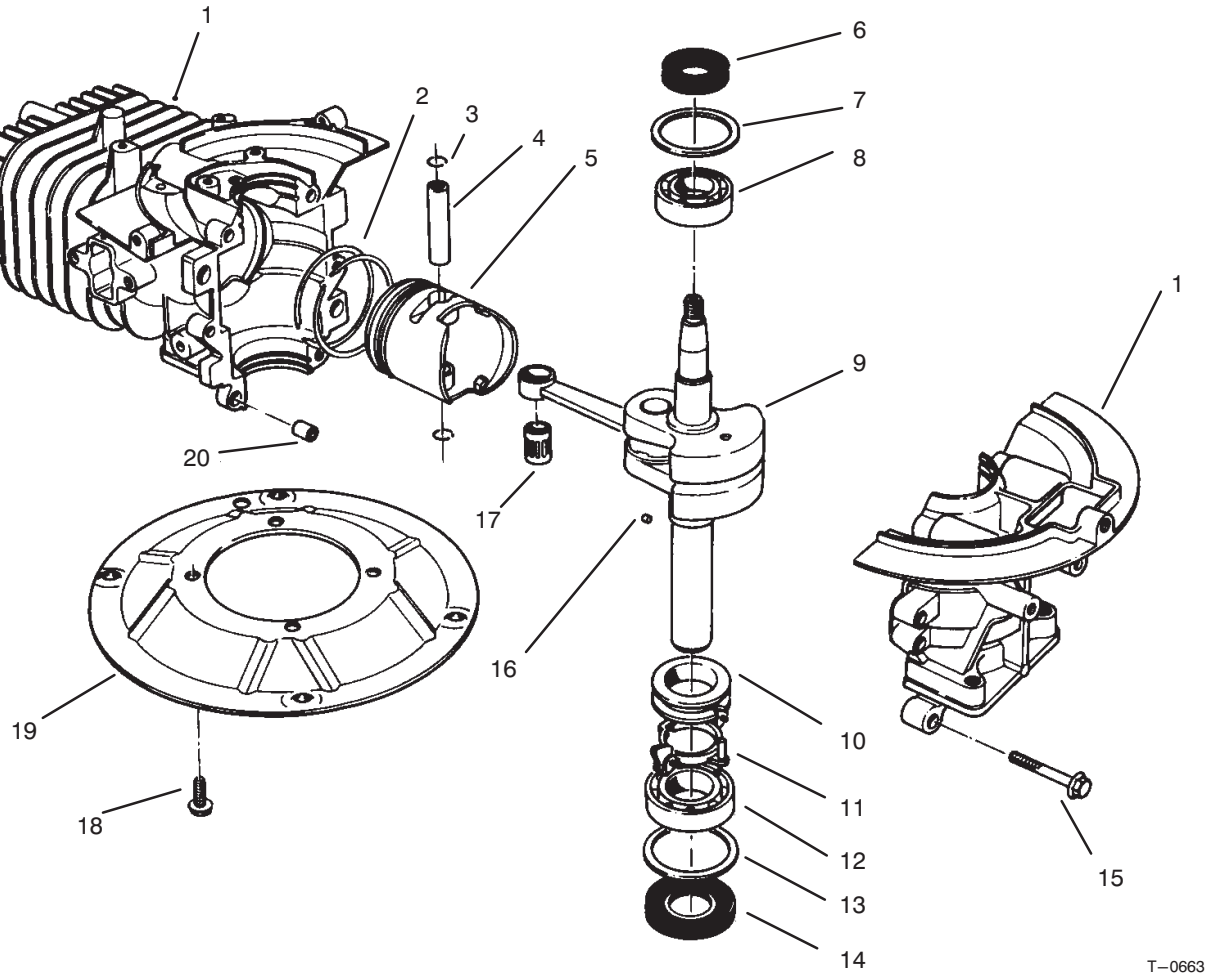



# CRANKSHAFT ASSEMBLY
# (Model No. 47PS5–3) (Model No. 22038B)
# (Model No. 47PT6–3) (Model No. 22038)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 81–2800 | Crankcase/Cylinder Assy. | 1 |
| 2 | 81–0590 | Piston Ring Set | 1 |
| 3 | 81–0620 | Circlip | 2 |
| 4 | 81–0600 | Pin – Wrist | 1 |
| 5 | 81–2140 | Piston – 58mm | 1 |
| 6 | 81–0720 | Seal – Oil, Upper | 1 |
| 7 | 81–0710 | Washer – Thrust, Upper | 1 |
| 8 | 81–0690 | Bearing – Upper 20mm | 1 |
| 9 | 81–4680 | Crankshaft/Connecting Rod Assembly | 1 |
| 10 | 81–0770 | Spacer – Governor | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 81–0750 | Bracket – Arm, Governor | 1 |
| 12 | 81–0700 | Bearing – Lower 25mm | 1 |
| 13 | 81–0730 | Washer – Thrust, Lower | 1 |
| 14 | 81–0740 | Seal – Oil, Lower | 1 |
| 15 | 81–0540 | Bolt 30mm Lg. | 5 |
| 16 | 81–0760 | Pin – Crankshaft | 1 |
| 17 | 81–0610 | Bearing – Wrist Pin | 1 |
| 18 | 81–0570 | Bolt | 4 |
| 19 | 81–0560 | Plate – Mounting | 1 |
| 20 | 81–0520 | Pin – Crankcase | 2 |
| * | 12–8099 | Short Block | 1 |

*Not Illustrated

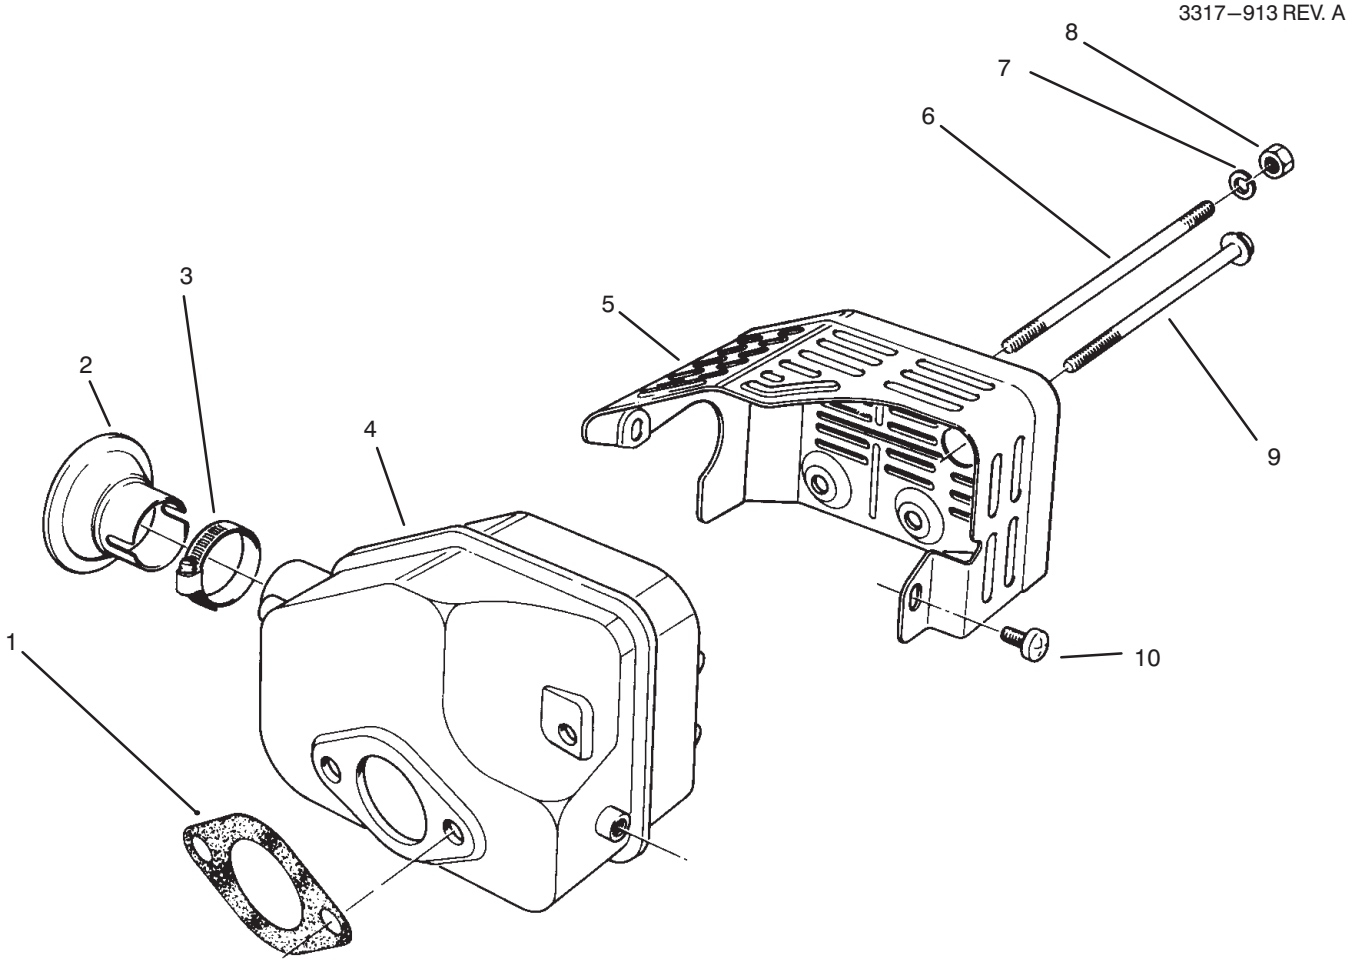



T–0667

# MUFFLER ASSEMBLY
# (Model No. 47PS5–3) (Model No. 22038B)
# (Model No. 47PT6–3) (Model No. 22038)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 81–1080 | Gasket – Muffler | 1 |
| 2 | 81–0200 | Spark Arrester (Optional) | 1 |
| †3 | | Clamp | 1 |
| 4 | 81–5690 | Muffler | 1 |
| 5 | 81–2450 | Cover – Muffler | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 6 | 81–1100 | Bolt | 2 |
| 7 | 81–1120 | Washer – Lock | 2 |
| 8 | 81–1110 | Nut | 2 |
| 9 | 81–1150 | Bolt – Self Tapping | 1 |
| 10 | 81–1140 | Screw – Phillips Hd. | 2 |

†Obtain Locally

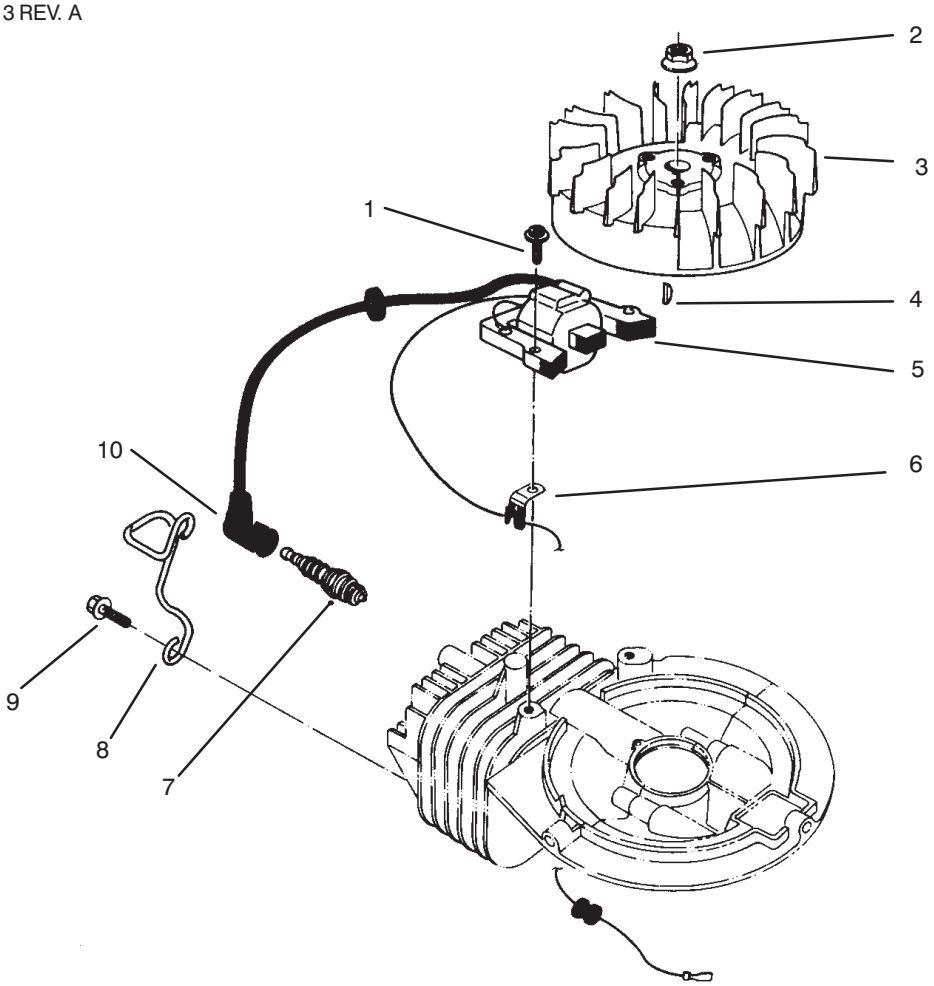



T–0664

# IGNITION ASSEMBLY
# (Model No. 47PS5–3) (Model No. 22038B)
# (Model No. 47PT6–3) (Model No. 22038)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 81–5680 | Screw – Cap, Hex Hd. | 2 |
| 2 | 81–1330 | Nut | 1 |
| 3 | 81–2810 | Flywheel – Magneto | 1 |
| 4 | 81–2370 | Key – Flywheel | 1 |
| 5 | 81–2820 | Coil/Ignition Assembly | 1 |
| 6 | 81–1480 | Clamp | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 7 | 81–0181 | Spark Plug | 1 |
| 8 | 81–2120 | Guard – Spark Plug | 1 |
| 9 | 81–2350 | Bolt – Self Tapping (20mm Lg.) | 2 |
| 10 | 81–1500 | Cap Assembly – Spark Plug | 1 |
| * | 41–7650 | Puller – Flywheel | 1 |


*Not Illustrated

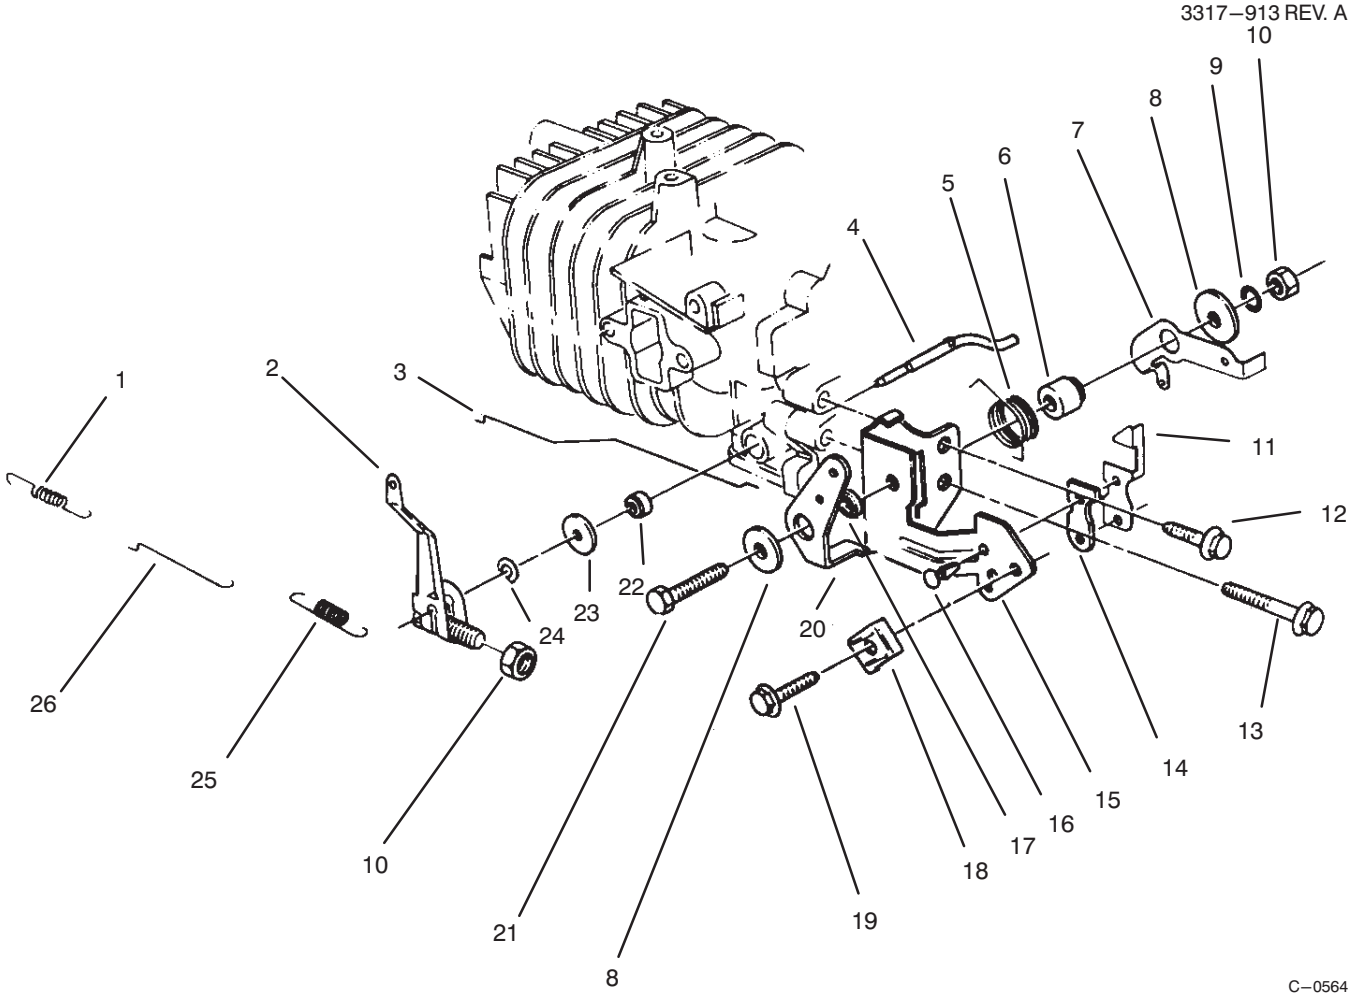


# GOVERNOR ASSEMBLY
# (Model No. 47PS5–3) (Model No. 22038B)
# (Model No. 47PT6–3) (Model No. 22038)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 81–0920 | Spring – Carburetor Rod | 1 |
| 2 | 81–5420 | Governor Arm/Bolt Assy. | 1 |
| 3 | 81–5410 | Rod – Choke | 1 |
| 4 | 81–2880 | Shaft – Governor | 1 |
| 5 | 81–2460 | Spring – Lever, Choke | 1 |
| 6 | 81–1770 | Spacer – Lever, Governor | 1 |
| 7 | 81–2850 | Lever – Governor | 1 |
| 8 | 81–1750 | Washer – Lever, Choke | 2 |
| 9 | 81–1450 | Washer – Lock | 1 |
| 10 | 81–0900 | Nut | 2 |
| 11 | 81–1840 | Terminal – Kill Switch | 1 |
| 12 | 81–1170 | Bolt – Self Tapping | 1 |
| 13 | 81–0540 | Bolt | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 14 | 81–1830 | Insulator – Kill Switch | 1 |
| 15 | 81–2420 | Bracket – Throttle | 1 |
| 16 | 81–4530 | Rivet – Kill Switch | 2 |
| 17 | 81–2470 | Spacer – Lever, Choke | 1 |
| 18 | 81–2430 | Clamp – Cable | 1 |
| 19 | 50–0130 | Bolt – Clamp, Cable | 1 |
| 20 | 81–1710 | Lever – Choke | 1 |
| 21 | 81–1730 | Bolt – Bracket, Throttle | 1 |
| 22 | 81–0850 | Seal – Shaft, Governor | 1 |
| 23 | 81–0860 | Washer | 1 |
| 24 | 81–0870 | Ring – Retaining | 1 |
| 25 | 81–2830 | Spring – Governor | 1 |
| 26 | 81–0910 | Rod – Carburetor | 1 |

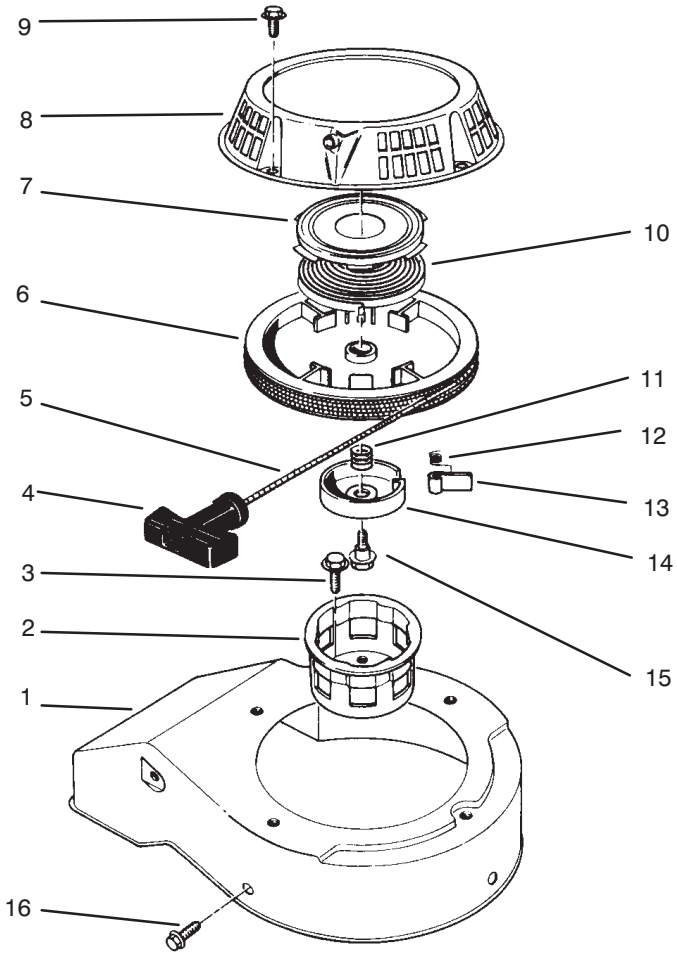



T–1102

# RECOIL ASSEMBLY
# (Model No. 47PS5–3) (Model No. 22038B)
# (Model No. 47PT6–3) (Model No. 22038)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 81–2080 | Cover – Fan, Cooling | 1 |
| 2 | 81–2170 | Cup – Pulley, Starter | 1 |
| 3 | 81–1300 | Bolt | 3 |
| 4 | 81–1630 | Handle – Recoil | 1 |
| 5 | 81–1270 | Rope | 1 |
| 6 | 81–1210 | Pulley – Rope | 1 |
| 7 | | Retainer – Spring, Recoil | 1 |
| 8 | 81–2100 | Case – Starter | 1 |
| 9 | 81–1280 | Bolt | 4 |
| 10 | | Spring – Recoil | 1 |
| 11 | 81–1240 | Spring – Compression | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 12 | 81–1220 | Spring – Dog | 1 |
| 13 | 81–1230 | Dog – Starter | 1 |
| 14 | 81–1250 | Retainer – Dog | 1 |
| 15 | 81–1260 | Bolt – Shoulder | 1 |
| 16 | 53–1340 | Bolt – Self Tapping (15mm Lg.) | 3 |
| * | 81–5940 | Starter Assembly (Incl. Ref. #4–15) | 1 |
| * | 81–2300 | Spring & Retainer Assembly (Incl. Ref. #7 & 10) | 1 |

*Not Illustrated

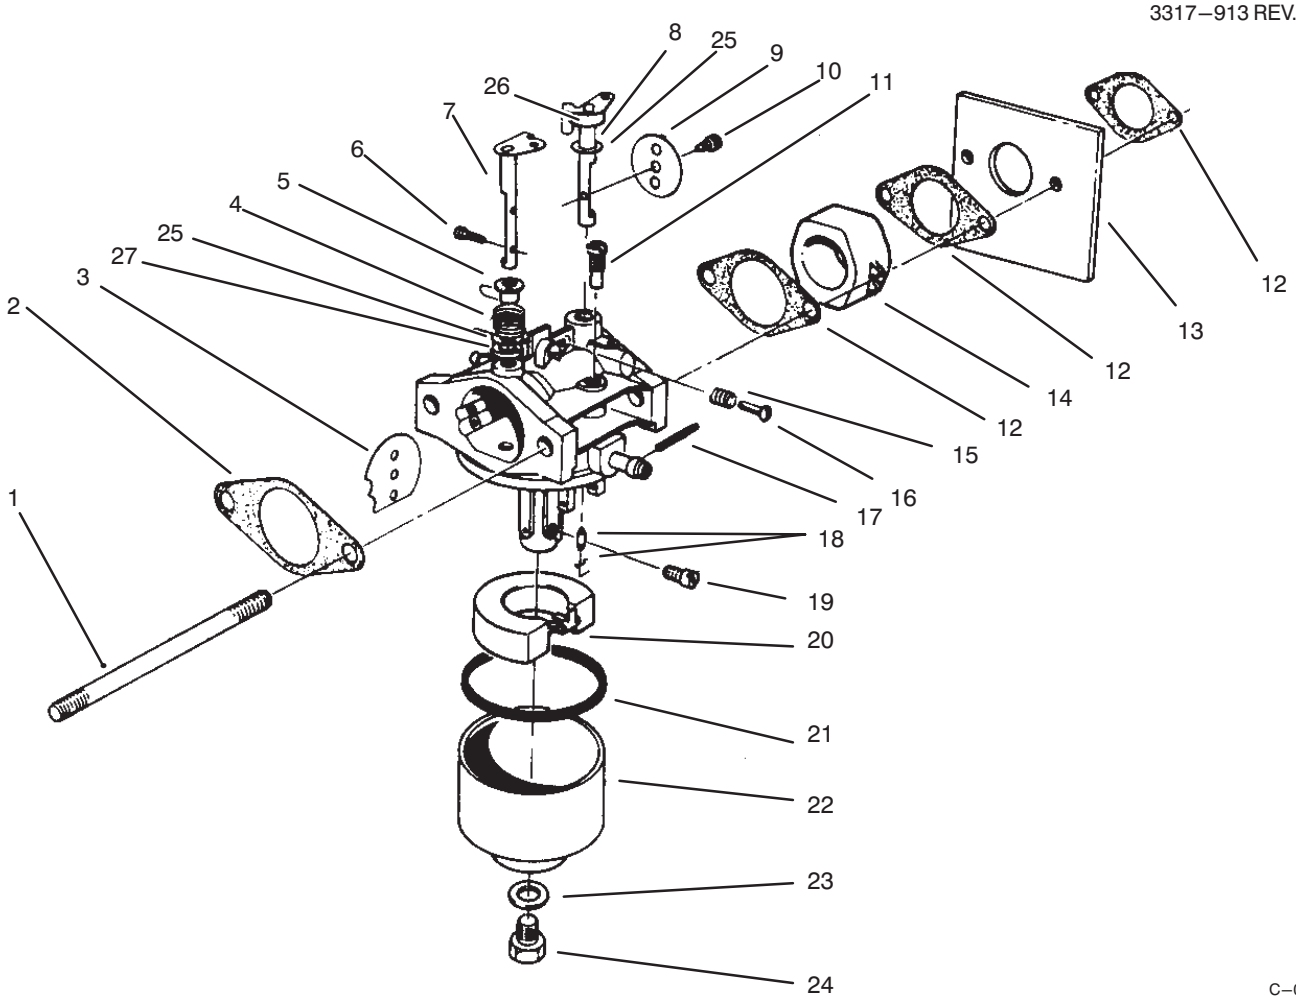


C–0563

# CARBURETOR ASSEMBLY
# (Model No. 47PS5–3) (Model No. 22038B)
# (Model No. 47PT6–3) (Model No. 22038)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 81–5450 | Stud Bolt, Carburetor | 2 |
| 2 | 81–0090 | Gasket | 1 |
| 3 | 81–0240 | Valve – Choke | 1 |
| 4 | 81–0230 | Spring – Choke | 1 |
| 5 | 81–0220 | Bushing – Choke | 1 |
| 6 | 81–2160 | Screw – Choke Plate | 2 |
| 7 | 81–1950 | Shaft – Choke | 1 |
| 8 | 81–0250 | Shaft – Throttle | 1 |
| 9 | 81–0260 | Valve – Throttle | 1 |
| 10 | 81–0270 | Screw – Throttle | 1 |
| 11 | 81–1030 | Jet – Pilot #40 | 1 |
| 12 | 81–0780 | Gasket – Carburetor | 3 |
| 13 | 81–5490 | Shield – Carburetor | 1 |
| 14 | 81–2190 | Insulator – Carburetor | 1 |
| 15 | 81–2580 | Spring – Idle Stop | 1 |
| 16 | 50–0250 | Screw – Idle Stop | 1 |
| 17 | 81–2600 | Pin – Float | 1 |
| 18 | 81–4910 | Needle Valve | 1 |
| 19 | 81–1060 | Jet – Main #75 | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| * | 81–2340 | Jet – Main #72.5 High Alt. Above 6,000 Ft. (Optional) | A/R |
| 20 | 81–0970 | Float | 1 |
| 21 | 81–1010 | Gasket – Bowl, Float | 1 |
| 22 | 81–5660 | Bowl – Float | 1 |
| 23 | 81–1020 | Gasket – Capscrew, Bowl | 1 |
| 24 | 81–5670 | Capscrew – Bowl | 1 |
| 25 | 81–2530 | Seal | 2 |
| 26 | 81–2540 | Ring | 1 |
| 27 | 81–2550 | Packing | 1 |
| * | 81–5430 | Carburetor Ass'y w/Primer | 1 |
| * | 81–2520 | Carburetor Ass'y | 1 |
| * | 12–6379 | Carburetor Kit (Incl. Ref. #2, 12, 18, 21 & 23) | 1 |
| * | 81–5810 | Seat Kit (Incl. Valve Seat & Ref. #18) | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 612066 | Key | 4 | 42 | 2 |
| 3–3287 | Spacer | 6 | 29 | 2 |
| 3–7501 | Washer – Curved | 6 | 22 | 4 |
| 8–2759 | Bag – Grass | 9 | 6 | 1 |
| 12–6379 | Carburetor Kit | 15 | * | 1 |
| 12–8099 | Short Block | 10 | * | 1 |
| 13–5149 | Shaft – Input | 4 | 9 | 1 |
| 13–9739 | Upper Case Assembly | 4 | 10 | 1 |
| 14–6009 | Mounting Plate Assembly | 7 | * | 1 |
| 14–9419 | Blade | 3 | 20 | 1 |
| 25–7740 | Knob – Arm | 4 | 4 | 2 |
| 25–7740 | Knob – Arm | 2 | 39 | 2 |
| 26–0670 | Screw – Blade | 3 | 21 | 1 |
| 27–6232 | Screw – Pivot | 2 | 41 | 2 |
| 27–6300 | Key – Square | 3 | 16 | 1 |
| 27–7210 | Screw – Shoulder | 6 | 35 | 2 |
| 29–9271 | Gear – 42T | 4 | 27 | 1 |
| 29–9330 | Key – Shift | 4 | 30 | 2 |
| 29–9340 | Collar – Shift | 4 | 32 | 1 |
| 29–9570 | Bushing – Yoke | 4 | 39 | 1 |
| 29–9690 | Washer – Flat | 4 | 24 | 1 |
| 33–3208 | Rod – Shield | 2 | 35 | 1 |
| 33–4820 | Hinge – Door, Bag | 9 | 3 | 1 |
| 36–4770 | Spacer – Gear | 4 | 26 | 3 |
| 36–4780 | Washer – Flat | 4 | 33 | 3 |
| 36–4792 | Washer – Thrust | 4 | 12 | 4 |
| 36–6910 | Spring | 9 | 4 | 2 |
| 36–8070 | V–Belt | 4 | 14 | 1 |
| 37–7260 | Screw – Special | 1 | 26 | 2 |
| 39–6650 | Gear – 18T | 5 | 64 | 1 |
| 39–6660 | Pinion – Bevel | 5 | 71 | 1 |
| 39–6720 | Sleeve | 4 | 31 | 1 |
| 39–6740 | Pulley | 4 | 15 | 1 |
| 39–7842 | Key – Square | 5 | 68 | 1 |
| 39–9160 | Pinion | 4 | 46 | 2 |
| 39–9650 | Spring | 4 | 43 | 2 |
| 40–1940 | Washer – Hardened | 2 | 53 | 4 |
| 41–7650 | Puller – Flywheel | 12 | * | 1 |
| 42–4020 | Frame – Bag | 9 | 7 | 1 |
| 42–4030 | Frame – Bag, Upper | 9 | 5 | 1 |
| 42–4740 | Gear – 38T | 4 | 28 | 1 |
| 44–0580 | Shield – Rear, Safety | 2 | 36 | 1 |
| 44–2750 | Body – Primer | 3 | 13 | 1 |
| 44–3172 | Hose – Primer | 3 | 5 | 1 |
| 46–3540 | Gear – 12T | 5 | 66 | 1 |
| 46–3550 | Gear – 14T | 5 | 65 | 1 |
| 46–3560 | Gear – 52T | 4 | 25 | 1 |
| 46–5400 | Shield – Front | 2 | 57 | 1 |
| 46–6290 | O–Ring – Seal | 2 | 60 | 1 |
| 46–6810 | Screw – Thr'd Forming | 1 | 8 | 1 |
| 46–6811 | Screw – Hex Washer Hd. | 1 | 12 | 1 |
| 46–6811 | Screw – Hex Washer Hd. | 1 | 12 | 3 |
| 46–6980 | Support – Cable | 6 | 8 | 1 |
| 46–7030 | Retainer – Cable | 1 | 30 | 1 |
| 46–7910 | Pulley – Driver | 3 | 15 | 1 |
| 46–8081 | Guide – Rope | 6 | 11 | 1 |
| 46–8090 | Screw – Cap, Hex. Hd. | 1 | 17 | 2 |
| 46–8091 | Screw – Hex. Washer Hd. | 8 | 13 | 2 |
| 47–2910 | Washer – Thrust | 5 | 72 | 1 |
| 47–6730 | Seal | 4 | 21 | 4 |
| 47–7260 | Seal | 5 | 73 | 1 |
| 47–7270 | Bearing – Needle | 4 | 11 | 2 |
| 48–2060 | Bearing – Needle | 4 | 3 | 4 |
| 48–2170 | Cap – End | 4 | 7 | 2 |
| 48–2810 | Rod – Bag Support | 6 | 2 | 1 |
| 48–2840 | Door – Bag, Grass | 9 | 1 | 1 |
| 49–1631 | Support – Spacer | 6 | 6 | 2 |
| 49–2040 | Screw – Self Tapping | 4 | 37 | 6 |
| 49–2040 | Screw – Thread Forming | 1 | 3 | 8 |
| 49–7700 | Washer – Thrust, Keyed | 4 | 44 | 2 |
| 49–8461 | Bracket – Guide, Belt | 4 | 18 | 1 |
| 49–8740 | Quadrant – Rear, L.H. | 2 | 34 | 1 |
| 49–8750 | Quadrant – Rear, R.H. | 2 | * | 1 |
| 49–8760 | Quadrant – Front, L.H. | 2 | 55 | 1 |
| 49–8770 | Quadrant – Front, R.H. | 1 | 2 | 1 |
| 50–0130 | Bolt – Clamp, Cable | 13 | 19 | 1 |
| 50–0250 | Screw – Idle Stop | 15 | 16 | 1 |
| 50–7180 | Nut – Lock | 3 | 10 | 2 |
| 51–2690 | Screw – Hex. Flange Hd. | 3 | 8 | 1 |
| 51–3211 | Hose – Fuel | 8 | 10 | 1 |
| 52–2170 | Retainer – Blade | 3 | 23 | 1 |
| 52–2190 | Spacer – Retainer, Blade | 3 | 17 | 1 |
| 52–2410 | Hub | 2 | 43 | 2 |
| 52–2410 | Hub | 5 | 52 | 2 |
| 52–2440 | Spacer – Bearing | 2 | 45 | 2 |
| 52–2440 | Spacer – Bearing | 5 | 55 | 2 |
| 52–2450 | Bearing | 4 | 1 | 2 |
| 52–2450 | Bearing – Wheel | 2 | 44 | 4 |
| 52–2450 | Bearing – Wheel | 5 | 56 | 4 |
| 52–2480 | Spacer – Wheel | 2 | 49 | 2 |
| 53–1340 | Bolt – Self Tapping | 14 | 16 | 3 |
| 53–4690 | Stop – Ground Strap | 7 | 10 | 1 |
| 53–7720 | Wheel & Tire Assembly | 2 | * | 2 |
| 53–7740 | Tire | 2 | 42 | 2 |
| 53–7740 | Tire | 5 | 51 | 2 |
| 53–7780 | Plate – Wheel Half | 2 | 46 | 4 |
| 53–7780 | Plate – Wheel Half | 5 | 53 | 2 |
| 53–7950 | Shaft – Intermediate | 5 | 67 | 1 |
| 55–8010 | Sleeve – Gear | 4 | 34 | 1 |
| 55–8020 | Retainer – Key | 4 | 29 | 1 |
| 60–8870 | Yoke – Shift | 4 | 23 | 1 |
| 60–9010 | Strap – Ground | 7 | 7 | 1 |
| 61–8062 | Engine – Complete | 3 | 2 | 1 |
| 61–8300 | Pivot Arm Assembly | 1 | 1 | 2 |
| 62–3830 | Washer – Thrust, Keyed | 4 | 45 | 2 |
| 62–3980 | Sleeve | 3 | 9 | 2 |
| 63–9330 | Body – Air Cleaner | 3 | 6 | 1 |
| 63–9340 | Cover – Air Cleaner | 3 | 12 | 1 |
| 63–9380 | Filter – Foam | 3 | 11 | 1 |
| 65–5860 | Protector – Crankshaft | 3 | 24 | 1 |
| 66–5370 | Spring – Compression | 7 | 9 | 1 |
| 66–5380 | Brake Plate Assembly | 7 | 5 | 1 |
| 66–7460 | Bulb – Primer | 3 | 14 | 1 |
| 66–7560 | Spring Arm Assy. Front | 2 | 40 | 2 |
| 66–7561 | Spring Arm Assy. – Rear | 4 | 5 | 2 |
| 66–9300 | Screw – Hex. Flange Hd. | 3 | 25 | 4 |
| 68–3633 | Hose – Fuel | 8 | 6 | 1 |
| 70–1061 | Cable – Throttle | 6 | 31 | 1 |
| 71–1260 | Decal – Pro Line | 3 | 1 | 1 |
| 71–9280 | Filter – Fuel | 8 | 11 | 1 |
| 71–9350 | Bracket – Spring | 1 | 11 | 1 |
| 74–1640 | Cover – Wheel | 5 | 59 | 2 |
| 74–1650 | Spacer – Wheel | 5 | 58 | 2 |
| 74–1720 | Wheel & Tire Assembly | 5 | * | 2 |
| 74–1741 | Bracket – Traction Adj. | 2 | 32 | 1 |
| 74–1750 | Bracket – Traction, Engage | 4 | 17 | 1 |
| 74–1760 | Gear – Bevel | 5 | 63 | 1 |
| 74–1770 | Cover – Belt | 1 | 27 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 74–1791 | Cable – Traction | 6 | 33 | 1 |
| 74–1810 | Washer | 5 | 61 | 2 |
| 74–1851 | Pivot Arm Assembly | 4 | 2 | 2 |
| 74–1861 | Gear Case Assembly | 5 | * | 1 |
| 74–1890 | Shaft – Output | 4 | 8 | 1 |
| 74–1920 | Case – Lower | 4 | 40 | 1 |
| 74–1960 | Lever – Shift | 4 | 22 | 1 |
| 74–1970 | Decal – Traction Drive | 1 | 31 | 1 |
| 74–2110 | Bracket – Tank | 8 | 1 | 1 |
| 76–4570 | Plate – Latch | 1 | 16 | 1 |
| 76–4640 | Latch – Plug | 1 | 24 | 1 |
| 76–4650 | Grip – Latch | 1 | 25 | 1 |
| 76–4660 | Spring | 1 | 13 | 1 |
| 77–0040 | Decal – Recoil | 3 | 3 | 1 |
| 77–0200 | Door Ass'y | 1 | 15 | 1 |
| 77–0502 | Plug Assembly | 1 | 23 | 1 |
| 77–0520 | Support – Bracket | 8 | 8 | 1 |
| 77–2840 | Retainer – Tank, Fuel | 8 | 2 | 1 |
| 77–5260 | Strap – Insulation | 7 | 4 | 1 |
| 80–3770 | Retainer – Door | 1 | 14 | 1 |
| 81–0090 | Gasket | 15 | 2 | 1 |
| 81–0090 | Gasket | 3 | 4 | 1 |
| 81–0181 | Spark Plug | 12 | 7 | 1 |
| 81–0200 | Spark Arrester (Optional) | 11 | 2 | 1 |
| 81–0220 | Bushing – Choke | 15 | 5 | 1 |
| 81–0230 | Spring – Choke | 15 | 4 | 1 |
| 81–0240 | Valve – Choke | 15 | 3 | 1 |
| 81–0250 | Shaft – Throttle | 15 | 8 | 1 |
| 81–0260 | Valve – Throttle | 15 | 9 | 1 |
| 81–0270 | Screw – Throttle | 15 | 10 | 1 |
| 81–0520 | Pin – Crankcase | 10 | 20 | 2 |
| 81–0540 | Bolt | 13 | 13 | 1 |
| 81–0540 | Bolt 30mm Lg. | 10 | 15 | 5 |
| 81–0560 | Plate – Mounting | 10 | 19 | 1 |
| 81–0570 | Bolt | 10 | 18 | 4 |
| 81–0590 | Piston Ring Set | 10 | 2 | 1 |
| 81–0600 | Pin – Wrist | 10 | 4 | 1 |
| 81–0610 | Bearing – Wrist Pin | 10 | 17 | 1 |
| 81–0620 | Circlip | 10 | 3 | 2 |
| 81–0690 | Bearing – Upper 20mm | 10 | 8 | 1 |
| 81–0700 | Bearing – Lower 25mm | 10 | 12 | 1 |
| 81–0710 | Washer – Thrust, Upper | 10 | 7 | 1 |
| 81–0720 | Seal – Oil, Upper | 10 | 6 | 1 |
| 81–0730 | Washer – Thrust, Lower | 10 | 13 | 1 |
| 81–0740 | Seal – Oil, Lower | 10 | 14 | 1 |
| 81–0750 | Bracket – Arm, Governor | 10 | 11 | 1 |
| 81–0760 | Pin – Crankshaft | 10 | 16 | 1 |
| 81–0770 | Spacer – Governor | 10 | 10 | 1 |
| 81–0780 | Gasket – Carburetor | 15 | 12 | 3 |
| 81–0850 | Seal – Shaft, Governor | 13 | 22 | 1 |
| 81–0860 | Washer | 13 | 23 | 1 |
| 81–0870 | Ring – Retaining | 13 | 24 | 1 |
| 81–0900 | Nut | 13 | 10 | 2 |
| 81–0910 | Rod – Carburetor | 13 | 26 | 1 |
| 81–0920 | Spring – Carburetor Rod | 13 | 1 | 1 |
| 81–0970 | Float | 15 | 20 | 1 |
| 81–1010 | Gasket – Bowl, Float | 15 | 21 | 1 |
| 81–1020 | Gasket – Capscrew, Bowl | 15 | 23 | 1 |
| 81–1030 | Jet – Pilot #40 | 15 | 11 | 1 |
| 81–1060 | Jet – Main #75 | 15 | 19 | 1 |
| 81–1080 | Gasket – Muffler | 11 | 1 | 1 |
| 81–1100 | Bolt | 11 | 6 | 2 |
| 81–1110 | Nut | 11 | 8 | 2 |
| 81–1120 | Washer – Lock | 11 | 7 | 2 |
| 81–1140 | Screw – Phillips Hd. | 11 | 10 | 2 |
| 81–1150 | Bolt – Self Tapping | 11 | 9 | 1 |
| 81–1170 | Bolt – Self Tapping | 13 | 12 | 1 |
| 81–1210 | Pulley – Rope | 14 | 6 | 1 |
| 81–1220 | Spring – Dog | 14 | 12 | 1 |
| 81–1230 | Dog – Starter | 14 | 13 | 1 |
| 81–1240 | Spring – Compression | 14 | 11 | 1 |
| 81–1250 | Retainer – Dog | 14 | 14 | 1 |
| 81–1260 | Bolt – Shoulder | 14 | 15 | 1 |
| 81–1270 | Rope | 14 | 5 | 1 |
| 81–1280 | Bolt | 14 | 9 | 4 |
| 81–1300 | Bolt | 14 | 3 | 3 |
| 81–1330 | Nut | 12 | 2 | 1 |
| 81–1450 | Washer – Lock | 13 | 9 | 1 |
| 81–1480 | Clamp | 12 | 6 | 1 |
| 81–1500 | Cap Assembly – Spark Plug | 12 | 10 | 1 |
| 81–1630 | Handle – Recoil | 14 | 4 | 1 |
| 81–1710 | Lever – Choke | 13 | 20 | 1 |
| 81–1730 | Bolt – Bracket, Throttle | 13 | 21 | 1 |
| 81–1750 | Washer – Lever, Choke | 13 | 8 | 2 |
| 81–1770 | Spacer – Lever, Governor | 13 | 6 | 1 |
| 81–1830 | Insulator – Kill Switch | 13 | 14 | 1 |
| 81–1840 | Terminal – Kill Switch | 13 | 11 | 1 |
| 81–1950 | Shaft – Choke | 15 | 7 | 1 |
| 81–2080 | Cover – Fan, Cooling | 14 | 1 | 1 |
| 81–2100 | Case – Starter | 14 | 8 | 1 |
| 81–2120 | Guard – Spark Plug | 12 | 8 | 1 |
| 81–2140 | Piston – 58mm | 10 | 5 | 1 |
| 81–2160 | Screw – Choke Plate | 15 | 6 | 2 |
| 81–2170 | Cup – Pulley, Starter | 14 | 2 | 1 |
| 81–2190 | Insulator – Carburetor | 15 | 14 | 1 |
| 81–2300 | Spring & Retainer Assembly | 14 | * | 1 |
| 81–2340 | Jet – Main #72.5 High Alt. | 15 | * | A/R |
| 81–2350 | Bolt – Self Tapping | 12 | 9 | 2 |
| 81–2370 | Key – Flywheel | 12 | 4 | 1 |
| 81–2420 | Bracket – Throttle | 13 | 15 | 1 |
| 81–2430 | Clamp – Cable | 13 | 18 | 1 |
| 81–2450 | Cover – Muffler | 11 | 5 | 1 |
| 81–2460 | Spring – Lever, Choke | 13 | 5 | 1 |
| 81–2470 | Spacer – Lever, Choke | 13 | 17 | 1 |
| 81–2520 | Carburetor Ass'y | 15 | * | 1 |
| 81–2530 | Seal | 15 | 25 | 2 |
| 81–2540 | Ring | 15 | 26 | 1 |
| 81–2550 | Packing | 15 | 27 | 1 |
| 81–2580 | Spring – Idle Stop | 15 | 15 | 1 |
| 81–2600 | Pin – Float | 15 | 17 | 1 |
| 81–2800 | Crankcase/Cylinder Assy. | 10 | 1 | 1 |
| 81–2810 | Flywheel – Magneto | 12 | 3 | 1 |
| 81–2820 | Coil/Ignition Assembly | 12 | 5 | 1 |
| 81–2830 | Spring – Governor | 13 | 25 | 1 |
| 81–2850 | Lever – Governor | 13 | 7 | 1 |
| 81–2880 | Shaft – Governor | 13 | 4 | 1 |
| 81–3980 | Stop – Rope | 3 | 28 | 1 |
| 81–4530 | Rivet – Kill Switch | 13 | 16 | 2 |
| 81–4680 | Crankshaft/Connecting Rod | 10 | 9 | 1 |
| 81–4910 | Needle Valve | 15 | 18 | 1 |
| 81–5410 | Rod – Choke | 13 | 3 | 1 |
| 81–5420 | Governor Arm/Bolt Assy. | 13 | 2 | 1 |
| 81–5430 | Carburetor Ass'y w/Primer | 15 | * | 1 |
| 81–5450 | Stud Bolt, Carburetor | 15 | 1 | 2 |
| 81–5490 | Shield – Carburetor | 15 | 13 | 1 |
| 81–5660 | Bowl – Float | 15 | 22 | 1 |
| 81–5670 | Capscrew – Bowl | 15 | 24 | 1 |
| 81–5680 | Screw – Cap, Hex Hd. | 12 | 1 | 2 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 81–5690 | Muffler | 11 | 4 | 1 |
| 81–5810 | Seat Kit | 15 | * | 1 |
| 81–5940 | Starter Assembly | 14 | * | 1 |
| 82–9151 | Chute – Discharge | 1 | 9 | 1 |
| 82–9952 | Bracket – Control Throttle | 6 | 21 | 1 |
| 84–7820 | Plate – Mounting | 7 | 2 | 1 |
| 84–8361 | Latch – Handle – L.H. | 6 | 30 | 1 |
| 84–8401 | Latch – Handle – R.H. | 6 | * | 1 |
| 84–9160 | Mount – Tank, Bottom | 8 | 12 | 1 |
| 92–1599 | Stiffener – Blade | 3 | 26 | 1 |
| 92–1720 | Kicker | 2 | 58 | 1 |
| 92–1730 | Kicker | 1 | 6 | 1 |
| 92–1750 | Kicker | 1 | 21 | 1 |
| 92–4957 | Wheel – Half & Gear | 5 | 49 | 2 |
| 92–6316 | Fitting – Grease | 4 | 6 | 2 |
| 92–8781 | Decal – Recycler | 2 | 56 | 1 |
| 92–9698 | Screw – Shoulder | 7 | 6 | 1 |
| 93–6654 | Decal – Covers | 1 | 7 | 1 |
| 93–6657 | Decal – Danger | 2 | 38 | 1 |
| 93–6659 | Decal – Fuel | 8 | 9 | 1 |
| 93–6664 | Label – Grease | 1 | 29 | 1 |
| 93–7199 | Cap – Gas | 8 | 3 | 1 |
| 93–7661 | Extension – Muffler Guard | 3 | 27 | 1 |
| 94–4370 | Bail – Brake | 6 | 14 | 1 |
| 94–4371 | Bail – Traction | 6 | 18 | 1 |
| 94–4372 | Handle | 6 | 1 | 1 |
| 94–5827 | Tank – Gas | 8 | 4 | 1 |
| 94–5829 | Cable – Brake | 6 | 7 | 1 |
| 94–5829 | Cable – Brake | 7 | 8 | 1 |
| 94–6046 | Decal – Traction Control | 6 | 17 | 1 |
| 95–2747 | Fitting – Washout | 2 | 59 | 1 |
| 95–5614 | Housing – Commercial | 1 | 4 | 1 |
| 2412–95 | Clamp – Fuel Line | 8 | 5 | 4 |
| 252–103 | Bearing – Closed | 5 | 69 | 2 |
| 256–276 | Spacer | 6 | 20 | 2 |
| 257–3 | Washer – Pivot | 2 | 51 | 2 |
| 302–63 | Fitting – Grease | 4 | 13 | 1 |
| 321–2 | Screw – Cap, Hex. Hd. | 2 | 50 | 8 |
| 321–2 | Screw _ Cap, Hex. Hd. | 5 | 48 | 8 |
| 321–7 | Screw – Cap, Hex. Hd. | 1 | 18 | 2 |
| 321–9 | Screw – Hex Hd. Cap | 6 | 34 | 1 |
| 321–13 | Screw – Hex Hd. Cap | 6 | 4 | 2 |
| 321–15 | Screw – Hex Hd. Cap | 6 | 3 | 1 |
| 322–6 | Screw – Hex Hd. Cap | 6 | 28 | 2 |
| 322–7 | Screw – Hex Hd. Cap | 6 | 27 | 2 |
| 322–12 | Screw – Hex Hd. Cap | 6 | 5 | 2 |
| 323–6 | Screw – Hex Hd. Cap | 8 | 14 | 2 |
| 323–12 | Screw – Cap, Hex. Hd. | 2 | 48 | 2 |
| 323–13 | Screw – Cap, Hex. Hd. | 5 | 57 | 2 |
| 3253–22 | Washer – Lock | 3 | 22 | 1 |
| 3254–6 | Washer – Internal Tooth | 3 | 18 | 3 |
| 3256–16 | Washer | 3 | 7 | 1 |
| 3256–22 | Washer – Flat | 6 | 9 | 1 |
| 3256–22 | Washer – Flat | 1 | 19 | 2 |
| 3256–45 | Washer – Flat | 5 | 75 | 1 |
| 3257–1 | Key – Woodruff | 5 | 74 | 2 |
| 3285–19 | Pin – Groove | 4 | 35 | 1 |
| 3290–378 | Tie – Cable | 1 | 22 | 1 |
| 3290–378 | Tie – Cable | 6 | 24 | 3 |
| 3290–422 | Nut – Push, Washer Cap | 9 | 2 | 2 |
| 3290–456 | Washer – Flat | 6 | 26 | 4 |
| 3290–459 | Rivet | 7 | 3 | 2 |
| 3295–35 | Rivet | 1 | 28 | 1 |
| 3296–5 | Nut – Lock | 4 | 16 | 1 |
| 3296–6 | Nut – Lock | 2 | 54 | 2 |
| 3296–29 | Nut – Lock | 6 | 25 | 4 |
| 3296–42 | Nut – Lock | 8 | 7 | 1 |
| 3296–42 | Nut – Lock | 6 | 10 | 2 |
| 3296–42 | Nut – Lock | 1 | 20 | 2 |
| 3296–42 | Nut – Lock | 2 | 47 | 8 |
| 3296–42 | Nut – Lock | 5 | 54 | 8 |
| 3296–47 | Nut – Lock | 6 | 32 | 2 |
| 3296–58 | Nut – Lock | 6 | 13 | 2 |
| 32111–7 | Nut – Acorn | 6 | 23 | 2 |
| 32121–99 | Pin – Roll | 4 | 19 | 1 |
| 32144–10 | Screw | 7 | 1 | 1 |
| 32144–70 | Screw – Thread Forming | 3 | 19 | 3 |
| 32144–70 | Screw – Thread Forming | 2 | 33 | 5 |
| 32144–111 | Screw – Pan Hd. | 1 | 5 | 6 |
| 32144–112 | Screw – Self Tapping | 7 | 11 | 1 |
| 32151–36 | Ring – Retaining | 5 | 62 | 2 |
| 32151–57 | Ring – Retaining | 5 | 70 | 1 |
| 32151–68 | Ring – Klip | 4 | 47 | 4 |
| 32151–86 | E–Ring | 6 | 15 | 2 |
| 32152–2 | Nut – Lock | 2 | 52 | 2 |
| 32152–2 | Nut – Lock | 5 | 60 | 2 |

OPTIONAL EQUIPMENT

Side Discharge Kit . . . . . Model No. 59110

Spark Arrestor Muffler . . . . . Part No. 81–0200

*Not Illustrated

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |