
FORM NO. 3318–168

TORO®

MODEL NO. 79105–6900001 & UP

PARTS CATALOG

44” RECYCLER® CUTTING UNIT

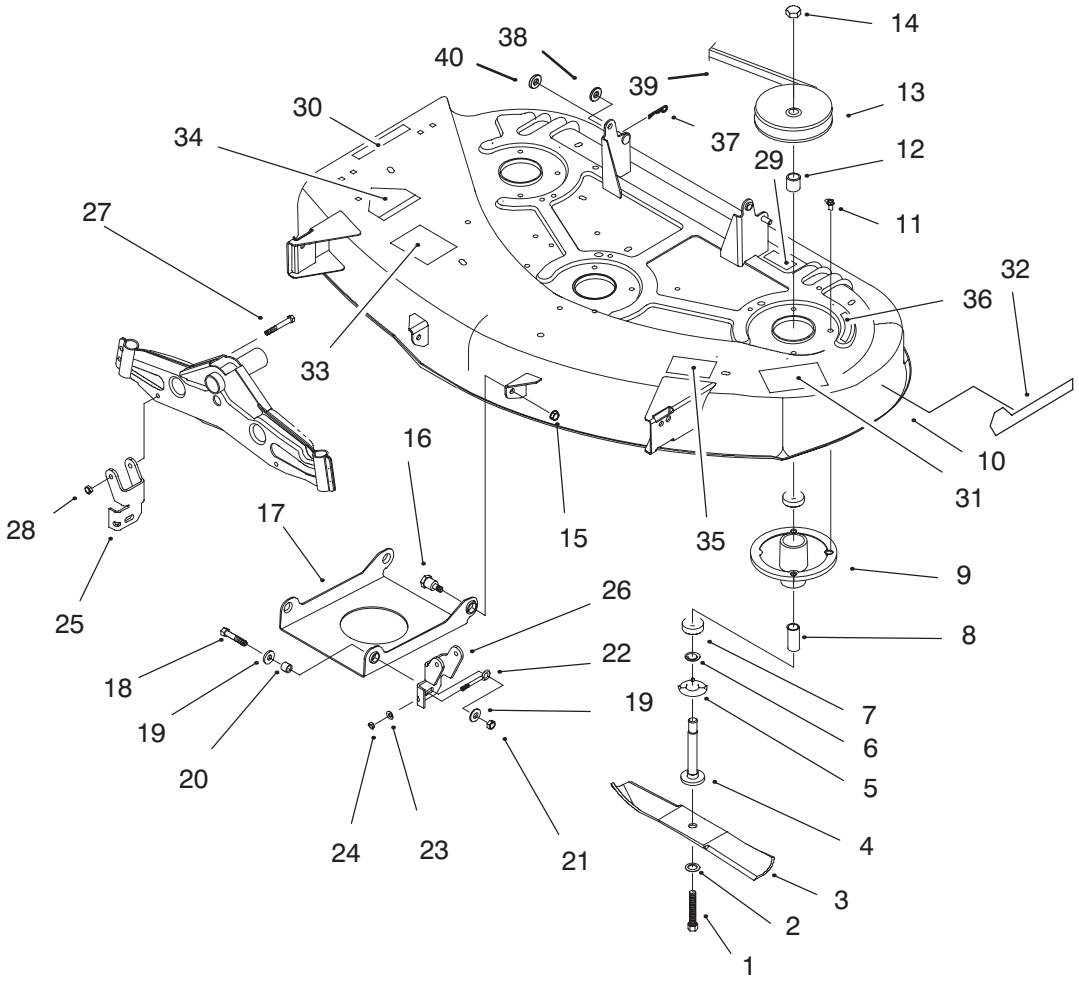

C–2297A


DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	26–0671	Bolt – Blade	3
2	3290–465	Washer – Belleville	3
3	92–7952	Blade – Recycler	3
4	80–4342	Shaft – Spindle	3
5	80–4360	Shield – Bearing	3
6	80–4380	Spacer – Hardened	3
7	38–7820	Bearing – Ball	6
8	62–3661	Spacer – Bearing	3
9	88–4510	Spindle	3
10	93–3825	Deck Assembly	1
11	32144–41	Screw – Hex Washer Hd. Thread Forming	12
12	88–5360	Spacer – Pulley	3
13	88–5330	Pulley – Deck	3
14	3219–6	Nut – Hex	3

Ref. No.	Part No.	Description	No. Used
15	3296–39	Nut – Lock	2
16	56–7530	Bolt – Shoulder	2
17	93–3881	Pan – Front Deck Suspension	1
18	323–9	Screw – Hex Hd. Cap	2
19	80–6990	Washer – Hardened	4
20	93–9847	Spacer	2
21	3296–39	Nut – Hex Lock	2
22	61–9980	Screw – Adjusting	2
23	3256–22	Washer – Flat	2
24	3296–42	Nut – Lock	2
25	93–9849	Bracket – Deck R.H.	1
26	93–9848	Bracket – Deck L.H.	1
27	322–12	Screw – Hex Hd. Cap	2
28	3296–29	Nut – Lock	2

Copyright 1995 The Toro Company
All Rights Reserved

TPS

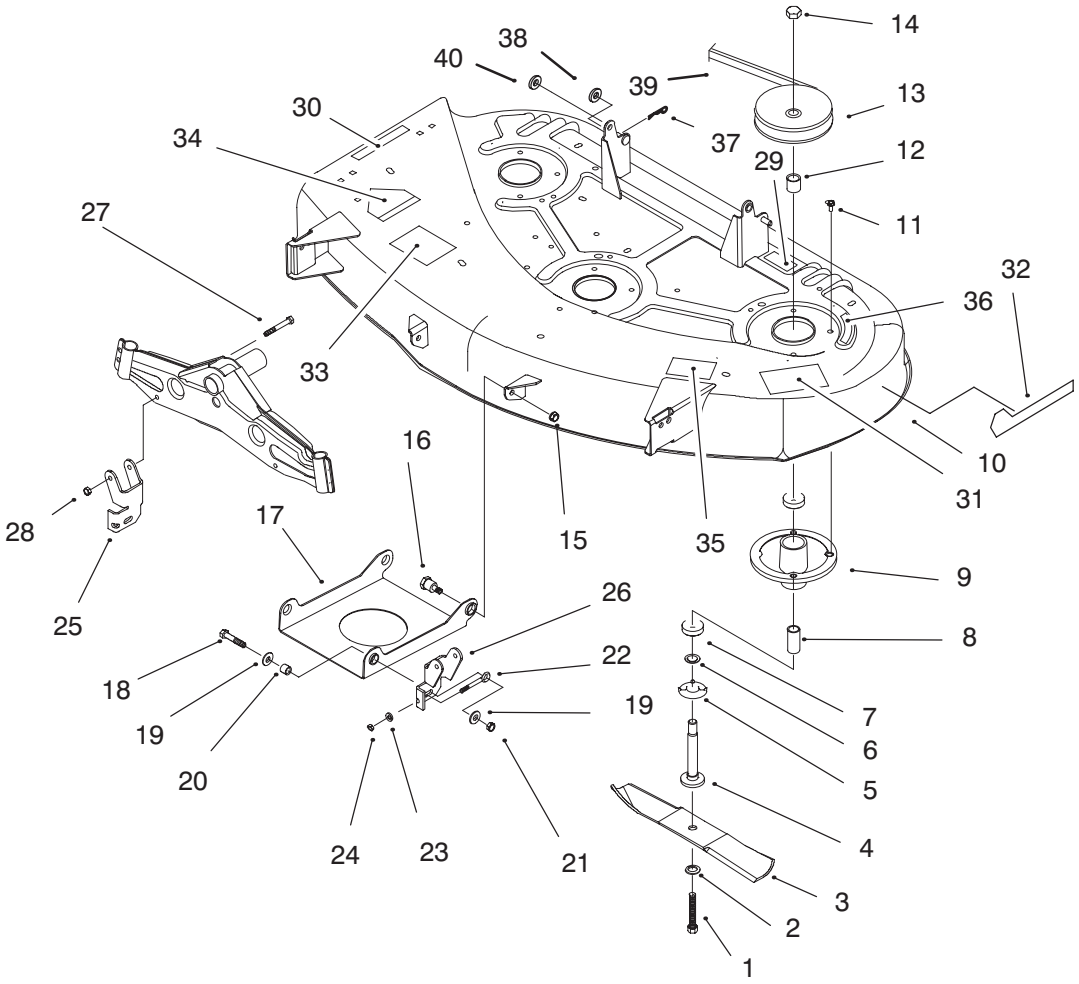


C–2297A

DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
29	55–4300	Decal – Warning	2
30	68–3650	Decal – Danger Deflector	1
31	66–1340	Decal – Discharge	1
32	93–3776	Decal – Deck Recycler	1
33	93–3777	Decal – Belt	1
34	93–1122	Decal – Danger	1

Ref. No.	Part No.	Description	No. Used
35	93–7282	Decal – Wheel Adjustment	1
36	68–3660	Decal – Shield Danger	2
37	3290–307	Pin – Hair Cotter	4
38	80–6990	Washer – Hardened	2
39	93–3884	V–Belt	1
40	3256–24	Washer – Flat	2

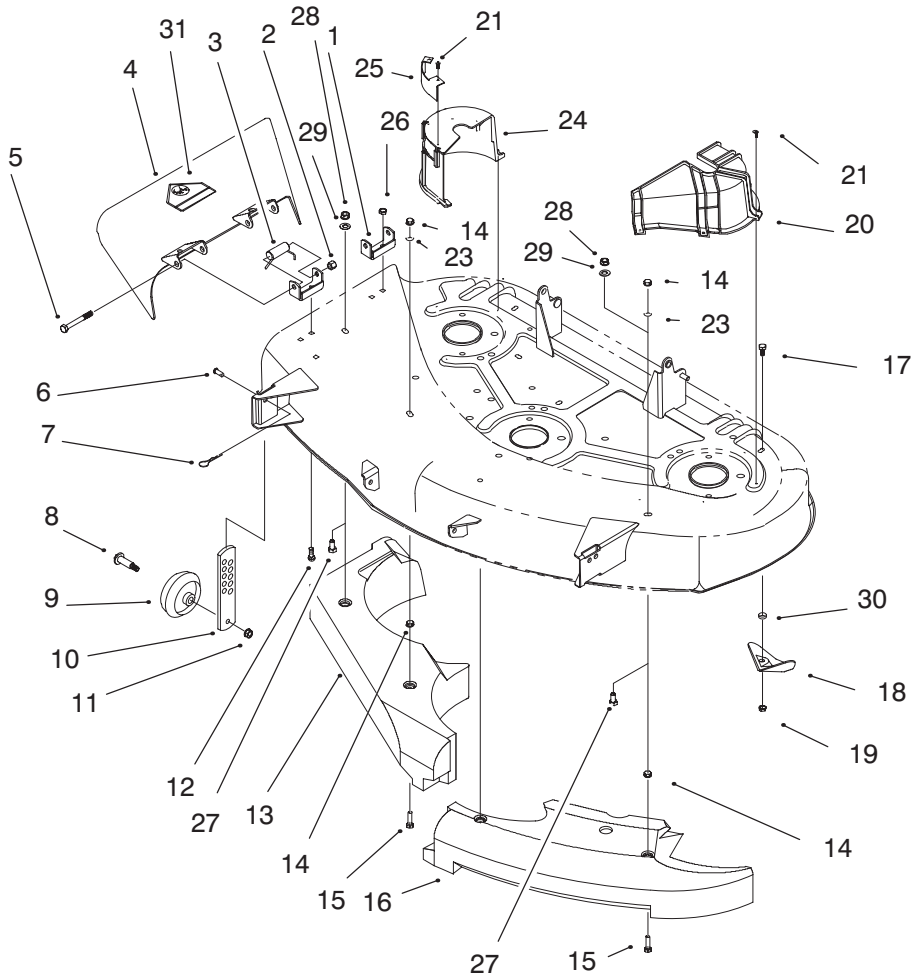


C–2298A

BELT COVER & DEFLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	29–5590	Bracket – Pivot	2
2	3296–5	Nut – Lock	2
3	40–6230	Spring – Torsion	2
4	57–6980	Deflector Assembly	1
5	3211–15	Screw – Hex Hd. Cap	2
6	283–2	Pin – Clevis	2
7	3290–307	Pin – Cotter	2
8	56–6591	Bolt – Wheel	2
9	701756	Wheel – Deck	2
10	93–8010	Plate – Gage Wheel	2
11	3296–59	Nut – Lock	2
12	3230–23	Screw – Carriage	4
13	93–7651	Baffle – R.H.	1
14	32149–1	Nut – Keps	8
15	322–6	Screw – Hex Hd. Cap	4
16	93–7652	Baffle – L.H.	1

Ref. No.	Part No.	Description	No. Used
17	3230–1	Screw – Carriage	4
18	84–5760	Plate – Kicker	4
19	3296–29	Nut – Lock	4
20	93–3866	Cover – Belt L.H.	1
21	32104–76	Screw – Self Tapping	9
23	3290–456	Washer – Lock	4
24	93–3865	Cover – Belt R.H.	1
25	93–3876	Insert – Belt Cover	1
26	3296–29	Nut – Lock	4
27	3231–21	Bolt – Carriage	2
28	3296–39	Nut – Lock	2
29	3256–5	Washer – Flat	2
30	59–4310	Spacer	4
31	43–8480	Decal – Danger	1

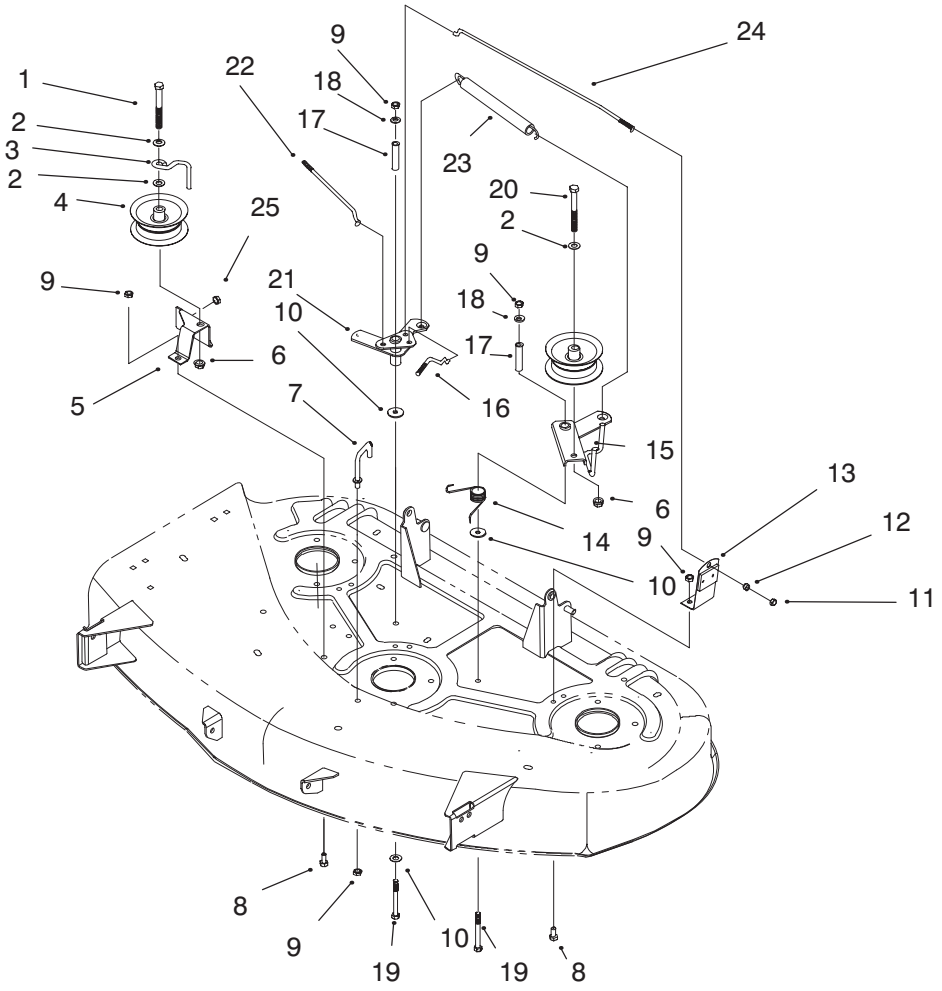

C–2299

IDLER & BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323–12	Screw – Hex Hd. Cap	1
2	3256–24	Washer – Flat	3
3	88–5070	Guide – Idler Belt	1
4	88–5630	Pulley – Idler Flat	2
5	93–3860	Bracket – Idler	1
6	3296–39	Nut – Lock	2
7	88–5960	Guide – Trans. Belt L.H.	1
8	322–3	Screw – Hex Hd. Cap	9
9	3296–29	Nut – Lock	12
10	5–4460	Washer – Fender	3
11	3296–42	Nut – Lock	3
12	67–0710	Ball – Swivel	3
13	93–3841	Brake Assembly	3

Ref. No.	Part No.	Description	No. Used
14	93–9342	Spring – Torsion	1
15	93–3848	Bellcrank	1
16	93–3852	Rod – Brake Center	1
17	93–9341	Spacer – Pivot	2
18	3256–23	Washer – Flat	2
19	322–14	Screw – Hex Hd. Cap	2
20	323–10	Screw – Hex Hd. Cap	1
21	93–3845	Bellcrank	1
22	93–3853	Rod – Brake R.H.	1
23	93–3850	Spring – Deck Engage	1
24	93–3851	Rod – Brake L.H.	1
25	3220–2	Nut – Hex Jam	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
701756	Wheel – Deck	3	9	2
5–4460	Washer – Fender	4	10	3
26–0671	Bolt – Blade	1	1	3
29–5590	Bracket – Pivot	3	1	2
38–7820	Bearing – Ball	1	7	6
40–6230	Spring – Torsion	3	3	2
43–8480	Decal – Danger	3	31	1
55–4300	Decal – Warning	2	29	2
56–6591	Bolt – Wheel	3	8	2
56–7530	Bolt – Shoulder	1	16	2
57–6980	Deflector Assembly	3	4	1
59–4310	Spacer	3	30	4
61–9980	Screw – Adjusting	1	22	2
62–3661	Spacer – Bearing	1	8	3
66–1340	Decal – Discharge	2	31	1
67–0710	Ball – Swivel	4	12	3
68–3650	Decal – Danger Deflector	2	30	1
68–3660	Decal – Shield Danger	2	36	2
80–4342	Shaft – Spindle	1	4	3
80–4360	Shield – Bearing	1	5	3
80–4380	Spacer – Hardened	1	6	3
80–6990	Washer – Hardened	1	19	4
80–6990	Washer – Hardened	2	38	2
84–5760	Plate – Kicker	3	18	4
88–4510	Spindle	1	9	3
88–5070	Guide – Idler Belt	4	3	1
88–5330	Pulley – Deck	1	13	3
88–5360	Spacer – Pulley	1	12	3
88–5630	Pulley – Idler Flat	4	4	2
88–5960	Guide – Trans. Belt L.H.	4	7	1
92–7952	Blade – Recycler	1	3	3
93–1122	Decal – Danger	2	34	1
93–3776	Decal – Deck Recycler	2	32	1
93–3777	Decal – Belt	2	33	1
93–3825	Deck Assembly	1	10	1
93–3841	Brake Assembly	4	13	3
93–3845	Bellcrank	4	21	1
93–3848	Bellcrank	4	15	1
93–3850	Spring – Deck Engage	4	23	1
93–3851	Rod – Brake L.H.	4	24	1
93–3852	Rod – Brake Center	4	16	1
93–3853	Rod – Brake R.H.	4	22	1
93–3860	Bracket – Idler	4	5	1
93–3865	Cover – Belt R.H.	3	24	1
93–3866	Cover – Belt L.H.	3	20	1
93–3876	Insert – Belt Cover	3	25	1
93–3881	Pan – Front Deck	1	17	1
93–3884	V–Belt	2	39	1
93–7282	Decal – Wheel Adjustment	2	35	1
93–7651	Baffle – R.H.	3	13	1
93–7652	Baffle – L.H.	3	16	1
93–8010	Plate – Gage Wheel	3	10	2
93–9341	Spacer – Pivot	4	17	2
93–9342	Spring – Torsion	4	14	1
93–9847	Spacer	1	20	2
93–9848	Bracket – Deck L.H.	1	26	1
93–9849	Bracket – Deck R.H.	1	25	1
283–2	Pin – Clevis	3	6	2
322–3	Screw – Hex Hd. Cap	4	8	9
322–6	Screw – Hex Hd. Cap	3	15	4
322–12	Screw – Hex Hd. Cap	1	27	2
322–14	Screw – Hex Hd. Cap	4	19	2
323–9	Screw – Hex Hd. Cap	1	18	2
323–10	Screw – Hex Hd. Cap	4	20	1
323–12	Screw – Hex Hd. Cap	4	1	1
3211–15	Screw – Hex Hd. Cap	3	5	2
3219–6	Nut – Hex	1	14	3
3220–2	Nut – Hex Jam	4	25	1
3230–1	Screw – Carriage	3	17	4
3230–23	Screw – Carriage	3	12	4
3231–21	Bolt – Carriage	3	27	2
3256–5	Washer – Flat	3	29	2
3256–22	Washer – Flat	1	23	2
3256–23	Washer – Flat	4	18	2
3256–24	Washer – Flat	4	2	3
3256–24	Washer – Flat	2	40	2
3290–307	Pin – Cotter	3	7	2
3290–307	Pin – Hair Cotter	2	37	4
3290–456	Washer – Lock	3	23	4
3290–465	Washer – Belleville	1	2	3
3296–5	Nut – Lock	3	2	2
3296–29	Nut – Lock	4	9	12
3296–29	Nut – Lock	3	19	4
3296–29	Nut – Lock	3	26	4
3296–29	Nut – Lock	1	28	2
3296–39	Nut – Hex Lock	1	21	2
3296–39	Nut – Lock	4	6	2
3296–39	Nut – Lock	1	15	2
3296–39	Nut – Lock	3	28	2
3296–42	Nut – Lock	4	11	3
3296–42	Nut – Lock	1	24	2
3296–59	Nut – Lock	3	11	2
32104–76	Screw – Self Tapping	3	21	9
32144–41	Screw – Hex Washer Hd.	1	11	12
32149–1	Nut – Keps	3	14	8

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								