FORM NO. 3318–261 REV C

LAWN-BOY®

Electric

120 Volt Mower

Model No.10101 – 6900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Deck, Liner and Wheel Assembly	1
Motor and Blade Assembly	2
Cover, Mulch Plug and Panel Assembly	3
Handle and Controls Assembly	4
Connectors and Side Discharge Chute	5

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.

. .

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

©Lawn–Boy, Inc.–1996
All Rights Reserved

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

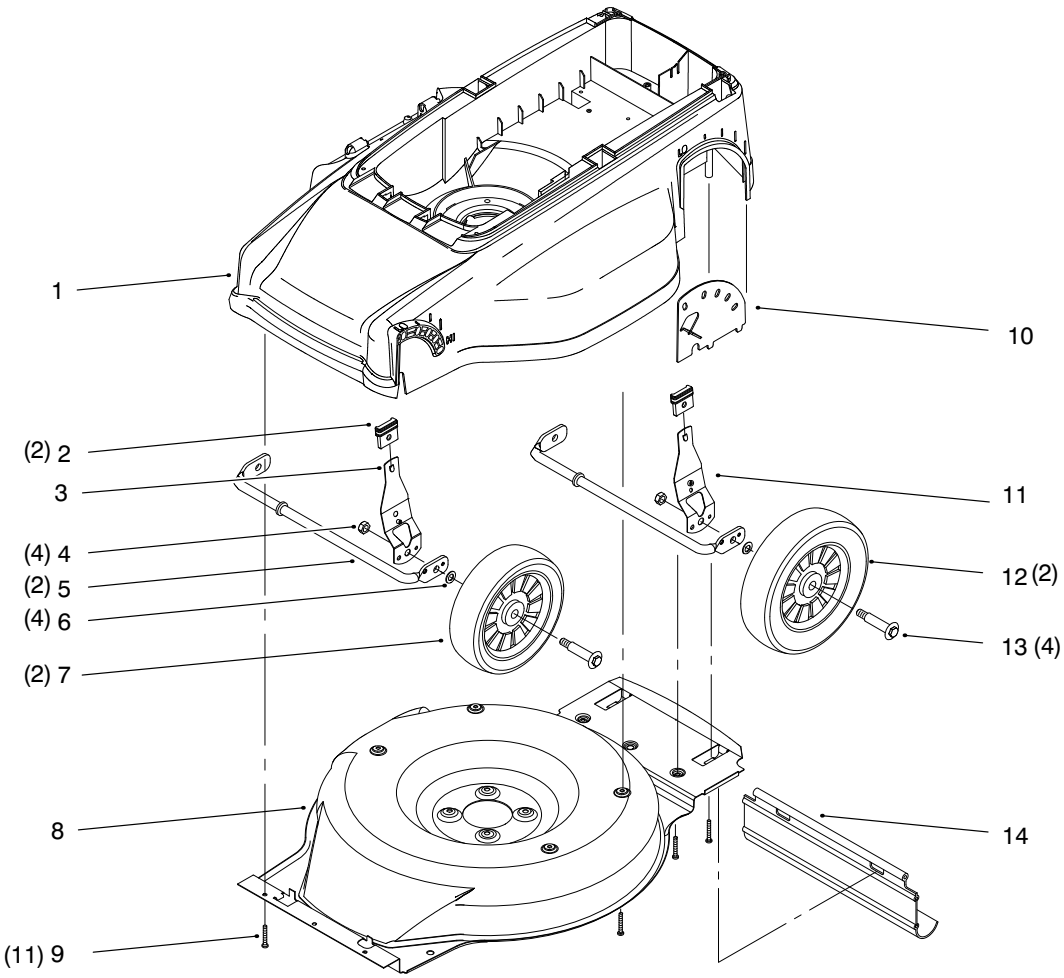


Sheet No.: 2

Deck, Liner and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	94–3896	1	Deck
2	92–1008	2	Knob–Height Adjust
3	94–3870	1	ASM–Front HOC Lever
4	610358	4	Nut–Lock
5	93–3952	2	Axle
6	40–1940	4	Washer
7	94–1199	2	ASM–Wheel
8	95–5167	1	ASM–Liner
9	93–3985	11	Screw–PPH
10	95–5037	1	Plate–HOC
11	94–3871	1	ASM–Rear HOC Lever
12	94–3850	2	ASM–Wheel
13	92–1057	4	Bolt–Shoulder
14	94–7417	1	Trailing Shield

Ref. No.	Part No.	Qty.	Description

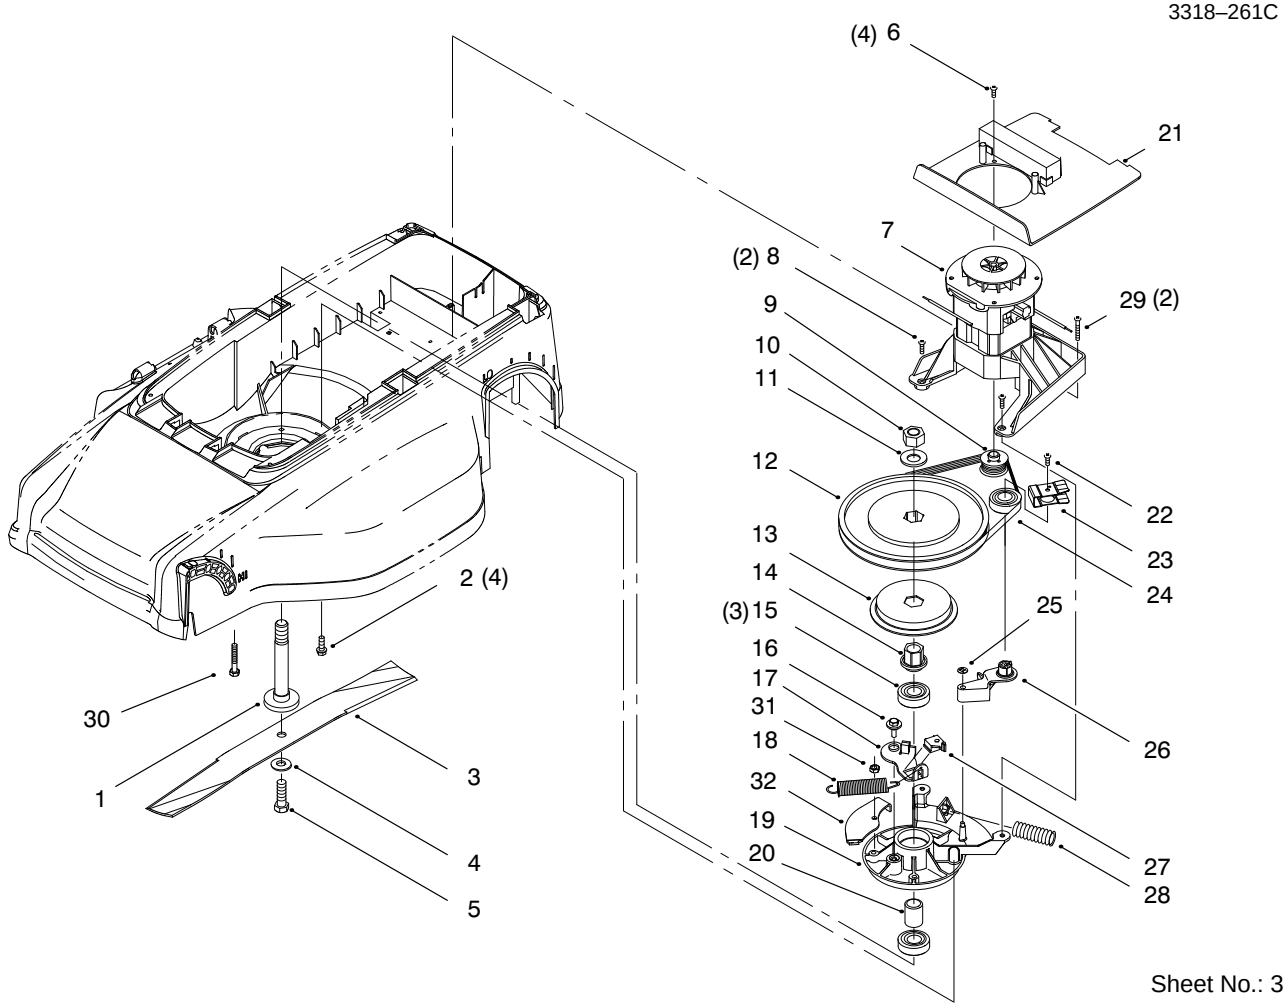


Sheet No.: 3

Motor and Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	93–3329	1	Shaft–Spindle
2	32144–44	3	Screw–HWH
3	93–3954	1	Blade
4	3290–465	1	Washer–Spring
5	26–0671	1	Bolt–Blade
6	94–4496	4	Screw–PH
7	94–6917	1	ASM–Motor 120V
8	32144–8	2	Screw–PPH
9	93–3331	1	Pulley–Motor
10	3219–6	1	Nut–Hex
11	3256–27	1	Washer–Flat
12	93–3321	1	Pulley–Driven
13	93–3328	1	Drum–Brake
14	93–3330	1	Hub–Pulley
15	61–8780	3	Bearing–Ball
16	92–9698	1	Screw–Shoulder
17	93–3991	1	ASM–Brake Lever
18	93–3995	1	Spring–Brake/Switch
19	93–3325	1	Spindle
20	93–3980	1	Spacer–Bearing
21	94–3874	1	ASM–Baffle
22	94–6961	1	Screw–PH
23	94–3866	1	Guide–Belt
24	93–3989	1	Belt
25	93–3988	1	Pushnut
26	93–3323	1	Idler

Ref. No.	Part No.	Qty.	Description
27	93–3322	1	Mount–Cable
28	61–8880	1	Spring–Compression
29	93–3985	2	Screw–PPH
30	32144–110	1	Screw–HWH
31	3296–56	1	Nut–Hex Lock
32	94–9155	1	Bracket

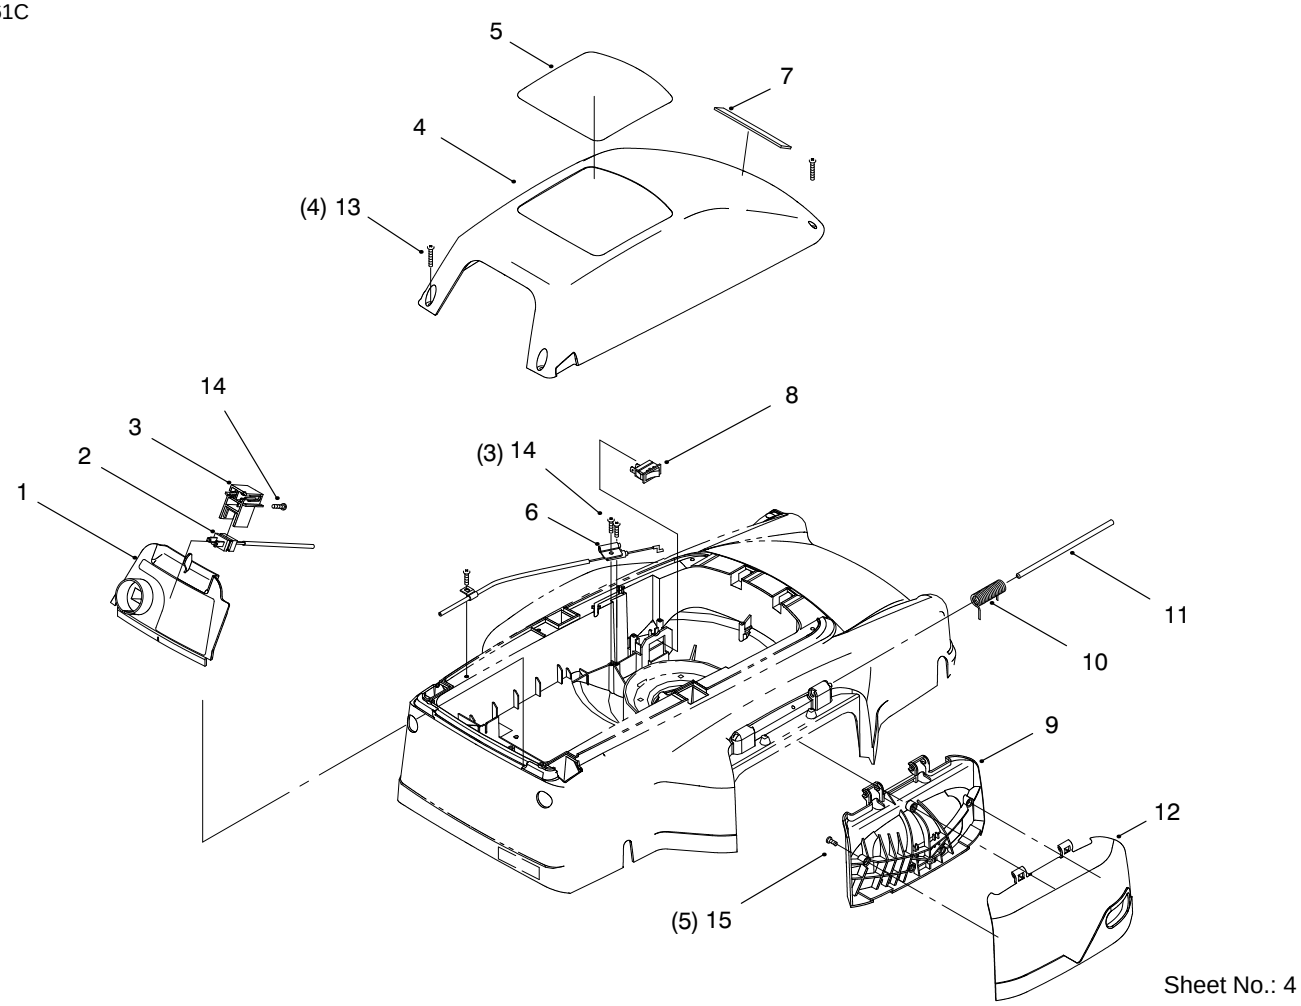


Sheet No.: 4

Cover, Mulch Plug and Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	94–3880	1	ASM–Panel
2	93–3979	1	Wire Harness
3	93–3344	1	Housing–Plug
4	94–6915	1	ASM–Cover
5	98–4412	1	Decal–Cover
6	93–3975	1	Bracket–Cable
7	92–8615	1	Applique–Shroud
8	94–3886	1	Switch
9	94–1163	1	Mulch Plug–Inside
10	94–3865	1	Spring–Torsion
11	93–3990	1	Pin–Hinge
12	94–1164	1	Mulch Plug–Outside
13	93–3986	4	Screw–PPH
14	94–4496	4	Screw–PH
15	94–6961	5	Screw–PH

Ref. No.	Part No.	Qty.	Description

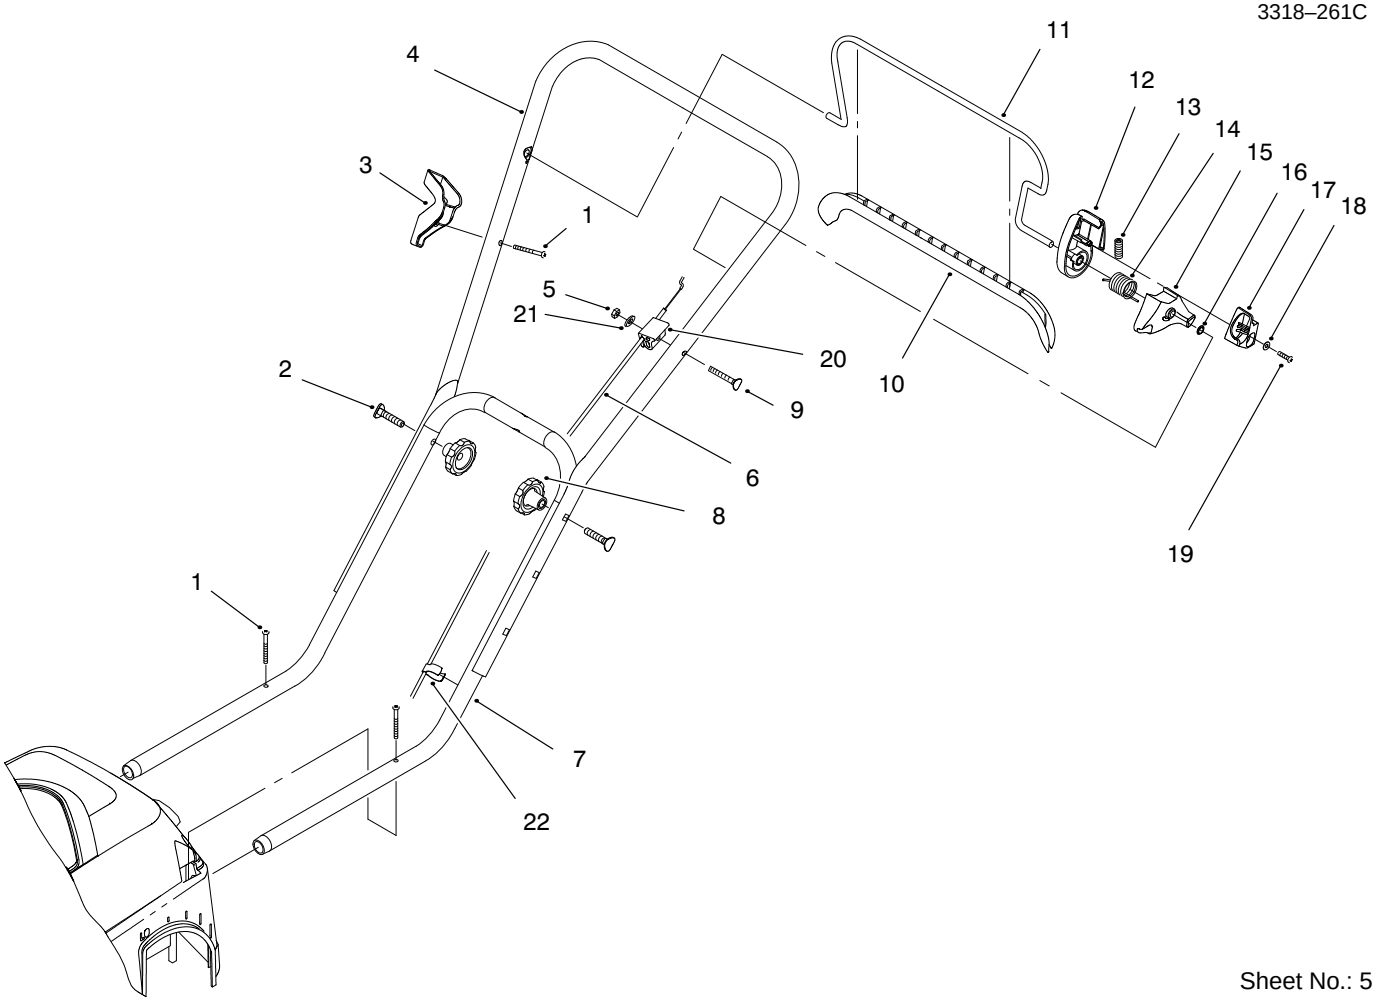


Sheet No.: 5


Handle and Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	93–3986	3	Screw–PPH
2	92–2260	2	Screw–Handle
3	93–3996	1	Lock–Cord
4	93–3971	1	Handle–Upper
5	3296–8	1	Nut–Lock
6	93–3978	1	Cable–Control
7	93–3972	1	Handle–Lower
8	19–4050	2	Knob
9	92–2269	1	Screw–Handle
10	93–3965	1	Cover–Bail
11	93–3977	1	Bail
12	93–3969	1	Housing–Bail
13	94–3851	1	Spring–Slide
14	94–1154	1	Spring–Bail
15	93–3967	1	Cam
16	94–1191	1	Nut–Push
17	93–3968	1	Slide
18	94–3868	1	Washer–Flat
19	94–4496	1	Screw–PH
20	94–7407	1	Support–Cable
21	3256–2	1	Washer–Flat
22	94–7409	1	Clip–Cable
*	17–3239	1	Loose Part Kit

Ref. No.	Part No.	Qty.	Description

* Not Illustrated

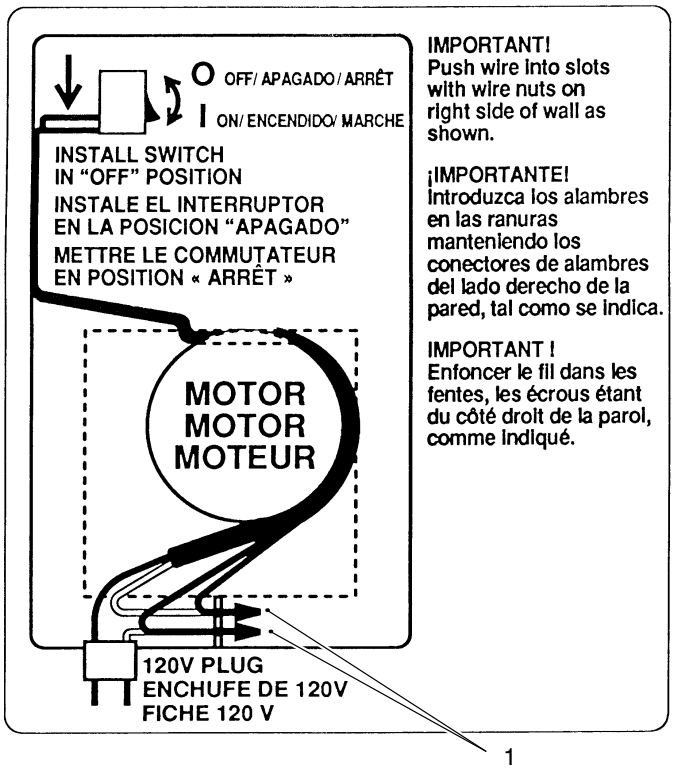

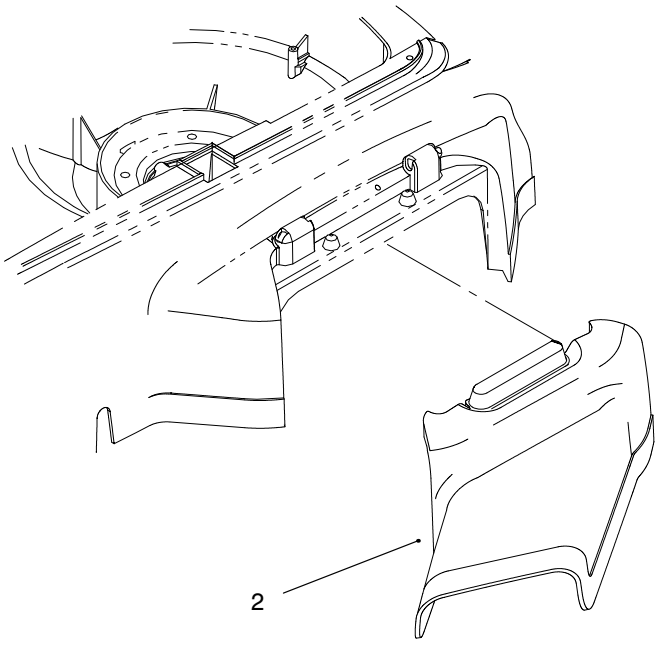

Sheet No.: 6

Connectors and Side Discharge Chute

Ref. No.	Part No.	Qty.	Description
1	73–6570	2	Connector–Wire Nut
2	93–3963	1	Chute–Side Discharge

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
610358	1	4	4	Nut−Lock
17−3239	4	*	1	Loose Part Kit
19−4050	4	8	2	Knob
26−0671	2	5	1	Bolt−Blade
40−1940	2	4	4	Washer
61−8780	2	15	3	Bearing−Ball
61−8880	2	28	1	Spring−Compression
73−6570	5	1	2	Connector−Wire Nut
92−1008	1	2	2	Knob−Height Adjust
92−1057	1	13	4	Bolt−Shoulder
92−2260	4	2	2	Screw−Handle
92−2269	4	9	1	Screw−Handle
92−8615	3	7	1	Applique−Shroud
92−9698	2	16	1	Screw−Shoulder
93−3321	2	12	1	Pulley−Driven
93−3322	2	27	1	Mount−Cable
93−3323	2	26	1	Idler
93−3325	2	19	1	Spindle
93−3328	2	13	1	Drum−Brake
93−3329	2	1	1	Shaft−Spindle
93−3330	2	14	1	Hub−Pulley
93−3331	2	9	1	Pulley−Motor
93−3344	3	3	1	Housing−Plug
93−3952	1	5	2	Axle
93−3954	2	3	1	Blade
93−3963	5	3	1	Chute−Side Discharge
93−3965	4	10	1	Cover−Bail
93−3967	4	15	1	Cam
93−3968	4	17	1	Slide
93−3969	4	12	1	Housing−Bail
93−3971	4	4	1	Handle−Upper
93−3972	4	7	1	Handle−Lower
93−3975	3	6	1	Bracket−Cable
93−3977	4	11	1	Bail
93−3978	4	6	1	Cable−Control
93−3979	3	2	1	Wire Harness
93−3980	2	20	1	Spacer−Bearing
93−3985	1	9	11	Screw−PPH
93−3985	2	29	2	Screw−PPH
93−3986	3	13	4	Screw−PPH
93−3986	4	1	3	Screw−PPH
93−3988	2	25	1	Pushnut
93−3989	2	24	1	Belt
93−3990	3	11	1	Pin−Hinge
93−3991	2	17	1	ASM−Brake Lever
93−3995	2	18	1	Spring−Brake/Switch
93−3996	4	3	1	Lock−Cord
94−1154	4	14	1	Spring−Bail
94−1163	3	9	1	Mulch Plug−Inside
94−1164	3	12	1	Mulch Plug−Outside
94−1191	4	16	1	Nut−Push
94−1199	1	7	2	ASM−Wheel
94−3850	1	12	2	ASM−Wheel
94−3851	4	13	1	Spring−Slide
94−3854	3	5	1	Decal−Cover
94−3865	3	10	1	Spring−Torsion
94−3866	2	23	1	Guide−Belt
94−3868	4	18	1	Washer−Flat
94−3870	1	3	1	ASM−Front HOC Lever
94−3871	1	11	1	ASM−Rear HOC Lever
94−3874	2	21	1	ASM−Baffle
94−3880	3	1	1	ASM−Panel

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94−3886	3	8	1	Switch
94−3896	1	1	1	Deck
94−4496	2	6	4	Screw−PH
94−4496	3	14	4	Screw−PH
94−4496	4	19	1	Screw−PH
94−6915	3	4	1	ASM−Cover
94−6917	2	7	1	ASM−Motor
94−6961	2	22	1	Screw−PH
94−6961	3	15	5	Screw−PH
94−7407	4	20	1	Support−Cable
94−7409	4	22	1	Clip−Cable
94−7417	1	14	1	Trailing Shield
94−9155	2	32	1	Bracket
95−5037	1	10	1	Plate−HOC
95−5167	1	8	1	ASM−Liner
3219−6	2	10	1	Nut−Hex
3256−2	4	21	1	Washer−Flat
3256−27	2	11	1	Washer−Flat
3290−465	2	4	1	Washer−Spring
3296−56	2	31	1	Nut−Hex Lock
3296−8	4	5	1	Nut−Lock
32144−110	2	30	1	Screw−HWH
32144−44	1	6	3	Washer
32144−8	2	8	2	Screw−PPH

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

MAINTENANCE RECORD

Date								