FORM NO. 3318–262 Rev.A

LAWN-BOY®

Trademark

24 Volt Electric WPM

Model No.10120 – 6900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Deck, Liner and Wheel Assembly	1
Motor, Batteries and Blade Assembly	2
Cover, Mulch Plug and Panel Assembly	3
Handle and Controls Assembly	4
Wire Diagram and Side Discharge Chute	5

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

©Lawn–Boy, Inc.–1995
All Rights Reserved

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y)*. *X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

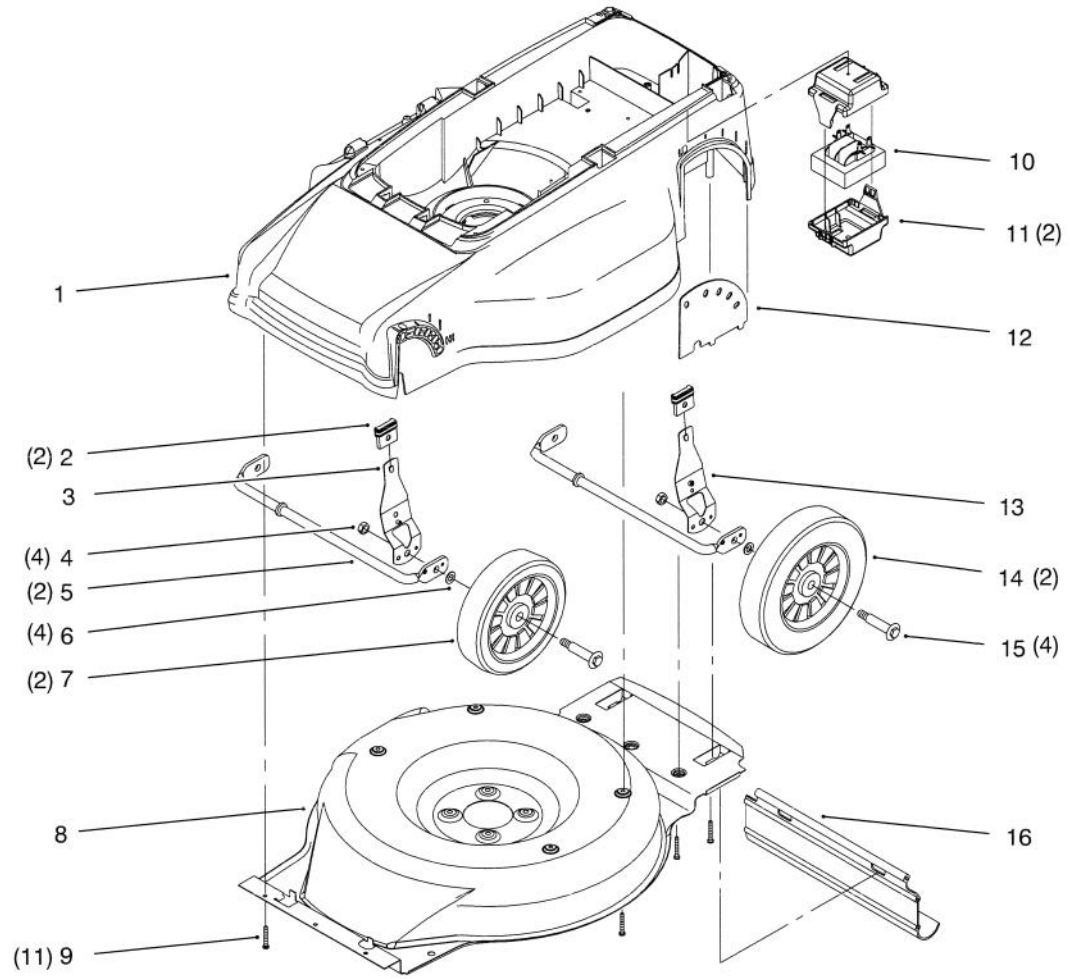


Sheet No.: 2

Deck, Liner and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	94–3896	1	Deck
2	92–1008	2	Knob–Height Adjust
3	94–3870	1	ASM–Front HOC Lever
4	610358	4	Nut–Lock
5	93–3952	2	Axle
6	40–1940	4	Washer
7	94–1199	2	ASM–Wheel
8	94–3897	1	ASM–Liner
9	93–3985	11	Screw–PPH
10	93–3332	1	Transformer
11	93–3343	2	Housing–Transformer
12	93–3955	1	Plate–HOC
13	94–3871	1	ASM–Rear HOC Lever
14	94–3850	2	ASM–Wheel
15	92–1057	4	Bolt–Shoulder
16	93–3976	1	Trailing Shield

Ref. No.	Part No.	Qty.	Description

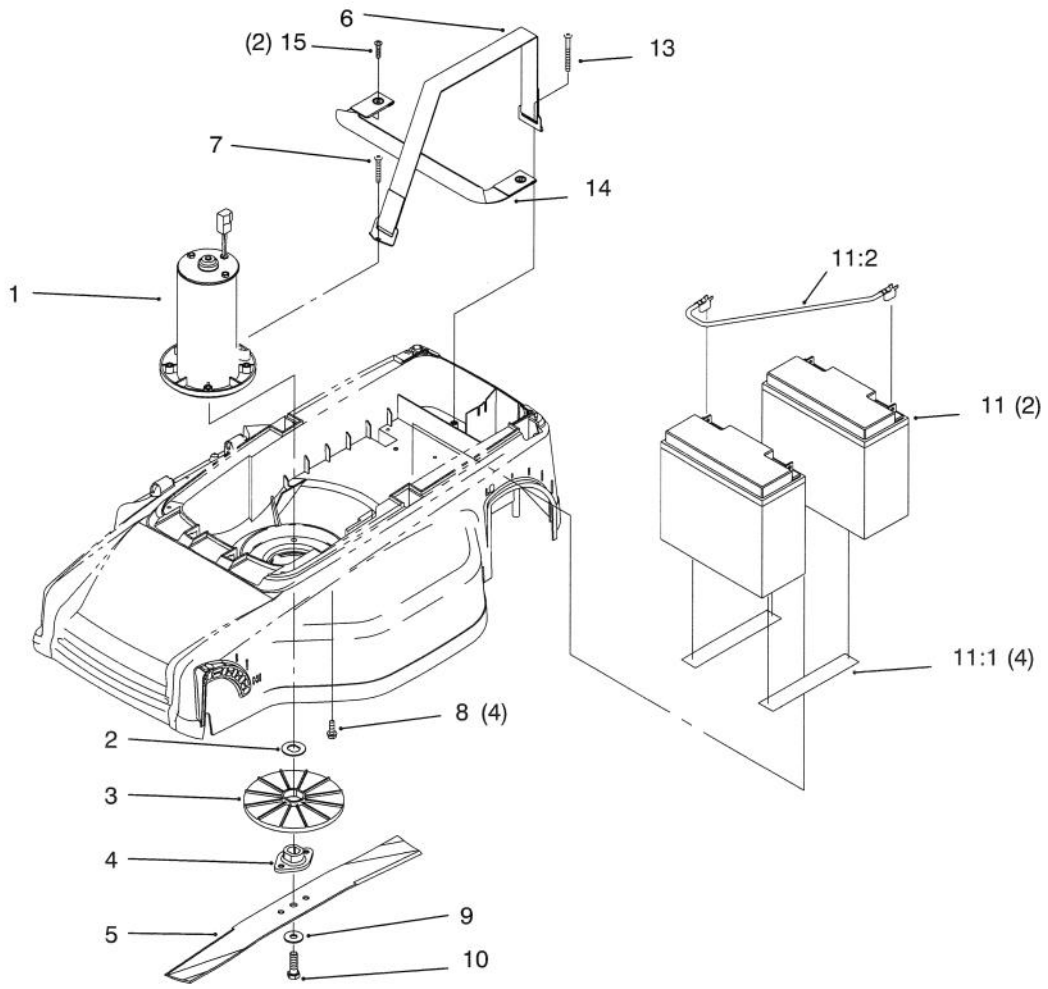


Sheet No.: 3

Motor, Batteries and Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	94–6918	1	ASM–Motor 24V
2	93–3342	1	Washer
3	93–3340	1	Fan
4	93–3341	1	Bushing
5	93–3953	1	Blade
6	94–1180	1	ASM–Strap
7	32144–8	1	Screw–PPH
8	49–2040	4	Screw–HWH
9	3290–340	1	Washer–Spring
10	93–3987	1	Bolt–Blade
*11	94–3887	1	Battery Set
11:1	94–1197	2	Tape–Foam
11:2	93–3958	1	ASM–Wire Battery
13	93–3986	1	Screw–PPH
14	94–7340	1	Strap–Battery 24v
15	94–4496	2	Screw

Ref. No.	Part No.	Qty.	Description

*Battery sold as set only

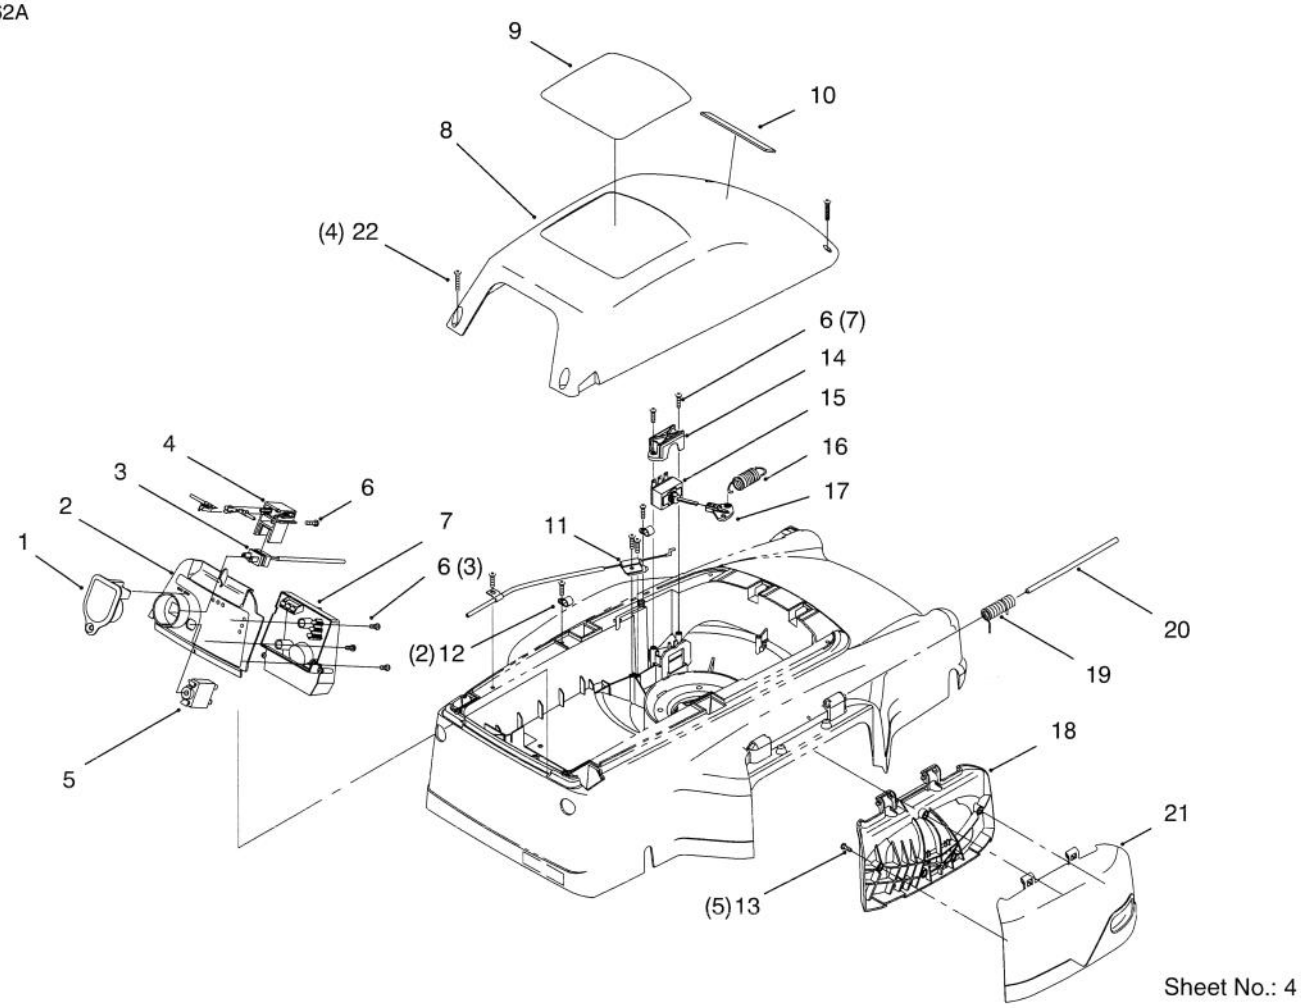


Sheet No.: 4

Cover, Mulch Plug and Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	93–3950	1	Key
2	94–3881	1	ASM–Panel
3	93–3981	1	ASM–Plug
4	93–3344	1	Housing–Plug
5	93–3982	1	Circuit Breaker
6	94–4496	11	Screw–PH
7	94–6920	1	ASM–Charger
8	94–6916	1	ASM–Cover
9	94–3857	1	Decal–Cover
10	92–8615	1	Applique–Shroud
11	93–3975	1	Bracket–Cable
12	94–1194	2	Clamp–Cable
13	94–6961	5	Screw–PH
14	93–3345	1	Clamp–Switch
15	93–3970	1	Switch–Toggle
16	93–3999	1	Spring–Switch
17	93–3346	1	Cover–Lever
18	94–1163	1	Mulch Plug–Inside
19	93–3994	1	Spring–Torsion
20	93–3990	1	Pin–Hinge
21	94–1164	1	Mulch Plug–Outside
22	93–3986	4	Screw–PPH

Ref. No.	Part No.	Qty.	Description

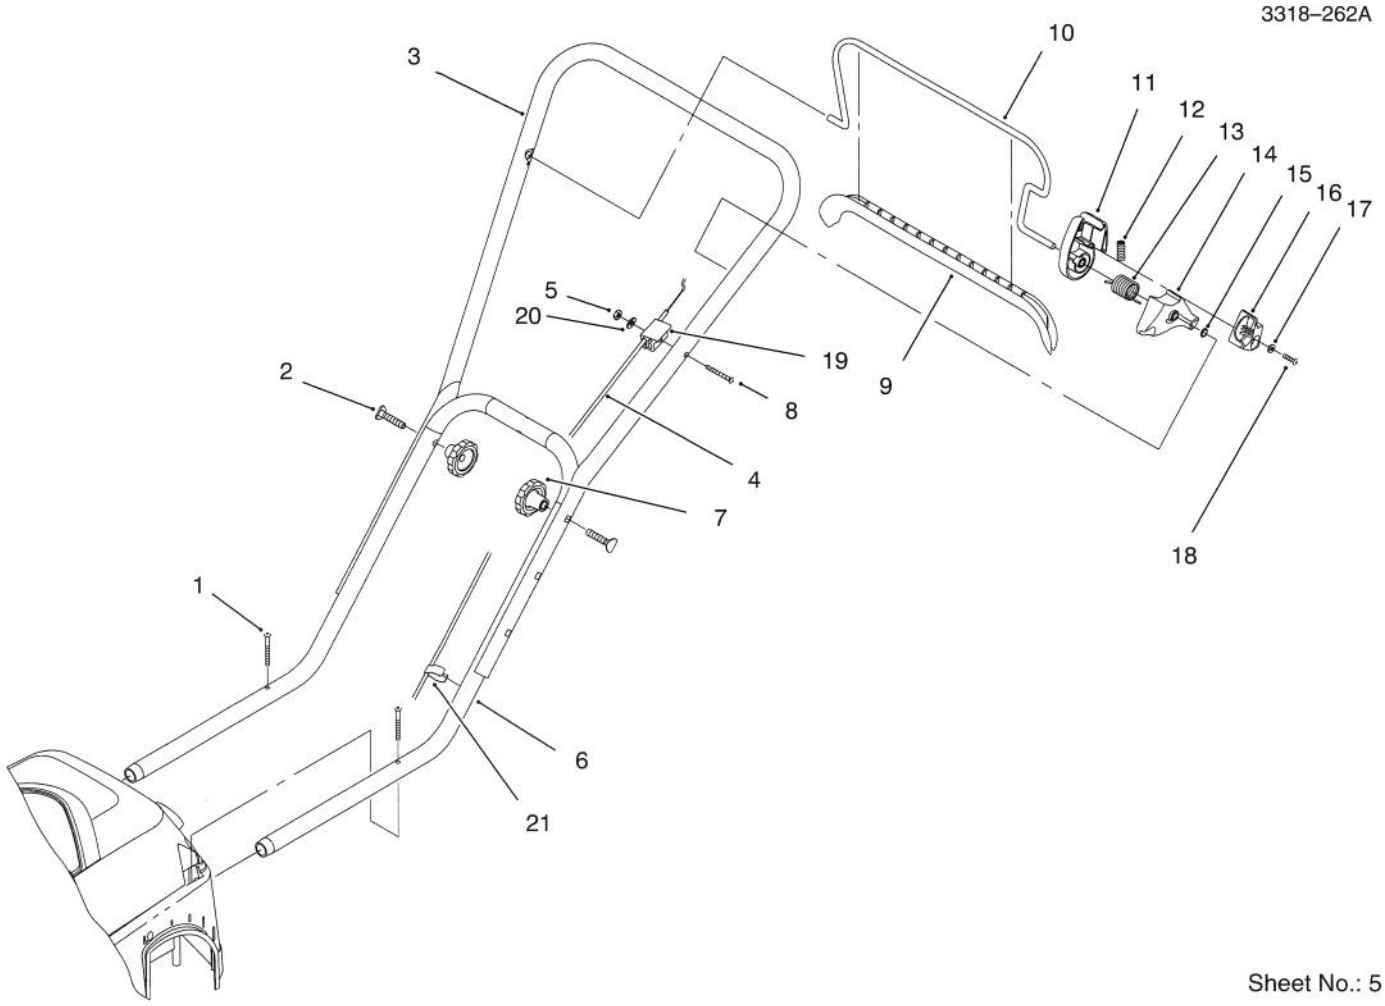


Sheet No.: 5

Handle and Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	93–3986	2	Screw–PPH
2	92–2260	2	Screw–Handle
3	93–3971	1	Handle–Upper
4	93–3978	1	Cable–Control
5	3296–8	1	Nut–Lock
6	93–3972	1	Handle–Lower
7	19–4050	2	Knob
8	321–48	1	Screw–HH
9	93–3965	1	Cover–Bail
10	93–3977	1	Bail
11	93–3969	1	Housing–Bail
12	94–3851	1	Spring–Slide
13	94–1154	1	Spring–Bail
14	93–3967	1	Cam
15	94–1191	1	Nut–Push
16	93–3968	1	Slide
17	94–3868	1	Washer–Flat
18	94–4496	1	Screw–PH
19	94–7407	1	Support–Cable
20	3256–2	1	Washer–Flat
21	94–7409	1	Clip–Cable
*	17–3249	1	Loose Part Kit

Ref. No.	Part No.	Qty.	Description

*Not Illustrated

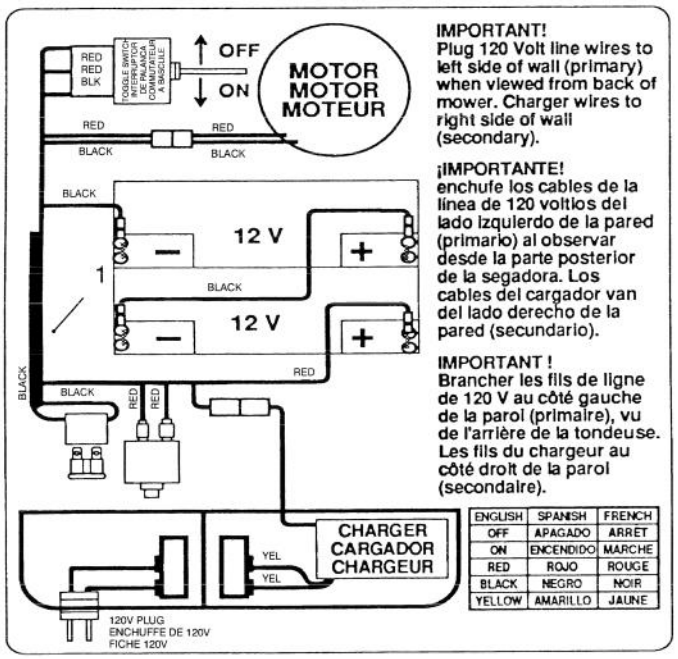


IMPORTANT!
Plug 120 Volt line wires to left side of wall (primary) when viewed from back of mower. Charger wires to right side of wall (secondary).

¡IMPORTANTE!
enchufe los cables de la línea de 120 voltios del lado izquierdo de la pared (primario) al observar desde la parte posterior de la segadora. Los cables del cargador van del lado derecho de la pared (secundario).

IMPORTANT !
Brancher les fils de ligne de 120 V au côté gauche de la paroi (primaire), vu de l'arrière de la tondeuse. Les fils du chargeur au côté droit de la paroi (secondaire).

ENGLISH	SPANISH	FRENCH
OFF	APAGADO	ARRÊT
ON	ENCENDIDO	MARCHE
RED	ROJO	ROUGE
BLACK	NEGRO	NOIR
YELLOW	AMARILLO	JAUNE

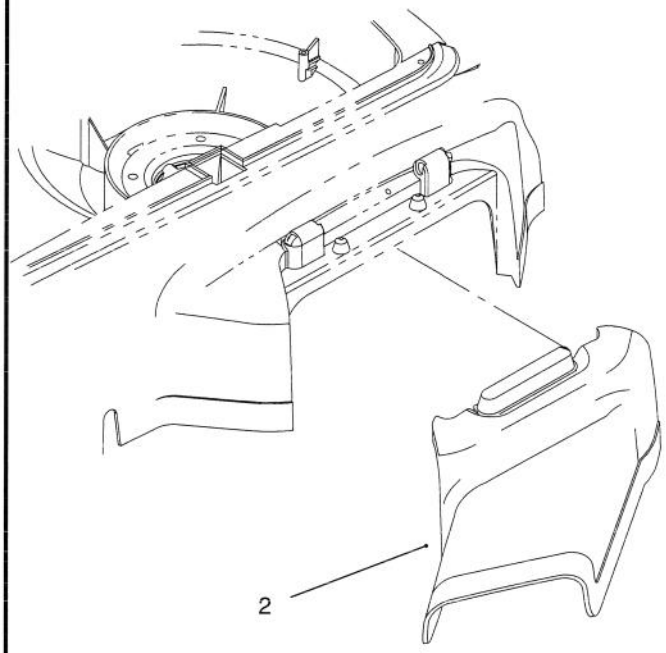

Sheet No.: 6

Wire Diagram and Side Discharge Chute

Ref. No.	Part No.	Qty.	Description
1	94–1195	1	Harness–Wire
2	93–3963	1	Chute–Side Discharge

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
610358	1	4	4	Nut–Lock
17–3249	4	*	1	Loose Part Kit
19–4050	4	7	2	Knob
40–1940	1	6	4	Washer
49–2040	2	8	4	Screw–HWH
92–1008	1	2	2	Knob–Height Adjust
92–1057	1	15	4	Bolt–Shoulder
92–2260	4	2	2	Screw–Handle
92–8615	3	10	1	Applique–Shroud
93–3332	1	10	1	Transformer
93–3340	2	3	1	Fan
93–3341	2	4	1	Bushing
93–3342	2	2	1	Washer
93–3343	1	11	2	Housing–Transformer
93–3344	3	4	1	Housing–Plug
93–3345	3	14	1	Clamp–Switch
93–3346	3	17	1	Cover–Lever
93–3950	3	1	1	Key
93–3952	1	5	2	Axle
93–3953	2	5	1	Blade
93–3955	1	12	1	Plate–HOC
93–3958	5	1	1	ASM–Battery Wire
93–3963	5	3	1	Chute–Side Discharge
93–3965	4	9	1	Cover–Bail
93–3967	4	14	1	Cam
93–3968	4	16	1	Slide
93–3969	4	11	1	Housing–Bail
93–3970	3	15	1	Switch–Toggle
93–3971	4	3	1	Handle–Upper
93–3972	4	6	1	Handle–Lower
93–3975	3	11	1	Bracket–Cable
93–3976	1	16	1	Trailing Shield
93–3977	4	10	1	Bail
93–3978	4	4	1	Cable–Control
93–3981	3	3	1	ASM–Plug
93–3982	3	5	1	Circuit Breaker
93–3985	1	9	11	Screw–PPH
93–3986	2	13	1	Screw–PPH
93–3986	3	22	4	Screw–PPH
93–3986	4	1	2	Screw–PPH
93–3987	2	10	1	Bolt–Blade
93–3990	3	20	1	Pin–Hinge
93–3994	3	19	1	Spring–Torsion
93–3999	3	16	1	Spring–Switch
94–1154	4	13	1	Spring–Bail
94–1163	3	18	1	Mulch Plug–Inside
94–1164	3	21	1	Mulch Plug–Outside
94–1180	2	6	1	ASM–Strap
94–1191	4	15	1	Nut–Push
94–1194	3	12	2	Clamp–Cable
94–1195	5	2	1	Harness–Wire
94–1197	2	12	3	Tape–Foam
94–1199	1	7	2	ASM–Wheel
94–3850	1	14	2	ASM–Wheel
94–3851	4	12	1	Spring–Slide
94–3857	3	9	1	Decal–Cover
94–3868	4	17	1	Washer–Flat
94–3870	1	3	1	ASM–Rear HOC Lever
94–3871	1	13	1	ASM–Front HOC Lever
94–3881	3	2	1	ASM–Panel
94–3887	2	11	2	Battery Set
94–3896	1	1	1	Deck

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94–3897	1	8	1	ASM–Liner
94–4496	2	15	2	Screw–PH
94–4496	3	6	11	Screw–PH
94–4496	4	18	1	Screw–PH
94–6916	3	8	1	ASM–Cover
94–6918	2	1	1	Motor
94–6920	3	7	1	ASM–Charger
94–6961	3	13	5	Screw–PH
94–7340	2	14	1	Strap–Battery 24v
94–7407	4	19	1	Support–Cable
94–7409	4	21	1	Clip–Cable
321–48	4	8	1	Screw–HH
3256–2	4	20	1	Washer–Flat
3290–340	2	9	1	Washer–Spring
3296–8	4	5	1	Nut–Lock
32144–8	2	7	1	Screw–PPH

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

MAINTENANCE RECORD

Date								