
FORM NO. 3318–317 REV. A

TORO®

MODEL NO. 70183–6900001–7900001 & UP

PARTS CATALOG

WHEEL HORSE®
13–32 RIDING MOWER

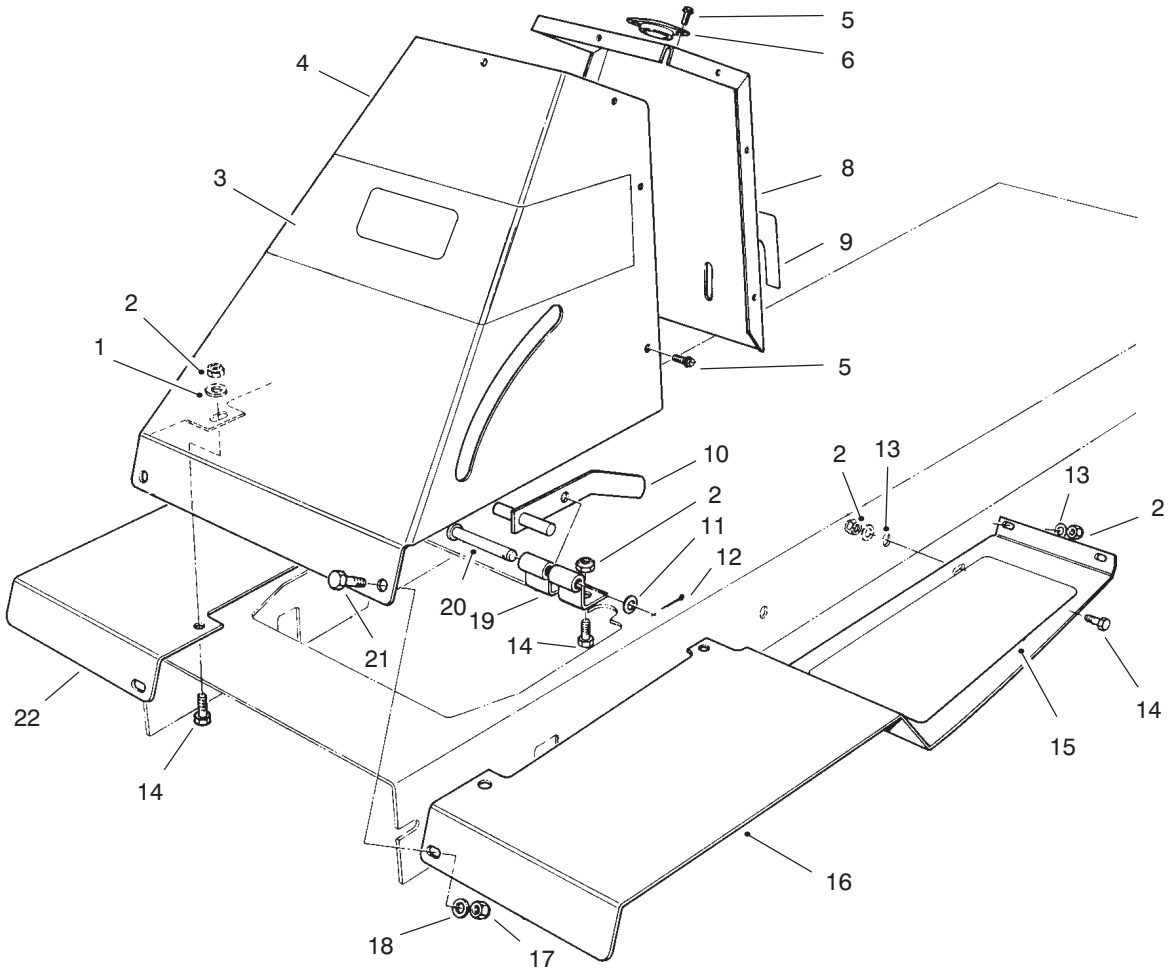

C–1933A

FRONT TOWER ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3256–35	Washer – Flat	4
2	3296–29	Nut – Lock	14
3	92–7987	Decal – Recycler	1
4	56–7130	Tower – Front	1
5	32104–76	Screw – Self Tap Acorn Hd.	9
6	56–7170	Guide – Shaft, Steering	1
8	56–7140	Tower – Rear	1
9	93–7008	Decal – Brake, Parking	1
10	47–1290	Brake – Parking	1
11	3256–24	Washer – Flat	1
12	3272–6	Pin – Cotter	1
13	3256–23	Washer – Flat	8
14	322–5	Screw – Cap Hex. Hd.	10

Ref. No.	Part No.	Description	No. Used
15	92–7975	Tread – Foot L.H.	1
*	92–7974	Tread – Foot R.H.	1
16	47–0940	Footrest – L.H.	1
17	3296–42	Nut – Lock	2
18	3256–22	Washer – Flat	2
19	47–2060	Bracket – Brake, Parking	1
20	283–52	Pin – Clevis	1
21	321–4	Screw – Cap Hex. Hd.	2
22	47–0930	Footrest – R.H.	1
*	12–8829	Loose Parts	1
*	12–8819	Loose Parts (Includes Steering Wheel)	1

*Not Illustrated

© The TORO Company –1995 REV. 1997
All Rights Reserved

TPS

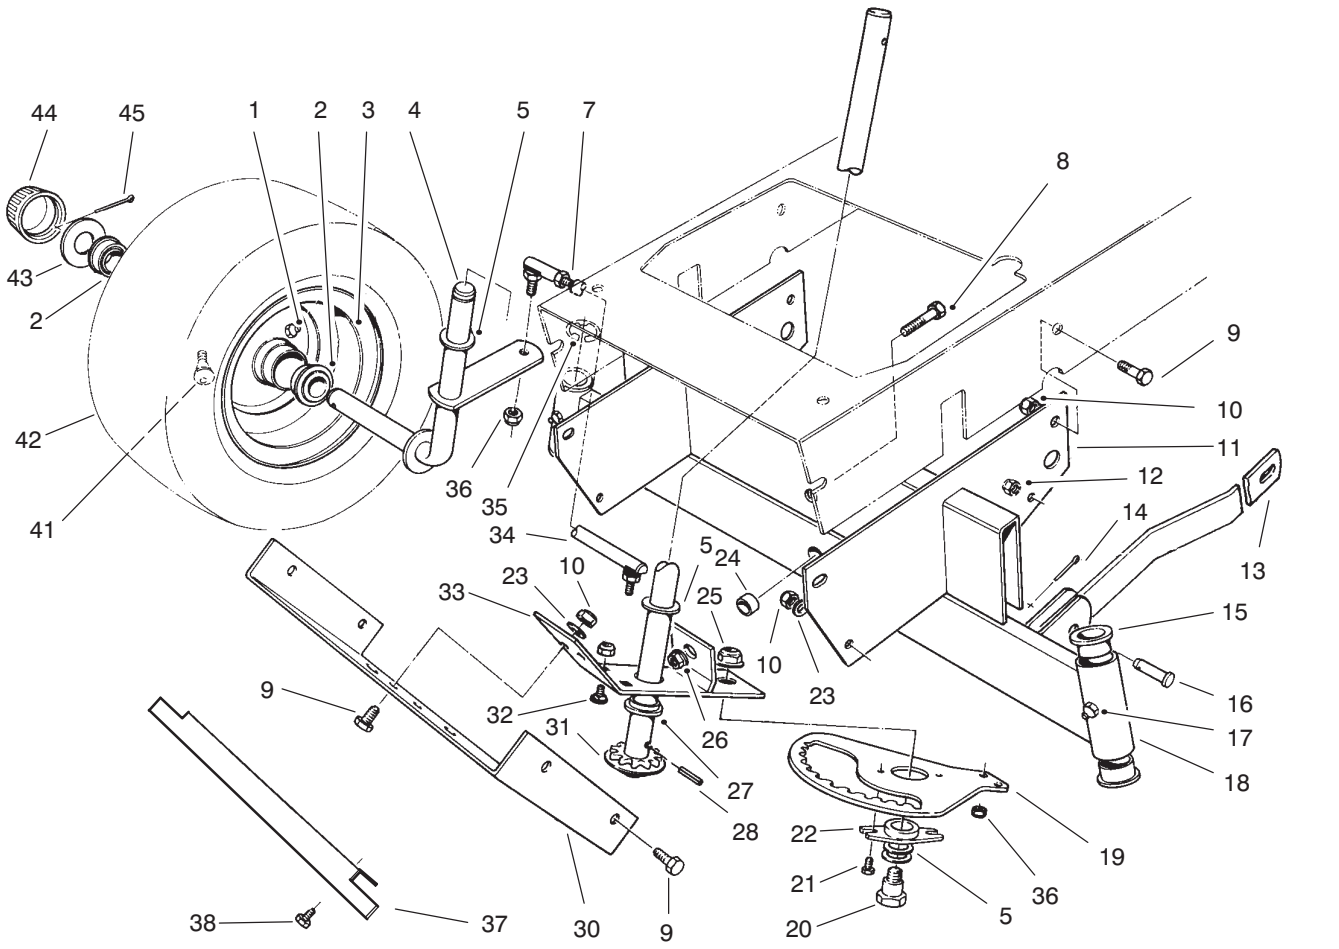


C–0438C

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302–5	Fitting – Grease	2
2	110513	Bearing	4
3	217–80	Rim	2
4	47–0600	Spindle – R.H.	1
*	47–0590	Spindle – L.H.	1
5	3–6498	Washer – Thrust	5
7	3220–2	Nut – Hex. Jam	1
8	325–6	Screw – Cap Hex. Hd.	1
9	322–5	Screw – Cap Hex. Hd.	8
10	3296–29	Nut – Lock	8
11	47–0760	Support – Axle, Front	1
12	3296–8	Nut – Lock	1
13	47–0010	Arm – Suspension, Front	2
14	3272–6	Pin – Cotter	2
15	27–9080	Bearing – Flange	4
16	283–2	Pin – Clevis	2
17	302–5	Fitting – Grease	2
18	80–2430	Axle – Front (Incl. Ref. #15 & 17)	1
19	80–2450	Rack – Steering	1
20	56–7530	Bolt – Shoulder	1
21	32144–4	Screw – Special	2
22	56–7520	Bushing – Sector	1
23	3256–23	Washer – Flat	6

Ref. No.	Part No.	Description	No. Used
24	28–0380	Spacer – Axle, Front	1
25	32128–21	Nut – Lock, Flange Hd.	1
26	32128–23	Nut – Lock, Flange Hd.	1
27	47–0700	Bearing – Flange	1
28	32121–9	Pin – Roll	1
30	56–7180	Cover – Front	1
31	56–7500	Shaft – Steering	1
32	3230–18	Bolt – Carriage	2
33	56–7470	Bracket – Rack, Steering (Incl. Ref. #27)	1
34	47–0610	Tie Rod – Adjustable (Incl. Ref. #7)	1
*	80–2460	Tie Rod – Fixed	1
35	32151–48	Ring – Retaining, External	2
36	3296–4	Nut – Lock	4
37	92–0876	Guard – Front	1
38	32144–14	Screw – Thread Forming	2
41	232–27	Valve Stem w/Cap	2
42	231–116	Tire	2
43	28–2480	Washer	2
44	61–9780	Cap – Hub	2
45	3272–12	Pin – Cotter	2
†	232–44	Tube – Inner	2

*Not Illustrated
†Service Replacement Part

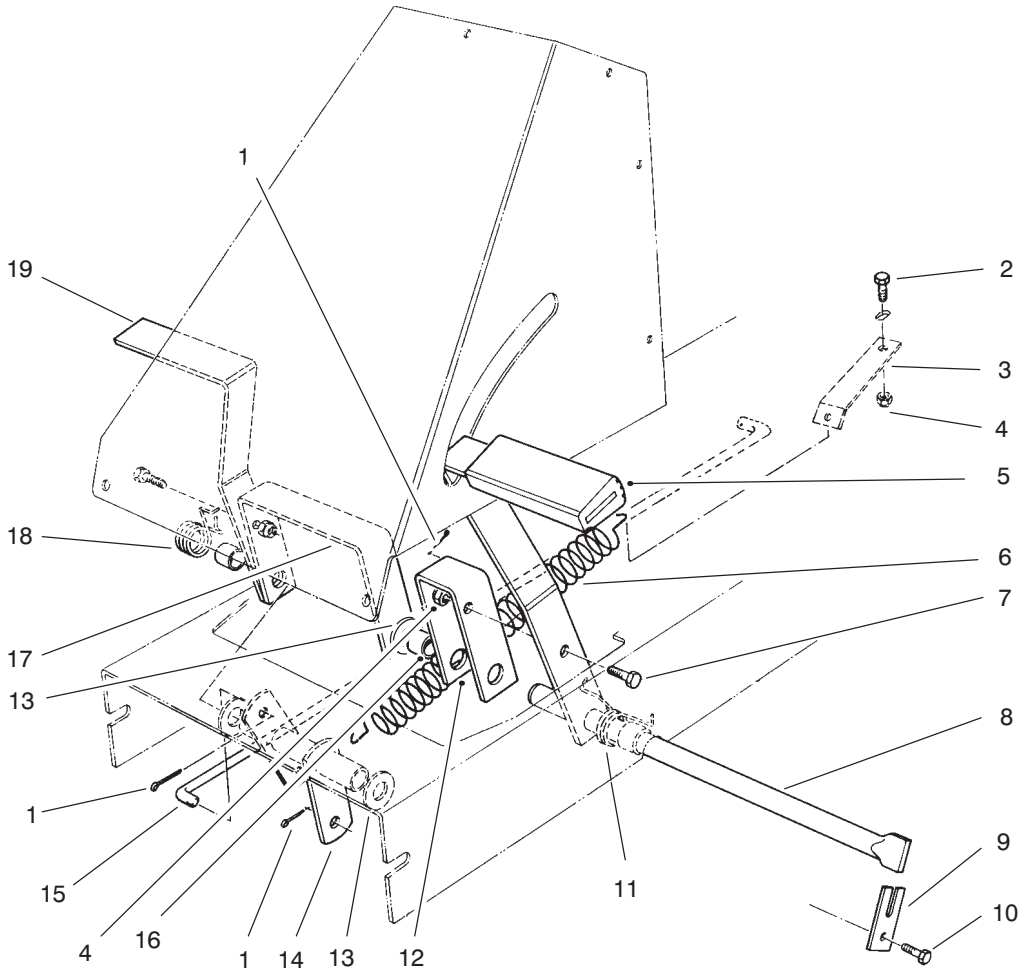


C−0439A

BRAKE & CLUTCH ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3272−6	Pin − Cotter	3
2	322−5	Screw − Cap Hex. Hd.	1
3	56−7240	Bracket − Retaining, Spring	1
4	3296−29	Nut − Lock	3
5	65−2920	Pad − Pedal, Foot	2
6	62−3930	Spring − Extension	1
7	322−5	Screw − Cap Hex. Hd.	2
8	47−0770	Shaft − Pivot, Pedal	1
9	47−0780	Retainer − Shaft	1
10	321−4	Screw − Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
11	56−7070	Spring − Torsion, Clutch	1
12	47−0560	Bracket − Clutch, Pedal	1
13	3256−27	Washer − Flat	3
14	56−7650	Tube − Pivot	1
15	56−7570	Rod − Engagement	1
16	47−0570	Spacer − Pedal	3
17	47−0550	Bracket − Brake, Pedal	1
18	56−7080	Spring − Torsion, Brake	1
19	47−0540	Pedal	2

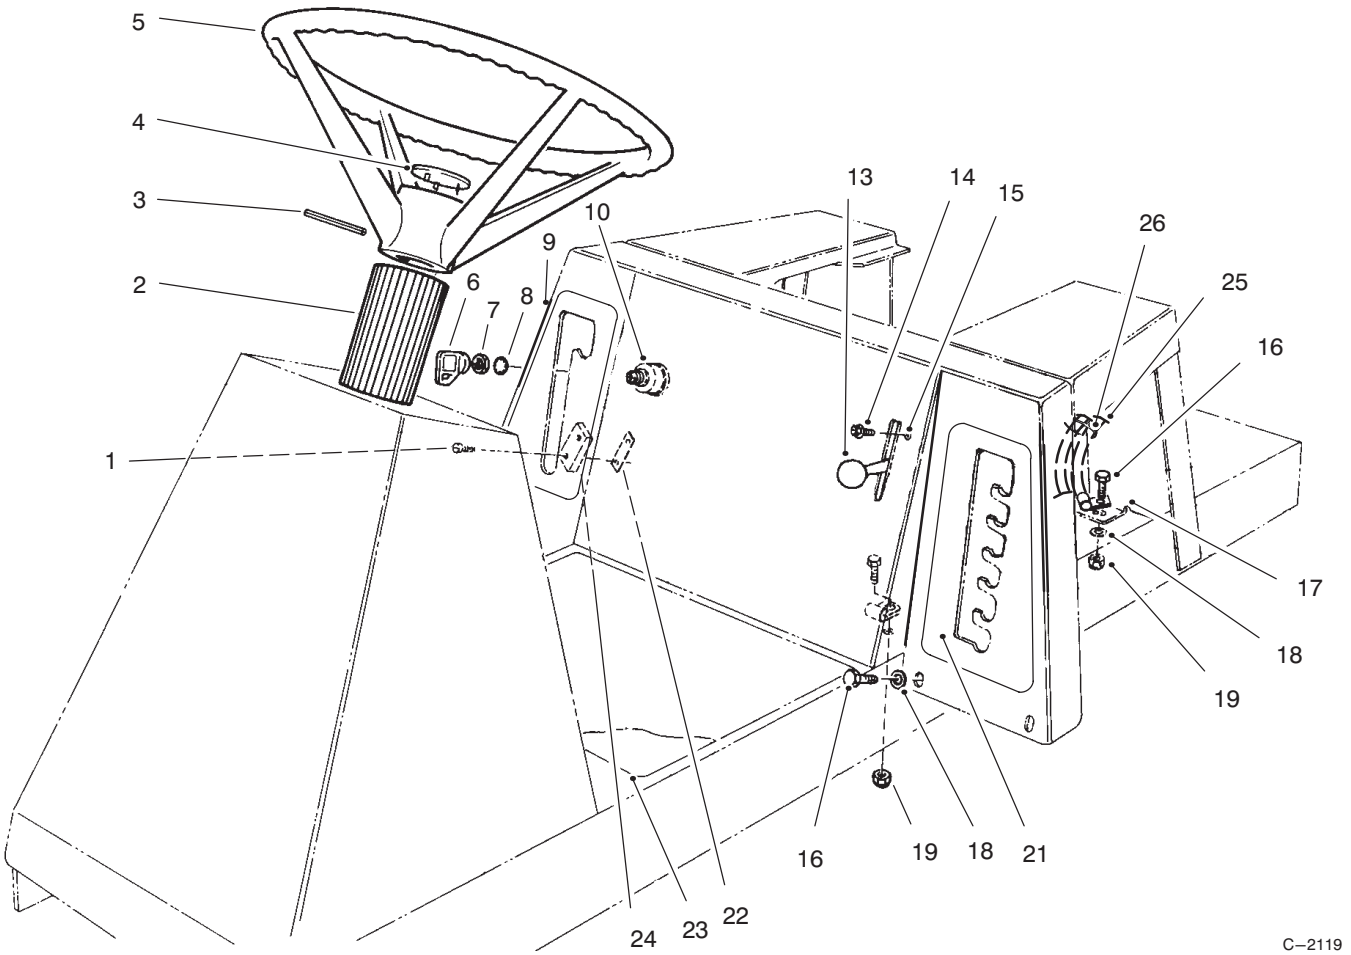

STEERING WHEEL, SWITCHES & DECALS

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Head	2
2	66–6740	Cover – Shaft, Steering	1
3	32121–78	Pin – Roll	1
4	92–7990	Insert – Wheel, Steering	1
5	49–3242	Assy. – Wheel, Steering (Incl. Ref. #4)	1
6	63–8360	Key	1
7	218–461	Nut – Lock	1
8	3254–5	Washer – Lock, Int. Tooth	1
9	92–7983	Decal – Deck Engage	1
10	88–9830	Switch – Ignition (Incl. Ref. #6–8)	1
13	233–25	Knob	1
14	32104–76	Screw – Self–Tapping	2
15	92–0890	Control – Throttle (Incl. Ref. #13)	1
16	322–5	Screw – Cap Hex. Hd.	8
17	8830	Clamp	2
18	3256–23	Washer – Flat	7
19	3296–29	Nut – Lock	4
21	92–7984	Decal – H.O.C.	1
22	3290–354	Nut – Double	1
23	93–7006	Decal – Instructions	1
24	88–9931	Switch – Micro	1
25	54–3090	Wire Assembly	1
26	3290–378	Tie – Cable	1

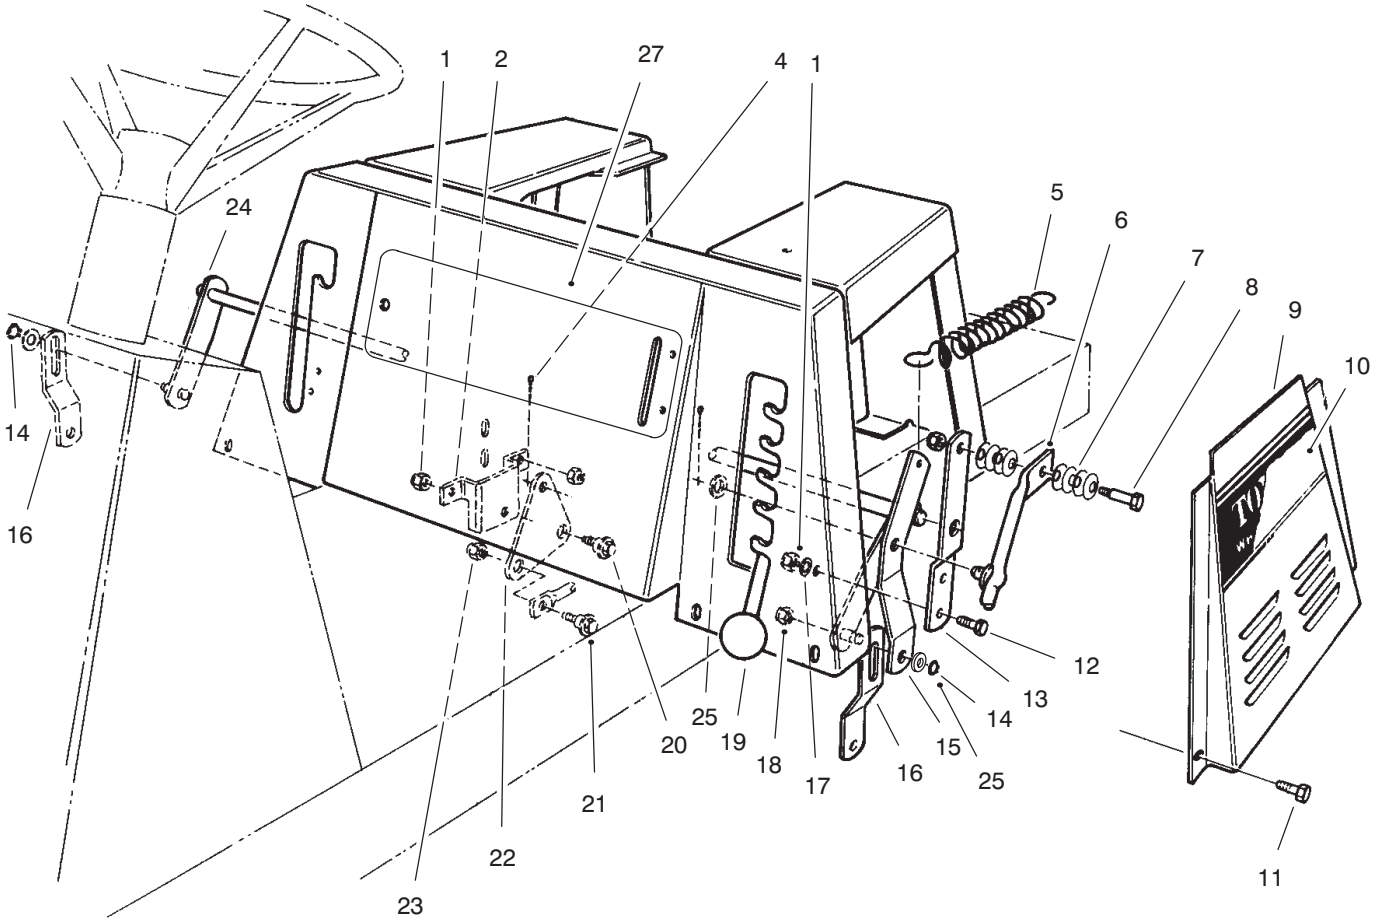


C–1935B

LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–29	Nut – Lock	7
2	80–2310	Bracket – Bell Crank Mount	1
4	3272–6	Pin – Cotter	2
5	62–3930	Spring – Extension	1
6	47–1850	Lever – Height–of–Cut	1
7	3290–413	Washer – Belleville	8
8	28–0540	Bolt – Shoulder	1
9	92–0878	Panel L.H. – Base, Seat	1
10	94–3516	Decal – L.H.	1
11	321–4	Screw – Cap Hex. Hd.	4
12	322–5	Screw – Cap Hex. Hd.	2
13	47–1840	Bracket – Height–of–Cut	1
14	32151–61	Ring – Retaining	2

Ref. No.	Part No.	Description	No. Used
15	80–2321	Bracket – H.O.C., Engage	1
16	63–5830	Link – Suspension, Deck	2
17	3256–23	Washer – Flat	4
18	3296–42	Nut – Lock	1
19	233–48	Knob	1
20	19–1470	Bolt – Shoulder	1
21	65–5670	Bolt – Shoulder	1
22	80–2360	Crank – Bell, Deck Engage	1
23	3296–8	Nut – Lock	1
24	56–7400	Arm – Lever, H.O.C.	1
25	3256–26	Washer – Flat	2
27	92–7982	Decal – Control Panel	1


3318–317 REV. A

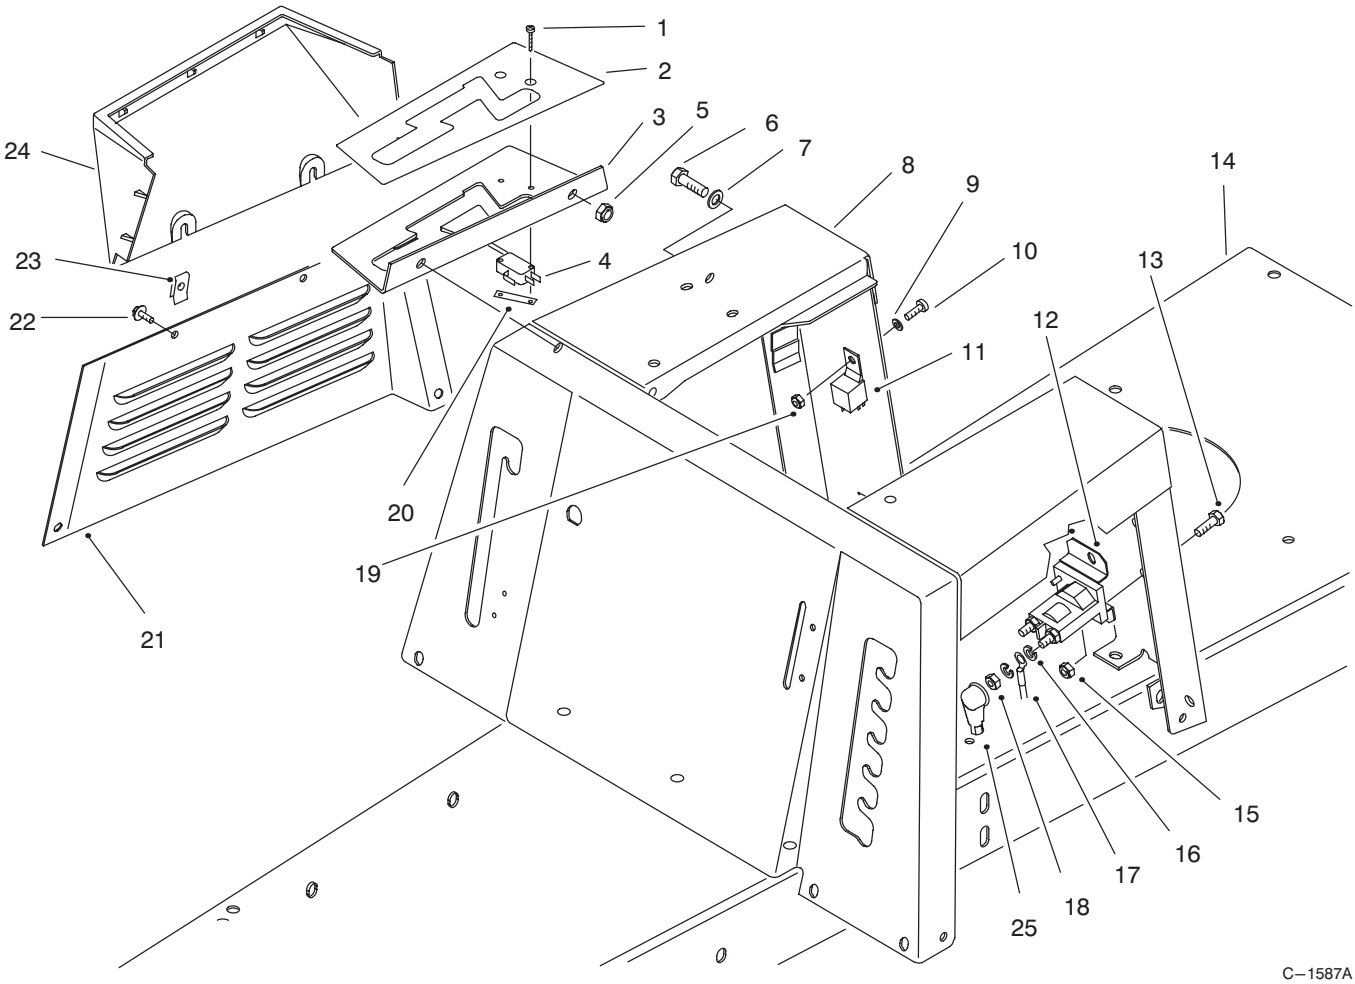

SEAT BODY & SIDE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Hd.	2
2	93–7007	Decal – Shift Pattern	1
3	92–0895	Gate – Shift	1
4	88–9930	Switch – Micro, Short	1
5	3296–29	Nut – Lock	2
6	322–5	Screw – Cap Hex. Hd.	2
7	3256–23	Washer – Flat	2
8	92–0866	Body W.A. – Seat Support	1
9	3256–14	Washer – Flat	1
10	3290–134	Screw – Machine	1
11	116397	Relay	1
12	47–1910	Solenoid	1
13	321–4	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
14	92–0860	Frame	1
15	3296–42	Nut – Lock	2
16	3253–3	Washer – Lock	2
17	56–7670	Cable – Positive	1
18	3218–1	Nut – Jam	3
19	3296–2	Nut – Lock	1
20	3290–354	Nut – Double	1
21	92–0877	Panel – Seat Base, R.H.	1
22	32144–112	Screw – Sems	2
23	3290–191	Nut – Speed	2
24	88–9800	Cover – Gate, Shift	1
25	93–3190	Boot – Terminal	1

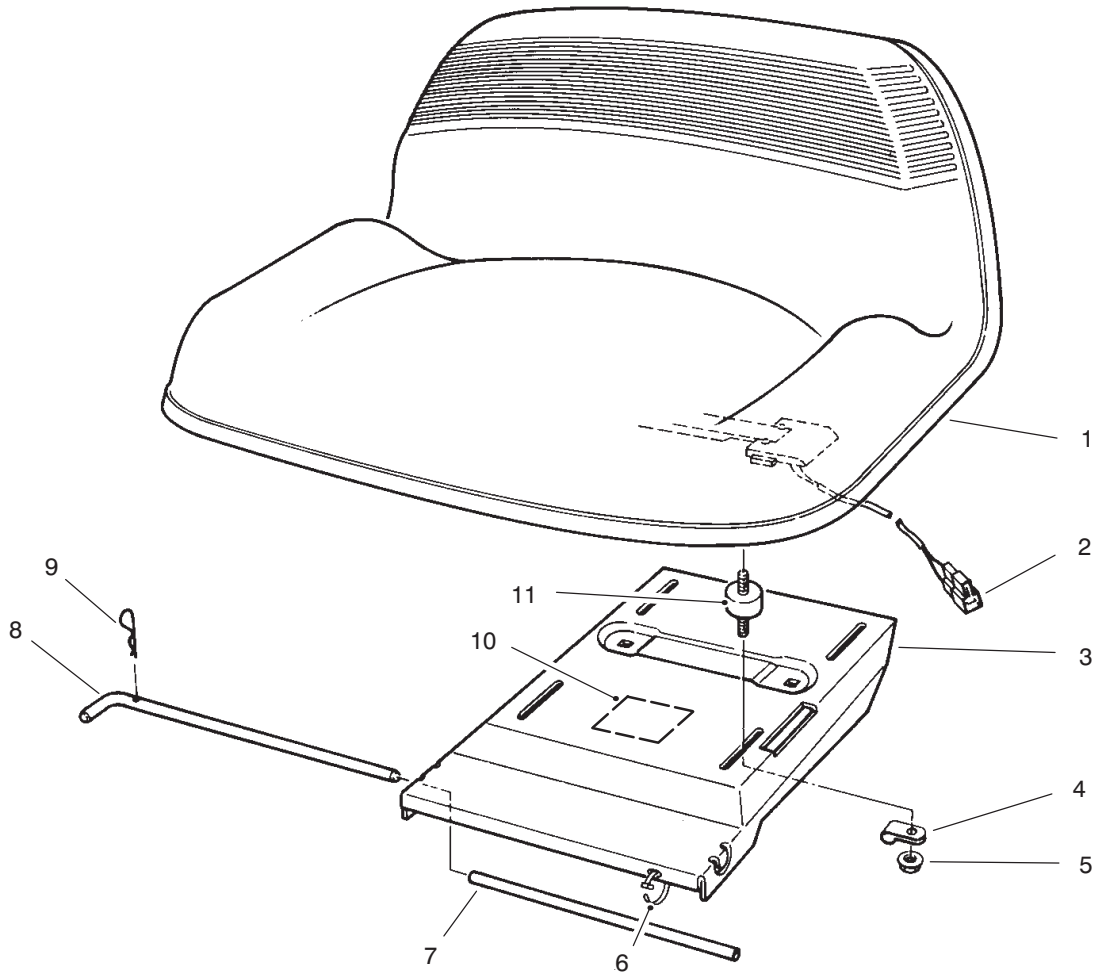


C–0745A

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–3950	Assembly – Seat	1
2	38–1420	Switch – Interlock	1
3	63–5540	Base – Seat	1
4	2412–68	Clamp – Wire	1
5	32128–20	Nut – Flange Hd.	4
6	3290–378	Tie – Cable	1


Ref. No.	Part No.	Description	No. Used
7	63–5670	Tube – Bumper, Seat Rod	1
8	80–2620	Rod – Base, Seat	1
9	3290–307	Pin – Cotter, Hair	1
10	114621	Decal – Euro Noise	1
11	62–5480	Isolator – Seat	4

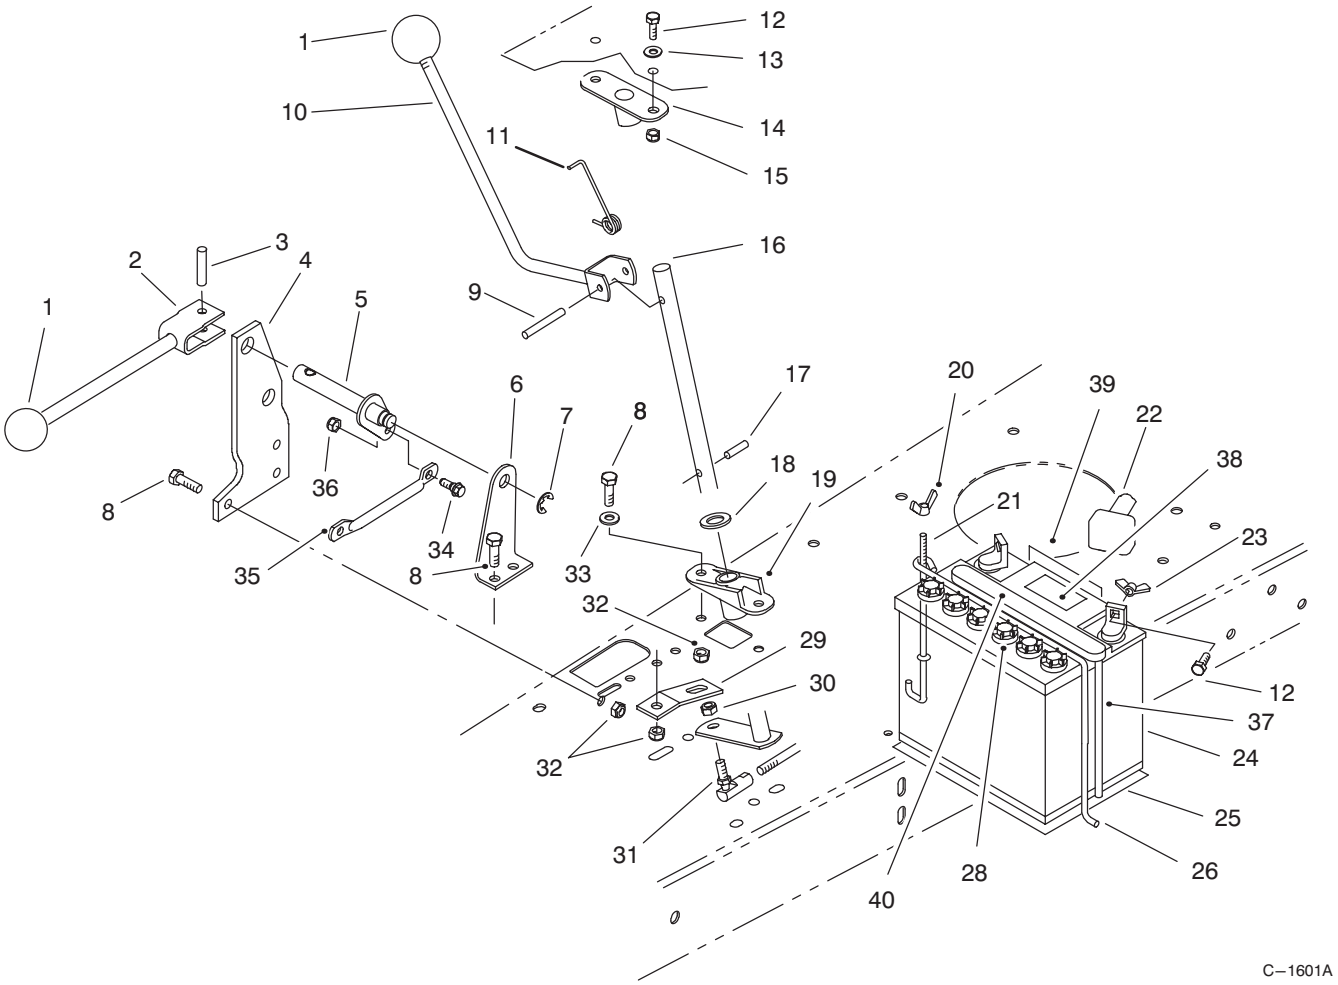

TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233–48	Knob	2
2	80–2400	Lever W.A. – Engage	1
3	32121–25	Pin – Roll	1
4	80–2350	Pivot – Outer	1
5	80–2370	Shaft W.A. – Pivot	1
6	80–2340	Bracket – Pivot, Inner	1
7	32120–47	Ring – Retaining	1
8	322–5	Screw – Cap Hex. Hd.	4
9	32121–78	Pin – Roll	1
10	92–0884	Lever W.A. – Shaft	1
11	92–0894	Spring – Torsion	1
12	321–4	Screw – Cap Hex. Hd.	2
13	3256–22	Washer – Flat	2
14	92–0888	Support – Shift, Upper	1
15	3296–42	Nut – Lock	2
16	92–0891	Shaft W. A. – Shift	1
17	32121–16	Pin – Roll	1
18	257–11	Washer	1
19	92–0887	Support – Shift, Lower	1
20	32103–12	Nut – Wing	1
21	56–7720	Post – Battery	1

Ref. No.	Part No.	Description	No. Used
22	28–8080	Boot – Terminal	1
23	32103–22	Nut – Wing	2
24	80–2600	Battery – 12 Volt (Incl. Ref. #28 & 37)	1
25	62–4300	Pad – Battery	1
26	56–7710	Hold Down – Battery	1
27	237–143	O–Ring	2
28	218–560	Cap – Battery	6
29	92–0896	Retainer – Spring	1
30	3296–4	Nut – Lock	1
31	2411–32	Ball Joint	1
32	3296–29	Nut – Lock	4
33	3256–23	Washer – Flat	2
34	65–5670	Screw – Shoulder	1
35	80–2330	Link – Bell Crank	1
36	3296–8	Nut – Lock	1
37	56–2540	Tube – Vent, Battery	1
38	93–6668	Decal – Battery Charging Instructions	1
39	93–7276	Decal – Danger	1
40	93–9354	Decal – Battery	1

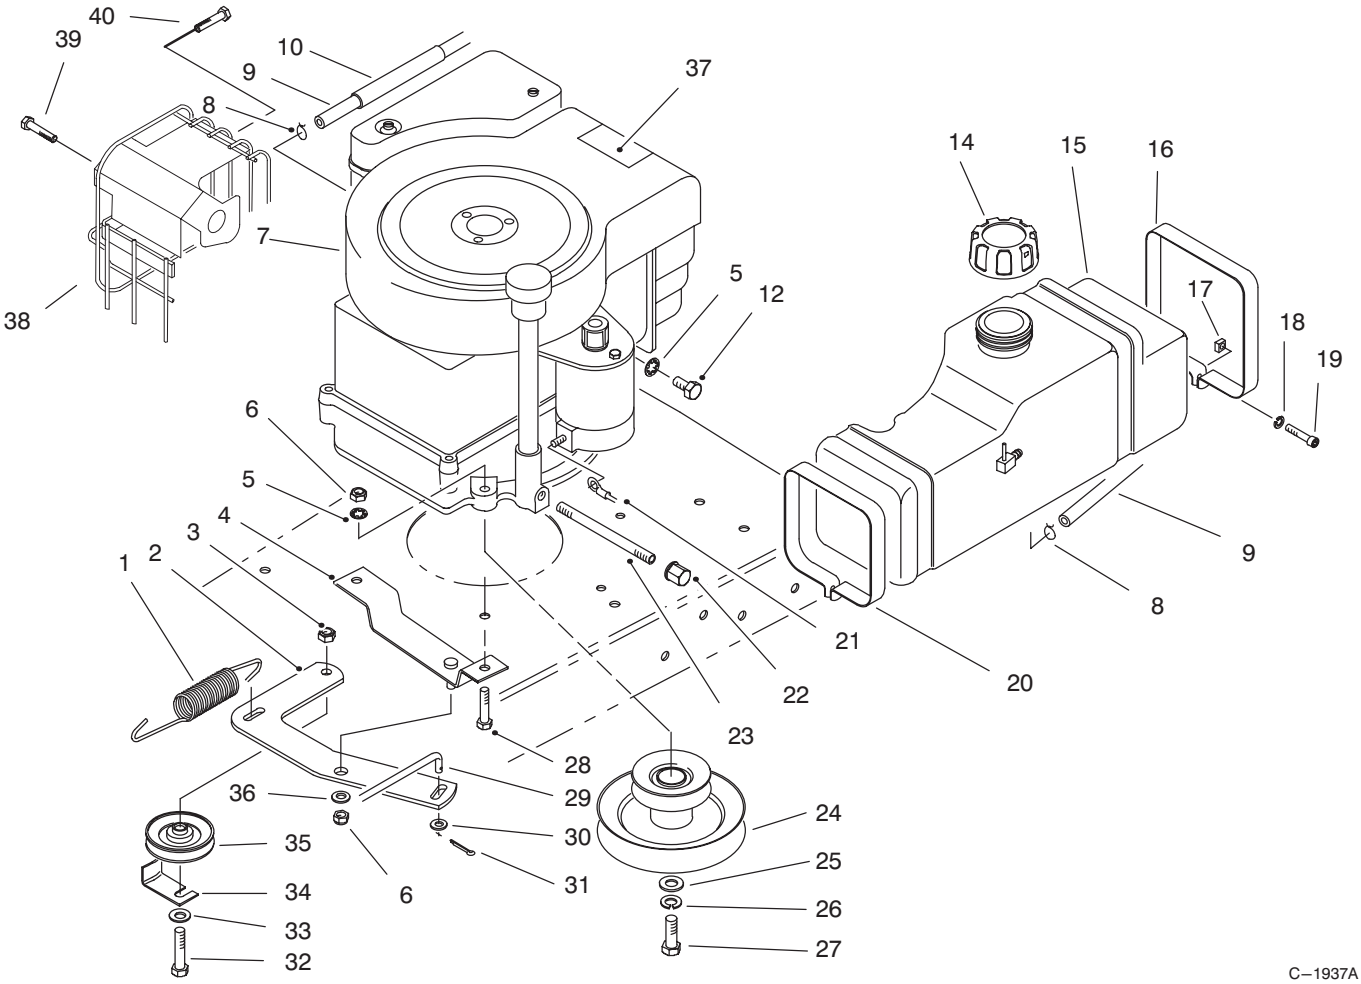


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0879	Spring	1
2	92–0883	Plate – Mounting, Idler	1
3	3296–39	Nut – Lock	1
4	92–0881	Bracket W.A. – Traction	1
5	3254–2	Washer – Lock, Int. Tooth	3
6	3296–29	Nut – Lock	2
7		Engine – 11.5 H .P.	1
8	2412–98	Clamp – Hose	2
9	47–2961	Hose – Fuel Line	1
10	62–5490	Support – Fuel Line	1
12	32144–14	Screw	2
14	55–3570	Cap – Fuel	1
15	56–7050	Tank – Fuel	1
16	57–4060	Retainer – Front	1
17	32107–11	Nut – Square	2
18	3253–3	Washer – Lock	2
19	3274–51	Screw – Hex. Socket Hd.	2
20	57–4070	Retainer – Rear	1
21	56–7670	Cable – Battery, Positive	1
22	288–10	Cap – Pipe	1

Ref. No.	Part No.	Description	No. Used
23	289–19	Nipple – Pipe	1
24	92–0873	Pulley – Engine	1
25	3256–25	Washer – Flat	1
26	3253–6	Washer – Lock	1
27	62–3760	Screw – Cap Hex. Hd.	1
28	322–7	Screw – Cap Hex. Hd.	4
29	92–0871	Rod – Traction	1
30	3256–22	Washer – Flat	1
31	3272–6	Pin – Cotter	1
32	323–9	Screw – Cap Hex. Hd.	1
33	3256–24	Washer – Flat	1
34	12–9020	Retainer – Belt	1
35	12–5820	Pulley – Idler	1
36	3256–57	Washer – Flat	1
37	92–8757	Decal – Engine	1
38	93–7446	Guard – Muffler (Incl. Ref. #39 & 40)	1
39	94–1278	Screw	3
40	94–1277	Screw	1
*	88–4490	Reducer – Throttle	1


*Not Illustrated

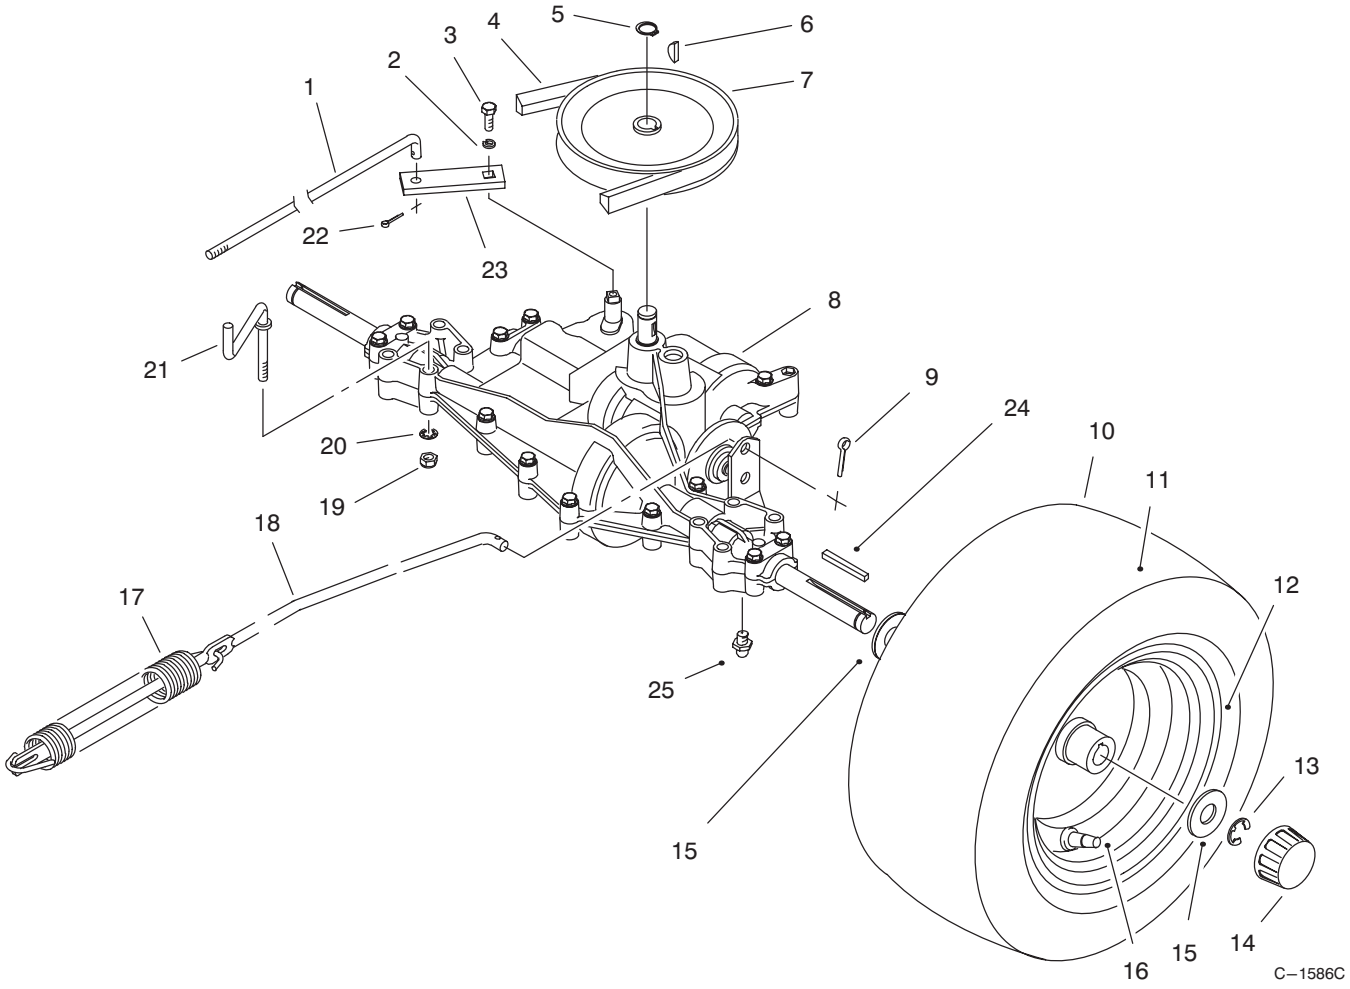

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0889	Link – Shift	1
2	3253–3	Washer – Lock	1
3	329–4	Screw – Cap Hex. Hd.	1
4	92–0870	V–Belt – Traction	1
5	32120–64	Ring – Retaining	1
6	3257–23	Key	1
7	92–0874	Pulley	1
8	92–0862	Transaxle	1
9	3272–16	Pin – Cotter	1
10	231–117	Tire	2
11	232–39	Tube – Inner	2
12	88–9730	Rim	2
13	32151–48	Ring – Retaining	2

Ref. No.	Part No.	Description	No. Used
14	61–9780	Cap – Hub	2
15	28–2480	Washer	4
16	232–27	Stem – Valve	2
17	57–9940	Spring – Brake	1
18	92–0872	Rod – Brake	1
19	3296–29	Nut – Lock	1
20	3254–2	Washer – Lock, Int. Tooth	1
21	92–0899	Guide – Belt, Lower	1
22	3272–6	Pin – Cotter	1
23	92–0880	Arm – Shift, Transaxle	1
24	7–0036	Key – Square	2
25	302–5	Fitting – Grease	2

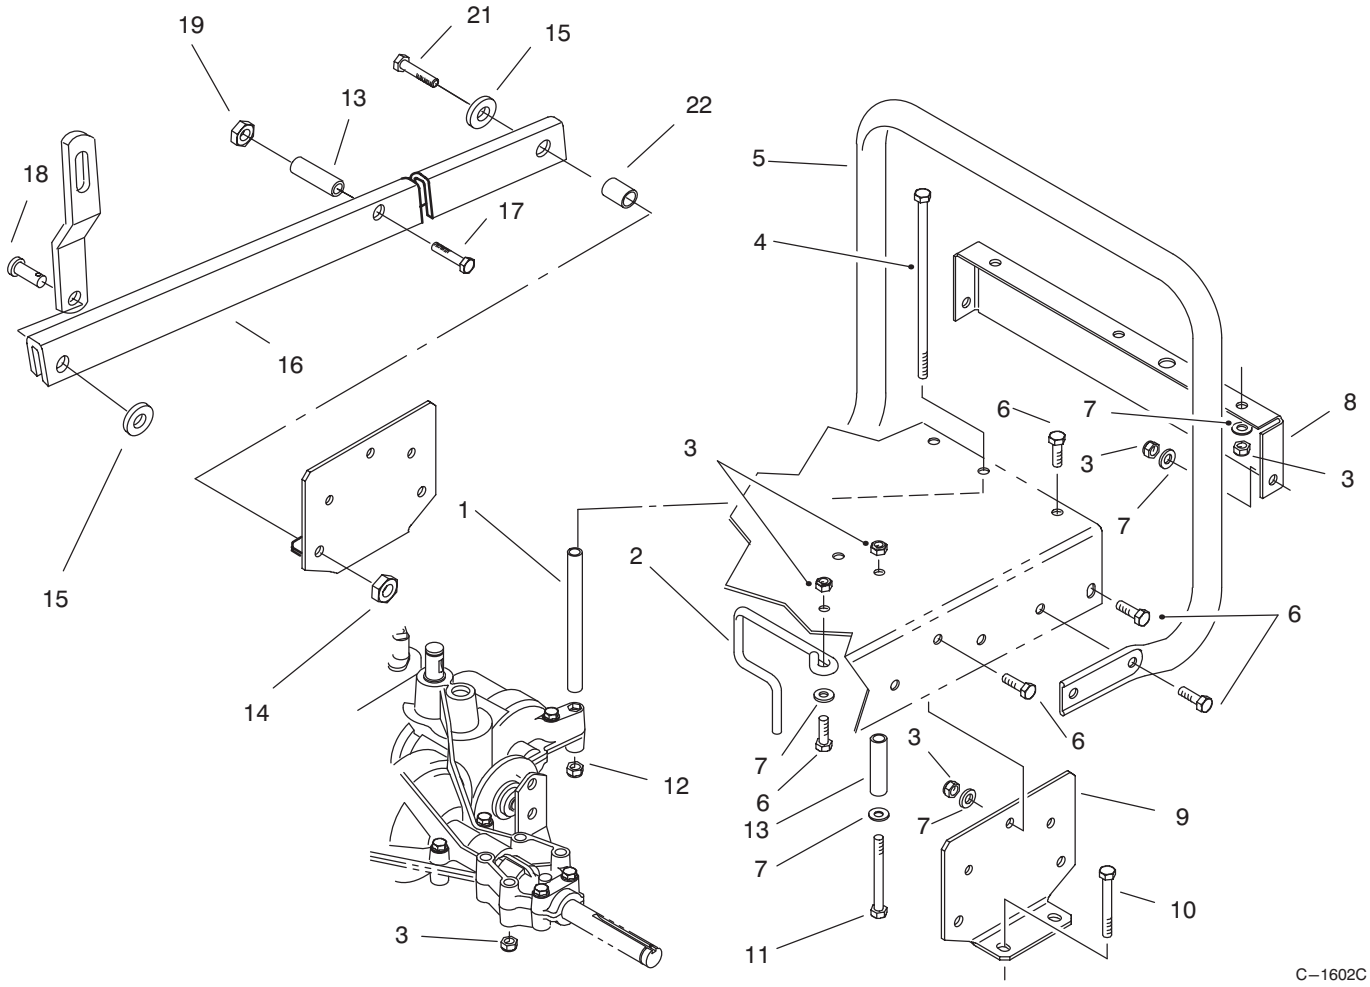


STAND BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0897	Spacer	1
2	92–0898	Guide – Belt	1
3	3296–29	Nut – Lock	17
4	322–50	Screw – Cap Hex. Hd.	1
5	92–0864	Standbar	1
6	322–5	Screw – Cap Hex. Hd.	15
7	3256–23	Washer – Flat	12
8	92–0861	Frame – Rear	1
9	92–0865	Support – Axle	2
10	322–12	Screw – Cap Hex. Hd.	4
11	322–14	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
12	3296–47	Nut – Lock	1
13	76–1560	Spacer	4
14	3296–59	Nut – Lock	3
15	3256–24	Washer – Flat	4
16	76–1540	Arm – Suspension R.H.	1
*	76–1550	Arm – Suspension L.H.	1
17	323–14	Screw – Hex Hd. Cap	2
18	283–42	Pin – Clevis	2
19	3296–39	Nut – Lock	2
21	323–9	Screw – Hex Hd. Cap	2
22	56–7430	Pin – Support	2

*Not Illustrated

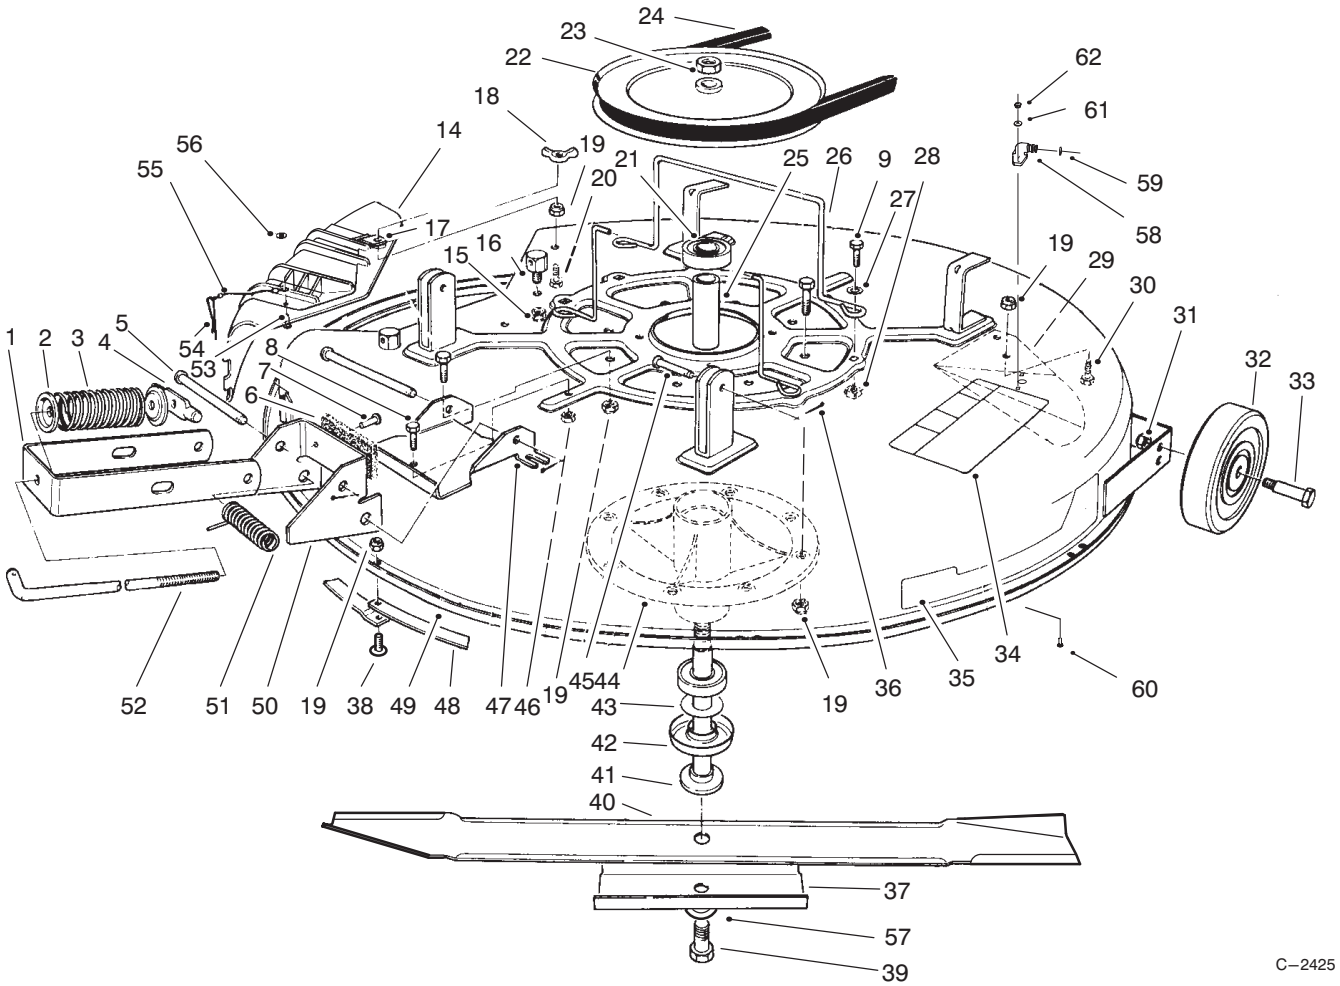


C–2425

MOWER ASSEMBLY – RECYCLER

Ref. No.	Part No.	Description	No. Used
1	47–1180	Bracket – Engagement	1
2	47–1140	Retainer – Spring, Top	2
3	47–0960	Spring – Compression	1
4	47–1200	Shaft – Adjusting	1
5	80–2570	Pin – Clevis	2
6	80–2550	Pad – Brake	1
7	3290–282	Rivet	2
8	321–4	Screw – Cap Hex. Hd.	1
9	322–5	Screw – Cap Hex. Hd.	6
14	82–6150	Assy. – Cover, Discharge (Incl. Ref. #53–56)	1
15	3296–59	Nut – Lock	1
16	28–7350	Post – Pivot	1
17	83–7010	Brace – Cover, Rear	1
18	32103–2	Nut – Wing	1
19	3296–29	Nut – Lock	24
20	322–6	Screw – Cap Hex. Hd.	1
21	251–297	Bearing	2
22	80–4470	Pulley	1
23	3219–7	Nut – Hex. Hd.	1
24	92–0875	V–Belt	1
25	83–7020	Spacer – Bearing	1
26	60–9730	Guide – Belt	2
27	3256–23	Washer – Flat	4
28	3290–496	Nut – Retainer	4
29	80–2630	Kicker – 32”	4
30	322–3	Screw – Cap Hex. Hd.	13
31	3296–39	Nut – Lock	2


Ref. No.	Part No.	Description	No. Used
32	61–9760	Wheel – Deck	2
33	56–6590	Bolt – Wheel	2
34	93–7010	Decal – Danger	1
35	92–7988	Decal – Recycler	1
36	3272–6	Pin – Cotter	2
37	80–4570	Stiffener – Blade	1
38	32122–14	Screw – Truss, Phillips Hd.	8
39	26–0671	Bolt – Blade	1
40	80–4430	Blade – Recycler	1
41	80–4350	Shaft – Spindle	1
42	80–4370	Shield – Bearing	1
43	80–4390	Spacer – Hardened	1
44	56–7030	Body – Spindle	1
45	283–2	Pin – Clevis	2
46	3296–8	Nut – Lock	1
47	80–2560	Plate – Deck, Brake Mtg.	1
48	80–4490	Ring – Deck	4
49	14–9999	Deck – Cutting, Recycler (Incl. Ref. #34) (Serial No 6900001–7900999)	1
49	95–7850	Deck Assembly (Incl. Ref. #34) (Serial No. 7901000 & Up)	1
50	80–2530	Assembly – Brake (Incl. Ref. #6–7)	1
51	40–6230	Spring – Torsion	1
52	80–2580	Rod – Adjusting	1

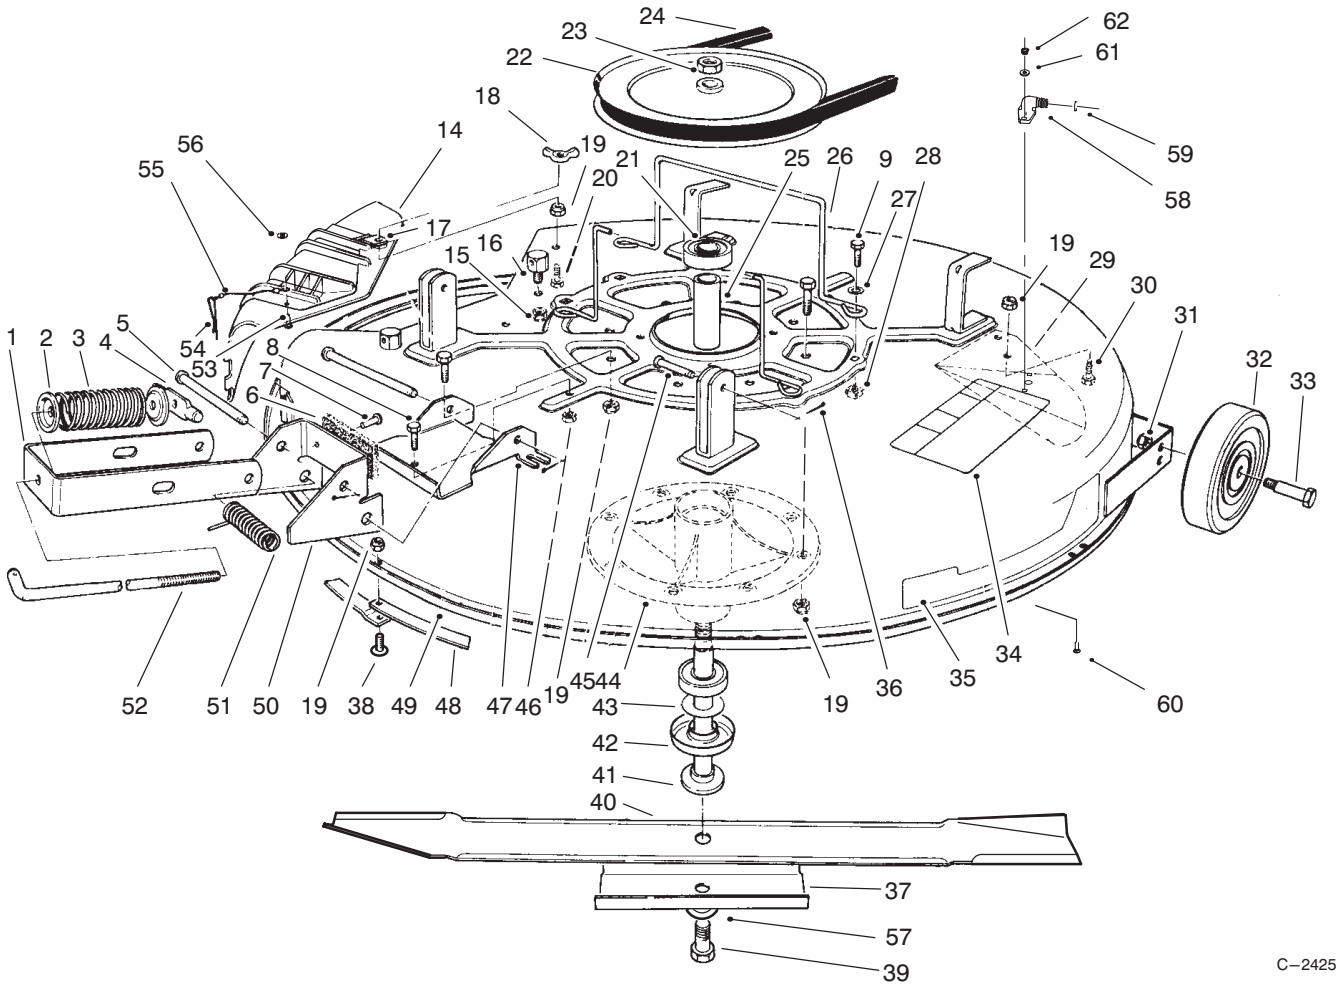

MOWER ASSEMBLY – RECYCLER (Cont.)

Ref. No.	Part No.	Description	No. Used
53	3290–282	Rivet	2
54	28–8130	Pin – Chute, Locking	1
55	28–8070	Lanyard	1
56	3256–49	Washer – Flat	1
57	3290–465	Washer – Belleville	1
58	95–2747	Fitting – Washout (Serial No. 7901000 & Up)	1
59	46–6290	O–Ring (Serial No. 7901000 & Up)	1

Ref. No.	Part No.	Description	No. Used
60	3229–1	Bolt – Carriage (Serial No. 7901000 & Up)	2
61	3256–1	Washer – Flat (Serial No. 7901000 & Up)	2
62	3296–16	Nut – Lock (Serial No. 7901000 & Up)	2

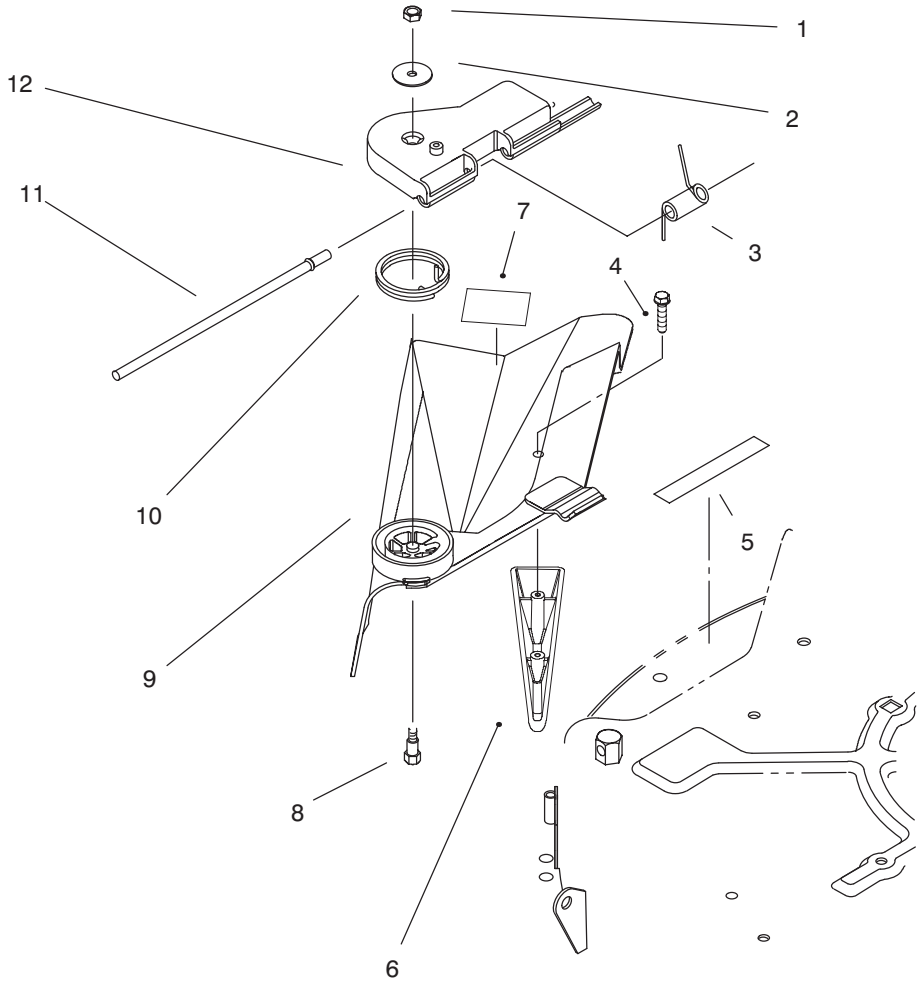


C–2426

DEFLECTOR ASSEMBLY – RECYCLER

Ref. No.	Part No.	Description	No. Used
1	3296–42	Nut – Lock	1
2	3256–58	Washer – Fender	1
3	92–2493	Spring – Torsion	1
4	93–0231	Screw – Pan Hd.	4
5	93–7009	Decal – Deflector Danger	1
6	93–7696	Kicker – CE	2
7	93–7010	Decal – Danger	1

Ref. No.	Part No.	Description	No. Used
8	92–8916	Bolt – Shoulder	1
9	93–7694	Deflector Ass'y (Incl. Ref. #7)	1
10	88–6160	Spring – Torsion	1
11	88–6150	Rod – Deflector Hinge	1
12	88–4540	Hinge – Deflector Danger	1

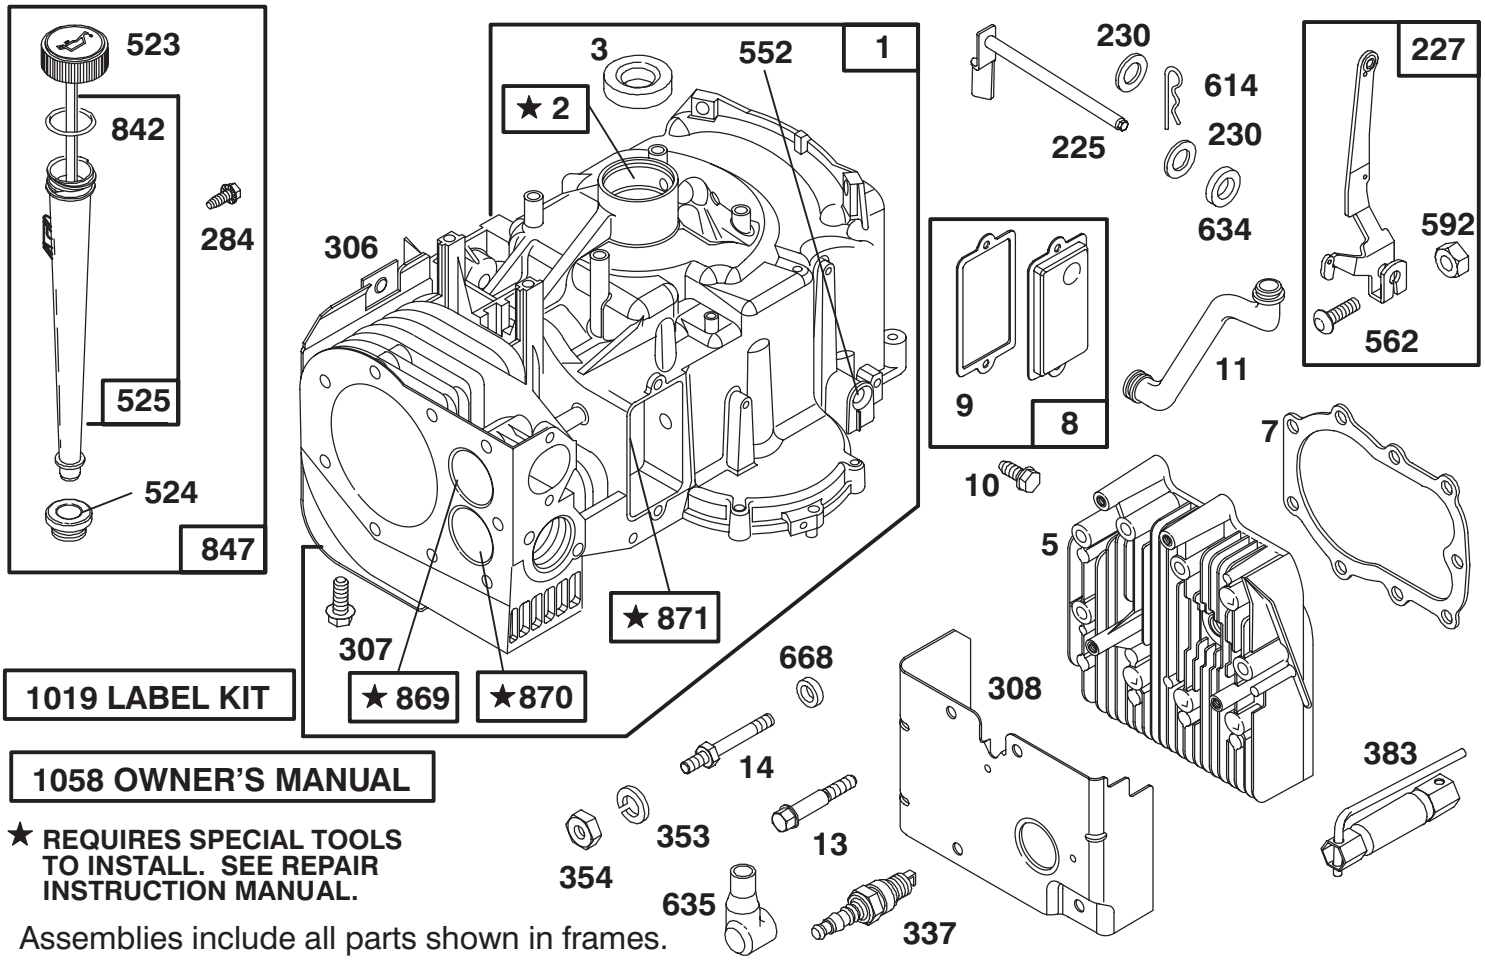

1019 LABEL KIT

1058 OWNER'S MANUAL

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bearing–Cylinder	1
★3	391086	Seal–Oil	1
5	494240	Head–Cylinder	1
★7	271866	Gasket–Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket–Valve Cover	1
10	94621	Screw–Sem	1
11	281246	Tube–Breather	1
13	94622	Screw–Cylinder Head	1
14	94776	Stud–Cyl. Head	1
225	495157	Crank–Governor	1
227	493935	Lever Assy.–Governor	1
230	94742	Washer–Gov. Crank	1
284	94073	Screw–Hex Head	1
306	224545	Shield–Cylinder	1
307	94623	Screw–Cyl. Shield Mtg.	1
308	491490	Cover–Cylinder Head	1
337	802592	Plug–Spark	1
353	94315	Washer–Lock	1
354	94314	Nut–Hex.	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench–Spark Plug	1
523	495230	Cap–Oil Fill	1
★524	281370	Seal–Fill Tube	1
525	496113	Tube–Oil Fill	1
552	231597	Bushing–Gov. Crank	1
562	92613	Bolt–Carriage	1
592	231082	Nut–Hex.	1
614	93306	Pin–Cotter	1
★634	491323	Seal–Governor	1
635	66538	Elbow–Spark Plug	1
668	231109	Spacer	1
★842	270920	Seal–Oil Fill Cap	1
847	496415	Fill Group–Oil	1
869	261463	Seat–Intake Valve	1
870	213316	Seat–Exhaust Valve	1
871	261961	Guide–Exhaust Valve	1
		Note: 231218 Guide–Intake Valve	1
1019	491255	Label Kit	1
1058	272697	Owner's Manual	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

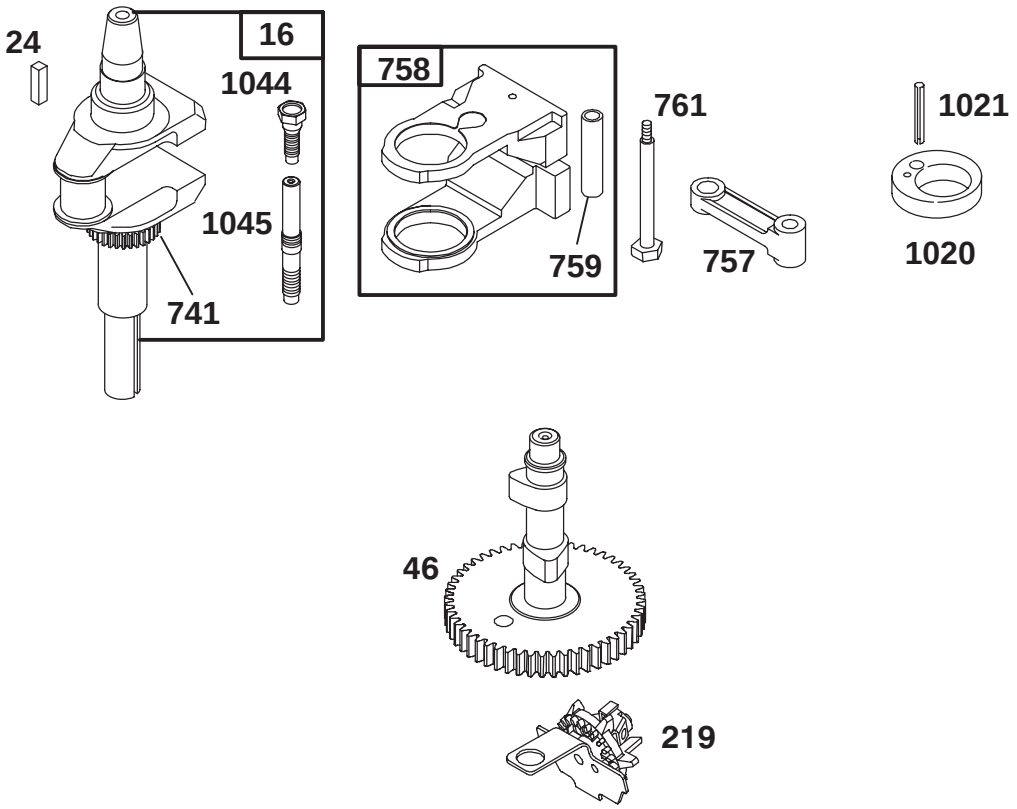


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used
16	495162	Crankshaft	1
	94196	Key—Timing Gear	1
24	222698	Key—Flywheel	1
46	213720	Gear—Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear—Timing	1
757	213998	Link—Counterweight	1

Ref. No.	Part No.	Description	No. Used
758	399891	Counterweight Assy.	1
759	298909	Pin—Counterweight	1
761	94593	Screw—Counterweight	1
1020	262243	Eccentric	1
1021	94160	Pin—Eccentric	1
1044	94673	Screw—Shoulder	1
1045	231828	Extension—Crankshaft	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.
● Included in Carburetor Kit—Part No. 497535.

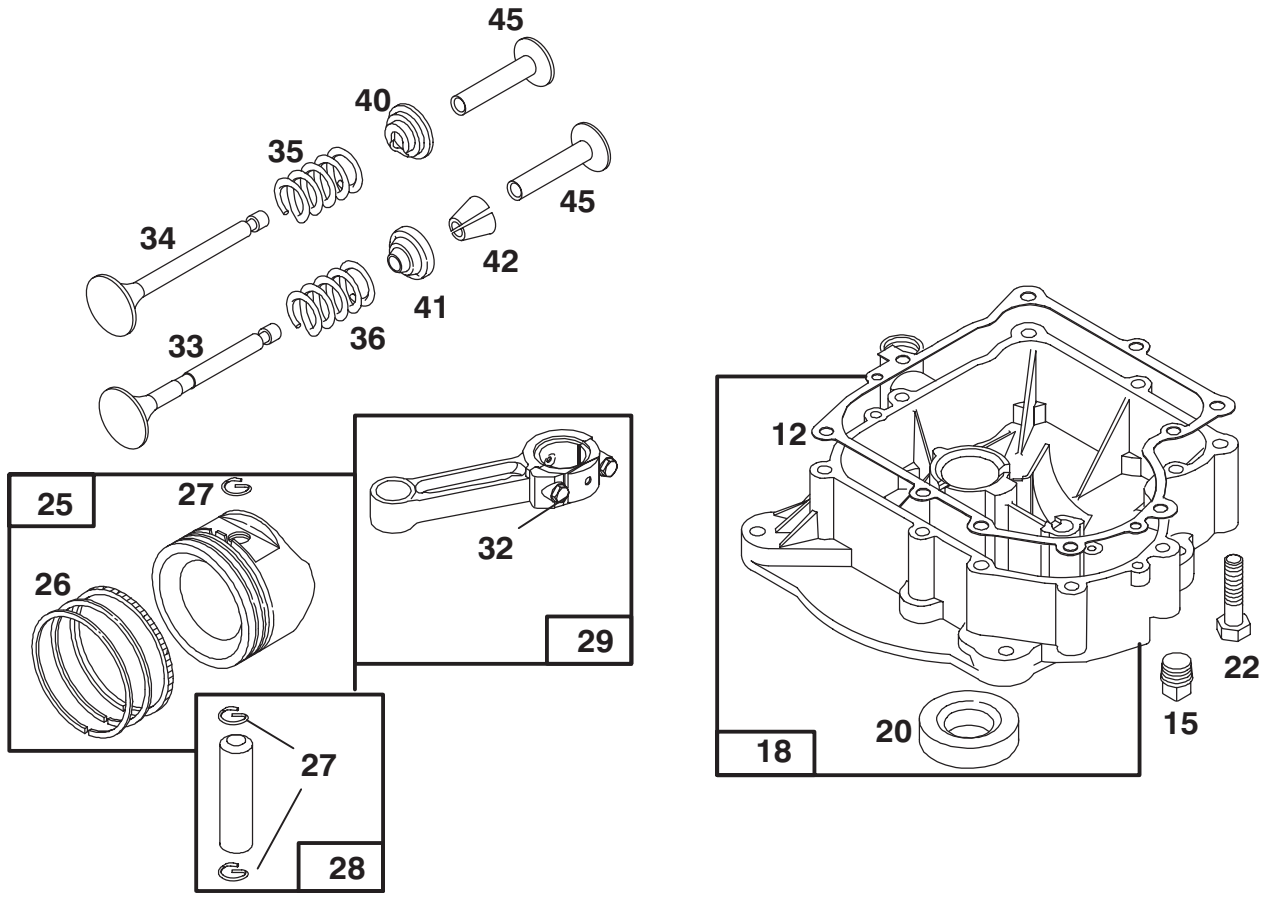


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket–Crankcase (.015" Thick)	1
★	271997	Gasket–Crankcase (.005" Thick)	1
★	271996	Gasket–Crankcase (.009" Thick)	1
15	94239	Plug–Oil Drain	1
18	494238	Base–Engine	1
★20	291675	Seal–Oil	1
22	94624	Screw–Base Mtg. Sem	1
25	497518	Piston Assy. (Std.)	1
	497519	Piston Assy. (.010" O.S.)	1
	497520	Piston Assy. (.020" O.S.)	1
	497521	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set–Piston (Std.)	1
	391781	Ring Set–Piston (.010" O.S.)	1
	391782	Ring Set–Piston (.020" O.S.)	1
	391783	Ring Set–Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock–Piston Pin	1
28	299691	Pin Assy.–Piston (Standard)	1
	391286	Pin Assy.–Piston (.005" O.S.)	1
29	490348	Rod Assembly–Connecting	1
	490469	Rod–Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw–Connecting Rod	1
33	262246	Valve–Exhaust	1
34	262247	Valve–Intake	1
35	65906	Spring–Intake Valve	1
36	26828	Spring–Exhaust Valve	1
40	221596	Retainer–Intake Valve	1
41	292260	Rotocoil–Exhaust Valve	1
42	93630	Retainer–Ex. Valve Rotocoil	1
45	262248	Tappet–Valve	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

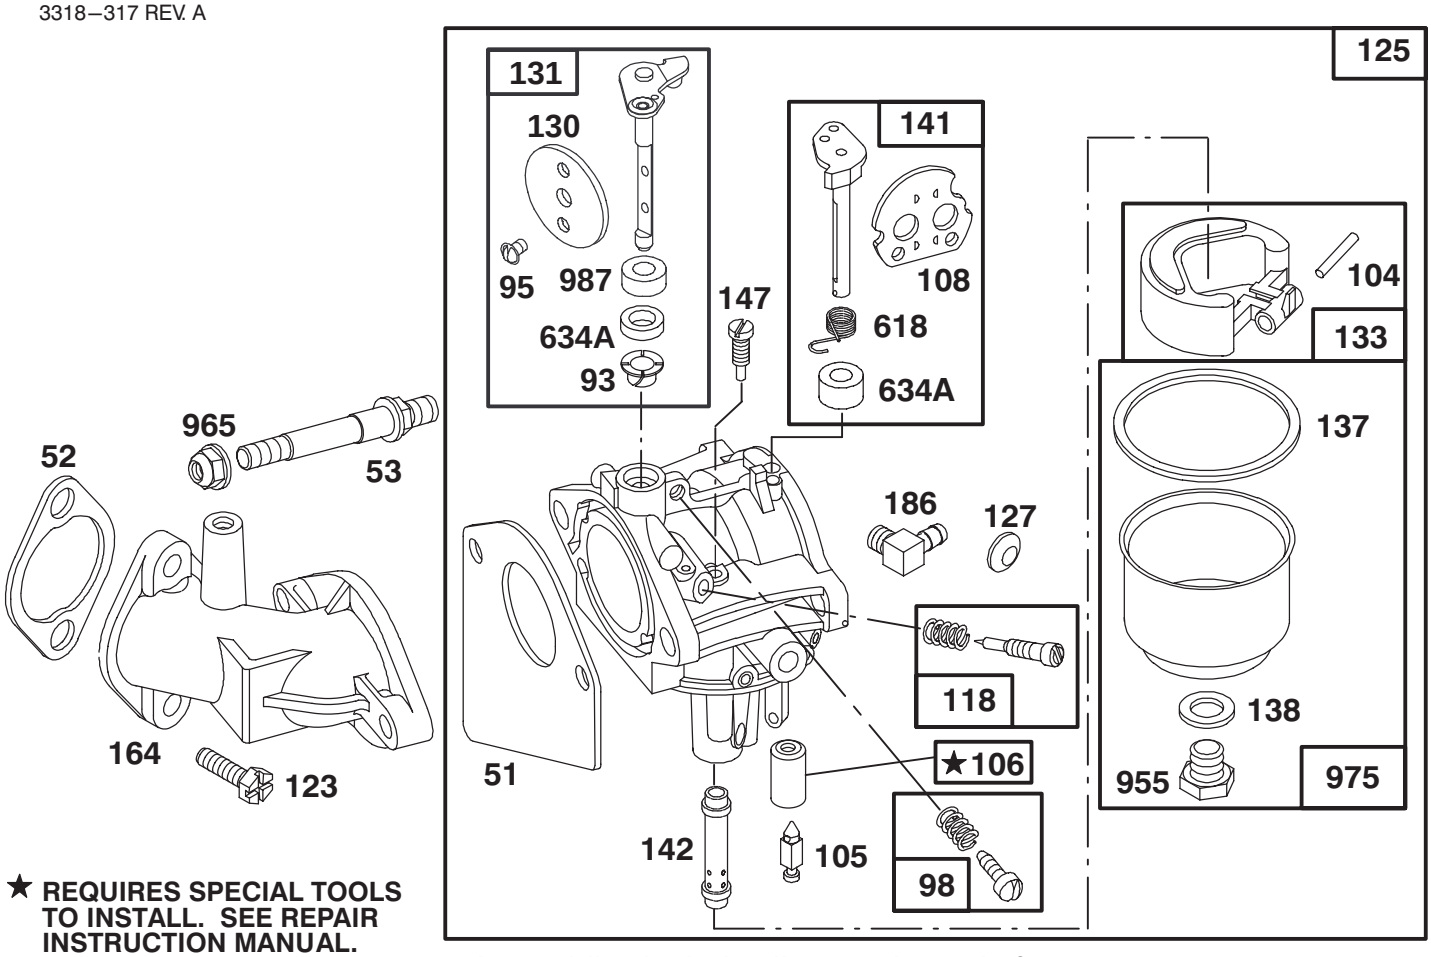

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
●◆51	272465	Gasket–Carburetor (Carb. to Manifold)	1
★52	272554	Gasket–Carburetor (Manifold to Cylinder)	1
53	94637	Stud–Carb. Mtg.	1
●93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Throttle	1
98	495800	Screw–Idle Speed	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve Assy.–Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve–Choke	1
118	494383	Valve–Needle	1
121	495799	Carburetor Kit	1
123	94616	Screw–Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug–Welch (Sold in Kit Only)	1
130	224539	Valve–Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft– Throttle	1
133	494381	Float–Carburetor	1
●◆137	281165	Gasket–Float Bowl	1
●◆138	281164	Washer–Float Bowl Screw	1
141	495931	Shaft–Choke	1
●142	497566	Nozzle–Carburetor	1
●147	231984	Pilot–Jet	1
164	213819	Manifold–Intake	1
186	493496	Connector–Fuel	1
618	262803	Spring–Choke Return	1
●634A	281168	Seal–Choke Shaft	1
●634B	398970	Washer–Throttle Shaft	1
955	94642	Screw–Fuel Bowl	1
965	94010	Nut–Hex.	1
975	494378	Bowl Assy.–Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal–Throttle Shaft	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

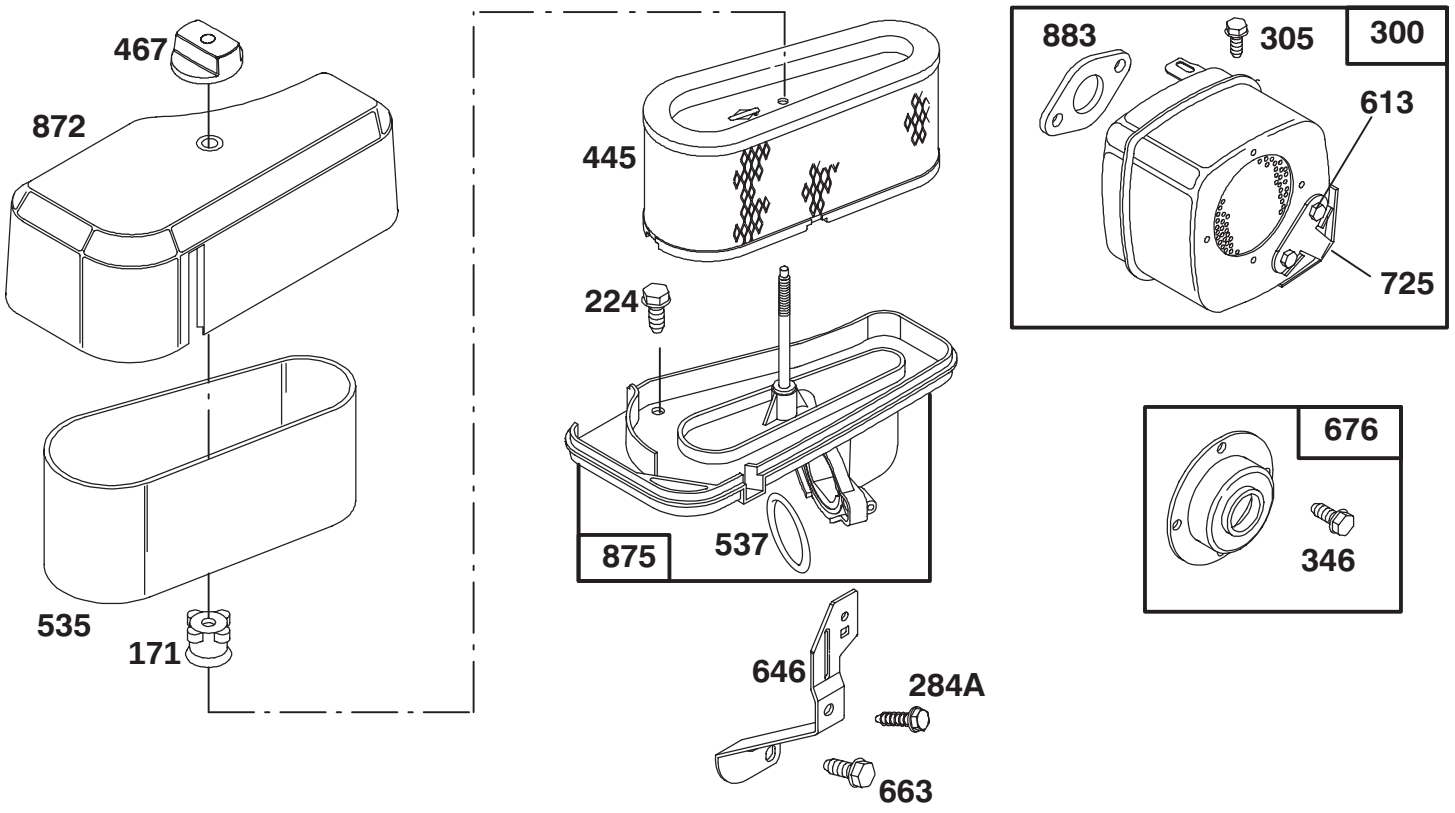


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut–Air Cleaner Mtg.	1
224	94729	Screw–Air Cleaner Sem	1
284A	94704	Screw Hex. Head	1
300	491413	Muffler–Exhaust	1
305	94786	Screw–Hex. Head	1
346	93705	Screw–Hex. Head	1
445	496894	Cartridge–Air Cleaner	1
467	493903	Knob–Air Cleaner	1
535	272403	Element–Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring–Air Cleaner	1
613	93927	Screw–Hex. Head	1
646	224546	Brace–Air Cleaner	1
663	94620	Screw–Hex. Hd.	1
676	396903	Deflector–Muffler	1
725	223023	Shield–Muffler	1
872	281361	Cover–Air Cleaner	1
875	494237	Body–Air Cleaner	1
★883	272293	Gasket–Exhaust	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

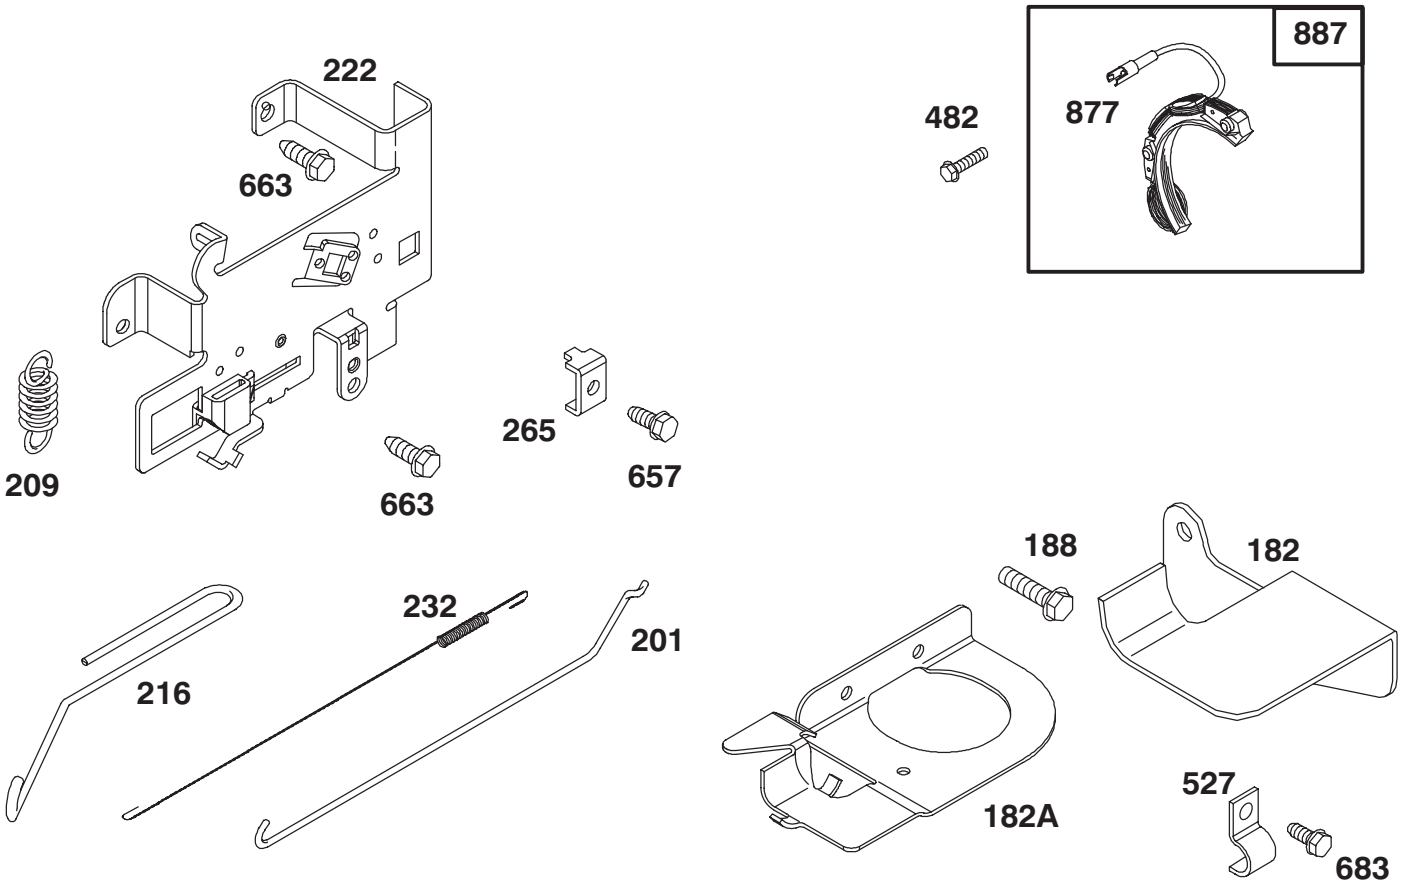


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
182	223925	Bracket–Fuel Tank	1
182A	223866	Bracket–Fuel Tank	1
188	94480	Screw–Sem	1
201	262767	Link–Governor	1
209	260871	Spring–Governor	1
216	262766	Link–Choke	1
222	495611	Plate–Governor Control	1
232	262785	Spring–Governor Link	1

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp–Casing	1
482	93621	Screw–Sem	1
527	221428	Clamp	1
657	93496	Screw–Sem	1
663	94620	Screw–Hex. Head	1
683	94602	Screw–Hex. Head	1
877	393814	Diode and Connector Assy.	1
887	391529	Alternator	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

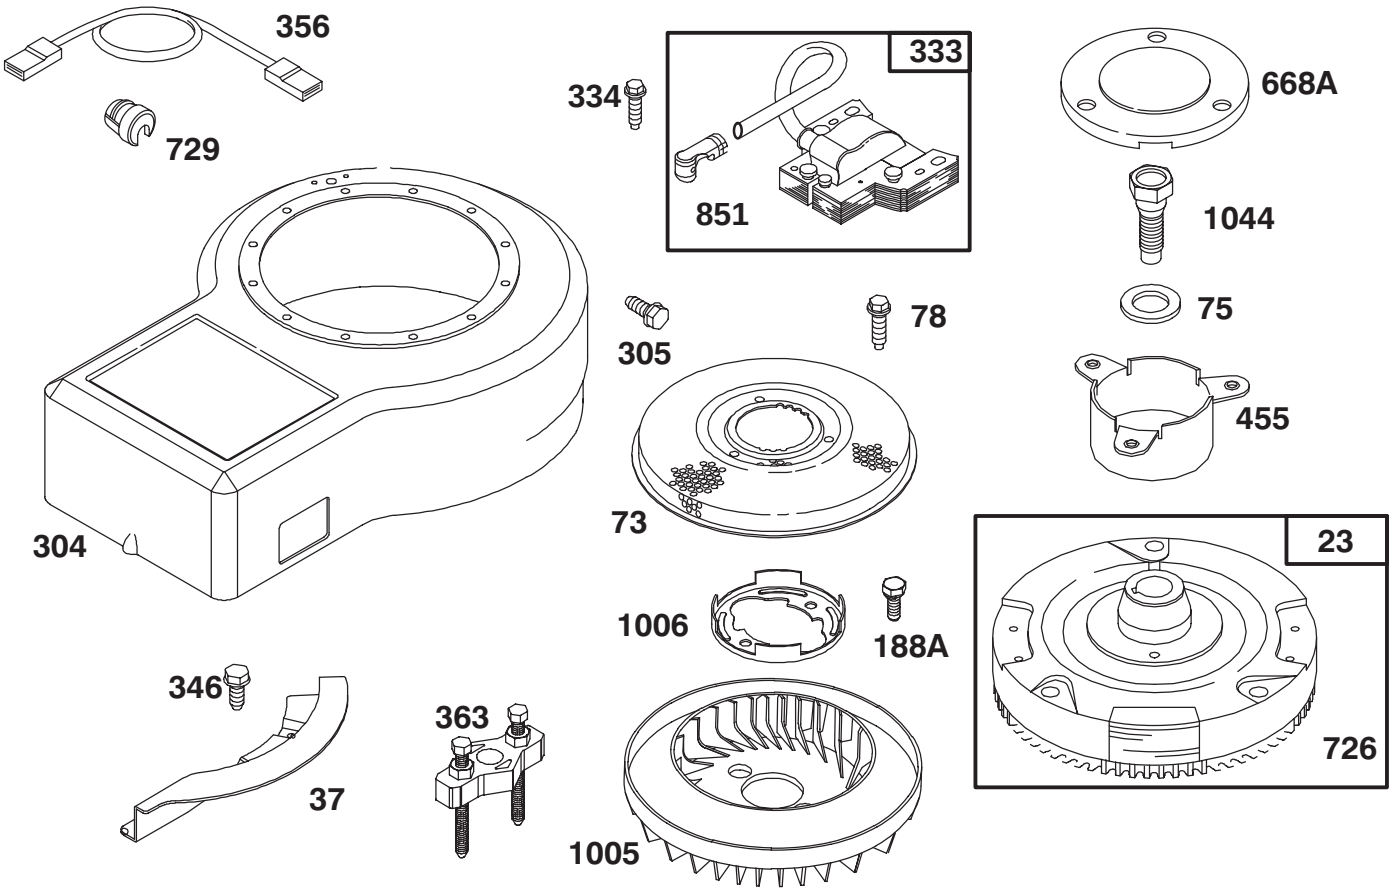


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard–Flywheel	1
73	224948	Screen–Rotating	1
75	224061	Washer–Spring	1
78	94626	Screw–Sem	1
188A	94627	Screw–Sem	1
304	496431	Housing–Blower	1
305	94786	Screw–Hex.	1
333	492341	Armature–Magneto	1
334	93381	Screw–Hex.	1
346	93705	Screw–Hex. Head	1
356	494328	Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
363	19203	Puller–Flywheel	1
455	222561	Cup–Screen Mounting	1
668A	280848	Spacer	1
726	392134	Gear–Ring (Includes Mtg Hardware)	1
729	281159	Clip–Lead Wire	1
851	493880	Terminal–Ignition Cable	1
1005	281355	Fan–Flywheel	1
1006	224413	Retainer–Fan	1
1044	94673	Screw–Shoulder	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

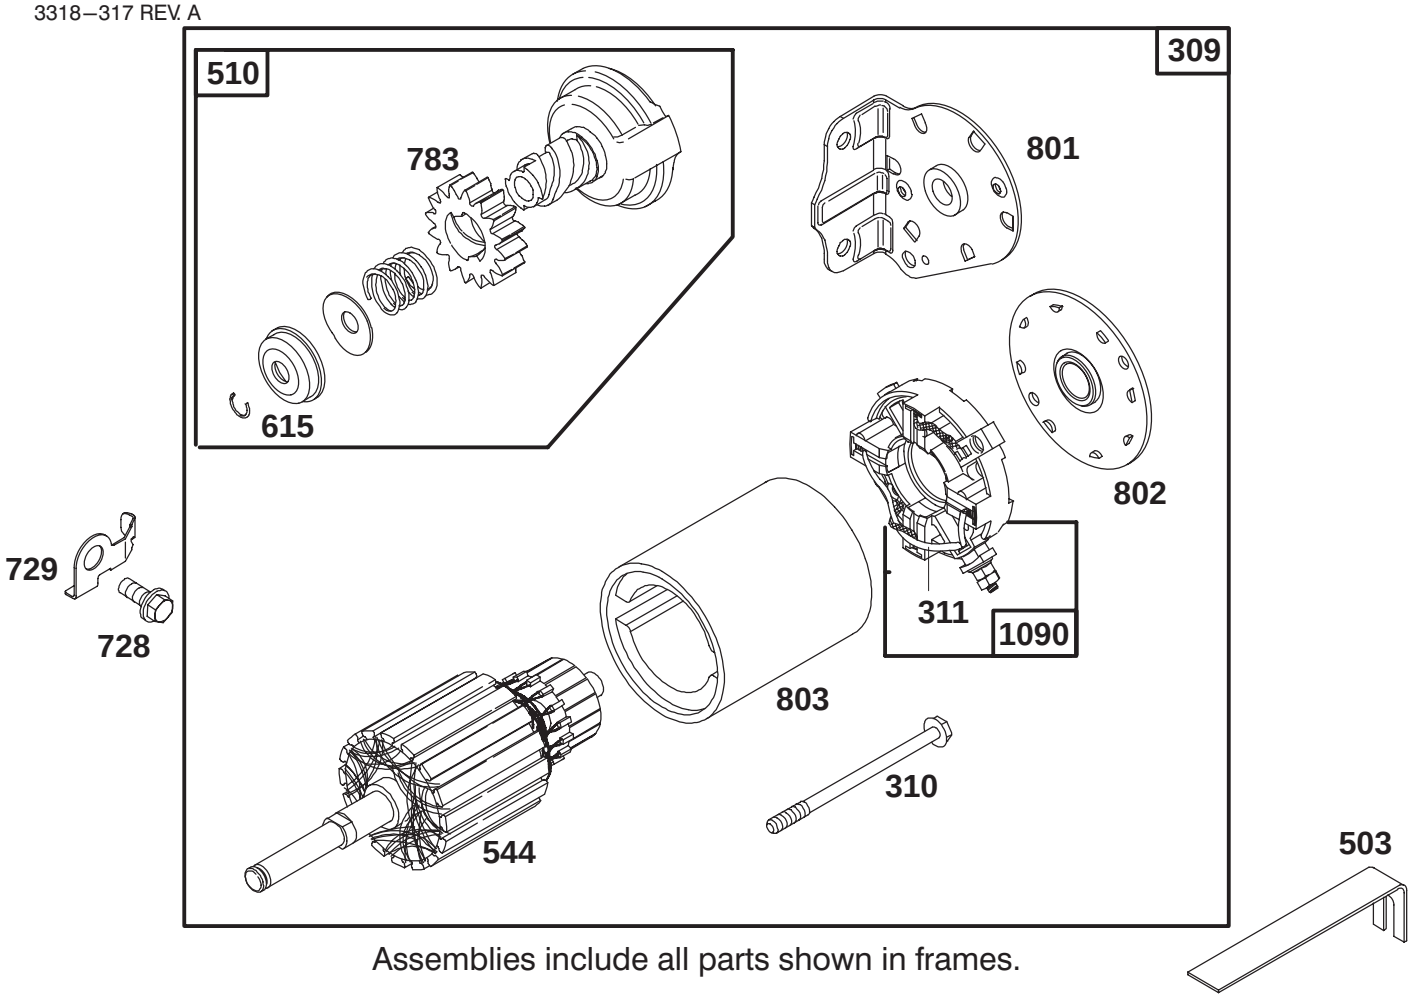


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01


Ref. No.	Part No.	Description	No. Used
309	497595	Motor–Starter	1
310	94003	Bolt–Thru	1
311	497608	Brush Set	1
503	806000	Strap–Starter	1
510	497606	Drive–Starter	1
544	497603	Armature–Starter	1
615	263080	Retainer	1

Ref. No.	Part No.	Description	No. Used
728	94627	Screw–Hex. Head	1
729	225170	Clip–Wire	1
783	280104	Gear–Starter	1
801	394856	Cap–Drive	1
802	497607	Plate–Cover	1
803	497604	Housing–Starter	1
1090	497605	Cap–End	1


★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

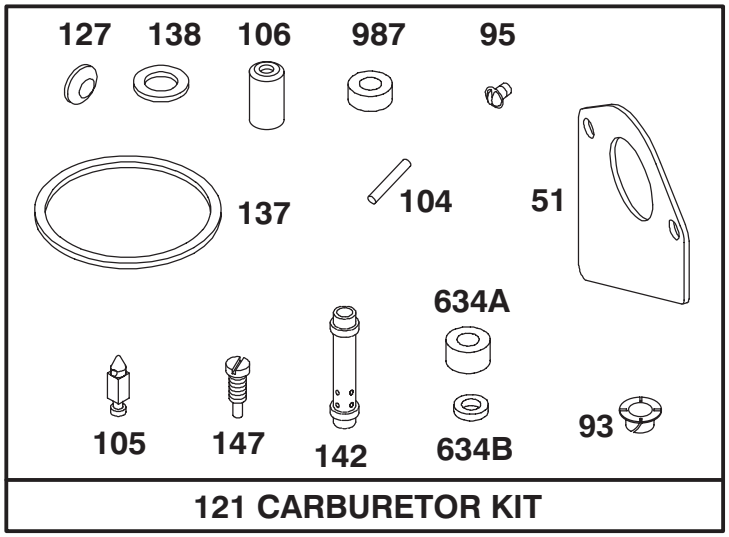

121 CARBURETOR KIT

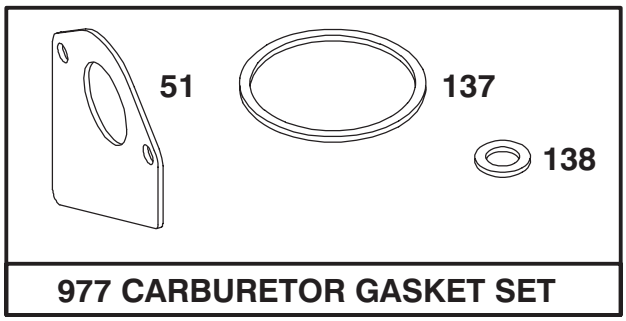

977 CARBURETOR GASKET SET

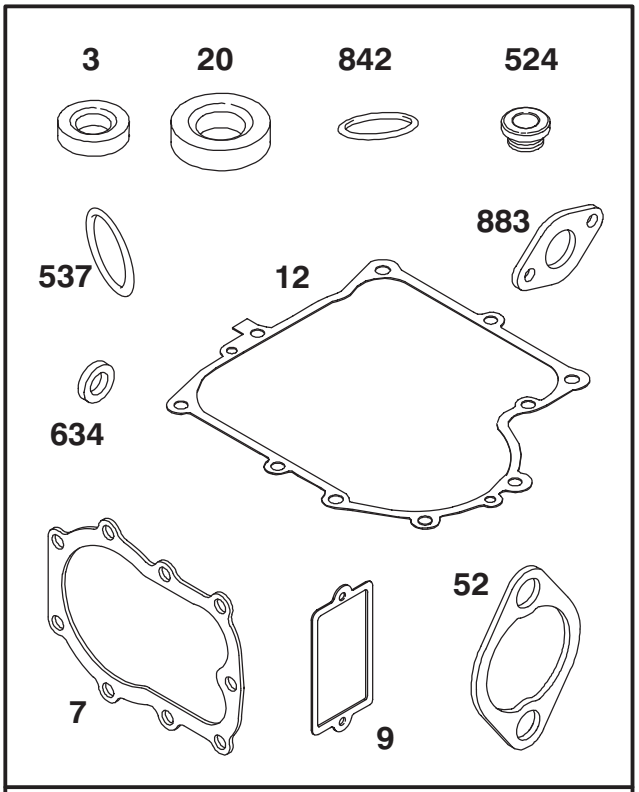

358 GASKET SET

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal–Oil	1
★7	271866	Gasket–Cylinder Head	1
★9	27803	Gasket–Valve Cover	1
★12	271916	Gasket–Crankcase (.015” Thick)	1
★	271997	Gasket–Crankcase (.005” Thick)	1
★	271996	Gasket–Crankcase (.009” Thick)	1
★20	291675	Seal–Oil	1
◆●51	272465	Gasket–Carburetor (Carb. to Manifold)	1
★52	272554	Gasket–Carburetor (Manifold to Cylinder)	1
●93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Throttle	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve Assy.–Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	497535	Carburetor Kit	1
●127		Plug–Welch (Sold in Kit Only)	1
◆●137	281165	Gasket–Float Bowl	1
◆●138	281164	Washer–Float Bowl Screw	1
●142	494566	Nozzle–Carburetor	1
●147	231984	Pilot–Jet	1
358	494241	Gasket Set	1
★524	281370	Seal–Fill Tube	1
★537	281106	O-Ring–Air Cleaner	1
★634	491323	Seal–Governor	1
●634A	281168	Seal–Choke Shaft	1
●634B	398970	Washer–Throttle Shaft	1
★842	270920	Seal–Oil Fill Cap	1
★883	272293	Gasket–Exhaust	1
977	494385	Carburetor Gasket Set	1
●987	281166	Seal–Throttle Shaft	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.


PEERLESS TRANSAXLE MODEL NO. 915–019

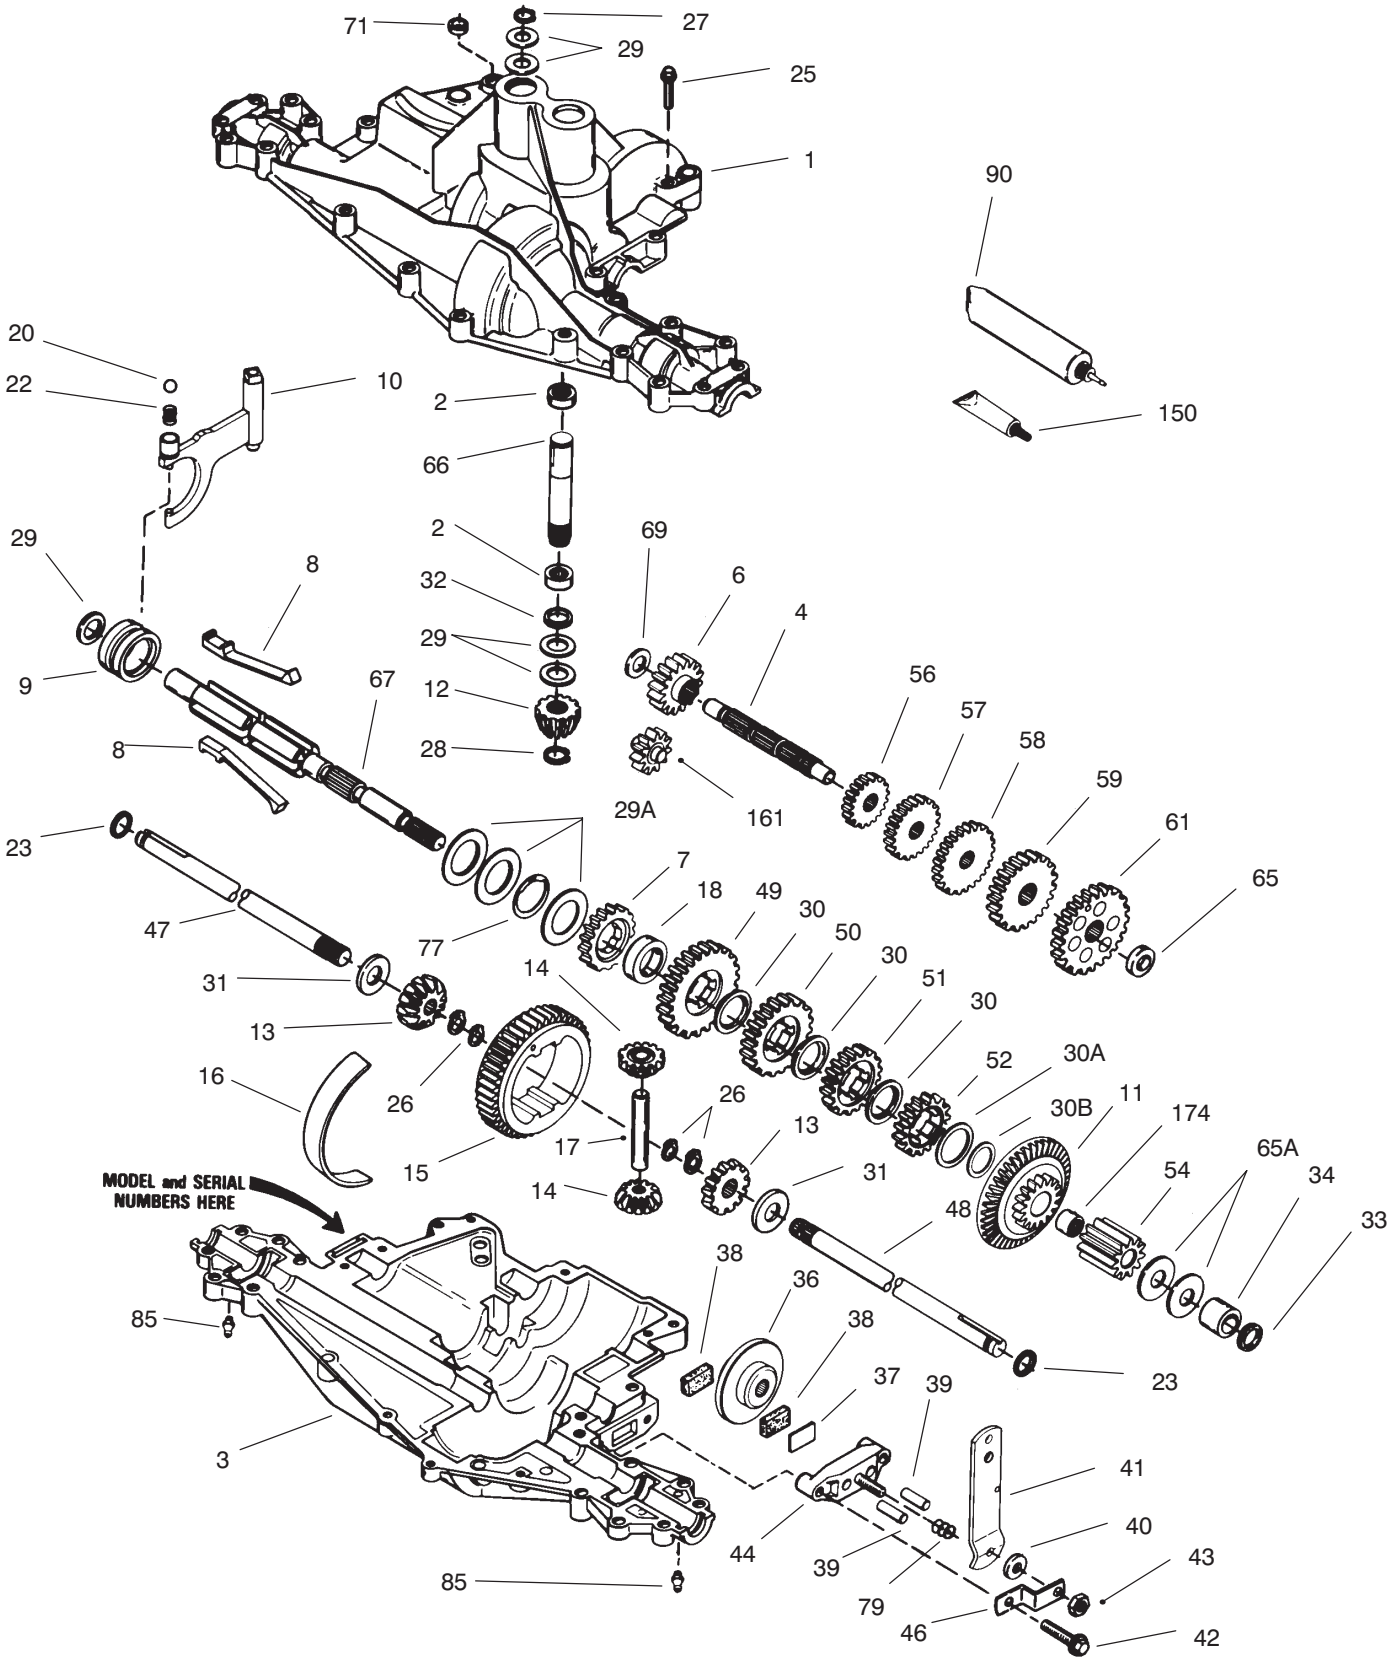

PEERLESS TRANSAXLE MODEL NO. 915–019

Ref. No.	Part No.	Description	No. Used
1	772117	Transaxle Cover	1
2	780086	Needle Bearing	2
3	770114	Transaxle Case	1
4	776300	Countershaft	1
6	778281	Spur Gear (16 Teeth)	1
7	778122A	Spur Gear (22 Teeth)	1
8	792133	Shift Key	4
9	784352	Shift Collar	1
10	784365	Shift Rod & Fork	1
11	778290	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1
12	778262	Bevel Pinion (14 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2
14	778068	Differential Pinion	2
15	778260	Ring Gear	1
16	786150	Bearing Strip	1
17	78139	Drive Pin	1
18	786147	Neutral Spacer	1
20	792139	Ball (3/8” dia.)	1
22	792142	Spring	1
23	788061	Seal Ring	2
25	792073	Screw	17
26	792125	Retaining Ring (pkg. of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	5
29A	780090	Thrust Washer	3
30	780108	Washer	3
30A	789145	Washer	1
30B	780178	Washer	1
31	780001	Washer	2
32	792001	O–Ring	1
33	788076	O–Ring	1
34	780159	Bushing	1
36	790071	Brake Disk	1
37	790007	Brake Pad Plate	1
38	790006	Brake Pad	2
39	786026	Dowel Pin	2
40	792076	Washer	1
41	790045	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774930	Axle (16–3/4” lg.)	1
48	774931	Axle (11–9/16” lg.) (Incl. Ref. #26)	1
49	778124A	Spur Gear (30 Teeth)	1
50	778123A	Spur Gear (25 Teeth)	1
51	778122A	Spur Gear (22 Teeth)	1
52	778273	Spur Gear (19 Teeth)	1
54	778263	Spur Gear (11 Teeth)	1
56	778126A	Spur Gear (20 Teeth)	1
57	778127A	Spur Gear (25 Teeth)	1
58	778128A	Spur Gear (28 Teeth)	1
59	778129A	Spur Gear (30 Teeth)	1
61	778265	Spur Gear (34 Teeth)	1
65	780162	Washer	1
65A	780160	Washer	2
66	776299	Input Shaft (3.522” lg.)	1
67	776352	Shifter & Brake Shaft	1
69	780161	Thrust Washer	1
71	788069	Square Cut Ring	1
77	788078A	Inverted Retaining Ring (pkg. of 2)	1
79	792144	Spring	1
90	788067B	Grease (32 oz. btl. Bentonite grease)	1
150	510334	Gasket Eliminator (Loctite #515)	1
161	776302	Reverse Idler Assembly	1
174	780085	Needle Bearing	1

ELECTRICAL SCHEMATIC

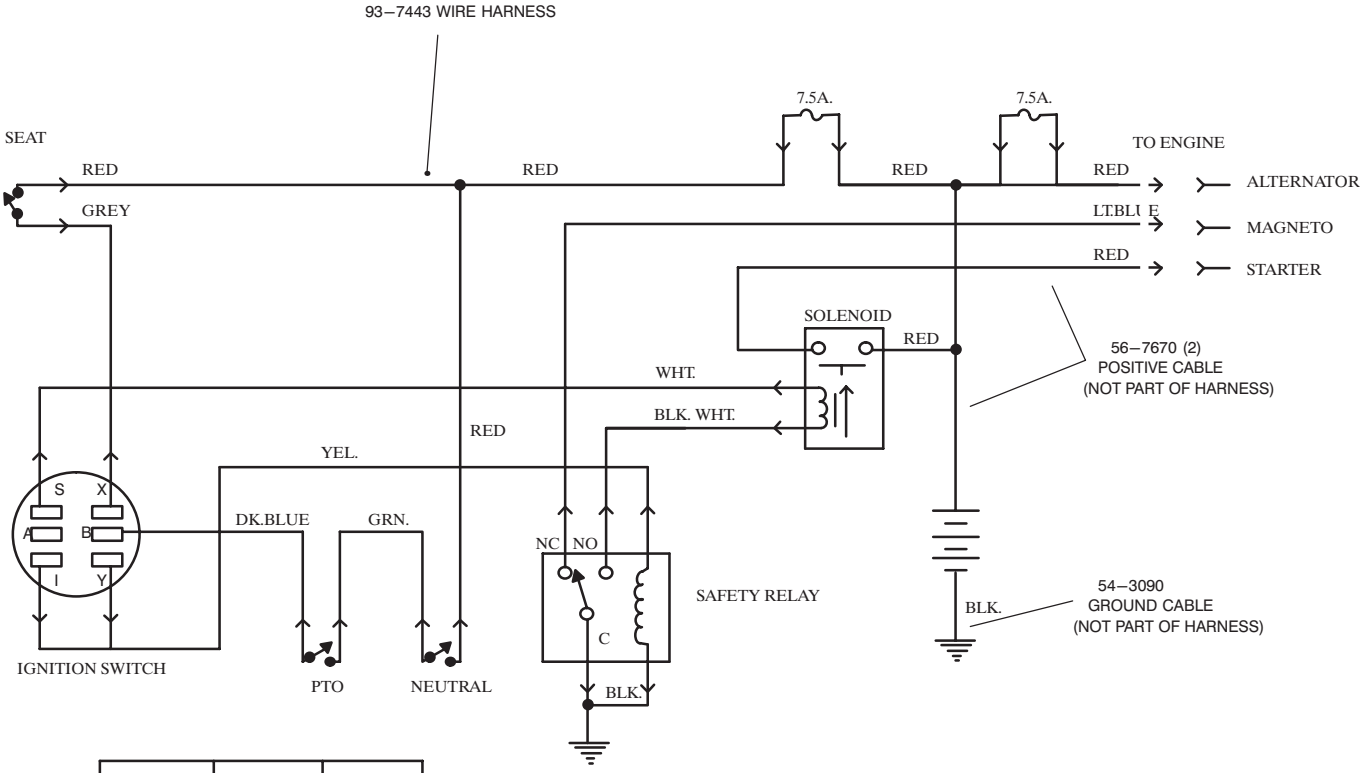

POSITION	CIRCUIT	MAKE
OFF	——	——
RUN	B+I+A	X+Y
START	B+I+S	——

C–2427

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
8830	Clamp	4	17	2
110513	Bearing	2	2	4
114621	Decal – Euro Noise	7	10	1
116397	Relay	6	11	1
147665	Screw – Phillips Hd.	6	1	2
147665	Screw – Phillips Head	4	1	2
3–6498	Washer – Thrust	2	5	5
7–0036	Key – Square	10	24	2
12–5820	Pulley – Idler	9	35	1
12–8819	Loose Parts	1	*	1
12–8829	Loose Parts	1	*	1
12–9020	Retainer – Belt	9	34	1
14–9999	Deck – Cutting, Recycler	12	49	1
19–1470	Bolt – Shoulder	5	20	1
26–0671	Bolt – Blade	12	39	1
27–9080	Bearing – Flange	2	15	4
28–0380	Spacer – Axle, Front	2	24	1
28–0540	Bolt – Shoulder	5	8	1
28–2480	Washer	10	15	4
28–2480	Washer	2	43	2
28–7350	Post – Pivot	12	16	1
28–8070	Lanyard	13	55	1
28–8080	Boot – Terminal	8	22	1
28–8130	Pin – Chute, Locking	13	54	1
38–1420	Switch – Interlock	7	2	1
40–6230	Spring – Torsion	12	51	1
46–6290	O–Ring	13	59	1
47–0010	Arm – Suspension, Front	2	13	2
47–0540	Pedal	3	19	2
47–0550	Bracket – Brake, Pedal	3	17	1
47–0560	Bracket – Clutch, Pedal	3	12	1
47–0570	Spacer – Pedal	3	16	3
47–0590	Spindle – L.H.	2	*	1
47–0600	Spindle – R.H.	2	4	1
47–0610	Tie Rod – Adjustable	2	34	1
47–0700	Bearing – Flange	2	27	1
47–0760	Support – Axle, Front	2	11	1
47–0770	Shaft – Pivot, Pedal	3	8	1
47–0780	Retainer – Shaft	3	9	1
47–0930	Footrest – R.H.	1	22	1
47–0940	Footrest – L.H.	1	16	1
47–0960	Spring – Compression	12	3	1
47–1140	Retainer – Spring, Top	12	2	2
47–1180	Bracket – Engagement	12	1	1
47–1200	Shaft – Adjusting	12	4	1
47–1290	Brake – Parking	1	10	1
47–1840	Bracket – Height–of–Cut	5	13	1
47–1850	Lever – Height–of–Cut	5	6	1
47–1910	Solenoid	6	12	1
47–2060	Bracket – Brake, Parking	1	19	1
47–2961	Hose – Fuel Line	9	9	1
49–3242	Assy. – Wheel, Steering	4	5	1
54–3090	Wire Assembly	4	25	1
55–3570	Cap – Fuel	9	14	1
56–2540	Tube – Vent, Battery	8	37	1
56–6590	Bolt – Wheel	12	33	2
56–7030	Body – Spindle	12	44	1
56–7050	Tank – Fuel	9	15	1
56–7070	Spring – Torsion, Clutch	3	11	1
56–7080	Spring – Torsion, Brake	3	18	1
56–7130	Tower – Front	1	4	1
56–7140	Tower – Rear	1	8	1
56–7170	Guide – Shaft, Steering	1	6	1
56–7180	Cover – Front	2	30	1
56–7240	Bracket – Retaining, Spring	3	3	1
56–7400	Arm – Lever, H.O.C.	5	24	1
56–7430	Pin – Support	11	22	2
56–7470	Bracket – Rack, Steering	2	33	1
56–7500	Shaft – Steering	2	31	1
56–7520	Bushing – Sector	2	22	1
56–7530	Bolt – Shoulder	2	20	1
56–7570	Rod – Engagement	3	15	1
56–7650	Tube – Pivot	3	14	1
56–7670	Cable – Battery, Positive	9	21	1
56–7670	Cable – Positive	6	17	1
56–7710	Hold Down – Battery	8	26	1
56–7720	Post – Battery	8	21	1
57–4060	Retainer – Front	9	16	1
57–4070	Retainer – Rear	9	20	1
57–9940	Spring – Brake	10	17	1
60–9730	Guide – Belt	12	26	2
61–9760	Wheel – Deck	12	32	2
61–9780	Cap – Hub	10	14	2
61–9780	Cap – Hub	2	44	2
62–3760	Screw – Cap Hex. Hd.	9	27	1
62–3930	Spring – Extension	5	5	1
62–3930	Spring – Extension	3	6	1
62–4300	Pad – Battery	8	25	1
62–5480	Isolator – Seat	7	11	4
62–5490	Support – Fuel Line	9	10	1
63–5540	Base – Seat	7	3	1
63–5670	Tube – Bumper, Seat Rod	7	7	1
63–5830	Link – Suspension, Deck	5	16	2
63–8360	Key	4	6	1
65–2920	Pad – Pedal, Foot	3	5	2
65–5670	Bolt – Shoulder	5	21	1
65–5670	Screw – Shoulder	8	34	1
66–6740	Cover – Shaft, Steering	4	2	1
76–1540	Arm – Suspension R.H.	11	16	1
76–1550	Arm – Suspension L.H.	11	*	1
76–1560	Spacer	11	13	4
80–2310	Bracket – Bell Crank Mount	5	2	1
80–2321	Bracket – H.O.C., Engage	5	15	1
80–2330	Link – Bell Crank	8	35	1
80–2340	Bracket – Pivot, Inner	8	6	1
80–2350	Pivot – Outer	8	4	1
80–2360	Crank – Bell, Deck Engage	5	22	1
80–2370	Shaft W.A. – Pivot	8	5	1
80–2400	Lever W.A. – Engage	8	2	1
80–2430	Axle – Front	2	18	1
80–2450	Rack – Steering	2	19	1
80–2460	Tie Rod – Fixed	2	*	1
80–2530	Assembly – Brake	12	50	1
80–2550	Pad – Brake	12	6	1
80–2560	Plate – Deck, Brake Mtg.	12	47	1
80–2570	Pin – Clevis	12	5	2
80–2580	Rod – Adjusting	12	52	1
80–2600	Battery – 12 Volt	8	24	1
80–2620	Rod – Base, Seat	7	8	1
80–2630	Kicker – 32	12	29	4
80–4350	Shaft – Spindle	12	41	1
80–4370	Shield – Bearing	12	42	1
80–4390	Spacer – Hardened	12	43	1
80–4430	Blade – Recycler	12	40	1
80–4470	Pulley	12	22	1
80–4490	Ring – Deck	12	48	4
80–4570	Stiffener – Blade	12	37	1
82–6150	Assy. – Cover, Discharge	12	14	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
83–7010	Brace – Cover, Rear	12	17	1
83–7020	Spacer – Bearing	12	25	1
88–3950	Assembly – Seat	7	1	1
88–4490	Reducer – Throttle	9	*	1
88–4540	Hinge – Deflector Danger	14	12	1
88–6150	Rod – Deflector Hinge	14	11	1
88–6160	Spring – Torsion	14	10	1
88–9730	Rim	10	12	2
88–9800	Cover – Gate, Shift	6	24	1
88–9830	Switch – Ignition	4	10	1
88–9930	Switch – Micro, Short	6	4	1
88–9931	Switch – Micro	4	24	1
92–0860	Frame	6	14	1
92–0861	Frame – Rear	11	8	1
92–0862	Transaxle	10	8	1
92–0864	Standbar	11	5	1
92–0865	Support – Axle	11	9	2
92–0866	Body W.A. – Seat Support	6	8	1
92–0870	V–Belt – Traction	10	4	1
92–0871	Rod – Traction	9	29	1
92–0872	Rod – Brake	10	18	1
92–0873	Pulley – Engine	9	24	1
92–0874	Pulley	10	7	1
92–0875	V–Belt	12	24	1
92–0876	Guard – Front	2	37	1
92–0877	Panel – Seat Base, R.H.	6	21	1
92–0878	Panel L.H. – Base, Seat	5	9	1
92–0879	Spring	9	1	1
92–0880	Arm – Shift, Transaxle	10	23	1
92–0881	Bracket W.A. – Traction	9	4	1
92–0883	Plate – Mounting, Idler	9	2	1
92–0884	Lever W.A. – Shaft	8	10	1
92–0887	Support – Shift, Lower	8	19	1
92–0888	Support – Shift, Upper	8	14	1
92–0889	Link – Shift	10	1	1
92–0890	Control – Throttle	4	15	1
92–0891	Shaft W. A. – Shift	8	16	1
92–0894	Spring – Torsion	8	11	1
92–0895	Gate – Shift	6	3	1
92–0896	Retainer – Spring	8	29	1
92–0897	Spacer	11	1	1
92–0898	Guide – Belt	11	2	1
92–0899	Guide – Belt, Lower	10	21	1
92–2493	Spring – Torsion	14	3	1
92–7974	Tread – Foot R.H.	1	*	1
92–7975	Tread – Foot L.H.	1	15	1
92–7982	Decal – Control Panel	5	27	1
92–7983	Decal – Deck Engage	4	9	1
92–7984	Decal – H.O.C.	4	21	1
92–7987	Decal – Recycler	1	3	1
92–7988	Decal – Recycler	12	35	1
92–7990	Insert – Wheel, Steering	4	4	1
92–8757	Decal – Engine	9	37	1
92–8916	Bolt – Shoulder	14	8	1
93–0231	Screw – Pan Hd.	14	4	4
93–3190	Boot – Terminal	6	25	1
93–6668	Decal – Battery Charging	8	38	1
93–7006	Decal – Instructions	4	23	1
93–7007	Decal – Shift Pattern	6	2	1
93–7008	Decal – Brake, Parking	1	9	1
93–7009	Decal – Deflector Danger	14	5	1
93–7010	Decal – Danger	14	7	1
93–7010	Decal – Danger	12	34	1
93–7276	Decal – Danger	8	39	1
93–7446	Guard – Muffler	9	38	1
93–7694	Deflector Ass'y	14	9	1
93–7696	Kicker – CE	14	6	2
93–9354	Decal – Battery	8	40	1
94–1277	Screw	9	40	1
94–1278	Screw	9	39	3
94–3516	Decal – L.H.	5	10	1
95–2747	Fitting – Washout	13	58	1
95–7850	Deck Assembly	12	49	1
217–80	Rim	2	3	2
218–461	Nut – Lock	4	7	1
218–560	Cap – Battery	8	28	6
231–116	Tire	2	42	2
231–117	Tire	10	10	2
232–27	Stem – Valve	10	16	2
232–27	Valve Stem w/Cap	2	41	2
232–39	Tube – Inner	10	11	2
232–44	Tube – Inner	2	{	2
233–25	Knob	4	13	1
233–48	Knob	8	1	2
233–48	Knob	5	19	1
237–143	O–Ring	8	27	2
2411–32	Ball Joint	8	31	1
2412–68	Clamp – Wire	7	4	1
2412–98	Clamp – Hose	9	8	2
251–297	Bearing	12	21	2
257–11	Washer	8	18	1
283–2	Pin – Clevis	2	16	2
283–2	Pin – Clevis	12	45	2
283–42	Pin – Clevis	11	18	2
283–52	Pin – Clevis	1	20	1
288–10	Cap – Pipe	9	22	1
289–19	Nipple – Pipe	9	23	1
302–5	Fitting – Grease	2	1	2
302–5	Fitting – Grease	2	17	2
302–5	Fitting – Grease	10	25	2
321–4	Screw – Cap Hex. Hd.	12	8	1
321–4	Screw – Cap Hex. Hd.	3	10	1
321–4	Screw – Cap Hex. Hd.	5	11	4
321–4	Screw – Cap Hex. Hd.	8	12	2
321–4	Screw – Cap Hex. Hd.	6	13	2
321–4	Screw – Cap Hex. Hd.	1	21	2
322–5	Screw – Cap Hex. Hd.	3	2	1
322–5	Screw – Cap Hex. Hd.	11	6	15
322–5	Screw – Cap Hex. Hd.	6	6	2
322–5	Screw – Cap Hex. Hd.	3	7	2
322–5	Screw – Cap Hex. Hd.	8	8	4
322–5	Screw – Cap Hex. Hd.	12	9	6
322–5	Screw – Cap Hex. Hd.	2	9	8
322–5	Screw – Cap Hex. Hd.	5	12	2
322–5	Screw – Cap Hex. Hd.	1	14	10
322–5	Screw – Cap Hex. Hd.	4	16	8
322–6	Screw – Cap Hex. Hd.	12	20	1
322–7	Screw – Cap Hex. Hd.	9	28	4
322–12	Screw – Cap Hex. Hd.	11	10	4
322–14	Screw – Cap Hex. Hd.	11	11	2
322–50	Screw – Cap Hex. Hd.	11	4	1
323–9	Screw – Cap Hex. Hd.	9	32	1
323–9	Screw – Hex Hd. Cap	11	21	2
323–14	Screw – Hex Hd. Cap	11	17	2
325–6	Screw – Cap Hex. Hd.	2	8	1
329–4	Screw – Cap Hex. Hd.	10	3	1
3218–1	Nut – Jam	6	18	3
3219–7	Nut – Hex. Hd.	12	23	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3220–2	Nut – Hex. Jam	2	7	1
3229–1	Bolt – Carriage	13	60	2
3230–18	Bolt – Carriage	2	32	2
3253–3	Washer – Lock	10	2	1
3253–3	Washer – Lock	6	16	2
3253–3	Washer – Lock	9	18	2
3253–6	Washer – Lock	9	26	1
3254–2	Washer – Lock, Int. Tooth	9	5	3
3254–2	Washer – Lock, Int. Tooth	10	20	1
3254–5	Washer – Lock, Int. Tooth	4	8	1
3256–1	Washer – Flat	13	61	2
3256–14	Washer – Flat	6	9	1
3256–22	Washer – Flat	8	13	2
3256–22	Washer – Flat	1	18	2
3256–22	Washer – Flat	9	30	1
3256–23	Washer – Flat	11	7	12
3256–23	Washer – Flat	6	7	2
3256–23	Washer – Flat	1	13	8
3256–23	Washer – Flat	5	17	4
3256–23	Washer – Flat	4	18	7
3256–23	Washer – Flat	2	23	6
3256–23	Washer – Flat	12	27	4
3256–23	Washer – Flat	8	33	2
3256–24	Washer – Flat	1	11	1
3256–24	Washer – Flat	11	15	4
3256–24	Washer – Flat	9	33	1
3256–25	Washer – Flat	9	25	1
3256–26	Washer – Flat	5	25	2
3256–27	Washer – Flat	3	13	3
3256–35	Washer – Flat	1	1	4
3256–49	Washer – Flat	13	56	1
3256–57	Washer – Flat	9	36	1
3256–58	Washer – Fender	14	2	1
3257–23	Key	10	6	1
3272–6	Pin – Cotter	3	1	3
3272–6	Pin – Cotter	5	4	2
3272–6	Pin – Cotter	1	12	1
3272–6	Pin – Cotter	2	14	2
3272–6	Pin – Cotter	10	22	1
3272–6	Pin – Cotter	9	31	1
3272–6	Pin – Cotter	12	36	2
3272–12	Pin – Cotter	2	45	2
3272–16	Pin – Cotter	10	9	1
3274–51	Screw – Hex. Socket Hd.	9	19	2
3290–134	Screw – Machine	6	10	1
3290–191	Nut – Speed	6	23	2
3290–282	Rivet	12	7	2
3290–282	Rivet	13	53	2
3290–307	Pin – Cotter, Hair	7	9	1
3290–354	Nut – Double	6	20	1
3290–354	Nut – Double	4	22	1
3290–378	Tie – Cable	7	6	1
3290–378	Tie – Cable	4	26	1
3290–413	Washer – Belleville	5	7	8
3290–465	Washer – Belleville	13	57	1
3290–496	Nut – Retainer	12	28	4
3296–2	Nut – Lock	6	19	1
3296–4	Nut – Lock	8	30	1
3296–4	Nut – Lock	2	36	4
3296–8	Nut – Lock	2	12	1
3296–8	Nut – Lock	5	23	1
3296–8	Nut – Lock	8	36	1
3296–8	Nut – Lock	12	46	1
3296–16	Nut – Lock	13	62	2
3296–29	Nut – Lock	5	1	7
3296–29	Nut – Lock	1	2	14
3296–29	Nut – Lock	11	3	17
3296–29	Nut – Lock	3	4	3
3296–29	Nut – Lock	6	5	2
3296–29	Nut – Lock	9	6	2
3296–29	Nut – Lock	2	10	8
3296–29	Nut – Lock	10	19	1
3296–29	Nut – Lock	12	19	24
3296–29	Nut – Lock	4	19	4
3296–29	Nut – Lock	8	32	4
3296–39	Nut – Lock	9	3	1
3296–39	Nut – Lock	11	19	2
3296–39	Nut – Lock	12	31	2
3296–42	Nut – Lock	14	1	1
3296–42	Nut – Lock	6	15	2
3296–42	Nut – Lock	8	15	2
3296–42	Nut – Lock	1	17	2
3296–42	Nut – Lock	5	18	1
3296–47	Nut – Lock	11	12	1
3296–59	Nut – Lock	11	14	3
3296–59	Nut – Lock	12	15	1
32103–2	Nut – Wing	12	18	1
32103–12	Nut – Wing	8	20	1
32103–22	Nut – Wing	8	23	2
32104–76	Screw – Self Tap Acorn Hd.	1	5	9
32104–76	Screw – Self–Tapping	4	14	2
32107–11	Nut – Square	9	17	2
32120–47	Ring – Retaining	8	7	1
32120–64	Ring – Retaining	10	5	1
32121–9	Pin – Roll	2	28	1
32121–16	Pin – Roll	8	17	1
32121–25	Pin – Roll	8	3	1
32121–78	Pin – Roll	4	3	1
32121–78	Pin – Roll	8	9	1
32122–14	Screw – Truss, Phillips Hd.	12	38	8
32128–20	Nut – Flange Hd.	7	5	4
32128–21	Nut – Lock, Flange Hd.	2	25	1
32128–23	Nut – Lock, Flange Hd.	2	26	1
32144–4	Screw – Special	2	21	2
32144–14	Screw	9	12	2
32144–14	Screw – Thread Forming	2	38	2
32144–112	Screw – Sems	6	22	2
32151–48	Ring – Retaining	10	13	2
32151–48	Ring – Retaining, External	2	35	2
32151–61	Ring – Retaining	5	14	2

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit . . . . . Model No. 79095
Twin Bag Bagger Kit . . . . . Model No. 79085
Tire Chains . . . . . Part No. 23–2340
Wet Grass Bagging Kit . . . . . Part No. 38–5730

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								