
FORM NO. 3318–327

TORO®

MODEL NO. 70131–6900001 & UP

PARTS CATALOG

WHEEL HORSE®
13–32 RIDING MOWER

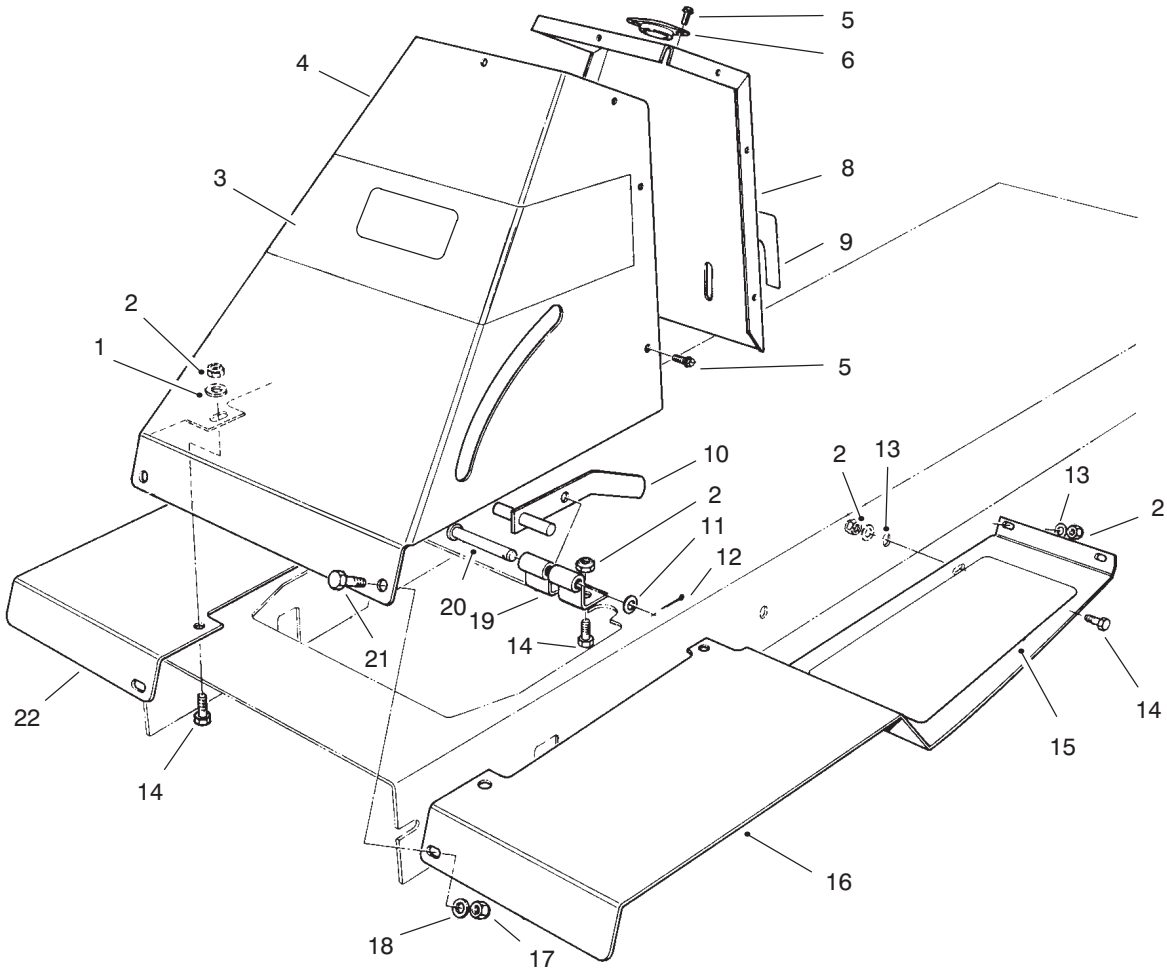

C–1933A

FRONT TOWER ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3256–35	Washer – Flat	4
2	3296–29	Nut – Lock	14
3	92–7987	Decal – Recycler	1
4	56–7130	Tower – Front	1
5	32104–76	Screw – Self Tap Acorn Hd.	9
6	56–7170	Guide – Shaft, Steering	1
8	56–7140	Tower – Rear	1
9	93–7008	Decal – Brake, Parking	1
10	47–1290	Brake – Parking	1
11	3256–24	Washer – Flat	1
12	3272–6	Pin – Cotter	1
13	3256–23	Washer – Flat	8
14	322–5	Screw – Cap Hex. Hd.	10

Ref. No.	Part No.	Description	No. Used
15	92–7975	Tread – Foot L.H.	1
*	92–7974	Tread – Foot R.H.	1
16	47–0940	Footrest – L.H.	1
17	3296–42	Nut – Lock	2
18	3256–22	Washer – Flat	2
19	47–2060	Bracket – Brake, Parking	1
20	283–52	Pin – Clevis	1
21	321–4	Screw – Cap Hex. Hd.	2
22	47–0930	Footrest – R.H.	1
*	12–8829	Loose Parts	1
*	12–8819	Loose Parts (Includes Steering Wheel)	1

*Not Illustrated

© The TORO Company –1995
All Rights Reserved

TPS

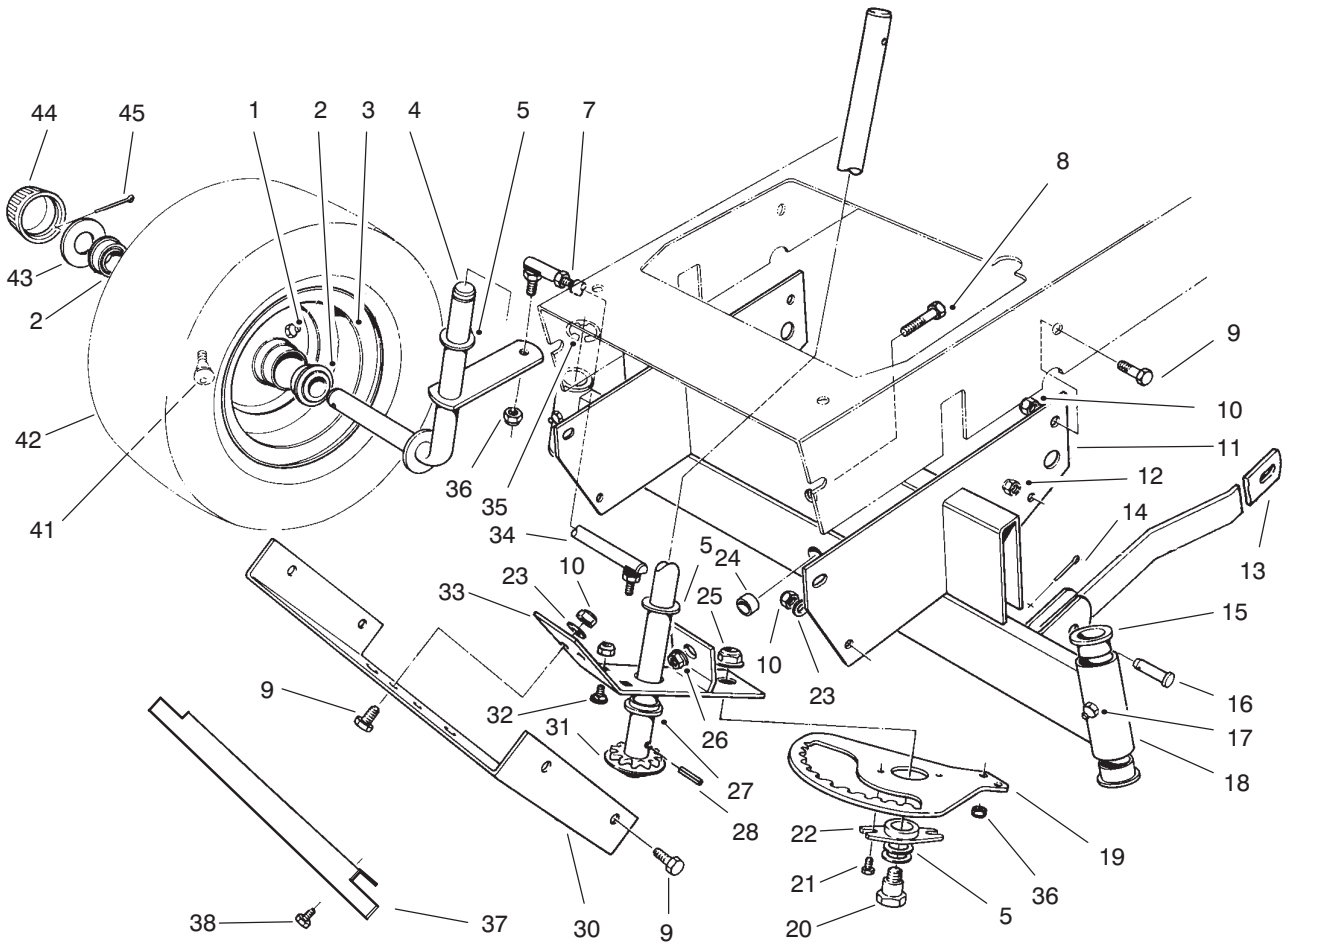


C–0438C

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302–5	Fitting – Grease	2
2	110513	Bearing	4
3	217–80	Rim	2
4	47–0600	Spindle – R.H.	1
*	47–0590	Spindle – L.H.	1
5	3–6498	Washer – Thrust	5
7	3220–2	Nut – Hex. Jam	1
8	325–6	Screw – Cap Hex. Hd.	1
9	322–5	Screw – Cap Hex. Hd.	8
10	3296–29	Nut – Lock	8
11	47–0760	Support – Axle, Front	1
12	3296–8	Nut – Lock	1
13	47–0010	Arm – Suspension, Front	2
14	3272–6	Pin – Cotter	2
15	27–9080	Bearing – Flange	4
16	283–2	Pin – Clevis	2
17	302–5	Fitting – Grease	2
18	80–2430	Axle – Front (Incl. Ref. #15 & 17)	1
19	80–2450	Rack – Steering	1
20	56–7530	Bolt – Shoulder	1
21	32144–4	Screw – Special	2
22	56–7520	Bushing – Sector	1
23	3256–23	Washer – Flat	6

Ref. No.	Part No.	Description	No. Used
24	28–0380	Spacer – Axle, Front	1
25	32128–21	Nut – Lock, Flange Hd.	1
26	32128–23	Nut – Lock, Flange Hd.	1
27	47–0700	Bearing – Flange	1
28	32121–9	Pin – Roll	1
30	56–7180	Cover – Front	1
31	56–7500	Shaft – Steering	1
32	3230–18	Bolt – Carriage	2
33	56–7470	Bracket – Rack, Steering (Incl. Ref. #27)	1
34	47–0610	Tie Rod – Adjustable (Incl. Ref. #7)	1
*	80–2460	Tie Rod – Fixed	1
35	32151–48	Ring – Retaining, External	2
36	3296–4	Nut – Lock	4
37	92–0876	Guard – Front	1
38	32144–14	Screw – Thread Forming	2
41	232–27	Valve Stem w/Cap	2
42	231–116	Tire	2
43	28–2480	Washer	2
44	61–9780	Cap – Hub	2
45	3272–12	Pin – Cotter	2
†	232–44	Tube – Inner	2

*Not Illustrated
†Service Replacement Part

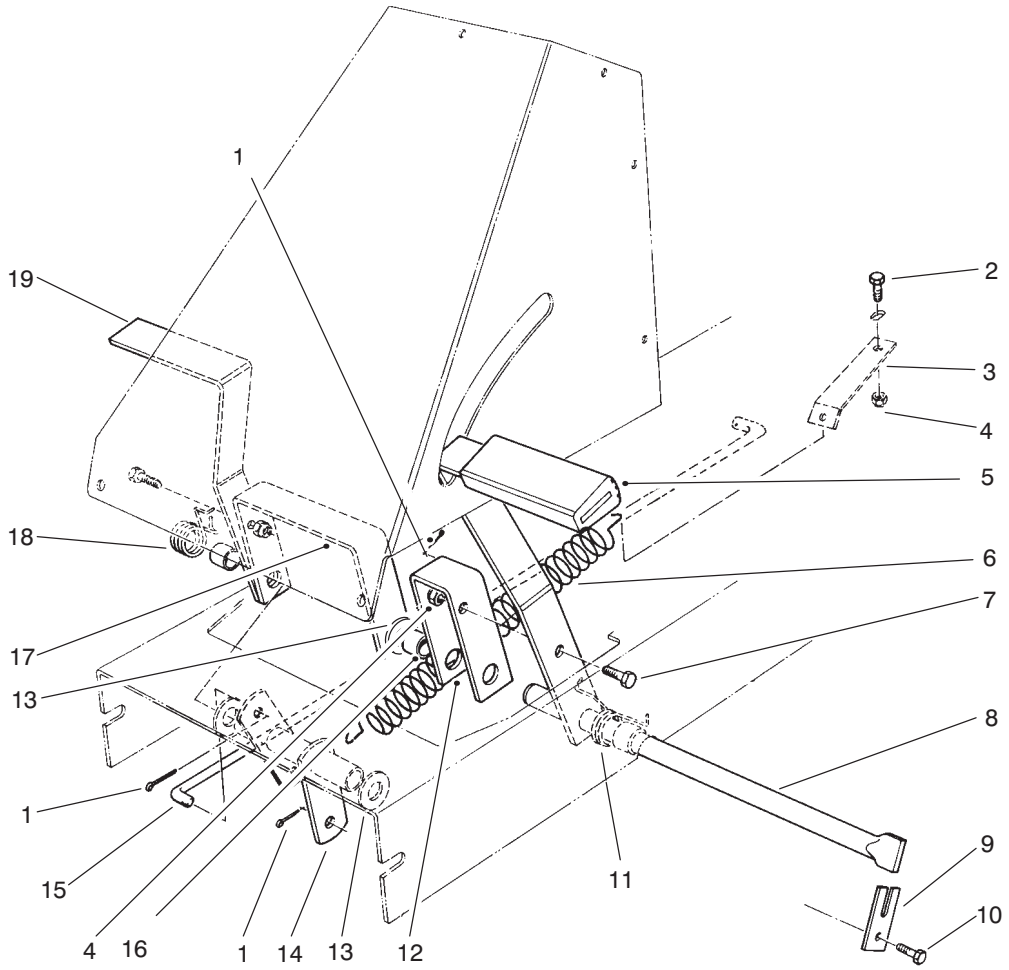


C–0439A

BRAKE & CLUTCH ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3272–6	Pin – Cotter	3
2	322–5	Screw – Cap Hex. Hd.	1
3	56–7240	Bracket – Retaining, Spring	1
4	3296–29	Nut – Lock	3
5	65–2920	Pad – Pedal, Foot	2
6	62–3930	Spring – Extension	1
7	322–5	Screw – Cap Hex. Hd.	2
8	47–0770	Shaft – Pivot, Pedal	1
9	47–0780	Retainer – Shaft	1
10	321–4	Screw – Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
11	56–7070	Spring – Torsion, Clutch	1
12	47–0560	Bracket – Clutch, Pedal	1
13	3256–27	Washer – Flat	3
14	56–7650	Tube – Pivot	1
15	56–7570	Rod – Engagement	1
16	47–0570	Spacer – Pedal	3
17	47–0550	Bracket – Brake, Pedal	1
18	56–7080	Spring – Torsion, Brake	1
19	47–0540	Pedal	2

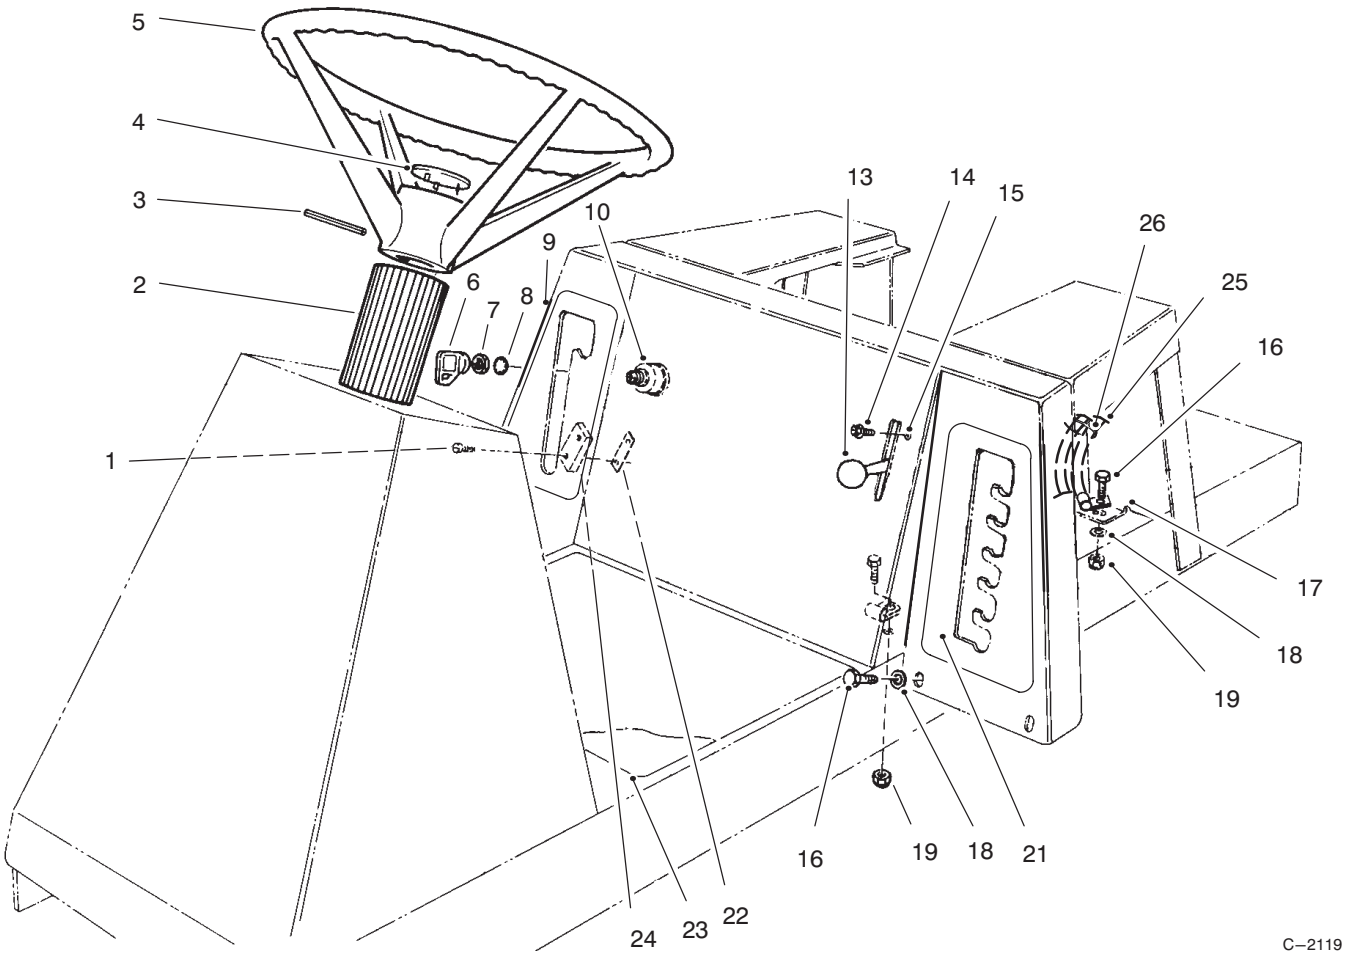

STEERING WHEEL, SWITCHES & DECALS

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Head	2
2	66–6740	Cover – Shaft, Steering	1
3	32121–78	Pin – Roll	1
4	92–7990	Insert – Wheel, Steering	1
5	49–3242	Assy. – Wheel, Steering (Incl. Ref. #4)	1
6	63–8360	Key	1
7	218–461	Nut – Lock	1
8	3254–5	Washer – Lock, Int. Tooth	1
9	92–7244	Decal – Deck Engage	1
10	88–9830	Switch – Ignition (Incl. Ref. #6–8)	1
13	233–25	Knob	1
14	32104–76	Screw – Self–Tapping	2
15	92–0890	Control – Throttle (Incl. Ref. #13)	1
16	322–5	Screw – Cap Hex. Hd.	8
17	8830	Clamp	2
18	3256–23	Washer – Flat	7
19	3296–29	Nut – Lock	4
21	92–7245	Decal – H.O.C.	1
22	3290–354	Nut – Double	1
23	93–9498	Decal – Instructions	1
24	88–9932	Switch – Micro	1
25	54–3090	Wire Assembly	1
26	3290–378	Tie – Cable	1

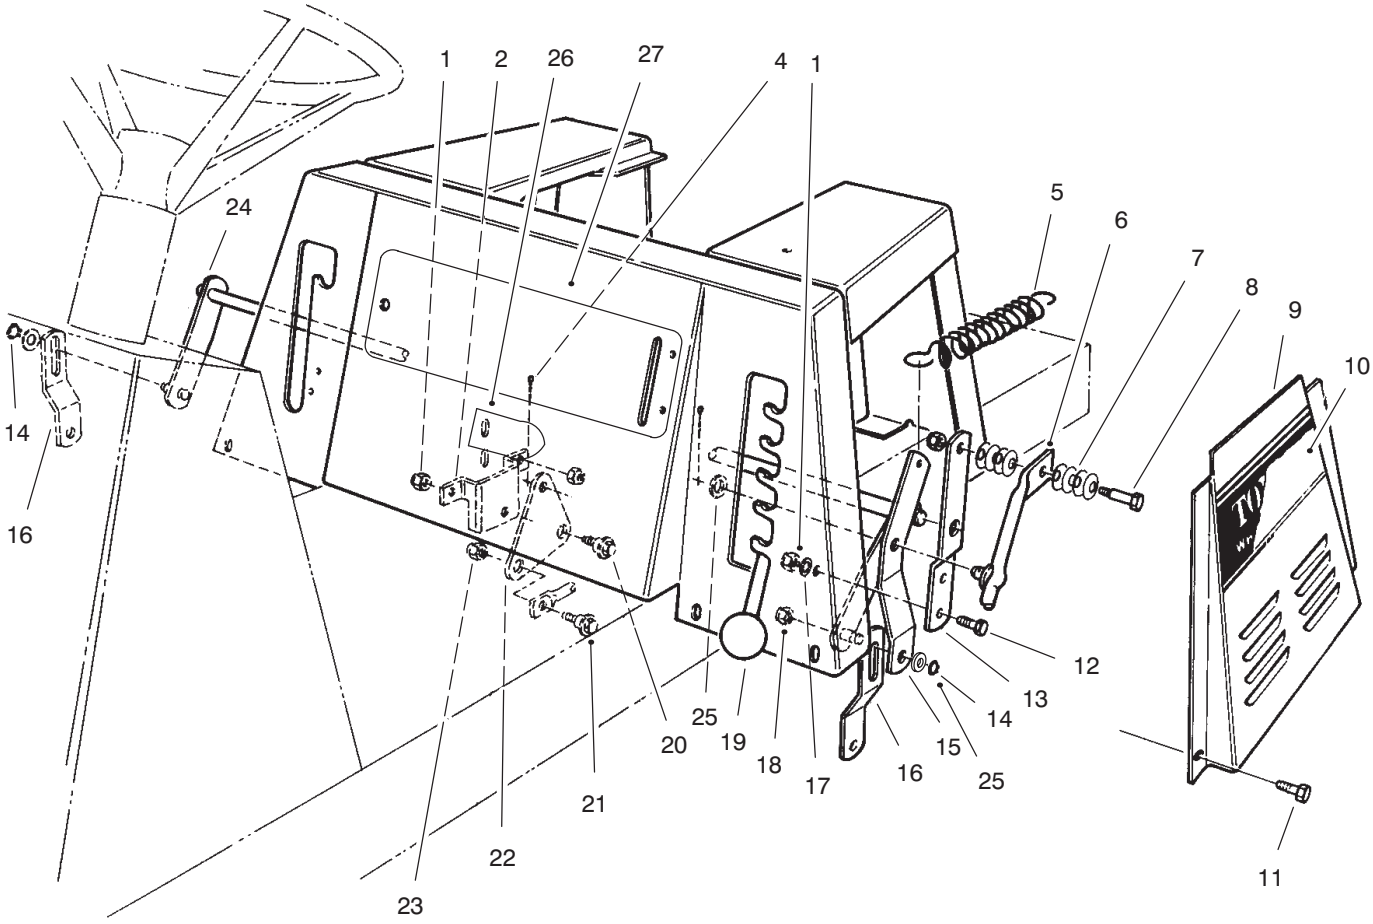


C–2429

LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–29	Nut – Lock	7
2	80–2310	Bracket – Bell Crank Mount	1
4	3272–6	Pin – Cotter	2
5	62–3930	Spring – Extension	1
6	47–1850	Lever – Height–of–Cut	1
7	3290–413	Washer – Belleville	8
8	28–0540	Bolt – Shoulder	1
9	92–0878	Panel L.H. – Base, Seat	1
10	94–3516	Decal – L.H.	1
11	321–4	Screw – Cap Hex. Hd.	4
12	322–5	Screw – Cap Hex. Hd.	2
13	47–1840	Bracket – Height–of–Cut	1
14	32151–61	Ring – Retaining	2

Ref. No.	Part No.	Description	No. Used
15	80–2320	Bracket – H.O.C., Engage	1
16	63–5830	Link – Suspension, Deck	2
17	3256–23	Washer – Flat	4
18	3296–42	Nut – Lock	1
19	233–48	Knob	1
20	19–1470	Bolt – Shoulder	1
21	65–5670	Bolt – Shoulder	1
22	80–2360	Crank – Bell, Deck Engage	1
23	3296–8	Nut – Lock	1
24	56–7400	Arm – Lever, H.O.C.	1
25	3256–26	Washer – Flat	2
26	76–1340	Decal – Made In USA	1
27	92–7243	Decal – Control Panel	1


3318–327

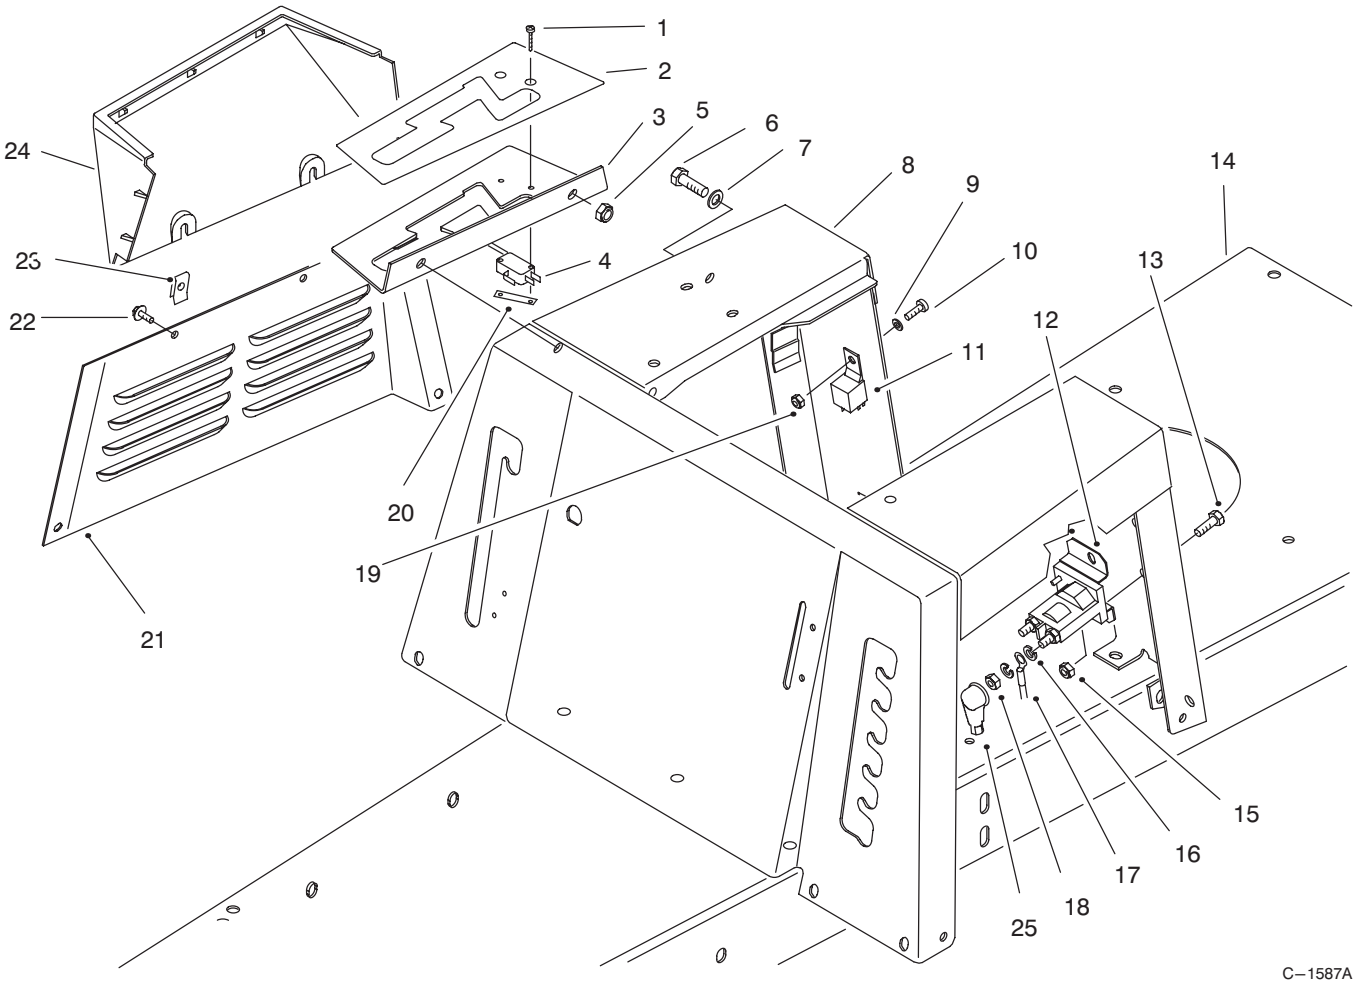

SEAT BODY & SIDE PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	147665	Screw – Phillips Hd.	2
2	92–1751	Decal – Shift Pattern	1
3	92–0895	Gate – Shift	1
4	88–9930	Switch – Micro, Short	1
5	3296–29	Nut – Lock	2
6	322–5	Screw – Cap Hex. Hd.	2
7	3256–23	Washer – Flat	2
8	92–0866	Body W.A. – Seat Support	1
9	3256–14	Washer – Flat	1
10	3290–134	Screw – Machine	1
11	116397	Relay	1
12	47–1910	Solenoid	1
13	321–4	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
14	92–0860	Frame	1
15	3296–42	Nut – Lock	2
16	3253–3	Washer – Lock	2
17	56–7670	Cable – Positive	1
18	3218–1	Nut – Jam	3
19	3296–2	Nut – Lock	1
20	3290–354	Nut – Double	1
21	92–0877	Panel – Seat Base, R.H.	1
22	32144–112	Screw – Sems	2
23	3290–191	Nut – Speed	2
24	88–9800	Cover – Gate, Shift	1
25	93–3190	Boot – Terminal	1

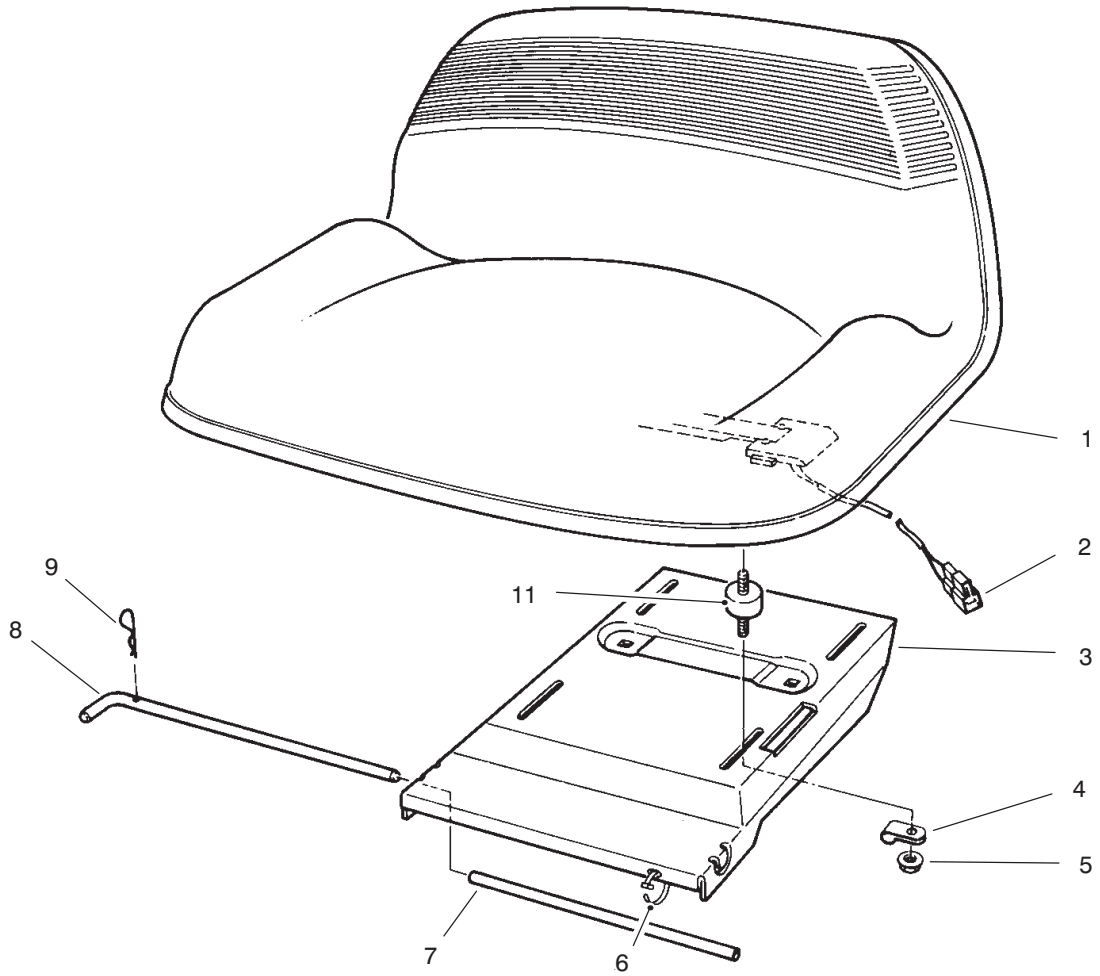


SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–3950	Assembly – Seat	1
2	38–1420	Switch – Interlock	1
3	63–5540	Base – Seat	1
4	2412–68	Clamp – Wire	1
5	32128–20	Nut – Flange Hd.	4

Ref. No.	Part No.	Description	No. Used
6	3290–378	Tie – Cable	1
7	63–5670	Tube – Bumper, Seat Rod	1
8	80–2620	Rod – Base, Seat	1
9	3290–307	Pin – Cotter, Hair	1
11	62–5480	Isolator – Seat	4

3318–327

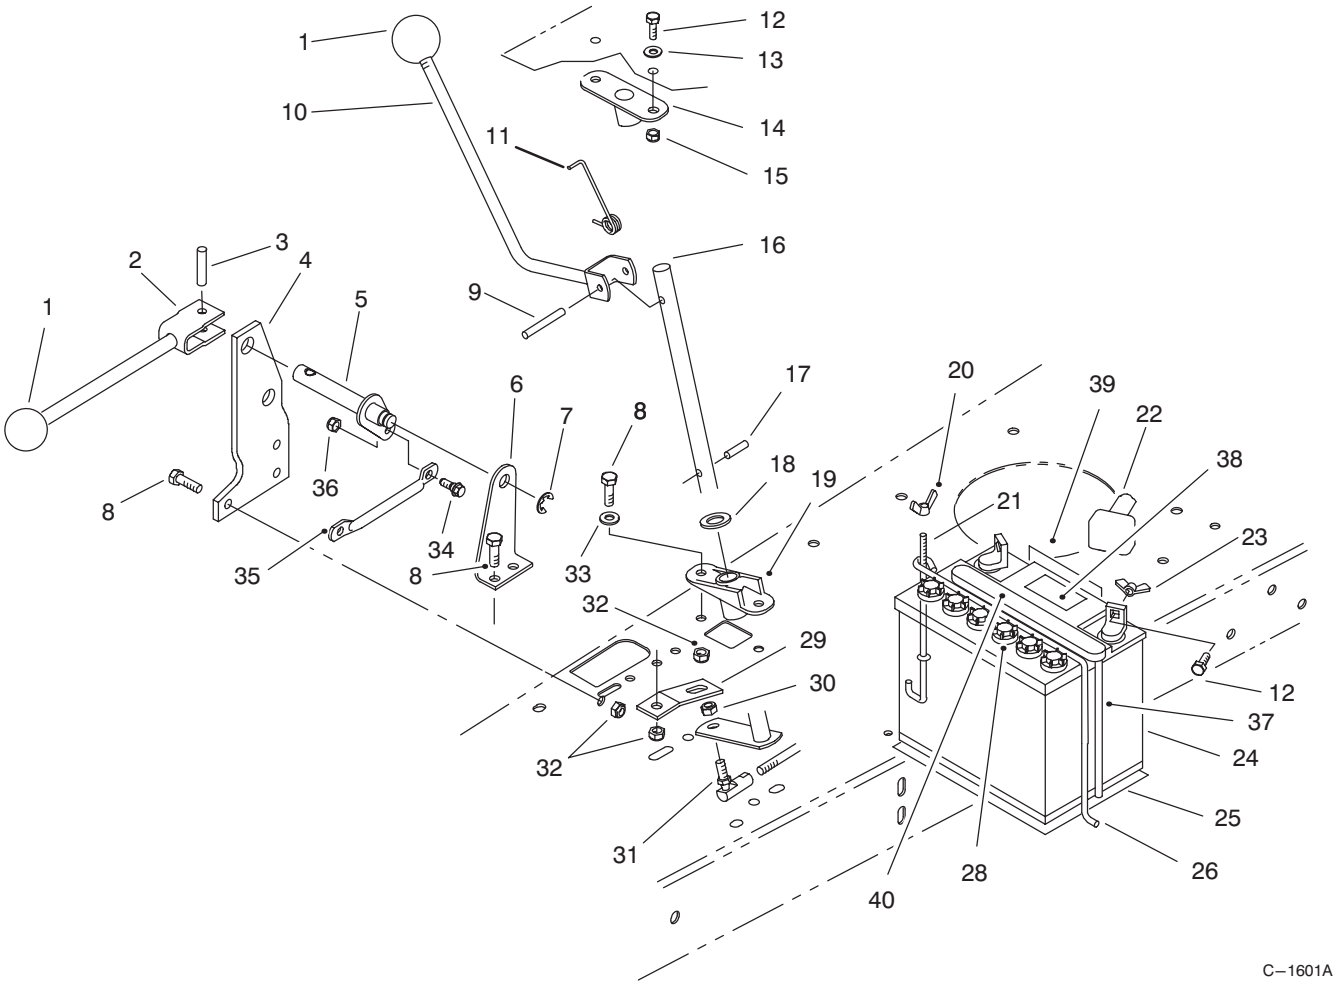


C–1601A

TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233–48	Knob	2
2	80–2400	Lever W.A. – Engage	1
3	32121–25	Pin – Roll	1
4	80–2350	Pivot – Outer	1
5	80–2370	Shaft W.A. – Pivot	1
6	80–2340	Bracket – Pivot, Inner	1
7	32120–47	Ring – Retaining	1
8	322–5	Screw – Cap Hex. Hd.	4
9	32121–78	Pin – Roll	1
10	92–0884	Lever W.A. – Shaft	1
11	92–0894	Spring – Torsion	1
12	321–4	Screw – Cap Hex. Hd.	2
13	3256–22	Washer – Flat	2
14	92–0888	Support – Shift, Upper	1
15	3296–42	Nut – Lock	2
16	92–0891	Shaft W. A. – Shift	1
17	32121–16	Pin – Roll	1
18	257–11	Washer	1
19	92–0887	Support – Shift, Lower	1
20	32103–12	Nut – Wing	1
21	56–7720	Post – Battery	1

Ref. No.	Part No.	Description	No. Used
22	28–8080	Boot – Terminal	1
23	32103–22	Nut – Wing	2
24	80–2600	Battery – 12 Volt (Incl. Ref. #28 & 37)	1
25	62–4300	Pad – Battery	1
26	56–7710	Hold Down – Battery	1
27	237–143	O–Ring	2
28	218–560	Cap – Battery	6
29	92–0896	Retainer – Spring	1
30	3296–4	Nut – Lock	1
31	2411–32	Ball Joint	1
32	3296–29	Nut – Lock	4
33	3256–23	Washer – Flat	2
34	65–5670	Screw – Shoulder	1
35	80–2330	Link – Bell Crank	1
36	3296–8	Nut – Lock	1
37	56–2540	Tube – Vent, Battery	1
38	93–6668	Decal – Battery Charging Instructions	1
39	93–7276	Decal – Danger	1
40	93–9354	Decal – Battery	1

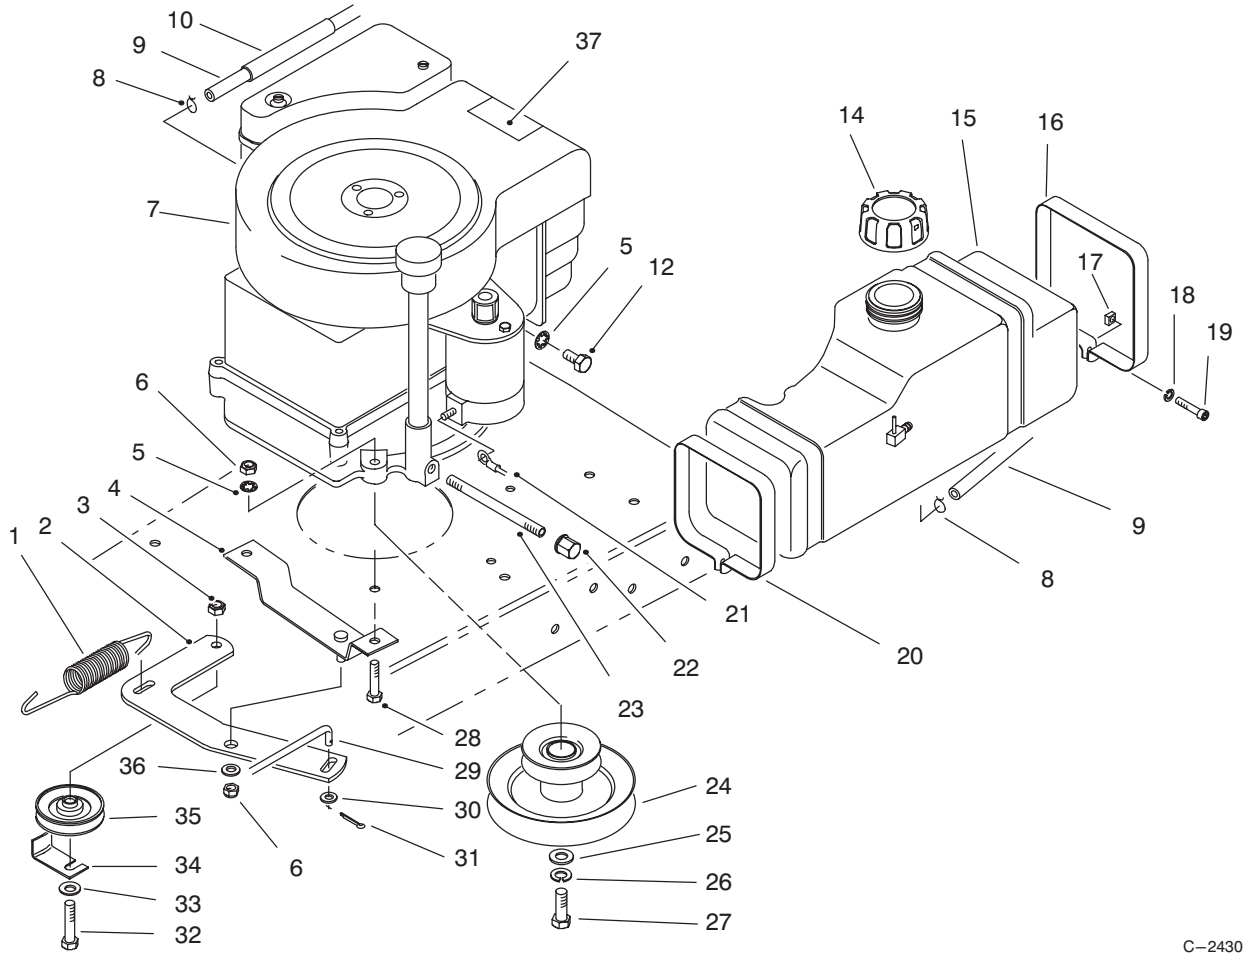


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0879	Spring	1
2	92–0883	Plate – Mounting, Idler	1
3	3296–39	Nut – Lock	1
4	92–0881	Bracket W.A. – Traction	1
5	3254–2	Washer – Lock, Int. Tooth	3
6	3296–29	Nut – Lock	2
7		Engine – 11.5 H .P.	1
8	2412–98	Clamp – Hose	2
9	47–2961	Hose – Fuel Line	1
10	62–5490	Support – Fuel Line	1
12	32144–14	Screw	2
14	55–3570	Cap – Fuel	1
15	56–7050	Tank – Fuel	1
16	57–4060	Retainer – Front	1
17	32107–11	Nut – Square	2
18	3253–3	Washer – Lock	2
19	3274–51	Screw – Hex. Socket Hd.	2
20	57–4070	Retainer – Rear	1

Ref. No.	Part No.	Description	No. Used
21	56–7670	Cable – Battery, Positive	1
22	288–10	Cap – Pipe	1
23	289–19	Nipple – Pipe	1
24	92–0873	Pulley – Engine	1
25	3256–25	Washer – Flat	1
26	3253–6	Washer – Lock	1
27	62–3760	Screw – Cap Hex. Hd.	1
28	322–7	Screw – Cap Hex. Hd.	4
29	92–0871	Rod – Traction	1
30	3256–22	Washer – Flat	1
31	3272–6	Pin – Cotter	1
32	323–9	Screw – Cap Hex. Hd.	1
33	3256–24	Washer – Flat	1
34	12–9020	Retainer – Belt	1
35	12–5820	Pulley – Idler	1
36	3256–57	Washer – Flat	1
37	92–8757	Decal – Engine	1

*Not Illustrated


3318–327

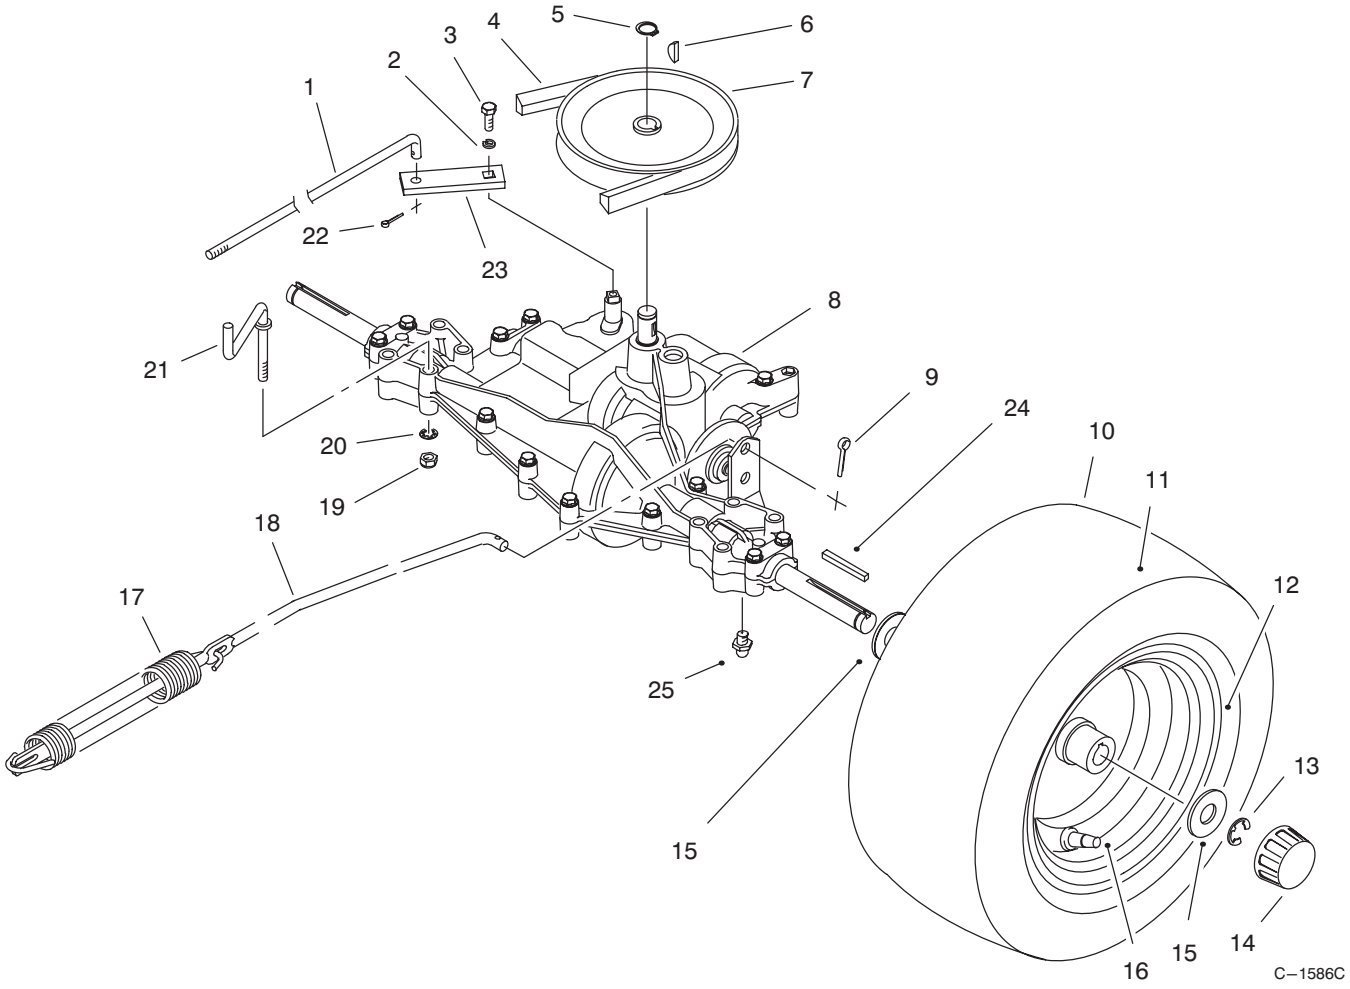

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0889	Link – Shift	1
2	3253–3	Washer – Lock	1
3	329–4	Screw – Cap Hex. Hd.	1
4	92–0870	V–Belt – Traction	1
5	32120–64	Ring – Retaining	1
6	3257–23	Key	1
7	92–0874	Pulley	1
8	92–0862	Transaxle	1
9	3272–16	Pin – Cotter	1
10	231–117	Tire	2
11	232–39	Tube – Inner	2
12	88–9730	Rim	2
13	32151–48	Ring – Retaining	2

Ref. No.	Part No.	Description	No. Used
14	61–9780	Cap – Hub	2
15	28–2480	Washer	4
16	232–27	Stem – Valve	2
17	57–9940	Spring – Brake	1
18	92–0872	Rod – Brake	1
19	3296–29	Nut – Lock	1
20	3254–2	Washer – Lock, Int. Tooth	1
21	92–0899	Guide – Belt, Lower	1
22	3272–6	Pin – Cotter	1
23	92–0880	Arm – Shift, Transaxle	1
24	7–0036	Key – Square	2
25	302–5	Fitting – Grease	2

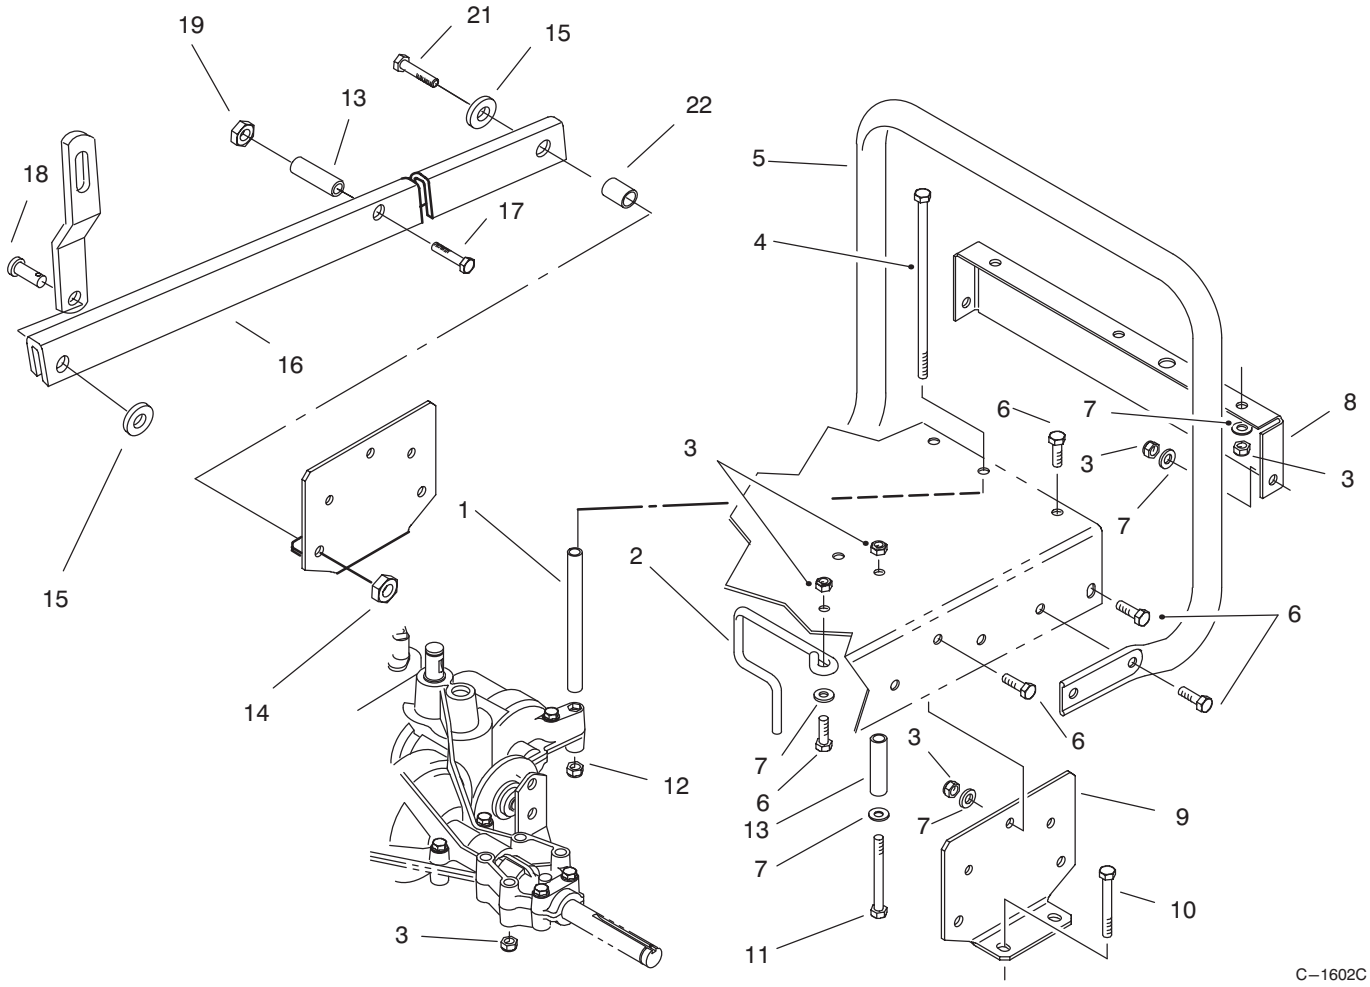


STAND BAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0897	Spacer	1
2	92–0898	Guide – Belt	1
3	3296–29	Nut – Lock	17
4	322–50	Screw – Cap Hex. Hd.	1
5	92–0864	Standbar	1
6	322–5	Screw – Cap Hex. Hd.	15
7	3256–23	Washer – Flat	12
8	92–0861	Frame – Rear	1
9	92–0865	Support – Axle	2
10	322–12	Screw – Cap Hex. Hd.	4
11	322–14	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
12	3296–47	Nut – Lock	1
13	76–1560	Spacer	4
14	3296–59	Nut – Lock	3
15	3256–24	Washer – Flat	4
16	76–1540	Arm – Suspension R.H.	1
*	76–1550	Arm – Suspension L.H.	1
17	323–14	Screw – Hex Hd. Cap	2
18	283–42	Pin – Clevis	2
19	3296–39	Nut – Lock	2
21	323–9	Screw – Hex Hd. Cap	2
22	56–7430	Pin – Support	2

*Not Illustrated

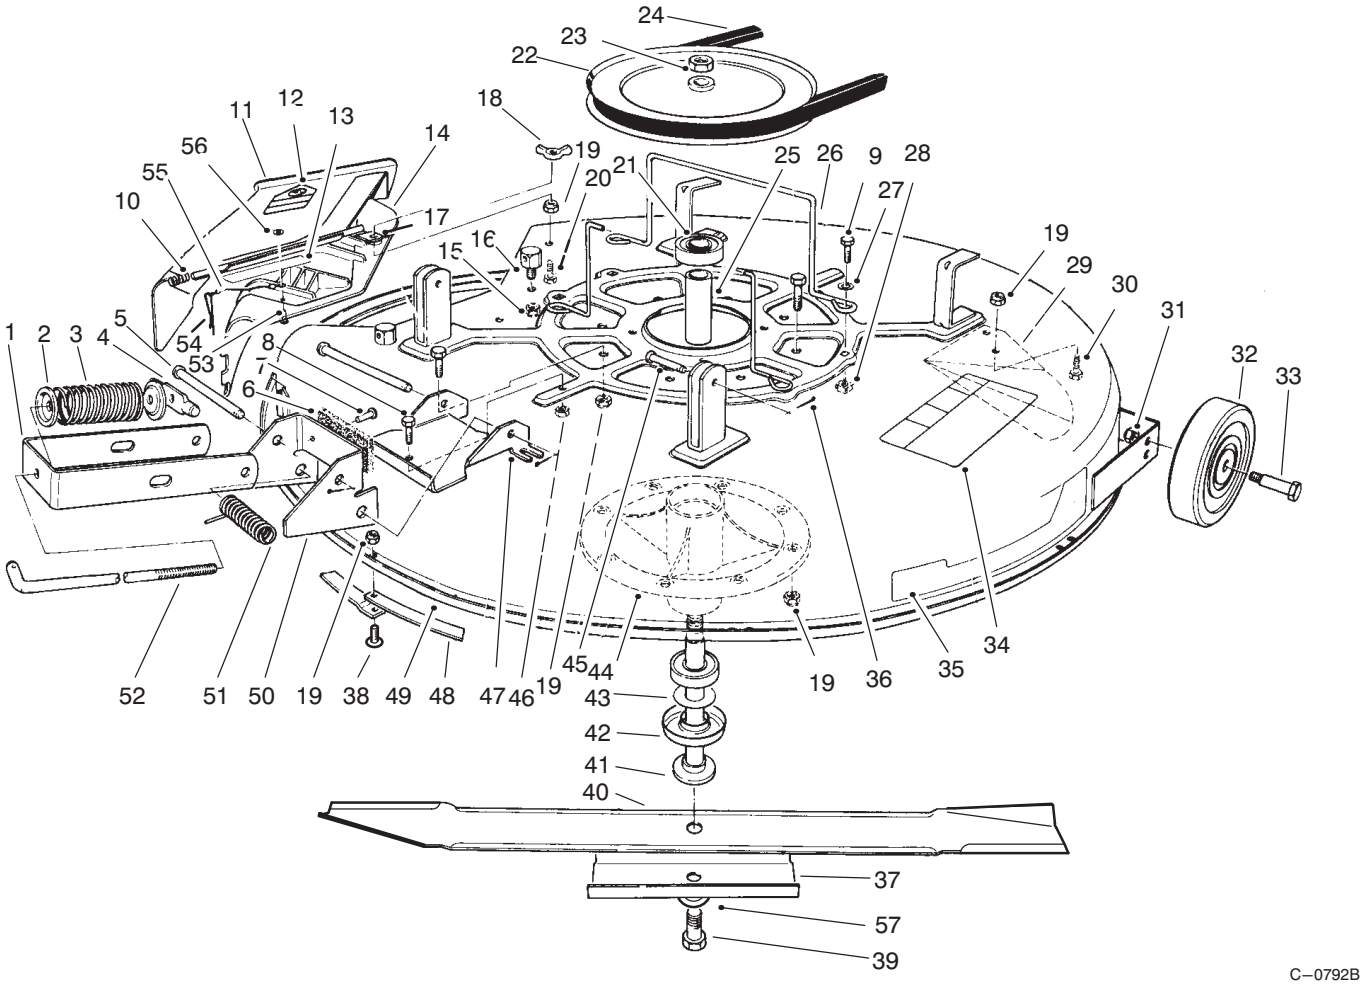


C–0792B

MOWER ASSEMBLY – RECYCLER

Ref. No.	Part No.	Description	No. Used
1	47–1180	Bracket – Engagement	1
2	47–1140	Retainer – Spring, Top	2
3	47–0960	Spring – Compression	1
4	47–1200	Shaft – Adjusting	1
5	80–2570	Pin – Clevis	2
6	80–2550	Pad – Brake	1
7	3290–282	Rivet	2
8	321–4	Screw – Cap Hex. Hd.	1
9	322–5	Screw – Cap Hex. Hd.	6
10	28–8010	Ssspring – Torsion Deflector	1
11	44–5930	Deflector Assembly (Incl. Ref. #12)	1
12	54–9220	Decal – Danger	1
13	68–3650	Decal – Danger Deflector	1
14	82–6150	Assy. – Cover, Discharge (Incl. Ref. #53–56)	1
15	3296–59	Nut – Lock	1
16	28–7350	Post – Pivot	1
17	83–7010	Brace – Cover, Rear	1
18	32103–2	Nut – Wing	1
19	3296–29	Nut – Lock	24
20	322–6	Screw – Cap Hex. Hd.	1
21	251–297	Bearing	2
22	80–4470	Pulley	1
23	3219–7	Nut – Hex. Hd.	1
24	92–0875	V–Belt	1

Ref. No.	Part No.	Description	No. Used
25	83–7020	Spacer – Bearing	1
26	60–9730	Guide – Belt	2
27	3256–23	Washer – Flat	4
28	3290–496	Nut – Retainer	4
29	80–2630	Kicker – 32”	4
30	322–3	Screw – Cap Hex. Hd.	13
31	3296–39	Nut – Lock	2
32	61–9760	Wheel – Deck	2
33	56–6590	Bolt – Wheel	2
34	66–1340	Decal – Danger	1
35	92–9521	Decal – Recycler	1
36	3272–6	Pin – Cotter	2
37	80–4570	Stiffener – Blade	1
38	32122–14	Screw – Truss, Phillips Hd.	8
39	26–0671	Bolt – Blade	1
40	80–4430	Blade – Recycler	1
41	80–4350	Shaft – Spindle	1
42	80–4370	Shield – Bearing	1
43	80–4390	Spacer – Hardened	1
44	56–7030	Body – Spindle	1
45	283–2	Pin – Clevis	2
46	3296–8	Nut – Lock	1
47	80–2560	Plate – Deck, Brake Mtg.	1
48	80–4490	Ring – Deck	4
49	14–9999	Deck – Cutting, Recycler (Incl. Ref. #13 & 34)	1

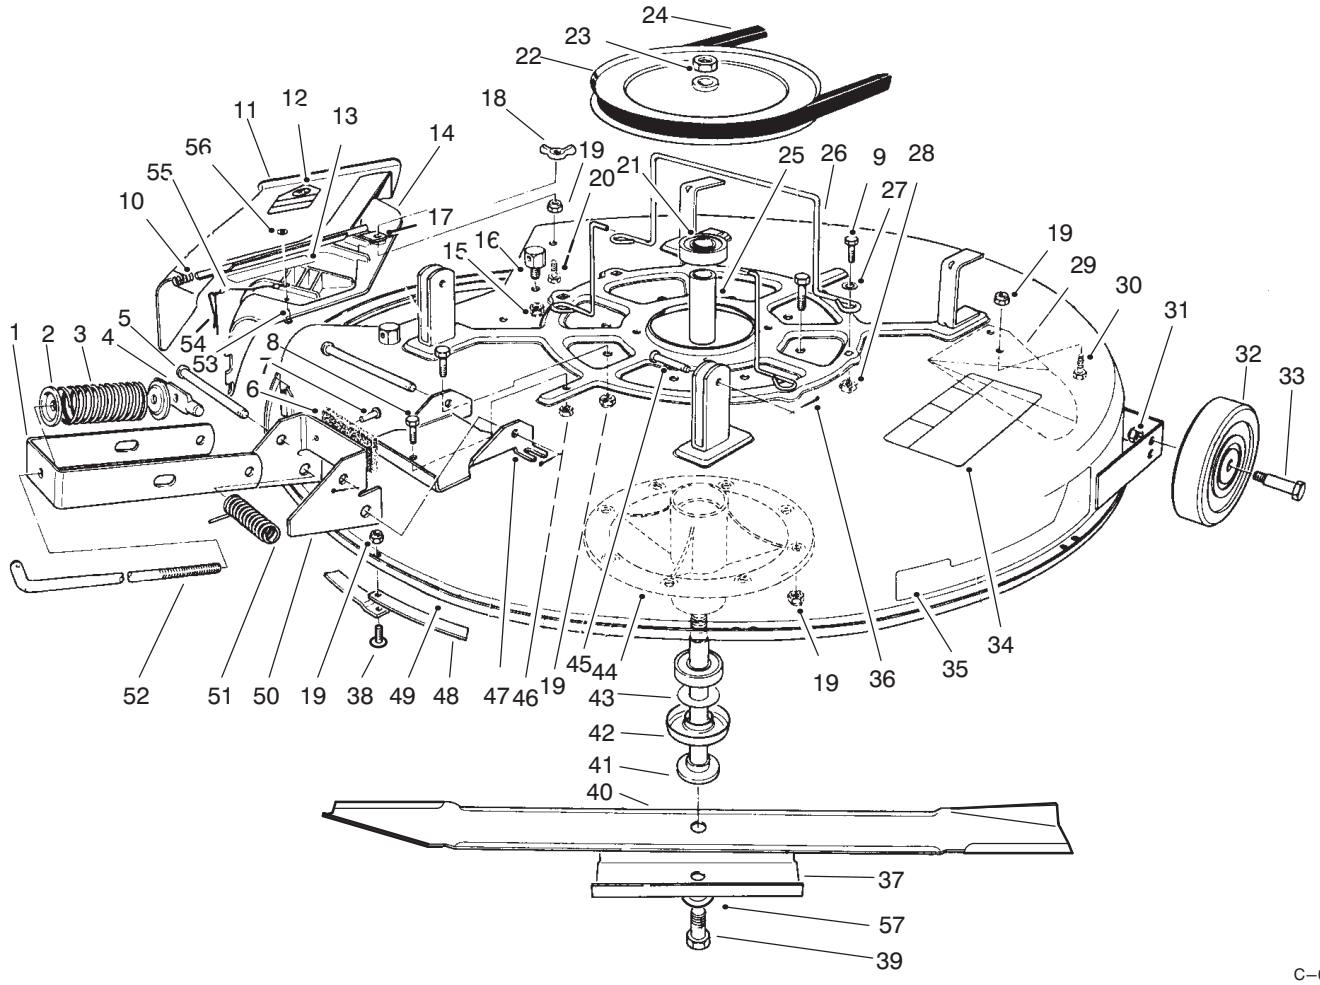


C–0792B

MOWER ASSEMBLY – RECYCLER (Cont.)

Ref. No.	Part No.	Description	No. Used
50	80–2530	Assembly – Brake (Incl. Ref. #6–7)	1
51	40–6230	Spring – Torsion	1
52	80–2580	Rod – Adjusting	1
53	3290–282	Rivet	2
54	28–8130	Pin – Chute, Locking	1
55	28–8070	Lanyard	1
56	3256–49	Washer – Flat	1
57	3290–465	Washer – Belleville	1


PEERLESS TRANSAXLE MODEL NO. 915–019

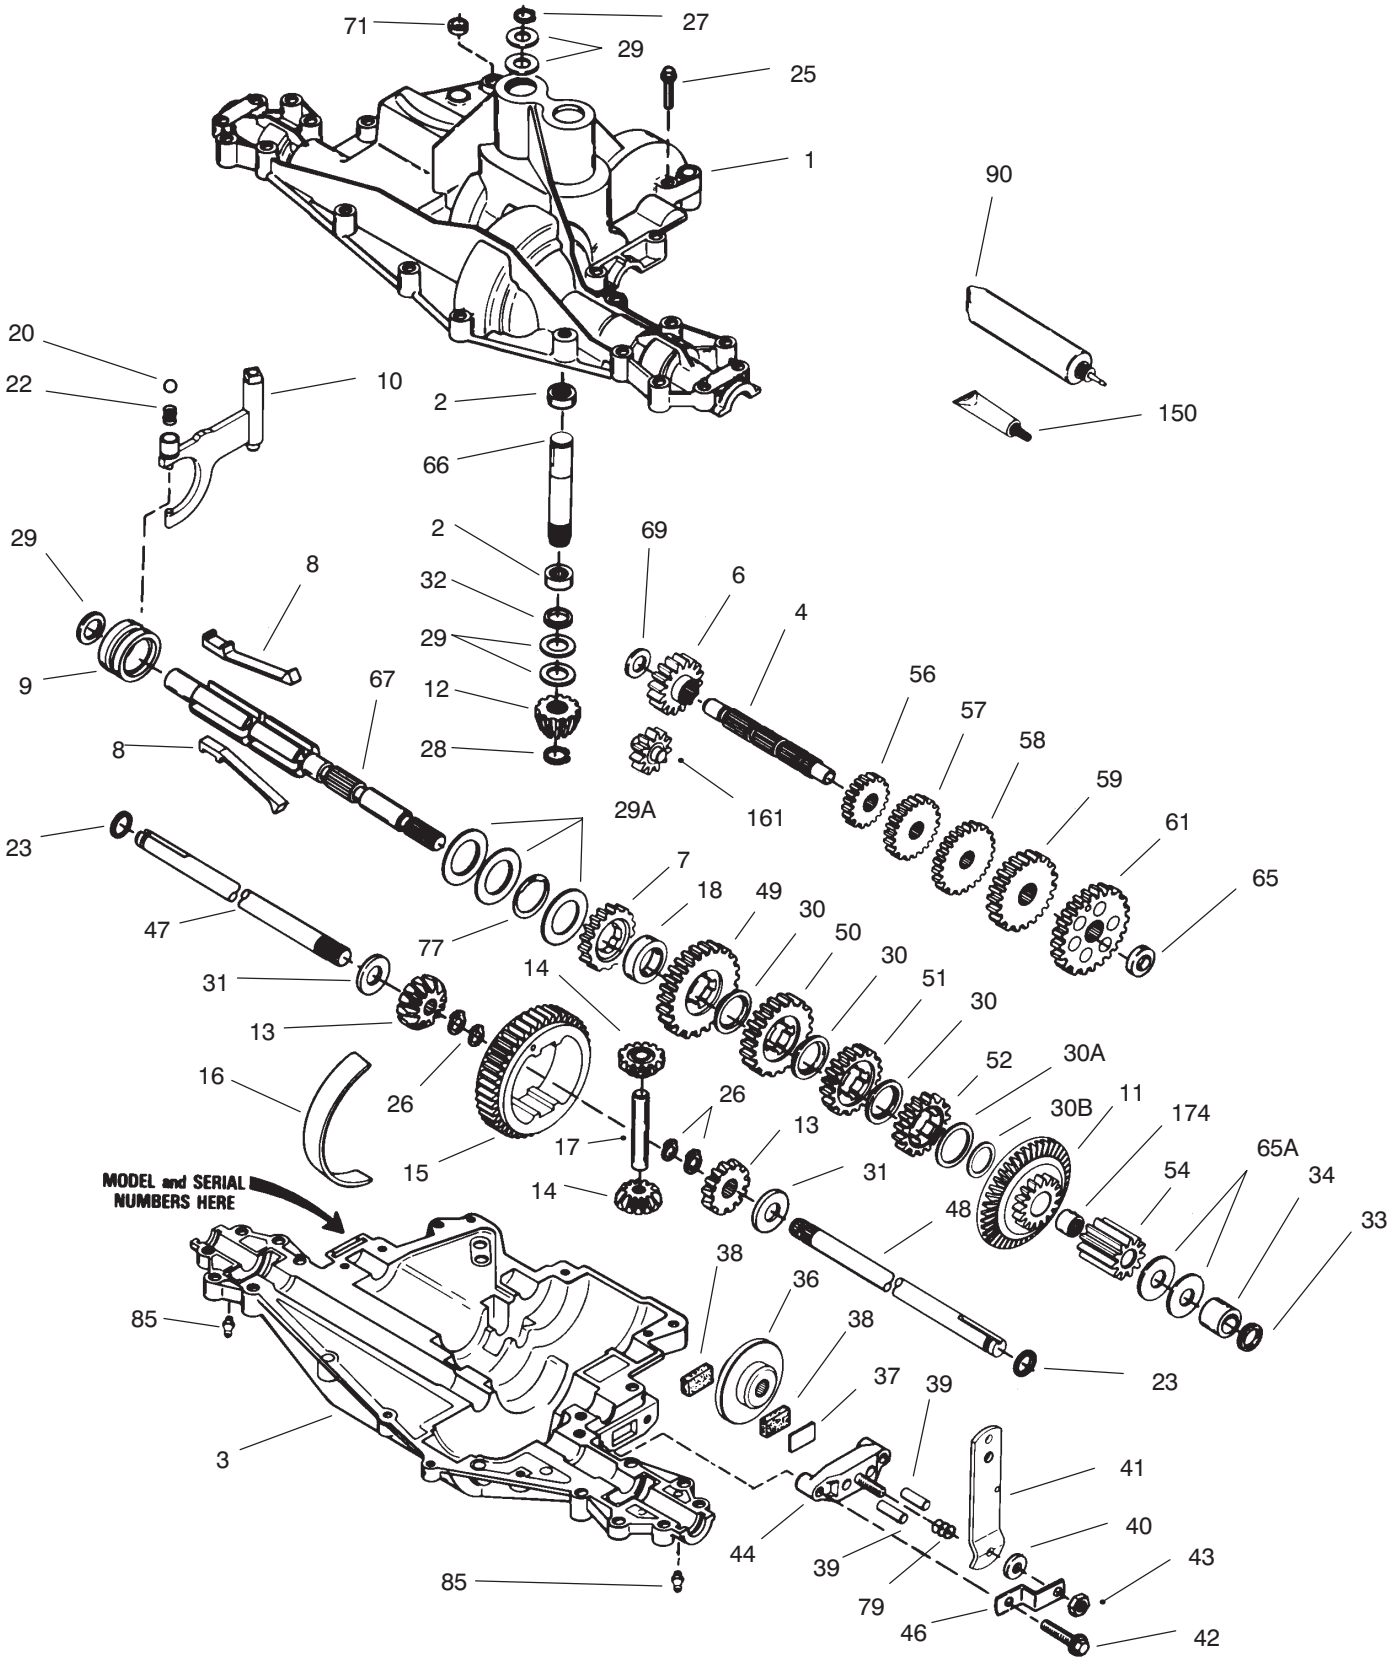

C–1621

PEERLESS TRANSAXLE MODEL NO. 915–019

Ref. No.	Part No.	Description	No. Used
1	772117	Transaxle Cover	1
2	780086	Needle Bearing	2
3	770114	Transaxle Case	1
4	776300	Countershaft	1
6	778281	Spur Gear (16 Teeth)	1
7	778122A	Spur Gear (22 Teeth)	1
8	792133	Shift Key	4
9	784352	Shift Collar	1
10	784365	Shift Rod & Fork	1
11	778290	Bevel Gear & Bearing (44/16 Teeth) (Incl. Ref. #174)	1
12	778262	Bevel Pinion (14 Teeth)	1
13	778221	Bevel Gear (16 Teeth)	2
14	778068	Differential Pinion	2
15	778260	Ring Gear	1
16	786150	Bearing Strip	1
17	78139	Drive Pin	1
18	786147	Neutral Spacer	1
20	792139	Ball (3/8” dia.)	1
22	792142	Spring	1
23	788061	Seal Ring	2
25	792073	Screw	17
26	792125	Retaining Ring (pkg. of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	5
29A	780090	Thrust Washer	3
30	780108	Washer	3
30A	789145	Washer	1
30B	780178	Washer	1
31	780001	Washer	2
32	792001	O–Ring	1
33	788076	O–Ring	1
34	780159	Bushing	1
36	790071	Brake Disk	1
37	790007	Brake Pad Plate	1
38	790006	Brake Pad	2
39	786026	Dowel Pin	2
40	792076	Washer	1
41	790045	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774930	Axle (16–3/4” lg.)	1
48	774931	Axle (11–9/16” lg.) (Incl. Ref. #26)	1
49	778124A	Spur Gear (30 Teeth)	1
50	778123A	Spur Gear (25 Teeth)	1
51	778122A	Spur Gear (22 Teeth)	1
52	778273	Spur Gear (19 Teeth)	1
54	778263	Spur Gear (11 Teeth)	1
56	778126A	Spur Gear (20 Teeth)	1
57	778127A	Spur Gear (25 Teeth)	1
58	778128A	Spur Gear (28 Teeth)	1
59	778129A	Spur Gear (30 Teeth)	1
61	778265	Spur Gear (34 Teeth)	1
65	780162	Washer	1
65A	780160	Washer	2
66	776299	Input Shaft (3.522” lg.)	1
67	776352	Shifter & Brake Shaft	1
69	780161	Thrust Washer	1
71	788069	Square Cut Ring	1
77	788078A	Inverted Retaining Ring (pkg. of 2)	1
79	792144	Spring	1
90	788067B	Grease (32 oz. btl. Bentonite grease)	1
150	510334	Gasket Eliminator (Loctite #515)	1
161	776302	Reverse Idler Assembly	1
174	780085	Needle Bearing	1

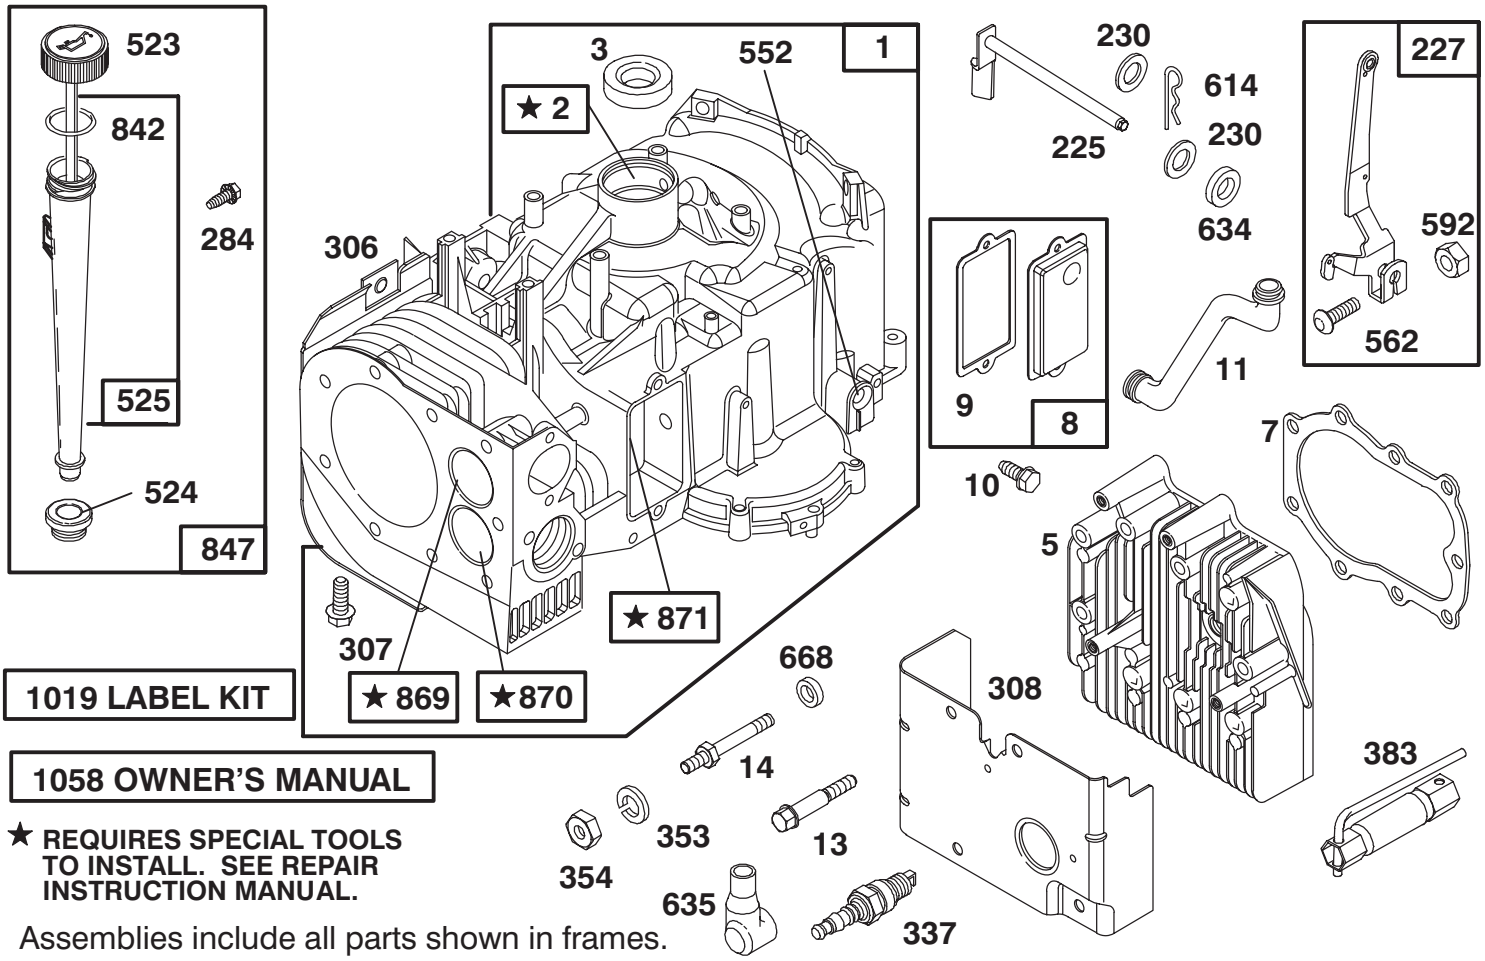

1019 LABEL KIT

1058 OWNER'S MANUAL

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bearing–Cylinder	1
★3	391086	Seal–Oil	1
5	494240	Head–Cylinder	1
★7	271866	Gasket–Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket–Valve Cover	1
10	94621	Screw–Sem	1
11	281246	Tube–Breather	1
13	94622	Screw–Cylinder Head	1
14	94776	Stud–Cyl. Head	1
225	495157	Crank–Governor	1
227	493935	Lever Assy.–Governor	1
230	94742	Washer–Gov. Crank	1
284	94073	Screw–Hex Head	1
306	224545	Shield–Cylinder	1
307	94623	Screw–Cyl. Shield Mtg.	1
308	491490	Cover–Cylinder Head	1
337	802592	Plug–Spark	1
353	94315	Washer–Lock	1
354	94314	Nut–Hex.	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench–Spark Plug	1
523	495230	Cap–Oil Fill	1
★524	281370	Seal–Fill Tube	1
525	496113	Tube–Oil Fill	1
552	231597	Bushing–Gov. Crank	1
562	92613	Bolt–Carriage	1
592	231082	Nut–Hex.	1
614	93306	Pin–Cotter	1
★634	491323	Seal–Governor	1
635	66538	Elbow–Spark Plug	1
668	231109	Spacer	1
★842	270920	Seal–Oil Fill Cap	1
847	496415	Fill Group–Oil	1
869	261463	Seat–Intake Valve	1
870	213316	Seat–Exhaust Valve	1
871	261961	Guide–Exhaust Valve	1
		Note: 231218 Guide–Intake Valve	1
1019	491255	Label Kit	1
1058	272697	Owner's Manual	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

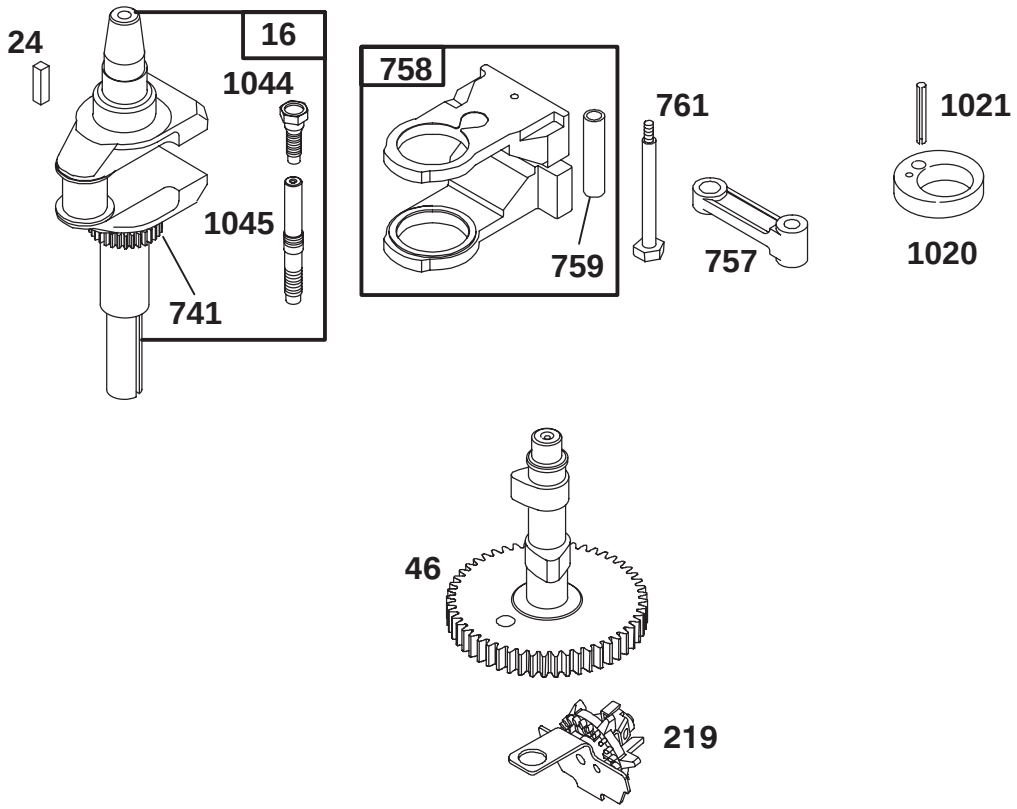


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used
16	495162	Crankshaft	1
	94196	Key—Timing Gear	1
24	222698	Key—Flywheel	1
46	213720	Gear—Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear—Timing	1
757	213998	Link—Counterweight	1

Ref. No.	Part No.	Description	No. Used
758	399891	Counterweight Assy.	1
759	298909	Pin—Counterweight	1
761	94593	Screw—Counterweight	1
1020	262243	Eccentric	1
1021	94160	Pin—Eccentric	1
1044	94673	Screw—Shoulder	1
1045	231828	Extension—Crankshaft	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.
● Included in Carburetor Kit—Part No. 497535.

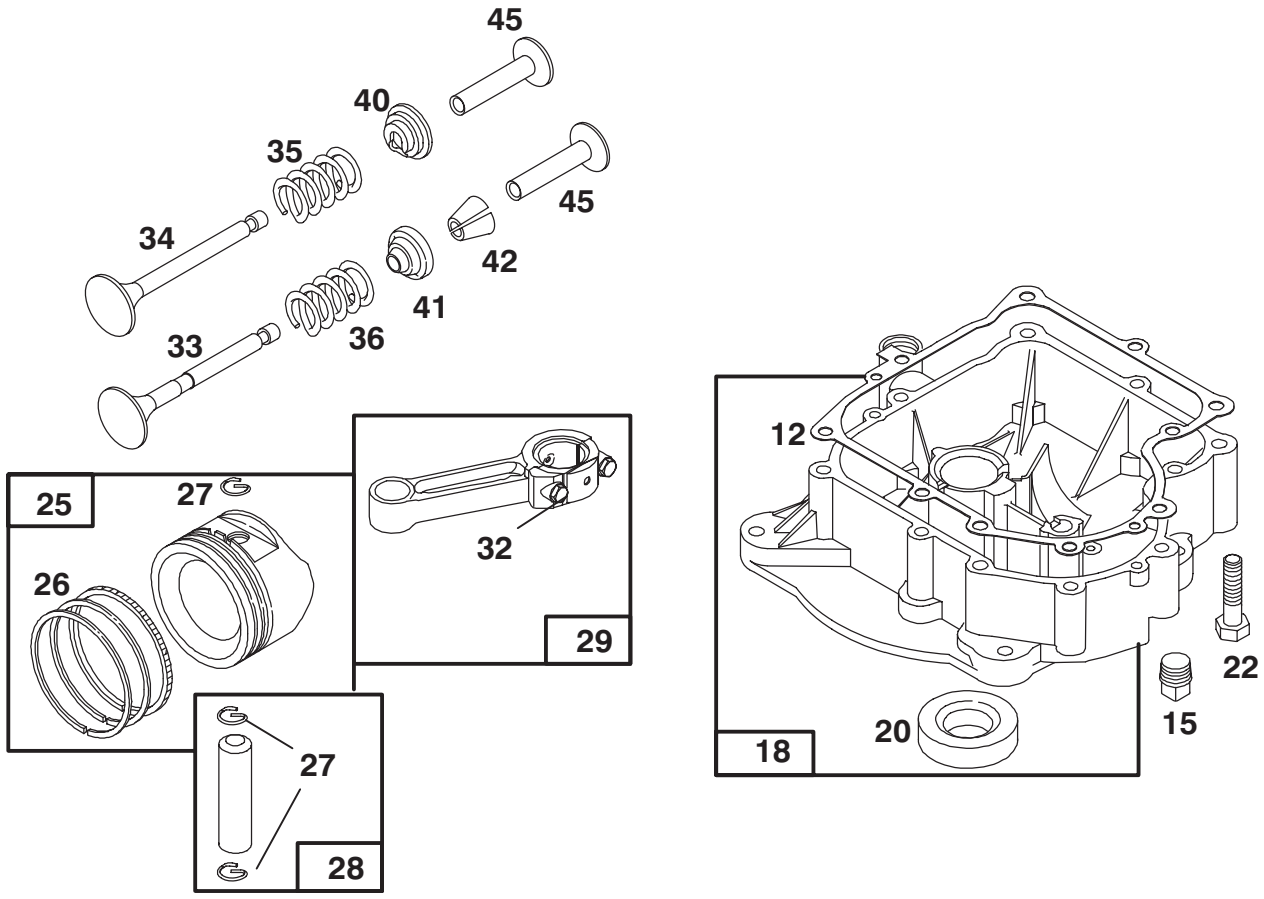


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket–Crankcase (.015" Thick)	1
★	271997	Gasket–Crankcase (.005" Thick)	1
★	271996	Gasket–Crankcase (.009" Thick)	1
15	94239	Plug–Oil Drain	1
18	494238	Base–Engine	1
★20	291675	Seal–Oil	1
22	94624	Screw–Base Mtg. Sem	1
25	497518	Piston Assy. (Std.)	1
	497519	Piston Assy. (.010" O.S.)	1
	497520	Piston Assy. (.020" O.S.)	1
	497521	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set–Piston (Std.)	1
	391781	Ring Set–Piston (.010" O.S.)	1
	391782	Ring Set–Piston (.020" O.S.)	1
	391783	Ring Set–Piston (.030" O.S.)	1
27	260924	Lock–Piston Pin	1
28	299691	Pin Assy.–Piston (Standard)	1
	391286	Pin Assy.–Piston (.005" O.S.)	1
29	490348	Rod Assembly–Connecting	1
	490469	Rod–Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw–Connecting Rod	1
33	262246	Valve–Exhaust	1
34	262247	Valve–Intake	1
35	65906	Spring–Intake Valve	1
36	26828	Spring–Exhaust Valve	1
40	221596	Retainer–Intake Valve	1
41	292260	Rotocoil–Exhaust Valve	1
42	93630	Retainer–Ex. Valve Rotocoil	1
45	262248	Tappet–Valve	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

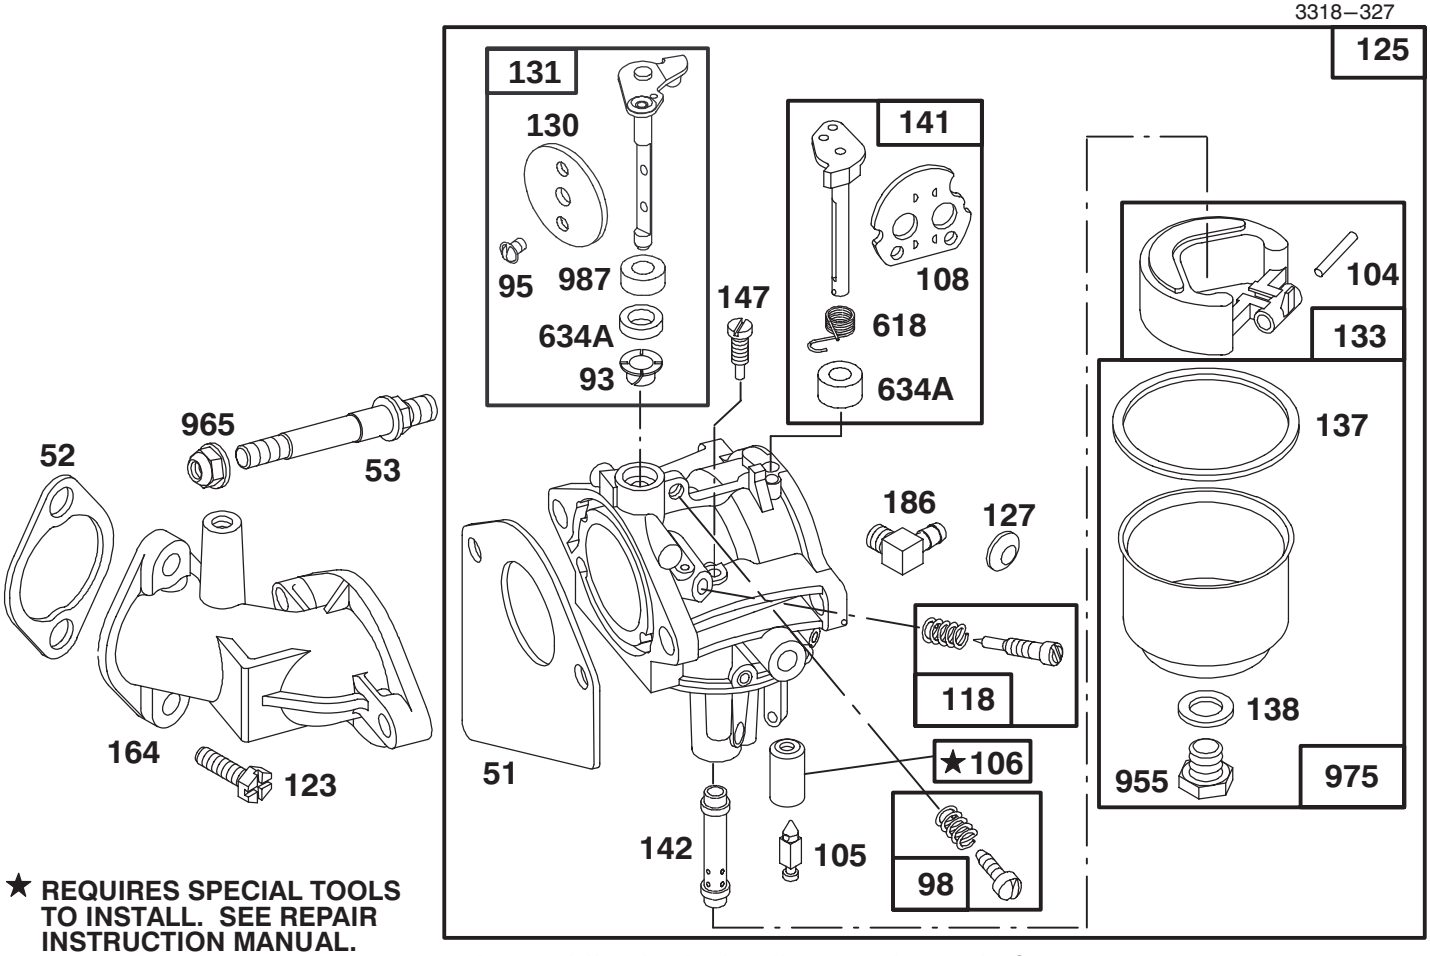

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
●◆51	272465	Gasket–Carburetor (Carb. to Manifold)	1
⋆52	272554	Gasket–Carburetor (Manifold to Cylinder)	1
53	94637	Stud–Carb. Mtg.	1
●93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Throttle	1
98	495800	Screw–Idle Speed	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve Assy.–Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve–Choke	1
118	494383	Valve–Needle	1
121	495799	Carburetor Kit	1
123	94616	Screw–Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug–Welch (Sold in Kit Only)	1
130	224539	Valve–Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft– Throttle	1
133	494381	Float–Carburetor	1
●◆137	281165	Gasket–Float Bowl	1
●◆138	281164	Washer–Float Bowl Screw	1
141	495931	Shaft–Choke	1
●142	497566	Nozzle–Carburetor	1
●147	231984	Pilot–Jet	1
164	213819	Manifold–Intake	1
186	493496	Connector–Fuel	1
618	262803	Spring–Choke Return	1
●634A	281168	Seal–Choke Shaft	1
●634B	398970	Washer–Throttle Shaft	1
955	94642	Screw–Fuel Bowl	1
965	94010	Nut–Hex.	1
975	494378	Bowl Assy.–Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal–Throttle Shaft	1

⋆ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

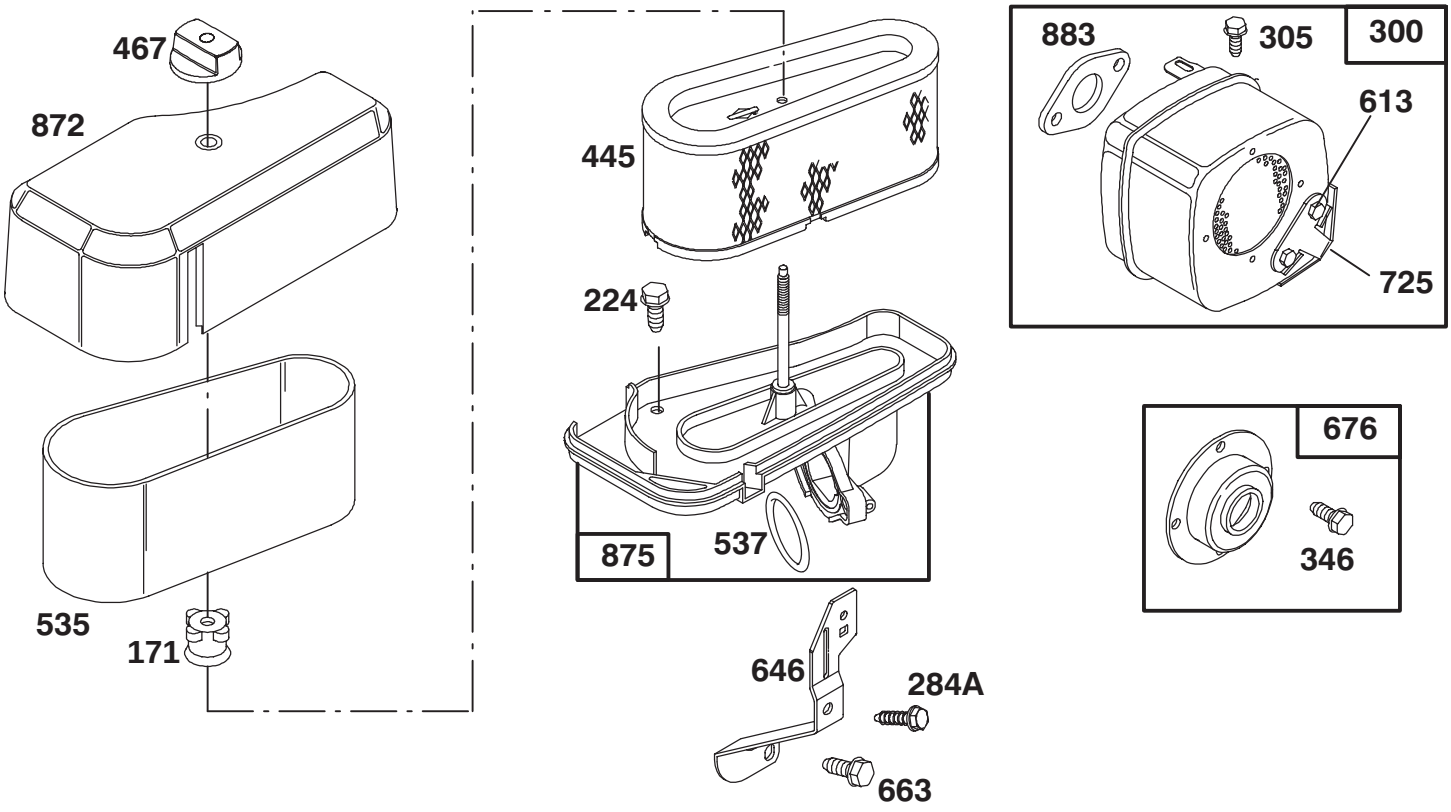


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut–Air Cleaner Mtg.	1
224	94729	Screw–Air Cleaner Sem	1
284A	94704	Screw Hex. Head	1
300	491413	Muffler–Exhaust	1
305	94786	Screw–Hex. Head	1
346	93705	Screw–Hex. Head	1
445	496894	Cartridge–Air Cleaner	1
467	493903	Knob–Air Cleaner	1
535	272403	Element–Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring–Air Cleaner	1
613	93927	Screw–Hex. Head	1
646	224546	Brace–Air Cleaner	1
663	94620	Screw–Hex. Hd.	1
676	396903	Deflector–Muffler	1
725	223023	Shield–Muffler	1
872	281361	Cover–Air Cleaner	1
875	494237	Body–Air Cleaner	1
★883	272293	Gasket–Exhaust	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

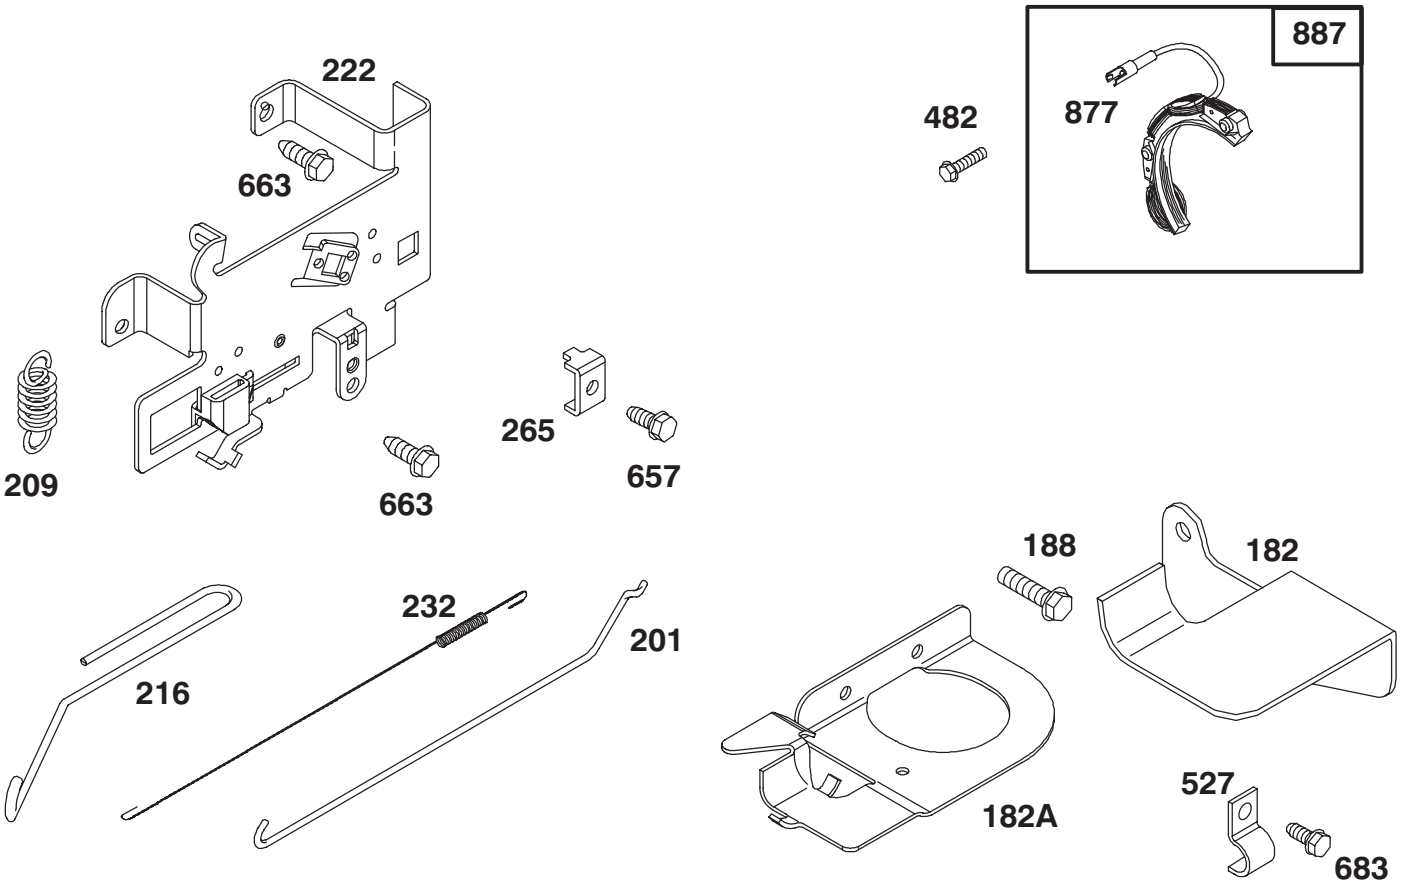

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
182	223925	Bracket–Fuel Tank	1
182A	223866	Bracket–Fuel Tank	1
188	94480	Screw–Sem	1
201	262767	Link–Governor	1
209	260871	Spring–Governor	1
216	262766	Link–Choke	1
222	495611	Plate–Governor Control	1
232	262785	Spring–Governor Link	1

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp–Casing	1
482	93621	Screw–Sem	1
527	221428	Clamp	1
657	93496	Screw–Sem	1
663	94620	Screw–Hex. Head	1
683	94602	Screw–Hex. Head	1
877	393814	Diode and Connector Assy.	1
887	391529	Alternator	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.

● Included in Carburetor Kit–Part No. 497535.

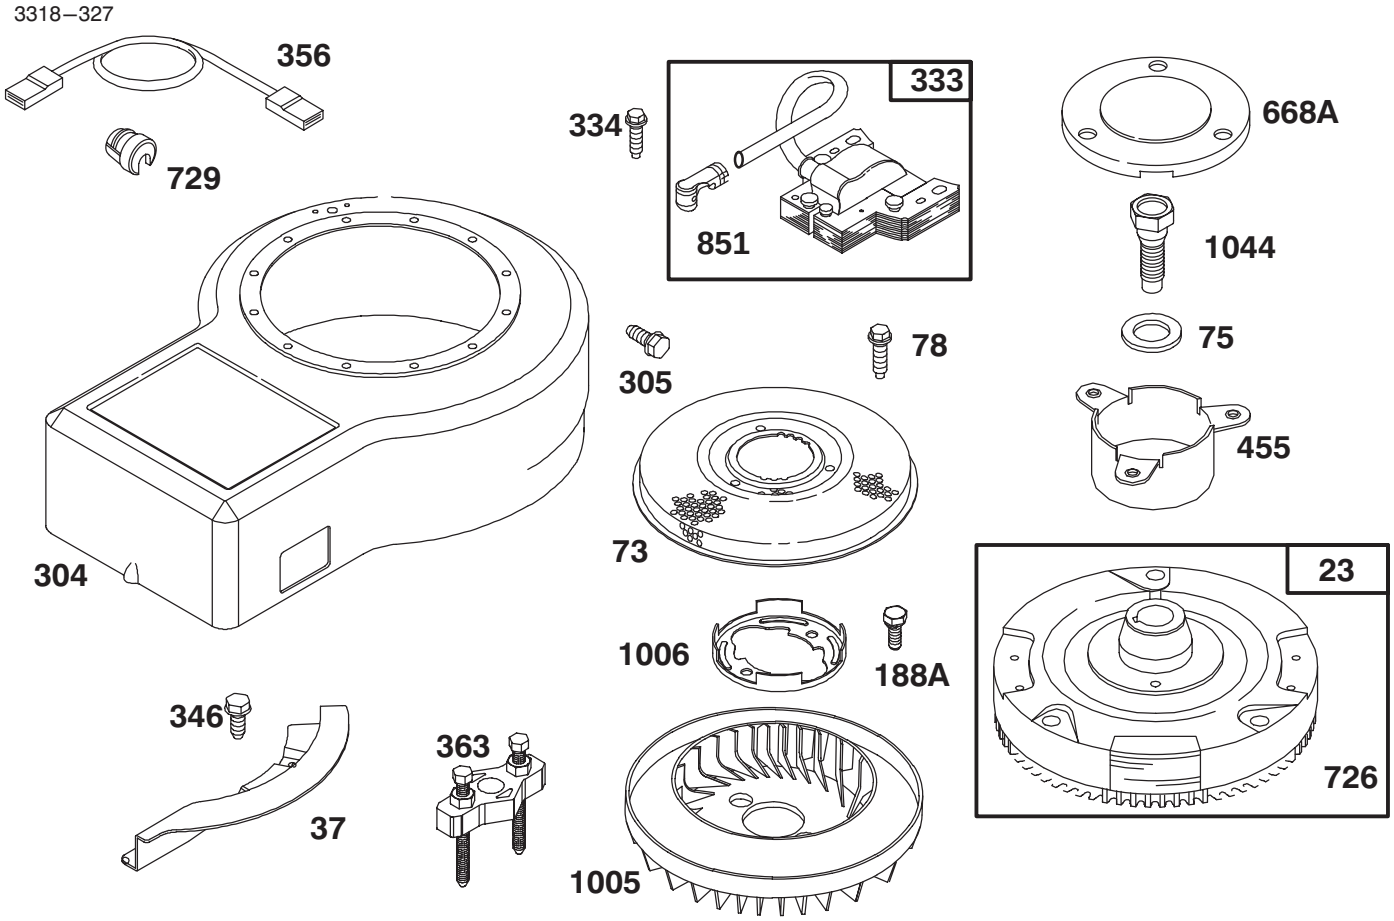


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard–Flywheel	1
73	224948	Screen–Rotating	1
75	224061	Washer–Spring	1
78	94626	Screw–Sem	1
188A	94627	Screw–Sem	1
304	496431	Housing–Blower	1
305	94786	Screw–Hex.	1
333	492341	Armature–Magneto	1
334	93381	Screw–Hex.	1
346	93705	Screw–Hex. Head	1
356	494328	Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
363	19203	Puller–Flywheel	1
455	222561	Cup–Screen Mounting	1
668A	280848	Spacer	1
726	392134	Gear–Ring (Includes Mtg Hardware)	1
729	281159	Clip–Lead Wire	1
851	493880	Terminal–Ignition Cable	1
1005	281355	Fan–Flywheel	1
1006	224413	Retainer–Fan	1
1044	94673	Screw–Shoulder	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

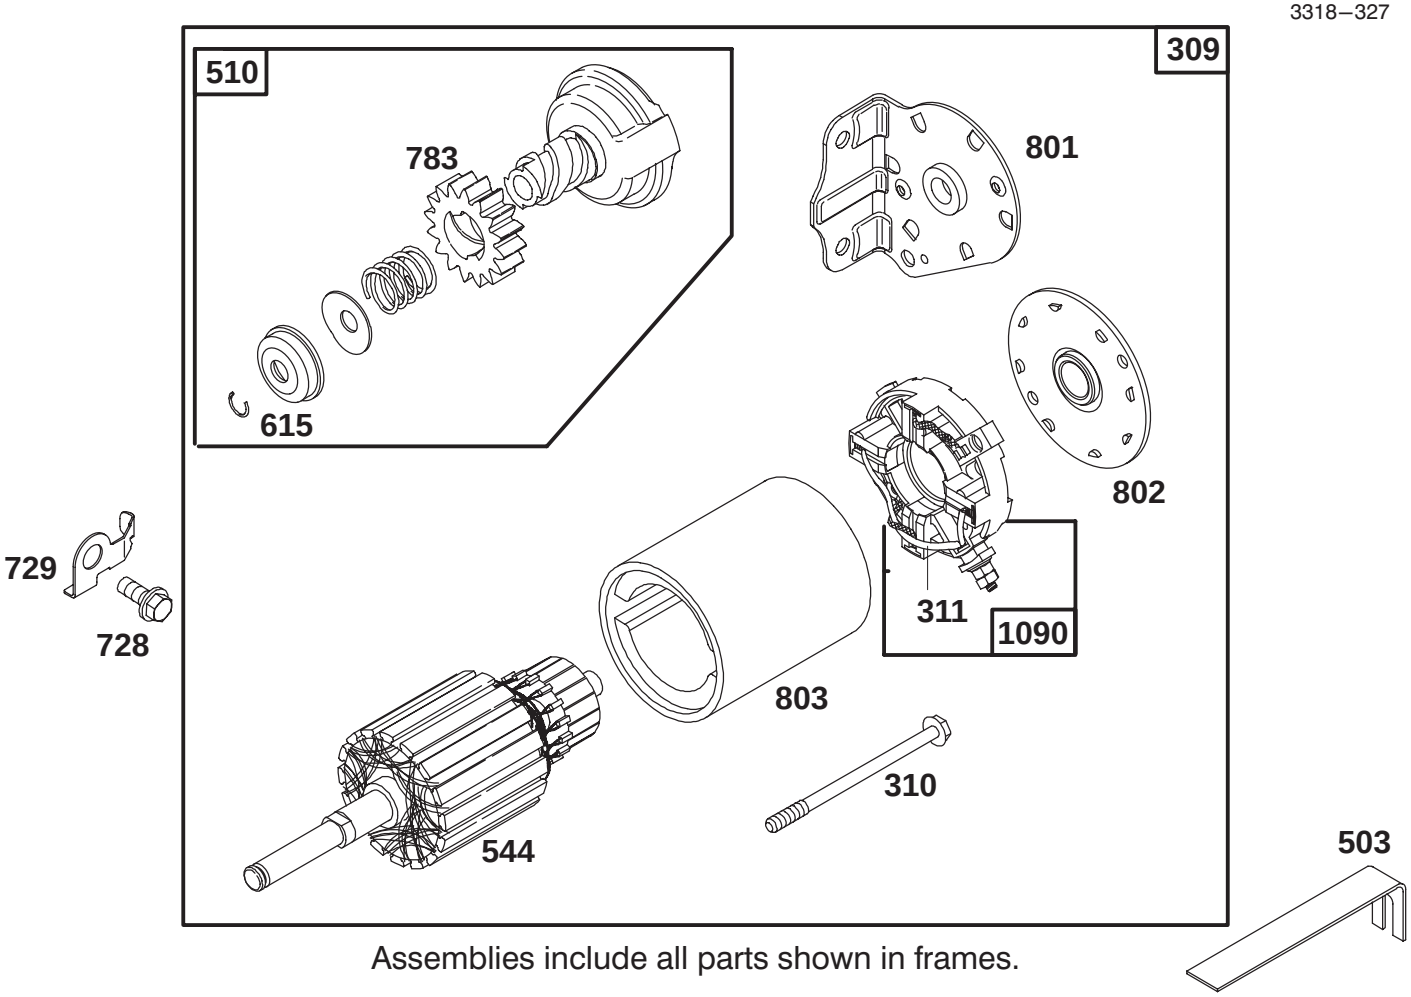


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01


Ref. No.	Part No.	Description	No. Used
309	497595	Motor–Starter	1
310	94003	Bolt–Thru	1
311	497608	Brush Set	1
503	806000	Strap–Starter	1
510	497606	Drive–Starter	1
544	497603	Armature–Starter	1
615	263080	Retainer	1

Ref. No.	Part No.	Description	No. Used
728	94627	Screw–Hex. Head	1
729	225170	Clip–Wire	1
783	280104	Gear–Starter	1
801	394856	Cap–Drive	1
802	497607	Plate–Cover	1
803	497604	Housing–Starter	1
1090	497605	Cap–End	1


★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

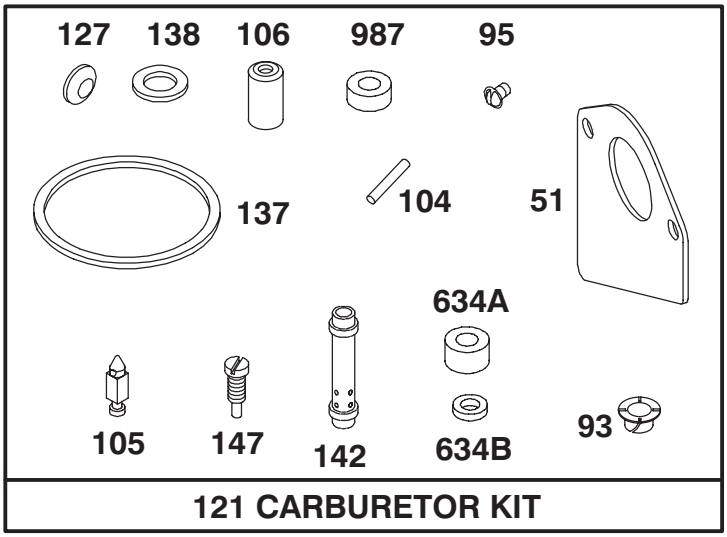

121 CARBURETOR KIT

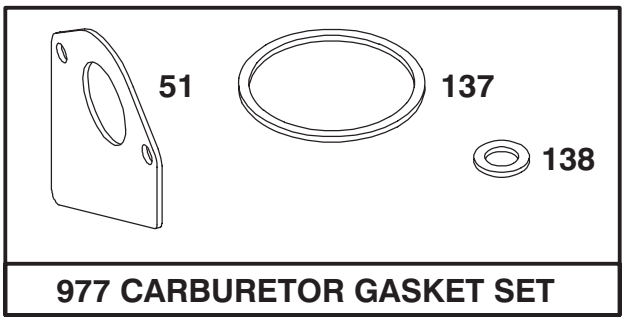

977 CARBURETOR GASKET SET

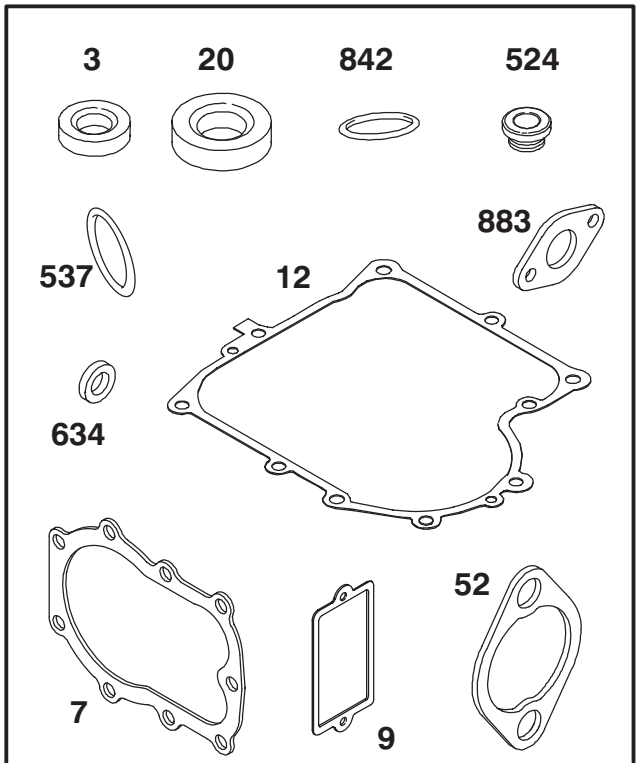

358 GASKET SET

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal–Oil	1
★7	271866	Gasket–Cylinder Head	1
★9	27803	Gasket–Valve Cover	1
★12	271916	Gasket–Crankcase (.015” Thick)	1
★	271997	Gasket–Crankcase (.005” Thick)	1
★	271996	Gasket–Crankcase (.009” Thick)	1
★20	291675	Seal–Oil	1
◆●51	272465	Gasket–Carburetor (Carb. to Manifold)	1
★52	272554	Gasket–Carburetor (Manifold to Cylinder)	1
●93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Throttle	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve Assy.–Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	497535	Carburetor Kit	1
●127		Plug–Welch (Sold in Kit Only)	1
◆●137	281165	Gasket–Float Bowl	1
◆●138	281164	Washer–Float Bowl Screw	1
●142	494566	Nozzle–Carburetor	1
●147	231984	Pilot–Jet	1
358	494241	Gasket Set	1
★524	281370	Seal–Fill Tube	1
★537	281106	O-Ring–Air Cleaner	1
★634	491323	Seal–Governor	1
●634A	281168	Seal–Choke Shaft	1
●634B	398970	Washer–Throttle Shaft	1
★842	270920	Seal–Oil Fill Cap	1
★883	272293	Gasket–Exhaust	1
977	494385	Carburetor Gasket Set	1
●987	281166	Seal–Throttle Shaft	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
8830	Clamp	4	17	2
110513	Bearing	2	2	4
116397	Relay	6	11	1
147665	Screw – Phillips Hd.	6	1	2
147665	Screw – Phillips Head	4	1	2
3–6498	Washer – Thrust	2	5	5
7–0036	Key – Square	10	24	2
12–5820	Pulley – Idler	9	35	1
12–8819	Loose Parts	1	*	1
12–8829	Loose Parts	1	*	1
12–9020	Retainer – Belt	9	34	1
14–9999	Deck – Cutting, Recycler	12	49	1
19–1470	Bolt – Shoulder	5	20	1
26–0671	Bolt – Blade	12	39	1
27–9080	Bearing – Flange	2	15	4
28–0380	Spacer – Axle, Front	2	24	1
28–0540	Bolt – Shoulder	5	8	1
28–2480	Washer	10	15	4
28–2480	Washer	2	43	2
28–7350	Post – Pivot	12	16	1
28–8010	Spring – Torsion Deflector	12	10	1
28–8070	Lanyard	13	55	1
28–8080	Boot – Terminal	8	22	1
28–8130	Pin – Chute, Locking	13	54	1
38–1420	Switch – Interlock	7	2	1
40–6230	Spring – Torsion	13	51	1
44–5930	Deflector Assembly	12	11	1
47–0010	Arm – Suspension, Front	2	13	2
47–0540	Pedal	3	19	2
47–0550	Bracket – Brake, Pedal	3	17	1
47–0560	Bracket – Clutch, Pedal	3	12	1
47–0570	Spacer – Pedal	3	16	3
47–0590	Spindle – L.H.	2	*	1
47–0600	Spindle – R.H.	2	4	1
47–0610	Tie Rod – Adjustable	2	34	1
47–0700	Bearing – Flange	2	27	1
47–0760	Support – Axle, Front	2	11	1
47–0770	Shaft – Pivot, Pedal	3	8	1
47–0780	Retainer – Shaft	3	9	1
47–0930	Footrest – R.H.	1	22	1
47–0940	Footrest – L.H.	1	16	1
47–0960	Spring – Compression	12	3	1
47–1140	Retainer – Spring, Top	12	2	2
47–1180	Bracket – Engagement	12	1	1
47–1200	Shaft – Adjusting	12	4	1
47–1290	Brake – Parking	1	10	1
47–1840	Bracket – Height–of–Cut	5	13	1
47–1850	Lever – Height–of–Cut	5	6	1
47–1910	Solenoid	6	12	1
47–2060	Bracket – Brake, Parking	1	19	1
47–2961	Hose – Fuel Line	9	9	1
49–3242	Assy. – Wheel, Steering	4	5	1
54–3090	Wire Assembly	4	25	1
54–9220	Decal – Danger	12	12	1
55–3570	Cap – Fuel	9	14	1
56–2540	Tube – Vent, Battery	8	37	1
56–6590	Bolt – Wheel	12	33	2
56–7030	Body – Spindle	12	44	1
56–7050	Tank – Fuel	9	15	1
56–7070	Spring – Torsion, Clutch	3	11	1
56–7080	Spring – Torsion, Brake	3	18	1
56–7130	Tower – Front	1	4	1
56–7140	Tower – Rear	1	8	1
56–7170	Guide – Shaft, Steering	1	6	1
56–7180	Cover – Front	2	30	1
56–7240	Bracket – Retaining, Spring	3	3	1
56–7400	Arm – Lever, H.O.C.	5	24	1
56–7430	Pin – Support	11	22	2
56–7470	Bracket – Rack, Steering	2	33	1
56–7500	Shaft – Steering	2	31	1
56–7520	Bushing – Sector	2	22	1
56–7530	Bolt – Shoulder	2	20	1
56–7570	Rod – Engagement	3	15	1
56–7650	Tube – Pivot	3	14	1
56–7670	Cable – Battery, Positive	9	21	1
56–7670	Cable – Positive	6	17	1
56–7710	Hold Down – Battery	8	26	1
56–7720	Post – Battery	8	21	1
57–4060	Retainer – Front	9	16	1
57–4070	Retainer – Rear	9	20	1
57–9940	Spring – Brake	10	17	1
60–9730	Guide – Belt	12	26	2
61–9760	Wheel – Deck	12	32	2
61–9780	Cap – Hub	10	14	2
61–9780	Cap – Hub	2	44	2
62–3760	Screw – Cap Hex. Hd.	9	27	1
62–3930	Spring – Extension	5	5	1
62–3930	Spring – Extension	3	6	1
62–4300	Pad – Battery	8	25	1
62–5480	Isolator – Seat	7	11	4
62–5490	Support – Fuel Line	9	10	1
63–5540	Base – Seat	7	3	1
63–5670	Tube – Bumper, Seat Rod	7	7	1
63–5830	Link – Suspension, Deck	5	16	2
63–8360	Key	4	6	1
65–2920	Pad – Pedal, Foot	3	5	2
65–5670	Bolt – Shoulder	5	21	1
65–5670	Screw – Shoulder	8	34	1
66–1340	Decal – Danger	13	7	1
66–6740	Cover – Shaft, Steering	4	2	1
68–3650	Decal – Danger Deflector	12	13	1
76–1340	Decal – Made In USA	5	26	1
76–1540	Arm – Suspension R.H.	11	16	1
76–1550	Arm – Suspension L.H.	11	*	1
76–1560	Spacer	11	13	4
80–2310	Bracket – Bell Crank Mount	5	2	1
80–2320	Bracket – H.O.C., Engage	5	15	1
80–2330	Link – Bell Crank	8	35	1
80–2340	Bracket – Pivot, Inner	8	6	1
80–2350	Pivot – Outer	8	4	1
80–2360	Crank – Bell, Deck Engage	5	22	1
80–2370	Shaft W.A. – Pivot	8	5	1
80–2400	Lever W.A. – Engage	8	2	1
80–2430	Axle – Front	2	18	1
80–2450	Rack – Steering	2	19	1
80–2460	Tie Rod – Fixed	2	*	1
80–2530	Assembly – Brake	13	50	1
80–2550	Pad – Brake	12	6	1
80–2560	Plate – Deck, Brake Mtg.	12	47	1
80–2570	Pin – Clevis	12	5	2
80–2580	Rod – Adjusting	13	52	1
80–2600	Battery – 12 Volt	8	24	1
80–2620	Rod – Base, Seat	7	8	1
80–2630	Kicker – 32	12	29	4
80–4350	Shaft – Spindle	12	41	1
80–4370	Shield – Bearing	12	42	1
80–4390	Spacer – Hardened	12	43	1
80–4430	Blade – Recycler	12	40	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
80–4470	Pulley	12	22	1
80–4490	Ring – Deck	12	48	4
80–4570	Stiffener – Blade	12	37	1
82–6150	Assy. – Cover, Discharge	12	14	1
83–7010	Brace – Cover, Rear	12	17	1
83–7020	Spacer – Bearing	12	25	1
88–3950	Assembly – Seat	7	1	1
88–4540	Hinge – Deflector Danger	13	12	1
88–6150	Rod – Deflector Hinge	13	11	1
88–6160	Srping – Torsion	13	10	1
88–9730	Rim	10	12	2
88–9800	Cover – Gate, Shift	6	24	1
88–9830	Switch – Ignition	4	10	1
88–9930	Switch – Micro, Short	6	4	1
88–9932	Switch – Micro	4	24	1
92–0860	Frame	6	14	1
92–0861	Frame – Rear	11	8	1
92–0862	Transaxle	10	8	1
92–0864	Standbar	11	5	1
92–0865	Support – Axle	11	9	2
92–0866	Body W.A. – Seat Support	6	8	1
92–0870	V–Belt – Traction	10	4	1
92–0871	Rod – Traction	9	29	1
92–0872	Rod – Brake	10	18	1
92–0873	Pulley – Engine	9	24	1
92–0874	Pulley	10	7	1
92–0875	V–Belt	12	24	1
92–0876	Guard – Front	2	37	1
92–0877	Panel – Seat Base, R.H.	6	21	1
92–0878	Panel L.H. – Base, Seat	5	9	1
92–0879	Spring	9	1	1
92–0880	Arm – Shift, Transaxle	10	23	1
92–0881	Bracket W.A. – Traction	9	4	1
92–0883	Plate – Mounting, Idler	9	2	1
92–0884	Lever W.A. – Shaft	8	10	1
92–0887	Support – Shift, Lower	8	19	1
92–0888	Support – Shift, Upper	8	14	1
92–0889	Link – Shift	10	1	1
92–0890	Control – Throttle	4	15	1
92–0891	Shaft W. A. – Shift	8	16	1
92–0894	Spring – Torsion	8	11	1
92–0895	Gate – Shift	6	3	1
92–0896	Retainer – Spring	8	29	1
92–0897	Spacer	11	1	1
92–0898	Guide – Belt	11	2	1
92–0899	Guide – Belt, Lower	10	21	1
92–1751	Decal – Shift Pattern	6	2	1
92–2493	Spring – Torsion	13	3	1
92–7243	Decal – Control Panel	5	27	1
92–7244	Decal – Deck Engage	4	9	1
92–7245	Decal – H.O.C.	4	21	1
92–7974	Tread – Foot R.H.	1	*	1
92–7975	Tread – Foot L.H.	1	15	1
92–7987	Decal – Recycler	1	3	1
92–7990	Insert – Wheel, Steering	4	4	1
92–8757	Decal – Engine	9	37	1
92–8916	Bolt – Shoulder	13	8	1
92–9521	Decal – Recycler	12	35	1
93–0231	Screw – Pan Hd.	13	4	4
93–3190	Boot – Terminal	6	25	1
93–6668	Decal – Battery Charging	8	38	1
93–7008	Decal – Brake, Parking	1	9	1
93–7009	Decal – Deflector Danger	13	5	1
93–7010	Decal – Danger	12	34	1
93–7276	Decal – Danger	8	39	1
93–7694	Deflector Ass'y	13	9	1
93–7696	Kicker – CE	13	6	2
93–9354	Decal – Battery	8	40	1
93–9498	Decal – Instructions	4	23	1
94–3516	Decal – L.H.	5	10	1
217–80	Rim	2	3	2
218–461	Nut – Lock	4	7	1
218–560	Cap – Battery	8	28	6
231–116	Tire	2	42	2
231–117	Tire	10	10	2
232–27	Stem – Valve	10	16	2
232–27	Valve Stem w/Cap	2	41	2
232–39	Tube – Inner	10	11	2
232–44	Tube – Inner	2		2
233–25	Knob	4	13	1
233–48	Knob	8	1	2
233–48	Knob	5	19	1
237–143	O–Ring	8	27	2
2411–32	Ball Joint	8	31	1
2412–68	Clamp – Wire	7	4	1
2412–98	Clamp – Hose	9	8	2
251–297	Bearing	12	21	2
257–11	Washer	8	18	1
283–2	Pin – Clevis	2	16	2
283–2	Pin – Clevis	12	45	2
283–42	Pin – Clevis	11	18	2
283–52	Pin – Clevis	1	20	1
288–10	Cap – Pipe	9	22	1
289–19	Nipple – Pipe	9	23	1
302–5	Fitting – Grease	2	1	2
302–5	Fitting – Grease	2	17	2
302–5	Fitting – Grease	10	25	2
321–4	Screw – Cap Hex. Hd.	12	8	1
321–4	Screw – Cap Hex. Hd.	3	10	1
321–4	Screw – Cap Hex. Hd.	5	11	4
321–4	Screw – Cap Hex. Hd.	8	12	2
321–4	Screw – Cap Hex. Hd.	6	13	2
321–4	Screw – Cap Hex. Hd.	1	21	2
322–5	Screw – Cap Hex. Hd.	3	2	1
322–5	Screw – Cap Hex. Hd.	11	6	15
322–5	Screw – Cap Hex. Hd.	6	6	2
322–5	Screw – Cap Hex. Hd.	3	7	2
322–5	Screw – Cap Hex. Hd.	8	8	4
322–5	Screw – Cap Hex. Hd.	12	9	6
322–5	Screw – Cap Hex. Hd.	2	9	8
322–5	Screw – Cap Hex. Hd.	5	12	2
322–5	Screw – Cap Hex. Hd.	1	14	10
322–5	Screw – Cap Hex. Hd.	4	16	8
322–6	Screw – Cap Hex. Hd.	12	20	1
322–7	Screw – Cap Hex. Hd.	9	28	4
322–12	Screw – Cap Hex. Hd.	11	10	4
322–14	Screw – Cap Hex. Hd.	11	11	2
322–50	Screw – Cap Hex. Hd.	11	4	1
323–9	Screw – Cap Hex. Hd.	9	32	1
323–9	Screw – Hex Hd. Cap	11	21	2
323–14	Screw – Hex Hd. Cap	11	17	2
325–6	Screw – Cap Hex. Hd.	2	8	1
329–4	Screw – Cap Hex. Hd.	10	3	1
3218–1	Nut – Jam	6	18	3
3219–7	Nut – Hex. Hd.	12	23	1
3220–2	Nut – Hex. Jam	2	7	1
3230–18	Bolt – Carriage	2	32	2
3253–3	Washer – Lock	10	2	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3253–3	Washer – Lock	6	16	2
3253–3	Washer – Lock	9	18	2
3253–6	Washer – Lock	9	26	1
3254–2	Washer – Lock, Int. Tooth	9	5	3
3254–2	Washer – Lock, Int. Tooth	10	20	1
3254–5	Washer – Lock, Int. Tooth	4	8	1
3256–14	Washer – Flat	6	9	1
3256–22	Washer – Flat	8	13	2
3256–22	Washer – Flat	1	18	2
3256–22	Washer – Flat	9	30	1
3256–23	Washer – Flat	11	7	12
3256–23	Washer – Flat	6	7	2
3256–23	Washer – Flat	1	13	8
3256–23	Washer – Flat	5	17	4
3256–23	Washer – Flat	4	18	7
3256–23	Washer – Flat	2	23	6
3256–23	Washer – Flat	12	27	4
3256–23	Washer – Flat	8	33	2
3256–24	Washer – Flat	1	11	1
3256–24	Washer – Flat	11	15	4
3256–24	Washer – Flat	9	33	1
3256–25	Washer – Flat	9	25	1
3256–26	Washer – Flat	5	25	2
3256–27	Washer – Flat	3	13	3
3256–35	Washer – Flat	1	1	4
3256–49	Washer – Flat	13	56	1
3256–57	Washer – Flat	9	36	1
3256–58	Washer – Fender	13	2	1
3257–23	Key	10	6	1
3272–6	Pin – Cotter	3	1	3
3272–6	Pin – Cotter	5	4	2
3272–6	Pin – Cotter	1	12	1
3272–6	Pin – Cotter	2	14	2
3272–6	Pin – Cotter	10	22	1
3272–6	Pin – Cotter	9	31	1
3272–6	Pin – Cotter	12	36	2
3272–12	Pin – Cotter	2	45	2
3272–16	Pin – Cotter	10	9	1
3274–51	Screw – Hex. Socket Hd.	9	19	2
3290–134	Screw – Machine	6	10	1
3290–191	Nut – Speed	6	23	2
3290–282	Rivet	12	7	2
3290–282	Rivet	13	53	2
3290–307	Pin – Cotter, Hair	7	9	1
3290–354	Nut – Double	6	20	1
3290–354	Nut – Double	4	22	1
3290–378	Tie – Cable	7	6	1
3290–378	Tie – Cable	4	26	1
3290–413	Washer – Belleville	5	7	8
3290–465	Washer – Belleville	13	57	1
3290–496	Nut – Retainer	12	28	4
3296–2	Nut – Lock	6	19	1
3296–4	Nut – Lock	8	30	1
3296–4	Nut – Lock	2	36	4
3296–8	Nut – Lock	2	12	1
3296–8	Nut – Lock	5	23	1
3296–8	Nut – Lock	8	36	1
3296–8	Nut – Lock	12	46	1
3296–29	Nut – Lock	5	1	7
3296–29	Nut – Lock	1	2	14
3296–29	Nut – Lock	11	3	17
3296–29	Nut – Lock	3	4	3
3296–29	Nut – Lock	6	5	2
3296–29	Nut – Lock	9	6	2
3296–29	Nut – Lock	2	10	8
3296–29	Nut – Lock	10	19	1
3296–29	Nut – Lock	12	19	24
3296–29	Nut – Lock	4	19	4
3296–29	Nut – Lock	8	32	4
3296–39	Nut – Lock	9	3	1
3296–39	Nut – Lock	11	19	2
3296–39	Nut – Lock	12	31	2
3296–42	Nut – Lock	13	1	1
3296–42	Nut – Lock	6	15	2
3296–42	Nut – Lock	8	15	2
3296–42	Nut – Lock	1	17	2
3296–42	Nut – Lock	5	18	1
3296–47	Nut – Lock	11	12	1
3296–59	Nut – Lock	11	14	3
3296–59	Nut – Lock	12	15	1
32103–2	Nut – Wing	12	18	1
32103–12	Nut – Wing	8	20	1
32103–22	Nut – Wing	8	23	2
32104–76	Screw – Self Tap Acorn Hd.	1	5	9
32104–76	Screw – Self–Tapping	4	14	2
32107–11	Nut – Square	9	17	2
32120–47	Ring – Retaining	8	7	1
32120–64	Ring – Retaining	10	5	1
32121–9	Pin – Roll	2	28	1
32121–16	Pin – Roll	8	17	1
32121–25	Pin – Roll	8	3	1
32121–78	Pin – Roll	4	3	1
32121–78	Pin – Roll	8	9	1
32122–14	Screw – Truss, Phillips Hd.	12	38	8
32128–20	Nut – Flange Hd.	7	5	4
32128–21	Nut – Lock, Flange Hd.	2	25	1
32128–23	Nut – Lock, Flange Hd.	2	26	1
32144–4	Screw – Special	2	21	2
32144–14	Screw	9	12	2
32144–14	Screw – Thread Forming	2	38	2
32144–112	Screw – Sems	6	22	2
32151–48	Ring – Retaining	10	13	2
32151–48	Ring – Retaining, External	2	35	2
32151–61	Ring – Retaining	5	14	2

OPTIONAL EQUIPMENT

Easy Empty Bagging Kit . . . . . .
Model No. 79095 or 79096
Twin Bag Bagger Kit . . . Model No. 79085 or 79086
Tire Chains . . . . . Part No. 23–2340
Wet Grass Bagging Kit . . . . . Part No. 38–5730
Hi–Sail Bagging Blade . . . . . Part No. 33–4750

*Not Illustrated