
FORM NO. 3318–371

TORO®

MODEL NO. 20913B–6900001 & UP

PARTS CATALOG

48cm REAR BAGGING MOWER

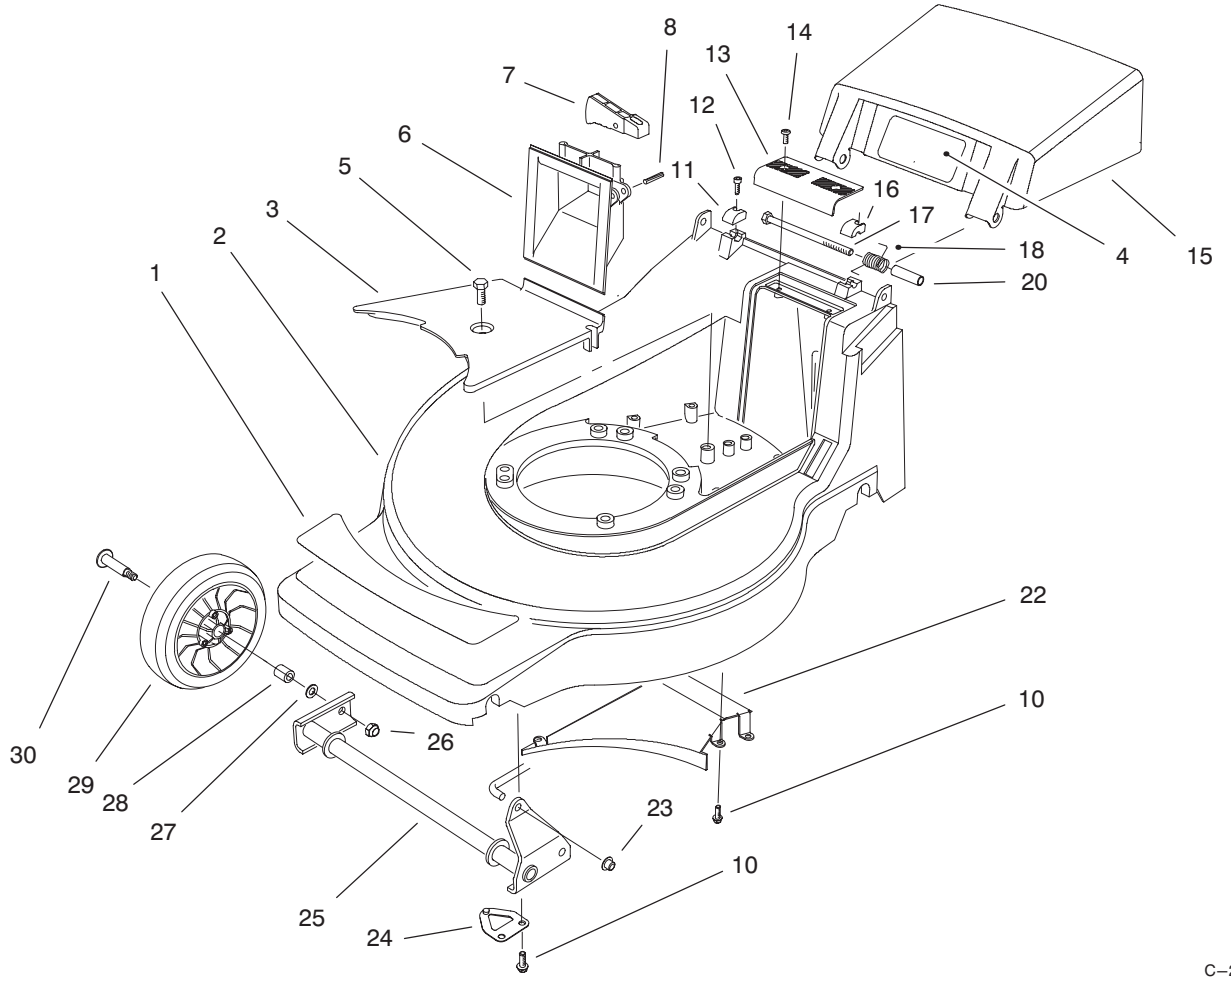

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71–9860	Decal – 48cm	1
2	16–5979	Housing – 48cm	1
3	71–7920	Cover – Belt	1
†4	93–4105	Decal – Danger	1
5	32144–70	Screw – Hex. Flange Hd.	1
6	71–7870	Grip – Lower	1
7	71–7930	Trigger – H.O.C.	1
8	3284–5	Pin – Roll	1
10	32144–4	Screw – Thread Forming)	8
11	71–7910	Cap – Hinge Bolt R.H.	1
12	65–5210	Screw – Thread Forming	2
13	71–7860	Grip – Upper	1
14	32144–97	Screw – Thread Forming	2
15	71–9800	Door – Discharge	1


Ref. No.	Part No.	Description	No. Used
16	71–7900	Cap – Hinge Bolt L.H.	1
17	322–29	Screw – Cap Hex. Hd.	2
†18	71–9840	Spring – Door	2
20	71–8580	Spacer – Door	2
22	71–7990	Ramp – Discharge	1
23	32112–11	Nut – Push	1
24	71–8830	Retainer – Shaft	2
†25	71–7820	Pivot – Front	1
26	3296–5	Nut – Lock	2
27	40–1940	Washer – Wheel	2
28	27–6250	Bushing – Wheel	4
29	46–1113	Wheel & Tire Assembly (Incl. Ref. #28)	2
30	27–6230	Bolt – Wheel	2

† Obtain From Toro Europe N.V.

© The TORO Company –1995
All Rights Reserved

TPS


3318–371

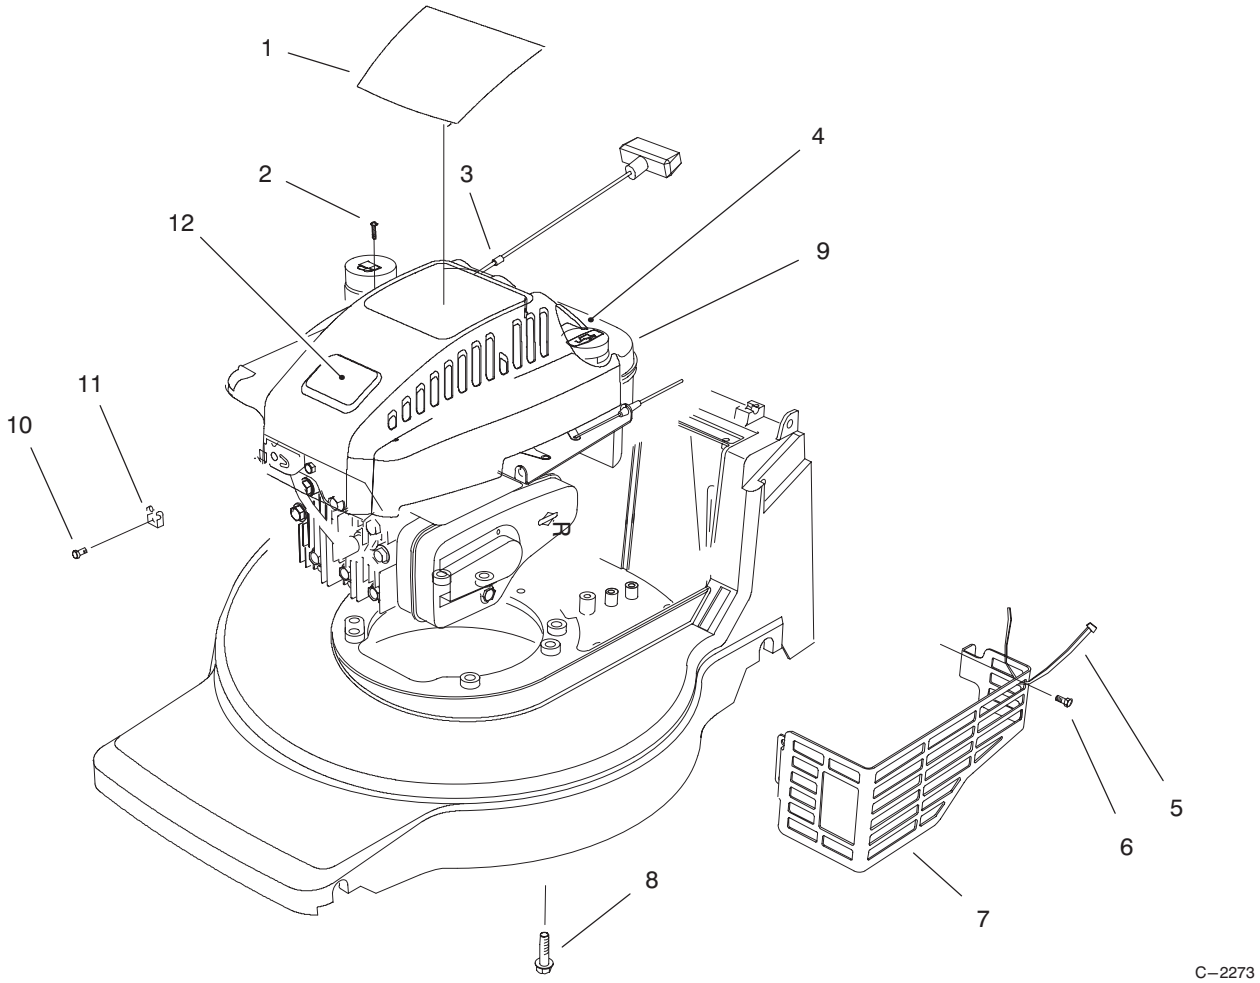

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–4354	Decal – Engine	1
2	32144–121	Screw	2
3	2210–316	Stop – Rope	1
4	93–0243	Shroud – QT Wedge	1
5	3290–378	Tie – Cable	1
6	32144–73	Screw – Muffler	3

Ref. No.	Part No.	Description	No. Used
7	82–8550	Shield – Muffler	1
8	32144–102	Screw – Engine Mount	3
9		Engine – B&S Quantum	1
10	93–8470	Screw – Clamp	1
11	2210–249	Clamp – Cable	1
12	92–2289	Decal – Toro Logo	1

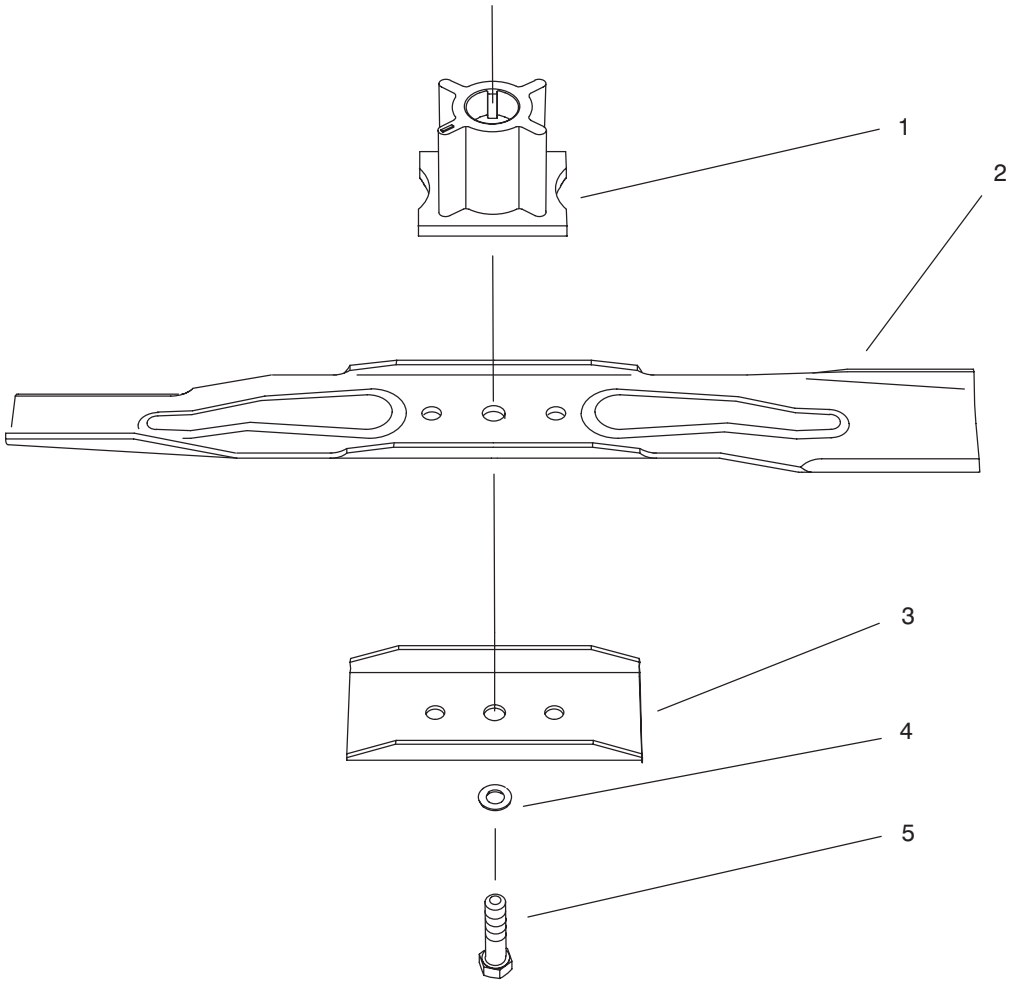

C–2445


BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71–7940	Retainer – Blade	1
†2	92–9813	Blade – 48cm	1
†3	92–9812	Stiffener – Blade	1

Ref. No.	Part No.	Description	No. Used
4	3253–22	Washer – Lock	1
5	26–0672	Bolt – Blade	1

† Obtain From Toro Europe N.V.

3318–371

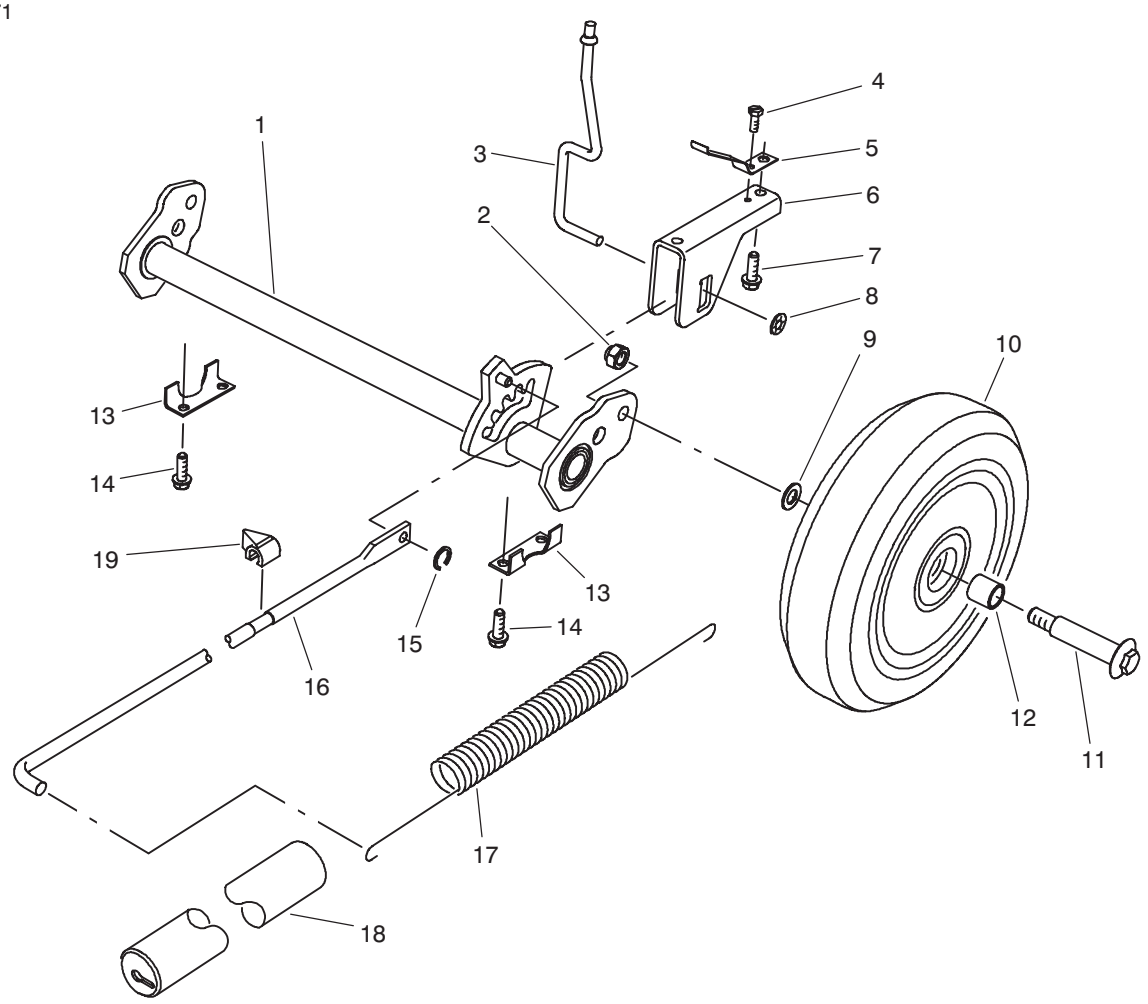


C–0363

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	71–7800	Pivot – Rear H.P.	1
2	3296–5	Nut – Lock	2
3	71–7840	Rod – Trigger	1
4	32144–31	Screw – Thread Forming	1
5	71–8060	Spring – Trigger Return	2
6	71–8080	Saddle – H.O.C.	1
7	63–8590	Screw – Thread Forming	2
8	32112–13	Nut – Push	1
9	40–1940	Washer – Wheel	2
10	11–9509	Wheel & Tire Assembly (Incl. Ref. #12)	2

Ref. No.	Part No.	Description	No. Used
11	27–6230	Bolt – Wheel	2
12	27–6250	Bushing – Wheel	4
13	71–7770	Plate – Rear Securing	2
14	32144–4	Screw – Thread Forming	4
15	32151–93	Ring – Grip	1
16	71–7970	Rod – Link	1
17	71–7740	Spring – Counterbalance	1
18	71–8450	Cover – Spring	1
19	71–7980	Indicator – H.O.C.	1

† Obtain From Toro Europe N.V.

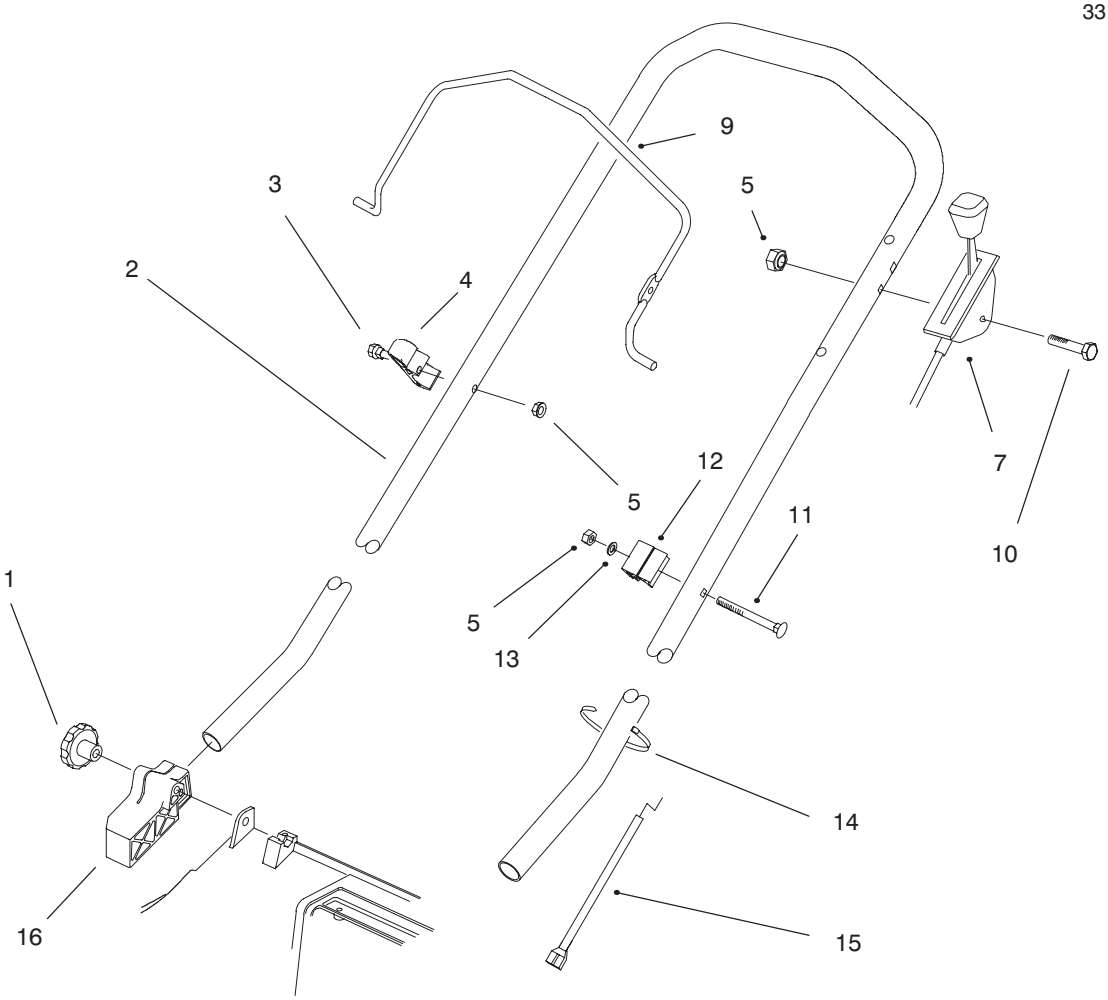

C–2446A


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	19–4050	Knob	2
2	94–4375	Handle	1
3	321–52	Screw – Hex Hd. Cap	1
†4	93–3772	Guide – Rope	1
5	3296–73	Nut – Lock	3
7	93–1118	Control – Throttle	1
†9	94–4364	Bail – Brake	1
10	321–48	Screw – Hex Hd. Cap	1

Ref. No.	Part No.	Description	No. Used
11	92–2270	Screw – Handle	1
12	46–6980	Support – Cable	1
13	3256–1	Washer – Flat	1
14	3290–378	Tie – Cable	2
15	93–1116	Cable – Brake	1
16	71–8100	Mount – Handle R.H.	1
*	71–8090	Mount – Handle L.H.	1

*Not Illustrated
† Obtain From Toro Europe N.V.

3318–371

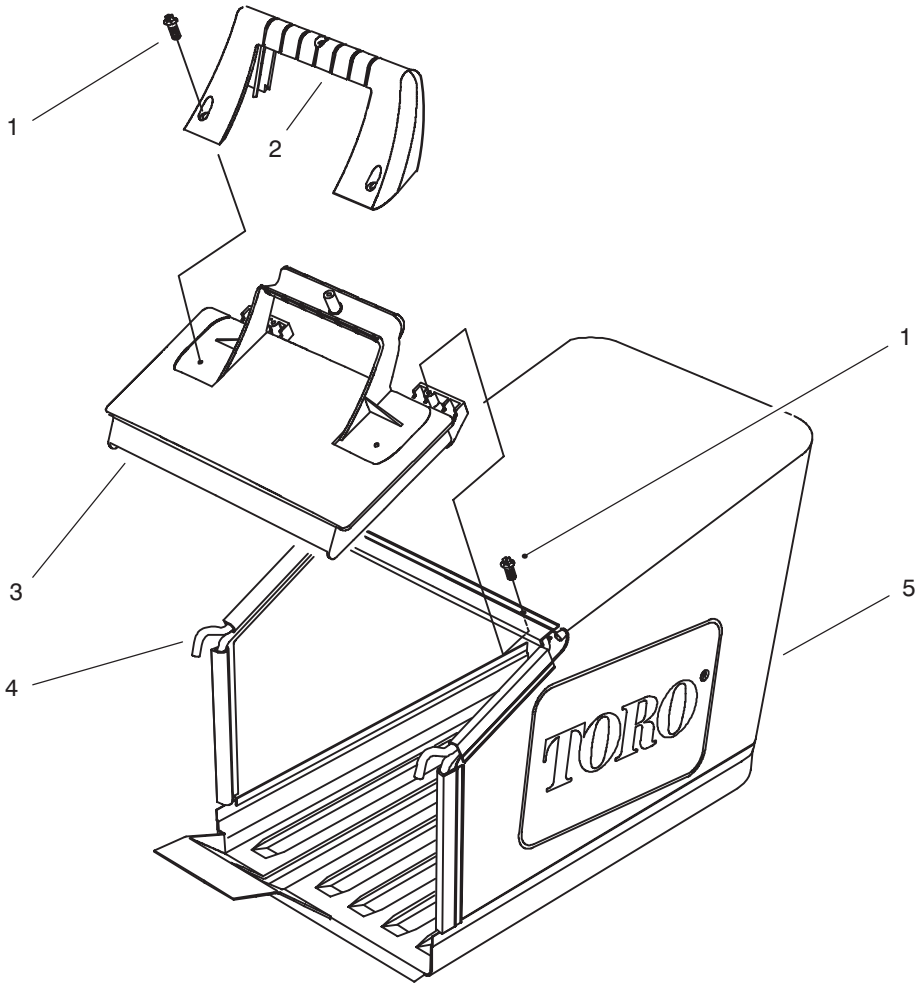


C–1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–111	Screw – Thr'd Form	5
†2	71–9480	Handle – Door	1
†3	71–9470	Door – Bag	1

Ref. No.	Part No.	Description	No. Used
†4	71–9900	Frame – Bag	1
5	71–9460	Bag – Grass	1

† Obtain From Toro Europe N.V.

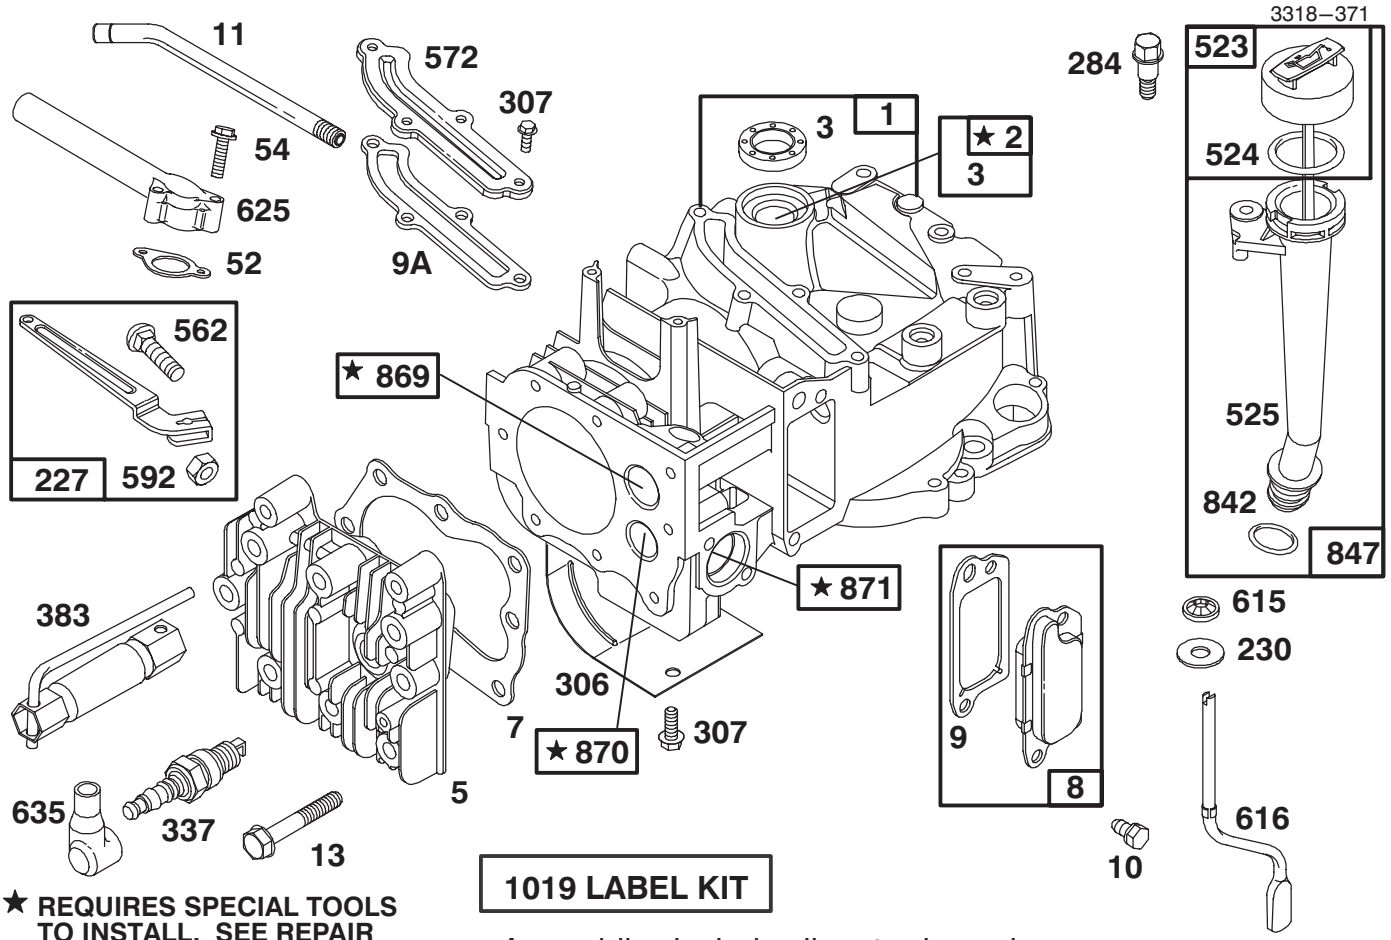

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

1019 LABEL KIT


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667–01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214349	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Carriage	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve **Note:** 63709 Guide – Intake Valve	1
1019	494256	Label Kit	1

★ Included in Gasket Set–Part No. 496316.

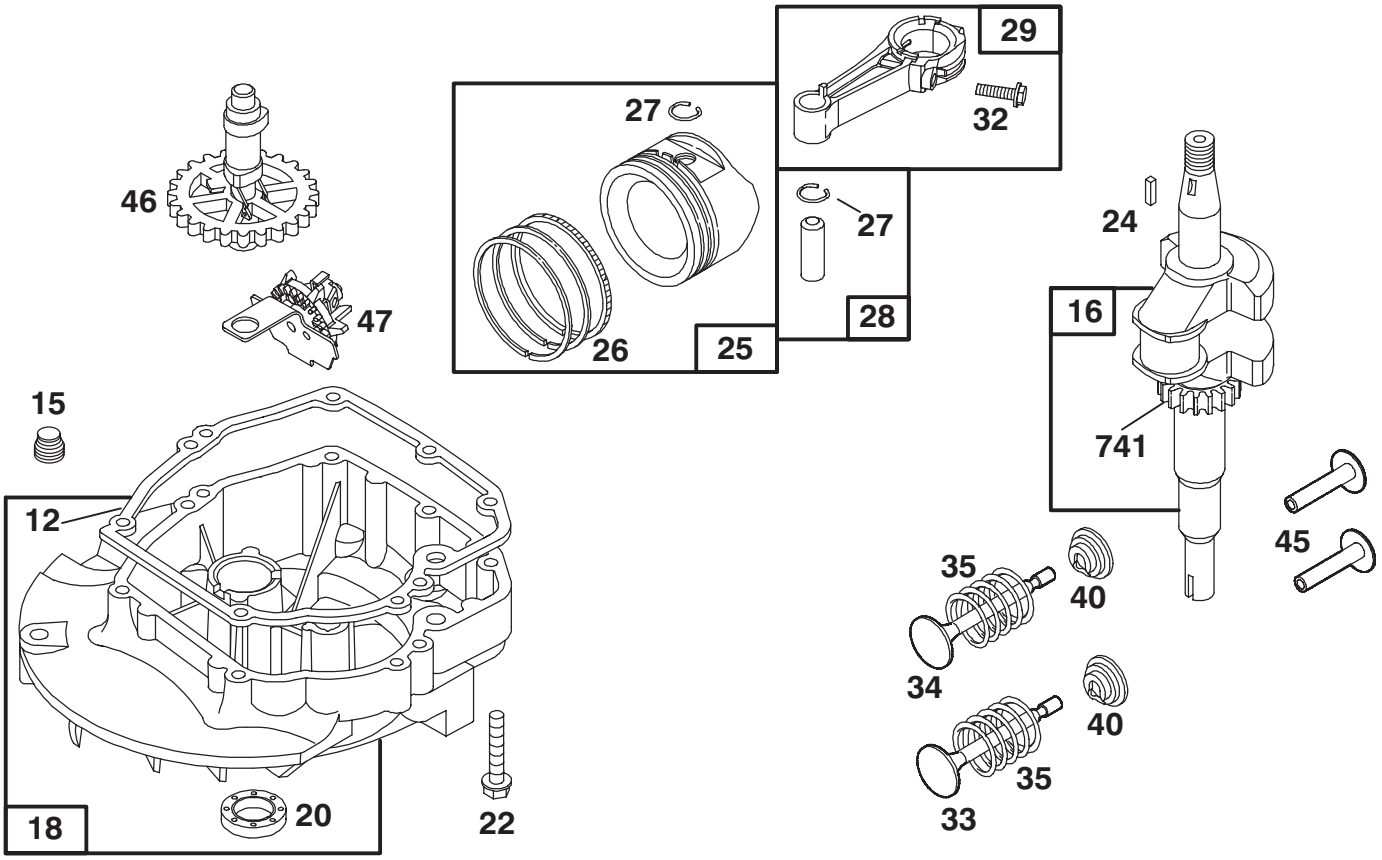


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667—01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1
15	94720	Plug — Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	1
18	493279	Sump — Engine	1
★20	399781	Seal — Oil	1
22	94220	Screw — Hex. Head	1
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather)	1
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010” O.S.)	1
	493386	Piston Assy. (.020” O.S.)	1
	493387	Piston Assy. (.030” O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010” O.S.)	1
	493389	Ring Set (.020” O.S.)	1
	493390	Ring Set (.030” O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005” O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Conn. Rod With .020” Undersize Crankpin Bearing — Order No. 490743.	1
32	94699	Screw — Connecting Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	1
46	492830	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

★ Included in Gasket Set—Part No. 496316.

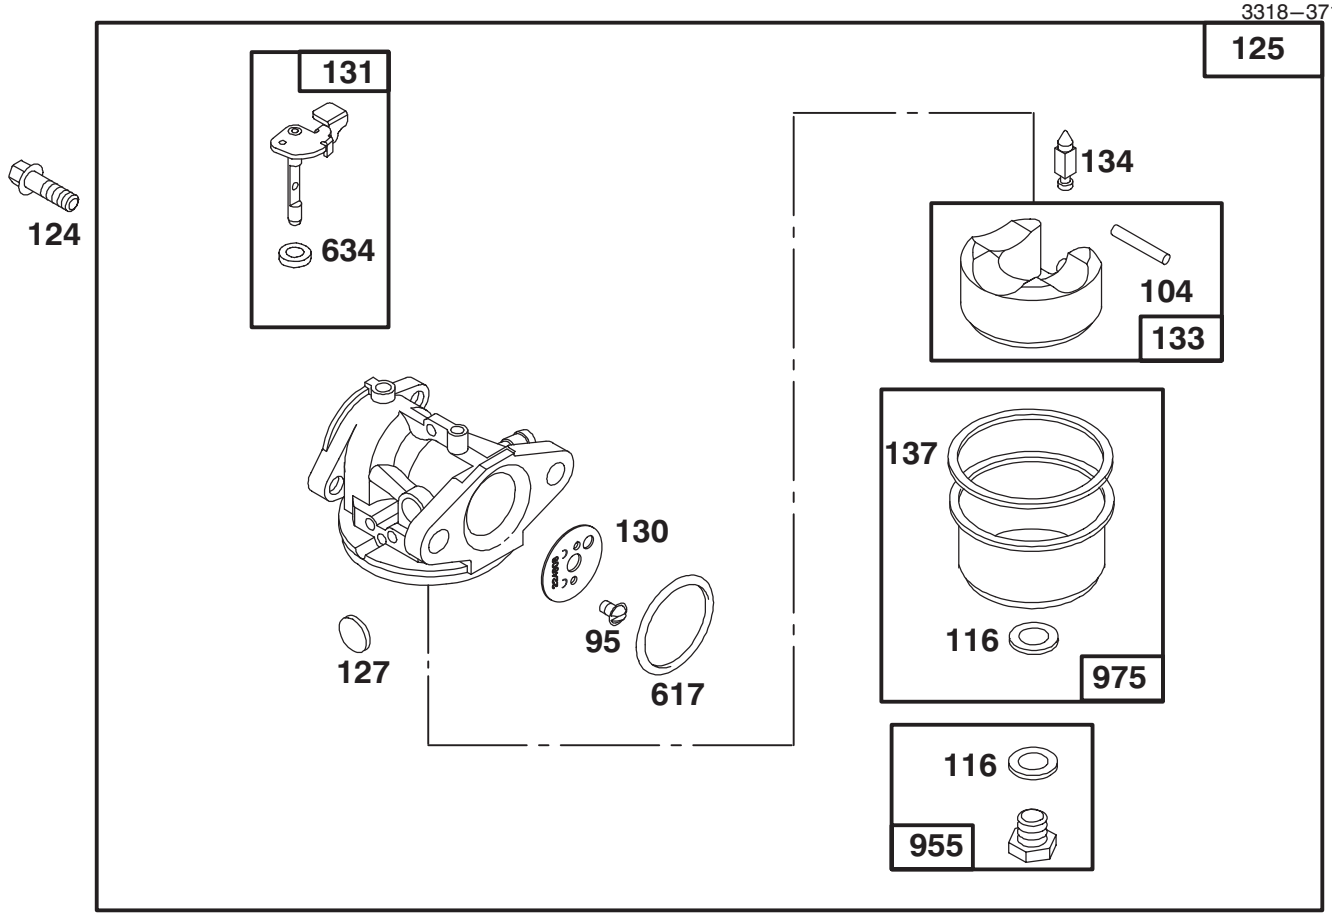


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667–01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mounting	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only)	1
124	94525	Screw – Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only)	1
955	497315	Screw – Bowl Mtg. (Std.) **Note:** 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. – Carburetor	1

●Included in Carburetor Kit–Part No. 493762.
◆Included in Carburetor Gasket Set–Part No. 490937.

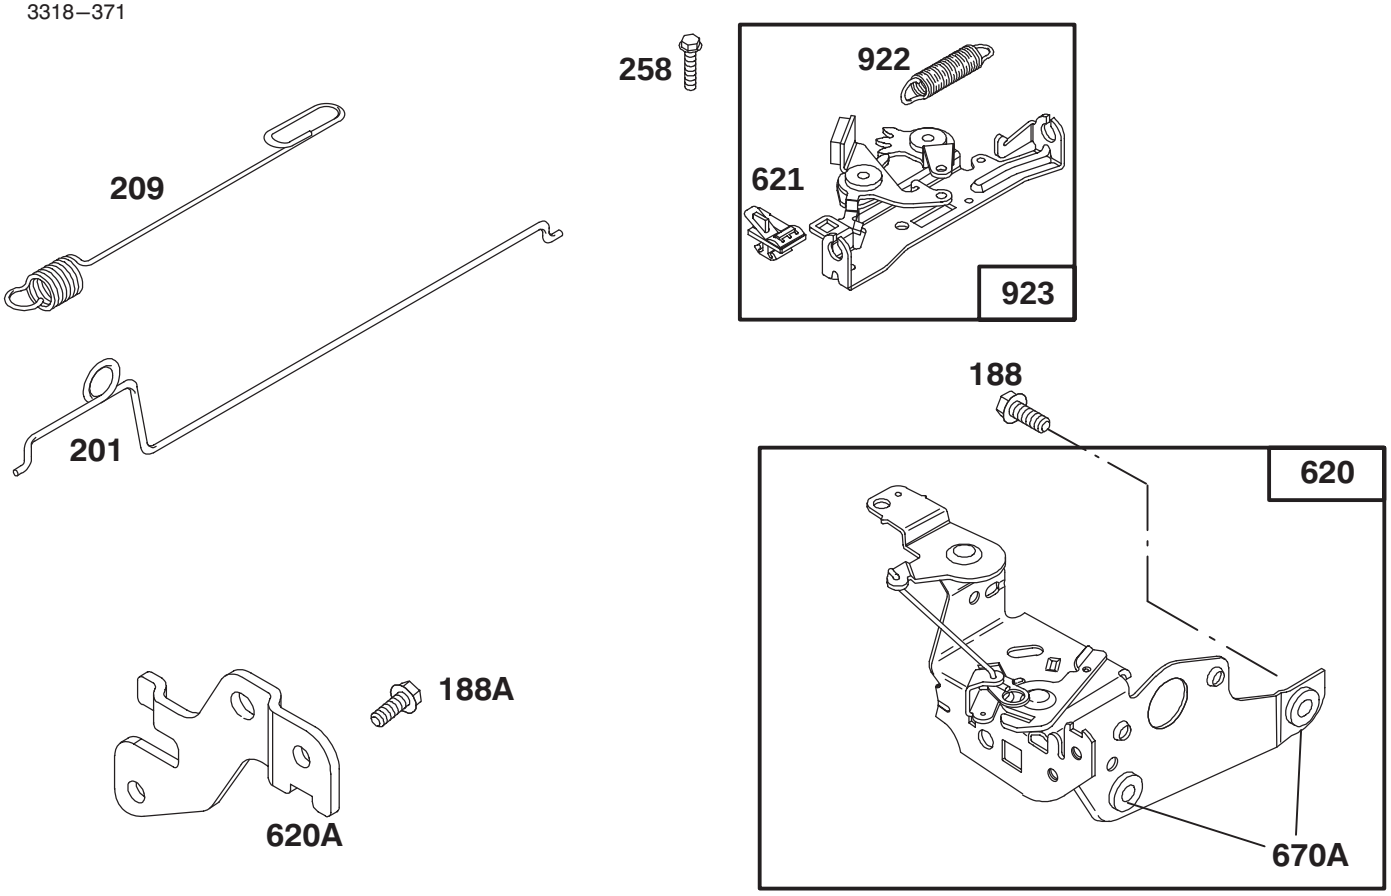


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667–01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
188A	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

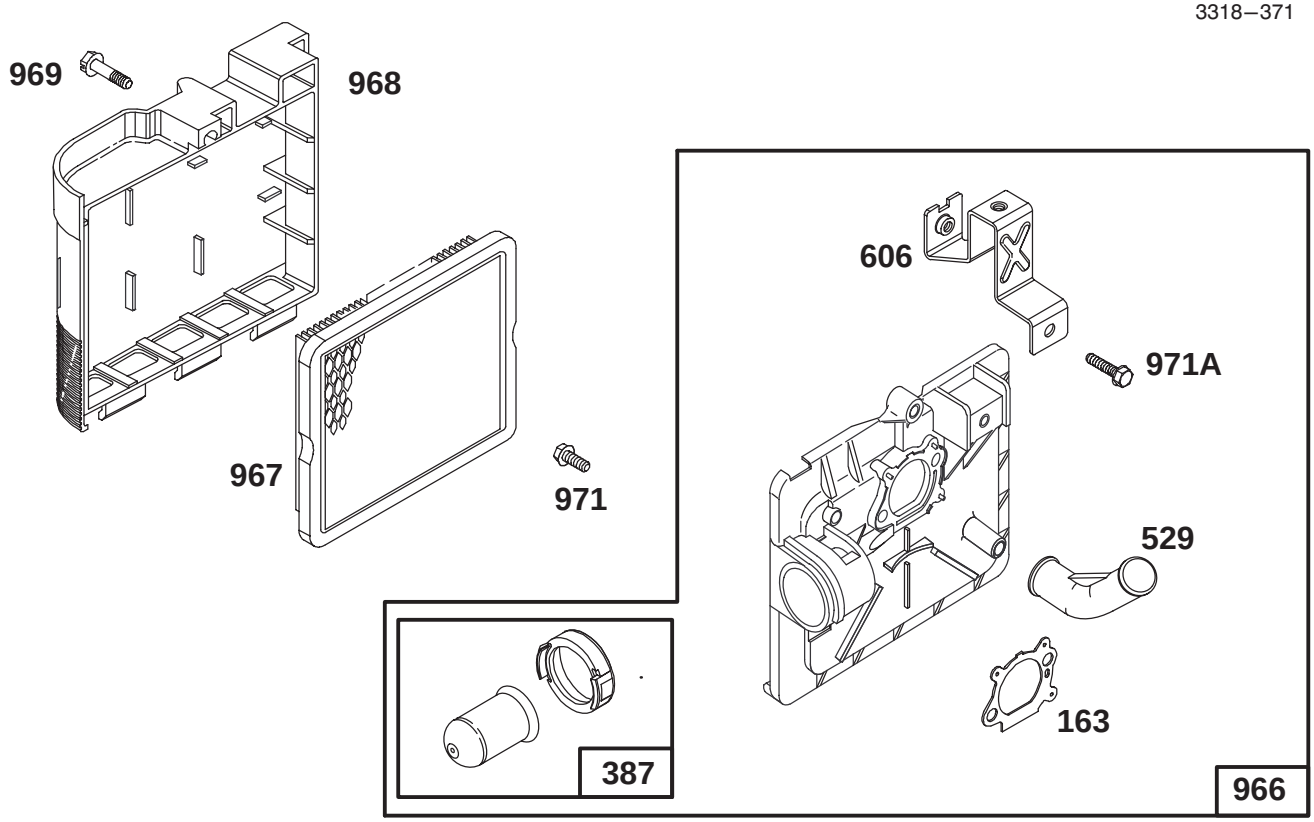

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-0667–01


Ref. No.	Part No.	Description	No. Used
163	272653	Gasket – Air Cleaner	1
387	496115	Primer–Carburetor	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
966	496116	Base – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1
969	94120	Screw – Cover Mtg.	1
971	94121	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1

★ Included in Gasket Set–Part No. 496316.

3318–371

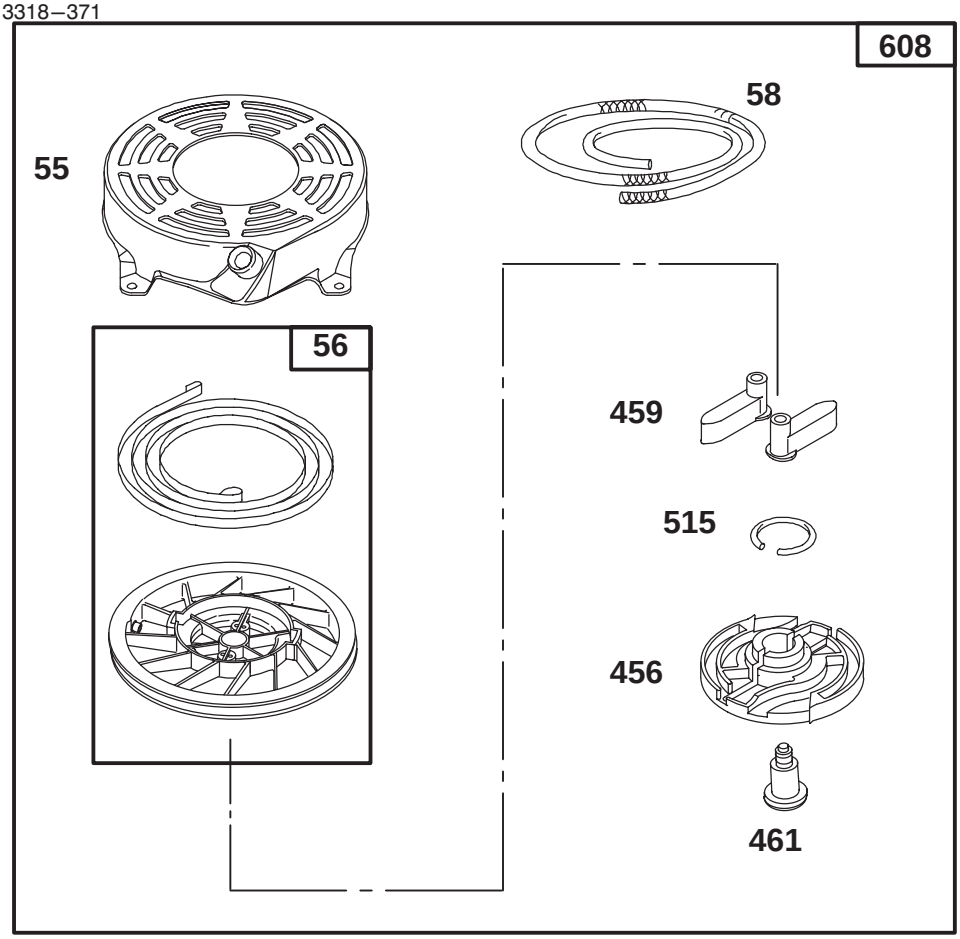

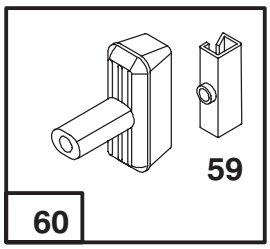


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667–01

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	224467	Insert – Starter Grip	1
60	493926	Handle – Rewind Starter	1
456	281503	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	281505	Pawl – Starter	1
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter Assy. – Rewind	1
		Includes:	
		94128 Screw – Hex Hd.	1
		92987 Nut – Hex.	1

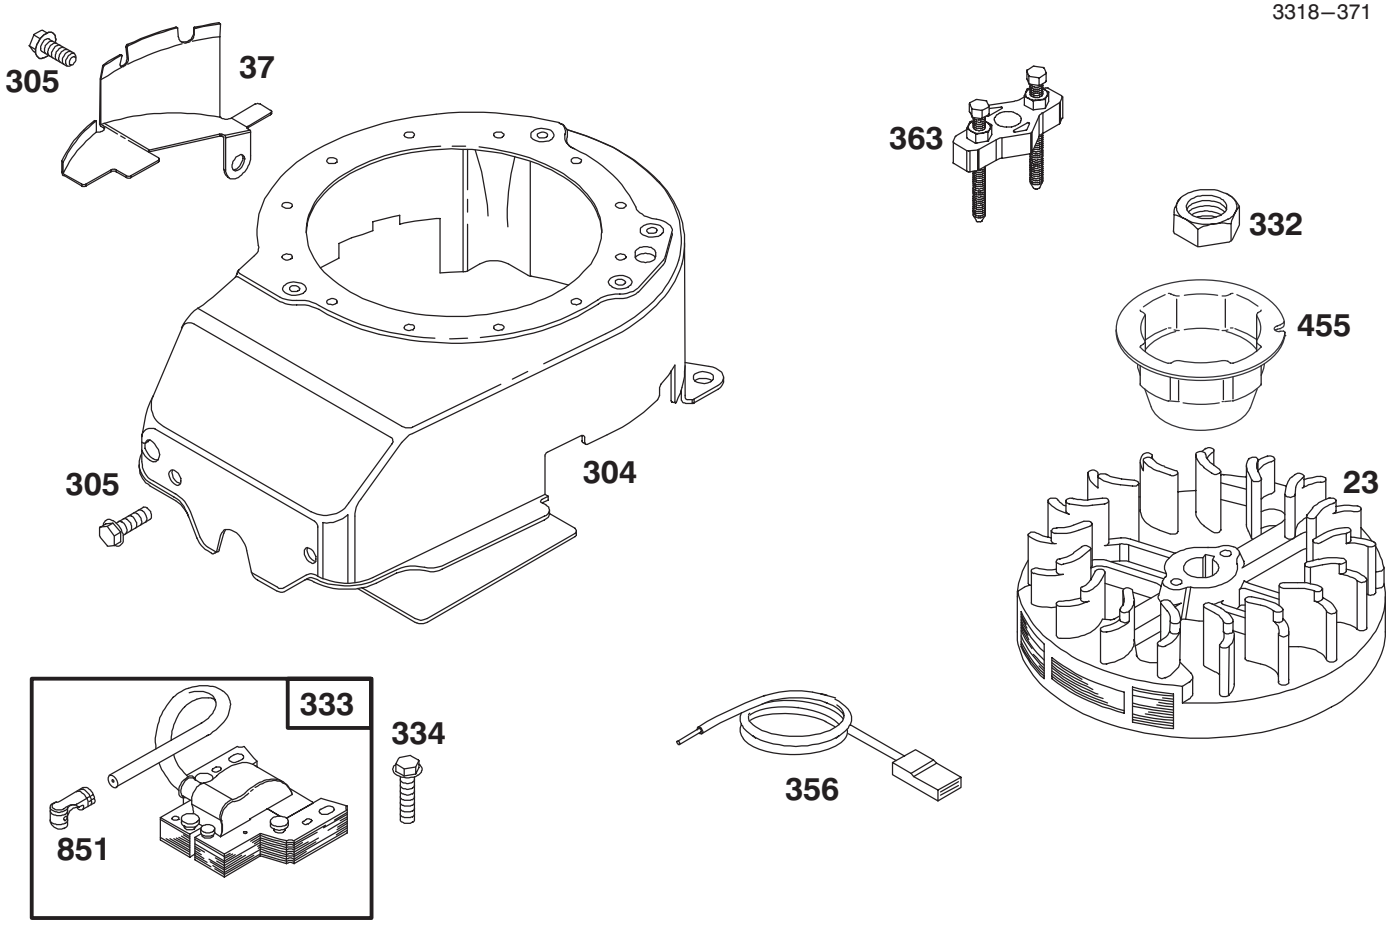


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667–01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
304	493293	Housing – Blower	1
305	94744	Screw – Sem	1
332	92284	Nut – Flywheel	1
333	802574	Armature – Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Sem	1
356	398808	Wire – Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup – Starter	1
851	493880	Terminal – Ignition Cable	1

3318–371

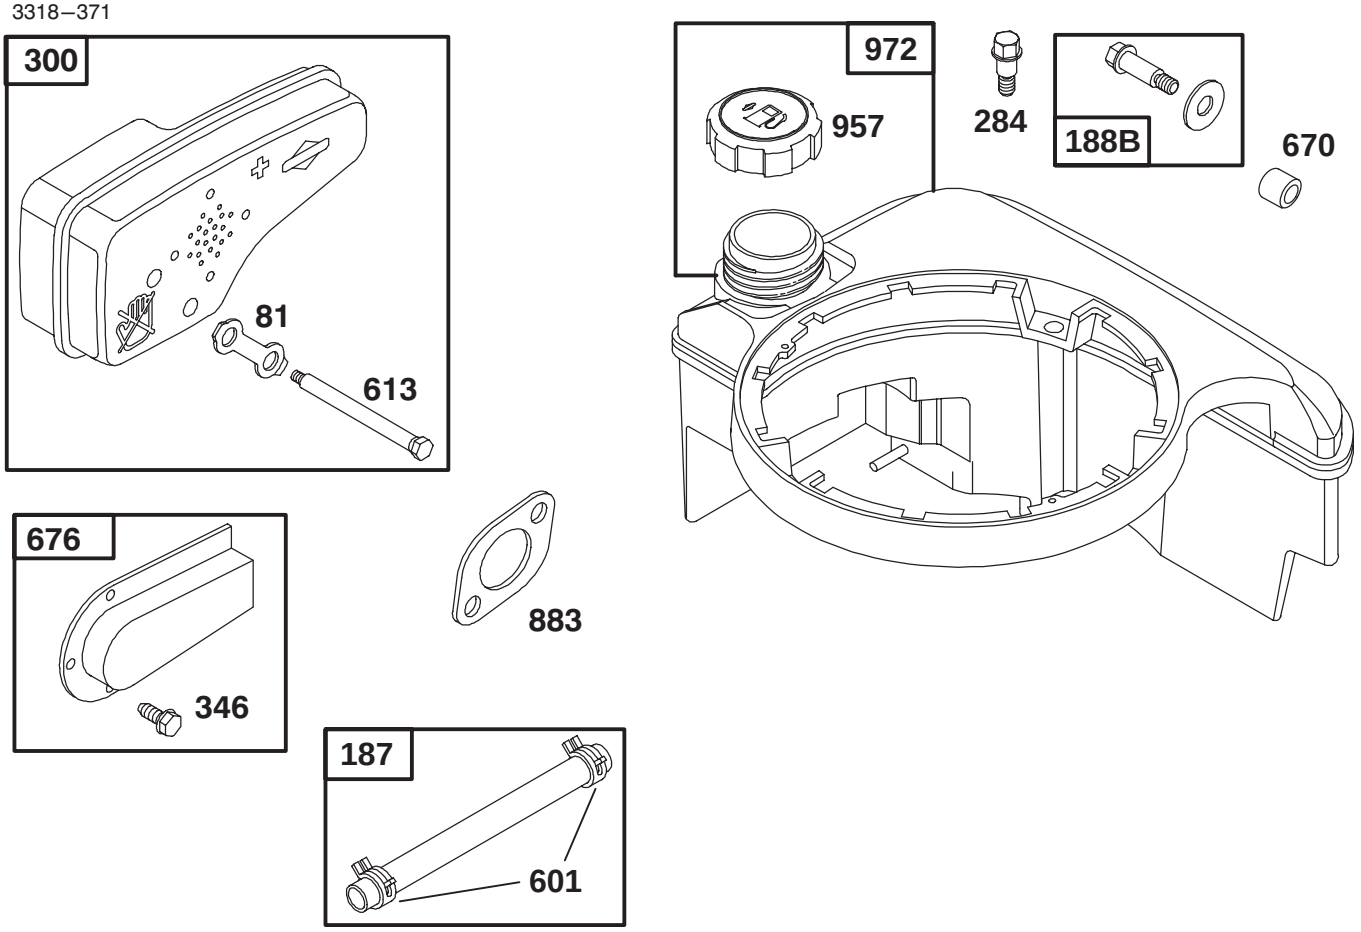


Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-0667–01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93053	Clamp – Hose	1


Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

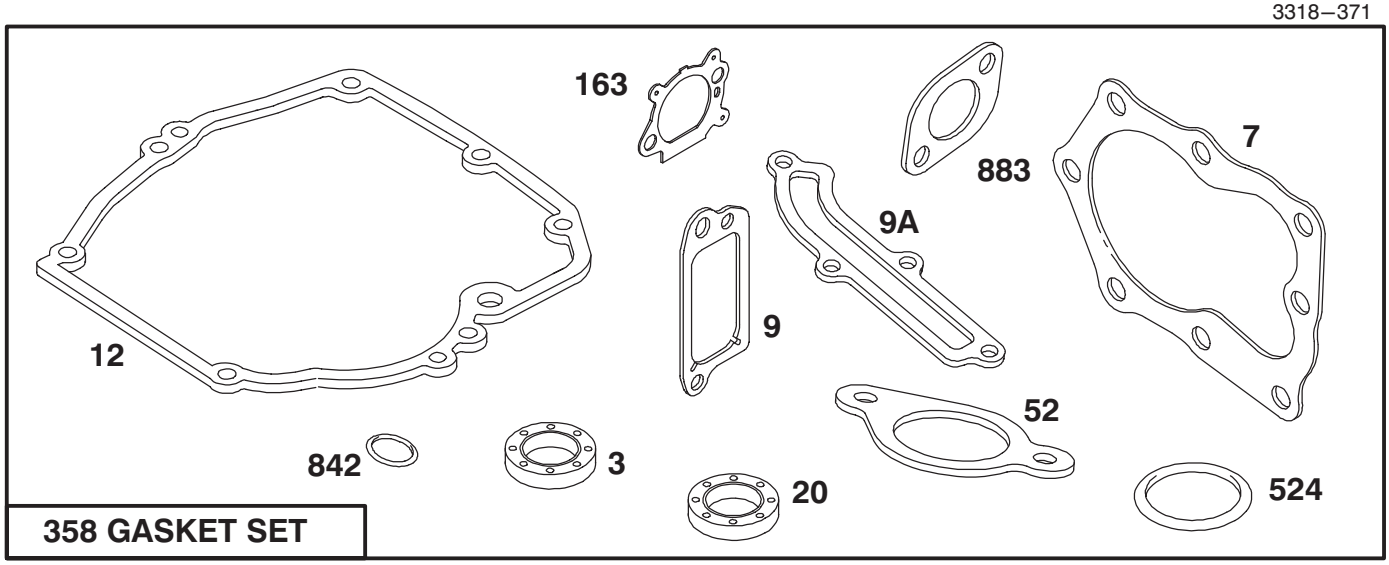

358 GASKET SET

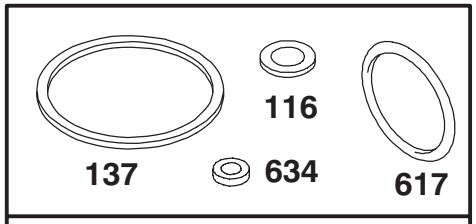

977 CARBURETOR GASKET SET

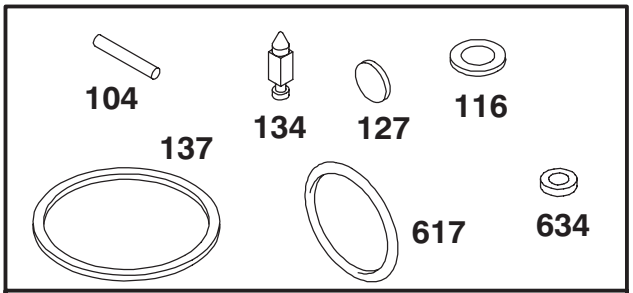

121 CARBURETOR KIT

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667–01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only)	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	490937	Gasket Set – Carburetor	1

●Included in Carburetor Kit–Part No. 493762.
◆Included in Carburetor Gasket Set–Part No. 490937.
★ Included in Gasket Set–Part No. 496316.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
11–9509	Wheel & Tire Assembly	4	10	2
16–5979	Housing – 48cm	1	2	1
19–4050	Knob	5	1	2
26–0672	Bolt – Blade	3	5	1
27–6230	Bolt – Wheel	4	11	2
27–6230	Bolt – Wheel	1	30	2
27–6250	Bushing – Wheel	4	12	4
27–6250	Bushing – Wheel	1	28	4
40–1940	Washer – Wheel	4	9	2
40–1940	Washer – Wheel	1	27	2
46–1113	Wheel & Tire Assembly	1	29	2
46–6980	Support – Cable	5	12	1
63–8590	Screw – Thread Forming	4	7	2
65–5210	Screw – Thread Forming	1	12	2
71–7740	Spring – Counterbalance	4	17	1
71–7770	Plate – Rear Securing	4	13	2
71–7800	Pivot – Rear H.P.	4	1	1
71–7820	Pivot – Front	1	25	1
71–7840	Rod – Trigger	4	3	1
71–7860	Grip – Upper	1	13	1
71–7870	Grip – Lower	1	6	1
71–7900	Cap – Hinge Bolt L.H.	1	16	1
71–7910	Cap – Hinge Bolt R.H.	1	11	1
71–7920	Cover – Belt	1	3	1
71–7930	Trigger – H.O.C.	1	7	1
71–7940	Retainer – Blade	3	1	1
71–7970	Rod – Link	4	16	1
71–7980	Indicator – H.O.C.	4	19	1
71–7990	Ramp – Discharge	1	22	1
71–8060	Spring – Trigger Return	4	5	2
71–8080	Saddle – H.O.C.	4	6	1
71–8090	Mount – Handle L.H.	5	*	1
71–8100	Mount – Handle R.H.	5	16	1
71–8450	Cover – Spring	4	18	1
71–8580	Spacer – Door	1	20	2
71–8830	Retainer – Shaft	1	24	2
71–9460	Bag – Grass	6	5	1
71–9470	Door – Bag	6	3	1
71–9480	Handle – Door	6	2	1
71–9800	Door – Discharge	1	15	1
71–9840	Spring – Door	1	18	2
71–9860	Decal – 48cm	1	1	1
71–9900	Frame – Bag	6	4	1
82–8550	Shield – Muffler	2	7	1
92–2270	Screw – Handle	5	11	1
92–2289	Decal – Toro Logo	2	12	1
92–9812	Stiffener – Blade	3	3	1
92–9813	Blade – 48cm	3	2	1
93–0243	Shroud – QT Wedge	2	4	1
93–1116	Cable – Brake	5	15	1
93–1118	Control – Throttle	5	7	1
93–3772	Guide – Rope	5	4	1
93–4105	Decal – Danger	1	4	1
93–4354	Decal – Engine	2	1	1
93–8470	Screw – Clamp	2	10	1
94–4364	Bail – Brake	5	9	1
94–4375	Handle	5	2	1
2210–249	Clamp – Cable	2	11	1
2210–316	Stop – Rope	2	3	1
321–48	Screw – Hex Hd. Cap	5	10	1
321–52	Screw – Hex Hd. Cap	5	3	1
322–29	Screw – Cap Hex. Hd.	1	17	2
3253–22	Washer – Lock	3	4	1
3256–1	Washer – Flat	5	13	1
3284–5	Pin – Roll	1	8	1
3290–378	Tie – Cable	2	5	1
3290–378	Tie – Cable	5	14	2
3296–5	Nut – Lock	4	2	2
3296–73	Nut – Lock	5	5	3
32112–11	Nut – Push	1	23	1
32112–13	Nut – Push	4	8	1
32144–4	Screw – Thread Forming	4	14	4
32144–4	Screw – Thread Forming)	1	10	8
32144–31	Screw – Thread Forming	4	4	1
32144–70	Screw – Hex. Flange Hd.	1	5	1
32144–73	Screw – Muffler	2	6	3
32144–97	Screw – Thread Forming	1	14	2
32144–102	Screw – Engine Mount	2	8	3
32144–111	Screw – Thr'd Form	6	1	5
32144–121	Screw	2	2	2
32151–93	Ring – Grip	4	15	1

*Not Illustrated