
FORM NO. 3318–441

TORO®

MODEL NO. 71185–6900001 & UP
MODEL NO. 71205–6900001 & UP

PARTS CATALOG

1338XL LAWN TRACTOR

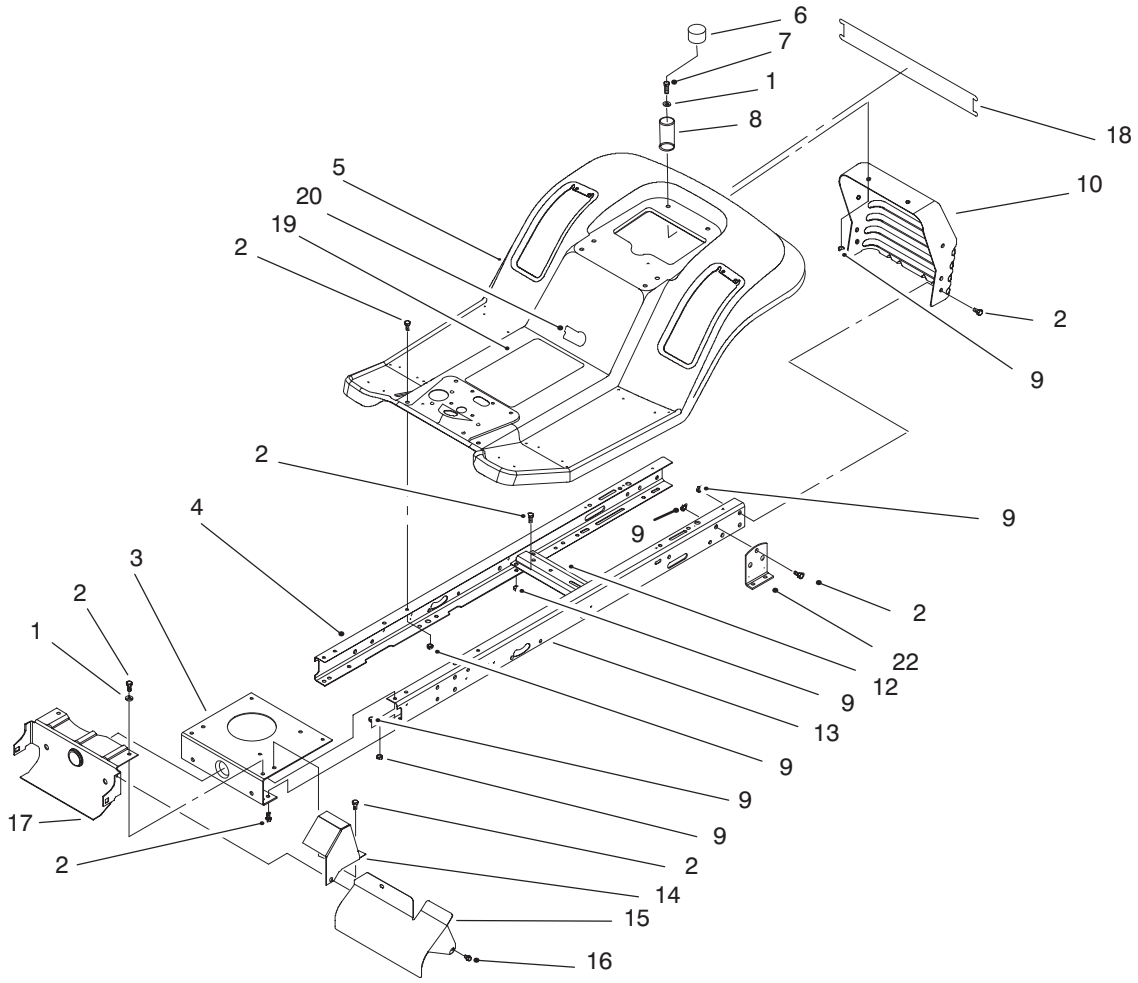

C–2462


FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256–23	Washer – Flat	4
2	322–3	Screw – Hex Hd. Cap	22
3	88–4630	Plate – Engine Mount	1
4	94–1998	Rail – R.H. Frame	1
5	88–3840–01	Body – Rear	1
6	701178	Cap – Protector	2
7	322–5	Screw – Hex Hd. Cap	2
8	88–6220	Spring – Compression	2
9	3296–29	Nut – Lock	24
10	88–3940	Panel – Rear Hitch	1
12	88–4620	Bracket – Idler Pivot	1
13	94–1999	Rail – L.H. Frame	1

Ref. No.	Part No.	Description	No. Used
14	88–4960	Shield – Exhaust Pipe	1
15	88–6290	Shield – Muffler	1
16	32104–76	Screw – Thread Tapping	1
17	88–5120	Support – Front Axle	1
18	93–4144	Decal – Rear Body	1
19	94–1237	Decal – Instruction (Model No. 71185 Only)	1
*	93–6675	Decal – Instruction (Model No. 71205 Only)	1
20	76–1340	Decal – Made in USA (Model No. 71185 Only)	1
22	88–5260	Bracket – Trans. Mount	2

*Not Illustrated

© The TORO Company –1995
All Rights Reserved

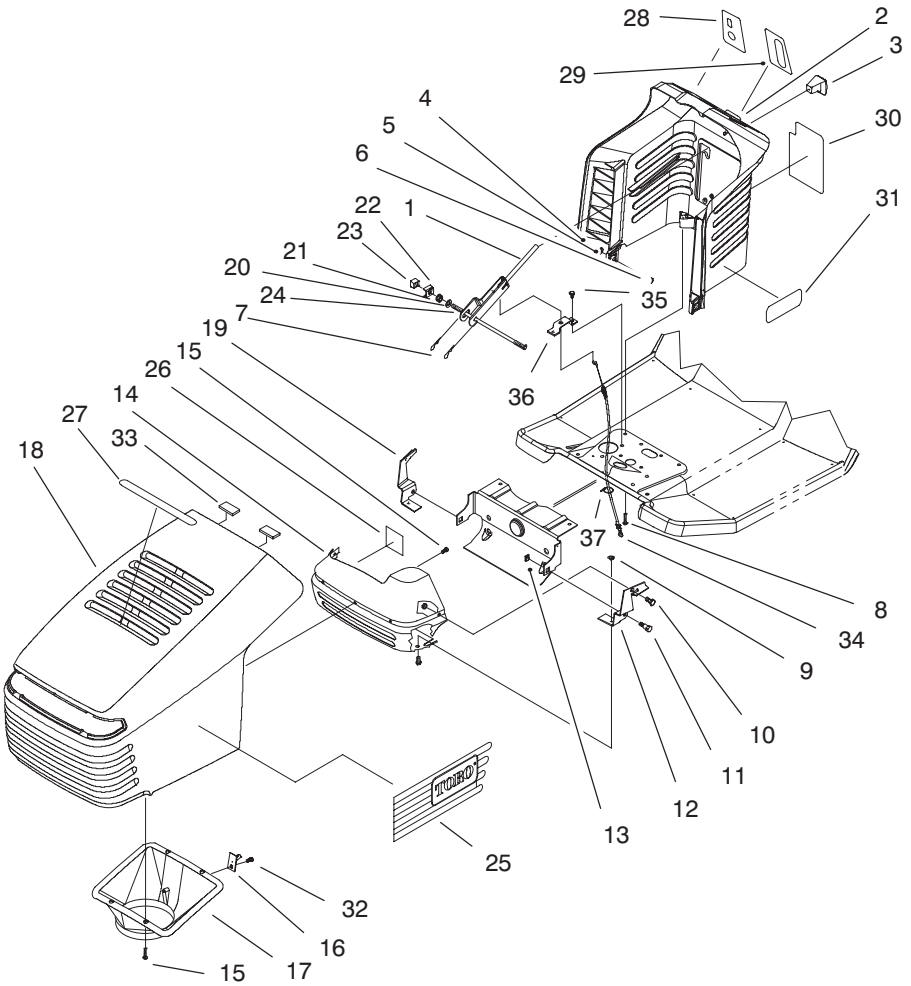


C−2463

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88−5190	Lever − Deck Engage	1
2	93−0303	Tower − Steering	1
3	94−5565	Knob − Engage Lever	1
4	322−3	Screw − Hex Hd. Cap	2
5	3256−23	Washer − Flat	2
6	3296−29	Nut − Lock	2
7	3290−307	Pin − Cotter	2
8	46−8091	Screw − Plastite	2
9	3296−42	Nut − Lock	4
10	321−2	Screw − Hex Hd. Cap	4
11	28−0540	Bolt − Shoulder	2
12	88−6050	Bracket − Hood Pivot L.H.	1
13	3290−496	Nut − Retained	2
14	88−3930	Shield − Heat	1
15	46−8090	Screw − Plastite	7
16	94−1984	Pin − Latch	1
17	88−4050	Duct − Hood Air	1
18	92−8650	Hood	1
19	88−6040	Bracket − Hood Pivot R.H.	1
20	3256−24	Washer − Flat	2
21	32128−43	Nut − Flange	2
22	88−4160	Clamp − Pivot Rod	2
23	88−4140	Nut − Wedge	2
24	88−4170	Rod − Tower Pivot	1

Ref. No.	Part No.	Description	No. Used
25	92−2468	Decal − Hood L.H.	1
*	92−2467	Decal − Hood R.H.	1
26	92−5782	Patch − Heat Tape	1
27	92−5748	Decal − Air Duct	1
28	92−2460	Decal − Ignition (Model No. 71185)	1
*	92−5731	Decal − Ignition (Model No. 71205)	1
29	92−2461	Decal − Throttle (Model No. 71185)	1
*	92−5730	Decal − Throttle (Model No. 71205	1
30	92−2462	Decal − Deck Engage (Model No. 71185)	1
*	93−6673	Decal − Deck Engage (Model No. 71205)	1
31	93−4145	Decal − Tower 1338XL	2
32	46−8091	Screw − Plastite	1
33	94−1980	Foam − Hood	2
34	94−4293	Cable − Deck Engage	1
35	32144−4	Screw − Hex Hd. Tap	2
36	93−3849	Bracket − Cable Upper	1
37	614249	Tie − Strap	1

*Not Illustrated

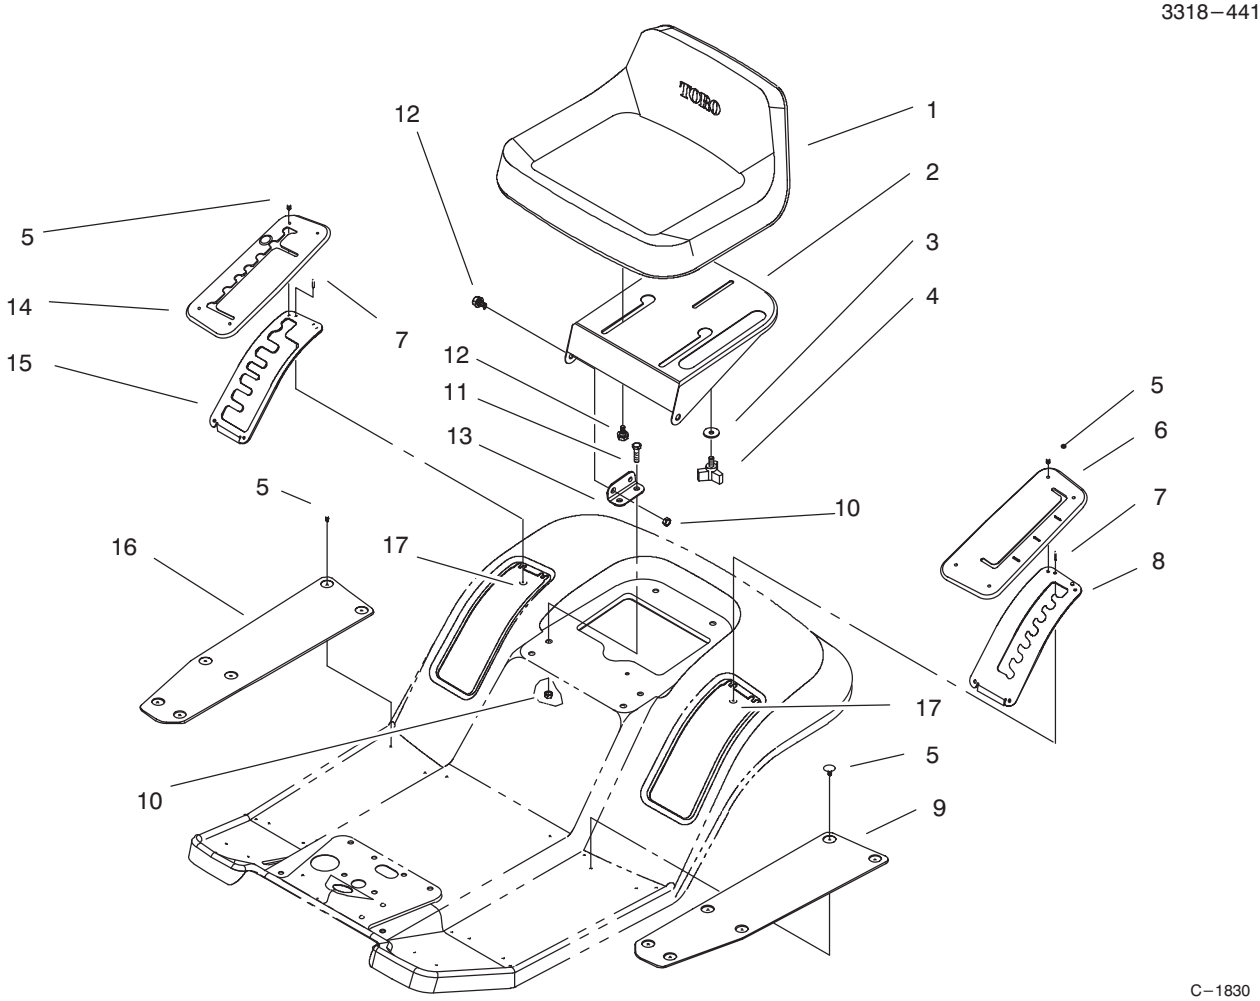


SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88−3950	Seat	1
2	88−4910	Support − Seat	1
3	5−4460	Washer − Fender	1
4	92−9674	Knob − Studded	1
5	3290−479	Fastener − Panel	20
6	88−5170	Cover − H.O.C. (Model No. 71185 Only)	1
*	93−7657	Cover − H.O.C. (Model No. 71205 Only)	1
7	3290−282	Rivet − Pop	4
8	88−5030	Gate − H.O.C.	1
9	88−5240	Mat − L.H. Foot	1
10	3296−29	Nut − Lock	6
11	322−3	Screw − Hex Hd. Cap	4
12	37−8770	Bolt − Shoulder	4
13	88−4820	Bracket − Seat Hinge	2
14	88−5160	Cover − Shift Gate (Model No. 71185 Only)	1
*	93−7656	Cover − Shift Gate (Model No. 71205 Only)	1
15	88−5020	Gate − Shift	1
16	88−5220	Mat − R.H. Foot	1
17	3269−26	Washer − Backup	4

*Not Illustrated

3318−441

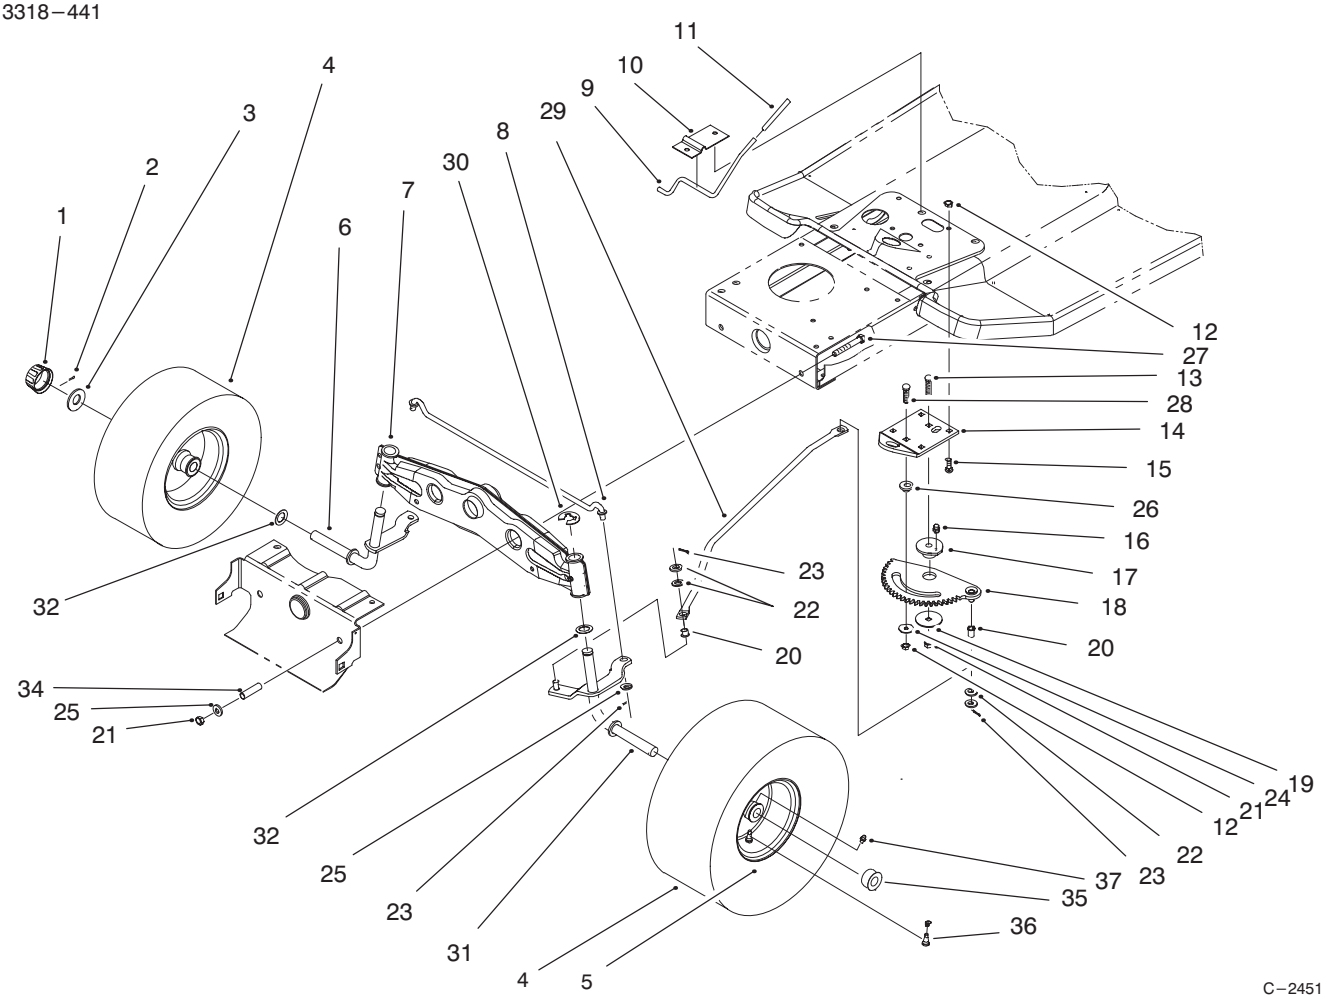


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	61−9780	Cap − Hub	2
2	3272−12	Pin − Cotter	2
3	28−2480	Washer	2
4	88−4060	Tire − 13”	2
5	88−4360	Rim − Front Wheel	2
6	92−7889	Spindle − R.H.	1
7	94−1962	Axle − Front	1
8	88−5380	Rod − Steering Tie	1
9	88−5510	Rod − Parking Brake	1
10	88−5520	Bracket − Parking Brake	1
11	88−0890	Grip − Brake Rod	1
12	3296−29	Nut − Lock	5
13	3231−4	Screw − Carriage	1
14	88−5130	Bracket − Steering Rack	1
15	3230−1	Bolt − Carriage	4
16	302−26	Fitting − Grease	1
17	88−4670	Bushing − Eccentric	1
18	88−5200	Rack − Steering	1
19	111419	Washer − Fender	1
20	52−2891	Bushing − Steering Link	2

Ref. No.	Part No.	Description	No. Used
21	3296−39	Nut − Lock	3
22	3256−25	Washer − Flat	4
23	3272−10	Pin − Cotter	4
24	5−4460	Washer − Fender	1
25	3256−24	Washer − Flat	4
26	88−5010	Spacer − Steering Rack	1
27	323−13	Screw − Hex Hd. Cap	2
28	3230−3	Screw − Carriage	1
29	88−4830	Link − Drag	1
30	32151−48	E−Ring	2
31	92−7890	Spindle − L.H.	1
32	3−6498	Washer − Thrust	6
34	88−5470	Spacer − Front Axle	2
35	88−4400	Bearing − Wheel	4
36	232−27	Valve Stem w/Cap	2
37	302−5	Fitting − Grease	2
*	232−40	Tube − Inner (Optional)	2
*	88−4280	Wheel & Tire Assembly (Incl. Ref. #4 & 5)	2

*Not Illustrated

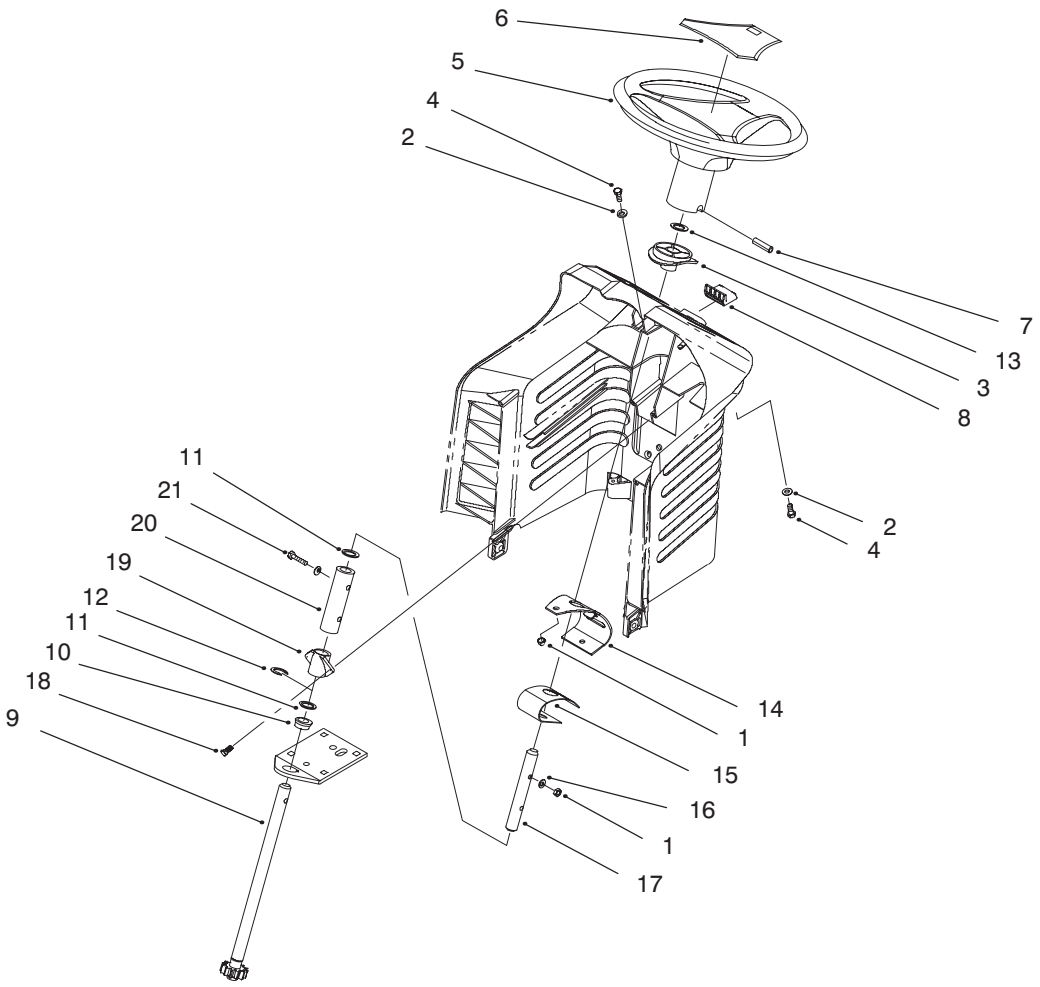


C−2464

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296−42	Nut − Lock	4
2	3256−22	Washer − Flat	2
3	88−4190	Bushing − Sliding	1
4	321−4	Screw − Hex Hd. Cap	2
5	88−3850	Wheel − Steering (Incl. Ref. #6)	1
6	88−3870	Cover − Steering Wheel	1
7	32121−111	Pin − Spirol	1
8	88−4180	Button − Release	1
9	88−6370	Shaft − Steering	1
10	88−5150	Bushing − Flange	1


Ref. No.	Part No.	Description	No. Used
11	3−6498	Washer − Thrust	2
12	32151−48	E−Ring	1
13	32151−81	Ring − Retaining	1
14	88−5180	Bracket − Backup	1
15	88−4890	Spring − Leaf	1
16	3−7501	Washer − Curved	4
17	88−6300	Shaft − Steering Upper	1
18	27−0220	Screw − Hex Washer Hd.	2
19	88−4210	Bushing − Stationary	1
20	88−6090	Coupling − Steering	1
21	321−9	Screw − Hex Hd. Cap	2

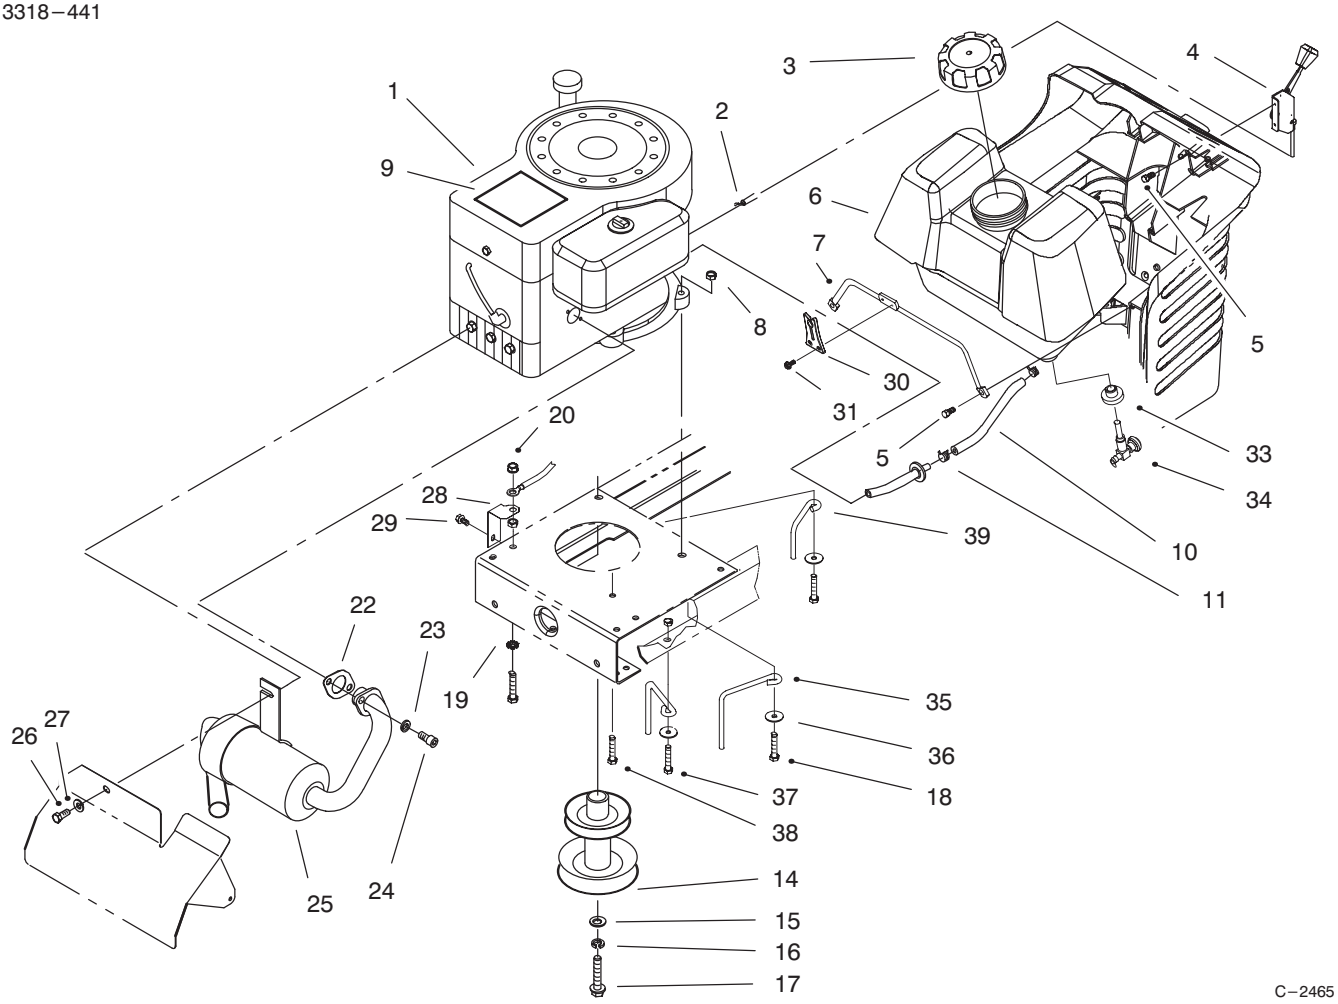

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine − 13 H.P.	1
2	88−4350	Cable − Throttle	1
3	88−3980	Cap − Gas	1
4	88−4340	Control − Throttle	1
5	27−0220	Screw − Plastite	4
6	88−3880	Tank − Gas	1
7	92−1952	Rod − Gas Tank	1
8	3296−29	Nut − Lock	4
9	92−8757	Decal − Engine 13 H.P	1
10	47−2963	Line − Fuel	1
11	2412−98	Clamp − Hose	2
14	94−1963	Pulley − Engine	1
15	3256−25	Washer − Flat	1
16	3253−22	Washer − Lock	1
17	26−0671	Bolt − Blade	1
18	322−9	Screw − Hex Hd. Cap	3
19	3255−8	Washer − Ext. Tooth Lock	1
20	32149−1	Nut − Keps	2

Ref. No.	Part No.	Description	No. Used
22	88−4410	Gasket − Muffler	1
23	3253−4	Washer − Lock	2
24	3274−10	Screw − Hex Soc. Hd.	2
25	88−6480	Muffler	1
26	321−4	Screw − Hex Hd. Cap	1
27	3253−3	Washer − Lock	1
28	93−3809	Bracket − Ground	1
29	32144−4	Screw − Hex Hd. Tap	1
30	94−1951	Latch − Hood	1
31	32144−112	Screw − Self Tap	1
33	104047	Bushing	1
34	104048	Valve Assembly	1
35	93−3854	Guide − Engine Belt	3
36	5−4460	Washer − Fender	4
37	322−5	Screw − Hex Hd. Cap	2
38	9267154	Screw − Hex Washer Hd.	1
39	93−3855	Guide − Belt R.H.	1

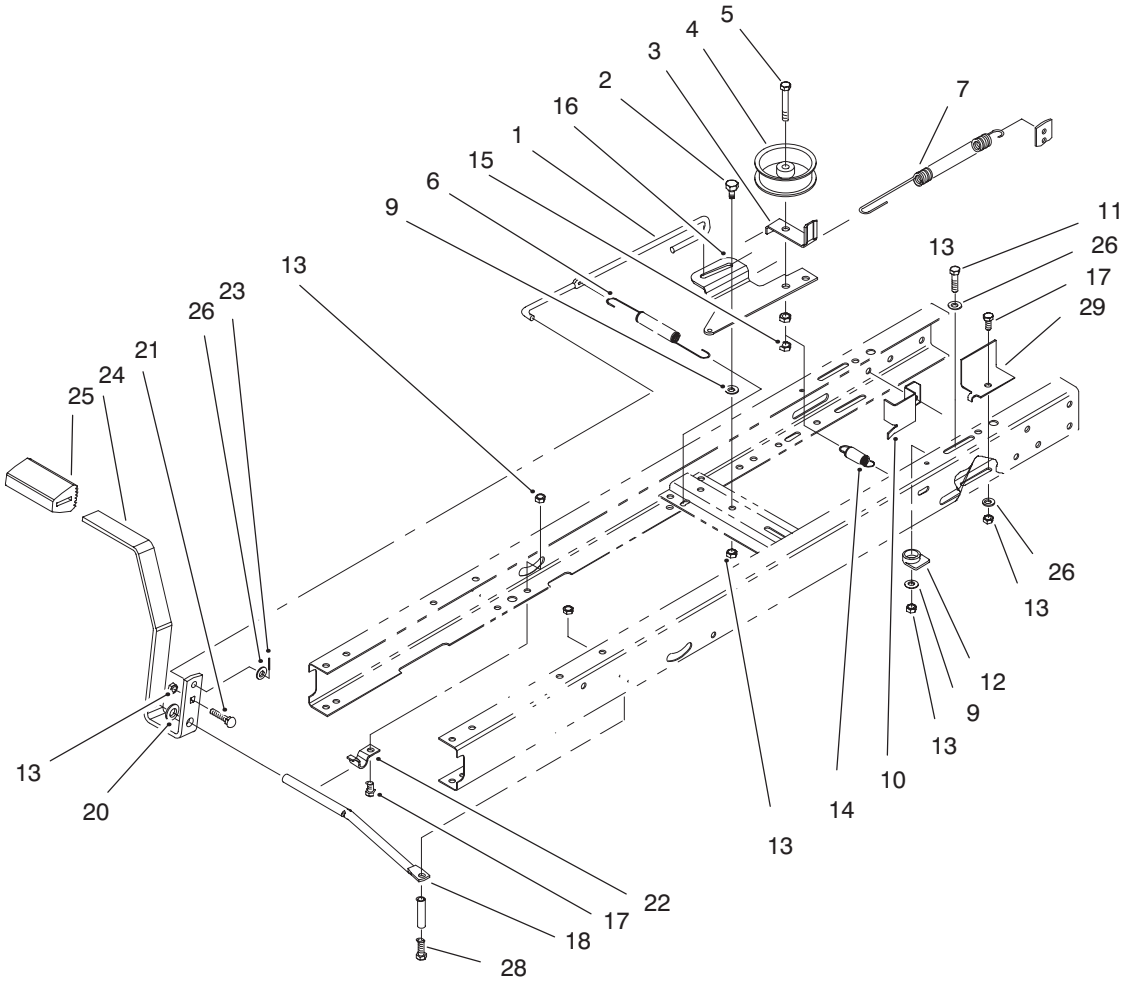


C−2466

CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88−5270	Rod − Clutch/Brake	1
2	37−8770	Bolt − Shoulder	1
3	88−5560	Guide − Idler Belt	1
4	88−5680	Pulley − Flat Idler	1
5	323−11	Screw − Hex Hd. Cap	1
6	27−8890	Spring − Pedal Return	1
7	94−4294	Spring − Brake	1
8	322−3	Screw − Hex Hd. Cap	2
9	5−4460	Washer − Flat	4
10	94−4926	Bracket − Belt Guide	1
11	322−6	Screw − Hex Hd. Cap	1
12	84−5610	Guide − Cable	1
13	3296−29	Nut − Lock	6


Ref. No.	Part No.	Description	No. Used
14	88−6330	Spring − Extension	1
15	3296−59	Nut − Lock	2
16	88−6070	Arm − Idler	1
17	322−3	Screw − Hex Hd. Cap	3
18	88−5500	Rod − Pedal Pivot	1
20	3256−26	Washer − Flat	1
21	3230−3	Bolt − Carriage	1
22	88−4810	Clamp − Shift Pivot	1
23	3272−10	Pin − Cotter	1
24	88−5000	Pedal − Clutch/Brake	1
25	65−2920	Pad − Pedal	1
26	3256−23	Washer − Flat	3
29	94−5433	Bracket − Belt Guide	1

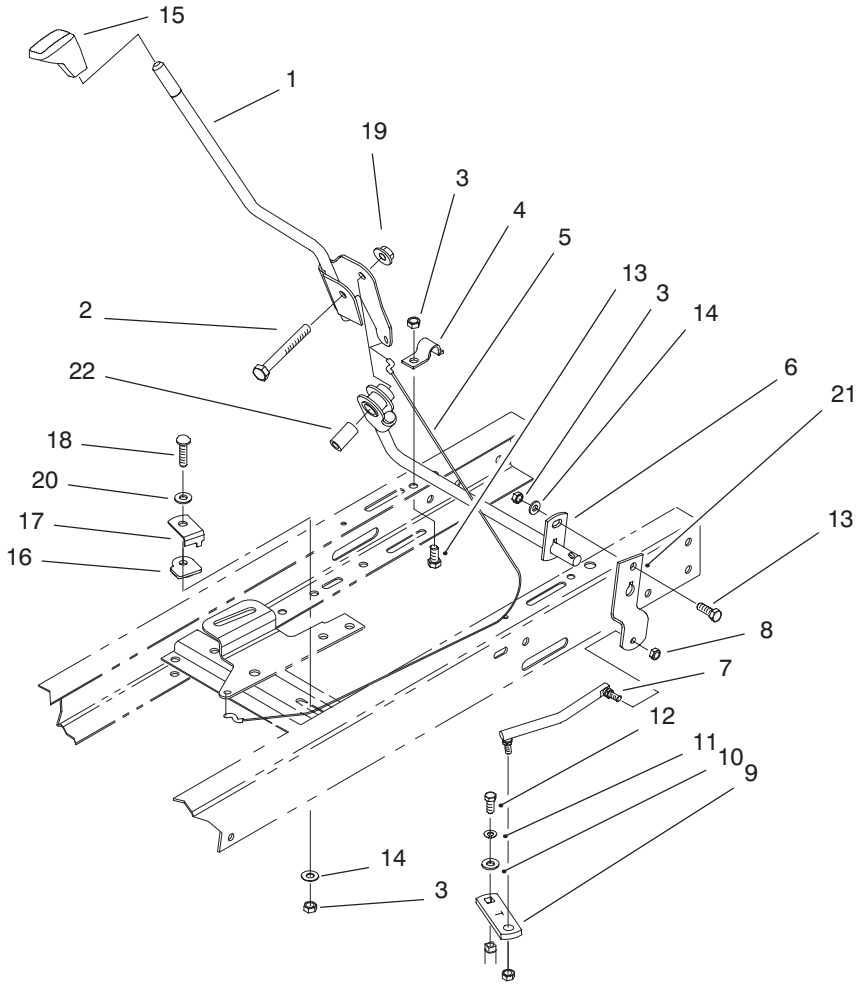

SHIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94−1991	Lever − Shift	1
2	323−10	Screw − Hex Hd. Cap	1
3	3296−29	Nut − Lock	4
4	88−4810	Clamp − Shift Pivot	2
5	55−9321	Cable − Shotgo	1
6	94−1993	Pivot − Shift	1
7	94−5431	Link − Shift	1
8	3296−3	Nut − Lock	2
9	88−5340	Lever − Trans. Shift	1
10	7−5461	Washer − Hardened	1
11	3253−3	Washer − Lock	1

Ref. No.	Part No.	Description	No. Used
12	329−23	Screw − Hex Hd. Cap	1
13	322−3	Screw − Hex Hd. Cap	3
14	3256−23	Washer − Flat	2
15	94−5565	Knob − Shift	1
16	84−5610	Guide − Cable	1
17	88−5930	Keeper − Cable	1
18	3230−3	Bolt − Carriage	1
19	3296−39	Nut − Lock	1
20	3256−25	Washer − Flat	1
21	94−1968	Lever − Shift Pivot	1
22	94−1997	Bushing − Shift Lever	1

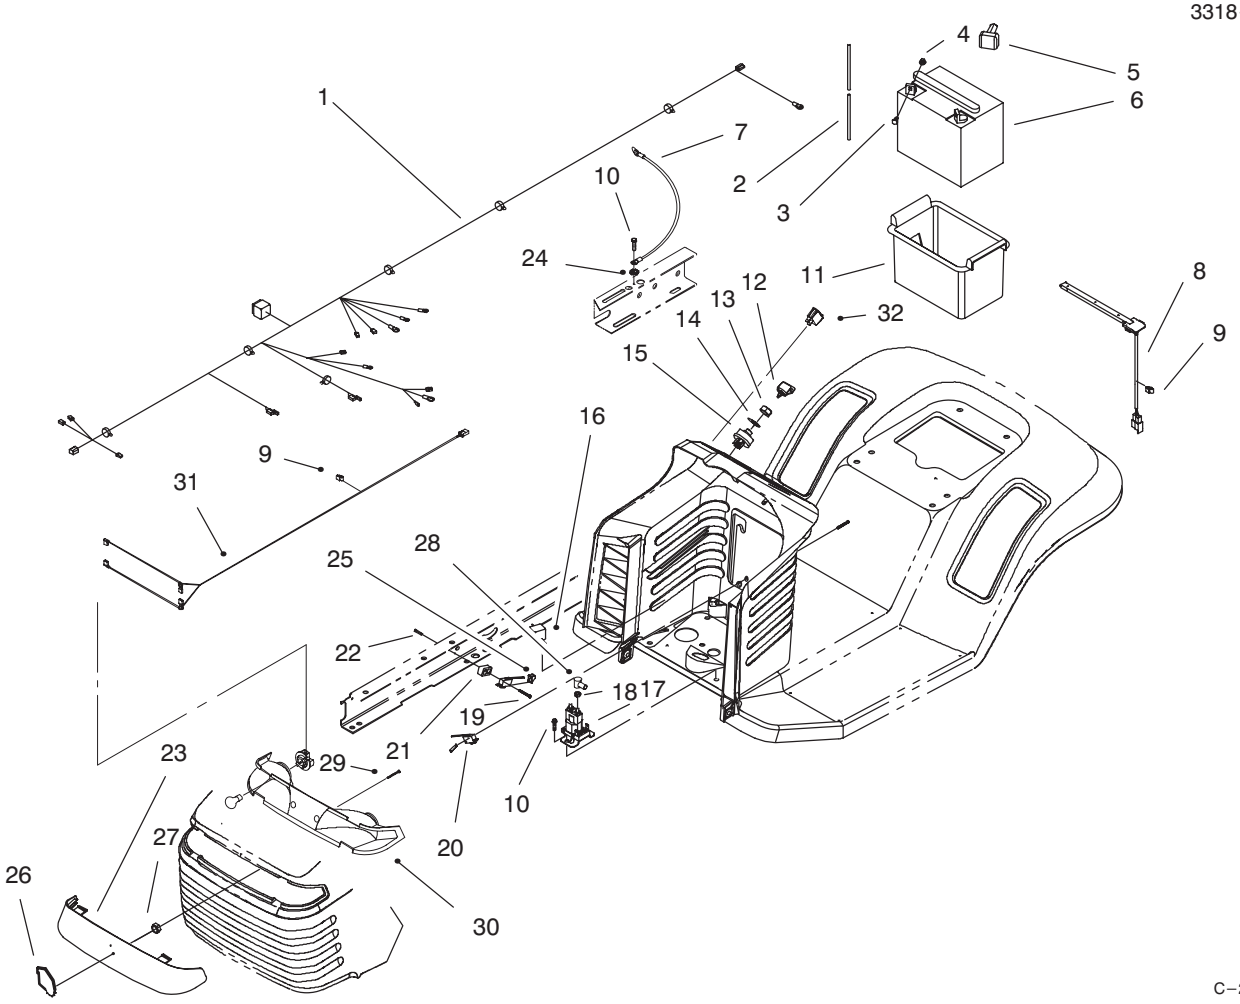


C−2467

ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93−3810	Harness − Wire	1
2	56−2540	Vent − Tube	1
3	321−4	Screw − Hex Hd. Cap	2
4	32103−22	Nut − Wing	2
5	28−8080	Boot − Battery Terminal	1
6	80−2600	Battery − 7 Plate	1
7	44−8110	Cable − Battery Negative	1
8	38−1420	Switch − Seat	1
9	702366	Clip − Wire Retainer	2
10	32144−4	Screw − Hex Hd. Thr'd Form.	3
11	88−4040	Box − Battery	1
12	63−8360	Key − Ignition	1
13	218−461	Nut − Hex	1
14	3254−5	Washer − Lock	1
15	88−9830	Switch − Ignition	1
16	116397	Relay	1

Ref. No.	Part No.	Description	No. Used
17	92−9845	Solenoid	1
18	32149−2	Nut − Keps	2
19	93−0539	Screw − Phillips Hd.	4
20	88−9932	Switch − Micro	2
21	88−4880	Spacer − Microswitch	1
22	3290−354	Speednut	2
23	88−3960	Lens − Headlights	1
24	3255−7	Washer − Ext. Tooth Lock	1
25	93−3240	Seal − Plunger	1
26	80−2240	Plate − Grille Panel	1
27	3290−299	Nut − Tinnerman	1
28	94−5362	Boot − Terminal Insulator	1
29	32144−32	Screw − Plastic	2
30	88−3970	Reflector − Lamp	1
31	88−4320	Harness − Wire	1
32	92−8875	Switch − Rocker Lights	1

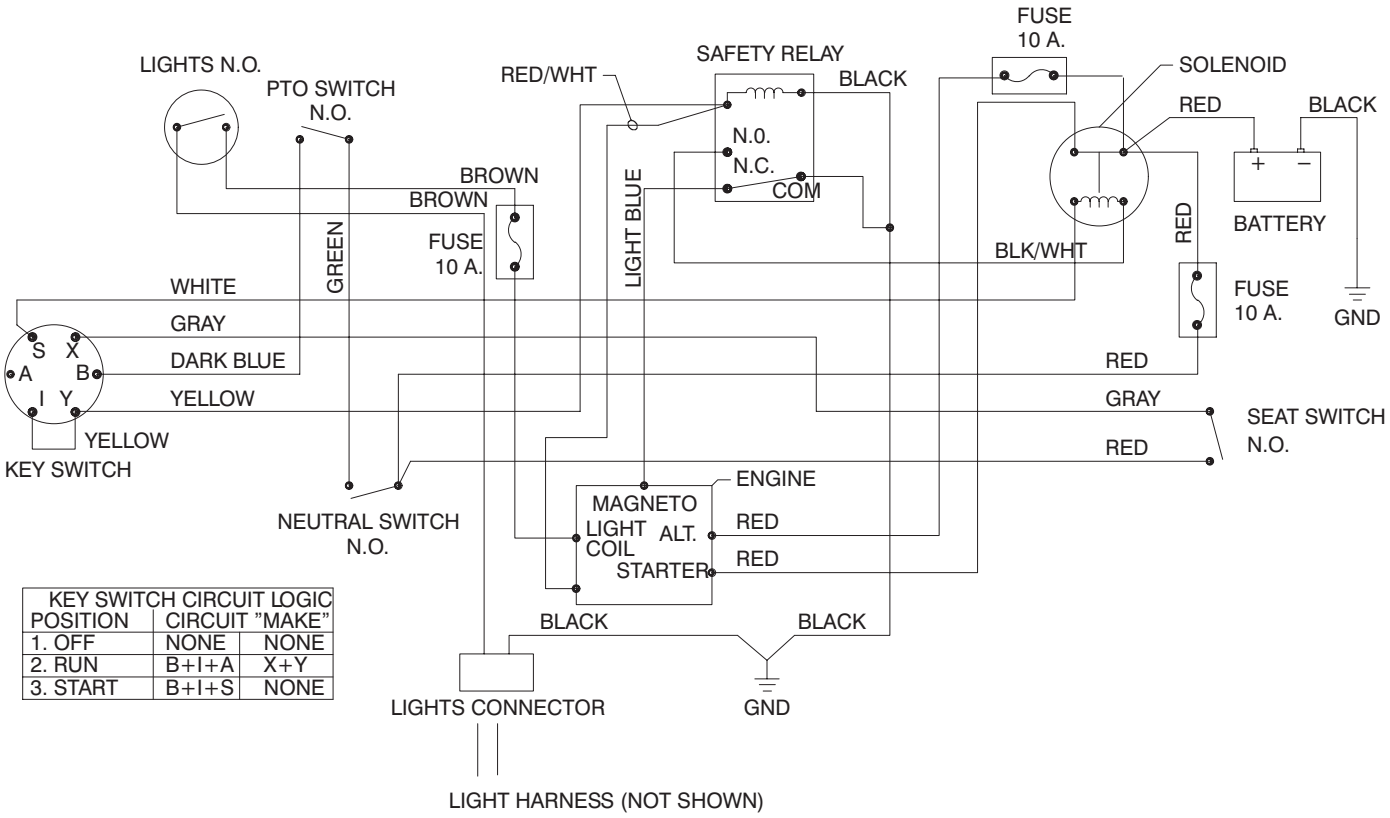


KEY SWITCH CIRCUIT LOGIC		
POSITION	CIRCUIT "MAKE"	
1. OFF	NONE	NONE
2. RUN	B+I+A	X+Y
3. START	B+I+S	NONE

C−2186A

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used

Ref. No.	Part No.	Description	No. Used

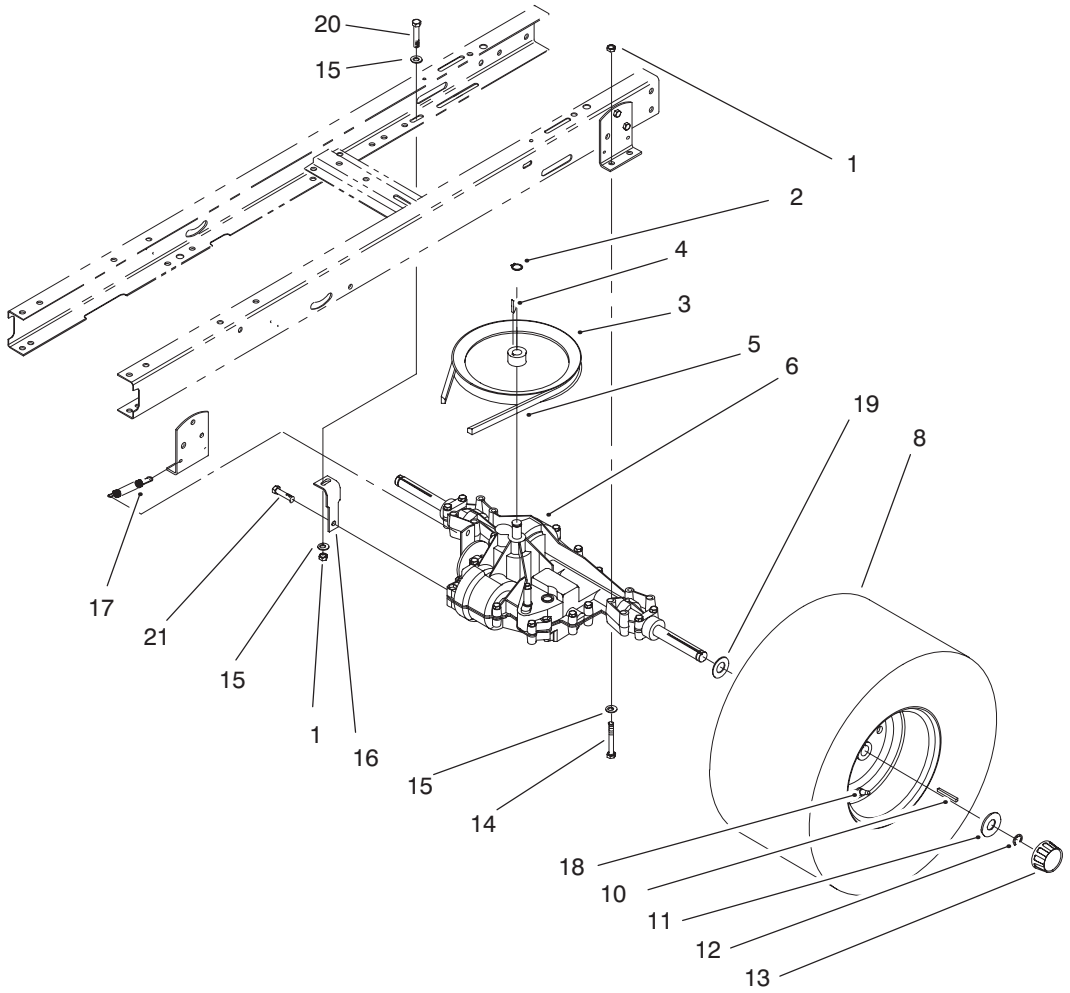


C−2456

TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296−29	Nut − Lock	6
2	32120−64	Ring − Snap	1
3	88−4840	Pulley − Transmission	1
4	3257−23	Key − Woodruff	1
5	88−6270	V−Belt − Traction	1
6	94−6022	Transaxle	1
7	302−11	Fitting − Grease	2
8	88−4080	Tire	2
9	88−4380	Rim	2
10	7−0036	Key − Square	2
11	28−2480	Washer	2
12	32151−48	E−Ring	2

Ref. No.	Part No.	Description	No. Used
13	61−9780	Cap − Hub	2
14	322−12	Screw − Hex Hd. Cap	4
15	3256−23	Washer − Flat	8
16	94−1969	Strap − Torque	2
17	26−6700	Spring − Brake Return	1
18	232−27	Valve Stem w/Cap	2
19	3−6498	Washer − Thrust	2
20	322−3	Screw − Hex Hd. Cap	2
21	32144−14	Screw − Hex Hd.	2
*	231−91	Tube − Inner (Optional)	2
*	88−4300	Wheel & Tire Assembly (Incl. Ref. #8 & 9)	2


*Not Illustrated

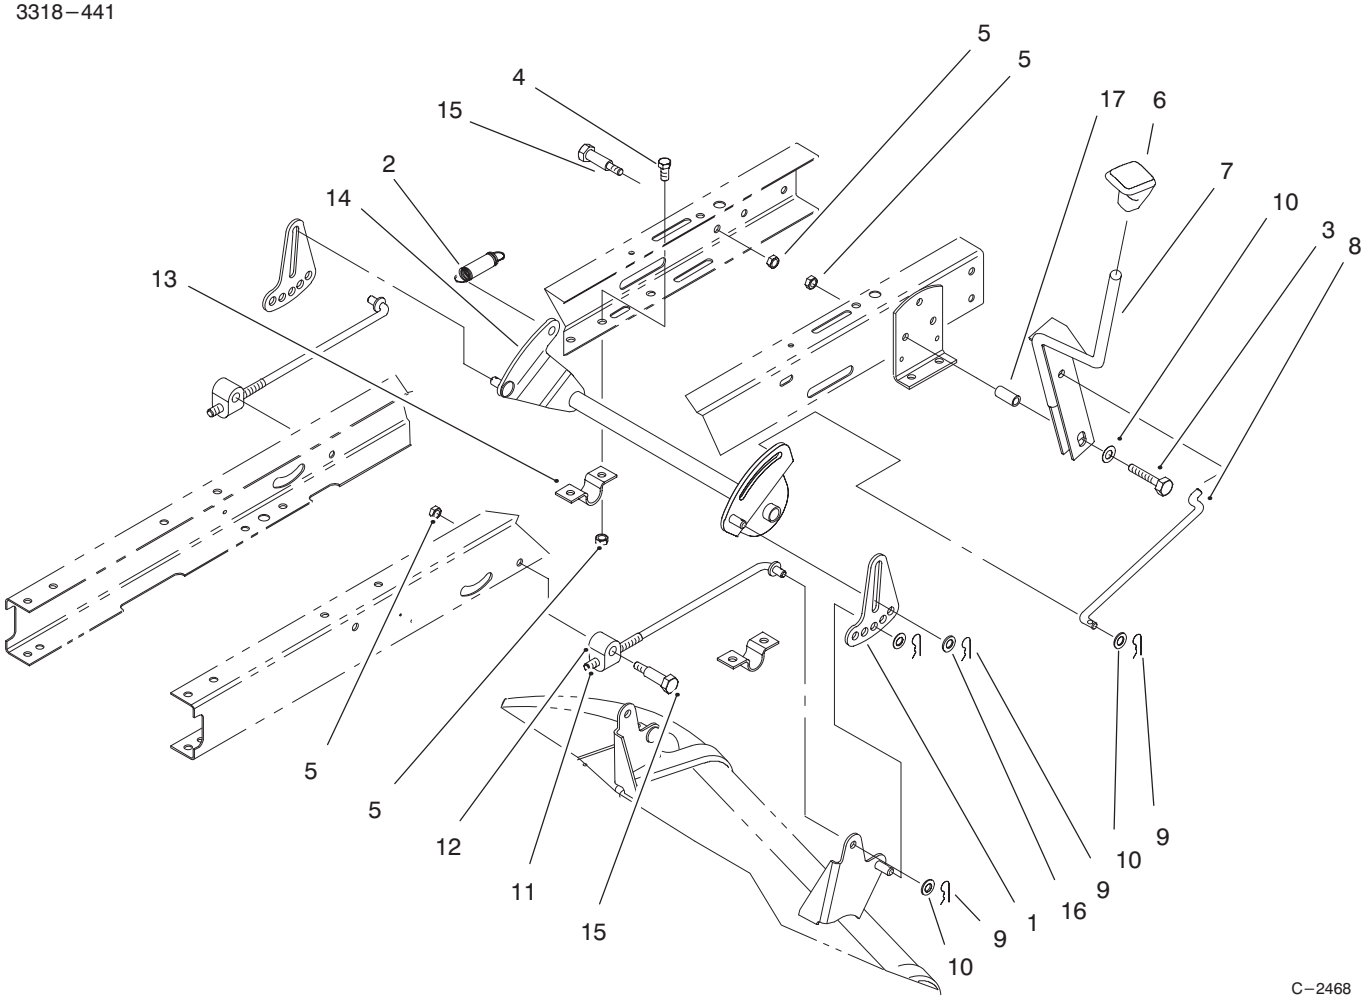

HEIGHT OF CUT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88−5570	Link − Adjusting H.O.C.	2
2	88−6460	Spring − Extension	1
3	322−9	Bolt − Shoulder	1
4	322−3	Screw − Hex Hd. Cap	4
5	3296−29	Nut − Lock	8
6	94−5565	Knob − Shift	1
7	93−3822	Lever − H.O.C.	1
8	88−5900	Link − H.O.C.	1
9	3290−307	Pin − Hair Cotter	7


Ref. No.	Part No.	Description	No. Used
10	3256−24	Washer − Flat	4
11	88−5450	Rod − Hanger Rear	2
12	88−4230	Trunnion − H.O.C. Rear	2
13	88−4730	Clamp − H.O.C. Pivot	2
14	88−5110	Pivot − H.O.C.	1
15	7−0030	Bolt − Shoulder	3
16	80−6990	Washer − Hardened	4
17	65−7210	Spacer	1

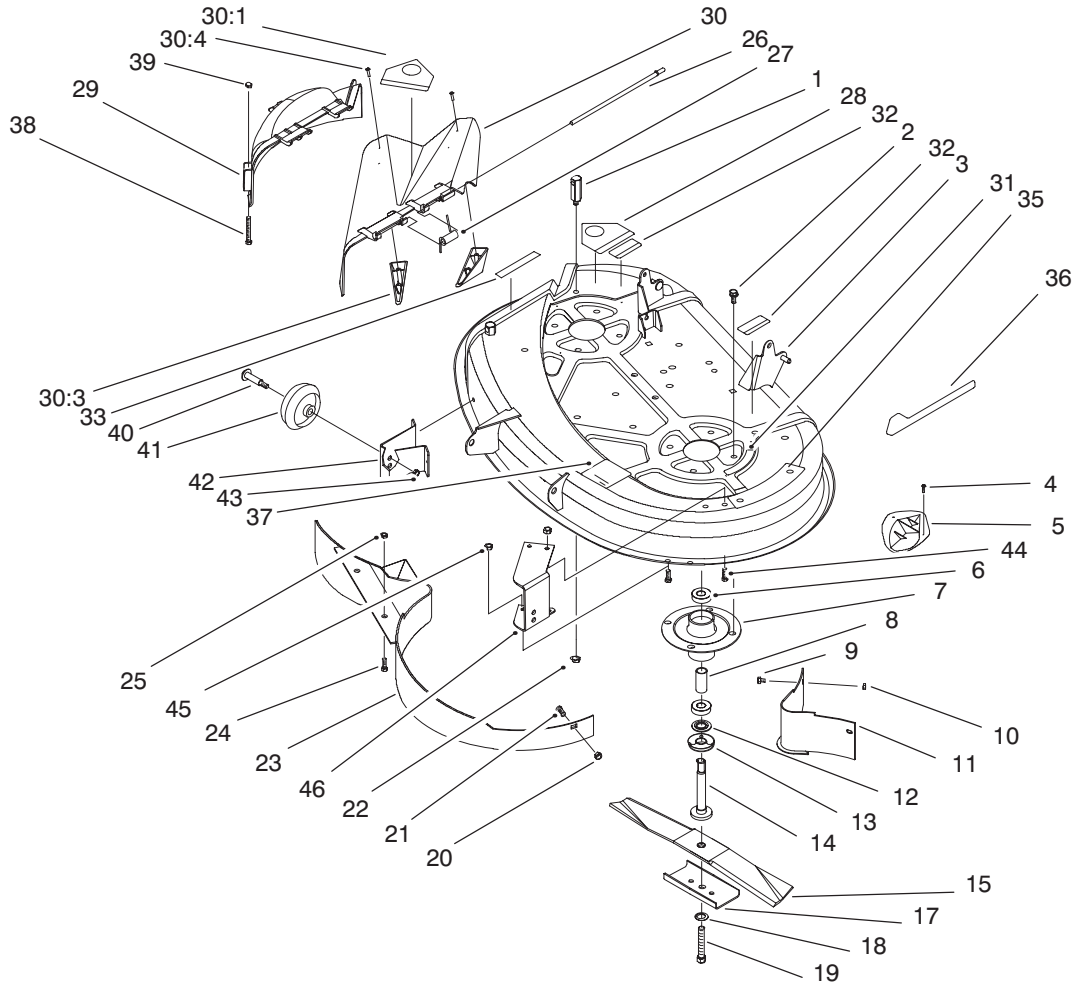

DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	57−4360	Post − Pivot Rear	1
2	32144−41	Screw − Hex Washer Hd. Thread Forming	2
3	94−1949	Deck − 38”	1
4	32144−111	Screw − Phillips Pan Hd. (Model No. 71185 Only)	8
5	76−2160	Plate − Kicker (Model No. 71185 Only)	4
6	38−7820	Bearing − Ball	4
7	88−4510	Spindle − Casting	2
8	62−3661	Spacer − Bearing	2
9	321−4	Screw − Hex Hd. Cap (Model No. 71185 Only)	2
10	3296−42	Nut − Lock (Model No. 71185 Only)	2
11	79−1640	Baffle − Rear (Model No. 71185 Only)	1
12	80−4380	Spacer − Hardened	2
13	80−4360	Shield − Bearing	2
14	80−4341	Shaft − Spindle	2
15	79−3061	Blade − 32” Recycler (Model No. 71185 Only)	2
15	57−4700	Blade − 32” (Model No. 71205 Only)	2
17	80−0510	Stiffener − Blade (Model No. 71185 Only)	2
18	3290−465	Washer − Belleville	2
19	26−0671	Bolt − Blade	2
20	3296−29	Nut − Lock (Model No. 71185 Only)	1
21	3230−1	Screw − Carriage (Model No. 71185 Only)	1
22	3296−39	Nut − Lock	1
23	79−1600	Baffle − Recycler 38” (Model No. 71185 Only)	1
24	323−5	Screw − Hex Hd. Cap (Model No. 71185 Only)	2
25	3296−39	Nut − Lock (Model No. 71185 Only)	2
26	57−4380	Rod − Hinge Deflector	1
27	57−6950	Spring − Torsion Deflector	1
28	93−1122	Decal − Danger (Model No. 71185 Only)	1
28	93−7010	Decal − Danger (Model No. 71205 Only)	2
29	88−4430	Recycler Cover Assembly (Model No. 71185 Only)	1
30	93−0317	Deflector Assembly (Incl. Ref. #30:1) (Model No. 71185 Only)	1
30	93−7695	Deflector Assembly Incl. Ref. #30:1, 30:3, & 30:4) (Model No. 71205 Only)	1


3318−441

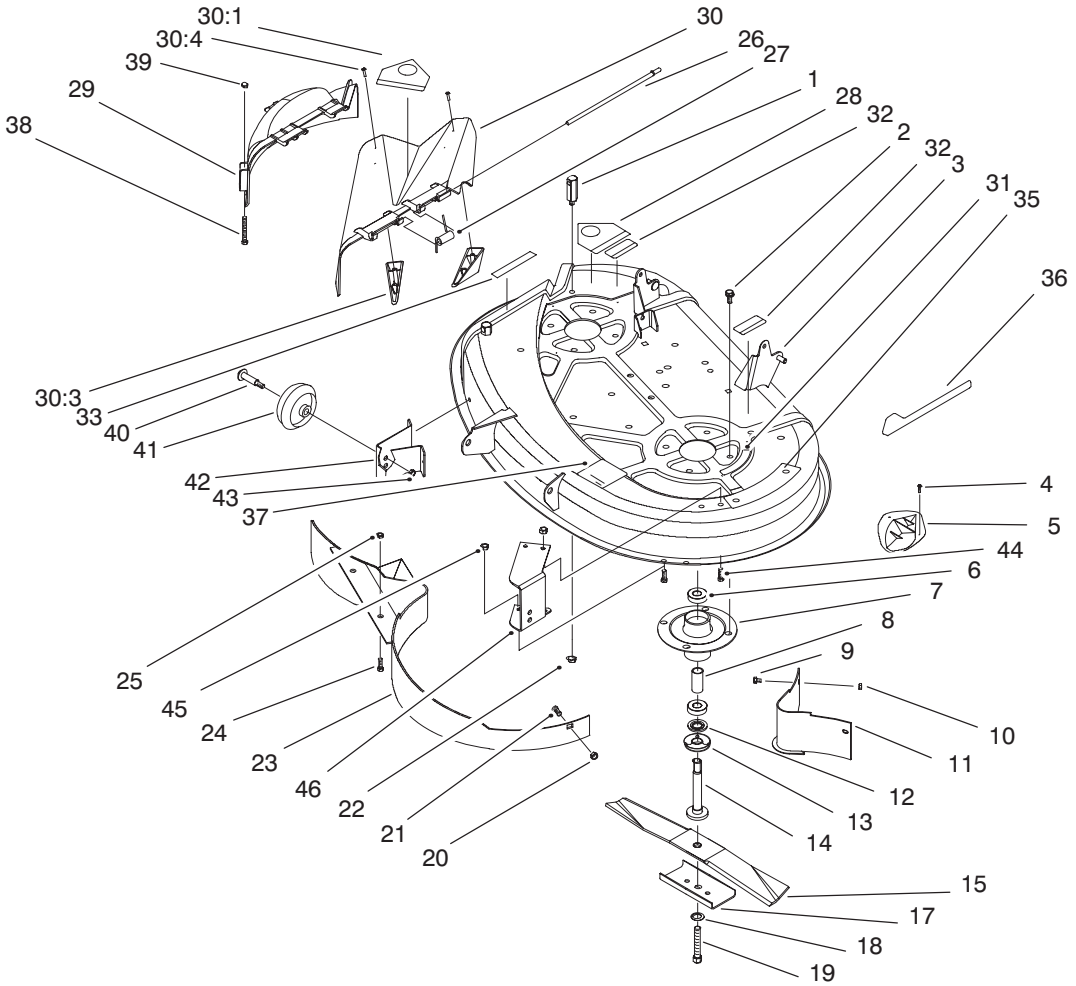

DECK ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
30:1	93−1122	Decal − Danger (Model No. 71185 Only)	1
30:1	93−7010	Decal − Danger (Model No. 71205 Only)	1
30:3	93−7679	Kicker − Deflector (Model No. 71205 Only)	2
30:4	93−0231	Screw − Plastite (Model No. 71205 Only)	4
31	68−3660	Decal − Shield Danger (Model No. 71185 Only)	1
31	93−6677	Decal − Shield Danger (Model No. 71205 Only)	1
32	55−4300	Decal − Warning (Model No. 71185 Only)	2
32	93−6674	Decal − Warning (Model No. 71205 Only)	2
33	68−3650	Decal − Danger Deflector (Model No. 71185 Only)	1
33	93−7009	Decal − Deflector Danger (Model No. 71205 Only)	1
35	79−3140	Decal − Danger (Model No. 71185 Only)	1

Ref. No.	Part No.	Description	No. Used
36	92−9520	Decal − Deck 38” Rec. (Model No. 71185 Only)	1
37	93−6679	Decal − Belt Routing	1
38	321−15	Screw − Hex Hd. Cap (Model No. 71185 Only)	2
39	32111−7	Nut − Lock (Model No. 71185 Only)	2
40	56−6591	Bolt − Wheel (Model No. 71205 Only)	2
41	701756	Wheel − Deck (Model No. 71205 Only)	2
42	88−5740	Bracket − Deck Wheel R.H. (Model No. 71205 Only)	1
43	3296−39	Nut − Lock (Model No. 71205 Only)	2
44	322−3	Screw − Hex Hd. Cap (Model No. 71205 Only)	6
45	3296−29	Nut − Lock (Model No. 71205 Only)	6
46	93−3896	Bracket − Deck Wheel L.H.	1

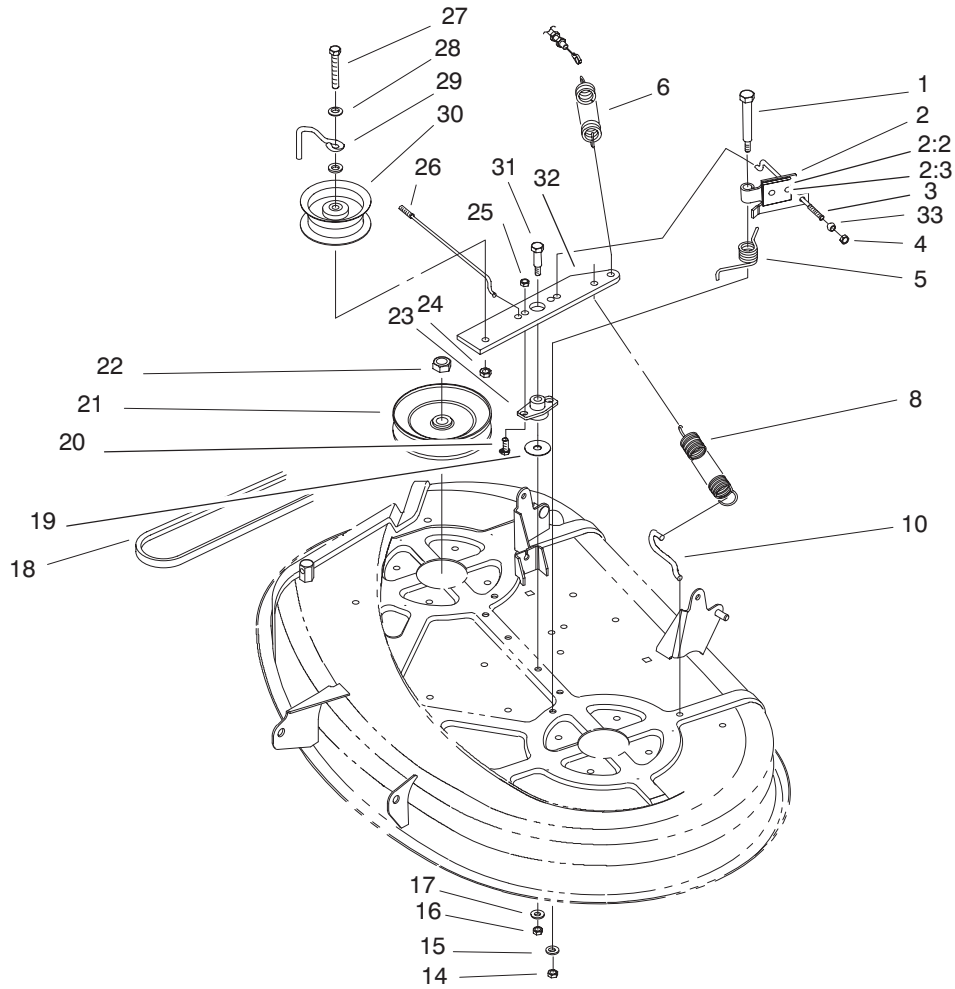


C−2470

DECK PULLEY & BELT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88−4590	Bolt − Shoulder	2
2	88−6100	Brake Assembly (Incl. Ref. #2:2, & 2:3)	1
2:2	56−9830	Pad − Brake	1
2:3	3290−282	Rivet − Pop	2
3	88−5550	Rod − L.H. Deck Brake	1
4	3296−42	Nut − Lock	2
5	88−5910	Spring − Torsion	2
6	88−6130	Sspring − Deck Engage	1
8	92−8934	Spring − Extension	1
10	88−5970	Hook − Return Spring	1
14	3296−29	Nut − Lock	2
15	3256−23	Washer − Flat	2
16	3296−29	Nut − Lock	1
17	3256−23	Washer − Flat	1
18	88−6250	V−Belt − Deck	1

Ref. No.	Part No.	Description	No. Used
19	3256−68	Washer − Flat	1
20	322−5	Screw − Hex Hd. Cap	2
21	88−5330	Pulley − Deck 38”	2
22	3219−6	Nut − Hex	2
23	88−4980	Bushing − Idler Arm	1
24	3296−39	Nut − Lock	1
25	3296−29	Nut − Lock	2
26	88−5540	Rod − R.H. Deck Brake	1
27	323−12	Screw − Hex Hd. Cap	1
28	3256−24	Washer − Flat	2
29	88−5070	Belt Guide − Idler	1
30	88−5630	Pulley − Idler Flat	1
31	7−0030	Bolt − Shoulder	1
32	88−4870	Arm − Idler Deck	1
33	67−0710	Ball − Swivel	2

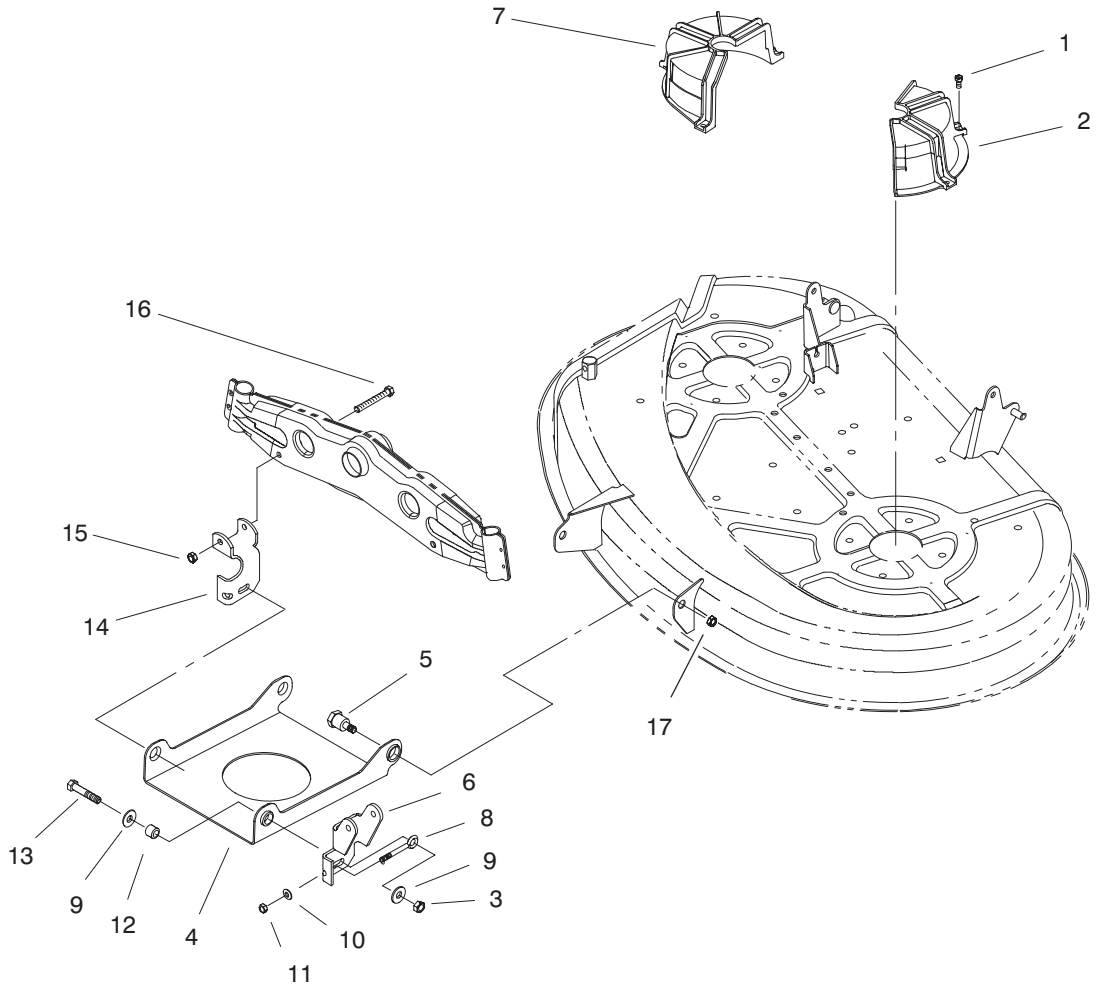


C−2471

DECK SUSPENSION & BELT GUIDE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32105−76	Screw − Self Tapping	5
2	88−4030	Guide − Deck Belt L.H.	1
3	3296−39	Nut − Lock	2
4	93−3881	Pan − Front Deck Susp.	1
5	94−5823	Bolt − Shoulder	2
6	94−1971	Bracket − Deck Susp. L.H.	1
7	88−4020	Guide − Deck Belt R.H.	1
8	61−9980	Screw − Adjusting	2
9	80−6990	Washer − Hardened	4

Ref. No.	Part No.	Description	No. Used
10	3256−22	Washer − Flat	2
11	3296−42	Nut − Lock	2
12	93−9847	Spacer	1
13	323−9	Screw − Hex Hd. Cap	2
14	94−1970	Bracket − Deck Susp. R.H.	1
15	3296−29	Nut − Lock	2
16	322−12	Screw − Hex Hd. Cap	2
17	3296−23	Nut − Lock	2

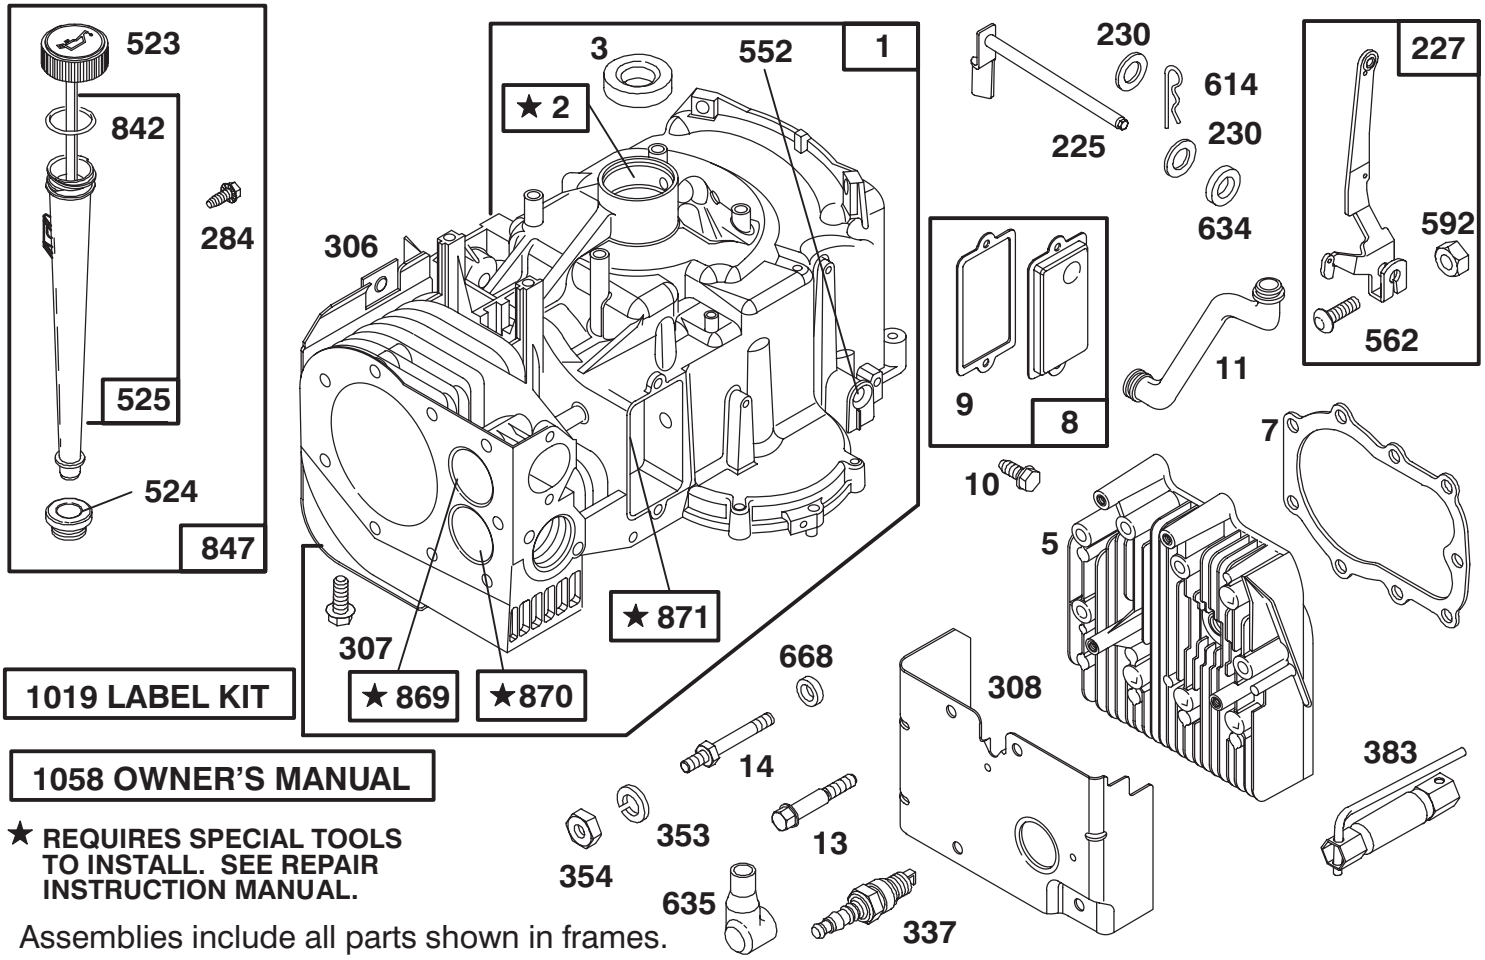

1019 LABEL KIT

1058 OWNER'S MANUAL

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bearing–Cylinder	1
★3	391086	Seal–Oil	1
5	494240	Head–Cylinder	1
★7	271866	Gasket–Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket–Valve Cover	1
10	94621	Screw–Sem	1
11	281246	Tube–Breather	1
13	94622	Screw–Cylinder Head	1
14	94776	Stud–Cyl. Head	1
225	495157	Crank–Governor	1
227	493935	Lever Assy.–Governor	1
230	94742	Washer–Gov. Crank	1
284	94073	Screw–Hex Head	1
306	224545	Shield–Cylinder	1
307	94623	Screw–Cyl. Shield Mtg.	1
308	491490	Cover–Cylinder Head	1
337	802592	Plug–Spark	1
353	94315	Washer–Lock	1
354	94314	Nut–Hex.	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench–Spark Plug	1
523	495230	Cap–Oil Fill	1
★524	281370	Seal–Fill Tube	1
525	496113	Tube–Oil Fill	1
552	231597	Bushing–Gov. Crank	1
562	92613	Bolt–Carriage	1
592	231082	Nut–Hex.	1
614	93306	Pin–Cotter	1
★634	491323	Seal–Governor	1
635	66538	Elbow–Spark Plug	1
668	231109	Spacer	1
★842	270920	Seal–Oil Fill Cap	1
847	496415	Fill Group–Oil	1
869	261463	Seat–Intake Valve	1
870	213316	Seat–Exhaust Valve	1
871	261961	Guide–Exhaust Valve	1
		Note: 231218 Guide–Intake Valve	1
1019	491255	Label Kit	1
1058	272697	Owner's Manual	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

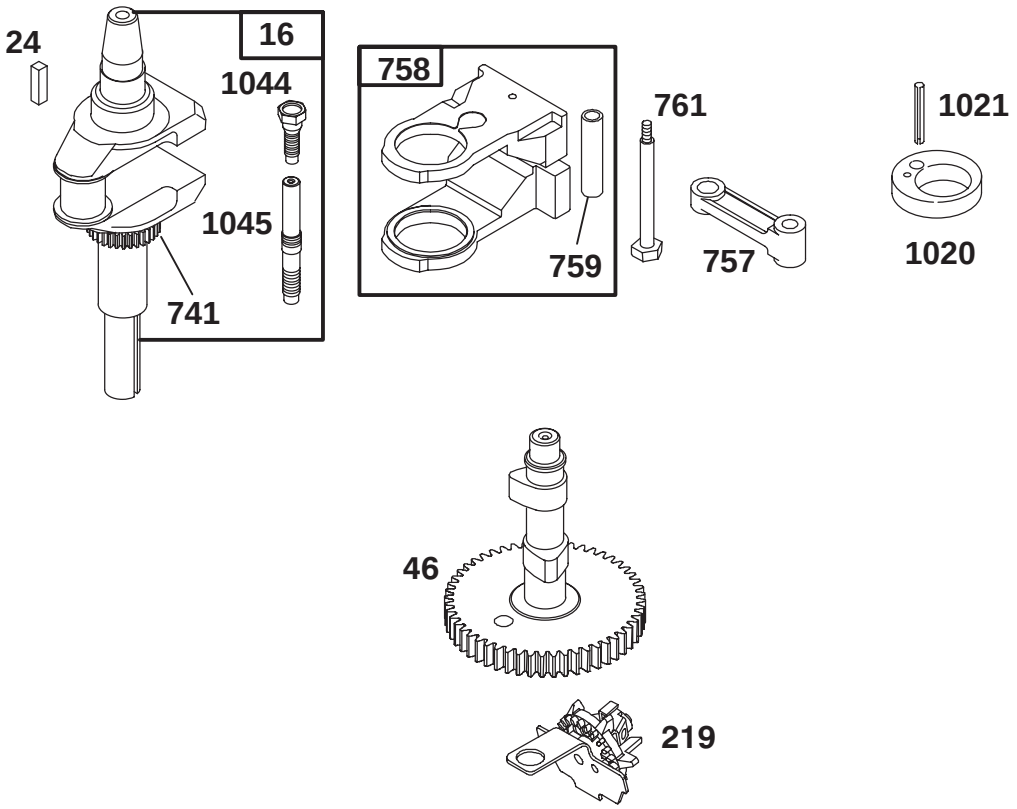


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
16	495162	Crankshaft	1
	94196	Key–Timing Gear	1
24	222698	Key–Flywheel	1
46	213720	Gear–Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear–Timing	1
757	213998	Link–Counterweight	1

Ref. No.	Part No.	Description	No. Used
758	399891	Counterweight Assy.	1
759	298909	Pin–Counterweight	1
761	94593	Screw–Counterweight	1
1020	262243	Eccentric	1
1021	94160	Pin–Eccentric	1
1044	94673	Screw–Shoulder	1
1045	231828	Extension–Crankshaft	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

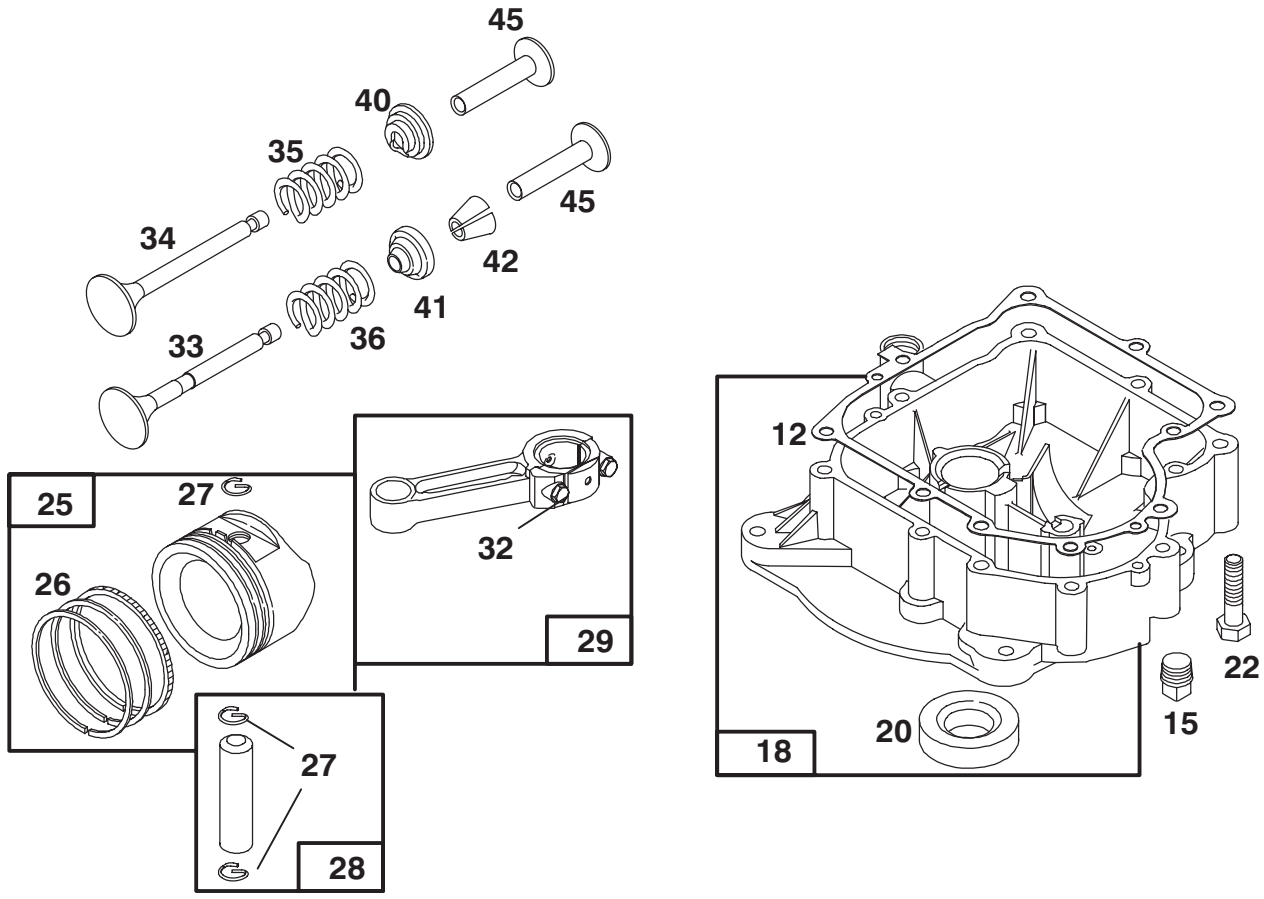


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket–Crankcase (.015" Thick)	1
★	271997	Gasket–Crankcase (.005" Thick)	1
★	271996	Gasket–Crankcase (.009" Thick)	1
15	94239	Plug–Oil Drain	1
18	494238	Base–Engine	1
★20	291675	Seal–Oil	1
22	94624	Screw–Base Mtg. Sem	1
25	497518	Piston Assy. (Std.)	1
	497519	Piston Assy. (.010" O.S.)	1
	497520	Piston Assy. (.020" O.S.)	1
	497521	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set–Piston (Std.)	1
	391781	Ring Set–Piston (.010" O.S.)	1
	391782	Ring Set–Piston (.020" O.S.)	1
	391783	Ring Set–Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock–Piston Pin	1
28	299691	Pin Assy.–Piston (Standard)	1
	391286	Pin Assy.–Piston (.005" O.S.)	1
29	490348	Rod Assembly–Connecting	1
	490469	Rod–Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw–Connecting Rod	1
33	262246	Valve–Exhaust	1
34	262247	Valve–Intake	1
35	65906	Spring–Intake Valve	1
36	26828	Spring–Exhaust Valve	1
40	221596	Retainer–Intake Valve	1
41	292260	Rotocoil–Exhaust Valve	1
42	93630	Retainer–Ex. Valve Rotocoil	1
45	262248	Tappet–Valve	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

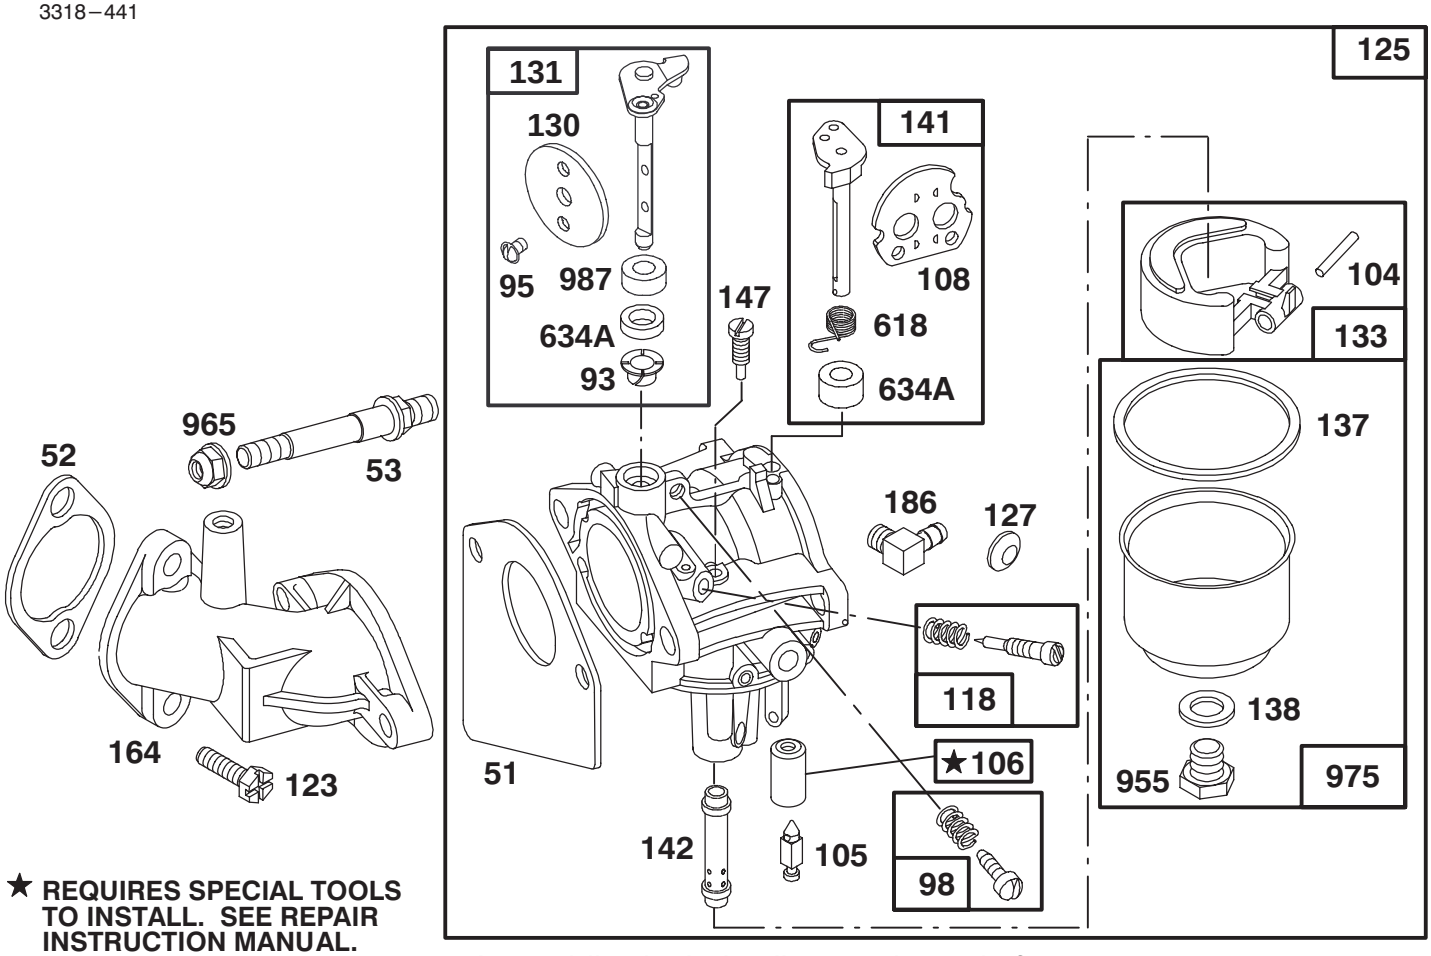

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
●◆51	272465	Gasket–Carburetor (Carb. to Manifold)	1
★52	272554	Gasket–Carburetor (Manifold to Cylinder)	1
53	94637	Stud–Carb. Mtg.	1
●93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Throttle	1
98	495800	Screw–Idle Speed	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve Assy.–Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve–Choke	1
118	494383	Valve–Needle	1
121	495799	Carburetor Kit	1
123	94616	Screw–Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug–Welch (Sold in Kit Only)	1
130	224539	Valve–Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft– Throttle	1
133	494381	Float–Carburetor	1
●◆137	281165	Gasket–Float Bowl	1
●◆138	281164	Washer–Float Bowl Screw	1
141	495931	Shaft–Choke	1
●142	497566	Nozzle–Carburetor	1
●147	231984	Pilot–Jet	1
164	213819	Manifold–Intake	1
186	493496	Connector–Fuel	1
618	262803	Spring–Choke Return	1
●634A	281168	Seal–Choke Shaft	1
●634B	398970	Washer–Throttle Shaft	1
955	94642	Screw–Fuel Bowl	1
965	94010	Nut–Hex.	1
975	494378	Bowl Assy.–Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal–Throttle Shaft	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

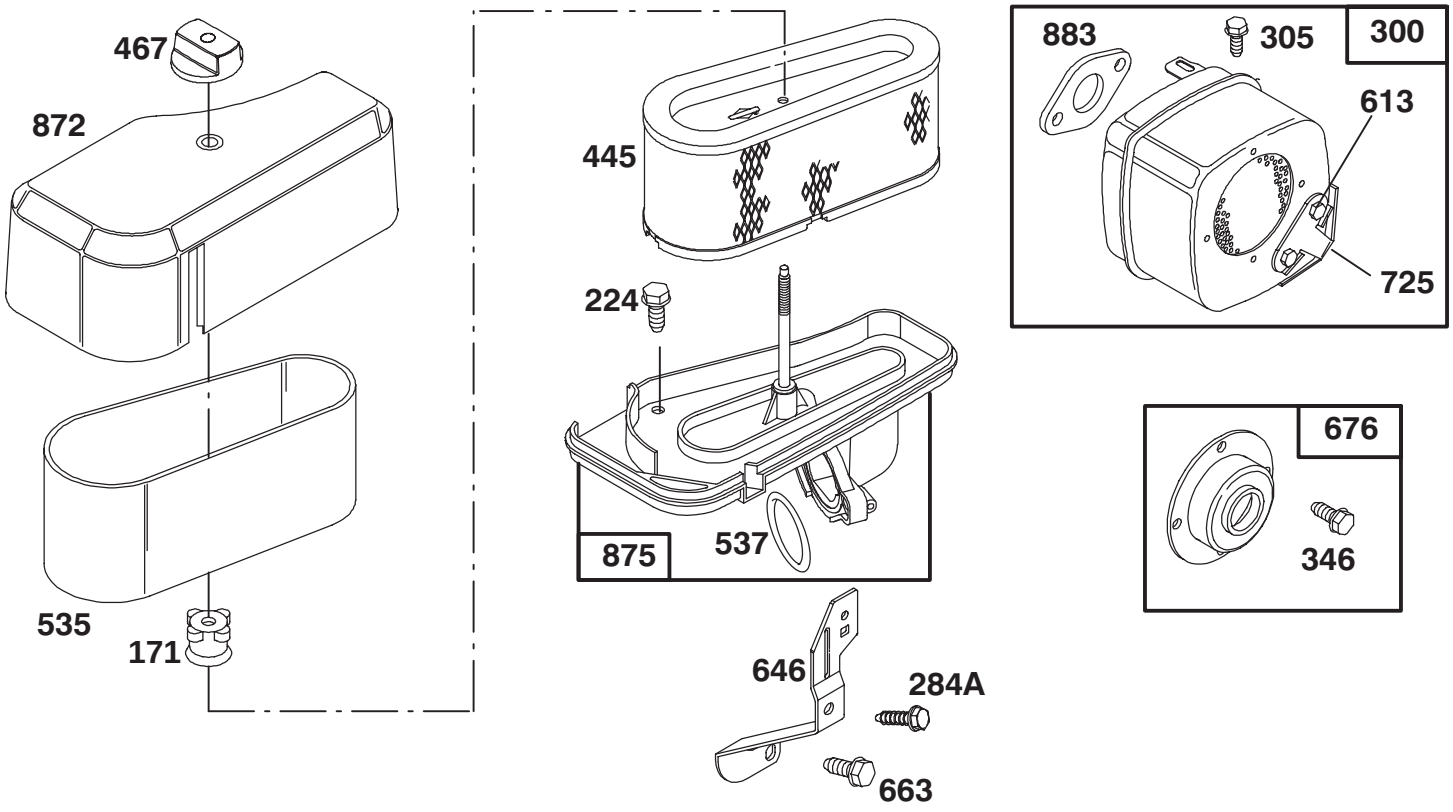


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut–Air Cleaner Mtg.	1
224	94729	Screw–Air Cleaner Sem	1
284A	94704	Screw Hex. Head	1
300	491413	Muffler–Exhaust	1
305	94786	Screw–Hex. Head	1
346	93705	Screw–Hex. Head	1
445	496894	Cartridge–Air Cleaner	1
467	493903	Knob–Air Cleaner	1
535	272403	Element–Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring–Air Cleaner	1
613	93927	Screw–Hex. Head	1
646	224546	Brace–Air Cleaner	1
663	94620	Screw–Hex. Hd.	1
676	396903	Deflector–Muffler	1
725	223023	Shield–Muffler	1
872	281361	Cover–Air Cleaner	1
875	494237	Body–Air Cleaner	1
★883	272293	Gasket–Exhaust	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

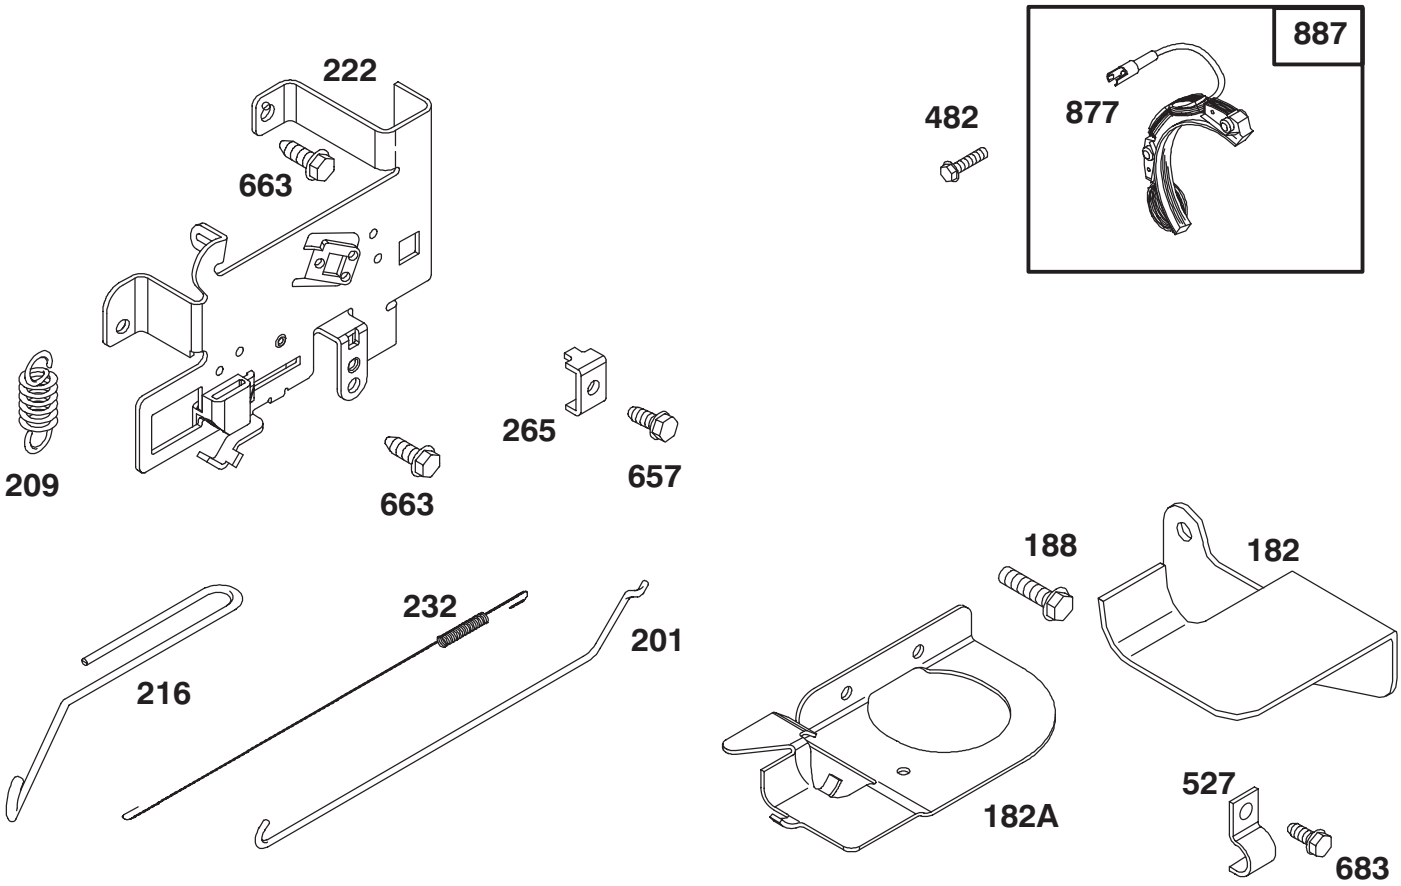


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
182	223925	Bracket–Fuel Tank	1
182A	223866	Bracket–Fuel Tank	1
188	94480	Screw–Sem	1
201	262767	Link–Governor	1
209	260871	Spring–Governor	1
216	262766	Link–Choke	1
222	495611	Plate–Governor Control	1
232	262785	Spring–Governor Link	1

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp–Casing	1
482	93621	Screw–Sem	1
527	221428	Clamp	1
657	93496	Screw–Sem	1
663	94620	Screw–Hex. Head	1
683	94602	Screw–Hex. Head	1
877	393814	Diode and Connector Assy.	1
887	391529	Alternator	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

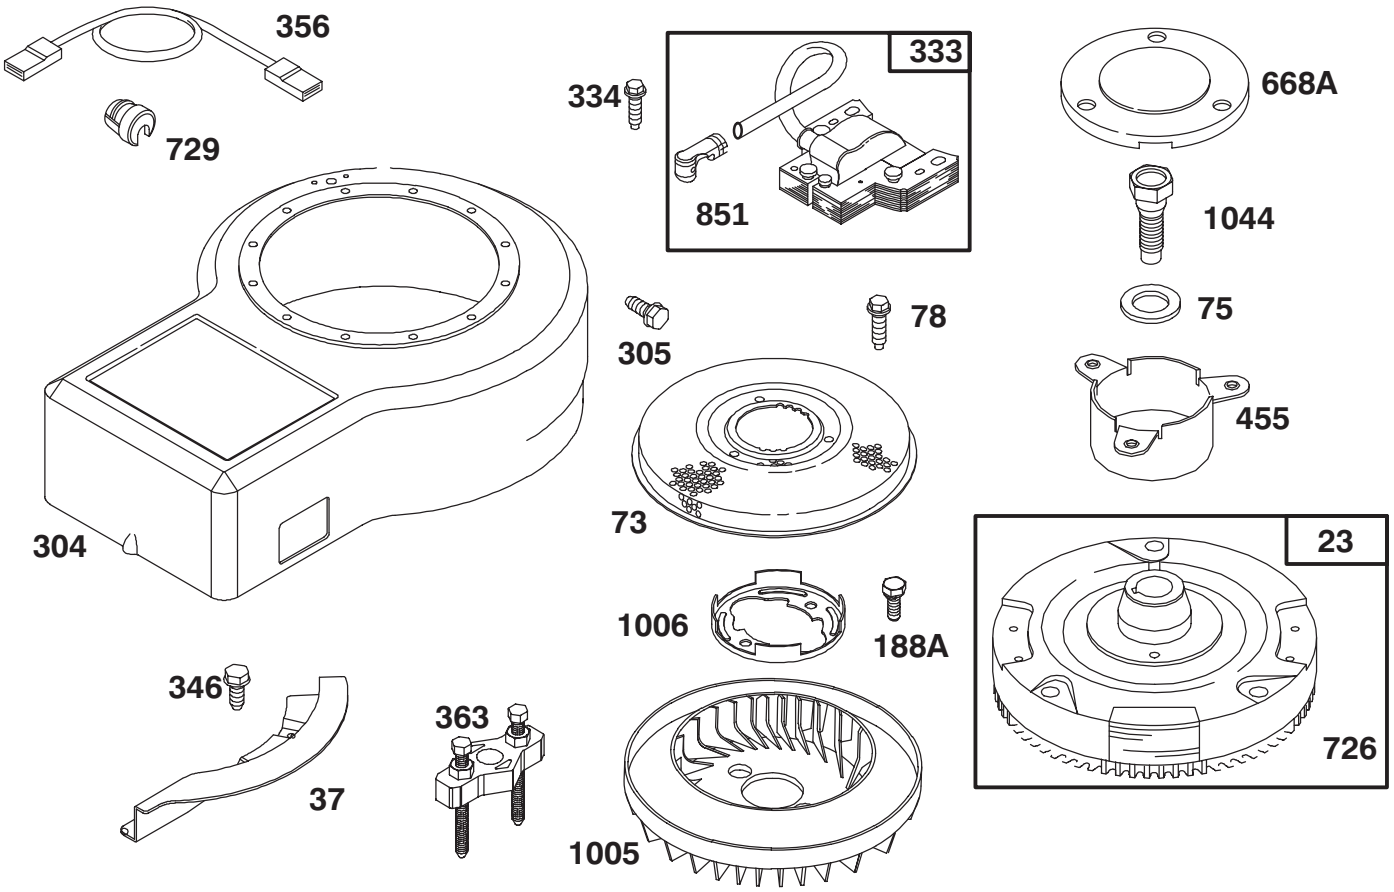


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard–Flywheel	1
73	224948	Screen–Rotating	1
75	224061	Washer–Spring	1
78	94626	Screw–Sem	1
188A	94627	Screw–Sem	1
304	496431	Housing–Blower	1
305	94786	Screw–Hex.	1
333	492341	Armature–Magneto	1
334	93381	Screw–Hex.	1
346	93705	Screw–Hex. Head	1

Ref. No.	Part No.	Description	No. Used
356	494328	Wire Assembly	1
363	19203	Puller–Flywheel	1
455	222561	Cup–Screen Mounting	1
668A	280848	Spacer	1
726	392134	Gear–Ring (Includes Mtg Hardware)	1
729	281159	Clip–Lead Wire	1
851	493880	Terminal–Ignition Cable	1
1005	281355	Fan–Flywheel	1
1006	224413	Retainer–Fan	1
1044	94673	Screw–Shoulder	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

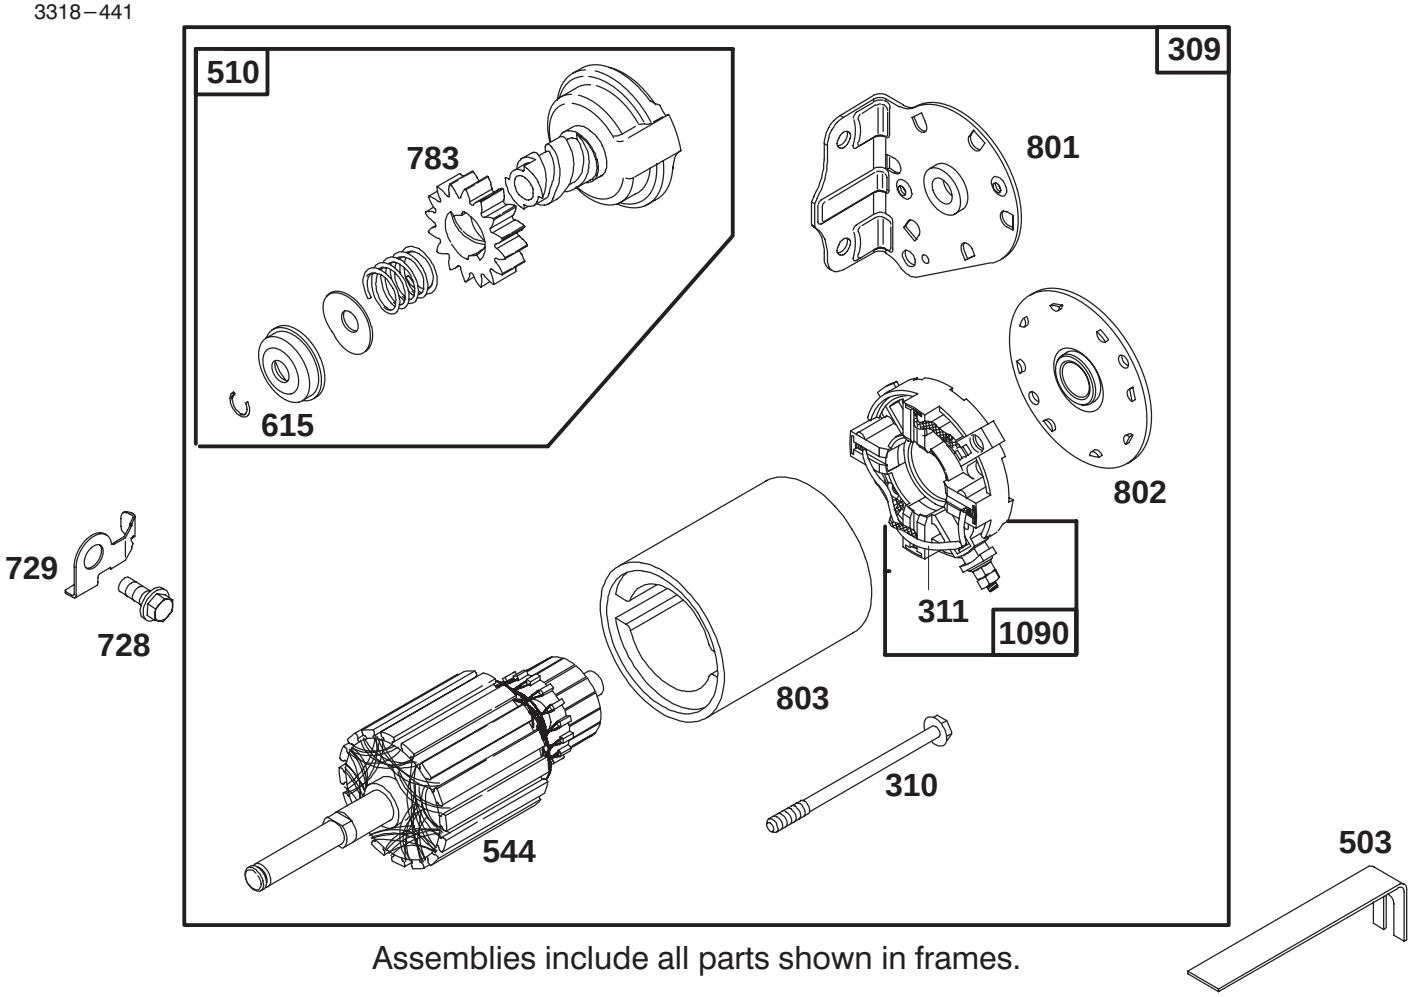


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01


Ref. No.	Part No.	Description	No. Used
309	497595	Motor–Starter	1
310	94003	Bolt–Thru	1
311	497608	Brush Set	1
503	806000	Strap–Starter	1
510	497606	Drive–Starter	1
544	497603	Armature–Starter	1
615	263080	Retainer	1

Ref. No.	Part No.	Description	No. Used
728	94627	Screw–Hex. Head	1
729	225170	Clip–Wire	1
783	280104	Gear–Starter	1
801	394856	Cap–Drive	1
802	497607	Plate–Cover	1
803	497604	Housing–Starter	1
1090	497605	Cap–End	1


★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

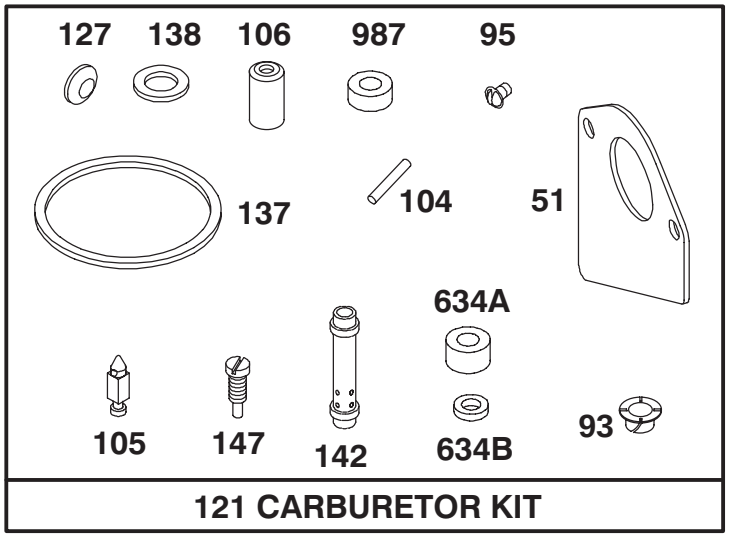

121 CARBURETOR KIT

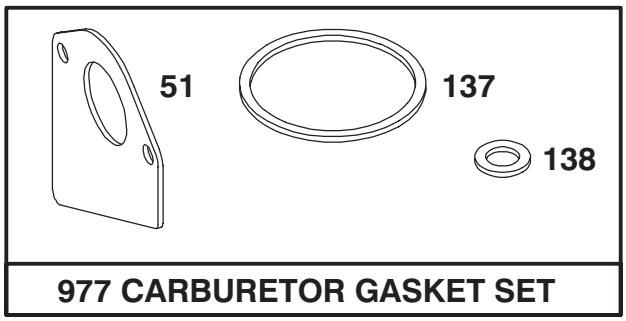

977 CARBURETOR GASKET SET

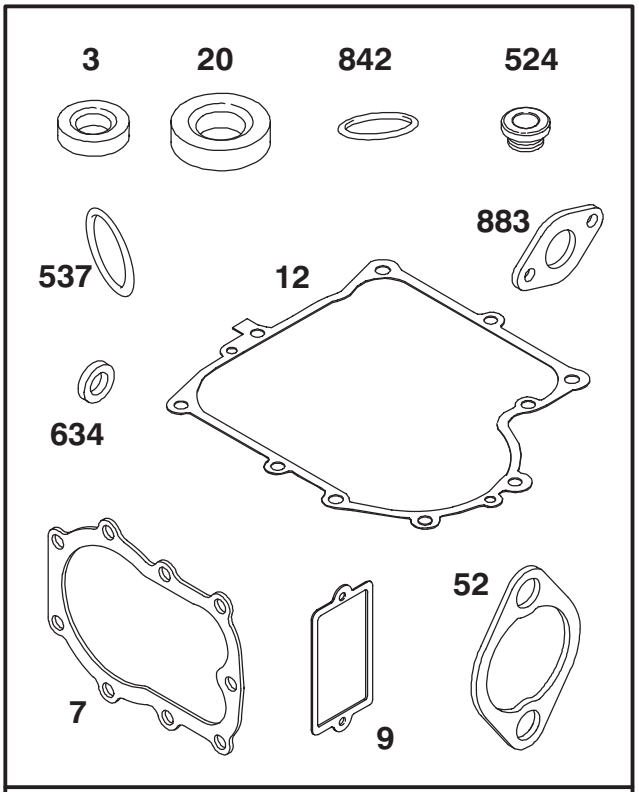

358 GASKET SET

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal–Oil	1
★7	271866	Gasket–Cylinder Head	1
★9	27803	Gasket–Valve Cover	1
★12	271916	Gasket–Crankcase	
(.015" Thick)		1	
★	271997	Gasket–Crankcase	
(.005" Thick)		1	
★	271996	Gasket–Crankcase	
(.009" Thick)		1	
★20	291675	Seal–Oil	1
◆●51	272465	Gasket–Carburetor	
(Carb. to Manifold)		1	
★52	272554	Gasket–Carburetor	
(Manifold to Cylinder)			1
●93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Throttle	1
●104	231789	Pin–Float Hinge	1

Ref. No.	Part No.	Description	No. Used
●105	231855	Valve Assy.–Inlet Needle	1
●106	231854	Inlet Valve Seat	1
121	497535	Carburetor Kit	1
●127		Plug–Welch	
(Sold in Kit Only)		1	
◆●137	281165	Gasket–Float Bowl	1
◆●138	281164	Washer–Float	
Bowl Screw		1	
●142	494566	Nozzle–Carburetor	1
●147	231984	Pilot–Jet	1
358	494241	Gasket Set	1
★524	281370	Seal–Fill Tube	1
★537	281106	O-Ring–Air Cleaner	1
★634	491323	Seal–Governor	1
●634A	281168	Seal–Choke Shaft	1
●634B	398970	Washer–Throttle Shaft	1
★842	270920	Seal–Oil Fill Cap	1
★883	272293	Gasket–Exhaust	1
977	494385	Carburetor Gasket Set	1
●987	281166	Seal–Throttle Shaft	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.


MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

PEERLESS TRANSAXLE MODEL MST 205−509

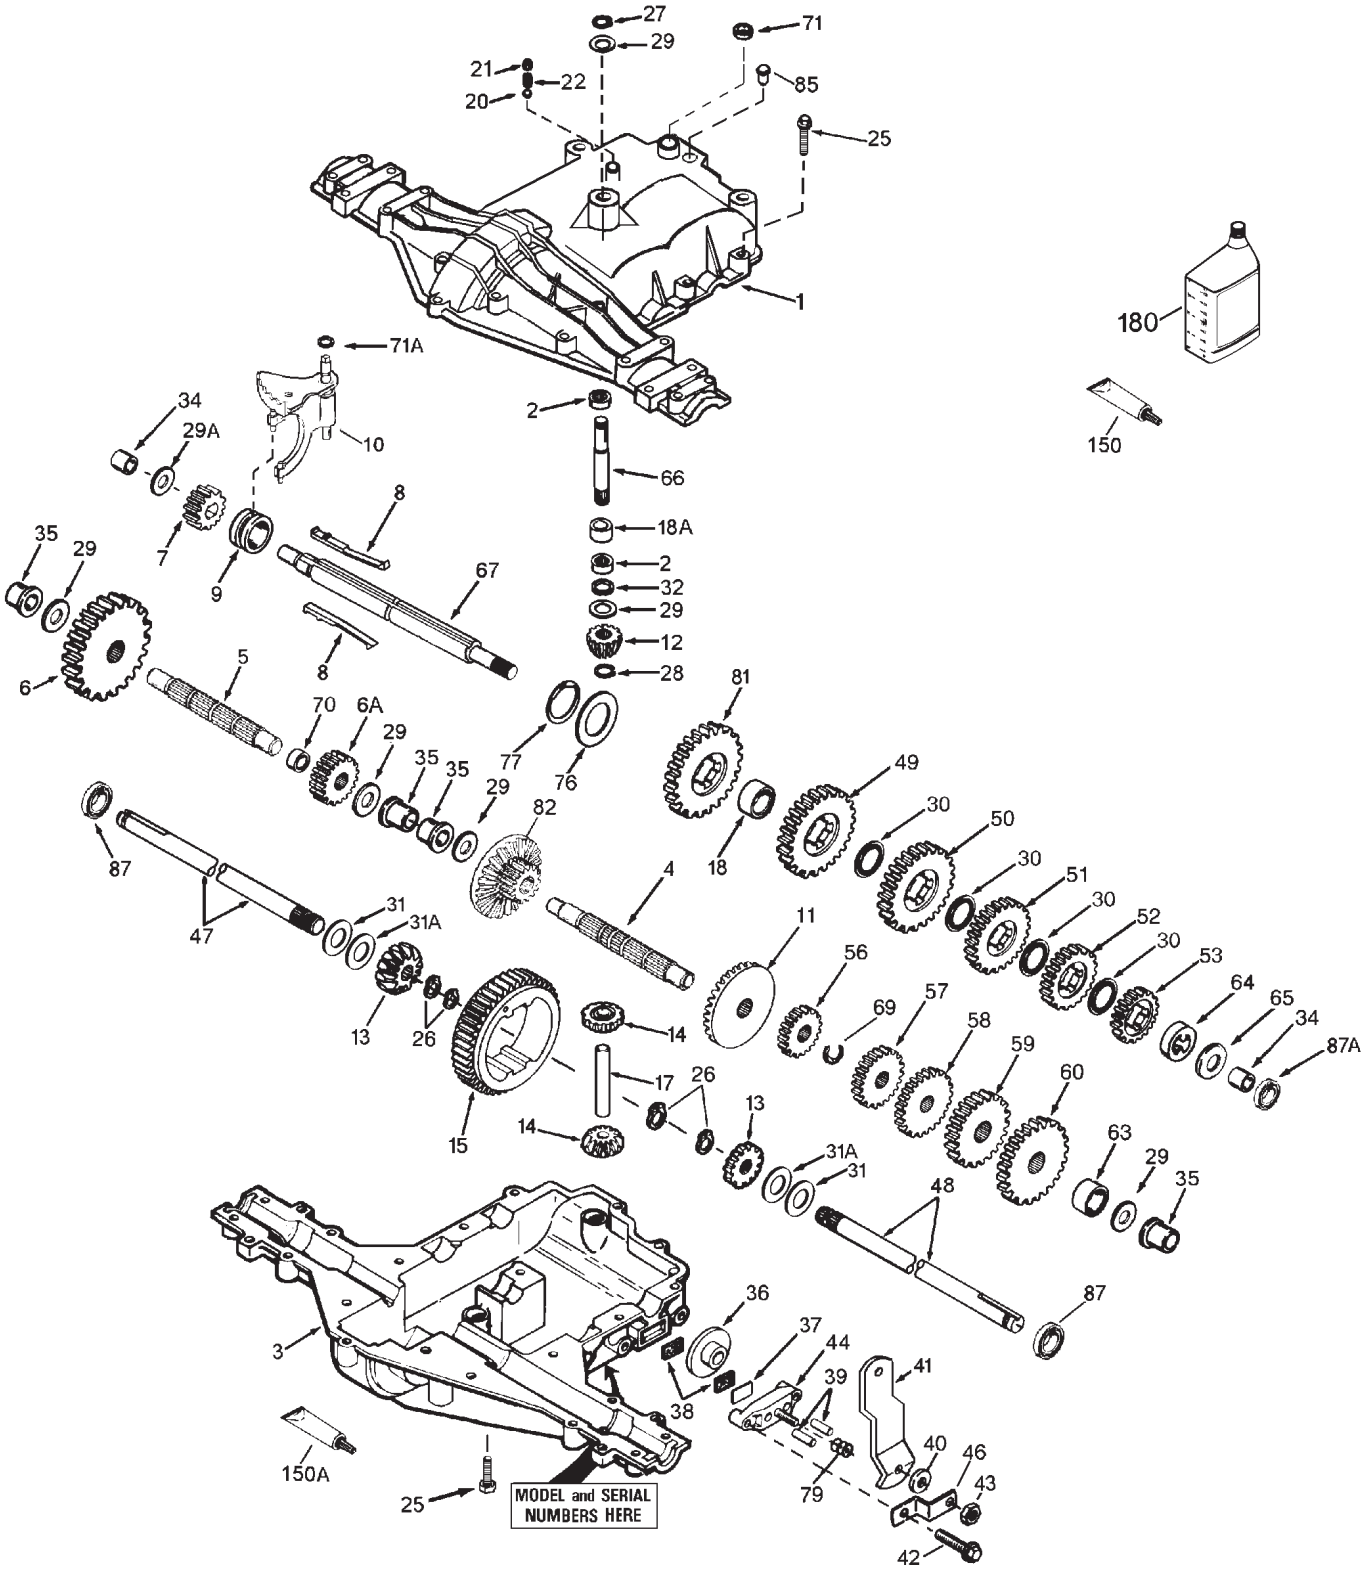

PEERLESS TRANSAXLE MODEL MST 205−509

Ref. No.	Part No.	Description	No. Used
1	772137	Transaxle Cover	1
2	780086A	Needle Bearing	2
3	770123	Transaxle Case	1
4	776395	Countershaft	1
5	776397	Output Shaft	1
6	778331	Spur Gear (38 teeth)	1
6A	778332	Spur Gear (15 teeth−steel)	1
7	778330	Spur Gear (11 teeth−steel)	1
8	792136A	Shift Key	2
9	784352	Shift Collar	1
10	784378	Shift Rod & Fork	1
11	778334	Bevel Gear (30 teeth)	1
12	778309	Input Bevel Pinion (13 teeth)	1
13	778327	Bevel Gear (16 teeth−steel) (Incl. 14)	2
14	778327	Bevel Gear (16 teeth−steel) (Incl. 13)	2
15	778312A	Ring Gear (43 teeth)	1
17	786139	Drive Pin	1
18	786102	Spacer	1
18A	786175	Spacer	1
20	792077	Ball 5/16” dia	1
21	792078	Set Screw	1
22	792079	Spring	1
25	792073	Screw	18
26	792125	Retaining Ring (pkg of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	6
29A	780160	Washer	1
30	780108	Washer	4
31	780001	Washer (.056 wide) (USE AS NEEDED)	2
31A	780195	Flat Washer (.062 wide)	2
32	788083	Oil Seal	1
34	780194	Bushing	2
35	780193	Flanged Bushing	4
36	790075	Brake Disk	1
37	790007	Brake Pad Plate	1
38	799021	Brake Pad (pkg of 2)	2

Ref. No.	Part No.	Description	No. Used
39	786026	Dowel Pin	2
40	792076A	Flat Washer	1
41	790080	Brake Lever	1
42	792073	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774690	Axle (11−15/16” long)	1
48	774691	Axle (16−1/2” long)	1
49	778356	Spur Gear (29 teeth−steel)	1
50	778354	Spur Gear (23 teeth−steel)	1
51	778344	Spur Gear (20 teeth)	1
52	778350	Spur Gear (16 teeth−steel)	1
53	778346	Spur Gear (15 teeth−steel)	1
56	778355	Spur Gear (11 teeth−steel)	1
57	778353	Spur Gear (17 teeth−steel)	1
58	778343	Spur Gear (20 teeth)	1
59	778349	Spur Gear (24 teeth−steel)	1
60	778345	Spur Gear (25 teeth)	1
63	786071	Countershaft Spacer	1
64	786072	Brake Shaft Spacer	1
65	780189	Washer	1
66	776394	Input Shaft	1
67	776396	Shifter & Brake Shaft	1
69	792170	Retaining Ring	1
70	786172	Spacer	1
71	788069	Square Cut Ring	1
71A	788092	”O” Ring	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring	1
79	792144	Spring	1
81	778338	Spur Gear (27 teeth)	1
82	778333	Bevel & Spur Gear (30 & 13 teeth)	1
85	792154	Pipe Plug	1
87	788088	Oil Seal	2
87A	788089	Oil Seal	1
150	788093	Liquid Gasket RTV Silicone	1
150A	788094	Liquid Gasket Loctite #242	1
180	730229A	Gear Oil 80W90	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
104047	Bushing	6	33	1
104048	Valve Assembly	6	34	1
111419	Washer – Fender	4	19	1
116397	Relay	9	16	1
614249	Tie – Strap	2	37	1
701178	Cap – Protector	1	6	2
701756	Wheel – Deck	14	41	2
702366	Clip – Wire Retainer	9	9	2
9267154	Screw – Hex Washer Hd.	6	38	1
3–6498	Washer – Thrust	5	11	2
3–6498	Washer – Thrust	11	19	2
3–6498	Washer – Thrust	4	32	6
3–7501	Washer – Curved	5	16	4
5–4460	Washer – Fender	3	3	1
5–4460	Washer – Fender	4	24	1
5–4460	Washer – Fender	6	36	4
5–4460	Washer – Flat	7	9	4
7–0030	Bolt – Shoulder	12	15	3
7–0030	Bolt – Shoulder	15	31	1
7–0036	Key – Square	11	10	2
7–5461	Washer – Hardened	8	10	1
26–0671	Bolt – Blade	6	17	1
26–0671	Bolt – Blade	13	19	2
26–6700	Spring – Brake Return	11	17	1
27–0220	Screw – Hex Washer Hd.	5	18	2
27–0220	Screw – Plastite	6	5	4
27–8890	Spring – Pedal Return	7	6	1
28–0540	Bolt – Shoulder	2	11	2
28–2480	Washer	4	3	2
28–2480	Washer	11	11	2
28–8080	Boot – Battery Terminal	9	5	1
37–8770	Bolt – Shoulder	7	2	1
37–8770	Bolt – Shoulder	3	12	4
38–1420	Switch – Seat	9	8	1
38–7820	Bearing – Ball	13	6	4
44–8110	Cable – Battery Negative	9	7	1
46–8090	Screw – Plastite	2	15	7
46–8091	Screw – Plastite	2	8	2
46–8091	Screw – Plastite	2	32	1
47–2963	Line – Fuel	6	10	1
52–2891	Bushing – Steering Link	4	20	2
55–4300	Decal – Warning	14	32	2
55–9321	Cable – Shotgo	8	5	1
56–2540	Vent – Tube	9	2	1
56–6591	Bolt – Wheel	14	40	2
56–9830	Pad – Brake	15	2:2	1
57–4360	Post – Pivot Rear	13	1	1
57–4380	Rod – Hinge Deflector	13	26	1
57–4700	Blade – 32	13	15	2
57–6950	Spring – Torsion Deflector	13	27	1
61–9780	Cap – Hub	4	1	2
61–9780	Cap – Hub	11	13	2
61–9980	Screw – Adjusting	16	8	2
62–3661	Spacer – Bearing	13	8	2
63–8360	Key – Ignition	9	12	1
65–2920	Pad – Pedal	7	25	1
65–7210	Spacer	12	17	1
67–0710	Ball – Swivel	15	33	2
68–3650	Decal – Danger Deflector	14	33	1
68–3660	Decal – Shield Danger	14	31	1
76–1340	Decal – Made in USA	1	20	1
76–2160	Plate – Kicker	13	5	4
79–1600	Baffle – Recycler 38	13	23	1
79–1640	Baffle – Rear	13	11	1
79–3061	Blade – 32 Recycler	13	15	2
79–3140	Decal – Danger	14	35	1
80–0510	Stiffener – Blade	13	17	2
80–2240	Plate – Grille Panel	9	26	1
80–2600	Battery – 7 Plate	9	6	1
80–4341	Shaft – Spindle	13	14	2
80–4360	Shield – Bearing	13	13	2
80–4380	Spacer – Hardened	13	12	2
80–6990	Washer – Hardened	16	9	4
80–6990	Washer – Hardened	12	16	4
84–5610	Guide – Cable	7	12	1
84–5610	Guide – Cable	8	16	1
88–0890	Grip – Brake Rod	4	11	1
88–3840–01	Body – Rear	1	5	1
88–3850	Wheel – Steering	5	5	1
88–3870	Cover – Steering Wheel	5	6	1
88–3880	Tank – Gas	6	6	1
88–3930	Shield – Heat	2	14	1
88–3940	Panel – Rear Hitch	1	10	1
88–3950	Seat	3	1	1
88–3960	Lens – Headlights	9	23	1
88–3970	Reflector – Lamp	9	30	1
88–3980	Cap – Gas	6	3	1
88–4020	Guide – Deck Belt R.H.	16	7	1
88–4030	Guide – Deck Belt L.H.	16	2	1
88–4040	Box – Battery	9	11	1
88–4050	Duct – Hood Air	2	17	1
88–4060	Tire – 13	4	4	2
88–4080	Tire	11	8	2
88–4140	Nut – Wedge	2	23	2
88–4160	Clamp – Pivot Rod	2	22	2
88–4170	Rod – Tower Pivot	2	24	1
88–4180	Button – Release	5	8	1
88–4190	Bushing – Sliding	5	3	1
88–4210	Bushing – Stationary	5	19	1
88–4230	Trunnion – H.O.C. Rear	12	12	2
88–4280	Wheel & Tire Assembly	4	*	2
88–4300	Wheel & Tire Assembly	11	*	2
88–4320	Harness – Wire	9	31	1
88–4340	Control – Throttle	6	4	1
88–4350	Cable – Throttle	6	2	1
88–4360	Rim – Front Wheel	4	5	2
88–4380	Rim	11	9	2
88–4400	Bearing – Wheel	4	35	4
88–4410	Gasket – Muffler	6	22	1
88–4430	Recycler Cover Assembly	13	29	1
88–4510	Spindle – Casting	13	7	2
88–4590	Bolt – Shoulder	15	1	2
88–4620	Bracket – Idler Pivot	1	12	1
88–4630	Plate – Engine Mount	1	3	1
88–4670	Bushing – Eccentric	4	17	1
88–4730	Clamp – H.O.C. Pivot	12	13	2
88–4810	Clamp – Shift Pivot	8	4	2
88–4810	Clamp – Shift Pivot	7	22	1
88–4820	Bracket – Seat Hinge	3	13	2
88–4830	Link – Drag	4	29	1
88–4840	Pulley – Transmission	11	3	1
88–4870	Arm – Idler Deck	15	32	1
88–4880	Spacer – Microswitch	9	21	1
88–4890	Spring – Leaf	5	15	1
88–4910	Support – Seat	3	2	1
88–4960	Shield – Exhaust Pipe	1	14	1
88–4980	Bushing – Idler Arm	15	23	1
88–5000	Pedal – Clutch/Brake	7	24	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
88–5010	Spacer – Steering Rack	4	26	1
88–5020	Gate – Shift	3	15	1
88–5030	Gate – H.O.C.	3	8	1
88–5070	Belt Guide – Idler	15	29	1
88–5110	Pivot – H.O.C.	12	14	1
88–5120	Support – Front Axle	1	17	1
88–5130	Bracket – Steering Rack	4	14	1
88–5150	Bushing – Flange	5	10	1
88–5160	Cover – Shift Gate	3	14	1
88–5170	Cover – H.O.C.	3	6	1
88–5180	Bracket – Backup	5	14	1
88–5190	Lever – Deck Engage	2	1	1
88–5200	Rack – Steering	4	18	1
88–5220	Mat – R.H. Foot	3	16	1
88–5240	Mat – L.H. Foot	3	9	1
88–5260	Bracket – Trans. Mount	1	22	2
88–5270	Rod – Clutch/Brake	7	1	1
88–5330	Pulley – Deck 38	15	21	2
88–5340	Lever – Trans. Shift	8	9	1
88–5380	Rod – Steering Tie	4	8	1
88–5450	Rod – Hanger Rear	12	11	2
88–5470	Spacer – Front Axle	4	34	2
88–5500	Rod – Pedal Pivot	7	18	1
88–5510	Rod – Parking Brake	4	9	1
88–5520	Bracket – Parking Brake	4	10	1
88–5540	Rod – R.H. Deck Brake	15	26	1
88–5550	Rod – L.H. Deck Brake	15	3	1
88–5560	Guide – Idler Belt	7	3	1
88–5570	Link – Adjusting H.O.C.	12	1	2
88–5630	Pulley – Idler Flat	15	30	1
88–5680	Pulley – Flat Idler	7	4	1
88–5740	Bracket – Deck Wheel	14	42	1
88–5900	Link – H.O.C.	12	8	1
88–5910	Spring – Torsion	15	5	2
88–5930	Keeper – Cable	8	17	1
88–5970	Hook – Return Spring	15	10	1
88–6040	Bracket – Hood Pivot R.H.	2	19	1
88–6050	Bracket – Hood Pivot L.H.	2	12	1
88–6070	Arm – Idler	7	16	1
88–6090	Coupling – Steering	5	20	1
88–6100	Brake Assembly	15	2	1
88–6130	Spring – Deck Engage	15	6	1
88–6220	Spring – Compression	1	8	2
88–6250	V–Belt – Deck	15	18	1
88–6270	V–Belt – Traction	11	5	1
88–6290	Shield – Muffler	1	15	1
88–6300	Shaft – Steering Upper	5	17	1
88–6330	Spring – Extension	7	14	1
88–6370	Shaft – Steering	5	9	1
88–6460	Spring – Extension	12	2	1
88–6480	Muffler	6	25	1
88–9830	Switch – Ignition	9	15	1
88–9932	Switch – Micro	9	20	2
92–1952	Rod – Gas Tank	6	7	1
92–2460	Decal – Ignition	2	28	1
92–2461	Decal – Throttle	2	29	1
92–2462	Decal – Deck Engage	2	30	1
92–2467	Decal – Hood R.H.	2	*	1
92–2468	Decal – Hood L.H.	2	25	1
92–5730	Decal – Throttle	2	*	1
92–5731	Decal – Ignition	2	*	1
92–5748	Decal – Air Duct	2	27	1
92–5782	Patch – Heat Tape	2	26	1
92–7889	Spindle – R.H.	4	6	1
92–7890	Spindle – L.H.	4	31	1
92–8650	Hood	2	18	1
92–8757	Decal – Engine 13 H.P	6	9	1
92–8875	Switch – Rocker Lights	9	32	1
92–8934	Spring – Extension	15	8	1
92–9520	Decal – Deck 38 Rec.	14	36	1
92–9674	Knob – Studded	3	4	1
92–9845	Solenoid	9	17	1
93–0231	Screw – Plastite	14	30:4	4
93–0303	Tower – Steering	2	2	1
93–0317	Deflector Assembly	13	30	1
93–0539	Screw – Phillips Hd.	9	19	4
93–1122	Decal – Danger	13	28	1
93–1122	Decal – Danger	14	30:1	1
93–3240	Seal – Plunger	9	25	1
93–3809	Bracket – Ground	6	28	1
93–3810	Harness – Wire	9	1	1
93–3822	Lever – H.O.C.	12	7	1
93–3849	Bracket – Cable Upper	2	36	1
93–3854	Guide – Engine Belt	6	35	3
93–3855	Guide – Belt R.H.	6	39	1
93–3881	Pan – Front Deck Susp.	16	4	1
93–3896	Bracket – Deck Wheel	14	46	1
93–4144	Decal – Rear Body	1	18	1
93–4145	Decal – Tower 1338XL	2	31	2
93–6673	Decal – Deck Engage	2	*	1
93–6674	Decal – Warning	14	32	2
93–6675	Decal – Instruction	1	*	1
93–6677	Decal – Shield Danger	14	31	1
93–6679	Decal – Belt Routing	14	37	1
93–7009	Decal – Deflector Danger	14	33	1
93–7010	Decal – Danger	13	28	2
93–7010	Decal – Danger	14	30:1	1
93–7656	Cover – Shift Gate	3	*	1
93–7657	Cover – H.O.C.	3	*	1
93–7679	Kicker – Deflector	14	30:3	2
93–7695	Deflector Assembly	13	30	1
93–9847	Spacer	16	12	1
94–1237	Decal – Instruction	1	19	1
94–1949	Deck – 38	13	3	1
94–1951	Latch – Hood	6	30	1
94–1962	Axle – Front	4	7	1
94–1963	Pulley – Engine	6	14	1
94–1968	Lever – Shift Pivot	8	21	1
94–1969	Strap – Torque	11	16	2
94–1970	Bracket – Deck Susp.	16	14	1
94–1971	Bracket – Deck Susp. L.H.	16	6	1
94–1980	Foam – Hood	2	33	2
94–1984	Pin – Latch	2	16	1
94–1991	Lever – Shift	8	1	1
94–1993	Pivot – Shift	8	6	1
94–1997	Bushing – Shift Lever	8	22	1
94–1998	Rail – R.H. Frame	1	4	1
94–1999	Rail – L.H. Frame	1	13	1
94–4293	Cable – Deck Engage	2	34	1
94–4294	Spring – Brake	7	7	1
94–4926	Bracket – Belt Guide	7	10	1
94–5362	Boot – Terminal Insulator	9	28	1
94–5431	Link – Shift	8	7	1
94–5433	Bracket – Belt Guide	7	29	1
94–5565	Knob – Engage Lever	2	3	1
94–5565	Knob – Shift	12	6	1
94–5565	Knob – Shift	8	15	1
94–5823	Bolt – Shoulder	16	5	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
94−6022	Transaxle	11	6	1
218−461	Nut − Hex	9	13	1
231−91	Tube − Inner (Optional)	11	*	2
232−27	Valve Stem w/Cap	11	18	2
232−27	Valve Stem w/Cap	4	36	2
232−40	Tube − Inner (Optional)	4	*	2
2412−98	Clamp − Hose	6	11	2
302−5	Fitting − Grease	4	37	2
302−11	Fitting − Grease	11	7	2
302−26	Fitting − Grease	4	16	1
321−2	Screw − Hex Hd. Cap	2	10	4
321−4	Screw − Hex Hd. Cap	9	3	2
321−4	Screw − Hex Hd. Cap	5	4	2
321−4	Screw − Hex Hd. Cap	13	9	2
321−4	Screw − Hex Hd. Cap	6	26	1
321−4−76	Screw − Self Tap	6	31	1
321−9	Screw − Hex Hd. Cap	5	21	2
321−15	Screw − Hex Hd. Cap	14	38	2
322−3	Screw − Hex Hd. Cap	1	2	22
322−3	Screw − Hex Hd. Cap	12	4	4
322−3	Screw − Hex Hd. Cap	2	4	2
322−3	Screw − Hex Hd. Cap	7	8	2
322−3	Screw − Hex Hd. Cap	3	11	4
322−3	Screw − Hex Hd. Cap	8	13	3
322−3	Screw − Hex Hd. Cap	7	17	3
322−3	Screw − Hex Hd. Cap	11	20	2
322−3	Screw − Hex Hd. Cap	14	44	6
322−5	Screw − Hex Hd. Cap	1	7	2
322−5	Screw − Hex Hd. Cap	15	20	2
322−5	Screw − Hex Hd. Cap	6	37	2
322−6	Screw − Hex Hd. Cap	7	11	1
322−9	Bolt − Shoulder	12	3	1
322−9	Screw − Hex Hd. Cap	6	18	3
322−12	Screw − Hex Hd. Cap	11	14	4
322−12	Screw − Hex Hd. Cap	16	16	2
323−5	Screw − Hex Hd. Cap	13	24	2
323−9	Screw − Hex Hd. Cap	16	13	2
323−10	Screw − Hex Hd. Cap	8	2	1
323−11	Screw − Hex Hd. Cap	7	5	1
323−12	Screw − Hex Hd. Cap	15	27	1
323−13	Screw − Hex Hd. Cap	4	27	2
329−23	Screw − Hex Hd. Cap	8	12	1
3219−6	Nut − Hex	15	22	2
3230−1	Bolt − Carriage	4	15	4
3230−1	Screw − Carriage	13	21	1
3230−3	Bolt − Carriage	8	18	1
3230−3	Bolt − Carriage	7	21	1
3230−3	Screw − Carriage	4	28	1
3231−4	Screw − Carriage	4	13	1
3253−3	Washer − Lock	8	11	1
3253−3	Washer − Lock	6	27	1
3253−4	Washer − Lock	6	23	2
3253−22	Washer − Lock	6	16	1
3254−5	Washer − Lock	9	14	1
3255−7	Washer − Ext. Tooth Lock	9	24	1
3255−8	Washer − Ext. Tooth Lock	6	19	1
3256−22	Washer − Flat	5	2	2
3256−22	Washer − Flat	16	10	2
3256−23	Washer − Flat	1	1	4
3256−23	Washer − Flat	2	5	2
3256−23	Washer − Flat	8	14	2
3256−23	Washer − Flat	11	15	8
3256−23	Washer − Flat	15	15	2
3256−23	Washer − Flat	15	17	1
3256−23	Washer − Flat	7	26	3
3256−24	Washer − Flat	12	10	4
3256−24	Washer − Flat	2	20	2
3256−24	Washer − Flat	4	25	4
3256−24	Washer − Flat	15	28	2
3256−25	Washer − Flat	6	15	1
3256−25	Washer − Flat	8	20	1
3256−25	Washer − Flat	4	22	4
3256−26	Washer − Flat	7	20	1
3256−68	Washer − Flat	15	19	1
3257−23	Key − Woodruff	11	4	1
3269−26	Washer − Backup	3	17	4
3272−10	Pin − Cotter	4	23	4
3272−10	Pin − Cotter	7	23	1
3272−12	Pin − Cotter	4	2	2
3274−10	Screw − Hex Soc. Hd.	6	24	2
3290−282	Rivet − Pop	15	2:3	2
3290−282	Rivet − Pop	3	7	4
3290−299	Nut − Tinnerman	9	27	1
3290−307	Pin − Cotter	2	7	2
3290−307	Pin − Hair Cotter	12	9	7
3290−354	Speednut	9	22	2
3290−465	Washer − Belleville	13	18	2
3290−479	Fastener − Panel	3	5	20
3290−496	Nut − Retained	2	13	2
3296−3	Nut − Lock	8	8	2
3296−23	Nut − Lock	16	17	2
3296−29	Nut − Lock	11	1	6
3296−29	Nut − Lock	8	3	4
3296−29	Nut − Lock	12	5	8
3296−29	Nut − Lock	2	6	2
3296−29	Nut − Lock	6	8	4
3296−29	Nut − Lock	1	9	24
3296−29	Nut − Lock	3	10	6
3296−29	Nut − Lock	4	12	5
3296−29	Nut − Lock	7	13	6
3296−29	Nut − Lock	15	14	2
3296−29	Nut − Lock	16	15	2
3296−29	Nut − Lock	15	16	1
3296−29	Nut − Lock	13	20	1
3296−29	Nut − Lock	15	25	2
3296−29	Nut − Lock	14	45	6
3296−39	Nut − Lock	16	3	2
3296−39	Nut − Lock	8	19	1
3296−39	Nut − Lock	4	21	3
3296−39	Nut − Lock	13	22	1
3296−39	Nut − Lock	15	24	1
3296−39	Nut − Lock	13	25	2
3296−39	Nut − Lock	14	43	2
3296−42	Nut − Lock	5	1	4
3296−42	Nut − Lock	15	4	2
3296−42	Nut − Lock	2	9	4
3296−42	Nut − Lock	13	10	2
3296−42	Nut − Lock	16	11	2
3296−59	Nut − Lock	7	15	2
32103−22	Nut − Wing	9	4	2
32104−76	Screw − Thread Tapping	1	16	1
32105−76	Screw − Self Tapping	16	1	5
32111−7	Nut − Lock	14	39	2
32120−64	Ring − Snap	11	2	1
32121−111	Pin − Spirol	5	7	1
32128−43	Nut − Flange	2	21	2
32144−4	Screw − Hex Hd. Tap	6	29	1
32144−4	Screw − Hex Hd. Tap	2	35	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
32144−4	Screw − Hex Hd. Thr'd	9	10	3
32144−14	Screw − Hex Hd.	11	21	2
32144−32	Screw − Plastic	9	29	2
32144−41	Screw − Hex Washer Hd.	13	2	2
32144−111	Screw − Phillips Pan Hd.	13	4	8
32144−112	Screw − Thread Tapping	6	31	1
32149−1	Nut − Keps	6	20	2
32149−2	Nut − Keps	9	18	2
32151−48	E−Ring	11	12	2
32151−48	E−Ring	5	12	1
32151−48	E−Ring	4	30	2
32151−81	Ring − Retaining	5	13	1

Part No.	Description	Pg. No.	Ref. No.	Qty.
OPTIONAL EQUIPMENT				
	Easy Empty Bagger Kit . . . . . Model No. 79116			
	or Model No. 79117			
	Twin Bagger . . . . . Model No. 79101			
	or Model No. 79103			
	Recycler Kit (Std. Both Models) . . . . . Model No. 79170			
	Hi−Sail Bagging Blade . . . . . Part No. 57−4700			
	Tire Chains . . . . . Part No. 11−0430			
	Headlight Kit (Std. Both Models) . . . . . Model No. 79180			
	42 (106.7cm) Snowblade Kit . . . Model No . 79150			
	Wheel Weight Kit . . . . . Model No. 59159			
	Anti−Scalp Kit (Std. Model No. 71205) . . . . . Model No. 79182			

*Not Illustrated