FORM NO. 3318–467

TORO®

Lawn & Garden Tractor

42” Snowthrower

Model No. 79263 – 6900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Blower Assembly	1
Chute Assembly	2
Auger Assembly	3
Pulley and Hitch Assembly	4

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.

. .

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

© The TORO Company — 1995
All Rights Reserved

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

This Page intensionally Left Blank

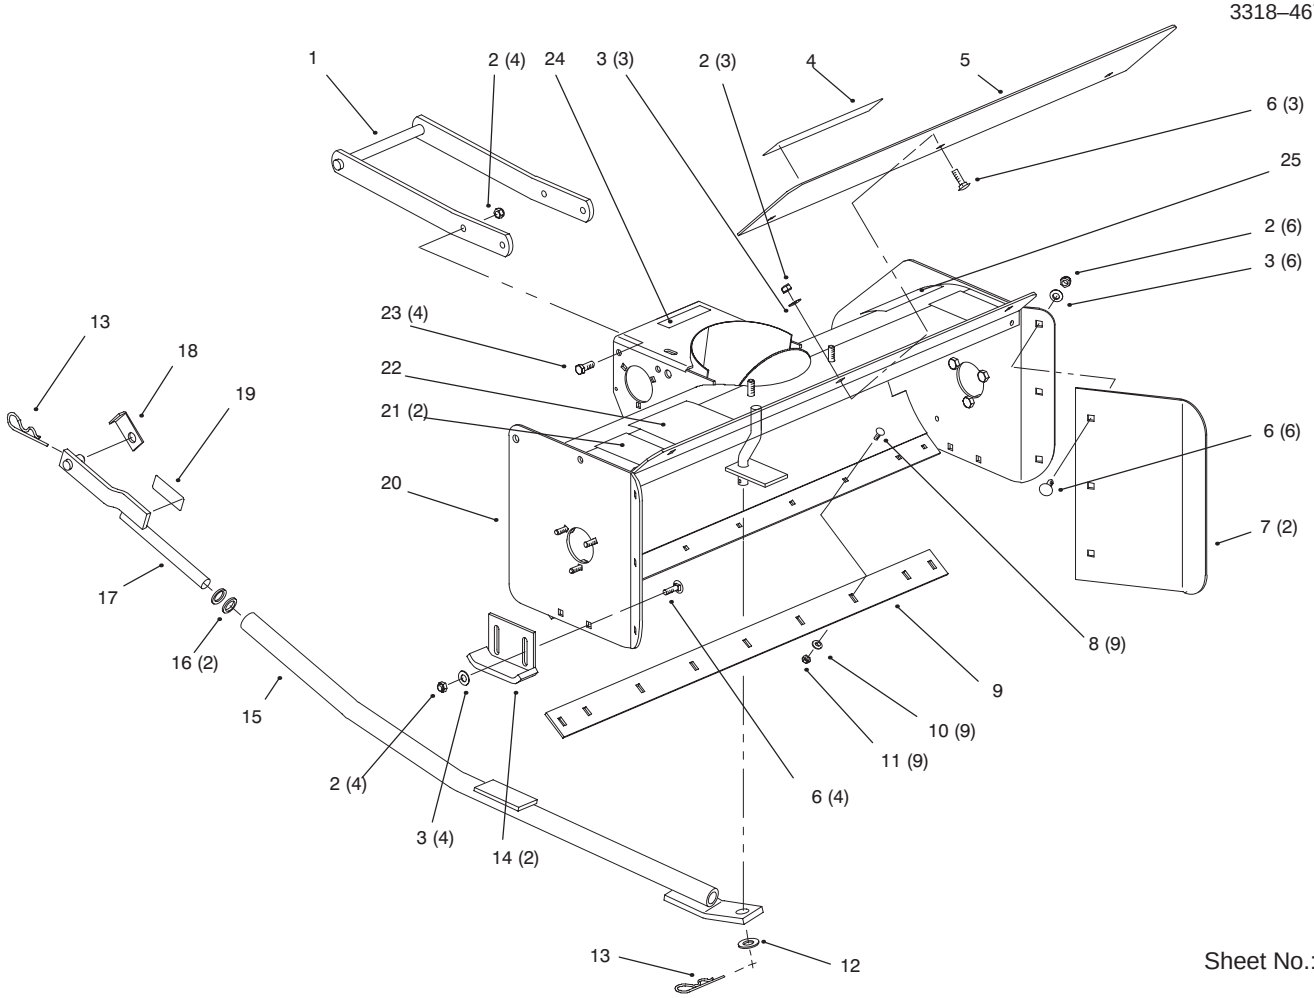


Sheet No.: 2

Blower Assembly

Ref. No.	Part No.	Qty.	Description
1	79–6800–01	1	Mounting Frame
2	3296–39	17	Nut–Lock
3	3256–24	13	Washer–Flat
4	92–8748	1	Decal–Attachment
5	93–1616–01	1	Plate–Extension
6	3231–2	13	Screw–CARR
7	93–1617–01	2	Plate–Extension
8	3229–25	9	Screw–CARR
9	79–6170–01	1	Scraper
10	3256–22	9	Washer–Flat
11	3296–42	9	Nut–Lock
12	3256–27	1	Washer–Flat
13	9335064	2	Hairpin
14	93–1620–01	2	Skid
15	79–3251–03	1	Rod
16	9202324	2	Washer
17	79–3430–03	1	Rod
17	92–9778–03	1	Rod–Lift W/ Safety Decal
18	79–7090	1	Clip–Retainer
19	85–7480	1	Decal–Warning
20	92–9777–01	1	ASM–Auger Hsg/Decal
21	63–2380	2	Decal–Danger
22	92–8652	1	Decal–Warning

Ref. No.	Part No.	Qty.	Description
23	323–6	4	Screw–HH
25	86–5100	1	Decal–Warning

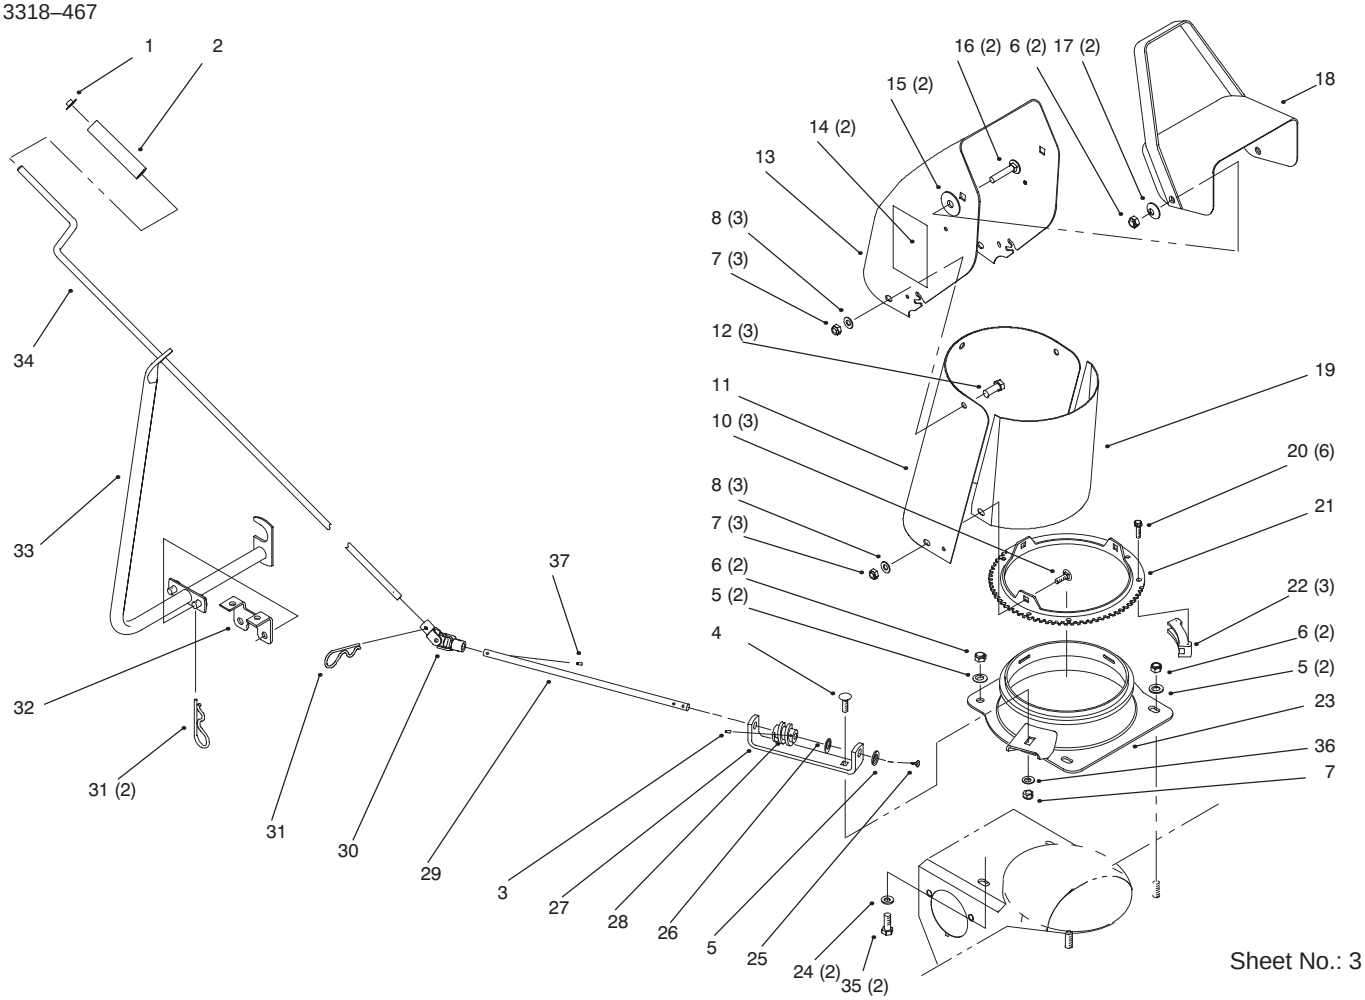


Sheet No.: 3

Chute Assembly

Ref. No.	Part No.	Qty.	Description
1	3290–320	1	Nut–Push
2	40–8230	1	Grip–Control
3	32121–50	1	Pin–Roll
4	3230–2	1	Screw–CARR
5	3256–24	5	Washer–Flat
6	3296–39	6	Nut–Lock
7	3296–29	7	Nut–Lock
8	3256–23	6	Washer–Flat
10	3230–1	3	Screw–CARR
11	26–1110–01	1	Extender–Chute
12	322–2	3	Screw–HH
13	94–1832	1	ASM Chute/Decal
14	94–8078	2	Decal–Danger
15	20–4320	2	Washer–Rubber
16	3231–2	2	Screw–CARR
17	3290–340	2	Washer–Spring
18	11–7120–01	1	Deflector
19	94–2997–01	1	Shield–Deflector
20	27–0220	6	Screw–Special HWH
21	78–0160–01	1	Ring–Swivel
22	25–5450	3	Retainer–Chute
23	78–0330–01	1	Adapter
24	9202414	2	Washer–Flat
25	3272–10	1	Pin–Cotter
26	3290–212	1	Washer–Wave
27	79–3770–03	1	Bracket–Gear

Ref. No.	Part No.	Qty.	Description
28	8–8600	1	Gear–Worm
29	92–7046	1	Rod
30	94–2686	1	ASM–Joint
31	9335054	3	Hairpin
32	78–0441–03	1	Bracket
33	92–7043–03	1	Support
34	79–4090	1	Rod–Control
35	323–6	2	Screw–HH
36	3290–238	1	Washer–Pyramid
37	32121–47	1	Pin–Roll

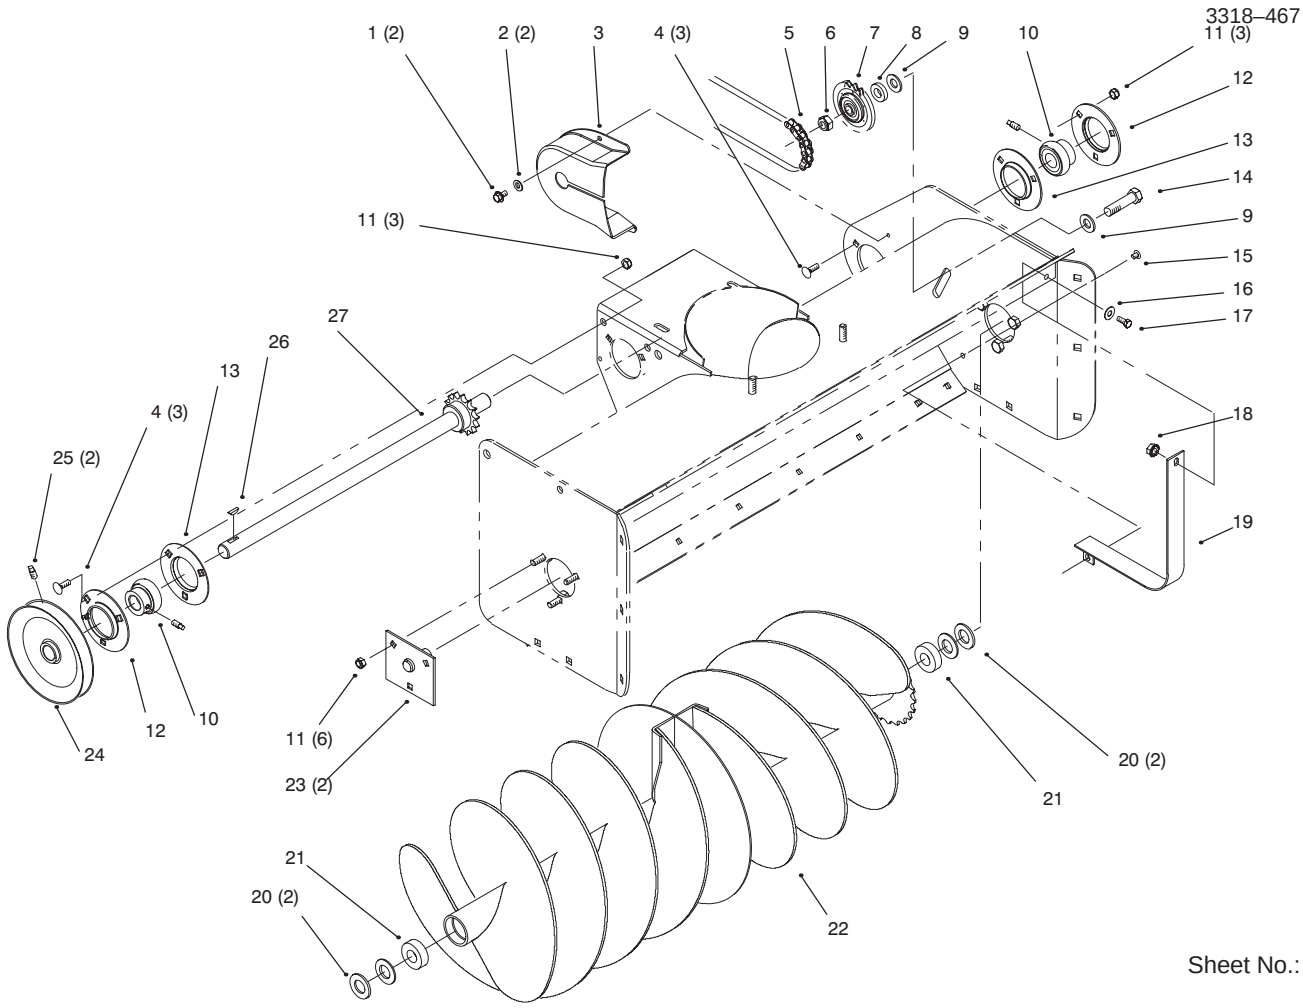


Sheet No.: 4

Auger Assembly

Ref. No.	Part No.	Qty.	Description
1	9266714	2	Screw–HWHTF
2	3256–22	2	Washer–Flat
3	79–4000	1	Guard–Chain
4	3230–1	6	Screw–CARR
5	115165	1	Chain
6	3296–23	1	Nut–Lock
7	93–1614–01	1	Sprocket–Idler
8	6417	1	Spacer–Flat
9	3256–26	2	Washer–Flat
10	110569	2	Bearing & Collar
11	3296–29	12	Nut–Lock
12	110567	2	Flange–Relube W/Zerk
13	110568	2	Flange–Plain
14	325–8	1	Screw–HH
15	1391	1	Screw
16	3256–2	1	Washer–Flat
17	321–3	1	Screw–HH
18	32149–2	1	Nut–Hex Lock
19	93–1619–01	1	Guard
20	3256–28	4	Washer–Flat
21	101480	2	Bearing–Ball
22	93–1615–01	1	Auger
23	93–1618–01	2	Support
24	94–2998	1	Pulley
25	3242–2	2	Screw Set

Ref. No.	Part No.	Qty.	Description
26	937159	1	Key
27	79–4840–01	1	Shaft W/Sprocket

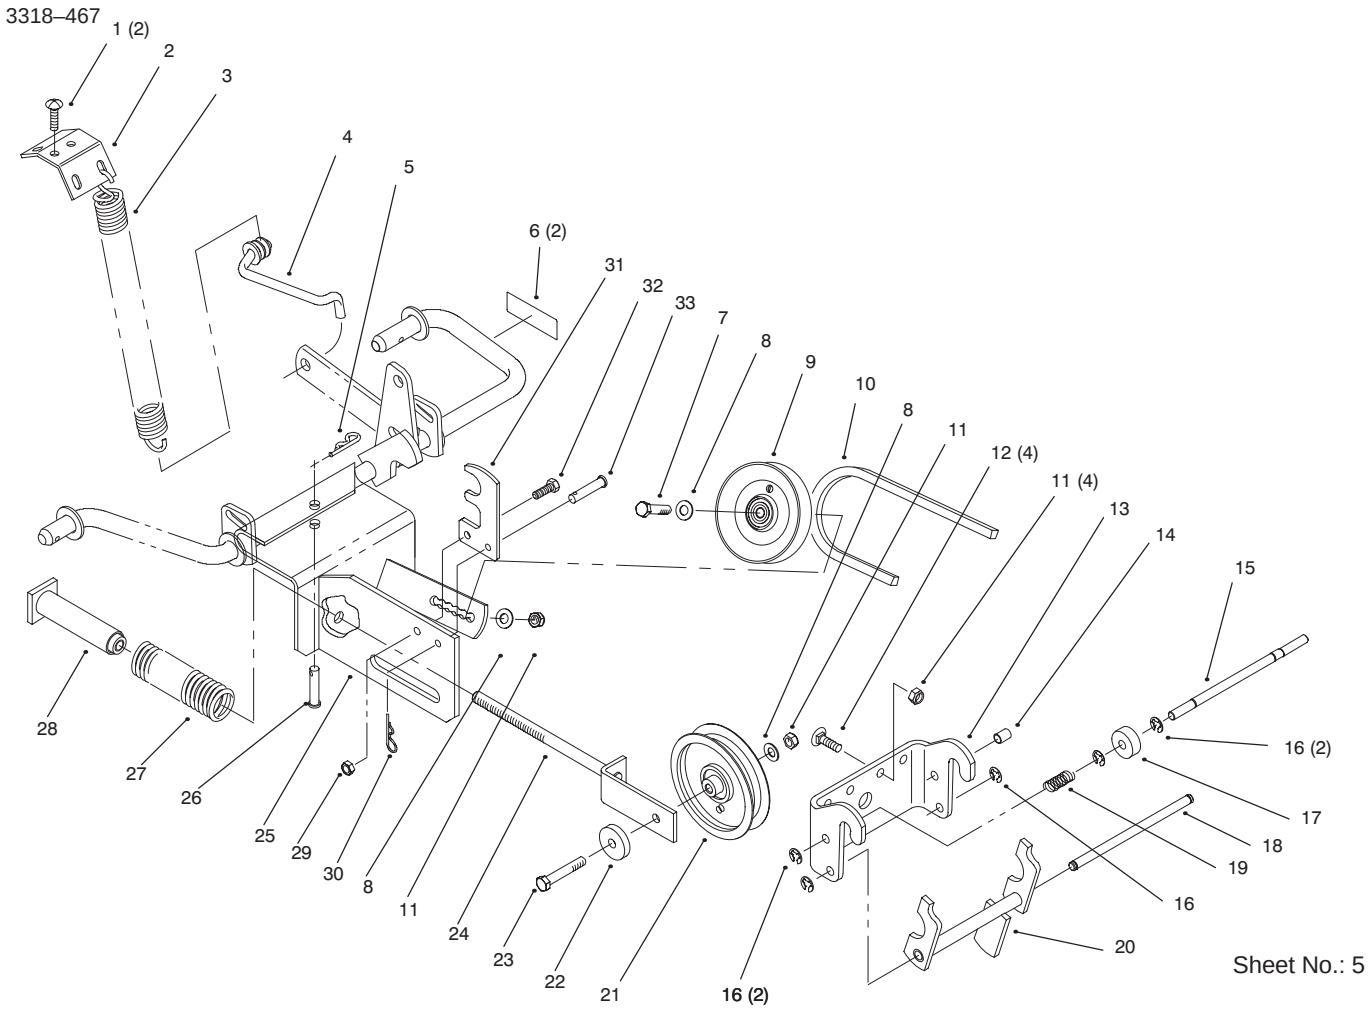

Pulley and Hitch Assembly

Ref. No.	Part No.	Qty.	Description
1	3230–3	2	Screw–CARR
2	93–1123–03	1	Bracket
3	92–9821	1	Spring–Extension
4	93–3161	1	Rod
5	9335054	1	Hairpin
6	85–7490	2	Decal–Warning
7	323–9	1	Screw–HH
8	3256–24	3	Washer–Flat
9	92–7099	1	Pulley–Idler
10	94–2879	1	Belt–V
11	3296–39	6	Nut–Lock
12	3231–22	4	Bolt–CARR
13	78–1720–01	1	Hitch–Front
14	105316	1	Cap–Rod
15	101751	1	Rod–Lock
16	105797	5	Ring–Ext Ret
17	101707	1	Lock–Attachment
18	101750	1	Rod–Latch Pivot
19	8616	1	Spring
20	93–1613	1	Latch
21	94–1737	1	Pulley–Flat Idler
22	79–3720	1	Bushing
23	323–11	1	Screw
24	94–1740	1	Idler Slide
25	94–1736–03	1	Idler Support
26	9329664	1	Pin–Clevis

Ref. No.	Part No.	Qty.	Description
27	93–1621	1	Spring–Compression
28	79–3270–03	1	Spring Tensioner
29	3296–29	1	Nut–Lock
30	9335044	1	Hairpin
31	93–0528–03	1	Catch–Idler Support
32	322–5	1	Screw–HH
33	9321204	1	Pin–Clevis

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1391	3	15	1	Screw
6417	3	8	1	Spacer–Flat
8616	4	19	1	Spring
101480	3	21	2	Bearing–Ball
101707	4	17	1	Lock–Attachment
101750	4	18	1	Rod–Latch Pivot
101751	4	15	1	Rod–Lock
105316	4	14	1	Cap–Rod
105797	4	16	5	Ring–Ext Ret
110567	3	12	2	Flange–Relube W/Zerk
110568	3	13	2	Flange–Plain
110569	3	10	2	Bearing & Collar
115165	3	5	1	Chain
937159	3	26	1	Key
9202324	1	16	2	Washer
9202414	2	24	2	Washer–Flat
9266714	3	1	2	Screw–HWHTF
9321204	4	33	1	Pin–Clevis
9329664	4	26	1	Pin–Clevis
9335044	4	30	1	Hairpin
9335054	2	31	3	Hairpin
9335054	4	5	1	Hairpin
9335064	1	13	2	Hairpin
8–8600	2	28	1	Gear–Worm
11–7120–01	2	18	1	Deflector
20–4320	2	15	2	Washer–Rubber
25–5450	2	22	3	Retainer–Chute
26–1110–01	2	11	1	Extender–Chute
27–0220	2	20	6	Screw–Special HWH
40–8230	2	2	1	Grip–Control
63–2380	1	21	2	Decal–Danger
78–0160–01	2	21	1	Ring–Swivel
78–0330–01	2	23	1	Adapter
78–0441–03	2	32	1	Bracket
78–1720–01	4	13	1	Hitch–Front
79–3251–03	1	15	1	Rod
79–3270–03	4	28	1	Spring Tensioner
79–3430–03	1	17	1	Rod
79–3720	4	22	1	Bushing
79–3770–03	2	27	1	Bracket–Gear
79–4000	3	3	1	Guard–Chain
79–4090	2	34	1	Rod–Control
79–4840–01	3	27	1	Shaft W/Sprocket
79–6170–01	1	9	1	Scraper
79–6800–01	1	1	1	Mounting Frame
79–7090	1	18	1	Clip–Retainer
85–7480	1	19	1	Decal–Warning
85–7490	4	6	2	Decal–Warning
86–5100	1	25	1	Decal–Warning
92–7043–03	2	33	1	Support
92–7046	2	29	1	Rod
92–7099	4	9	1	Pulley–Idler
92–8652	1	22	1	Decal–Warning
92–8748	1	4	1	Decal–Attachment
92–9777–01	1	20	1	ASM–Auger Hsg/Decal
92–9778–03	1	17	1	Rod–Lift W/ Safety Decal
92–9821	4	3	1	Spring–Extension
93–0528–03	4	31	1	Catch–Idler Support
93–1123–03	4	2	1	Bracket
93–1613	4	20	1	Latch
93–1614–01	3	7	1	Sprocket–Idler
93–1615–01	3	22	1	Auger

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93–1616–01	1	5	1	Plate–Extension
93–1617–01	1	7	2	Plate–Extension
93–1618–01	3	23	2	Support
93–1619–01	3	19	1	Guard
93–1620–01	1	14	2	Skid
93–1621	4	27	1	Spring–Compression
93–3161	4	4	1	Rod
94–1736–03	4	25	1	Idler Support
94–1737	4	21	1	Pulley–Flat Idler
94–1740	4	24	1	Idler Slide
94–1832	2	13	1	ASM Chute/Decal
94–2686	2	30	1	ASM–Joint
94–2879	4	10	1	Belt–V
94–2997–01	2	19	1	Shield–Deflector
94–2998	3	24	1	Pulley
94–8078	2	14	2	Decal–Danger
321–3	3	17	1	Screw–HH
322–2	2	12	3	Screw–HH
322–5	4	32	1	Screw–HH
323–6	1	23	4	Screw–HH
323–6	2	35	2	Screw–HH
323–9	4	7	1	Screw–HH
323–11	4	23	1	Screw
325–8	3	14	1	Screw–HH
3229–25	1	8	9	Screw–CARR
3230–1	2	10	3	Screw–CARR
3230–1	3	4	6	Screw–CARR
3230–2	2	4	1	Screw–CARR
3230–3	4	1	2	Screw–CARR
3231–2	1	6	13	Screw–CARR
3231–2	2	16	2	Screw–CARR
3231–22	4	12	4	Bolt–CARR
3242–2	3	25	2	Screw Set
3256–2	3	16	1	Washer–Flat
3256–22	1	10	9	Washer–Flat
3256–22	3	2	2	Washer–Flat
3256–23	2	8	6	Washer–Flat
3256–24	1	3	13	Washer–Flat
3256–24	2	5	5	Washer–Flat
3256–24	4	8	3	Washer–Flat
3256–26	3	9	2	Washer–Flat
3256–27	1	12	1	Washer–Flat
3256–28	3	20	4	Washer–Flat
3272–10	2	25	1	Pin–Cotter
3290–212	2	26	1	Washer–Wave
3290–238	2	36	1	Washer–Pyramid
3290–320	2	1	1	Nut–Push
3290–340	2	17	2	Washer–Spring
3296–23	3	6	1	Nut–Lock
3296–29	2	7	7	Nut–Lock
3296–29	3	11	12	Nut–Lock
3296–29	4	29	1	Nut–Lock
3296–39	1	2	17	Nut–Lock
3296–39	2	6	6	Nut–Lock
3296–39	4	11	6	Nut–Lock
3296–42	1	11	9	Nut–Lock
32121–47	2	37	1	Pin–Roll
32121–50	2	3	1	Pin–Roll
32149–2	3	18	1	Nut–Hex Lock

*Not Illustrated

3318—467

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								