FORM NO. 3318–470

LAWN-BOY®

21” SILVER SERIES WALK–BEHIND MOWER

MODEL NO.10202–6900001 & UP
MODEL NO.10302–6900001 & UP
MODEL NO.10310–6900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page
4 Cycle Engine, Fuel Tank And Blade Assembly	1
Deck And Wheel Assembly (Model No. 10202 Only)	2
Deck And Wheel Assembly (Model No.10302 & 10310 Only)	3
Rear Axle Assembly (Model No.10302 & 10310 Only)	4
Gear Case Assembly (Model No. 10302 & 10310 Only)	5
Handle Assembly	6
Rear Catcher Assembly (Model No.10310 Only)	7
Engine Assembly, TVS115–57904D	8–10
Carburetor No. 632078A	11
Rewind Starter No. 590702	12
Recoil Starter Assembly 590739 (Optional)	13
Numeric Parts Index	14–15
Maintenance Record	16–18

Accessories

Description	Model / Parts No.
Side Catcher Assembly	89814
Leaf Shredder Attachment	89860
Replacement Bags	
Leaf Bag	89804
Leaf Bag Kit w/Chute	89811
Rear Catcher Assembly (Model No. 10310 Standard) (Model No. 10202 & 10302 Optional)	89800
Mow & Feed Fertilizer Spreader	52070

©Lawn–Boy, Inc.–1995
All Rights Reserved

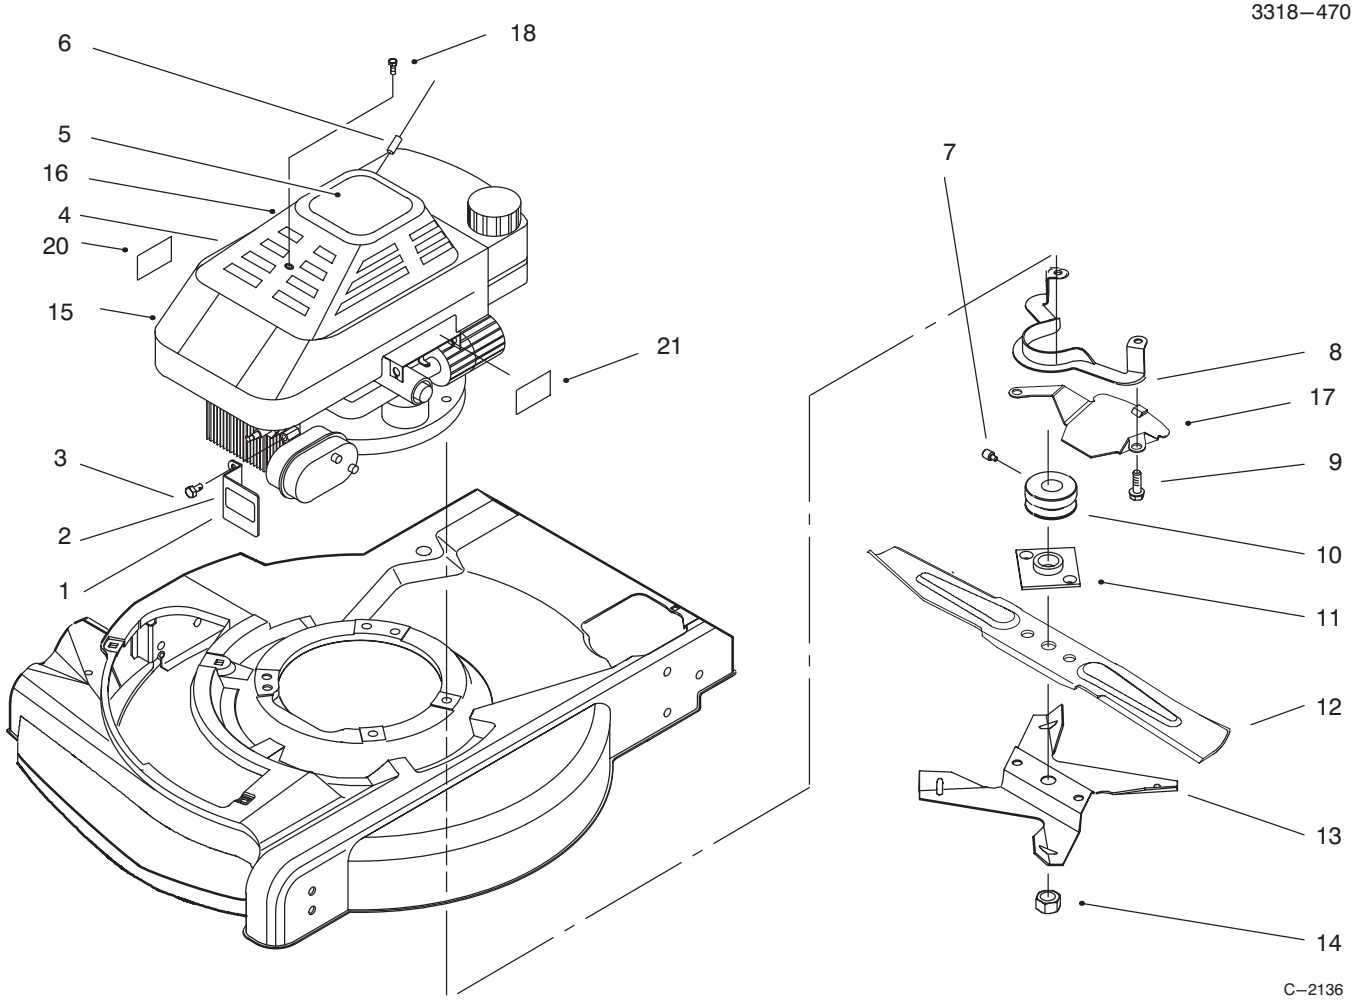


4 CYCLE ENGINE, FUEL TANK & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	16–2139	Guard – Muffler (Incl. Ref.#2)	1
2	65–2690	Decal – Warning	1
3	3274–52	Screw	2
4		Engine – 4 Cycle	1
5	92–8644	Decal – Shroud (Model No. 10202 Only)	1
*	92–8643	Decal – Shroud (Model No. 10302 & 10310 Only)	1
6	92–1701	Stop – Rope	1
7	613227	Screw – Set (Model No. 10302 & 10310 Only)	1
8	92–1024	Guide – Belt (Model No. 10302 & 10310 Only)	1

Ref. No.	Part No.	Description	No. Used
9	92–1624	Screw – Engine Mount	3
10	92–9575	Pulley – Engine (Model No. 10302 & 10310 Only)	1
11	677525	Plate & Collar Ass'y	1
12	612543	Blade – 21"	1
13	92–1630	Fan – Mulching	1
14	603164	Nut – Blade	1
15	92–4855	Shroud – Engine	1
16	92–4854	Cover – Recoil	1
17	93–4196	Shield – Grass	1
18	92–4852	Screw	4
20	92–4851	Decal – Oil (Model No. 10302 & 10310 Only)	1
21	94–8083	Decal – Primer	1

*Not Illustrated

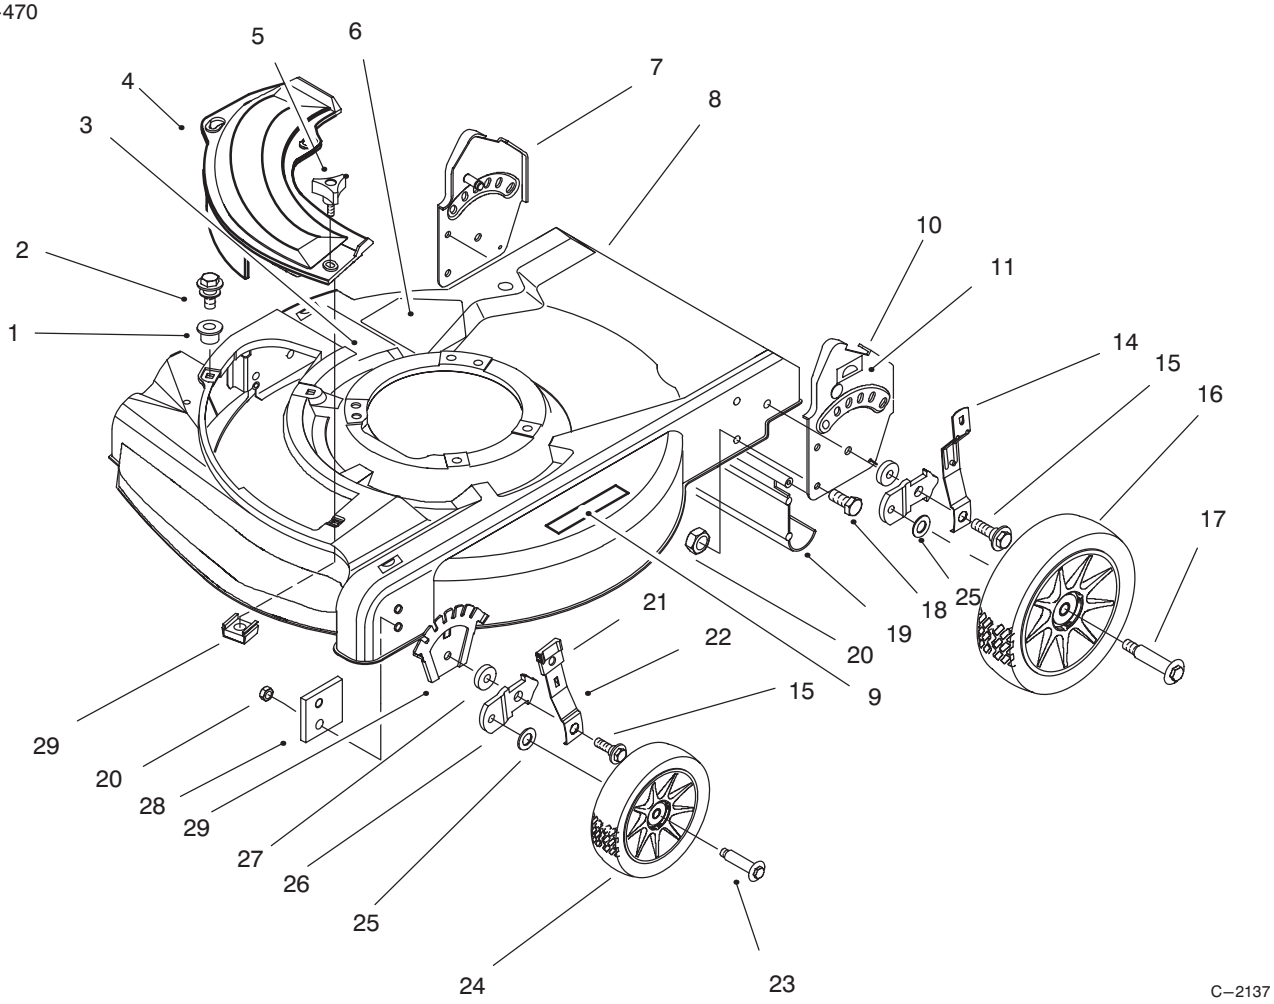


DECK & WHEEL ASSEMBLY
(Model No. 10202 Only)

Ref. No.	Part No.	Description	No. Used
1	604604	Grommet – Plastic	2
2	614677	Screw – Thread Forming	2
3	92–1097	Decal – Danger	1
4	92–8630	Plate – Cover, Mulch	1
*	607560	Plate – Cover	1
5	614682	Knob	1
6	39–5770	Decal – Danger	1
7	92–7742	Handle Bracket Ass'y – RH	1
8	16–4359	Housing & Baffle Ass'y (Incl. Ref. #1–3, 6, & 9	1
9	93–7250	Decal – Warning	1
*	93–7253	Decal – Warning (French)	1
10	92–7743	Handle Bracket Ass'y – LH	1
11	92–2915	Decal – H. O. C. L.H.	2
*	92–2914	Decal – H. O. C. R.H.	2
14	92–1005	Spring Arm Assembly	2

Ref. No.	Part No.	Description	No. Used
15	614672	Bolt – Shoulder	4
16	684777	Wheel Ass'y – 8"	2
17	614650	Bolt – Wheel	2
18	322–3	Screw	4
19	92–8647	Shield – Trailing	1
20	3296–39	Nut	4
21	92–1008	Knob – H. O. C. Lever	4
22	614687	Arm – Spring, Front	2
23	92–1099	Bolt – Wheel	2
24	684776	Wheel Ass'y – 6"	2
25	40–1940	Washer – Wheel Bolt	4
26	614637	Bracket – H. O. C.	4
27	92–4890	Washer	4
28	92–7731	Plate – Baffle	2
29	92–4881	Plate – H. O. C. Front	2
30	613765	Nut – Cage	1

*Not Illustrated

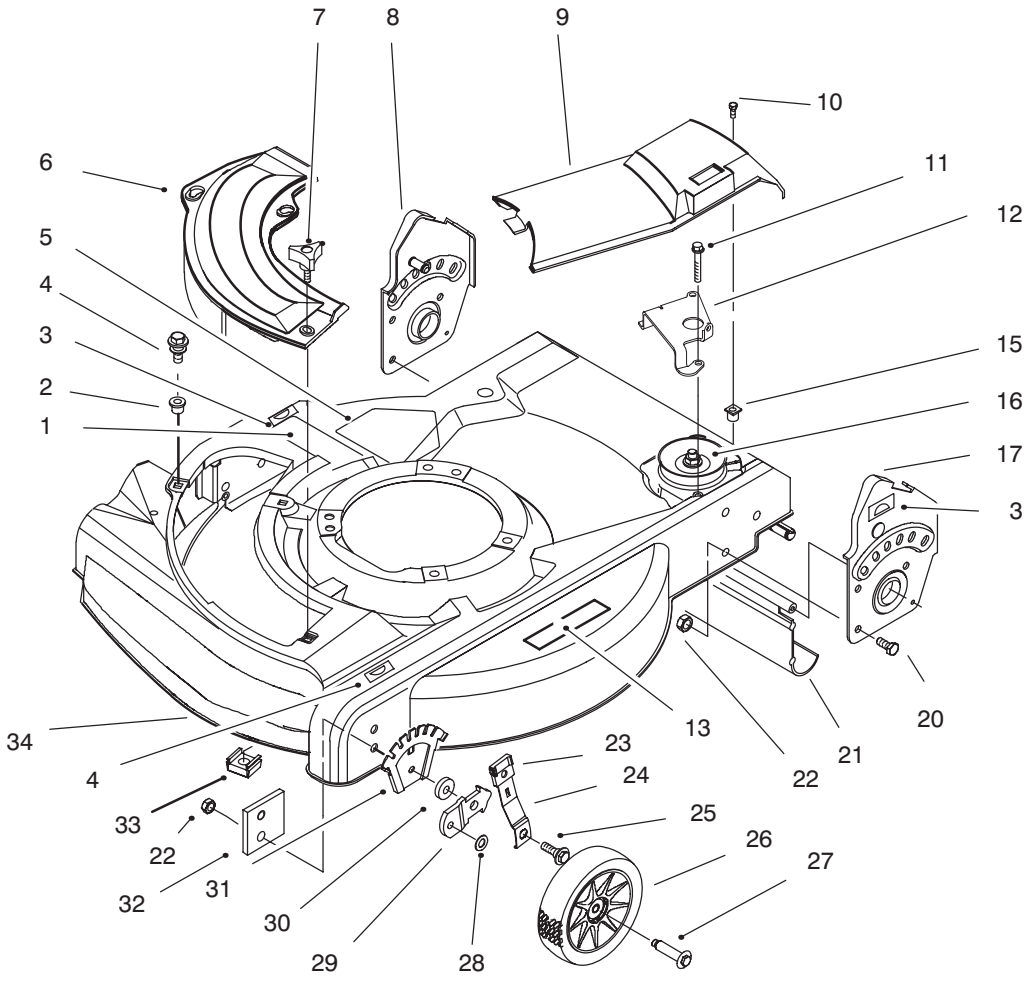

C–2138


DECK & WHEEL ASSEMBLY
(Model No. 10302 & 10310 Only)

Ref. No.	Part No.	Description	No. Used
1	92–1097	Decal – Danger	1
2	604604	Grommet – Plastic	2
3	92–2915	Decal – H. O. C. L.H.	2
*	92–2914	Decal – H. O. C. R.H.	2
4	614677	Screw – Thread Forming	2
5	39–5770	Decal – Danger	1
6	92–8630	Plate – Cover, Mulch	1
*	607560	Plate – Cover	1
7	614682	Knob	1
8	92–7723	Handle Bracket Ass'y – RH	1
9	614671	Cover – Drive	1
10	92–9665	Screw	1
11	49–2040	Screw – Thread Forming	2
12	92–7728	Guide – Transmission	1
13	93–7250	Decal – Warning	1
*	93–7253	Decal – Warning (French)	1
15	605120	Grommet – Shroud Mtg.	1
16	92–7735	Gear Case Ass'y	1

Ref. No.	Part No.	Description	No. Used
17	92–7724	Handle Bracket Ass'y – L.H.	1
20	322–3	Screw – Hex. Hd.	6
21	92–8647	Shield – Trailing	1
22	3296–29	Nut	6
23	92–1008	Knob – H. O. C.	2
24	614687	Arm – Spring	2
25	614672	Bolt – Shoulder	2
26	684776	Wheel Assembly – 6"	2
27	92–1099	Bolt – Wheel	2
28	40–1940	Washer	2
29	614637	Bracket – H. O. C.	2
30	92–4890	Washer	2
31	92–4881	Plate H. O. C.	2
32	92–7731	Plate – Baffle	1
33	613765	Nut – Cage	1
34	16–4369	Housing & Baffle Ass'y (Incl. Ref. # 1–5, & 13)	1

*Not Illustrated

3318–470

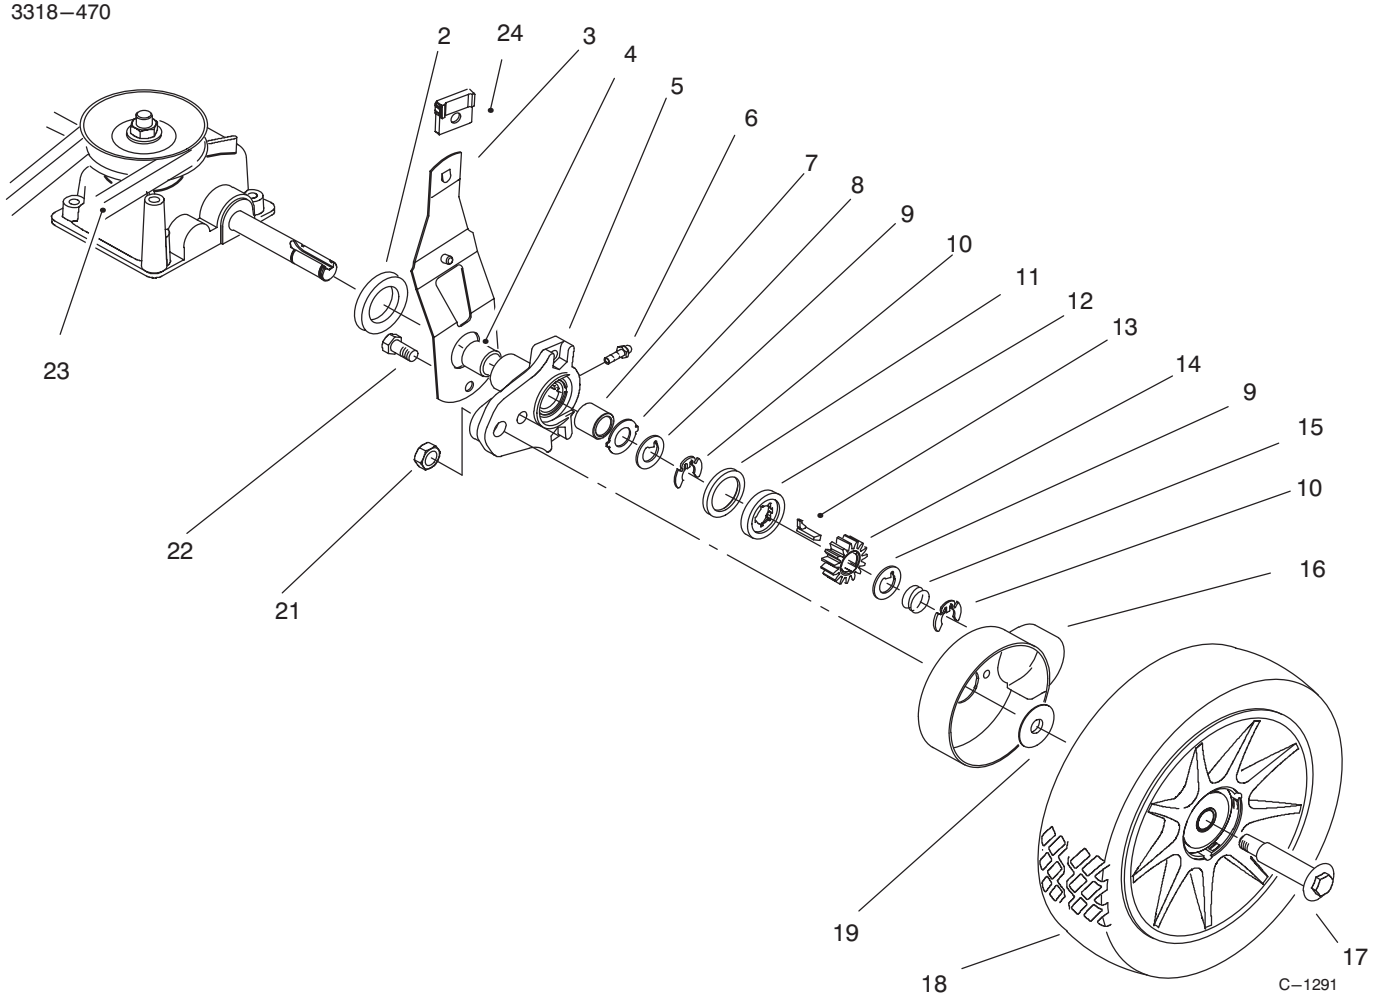


REAR AXLE ASSEMBLY
(Model No. 10302 & 10310 Only)

Ref. No.	Part No.	Description	No. Used
2	614447	Spacer – Axle Shaft	2
3	92–1004	Spring Arm Ass'y	2
4	70–9760	Bushing	2
5	92–7746	Pivot Arm Ass'y – Rear (Incl. Ref.#4, 6, & 8)	2
6	614442	Fitting – Grease	2
7	47–2900	Bushing	2
8	65–4730	Washer – Thrust Pivot Arm	2
9	65–4740	Washer – Thrust, Keyed	4
10	65–2720	Ring – Klip. Special	4
11	65–4710	Ring – Friction	2
12	65–4760	Washer – Clutch, Plastic	2

Ref. No.	Part No.	Description	No. Used
13	66–6050	Key – Rocking, LH	1
*	66–6040	Key – Rocking, RH	1
14	65–4750	Gear – Pinion	2
15	65–4720	Spring – Compression	2
16	94–1609	Cover Wheel	2
17	92–1057	Bolt – Wheel	2
18	92–1042	Wheel Ass'y – 8"	2
19	614426	Washer – Stepped	2
21	610358	Nut	2
22	32144–85	Screw	2
23	93–7381	V–Belt	1
24	92–1008	Knob	2

*Not Illustrated

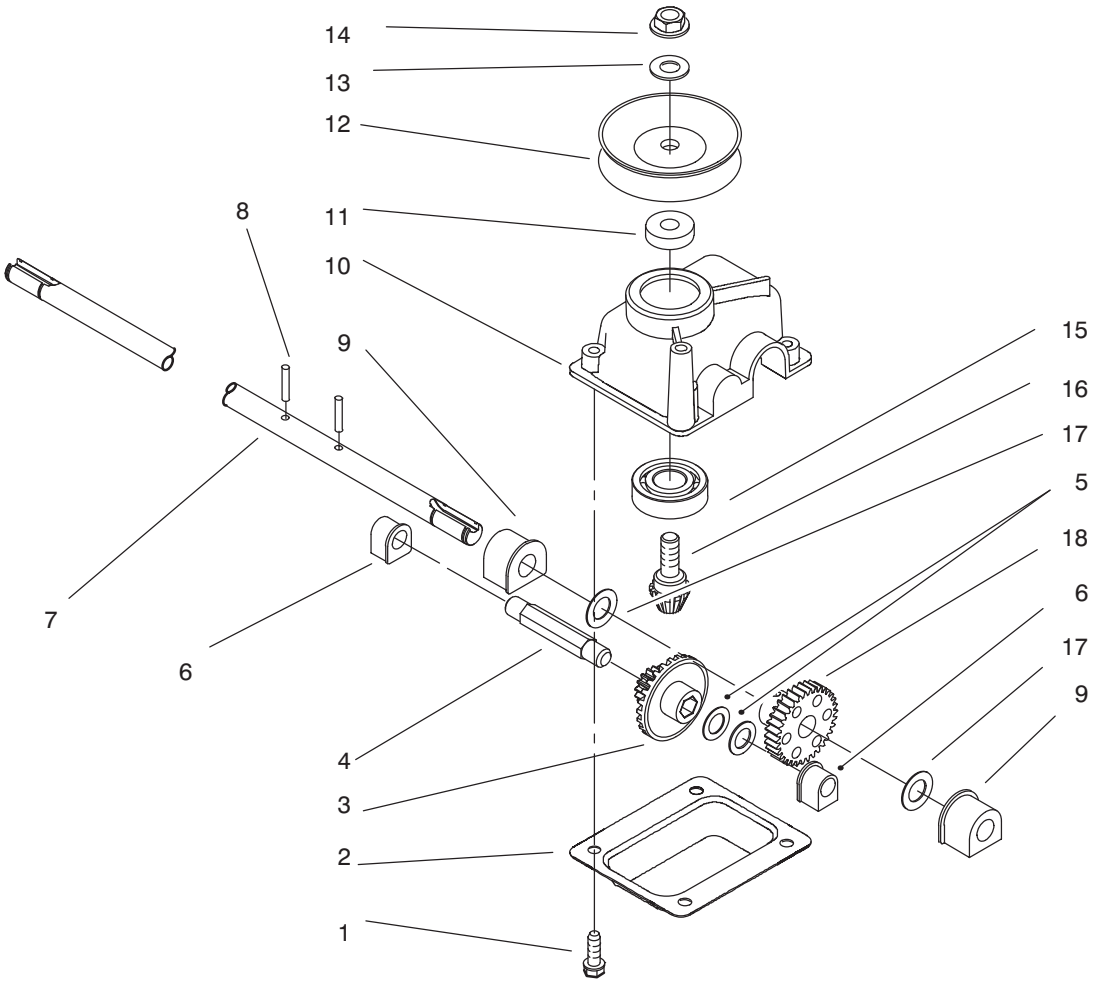


C–1292

GEAR CASE ASSEMBLY
(Model No. 10302 & 10310 Only)

Ref. No.	Part No.	Description	No. Used
1	32144–4	Screw – Taptite	4
2	614668	Cover – Gear Case	1
3	55–3760	Pinion – 15 Tooth	1
4	614696	Shaft – Intermediate	1
5	36–4791	Washer	2
6	60–8750	Bushing	2
7	93–0239	Shaft – Output	1
8	3285–19	Pin – Groove	2
9	60–8850	Bushing – Output	2

Ref. No.	Part No.	Description	No. Used
10	92–7727	Gearcase	1
11	62–6660	Spacer	1
12	614669	Pulley – Half	2
13	3256–24	Washer	1
14	3296–5	Nut	1
15	38–7820	Bearing – Ball	1
16	60–8890	Gear – Bevel Pinion	1
17	36–4780	Washer – Thrust	2
18	614596	Gear 34 Tooth	1


*Not Illustrated

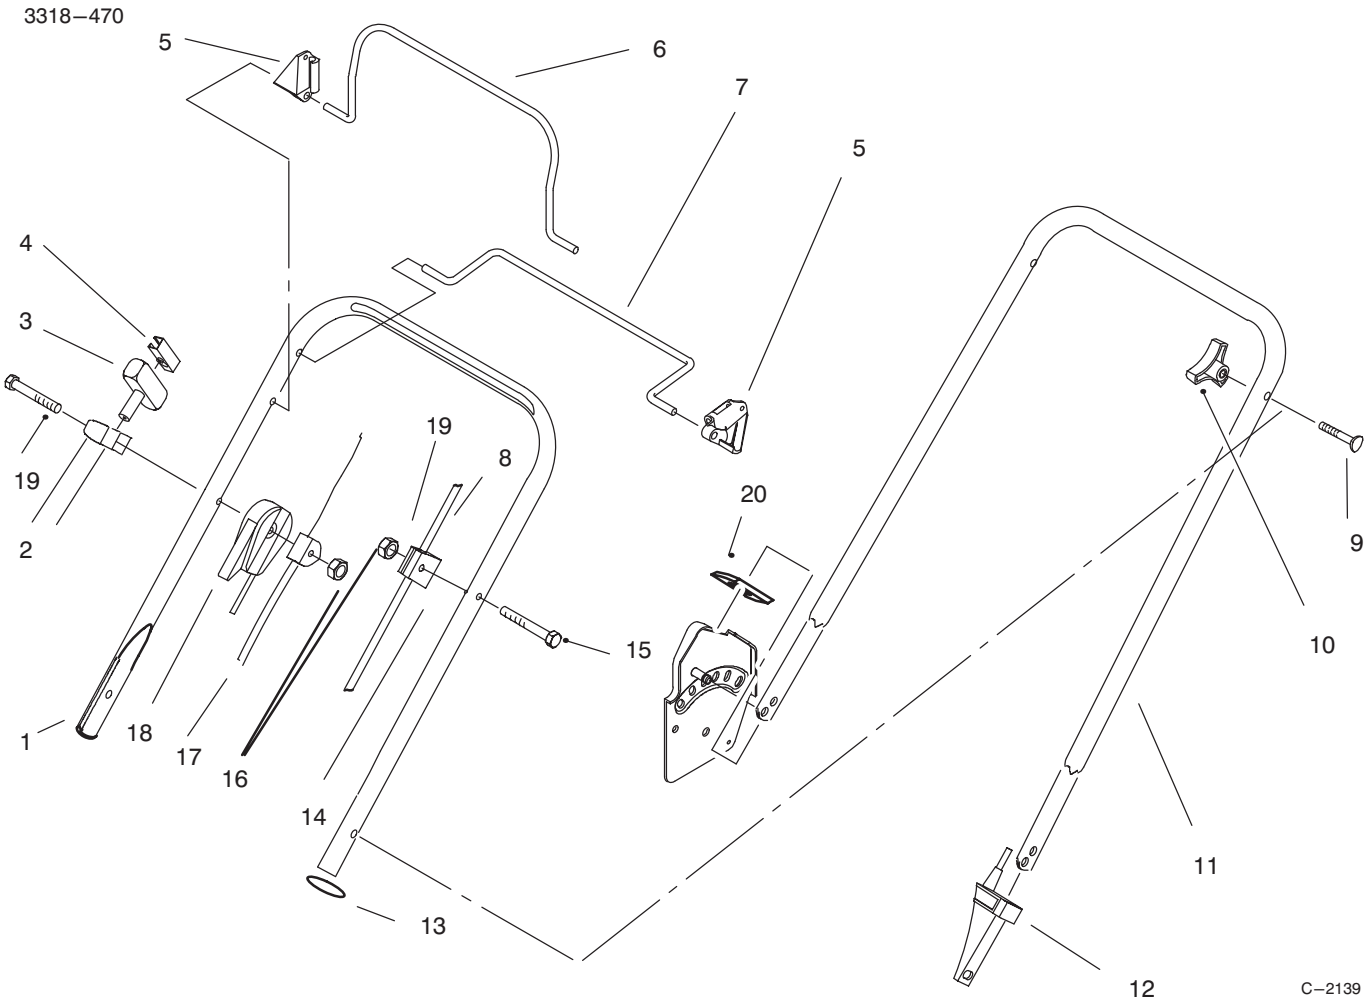

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–4185	Handle – Upper	1
2	93–7383	Guide – Rope	1
3	92–4853	Handle – Starter	1
4	92–5424	Clip – Rope Insert	1
5	92–5412	Stop – Pivot	2
6	93–4184	Bail – Brake	1
7	92–1001	Bail –Control (Model No. 10302 & 10310 Only)	1
8	92–7726	Cable – Traction	1
9	614697	Screw – Handle	2
10	614243	Knob – Handle	2
11	614643	Handle – Lower	1

Ref. No.	Part No.	Description	No. Used
12	93–7380	Anchor – Cable, (Lower) (Model No. 10302 & 10310 Only)	1
13	614249	Tie Strap	A/R
14	92–7729	Anchor – Cable, (Upper) (Model No. 10302 & 10310 Only)	1
15	92–7730	Screw	1
16	614695	Nut	2
17	92–1044	Cable – Brake	1
18	92–1045	Cable – Throttle	1
19	321–49	Screw	1
20	93–3653	Handle–Guard	1

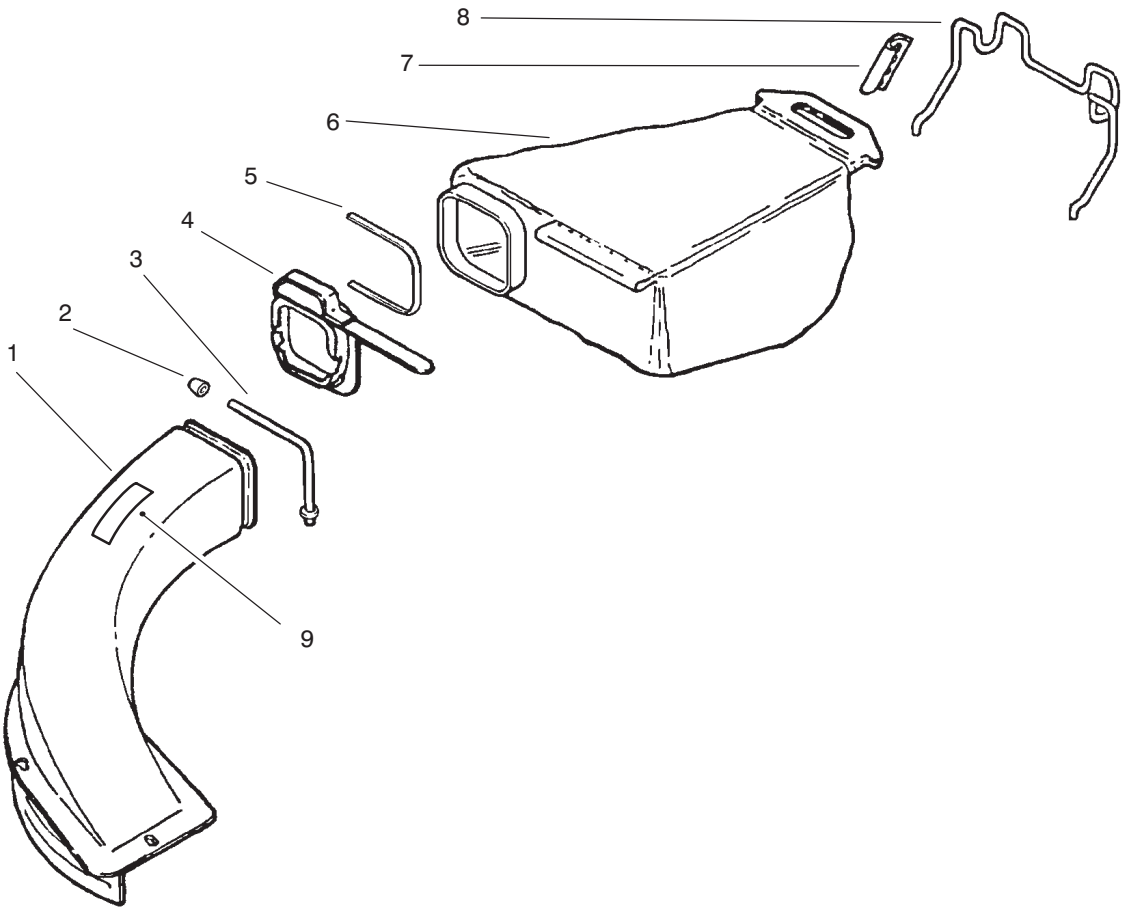


REAR CATCHER ASSEMBLY
(Model No. 10310 Only)

Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assembly (Incl. Ref.# 2,3 & 9)	1
2	614589	Nut – Cap	1
3	614591	Chute Support	1
4	684727	Adaptor Assembly	1
5	614700	Tie Strap	1

Ref. No.	Part No.	Description	No. Used
6	*	Bag Assembly	1
7	613462	Hanger Clamp	2
8	613455	Wide Hanger	1
	613463	Narrow Hanger	1
9	92–2919	Decal – Danger	1

*Includes Ref.#5 and instruction sheet for installing bag to adapter assembly. Order via model #89801.

ENGINE TVS115–57905D

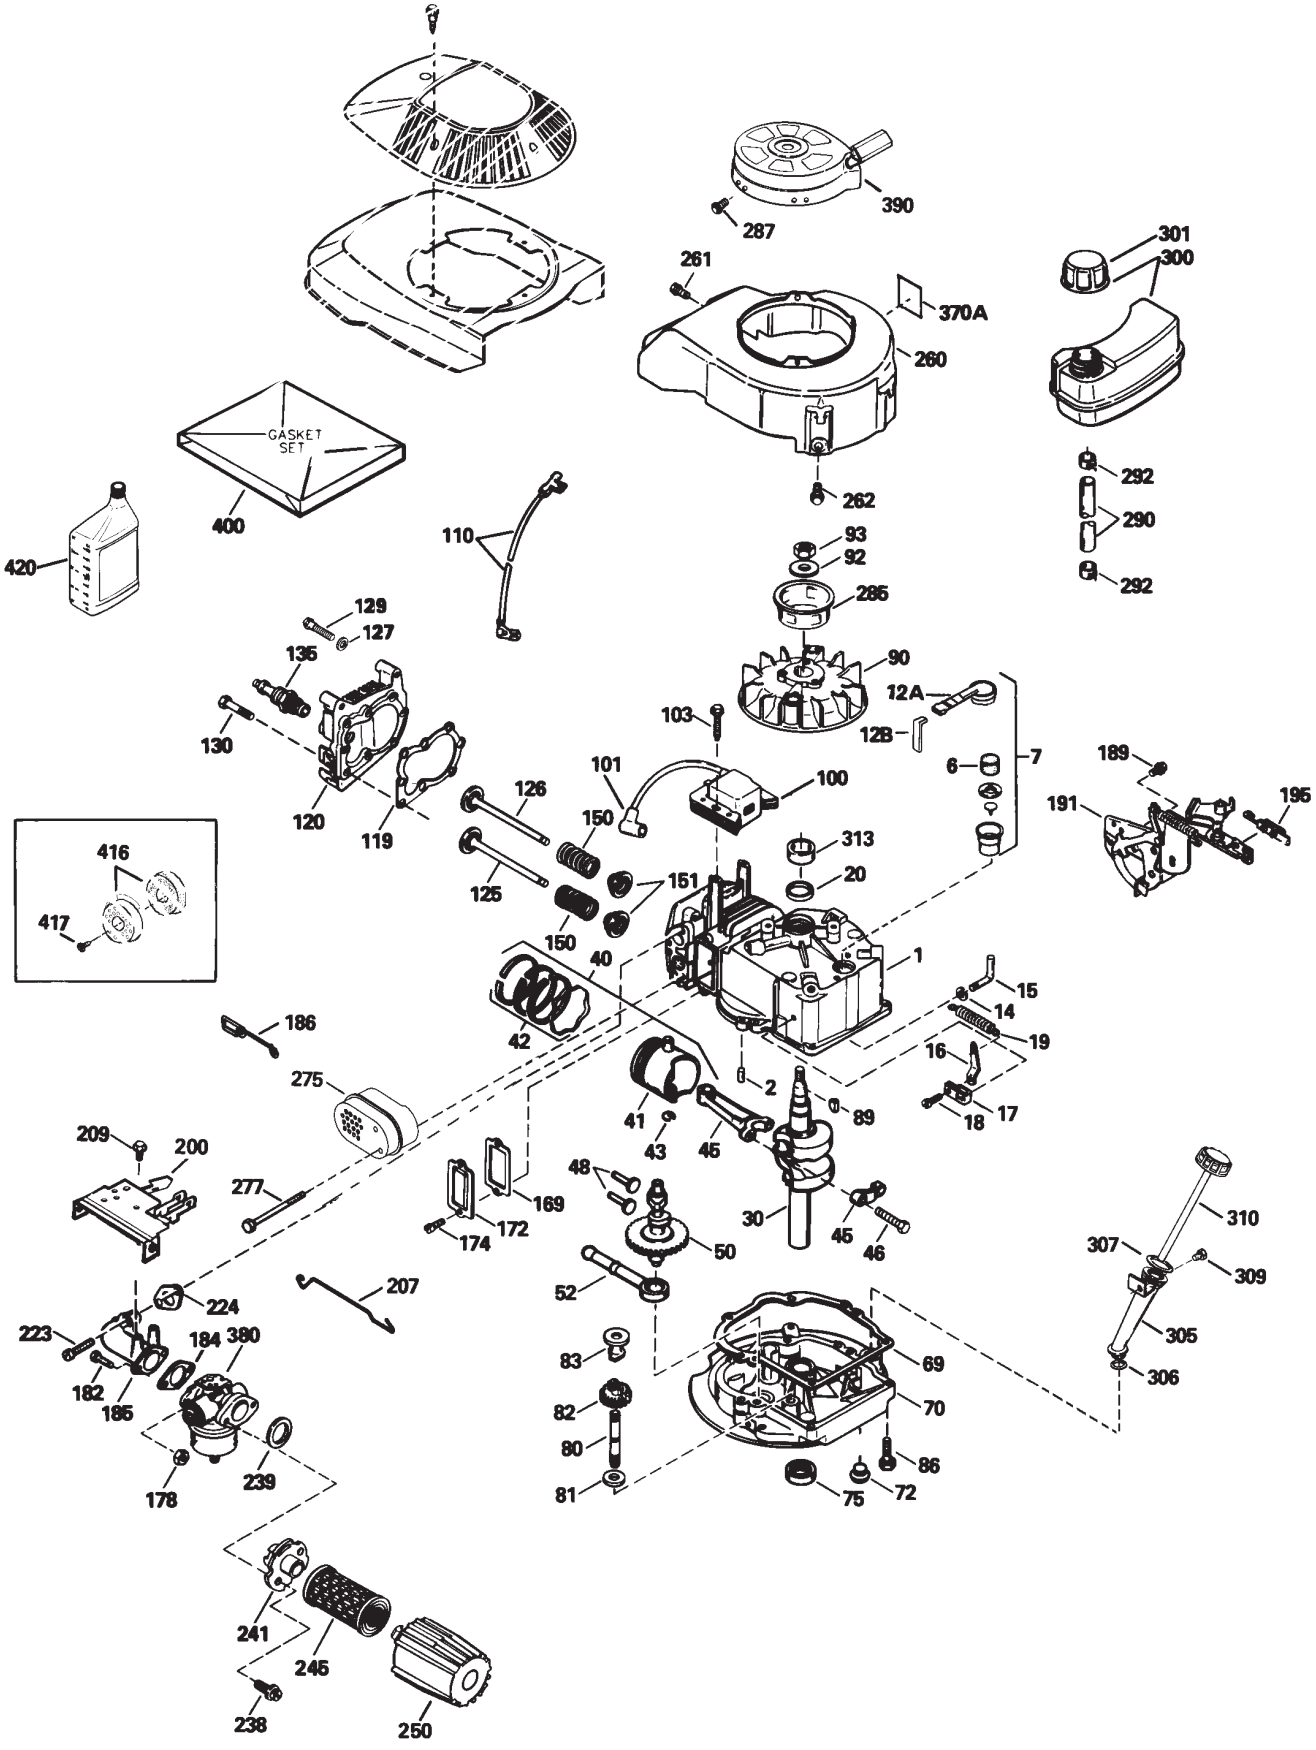


ENGINE TVS115–57905D

Ref. No.	Part No.	Description	No. Used
1	36478A	Cylinder (Incl. 2,7,20 & 125)	1
2	26727	Dowel Pin	2
6	33734	Breather Element	1
7	36557	Breather Body Ass'y. (Incl. 6 & 12A)	1
12A	36558	Breather Cover & Tube (Incl. 12B)	1
12B	34695	Breather Tube Elbow	1
14	28277	Washer	1
15	30589	Governor Rod	1
16	32651	Governor Lever	1
17	31335	Governor Lever Clamp	1
18	650548	Screw, 8–32 x 5/16"	1
19	35998	Extension Spring	1
20	32600	Oil Seal	1
30	36517	Crankshaft	1
40	36073	Piston, Pin & Ring Set (Std.)	1
40	36074	Piston, Pin & Ring Set (.010" OS)	1
40	36075	Piston, Pin & Ring Set (.020" OS)	1
41	36070	Piston & Pin Ass'y. (Std.) (Incl. 43)	1
41	36071	Piston & Pin Ass'y. (.010" OS) (Incl. 43)	1
41	36072	Piston & Pin Ass'y. (.020" OS) (Incl. 43)	1
42	36076	Ring Set (Std.)	1
42	36077	Ring Set (.010" OS)	1
42	36078	Ring Set (.020" OS)	1
43	20381	Piston Pin Retaining Ring	2
45	30963B	Connecting Rod (Incl. 46)	1
46	32610A	Connecting Rod Bolt	2
48	27241	Valve Lifter	2
50	35992	Camshaft (MCR)	1
52	29914	Oil Pump Ass'y.	1
69	35261	Mounting Flange Gasket	1
70	34311D	Mounting Flange (Incl. 72 thru 83)	1
72	36083	Oil Drain Plug	1
75	27897	Oil Seal	1
80	30574A	Governor Shaft	1
81	30590A	Washer	1
82	30591	Governor Gear Ass'y. (Incl. 81)	1
83	30588A	Governor Spool	1
86	650488	Screw	6
89	611004	Flywheel Key	1
90	611112	Flywheel	1
92	650815	Belleville Washer	1
93	650816	Flywheel Nut	1
100	34443A	Solid State Ignition	1
101	610118	Spark Plug Cover	1
103	651007	Screw, Torx T–15	2
110	34961	Ground Wire	1
119	36477	Cylinder Head Gasket	1
120	36476	Cylinder Head	1
125	36471	Exhaust Valve (Std.) (Incl. 151)	1
125	36472	Exhaust Valve (1/32" OS) (Incl. 151)	1
126	29314B	Intake Valve (Std.) (Incl. 151)	1
126	29315C	Intake Valve (1/32" OS) (Incl. 151)	1
127	650691	Washer	2
129	650818	Screw	2
130	6021A	Screw	6
135	35395	Resistor Spark Plug (RJ19LM)	1
150	35991	Valve Spring	2
151	31673	Valve Spring Cap	2
169	27234A	Valve Cover Gasket	1
172	32755	Valve Cover	1
174	30200	Screw	2
178	29752	Nut & Lock Washer	2
182	6201	Screw	2
184	26756	Carburetor To Intake Pipe Gasket	1
185	36544	Intake Pipe	1
186	36255	Governor Link	1
189	650839	Screw	2
191	36559	S.E. Brake Bracket (Incl. 195)	1
195	610973	Terminal	1
200	35999	Control Bracket	1
207	36200	Throttle Link	1
209	30200	Screw	2
223	650451	Screw	2
224	34690A	Intake Pipe Gasket	1
238	650932	Screw	2
239	34338	Air Cleaner Gasket	1
241	35797	Air Cleaner Collar	1
245	35066	Air Cleaner Filter	1
250	35986	Air Cleaner Cover	1
260	35826	Blower Housing	1
261	30200	Screw	2
262	650831	Screw	2
275	36473	Muffler (Incl. 277)	1
277	650988	Screw	2
285	35000A	Starter Cup	1
287	650926	Screw	2
290	34357	Fuel Line	1
292	26460	Fuel Line Clamp	2
300	35586	Fuel Tank (Incl. 292 & 301)	1
301	35355	Fuel Cap	1
305	35819A	Oil Fill Tube	1
306	34265	"O"–Ring	1

ENGINE TVS115–57905D

Ref. No.	Part No.	Description	No. Used
307	35499	”O”–Ring	1
309	651014	Screw, 10–32 x 7/16”	1
310	36259	Dipstick	1
313	34080	Spacer	1
370A	36261	Lubrication Decal	1
380	632078A	Carburetor (Incl. 184)	1
390	590702	Rewind Starter (NOTE: This engine could have been built with 590739 starter. Refer to the design of the rope pulley strength ribs for part identification. Individual starter parts do not interchange. Refer to service bulletin 116.)	1


Ref. No.	Part No.	Description	No. Used
400	36481	Gasket Set (Incl. Items Marked PK in Notes) Incl. part #’s: 26756 (1), 27234A (1), 33735 (1), 34265 (1), 34338 (1), 34690A (1), 35261 (1), 36477 (1)	1
416	36085	Spark Arrestor Kit (Incl. 417) (Optional)	1
417	650760	Screw (Optional)	1
420	730225	SAE 30 4–Cycle Engine Oil (Quart)	1

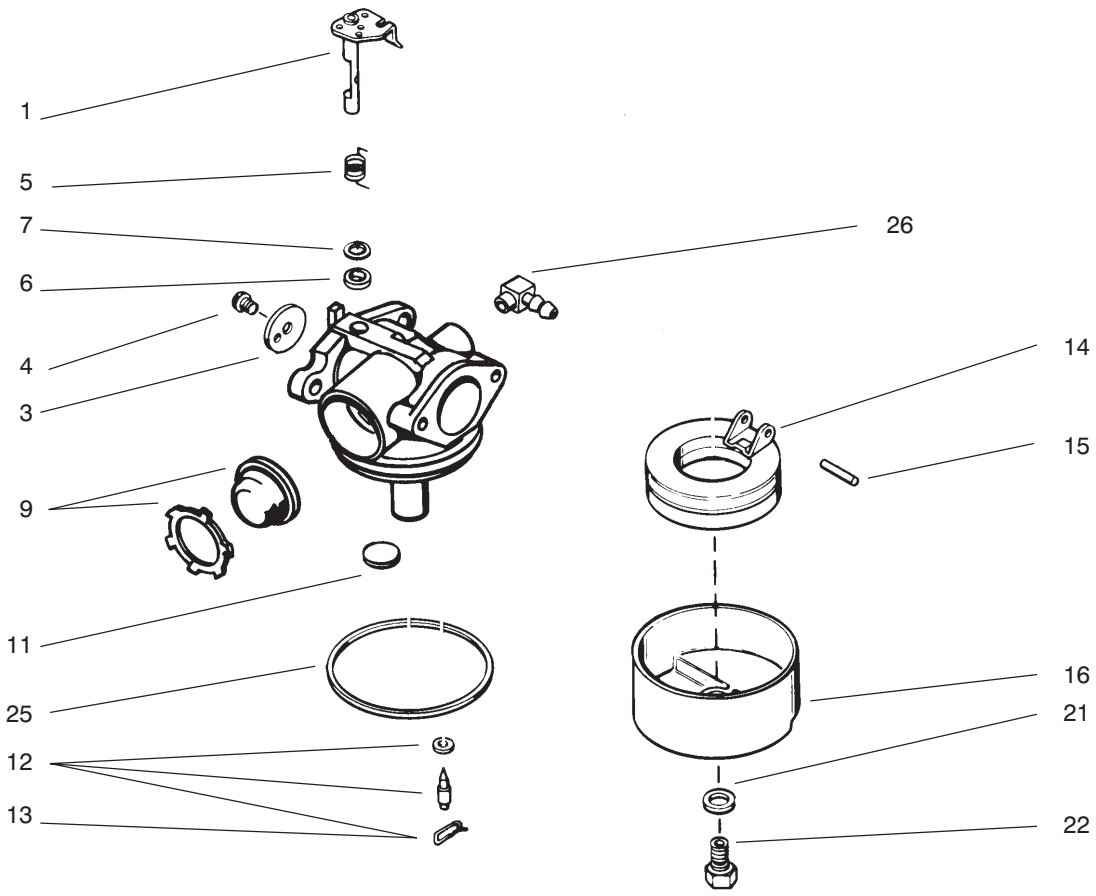

CARBURETOR No. 632078A

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft And Lever Assembly	1
3	631616	Shutter – Throttle	1
4	650506	Screw	1
5	631767	Spring – Return	1
6	631183	Seal – Dust	1
7	631184	Washer –– Flat	1
9	632047	Primer – Bulb & Retainer	1
11	631027	Plug	1
12	631021	Needle Seat & Clip Assy (Incl. Ref. #13)	1


Ref. No.	Part No.	Description	No. Used
13	631022	Clip	1
14	632019	Float – Carburetor	1
15	631024	Shaft – Float	1
16	631700	Bowl – Float	1
21	631334	Gasket – Bowl	1
22	632071	Nut – Bowl	1
25	631028	Gasket – Bowl	1
26	631775	Fitting – Inlet	1

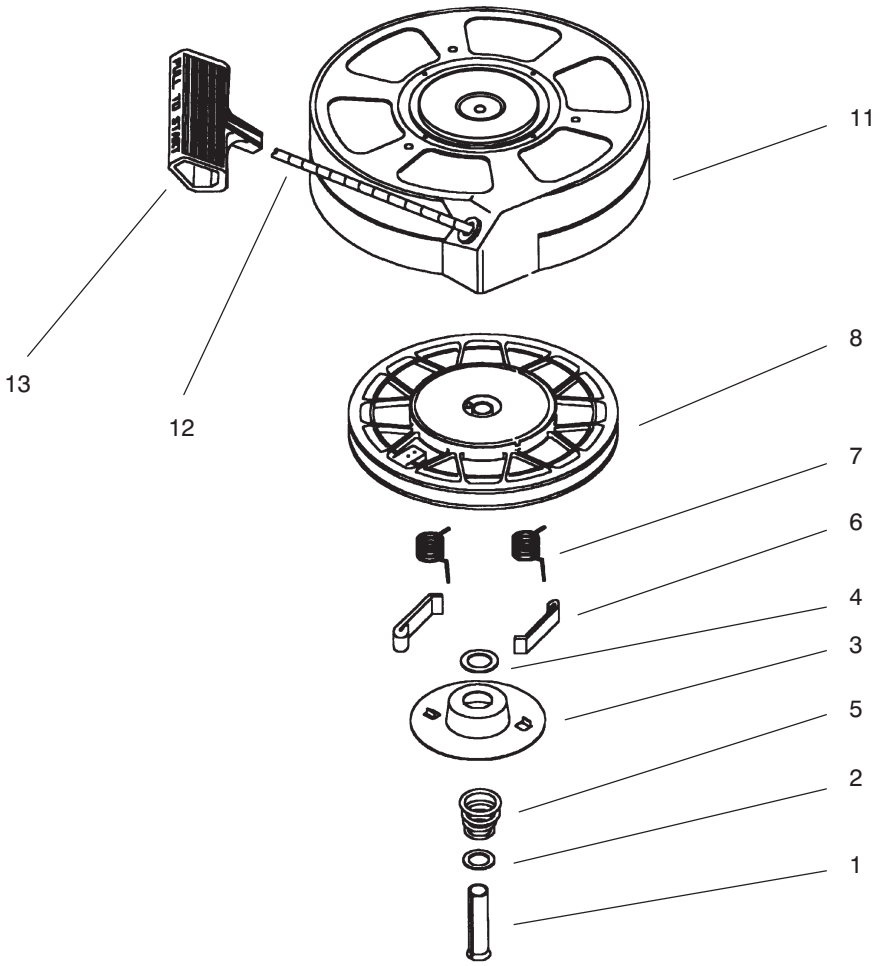

RECOIL STARTER ASSEMBLY 590702

Ref. No.	Part No.	Description	No. Used
0	590702	Recoil Starter	1
1	590599A	Spring Pin (Incl. 4)	1
2	590600	Washer	1
3	590696	Retainer	1
4	590601	Washer	2
5	590697	Brake Spring	1
6	590698	Starter Dog	2
7	590699	Dog Spring	2

Ref. No.	Part No.	Description	No. Used
8	590700	Pulley & Rewind Spring Ass'y.	1
11	590703	Starter Housing Ass'y (40 degree grommet)	1
12	590535	Starter Rope (98" X 9/64" dia.)	1
13	590701	Starter Handle	1

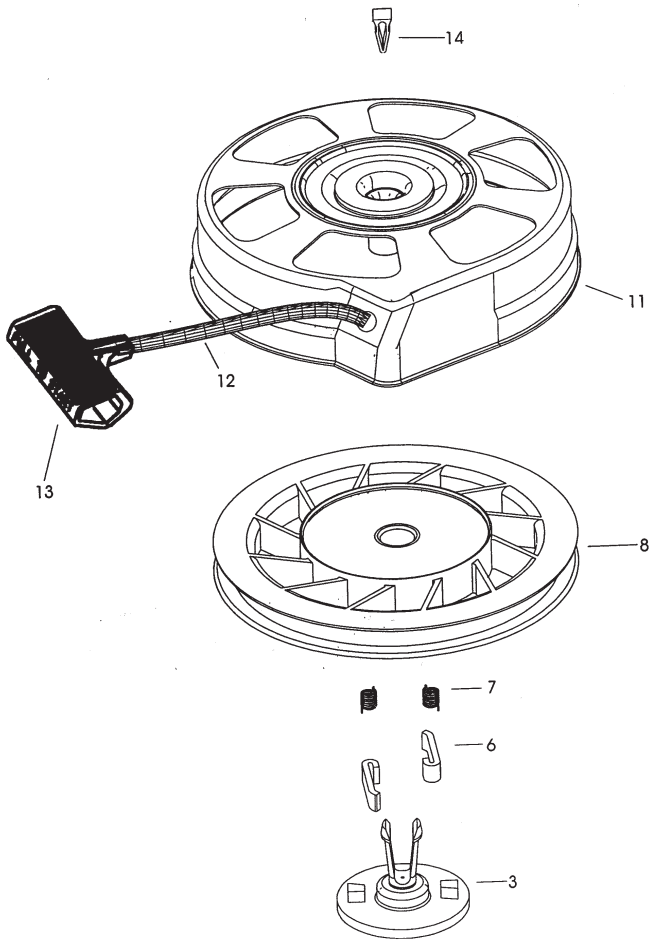

RECOIL STARTER ASSEMBLY 590739 (Optional)

Ref. No.	Part No.	Description	No. Used
0	590739	Rewind Starter	1
3	590740	Retainer	1
6	590616	Starter Dog	2
7	590617	Dog Spring	2
8	590618A	Pulley & Rewind Spring Ass'y	1

Ref. No.	Part No.	Description	No. Used
11	590638	Starter Housing Ass'y (40 degree grommet)	1
12	590535	Starter Rope (Length 98" x 9/64" dia.)	1
13	590701	Starter Handle	1
14	590741	Locking Tab	1

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
*	Bag Assembly	7	6	1
603164	Nut – Blade	1	14	1
604604	Grommet – Plastic	2	1	2
604604	Grommet – Plastic	3	2	2
605120	Grommet – Shroud Mtg.	3	15	1
607560	Plate – Cover	2	*	1
607560	Plate – Cover	3	*	1
610358	Nut	4	21	2
612543	Blade – 21	1	12	1
613227	Screw – Set	1	7	1
613455	Wide Hanger	7	8	1
613462	Hanger Clamp	7	7	2
613463	Narrow Hanger	7		1
613765	Nut – Cage	2	30	1
613765	Nut – Cage	3	33	1
614243	Knob – Handle	6	10	2
614249	Tie Strap	6	13	A/R
614426	Washer – Stepped	4	19	2
614442	Fitting – Grease	4	6	2
614447	Spacer – Axle Shaft	4	2	2
614589	Nut – Cap	7	2	1
614591	Chute Support	7	3	1
614596	Gear 34 Tooth	5	18	1
614637	Bracket – H. O. C.	2	26	4
614637	Bracket – H. O. C.	3	29	2
614643	Handle – Lower	6	11	1
614650	Bolt – Wheel	2	17	2
614668	Cover – Gear Case	5	2	1
614669	Pulley – Half	5	12	2
614671	Cover – Drive	3	9	1
614672	Bolt – Shoulder	2	15	4
614672	Bolt – Shoulder	3	25	2
614677	Screw – Thread Forming	2	2	2
614677	Screw – Thread Forming	3	4	2
614682	Knob	2	5	1
614682	Knob	3	7	1
614687	Arm – Spring	3	24	2
614687	Arm – Spring, Front	2	22	2
614695	Nut	6	16	2
614696	Shaft – Intermediate	5	4	1
614697	Screw – Handle	6	9	2
614700	Tie Strap	7	5	1
677525	Plate & Collar Ass'y	1	11	1
684727	Adaptor Assembly	7	4	1
684729	Chute & Support Assembly	7	1	1
684776	Wheel Ass'y – 6	2	24	2
684776	Wheel Assembly – 6	3	26	2
684777	Wheel Ass'y – 8	2	16	2
16–2139	Guard – Muffler	1	1	1
16–4359	Housing & Baffle Ass'y	2	8	1
16–4369	Housing & Baffle Ass'y	3	34	1
36–4780	Washer – Thrust	5	17	2
36–4791	Washer	5	5	2
38–7820	Bearing – Ball	5	15	1
39–5770	Decal – Danger	3	5	1
39–5770	Decal – Danger	2	6	1
40–1940	Washer	3	28	2
40–1940	Washer – Wheel Bolt	2	25	4
47–2900	Bushing	4	7	2
49–2040	Screw – Thread Forming	3	11	2
55–3760	Pinion – 15 Tooth	5	3	1
60–8750	Bushing	5	6	2
60–8850	Bushing – Output	5	9	2
60–8890	Gear – Bevel Pinion	5	16	1
62–6660	Spacer	5	11	1
65–2690	Decal – Warning	1	2	1
65–2720	Ring – Klip. Special	4	10	4
65–4710	Ring – Friction	4	11	2
65–4720	Spring – Compression	4	15	2
65–4730	Washer – Thrust Pivot Arm	4	8	2
65–4740	Washer – Thrust, Keyed	4	9	4
65–4750	Gear – Pinion	4	14	2
65–4760	Washer – Clutch, Plastic	4	12	2
66–6040	Key – Rocking, RH	4	*	1
66–6050	Key – Rocking, LH	4	13	1
70–9760	Bushing	4	4	2
92–1001	Bail –Control	6	7	1
92–1004	Spring Arm Ass'y	4	3	2
92–1005	Spring Arm Assembly	2	14	2
92–1008	Knob	4	24	2
92–1008	Knob – H. O. C.	3	23	2
92–1008	Knob – H. O. C. Lever	2	21	4
92–1024	Guide – Belt	1	8	1
92–1042	Wheel Ass'y – 8	4	18	2
92–1044	Cable – Brake	6	17	1
92–1045	Cable – Throttle	6	18	1
92–1057	Bolt – Wheel	4	17	2
92–1097	Decal – Danger	3	1	1
92–1097	Decal – Danger	2	3	1
92–1099	Bolt – Wheel	2	23	2
92–1099	Bolt – Wheel	3	27	2
92–1624	Screw – Engine Mount	1	9	3
92–1630	Fan – Mulching	1	13	1
92–1701	Stop – Rope	1	6	1
92–2914	Decal – H. O. C. R.H.	2	*	2
92–2914	Decal – H. O. C. R.H.	3	*	2
92–2915	Decal – H. O. C. L.H.	3	3	2
92–2915	Decal – H. O. C. L.H.	2	11	2
92–2919	Decal – Danger	7	9	1
92–4851	Decal – Oil	1	20	1
92–4852	Screw	1	18	4
92–4853	Handle – Starter	6	3	1
92–4854	Cover – Recoil	1	16	1
92–4855	Shroud – Engine	1	15	1
92–4881	Plate – H. O. C. Front	2	29	2
92–4881	Plate H. O. C.	3	31	2
92–4890	Washer	2	27	4
92–4890	Washer	3	30	2
92–5412	Stop – Pivot	6	5	2
92–5424	Clip – Rope Insert	6	4	1
92–7723	Handle Bracket Ass'y – RH	3	8	1
92–7724	Handle Bracket Ass'y – L.H.	3	17	1
92–7726	Cable – Traction	6	8	1
92–7727	Gearcase	5	10	1
92–7728	Guide – Transmission	3	12	1
92–7729	Anchor – Cable, (Upper)	6	14	1
92–7730	Screw	6	15	1
92–7731	Plate – Baffle	2	28	2
92–7731	Plate – Baffle	3	32	1
92–7735	Gear Case Ass'y	3	16	1
92–7742	Handle Bracket Ass'y – RH	2	7	1
92–7743	Handle Bracket Ass'y – LH	2	10	1
92–7746	Pivot Arm Ass'y – Rear	4	5	2
92–8630	Plate – Cover, Mulch	2	4	1
92–8630	Plate – Cover, Mulch	3	6	1
92–8643	Decal – Shroud	1	*	1
92–8644	Decal – Shroud	1	5	1
92–8647	Shield – Trailing	2	19	1

*Not Illustrated

LAWN—BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92—8647	Shield — Trailing	3	21	1
92—9575	Pulley — Engine	1	10	1
92—9665	Screw	3	10	1
93—0239	Shaft — Output	5	7	1
93—3653	Handle—Guard	6	20	1
93—4184	Bail — Brake	6	6	1
93—4185	Handle — Upper	6	1	1
93—4196	Shield — Grass	1	17	1
93—7250	Decal — Warning	2	9	1
93—7250	Decal — Warning	3	13	1
93—7253	Decal — Warning (French)	2	*	1
93—7253	Decal — Warning (French)	3	*	1
93—7380	Anchor — Cable, (Lower)	6	12	1
93—7381	V—Belt	4	23	1
93—7383	Guide — Rope	6	2	1
94—1609	Cover Wheel	4	16	2
94—8083	Decal — Primer	1	21	1
321—49	Screw	6	19	1
322—3	Screw	2	18	4
322—3	Screw — Hex. Hd.	3	20	6
3256—24	Washer	5	13	1
3274—52	Screw	1	3	2
3285—19	Pin — Groove	5	8	2
3296—5	Nut	5	14	1
3296—29	Nut	3	22	6
3296—39	Nut	2	20	4
32144—4	Screw — Taptite	5	1	4
32144—85	Screw	4	22	2

*Not Illustrated

MAINTENANCE RECORD

Date								

3318–470

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								