Form No. 3365-738 Rev A

TORO®

Count on it.

Parts Catalog

42in Two-Stage Snowthrower

Model No. OEM-190-032—Serial No. 1 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


© 2010—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Contents

Housing, Auger and Gearbox Assembly 4
Handle, Belt and Drive Assembly 6
Pulley Assembly 8


Housing, Auger and Gearbox Assembly

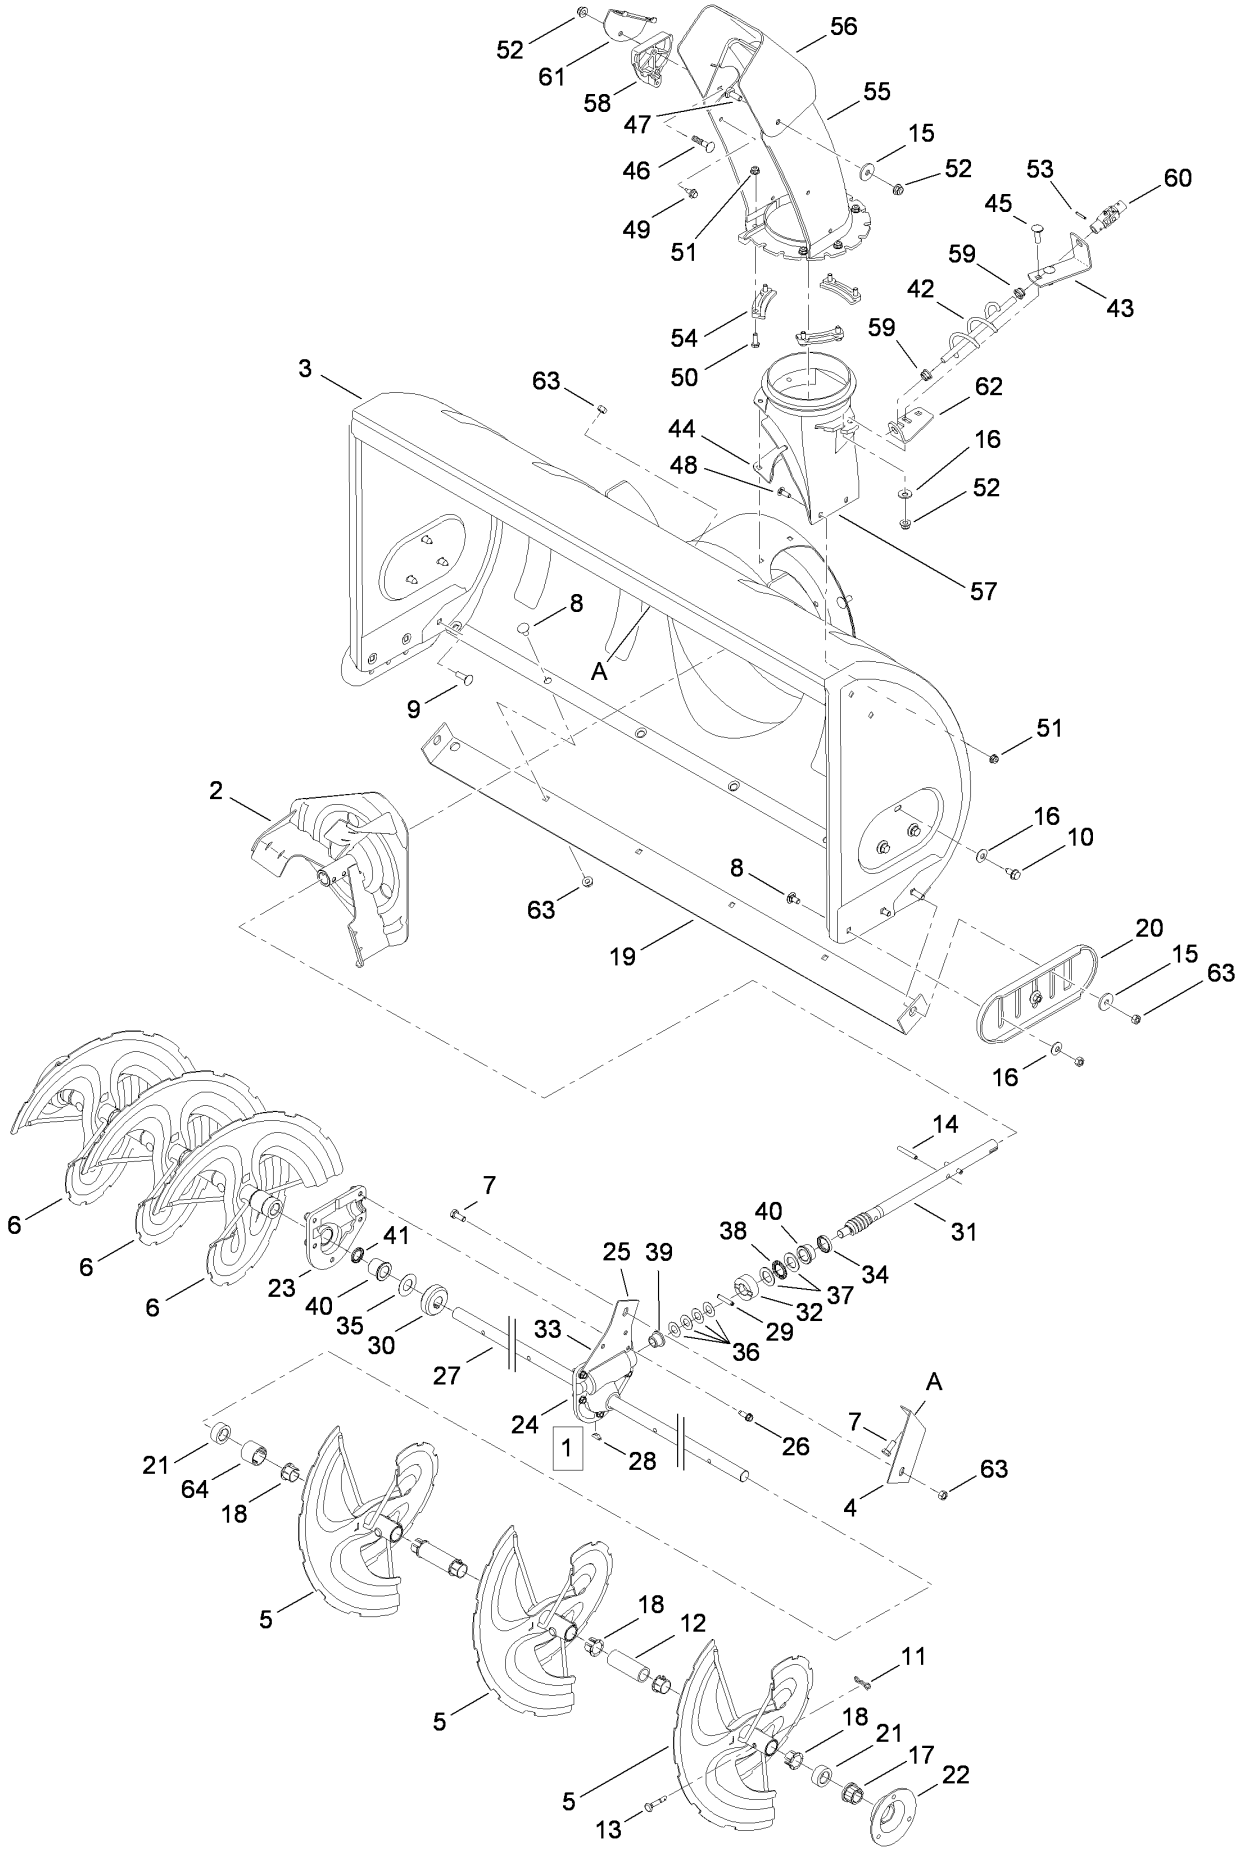

Housing, Auger and Gearbox Assembly (continued)


Ref.	Part Number	Qty.	Description
1	112-1135	1	Auger Gearbox ASM
2	112-0959	1	Impeller ASM
3	112-0957	1	Housing ASM
4	112-0965	1	Bracket-Housing, Brace
5	112-0961	1	LH Spiral Auger ASM
6	112-0962	1	RH Spiral Auger ASM
7	119-3956	1	Screw
8	112-1072	1	Bolt-CARR
9	112-0598	1	Bolt-CARR
10	112-6070	1	Screw-TAP
11	112-0990	1	Pin-Cotter
12	112-1006	1	Sleeve
13	112-1020	1	Pin-Shear
14	112-1130	1	Pin-Roll
15	112-1159	1	Washer-Flat
16	112-0435	1	Washer-Bell
17	112-1179	1	Bearing-Flange
18	112-1022	1	Bearing-Flange
19	112-1061	1	Bracket-Plate, Skid
20	112-1063	1	Shoe-Slide
21	112-0980	1	Spacer
22	112-1066	1	Housing-Bearing, Hex
23	112-3650	1	Housing-Reducer, RH
24	112-3651	1	Housing-Reducer, LH
25	112-3652	1	Plate-Brace, Housing
26	112-0587	1	Screw-TAP
27	112-3653	1	Axle-Spiral
28	112-3654	1	Key-Hi Pro
29	112-3655	1	Pin-Spirol, Spring
30	112-3656	1	Gear-Worm, 20T
31	112-3657	1	Shaft-Worm
32	112-3658	1	Collar-Thrust
33	112-3659	1	Plug-Grease
34	112-3660	1	Seal-Grease
35	112-0813	1	Washer-Thrust
36	112-3661	1	Washer-Flat
37	112-3662	1	Washer-Thrust
38	119-3957	1	Bearing-Thrust
39	112-3664	1	Bearing-Flange
40	112-3665	1	Bearing-Flange
41	112-3667	1	Seal-Grease
42	112-0956	1	Crank Chute ASM
43	112-0966	1	Bracket-Chute
44	112-0968	1	Reinforcement-Chute
45	112-0598	1	Bolt-CARR
46	112-1073	1	Bolt-CARR
47	112-0971	1	Bolt-CARR
48	112-0479	1	Bolt-CARR
49	112-1085	1	Screw-HH
50	112-6179	1	Screw-Hex
51	112-0636	1	Nut-Lock, Flange
52	112-0650	1	Nut-Lock, Flange
53	119-3958	1	Pin-Spirol
54	112-1002	1	Keeper-Flange, Chute
55	112-1007	1	Chute-Lower
56	112-0999	1	Chute-Upper
57	112-1009	1	Adapter-Chute, Discharge
58	112-1008	1	Guide-Cable
59	112-0929	1	Bushing
60	119-3959	1	Joint Block ASM
61	112-1064	1	Bracket-Cable
62	112-1067	1	Bracket-Crank, Chute
63	112-0511	1	Nut-Lock, Flange
64	112-1000	1	Spacer

Handle, Belt and Drive Assembly

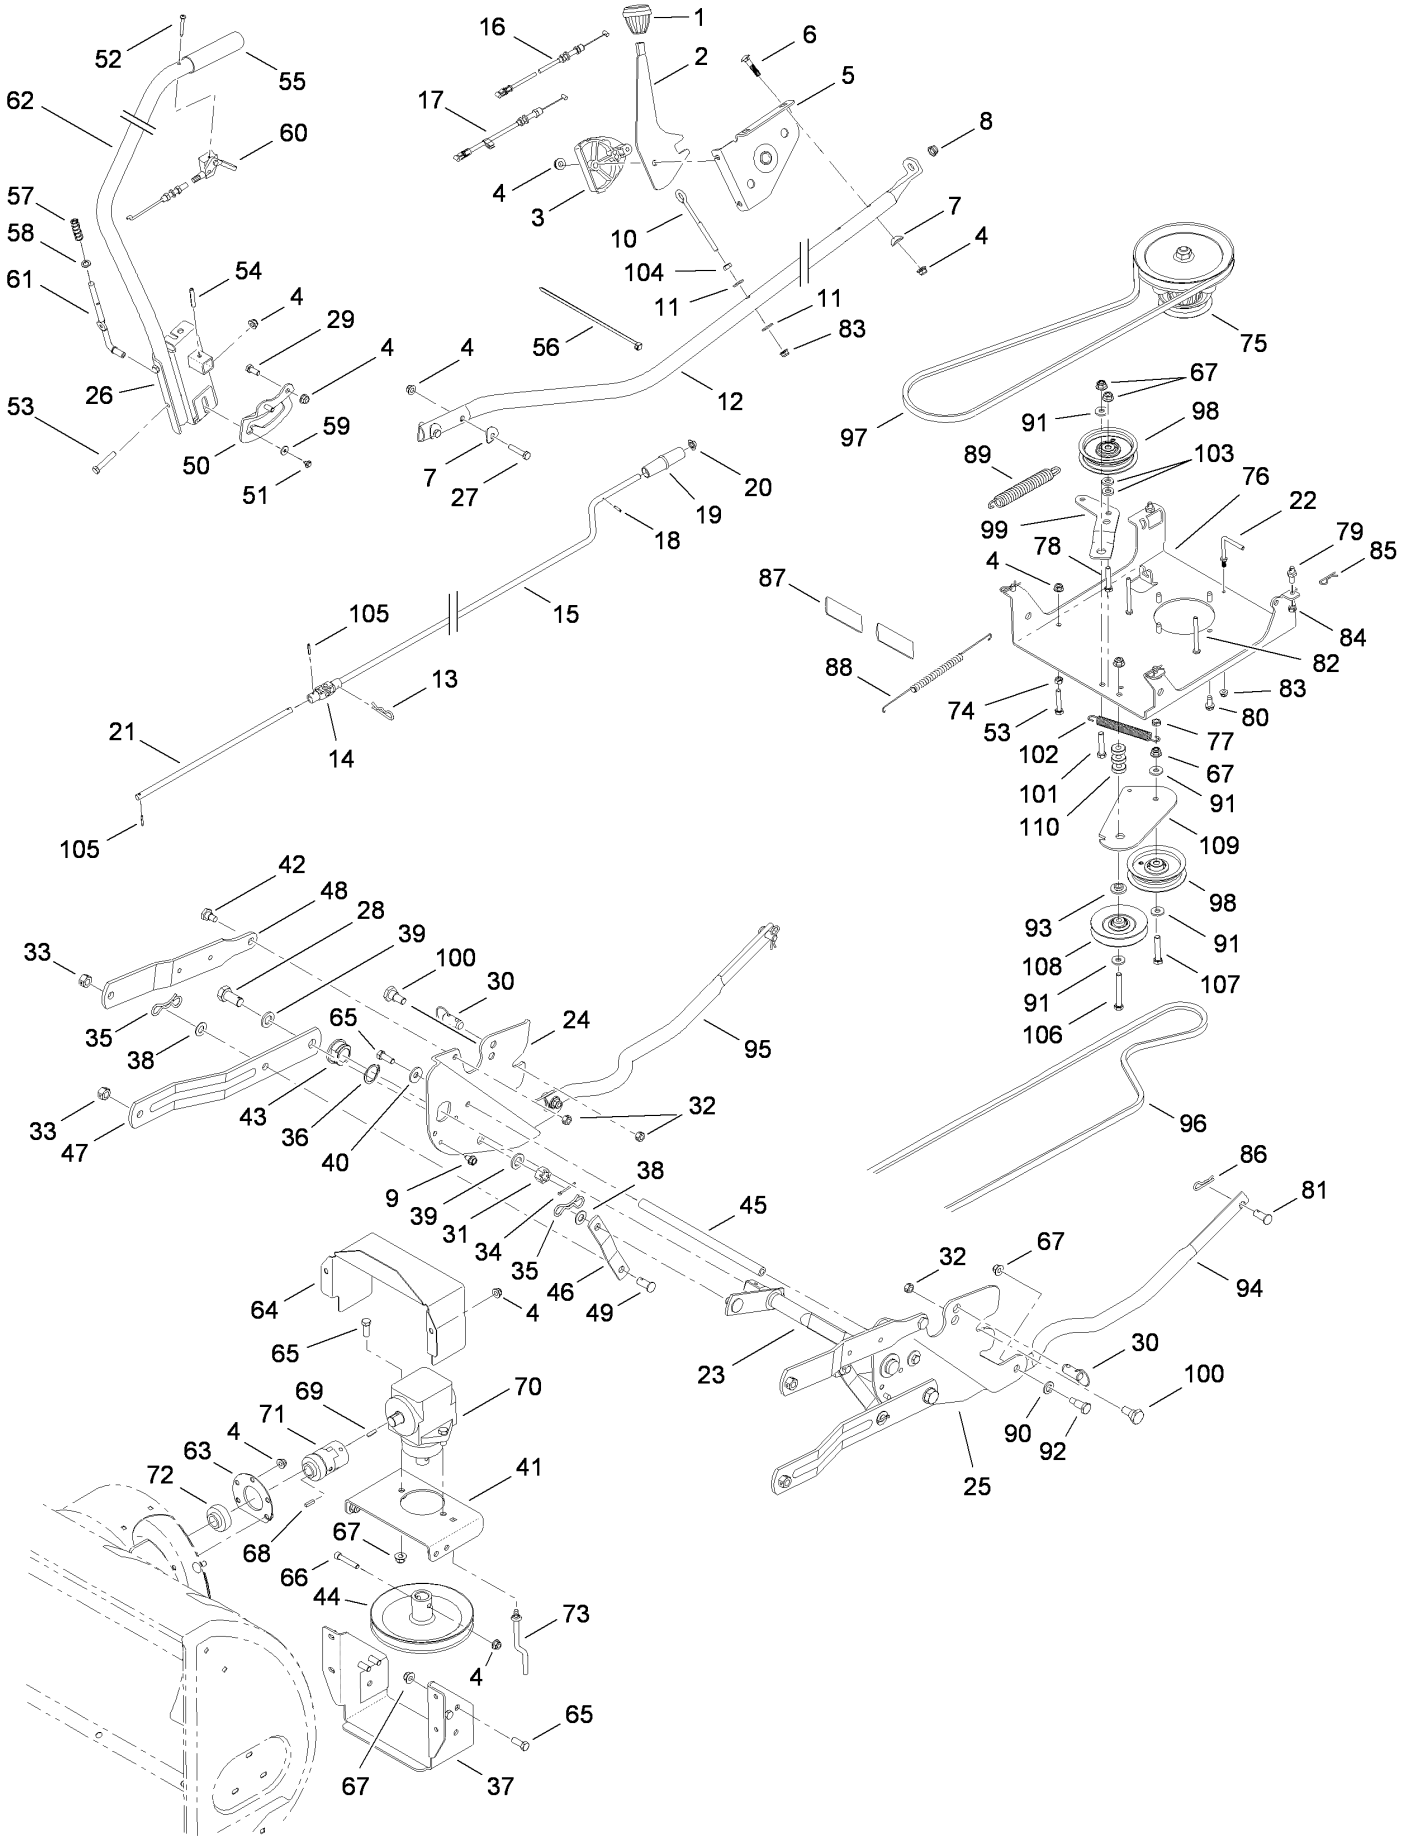

Handle, Belt and Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-3955	1	Knob
2	112-1065	1	Handle-Tilt, Chute
3	112-1008	1	Guide-Cable
4	112-0650	1	Nut-Lock, Flange
5	112-0944	1	Bracket-Tilt, Chute
6	112-1073	1	Bolt-CARR
7	112-1169	1	Washer-Saddle
8	112-0929	1	Bushing
9	112-0556	1	Screw-HWH
10	119-3964	1	Bolt-Eye
11	112-0485	1	Washer-Spring
12	112-1039	1	Tube-Support, Chute
13	119-3965	1	Pin-Cotter
14	119-3959	1	Joint Block ASM
15	112-1031	1	Rod-Crank, Chute
16	112-1025	1	Cable-Chute
17	112-1026	1	Cable-Chute
18	112-1131	1	Pin-Roll
19	112-0993	1	Knob-Crank, Chute
20	112-1141	1	Nut-Push
21	112-1028	1	Rod
22	119-3962	1	Pin-Keeper, Belt
23	112-0945	1	Rod ASM
24	112-1052	1	Plate-RH Mounting
25	112-1051	1	Plate-LH Mounting
26	112-0950	1	Lift Bracket ASM
27	112-0594	1	Screw-HH
28	112-0975	1	Screw-HH
29	112-1090	1	Screw-HH
30	119-3954	1	Pin-Release, Quick
31	112-0982	1	Nut-Hex Castle
32	112-0909	1	Nut-Lock
33	112-1117	1	Nut-Hex, Lock
34	112-0412	1	Pin-Cotter
35	119-3960	1	Pin-Cotter, Bow Tie
36	112-1132	1	Ring-Snap
37	112-1062	1	Plate-Skid
38	112-1163	1	Washer-Flat
39	112-1167	1	Washer-Flat
40	112-1170	1	Washer-Bell
41	112-1053	1	Bracket-Mounting
42	112-1019	1	Bolt-Shoulder
43	119-3966	1	Bearing-Flange
44	112-1042	1	Pulley-Drive
45	112-1030	1	Rod
46	112-1048	1	Link
47	112-1049	1	Link
48	112-1050	1	Link
49	112-0376	1	Pin-Bracket, Lift
50	112-1068	1	Bracket-Lift
51	119-3967	1	Screw-Washer, Hex Index
52	112-1093	1	Screw-Pan HD
53	112-1095	1	Bolt-HH
54	112-1130	1	Pin-Roll
55	112-0995	1	Grip
56	112-0527	1	Tie-Cable
57	112-0406	1	Spring-Compression
58	112-0407	1	Washer-Flat
59	112-1168	1	Washer-Flat
60	112-1024	1	Cable-Lift, W/Trigger
61	112-1032	1	Rod-Index, Lift
62	112-1040	1	Tube-Handle, Lift
63	112-0937	1	Housing-Bearing
64	112-0967	1	Cover-Belt
65	112-0492	1	Screw-HH
66	112-1096	1	Screw-HSH
67	112-0668	1	Nut-Lock, Flange
68	112-1122	1	Key-Square
69	112-1123	1	Key-Hi Pro
70	112-1134	1	Drive-Angle, Right
71	112-1137	1	Coupler-Flexible
72	112-1180	1	Bearing-Ball (W/Out Collar)
73	112-1033	1	Rod-Keeper, Belt
74	112-0437	1	Nut-Hex
75	112-0946	1	7 Inch Pulley Spindle ASM
76	119-3968	1	Bracket-Mounting, Pulley
77	119-3963	1	Nut
78	112-0513	1	Screw-HH
79	112-0972	1	Pin
80	112-0395	1	Screw-HWH
81	112-1097	1	Pin-Clevis
82	112-1101	1	Keeper-Belt
83	112-0636	1	Nut-Lock, Flange
84	112-1115	1	Nut-Hex, Center Lock
85	112-0912	1	Pin-Hair
86	112-0989	1	Pin-Clip, Internal
87	112-1145	1	Reflector
88	112-1014	1	Spring-Extension
89	112-0324	1	Spring-Extension
90	112-1156	1	Washer-Flat
91	112-1018	1	Washer-Isomount
92	112-1174	1	Bolt-Shoulder
93	112-0508	1	Spacer-Shoulder
94	112-1037	1	Tube-Support, LH
95	112-1038	1	Tube-Support, RH
96	119-3961	1	Belt-V
97	112-1196	1	Belt- V Type
98	112-0303	1	Pulley-Idler, 3.50 Inch
99	112-1057	1	Bracket-Idler
100	112-0565	1	Bolt-Shoulder
101	112-0557	1	Screw-HH
102	112-3678	1	Spring-Extension
103	112-0544	1	Washer-Flat
104	112-0522	1	Nut-Hex
105	119-3958	1	Pin-Spirol
106	112-0978	1	Bolt-Hex
107	112-0421	1	Screw-HH
108	112-0365	1	Pulley
109	112-3679	1	Idler Pivot ASM
110	112-3676	1	Spacer

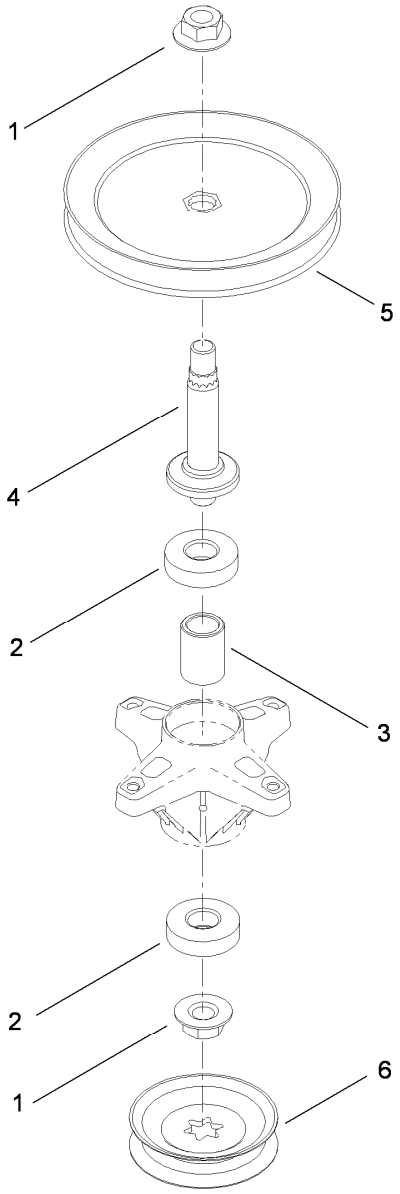

Pulley Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	112-0330	1	Nut-Lock, Flange
2	112-0377	1	Bearing-Ball
3	112-3680	1	Spacer
4	112-3684	1	Shaft-Spindle
5	112-3682	1	Pulley-Deck, 7 Inch
6	112-3683	1	Pulley-3.75 Inch

Notes:

Notes:

Notes:



Count on it.