
FORM NO. 3318−471 REV. A

TORO®

**MODEL NO. 26633B−6900001 & UP**

**PARTS CATALOG**

# 53cm REAR BAGGING MOWER

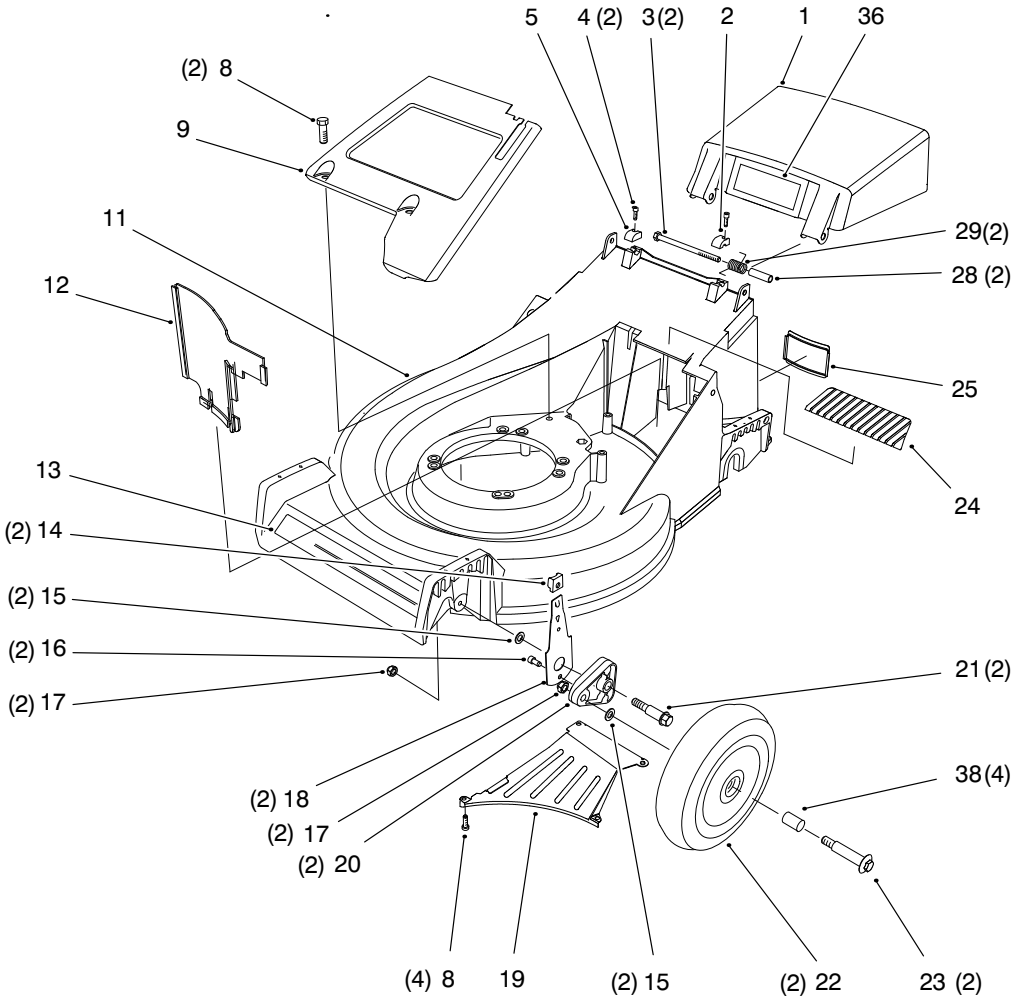



## DECK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 17−1569 | Door − Discharge (Incl. Ref.#36) | 1 |
| 2 | 71−7900 | Cap−Bolt, Hinge LH | 1 |
| 3 | 322−29 | Screw − Hex Head | 2 |
| 4 | 65−5210 | Screw | 2 |
| 5 | 71−7910 | Cap − Bolt, Hinge RH | 1 |
| 8 | 32144−70 | Screw − Tap | 6 |
| 9 | 65−5660 | Panel − Screen | 1 |
| 11 | 16−1769 | Housing (Incl.Ref.# 13) | 1 |
| 12 | 66−0020 | Panel − Vertical | 1 |
| 13 | 71−9870 | Decal − Deck | 1 |
| 14 | 25−7740 | Knob − Arm | 2 |
| 15 | 40−1940 | Washer | 4 |
| 16 | 65−5220 | Screw | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 3296−6 | Nut − Lock | 4 |
| 18 | 66−0540 | Asm − Spring Arm, Front | 2 |
| 19 | 71−9640 | Ramp − Discharge | 1 |
| 20 | 66−0580 | Arm − Pivot | 2 |
| 21 | 66−0560 | Screw − Shoulder | 2 |
| 22 | 14−9949 | Asm − Wheel & Tire, 8” (Incl. Ref. #38) | 2 |
| 23 | 27−6231 | Bolt − Wheel | 2 |
| 24 | 71−9920 | Cover − Top | 1 |
| 25 | 71−9650 | Access − Cover | 1 |
| 28 | 71−8580 | Spacer − Door | 2 |
| 29 | 71−9840 | Spring − Door | 2 |
| 36 | 93−4105 | Decal − Bag Door | 1 |
| 38 | 27−6250 | Bushing − Wheel | 4 |

®The TORO Company − 1995 REV. 1997
All Rights Reserved


TPS

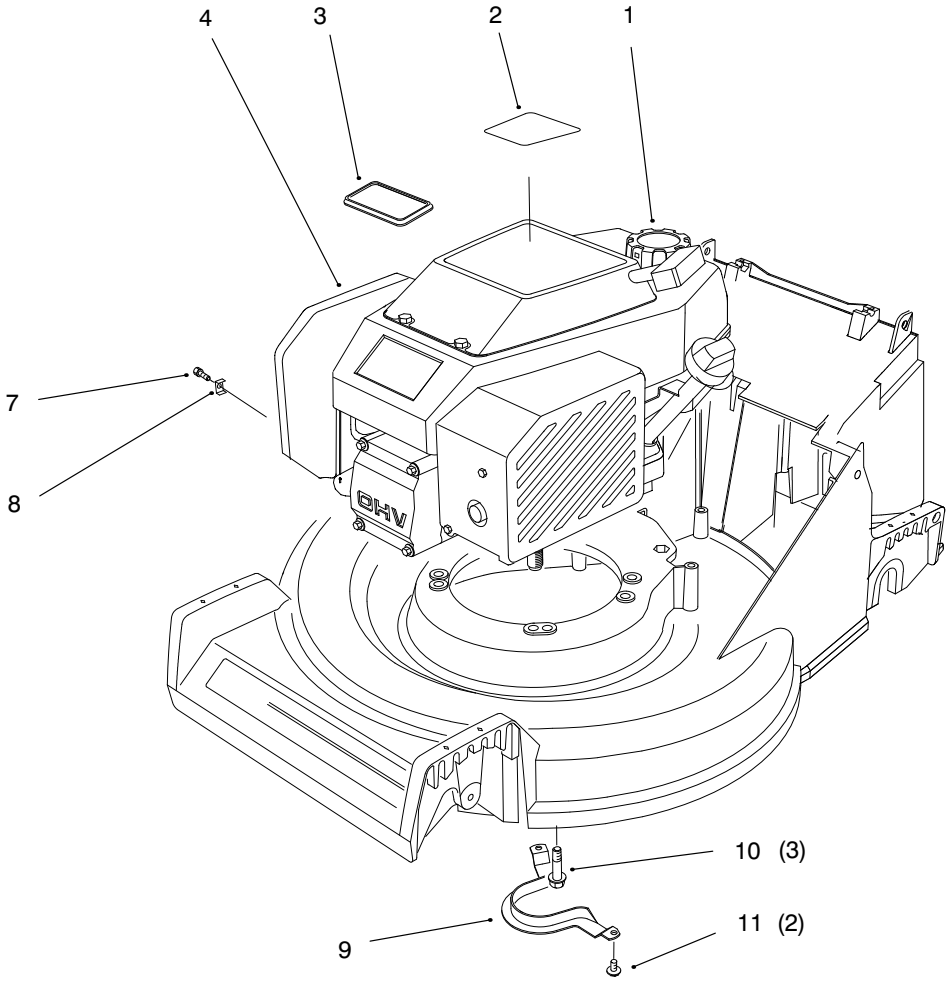


# ENGINE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93−7198 | Asm − Cap, Gas | 1 |
| 2 | 93−4355 | Decal − Engine | 1 |
| 3 | 92−2289 | Plate − Logo, Toro | 1 |
| 4 | 94−1605 | Engine − GTS 150 BBC (Complete) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 7 | 86−7990 | Screw − Clamp | 1 |
| 8 | 2210−249 | Clamp − Casting | 1 |
| 9 | 66−0570 | Guide − Belt | 1 |
| 10 | 32144−102 | Screw | 3 |
| 11 | 32144−70 | Screw − Tap | 2 |

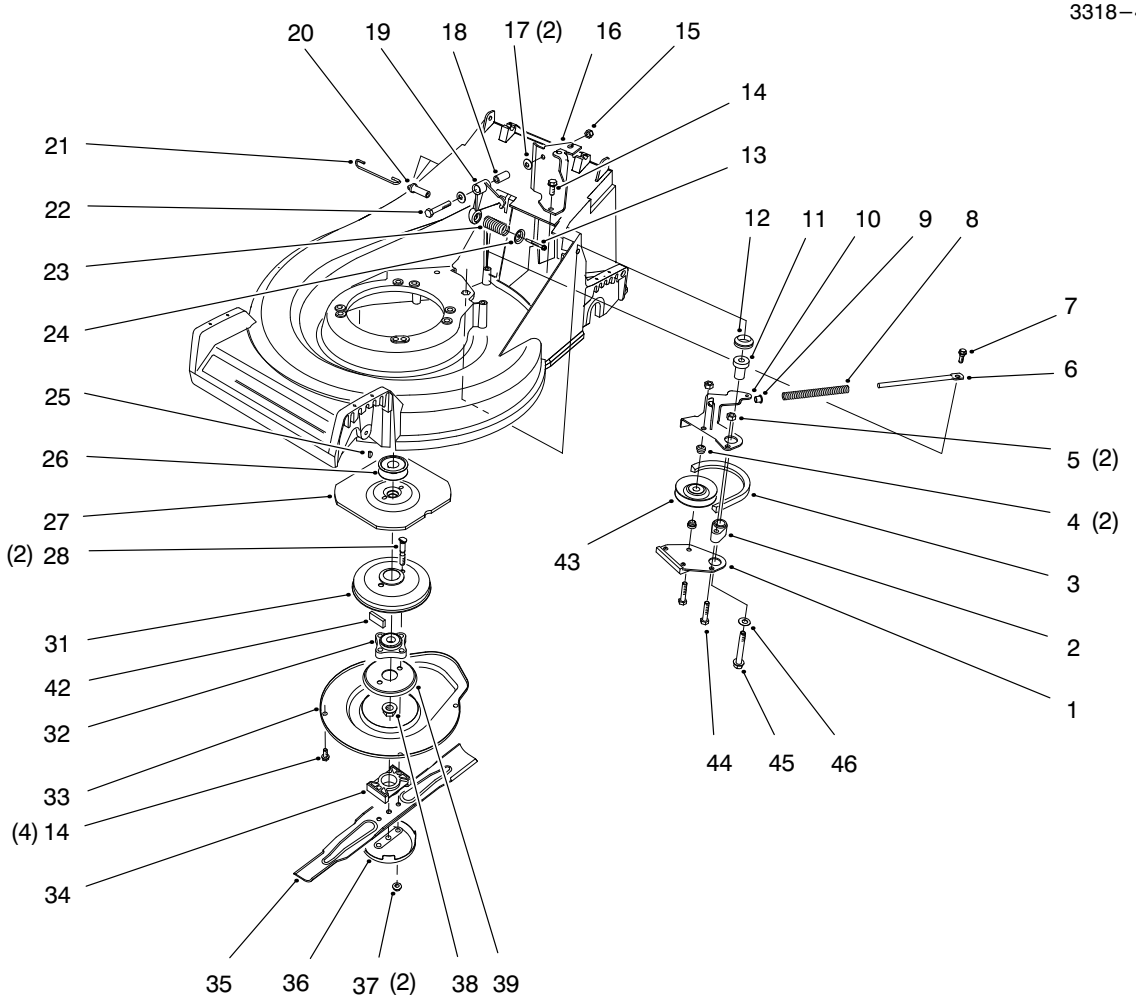



C−2483

# BLADE AND BRAKE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 65−5780 | Shoe − Brake | 1 |
| 2 | 65−5070 | Hub − Plate | 1 |
| 3 | 65−5740 | V−Belt | 1 |
| 4 | 65−5130 | Hub − Pulley | 2 |
| 5 | 3296−42 | Nut − Lock | 2 |
| 6 | 65−5320 | Rod − Spring | 1 |
| 7 | 65−5670 | Bolt − Shoulder | 1 |
| 8 | 71−3640 | Spring − Compression | 1 |
| 9 | 66−0350 | Bushing − Flange | 1 |
| 10 | 66−0090 | Lever −Brake | 1 |
| 11 | 65−5720 | Bushing | 1 |
| 12 | 253−151 | Seal − Ring | 1 |
| 13 | 46−7040 | Screw − Hex Washer Hd. | 1 |
| 14 | 32144−70 | Screw−Tap | 5 |
| 15 | 32128−44 | Nut − Flange | 1 |
| 16 | 66−0030 | Bracket − Cable Support | 1 |
| 17 | 3256−23 | Washer − Flat | 2 |
| 18 | 65−5690 | Bushing − Bellcrank | 1 |
| 19 | 65−5700 | Crank | 1 |
| 20 | 71−3660 | Pin−Spring | 1 |
| 21 | 71−3650 | Link − Control | 1 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 22 | 322−21 | Screw − Hex Hd. | 1 |
| 23 | 71−3630 | Spring − Compression | 1 |
| 24 | 65−5280 | Retainer − Spring | 1 |
| 25 | 3257−17 | Key − Woodruff | 1 |
| 26 | 62−7560 | Pulley − Driver | 1 |
| 27 | 65−5300 | Flywheel − BBC | 1 |
| 28 | 42−3190 | Bolt − Blade | 2 |
| 31 | 62−3890 | Drum − Brake | 1 |
| 32 | 42−6890 | Asm − Hub | 1 |
| 33 | 65−5200 | Shield − BBC | 1 |
| 34 | 62−4280 | Spacer − Blade | 1 |
| 35 | 62−7700 | Bade − 21” | 1 |
| 36 | 80−2770 | Cup − Anti Scalp | 1 |
| 37 | 54−9190 | Nut − Lock | 2 |
| 38 | 3296−33 | Nut − Lock, Nylon | 1 |
| 39 | 65−5330 | Screen − BBC | 1 |
| 42 | 52−3480 | Damper − Vibration | 2 |
| 43 | 46−5650 | Pulley − Idler | 1 |
| 44 | 321−13 | Screw − Hex Hd. | 2 |
| 45 | 11−0580 | Screw | 1 |
| 46 | 65−5380 | Washer − Flat | 1 |

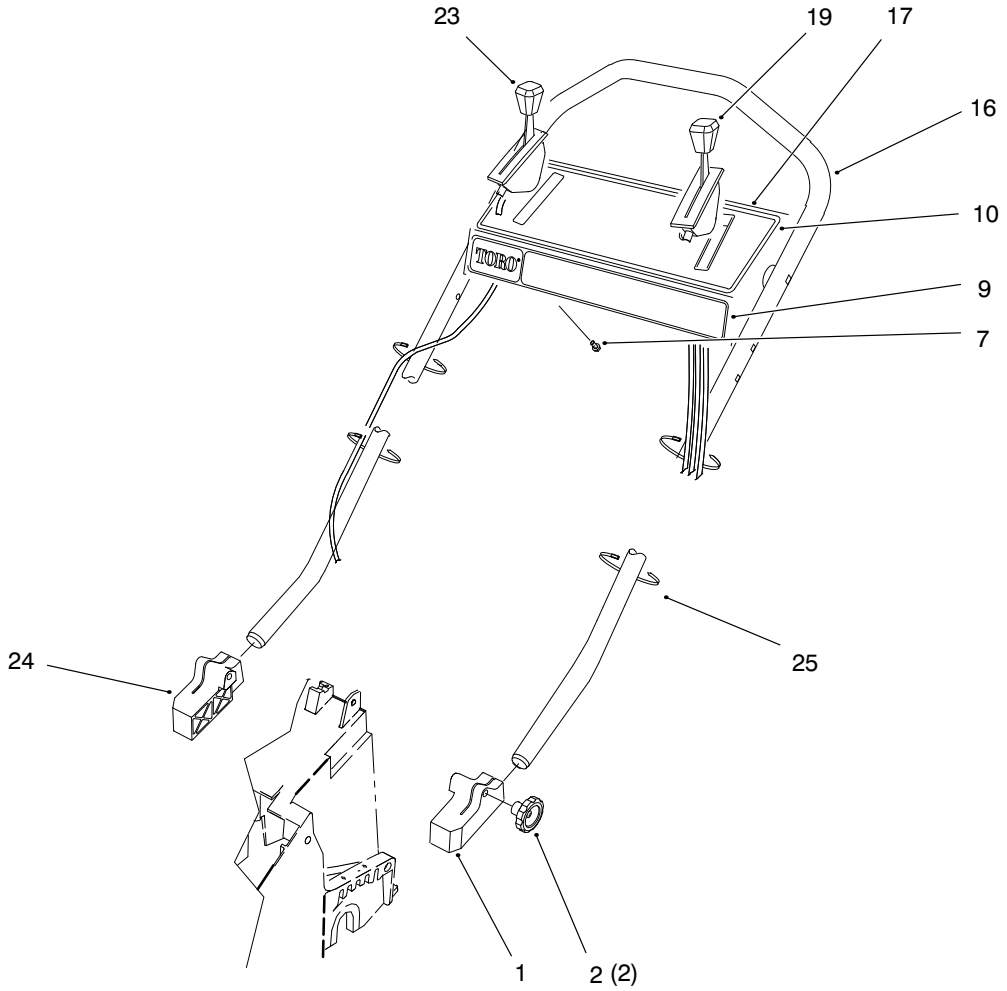


# HANDLE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 71−8090 | Mount − Handle LH | 1 |
| 2 | 19−4050 | Knob | 2 |
| 7 | 92−9665 | Screw | 4 |
| 9 | 71−9872 | Decal − Panel | 1 |
| 10 | 93−6656 | Decal − Instruction | 1 |
| 16 | 94−4910 | Handle | 1 |


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 17 | 16−8969 | Panel − Control (Incl. Ref.#9 & 10) | 1 |
| 19 | 93−6630 | Control − Throttle | 1 |
| 23 | 93−6632 | Control − Speed | 1 |
| 24 | 71−8100 | Mount − Handle RH | 1 |
| 25 | 3290−378 | Tie − Cable | 5 |

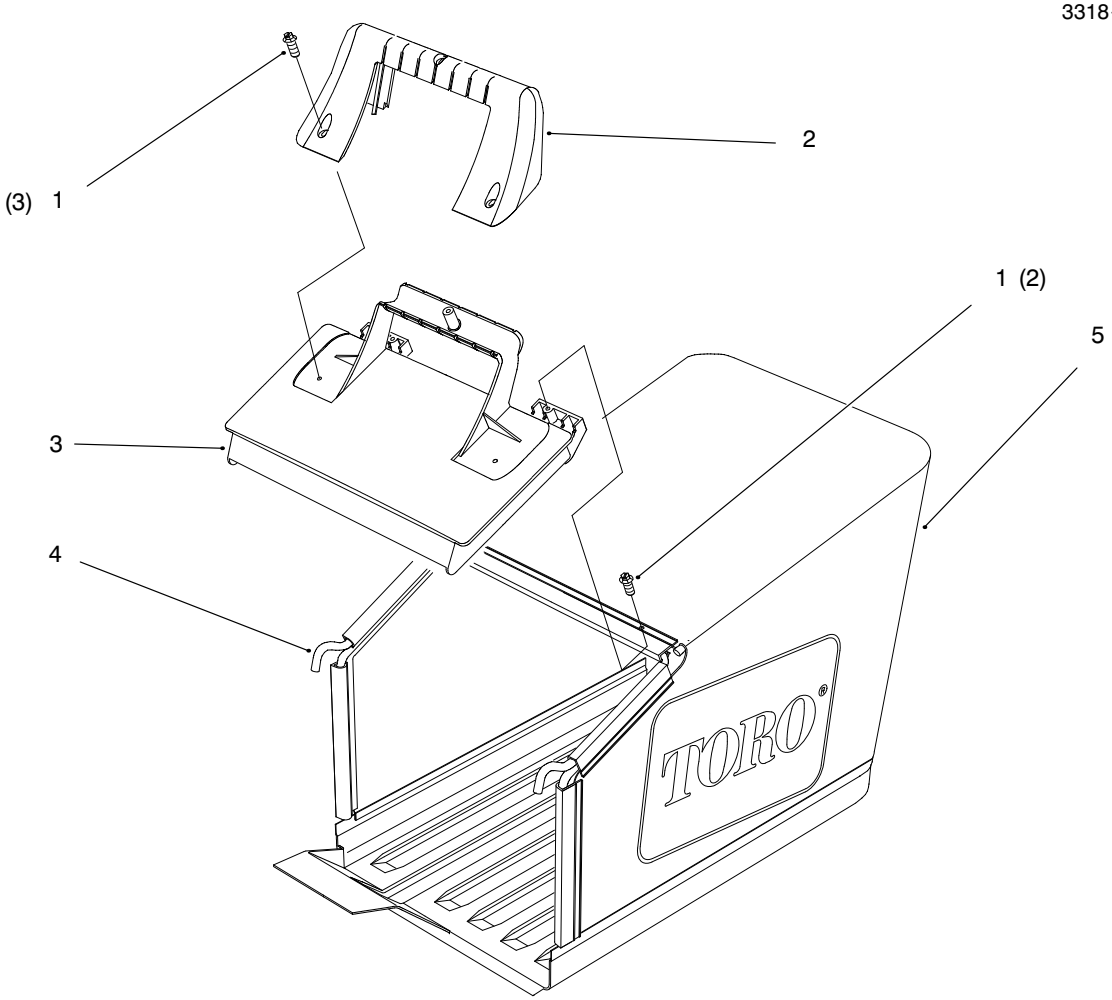


C−2485

# BAG ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32144−111 | Screw − Phillips Pan Hd. | 5 |
| 2 | 71−9480 | Handle − Door | 1 |
| 3 | 71−9470 | Door − Bag | 1 |
| 4 | 71−9930 | Frame | 1 |
| 5 | 71−9680 | Bag − Grass | 1 |

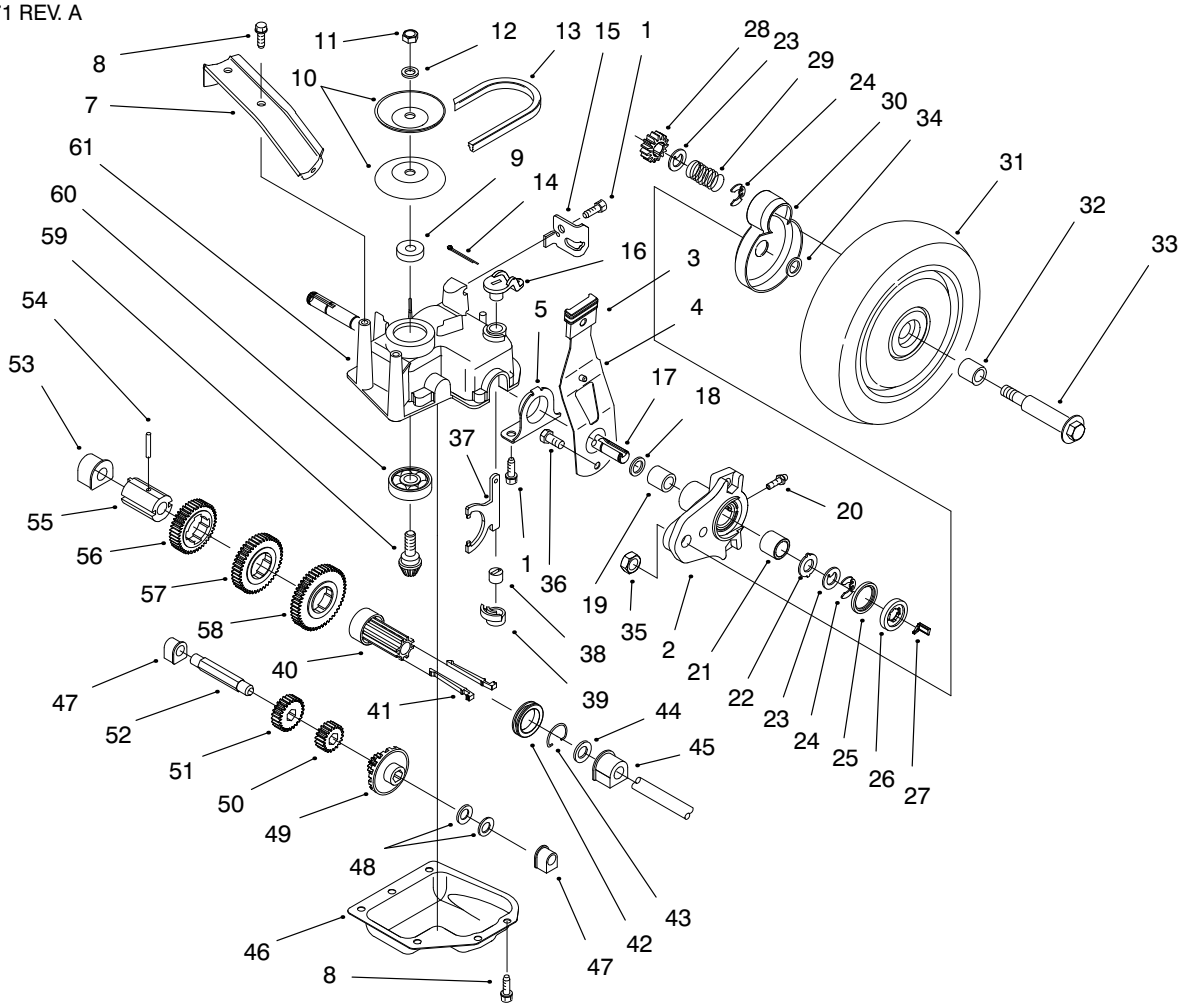



C−2486

# DECK SUSPENSION & GEAR CASE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32144−70 | Screw − Hex. Washer Hd. | 5 |
| 2 | 65−5042 | Pivot Arm Assembly (Incl. Ref. #19−21) | 2 |
| 3 | 25−7740 | Knob − Arm | 2 |
| 4 | 65−5440 | Spring Arm Assembly | 2 |
| 5 | 66−0360 | Cap − End | 2 |
| 7 | 65−5190 | Bracket − Belt Guide | 1 |
| 8 | 49−2040 | Screw − Self Tapping | 8 |
| 9 | 62−6660 | Spacer | 1 |
| 10 | 60−8840 | Pulley − Half | 2 |
| 11 | 3296−5 | Nut − Lock | 1 |
| 12 | 3256−24 | Washer − Flat | 1 |
| 13 | 36−8070 | V−Belt | 1 |
| 14 | 3272−5 | Pin − Cotter | 1 |
| 15 | 76−2930 | Retainer − Cable | 1 |
| 16 | 76−0920 | Lever − Shift | 1 |
| 17 | 65−4770 | Shaft − Output | 1 |
| 18 | 237−153 | Seal − ”O”Ring | 2 |
| 19 | 70−9760 | Bushing − Sleeve | 2 |
| 20 | 302−56 | Fitting − Grease | 2 |
| 21 | 48−2060 | Bearing −Needle | 2 |
| 22 | 65−4730 | Washer − Thrust (Inner) | 2 |
| 23 | 65−4740 | Washer − Thrust (Keyed) | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 24 | 65−2720 | Ring − Retaining | 4 |
| 25 | 65−4710 | Ring − Friction | 2 |
| 26 | 65−4760 | Washer −Clutch | 2 |
| 27 | 66−6050 | Key − Rocking (L.H.) | 1 |
| * | 66−6040 | Key − Rocking (R.H.) | 1 |
| 28 | 65−4750 | Pinion | 2 |
| 29 | 65−4720 | Spring − Compression | 2 |
| 30 | 74−1660 | Cover − Wheel | 2 |
| 31 | 14−9959 | Wheel Tire & Gear Assy. (Incl. Ref. #32) | 2 |
| 32 | 27−6250 | Bushing − Wheel | 4 |
| 33 | 27−6231 | Bolt − Wheel | 2 |
| 34 | 74−1670 | Spacer − Wheel Cover | 2 |
| 35 | 3296−6 | Nut − Lock | 2 |
| 36 | 65−5220 | Screw − Socket Hd. Cap | 2 |
| 37 | 60−8870 | Yoke − Shift | 1 |
| 38 | 29−9570 | Bushing − Yoke | 1 |
| 39 | 60−8810 | Retainer − Shift Fork | 1 |
| 40 | 76−0780 | Sleeve − Shift Key | 1 |
| 41 | 76−0760 | Key − Shift | 2 |
| 42 | 76−0770 | Collar − Shift | 1 |
| 43 | 65−5250 | Clip − Spring | 1 |
| 44 | 36−4780 | Washer − Thrust | 1 |

*Not Illustrated

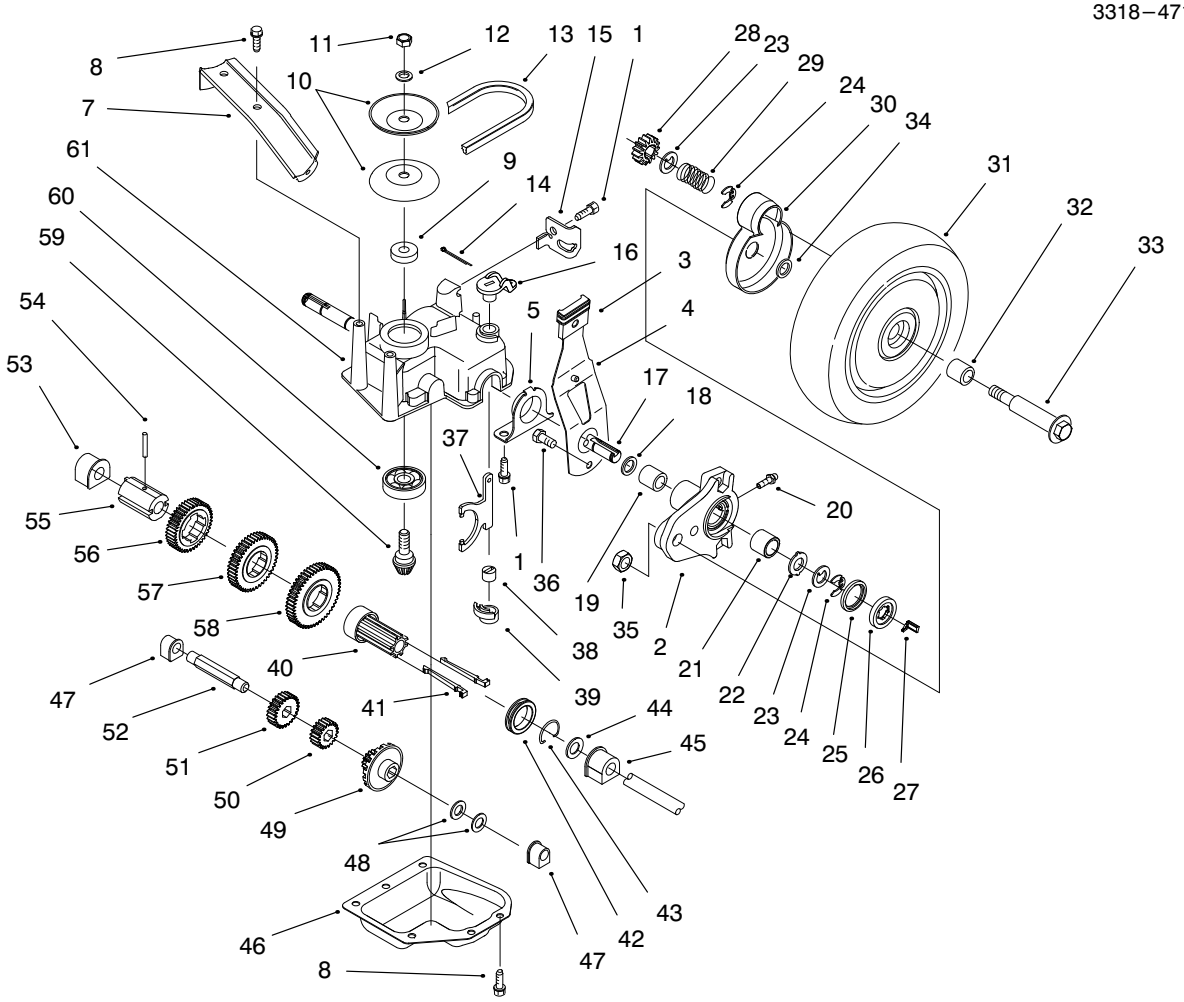



C−2486

# DECK SUSPENSION & GEAR CASE ASSEMBLY (CONT.)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 45 | 60−8770 | Bushing − Output Shaft | 1 |
| 46 | 60−8730 | Cover − Gear Case | 1 |
| 47 | 60−8750 | Bushing − Intrmdt. Shaft | 2 |
| 48 | 36−4791 | Washer − Thrust | 2 |
| 49 | 55−3760 | Gear − Pinion 15T | 1 |
| 50 | 55−3780 | Gear − Pinion 20T | 1 |
| 51 | 55−3800 | Gear − Pinion 25T | 1 |
| 52 | 60−8800 | Shaft − Intermediate | 1 |
| 53 | 60−8850 | Bushing − Output Shaft | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 54 | 32121−120 | Pin − Coil | 1 |
| 55 | 60−8790 | Sleeve − Gear | 1 |
| 56 | 55−3810 | Gear − 39T (3rd Gear) | 1 |
| 57 | 55−3790 | Gear − 44T (2nd Gear) | 1 |
| 58 | 55−3770 | Gear − 49T (1st Gear) | 1 |
| 59 | 60−8890 | Pinion − Bevel | 1 |
| 60 | 38−7820 | Bearing − Ball | 1 |
| 61 | 60−8710 | Case − Gear (Upper) | 1 |
| * | 62−6673 | Gear Case Assy. Complete | 1 |


*Not Illustrated

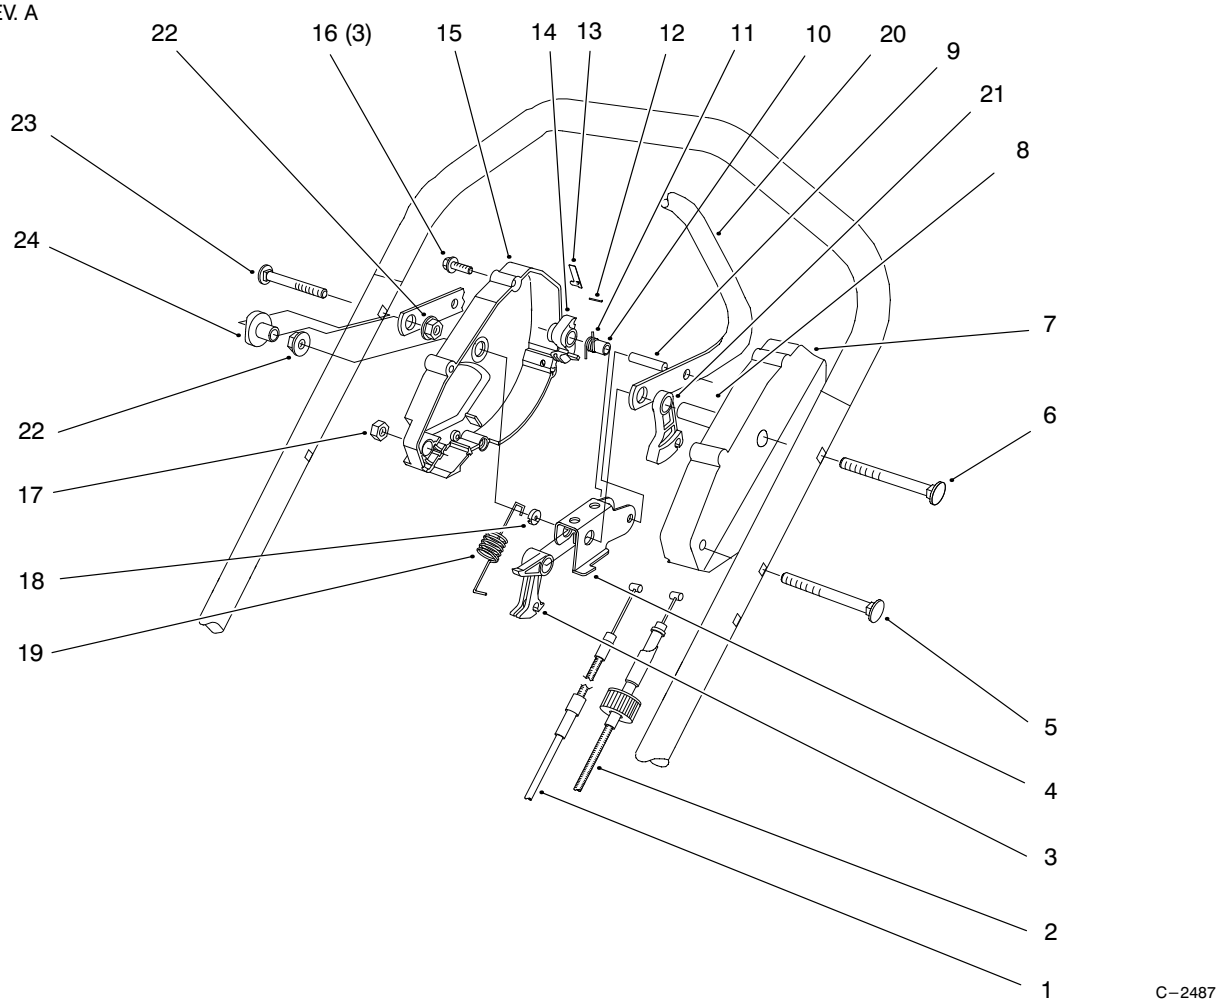


# TRACTION CONTROL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93−6629 | Asm − Cable | 1 |
| 2 | 93−6633 | Cable − Traction | 1 |
| 3 | 46−5540 | Lever − Cable | 1 |
| 4 | 66−0180 | Rocker | 1 |
| 5 | 46−6431 | Screw − Handle | 1 |
| 6 | 17−9425 | Screw − Handle | 1 |
| 7 | 46−5460 | Housing − Control LH | 1 |
| 8 | 46−5590 | Spacer | 1 |
| 9 | 32121−9 | Pin − Roll | 1 |
| 10 | 46−5550 | Bushing | 1 |
| 11 | 46−5510 | Spring − Torsion | 1 |
| 12 | 57−6290 | Pin − Insert | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 13 | 52−7410 | Spring − Leaf | 1 |
| 14 | 46−5530 | Hook − Control | 1 |
| 15 | 66−0160 | Housing − Control RH | 1 |
| 16 | 46−7040 | Screw − Hex Washer Hd. | 3 |
| 17 | 3296−8 | Nut − Lock | 1 |
| 18 | 66−0170 | Washer − Nylon | 1 |
| 19 | 66−0190 | Spring − Detent | 1 |
| 20 | 52−7430 | Bar − Control | 1 |
| 21 | 46−5520 | Lever − Traction | 1 |
| 22 | 3296−58 | Nut − Flange | 2 |
| 23 | 17−9426 | Screw | 1 |
| 24 | 66−0330 | Spacer − Support | 1 |

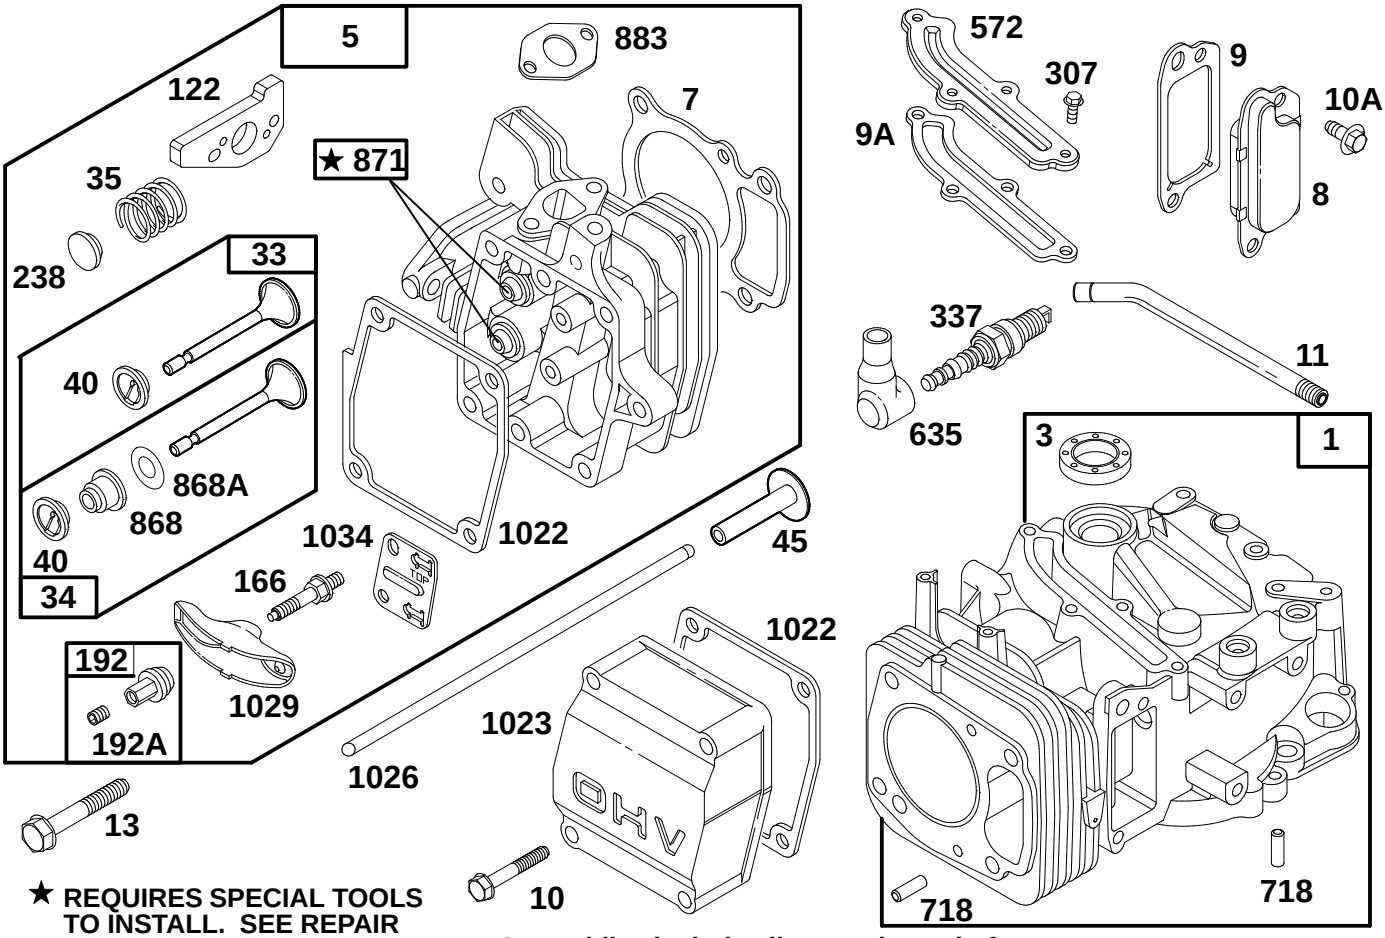


★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


**Assemblies include all parts shown in frames.**

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 77−7590 | Cylinder Assy | 1 |
| †3 | 77−9060 | Seal − Oil | 1 |
| 5 | 77−7730 | Head − Cylinder | 1 |
| †7 | 77−7740 | Gasket − Cylinder Head | 1 |
| 8 | 77−9300 | Breather Assy | 1 |
| †9 | 77−9250 | Gasket − Breather | 1 |
| †9A | 77−7410 | Gasket − Breather | 1 |
| 10 | 77−7360 | Screw − Hex Head (Valve Cover) | 1 |
| 10A | 77−9200 | Screw − Hex Head | 1 |
| 11 | 77−9410 | Tube − Breather | 1 |
| 13 | 77−7630 | Screw − Cylinder Head | 1 |
| 33 | 77−7860 | Valve − Exhaust | 1 |
| 34 | 77−7880 | Valve − Intake | 1 |
| 35 | 77−7810 | Spring − Valve | 1 |
| 40 | 77−7870 | Retainer − Spring | 1 |
| 45 | 77−7610 | Tappet − Valve | 1 |
| ‡122 | 77−7820 | Adapter Assy | 1 |
| 166 | 77−7780 | Stud − Rocker Arm | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 192 | 77−7910 | Ball & Screw − Rocker Arm | 1 |
| 192A | 77−9310 | Screw − Set | 1 |
| 238 | 77−7800 | Cap − Valve | 1 |
| 307 | 77−7420 | Screw − Cover Mtg (Breather Cover) | 1 |
| 337 | 77−7330 | Plug − Spark | 1 |
| 572 | 77−7400 | Cover − Breather | 1 |
| 635 | 77−7340 | Elbow − Spark Plug | 1 |
| 718 | 77−7600 | Pin − Dowel | 1 |
| †868 | 77−7890 | Seal Assy − Valve | 1 |
| †868A | 77−7900 | Gasket − Valve | 1 |
| 871 | 77−7850 | Bushing − Guide | 1 |
| †883 | 77−7760 | Gasket − Exhaust | 1 |
| †1022 | 77−7320 | Gasket − Rocker Cover | 1 |
| 1023 | 77−9320 | Cover − Valve | 1 |
| 1026 | 77−7620 | Rod − Push | 1 |
| 1029 | 77−7790 | Arm − Rocker | 1 |
| 1034 | 77−7770 | Guide − Push Rod | 1 |

† Included in Gasket Set − Part No. 77−8900
‡Included in Carburetor Overhaul Kit − Part No. 77−9580

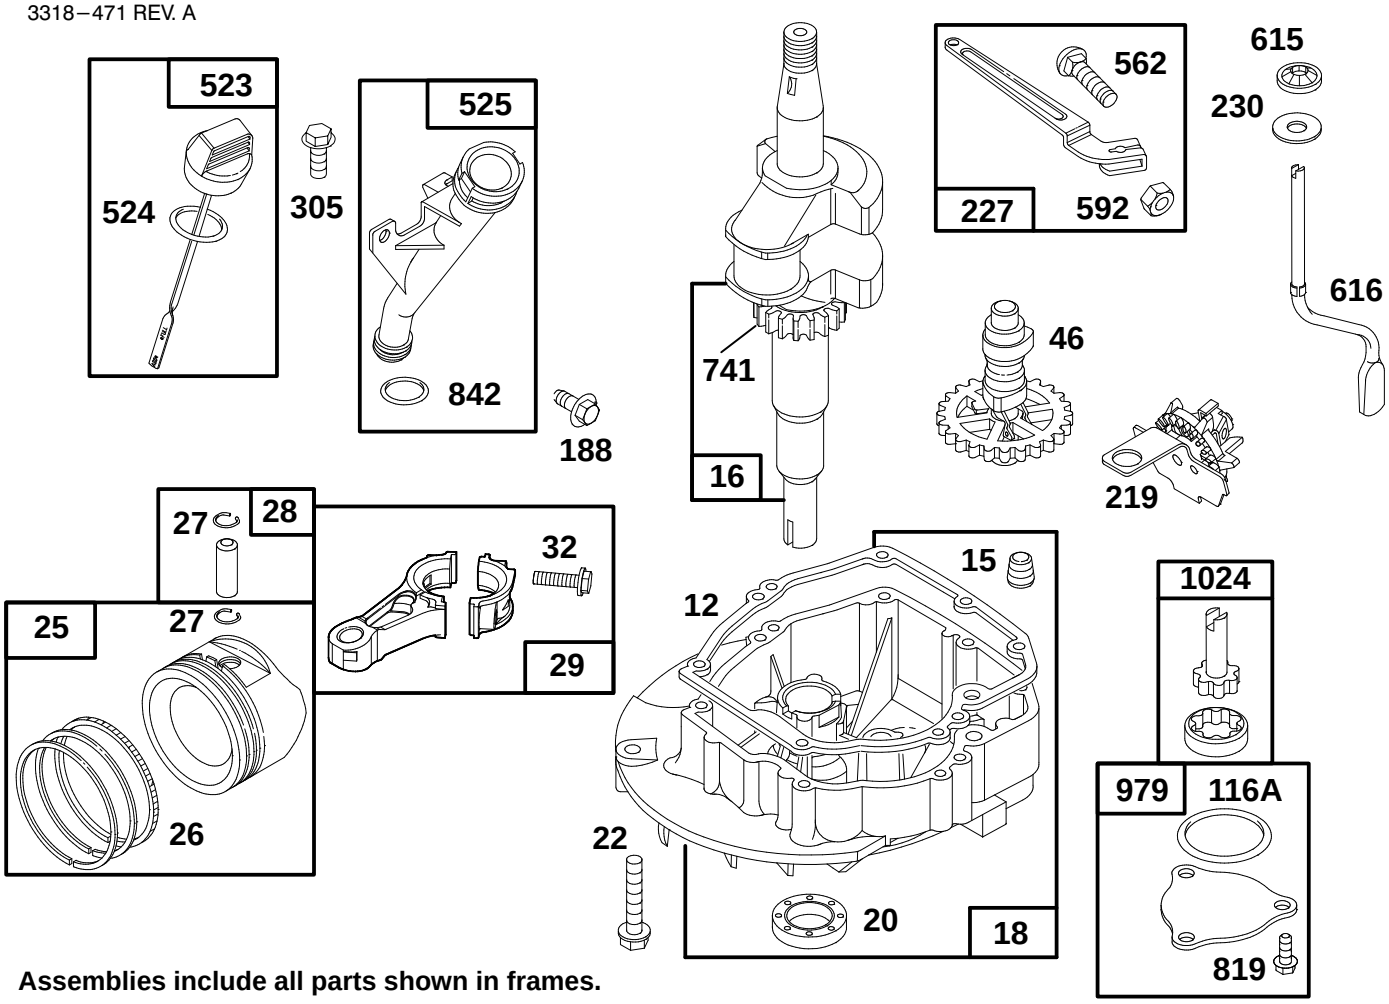



**Assemblies include all parts shown in frames.**

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †12 | 77−7550 | Gasket − Engine Base | 1 |
| 15 | 77−9240 | Plug − Pipe | 1 |
| 16 | 77−7510 | Crankshaft | |
| | | Note: Order Part No. 77−7540 For Timing Gear Key | 1 |
| 18 | 77−7560 | Base − Engine | 1 |
| †20 | 77−7570 | Seal − Oil | 1 |
| 22 | 77−9070 | Screw − Engine Base | 1 |
| 25 | 77−7690 | Piston Assy (Std.) | 1 |
| 26 | 77−7700 | Ring Set (Std.) | 1 |
| 27 | 77−7710 | Lock − Piston Pin | 1 |
| 28 | 77−9340 | Pin Assembly − Piston | 1 |
| 29 | 77−7670 | Rod − Connecting | 1 |
| 32 | 77−7680 | Screw − Connecting Rod | 1 |
| 46 | 77−7490 | Gear − Cam | 1 |
| †116A | 77−7660 | O−Ring | 1 |
| 188 | 77−9360 | Screw − Hex Head | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 219 | 77−7500 | Gear − Governor | 1 |
| 227 | 77−7370 | Lever Assembly − Governor | 1 |
| 230 | 77−7470 | Washer | 1 |
| 305 | 77−8310 | Screw − Hex Head | 1 |
| 523 | 77−7260 | Dipstick − Oil | 1 |
| †524 | 77−7270 | Seal − O−Ring | 1 |
| 525 | 77−7280 | Tube − Oil Fill | 1 |
| 562 | 77−7380 | Bolt − Governor Lever | 1 |
| 592 | 77−7390 | Nut − Hex | 1 |
| 615 | 77−7480 | Push Nut | 1 |
| 616 | 77−7460 | Crank − Governor | 1 |
| 741 | 77−7530 | Gear − Timing | 1 |
| †842 | 77−7300 | Seal − O−Ring | 1 |
| 819 | 77−7450 | Screw − Cap | 1 |
| 979 | 77−7650 | Cover − Oil Pump | 1 |
| 1024 | 77−7640 | Pump − Oil | 1 |

† Included in Gasket Set − Part No. 77−8900

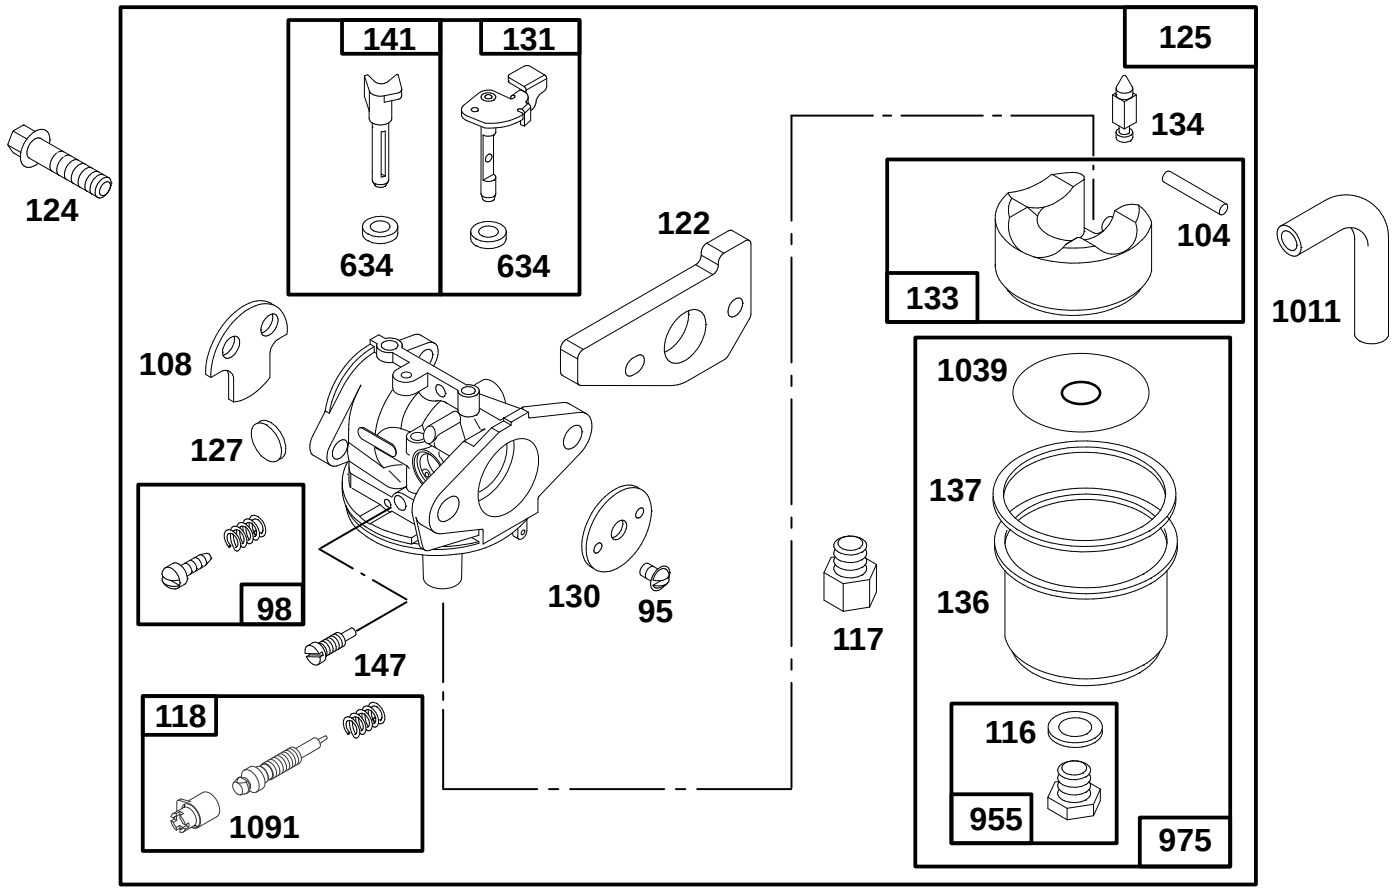



**Assemblies include all parts shown in frames.**

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 95 | 77−8090 | Screw − Valve Mtg | 1 |
| 98 | 77−8240 | Screw − Idle Adj. | 1 |
| ‡104 | 77−8180 | Pin − Float Hinge | 1 |
| 108 | 77−9600 | Valve − Choke | 1 |
| ‡*116 | 77−8210 | Gasket − Sealing | 1 |
| ‡117 | 77−9610 | Jet − Main<br>Note: For High Altitude Jet, Order Part No. 94−1650 | 1 |
| ‡118 | 77−9620 | Valve & Spring − Needle | 1 |
| ‡122 | 77−7820 | Adapter Assy | 1 |
| 124 | 77−7970 | Screw − Hex Head (Carb. Mtg.) | 1 |
| 125 | 77−9630 | Carburetor Assy | 1 |
| ‡127 | 94−1651 | Plug − Welch | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 130 | 77−8080 | Valve − Throttle | 1 |
| 131 | 77−8160 | Shaft − Throttle | 1 |
| 133 | 77−8170 | Float − Carburetor | 1 |
| ‡134 | 77−8110 | Valve − Inlet (Includes Seat) | 1 |
| 136 | 77−7240 | Bowl − Fuel | 1 |
| ‡*137 | 77−8200 | Gasket − Float Bowl | 1 |
| 141 | 77−8130 | Shaft − Choke | 1 |
| 147 | 77−9640 | Jet − Pilot | 1 |
| *634 | 77−8150 | Washer − Seal | 1 |
| 955 | 77−8220 | Screw − Hex Head | 1 |
| 975 | 77−8190 | Bowl Assy − Carburetor | 1 |
| 1011 | 77−8040 | Tube − Vent | 1 |
| ‡1039 | 77−7250 | Limiter − Float | 1 |
| ‡1091 | 77−9650 | Cap − Limiter | 1 |

‡ Included in Gasket Set − Part No. 77−9580
* Included in Gasket Set − Part No. 77−8930

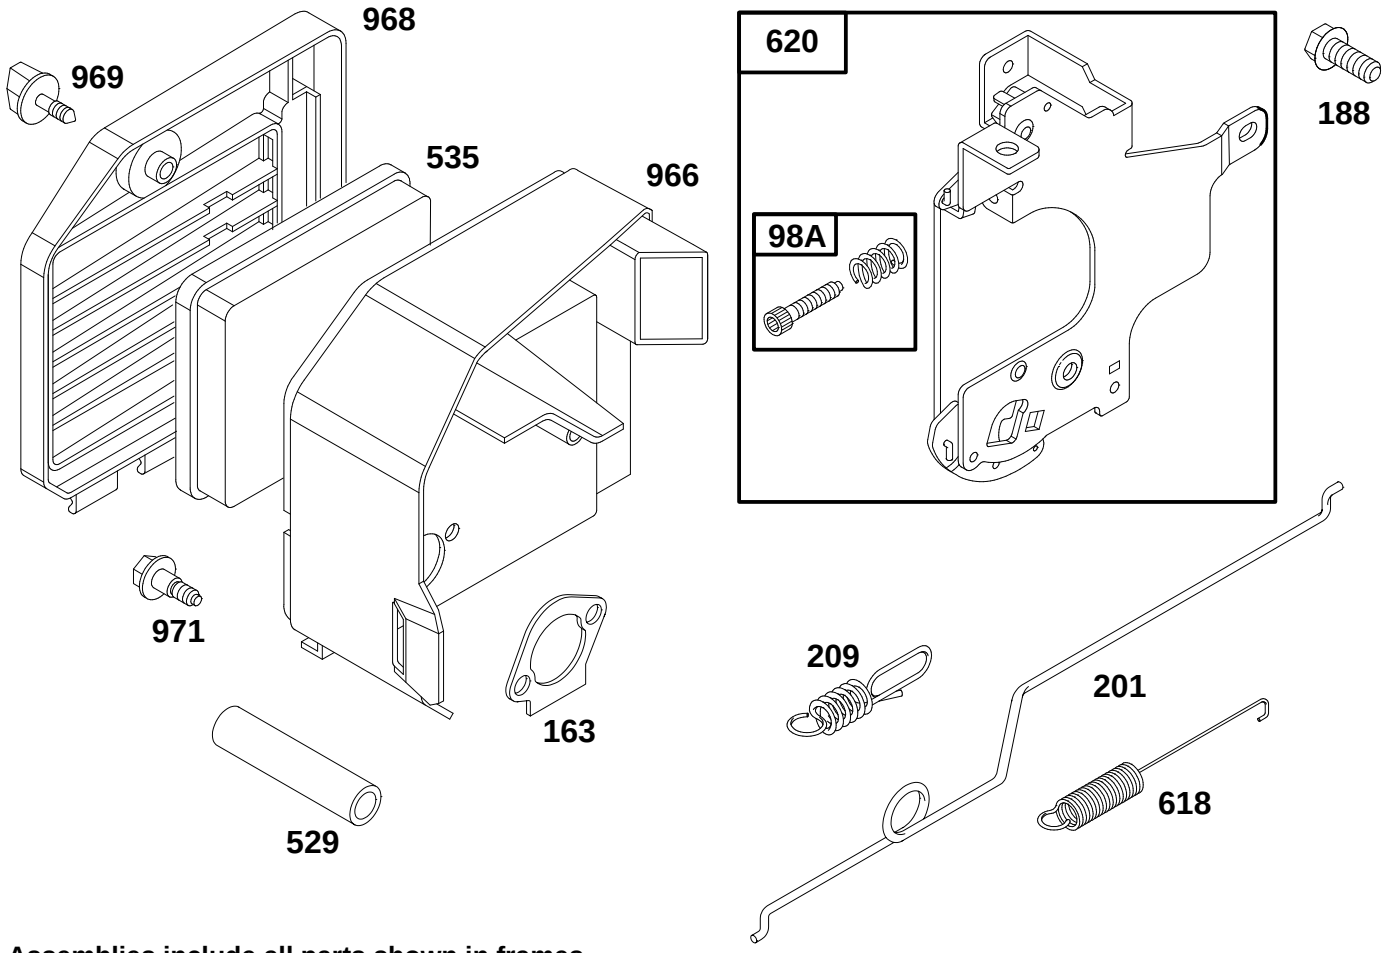



**Assemblies include all parts shown in frames.**

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 98A | 77−8020 | Screw Assy − Speed Adj. | 1 |
| †163 | 77−7960 | Gasket − Air Cleaner | 1 |
| 188 | 77−9360 | Screw − Hex Head | 1 |
| 201 | 77−7980 | Link − Governor | 1 |
| 209 | 77−7990 | Spring − Governor | 1 |
| 529 | 77−8030 | Tube − Breather | 1 |
| 535 | 77−7950 | Element − Filter | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 618 | 77−8140 | Spring − Choke | 1 |
| 620 | 77−8000 | Bracket − Carburetor | 1 |
| 966 | 77−7940 | Base − Air Cleaner | 1 |
| 968 | 77−7040 | Cover − Air Cleaner | 1 |
| 969 | 77−7920 | Screw − Air Cleaner | 1 |
| 971 | 77−7930 | Screw − Air Cleaner | 1 |

† Included in Gasket Set − Part No. 77−8900

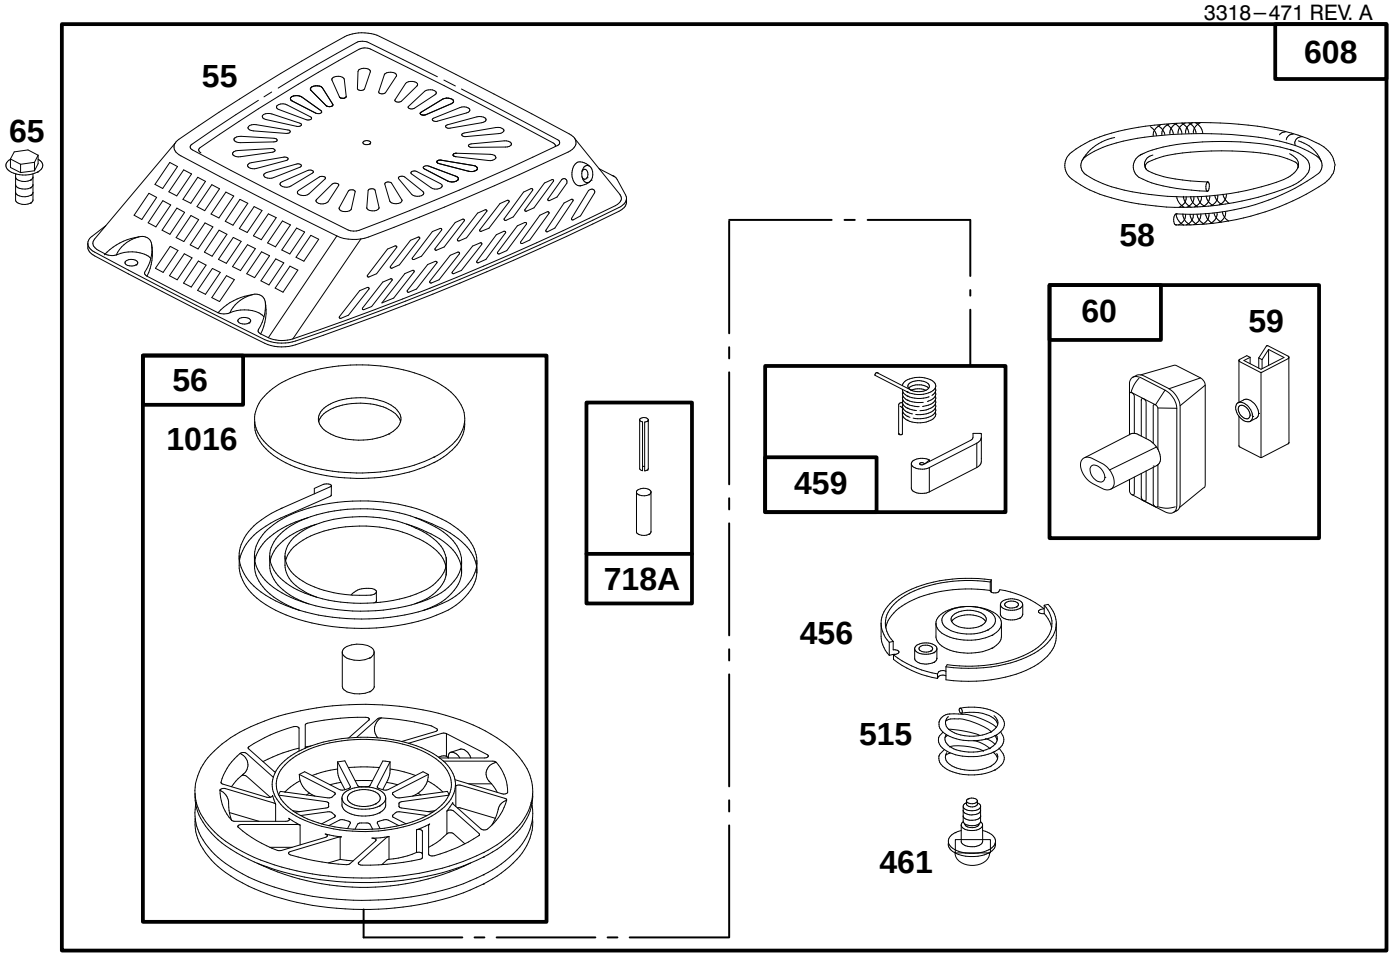



**Assemblies include all parts shown in frames.**

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 55 | 77−8460 | Housing − Rewind Starter | 1 |
| 56 | 77−9270 | Pulley − Rewind Starter | 1 |
| 58 | 77−8480 | Rope − Starter (Cut To Suit) | 1 |
| 59 | 77−7210 | Insert − Rewind Handle | 1 |
| 60 | 77−8510 | Handle − Rewind Starter | 1 |
| 65 | 77−8300 | Screw − Hex Head | 1 |
| 456 | 77−8470 | Retainer − Rewind Starter | 1 |
| 459 | 77−8530 | Pawl − Starter | 1 |
| 461 | 77−8490 | Screw − Rewind Starter | 1 |
| 515 | 77−8500 | Spring − Torsion | 1 |
| 608 | 77−8450 | Starter Assy − Rewind | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 718A | 77−8550 | Pin − Spring | 1 |
| 1016 | 77−8570 | Cover − Spring | 1 |
| | | Model No. 26633B−6900001 & Up may have been assembled with Starter Ass'y No. 77−8450 or 94−1678. Part identification will be required for service part replacement. | |

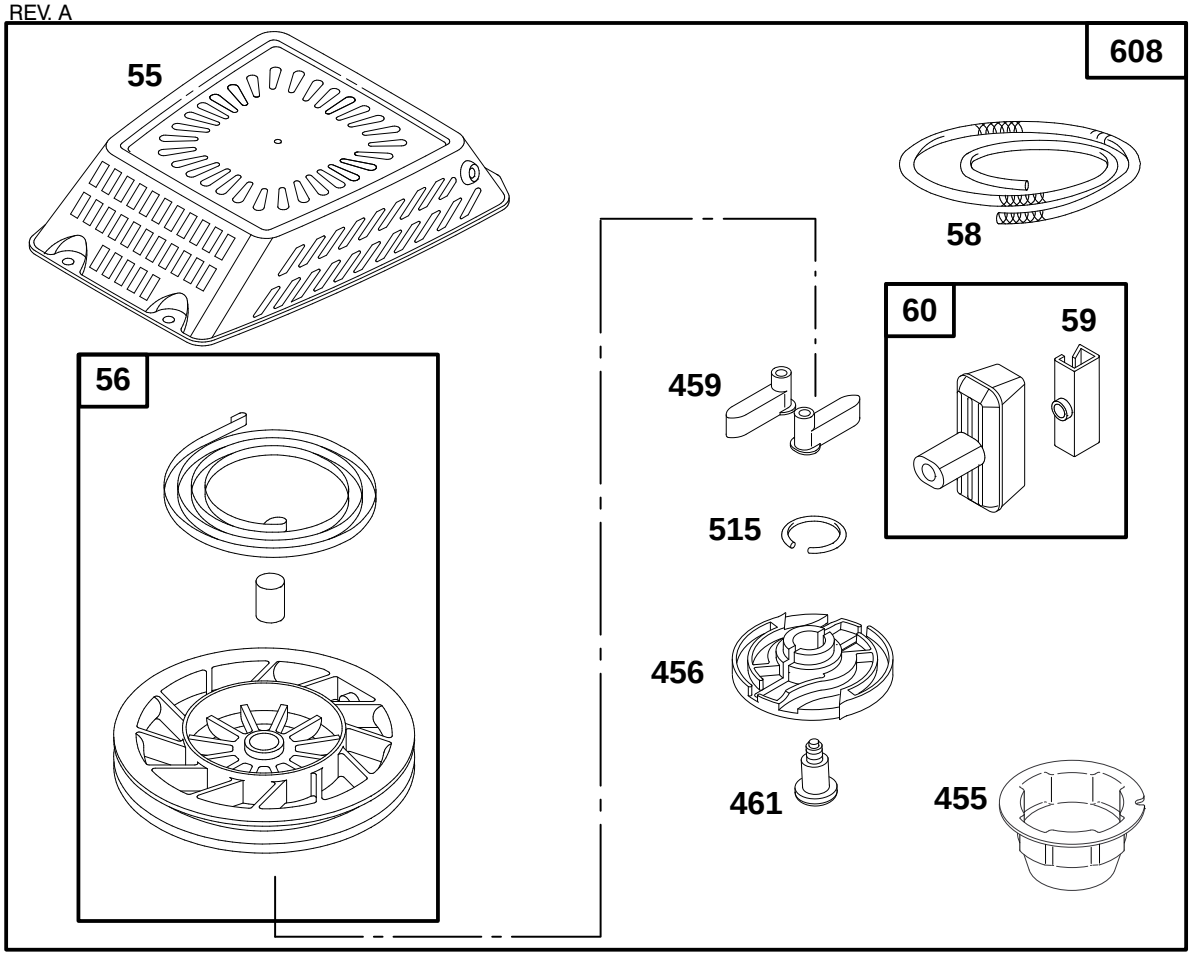



**Assemblies include all parts shown in frames.**

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 55 | 94−1656 | Housing−Rewind Starter | 1 |
| 56 | 94−1657 | Pulley−Rewind Starter | 1 |
| 58 | 94−1668 | Rope−Starter (Cut To Suit) | 1 |
| 59 | 77−7210 | Insert−Rewind Handle | 1 |
| 60 | 77−8520 | Handle−Rewind Starter | 1 |
| 65 | 77−8300 | Screw−Hex Head | 1 |
| 455 | 94−1653 | Cup − Starter | 1 |
| 456 | 94−1659 | Retainer−Rewind Starter | 1 |
| 459 | 94−1654 | Pawl−Starter | 1 |
| 461 | 94−1660 | Screw−Rewind Starter | 1 |
| 515 | 94−1655 | Spring−Torsion | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 608 | 94−1678 | Starter Assy−Rewind<br><br>Model No. 26633B−6900001 & Up may have been assembled with Starter Ass'y No. 77−8450 or 94−1678. Part identification will be required for service part replacement. | 1 |

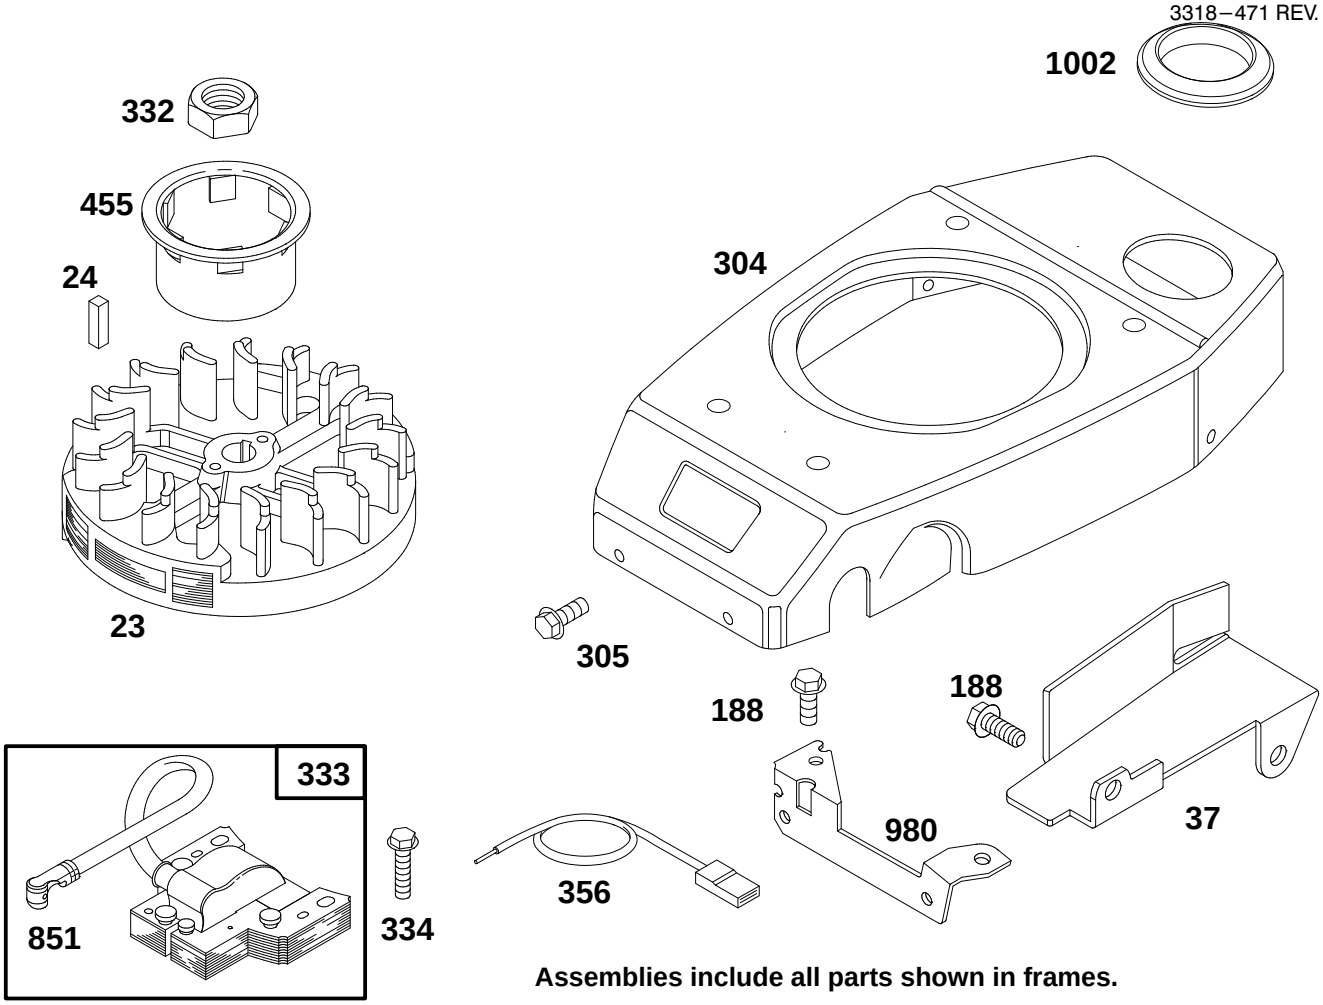



**Assemblies include all parts shown in frames.**

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 23 | 77−8330 | Flywheel − Magneto | 1 |
| 24 | 77−8340 | Key − Flywheel | 1 |
| 37 | 77−7190 | Guard − Flywheel | 1 |
| 188 | 77−9360 | Screw − Hex Head | 1 |
| 304 | 77−8270 | Housing − Blower | 1 |
| 305 | 77−8310 | Screw − Hex Head | 1 |
| 332 | 77−8360 | Nut − Flywheel | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 333 | 77−8420 | Armature − Magneto | 1 |
| 334 | 77−9420 | Screw − Armature Mtg. | 1 |
| 356 | 77−8400 | Wire − Ground | 1 |
| 455 | 77−8350 | Cup − Starter | 1 |
| 851 | 77−8430 | Terminal − Spark Plug | 1 |
| 980 | 77−7140 | Bracket − Blower Housing | 1 |
| 1002 | 77−7180 | Grommet | 1 |

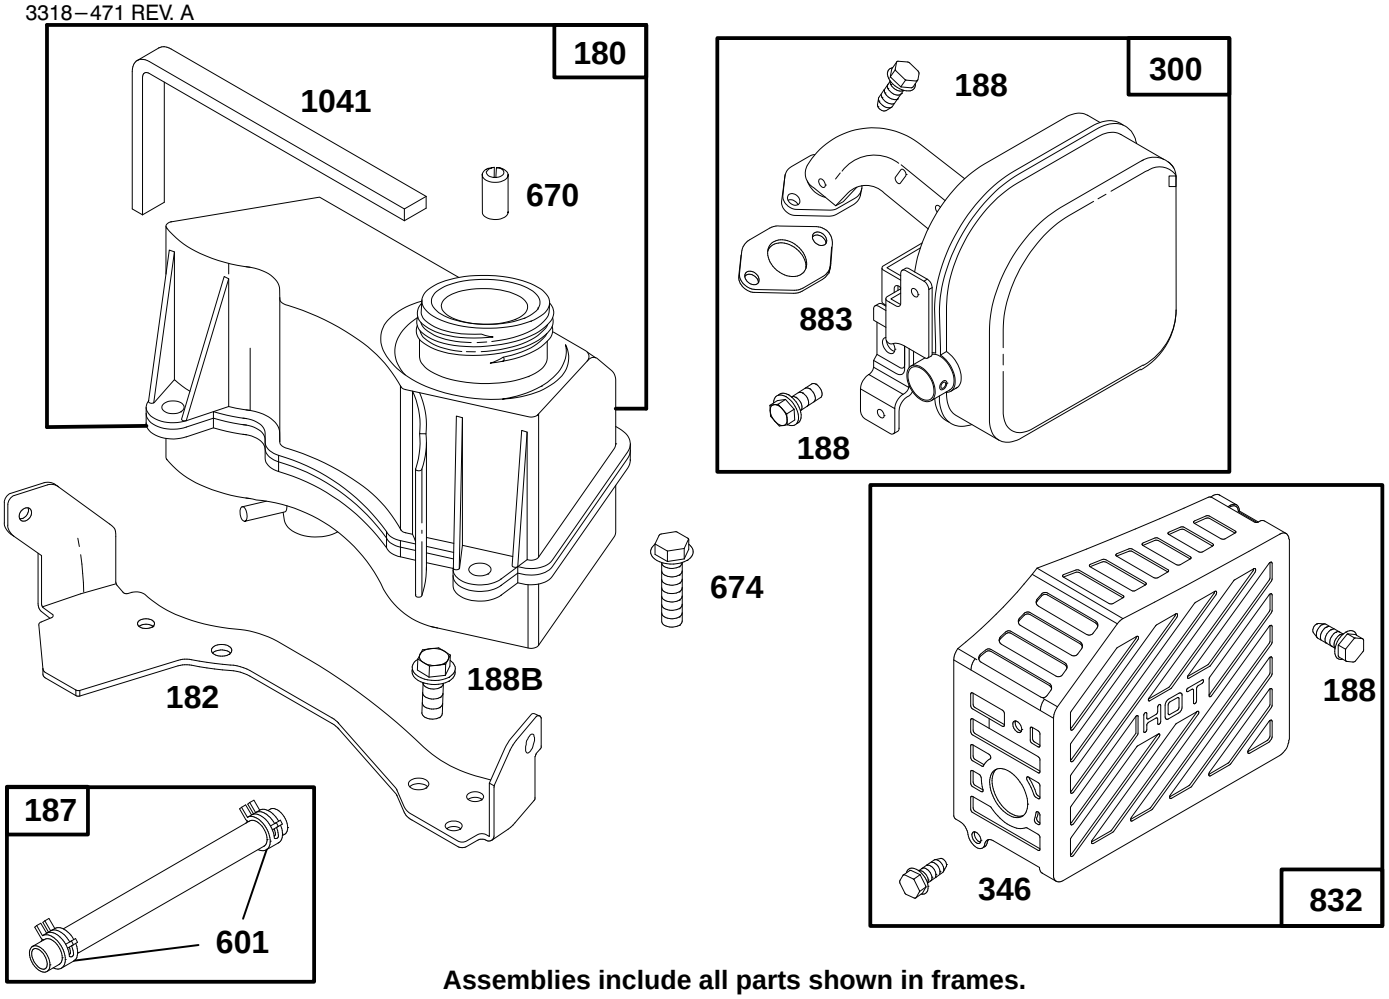



**Assemblies include all parts shown in frames.**


# ENGINE GTS 150


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 180 | 77−8580 | Tank Assy − Fuel | 1 |
| 182 | 77−7170 | Bracket − Fuel Tank | 1 |
| 187 | 78−4100 | Hose − Fuel (Cut To Suit) | 1 |
| 188 | 77−9360 | Screw − Cap | 1 |
| 300 | 77−8640 | Muffler − Exhaust | 1 |
| 346 | 77−9430 | Screw − Hex Head | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 601 | 78−4690 | Clamp − Hose | 1 |
| 670 | 77−9030 | Spacer − Fuel Tank | 1 |
| 674 | 77−8600 | Screw − Tank Mtg. | 1 |
| †832 | 77−9290 | Guard − Muffler | 1 |
| †1041 | 77−8590 | Seal − Foam | 1 |

† Included in Gasket Set − Part No. 77−8900

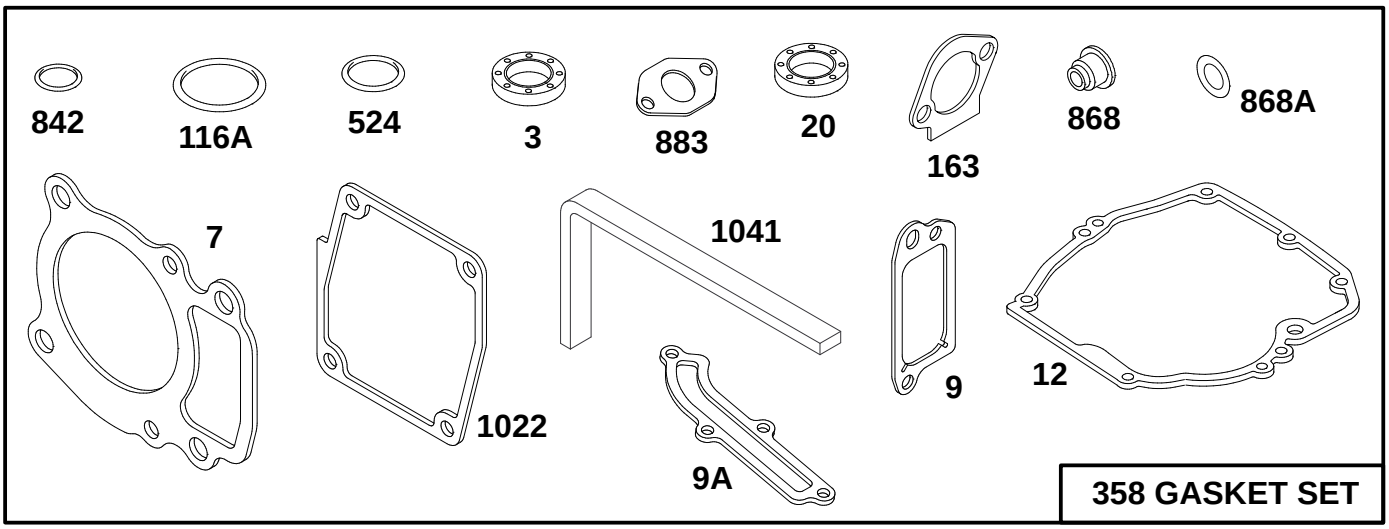

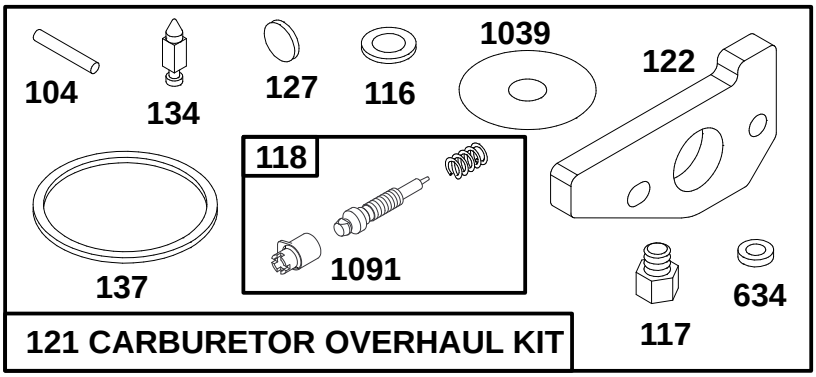
**Assemblies include all parts shown in frames.**
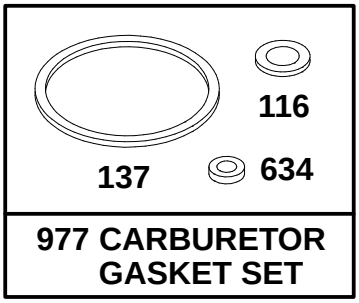
# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †3 | 77−9060 | Seal − Oil (Upper) | 1 |
| †7 | 77−7740 | Gasket − Cylinder Head | 1 |
| †9 | 77−9250 | Gasket − Breather | 1 |
| †9A | 77−7410 | Gasket − Breather Cover | 1 |
| †12 | 77−7550 | Gasket − Engine Base | 1 |
| †20 | 77−7570 | Seal − Oil (Lower) | 1 |
| ‡104 | 77−8180 | Pin − Float Hinge | 1 |
| ‡*116 | 77−8210 | Washer − Bowl | 1 |
| †116A | 77−7660 | Seal − O−Ring | 1 |
| ‡117 | 77−9610 | Jet − Main | 1 |
| ‡118 | 77−9620 | Valve & Spring − Needle | 1 |
| 121 | 77−9580 | Overhaul Kit − Carburetor | 1 |
| ‡122 | 77−7820 | Adapter Assy | 1 |
| ‡127 | 94−1651 | Plug − Welch | 1 |
| ‡134 | 77−8110 | Valve − Inlet (Includes Seat) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| ‡*137 | 77−8200 | Gasket − Float Bowl | 1 |
| †163 | 77−7960 | Gasket − Air Cleaner | 1 |
| 358 | 77−8900 | Gasket Set | 1 |
| †524 | 77−7270 | Seal − O−Ring (Oil Fill Cap) | 1 |
| *634 | 77−8150 | Washer − Seal | 1 |
| †842 | 77−7300 | Seal − O−Ring (Oil Fill Tube) | 1 |
| †868 | 77−7890 | Seal Assy − Valve | 1 |
| †868A | 77−7900 | Seal − Valve | 1 |
| †883 | 77−7760 | Gasket − Exhaust | 1 |
| 977 | 77−8930 | Carburetor Gasket Set | 1 |
| †1022 | 77−7320 | Gasket − Rocker Cover | 1 |
| ‡1039 | 77−7250 | Limiter − Float | 1 |
| †1041 | 77−8590 | Seal − Foam (Fuel Tank) | 1 |
| ‡1091 | 77−9650 | Cap − Limiter | 1 |

‡ Incl. in Carburetor Overhaul Kit − Part No. 77−9580
*Incl. in Carburetor Gasket Set − Part No. 77−8930

† Included in Gasket Set − Part No. 77−8900

# TORO PART NUMBER INDEX

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 11−0580 | Screw | 3 | 45 | 1 |
| 14−9949 | Asm − Wheel & Tire, 8 | 1 | 22 | 2 |
| 14−9959 | Wheel Tire & Gear Assy. | 6 | 31 | 2 |
| 16−1769 | Housing | 1 | 11 | 1 |
| 16−8969 | Panel − Control | 4 | 17 | 1 |
| 17−1569 | Door − Discharge | 1 | 1 | 1 |
| 17−9425 | Screw − Handle | 8 | 6 | 1 |
| 17−9426 | Screw | 8 | 23 | 1 |
| 19−4050 | Knob | 4 | 2 | 2 |
| 25−7740 | Knob − Arm | 6 | 3 | 2 |
| 25−7740 | Knob − Arm | 1 | 14 | 2 |
| 27−6231 | Bolt − Wheel | 1 | 23 | 2 |
| 27−6231 | Bolt − Wheel | 6 | 33 | 2 |
| 27−6250 | Bushing − Wheel | 6 | 32 | 4 |
| 27−6250 | Bushing − Wheel | 1 | 38 | 4 |
| 29−9570 | Bushing − Yoke | 6 | 38 | 1 |
| 36−4780 | Washer − Thrust | 6 | 44 | 1 |
| 36−4791 | Washer − Thrust | 7 | 48 | 2 |
| 36−8070 | V−Belt | 6 | 13 | 1 |
| 38−7820 | Bearing − Ball | 7 | 60 | 1 |
| 40−1940 | Washer | 1 | 15 | 4 |
| 42−3190 | Bolt − Blade | 3 | 28 | 2 |
| 42−6890 | Asm − Hub | 3 | 32 | 1 |
| 46−5460 | Housing − Control LH | 8 | 7 | 1 |
| 46−5510 | Spring − Torsion | 8 | 11 | 1 |
| 46−5520 | Lever − Traction | 8 | 21 | 1 |
| 46−5530 | Hook − Control | 8 | 14 | 1 |
| 46−5540 | Lever − Cable | 8 | 3 | 1 |
| 46−5550 | Bushing | 8 | 10 | 1 |
| 46−5590 | Spacer | 8 | 8 | 1 |
| 46−5650 | Pulley − Idler | 3 | 43 | 1 |
| 46−6431 | Screw − Handle | 8 | 5 | 1 |
| 46−7040 | Screw − Hex Washer Hd. | 3 | 13 | 1 |
| 46−7040 | Screw − Hex Washer Hd. | 8 | 16 | 3 |
| 48−2060 | Bearing −Needle | 6 | 21 | 2 |
| 49−2040 | Screw − Self Tapping | 6 | 8 | 8 |
| 52−3480 | Damper − Vibration | 3 | 42 | 2 |
| 52−7410 | Spring − Leaf | 8 | 13 | 1 |
| 52−7430 | Bar − Control | 8 | 20 | 1 |
| 54−9190 | Nut − Lock | 3 | 37 | 2 |
| 55−3760 | Gear − Pinion 15T | 7 | 49 | 1 |
| 55−3770 | Gear − 49T (1st Gear) | 7 | 58 | 1 |
| 55−3780 | Gear − Pinion 20T | 7 | 50 | 1 |
| 55−3790 | Gear − 44T (2nd Gear) | 7 | 57 | 1 |
| 55−3800 | Gear − Pinion 25T | 7 | 51 | 1 |
| 55−3810 | Gear − 39T (3rd Gear) | 7 | 56 | 1 |
| 57−6290 | Pin − Insert | 8 | 12 | 1 |
| 60−8710 | Case − Gear (Upper) | 7 | 61 | 1 |
| 60−8730 | Cover − Gear Case | 7 | 46 | 1 |
| 60−8750 | Bushing − Intrmdt. Shaft | 7 | 47 | 2 |
| 60−8770 | Bushing − Output Shaft | 7 | 45 | 1 |
| 60−8790 | Sleeve − Gear | 7 | 55 | 1 |
| 60−8800 | Shaft − Intermediate | 7 | 52 | 1 |
| 60−8810 | Retainer − Shift Fork | 6 | 39 | 1 |
| 60−8840 | Pulley − Half | 6 | 10 | 2 |
| 60−8850 | Bushing − Output Shaft | 7 | 53 | 1 |
| 60−8870 | Yoke − Shift | 6 | 37 | 1 |
| 60−8890 | Pinion − Bevel | 7 | 59 | 1 |
| 62−3890 | Drum − Brake | 3 | 31 | 1 |
| 62−4280 | Spacer − Blade | 3 | 34 | 1 |
| 62−6660 | Spacer | 6 | 9 | 1 |
| 62−6673 | Gear Case Assy. Complete | 7 | * | 1 |
| 62−7560 | Pulley − Driver | 3 | 26 | 1 |
| 62−7700 | Bade − 21 | 3 | 35 | 1 |
| 65−2720 | Ring − Retaining | 6 | 24 | 4 |
| 65−4710 | Ring − Friction | 6 | 25 | 2 |
| 65−4720 | Spring − Compression | 6 | 29 | 2 |
| 65−4730 | Washer − Thrust (Inner) | 6 | 22 | 2 |
| 65−4740 | Washer − Thrust (Keyed) | 6 | 23 | 4 |
| 65−4750 | Pinion | 6 | 28 | 2 |
| 65−4760 | Washer −Clutch | 6 | 26 | 2 |
| 65−4770 | Shaft − Output | 6 | 17 | 1 |
| 65−5042 | Pivot Arm Assembly | 6 | 2 | 2 |
| 65−5070 | Hub − Plate | 3 | 2 | 1 |
| 65−5130 | Hub − Pulley | 3 | 4 | 2 |
| 65−5190 | Bracket − Belt Guide | 6 | 7 | 1 |
| 65−5200 | Shield − BBC | 3 | 33 | 1 |
| 65−5210 | Screw | 1 | 4 | 2 |
| 65−5220 | Screw | 1 | 16 | 2 |
| 65−5220 | Screw − Socket Hd. Cap | 6 | 36 | 2 |
| 65−5250 | Clip − Spring | 6 | 43 | 1 |
| 65−5280 | Retainer − Spring | 3 | 24 | 1 |
| 65−5300 | Flywheel − BBC | 3 | 27 | 1 |
| 65−5320 | Rod − Spring | 3 | 6 | 1 |
| 65−5330 | Screen − BBC | 3 | 39 | 1 |
| 65−5380 | Washer − Flat | 3 | 46 | 1 |
| 65−5440 | Spring Arm Assembly | 6 | 4 | 2 |
| 65−5660 | Panel − Screen | 1 | 9 | 1 |
| 65−5670 | Bolt − Shoulder | 3 | 7 | 1 |
| 65−5690 | Bushing − Bellcrank | 3 | 18 | 1 |
| 65−5700 | Crank | 3 | 19 | 1 |
| 65−5720 | Bushing | 3 | 11 | 1 |
| 65−5740 | V−Belt | 3 | 3 | 1 |
| 65−5780 | Shoe − Brake | 3 | 1 | 1 |
| 66−0020 | Panel − Vertical | 1 | 12 | 1 |
| 66−0030 | Bracket − Cable Support | 3 | 16 | 1 |
| 66−0090 | Lever −Brake | 3 | 10 | 1 |
| 66−0160 | Housing − Control RH | 8 | 15 | 1 |
| 66−0170 | Washer − Nylon | 8 | 18 | 1 |
| 66−0180 | Rocker | 8 | 4 | 1 |
| 66−0190 | Spring − Detent | 8 | 19 | 1 |
| 66−0330 | Spacer − Support | 8 | 24 | 1 |
| 66−0350 | Bushing − Flange | 3 | 9 | 1 |
| 66−0360 | Cap − End | 6 | 5 | 2 |
| 66−0540 | Asm − Spring Arm, Front | 1 | 18 | 2 |
| 66−0560 | Screw − Shoulder | 1 | 21 | 2 |
| 66−0570 | Guide − Belt | 2 | 9 | 1 |
| 66−0580 | Arm − Pivot | 1 | 20 | 2 |
| 66−6040 | Key − Rocking (R.H.) | 6 | * | 1 |
| 66−6050 | Key − Rocking (L.H.) | 6 | 27 | 1 |
| 70−9760 | Bushing − Sleeve | 6 | 19 | 2 |
| 71−3630 | Spring − Compression | 3 | 23 | 1 |
| 71−3640 | Spring − Compression | 3 | 8 | 1 |
| 71−3650 | Link − Control | 3 | 21 | 1 |
| 71−3660 | Pin−Spring | 3 | 20 | 1 |
| 71−7900 | Cap−Bolt, Hinge LH | 1 | 2 | 1 |
| 71−7910 | Cap − Bolt, Hinge RH | 1 | 5 | 1 |
| 71−8090 | Mount − Handle LH | 4 | 1 | 1 |
| 71−8100 | Mount − Handle RH | 4 | 24 | 1 |
| 71−8580 | Spacer − Door | 1 | 28 | 2 |
| 71−9470 | Door − Bag | 5 | 3 | 1 |
| 71−9480 | Handle − Door | 5 | 2 | 1 |
| 71−9640 | Ramp − Discharge | 1 | 19 | 1 |
| 71−9650 | Access − Cover | 1 | 25 | 1 |
| 71−9680 | Bag − Grass | 5 | 5 | 1 |
| 71−9840 | Spring − Door | 1 | 29 | 2 |
| 71−9870 | Decal − Deck | 1 | 13 | 1 |
| 71−9872 | Decal − Panel | 4 | 9 | 1 |
| 71−9920 | Cover − Top | 1 | 24 | 1 |
| 71−9930 | Frame | 5 | 4 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 74−1660 | Cover − Wheel | 6 | 30 | 2 |
| 74−1670 | Spacer − Wheel Cover | 6 | 34 | 2 |
| 76−0760 | Key − Shift | 6 | 41 | 2 |
| 76−0770 | Collar − Shift | 6 | 42 | 1 |
| 76−0780 | Sleeve − Shift Key | 6 | 40 | 1 |
| 76−0920 | Lever − Shift | 6 | 16 | 1 |
| 76−2930 | Retainer − Cable | 6 | 15 | 1 |
| 77−7040 | Cover − Air Cleaner | 12 | 968 | 1 |
| 77−7140 | Bracket − Blower Housing | 15 | 980 | 1 |
| 77−7170 | Bracket − Fuel Tank | 16 | 182 | 1 |
| 77−7180 | Grommet | 15 | 1002 | 1 |
| 77−7190 | Guard − Flywheel | 15 | 37 | 1 |
| 77−7210 | Insert − Rewind Handle | 13 | 59 | 1 |
| 77−7210 | Insert−Rewind Handle | 14 | 59 | 1 |
| 77−7240 | Bowl − Fuel | 11 | 136 | 1 |
| 77−7250 | Limiter − Float | 11 | 1039 | 1 |
| 77−7250 | Limiter − Float | 17 | 1039 | 1 |
| 77−7260 | Dipstick − Oil | 10 | 523 | 1 |
| 77−7270 | Seal − O−Ring | 10 | 524 | 1 |
| 77−7270 | Seal − O−Ring | 17 | 524 | 1 |
| 77−7280 | Tube − Oil Fill | 10 | 525 | 1 |
| 77−7300 | Seal − O−Ring | 10 | 842 | 1 |
| 77−7300 | Seal − O−Ring | 17 | 842 | 1 |
| 77−7320 | Gasket − Rocker Cover | 17 | 1022 | 1 |
| 77−7320 | Gasket − Rocker Cover | 9 | 1022 | 1 |
| 77−7330 | Plug − Spark | 9 | 337 | 1 |
| 77−7340 | Elbow − Spark Plug | 9 | 635 | 1 |
| 77−7360 | Screw − Hex Head | 9 | 10 | 1 |
| 77−7370 | Lever Assembly − Governor | 10 | 227 | 1 |
| 77−7380 | Bolt − Governor Lever | 10 | 562 | 1 |
| 77−7390 | Nut − Hex | 10 | 592 | 1 |
| 77−7400 | Cover − Breather | 9 | 572 | 1 |
| 77−7410 | Gasket − Breather | 9 | 9A | 1 |
| 77−7410 | Gasket − Breather Cover | 17 | 9A | 1 |
| 77−7420 | Screw − Cover Mtg | 9 | 307 | 1 |
| 77−7450 | Screw − Cap | 10 | 819 | 1 |
| 77−7460 | Crank − Governor | 10 | 616 | 1 |
| 77−7470 | Washer | 10 | 230 | 1 |
| 77−7480 | Push Nut | 10 | 615 | 1 |
| 77−7490 | Gear − Cam | 10 | 46 | 1 |
| 77−7500 | Gear − Governor | 10 | 219 | 1 |
| 77−7510 | Crankshaft | 10 | 16 | 1 |
| 77−7530 | Gear − Timing | 10 | 741 | 1 |
| 77−7550 | Gasket − Engine Base | 10 | 12 | 1 |
| 77−7550 | Gasket − Engine Base | 17 | 12 | 1 |
| 77−7560 | Base − Engine | 10 | 18 | 1 |
| 77−7570 | Seal − Oil | 10 | 20 | 1 |
| 77−7570 | Seal − Oil | 17 | 20 | 1 |
| 77−7590 | Cylinder Assy | 9 | 1 | 1 |
| 77−7600 | Pin − Dowel | 9 | 718 | 1 |
| 77−7610 | Tappet − Valve | 9 | 45 | 1 |
| 77−7620 | Rod − Push | 9 | 1026 | 1 |
| 77−7630 | Screw − Cylinder Head | 9 | 13 | 1 |
| 77−7640 | Pump − Oil | 10 | 1024 | 1 |
| 77−7650 | Cover − Oil Pump | 10 | 979 | 1 |
| 77−7660 | O−Ring | 10 | 116A | 1 |
| 77−7660 | Seal − O−Ring | 17 | 116A | 1 |
| 77−7670 | Rod − Connecting | 10 | 29 | 1 |
| 77−7680 | Screw − Connecting Rod | 10 | 32 | 1 |
| 77−7690 | Piston Assy (Std.) | 10 | 25 | 1 |
| 77−7700 | Ring Set (Std.) | 10 | 26 | 1 |
| 77−7710 | Lock − Piston Pin | 10 | 27 | 1 |
| 77−7730 | Head − Cylinder | 9 | 5 | 1 |
| 77−7740 | Gasket − Cylinder Head | 17 | 7 | 1 |
| 77−7740 | Gasket − Cylinder Head | 9 | 7 | 1 |
| 77−7760 | Gasket − Exhaust | 17 | 883 | 1 |
| 77−7760 | Gasket − Exhaust | 9 | 883 | 1 |
| 77−7770 | Guide − Push Rod | 9 | 1034 | 1 |
| 77−7780 | Stud − Rocker Arm | 9 | 166 | 1 |
| 77−7790 | Arm − Rocker | 9 | 1029 | 1 |
| 77−7800 | Cap − Valve | 9 | 238 | 1 |
| 77−7810 | Spring − Valve | 9 | 35 | 1 |
| 77−7820 | Adapter Assy | 11 | 122 | 1 |
| 77−7820 | Adapter Assy | 17 | 122 | 1 |
| 77−7820 | Adapter Assy | 9 | 122 | 1 |
| 77−7850 | Bushing − Guide | 9 | 871 | 1 |
| 77−7860 | Valve − Exhaust | 9 | 33 | 1 |
| 77−7870 | Retainer − Spring | 9 | 40 | 1 |
| 77−7880 | Valve − Intake | 9 | 34 | 1 |
| 77−7890 | Seal Assy − Valve | 17 | 868 | 1 |
| 77−7890 | Seal Assy − Valve | 9 | 868 | 1 |
| 77−7900 | Gasket − Valve | 9 | 868A | 1 |
| 77−7900 | Seal − Valve | 17 | 868A | 1 |
| 77−7910 | Ball & Screw − Rocker Arm | 9 | 192 | 1 |
| 77−7920 | Screw − Air Cleaner | 12 | 969 | 1 |
| 77−7930 | Screw − Air Cleaner | 12 | 971 | 1 |
| 77−7940 | Base − Air Cleaner | 12 | 966 | 1 |
| 77−7950 | Element − Filter | 12 | 535 | 1 |
| 77−7960 | Gasket − Air Cleaner | 12 | 163 | 1 |
| 77−7960 | Gasket − Air Cleaner | 17 | 163 | 1 |
| 77−7970 | Screw − Hex Head | 11 | 124 | 1 |
| 77−7980 | Link − Governor | 12 | 201 | 1 |
| 77−7990 | Spring − Governor | 12 | 209 | 1 |
| 77−8000 | Bracket − Carburetor | 12 | 620 | 1 |
| 77−8020 | Screw Assy − Speed Adj. | 12 | 98A | 1 |
| 77−8030 | Tube − Breather | 12 | 529 | 1 |
| 77−8040 | Tube − Vent | 11 | 1011 | 1 |
| 77−8080 | Valve − Throttle | 11 | 130 | 1 |
| 77−8090 | Screw − Valve Mtg | 11 | 95 | 1 |
| 77−8110 | Valve − Inlet | 11 | 134 | 1 |
| 77−8110 | Valve − Inlet | 17 | 134 | 1 |
| 77−8130 | Shaft − Choke | 11 | 141 | 1 |
| 77−8140 | Spring − Choke | 12 | 618 | 1 |
| 77−8150 | Washer − Seal | 11 | *634 | 1 |
| 77−8150 | Washer − Seal | 17 | *634 | 1 |
| 77−8160 | Shaft − Throttle | 11 | 131 | 1 |
| 77−8170 | Float − Carburetor | 11 | 133 | 1 |
| 77−8180 | Pin − Float Hinge | 11 | 104 | 1 |
| 77−8180 | Pin − Float Hinge | 17 | 104 | 1 |
| 77−8190 | Bowl Assy − Carburetor | 11 | 975 | 1 |
| 77−8200 | Gasket − Float Bowl | 11 | *137 | 1 |
| 77−8200 | Gasket − Float Bowl | 17 | *137 | 1 |
| 77−8210 | Gasket − Sealing | 11 | *116 | 1 |
| 77−8220 | Screw − Hex Head | 11 | 955 | 1 |
| 77−8240 | Screw − Idle Adj. | 11 | 98 | 1 |
| 77−8270 | Housing − Blower | 15 | 304 | 1 |
| 77−8300 | Screw − Hex Head | 13 | 65 | 1 |
| 77−8300 | Screw−Hex Head | 14 | 65 | 1 |
| 77−8310 | Screw − Hex Head | 10 | 305 | 1 |
| 77−8310 | Screw − Hex Head | 15 | 305 | 1 |
| 77−8330 | Flywheel − Magneto | 15 | 23 | 1 |
| 77−8340 | Key − Flywheel | 15 | 24 | 1 |
| 77−8350 | Cup − Starter | 15 | 455 | 1 |
| 77−8360 | Nut − Flywheel | 15 | 332 | 1 |
| 77−8400 | Wire − Ground | 15 | 356 | 1 |
| 77−8420 | Armature − Magneto | 15 | 333 | 1 |
| 77−8430 | Terminal − Spark Plug | 15 | 851 | 1 |
| 77−8450 | Starter Assy − Rewind | 13 | 608 | 1 |
| 77−8460 | Housing − Rewind Starter | 13 | 55 | 1 |
| 77−8470 | Retainer − Rewind Starter | 13 | 456 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 77−8480 | Rope − Starter | 13 | 58 | 1 |
| 77−8490 | Screw − Rewind Starter | 13 | 461 | 1 |
| 77−8500 | Spring − Torsion | 13 | 515 | 1 |
| 77−8510 | Handle − Rewind Starter | 13 | 60 | 1 |
| 77−8520 | Handle−Rewind Starter | 14 | 60 | 1 |
| 77−8530 | Pawl − Starter | 13 | 459 | 1 |
| 77−8550 | Pin − Spring | 13 | 718A | 1 |
| 77−8570 | Cover − Spring | 13 | 1016 | 1 |
| 77−8580 | Tank Assy − Fuel | 16 | 180 | 1 |
| 77−8590 | Seal − Foam | 16 | 1041 | 1 |
| 77−8590 | Seal − Foam | 17 | 1041 | 1 |
| 77−8600 | Screw − Tank Mtg. | 16 | 674 | 1 |
| 77−8640 | Muffler − Exhaust | 16 | 300 | 1 |
| 77−8900 | Gasket Set | 17 | 358 | 1 |
| 77−8930 | Carburetor Gasket Set | 17 | 977 | 1 |
| 77−9030 | Spacer − Fuel Tank | 16 | 670 | 1 |
| 77−9060 | Seal − Oil | 17 | 3 | 1 |
| 77−9060 | Seal − Oil | 9 | 3 | 1 |
| 77−9070 | Screw − Engine Base | 10 | 22 | 1 |
| 77−9200 | Screw − Hex Head | 9 | 10A | 1 |
| 77−9240 | Plug − Pipe | 10 | 15 | 1 |
| 77−9250 | Gasket − Breather | 17 | 9 | 1 |
| 77−9250 | Gasket − Breather | 9 | 9 | 1 |
| 77−9270 | Pulley − Rewind Starter | 13 | 56 | 1 |
| 77−9290 | Guard − Muffler | 16 | 832 | 1 |
| 77−9300 | Breather Assy | 9 | 8 | 1 |
| 77−9310 | Screw − Set | 9 | 192A | 1 |
| 77−9320 | Cover − Valve | 9 | 1023 | 1 |
| 77−9340 | Pin Assembly − Piston | 10 | 28 | 1 |
| 77−9360 | Screw − Cap | 16 | 188 | 1 |
| 77−9360 | Screw − Hex Head | 10 | 188 | 1 |
| 77−9360 | Screw − Hex Head | 12 | 188 | 1 |
| 77−9360 | Screw − Hex Head | 15 | 188 | 1 |
| 77−9410 | Tube − Breather | 9 | 11 | 1 |
| 77−9420 | Screw − Armature Mtg. | 15 | 334 | 1 |
| 77−9430 | Screw − Hex Head | 16 | 346 | 1 |
| 77−9580 | Overhaul Kit − Carburetor | 17 | 121 | 1 |
| 77−9600 | Valve − Choke | 11 | 108 | 1 |
| 77−9610 | Jet − Main | 11 | 117 | 1 |
| 77−9610 | Jet − Main | 17 | 117 | 1 |
| 77−9620 | Valve & Spring − Needle | 11 | 118 | 1 |
| 77−9620 | Valve & Spring − Needle | 17 | 118 | 1 |
| 77−9630 | Carburetor Assy | 11 | 125 | 1 |
| 77−9640 | Jet − Pilot | 11 | 147 | 1 |
| 77−9650 | Cap − Limiter | 11 | 1091 | 1 |
| 77−9650 | Cap − Limiter | 17 | 1091 | 1 |
| 78−4100 | Hose − Fuel | 16 | 187 | 1 |
| 78−4690 | Clamp − Hose | 16 | 601 | 1 |
| 80−2770 | Cup − Anti Scalp | 3 | 36 | 1 |
| 86−7990 | Screw − Clamp | 2 | 7 | 1 |
| 92−2289 | Plate − Logo, Toro | 2 | 3 | 1 |
| 92−9665 | Screw | 4 | 7 | 4 |
| 93−4105 | Decal − Bag Door | 1 | 36 | 1 |
| 93−4355 | Decal − Engine | 2 | 2 | 1 |
| 93−6629 | Asm − Cable | 8 | 1 | 1 |
| 93−6630 | Control − Throttle | 4 | 19 | 1 |
| 93−6632 | Control − Speed | 4 | 23 | 1 |
| 93−6633 | Cable − Traction | 8 | 2 | 1 |
| 93−6656 | Decal − Instruction | 4 | 10 | 1 |
| 93−7198 | Asm − Cap, Gas | 2 | 1 | 1 |
| 94−1605 | Engine − GTS 150 | 2 | 4 | 1 |
| 94−1651 | Plug − Welch | 11 | 127 | 1 |
| 94−1651 | Plug − Welch | 17 | 127 | 1 |
| 94−1653 | Cup − Starter | 14 | 455 | 1 |
| 94−1654 | Pawl−Starter | 14 | 459 | 1 |
| 94−1655 | Spring−Torsion | 14 | 515 | 1 |
| 94−1656 | Housing−Rewind Starter | 14 | 55 | 1 |
| 94−1657 | Pulley−Rewind Starter | 14 | 56 | 1 |
| 94−1659 | Retainer − Rewind Starter | 14 | 456 | 1 |
| 94−1660 | Screw−Rewind Starter | 14 | 461 | 1 |
| 94−1668 | Rope−Starter (Cut To Suit) | 14 | 58 | 1 |
| 94−1678 | Starter Assy−Rewind | 14 | 608 | 1 |
| 94−4910 | Handle | 4 | 16 | 1 |
| 2210−249 | Clamp − Casting | 2 | 8 | 1 |
| 237−153 | Seal − ORing | 6 | 18 | 2 |
| 253−151 | Seal − Ring | 3 | 12 | 1 |
| 302−56 | Fitting − Grease | 6 | 20 | 2 |
| 321−13 | Screw − Hex Hd. | 3 | 44 | 2 |
| 322−21 | Screw − Hex Hd. | 3 | 22 | 1 |
| 322−29 | Screw − Hex Head | 1 | 3 | 2 |
| 3256−23 | Washer − Flat | 3 | 17 | 2 |
| 3256−24 | Washer − Flat | 6 | 12 | 1 |
| 3257−17 | Key − Woodruff | 3 | 25 | 1 |
| 3272−5 | Pin − Cotter | 6 | 14 | 1 |
| 3290−378 | Tie − Cable | 4 | 25 | 5 |
| 3296−5 | Nut − Lock | 6 | 11 | 1 |
| 3296−6 | Nut − Lock | 1 | 17 | 4 |
| 3296−6 | Nut − Lock | 6 | 35 | 2 |
| 3296−8 | Nut − Lock | 8 | 17 | 1 |
| 3296−33 | Nut − Lock, Nylon | 3 | 38 | 1 |
| 3296−42 | Nut − Lock | 3 | 5 | 2 |
| 3296−58 | Nut − Flange | 8 | 22 | 2 |
| 32121−9 | Pin − Roll | 8 | 9 | 1 |
| 32121−120 | Pin − Coil | 7 | 54 | 1 |
| 32128−44 | Nut − Flange | 3 | 15 | 1 |
| 32144−70 | Screw − Hex. Washer Hd. | 6 | 1 | 5 |
| 32144−70 | Screw − Tap | 1 | 8 | 6 |
| 32144−70 | Screw − Tap | 2 | 11 | 2 |
| 32144−70 | Screw−Tap | 3 | 14 | 5 |
| 32144−102 | Screw | 2 | 10 | 3 |
| 32144−111 | Screw − Phillips Pan Hd. | 5 | 1 | 5 |

*Not Illustrated