
FORM NO. 3318–482

TORO®

MODEL NO. 20923B–6900001 & UP

PARTS CATALOG

# 48cm REAR BAGGING MOWER

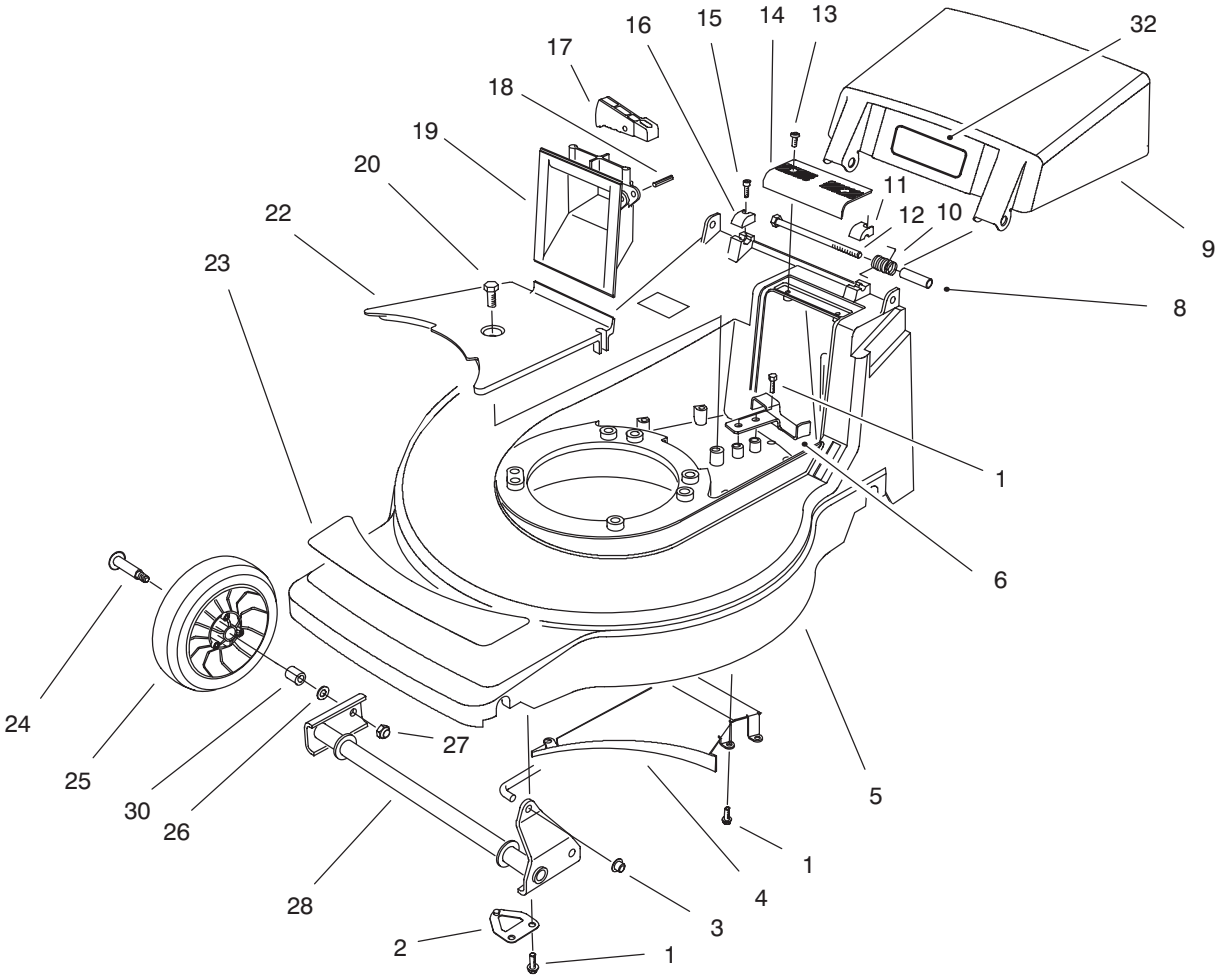



C–2490

## HOUSING ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32144–4 | Screw – Hex Hd. Tap | 10 |
| 2 | 71–8830 | Retainer – Shaft | 2 |
| 3 | 32112–11 | Nut – Push | 1 |
| 4 | 71–7990 | Ramp – Discharge | 1 |
| 5 | 16–5979 | Housing – 48cm (Incl. Ref. #23) | 1 |
| 6 | 71–7890 | Guide – Belt Rear | 1 |
| 8 | 71–8580 | Spacer – Door | 2 |
| 9 | 71–1569 | Door – Discharge (Incl. Ref. #32) | 1 |
| 10 | 71–9840 | Spring – Door | 2 |
| 11 | 71–7900 | Cap – Bolt Hinge L.H. | 1 |
| 12 | 322–29 | Screw – Hex Hd. | 2 |
| 13 | 32144–97 | Screw – Thread Forming | 2 |
| 14 | 71–7860 | Grip – Upper | 1 |
| 15 | 65–5210 | Screw – Thread Forming | 2 |
| 16 | 71–7910 | Cap – Bolt Hinge R.H. | 1 |
| 17 | 71–7930 | Trigger – HOC | 1 |
| 18 | 3284–5 | Pin – Groove | 1 |
| 19 | 71–7870 | Grip – Lower | 1 |
| 20 | 32144–70 | Screw – Hex Flange Hd. | 1 |
| 22 | 71–7920 | Cover – Belt | 1 |
| 23 | 71–9860 | Decal – Deck 48cm | 1 |
| 24 | 27–6230 | Bolt – Wheel | 2 |
| 25 | 46–1113 | Wheel & Tire Assembly (Incl. Ref. #30) | 2 |
| 26 | 40–1940 | Washer | 2 |
| 27 | 3296–5 | Nut – Lock, Nylon | 2 |
| 28 | 71–7820 | Pivot – Front | 1 |
| 30 | 27–6250 | Bushing – Wheel | 4 |
| 32 | 93–4105 | Decal – Danger | 1 |

©The TORO Company –1995
*All Rights Reserved*

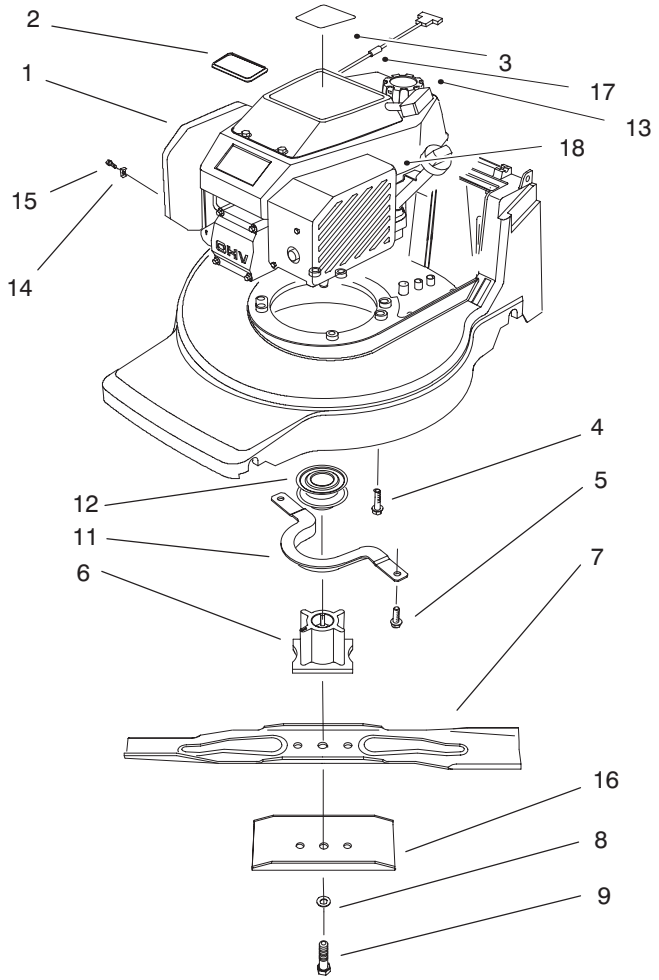



C–2085

# ENGINE & BLADE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94–1604 | Engine – Complete | 1 |
| 2 | 92–2289 | Plate – Toro Logo | 1 |
| 3 | 93–4355 | Decal – Recoil | 1 |
| 4 | 32144–102 | Screw – Thread Forming | 3 |
| 5 | 32144–4 | Screw – Thread Forming | 2 |
| 6 | 71–7940 | Retainer – Blade | 1 |
| †7 | 92–9813 | Blade – 48cm | 1 |
| 8 | 3253–22 | Washer – Lock | 1 |
| 9 | 26–0672 | Bolt – Blade | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 71–7960 | Guide – Engine Belt | 1 |
| 12 | 62–7550 | Pulley – Driver | 1 |
| 13 | 93–7198 | Cap – Gas | 1 |
| 14 | 2210–249 | Clamp – Casing | 1 |
| 15 | 86–7990 | Screw – Clamp | 1 |
| †16 | 92–9812 | Stiffener – Blade | 1 |
| 17 | 2210–316 | Stop – Rope | 1 |
| 18 | 77–9550 | Cover – Brake | 1 |

† Obtain From Toro Europe N.V.

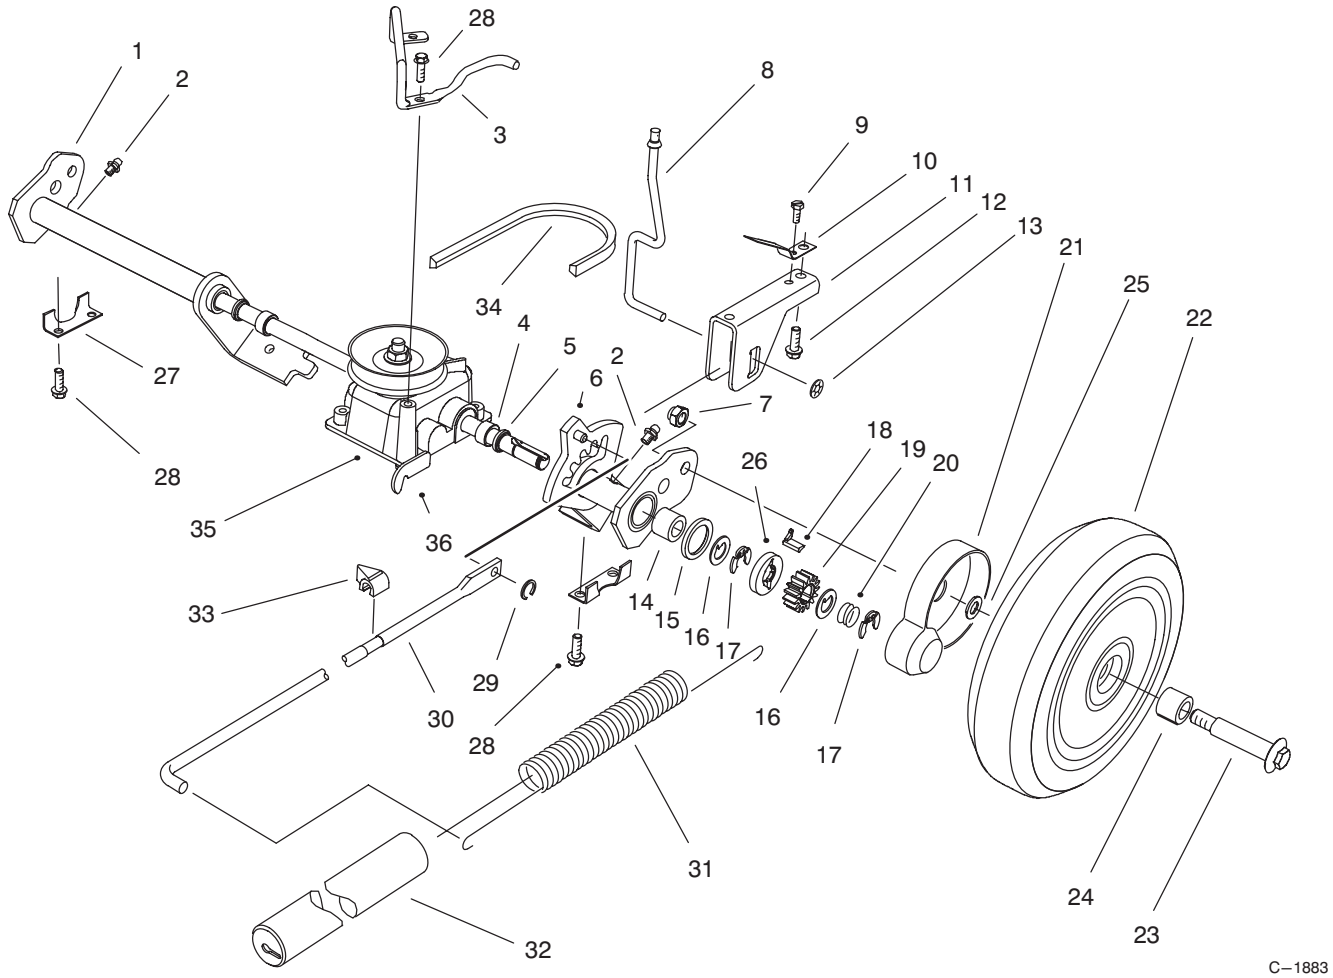



# S. P. REAR AXLE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †1 | 92–9680 | Rear Pivot Assembly R.H. (Incl. Ref. #2, 4, 5 & 14) | 1 |
| 2 | 302–26 | Fitting – Grease | 2 |
| †3 | 71–9850 | Retainer – Belt | 1 |
| 4 | 47–2890 | Bushing – Sleeve | 2 |
| 5 | 47–6730 | Seal – Grease | 2 |
| †6 | 92–9677 | Rear Pivot Assembly L.H. (Incl. Ref. #2, 4, 5 & 14) | 1 |
| 7 | 3296–5 | Nut – Lock | 2 |
| 8 | 71–7840 | Rod – Trigger | 1 |
| 9 | 32144–31 | Screw – Thread Forming | 1 |
| 10 | 71–8060 | Spring – Trigger Return | 2 |
| 11 | 71–8080 | Saddle – H.O.C. | 1 |
| 12 | 63–8590 | Screw – Thread Forming | 2 |
| 13 | 32112–13 | Nut – Push | 1 |
| 14 | 48–2060 | Bearing – Needle | 2 |
| 15 | 65–4710 | Washer – Friction | 2 |
| 16 | 65–4740 | Washer – Keyed Thrust | 4 |
| 17 | 65–2720 | Ring – Retaining | 4 |
| 18 | 66–6050 | Key – Rocking L.H. | 1 |
| * | 66–6040 | Key – Rocking R.H. | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 19 | 65–4750 | Gear – Pinion | 2 |
| 20 | 65–4720 | Spring – Compression | 2 |
| 21 | 74–1660 | Cover – Wheel | 2 |
| 22 | 14–9959 | Wheel, Tire & Gear Assy. (Incl. Ref. #24) | 2 |
| 23 | 27–6230 | Bolt – Wheel | 2 |
| 24 | 27–6250 | Bushing – Wheel | 4 |
| 25 | 74–1670 | Spacer – Wheel | 2 |
| 26 | 65–4760 | Washer – Clutch | 2 |
| 27 | 71–7770 | Plate – Rear Securing | 2 |
| 28 | 32144–4 | Screw – Thread Forming | 6 |
| 29 | 32151–93 | Ring – Grip | 1 |
| 30 | 71–7970 | Rod – Link | 1 |
| 31 | 71–7740 | Spring – Counterbalance | 1 |
| 32 | 71–8450 | Cover – Spring | 1 |
| 33 | 71–7980 | Indicator – H.O.C. | 1 |
| 34 | 71–9450 | V– Belt | 1 |
| †35 | 71–9600 | Gearcase Assembly (Incl. Ref. #36) | 1 |
| 36 | 71–9630 | Bracket – Traction | 1 |

*Not Illustrated
† Obtain From Toro Europe N.V.

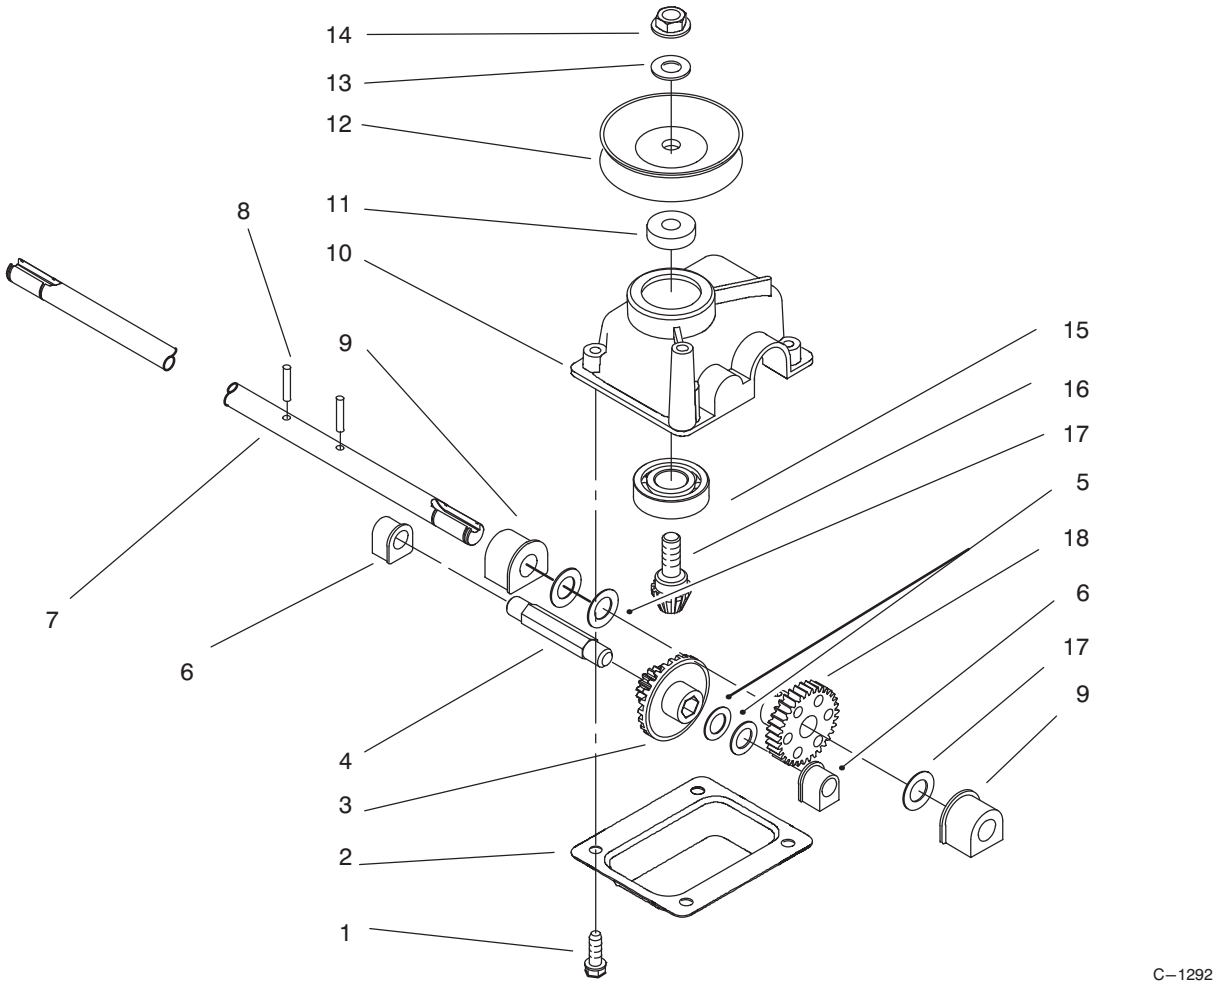



# GEARCASE ASSEMBLY NO. 71–9600†

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 49–2040 | Screw – Taptite | 4 |
| 2 | 614668 | Cover – Gear Case | 1 |
| 3 | 55–3760 | Pinion – 15 Tooth | 1 |
| 4 | 614696 | Shaft – Intermediate | 1 |
| 5 | 36–4791 | Washer | 2 |
| 6 | 60–8750 | Bushing | 2 |
| 7 | 71–9620 | Shaft – Output | 1 |
| 8 | 32121–114 | Pin – Spirol | 2 |
| 9 | 60–8850 | Bushing – Output | 2 |
| 10 | 614578 | Gearcase | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 62–6660 | Spacer | 1 |
| 12 | 71–9610 | Pulley – Half | 2 |
| 13 | 3256–24 | Washer | 1 |
| 14 | 3296–5 | Nut | 1 |
| 15 | 38–7820 | Bearing – Ball | 1 |
| 16 | 60–8890 | Gear – Bevel Pinion | 1 |
| 17 | 36–4780 | Washer – Thrust | 3 |
| 18 | 614596 | Gear 34 Tooth | 1 |
| †* | 71–9600 | Gear Case Ass'y Complete | 1 |

*Not Illustrated
† Obtain From Toro Europe N.V.

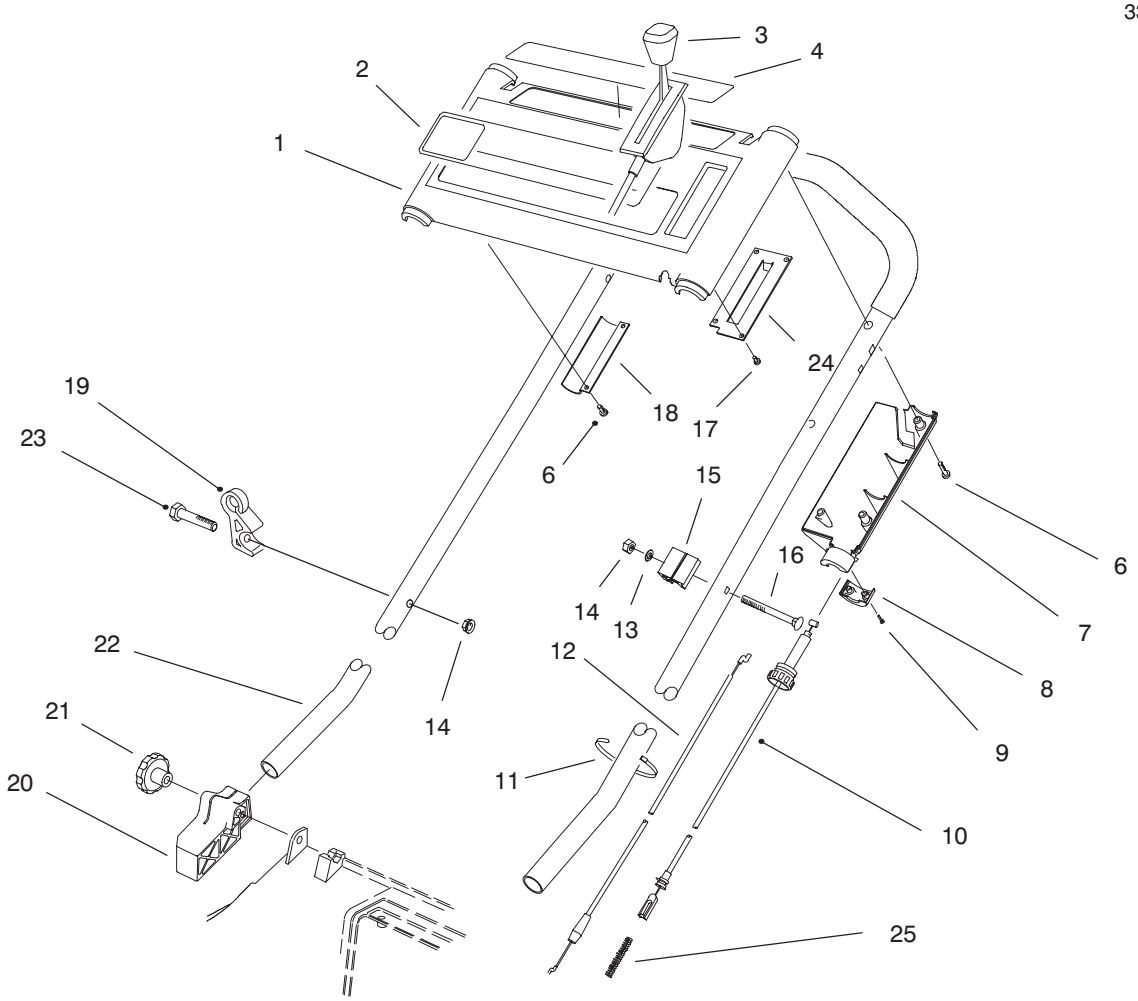



# S. P. HANDLE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 17–4529 | Panel – Control (Incl. Ref. #2 & 4) | 1 |
| 2 | 71–9863 | Decal – Panel OHV | 1 |
| 3 | 93–1115 | Control – Throttle | 1 |
| 4 | 94–6027 | Decal – Instruction | 1 |
| 6 | 32144–97 | Screw – Phillips Pan Hd. | 5 |
| 7 | 93–0339 | Cover – Throttle Lower | 1 |
| 8 | 71–7630 | Cap – Throttle Lower | 1 |
| 9 | 32144–99 | Screw – Phillips Pan Hd. | 2 |
| 10 | 94–6754 | Cable – Traction | 1 |
| 11 | 3290–378 | Tie – Cable | 2 |
| 12 | 93–1116 | Cable – Brake | 1 |
| 13 | 3256–1 | Washer – Flat | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 14 | 3296–73 | Nut – Lock | 2 |
| 15 | 46–6980 | Support – Cable | 1 |
| 16 | 92–2270 | Screw – Handle | 1 |
| 17 | 32144–98 | Screw – Phillips Pan Hd. | 4 |
| 18 | 71–8130 | Bracket – Control | 1 |
| 19 | 93–3772 | Guide – Rope | 1 |
| 20 | 71–8100 | Mount – Handle R.H. | 1 |
| * | 71–8090 | Mount – Handle L.H. | 1 |
| 21 | 19–4050 | Knob | 2 |
| 22 | 94–4367 | Handle Assembly | 1 |
| 23 | 321–52 | Screw – Hex Hd. Cap | 1 |
| 24 | 71–8040 | Plate – Throttle | 1 |
| 25 | 71–8310 | Spring – Compression | 1 |

*Not Illustrated

3318−482

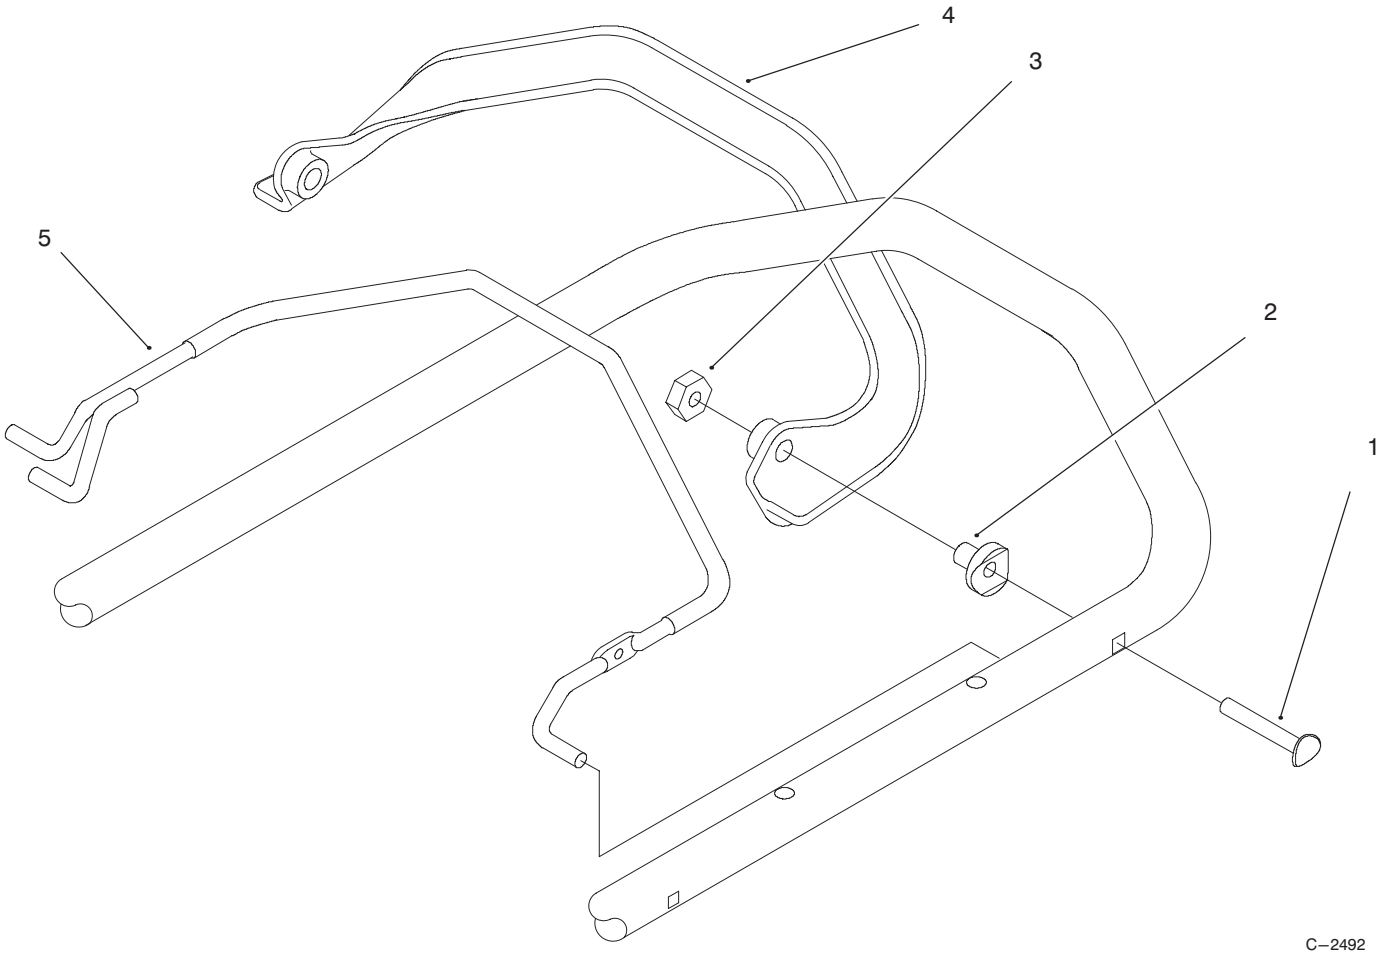



C−2492

# BAIL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 17−9428 | Screw | 2 |
| 2 | 66−0330 | Spacer − Support | 2 |
| 3 | 3296−74 | Nut − Flange, Nylon | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 4 | 94−4365 | Bail − Traction | 1 |
| 5 | 94−4364 | Bail − Brake | 1 |

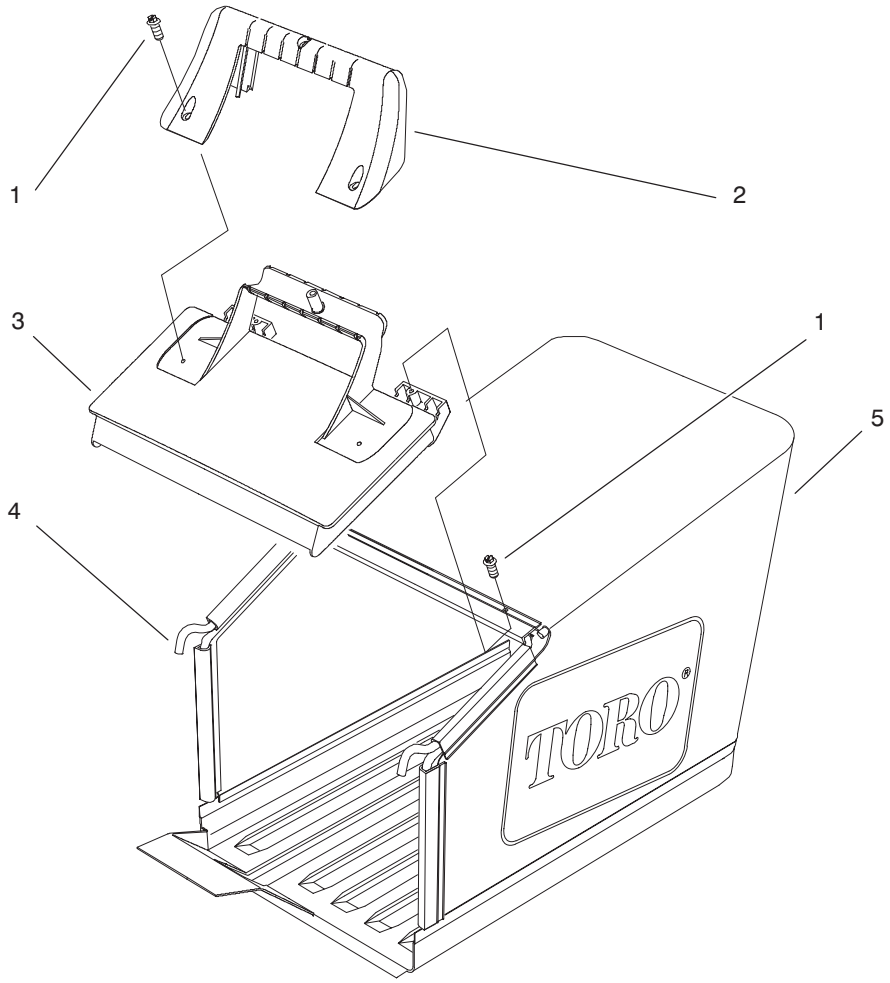



C–1509

# GRASS BAG ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32144–111 | Screw – Hex Washer Hd. Thread Forming | 5 |
| 2 | 71–9480 | Handle – Door | 1 |
| 3 | 71–9470 | Door – Bag | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| †4 | 71–9900 | Frame – Bag | 1 |
| 5 | 71–9460 | Bag – Grass | 1 |

† Obtain From Toro Europe N.V.

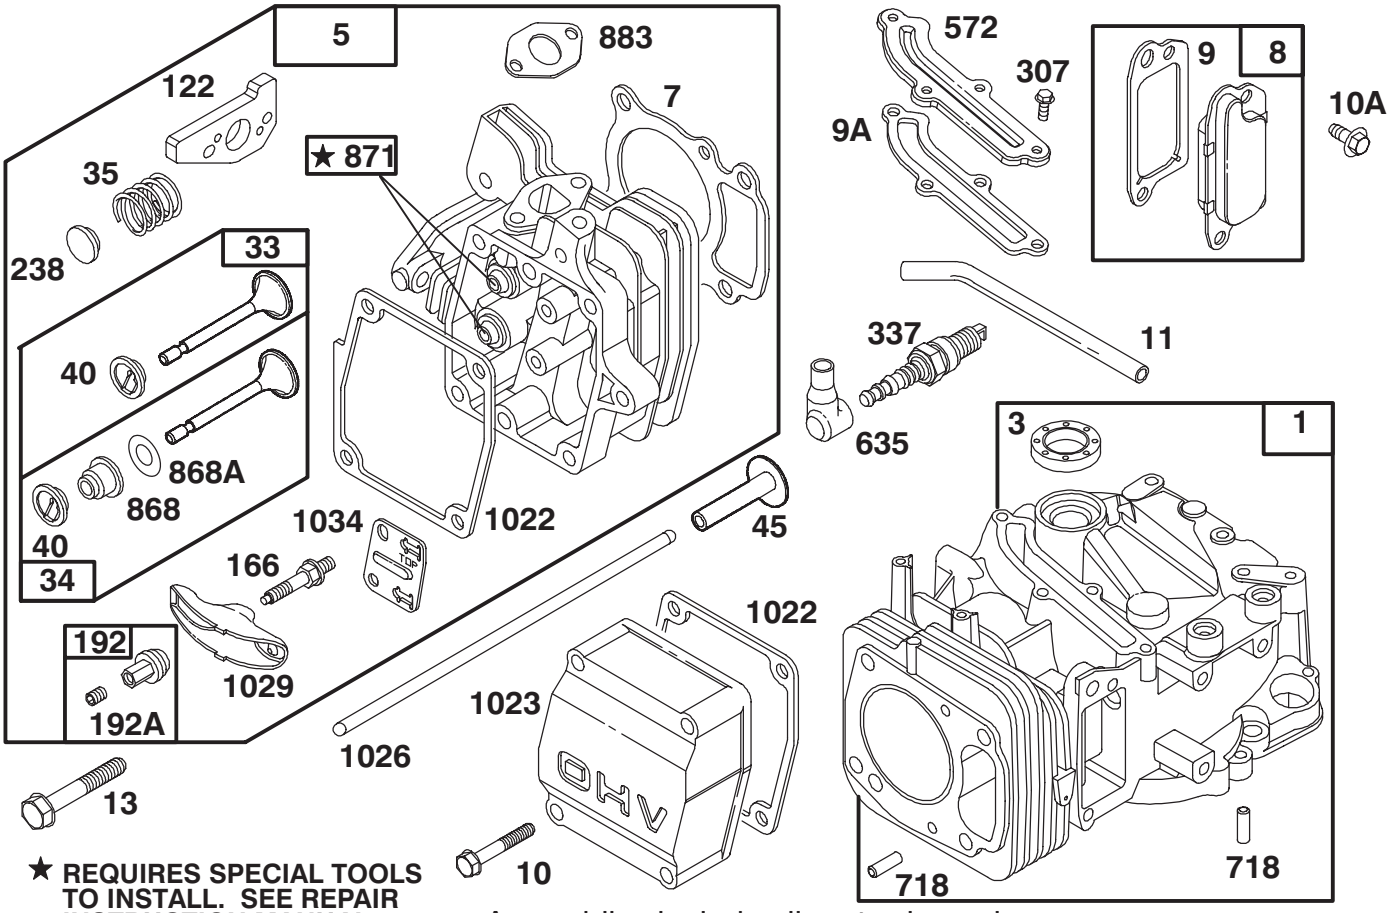


★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 77–7590 | Cylinder Assy. | 1 |
| ★3 | 77–9060 | Seal – Oil | 1 |
| 5 | 77–7730 | Head – Cylinder | 1 |
| ★7 | 77–7740 | Gasket – Cylinder Head | 1 |
| 8 | 77–9300 | Breather Assy. | 1 |
| ★9 | 77–9250 | Gasket – Breather | 1 |
| ★9A | 77–7410 | Gasket – Breather | 1 |
| 10 | 77–7360 | Screw – Hex. Head (Valve Cover) | 1 |
| 10A | 77–9200 | Screw – Hex. Head | 1 |
| 11 | 77–9410 | Tube – Breather | 1 |
| 13 | 77–7630 | Screw – Cylinder Head | 1 |
| 33 | 77–7860 | Valve – Exhaust | 1 |
| 34 | 77–7880 | Valve – Intake | 1 |
| 35 | 77–7810 | Spring – Valve | 1 |
| 40 | 77–7870 | Retainer – Spring | 1 |
| 45 | 77–7610 | Tappet – Valve | 1 |
| ●122 | 77–7820 | Adapter Assy. | 1 |
| 166 | 77–7780 | Stud – Rocker Arm | 1 |
| 192 | 77–7910 | Ball & Screw – Rocker Arm | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 192A | 77–9310 | Screw – Set | 1 |
| 238 | 77–7800 | Cap – Valve | 1 |
| 307 | 77–7420 | Screw – Breather Cover Mtg. | 1 |
| 337 | 77–7330 | Plug – Spark | 1 |
| 572 | 77–7400 | Cover – Breather | 1 |
| 635 | 77–7340 | Elbow – Spark Plug | 1 |
| 718 | 77–7600 | Pin – Cylinder | 1 |
| ★868 | 77–7890 | Seal Assy. – Valve | 1 |
| ★868A | 77–7900 | Gasket – Valve | 1 |
| 871 | 77–7850 | Bushing – Guide | 1 |
| ★883 | 77–7760 | Gasket – Exhaust | 1 |
| ★1022 | 77–7320 | Gasket – Rocker Cover | 1 |
| 1023 | 77–9320 | Cover – Valve | 1 |
| 1026 | 77–7620 | Rod – Push | 1 |
| 1029 | 77–7790 | Arm – Rocker | 1 |
| 1034 | 77–7770 | Guide – Push Rod | 1 |
| | 77–9020 | Short Block | 1 |

★ Included in Gasket Set–Part No. 77–8900
● Included in Carburetor Overhaul Kit–Part No. 77–8920

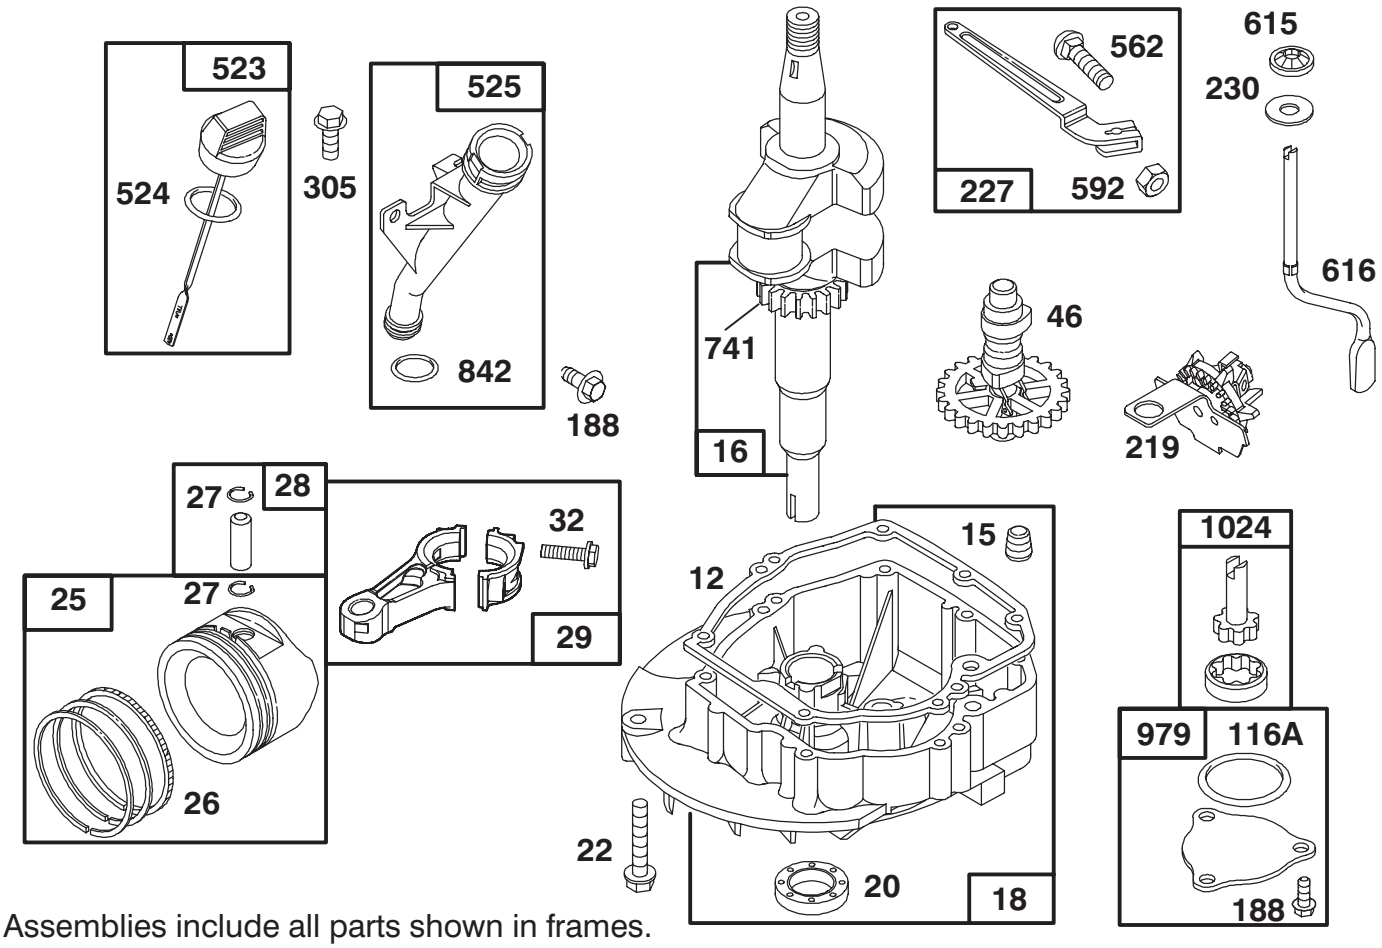



Assemblies include all parts shown in frames.

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| ★12 | 77–7550 | Gasket – Engine Base | 1 |
| 15 | 77–9240 | Plug – Pipe | 1 |
| 16 | 77–9330 | Crankshaft<br>**Note:** Order Part No. 77–7540 For Timing Gear Key. | 1<br>1 |
| 18 | 77–7560 | Base – Engine | 1 |
| ★20 | 77–7570 | Seal – Oil | 1 |
| 22 | 77–9070 | Screw – Engine Base | 1 |
| 25 | 77–7690 | Piston Assy. (Std.) | 1 |
| 26 | 77–7700 | Ring Set (Std.) | 1 |
| 27 | 77–7710 | Lock – Piston Pin | 1 |
| 28 | 77–9340 | Pin Assy. – Piston | 1 |
| 29 | 77–7670 | Rod – Connecting | 1 |
| 32 | 77–9350 | Screw – Connecting Rod | 1 |
| 46 | 77–7490 | Gear – Cam | 1 |
| ★116A | 77–7660 | O-Ring | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 188 | 77–9360 | Screw – Hex. Head | 1 |
| 219 | 77–7500 | Gear – Governor | 1 |
| 227 | 77–7370 | Lever Assy. – Governor | 1 |
| 230 | 77–7470 | Washer | 1 |
| 305 | 77–8310 | Screw – Hex. Head | 1 |
| 523 | 77–7260 | Dipstick – Oil | 1 |
| ★524 | 77–7270 | Seal – O-Ring | 1 |
| 525 | 77–7280 | Tube – Oil Filler | 1 |
| 562 | 77–7380 | Bolt – Governor Lever | 1 |
| 592 | 77–7390 | Nut – Hex. | 1 |
| 615 | 77–7480 | Pushnut | 1 |
| 616 | 77–7460 | Crank – Governor | 1 |
| 741 | 77–7530 | Gear – Timing | 1 |
| ★842 | 77–7300 | Seal – O-Ring | 1 |
| 979 | 77–7650 | Cover – Oil Pump | 1 |
| 1024 | 77–7640 | Pump – Oil | 1 |

★ Included in Gasket Set–Part No. 77–8900

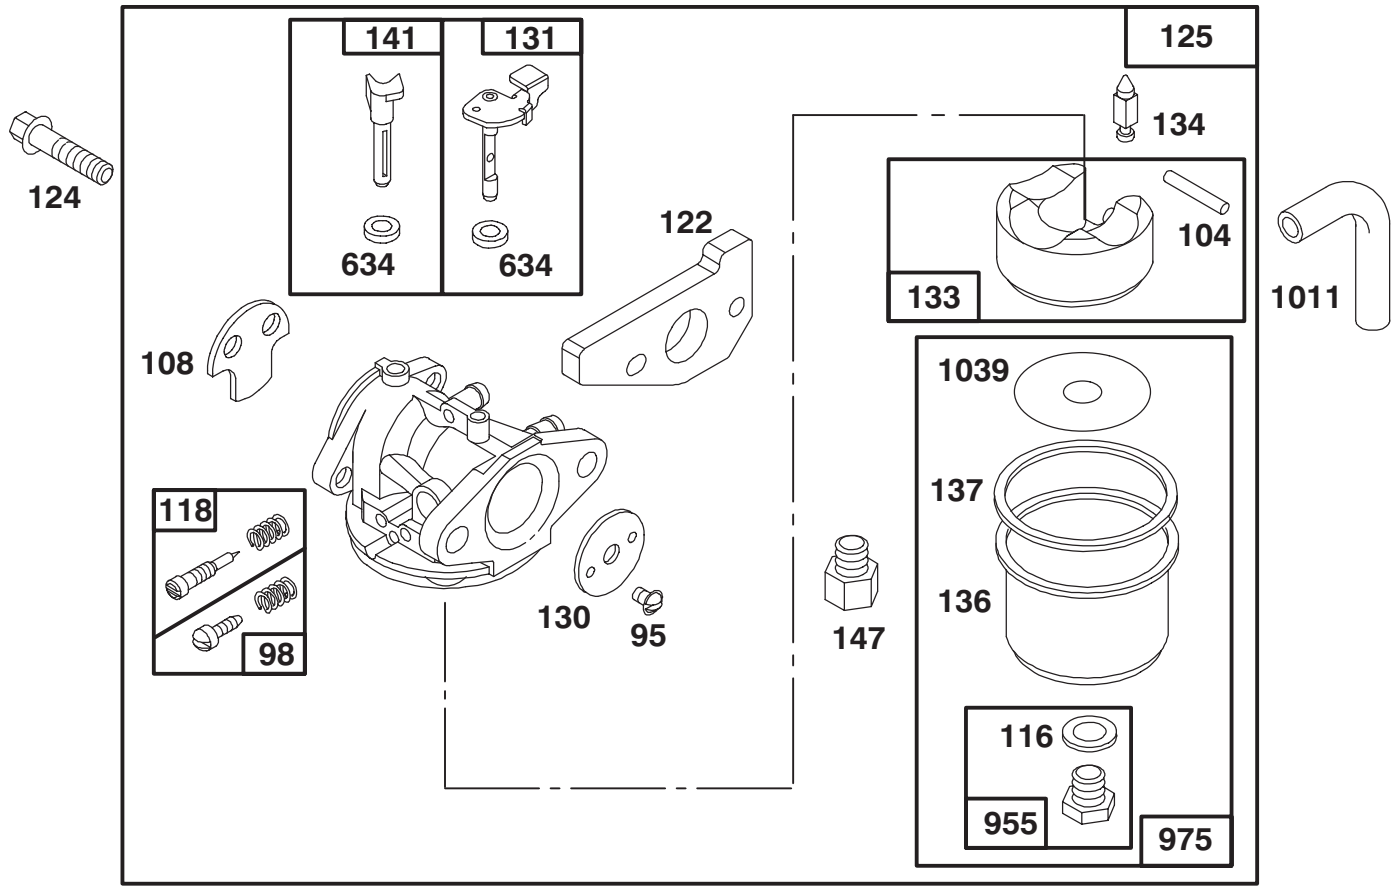



Assemblies include all parts shown in frames.

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 95 | 77–8090 | Screw – Valve Mtg. | 1 |
| 98 | 77–8240 | Screw – Idle Adj. | 1 |
| ●104 | 77–8180 | Pin – Float Hinge | 1 |
| 108 | 77–7080 | Valve – Choke | 1 |
| ●◆116 | 77–8210 | Sealing – Gasket | 1 |
| ●118 | 77–8230 | Valve & Spring – Needle | 1 |
| ●122 | 77–7820 | Adapter Assy. | 1 |
| 124 | 77–7970 | Screw – Hex. Head (carb. mtg.) | 1 |
| 125 | 77–8050 | Carburetor Assy. | 1 |
| 130 | 77–8080 | Valve – Throttle | 1 |
| 131 | 77–8160 | Shaft – Throttle | 1 |
| 133 | 77–8170 | Float – Carburetor | 1 |
| ●134 | 77–8110 | Valve – Inlet (Includes Seat) | 1 |
| 136 | 77–7240 | Bowl – Fuel | 1 |
| ●◆137 | 77–8200 | Gasket – Float Bowl | 1 |
| 141 | 77–8130 | Shaft – Choke | 1 |
| 147 | 77–8120 | Adapter – Jet<br>**Note:** For High Altitude Jet Order Part No. 77–9000 | 1 |
| ◆634 | 77–8150 | Washer – Seal | 1 |
| 955 | 77–8220 | Screw – Hex. Head | 1 |
| 975 | 77–8190 | Bowl Assy. – Carburetor | 1 |
| 1011 | 77–8040 | Tube – Vent | 1 |
| ●1039 | 77–7250 | Limiter – Float | 1 |

● Included in Carb. Overhaul Kit Part No. 77–8920

◆ Included in Carb. Gasket Set Part No. 77–8930

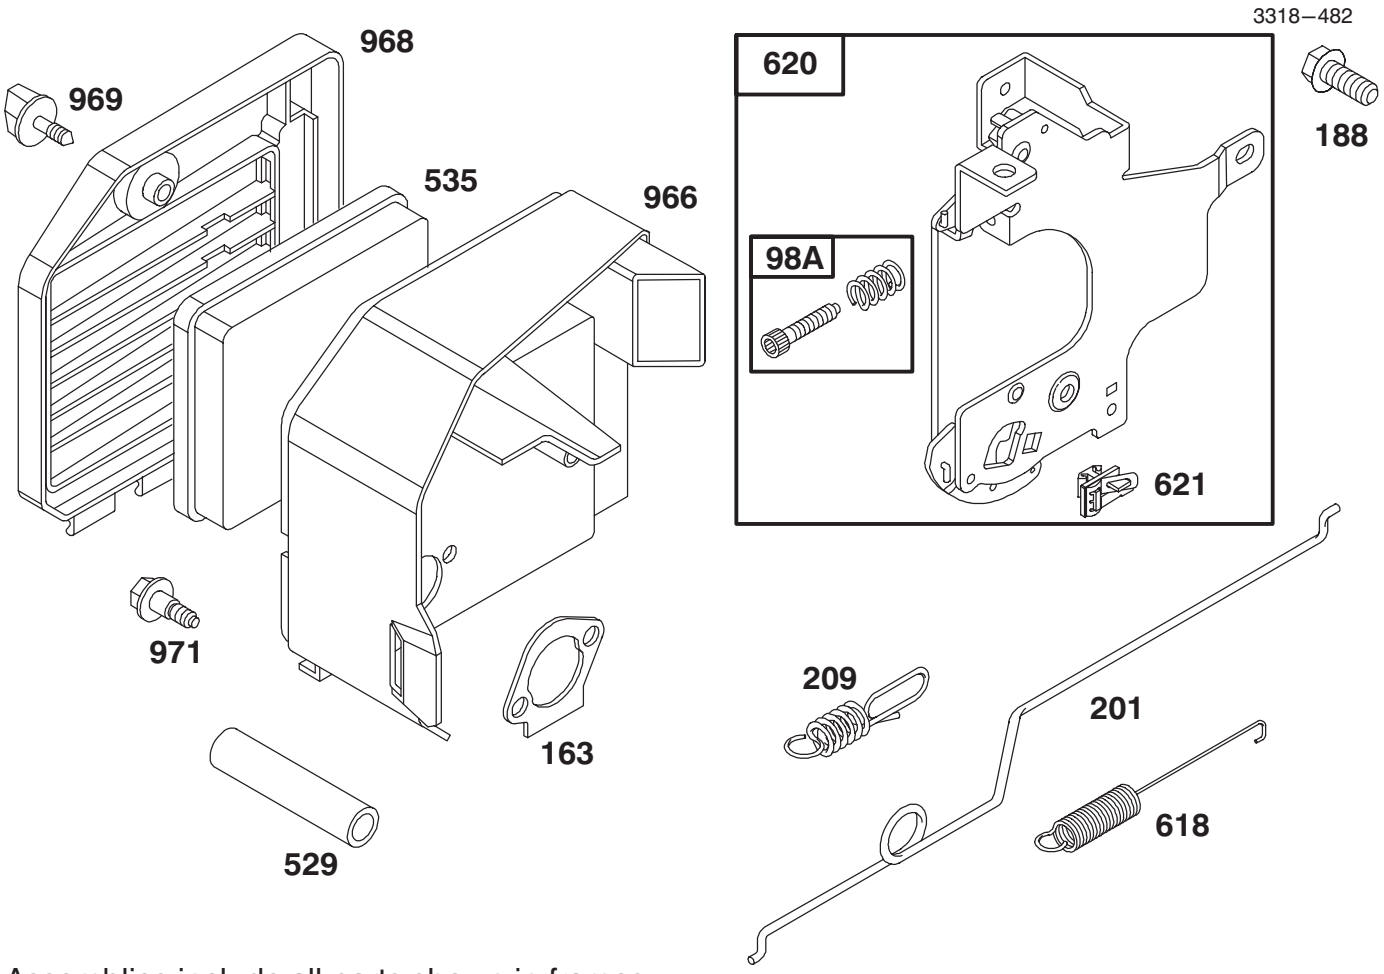



Assemblies include all parts shown in frames.

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 98A | 77–8020 | Screw Assy. – Speed Adj. | 1 |
| ★163 | 77–7960 | Gasket – Air Cleaner | 1 |
| 188 | 77–9360 | Screw – Hex. Head | 1 |
| 201 | 77–7980 | Link – Governor | 1 |
| 209 | 77–7990 | Spring – Governor | 1 |
| 529 | 77–9470 | Tube – Breather | 1 |
| 535 | 77–7950 | Element – Filter | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 618 | 77–8140 | Spring – Choke | 1 |
| 620 | 77–8000 | Bracket – Carburetor | 1 |
| 621 | 77–8010 | Switch – Stop | 1 |
| 966 | 77–7940 | Base – Air Cleaner | 1 |
| 968 | 77–7040 | Cover – Air Cleaner | 1 |
| 969 | 77–7920 | Screw – Air Cleaner | 1 |
| 971 | 77–7930 | Screw – Air Cleaner | 1 |

★ Included in Gasket Set–Part No. 77–8900

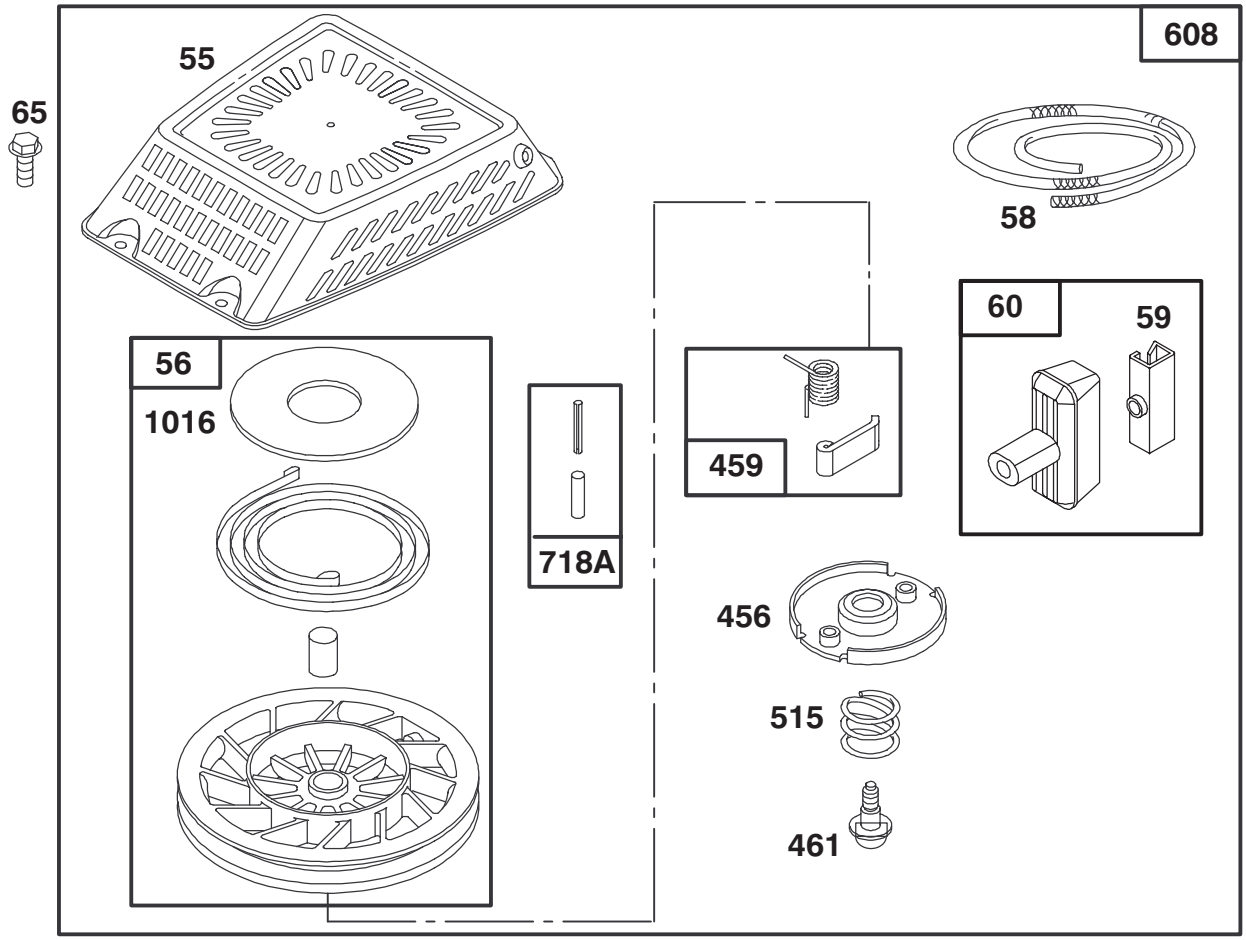



Assemblies include all parts shown in frames.

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 55 | 77—8890 | Housing — Rewind Starter | 1 |
| 56 | 77—9270 | Pulley — Rewind Starter | 1 |
| 58 | 77—8480 | Rope — Starter (Cut To Suit) | 1 |
| 59 | 77—9380 | Insert — Rewind Handle | 1 |
| 60 | 77—9390 | Handle — Rewind Starter | 1 |
| 65 | 77—8300 | Screw — Hex. Head | 1 |
| 456 | 77—8470 | Retainer — Rewind Starter | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 459 | 77—8530 | Pawl — Starter | 1 |
| 461 | 77—8490 | Screw — Rewind Starter | 1 |
| 515 | 77—8500 | Spring — Torsion | 1 |
| 608 | 77—9400 | Starter Assy. — Rewind | 1 |
| 718A | 77—8550 | Pin — Spring | 1 |
| 1016 | 77—8570 | Cover — Spring | 1 |

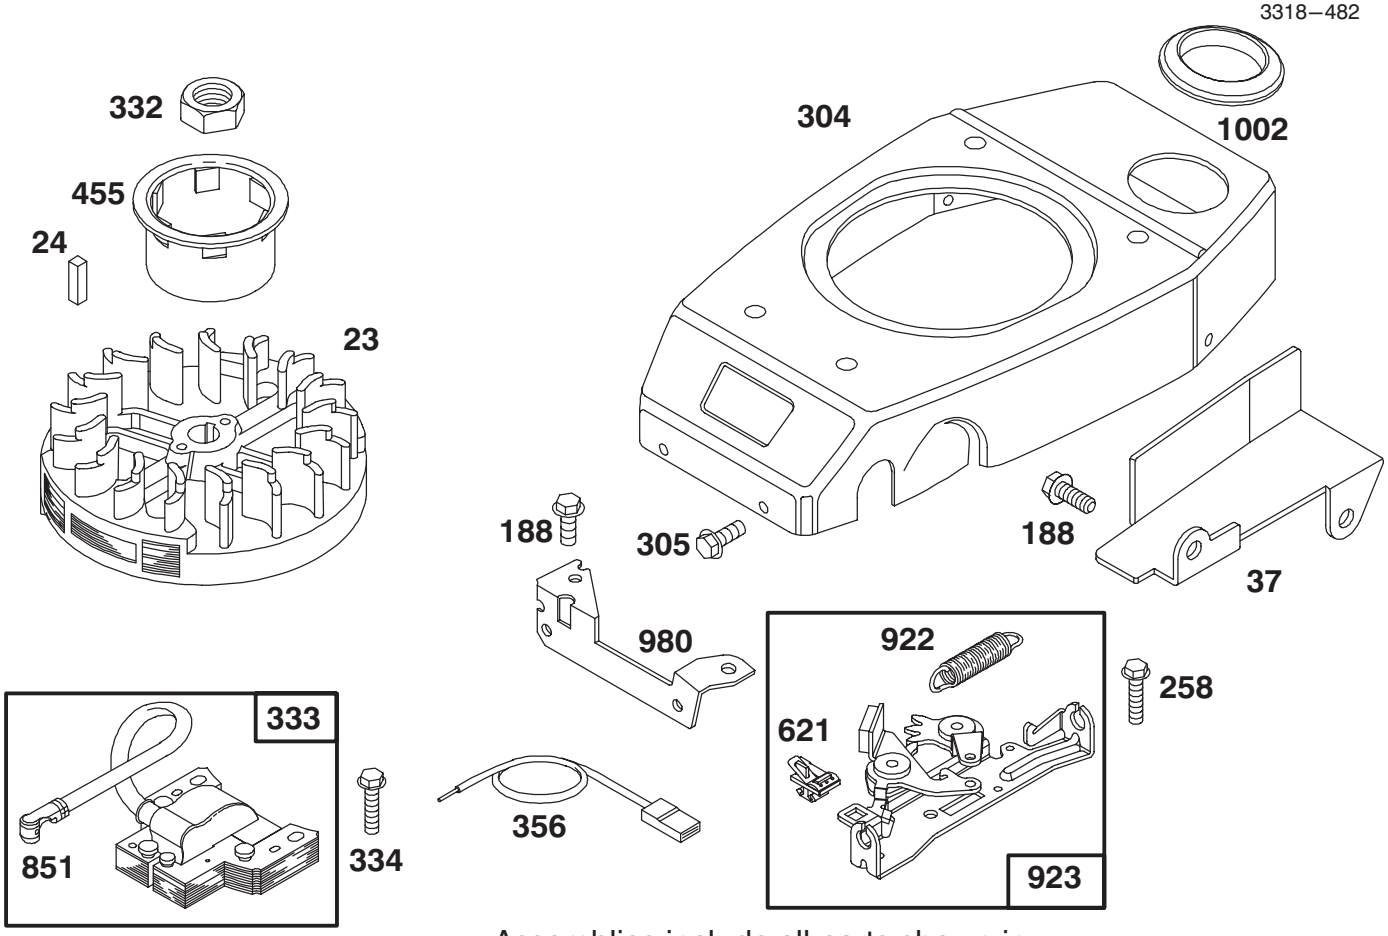



Assemblies include all parts shown in frames.

# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 23 | 77–8330 | Flywheel – Magneto | 1 |
| 24 | 77–8340 | Key – Flywheel | 1 |
| 37 | 77–7190 | Guard – Flywheel | 1 |
| 188 | 77–9360 | Screw – Hex. Head | 1 |
| 258 | 77–8870 | Screw – Hex. Head | 1 |
| 304 | 77–8260 | Housing – Blower | 1 |
| 305 | 77–8310 | Screw – Hex. Head | 1 |
| 332 | 77–8360 | Nut – Flywheel | 1 |
| 333 | 77–8420 | Armature – Magneto | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 334 | 77–7420 | Screw – Armature Mtg. | 1 |
| 356 | 77–8400 | Wire – Ground | 1 |
| 455 | 77–8350 | Cup – Starter | 1 |
| 621 | 77–8010 | Switch – Stop | 1 |
| 851 | 77–9450 | Terminal – Spark Plug | 1 |
| 922 | 77–8860 | Spring –Brake | 1 |
| 923 | 77–9460 | Brake Assy. | 1 |
| 980 | 77–7140 | Bracket – Blower Hsg. | 1 |
| 1002 | 77–7180 | Grommet | 1 |

3318–482

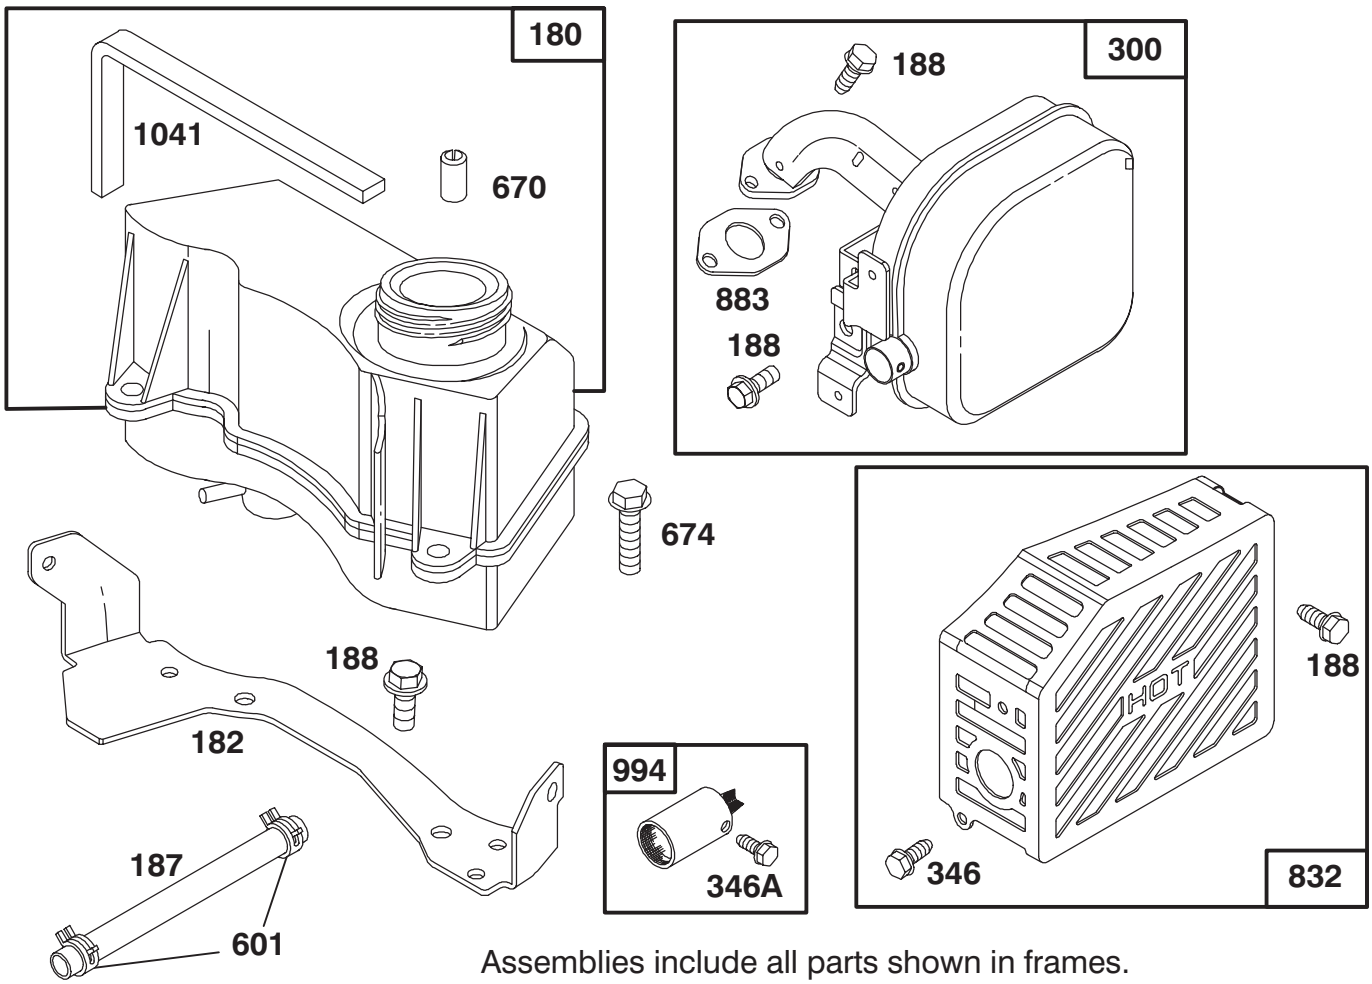



Assemblies include all parts shown in frames.


# ENGINE GTS 150


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 180 | 77–8580 | Tank Assy. – Fuel | 1 |
| 182 | 77–7170 | Bracket – Fuel Tank | 1 |
| 187 | 77–8620 | Hose – Fuel (Cut To Suit) | 1 |
| 188 | 77–9360 | Screw – Hex. Head | 1 |
| 300 | 77–8640 | Muffler – Exhaust | 1 |
| 346 | 77–9430 | Screw – Hex. | 1 |
| 346A | 77–9050 | Screw – Arrester Mtg. | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 601 | 77–8630 | Clamp – Fuel Hose | 1 |
| 670 | 77–9030 | Spacer – Fuel Tank (Includes 2) | 1 |
| 674 | 77–8600 | Screw – Tank Mtg. | 1 |
| 832 | 77–8660 | Guard – Muffler | 1 |
| ★883 | 77–7760 | Gasket – Exhaust | 1 |
| 994 | 77–9040 | Arrester – Spark | 1 |
| ★1041 | 77–8590 | Seal – Foam | 1 |

★ Included in Gasket Set–Part No. 77–8900

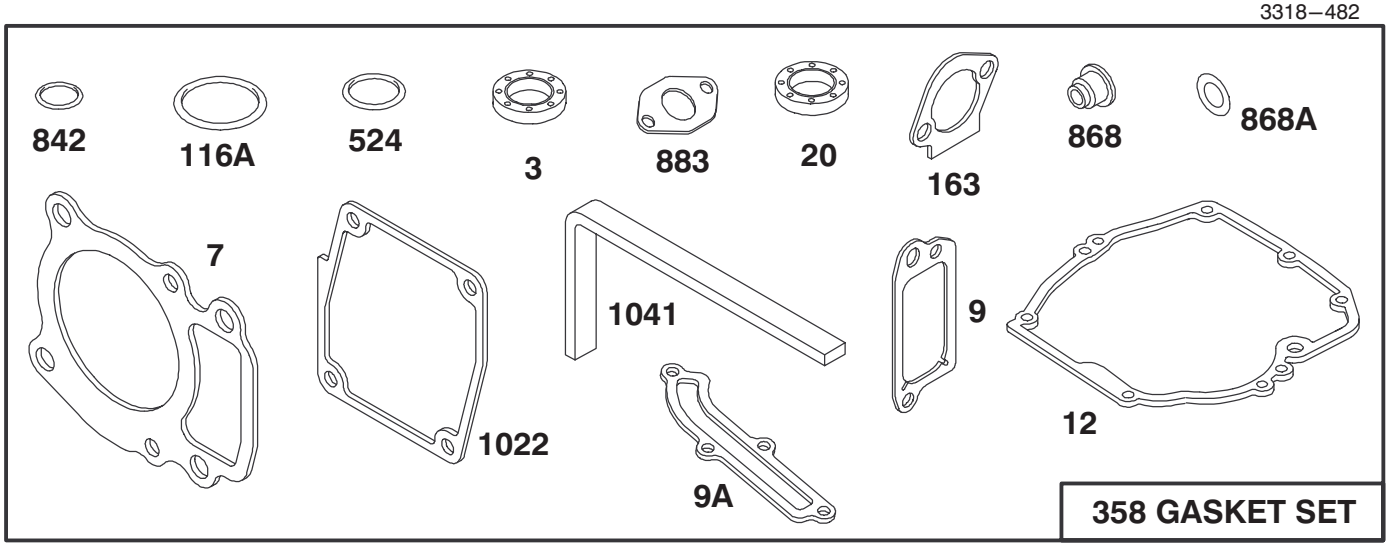

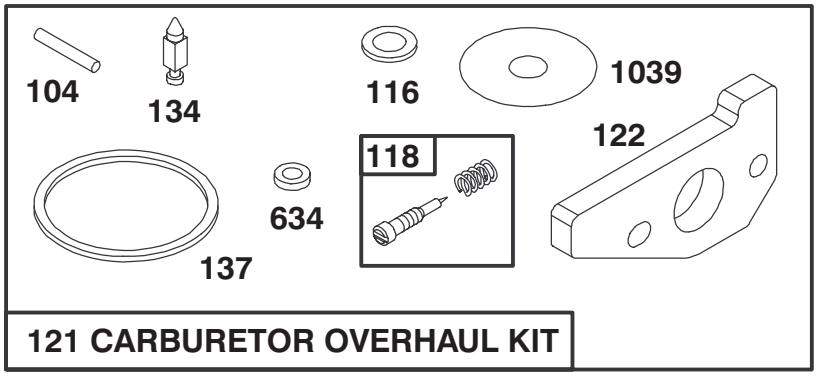
Assemblies include all parts shown in frames.
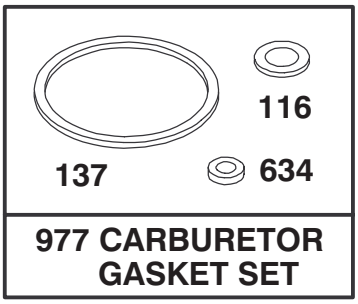
# ENGINE GTS 150

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| ★3 | 77–9060 | Seal – Oil | 1 |
| ★7 | 77–7740 | Gasket – Cylinder Head | 1 |
| ★9 | 77–9250 | Gasket – Breather | 1 |
| ★9A | 77–7410 | Gasket – Breather | 1 |
| ★12 | 77–7550 | Gasket – Engine Base | 1 |
| ★20 | 77–7570 | Seal – Oil | 1 |
| ●104 | 77–8180 | Pin – Float Hinge | 1 |
| ●◆116 | 77–8210 | Gasket – Sealing | 1 |
| ★116A | 77–7660 | O-Ring | 1 |
| ●118 | 77–8230 | Valve and Spring – Needle | 1 |
| 121 | 77–8920 | Carburetor Overhaul Kit | 1 |
| ●122 | 77–7820 | Adapter Assembly | 1 |
| ●134 | 77–8110 | Valve – Inlet (Includes Seat) | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| ●◆137 | 77–8200 | Gasket – Float Bowl | 1 |
| ★163 | 77–7960 | Gasket – Air Cleaner | 1 |
| 358 | 77–8900 | Gasket Set | 1 |
| ★524 | 77–7270 | Seal – O-Ring | 1 |
| ◆634 | 77–8150 | Washer – Seal | 1 |
| ★842 | 77–7300 | Seal – O-Ring | 1 |
| ★868 | 77–7890 | Seal Assy. – Valve | 1 |
| ★868A | 77–7900 | Seal – Valve | 1 |
| ★883 | 77–7760 | Gasket – Exhaust | 1 |
| 977 | 77–8930 | Carburetor Gasket Set | 1 |
| ★1022 | 77–7320 | Gasket – Rocker Cover | 1 |
| ●1039 | 77–8040 | Limiter – Float | 1 |
| ★1041 | 77–8590 | Seal – Foam | 1 |

●Incl. in Carburetor Overhaul Kit–Part No. 77–8920
◆Included in Carburetor Gasket Set–Part No. 77–8930
★ Included in Gasket Set–Part No. 77–8900

# TORO PART NUMBER INDEX



| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 614578 | Gearcase | 4 | 10 | 1 |
| 614596 | Gear 34 Tooth | 4 | 1 | 1 |
| 614668 | Cover – Gear Case | 4 | 2 | 1 |
| 614696 | Shaft – Intermiediate | 4 | 4 | 1 |
| 14–9959 | Wheel, Tire & Gear Assy. | 3 | 22 | 2 |
| 16–5979 | Housing – 48cm | 1 | 5 | 1 |
| 17–1569 | Door – Discharge | 1 | 9 | 1 |
| 17–4529 | Panel – Control | 5 | 1 | 1 |
| 17–9428 | Screw | 6 | 1 | 2 |
| 19–4050 | Knob | 5 | 21 | 2 |
| 26–0672 | Bolt – Blade | 2 | 9 | 1 |
| 27–6230 | Bolt – Wheel | 3 | 23 | 2 |
| 27–6230 | Bolt – Wheel | 1 | 24 | 2 |
| 27–6250 | Bushing – Wheel | 3 | 24 | 4 |
| 27–6250 | Bushing – Wheel | 1 | 30 | 4 |
| 36–4780 | Washer – Thrust | 4 | 17 | 3 |
| 36–4791 | Washer | 4 | 5 | 2 |
| 38–7820 | Bearing – Ball | 4 | 15 | 1 |
| 40–1940 | Washer | 1 | 26 | 2 |
| 46–1113 | Wheel & Tire Assembly | 1 | 25 | 2 |
| 46–6980 | Support – Cable | 5 | 15 | 1 |
| 47–2890 | Bushing – Sleeve | 3 | 4 | 2 |
| 47–6730 | Seal – Grease | 3 | 5 | 2 |
| 48–2060 | Bearing – Needle | 3 | 14 | 2 |
| 49–2040 | Screw – Taptite | 4 | 1 | 4 |
| 55–3760 | Pinion – 15 Tooth | 4 | 3 | 1 |
| 60–8750 | Bushing | 4 | 6 | 2 |
| 60–8850 | Bushing – Output | 4 | 9 | 2 |
| 60–8890 | Gear – Bevel Pinion | 4 | 16 | 1 |
| 62–6660 | Spacer | 4 | 11 | 1 |
| 62–7550 | Pulley – Driver | 2 | 12 | 1 |
| 63–8590 | Screw – Thread Forming | 3 | 12 | 2 |
| 65–2720 | Ring – Retaining | 3 | 17 | 4 |
| 65–4710 | Washer – Friction | 3 | 15 | 2 |
| 65–4720 | Spring – Compression | 3 | 20 | 2 |
| 65–4740 | Washer – Keyed Thrust | 3 | 16 | 4 |
| 65–4750 | Gear – Pinion | 3 | 19 | 2 |
| 65–4760 | Washer – Clutch | 3 | 26 | 2 |
| 65–5210 | Screw – Thread Forming | 1 | 15 | 2 |
| 66–0330 | Spacer – Support | 6 | 2 | 2 |
| 66–1700 | Decal – Noise Rating | 1 | 33 | 1 |
| 66–6040 | Key – Rocking R.H. | 3 | * | 1 |
| 66–6050 | Key – Rocking L.H. | 3 | 18 | 1 |
| 71–7630 | Cap – Throttle Lower | 5 | 8 | 1 |
| 71–7740 | Spring – Counterbalance | 3 | 31 | 1 |
| 71–7770 | Plate – Rear Securing | 3 | 27 | 2 |
| 71–7820 | Pivot – Front | 1 | 28 | 1 |
| 71–7840 | Rod – Trigger | 3 | 8 | 1 |
| 71–7860 | Grip – Upper | 1 | 14 | 1 |
| 71–7870 | Grip – Lower | 1 | 19 | 1 |
| 71–7890 | Guide – Belt Rear | 1 | 6 | 1 |
| 71–7900 | Cap – Bolt Hinge L.H. | 1 | 11 | 1 |
| 71–7910 | Cap – Bolt Hinge R.H. | 1 | 16 | 1 |
| 71–7920 | Cover – Belt | 1 | 22 | 1 |
| 71–7930 | Trigger – HOC | 1 | 17 | 1 |
| 71–7940 | Retainer – Blade | 2 | 6 | 1 |
| 71–7960 | Guide – Engine Belt | 2 | 11 | 1 |
| 71–7970 | Rod – Link | 3 | 30 | 1 |
| 71–7980 | Indicator – H.O.C. | 3 | 33 | 1 |
| 71–7990 | Ramp – Discharge | 1 | 4 | 1 |
| 71–8040 | Plate – Throttle | 5 | 24 | 1 |
| 71–8060 | Spring – Trigger Return | 3 | 10 | 2 |
| 71–8080 | Saddle – H.O.C. | 3 | 11 | 1 |
| 71–8090 | Mount – Handle L.H. | 5 | * | 1 |
| 71–8100 | Mount – Handle R.H. | 5 | 20 | 1 |
| 71–8130 | Bracket – Control | 5 | 18 | 1 |
| 71–8310 | Spring – Compression | 5 | 25 | 1 |
| 71–8450 | Cover – Spring | 3 | 32 | 1 |
| 71–8580 | Spacer – Door | 1 | 8 | 2 |
| 71–8830 | Retainer – Shaft | 1 | 2 | 2 |
| 71–9450 | V– Belt | 3 | 34 | 1 |
| 71–9460 | Bag – Grass | 7 | 5 | 1 |
| 71–9470 | Door – Bag | 7 | 3 | 1 |
| 71–9480 | Handle – Door | 7 | 2 | 1 |
| 71–9600 | Gear Case Ass'y Complete | 4 | * | 1 |
| 71–9600 | Gearcase Assembly | 3 | 35 | 1 |
| 71–9610 | Pulley – Half | 4 | 12 | 2 |
| 71–9620 | Shaft – Output | 4 | 7 | 1 |
| 71–9630 | Bracket – Traction | 3 | 36 | 1 |
| 71–9840 | Spring – Door | 1 | 10 | 2 |
| 71–9850 | Retainer – Belt | 3 | 3 | 1 |
| 71–9860 | Decal – Deck 48cm | 1 | 23 | 1 |
| 71–9863 | Decal – Panel OHV | 5 | 2 | 1 |
| 71–9900 | Frame – Bag | 7 | 4 | 1 |
| 74–1660 | Cover – Wheel | 3 | 21 | 2 |
| 74–1670 | Spacer – Wheel | 3 | 25 | 2 |
| 77–7040 | Cover – Air Cleaner | 11 | 968 | 1 |
| 77–7080 | Valve – Choke | 10 | 108 | 1 |
| 77–7140 | Bracket – Blower Hsg. | 13 | 980 | 1 |
| 77–7170 | Bracket – Fuel Tank | 14 | 182 | 1 |
| 77–7180 | Grommet | 13 | 1002 | 1 |
| 77–7190 | Guard – Flywheel | 13 | 37 | 1 |
| 77–7240 | Bowl – Fuel | 10 | 136 | 1 |
| 77–7250 | Limiter – Float | 10 | 1039 | 1 |
| 77–7260 | Dipstick – Oil | 9 | 523 | 1 |
| 77–7270 | Seal – O-Ring | 15 | 524 | 1 |
| 77–7270 | Seal – O-Ring | 9 | 524 | 1 |
| 77–7280 | Tube – Oil Filler | 9 | 525 | 1 |
| 77–7300 | Seal – O-Ring | 15 | 842 | 1 |
| 77–7320 | Gasket – Rocker Cover | 15 | 1022 | 1 |
| 77–7320 | Gasket – Rocker Cover | 8 | 1022 | 1 |
| 77–7330 | Plug – Spark | 8 | 337 | 1 |
| 77–7340 | Elbow – Spark Plug | 8 | 635 | 1 |
| 77–7360 | Screw – Hex. Head | 8 | 10 | 1 |
| 77–7370 | Lever Assy. – Governor | 9 | 227 | 1 |
| 77–7380 | Bolt – Governor Lever | 9 | 562 | 1 |
| 77–7390 | Nut – Hex. | 9 | 592 | 1 |
| 77–7400 | Cover – Breather | 8 | 572 | 1 |
| 77–7410 | Gasket – Breather | 8 | 9A | 1 |
| 77–7410 | Gasket – Breather | 15 | 9A | 1 |
| 77–7420 | Screw – Armature Mtg. | 13 | 334 | 1 |
| 77–7420 | Screw – Breather Cover | 8 | 307 | 1 |
| 77–7460 | Crank – Governor | 9 | 616 | 1 |
| 77–7470 | Washer | 9 | 230 | 1 |
| 77–7480 | Pushnut | 9 | 615 | 1 |
| 77–7490 | Gear – Cam | 9 | 46 | 1 |
| 77–7500 | Gear – Governor | 9 | 219 | 1 |
| 77–7530 | Gear – Timing | 9 | 741 | 1 |
| 77–7550 | Gasket – Engine Base | 15 | 12 | 1 |
| 77–7550 | Gasket – Engine Base | 9 | 12 | 1 |
| 77–7560 | Base – Engine | 9 | 18 | 1 |
| 77–7570 | Seal – Oil | 9 | 20 | 1 |
| 77–7570 | Seal – Oil | 15 | 20 | 1 |
| 77–7590 | Cylinder Assy. | 8 | 1 | 1 |
| 77–7600 | Pin – Cylinder | 8 | 718 | 1 |
| 77–7610 | Tappet – Valve | 8 | 45 | 1 |
| 77–7620 | Rod – Push | 8 | 1026 | 1 |
| 77–7630 | Screw – Cylinder Head | 8 | 13 | 1 |
| 77–7640 | Pump – Oil | 9 | 1024 | 1 |
| 77–7650 | Cover – Oil Pump | 9 | 979 | 1 |
| 77–7660 | O-Ring | 15 | 116A | 1 |
| 77–7670 | Rod – Connecting | 9 | 29 | 1 |
| 77–7690 | Piston Assy. (Std.) | 9 | 25 | 1 |
| 77–7700 | Ring Set (Std.) | 9 | 26 | 1 |
| 77–7710 | Lock – Piston Pin | 9 | 27 | 1 |
| 77–7730 | Head – Cylinder | 8 | 5 | 1 |
| 77–7740 | Gasket – Cylinder Head | 15 | 7 | 1 |
| 77–7740 | Gasket – Cylinder Head | 8 | 7 | 1 |
| 77–7760 | Gasket – Exhaust | 14 | 883 | 1 |
| 77–7760 | Gasket – Exhaust | 15 | 883 | 1 |
| 77–7760 | Gasket – Exhaust | 8 | 883 | 1 |
| 77–7770 | Guide – Push Rod | 8 | 1034 | 1 |
| 77–7780 | Stud – Rocker Arm | 8 | 166 | 1 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 77–7790 | Arm – Rocker | 8 | 1029 | 1 |
| 77–7800 | Cap – Valve | 8 | 238 | 1 |
| 77–7810 | Spring – Valve | 8 | 35 | 1 |
| 77–7820 | Adapter Assembly | 15 | 122 | 1 |
| 77–7820 | Adapter Assy. | 8 | 122 | 1 |
| 77–7850 | Bushing – Guide | 8 | 871 | 1 |
| 77–7860 | Valve – Exhaust | 8 | 33 | 1 |
| 77–7870 | Retainer – Spring | 8 | 40 | 1 |
| 77–7880 | Valve – Intake | 8 | 34 | 1 |
| 77–7890 | Seal Assy. – Valve | 15 | 868 | 1 |
| 77–7890 | Seal Assy. – Valve | 8 | 868 | 1 |
| 77–7900 | Gasket – Valve | 8 | 868A | 1 |
| 77–7900 | Seal – Valve | 15 | 868A | 1 |
| 77–7910 | Ball & Screw – Rocker | 8 | 192 | 1 |
| 77–7920 | Screw – Air Cleaner | 11 | 969 | 1 |
| 77–7930 | Screw – Air Cleaner | 11 | 971 | 1 |
| 77–7940 | Base – Air Cleaner | 11 | 966 | 1 |
| 77–7950 | Element – Filter | 11 | 535 | 1 |
| 77–7960 | Gasket – Air Cleaner | 11 | 163 | 1 |
| 77–7960 | Gasket – Air Cleaner | 15 | 163 | 1 |
| 77–7970 | Screw – Hex. Head | 10 | 124 | 1 |
| 77–7980 | Link – Governor | 11 | 201 | 1 |
| 77–7990 | Spring – Governor | 11 | 209 | 1 |
| 77–8000 | Bracket – Carburetor | 11 | 620 | 1 |
| 77–8010 | Switch – Stop | 11 | 621 | 1 |
| 77–8010 | Switch – Stop | 13 | 621 | 1 |
| 77–8020 | Screw Assy. – Speed Adj. | 11 | 98A | 1 |
| 77–8040 | Limiter – Float | 15 | 1039 | 1 |
| 77–8040 | Tube – Vent | 10 | 1011 | 1 |
| 77–8050 | Carburetor Assy. | 10 | 125 | 1 |
| 77–8080 | Valve – Throttle | 10 | 130 | 1 |
| 77–8090 | Screw – Valve Mtg. | 10 | 95 | 1 |
| 77–8110 | Valve – Inlet | 10 | 134 | 1 |
| 77–8110 | Valve – Inlet | 15 | 134 | 1 |
| 77–8120 | Adapter – Jet | 10 | 147 | 1 |
| 77–8130 | Shaft – Choke | 10 | 141 | 1 |
| 77–8150 | Washer – Seal | 10 | 634 | 1 |
| 77–8150 | Washer – Seal | 15 | 634 | 1 |
| 77–8160 | Shaft – Throttle | 10 | 131 | 1 |
| 77–8170 | Float – Carburetor | 10 | 133 | 1 |
| 77–8180 | Pin – Float Hinge | 10 | 104 | 1 |
| 77–8180 | Pin – Float Hinge | 15 | 104 | 1 |
| 77–8190 | Bowl Assy. – Carburetor | 10 | 975 | 1 |
| 77–8200 | Gasket – Float | 15 | 137 | 1 |
| 77–8210 | Sealing – Gasket | 10 | 116 | 1 |
| 77–8220 | Screw – Hex. Head | 10 | 955 | 1 |
| 77–8230 | Valve & Spring – | 10 | 118 | 1 |
| 77–8230 | Valve and Spring – | 15 | 118 | 1 |
| 77–8240 | Screw – Idle Adj. | 10 | 98 | 1 |
| 77–8260 | Housing – Blower | 13 | 304 | 1 |
| 77–8300 | Screw – Hex. Head | 12 | 65 | 1 |
| 77–8310 | Screw – Hex. Head | 9 | 305 | 1 |
| 77–8310 | Screw – Hex. Head | 13 | 305 | 1 |
| 77–8330 | Flywheel – Magneto | 13 | 23 | 1 |
| 77–8340 | Key – Flywheel | 13 | 24 | 1 |
| 77–8350 | Cup – Starter | 13 | 455 | 1 |
| 77–8360 | Nut – Flywheel | 13 | 332 | 1 |
| 77–8400 | Wire – Ground | 13 | 356 | 1 |
| 77–8420 | Armature – Magneto | 13 | 333 | 1 |
| 77–8470 | Retainer – Rewind | 12 | 456 | 1 |
| 77–8480 | Rope – Starter | 12 | 58 | 1 |
| 77–8490 | Screw – Rewind Starter | 12 | 461 | 1 |
| 77–8500 | Spring – Torsion | 12 | 515 | 1 |
| 77–8530 | Pawl – Starter | 12 | 459 | 1 |
| 77–8550 | Pin – Spring | 12 | 718A | 1 |
| 77–8570 | Cover – Spring | 12 | 1016 | 1 |
| 77–8580 | Tank Assy. – Fuel | 14 | 180 | 1 |
| 77–8590 | Seal – Foam | 14 | 1041 | 1 |
| 77–8590 | Seal – Foam | 15 | 1041 | 1 |
| 77–8600 | Screw – Tank Mtg. | 14 | 674 | 1 |
| 77–8620 | Hose – Fuel | 14 | 187 | 1 |
| 77–8630 | Clamp – Fuel Hose | 14 | 601 | 1 |
| 77–8640 | Muffler – Exhaust | 14 | 300 | 1 |
| 77–8660 | Guard – Muffler | 14 | 832 | 1 |
| 77–8860 | Spring –Brake | 13 | 922 | 1 |
| 77–8870 | Screw – Hex. Head | 13 | 258 | 1 |
| 77–8890 | Housing – Rewind | 12 | 55 | 1 |
| 77–8900 | Gasket Set | 15 | 358 | 1 |
| 77–8920 | Carburetor Overhaul Kit | 15 | 121 | 1 |
| 77–8930 | Carburetor Gasket Set | 15 | 977 | 1 |
| 77–9020 | Short Block | 8 | | 1 |
| 77–9030 | Spacer – Fuel Tank | 14 | 670 | 1 |
| 77–9040 | Arrester – Spark | 14 | 994 | 1 |
| 77–9050 | Screw – Arrester Mtg. | 14 | 346A | 1 |
| 77–9060 | Seal – Oil | 8 | 3 | 1 |
| 77–9060 | Seal – Oil | 15 | 3 | 1 |
| 77–9070 | Screw – Engine Base | 9 | 22 | 1 |
| 77–9200 | Screw – Hex. Head | 8 | 10A | 1 |
| 77–9240 | Plug – Pipe | 9 | 15 | 1 |
| 77–9250 | Gasket – Breather | 8 | 9 | 1 |
| 77–9250 | Gasket – Breather | 15 | 9 | 1 |
| 77–9270 | Pulley – Rewind Starter | 12 | 56 | 1 |
| 77–9300 | Breather Assy. | 8 | 8 | 1 |
| 77–9310 | Screw – Set | 8 | 192A | 1 |
| 77–9320 | Cover – Valve | 8 | 1023 | 1 |
| 77–9330 | Crankshaft | 9 | 16 | 1 |
| 77–9340 | Pin Assy. – Piston | 9 | 28 | 1 |
| 77–9350 | Screw – Connecting Rod | 9 | 32 | 1 |
| 77–9360 | Screw – Hex. Head | 11 | 188 | 1 |
| 77–9360 | Screw – Hex. Head | 13 | 188 | 1 |
| 77–9360 | Screw – Hex. Head | 14 | 188 | 1 |
| 77–9360 | Screw – Hex. Head | 9 | 188 | 1 |
| 77–9380 | Insert – Rewind Handle | 12 | 59 | 1 |
| 77–9390 | Handle – Rewind Starter | 12 | 60 | 1 |
| 77–9400 | Starter Assy. – Rewind | 12 | 608 | 1 |
| 77–9410 | Tube – Breather | 8 | 11 | 1 |
| 77–9430 | Screw – Hex. | 14 | 346 | 1 |
| 77–9450 | Terminal – Spark Plug | 13 | 851 | 1 |
| 77–9460 | Brake Assy. | 13 | 923 | 1 |
| 77–9470 | Tube – Breather | 11 | 529 | 1 |
| 77–9550 | Cover – Brake | 2 | 18 | 1 |
| 86–7990 | Screw – Clamp | 2 | 15 | 1 |
| 92–2270 | Screw – Handle | 5 | 16 | 1 |
| 92–2289 | Plate – Toro Logo | 2 | 2 | 1 |
| 92–9677 | Rear Pivot Assembly L.H. | 3 | 6 | 1 |
| 92–9680 | Rear Pivot Assembly R.H. | 3 | 1 | 1 |
| 92–9812 | Stiffener – Blade | 2 | 16 | 1 |
| 92–9813 | Blade – 48cm | 2 | 7 | 1 |
| 93–0339 | Cover – Throttle Lower | 5 | 7 | 1 |
| 93–1115 | Control – Throttle | 5 | 3 | 1 |
| 93–1116 | Cable – Brake | 5 | 12 | 1 |
| 93–3772 | Guide – Rope | 5 | 19 | 1 |
| 93–4105 | Decal – Danger | 1 | 32 | 1 |
| 93–4355 | Decal – Recoil | 2 | 3 | 1 |
| 93–7198 | Cap – Gas | 2 | 13 | 1 |
| 94–1604 | Engine – Complete | 2 | 1 | 1 |
| 94–4364 | Bail – Brake | 6 | 5 | 1 |
| 94–4365 | Bail – Traction | 6 | 4 | 1 |
| 94–4367 | Handle Assembly | 5 | 22 | 1 |
| 94–6027 | Decal – Instruction | 5 | 4 | 1 |
| 94–6754 | Cable – Traction | 5 | 10 | 1 |
| 2210–249 | Clamp – Casing | 2 | 14 | 1 |
| 2210–316 | Stop – Rope | 2 | 17 | 1 |
| 302–26 | Fitting – Grease | 3 | 2 | 2 |
| 321–52 | Screw – Hex Hd. Cap | 5 | 23 | 1 |
| 322–29 | Screw – Hex Hd. | 1 | 12 | 2 |
| 3253–22 | Washer – Lock | 2 | 8 | 1 |
| 3256–1 | Washer – Flat | 5 | 13 | 1 |
| 3256–24 | Washer | 4 | 13 | 1 |
| 3284–5 | Pin – Groove | 1 | 18 | 1 |
| 3290–378 | Tie – Cable | 5 | 11 | 2 |
| 3296–5 | Nut | 4 | 14 | 1 |
| 3296–5 | Nut – Lock | 3 | 7 | 2 |

*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

| Part No. | Description | Pg. No. | Ref. No. | Qty. |
|---|---|---|---|---|
| 3296–5 | Nut – Lock, Nylon | 1 | 27 | 2 |
| 3296–73 | Nut – Lock | 5 | 14 | 2 |
| 3296–74 | Nut – Flange, Nylon | 6 | 3 | 2 |
| 32112–11 | Nut – Push | 1 | 3 | 1 |
| 32112–13 | Nut – Push | 3 | 13 | 1 |
| 32121–114 | Pin – Spirol | 4 | 8 | 2 |
| 32144–4 | Screw – Hex Hd. Tap | 1 | 1 | 10 |
| 32144–4 | Screw – Thread Forming | 2 | 5 | 2 |
| 32144–4 | Screw – Thread Forming | 3 | 28 | 6 |
| 32144–31 | Screw – Thread Forming | 3 | 9 | 1 |
| 32144–70 | Screw – Hex Flange Hd. | 1 | 20 | 1 |
| 32144–97 | Screw – Phillips Pan Hd. | 5 | 6 | 5 |
| 32144–97 | Screw – Thread Forming | 1 | 13 | 2 |
| 32144–98 | Screw – Phillips Pan Hd. | 5 | 17 | 4 |
| 32144–99 | Screw – Phillips Pan Hd. | 5 | 9 | 2 |
| 32144–102 | Screw – Thread Forming | 2 | 4 | 3 |
| 32144–111 | Screw – Hex Washer | 7 | 1 | 5 |
| 32151–93 | Ring – Grip | 3 | 29 | 1 |

*Not Illustrated

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |