FORM NO. 3318—492

LAWN-BOY®

SILVER SERIES 2 CYCLE WALK—BEHIND MOWER

MODEL NO.10227—6900001 & UP
MODEL NO. 10304—6900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly (Model No. 10227)	1	Handle Assembly	8
Housing Assembly (Model No. 10304)	2	Engine Assembly	9–14
Cover Assembly (Model No. 10227)	3	Recoil Starter Assembly	15
Cover Assembly (Model No. 10304)	4	Carburetor Assembly	16
Gear Cas Assembly (Model No. 10304)	5	Lawn–Boy Part Number Index	17–19
Rear Axle Assembly (Model No. 10304)	6	Maintence	20–22
Engine Assembly	7		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Shredder Kit	Model No. 89860
Rear Bagging Kit	Model No. 89800	Leaf Bag Kit w/Chute	Model No. 89811
Leaf Bag	Model No. 89804	Mow & Feed Fertilizer Spreader	Model No. 52070

Copyright 1996 The Lawn–Boy Inc.

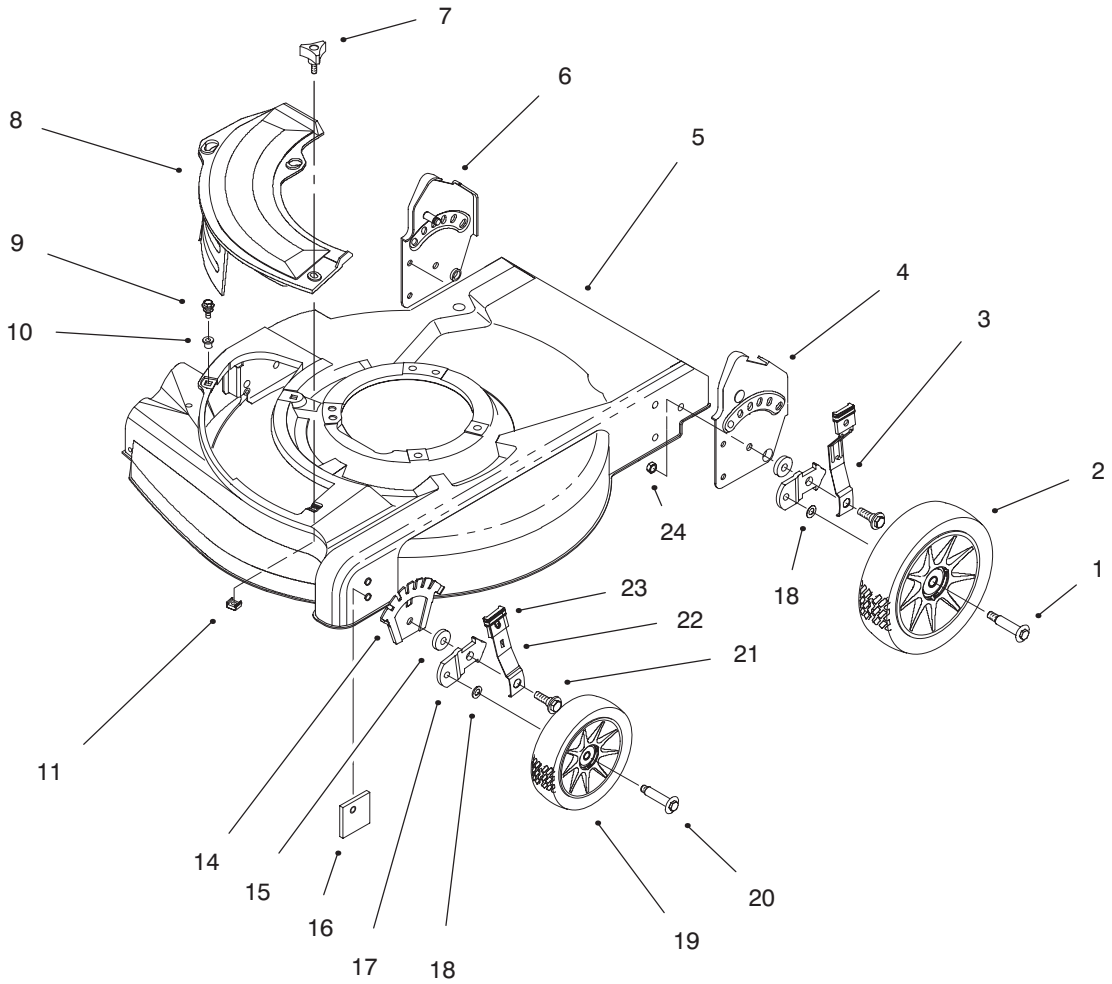


C–2493

HOUSING ASSEMBLY (MODEL NO. 10227)

Ref. No.	Part No.	Description	No. Used
1	614650	Bolt – Shoulder	2
2	684777	Wheel & Tire Ass'y 8"	2
3	92–1005	Spring Arm Assembly	2
4	92–7743	Bracket – Handle L.H.	1
5	16–4359	Housing Assembly	1
6	92–7742	Bracket – Handle R.H.	1
7	614682	Knob – Cover Plate	1
8	92–8630	Plate – Mulch 21"	1
9	614677	Screw – Sems Thr'd Form	2
10	94–1610	Grommet – Plastic	2
11	613765	Nut – Cage	1


Ref. No.	Part No.	Description	No. Used
14	92–4881	Plate – Height Adjust	2
15	92–4890	Washer	4
16	92–7731	Plate – Baffle	2
17	614637	Bracket – Wheel Height Adj.	4
18	40–1940	Washer	4
19	684776	Wheel – Tire Assembly 6"	2
20	92–1099	Bolt – Shoulder	2
21	614672	Bolt – Shoulder	4
22	614687	Spring Arm Ass'y – Front	2
23	92–1008	Knob – Height Adjust.	4
24	3296–39	Nut – Lock	2

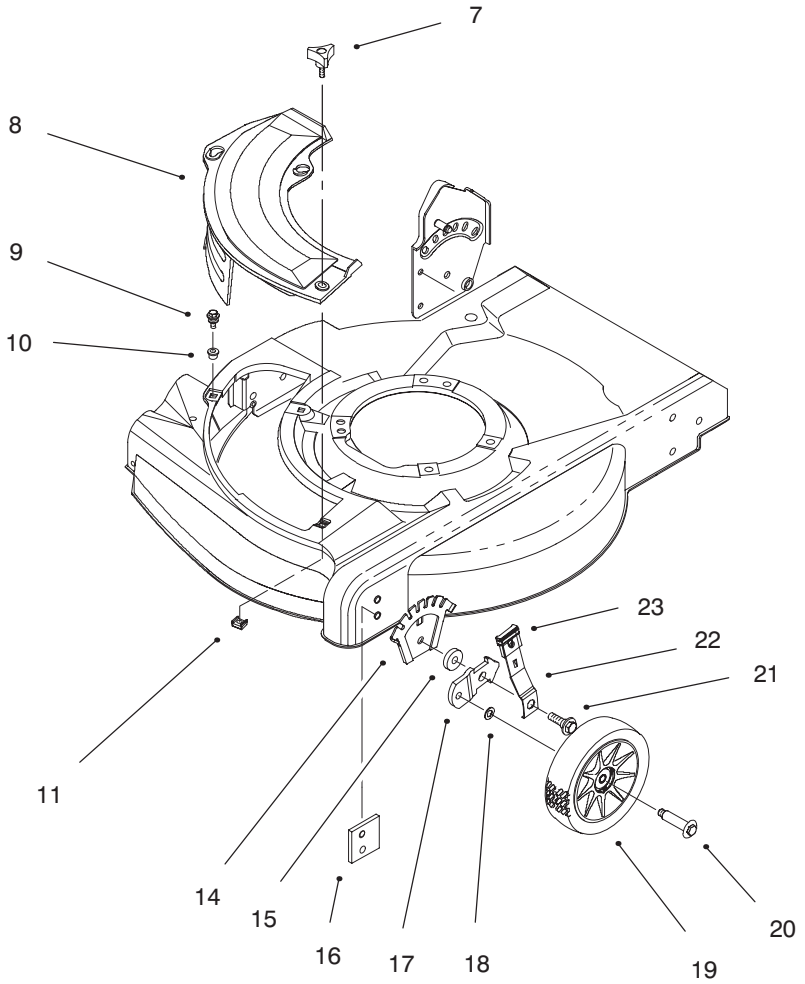

HOUSING ASSEMBLY (MODEL NO. 10304)

Ref. No.	Part No.	Description	No. Used
7	614682	Knob – Cover Plate	1
8	92–8630	Plate – Mulch 21”	1
9	614677	Screw – Sem Thr’d Form	2
10	94–1610	Grommet – Plastic	2
11	613765	Nut – Cage	1
14	92–4881	Plate – Height Adjust	2
15	92–4890	Washer	2
16	92–7731	Plate – Baffle	2

Ref. No.	Part No.	Description	No. Used
17	614637	Bracket – Wheel Height Adj.	2
18	40–1940	Washer	2
19	684776	Wheel & Tire Ass’y 6”	2
20	92–1099	Bolt – Shoulder	2
21	614672	Bolt – Shoulder Height Adj.	2
22	614687	Spring Arm Ass’y – Front	2
23	92–1008	Knob – Height Adjust	4

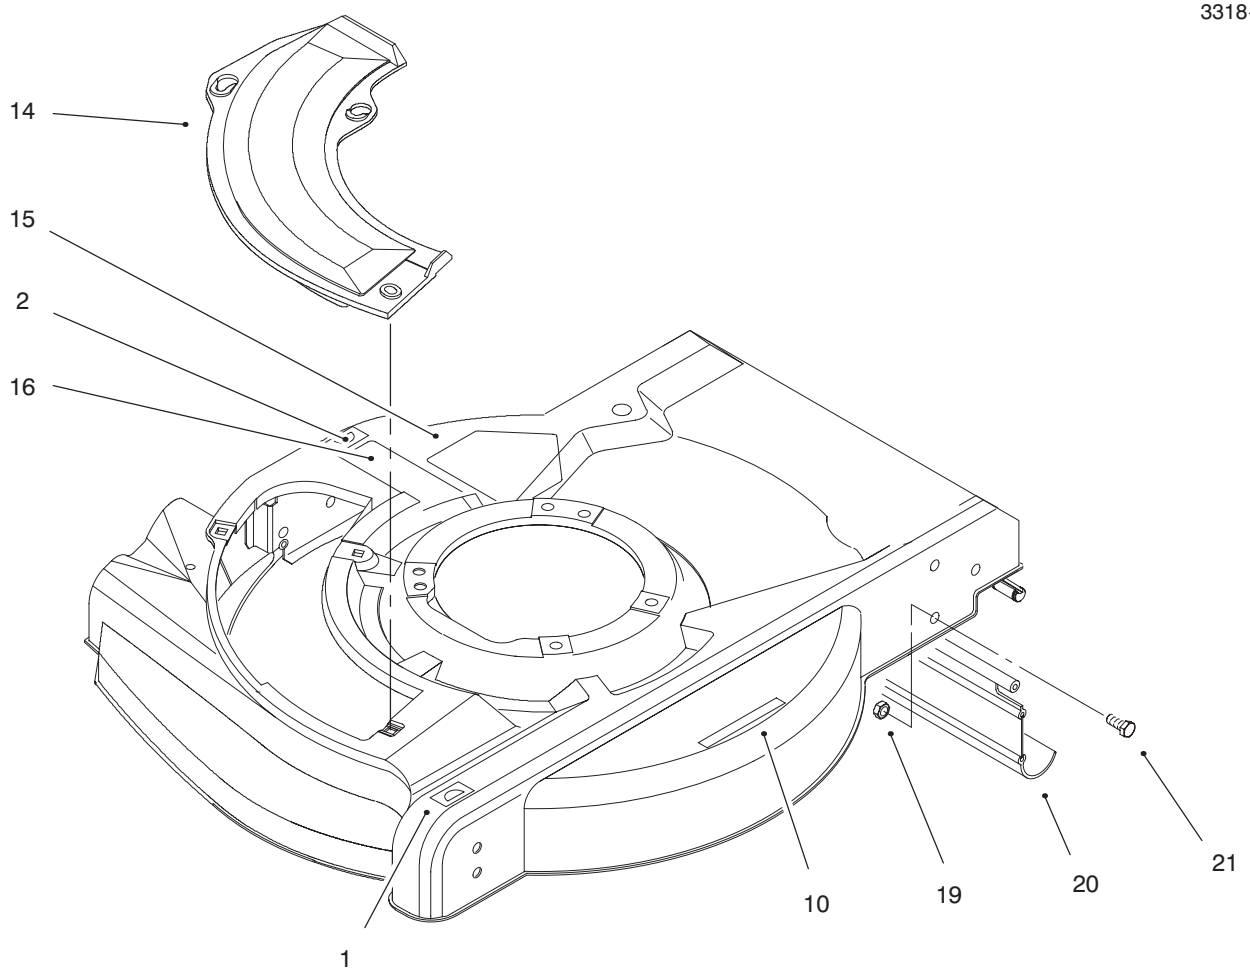


C–2495

COVER ASSEMBLY (MODEL NO. 10227)

Ref. No.	Part No.	Description	No. Used
1	92–2915	Decal – H.O.C.	2
2	92–2914	Decal – H.O.C.	2
10	93–7250	Decal – Warning	1
14	607560	Plate – Cover	1
15	39–5770	Decal – Danger	1


Ref. No.	Part No.	Description	No. Used
16	92–1097	Decal – Discharge	1
19	3296–29	Nut – Lock	4
20	92–8647	Shield – Trailing	1
21	322–3	Screw – Hex Hd. Cap	4

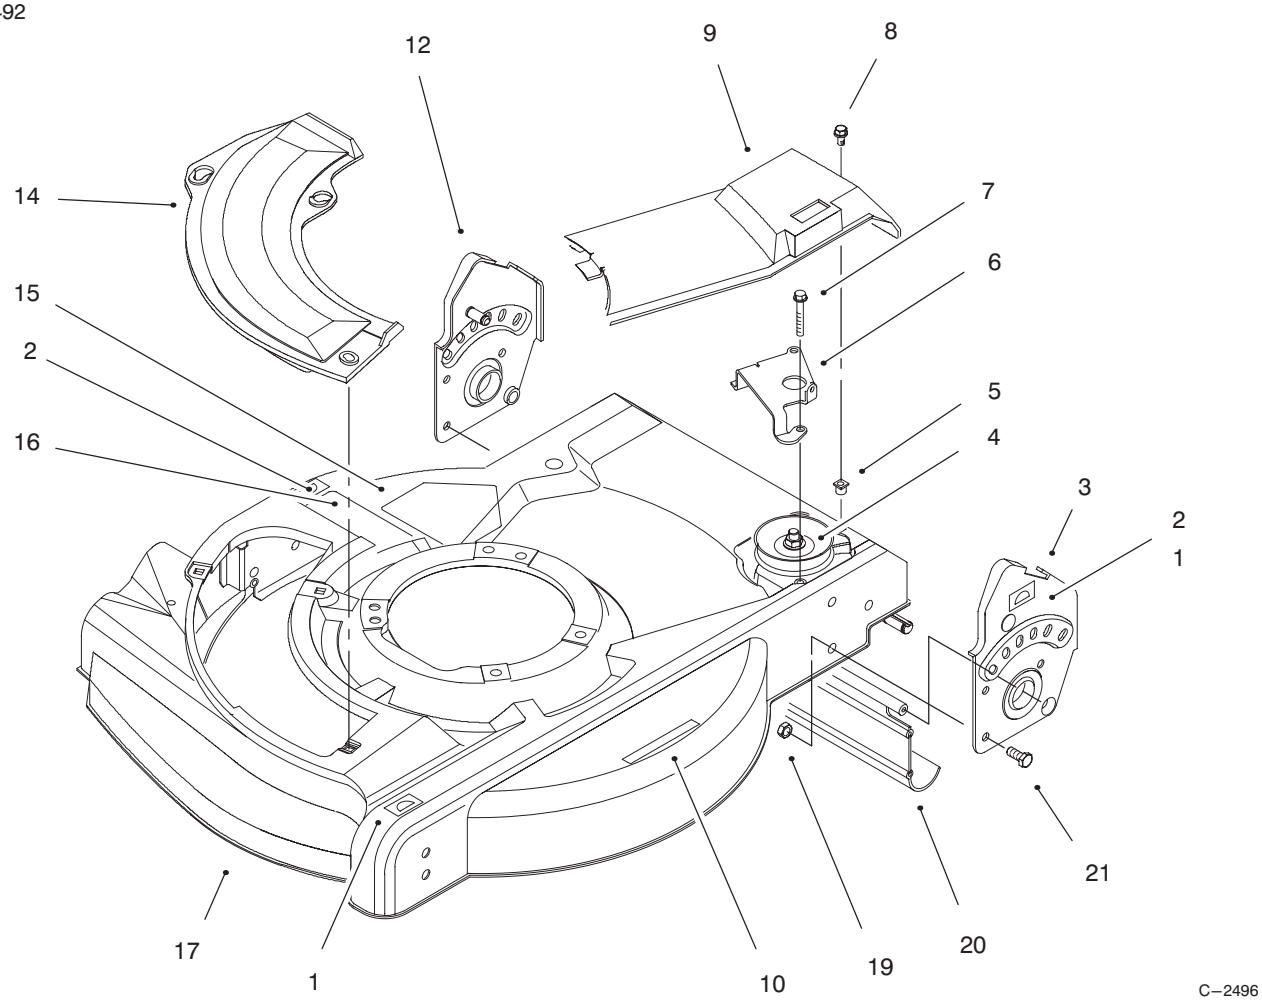

COVER ASSEMBLY (MODEL NO. 10304)

Ref. No.	Part No.	Description	No. Used
1	92–2915	Decal – H.O.C.	2
2	92–2914	Decal – H.O.C.	2
3	92–7724	Bracket – Handle L.H.	1
4	92–7735	Gear Case Assembly	1
5	605120	Grommet	1
6	92–7728	Guide – Transmission	1
7	49–2040	Screw – Hex Hd.	2
8	92–9662	Screw – Phillips Hd.	1
9	614671	Cover – Drive	1

Ref. No.	Part No.	Description	No. Used
10	93–7250	Decal – Warning	1
12	92–7723	Bracket – Handle R.H.	1
14	607560	Plate – Cover	1
15	39–5770	Decal – Danger	1
16	92–1097	Decal – Discharge	1
17	16–4369	Housing Assembly	1
19	3296–29	Nut – Lock	6
20	92–8647	Shield – Trailing	1
21	322–3	Screw – Hex Hd. Cap	6

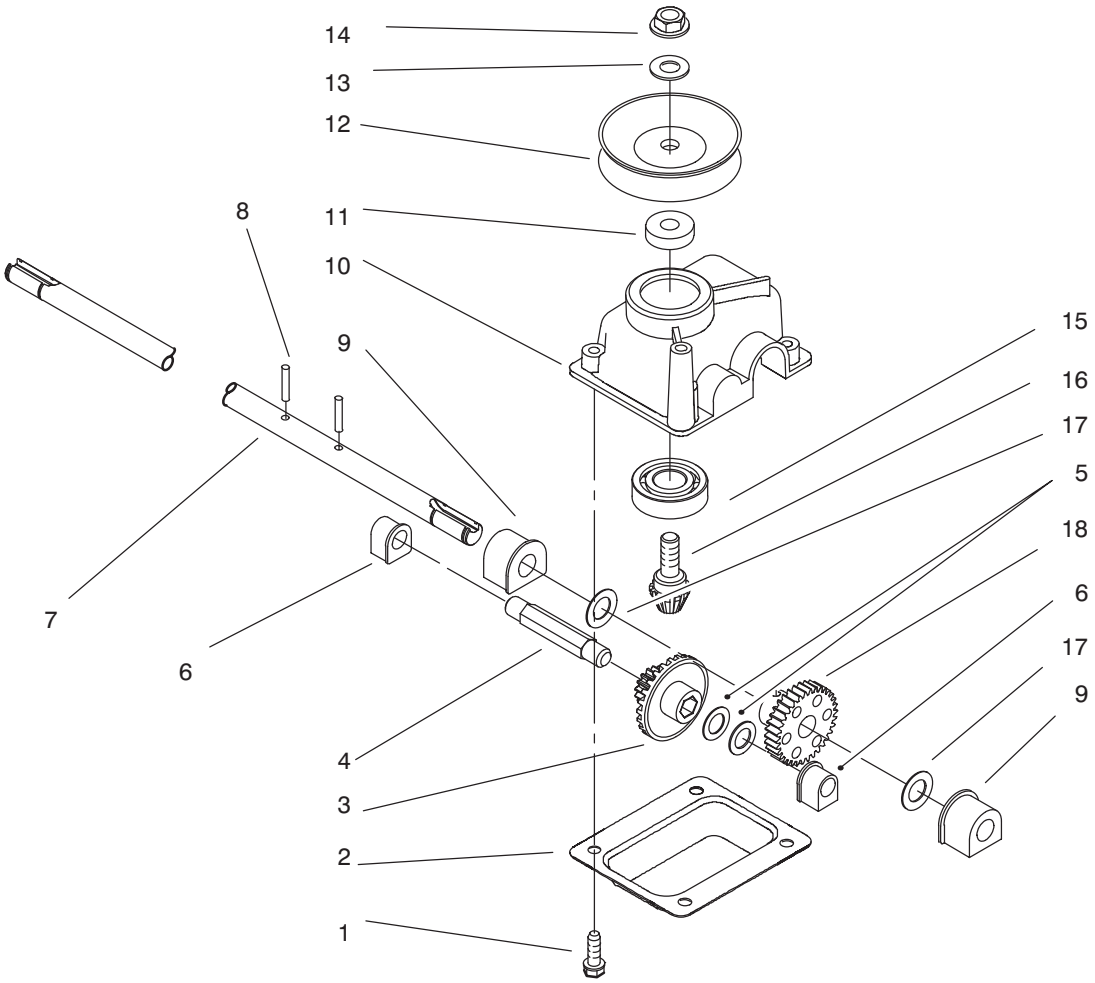


C–1292

GEAR CASE ASSEMBLY (Model No. 10304)

Ref. No.	Part No.	Description	No. Used
1	32144–4	Screw – Taptite	4
2	614668	Cover – Gear Case	1
3	55–3760	Pinion – 15 Tooth	1
4	614696	Shaft – Intermediate	1
5	36–4791	Washer	2
6	60–8750	Bushing	2
7	93–0239	Shaft – Output	1
8	3285–19	Pin – Groove	2
9	60–8850	Bushing – Output	2

Ref. No.	Part No.	Description	No. Used
10	92–7727	Gearcase	1
11	62–6660	Spacer	1
12	614669	Pulley – Half	2
13	3256–24	Washer	1
14	3296–5	Nut	1
15	38–7820	Bearing – Ball	1
16	60–8890	Gear – Bevel Pinion	1
17	36–4780	Washer – Thrust	2
18	614596	Gear 34 Tooth	1

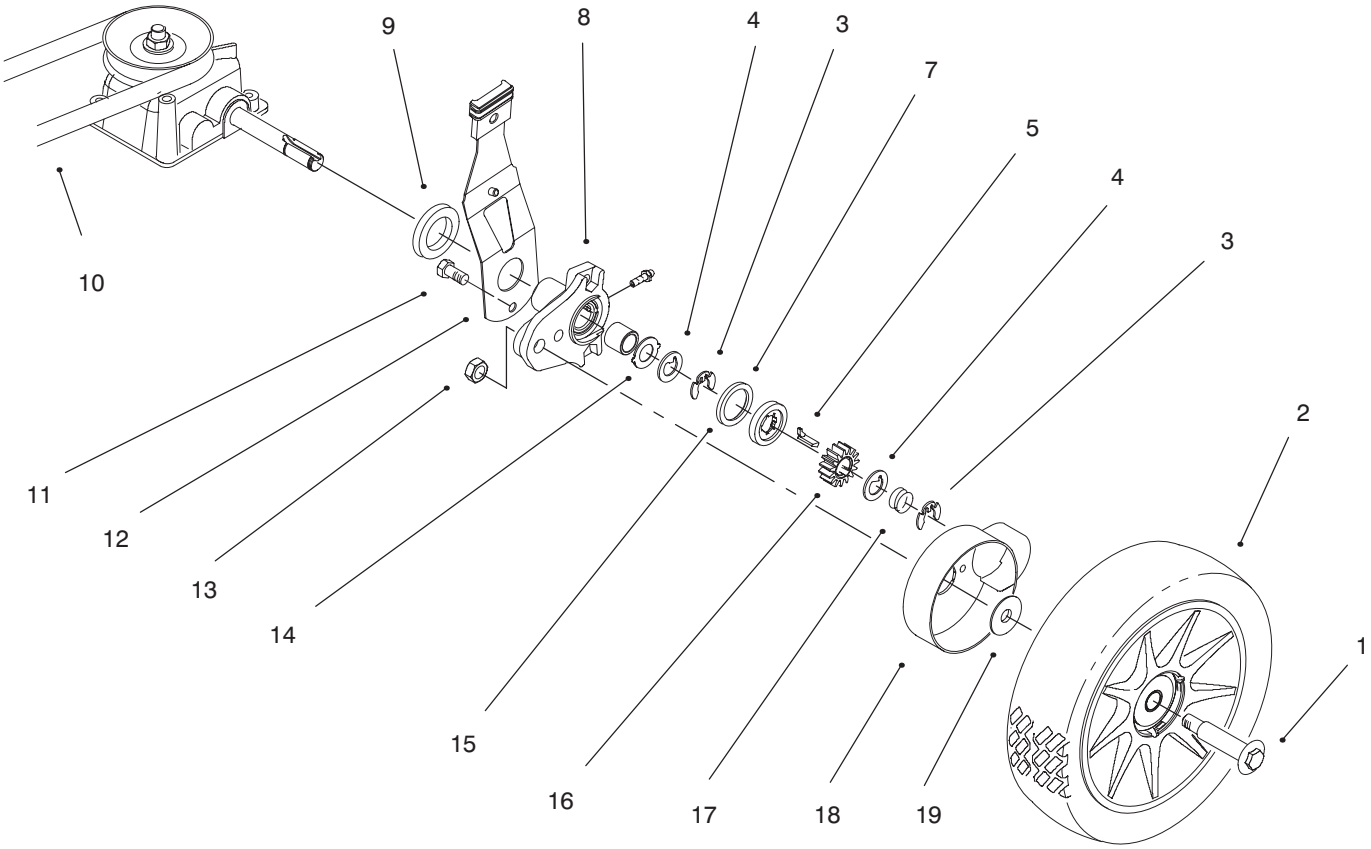


C–2497

REAR AXLE ASSEMBLY (MODEL NO. 10304)

Ref. No.	Part No.	Description	No. Used
1	92–1057	Bolt – Shoulder	2
2	92–1042	Wheel & Tire Ass'y 8"	2
3	65–2720	Ring – Retaining	4
4	65–4740	Washer – Thrust Keyed	4
5	66–6050	Key – Rocking L.H.	1
*	66–6040	Key – Rocking R.H.	1
7	65–4710	Ring – Friction	2
8	92–7746	Height Adj. Arm – Rear	2
9	614447	Spacer – Axle Shaft	2
10	92–1043	V–Belt	1

Ref. No.	Part No.	Description	No. Used
11	32144–85	Screw – Hex Hd.	2
12	92–1004	Spring Arm Ass'y	2
13	610358	Nut – Lock	2
14	65–4730	Washer – Thrust	2
15	65–4760	Washer	2
16	65–4750	Gear – Pinion	2
17	65–4720	Spring – Compression	2
18	94–1609	Cover – Wheel	2
19	614426	Washer – Stepped	2

*Not Illustrated

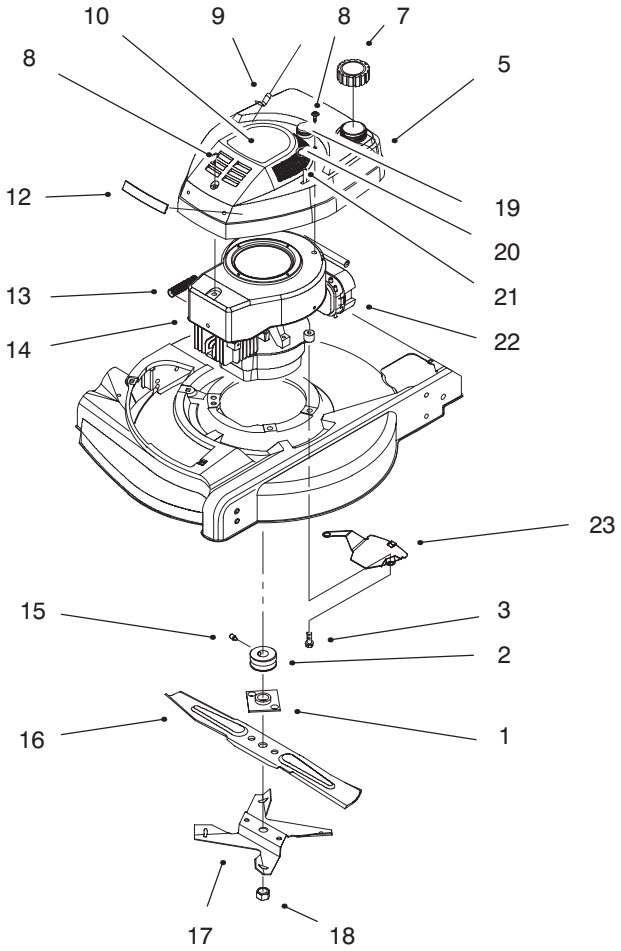


C–2498

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	677525	Plate & Collar Assembly	1
2	92–6542	Pulley – Engine (Model No. 10304 Only)	1
3	92–1624	Screw – Engine	3
5	92–6380	Tank & Shroud Assembly	1
7	93–3660	Fuel/Oil Cap Assembly	1
8	93–4302	Screw – Sems	3
9	92–1701	Rope – Stop	1
10	93–0295	Decal – Recoil (Model No. 10227 Only)	1
*	93–0294	Decal – Recoil (Model No. 10304 Only)	1
12	92–8615	Applique – Shroud	1
13	93–4306	Spring – Compression	1
14		Engine Assembly	1
15	613227	Screw – Set (Model No. 10304 Only)	1
16	612543	Blade – 21”	1
17	92–1630	Fan – Mulching	1
18	603164	Nut – Blade	1
19	66–7460	Bulb – Primer	1
20	44–2750	Body – Primer	1
21	44–3174	Hose – Primer	1
22	612782	Line – Gas	1
23	93–4196	Shield – Grass (Model No. 10304 Only)	1


*Not Illustrated

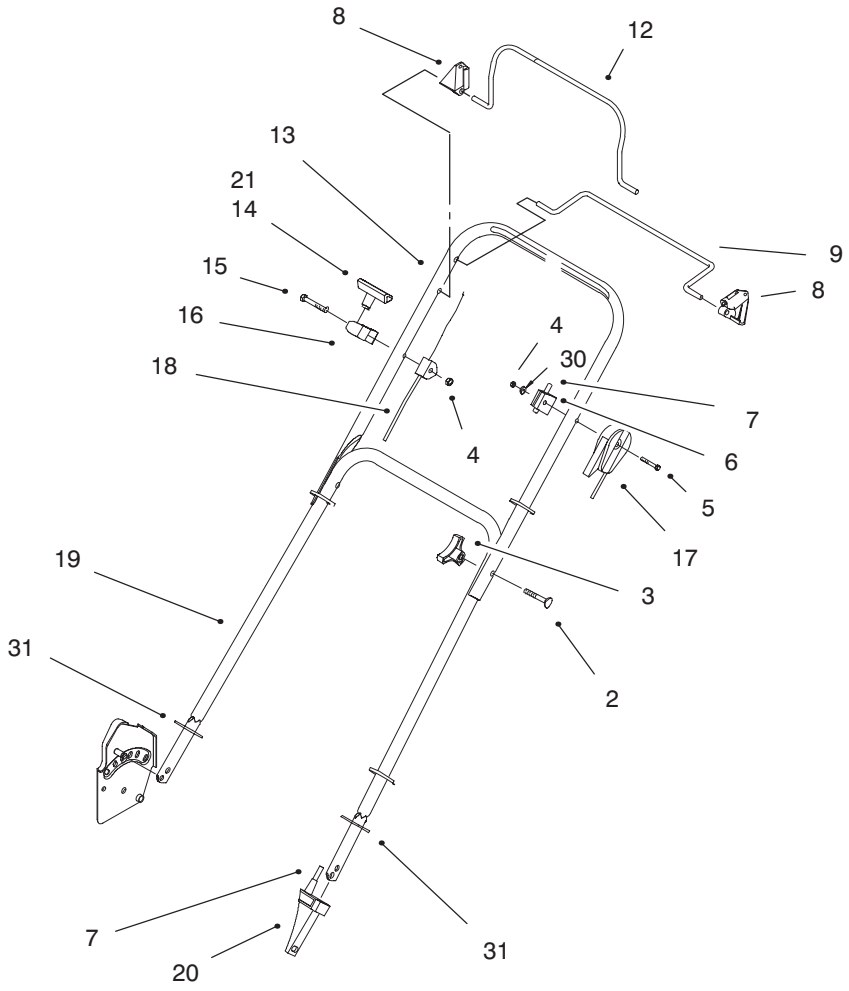

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	614697	Screw – Handle	2
3	614243	Knob	2
4	3296–73	Nut – Lock	2
5	321–48	Screw – Hex Hd. Cap (Model No. 10227 Only)	1
5	321–49	Screw – Hex Hd. Cap (Model No. 10304 Only)	1
6	92–7729	Anchor – Cable Upper (Model No. 10304 Only)	1
7	92–7726	Cable – Traction (Model No. 10304 Only)	1
8	92–5412	Stop – Pivot (Model No. 10227 Only)	1
8	92–5412	Stop – Pivot (Model No. 10304 Only)	2
9	92–1001	Bail – SP Control (Model No. 10304 Only)	1

Ref. No.	Part No.	Description	No. Used
12	93–4184	Bail – Flywheel Brake	1
13	93–4185	Handle – Section Upper	1
14	612825	Handle – Starter	1
15	321–5	Screw – Hex Hd. Cap	1
16	93–7383	Guide – Rope	1
17	92–7734	Cable – Throttle 2 Cycle	1
18	92–7738	Cable – Flywheel Brake	1
19	614673	Handle Section – Lower	1
20	93–7380	Anchor – Cable SP Lower (Model No. 10304 Only)	1
21	612824	Clip – Rope Insert	1
30	92–8632	Washer (Model No. 10227 Only)	1
31	93–3653	Handle – Guard (Model No. 10227 Only)	2
31	93–3653	Handle – Guard (Model No. 10304 Only)	1

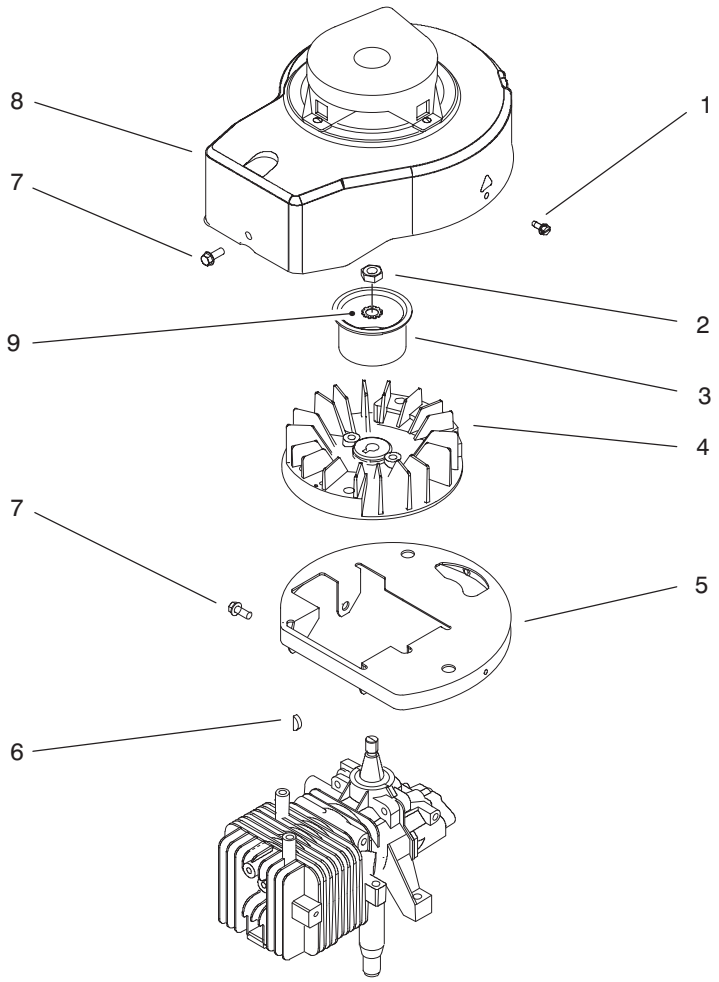


C−2128A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	130743	Nut	1
3	614640	Hub − Starter	1
4	684743	Flywheel	1
5	93−1216	Base − Shroud	1


Ref. No.	Part No.	Description	No. Used
6	607199	Key	1
7	614702	Screw	4
8	93−4304	Shroud Assembly	1
9	316959	Washer − Lock	1

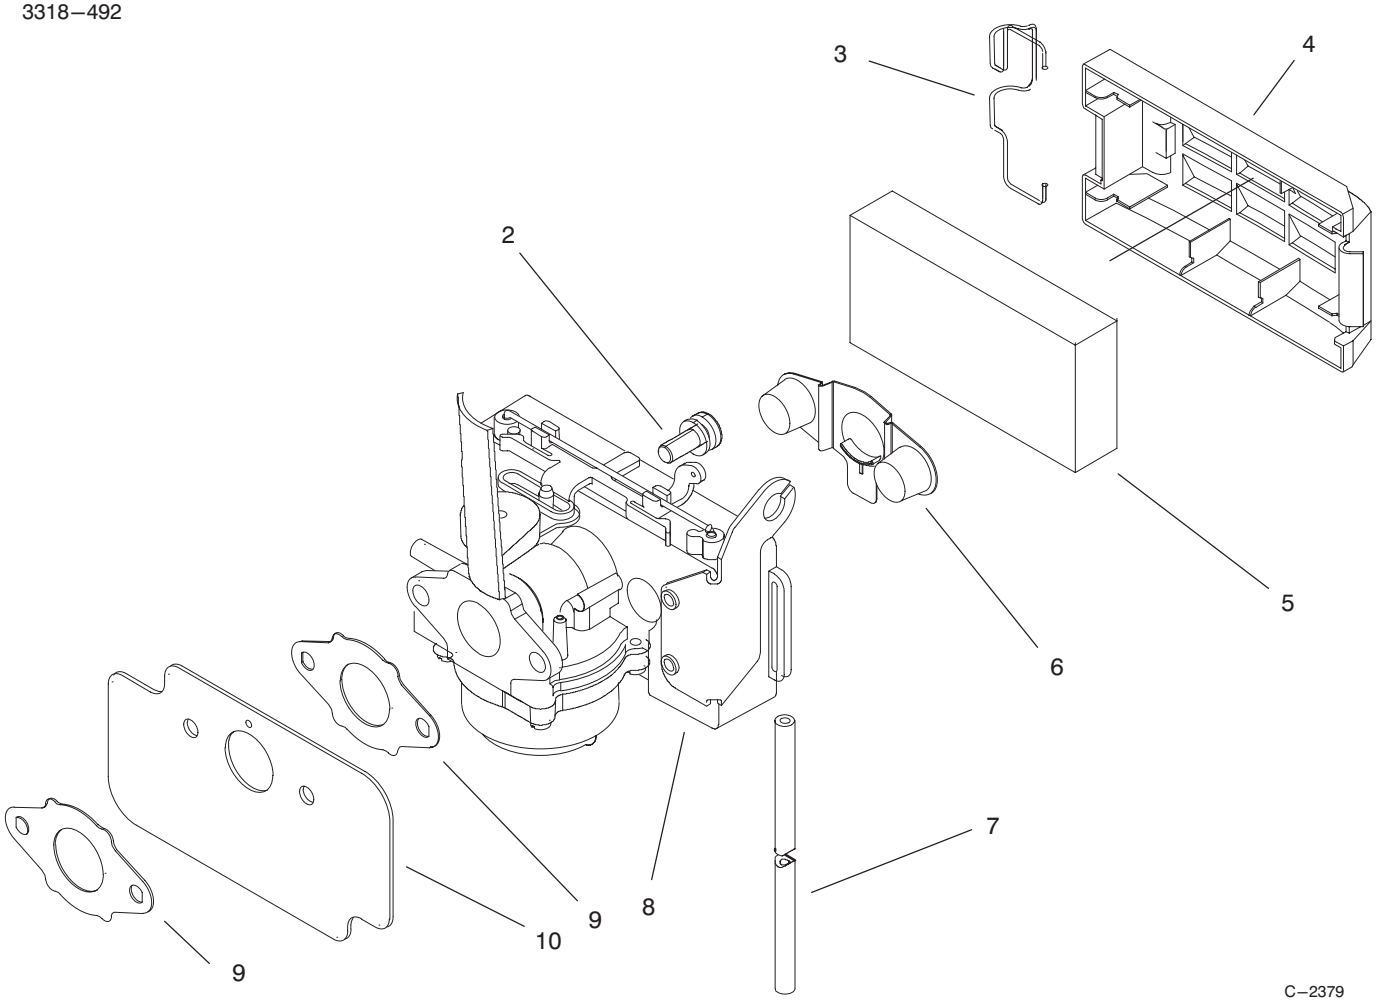

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
2	609482	Screw	2
3	610383	Retainer – Filter	1
4	93–1231	Cover – Air Cleaner	1
5	609493	Element – Filter Air	1
6	93–4320	Shield – Fuel	1

Ref. No.	Part No.	Description	No. Used
7	44–3174	Hose – Primer	1
8	93–4331	Carburetor Assembly (Incl. Ref. #9)	1
9	92–4948	Gasket – Carburetor	2
10	93–1221	Shield – Carburetor	1

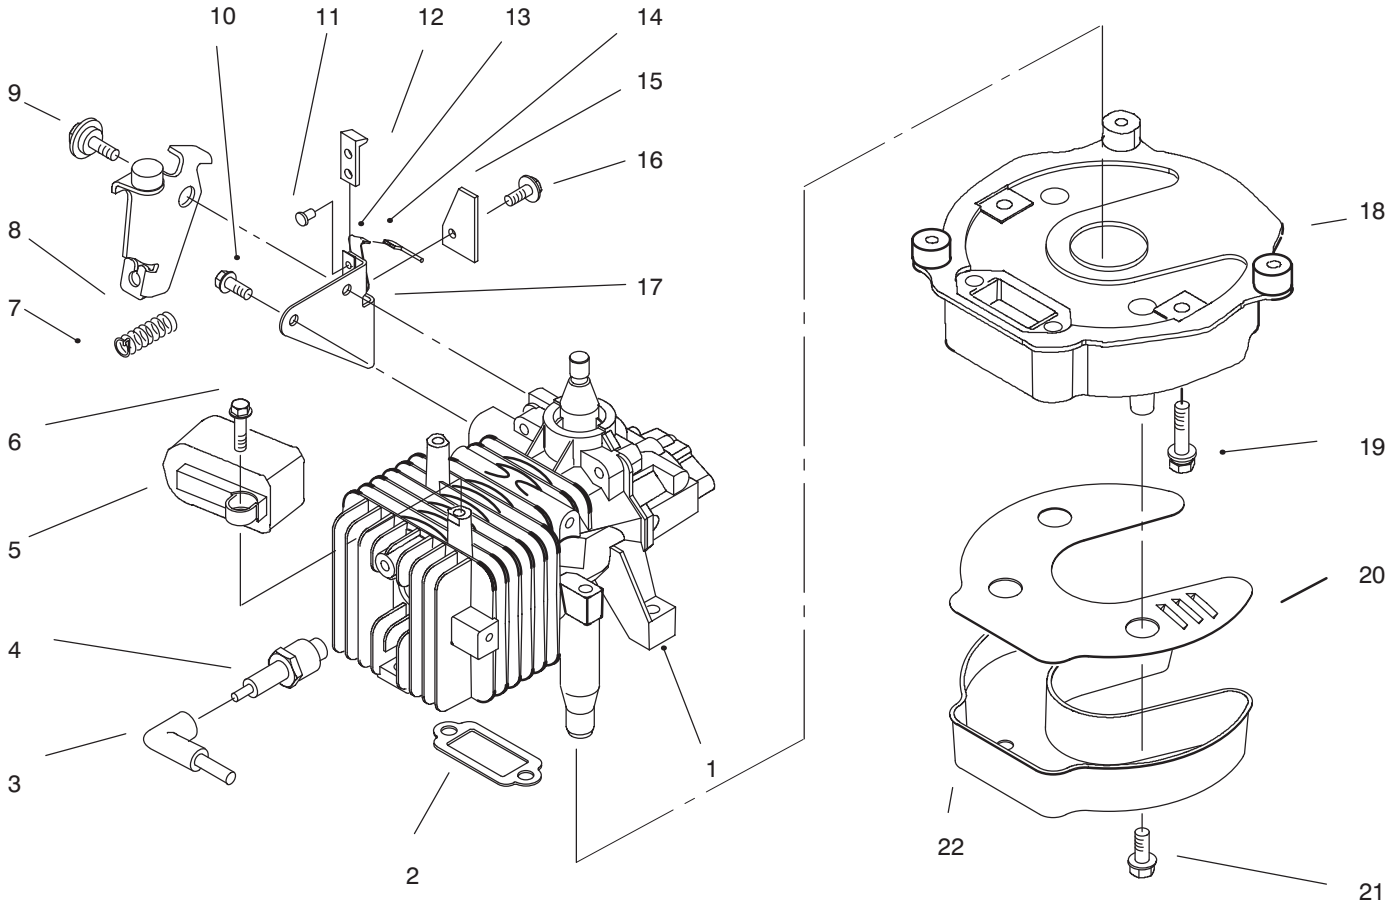

C–1296


ENGINE ASSEMBLY (Continued)
(Serial No. 6900001–6908965) (Model No. 10227 Only)

Ref. No.	Part No.	Description	No. Used
1	94–5737	Short Block	1
2	93–1233	Gasket – Exhaust	1
3	92–1152	CD Ignition	1
*	681678	Cover & Terminal	1
4	614009	Plug – Spark	1
5	684049	CD Ignition (Incl. Ref. #3)	1
6	613208	Screw – Hex. Washer Hd.	2
7	66–5370	Spring –Compression	1
8	66–5380	Brake Plate Assembly	1
9	92–9698	Screw – Shoulder	1
10	614702	Screw	1

Ref. No.	Part No.	Description	No. Used
11	3290–459	Rivet – Plastic	2
12	92–2925	Strap – Insulation	1
13	60–9010	Strap – Ground	1
14	92–1156	Wire – Brake Switch Lead	1
15	53–4690	Stop – Ground Strap	1
16	12–5450	Screw – Thread Forming	1
17	14–6009	Mounting Plate	1
18	614654	Plate – Muffler	1
19	607601	Screw	4
20	614681	Baffle	1
21	609471	Screw	3
22	614674	Cover – Muffler	1

*Not Illustrated

3318–492

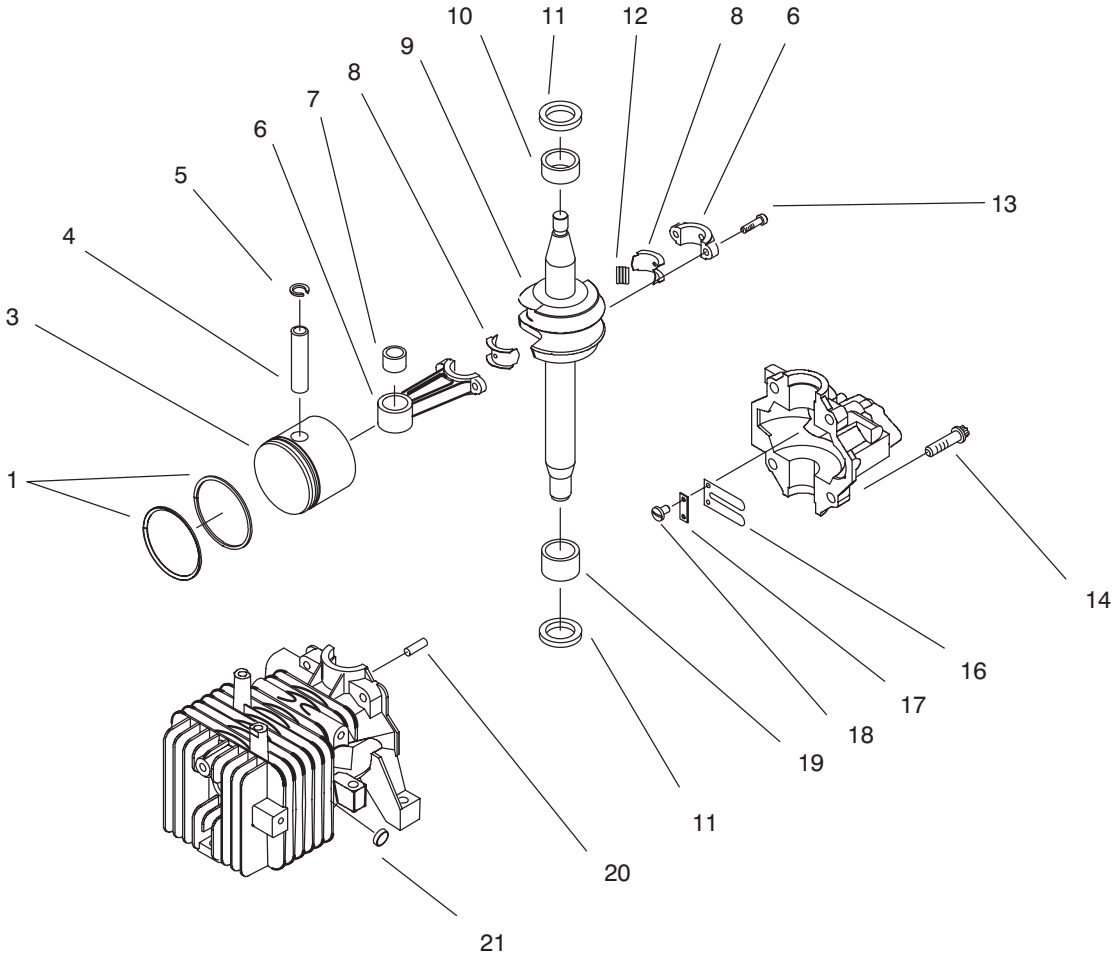


C–1295

ENGINE ASSEMBLY (Continued)
(Serial No. 6900001–6908965) (Model No. 10227 Only)

Ref. No.	Part No.	Description	No. Used
1	681737	Set – Ring	1
3	92–4923	Piston & Ring Set	1
*	92–4925	Piston & Connecting Rod (Incl. Ref. #1–8, 12, & 13)	1
4	606608	Pin – Wrist	1
5	303712	Ring – Retaining	2
6	92–4921	Connecting Rod Assembly (Incl. Ref. #6–8, 12, & 13)	1
7	92–4927	Bearing	1
8	677982	Liner – Split (Set of 2)	1
9	92–6375	Crankshaft	1
10	681830	Bearing – Upper Main	1

Ref. No.	Part No.	Description	No. Used
11	611396	Seal – Oil	2
12	683911	Bearing – Needle	1
13	611393	Screw – Hex. Hd.	2
14	614636	Screw – Torx. Washer Hd.	4
16	602588	Reed – Carburetor	1
17	602587	Reed – Backup Plate	1
18	612872	Screw	2
19	681831	Bearing – Needle	1
20	609629	Dowel	1
21	609123	Plug – Core	4
*	684725	Cylinder & Crankcase Ass'y	1
*	610372	Sealer	1

*Not Illustrated

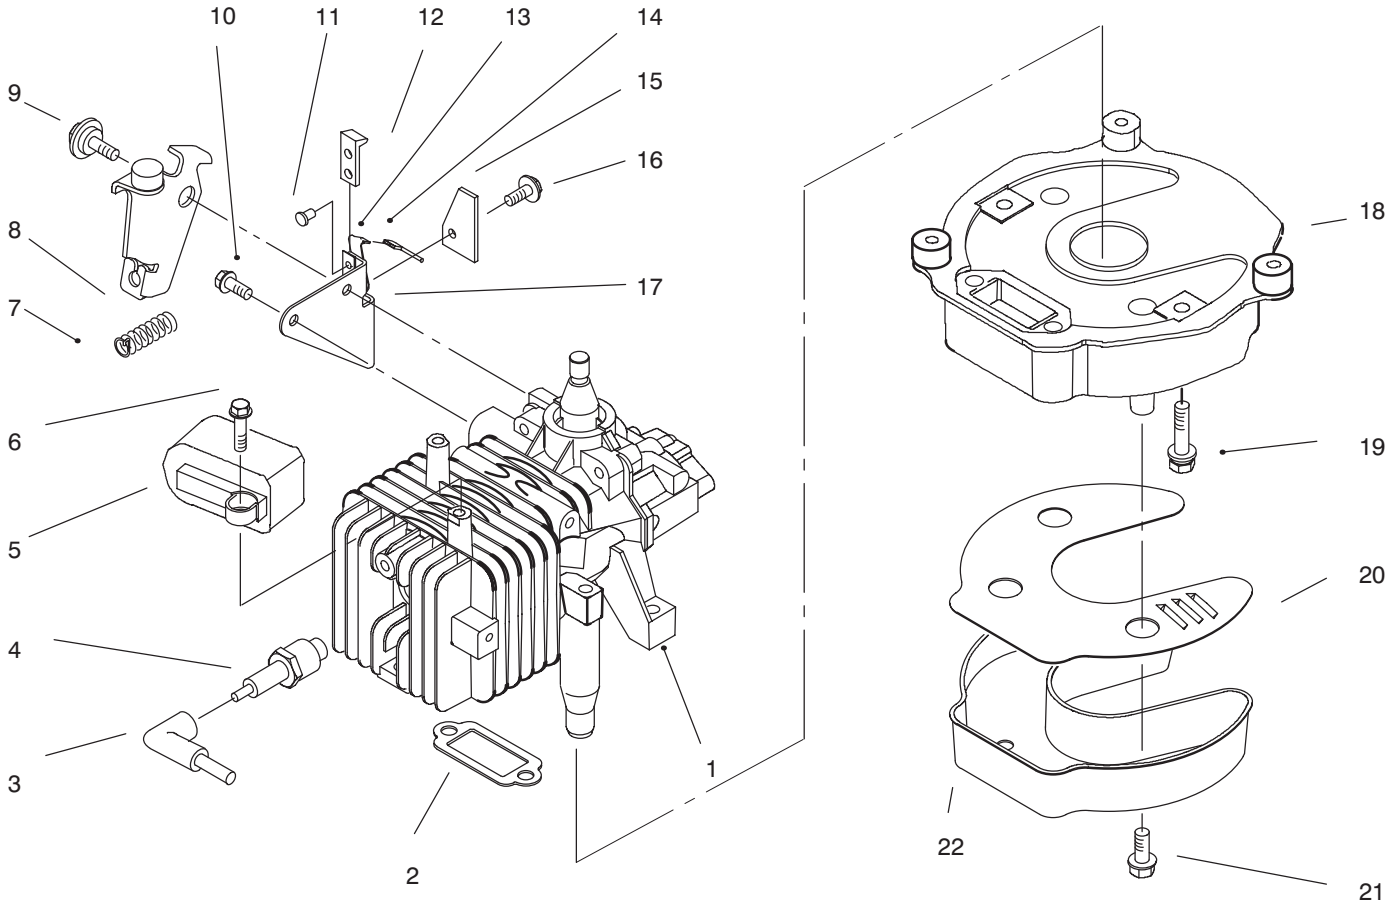


C–1296

ENGINE ASSEMBLY (Continued)
(Serial No. 6908966 & Up Model No. 10227 Only)
(Serial No. 6900001 & Up Model No. 10304 Only)

Ref. No.	Part No.	Description	No. Used
1	94–5737	Short Block	1
2	93–1233	Gasket – Exhaust	1
3	92–1152	CD Ignition	1
*	681678	Cover & Terminal	1
4	614009	Plug – Spark	1
5	684049	CD Ignition (Incl. Ref. #3)	1
6	613208	Screw – Hex. Washer Hd.	2
7	93–4306	Spring –Compression	1
8	93–4312	Brake Plate Assembly	1
9	92–9698	Screw – Shoulder	1
10	614702	Screw	1

Ref. No.	Part No.	Description	No. Used
11	3290–459	Rivet – Plastic	2
12	92–2925	Strap – Insulation	1
13	60–9010	Strap – Ground	1
14	92–1156	Wire – Brake Switch Lead	1
15	53–4690	Stop – Ground Strap	1
16	12–5450	Screw – Thread Forming	1
17	14–6009	Mounting Plate	1
18	614654	Plate – Muffler	1
19	607601	Screw	4
20	93–4343	Baffle	1
21	609471	Screw	3
22	614674	Cover – Muffler	1

*Not Illustrated

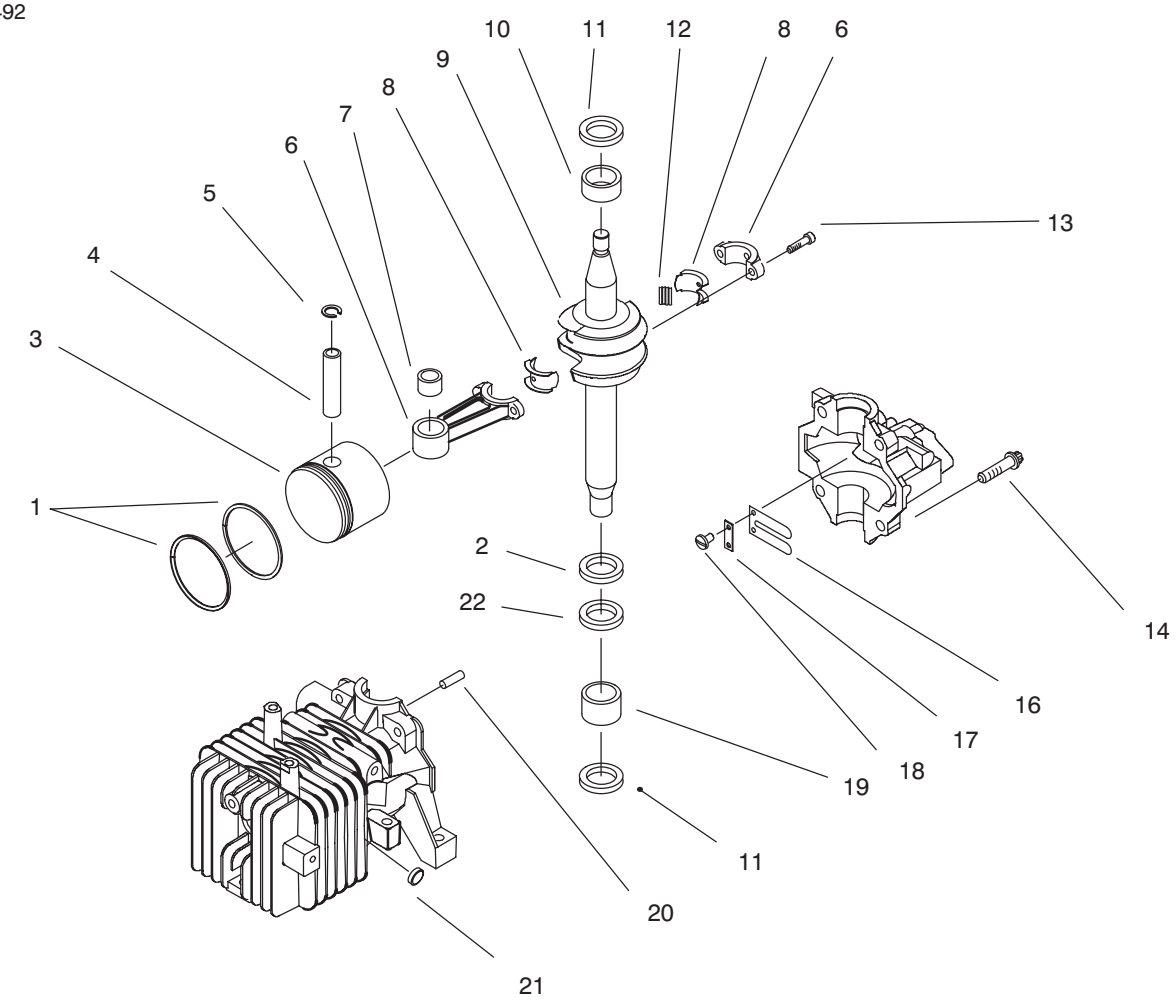


C–2500

ENGINE ASSEMBLY (Continued)
(Serial No. 6908966 & Up Model No. 10227 Only)
(Serial No. 6900001 & Up Model No. 10304 Only)

Ref. No.	Part No.	Description	No. Used
1	681737	Set – Ring	1
2	252–76	Bearing – Thrust	1
3	92–4923	Piston & Ring Set	1
*	92–4925	Piston & Connecting Rod (Incl. Ref. #1–8, 12, & 13)	1
4	606608	Pin – Wrist	1
5	303712	Ring – Retaining	2
6	92–4921	Connecting Rod Assembly (Incl. Ref. #6–8, 12, & 13)	1
7	92–4927	Bearing	1
8	677982	Liner – Split (Set of 2)	1
9	94–5713	Crankshaft	1
10	681830	Bearing – Upper Main	1

Ref. No.	Part No.	Description	No. Used
11	611396	Seal – Oil	2
12	683911	Bearing – Needle	1
13	611393	Screw – Hex. Hd.	2
14	614636	Screw – Torx. Washer Hd.	4
16	602588	Reed – Carburetor	1
17	602587	Reed – Backup Plate	1
18	612872	Screw	2
19	681831	Bearing – Needle	1
20	609629	Dowel	1
21	609123	Plug – Core	4
22	252–80	Washer – Thrust	1
*	610372	Sealer	1

*Not Illustrated

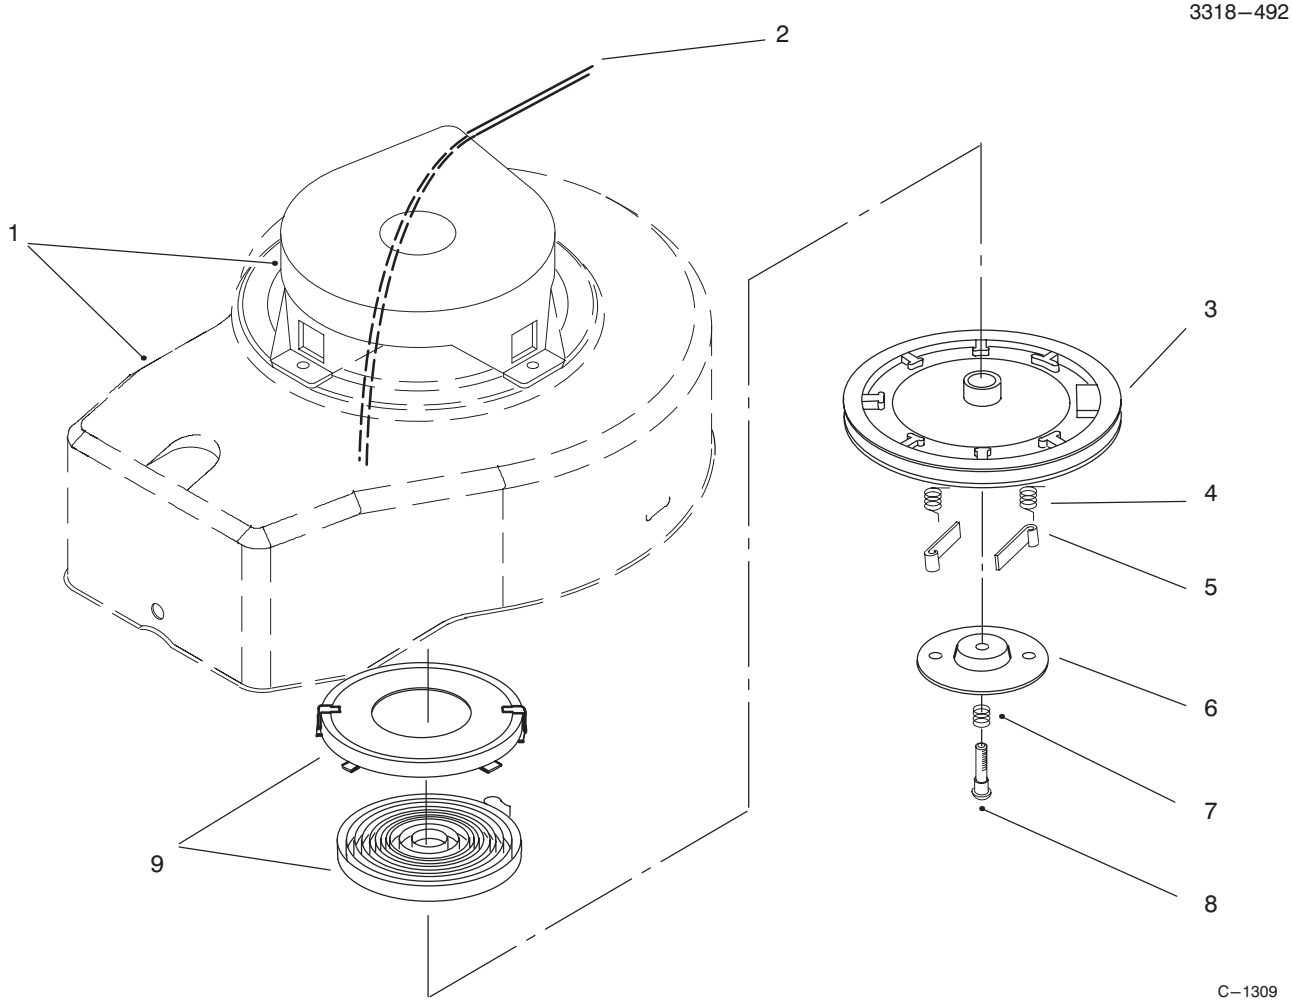


C–1309

RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–4304	Housing Assembly	1
2	92–4928	Rope –Starter	1
3	92–4929	Pulley Assembly	1
4	92–4930	Spring – Dog	2
5	92–4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92–9692	Retainer	1
7	92–4933	Screw	1
8	92–4934	Spring	1
9	92–4935	Spring Keeper Assembly	1

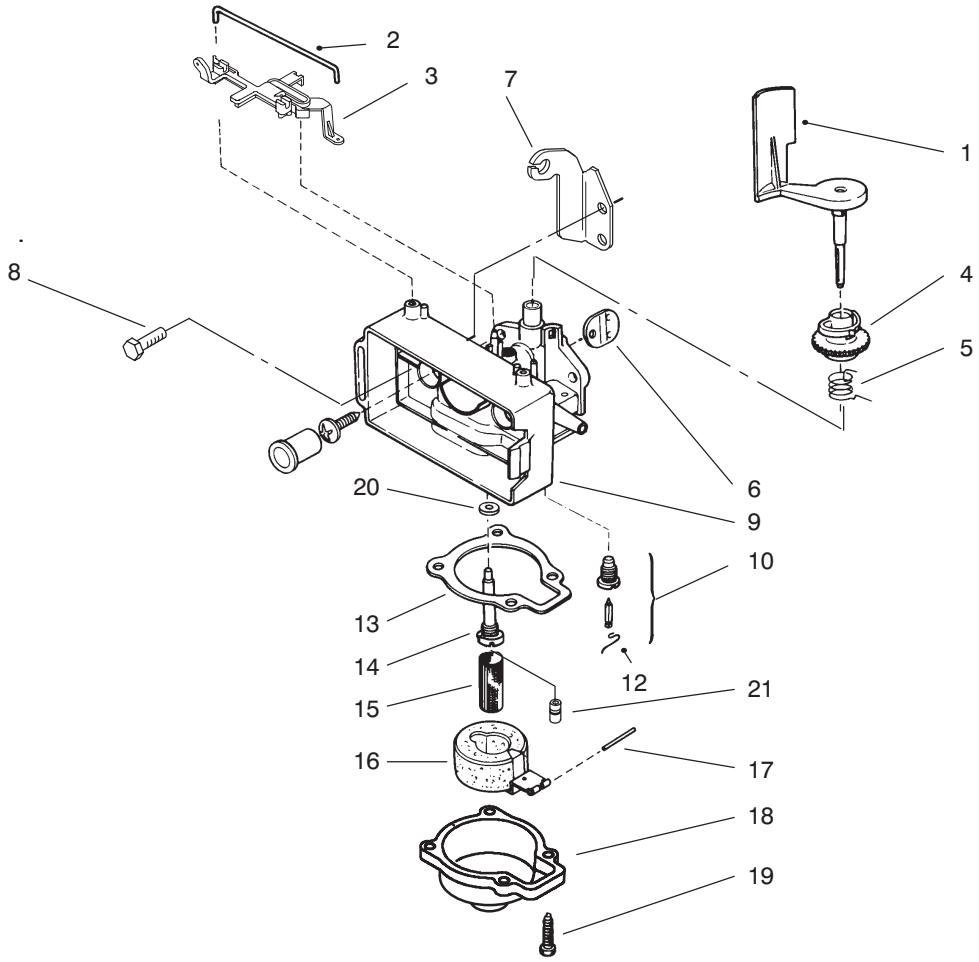

C–2130A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–6376	Air Vane & Shaft	1
2	610165	Retainer – Speed Control	1
3	93–1225	Lever – Speed Adjust	1
4	610834	Collar – Air Vane	1
5	92–4944	Spring – Governor	1
6	92–6373	Disc – Throttle	1
7	92–4949	Bracket – Throttle Control	1
8	613269	Screw	2
9	93–4324	Carburetor Body	1
10	92–9697	Kit – Float Valve, Body & Seat (Incl. Ref. #12)	1

Ref. No.	Part No.	Description	No. Used
12	603145	Spring	1
13	602850	Gasket	1
14	92–6371	Nozzle	1
15	611071	Filter – Fuel	1
16	678113	Float & Arm Assembly	1
17	92–6389	Pin	1
18	92–9691	Float Chamber	1
19	608850	Screw	4
20	612383	Washer	1
21	92–6370	Main Jet	1
*	92–6385	Jet – High Altitude	1
*	93–4331	Carburetor Assembly	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut	9	2	1
303712	Ring – Retaining	12	5	2
303712	Ring – Retaining	14	5	2
316959	Washer – Lock	9	9	1
602587	Reed – Backup Plate	12	17	1
602587	Reed – Backup Plate	14	17	1
602588	Reed – Carburetor	12	16	1
602588	Reed – Carburetor	14	16	1
602850	Gasket	16	13	1
603145	Spring	16	12	1
603164	Nut – Blade	7	18	1
605120	Grommet	4	5	1
606608	Pin – Wrist	12	4	1
606608	Pin – Wrist	14	4	1
607199	Key	9	6	1
607560	Plate – Cover	3	14	1
607560	Plate – Cover	4	14	1
607601	Screw	11	19	4
607601	Screw	13	19	4
608850	Screw	16	19	4
609123	Plug – Core	12	21	4
609123	Plug – Core	14	21	4
609471	Screw	11	21	3
609471	Screw	13	21	3
609482	Screw	10	2	2
609493	Element – Filter Air	10	5	1
609629	Dowel	12	20	1
609629	Dowel	14	20	1
610165	Retainer – Speed Control	16	2	1
610358	Nut – Lock	6	13	2
610372	Sealer	12	*	1
610372	Sealer	14	*	1
610383	Retainer – Filter	10	3	1
610834	Collar – Air Vane	16	4	1
611071	Filter – Fuel	16	15	1
611393	Screw – Hex. Hd.	12	13	2
611393	Screw – Hex. Hd.	14	13	2
611396	Seal – Oil	12	11	2
611396	Seal – Oil	14	11	2
612383	Washer	16	20	1
612543	Blade – 21	7	16	1
612782	Line – Gas	7	22	1
612824	Clip – Rope Insert	8	21	1
612825	Handle – Starter	8	14	1
612872	Screw	12	18	2
612872	Screw	14	18	2
613208	Screw – Hex. Washer Hd.	11	6	2
613208	Screw – Hex. Washer Hd.	13	6	2
613227	Screw – Set	7	15	1
613269	Screw	16	8	2
613765	Nut – Cage	1	11	1
613765	Nut – Cage	2	11	1
614009	Plug – Spark	11	4	1
614009	Plug – Spark	13	4	1
614243	Knob	8	3	2
614426	Washer – Stepped	6	19	2
614447	Spacer – Axle Shaft	6	9	2
614596	Gear 34 Tooth	5	18	1
614636	Screw – Torx. Washer Hd.	12	14	4
614636	Screw – Torx. Washer Hd.	14	14	4
614637	Bracket – Wheel Height Adj.	1	17	4
614637	Bracket – Wheel Height Adj.	2	17	2
614640	Hub – Starter	9	3	1
614650	Bolt – Shoulder	1	1	2
614654	Plate – Muffler	11	18	1
614654	Plate – Muffler	13	18	1
614668	Cover – Gear Case	5	2	1
614669	Pulley – Half	5	12	2
614671	Cover – Drive	4	9	1
614672	Bolt – Shoulder	1	21	4
614672	Bolt – Shoulder Height Adj.	2	21	2
614673	Handle Section – Lower	8	19	1
614674	Cover – Muffler	11	22	1
614674	Cover – Muffler	13	22	1
614677	Screw – Sem Thr'd Form	2	9	2
614677	Screw – Sems Thr'd Form	1	9	2
614681	Baffle	11	20	1
614682	Knob – Cover Plate	1	7	1
614682	Knob – Cover Plate	2	7	1
614687	Spring Arm Ass'y – Front	1	22	2
614687	Spring Arm Ass'y – Front	2	22	2
614696	Shaft – Intermediate	5	4	1
614697	Screw – Handle	8	2	2
614699	Screw	9	1	3
614702	Screw	9	7	4
614702	Screw	11	10	1
614702	Screw	13	10	1
677525	Plate & Collar Assembly	7	1	1
677982	Liner – Split (Set of 2)	12	8	1
677982	Liner – Split (Set of 2)	14	8	1
678113	Float & Arm Assembly	16	16	1
681678	Cover & Terminal	11	*	1
681678	Cover & Terminal	13	*	1
681737	Set – Ring	12	1	1
681737	Set – Ring	14	1	1
681830	Bearing – Upper Main	12	10	1
681830	Bearing – Upper Main	14	10	1
681831	Bearing – Needle	12	19	1
681831	Bearing – Needle	14	19	1
683911	Bearing – Needle	12	12	1
683911	Bearing – Needle	14	12	1
684049	CD Ignition	11	5	1
684049	CD Ignition	13	5	1
684725	Cylinder & Crankcase Ass'y	12	*	1
684743	Flywheel	9	4	1
684776	Wheel & Tire Ass'y 6	2	19	2
684776	Wheel – Tire Assembly 6	1	19	2
684777	Wheel & Tire Ass'y 8	1	2	2
12–5450	Screw – Thread Forming	11	16	1
12–5450	Screw – Thread Forming	13	16	1
14–6009	Mounting Plate	11	17	1
14–6009	Mounting Plate	13	17	1
16–4359	Housing Assembly	1	5	1
16–4369	Housing Assembly	4	17	1
36–4780	Washer – Thrust	5	17	2
36–4791	Washer	5	5	2
38–7820	Bearing – Ball	5	15	1
39–5770	Decal – Danger	3	15	1
39–5770	Decal – Danger	4	15	1
40–1940	Washer	1	18	4
40–1940	Washer	2	18	2
44–2750	Body – Primer	7	20	1
44–3174	Hose – Primer	10	7	1
44–3174	Hose – Primer	7	21	1
49–2040	Screw – Hex Hd.	4	7	2
53–4690	Stop – Ground Strap	11	15	1
53–4690	Stop – Ground Strap	13	15	1
55–3760	Pinion – 15 Tooth	5	3	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
60–8750	Bushing	5	6	2
60–8850	Bushing – Output	5	9	2
60–8890	Gear – Bevel Pinion	5	16	1
60–9010	Strap – Ground	11	13	1
60–9010	Strap – Ground	13	13	1
62–6660	Spacer	5	11	1
65–2720	Ring – Retaining	6	3	4
65–4710	Ring – Friction	6	7	2
65–4720	Spring – Compression	6	17	2
65–4730	Washer – Thrust	6	14	2
65–4740	Washer – Thrust Keyed	6	4	4
65–4750	Gear – Pinion	6	16	2
65–4760	Washer	6	15	2
66–5370	Spring –Compression	11	7	1
66–5380	Brake Plate Assembly	11	8	1
66–6040	Key – Rocking R.H.	6	*	1
66–6050	Key – Rocking L.H.	6	5	1
66–7460	Bulb – Primer	7	19	1
92–1001	Bail – SP Control	8	9	1
92–1004	Spring Arm Ass'y	6	12	2
92–1005	Spring Arm Assembly	1	3	2
92–1008	Knob – Height Adjust	2	23	4
92–1008	Knob – Height Adjust.	1	23	4
92–1042	Wheel & Tire Ass'y 8	6	2	2
92–1043	V–Belt	6	10	1
92–1057	Bolt – Shoulder	6	1	2
92–1097	Decal – Discharge	3	16	1
92–1097	Decal – Discharge	4	16	1
92–1099	Bolt – Shoulder	1	20	2
92–1099	Bolt – Shoulder	2	20	2
92–1152	CD Ignition	11	3	1
92–1152	CD Ignition	13	3	1
92–1156	Wire – Brake Switch Lead	11	14	1
92–1156	Wire – Brake Switch Lead	13	14	1
92–1624	Screw – Engine	7	3	3
92–1630	Fan – Mulching	7	17	1
92–1701	Rope – Stop	7	9	1
92–2914	Decal – H.O.C.	3	2	2
92–2914	Decal – H.O.C.	4	2	2
92–2915	Decal – H.O.C.	3	1	2
92–2915	Decal – H.O.C.	4	1	2
92–2925	Strap – Insulation	11	12	1
92–2925	Strap – Insulation	13	12	1
92–4881	Plate – Height Adjust	1	14	2
92–4881	Plate – Height Adjust	2	14	2
92–4890	Washer	1	15	4
92–4890	Washer	2	15	2
92–4921	Connecting Rod Assembly	12	6	1
92–4921	Connecting Rod Assembly	14	6	1
92–4923	Piston & Ring Set	12	3	1
92–4923	Piston & Ring Set	14	3	1
92–4925	Piston & Connecting Rod	12	*	1
92–4925	Piston & Connecting Rod	14	*	1
92–4927	Bearing	12	7	1
92–4927	Bearing	14	7	1
92–4928	Rope –Starter	15	2	1
92–4929	Pulley Assembly	15	3	1
92–4930	Spring – Dog	15	4	2
92–4931	Dog	15	5	2
92–4933	Screw	15	7	1
92–4934	Spring	15	8	1
92–4935	Spring Keeper Assembly	15	9	1
92–4944	Spring – Governor	16	5	1
92–4948	Gasket – Carburetor	10	9	2
92–4949	Bracket – Throttle Control	16	7	1
92–5412	Stop – Pivot	8	8	1
92–5412	Stop – Pivot	8	8	2
92–6370	Main Jet	16	21	1
92–6371	Nozzle	16	14	1
92–6373	Disc – Throttle	16	6	1
92–6375	Crankshaft	12	9	1
92–6376	Air Vane & Shaft	16	1	1
92–6380	Tank & Shroud Assembly	7	5	1
92–6385	Jet – High Altitude	16	*	1
92–6389	Pin	16	17	1
92–6542	Pulley – Engine	7	2	1
92–7723	Bracket – Handle R.H.	4	12	1
92–7724	Bracket – Handle L.H.	4	3	1
92–7726	Cable – Traction	8	7	1
92–7727	Gearcase	5	10	1
92–7728	Guide – Transmission	4	6	1
92–7729	Anchor – Cable Upper	8	6	1
92–7731	Plate – Baffle	1	16	2
92–7731	Plate – Baffle	2	16	2
92–7734	Cable – Throttle 2 Cycle	8	17	1
92–7735	Gear Case Assembly	4	4	1
92–7738	Cable – Flywheel Brake	8	18	1
92–7742	Bracket – Handle R.H.	1	6	1
92–7743	Bracket – Handle L.H.	1	4	1
92–7746	Height Adj. Arm – Rear	6	8	2
92–8615	Applique – Shroud	7	12	1
92–8630	Plate – Mulch 21	1	8	1
92–8630	Plate – Mulch 21	2	8	1
92–8632	Washer	8	30	1
92–8647	Shield – Trailing	3	20	1
92–8647	Shield – Trailing	4	20	1
92–9662	Screw – Phillips Hd.	4	8	1
92–9691	Float Chamber	16	18	1
92–9692	Retainer	15	6	1
92–9697	Kit – Float Valve, Body	16	10	1
92–9698	Screw – Shoulder	11	9	1
92–9698	Screw – Shoulder	13	9	1
93–0239	Shaft – Output	5	7	1
93–0294	Decal – Recoil	7	*	1
93–0295	Decal – Recoil	7	10	1
93–1216	Base – Shroud	9	5	1
93–1221	Shield – Carburetor	10	10	1
93–1225	Lever – Speed Adjust	16	3	1
93–1231	Cover – Air Cleaner	10	4	1
93–1233	Gasket – Exhaust	11	2	1
93–1233	Gasket – Exhaust	13	2	1
93–3653	Handle – Guard	8	31	1
93–3653	Handle – Guard	8	31	2
93–3660	Fuel/Oil Cap Assembly	7	7	1
93–4184	Bail – Flywheel Brake	8	12	1
93–4185	Handle – Section Upper	8	13	1
93–4196	Shield – Grass	7	23	1
93–4302	Screw – Sems	7	8	3
93–4304	Housing Assembly	15	1	1
93–4304	Shroud Assembly	9	8	1
93–4306	Spring – Compression	7	13	1
93–4306	Spring –Compression	13	7	1
93–4312	Brake Plate Assembly	13	8	1
93–4320	Shield – Fuel	10	6	1
93–4324	Carburetor Body	16	9	1
93–4331	Carburetor Assembly	16	*	1
93–4331	Carburetor Assembly	10	8	1
93–4343	Baffle	13	20	1

*Not Illustrated

LAWN—BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
93—7250	Decal — Warning	3	10	1
93—7250	Decal — Warning	4	10	1
93—7380	Anchor — Cable SP Lower	8	20	1
93—7383	Guide — Rope	8	16	1
94—1609	Cover — Wheel	6	18	2
94—1610	Grommet — Plastic	1	10	2
94—1610	Grommet — Plastic	2	10	2
94—5713	Crankshaft	14	9	1
94—5737	Short Block	11	1	1
94—5737	Short Block	13	1	1
252—76	Bearing — Thrust	14	2	1
252—80	Washer — Thrust	14	22	1
321—5	Screw — Hex Hd. Cap	8	15	1
321—48	Screw — Hex Hd. Cap	8	5	1
321—49	Screw — Hex Hd. Cap	8	5	1
322—3	Screw — Hex Hd. Cap	3	21	4
322—3	Screw — Hex Hd. Cap	4	21	6
3256—24	Washer	5	13	1
3285—19	Pin — Groove	5	8	2
3290—459	Rivet — Plastic	11	11	2
3290—459	Rivet — Plastic	13	11	2
3296—5	Nut	5	14	1
3296—29	Nut — Lock	3	19	4
3296—29	Nut — Lock	4	19	6
3296—39	Nut — Lock	1	24	2
3296—73	Nut — Lock	8	4	2
32144—4	Screw — Taptite	5	1	4
32144—85	Screw — Hex Hd.	6	11	2

*Not Illustrated

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								