FORM NO. 3318–498 REV. A

LAWN-BOY®

21” SILVER SERIES WALK–BEHIND MOWER

MODEL NO. 10314–6900001–7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN−BOY owners as quickly as possible, minor changes are incorporated into LAWN−BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN−BOY Distributor or his Authorized LAWN−BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page	Description	Page
Mulch Plate & Wheel Assembly	1	Engine Assembly	7−10
Cover Assembly	2	Recoil Starter Assembly	11
Rear Axle Assembly	3	Carburetor Assembly	12
Gear Case Assembly	4	Handle Assembly	13
Engine Assembly	5	Rear Catcher Assembly	14
Blade Assembly	6	Numeric Parts Index	15−16

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag Kit w/Chute	Model No. 89811
Leaf Bag	Model No. 89804	Mower & Feed Fertilizer Spreader	Model No. 52070
Leaf Shredder Kit	Model No. 89860		

Copyright 1995 The Lawn−Boy Inc. REV. 1996
All Rights Reserved

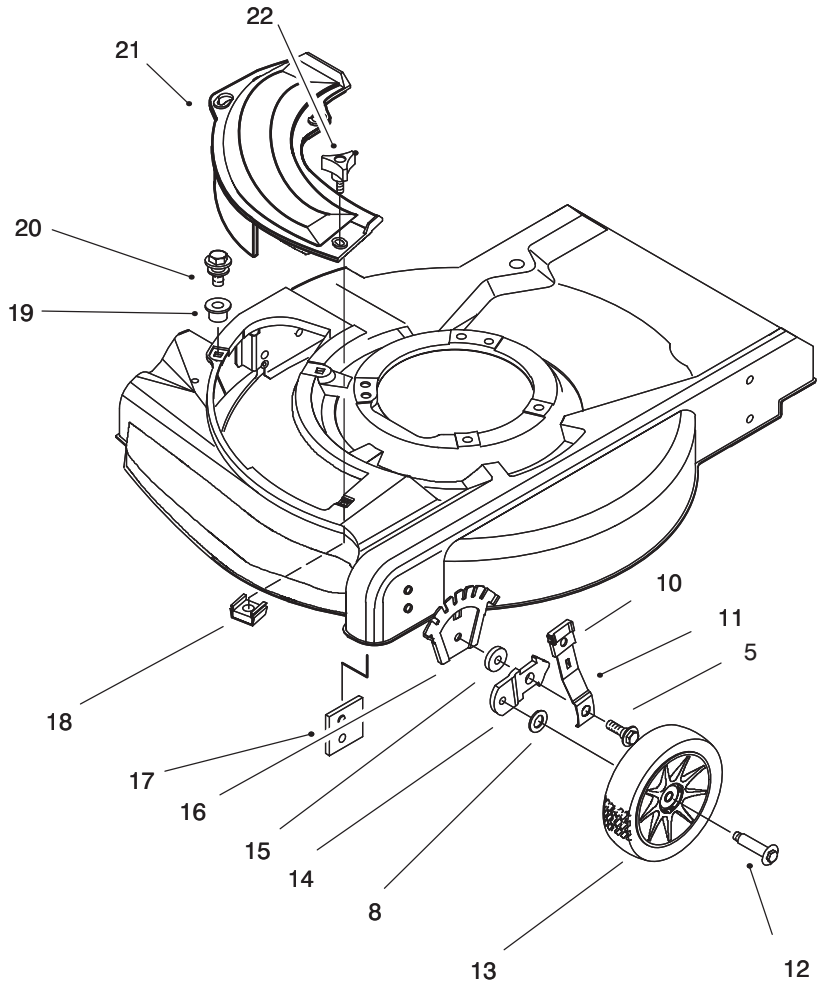


C–2501

MULCH PLATE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
5	614672	Bolt – Shoulder Height Adj.	2
8	40–1940	Washer	2
10	92–1008	Knob – Height Adjust	4
11	614687	Arm – Spring	2
12	92–1099	Bolt – Shoulder	2
13	684776	Wheel & Tire Ass'y 6"	2
14	614637	Bracket – Wheel Height Adj.	2
15	92–4890	Washer	2

Ref. No.	Part No.	Description	No. Used
16	92–4881	Plate – Height Adj.	2
17	92–7731	Plate – Baffle	2
18	613765	Nut – Cage	1
19	94–1610	Grommet – Plastic	2
20	614677	Screw – Sems Thr'd Form.	2
21	92–8630	Plate – Mulch	1
22	614682	Knob – Cover Plate	1

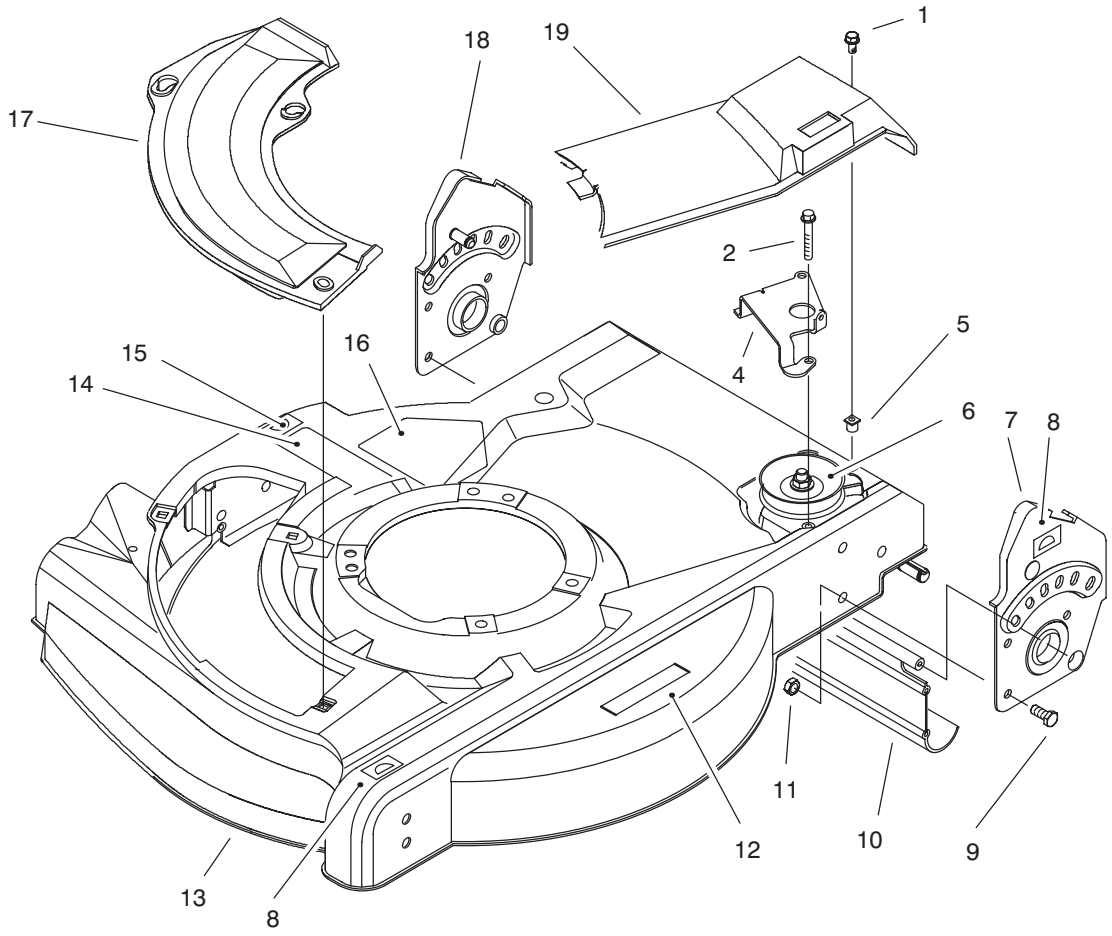


C–2146A

COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–9665	Screw – Phillips Hd.	1
2	49–2040	Screw – Hex Hd.	2
4	92–7728	Guide – Transmission	1
5	605120	Grommet	1
6	92–7735	Gear Case Assembly	1
7	92–7724	Bracket – Handle L.H.	1
8	92–2915	Decal – H.O.C.	2
9	322–3	Screw – Hex Hd. Cap	6
10	92–8647	Shield – Trailing	1

Ref. No.	Part No.	Description	No. Used
11	3296–29	Nut – Lock	6
12	93–7250	Decal – Warning	1
13	16–4369	Housing	1
14	92–1097	Decal – Discharge	1
15	92–2914	Decal – H.O.C.	2
16	39–5770	Decal – Danger	1
17	607560	Plate – Cover	1
18	92–7723	Bracket – Handle R.H.	1
19	614671	Cover – Drive	1

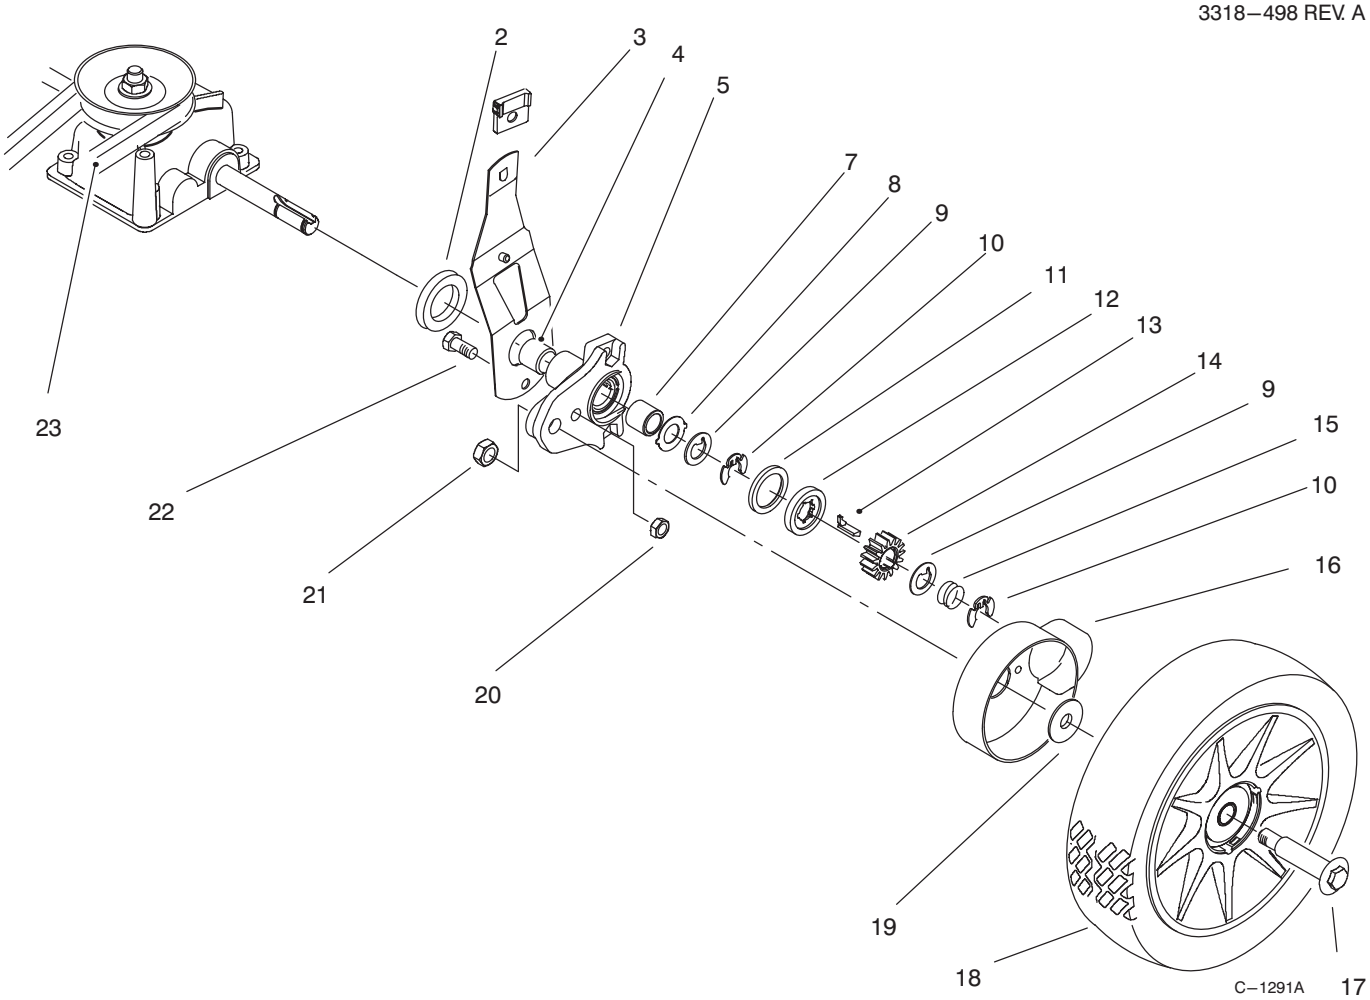


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	614447	Spacer – Axle Shaft	2
3	92–1004	Spring Arm Ass'y	2
4	70–9760	Bushing	2
5	92–7746	Pivot Arm Ass'y – Rear (Incl. Ref.#4, & 7)	2
7	47–2900	Bushing	2
8	65–4730	Washer – Thrust Pivot Arm	2
9	65–4740	Washer – Thrust, Keyed	4
10	65–2720	Ring – Klip. Special	4
11	65–4710	Ring – Friction	2
12	65–4760	Washer – Clutch, Plastic	2

Ref. No.	Part No.	Description	No. Used
13	66–6050	Key – Rocking, LH	1
*	66–6040	Key – Rocking, RH	1
14	65–4750	Gear – Pinion	2
15	65–4720	Spring – Compression	2
16	94–1609	Cover Wheel	2
17	92–1057	Bolt – Wheel	2
18	92–1042	Wheel Ass'y – 8"	2
19	614426	Washer – Stepped	2
21	610358	Nut	2
22	32144–85	Screw	2
23	93–7381	V–Belt	1

*Not Illustrated

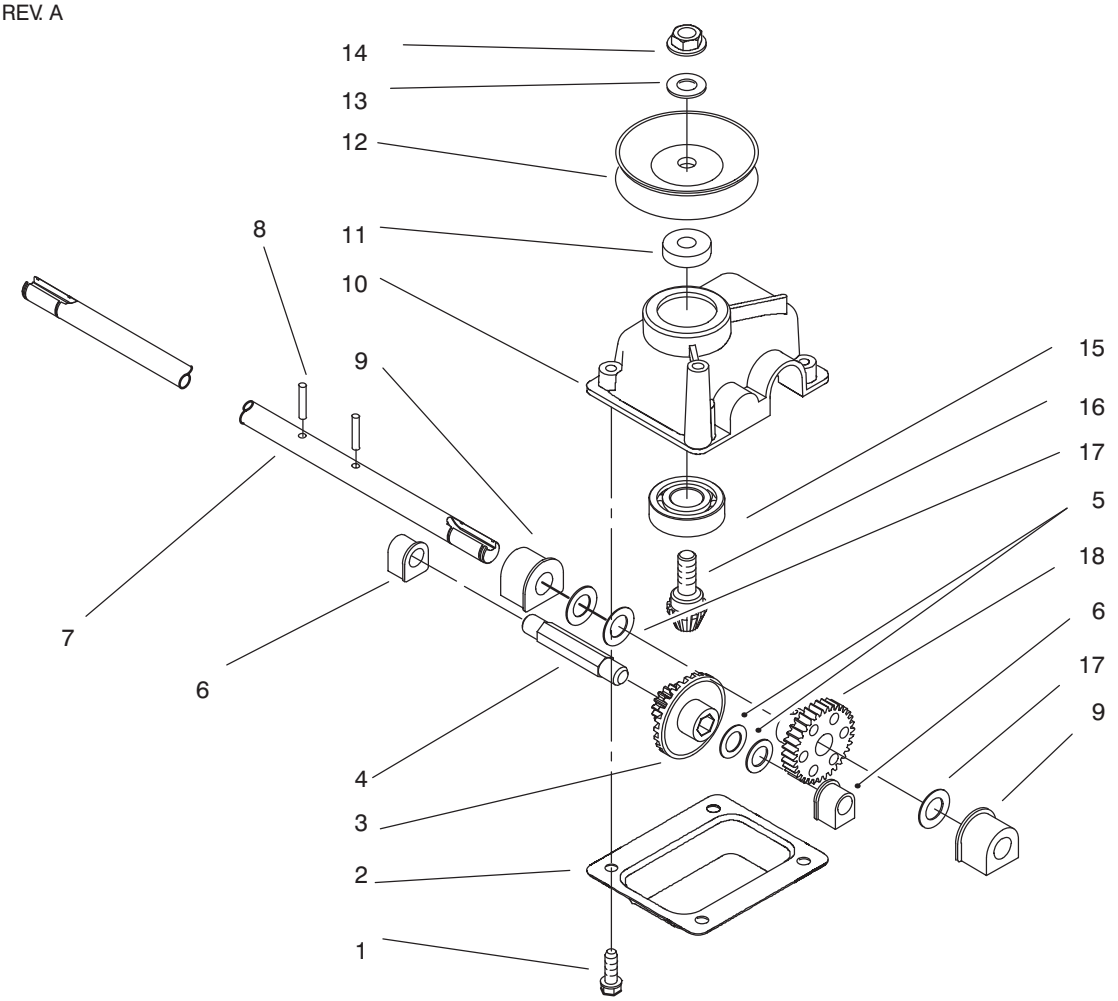


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–4	Screw – Taptite	4
2	614668	Cover – Gear Case	1
3	55–3760	Pinion – 15 Tooth	1
4	614696	Shaft – Intermediate	1
5	36–4791	Washer	2
6	60–8750	Bushing	2
7	93–0239	Shaft – Output	1
8	3285–19	Pin – Groove	2
9	60–8850	Bushing – Output	2
10	92–7727	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62–6660	Spacer	1
12	614669	Pulley – Half	2
13	3256–24	Washer	1
14	3296–5	Nut	1
15	38–7820	Bearing – Ball	1
16	60–8890	Gear – Bevel Pinion	1
17	36–4780	Washer – Thrust	2
18	614596	Gear 34 Tooth	1
*	92–7735	Gear Case Complete	1


*Not Illustrated

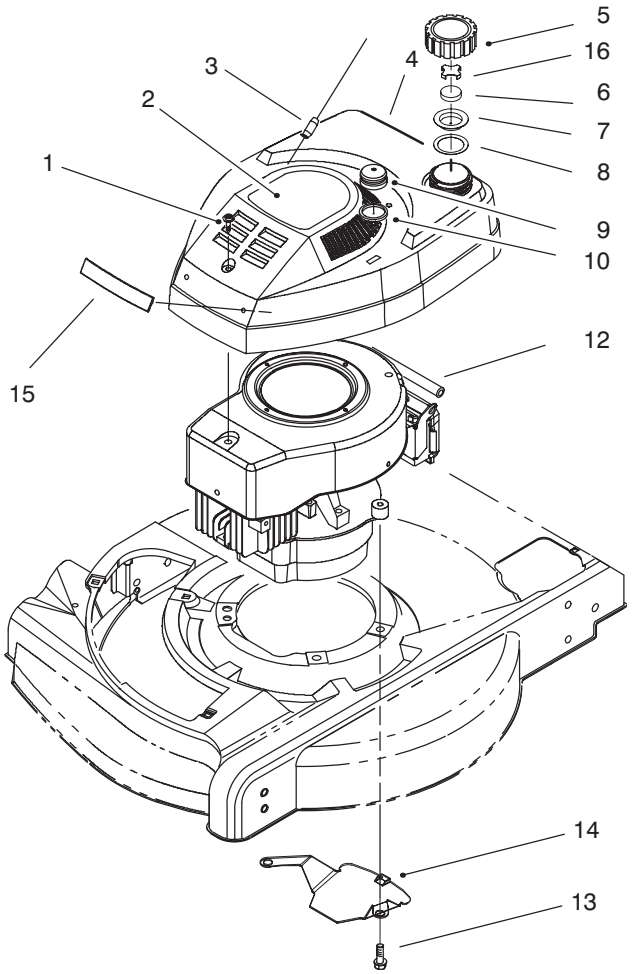

C−2502A

ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	93−4302	Screw − Sems	3
2	93−0294	Decal − Recoil	1
3	92−1701	Stop − Rope	1
4	92−6380	Tank & Shroud	1
5	93−3660	Gas Cap Assembly (Incl. Ref. #6−8, & 16)	1
6	609150	Baffle − Foam	1
7	613311	Gasket	1
8	93−1230	Cover	1
9	66−7460	Bulb − Primer	1
10	44−2750	Body − Primer	1
12	612782	Line − Gas	1
13	95−1726	Screw − Engine	3
14	93−4196	Shield − Grass	1
15	92−8615	Applique − Shroud	1
16	93−3175	Baffle − Gas Cap	1

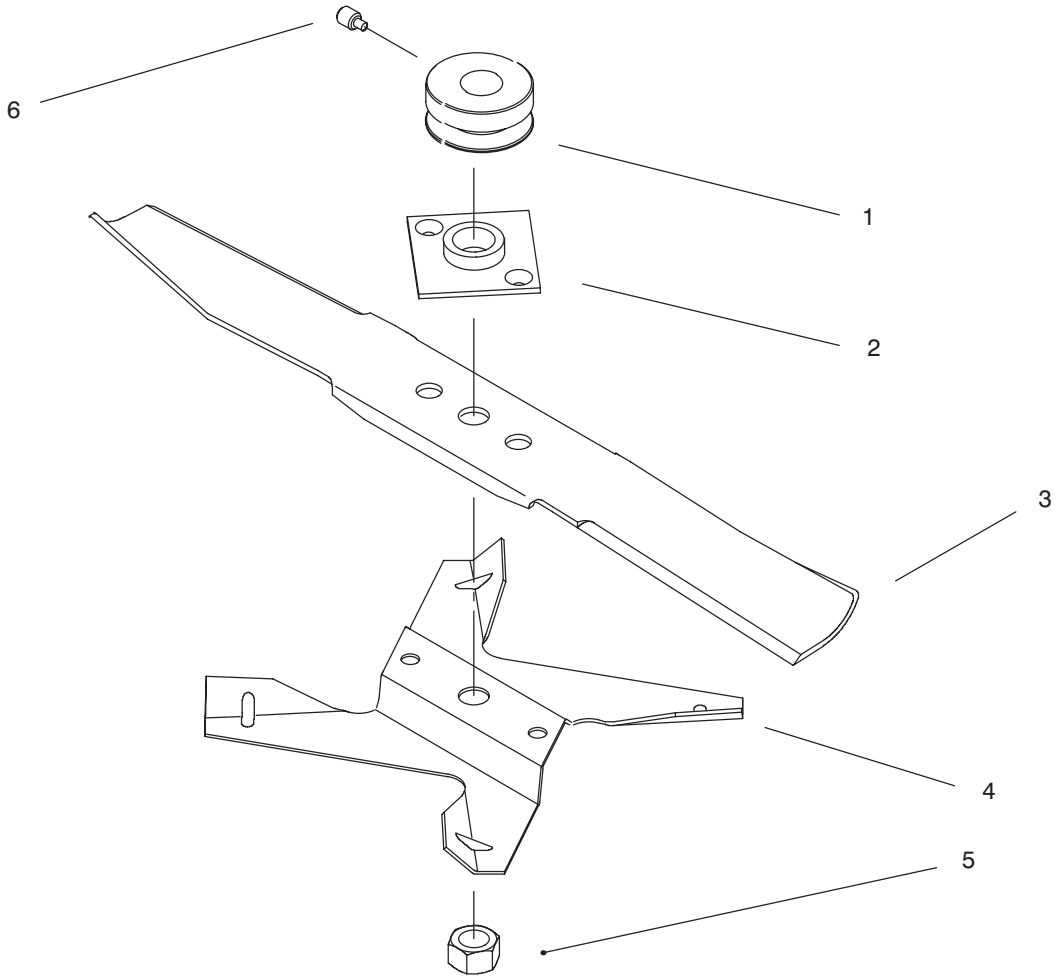

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–6542	Pulley – Engine	1
2	677525	Plate & Collar	1
3	612543	Blade –21”	1

Ref. No.	Part No.	Description	No. Used
4	92–1630	Fan – Mulching	1
5	603164	Nut – Blade	1
6	613227	Screw – Set	1

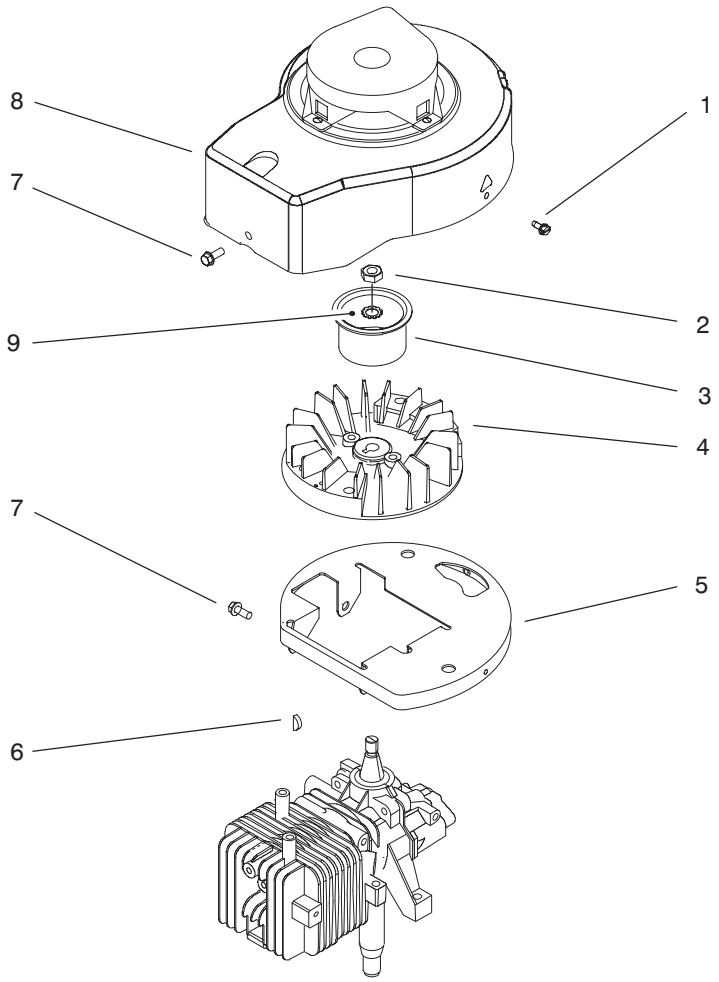


C−2128A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	130743	Nut	1
3	614640	Hub − Starter	1
4	684743	Flywheel	1
5	93−1216	Base − Shroud	1


Ref. No.	Part No.	Description	No. Used
6	607199	Key	1
7	614702	Screw	4
8	93−4304	Shroud Assembly	1
9	316959	Washer − Lock	1

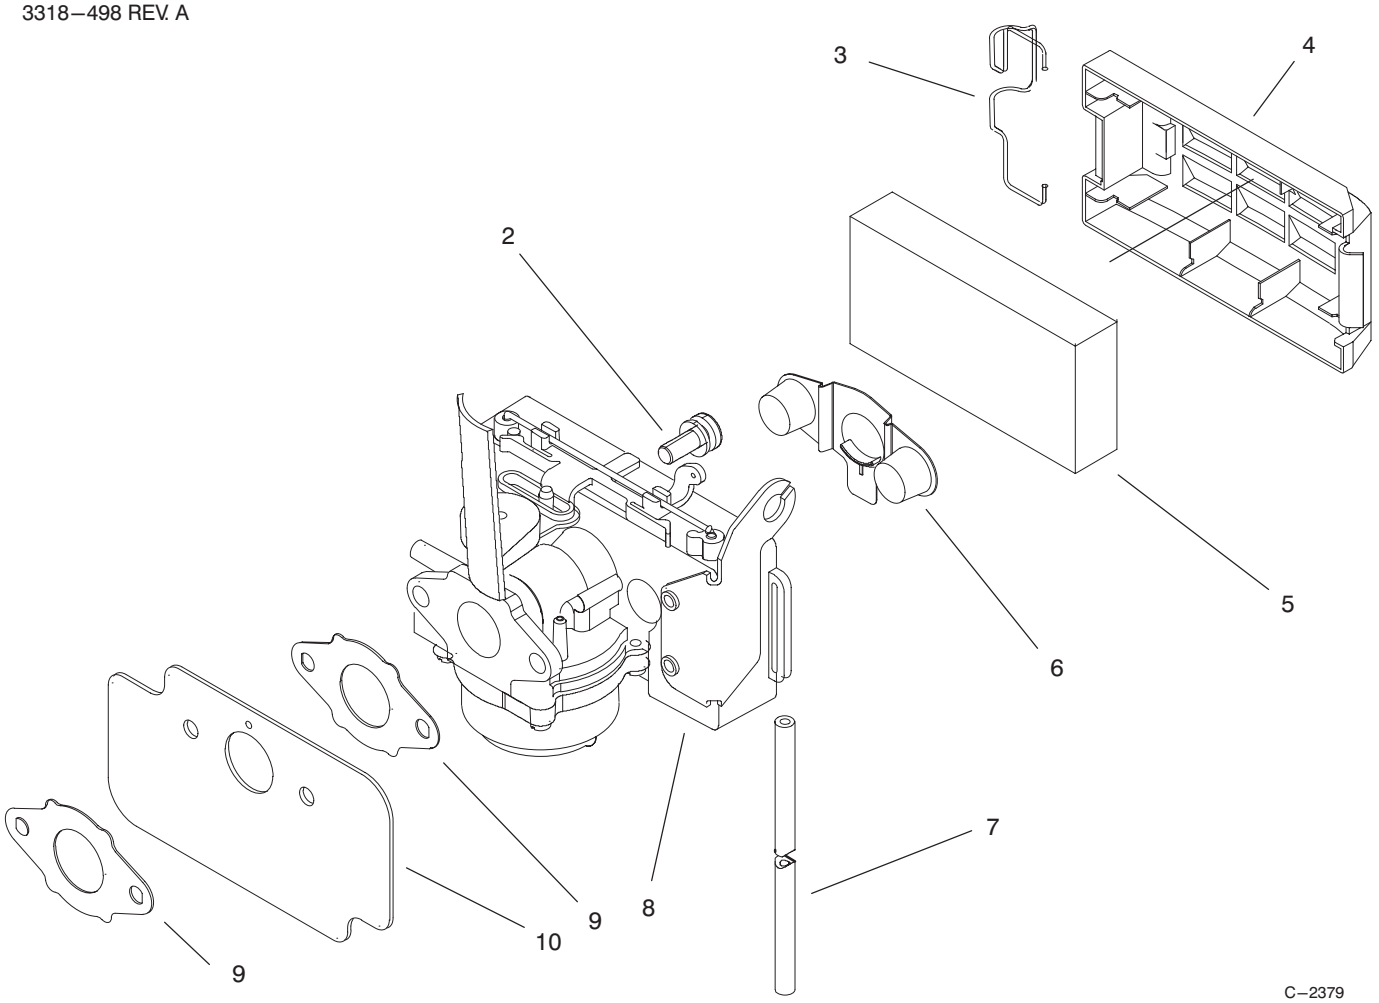

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
2	609482	Screw	2
3	610383	Retainer – Filter	1
4	93–1231	Cover – Air Cleaner	1
5	609493	Element – Filter Air	1
6	93–4320	Shield – Fuel	1

Ref. No.	Part No.	Description	No. Used
7	44–3174	Hose – Primer	1
8	93–4331	Carburetor Assembly (Incl. Ref. #9)	1
9	92–4948	Gasket – Carburetor	2
10	93–1221	Shield – Carburetor	1

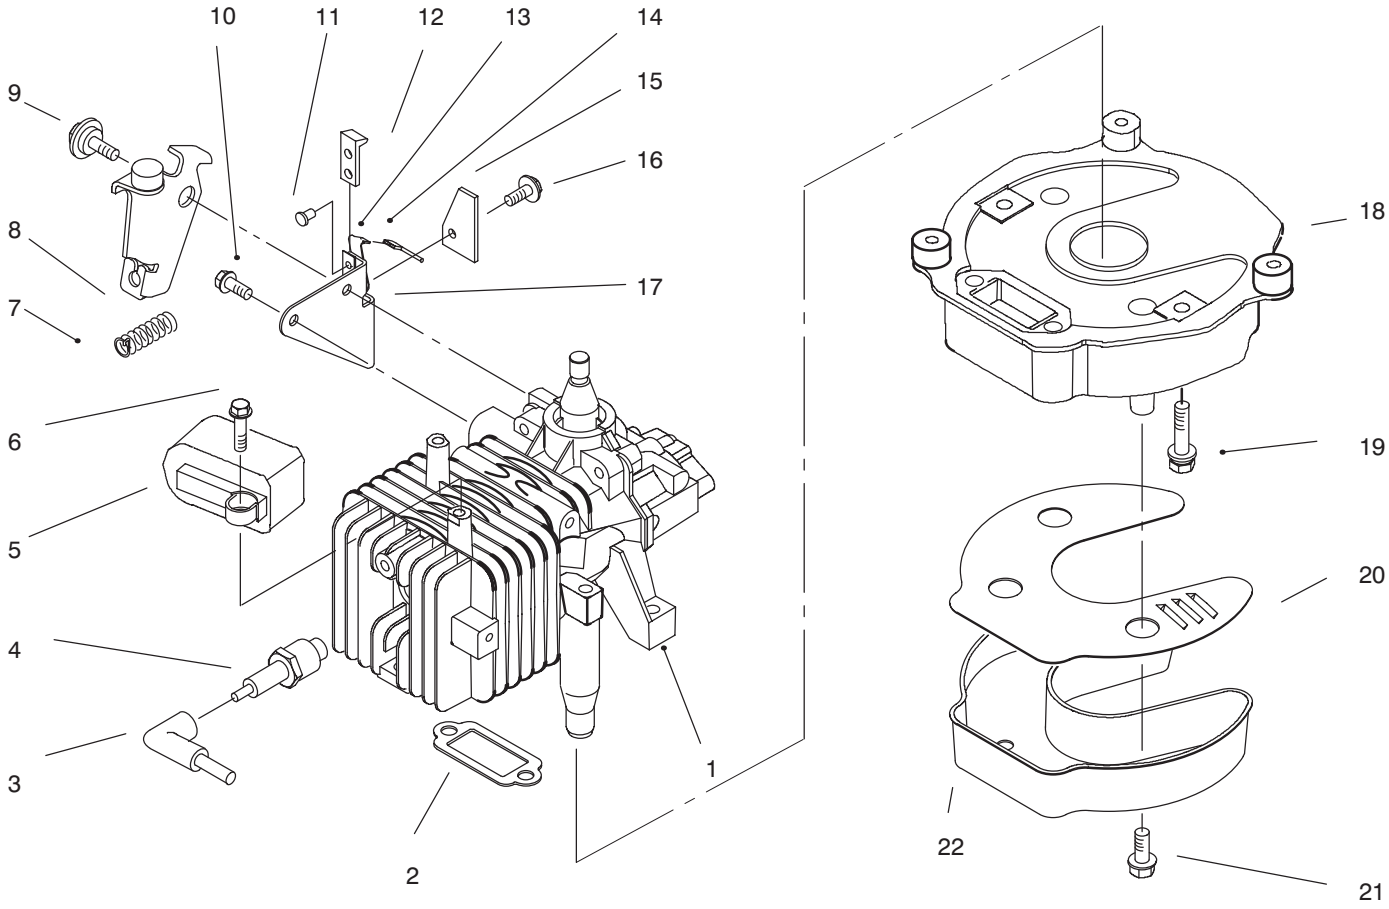


C–1296

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	94–5737	Short Block (Incl. Ref. #2, Ref. #9 pg. 8)	1
2	93–1233	Gasket – Exhaust	1
3		CD Ignition	1
*	681678	Cover & Terminal	1
4	614009	Plug – Spark	1
5	684049	CD Ignition (Incl. Ref. #3)	1
6	613208	Screw – Hex. Washer Hd.	2
7	93–4306	Spring –Compression	1
8	93–4312	Brake Plate Assembly	1
9	92–9698	Screw – Shoulder	1
10	614702	Screw	1

Ref. No.	Part No.	Description	No. Used
11	3290–459	Rivet – Plastic	2
12	92–2925	Strap – Insulation	1
13	60–9010	Strap – Ground	1
14	92–1156	Wire – Brake Switch Lead	1
15	53–4690	Stop – Ground Strap	1
16	12–5450	Screw – Thread Forming	1
17	14–6009	Mounting Plate	1
18	614654	Plate – Muffler	1
19	607601	Screw	4
20	93–4343	Baffle	1
21	609471	Screw	3
22	614674	Cover – Muffler	1

*Not Illustrated

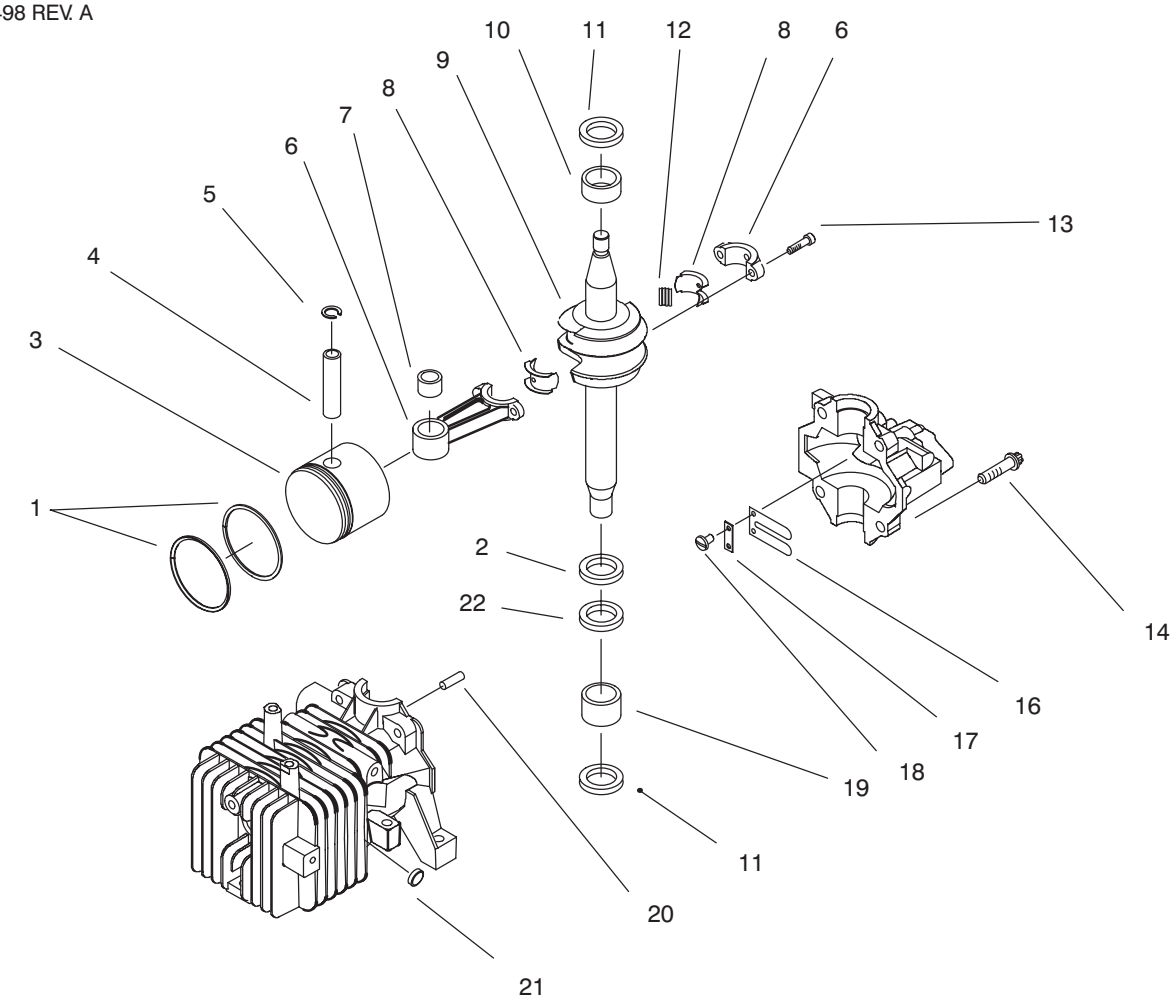


C–2500

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	681737	Set – Ring	1
2	252–76	Bearing – Thrust	1
3	92–4923	Piston & Ring Set	1
*	92–4925	Piston & Connecting Rod (Incl. Ref. #1–8, 12, & 13)	1
4	606608	Pin – Wrist	1
5	303712	Ring – Retaining	2
6	92–4921	Connecting Rod Assembly (Incl. Ref. #6–8, 12, & 13)	1
7	92–4927	Bearing	1
8	677982	Liner – Split (Set of 2)	1
9	94–5713	Crankshaft	1
10	681830	Bearing – Upper Main	1

Ref. No.	Part No.	Description	No. Used
11	611396	Seal – Oil	2
12	683911	Bearing – Needle	1
13	611393	Screw – Hex. Hd.	2
14	614636	Screw – Torx. Washer Hd.	4
16	602588	Reed – Carburetor	1
17	602587	Reed – Backup Plate	1
18	612872	Screw	2
19	681831	Bearing – Needle	1
20	609629	Dowel	1
21	609123	Plug – Core	4
22	252–80	Washer – Thrust	1
*	610372	Sealer	1


*Not Illustrated

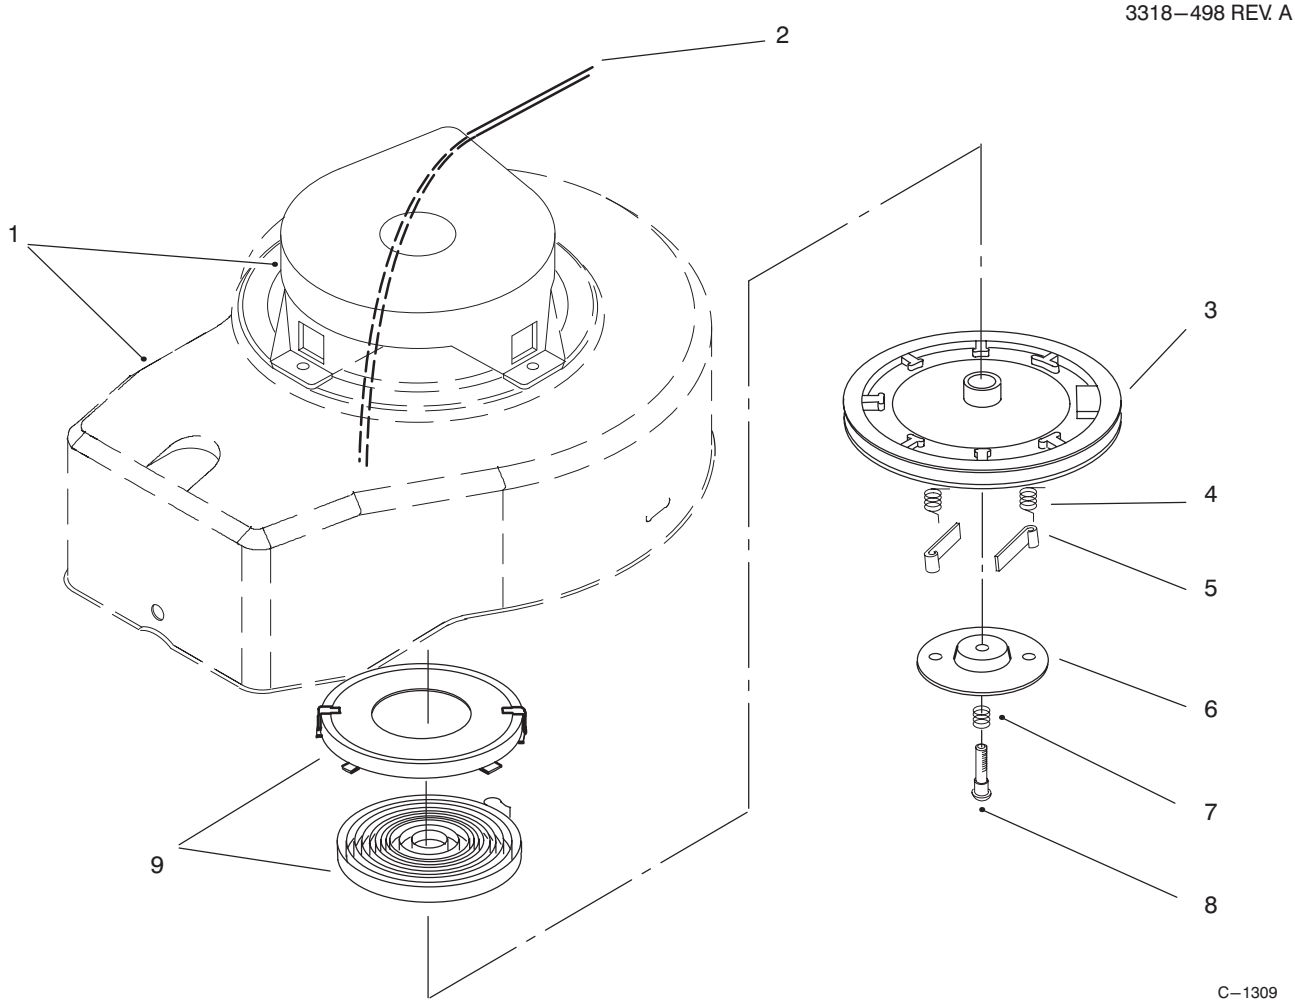

RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93−4304	Housing Assembly	1
2	92−4928	Rope −Starter	1
3	92−4929	Pulley Assembly	1
4	92−4930	Spring − Dog	2
5	92−4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92−9692	Retainer	1
7	92−4933	Screw	1
8	92−4934	Spring	1
9	92−4935	Spring Keeper Assembly	1

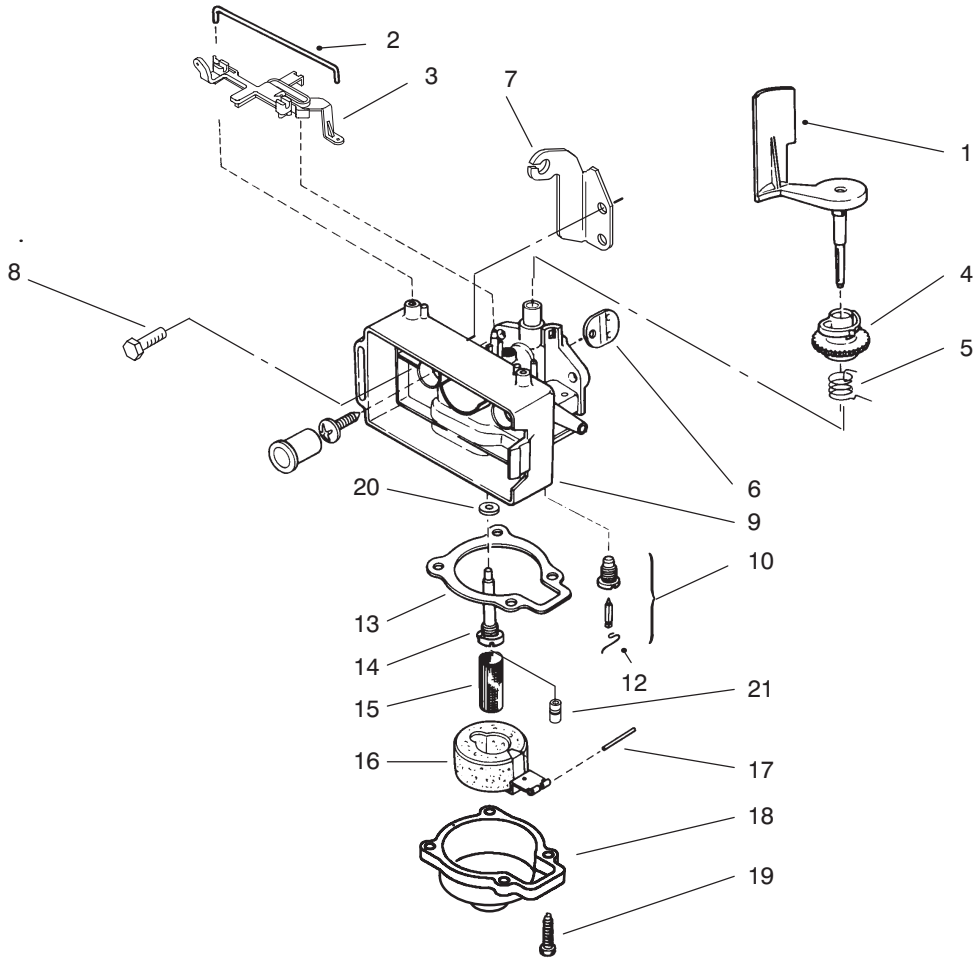


C–2130A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–6376	Air Vane & Shaft	1
2	610165	Retainer – Speed Control	1
3	93–1225	Lever – Speed Adjust	1
4	610834	Collar – Air Vane	1
5	92–4944	Spring – Governor	1
6	92–6373	Disc – Throttle	1
7	92–4949	Bracket – Throttle Control	1
8	613269	Screw	2
9	93–4324	Carburetor Body	1
10	92–9697	Kit – Float Valve, Body & Seat (Incl. Ref. #12)	1

Ref. No.	Part No.	Description	No. Used
12	603145	Spring	1
13	602850	Gasket	1
14	92–6371	Nozzle	1
15	611071	Filter – Fuel	1
16	678113	Float & Arm Assembly	1
17	92–6389	Pin	1
18	92–9691	Float Chamber	1
19	608850	Screw	4
20	612383	Washer	1
21	92–6370	Main Jet	1
*	92–6385	Jet – High Altitude	1
*	93–4331	Carburetor Assembly	1

*Not Illustrated

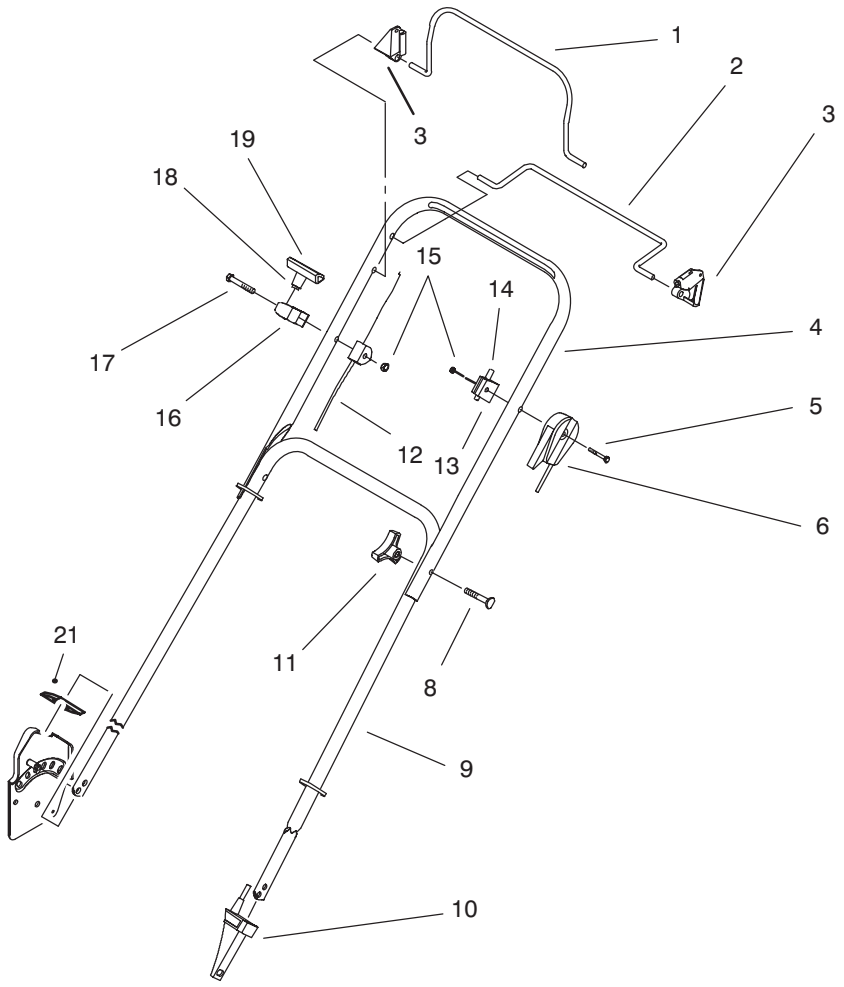


C−2148B

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93−4184	Bail − Flywheel Brake	1
2	92−1001	Bail − SP Control	1
3	92−5412	Stop − Pivot	2
4	95−1713	Handle − Upper	1
5	321−49	Screw − Hex Hd. Cap	1
6	92−7734	Cable − Throttle	1
8	614697	Screw − Handle	2
9	614643	Handle − Lower	1
10	93−7380	Anchor − Cable SP Lower)	1
11	614243	Knob	2

Ref. No.	Part No.	Description	No. Used
12	92−7738	Cable − Flywheel Brake	1
13	92−7729	Anchor − Cable SP Upper	1
14	92−7726	Cable − Traction	1
15	3296−73	Nut − Lock	2
16	93−7383	Guide − Rope	1
17	321−50	Screw − Hex Hd. Cap	1
18	612825	Handle − Starter	1
19	612824	Clip − Rope Insert	1
21	93−3653	Guard − Handle	1

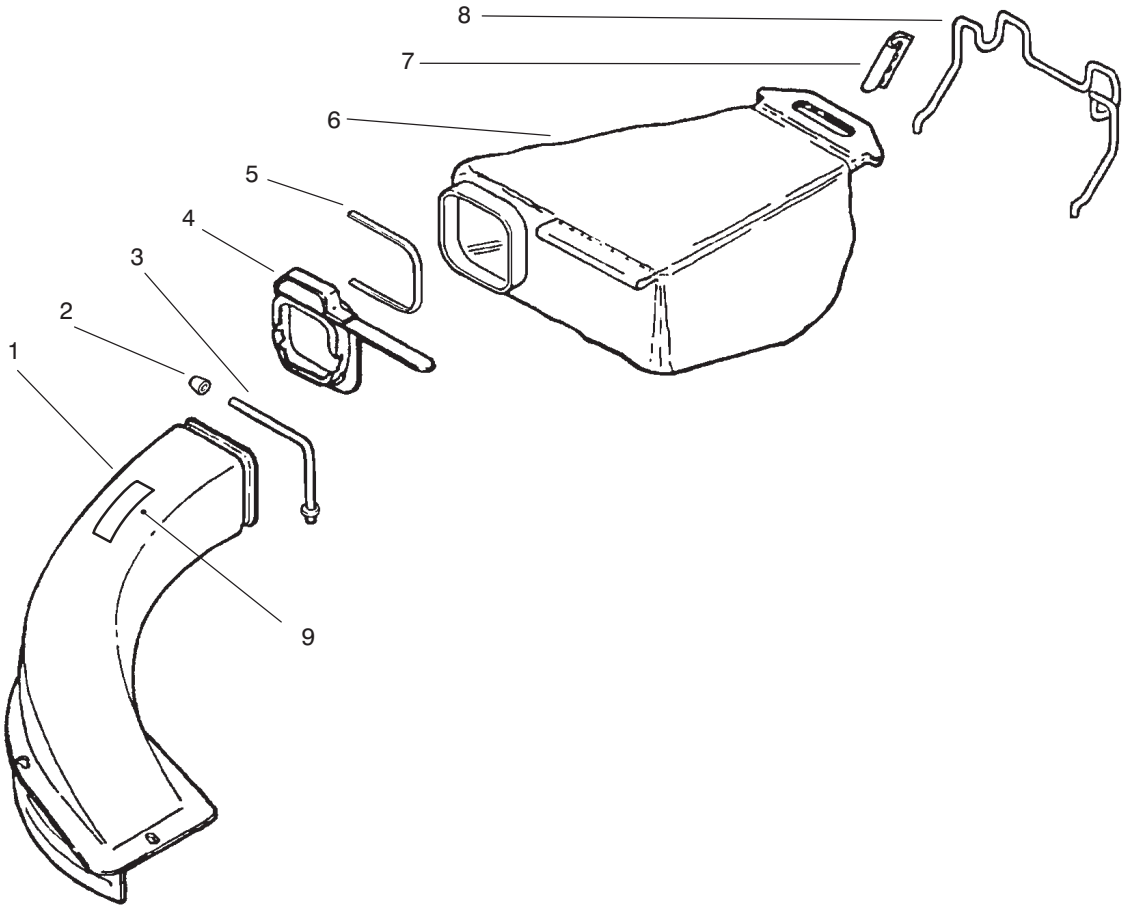

REAR CATCHER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assembly (Incl. Ref.# 2,3 & 9)	1
2	614589	Nut – Cap	1
3	614591	Chute Support	1
4	684727	Adaptor Assembly	1
5	614700	Tie Strap	1
*6	89801	Bag Assembly	1
7	613462	Hanger Clamp	2
8	613455	Wide Hanger	1
9	92–2919	Decal – Danger	1

*Includes Ref.#5 and instruction sheet for installing bag to adapter assembly. Order via model #89801.

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
89801	Bag Assembly	14	*6	1
130743	Nut	7	2	1
303712	Ring – Retaining	10	5	2
316959	Washer – Lock	7	9	1
602587	Reed – Backup Plate	10	17	1
602588	Reed – Carburetor	10	16	1
602850	Gasket	12	13	1
603145	Spring	12	12	1
603164	Nut – Blade	6	5	1
605120	Grommet	2	5	1
606608	Pin – Wrist	10	4	1
607199	Key	7	6	1
607560	Plate – Cover	2	17	1
607601	Screw	9	19	4
608850	Screw	12	19	4
609123	Plug – Core	10	21	4
609150	Baffle – Foam	5	6	1
609471	Screw	9	21	3
609482	Screw	8	2	2
609493	Element – Filter Air	8	5	1
609629	Dowel	10	20	1
610165	Retainer – Speed Control	12	2	1
610358	Nut	3	21	2
610372	Sealer	10	*	1
610383	Retainer – Filter	8	3	1
610834	Collar – Air Vane	12	4	1
611071	Filter – Fuel	12	15	1
611393	Screw – Hex. Hd.	10	13	2
611396	Seal – Oil	10	11	2
612383	Washer	12	20	1
612543	Blade –21	6	3	1
612782	Line – Gas	5	12	1
612824	Clip – Rope Insert	13	19	1
612825	Handle – Starter	13	18	1
612872	Screw	10	18	2
613208	Screw – Hex. Washer Hd.	9	6	2
613227	Screw – Set	6	6	1
613269	Screw	12	8	2
613311	Gasket	5	7	1
613455	Wide Hanger	14	8	1
613462	Hanger Clamp	14	7	2
613765	Nut – Cage	1	18	1
614009	Plug – Spark	9	4	1
614243	Knob	13	11	2
614426	Washer – Stepped	3	19	2
614447	Spacer – Axle Shaft	3	2	2
614589	Nut – Cap	14	2	1
614591	Chute Support	14	3	1
614596	Gear 34 Tooth	4	18	1
614636	Screw – Torx. Washer Hd.	10	14	4
614637	Bracket – Wheel Height Adj.	1	14	2
614640	Hub – Starter	7	3	1
614643	Handle – Lower	13	9	1
614654	Plate – Muffler	9	18	1
614668	Cover – Gear Case	4	2	1
614669	Pulley – Half	4	12	2
614671	Cover – Drive	2	19	1
614672	Bolt – Shoulder Height Adj.	1	5	2
614674	Cover – Muffler	9	22	1
614677	Screw – Sems Thr'd Form.	1	20	2
614682	Knob – Cover Plate	1	22	1
614687	Arm – Spring	1	11	2
614696	Shaft – Intermediate	4	4	1
614697	Screw – Handle	13	8	2
614699	Screw	7	1	3
614700	Tie Strap	14	5	1
614702	Screw	7	7	4
614702	Screw	9	10	1
677525	Plate & Collar	6	2	1
677982	Liner – Split (Set of 2)	10	8	1
678113	Float & Arm Assembly	12	16	1
681678	Cover & Terminal	9	*	1
681737	Set – Ring	10	1	1
681830	Bearing – Upper Main	10	10	1
681831	Bearing – Needle	10	19	1
683911	Bearing – Needle	10	12	1
684049	CD Ignition	9	5	1
684727	Adaptor Assembly	14	4	1
684729	Chute & Support Assembly	14	1	1
684743	Flywheel	7	4	1
684776	Wheel & Tire Ass'y 6	1	13	2
12–5450	Screw – Thread Forming	9	16	1
14–6009	Mounting Plate	9	17	1
16–4369	Housing	2	13	1
36–4780	Washer – Thrust	4	17	2
36–4791	Washer	4	5	2
38–7820	Bearing – Ball	4	15	1
39–5770	Decal – Danger	2	16	1
40–1940	Washer	1	8	2
44–2750	Body – Primer	5	10	1
44–3174	Hose – Primer	8	7	1
47–2900	Bushing	3	7	2
49–2040	Screw – Hex Hd.	2	2	2
53–4690	Stop – Ground Strap	9	15	1
55–3760	Pinion – 15 Tooth	4	3	1
60–8750	Bushing	4	6	2
60–8850	Bushing – Output	4	9	2
60–8890	Gear – Bevel Pinion	4	16	1
60–9010	Strap – Ground	9	13	1
62–6660	Spacer	4	11	1
65–2720	Ring – Klip. Special	3	10	4
65–4710	Ring – Friction	3	11	2
65–4720	Spring – Compression	3	15	2
65–4730	Washer – Thrust Pivot Arm	3	8	2
65–4740	Washer – Thrust, Keyed	3	9	4
65–4750	Gear – Pinion	3	14	2
65–4760	Washer – Clutch, Plastic	3	12	2
66–6040	Key – Rocking, RH	3	*	1
66–6050	Key – Rocking, LH	3	13	1
66–7460	Bulb – Primer	5	9	1
70–9760	Bushing	3	4	2
92–1001	Bail – SP Control	13	2	1
92–1004	Spring Arm Ass'y	3	3	2
92–1008	Knob – Height Adjust	1	10	4
92–1042	Wheel Ass'y – 8	3	18	2
92–1057	Bolt – Wheel	3	17	2
92–1097	Decal – Discharge	2	14	1
92–1099	Bolt – Shoulder	1	12	2
92–1156	Wire – Brake Switch Lead	9	14	1
92–1630	Fan – Mulching	6	4	1
92–1701	Stop – Rope	5	3	1
92–2914	Decal – H.O.C.	2	15	2
92–2915	Decal – H.O.C.	2	8	2
92–2919	Decal – Danger	14	9	1
92–2925	Strap – Insulation	9	12	1
92–4881	Plate – Height Adj.	1	16	2
92–4890	Washer	1	15	2
92–4921	Connecting Rod Assembly	10	6	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–4923	Piston & Ring Set	10	3	1
92–4925	Piston & Connecting Rod	10	*	1
92–4927	Bearing	10	7	1
92–4928	Rope –Starter	11	2	1
92–4929	Pulley Assembly	11	3	1
92–4930	Spring – Dog	11	4	2
92–4931	Dog	11	5	2
92–4933	Screw	11	7	1
92–4934	Spring	11	8	1
92–4935	Spring Keeper Assembly	11	9	1
92–4944	Spring – Governor	12	5	1
92–4948	Gasket – Carburetor	8	9	2
92–4949	Bracket – Throttle Control	12	7	1
92–5412	Stop – Pivot	13	3	2
92–6370	Main Jet	12	21	1
92–6371	Nozzle	12	14	1
92–6373	Disc – Throttle	12	6	1
92–6376	Air Vane & Shaft	12	1	1
92–6380	Tank & Shroud	5	4	1
92–6385	Jet – High Altitude	12	*	1
92–6389	Pin	12	17	1
92–6542	Pulley – Engine	6	1	1
92–7723	Bracket – Handle R.H.	2	18	1
92–7724	Bracket – Handle L.H.	2	7	1
92–7726	Cable – Traction	13	14	1
92–7727	Gearcase	4	10	1
92–7728	Guide – Transmission	2	4	1
92–7729	Anchor – Cable SP Upper	13	13	1
92–7731	Plate – Baffle	1	17	2
92–7734	Cable – Throttle	13	6	1
92–7735	Gear Case Assembly	2	6	1
92–7735	Gear Case Complete	4	*	1
92–7738	Cable – Flywheel Brake	13	12	1
92–7746	Pivot Arm Ass'y – Rear	3	5	2
92–8615	Applique – Shroud	5	15	1
92–8630	Plate – Mulch	1	21	1
92–8647	Shield – Trailing	2	10	1
92–9665	Screw – Phillips Hd.	2	1	1
92–9691	Float Chamber	12	18	1
92–9692	Retainer	11	6	1
92–9697	Kit – Float Valve, Body	12	10	1
92–9698	Screw – Shoulder	9	9	1
93–0239	Shaft – Output	4	7	1
93–0294	Decal – Recoil	5	2	1
93–1216	Base – Shroud	7	5	1
93–1221	Shield – Carburetor	8	10	1
93–1225	Lever – Speed Adjust	12	3	1
93–1230	Cover	5	8	1
93–1231	Cover – Air Cleaner	8	4	1
93–1233	Gasket – Exhaust	9	2	1
93–3175	Baffle – Gas Cap	5	16	1
93–3653	Guard – Handle	13	21	1
93–3660	Gas Cap Assembly	5	5	1
93–4184	Bail – Flywheel Brake	13	1	1
93–4196	Shield – Grass	5	14	1
93–4302	Screw – Sems	5	1	3
93–4304	Housing Assembly	11	1	1
93–4304	Shroud Assembly	7	8	1
93–4306	Spring –Compression	9	7	1
93–4312	Brake Plate Assembly	9	8	1
93–4320	Shield – Fuel	8	6	1
93–4324	Carburetor Body	12	9	1
93–4331	Carburetor Assembly	8	8	1
93–4331	Carburetor Assembly	12	*	1
93–4343	Baffle	9	20	1
93–7250	Decal – Warning	2	12	1
93–7380	Anchor – Cable SP Lower)	13	10	1
93–7381	V–Belt	3	23	1
93–7383	Guide – Rope	13	16	1
94–1609	Cover Wheel	3	16	2
94–1610	Grommet – Plastic	1	19	2
94–5713	Crankshaft	10	9	1
94–5737	Short Block	9	1	1
95–1713	Handle – Upper	13	4	1
95–1726	Screw – Engine	5	13	3
252–76	Bearing – Thrust	10	2	1
252–80	Washer – Thrust	10	22	1
321–49	Screw – Hex Hd. Cap	13	5	1
321–50	Screw – Hex Hd. Cap	13	17	1
322–3	Screw – Hex Hd. Cap	2	9	6
3256–24	Washer	4	13	1
3285–19	Pin – Groove	4	8	2
3290–459	Rivet – Plastic	9	11	2
3296–5	Nut	4	14	1
3296–29	Nut – Lock	2	11	6
3296–73	Nut – Lock	13	15	2
32144–4	Screw – Taptite	4	1	4
32144–85	Screw	3	22	2

*Not Illustrated

MAINTENANCE RECORD

Date								

3318–498 REV. A

MAINTENANCE RECORD

Date								