FORM NO. 3318—510

LAWN-BOY®

19” GOLD SERIES WALK—BEHIND MOWER

MODEL NO. 10401—6900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page	Description	Page
Engine, Shroud and Muffler Plate	1	Crankshaft & Cylinder Assembly	8–9
Deck, Muffler Cover, Blade & Wheels	2	Carburetor Assembly	10
Upper Handle Assembly	3	Air Filter Assembly	11
Lower Handle Assembly	4	Starter	12
Engine Assembly	5–6	Numeric Parts Index	13–14
Flywheel & Wire Harness Assembly	7		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Shredder Kit	Part No. 681683
Leaf Bag	Model No. 89804		

Copyright 1996 The Lawn–Boy Inc.
All Rights Reserved

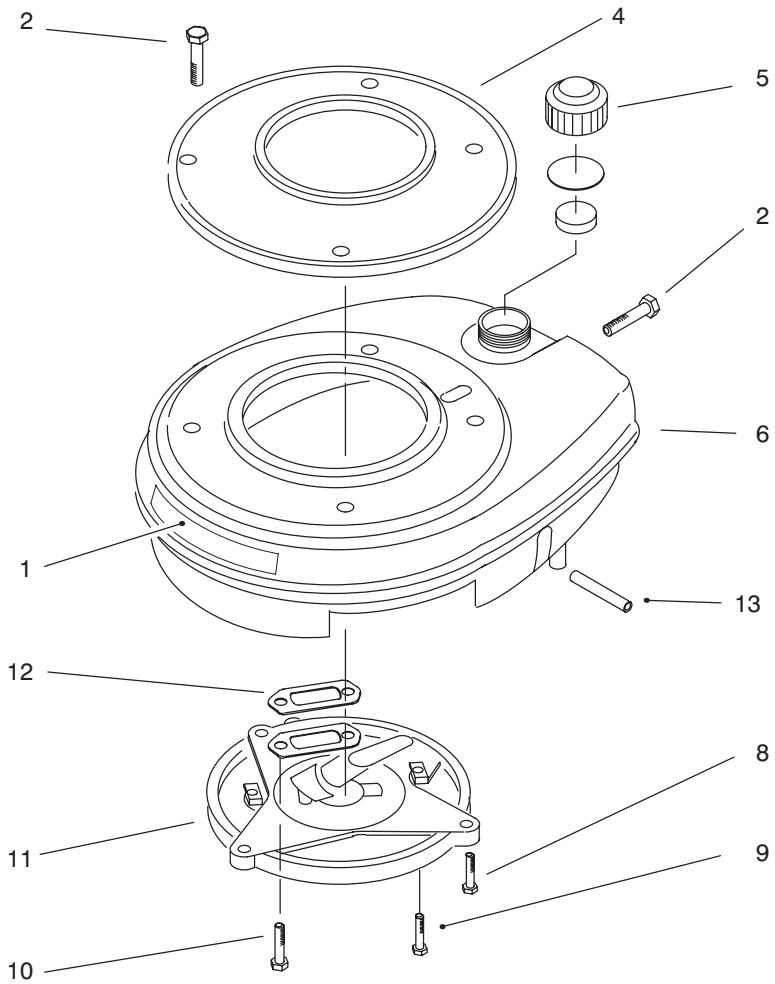


C–2196A

ENGINE SHROUD AND MUFFLER PLATE

Ref. No.	Part No.	Description	No. Used
1	92–8615	Applique	1
2	32144–53	Screw	5
4	684570	Starter Base	1
5	682755	Fuel Cap	1
*	607213	Gasket	1
*	609150	Baffle	1
6	16–5539	Shroud – Engine	1

Ref. No.	Part No.	Description	No. Used
8	92–1648	Screw – Muffler Plt. to Hsg.	3
9	613500	Screw – Muffler Plt. to Block	1
10	607601	Screw	3
11	92–1054	Plate – Muffler	1
12	93–1233	Gasket – Exhaust	1
13	612783	Hose – Gas	1

*Not Illustrated

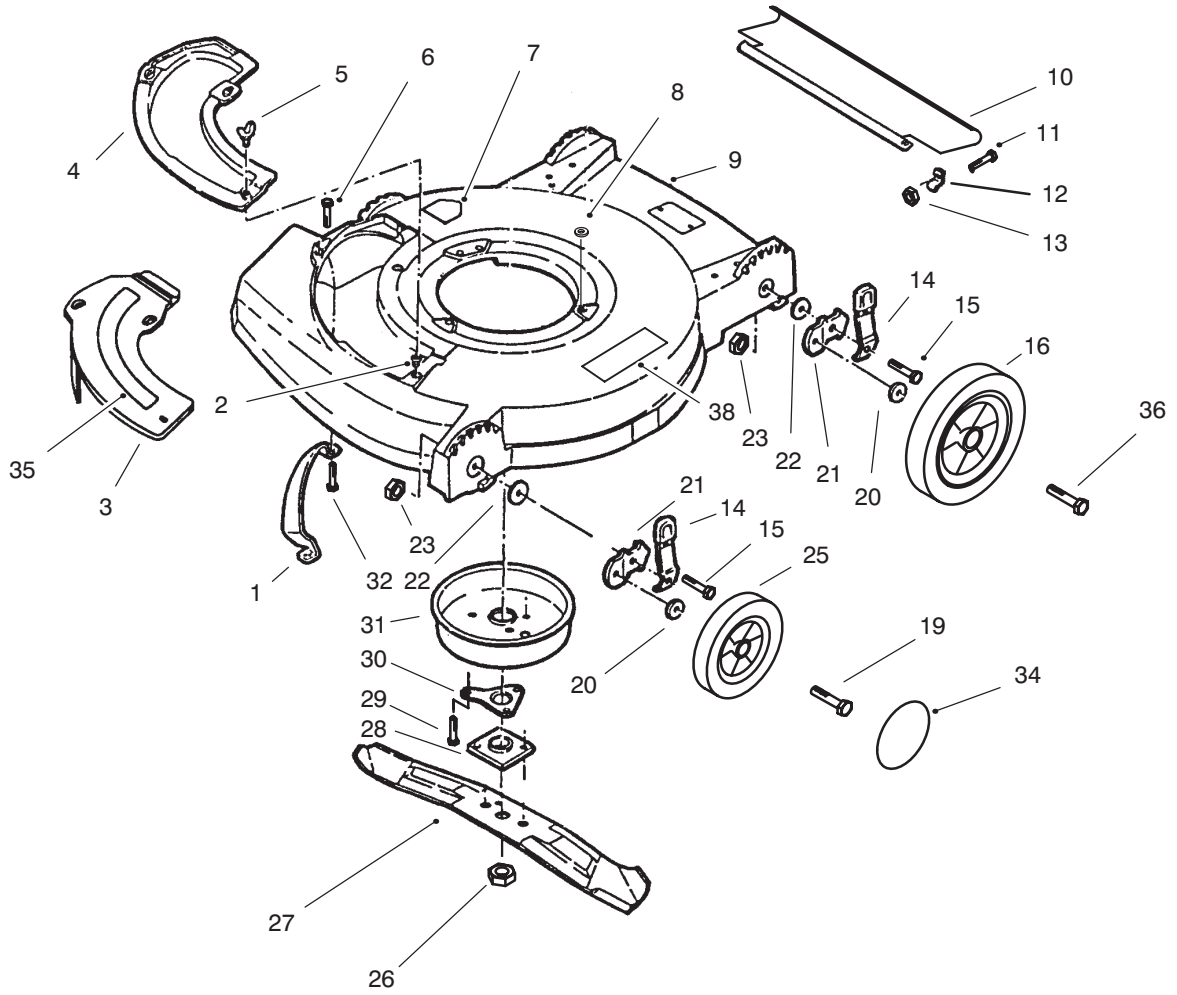


DECK,MUFFLER COVER, BLADE & WHEELS

Ref. No.	Part No.	Description	No. Used
1	608159	Toe Bar	1
2	94–1610	Grommet	3
3	684619	Cover – Plate, Mulch (Incl. Ref.#35)	1
4	607560	Cover Plate	1
5	614682	Nut – Wing	1
6	614677	Screw – Plate Mounting	2
7	39–5770	Decal –Danger (Englsh)	1
8	3256–4	Washer – Flat	3
9	16–2169	Housing Assembly (Incl. Ref. # 2, 7, 38 & 39)	1
10	93–7369	Shield – Trailing	1
11	321–39	Screw – Trailing Shield	2
12	93–7693	Clamp	2
13	3296–73	Nut	2
14	92–4880	Knob and Spring Assembly	4
15	610646	Bolt – Shoulder	4

Ref. No.	Part No.	Description	No. Used
16	684777	Wheel – Rear 8”	2
19	92–1099	Bolt – Wheel 6”	2
20	40–1940	Washer	4
21	608833	Bracket – Wheel Ht. Adjust	4
22	608834	Washer – Wheel Ht. Adjust	4
23	603773	Nut – Wheel Ht. Adjust	4
25	684776	Wheel – Front 6”	2
26	603164	Nut	1
27	612079	Blade 19”	1
28	677525	Collar and Plate Assembly	1
29	609471	Screw – Muff. to Muff. Plate	3
30	609786	Support – Crankshaft	1
31	682876	Muffler Cover Assembly	1
32	46–6811	Screw	2
34	92–1604	Hub Cap	4
35	92–8620	Decal	1
36	614650	Bolt – Wheel 8”	2
38	93–7250	Decal – Warning	1

*Not Illustrated

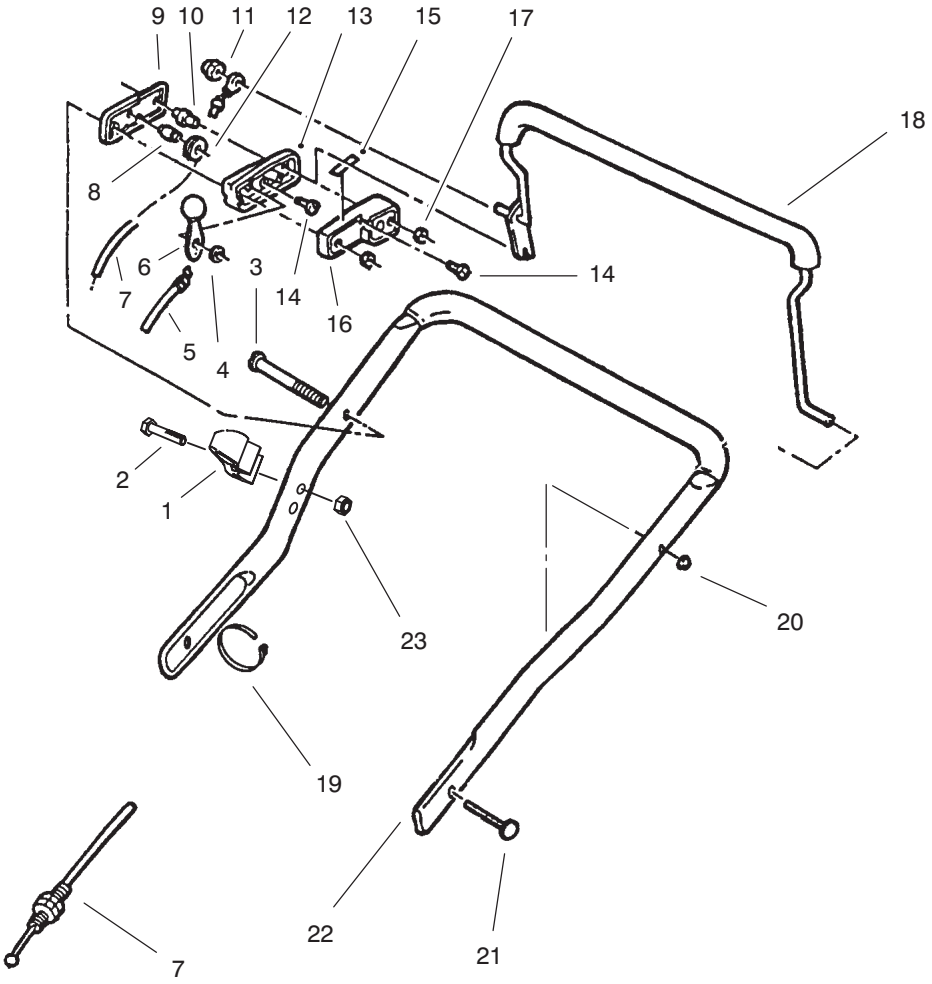


C–2198A

UPPER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–7383	Guide – Rope	1
2	321–51	Screw	1
3	611799	Screw	2
4	612586	Washer	2
5	93–3779	Cable – Throttle	1
6	93–4135	Lever & Knob Assembly	1
7	93–4102	Cable – Control	1
8	611542	Pin	1
9	611777	Control Case Outer	1
10	611541	Column	1
11	612168	Nut – Acorn	1
12	612564	Pulley	1

Ref. No.	Part No.	Description	No. Used
13	612633	Case – Throttle, Center	1
14	611543	Screw	2
15	93–4136	Decal – Throttle	1
16	612634	Case – Throttle, Inner	1
17	3296–12	Nut	2
18	683478	Lever – Control	1
19	614249	Tie Strap	4
20	605546	Nut – Push	1
21	614697	Screw	2
22	611250	Handle Assembly – Top	1
23	3296–73	Nut – Lock	4

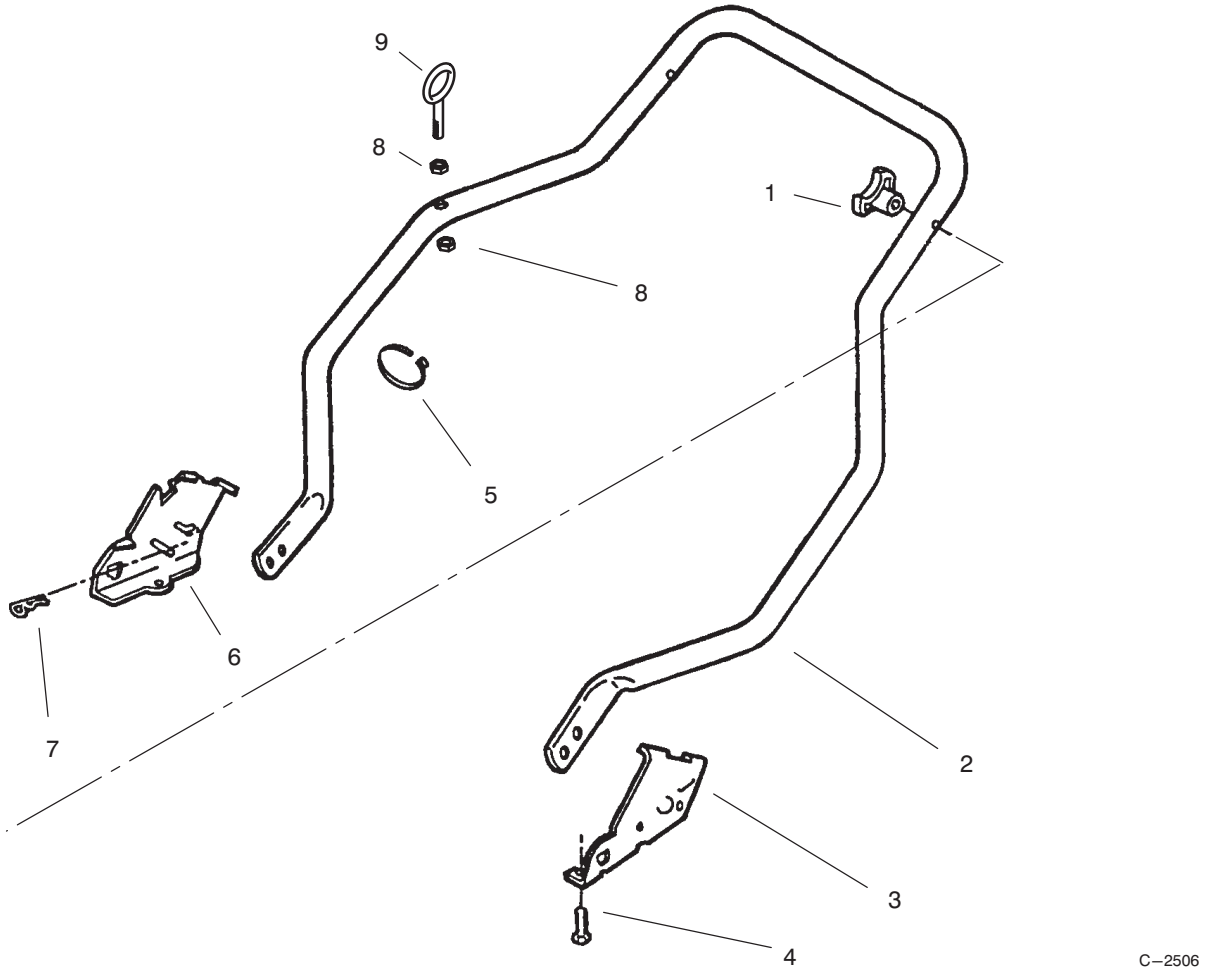


LOWER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614243	Knob	2
2	612788	Handle – Lower	1
3	683925	Bracket – Handle L.H.	1
4	607188	Screw	4
5	614249	Tie Strap	4

Ref. No.	Part No.	Description	No. Used
6	683926	Bracket – Handle R.H.	1
7	605803	Pin – Cotter	2
8	3296–73	Nut – Lock	4
9	611571	EyeBolt	1

ENGINE ASSEMBLY (Serial No. 6900001–6901660)

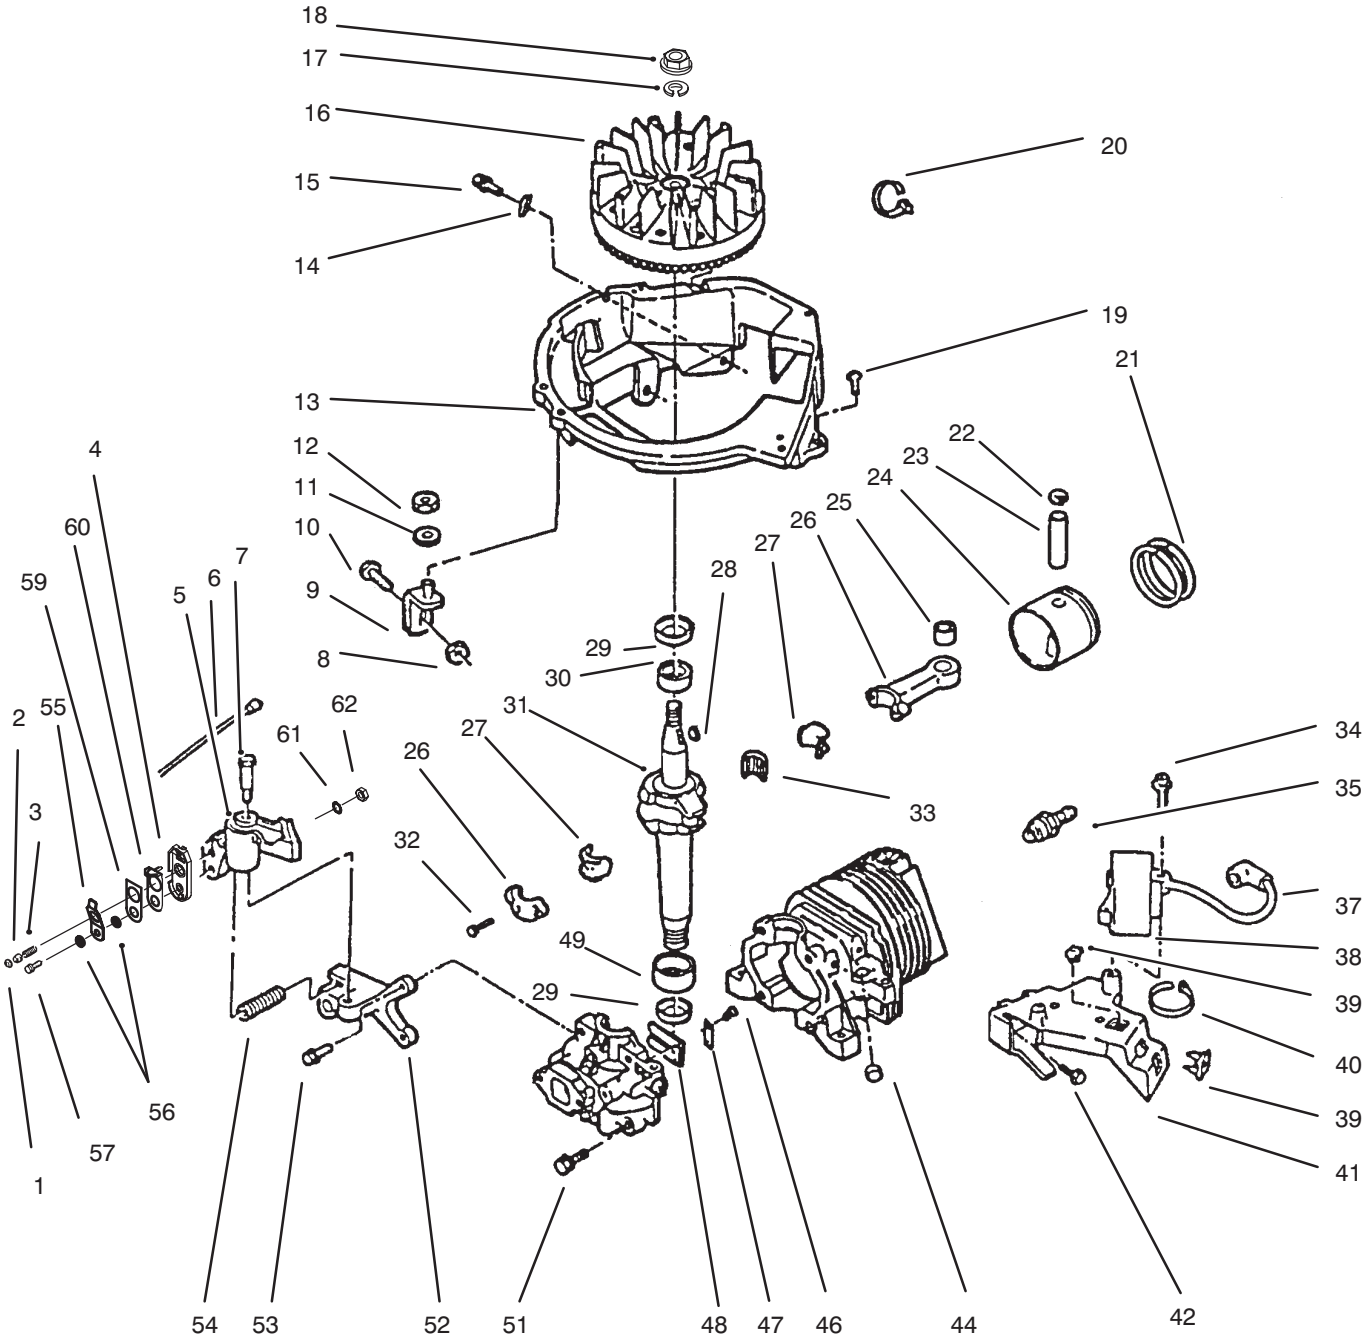


C–2192B

ENGINE ASSEMBLY (Serial No. 6900001–6901660)

Ref. No.	Part No.	Description	No. Used
1	611213	Retainer	1
2	611509	Actuator – Brake Lever	1
3	611214	Spring – Cable, Return	1
4	93–1240	Case – Switch	1
5	682683	Brake Assembly	1
6	683821	Wire Lead	1
7	613529	Bolt – Shoulder	1
8	608311	Nut	1
9	683581	Brace Assembly	1
10	603014	Bolt	1
11	306407	Washer	1
12	602315	Nut	1
13	612427	Shroud – Base	1
14	611191	"J"Clip	1
15	609947	Screw	3
16	683580	Flywheel Assembly	1
17	316959	Washer – Lock	1
18	130743	Nut – Flywheel	1
19	609808	Screw	1
20	317893	Tie Strap	1
21	681737	Set – Ring	1
22	303712	Ring – Retaining	2
23	606608	Pin – Wrist	1
24	92–4925	Piston & Connecting Rod Assembly (Incl. Ref. #21–23, 25–27 & 32–33)	1
*	92–4923	Set – Piston & Ring (Incl. Ref.# 21–23)	1
25	92–4927	Bearing Assembly	1
26	92–4921	Connecting Rod Assembly (Incl. Ref. #25,27,32 & 33)	1
27	677982	Liner – Pair	1
28	607199	Key – Flywheel	1

Ref. No.	Part No.	Description	No. Used
29	611396	Seal – Oil	2
30	681830	Bearing – Main	1
31	92–6375	Crankshaft	1
32	611393	Screw	2
33	609754	Set – Needle Bearing	1
34	607526	Screw	2
35	614009	Spark Plug	1
37	681678	Wire Lead	1
38	683215	C. D. Ignition Module (Incl. Ref. #37)	1
39	605120	Grommet	2
40	614249	Tie Strap	1
41	613073	Bracket – C. D.	1
42	614343	Screw	2
44	609123	Plug	4
46	612872	Screw	2
47	602587	Plate – Reed	1
48	602588	Reed	1
49	681831	Bearing – Main	1
51	613110	Screw	2
52	611192	Bracket – Brake	1
53	613233	Screw	2
54	611211	Spring – Brake	1
55	93–1239	Spring	1
56	306407	Washer	1
57	321–6	Screw – Hex. Hd. Cap	1
59	612842	Shield	
60	612841	Plate – Contact	1
61	3255–7	Washer – Lock	1
62	306375	Nut	1
*	94–5734	Short Block	1

*Not Illustrated

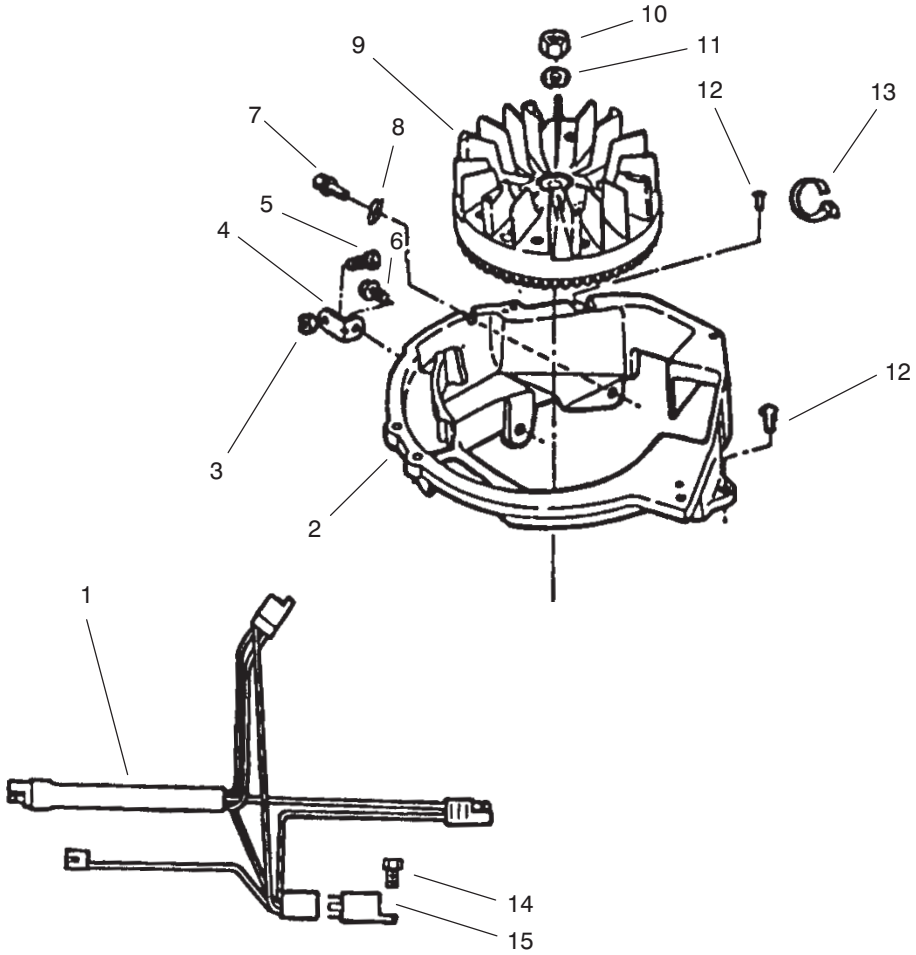


C—1925

FLYWHEEL & WIRE HARNESS ASSEMBLY (Serial No. 6901661 & Up)

Ref. No.	Part No.	Description	No. Used
1	93—4300	Harness — Wire	1
2	611215	Base — Shroud	1
3	608311	Nut	1
4	611512	Brace — Alternator	1
5	603014	Bolt	1
6	614343	Screw	1
7	609947	Screw	3
8	611191	Clip — J	1

Ref. No.	Part No.	Description	No. Used
9	683580	Flywheel	1
10	130743	Nut — Flywheel	1
11	316959	Washer — Lock	1
12	609808	Screw	2
13	317893	Strap — Tie	1
14	606537	Screw	1
15	682776	Relay	1

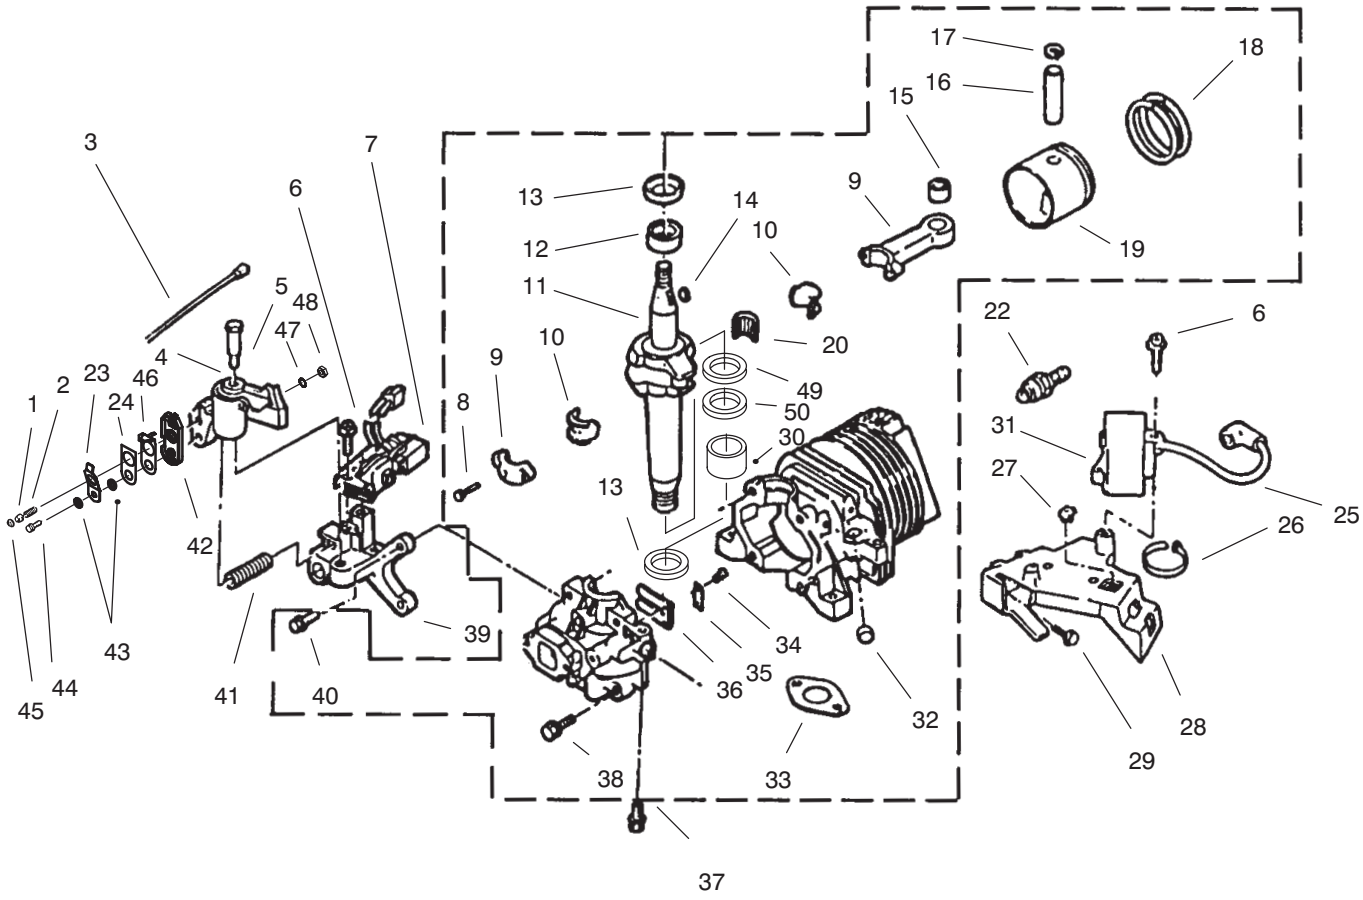


C–2172B

CRANKSHAFT & CYLINDER ASSEMBLY (Serial No. 6901661 & Up)

Ref. No.	Part No.	Description	No. Used
1	611509	Actuator – Brake Lever	1
2	611214	Spring – Cable Return	1
3	683821	Lead	1
4	682683	Brake Assembly	1
5	613529	Bolt – Shoulder	1
6	607526	Screw – C.D. Mounting	4
7	683964	Alternator Assembly	1
8	611393	Screw – Cap	2
9	92–4921	Connecting Rod Assembly (Incl. Ref. #8, 10, & 20)	1
10	677982	Liner – Split (1 pair)	1
11	94–5713	Crankshaft	1
12	681830	Bearing – Upper Main	1
13	611396	Seal – Upper Oil	2
14	607199	Key – Flywheel	1
15	92–4927	Bearing Assembly	1
16	606608	Pin – Wrist	1
17	303712	Ring – Retaining	2
18	681737	Ring Set	1
19	92–4925	Piston & Ring Set (Incl. Ref. #16–18)	1
20	609754	Strip – Roller	1
22	614009	Plug – Spark	1
23	93–1239	Spring – Contact	1

Ref. No.	Part No.	Description	No. Used
24	612842	Shield	1
25	681678	Lead – High Tension	1
26	614249	Strap – Tie	1
27	605120	Grommet	1
28	613073	Bracket – C.D. Mounting	1
29	614343	Screw	2
30	681831	Bearing	1
31	683215	Module – C.D. Ignition & Lead	1
32	609123	Plug	4
33	93–1233	Gasket – Exhaust	1
34	612872	Screw – Reed To Cover	2
35	602587	Plate – Reed Hold Down	1
36	602588	Reed	1
37	611073	Screw – Set	1
38	613110	Screw – Cover to Crankcase	1
39	611337	Bracket	1
40	613233	Screw – Brake Mtg. Brkt.	2
41	611211	Spring – Brake	1
42	93–4301	Case Assembly	1

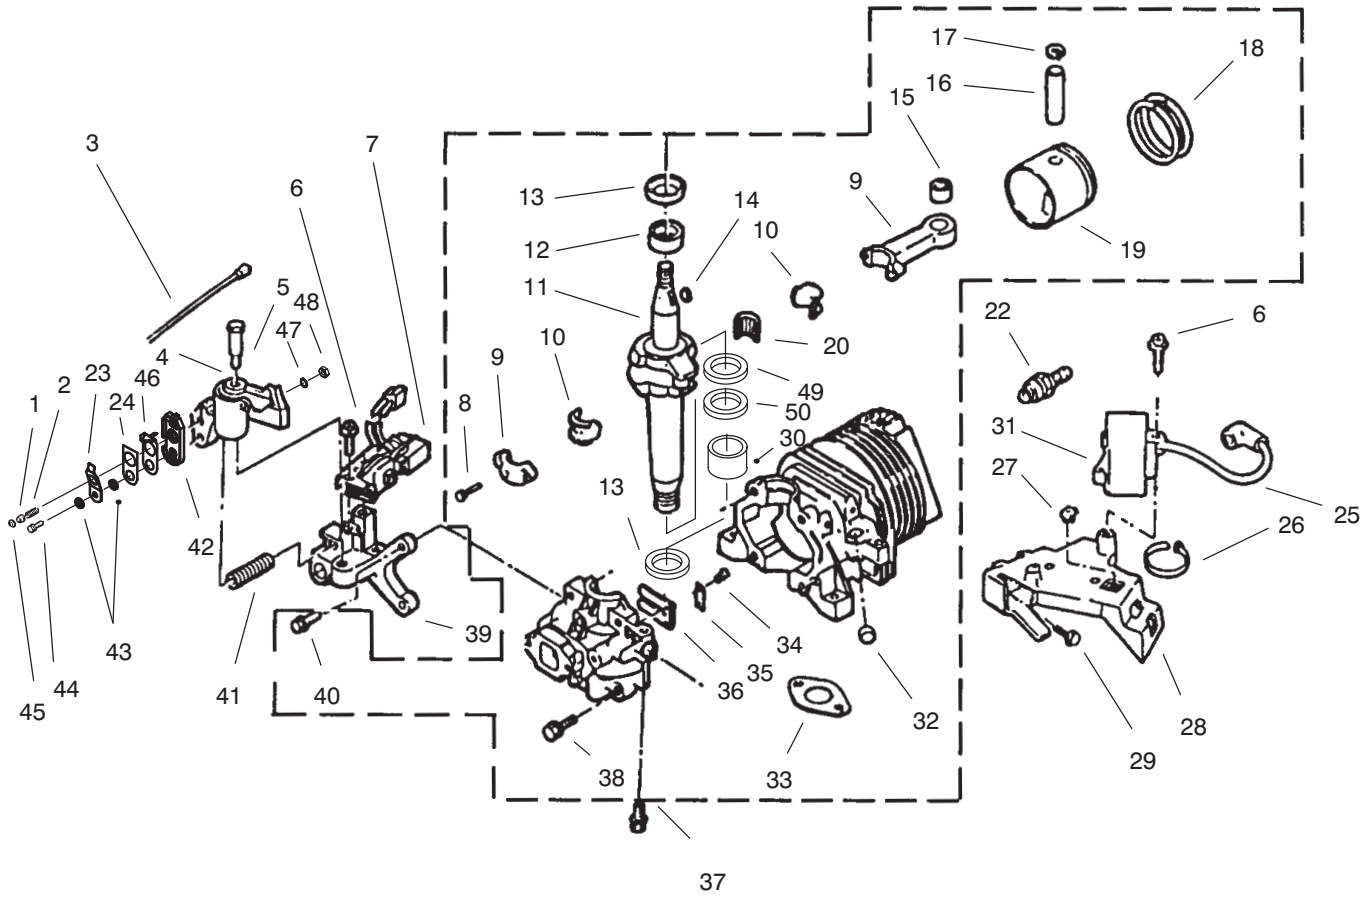


C–2172B

CRANKSHAFT & CYLINDER ASSEMBLY (Cont.)
(Serial No. 6901661 & Up)

Ref. No.	Part No.	Description	No. Used
43	306407	Washer	2
44	321–6	Screw – Hex Hd. Cap	1
45	611213	Retainer	1
46	612841	Plate – Contact	1
47	3255–7	Washer – Ext. Tooth Lock	1

Ref. No.	Part No.	Description	No. Used
48	306375	Nut	1
49	252–76	Bearing – Thrust	1
50	252–80	Washer – Thrust	1
*	94–5734	Short Block	1

*Not Illustrated

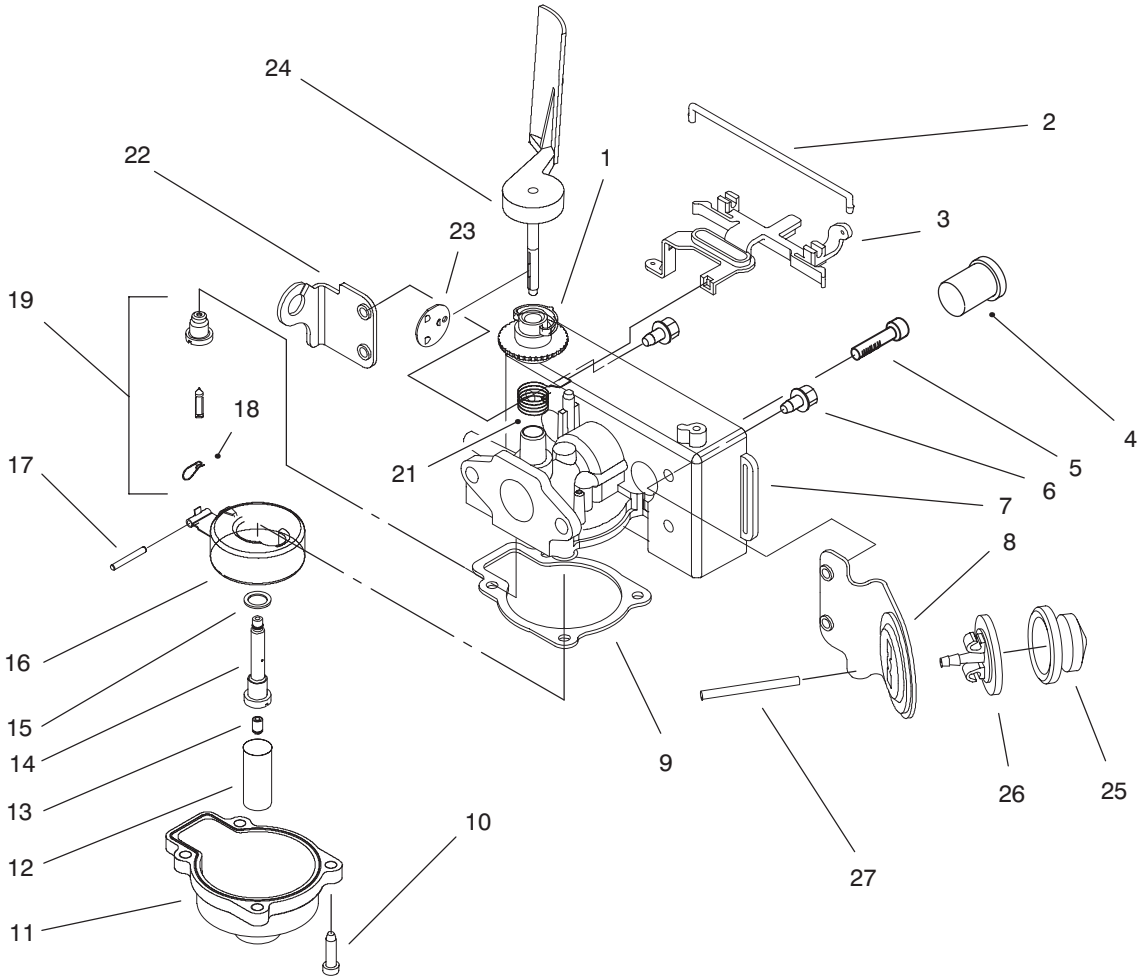


C–2182C

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar – Adjustment	1
2	610165	Retainer	1
3	93–1225	Lever – Speed Adjust	1
4	611545	Plug	2
5	609482	Screw – Pan Hd. Sems	2
6	613269	Screw	4
7	93–4341	Body – Carburetor	1
8	93–1232	Bracket – Primer	1
9	602850	Gasket – Float Chamber	1
10	608850	Screw	4
11	92–9691	Float Chamber	1
12	611071	Filter – Fuel	1
13	94–5710	Main Jet	1
14	92–6371	Nozzle	1

Ref. No.	Part No.	Description	No. Used
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92–6389	Pin	1
18	603145	Clip	1
19	678278	Float, Valve, & Body Ass'y	1
21	92–4944	Spring – Governor	1
22	93–1226	Bracket – Throttle Control	1
23	94–5704	Disc – Throttle	1
24	92–6376	Air Vane & Shaft	1
25	66–7460	Bulb – Primer	1
26	44–2750	Body – Primer	1
27	44–3172	Hose – Primer	1
*	94–5738	Carburetor Complete	1

*Not Illustrated

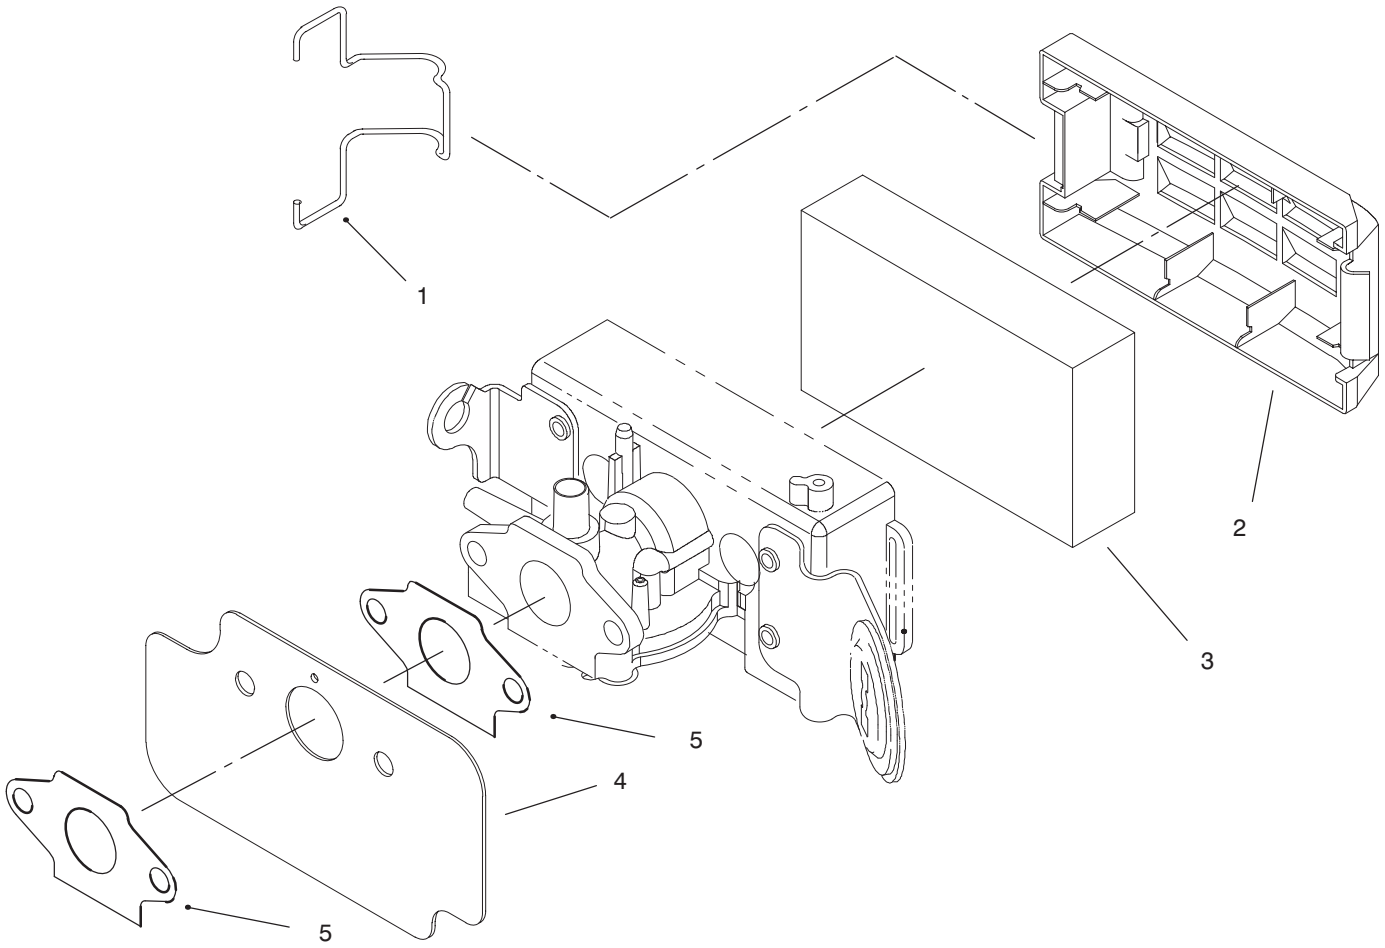


C–2184A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer – Cover	1
2	93–1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1

Ref. No.	Part No.	Description	No. Used
4	93–1221	Shield – Heat	1
5	92–4948	Gasket	2

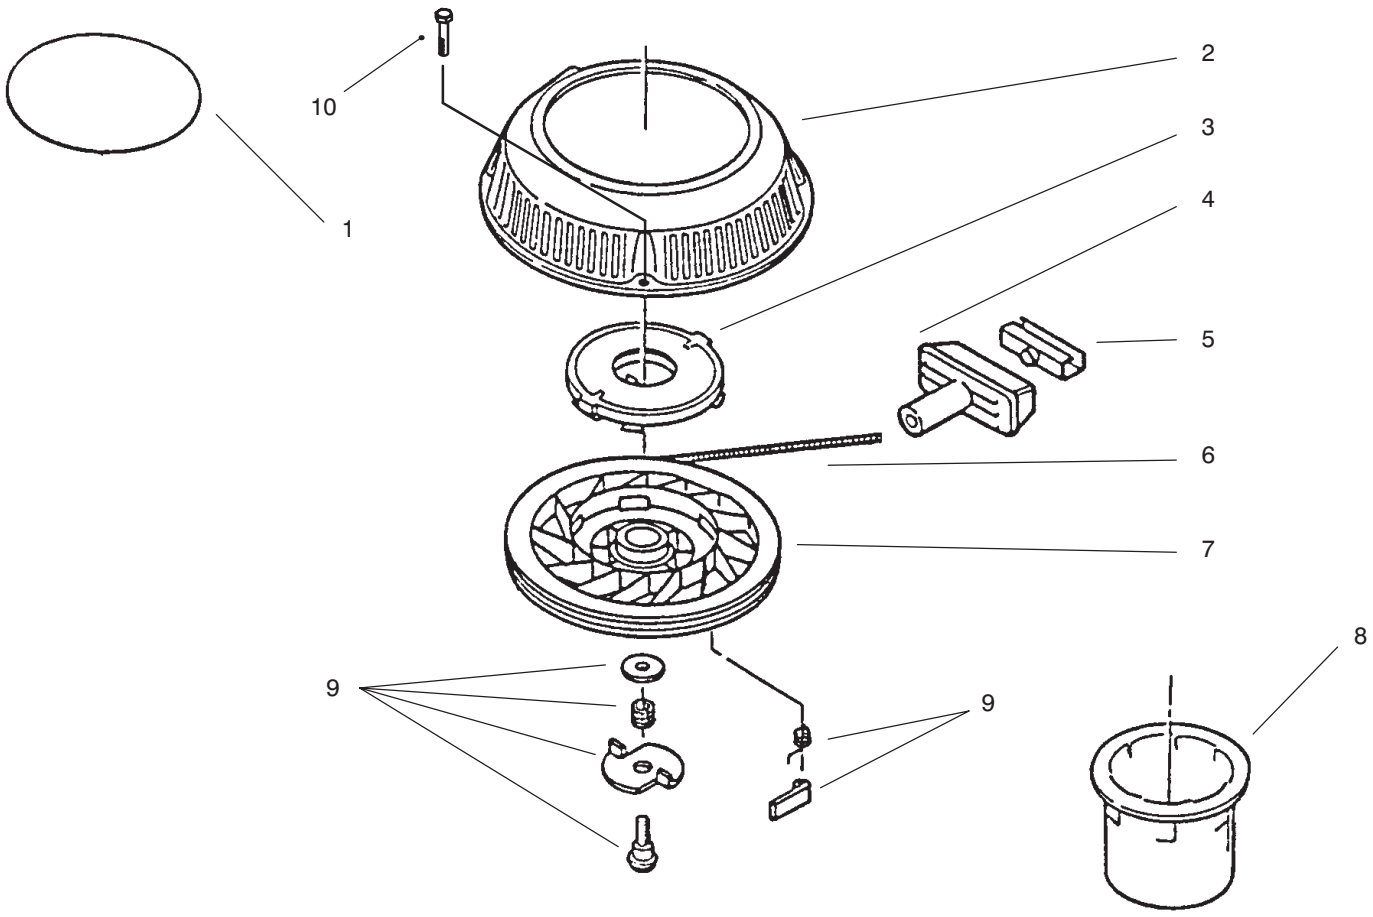

C–1337A

STARTER

Ref. No.	Part No.	Description	No. Used
*	684622	Starter Assembly (Incl. Ref. #2, 3–6, 7, & 9)	1
1	93–0293	Decal – Recoil	1
2	684567	Starter Housing & Shaft	1
3	92–4935	Spring & Keeper	1
4	612825	Handle – Starter	1
5	612824	Clip – Rope	1
6	612432	Rope	1
7	612950	Pulley	1
8	612949	Hub – Starter	1
9	683899	Kit – Dog	1
10	612428	Screw – Starter Mtg.	4

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut – Flywheel	7	10	1
130743	Nut – Flywheel	6	18	1
303712	Ring – Retaining	8	17	2
303712	Ring – Retaining	6	22	2
306375	Nut	9	48	1
306375	Nut	6	62	1
306407	Washer	6	11	1
306407	Washer	9	43	2
306407	Washer	6	56	1
316959	Washer – Lock	7	11	1
316959	Washer – Lock	6	17	1
317893	Strap – Tie	7	13	1
317893	Tie Strap	6	20	1
602315	Nut	6	12	1
602587	Plate – Reed	6	47	1
602587	Plate – Reed Hold Down	8	35	1
602588	Reed	8	36	1
602588	Reed	6	48	1
602850	Gasket – Float Chamber	10	9	1
603014	Bolt	7	5	1
603014	Bolt	6	10	1
603145	Clip	10	18	1
603164	Nut	2	26	1
603773	Nut – Wheel Ht. Adjust	2	23	4
605120	Grommet	8	27	1
605120	Grommet	6	39	2
605546	Nut – Push	3	20	1
605803	Pin – Cotter	4	7	2
606537	Screw	7	14	1
606608	Pin – Wrist	8	16	1
606608	Pin – Wrist	6	23	1
607188	Screw	4	4	4
607199	Key – Flywheel	8	14	1
607199	Key – Flywheel	6	28	1
607213	Gasket	1	*	1
607526	Screw	6	34	2
607526	Screw – C.D. Mounting	8	6	4
607560	Cover Plate	2	4	1
607601	Screw	1	10	3
608159	Toe Bar	2	1	1
608311	Nut	7	3	1
608311	Nut	6	8	1
608833	Bracket – Wheel Ht. Adjust	2	21	4
608834	Washer – Wheel Ht. Adjust	2	22	4
608850	Screw	10	10	4
609123	Plug	8	32	4
609123	Plug	6	44	4
609150	Baffle	1	*	1
609471	Screw – Muff. to Muff. Plate	2	29	3
609482	Screw – Pan Hd. Sems	10	5	2
609493	Element – Air Filter	11	3	1
609754	Set – Needle Bearing	6	33	1
609754	Strip – Roller	8	20	1
609786	Support – Crankshaft	2	30	1
609808	Screw	7	12	2
609808	Screw	6	19	1
609947	Screw	7	7	3
609947	Screw	6	15	3
610165	Retainer	10	2	1
610383	Retainer – Cover	11	1	1
610646	Bolt – Shoulder	2	15	4
610834	Collar – Adjustment	10	1	1
611071	Filter – Fuel	10	12	1
611073	Screw – Set	8	37	1
611191	JClip	6	14	1
611191	Clip – J	7	8	1
611192	Bracket – Brake	6	52	1
611211	Spring – Brake	8	41	1
611211	Spring – Brake	6	54	1
611213	Retainer	6	1	1
611213	Retainer	9	45	1
611214	Spring – Cable Return	8	2	1
611214	Spring – Cable, Return	6	3	1
611215	Base – Shroud	7	2	1
611250	Handle Assembly – Top	3	22	1
611337	Bracket	8	39	1
611393	Screw	6	32	2
611393	Screw – Cap	8	8	2
611396	Seal – Oil	6	29	2
611396	Seal – Upper Oil	8	13	2
611509	Actuator – Brake Lever	8	1	1
611509	Actuator – Brake Lever	6	2	1
611512	Brace – Alternator	7	4	1
611541	Column	3	10	1
611542	Pin	3	8	1
611543	Screw	3	14	2
611545	Plug	10	4	2
611571	EyeBolt	4	9	1
611777	Control Case Outer	3	9	1
611799	Screw	3	3	2
612079	Blade 19	2	27	1
612168	Nut – Acorn	3	11	1
612383	Washer	10	15	1
612427	Shroud – Base	6	13	1
612428	Screw – Starter Mtg.	12	10	4
612432	Rope	12	6	1
612564	Pulley	3	12	1
612586	Washer	3	4	2
612633	Case – Throttle, Center	3	13	1
612634	Case – Throttle, Inner	3	16	1
612783	Hose – Gas	1	13	1
612788	Handle – Lower	4	2	1
612824	Clip – Rope	12	5	1
612825	Handle – Starter	12	4	1
612841	Plate – Contact	9	46	1
612841	Plate – Contact	6	60	1
612842	Shield	8	24	1
612842	Shield	6	59	
612872	Screw	6	46	2
612872	Screw – Reed To Cover	8	34	2
612949	Hub – Starter	12	8	1
612950	Pulley	12	7	1
613073	Bracket – C. D.	6	41	1
613073	Bracket – C.D. Mounting	8	28	1
613110	Screw	6	51	2
613110	Screw – Cover to	8	38	1
613233	Screw	6	53	2
613233	Screw – Brake Mtg. Brkt.	8	40	2
613269	Screw	10	6	4
613500	Screw – Muffler Plt. to Block	1	9	1
613529	Bolt – Shoulder	8	5	1
613529	Bolt – Shoulder	6	7	1
614009	Plug – Spark	8	22	1
614009	Spark Plug	6	35	1
614243	Knob	4	1	2
614249	Strap – Tie	8	26	1
614249	Tie Strap	4	5	4
614249	Tie Strap	3	19	4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
614249	Tie Strap	6	40	1
614343	Screw	7	6	1
614343	Screw	8	29	2
614343	Screw	6	42	2
614650	Bolt – Wheel 8	2	36	2
614677	Screw – Plate Mounting	2	6	2
614682	Nut – Wing	2	5	1
614697	Screw	3	21	2
677525	Collar and Plate Assembly	2	28	1
677982	Liner – Pair	6	27	1
677982	Liner – Split (1 pair)	8	10	1
678113	Float & Arm Assembly	10	16	1
678278	Float, Valve, & Body Ass'y	10	19	1
681678	Lead – High Tension	8	25	1
681678	Wire Lead	6	37	1
681737	Ring Set	8	18	1
681737	Set – Ring	6	21	1
681830	Bearing – Main	6	30	1
681830	Bearing – Upper Main	8	12	1
681831	Bearing	8	30	1
681831	Bearing – Main	6	49	1
682683	Brake Assembly	8	4	1
682683	Brake Assembly	6	5	1
682755	Fuel Cap	1	5	1
682776	Relay	7	15	1
682876	Muffler Cover Assembly	2	31	1
683215	C. D. Ignition Module	6	38	1
683215	Module – C.D. Ignition	8	31	1
683478	Lever – Control	3	18	1
683580	Flywheel	7	9	1
683580	Flywheel Assembly	6	16	1
683581	Brace Assembly	6	9	1
683821	Lead	8	3	1
683821	Wire Lead	6	6	1
683899	Kit – Dog	12	9	1
683925	Bracket – Handle L.H.	4	3	1
683926	Bracket – Handle R.H.	4	6	1
683964	Alternator Assembly	8	7	1
684567	Starter Housing & Shaft	12	2	1
684570	Starter Base	1	4	1
684619	Cover – Plate, Mulch	2	3	1
684622	Starter Assembly	12	*	1
684776	Wheel – Front 6	2	25	2
684777	Wheel – Rear 8	2	16	2
16–2169	Housing Assembly	2	9	1
16–5539	Shroud – Engine	1	6	1
39–5770	Decal –Danger	2	7	1
40–1940	Washer	2	20	4
44–2750	Body – Primer	10	26	1
44–3172	Hose – Primer	10	27	1
46–6811	Screw	2	32	2
66–7460	Bulb – Primer	10	25	1
92–1054	Plate – Muffler	1	11	1
92–1099	Bolt – Wheel 6	2	19	2
92–1604	Hub Cap	2	34	4
92–1648	Screw – Muffler Plt. to Hsg.	1	8	3
92–4880	Knob and Spring Assembly	2	14	4
92–4921	Connecting Rod Assembly	8	9	1
92–4921	Connecting Rod Assembly	6	26	1
92–4923	Set – Piston & Ring	6	*	1
92–4925	Piston & Connecting Rod	6	24	1
92–4925	Piston & Ring Set	8	19	1
92–4927	Bearing Assembly	8	15	1
92–4927	Bearing Assembly	6	25	1
92–4935	Spring & Keeper	12	3	1
92–4944	Spring – Governor	10	21	1
92–4948	Gasket	11	5	2
92–6371	Nozzle	10	14	1
92–6375	Crankshaft	6	31	1
92–6376	Air Vane & Shaft	10	24	1
92–6389	Pin	10	17	1
92–8615	Applique	1	1	1
92–8620	Decal	2	35	1
92–9691	Float Chamber	10	11	1
93–0293	Decal – Recoil	12	1	1
93–1221	Shield – Heat	11	4	1
93–1225	Lever – Speed Adjust	10	3	1
93–1226	Bracket – Throttle Control	10	22	1
93–1231	Cover – Air Filter	11	2	1
93–1232	Bracket – Primer	10	8	1
93–1233	Gasket – Exhaust	1	12	1
93–1233	Gasket – Exhaust	8	33	1
93–1239	Spring	6	55	1
93–1239	Spring – Contact	8	23	1
93–1240	Case – Switch	6	4	1
93–3779	Cable – Throttle	3	5	1
93–4102	Cable – Control	3	7	1
93–4135	Lever & Knob Assembly	3	6	1
93–4136	Decal – Throttle	3	15	1
93–4300	Harness – Wire	7	1	1
93–4301	Case Assembly	8	42	1
93–4341	Body – Carburetor	10	7	1
93–7250	Decal – Warning	2	38	1
93–7369	Shield – Trailing	2	10	1
93–7383	Guide – Rope	3	1	1
93–7693	Clamp	2	12	2
94–1610	Grommet	2	2	3
94–5704	Disc – Throttle	10	23	1
94–5710	Main Jet	10	13	1
94–5713	Crankshaft	8	11	1
94–5734	Short Block	6	*	1
94–5734	Short Block	9	*	1
94–5738	Carburetor Complete	10	*	1
252–76	Bearing – Thrust	9	49	1
252–80	Washer – Thrust	9	50	1
321–6	Screw – Hex Hd. Cap	9	44	1
321–6	Screw – Hex. Hd. Cap	6	57	1
321–39	Screw – Trailing Shield	2	11	2
321–51	Screw	3	2	1
3255–7	Washer – Ext. Tooth Lock	9	47	1
3255–7	Washer – Lock	6	61	1
3256–4	Washer – Flat	2	8	3
3296–12	Nut	3	17	2
3296–73	Nut	2	13	2
3296–73	Nut – Lock	4	8	4
3296–73	Nut – Lock	3	23	4
32144–53	Screw	1	2	5

*Not Illustrated