
FORM NO. 3318–586

TORO®

MODEL NO. 20768B–6900001 & UP

PARTS CATALOG

53cm Recycler□
Mower

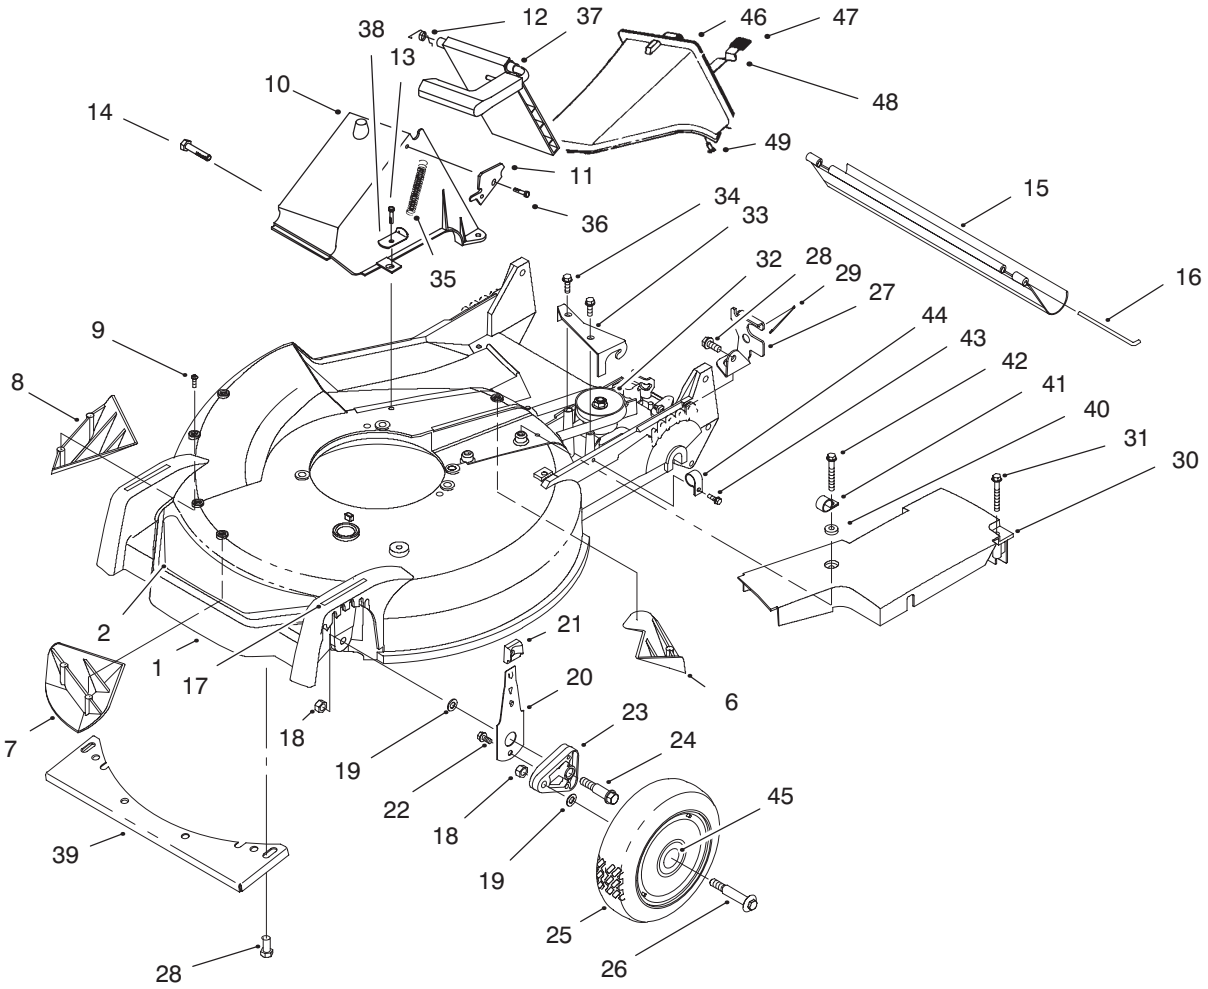

C–2563


HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–9166	Housing Assembly (Incl. Ref. #6–9,17,28,39)	1
2	94–5407	Decal – Deck	1
6	92–1750	Plate – Kicker Rear	1
7	92–1720	Kicker – R.H. Front	1
8	92–1730	Kicker – L.H. Front	1
9	32144–111	Screw – PPH	6
10	82–9151	Tunnel – Discharge	1
11	93–3154	Plate – Latch	1
12	80–3770	Retainer – Door	1
13	46–6811	Screw – HWH	3
14	46–6810	Screw – HWH	1
15	44–0580	Shield – Trailing	1
16	33–3208	Rod – Shield	1
17	92–7856	Decal – HOC	4
18	3296–6	Nut – Lock	4
19	40–1940	Washer	4
20	66–0541	Front Spring Arm Asm.	2
21	25–7740	Knob – Arm	2
22	32144–85	Screw – HH	2
23	66–0580–03	Arm – Pivot	2
24	66–0560	Screw – Shoulder	2
25	14–9949	8” Wheel & Tire Asm.	2
26	27–6232	Bolt – Wheel HH	2
27	82–5680	Bracket – Adj. Trac	1
28	32144–70	Screw – Tap	5
29	46–7030	Retainer – Cable	1
30	82–9910	Cover – Belt	1
31	37–7260	Screw – Tap	1
32	62–6673	Gearcase Asm.	1
33	62–4320	Bracket – Guide, Belt	1

PROTOTYPE

□The Toro Company –1996
All Rights Reserved

TPS

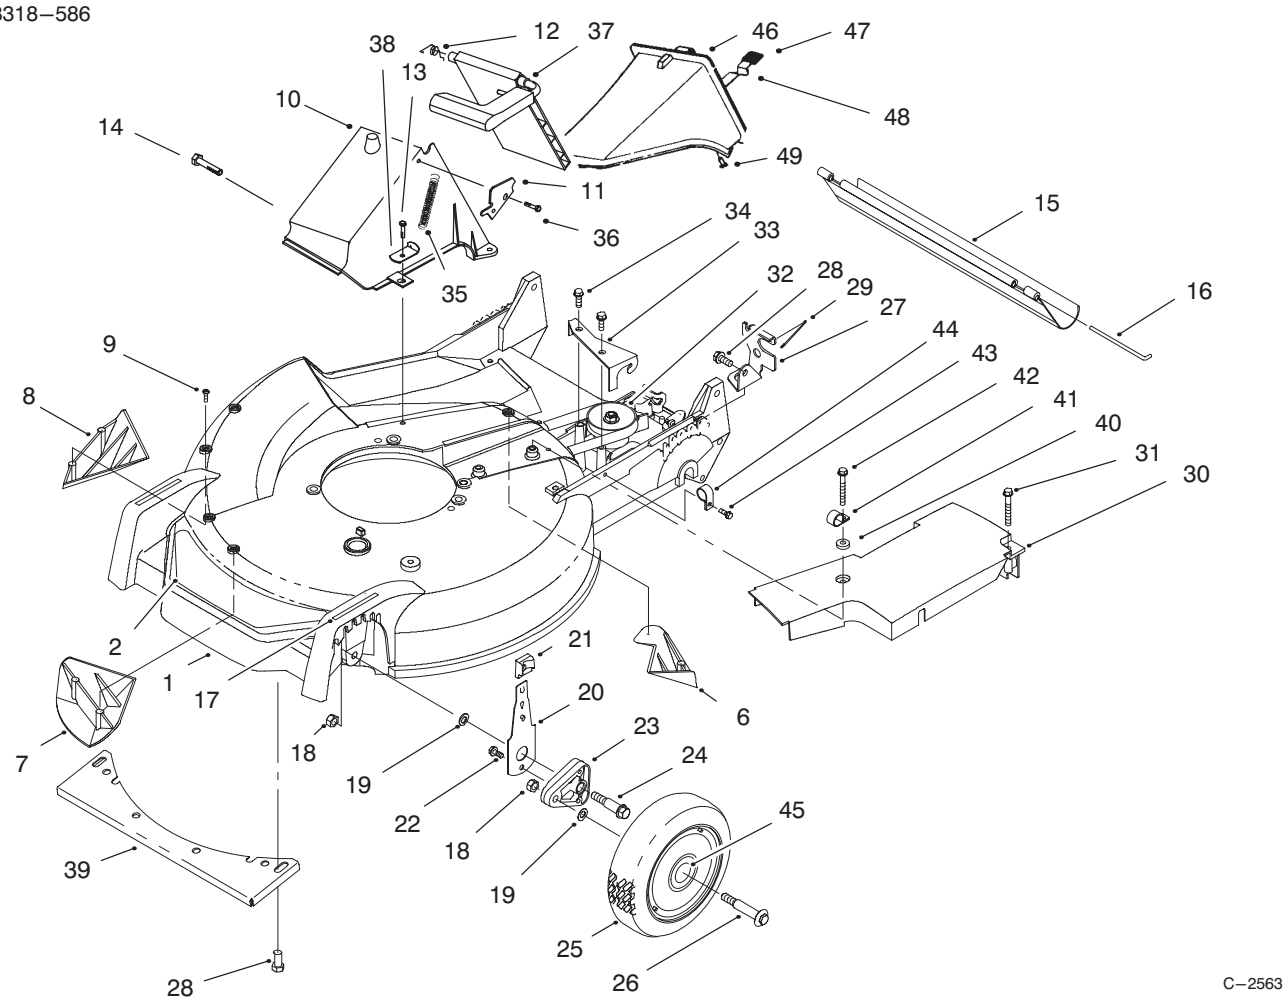


HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
34	49–2040	Screw – HH	2
35	76–4660	Spring – Extension	1
36	46–8090	Screw – Tapping	2
37	93–7351	Door – Discharge Asm.	1
38	71–9350	Spring – Bracket	1
39	46–5400	Shield – Front	1
40	3–5792	Washer	1
41	2412–87	Clamp – Cable	1

Ref. No.	Part No.	Description	No. Used
42	37–7262	Screw – Special	1
43	32144–112	Screw – Thread Form	1
44	2412–83	R – Clamp	1
45	27–6250	Bushing – Wheel	2
46	77–0502	Plug – Discharge Asm.	1
47	76–4650	Grip – Latch	1
48	76–4640	Latch – Discharge Plug	1
49	3295–35	Rivet Solid	1

PROTOTYPE

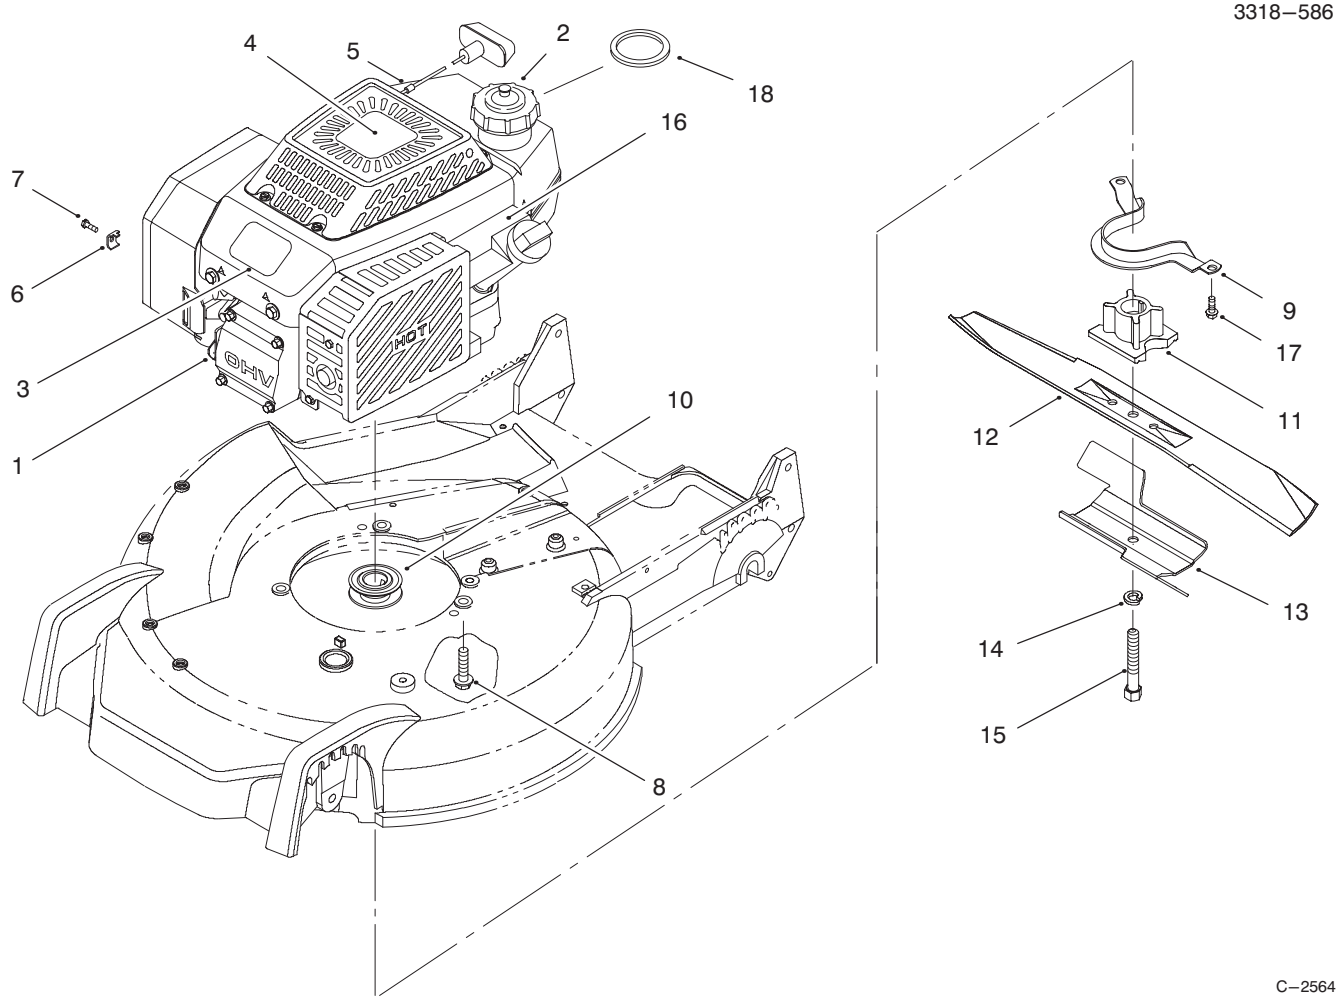

C–2564


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77–8952	Engine	1
2	94–5575	Cap – Fuel Asm. (Incl. Ref. #18)	1
3	92–2289	Plate – Logo, Toro	1
4	93–4355	Decal – Engine	1
5	2210–316	Rope – Stop	1
6	2210–249	Clamp – Casting	1
7	86–7990	Screw – Clamp	1
8	32144–102	Screw	3
9	66–0570	Guide – Belt	1

Ref. No.	Part No.	Description	No. Used
10	62–7550	Pulley – Driver	1
11	93–4107	Retainer – Blade	1
12	93–4106	Blade – Generation	1
13	94–1608	Stiffener – Blade	1
14	3253–22	Washer – Lock	1
15	26–0670	Bolt – Blade	1
16	77–9550	Cover – Brake	1
17	32144–70	Screw – Tap	2
18	94–5576	Gasket	1

PROTOTYPE

3318–586

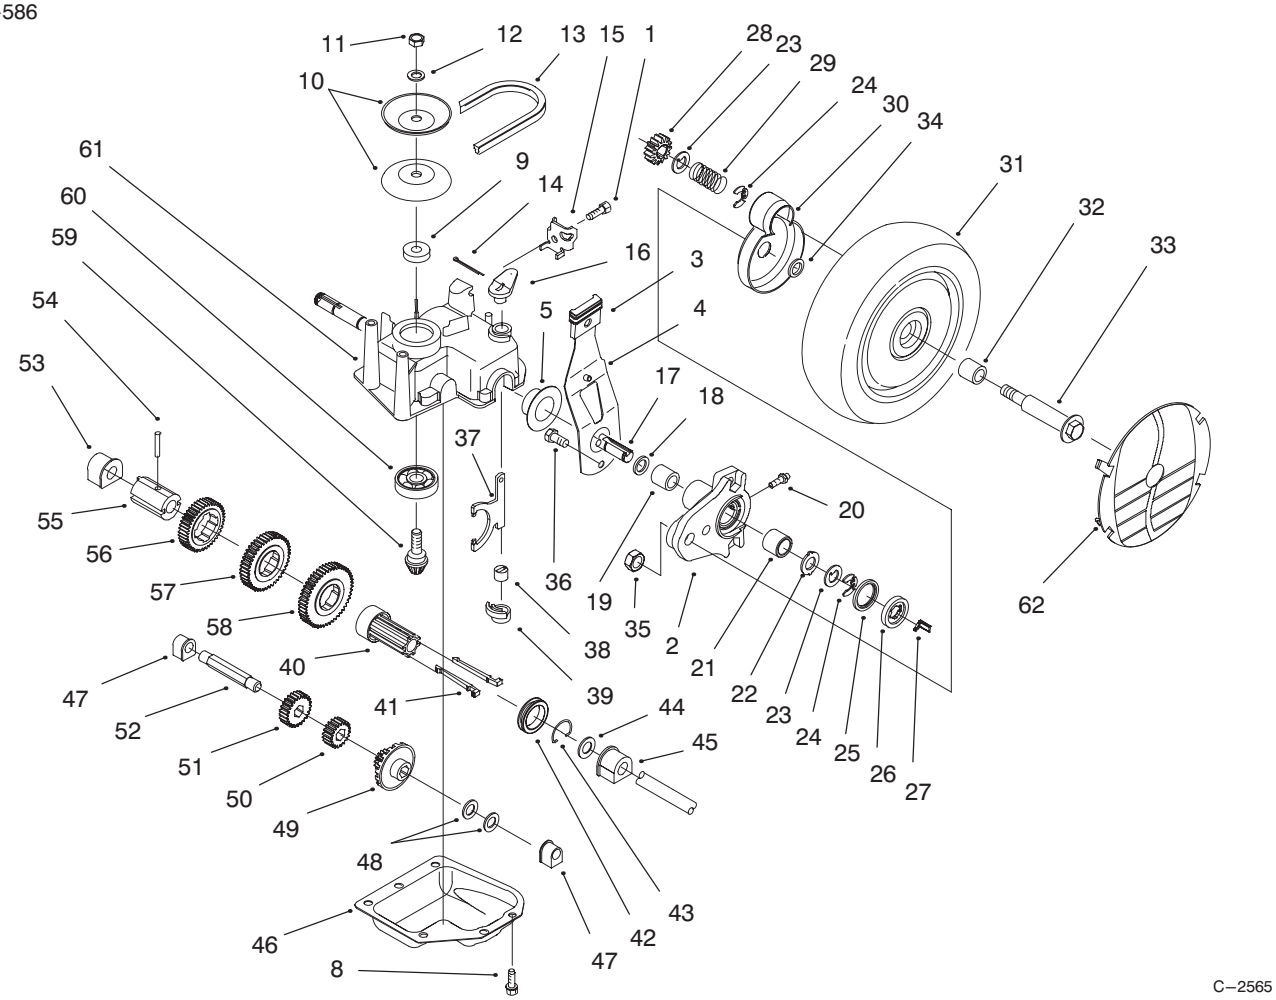


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–70	Screw – Hex. Washer Hd.	1
2	63–8701–03	Pivot Arm Assembly (Incl. Ref. #19–21)	2
3	25–7740	Knob – Arm	2
4	63–8721	Spring Arm Assembly	2
5	42–3520	Cap – End	2
8	49–2040	Screw – HH	6
9	62–6660	Spacer	1
10	60–8840	Pulley – Half	2
11	3296–5	Nut – Lock	1
12	3256–24	Washer – Flat	1
13	62–3900	V–Belt	1
14	3272–10	Pin – Cotter	1
15	82–8780	Retainer – Cable	1
16	60–8821	Lever – Shift	1
17	65–4770	Shaft – Output	1
18	237–153	Seal – "O"Ring	2
19	70–9760	Bushing – Sleeve	2
20	302–56	Fitting – Grease	2
21	48–2060	Bearing –Needle	2
22	65–4730	Washer – Thrust (Inner)	2
23	65–4740	Washer – Thrust (Keyed)	4
24	65–2720	Ring – Retaining	4

Ref. No.	Part No.	Description	No. Used
25	65–4710	Ring – Friction	2
26	65–4760	Washer –Clutch	2
27	66–6050	Key – Rocking (L.H.)	1
*	66–6040	Key – Rocking (R.H.)	1
28	65–4750	Pinion	2
29	65–4720	Spring – Compression	2
30	74–1660	Cover – Wheel	2
31	14–9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27–6250	Bushing – Wheel	4
33	27–6232	Bolt – Wheel	2
34	74–1670	Spacer – Wheel Cover	2
35	3296–6	Nut – Lock	2
36	32144–85	Screw – HH	2
37	60–8870	Yoke – Shift	1
38	29–9570	Bushing – Yoke	1
39	60–8810	Retainer – Shift Fork	1
40	76–0780	Sleeve – Shift Key	1
41	76–0760	Key – Shift	2
42	76–0770	Collar – Shift	1
43	65–5250	Clip – Spring	1
44	36–4780	Washer – Thrust	1

PROTOTYPE

*Not Illustrated

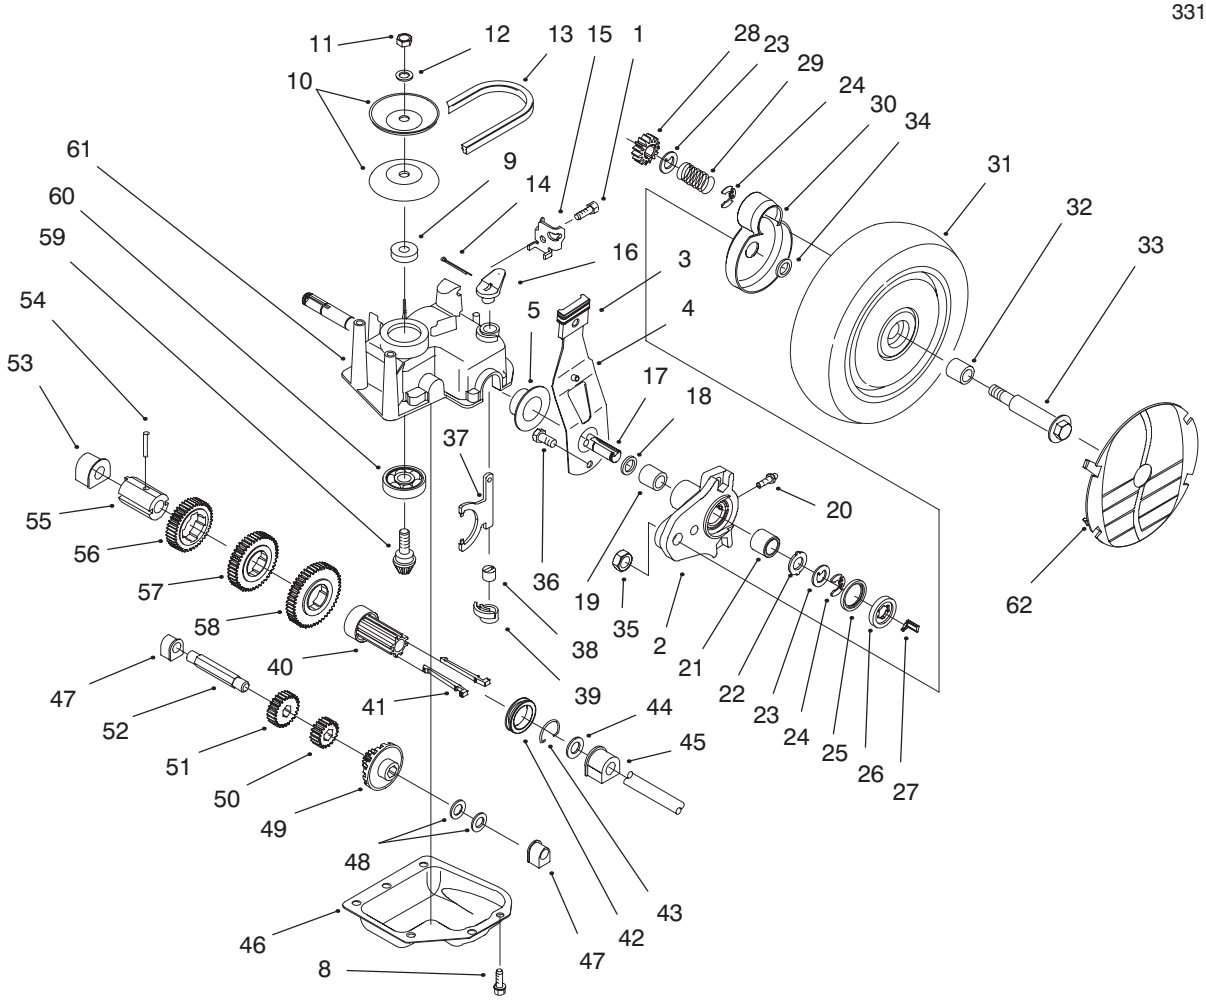

C–2565


GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	60–8770	Bushing – Output Shaft	1
46	60–8730	Cover – Gear Case	1
47	60–8750	Bushing – Intrmdt. Shaft	2
48	36–4791	Washer – Thrust	2
49	55–3760	Gear – Pinion 15T	1
50	55–3780	Gear – Pinion 20T	1
51	55–3800	Gear – Pinion 25T	1
52	60–8800	Shaft – Intermediate	1
53	60–8850	Bushing – Output Shaft	1
54	32121–120	Pin – Coil	1

Ref. No.	Part No.	Description	No. Used
55	60–8790	Sleeve – Gear	1
56	55–3810	Gear – 39T (3rd Gear)	1
57	55–3790	Gear – 44T (2nd Gear)	1
58	55–3770	Gear – 49T (1st Gear)	1
59	60–8890	Pinion – Bevel	1
60	38–7820	Bearing – Ball	1
61	60–8710	Case – Gear (Upper)	1
62	92–7663	Cover – Wheel	1
*	62–6673	Gear Case Assy. Complete	1

PROTOTYPE

*Not Illustrated

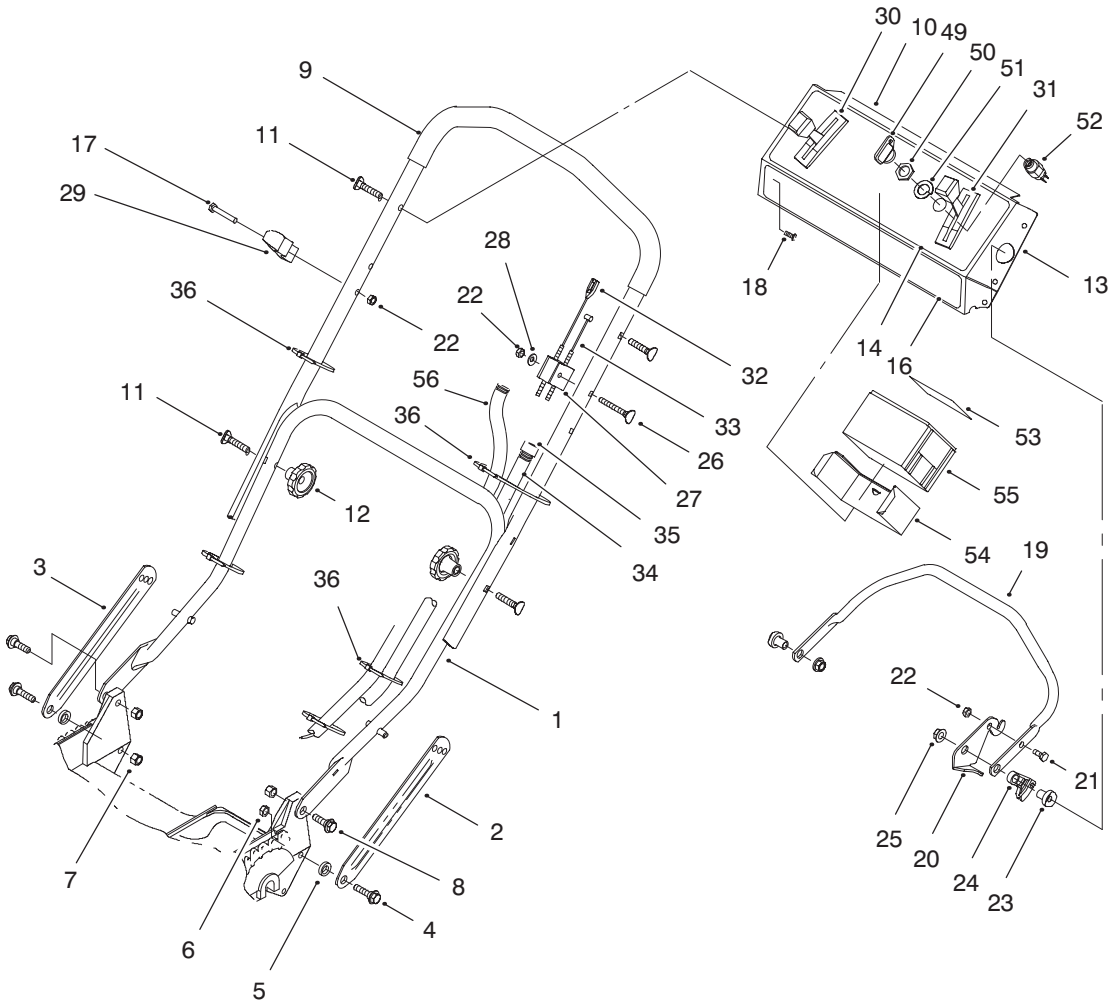


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43–1362–05	Handle – Lower Asm.	1
2	84–8361	Latch – Handle L.H.	1
3	84–8401	Latch – Handle R.H.	1
4	27–7210	Screw – Shoulder	2
5	3–3287	Spacer	2
6	3296–47	Nut – Lock	1
7	3296–72	Nut – Lock Nylon	3
8	27–7211	Screw – Shoulder	2
9	94–4922	Handle Asm.	1
10	93–6655	Decal – Danger, Panel	1
11	92–2260	Screw – Handle	4
12	19–4050	Knob	2
13	16–8759	Panel – Control (Incl. Ref. #10,14)	1
14	93–6660	Decal – Instructiion	1
16	92–7862	Decal – Panel, Toro	1
17	321–52	Screw – HH	1
18	92–9665	Screw	5
19	52–7430–05	Bar – Control	1
20	66–5351	Lever – Control	1
21	321–39	Screw – HH	1
22	3296–73	Nut – Lock, Insert	3
23	49–1630	Spacer – Support	2

Ref. No.	Part No.	Description	No. Used
24	46–5520	Lever – Traction	1
25	3296–74	Nut – Flange, Nylon	2
26	92–2269	Screw – Handle	1
27	46–6980	Support – Cable	1
28	3256–1	Washer – Flat	1
29	93–7383	Guide – Rope	1
30	76–2712	Control – Speed	1
31	74–3892	Control – Throttle	1
32	76–4331	Cable – Brake	1
33	46–5481	Cable – Traction	1
34	46–6440	Cover – Cables	1
35	2412–50	Clip – Tubing	3
36	3290–378	Tie – Cable	5
49	63–8360	Key – Ignition	1
50	218–461	Nut – HH	1
51	3254–5	Washer – Lock	1
52	46–5780	Switch – Starter (Incl. Ref. #50,51)	1
53	93–6668	Decal – Battery	1
54	55–8180	Retainer – Battery	1
55	55–7520	Battery – Pack	1
56	80–4796	Wire Harness	1
*	22–4710	Charger – Battery	1

PROTOTYPE

*Not Illustrated

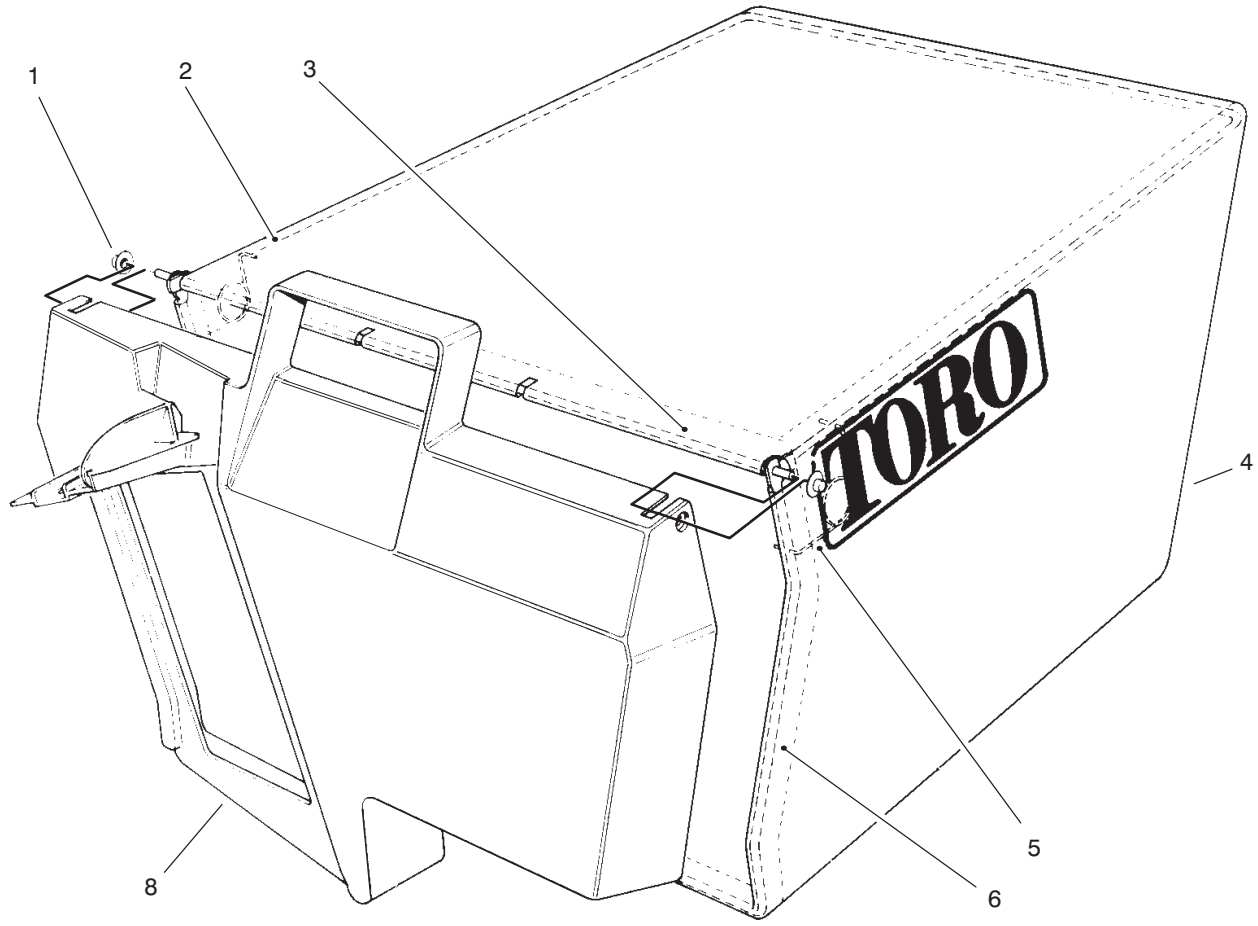


C–1839

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290–422	Nut – Push	2
2	42–4030	Bag Frame – Upper	1
3	33–4820	Hinge – Bag Door	1
4	8–2759	Bag – Grass	1
5	36–6910	Spring	2
6	42–4020	Frame – Bag	1
8	37–1393	Door – Grass Bag	1

PROTOTYPE

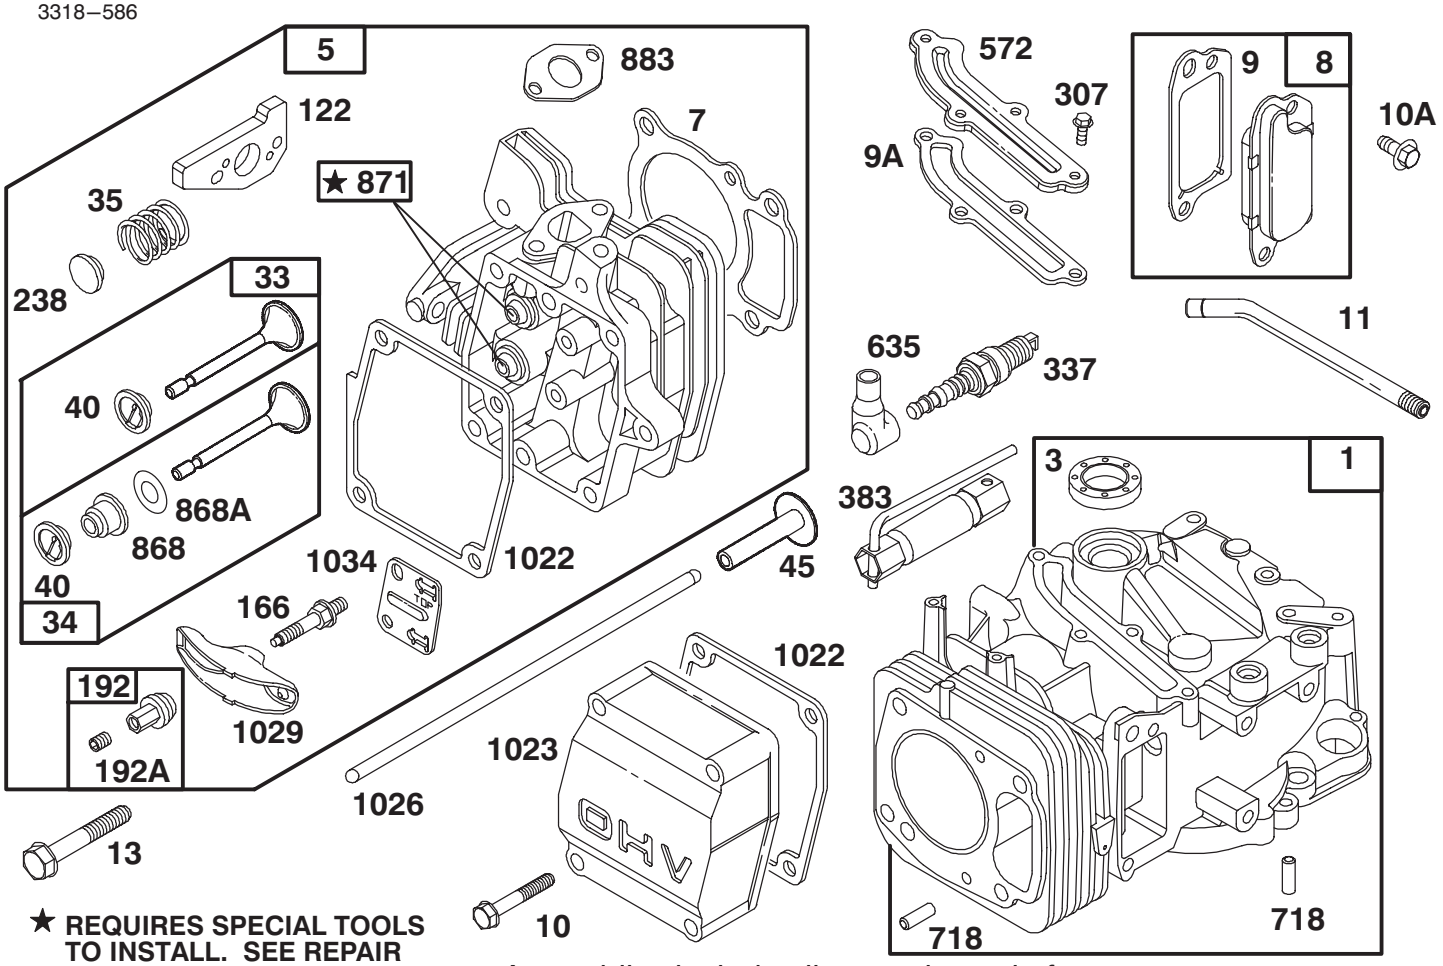

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

T–0323


ENGINE GTS 150 OHV

Ref. No.	Part No.	Description	No. Used
1	77–7590	Cylinder	1
★3	77–9060	Seal – Oil	1
5	77–7730	Head – Cylinder	1
★7	77–7740	Gasket – Cylinder Head	1
8	77–9300	Breather Assy.	1
★9	77–9250	Gasket – Breather	1
★9A	77–7410	Gasket – Breather	1
10	77–7360	Screw – Hex. Head (Valve Cover)	1
10A	77–9200	Screw – Hex. Head	1
11	77–9410	Tube – Breather	1
13	94–1675	Screw – Cylinder Head	1
33	77–7860	Valve – Exhaust	
34	77–7880	Valve – Intake	1
35	77–7810	Spring – Valve	1
40	77–7870	Retainer – Spring	1
45	77–7610	Tappet – Valve	1
●122	77–7820	Spacer–Carburetor	1
166	77–7780	Stud – Rocker Arm	1

Ref. No.	Part No.	Description	No. Used
192	77–7910	Ball & Screw–Rocker Arm	1
192A	77–9310	Screw – Set	1
238	77–7800	Cap – Valve	1
307	77–7420	Screw – Breather Cover	1
337	77–7330	Plug – Spark	1
383	94–1664	Wrench – Spark Plug	1
572	77–7400	Cover – Breather	1
635	77–7340	Elbow – Spark Plug	1
718	77–7600	Pin – Cylinder	1
★868	94–1669	Seal Assy. – Valve	1
★868A	77–7900	Seal – Valve	1
871	77–7850	Bushing – Guide	1
★883	77–7760	Gasket – Exhaust	1
★1022	77–7320	Gasket – Rocker Cover	1
1023	77–9320	Cover – Valve	1
1026	77–7620	Rod – Push	1
1029	77–7790	Arm – Rocker	1
1034	77–7770	Guide – Push Rod	1

PROTOTYPE

★ Included in Gasket Set–Part No. 77–8900.
● Included in Carburetor Overhaul Kit–Part No. 77–9580.

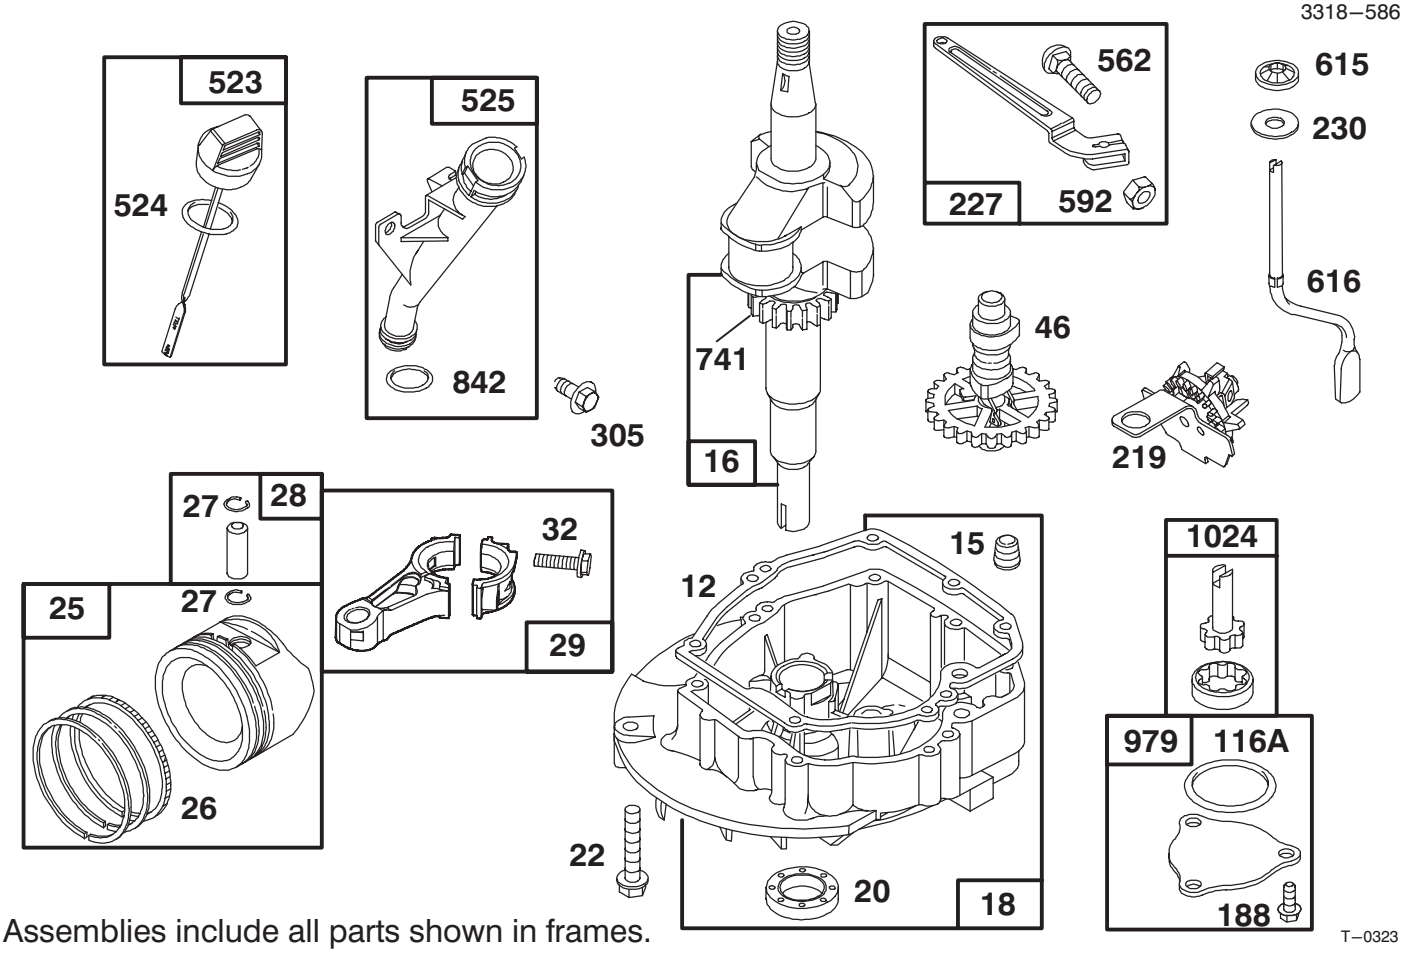

Assemblies include all parts shown in frames.

T–0323

ENGINE GTS 150 OHV


Ref. No.	Part No.	Description	No. Used
★12	77–7550	Gasket – Engine Base	1
15	77–9590	Plug – Pipe	1
16	77–7520	Crankshaft	
		Note: Use Part # 77–7540	
		For Timing Gear Key.	1
18	77–7560	Base – Engine	1
★20	77–7570	Seal – Oil	1
22	77–9070	Screw – Engine Base	
		Note: 77–9080 Screw –	
		Engine Base (Used in	
		Hole Nearest Breather)	1
25	77–7690	Piston Assy. (Std.)	1
26	77–7700	Ring Set (Std.)	1
27	77–7710	Lock – Piston Pin	1
28	77–9340	Pin Assy. – Piston	1
29	77–7670	Rod – Connecting	1
32	77–9350	Screw – Connecting Rod	1
46	77–7490	Gear – Cam	1
★116A	77–7660	O-Ring	1

Ref. No.	Part No.	Description	No. Used
188	94–1652	Screw – Hex. Head	1
219	77–7500	Gear – Governor	1
227	77–7370	Lever Assy. – Governor	1
230	77–7470	Washer	1
305	77–8310	Screw – Hex. Head	1
523	77–7260	Dipstick – Oil	1
★524	77–7270	Seal – O-Ring	1
525	77–7280	Tube – Oil Filler	1
562	94–1670	Bolt – Governor Lever	1
592	94–1671	Nut – Hex.	1
615	77–7480	Pushnut	1
616	77–7460	Crank – Governor	1
741	77–7530	Gear – Timing	1
★842	77–7300	Seal – O-Ring	1
979	77–7650	Cover – Oil Pump	1
1024	77–7640	Pump – Oil	1

PROTOTYPE

★ Included in Gasket Set–Part No. 77–8900.

3318–586

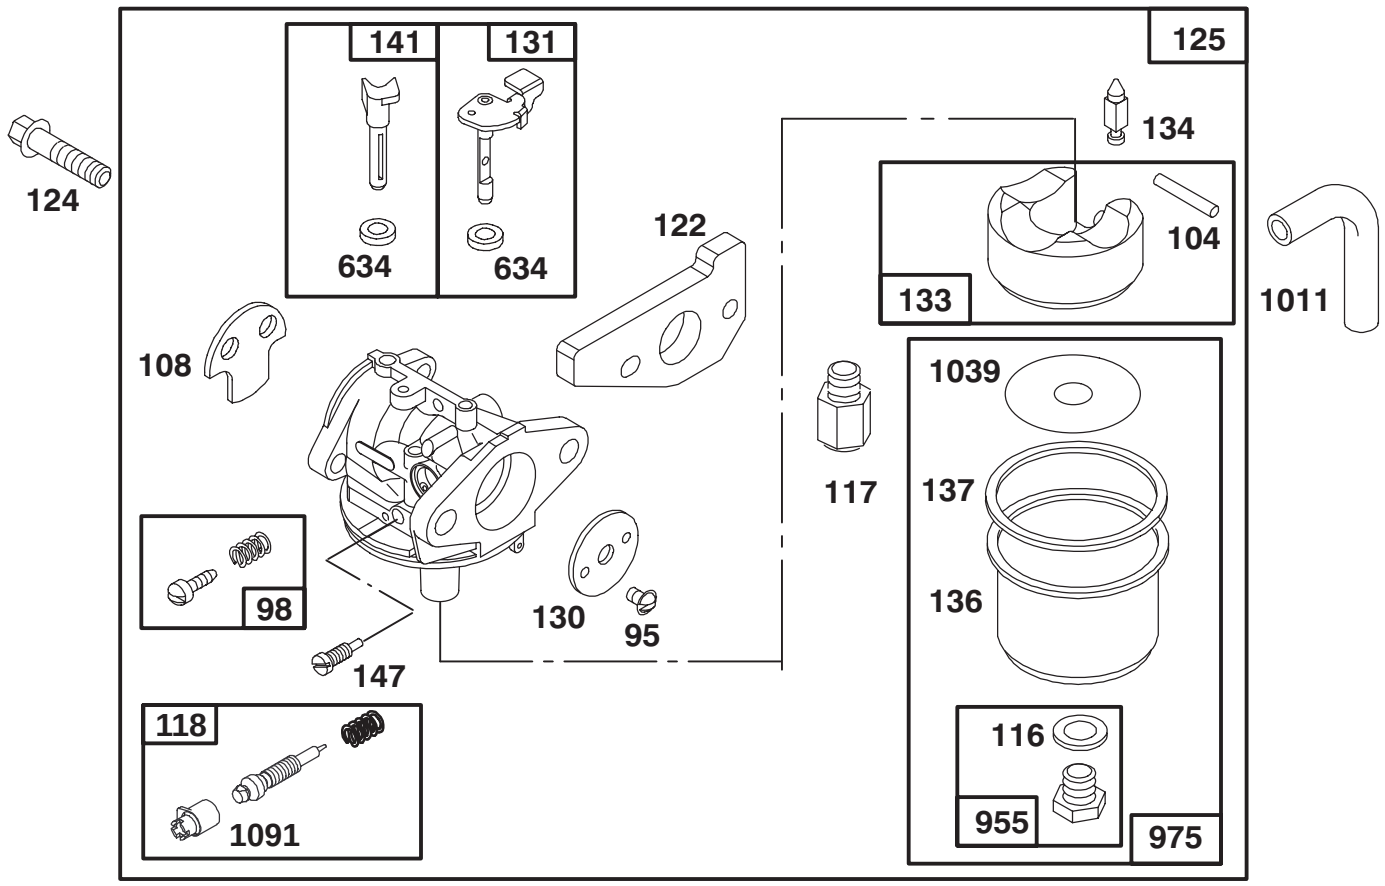

Assemblies include all parts shown in frames.

T–0323

ENGINE GTS 150 OHV


Ref. No.	Part No.	Description	No. Used
95	77–8090	Screw – Slotted	1
98	77–8240	Screw – Idle Speed	1
●104	77–8180	Pin – Float Hinge	1
108	77–9600	Valve – Choke	1
●◆116	77–8210	Gasket – Sealing	1
117	94–1672	Jet – Main	
		Note: 94–1650 Jet–Main (High Altitude)	1
●118	77–9620	Valve – Idle Adjust	1
●122	77–7820	Spacer–Carburetor	1
124	77–7970	Screw – Hex. Hd.	1
125	77–9630	Carburetor	1
130	77–8080	Valve – Throttle	1
131	77–8160	Shaft – Throttle	1
133	77–8170	Float – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	77–8110	Valve – Inlet (Includes Seat)	1
136	77–7240	Bowl – Fuel	1
●◆137	77–8200	Gasket – Float Bowl	1
141	77–8130	Shaft – Choke	1
●147	77–9640	Jet – Pilot	1
◆634	77–8150	Washer – Seal	1
955	77–8220	Screw – Hex. Head	1
975	77–8190	Bowl Assy. – Carburetor	1
1011	77–8040	Tube – Vent	1
●1039	77–7250	Limiter – Float	1
†●1091	77–9650	Cap – Limiter	1

PROTOTYPE

●Included in Carburetor Overhaul Kit–Part No. 77–9580.
◆Included in Carburetor Gasket Set–Part No. 77–8930.

† Must be serviced by (Briggs & Stratton) authorized Toro Dealer/Distributor.

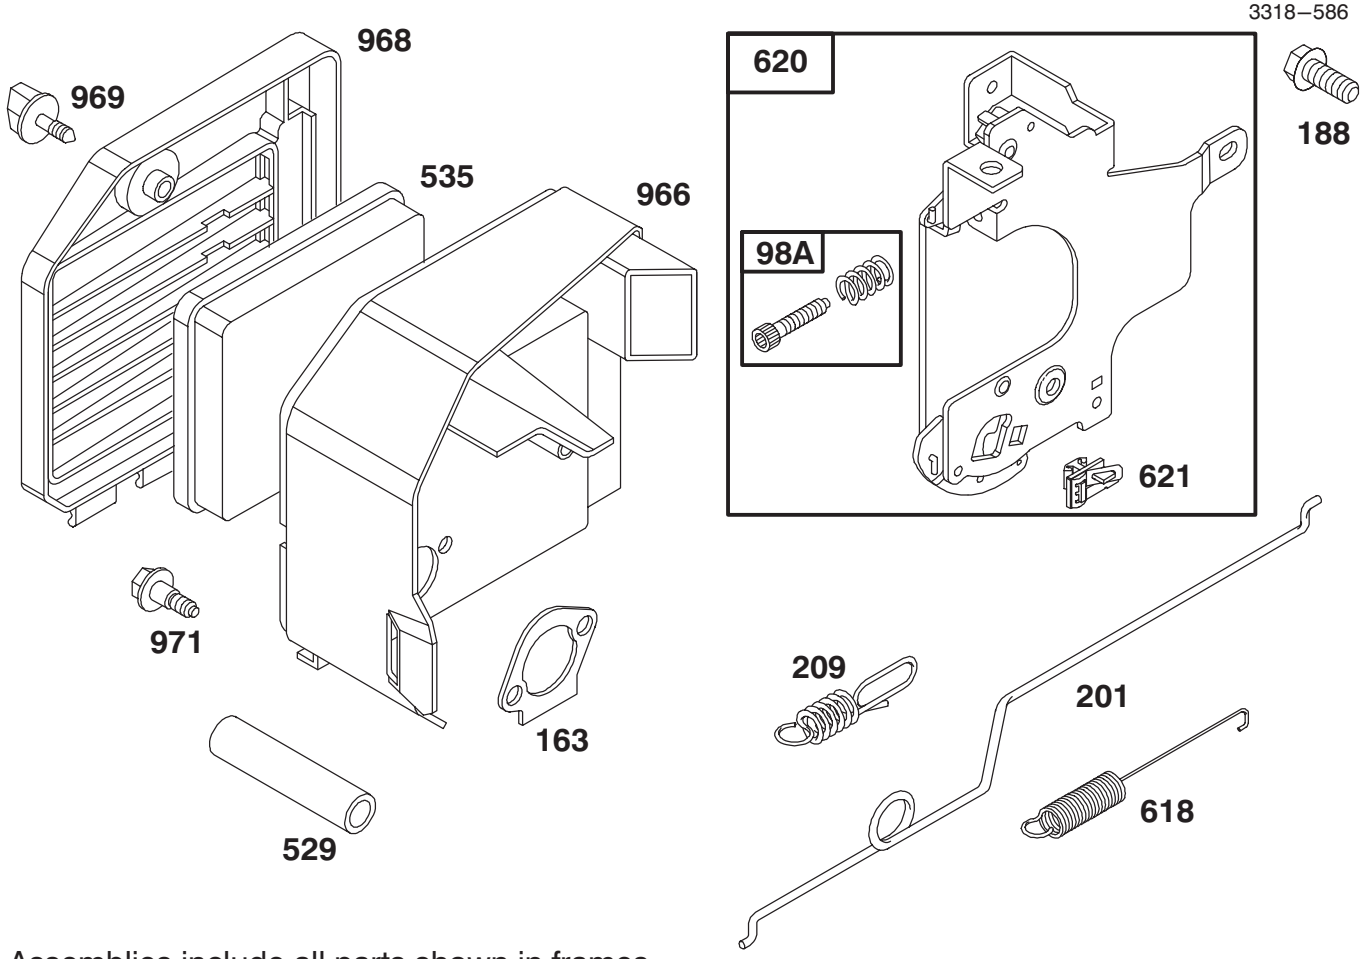

Assemblies include all parts shown in frames.

T–0323


ENGINE GTS 150 OHV

Ref. No.	Part No.	Description	No. Used
98A	77–8020	Screw Assy. – Speed Adj.	1
★163	77–7960	Gasket – Air Cleaner	1
188	94–1652	Screw – Hex. Head	1
201	77–7980	Link – Governor	1
209	77–7990	Spring – Governor	1
529	77–9470	Tube – Breather	1
535	77–7950	Element – Filter	
		Note: 77–9010 Element – Paper (Optional)	1

Ref. No.	Part No.	Description	No. Used
618	77–8140	Spring – Choke	1
620	77–8000	Bracket – Carburetor	1
621	77–8010	Switch – Stop	1
966	77–7940	Base – Air Cleaner	1
968	77–7040	Cover – Air Cover	1
969	77–7920	Screw – Air Cleaner	1
971	77–7930	Screw – Air Cleaner	1

PROTOTYPE

★ Included in Gasket Set–Part No. 77–8900.

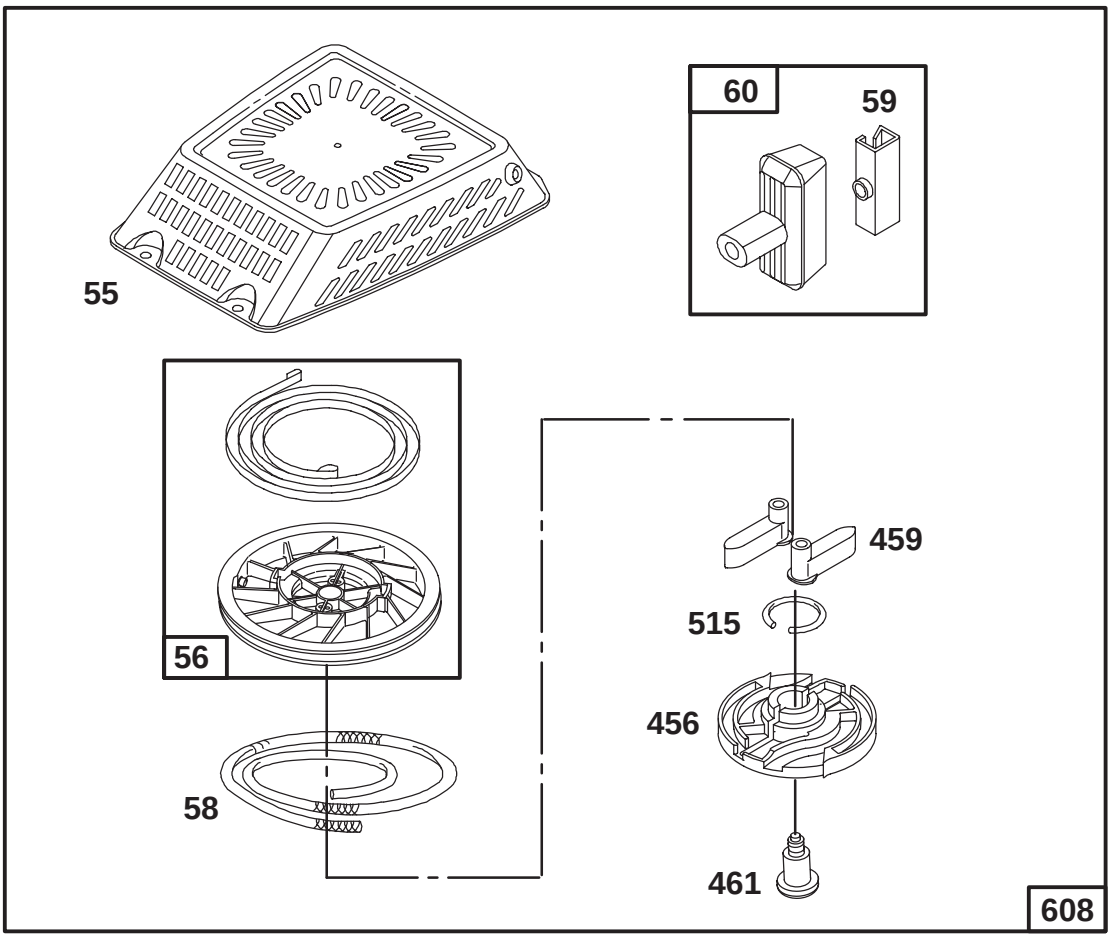


Assemblies include all parts shown in frames.

ENGINE GTS 150 OHV

Ref. No.	Part No.	Description	No. Used
55	94–1666	Housing – Rewind Starter	1
56	94–1657	Pulley – Rewind Starter	1
58	94–1668	Rope – Rewind Starter	1
59	77–7210	Insert – Rewind Handle	1
60	77–8510	Handle – Rewind Starter	1
65	77–8300	Screw – Hex. Hd.	1
456	94–1659	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	94–1654	Pawl – Starter	1
461	94–1660	Screw – Rewind Starter	1
515	94–1655	Spring – Torsion	1
608	77–8450	Starter Assy. – Rewind	1

PROTOTYPE

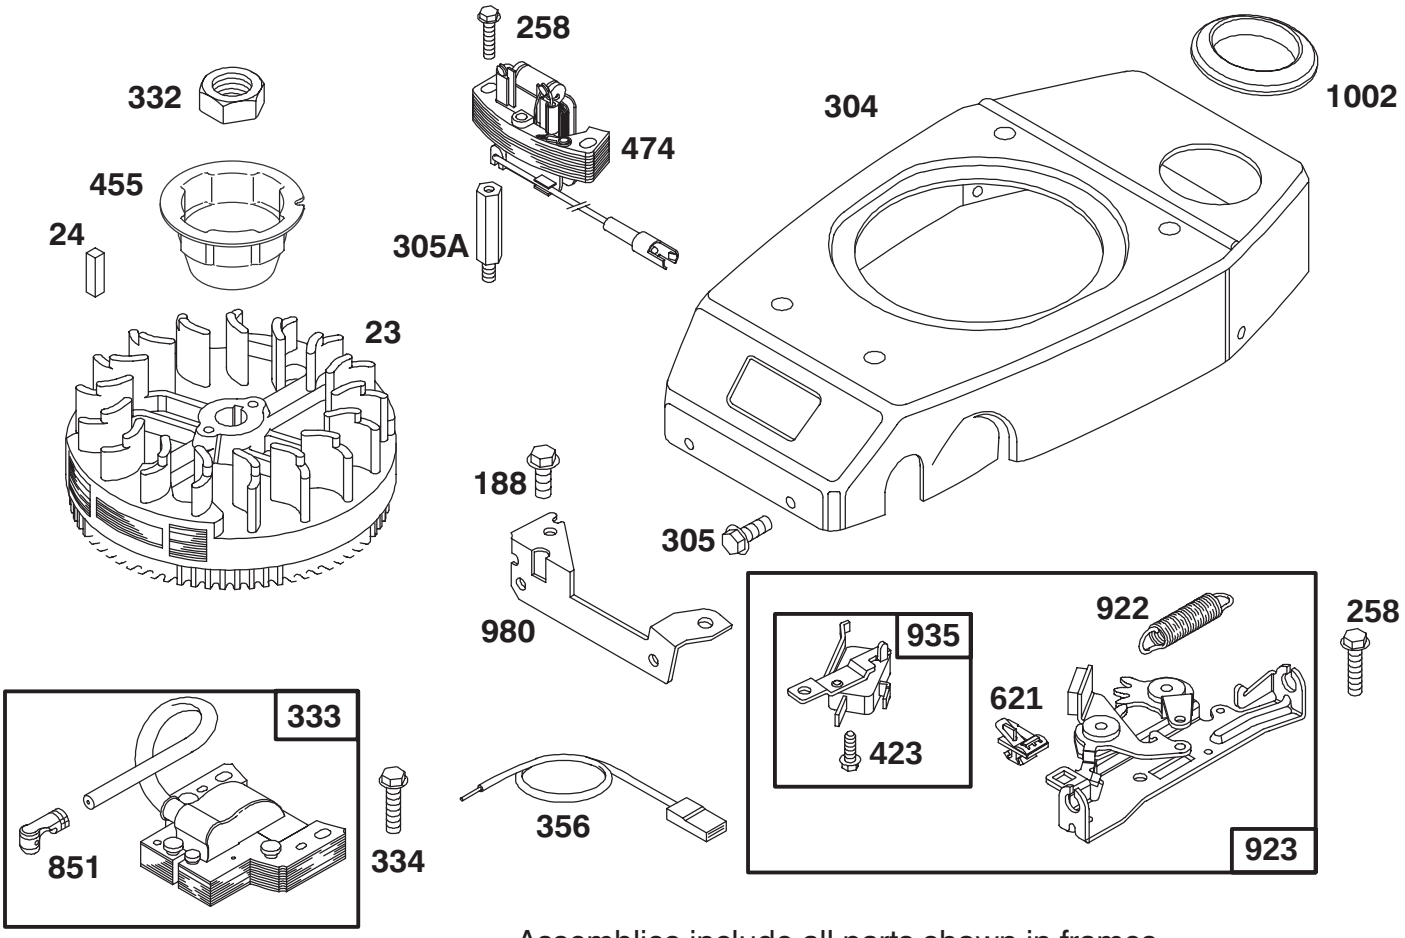


Assemblies include all parts shown in frames. T–0323

ENGINE GTS 150 OHV

Ref. No.	Part No.	Description	No. Used
23	77–8320	Flywheel – Magneto	1
24	77–8340	Key – Flywheel	1
188	94–1652	Screw – Hex. Head	1
258	77–8870	Screw – Hex. Head	1
304	77–9480	Housing – Blower	1
305	77–8310	Screw – Hex. Head	1
305A	77–8390	Stud – Stator Mounting	1
332	94–1673	Nut – Flywheel	1
333	77–8420	Armature – Magneto	1
334	77–9420	Screw – Armature Mtg.	1
356	77–8400	Wire – Ground	1

Ref. No.	Part No.	Description	No. Used
423	77–9520	Screw – Hex.	1
455	94–1653	Cup – Starter	1
474	77–8370	Stator Assembly	1
621	77–8010	Switch – Stop	1
851	77–9450	Terminal – Spark Plug	1
922	94–1663	Spring – Brake	1
923	77–9460	Brake Assembly	1
935	77–9530	Switch – Interlock	1
980	77–7140	Bracket – Blower Housing	1
1002	77–7180	Grommet	1

PROTOTYPE

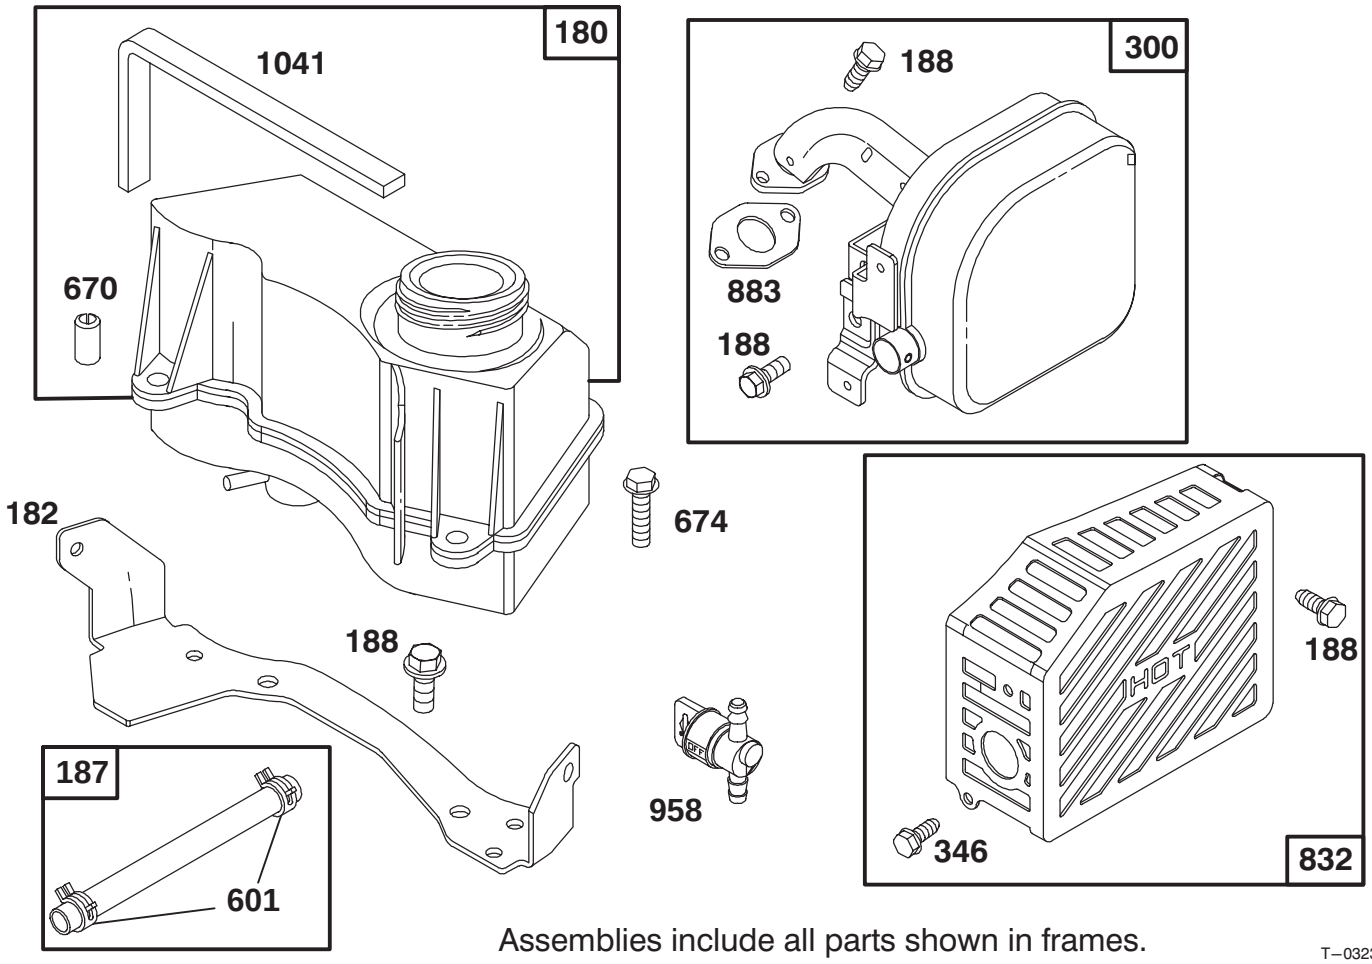

Assemblies include all parts shown in frames.

T–0323


ENGINE GTS 150 OHV

Ref. No.	Part No.	Description	No. Used
180	77–8580	Tank Assy. – Fuel	1
182	77–7170	Bracket – Fuel Tank	1
187	78–4100	Hose – Fuel (2 Pieces, Cut To Required Length)	1
188	94–1652	Screw – Hex	1
300	77–8640	Muffler – Exhaust	1
346	94–1674	Screw – Hex.	1

Ref. No.	Part No.	Description	No. Used
601	78–4690	Clamp – Fuel Hose	1
670	77–9030	Spacer – Fuel Tank	1
674	77–8600	Screw – Tank Mtg.	1
832	77–9290	Guard – Muffler	1
★883	77–7760	Gasket – Exhaust	1
958	77–9440	Valve–Shut-Off	1
★1041	77–8590	Seal – Foam	1

PROTOTYPE

★ Included in Gasket Set–Part No. 77–8900.

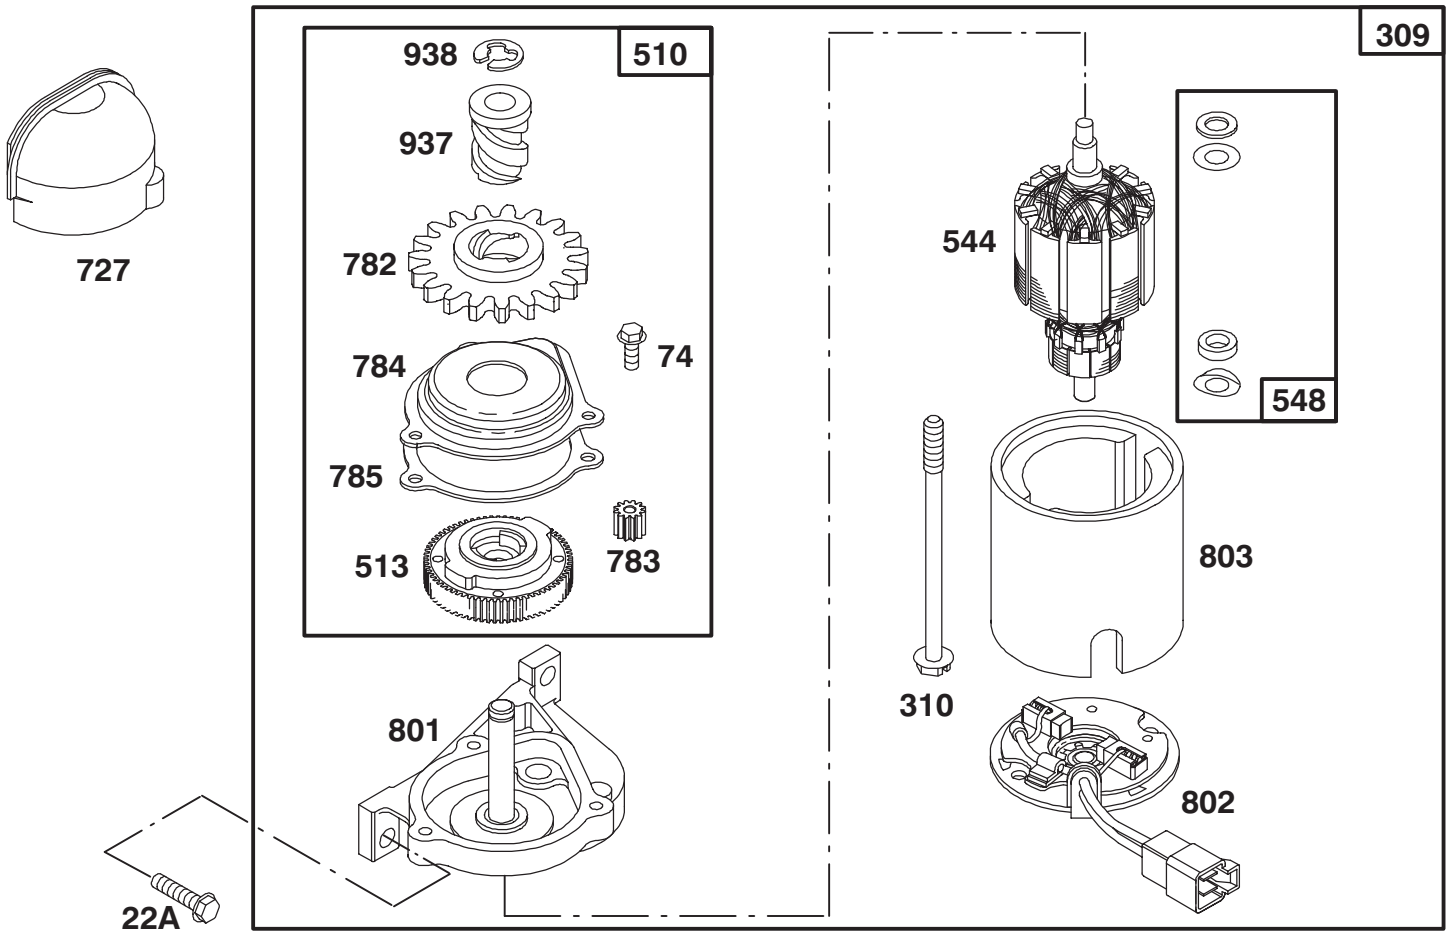

Assemblies include all parts shown in frames.


T–0323


ENGINE GTS 150 OHV


Ref. No.	Part No.	Description	No. Used
22A	77–8720	Screw – Hex. Head	1
74	77–7420	Screw – Hex. Head	1
309	77–8670	Motor – Starter	1
310	77–8710	Screw – Hex. Head	1
510	77–8910	Drive Kit	1
513	77–8770	Clutch Assembly	1
544	77–8730	Armature Assembly	1
548	77–8740	Washer Set	1
727	77–7200	Cover–Starter Drive	1

Ref. No.	Part No.	Description	No. Used
782	77–8810	Pinion – Starter	1
783	77–8760	Gear – Pinion	1
784	77–8780	Cover – Gear	1
785	77–8790	Gasket – Cover	1
801	77–8680	Bracket Assembly	1
802	77–8690	Head Assembly	1
803	77–8700	Shell and Magnet Assy.	1
937	77–8820	Spline – Starter	1
938	77–8830	Retainer – Lock	1

PROTOTYPE

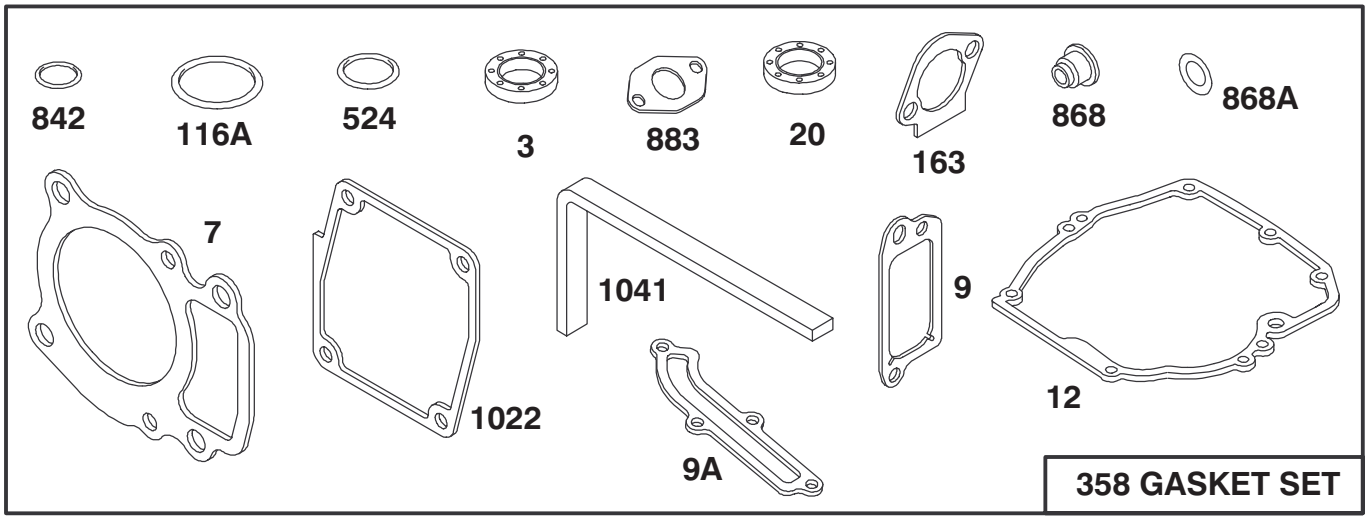

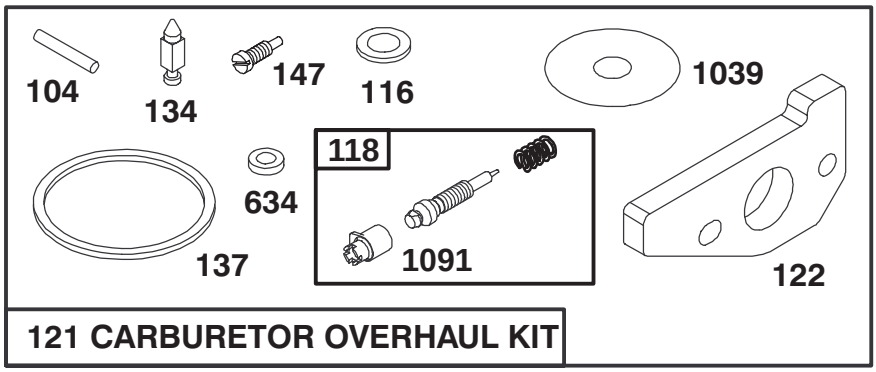

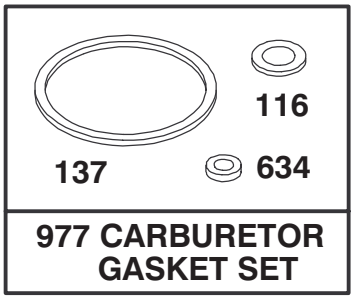

Assemblies include all parts shown in frames.

T–0323

ENGINE GTS 150 OHV

Ref. No.	Part No.	Description	No. Used
★3	77–9060	Seal – Oil	1
★7	77–7740	Gasket – Cylinder Head	1
★9	77–9250	Gasket – Breather	1
★9A	77–7410	Gasket – Breather	1
★12	77–7550	Gasket – Engine Base	1
★20	77–7570	Seal – Oil	1
●104	77–8180	Pin – Float Hinge	1
●◆116	77–8210	Gasket – Sealing	1
★116A	77–7660	O-Ring	1
●118	77–9620	Valve – Idle Adjust	1
121	77–9580	Carburetor Overhaul Kit	1
●122	77–7820	Adapter Assembly	1
●134	77–8110	Valve – Inlet (Includes Seat)	1
●◆137	77–8200	Gasket – Float Bowl	1

Ref. No.	Part No.	Description	No. Used
●147	77–9640	Jet – Pilot	1
★163	77–7960	Gasket – Air Cleaner	1
358	77–8900	Gasket Set	1
★524	77–7270	Seal – O-Ring	1
◆634	77–8150	Washer – Seal	1
★842	77–7300	Seal – O-Ring	1
★868	77–7890	Seal Assy. – Valve	1
★868A	77–7900	Seal – Valve	1
★883	77–7760	Gasket – Exhaust	1
977	77–8930	Gasket Set – Carburetor	1
★1022	77–7320	Gasket – Rocker Cover	1
●1039	77–7250	Limiter – Float	1
★1041	77–8590	Seal – Foam	1
†●1091	77–9650	Cap – Limiter	1

PROTOTYPE

● Included in Carburetor Overhaul Kit–Part No. 77–9580.
◆ Included in Carburetor Gasket Set–Part No. 77–8930.
★ Included in Gasket Set–Part No. 77–8900.
† Must be serviced by (Briggs & Stratton) authorized Toro Dealer/Distributor.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–3287	Spacer	6	5	2
3–5792	Washer	2	40	1
8–2759	Bag – Grass	7	4	1
14–9949	8 Wheel & Tire Asm.	1	25	2
14–9959	Wheel Tire & Gear Assy.	4	31	2
16–8759	Panel – Control	6	13	1
19–4050	Knob	6	12	2
22–4710	Charger – Battery	6	*	1
25–7740	Knob – Arm	4	3	2
25–7740	Knob – Arm	1	21	2
26–0670	Bolt – Blade	3	15	1
27–6232	Bolt – Wheel	4	33	2
27–6232	Bolt – Wheel HH	1	26	2
27–6250	Bushing – Wheel	4	32	4
27–6250	Bushing – Wheel	2	45	2
27–7210	Screw – Shoulder	6	4	2
27–7211	Screw – Shoulder	6	8	2
29–9570	Bushing – Yoke	4	38	1
33–3208	Rod – Shield	1	16	1
33–4820	Hinge – Bag Door	7	3	1
36–4780	Washer – Thrust	4	44	1
36–4791	Washer – Thrust	5	48	2
36–6910	Spring	7	5	2
37–1393	Door – Grass Bag	7	8	1
37–7260	Screw – Tap	1	31	1
37–7262	Screw – Special	2	42	1
38–7820	Bearing – Ball	5	60	1
40–1940	Washer	1	19	4
42–3520	Cap – End	4	5	2
42–4020	Frame – Bag	7	6	1
42–4030	Bag Frame – Upper	7	2	1
43–1362–05	Handle – Lower Asm.	1	6	1
44–0580	Shield – Trailing	1	15	1
46–5400	Shield – Front	2	39	1
46–5481	Cable – Traction	6	33	1
46–5520	Lever – Traction	6	24	1
46–5780	Switch – Starter	6	52	1
46–6440	Cover – Cables	6	34	1
46–6810	Screw – HWH	1	14	1
46–6811	Screw – HWH	1	13	3
46–6980	Support – Cable	6	27	1
46–7030	Retainer – Cable	1	29	1
46–8090	Screw – Tapping	2	36	2
48–2060	Bearing –Needle	4	21	2
49–1630	Spacer – Support	6	23	2
49–2040	Screw – HH	4	8	6
49–2040	Screw – HH	2	34	2
52–7430–05	Bar – Control	6	19	1
55–3760	Gear – Pinion 15T	5	49	1
55–3770	Gear – 49T (1st Gear)	5	58	1
55–3780	Gear – Pinion 20T	5	50	1
55–3790	Gear – 44T (2nd Gear)	5	57	1
55–3800	Gear – Pinion 25T	5	51	1
55–3810	Gear – 39T (3rd Gear)	5	56	1
55–7520	Battery – Pack	6	55	1
55–8180	Retainer – Battery	6	54	1
60–8710	Case – Gear (Upper)	5	61	1
60–8730	Cover – Gear Case	5	46	1
60–8750	Bushing – Intrmdt. Shaft	5	47	2
60–8770	Bushing – Output Shaft	5	45	1
60–8790	Sleeve – Gear	5	55	1
60–8800	Shaft – Intermediate	5	52	1
60–8810	Retainer – Shift Fork	4	39	1
60–8821	Lever – Shift	4	16	1
60–8840	Pulley – Half	4	10	2
60–8850	Bushing – Output Shaft	5	53	1
60–8870	Yoke – Shift	4	37	1
60–8890	Pinion – Bevel	5	59	1
62–3900	V–Belt	4	13	1
62–4320	Bracket – Guide, Belt	1	33	1
62–6660	Spacer	4	9	1
62–6673	Gear Case Assy. Complete	5	*	1
62–6673	Gearcase Asm.	1	32	1
62–7550	Pulley – Driver	3	10	1
63–8360	Key – Ignition	6	49	1
63–8701–03	Pivot Arm Assembly	4	2	2
63–8721	Spring Arm Assembly	4	4	2
65–2720	Ring – Retaining	4	24	4
65–4710	Ring – Friction	4	25	2
65–4720	Spring – Compression	4	29	2
65–4730	Washer – Thrust (Inner)	4	22	2
65–4740	Washer – Thrust (Keyed)	4	23	4
65–4750	Pinion	4	28	2
65–4760	Washer –Clutch	4	26	2
65–4770	Shaft – Output	4	17	1
65–5250	Clip – Spring	4	43	1
66–0541	Front Spring Arm Asm.	1	20	2
66–0560	Screw – Shoulder	1	24	2
66–0570	Guide – Belt	3	9	1
66–0580–03	Arm – Pivot	1	23	2
66–5351	Lever – Control	6	20	1
66–6040	Key – Rocking (R.H.)	4	*	1
66–6050	Key – Rocking (L.H.)	4	27	1
70–9760	Bushing – Sleeve	4	19	2
71–9350	Spring – Bracket	2	38	1
74–1660	Cover – Wheel	4	30	2
74–1670	Spacer – Wheel Cover	4	34	2
74–3892	Control – Throttle	6	31	1
76–0760	Key – Shift	4	41	2
76–0770	Collar – Shift	4	42	1
76–0780	Sleeve – Shift Key	4	40	1
76–2712	Control – Speed	6	30	1
76–4331	Cable – Brake	6	32	1
76–4640	Latch – Discharge Plug	2	48	1
76–4650	Grip – Latch	2	47	1
76–4660	Spring – Extension	2	35	1
77–0502	Plug – Discharge Asm.	2	46	1
77–7040	Cover – Air Cover	11	968	1
77–7140	Bracket – Blower Housing	13	980	1
77–7170	Bracket – Fuel Tank	14	182	1
77–7180	Grommet	13	1002	1
77–7200	Cover–Starter Drive	15	727	1
77–7210	Insert – Rewind Handle	12	59	1
77–7240	Bowl – Fuel	10	136	1
77–7250	Limiter – Float	10	1039	1
77–7250	Limiter – Float	16	1039	1
77–7260	Dipstick – Oil	9	523	1
77–7270	Seal – O-Ring	16	524	1
77–7270	Seal – O-Ring	9	524	1
77–7280	Tube – Oil Filler	9	525	1
77–7300	Seal – O-Ring	16	842	1
77–7300	Seal – O-Ring	9	842	1
77–7320	Gasket – Rocker Cover	16	1022	1
77–7320	Gasket – Rocker Cover	8	1022	1
77–7330	Plug – Spark	8	337	1
77–7340	Elbow – Spark Plug	8	635	1
77–7360	Screw – Hex. Head	8	10	1
77–7370	Lever Assy. – Governor	9	227	1
77–7400	Cover – Breather	8	572	1
77–7410	Gasket – Breather	16	9A	1
77–7410	Gasket – Breather	8	9A	1
77–7420	Screw – Breather Cover Mtg.	8	307	1
77–7420	Screw – Hex. Head	15	74	1
77–7460	Crank – Governor	9	616	1
77–7470	Washer	9	230	1
77–7480	Pushnut	9	615	1
77–7490	Gear – Cam	9	46	1
77–7500	Gear – Governor	9	219	1
77–7520	Crankshaft	9	16	
77–7530	Gear – Timing	9	741	1
77–7550	Gasket – Engine Base	16	12	1
77–7550	Gasket – Engine Base	9	12	1
77–7560	Base – Engine	9	18	1
77–7570	Seal – Oil	16	20	1

PROTOTYPE

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
77–7570	Seal – Oil	9	20	1
77–7590	Cylinder	8	1	1
77–7600	Pin – Cylinder	8	718	1
77–7610	Tappet – Valve	8	45	1
77–7620	Rod – Push	8	1026	1
77–7640	Pump – Oil	9	1024	1
77–7650	Cover – Oil Pump	9	979	1
77–7660	O-Ring	16	116A	1
77–7660	O-Ring	9	116A	1
77–7670	Rod – Connecting	9	29	1
77–7690	Piston Assy. (Std.)	9	25	1
77–7700	Ring Set (Std.)	9	26	1
77–7710	Lock – Piston Pin	9	27	1
77–7730	Head – Cylinder	8	5	1
77–7740	Gasket – Cylinder Head	16	7	1
77–7740	Gasket – Cylinder Head	8	7	1
77–7760	Gasket – Exhaust	14	883	1
77–7760	Gasket – Exhaust	16	883	1
77–7760	Gasket – Exhaust	8	883	1
77–7770	Guide – Push Rod	8	1034	1
77–7780	Stud – Rocker Arm	8	166	1
77–7790	Arm – Rocker	8	1029	1
77–7800	Cap – Valve	8	238	1
77–7810	Spring – Valve	8	35	1
77–7820	Adapter Assembly	16	122	1
77–7820	Spacer–Carburetor	10	122	1
77–7820	Spacer–Carburetor	8	122	1
77–7850	Bushing – Guide	8	871	1
77–7860	Valve – Exhaust	8	33	
77–7870	Retainer – Spring	8	40	1
77–7880	Valve – Intake	8	34	1
77–7890	Seal Assy. – Valve	16	868	1
77–7900	Seal – Valve	16	868A	1
77–7900	Seal – Valve	8	868A	1
77–7910	Ball & Screw – Rocker Arm	8	192	1
77–7920	Screw – Air Cleaner	11	969	1
77–7930	Screw – Air Cleaner	11	971	1
77–7940	Base – Air Cleaner	11	966	1
77–7950	Element – Filter	11	535	
77–7960	Gasket – Air Cleaner	11	163	1
77–7960	Gasket – Air Cleaner	16	163	1
77–7970	Screw – Hex. Hd.	10	124	1
77–7980	Link – Governor	11	201	1
77–7990	Spring – Governor	11	209	1
77–8000	Bracket – Carburetor	11	620	1
77–8010	Switch – Stop	11	621	1
77–8010	Switch – Stop	13	621	1
77–8020	Screw Assy. – Speed Adj.	11	98A	1
77–8040	Tube – Vent	10	1011	1
77–8080	Valve – Throttle	10	130	1
77–8090	Screw – Slotted	10	95	1
77–8110	Valve – Inlet	10	134	
77–8110	Valve – Inlet	16	134	
77–8130	Shaft – Choke	10	141	1
77–8140	Spring – Choke	11	618	1
77–8150	Washer – Seal	10	634	1
77–8150	Washer – Seal	16	634	1
77–8160	Shaft – Throttle	10	131	1
77–8170	Float – Carburetor	10	133	1
77–8180	Pin – Float Hinge	10	104	1
77–8180	Pin – Float Hinge	16	104	1
77–8190	Bowl Assy. – Carburetor	10	975	1
77–8200	Gasket – Float	10	137	
77–8200	Gasket – Float	16	137	
77–8210	Gasket – Sealing	10	116	1
77–8210	Gasket – Sealing	16	116	1
77–8220	Screw – Hex. Head	10	955	1
77–8240	Screw – Idle Speed	10	98	1
77–8300	Screw – Hex. Hd.	12	65	1
77–8310	Screw – Hex. Head	13	305	1
77–8310	Screw – Hex. Head	9	305	1
77–8320	Flywheel – Magneto	13	23	1
77–8340	Key – Flywheel	13	24	1
77–8370	Stator Assembly	13	474	1
77–8390	Stud – Stator Mounting	13	305A	1
77–8400	Wire – Ground	13	356	1
77–8420	Armature – Magneto	13	333	1
77–8450	Starter Assy. – Rewind	12	608	1
77–8510	Handle – Rewind Starter	12	60	1
77–8580	Tank Assy. – Fuel	14	180	1
77–8590	Seal – Foam	16	1041	1
77–8590	Seal – Foam	14	1041	1
77–8600	Screw – Tank Mtg.	14	674	1
77–8640	Muffler – Exhaust	14	300	1
77–8670	Motor – Starter	15	309	1
77–8680	Bracket Assembly	15	801	1
77–8690	Head Assembly	15	802	1
77–8700	Shell and Magnet Assy.	15	803	1
77–8710	Screw – Hex. Head	15	310	1
77–8720	Screw – Hex. Head	15	22A	1
77–8730	Armature Assembly	15	544	1
77–8740	Washer Set	15	548	1
77–8760	Gear – Pinion	15	783	1
77–8770	Clutch Assembly	15	513	1
77–8780	Cover – Gear	15	784	1
77–8790	Gasket – Cover	15	785	1
77–8810	Pinion – Starter	15	782	1
77–8820	Spline – Starter	15	937	1
77–8830	Retainer – Lock	15	938	1
77–8870	Screw – Hex. Head	13	258	1
77–8900	Gasket Set	16	358	1
77–8910	Drive Kit	15	510	1
77–8930	Gasket Set – Carburetor	16	977	1
77–9030	Spacer – Fuel Tank	14	670	1
77–9060	Seal – Oil	16	3	1
77–9060	Seal – Oil	8	3	1
77–9070	Screw – Engine Base	9	22	
77–9200	Screw – Hex. Head	8	10A	1
77–9250	Gasket – Breather	16	9	1
77–9250	Gasket – Breather	8	9	1
77–9290	Guard – Muffler	14	832	1
77–9300	Breather Assy.	8	8	1
77–9310	Screw – Set	8	192A	1
77–9320	Cover – Valve	8	1023	1
77–9340	Pin Assy. – Piston	9	28	1
77–9350	Screw – Connecting Rod	9	32	1
77–9410	Tube – Breather	8	11	1
77–9420	Screw – Armature Mtg.	13	334	1
77–9440	Valve–Shut-Off	14	958	1
77–9450	Terminal – Spark Plug	13	851	1
77–9460	Brake Assembly	13	923	1
77–9470	Tube – Breather	11	529	1
77–9480	Housing – Blower	13	304	1
77–9520	Screw – Hex.	13	423	1
77–9530	Switch – Interlock	13	935	1
77–9550	Cover – Brake	3	16	1
77–9580	Carburetor Overhaul Kit	16	121	1
77–9590	Plug – Pipe	9	15	1
77–9600	Valve – Choke	10	108	1
77–9620	Valve – Idle Adjust	10	118	1
77–9620	Valve – Idle Adjust	16	118	1
77–9630	Carburetor	10	125	1
77–9640	Jet – Pilot	10	147	1
77–9640	Jet – Pilot	16	147	1
77–9650	Cap – Limiter	16	1091	1
77–9650	Cap – Limiter	10	1091	1
78–4100	Hose – Fuel	14	187	1
78–4690	Clamp – Fuel Hose	14	601	1
80–3770	Retainer – Door	1	12	1
80–4796	Wire Harness	6	56	1
82–5680	Bracket – Adj. Trac	1	27	1
82–8780	Retainer – Cable	4	15	1
82–9151	Tunnel – Discharge	1	10	1
82–9910	Cover – Belt	1	30	1

PROTOTYPE

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
84–8361	Latch – Handle L.H.	6	2	1
84–8401	Latch – Handle R.H.	6	3	1
86–7990	Screw – Clamp	3	7	1
92–1720	Kicker – R.H. Front	1	7	1
92–1730	Kicker – L.H. Front	1	8	1
92–1750	Plate – Kicker Rear	1	6	1
92–2260	Screw – Handle	6	11	4
92–2269	Screw – Handle	6	26	1
92–2289	Plate – Logo, Toro	3	3	1
92–7663	Cover – Wheel	5	62	1
92–7856	Decal – HOC	1	17	4
92–7862	Decal – Panel, Toro	6	16	1
92–9665	Screw	6	18	5
93–3154	Plate – Latch	1	11	1
93–4106	Blade – Generation	3	12	1
93–4107	Retainer – Blade	3	11	1
93–4355	Decal – Engine	3	4	1
93–6655	Decal – Danger, Panel	6	10	1
93–6660	Decal – Instructiion	6	14	1
93–6668	Decal – Battery	6	53	1
93–7351	Door – Discharge Asm.	2	37	1
93–7383	Guide – Rope	6	29	1
94–1608	Stiffener – Blade	3	13	1
94–1652	Screw – Hex	14	188	1
94–1652	Screw – Hex. Head	11	188	1
94–1652	Screw – Hex. Head	13	188	1
94–1652	Screw – Hex. Head	9	188	1
94–1653	Cup – Starter	13	455	1
94–1654	Pawl – Starter	12	459	1
94–1655	Spring – Torsion	12	515	1
94–1657	Pulley – Rewind Starter	12	56	1
94–1659	Retainer – Rewind Starter	12	456	1
94–1660	Screw – Rewind Starter	12	461	1
94–1663	Spring – Brake	13	922	1
94–1664	Wrench – Spark Plug	8	383	1
94–1666	Housing – Rewind Starter	12	55	1
94–1668	Rope – Rewind Starter	12	58	1
94–1669	Seal Assy. – Valve	8	868	1
94–1670	Bolt – Governor Lever	9	562	1
94–1671	Nut – Hex.	9	592	1
94–1672	Jet – Main	10	117	1
94–1673	Nut – Flywheel	13	332	1
94–1674	Screw – Hex.	14	346	1
94–1675	Screw – Cylinder Head	8	13	1
94–4922	Handle Asm.	6	9	1
94–5407	Decal – Deck	1	2	1
94–5575	Cap – Fuel Asm.	3	2	1
94–5576	Gasket	3	18	1
94–9166	Housing Assembly	1	1	1
218–461	Nut – HH	6	50	1
2210–249	Clamp – Casting	3	6	1
2210–316	Rope – Stop	3	5	1
237–153	Seal – ORing	4	18	2
2412–50	Clip – Tubing	6	35	3
2412–83	R – Clamp	2	44	1
2412–87	Clamp – Cable	2	41	1
302–56	Fitting – Grease	4	20	2
321–39	Screw – HH	6	21	1
321–52	Screw – HH	6	17	1
3253–22	Washer – Lock	3	14	1
3254–5	Washer – Lock	6	51	1
3256–1	Washer – Flat	6	28	1
3256–24	Washer – Flat	4	12	1
3272–10	Pin – Cotter	4	14	1
3290–378	Tie – Cable	6	36	5
3290–422	Nut – Push	7	1	2
3295–35	Rivet Solid	2	49	1
3296–5	Nut – Lock	4	11	1
3296–6	Nut – Lock	1	18	4
3296–6	Nut – Lock	4	35	2
3296–47	Nut – Lock	6	6	1
3296–72	Nut – Lock Nylon	6	7	3
3296–73	Nut – Lock, Insert	6	22	3
3296–74	Nut – Flange, Nylon	6	25	2
32121–120	Pin – Coil	5	54	1
32144–70	Screw – Hex. Washer Hd.	4	1	1
32144–70	Screw – Tap	3	17	2
32144–70	Screw – Tap	1	28	5
32144–85	Screw – HH	1	22	2
32144–85	Screw – HH	4	36	2
32144–102	Screw	3	8	3
32144–111	Screw – PPH	1	9	6
32144–112	Screw – Thread Form	2	43	1

PROTOTYPE

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

PROTOTYPE

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.