Form No. 3367-586 Rev A

TORO®

Count on it.

Parts Catalog

DH 220 Lawn Tractor

Model No. 74593—Serial No. 311000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


© 2011—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Contents


Frame, Fender, Seat and Fuel Tank Assembly 4
Frame Kit Assembly No. 120-8750 6
Engine and Muffler Assembly 7
Front Axle Assembly 8
Lower Steering Link Assembly 10
Body and Hood Assembly 12
Operation - Brake and Bypass Assembly 14
Operation - Travel Pedal Assembly 15
Rear Wheel and Transaxle Assembly 16
Transaxle Assembly No. 121-0900 18
Grass Collector Assembly 20
Tunnel Assembly 21
Deck, Spindle and Blade Assembly 22
Rear Baffle and Bag on Demand Assembly 24
Cutting Pan and Drive System Assembly 26
Mower Lift Assembly 28
Battery and Electrical Harness Assembly 29
Electrical Switch Assembly No. 1 30
Electrical Switch Assembly No. 2 31
Electrical Switch Assembly No. 3 32
Attachments and Accessories 33

Frame, Fender, Seat and Fuel Tank Assembly

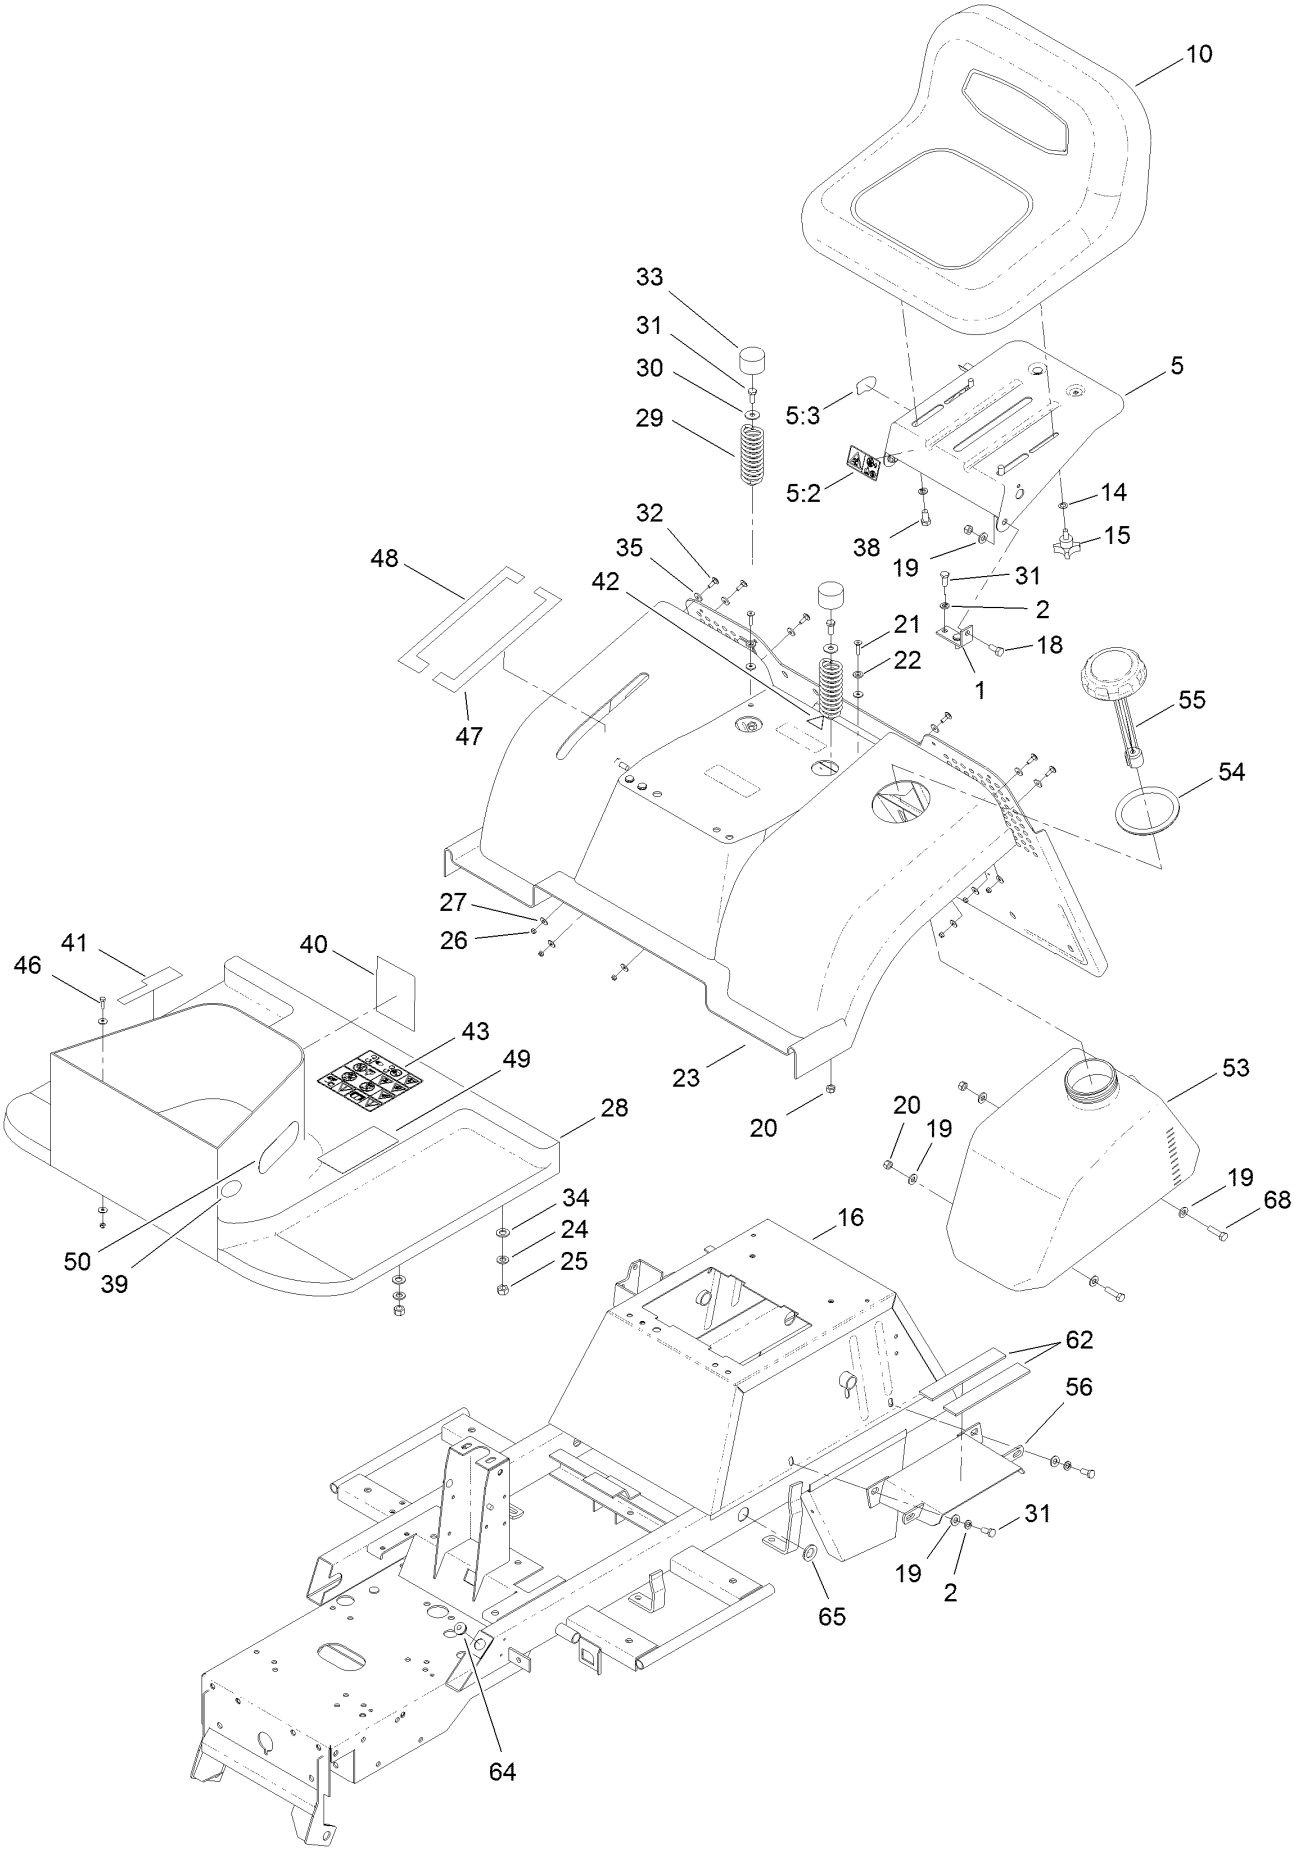


Frame, Fender, Seat and Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	3253-4	8	Washer-Lock
5	120-8704	1	Seat Pan ASM
5:2	119-2730	1	Decal-Danger
5:3	99-5340	1	Decal-Switch
10	107-2213	1	Seat ASM
14	104-2936	2	Washer-Spring
15	119-5456	2	Knob-Adjust
16	120-8750	1	Frame Kit
18	104-2939	2	Screw-Support, Seat
19	33094-00	6	Washer-Plain
20	33024-00	4	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	120-8765	1	Fender-Rear
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock, NI
26	87-5140	12	Nut-Lock
27	104-2943	18	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	2	Washer-Plain
31	33114-020	8	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	4	Washer-Rubber
35	104-2952	8	Washer-Rubber
38	33104-020	2	Screw-HHF
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	119-2725	1	Decal-Danger
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation
50	107-8976	2	Decal-Tower
53	110-8689	1	Tank-Fuel
54	110-8691	1	Protector-Neck, Filler
55	110-8697	1	Cap-Fuel
56	120-8756	1	Bracket-Tank, Fuel
62	110-8690	2	Strip-Rubber, Fuel Tank
64	107-8950	1	Grommet
65	110-8683	1	Grommet
68	33114-030	2	Screw-HH

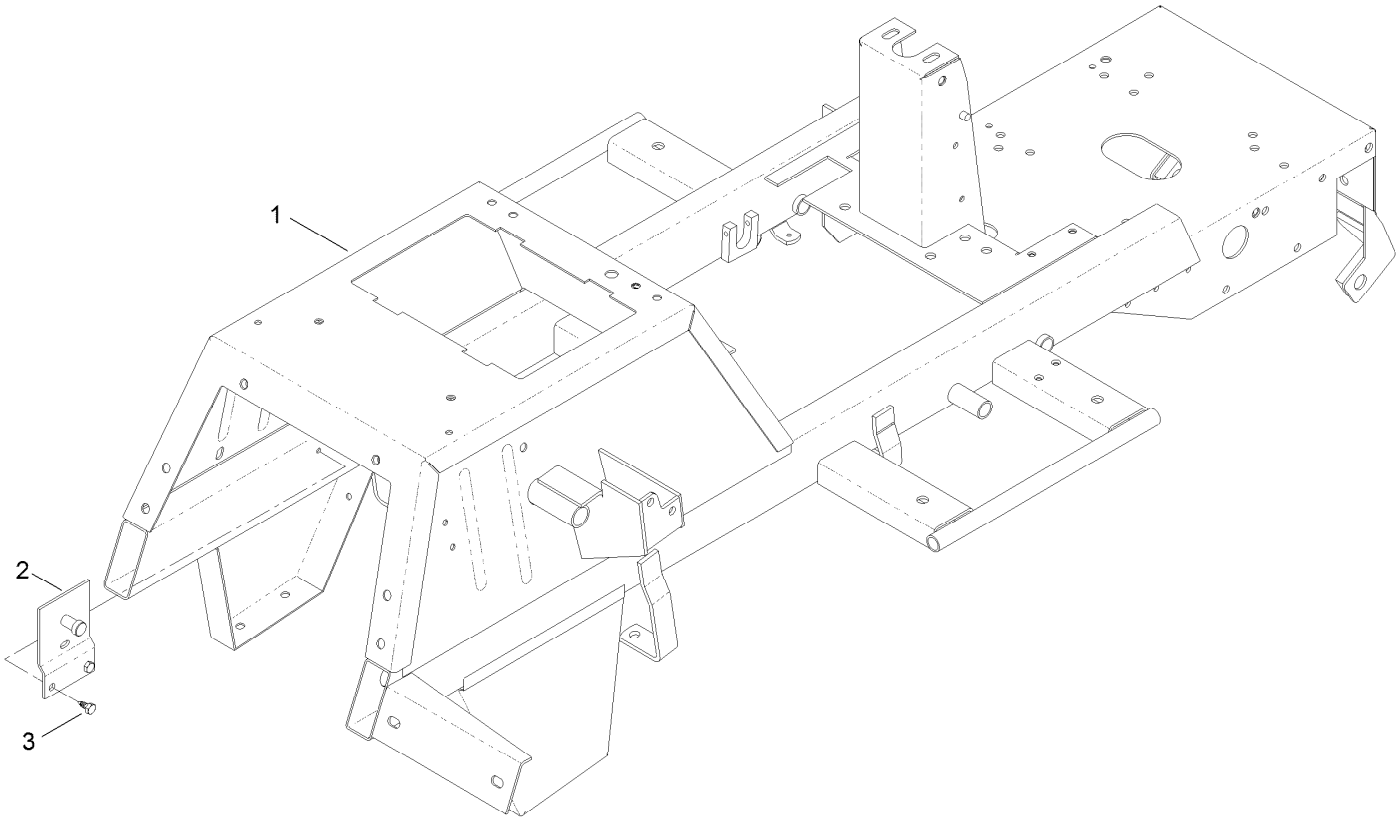

Frame Kit Assembly No. 120-8750

Ref.	*Part Number*	*Qty.*	*Description*
1	120-8751	1	Frame-Chassis
2	120-8752	1	Bracket-Magnet
3	120-8753	2	Screw

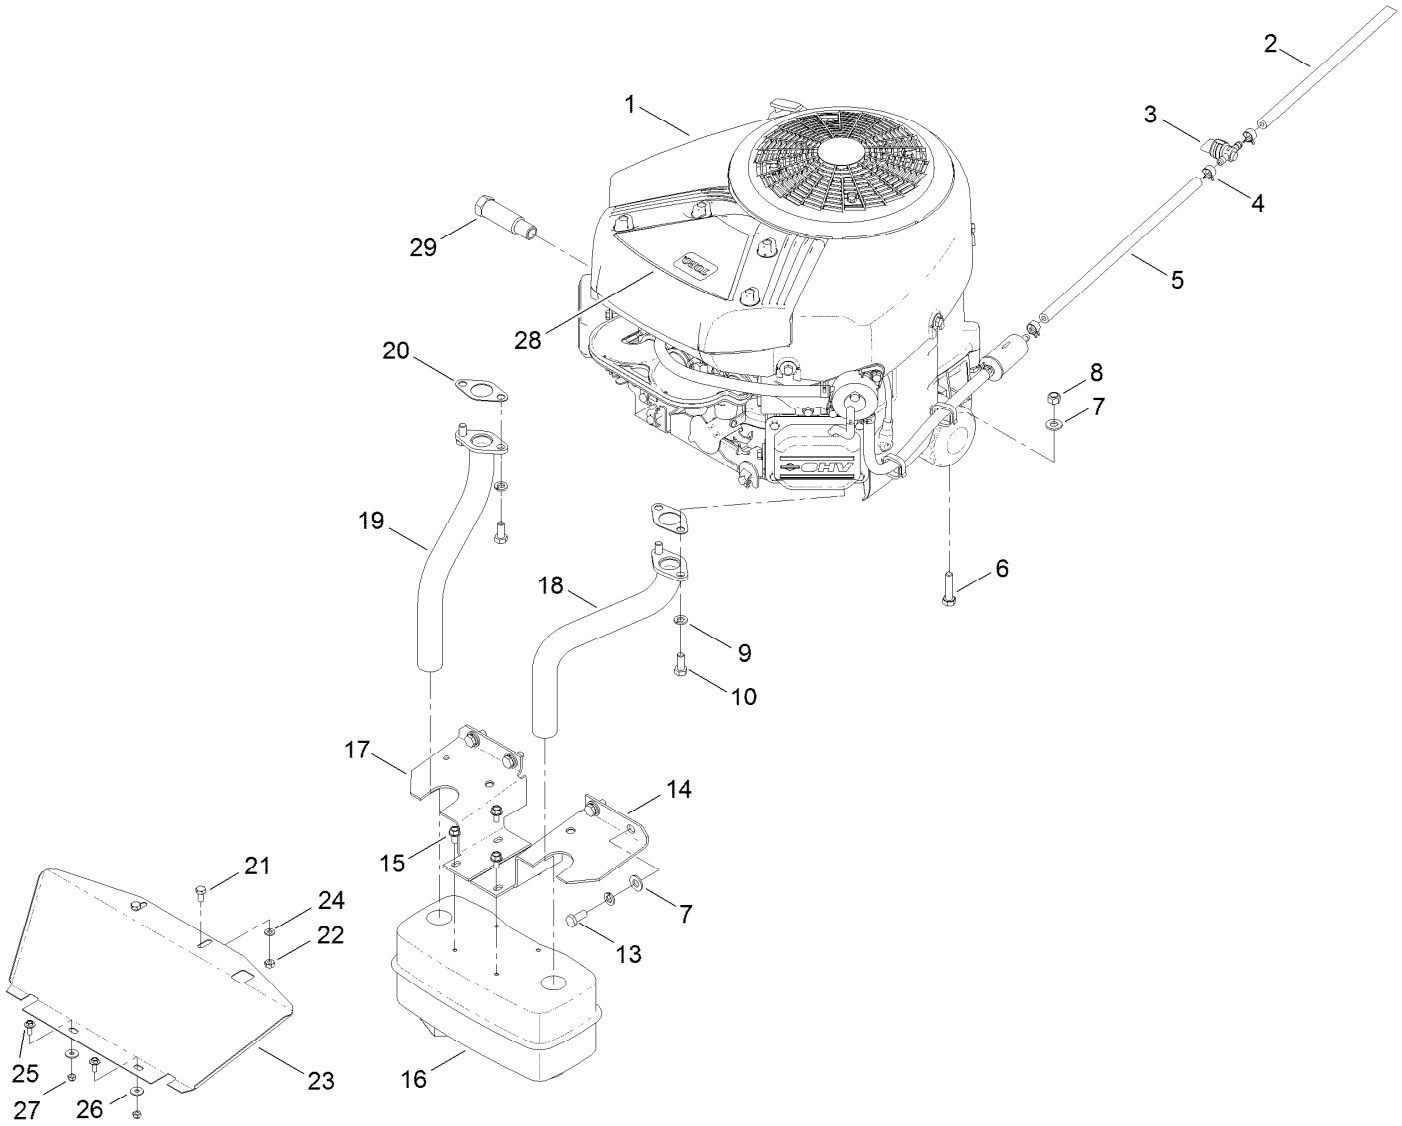


Engine and Muffler Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Briggs, 406777-0113-B1 ●■
2	110-8692	1	Line-Fuel
3	104-3224	1	Valve-Tank, Fuel
4	104-3212	4	Clamp-Line, Fuel
5	110-8696	1	Line-Fuel
6	33114-035	4	Screw-HH
7	33094-00	8	Washer-Plain
8	33024-00	4	Nut-Lock
9	104-2927	8	Washer-Spring
10	322-3	4	Screw-HH
13	33114-020	4	Screw-HH
14	104-3214	1	Guard-Muffler, LH
15	106-5763	4	Screw
16	104-3225	1	Muffler
17	104-3215	1	Guard-Muffler, RH
18	104-3216	1	Tube-Exhaust, LH
19	104-3217	1	Tube-Exhaust, RH
20	104-3226	2	Gasket-Exhaust
21	33113-012	2	Screw-HH
22	33023-00	2	Nut-Lock
23	104-3219	1	Shield-Heat
24	33093-00	2	Washer-Flat
25	104-2980	2	Screw
26	104-2943	2	Washer-Flat
27	87-5140	2	Nut-Lock
28	117-7820	1	Decal-Engine
29	120-8755	1	Coupler-Oil Drain

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com

Front Axle Assembly

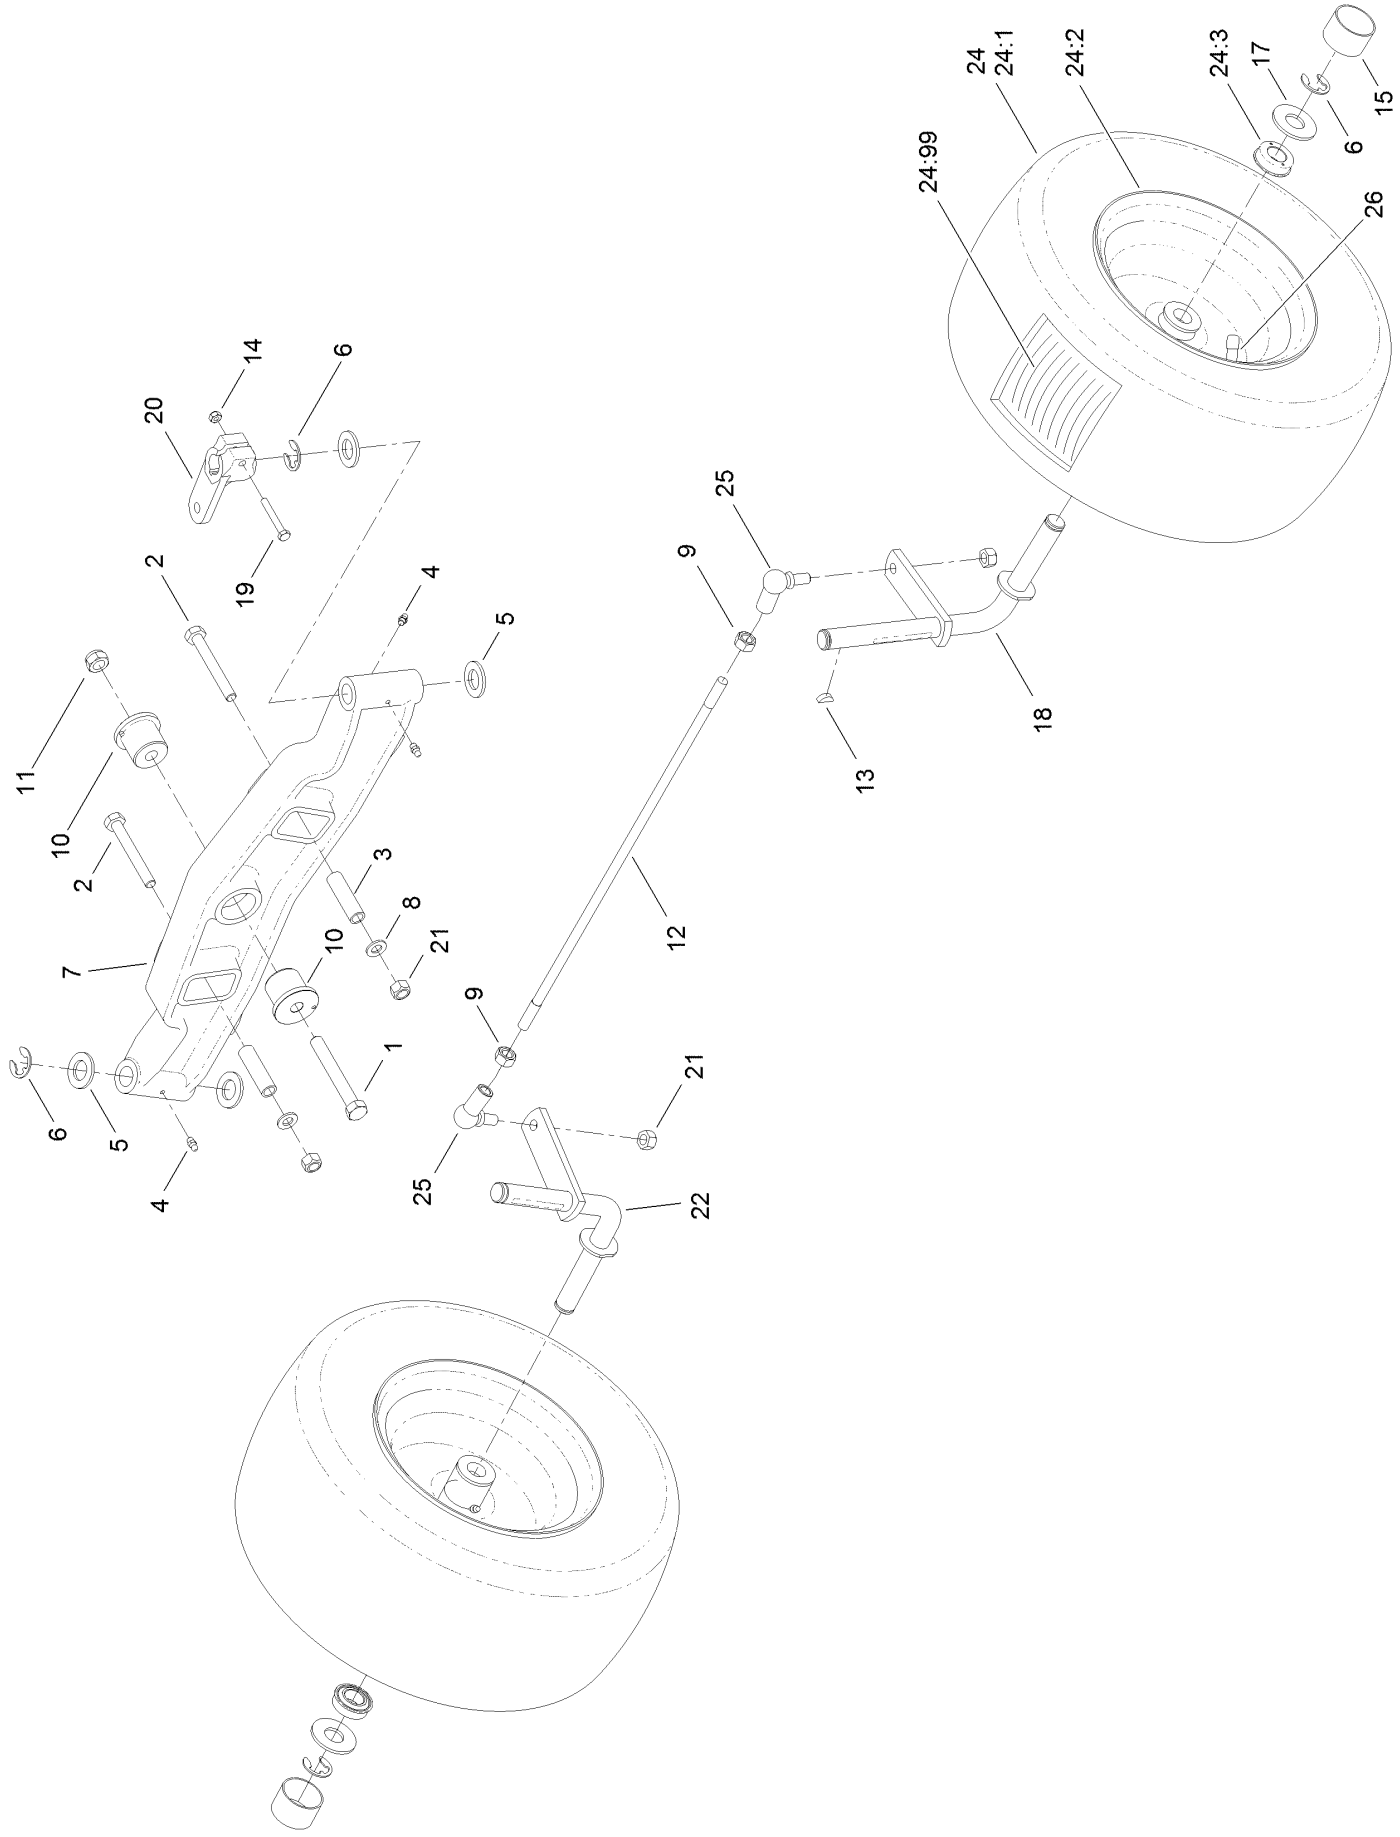


Front Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	104-2851	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	4	Washer-Flat
6	104-2891	4	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
9	48-9520	2	Nut
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Locking, Self
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
17	120-8739	4	Washer
18	114-3241	1	Spindle-Front, Left
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	4	Nut-Lock, NI
22	114-3242	1	Spindle-Front, Right
24		2	Wheel ASM ●
24:1	99-2336	1	Tire
24:2	114-3243	1	Rim-Front
24:3	110513	2	Bearing-Wheel
24:99	112819	1	Tube-Inner
25	104-2876	2	Joint-Ball, Angle
26	106-8596	1	Valve-Tire

● Not serviced separately


Lower Steering Link Assembly

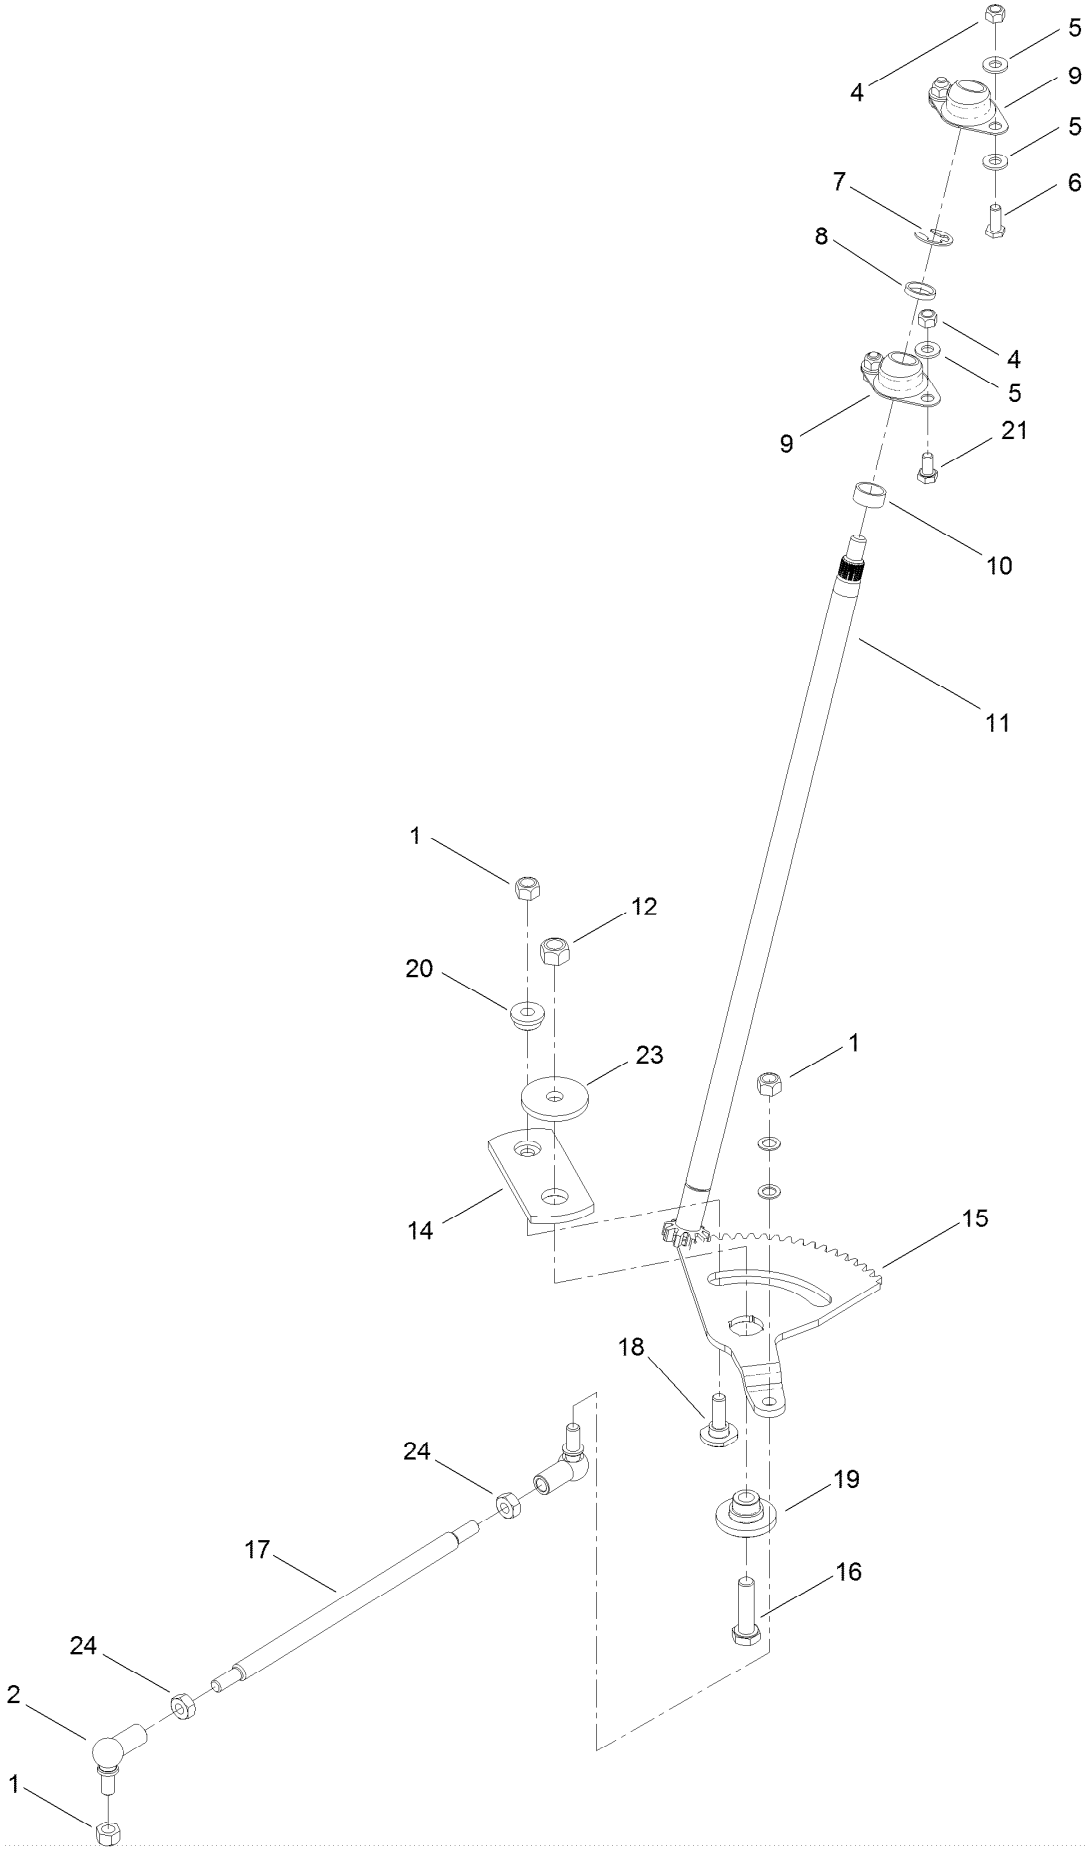

Lower Steering Link Assembly (continued)


Ref.	Part Number	Qty.	Description
1	33025-00	3	Nut-Lock, NI
2	104-2876	2	Joint-Ball, Angle
4	33024-00	4	Nut-Lock
5	33094-00	6	Washer-Plain
6	33114-020	2	Screw-HH
7	104-2891	1	Clip-Spring
8	104-2877	1	Spacer-Upper
9	104-2878	2	Bearing-Spherical
10	104-2879	1	Spacer-Lower
11	106-5773	1	Shaft-Steering
12	33026-00	1	Nut-Lock
14	105-1238	1	Plate-Steering
15	120-8749	1	Gear-Sector
16	104-2910	1	Screw-HH
17	104-2886	1	Link-Drag
18	105-1239	1	Bolt-Shoulder
19	105-1240	1	Pivot-Steering
20	105-1241	1	Bushing
21	33114-016	2	Screw-HH
23	108-8892	1	Washer
24	48-9520	2	Nut

Body and Hood Assembly

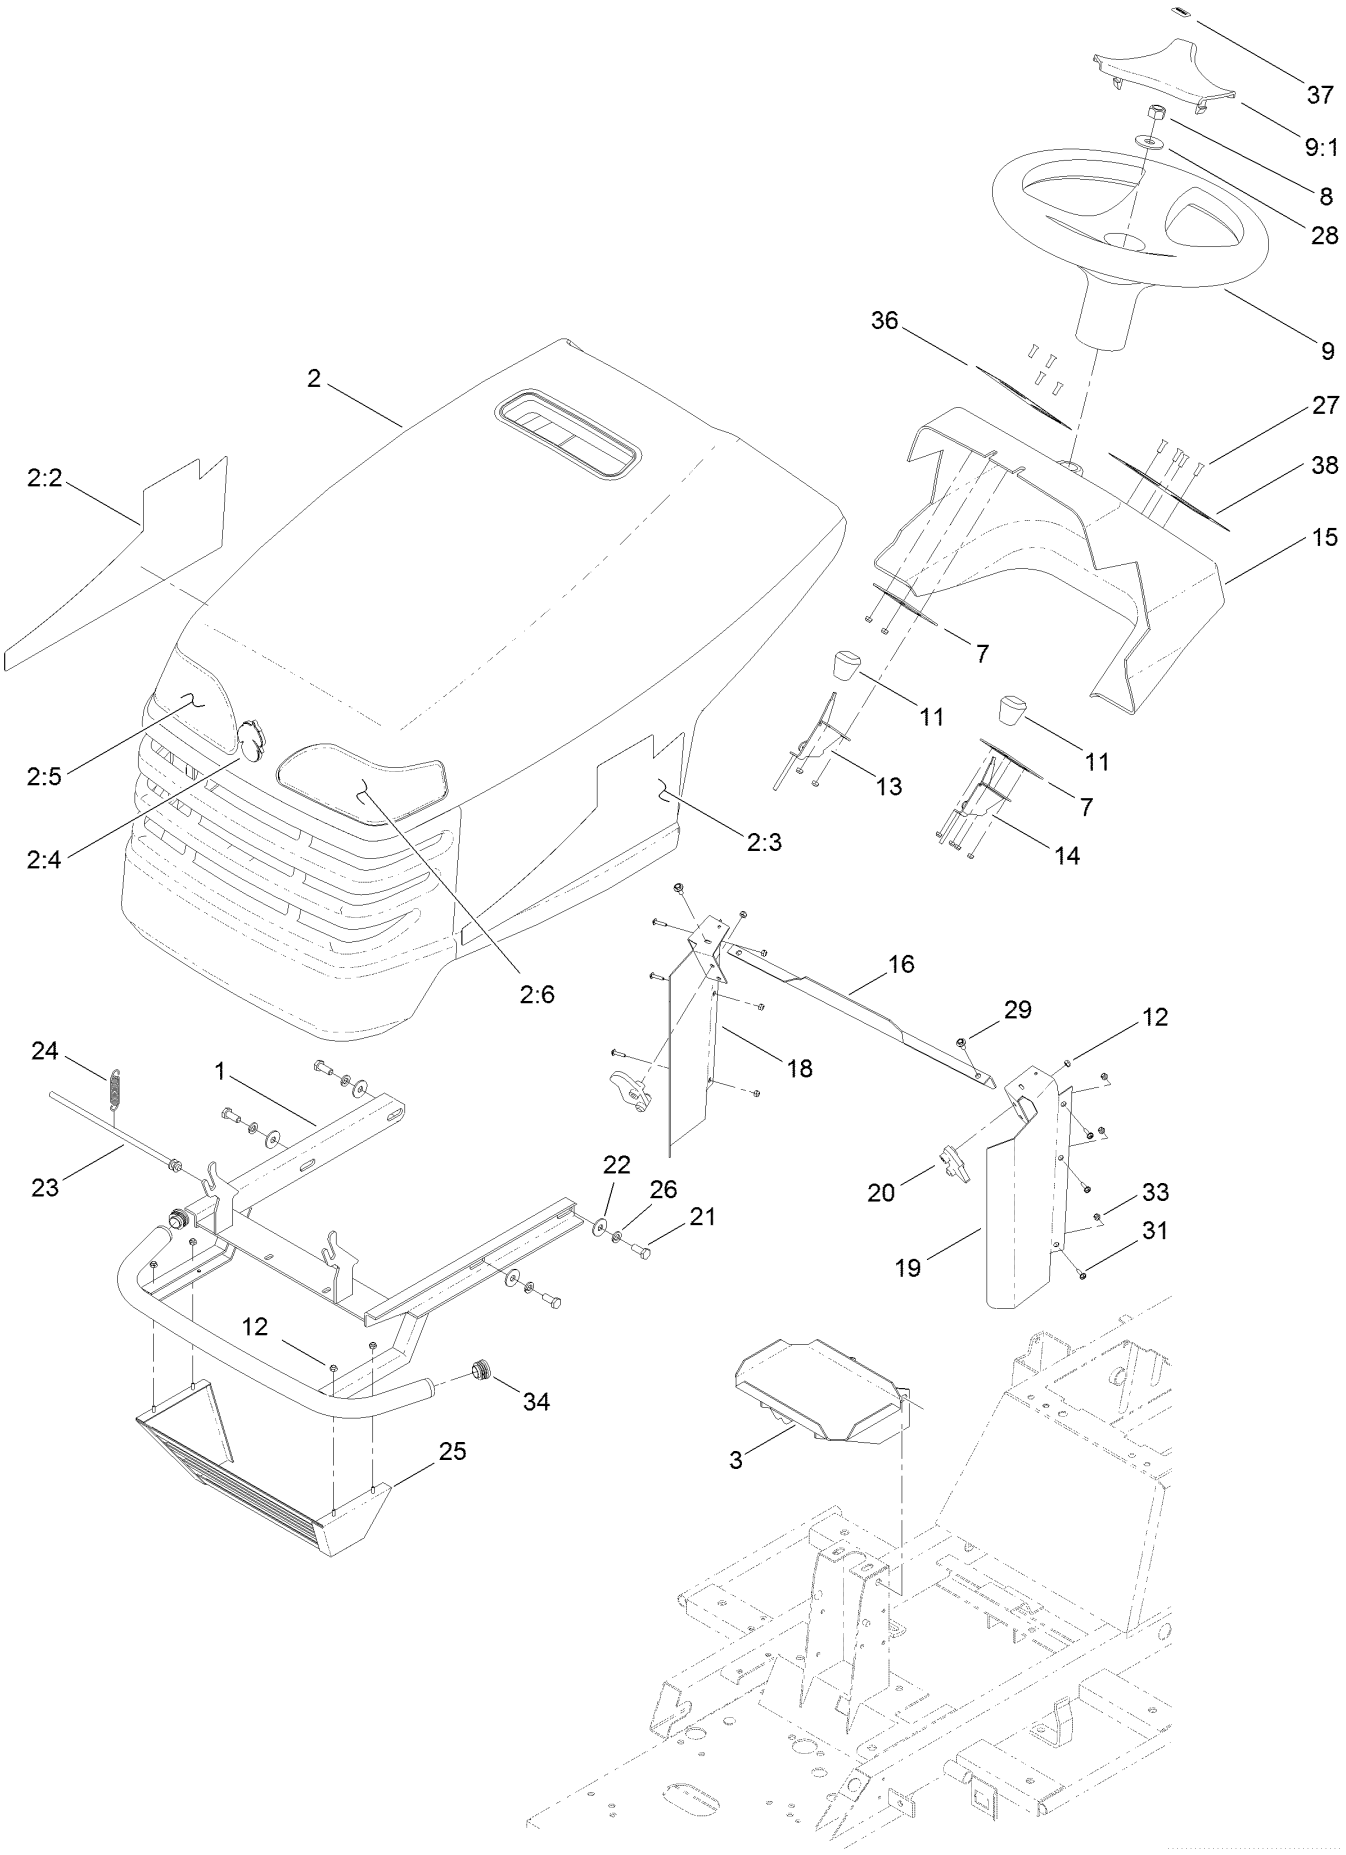

Body and Hood Assembly (continued)


Ref.	Part Number	Qty.	Description
1	107-2216	1	Support-Bumper
2	107-8990	1	Hood ASM
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Emblem
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	119-8243	1	Tray-Battery
7	104-2962	2	Brace
8	33026-00	1	Nut-Lock
9	98-1472	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
11	66-0120	2	Knob
12	87-5140	14	Nut-Lock
13	92-6784	1	Control-Throttle (Twin)
14	92-6783	1	Control-Choke (Twin)
15	104-2968	1	Panel-Dash
16	114-3132	1	Brace
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain
23	120-8766	1	Shaft
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	3253-4	4	Washer-Lock
27	106-5759	8	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
31	107-8918	6	Screw
33	104-2985	6	Nut-Hex
34	107-8943	2	Plug-End, Tube
36	104-3234	1	Decal
37	98-1459	1	Decal
38	104-3233	1	Decal-Choke/PTO

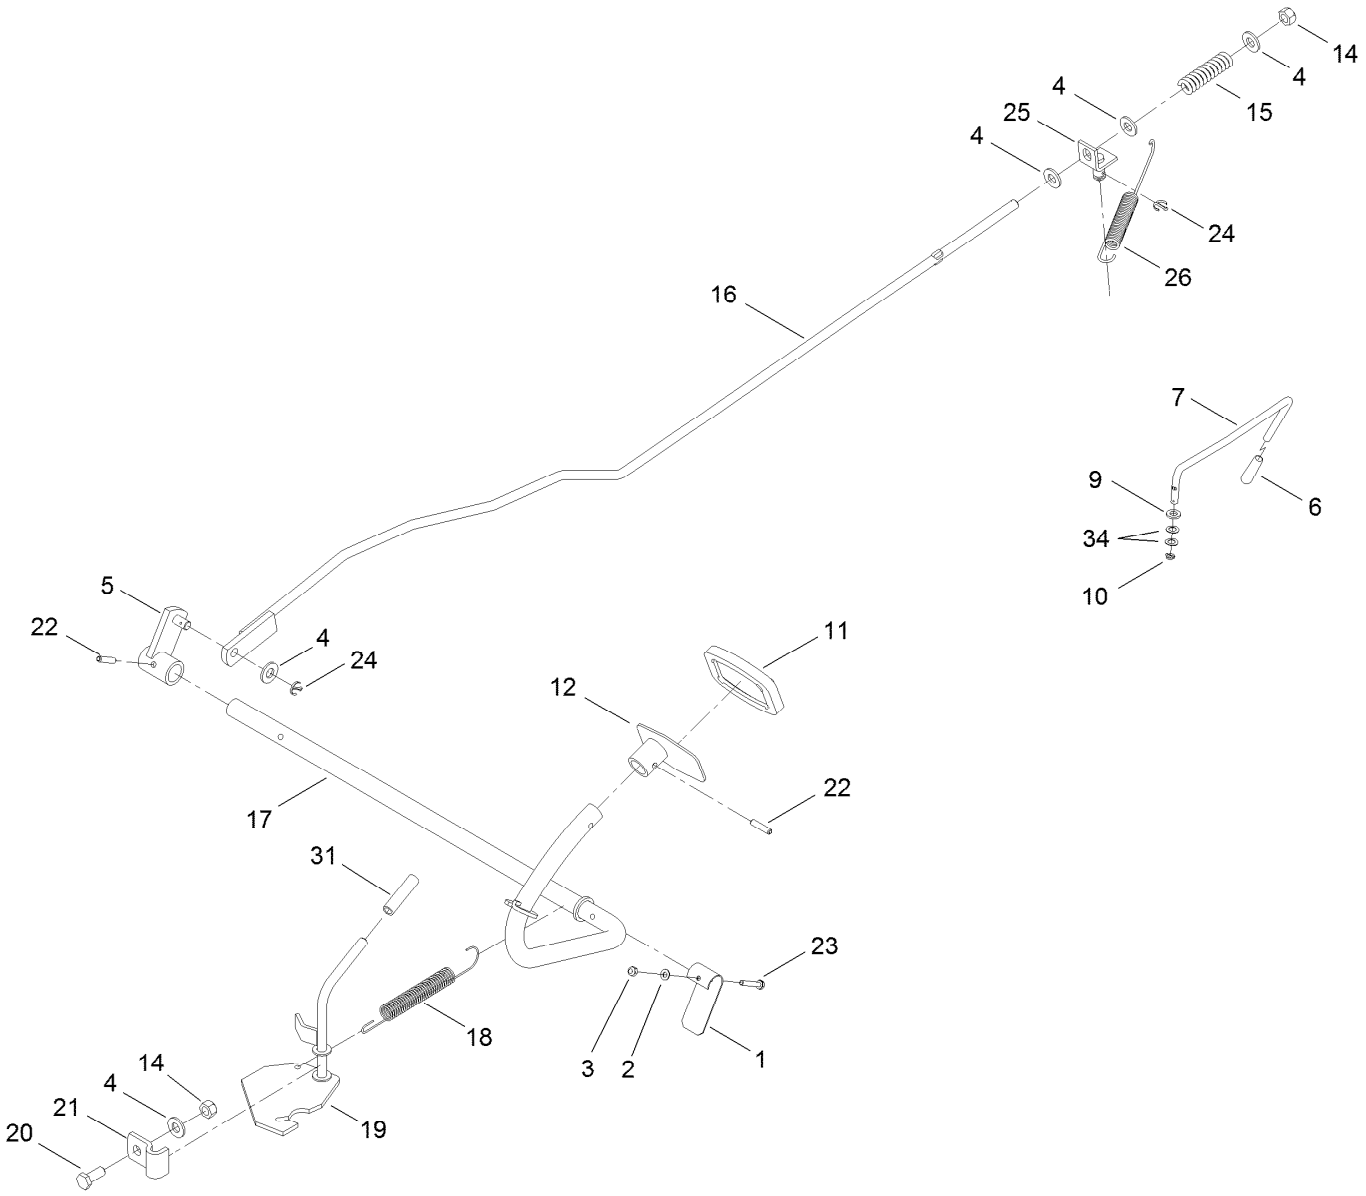

Operation - Brake and Bypass Assembly

Ref.	Part Number	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	120-8762	1	Rod-Lever, Bypass
9	104-3193	1	Washer
10	104-2997	1	Pin-Cotter
11	104-3018	1	Pad-Pedal
12	120-8763	1	Pedal
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake


Ref.	Part Number	Qty.	Description
16	104-3003	1	Rod-Connecting, Brake
17	104-3246	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake
26	104-3012	1	Spring
31	104-3247	1	Cap
34	106-5770	2	Washer

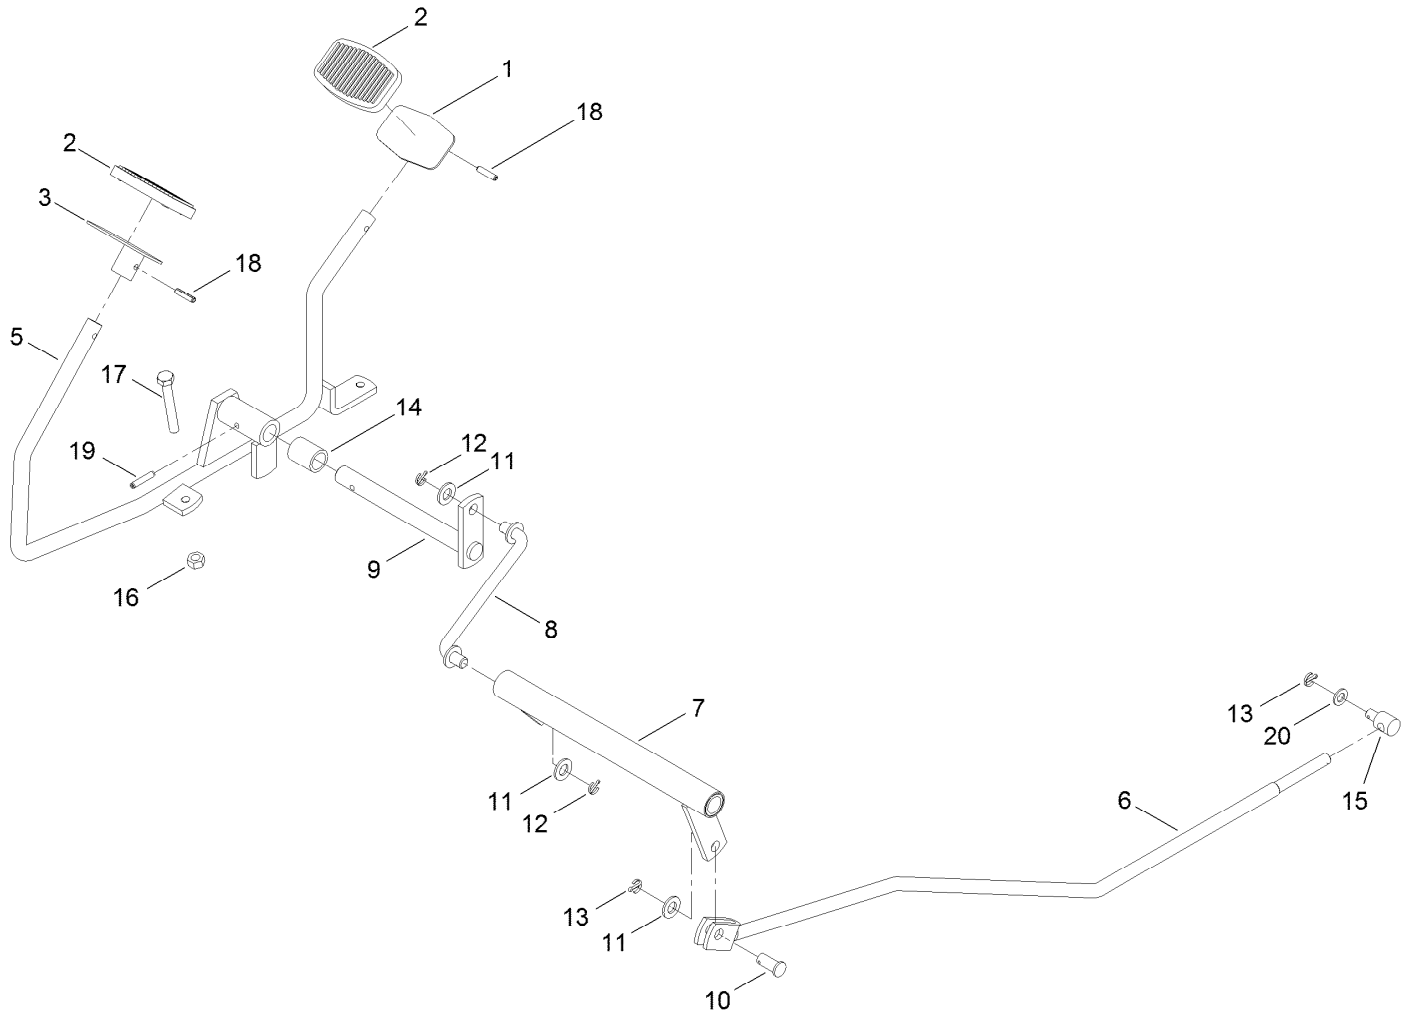

Operation - Travel Pedal Assembly

Ref.	Part Number	Qty.	Description
1	104-3017	1	Pedal-Rear, Travel
2	104-3018	2	Pad-Pedal
3	120-8761	1	Pedal-Travel, Front
5	104-3021	1	Rod-Travel
6	104-3022	1	Rod-Tie
7	104-3023	1	Shaft-Diagonal
8	104-3024	1	Link-Formed
9	104-3025	1	Shaft-Diagonal
10	120-8770	1	Pin
11	33095-00	3	Washer-Flat
12	104-3016	2	Pin-Cotter
13	104-3027	2	Pin-Cotter
14	104-3028	1	Spacer
15	104-3029	1	Pin
16	33014-00	1	Nut-Hex
17	33114-060	1	Screw-HH
18	104-3008	2	Pin-Spring
19	104-3030	1	Pin-Spring
20	104-3031	1	Washer

Rear Wheel and Transaxle Assembly

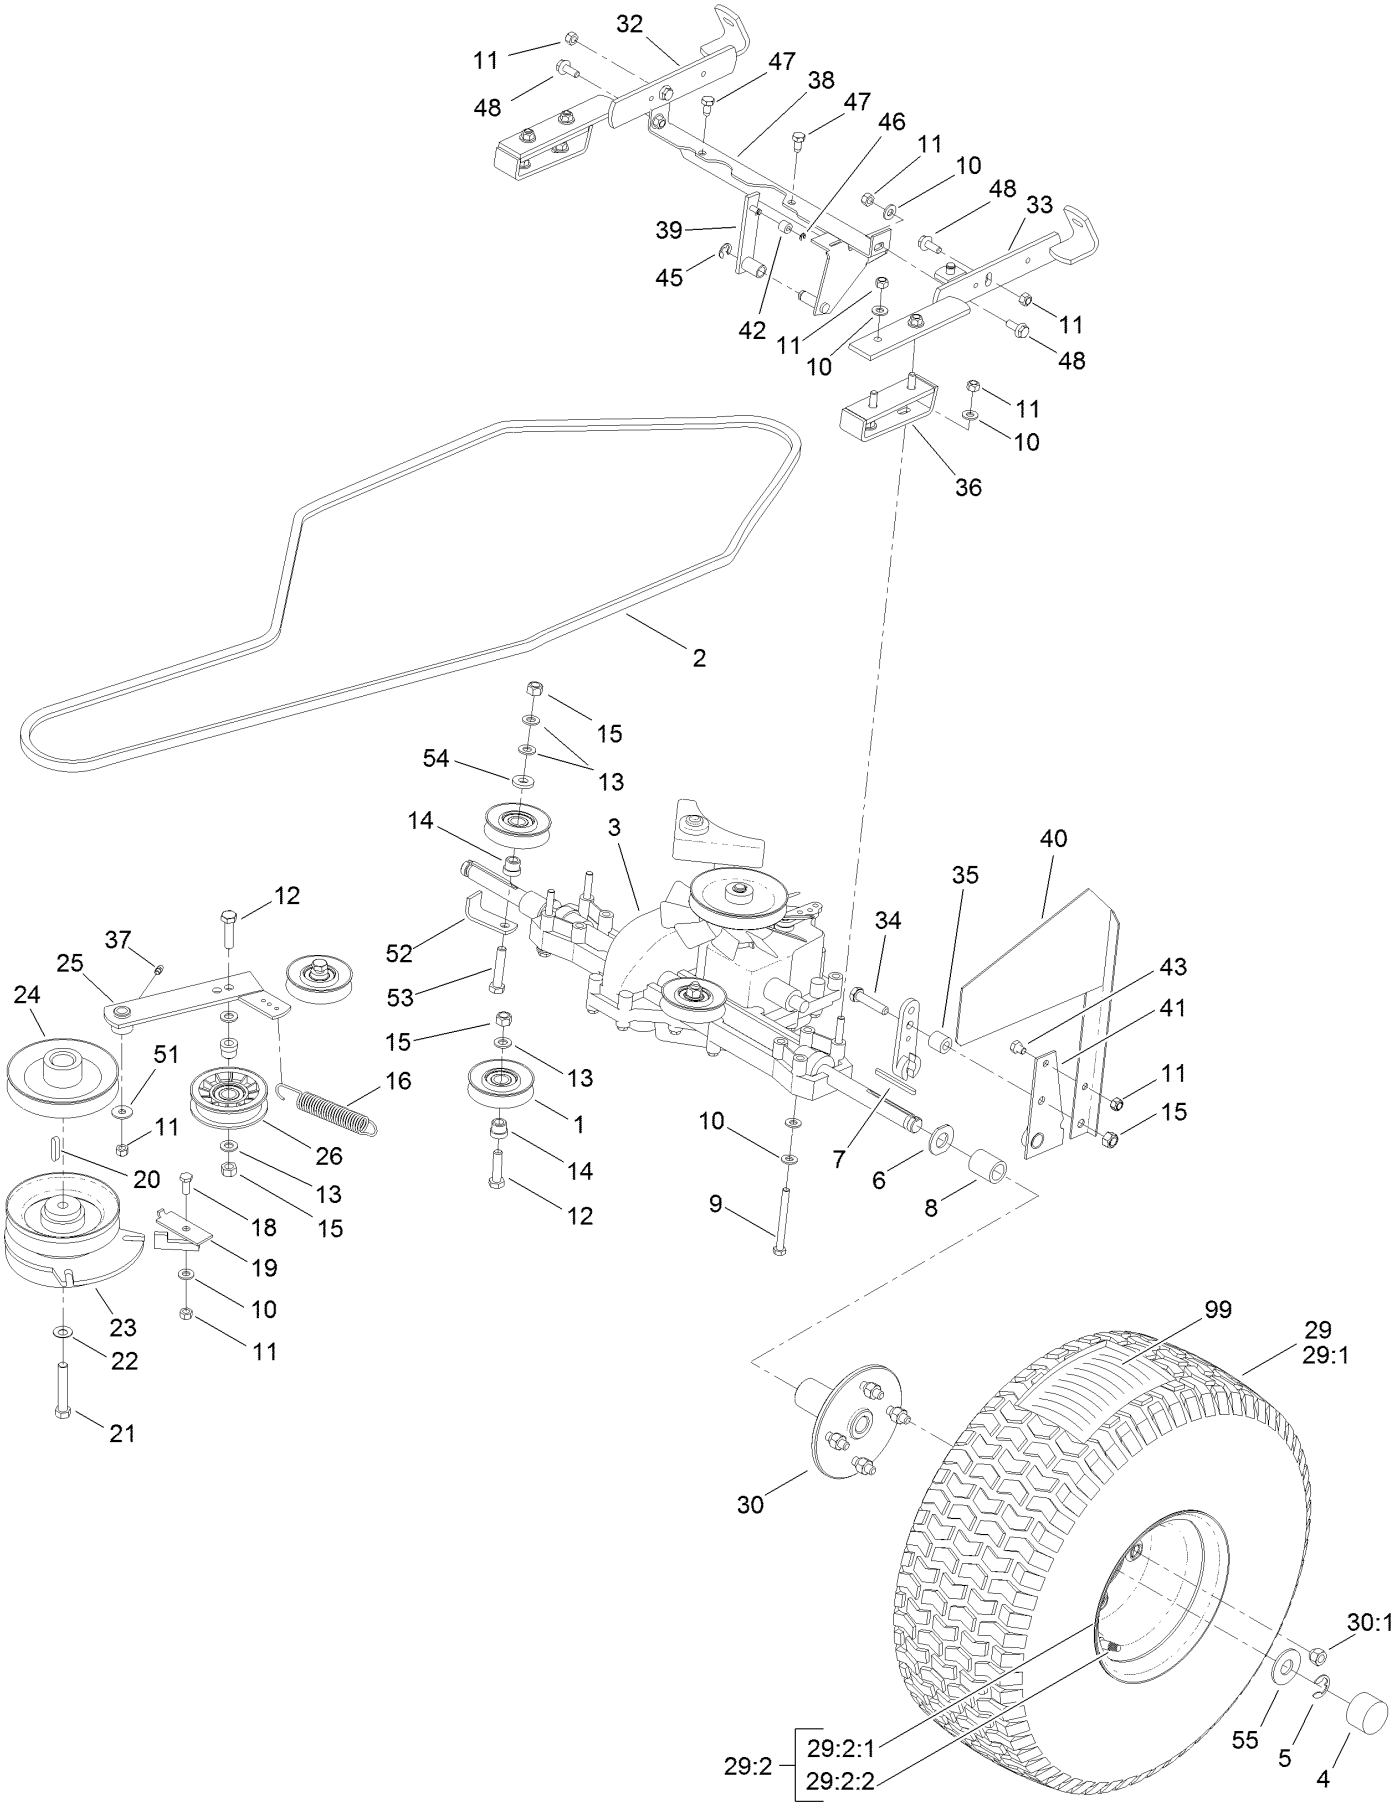


Rear Wheel and Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	121-0900	1	Transaxle
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	19	Washer-Plain
11	33024-00	15	Nut-Lock
12	33115-040	4	Screw-HH
13	33095-00	7	Washer-Flat
14	104-2896	5	Bushing-Idler
15	33025-00	6	Nut-Lock, NI
16	104-2897	1	Spring
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
29	107-8929	2	Tire And Wheel ASM
29:1	99-2994	1	Tire
29:2	107-8932	1	Wheel ASM
29:2:1		1	Rim ●
29:2:2	106-8596	1	Valve-Tire
30	108-8718	2	Hub-Wheel
30:1	108-8717	4	Nut-Lug
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	104-3343	2	Plate-Reinforcing
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
40	104-3325	1	Arm-Control, Cruise
41	104-3326	1	Tenon
42	104-3329	1	Roller
43	33114-010	1	Screw-HH
45	104-3341	1	Stirrup
46	104-3014	1	Stirrup
47	104-3344	2	Screw-Thread Forming
48	104-3065	4	Screw-Hex
51	104-2946	2	Washer-Plain
52	108-8732	1	Retainer-Belt
53	33115-050	1	Screw-HH
54	108-8709	1	Washer-Flat
55	120-8739	4	Washer
99	232-37	1	Tube

● Not serviced separately

Transaxle Assembly No. 121-0900

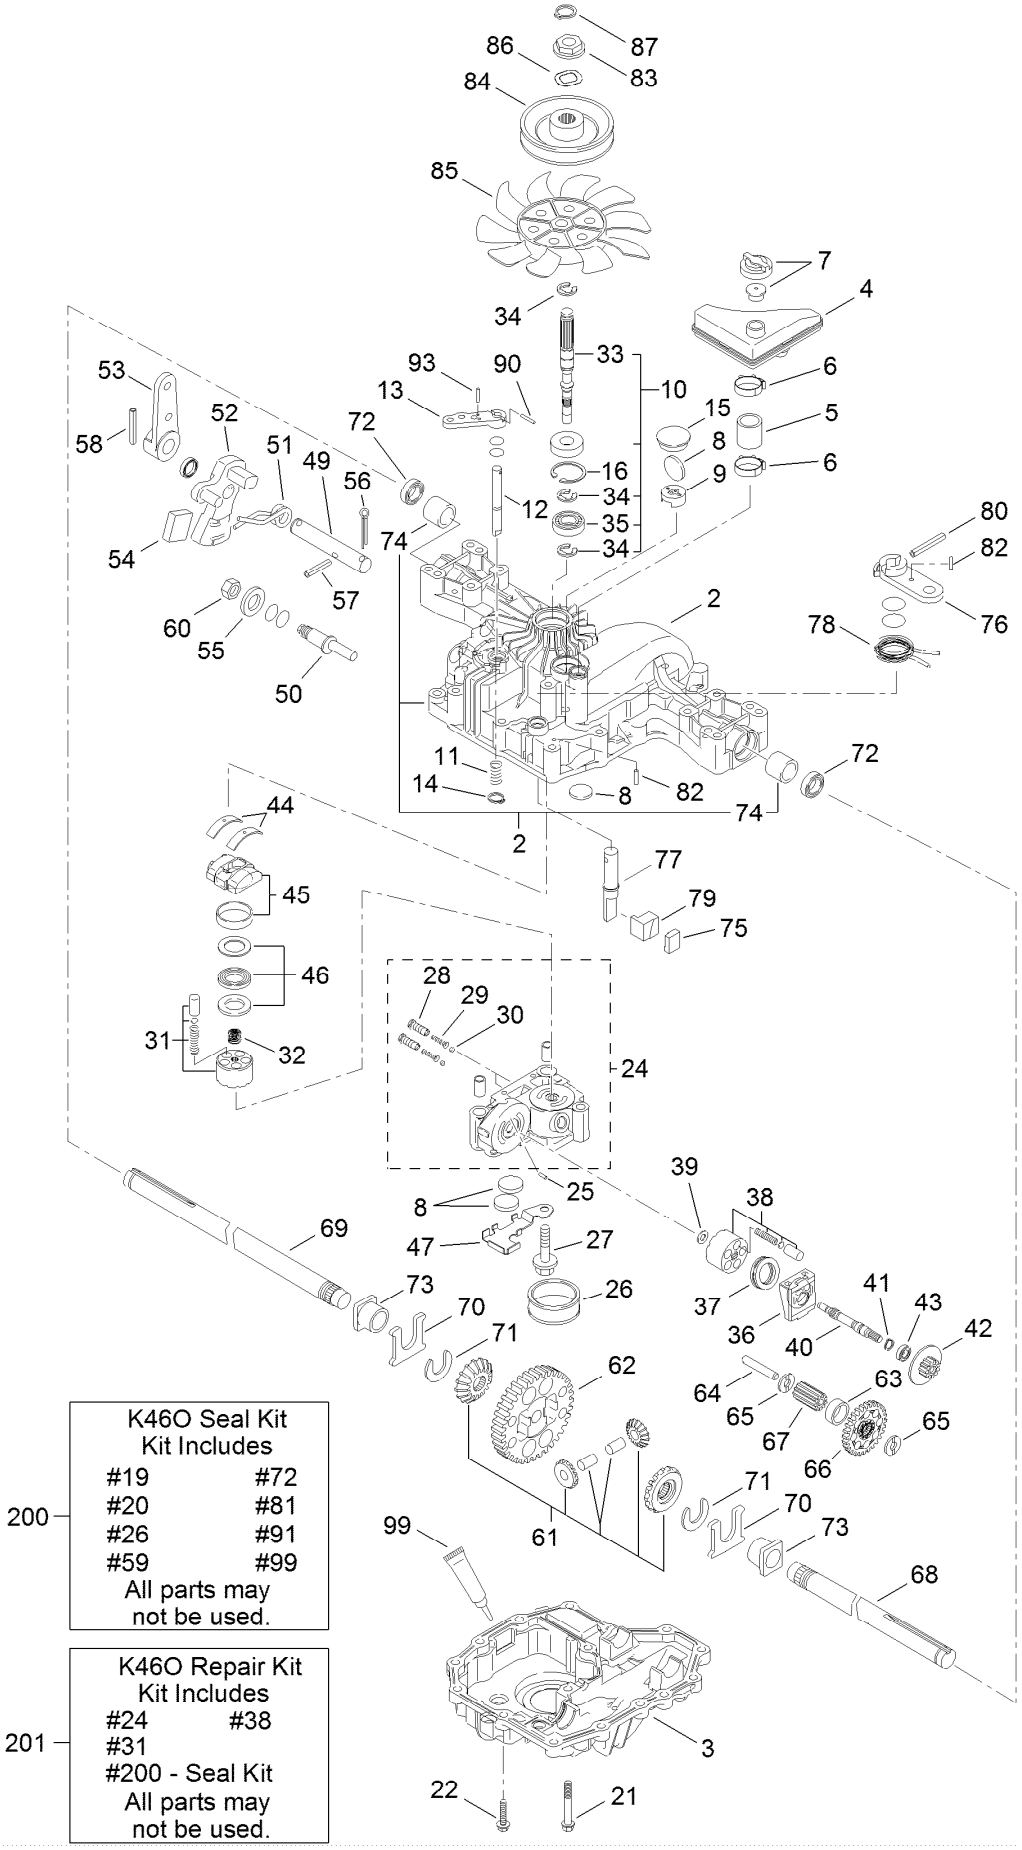

K46O Seal Kit Kit Includes	
#19	#72
#20	#81
#26	#91
#59	#99
All parts may not be used.	


200

K46O Repair Kit Kit Includes	
#24	#38
#31	
#200 - Seal Kit	
All parts may not be used.	

201

Transaxle Assembly No. 121-0900 (continued)


Ref.	Part Number	Qty.	Description
2	121-0901	1	Upper Case Kit
3	104-3253	1	Housing-Lower
4	121-0902	1	Tank-Reservoir
5	121-0903	1	Tube
6	104-3255	1	Clamp-Miniature
7	121-0904	1	Valve-Vent
8	104-3257	1	Magnet
9	121-0905	1	Holder-Magnet
10	121-0906	1	Pump Shaft/Bearing Kit
11	121-0907	1	Spring
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	121-0908	1	Ring-Snap
21	121-0909	1	Screw-Tapping
22	121-0910	1	Screw-Tapping
24	121-0911	1	Center Case W/Ball Ids Kit
25	104-3270	1	Pin
26	121-0912	1	Filter
27	104-3272	1	Bolt
28	121-0913	1	Valve-Ids
29	121-0914	1	Spring-Ids
30	121-0915	1	Ball
31	121-0916	1	Cylinder Block (Pump) Kit
32	104-3277	1	Spring-Pump
33	104-3278	1	Shaft-Pump
34	121-0917	1	E-Ring
35	121-0918	1	Bearing
36	104-3279	1	Housing
37	121-0919	1	Bearing-Thrust
38	121-0920	1	Cylinder Block Kit (Motor)
39	104-3282	1	Washer
40	121-0921	1	Shaft-Motor
41	121-0922	1	Ring-Snap
42	104-3284	1	Motor-Gear
43	121-0923	1	Bearing
44	104-3286	1	Metal-Thrust
45	104-3287	1	Plate-Swash
46	121-0924	1	Thrust Bearing (Pump) Kit
47	121-0925	1	Holder-Magnet
49	114-3181	1	Shaft-Control
50	121-0926	1	Fulcrum
51	114-3217	1	Spring-Torsion
52	114-3180	1	Arm-Control
53	121-0927	1	Lever-Control
54	121-0928	1	Plate-Jerky
55	121-0929	1	Washer
56	114-3182	1	Pin-Cotter
57	121-0930	1	Spring Pin
58	121-0931	1	Pin-Roll
60	121-0932	1	Nut
61	121-0933	1	Differential Gear Kit
62	121-0934	1	Gear-Final
63	121-0935	1	Collar-Pinion, Final
64	121-0936	1	Shaft-Reduction
65	121-0937	1	Washer
66	121-0938	1	Gear-Reduction
67	121-0939	1	Gear-Pinion, Final
68	121-0940	1	Shaft-Axle, Left
69	121-0941	1	Shaft-Axle, Right
70	121-0942	1	Washer-Thrust
71	121-0943	1	Ring
72	121-0944	1	Seal
73	121-0945	1	Bushing
74	121-0946	1	Bushing
75	121-0947	1	Shoe-Brake
76	121-0948	1	Lever-Brake
77	121-0949	1	Shaft-Brake
78	121-0950	1	Spring-Return, Brake
79	121-0951	1	Actuator-Brake
80	92-0767	1	Pin
82	121-0952	1	Pin-Spring
83	121-0953	1	Collar-Spline
84	121-0954	1	Pulley
85	121-0955	1	Fan-White
86	121-0956	1	Washer-Wave
87	121-0957	1	Ring-Snap
90	121-0958	1	Pin-Spring
93	104-3264	1	Pin
99	121-0959	1	Sealant
200	121-0960	1	Seal Kit
201	121-0961	1	Repair Kit

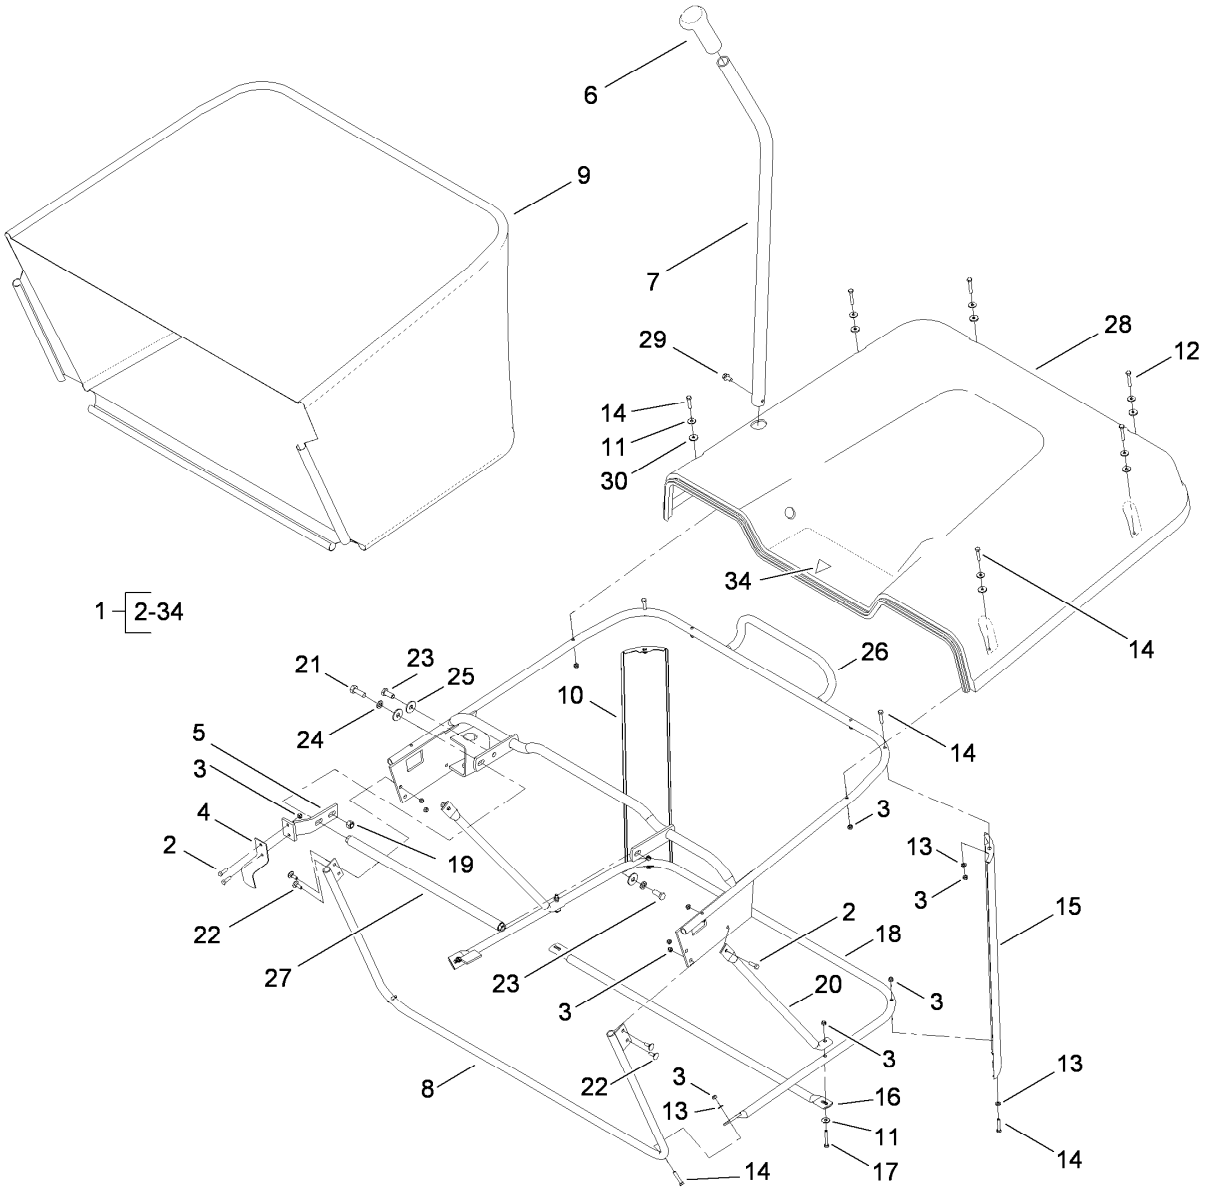

Grass Collector Assembly

Ref.	Part Number	Qty.	Description
1	106-5760	1	Collector ASM ●
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	3253-4	2	Washer-Lock
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

● Not illustrated

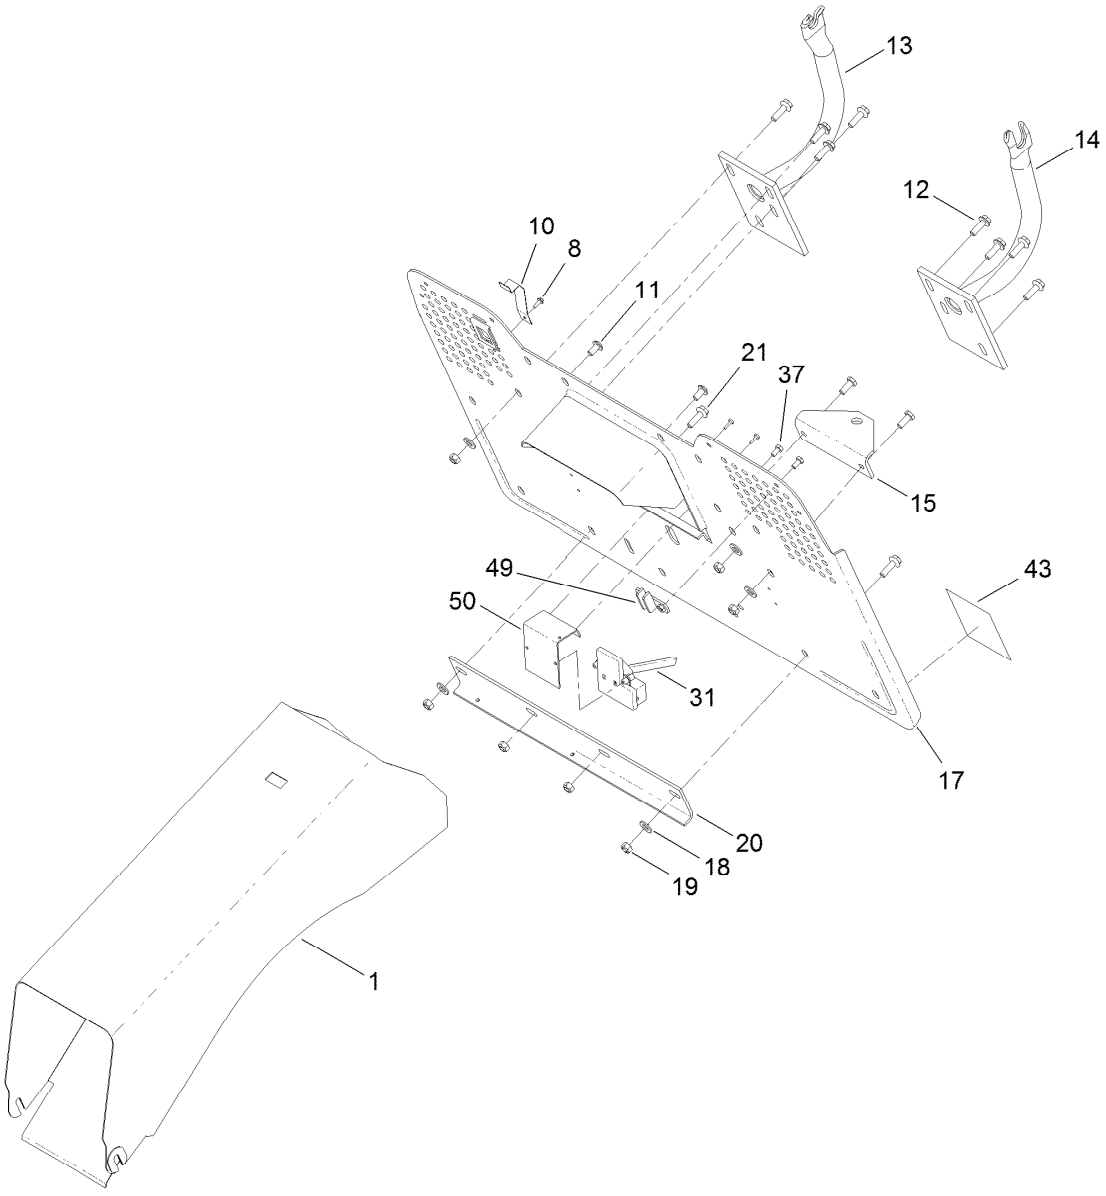


Tunnel Assembly

Ref.	Part Number	Qty.	Description
1	120-8767	1	Tunnel
8	104-2983	1	Screw
10	119-2741	1	Bracket-Bag Present Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	119-5516	1	Hitch-Tow
17	120-8768	1	Plate-Collector

Ref.	Part Number	Qty.	Description
18	33095-00	8	Washer-Flat
19	33024-00	8	Nut-Lock
20	120-8769	1	Bracket-Hitch, Support
21	104-3068	6	Screw-Hex
31	119-5429	1	Switch-Omron
37	33113-012	4	Screw-HH
43	104-3243	1	Decal-Bypass, Hydro
49	110-8688	1	Bracket-Support, Fuel Tank
50	119-5431	1	Bracket-Switch Omron


Deck, Spindle and Blade Assembly

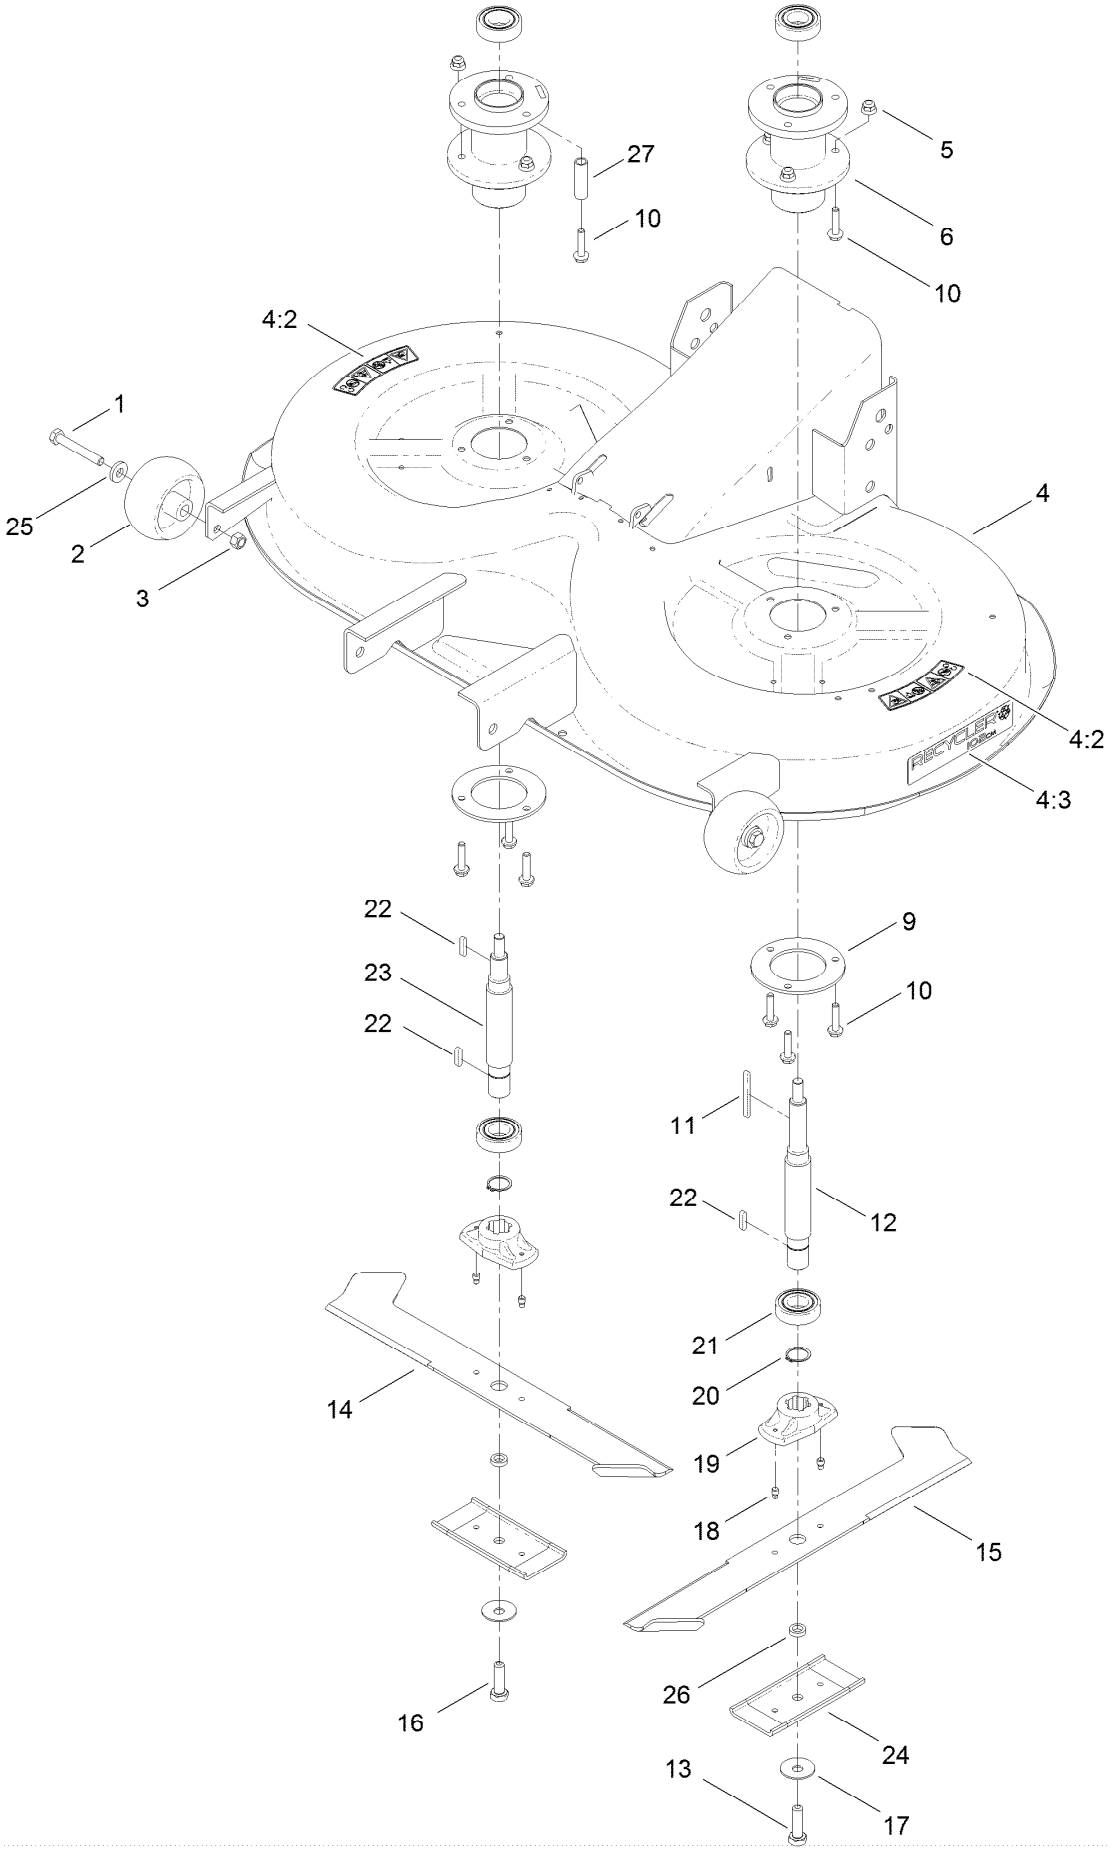

Deck, Spindle and Blade Assembly (continued)

Ref.	Part Number	Qty.	Description
1	33115-070	2	Screw-HH
2	120-8759	2	Wheel-Gauge
3	33025-00	2	Nut-Lock, NI
4	120-8780	1	Deck-Assembly, Complete
4:2	119-2726	2	Decal-Danger
4:3	119-2727	1	Decal-Recycler
5	104-3082	6	Nut-Lock, HF
6	107-8992	2	Housing-Spindle
9	104-3084	2	Support-Ring
10	104-3085	12	Bolt-HHF
11	104-3086	1	Key
12	106-8565	1	Shaft-Blade, Left
13	106-5797	1	Bolt-HH, Blade
14	106-8557	1	Blade-RH
15	106-8558	1	Blade-LH
16	106-5798	1	Bolt-Blade, HH
17	106-6532	2	Washer-Blade
18	104-3093	4	Pin-Shear, Grooved
19	106-4185	2	Adapter-Blade
20	104-3095	2	Ring-Locking
21	104-6325	4	Bearing-Ball
22	104-3097	3	Key-Square
23	106-8566	1	Shaft-Blade, Right
24	106-6533	2	Stiffener-Blade
25	108-8709	2	Washer-Flat
26	106-6530	2	Spacer
27	120-8738	2	Spacer


Rear Baffle and Bag on Demand Assembly

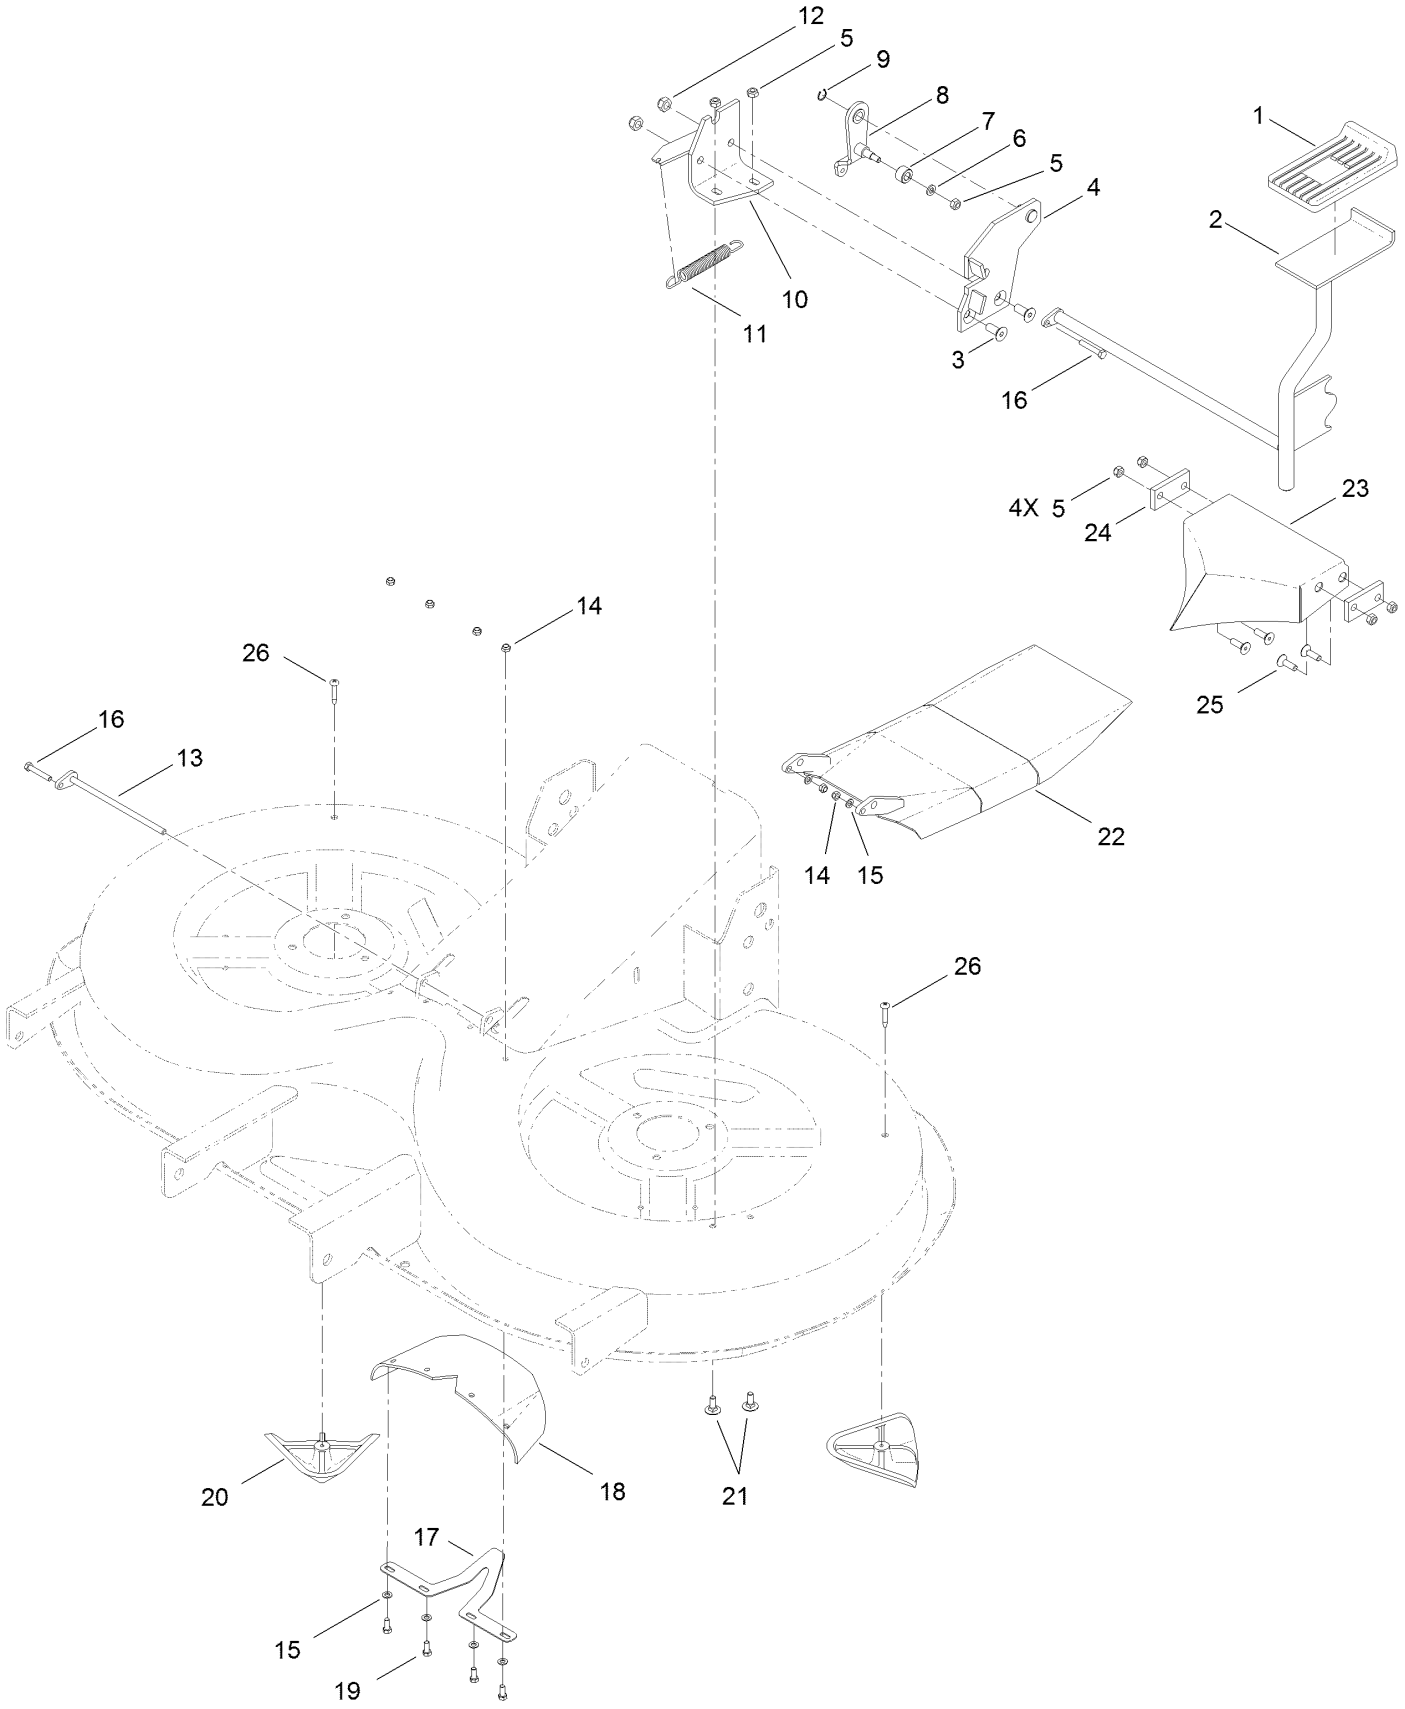

Rear Baffle and Bag on Demand Assembly (continued)


Ref.	Part Number	Qty.	Description
1	106-8583	1	Cover-Lever, Foot
2	106-8582	1	Lever-Foot
3	100-8159	2	Screw-HSFH
4	106-8578	1	Plate-Stop
5	33023-00	7	Nut-Lock
6	33093-00	1	Washer-Flat
7	106-8581	1	Roller
8	106-8579	1	Lever-Spring
9	106-8592	1	Ring-Locking
10	106-8577	1	Bracket-Mounting
11	106-8580	1	Spring
12	48-9510	2	Nut
13	106-8585	1	Rod-Door, Mulch
14	87-5140	6	Nut-Lock
15	52-6430	6	Washer
16	87-5150	2	Bolt
17	106-8567	2	Guide
18	106-8586	1	Gasket-Door, Mulch
19	106-8575	4	Screw-HH
20	106-8587	2	Kicker
21	33123-016	2	Screw-CARR
22	107-8968	1	Door-Mulch
23	106-8573	1	Baffle-Center
24	106-8572	2	Plate-Baffel, Center
25	106-8574	4	Screw
26	104-1451	2	Screw-TAP, PPH

Cutting Pan and Drive System Assembly

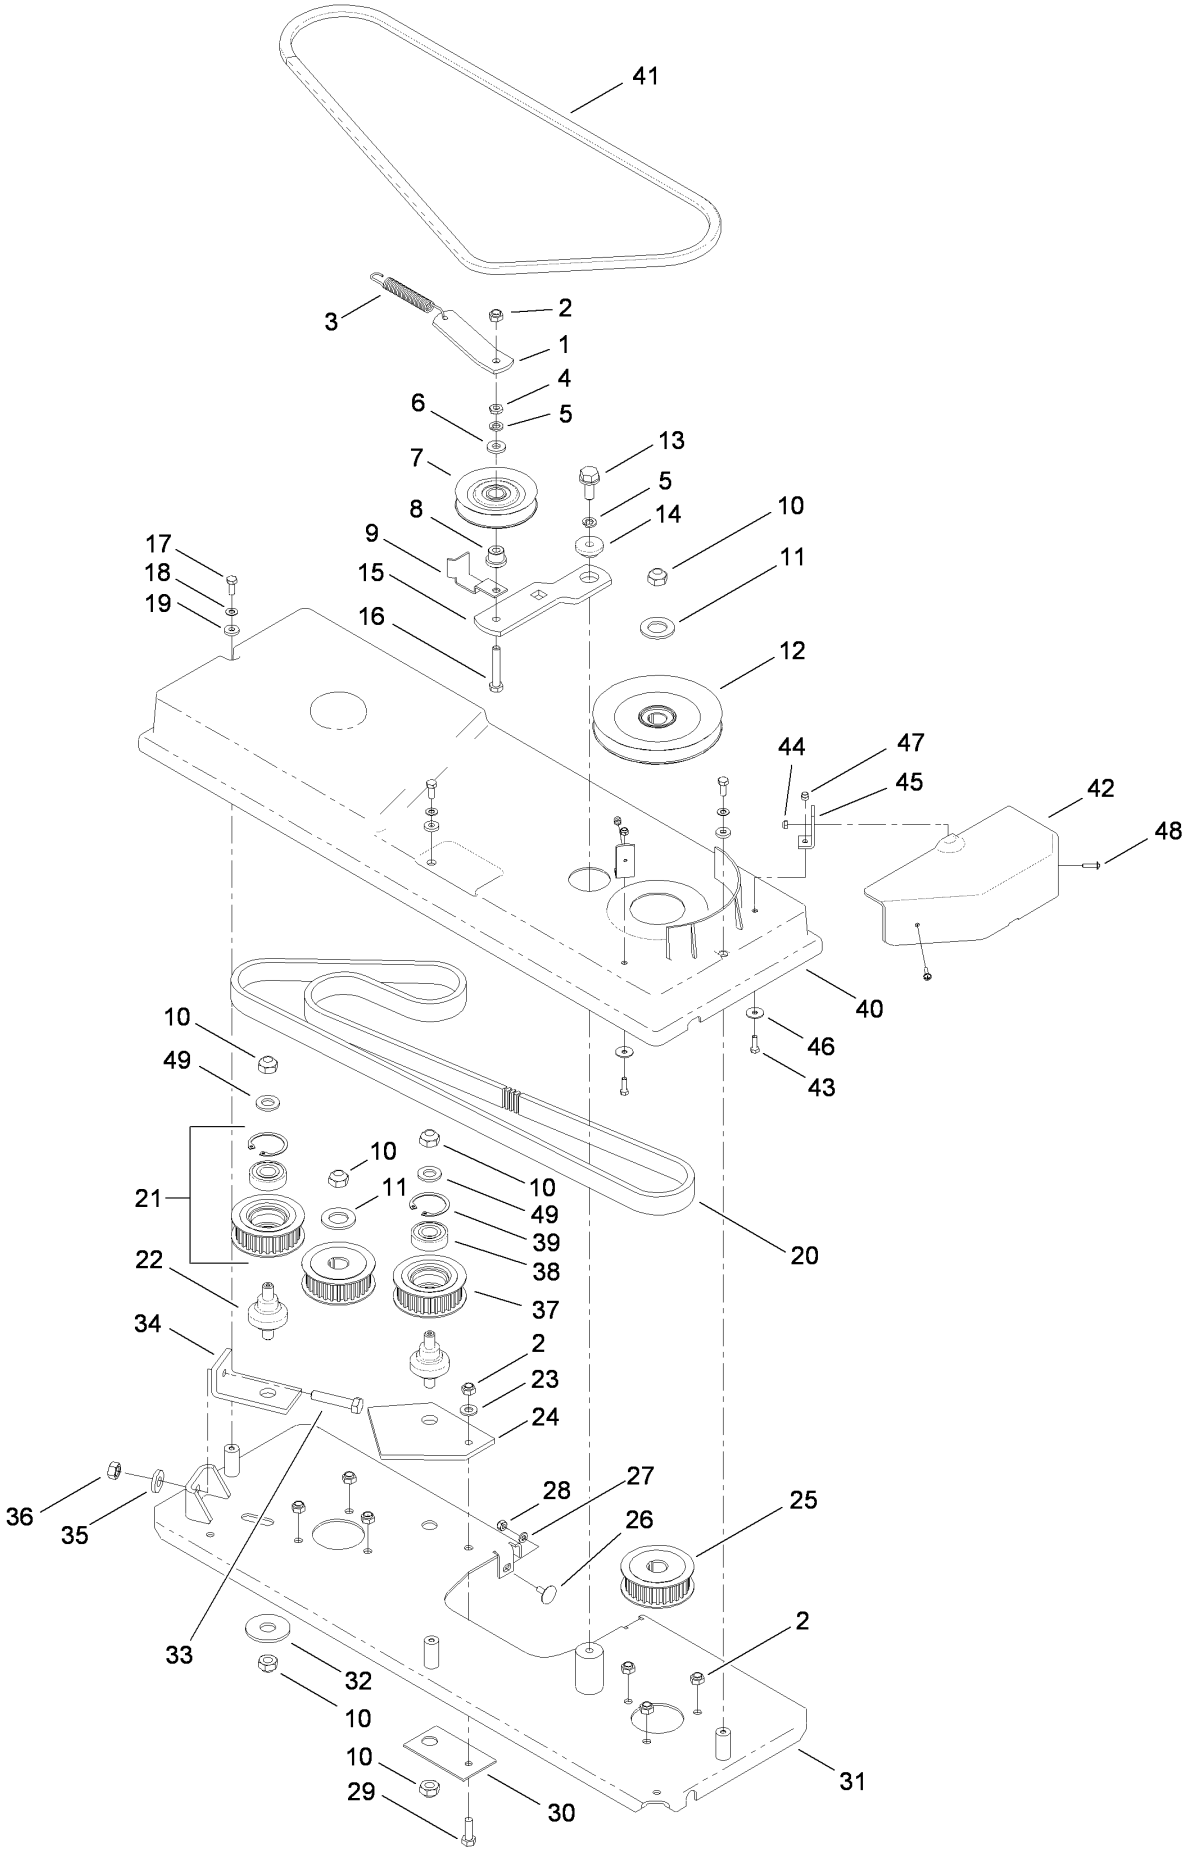

Cutting Pan and Drive System Assembly (continued)


Ref.	Part Number	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	3253-4	1	Washer-Lock
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	1	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3126	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw
49	33096-00	2	Washer-Flat

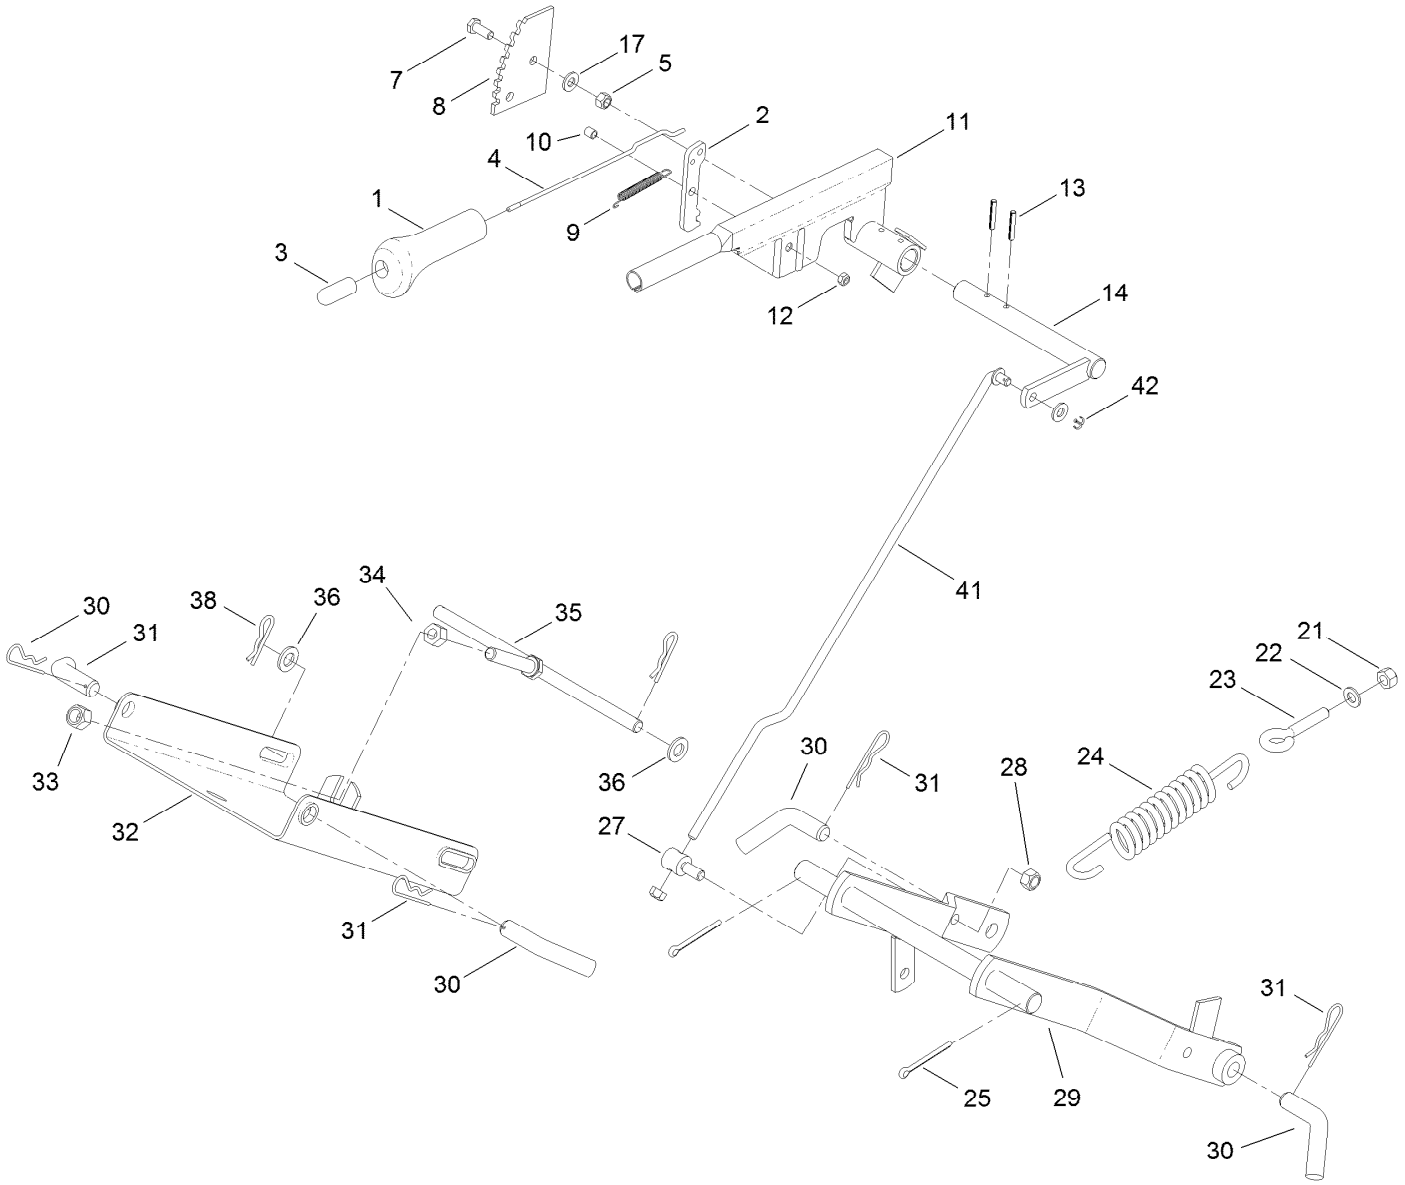

Mower Lift Assembly

Ref.	Part Number	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	114-3244	1	Gear-Segment, Deck Lift
9	104-3134	1	Spring
10	120-8754	1	Bushing
11	104-3136	1	Lever-Arm, Height Adj.
12	33023-00	1	Nut-Lock
13	104-2994	2	Pin-Spring
14	114-3245	1	Shaft-Lift, Deck
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock, NI
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye


Ref.	Part Number	Qty.	Description
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock, NI
29	104-3016	2	Pin-Cotter
30	120-8757	4	Pin-Deck, Suspension Front
31	104-3144	4	Pin-Hair
32	120-8758	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	120-8771	1	Shaft
36	104-3124	2	Washer-Flat
38	104-3148	2	Pin-Hair
41	104-3149	1	Rod-Height, Adj.
42	104-3151	1	Pin-Cotter

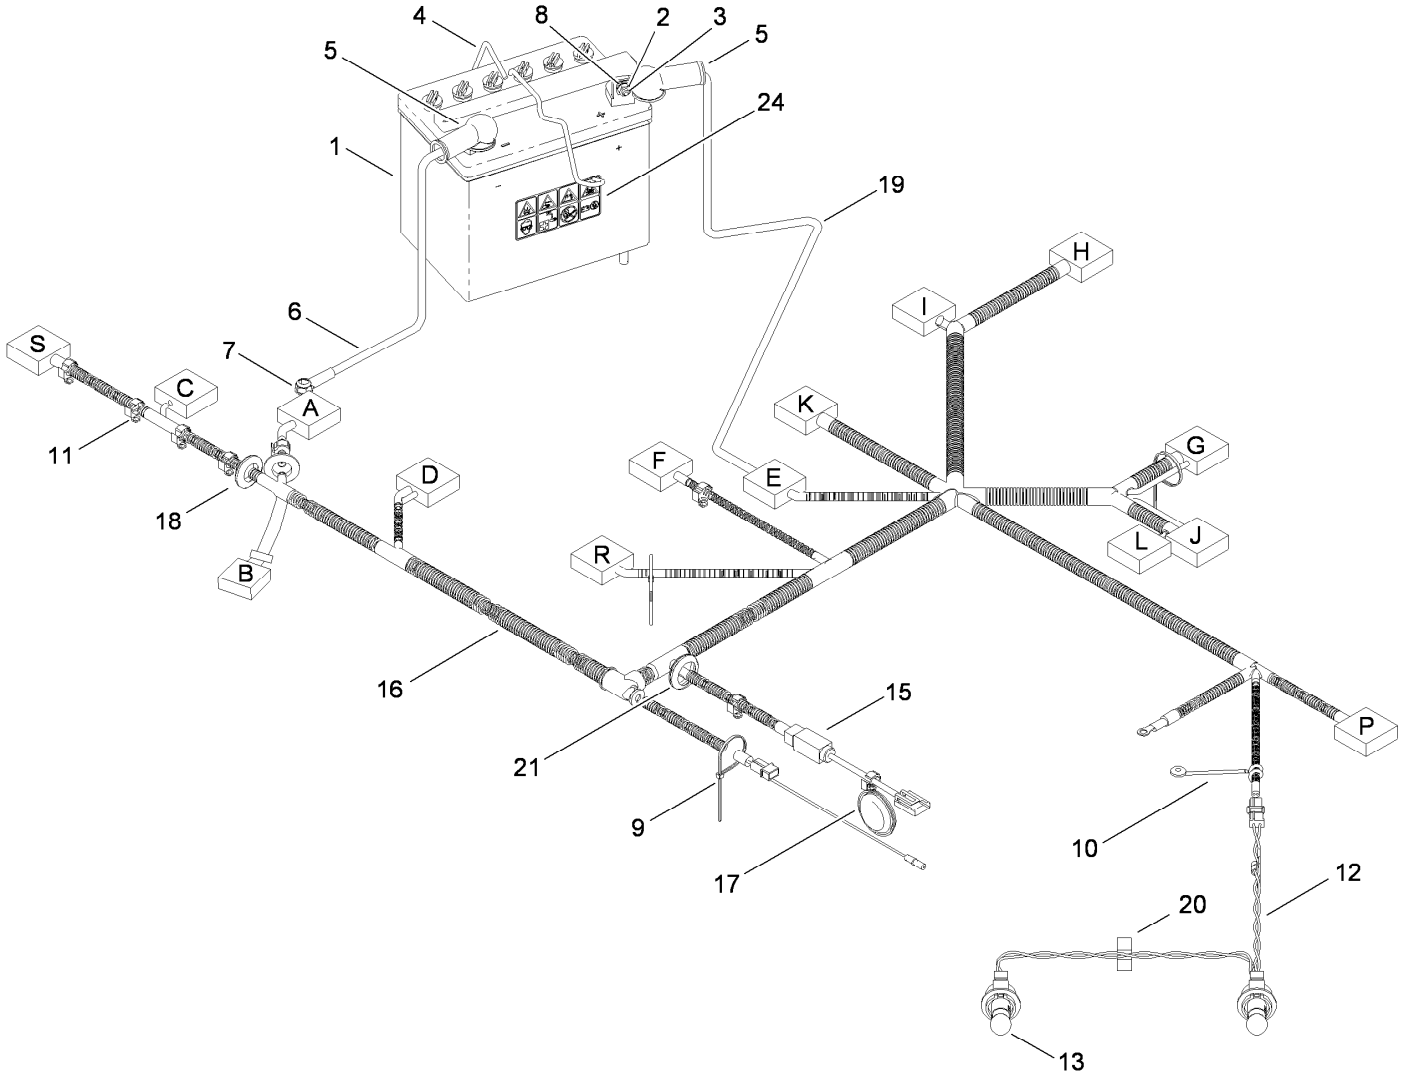

Battery and Electrical Harness Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	104-2491	1	Battery
2	33013-00	2	Nut-Hex
3	33113-016	2	Screw-HH
4	119-2799	1	Clamp-Battery
5	104-3154	2	Boot-Rubber
6	110-8678	1	Cable-Battery, Negative
7	33024-00	1	Nut-Lock
8	33093-00	2	Washer-Flat
9	3334-945	3	Tie-Cable
10	104-3156	1	Holder-Harness, Wiring
11	104-3157	9	Clip-Snap


Ref.	*Part Number*	*Qty.*	*Description*
12	114-3128	1	Harness-Wire, Light
13	114-3129	2	Bulb-Light
15	104-3160	1	Harness-Clutch
16	120-8764	1	Harness-Wiring
17	104-3163	1	Cap
18	104-3165	2	Bushing
19	110-8677	1	Cable-Battery, Positive
20	104-3167	2	Clip-Nylon
21	104-3168	1	Bushing
24	93-7276	1	Decal-Danger

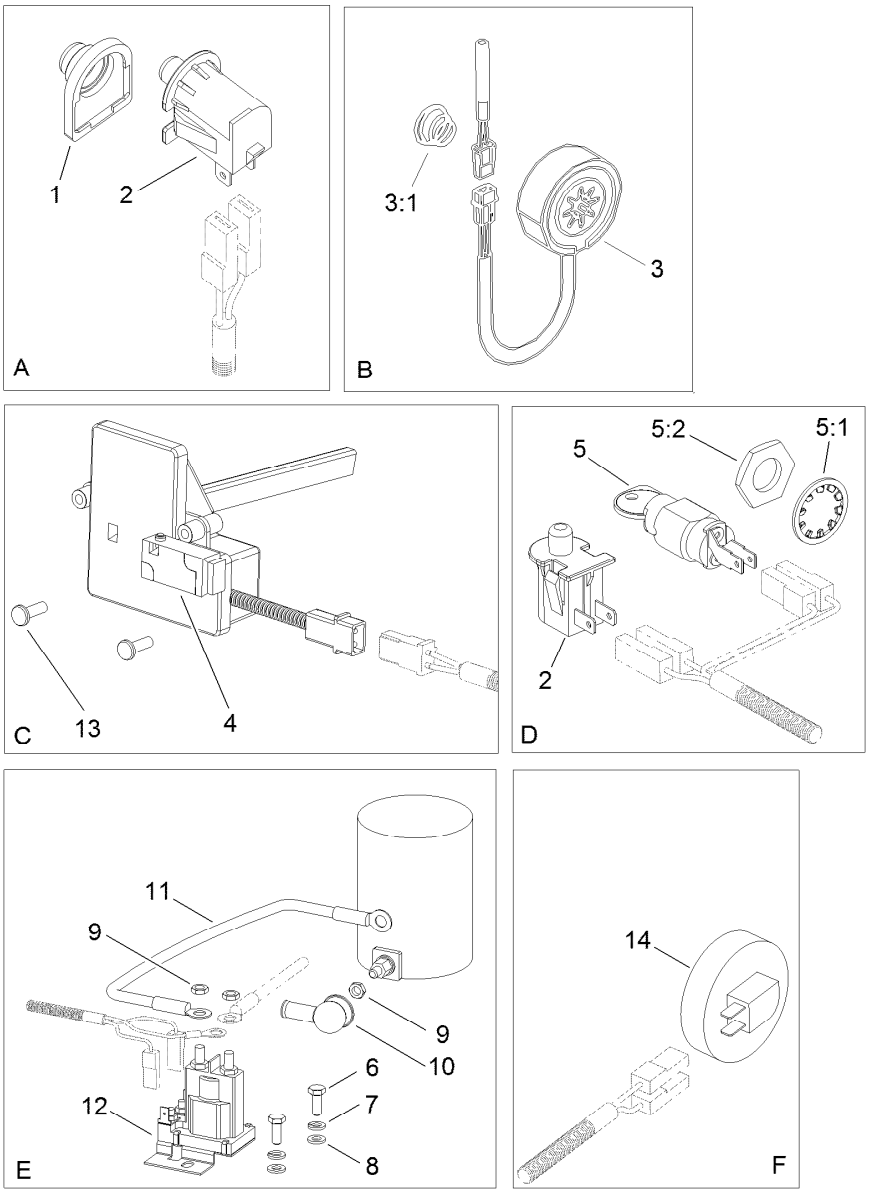



Electrical Switch Assembly No. 1

Ref.	*Part Number*	*Qty.*	*Description*
1	104-3178	2	Cover-Protective
2	104-3179	2	Switch-Delta
3	99-8090	1	Magnet ASM
3:1	93-6601	1	Spring-Compression
4	119-5429	1	Switch-Omron
5	46-5780	1	Starter Switch ASM
5:1	3254-5	1	Washer-Tooth, Internal
5:2	218-461	1	Nut-HH
6	33113-012	2	Screw-HH
7	104-3186	2	Washer-Spring
8	33093-00	2	Washer-Flat
9	32128-32	3	Nut-HHF
10	104-3187	1	Boot-Rubber
11	104-3188	1	Lead-Starter, Electric
12	104-3189	1	Solenoid
13	104-3349	2	Screw
14	120-8773	1	Switch-Seat

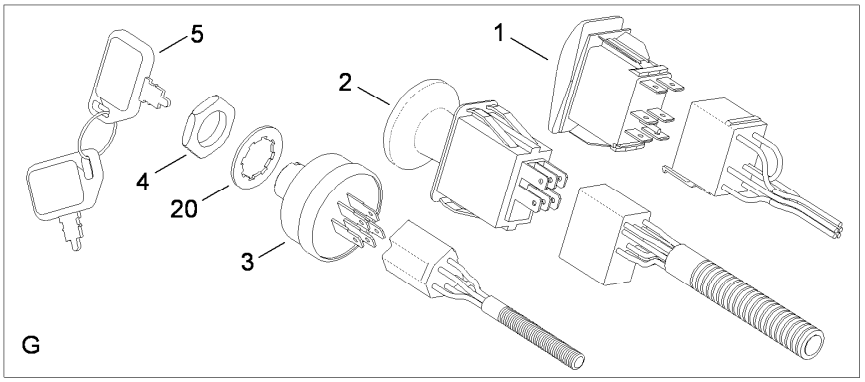

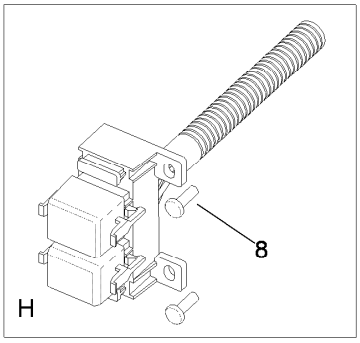

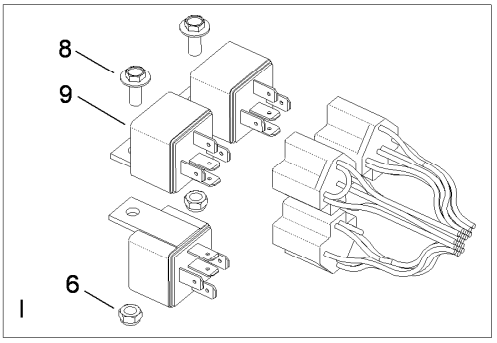


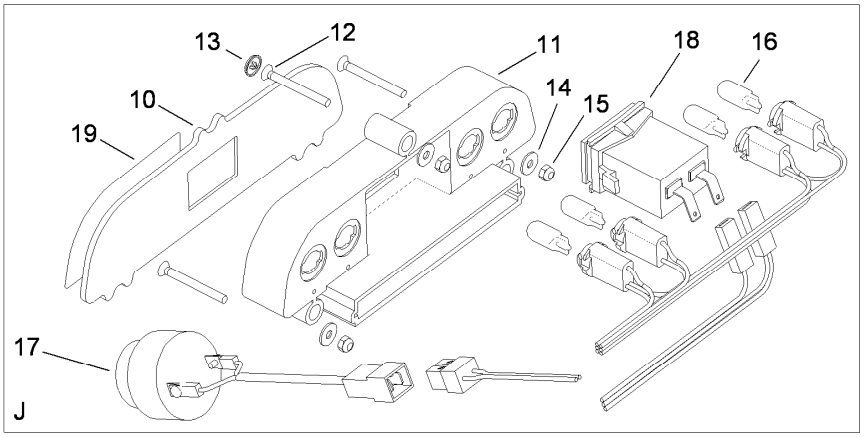

Electrical Switch Assembly No. 2

Ref.	*Part Number*	*Qty.*	*Description*
1	93-0527	1	Switch-Cruise
2	93-9998	1	Switch-PTO
3	92-6785	1	Switch-Ignition
4	218-461	1	Nut-HH
5	62-7770	2	Key-Ignition
6	87-5140	2	Nut-Lock
8	104-2978	4	Screw-Hex
9	104-3173	3	Relay
10	92-6705	1	Lens-Dash
11	92-6732	1	Housing-Light, Indicator

Ref.	*Part Number*	*Qty.*	*Description*
12	104-3191	3	Screw
13	104-3174	3	Cap-Screw
14	104-3175	3	Washer
15	104-2985	3	Nut-Hex
16	104-3176	4	Bulb
17	104-3177	1	Buzzer
18	94-4208	1	Hourmeter
19	104-2854	1	Decal-Dash
20	3254-5	1	Washer-Tooth, Internal

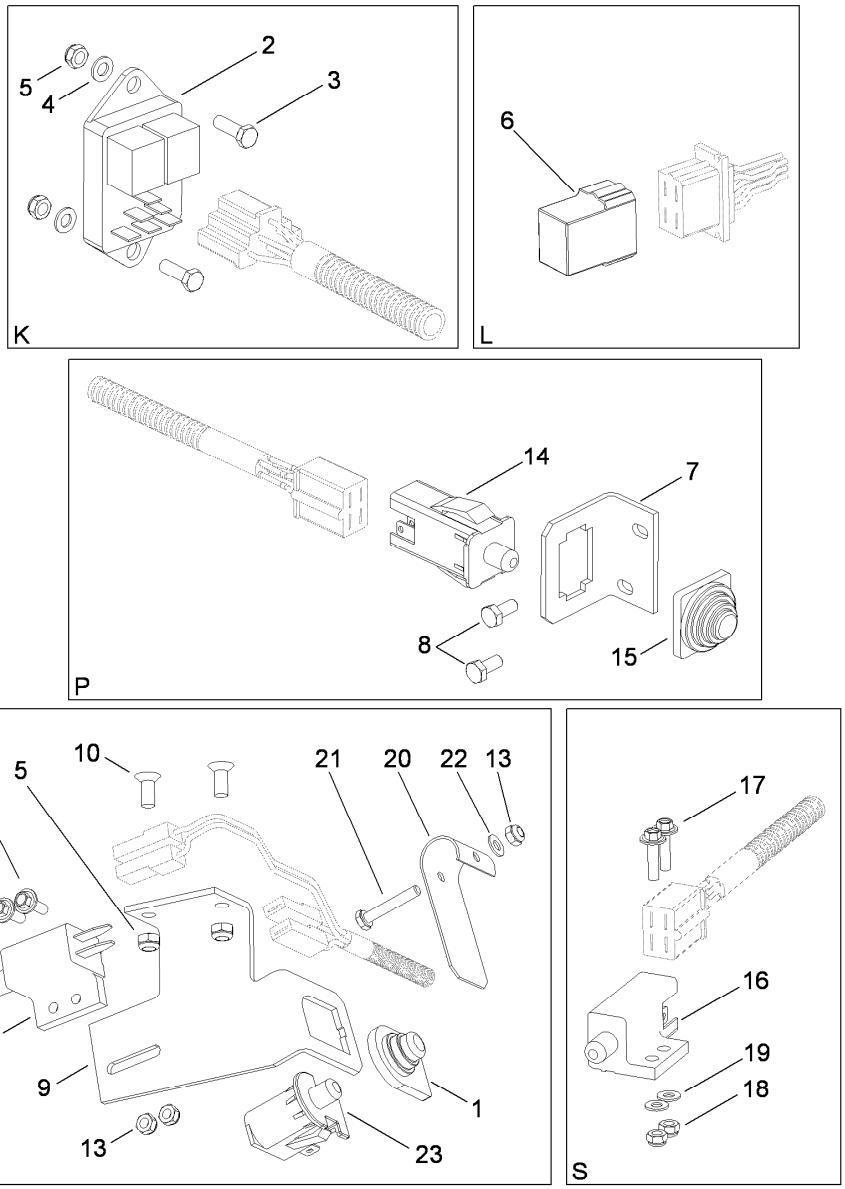

Electrical Switch Assembly No. 3

Ref.	Part Number	Qty.	Description
1	104-3178	1	Cover-Protective
2	99-3701	1	Module-Clutch
3	60-6910	2	Screw
4	52-6430	2	Washer
5	87-5140	4	Nut-Lock
6	104-3169	1	Circuit-Memory
7	104-3333	1	Holder-Switch
8	104-3190	2	Screw
9	104-3332	1	Holder-Switch
10	104-2980	2	Screw
11	95-1653	1	Switch-Pole, Single
12	104-2983	2	Screw

Ref.	Part Number	Qty.	Description
13	104-2985	3	Nut-Hex
14	104-3338	1	Switch-Delta
15	104-3339	1	Cover-Switch
16	104-3330	1	Switch-Delta
17	104-3331	2	Bolt
18	46-0430	2	Nut-Lock
19	52-6430	2	Washer
20	106-5765	1	Lever-Spring
21	104-3009	1	Screw-Hex
22	106-5766	1	Washer
23	104-3180	1	Switch-Delta

Attachments and Accessories

For 74593 DH 220 Lawn Tractor

Product Name	Model/Part
Bagging Blade Kit, 2003 and After DH Series Lawn Tractors	106-8559
Belt Guard Kit	120-1190
Rear Discharge Kit	79471

Notes:

Notes:



Count on it.