Form No. 3367-827 Rev A

TORO®

Count on it.

# Parts Catalog

# Recycler® 48cm Lawn Mower

**Model No. 20951—Serial No. 311000001 and Up**

CE

Register at www.Toro.com.

Original Instructions (EN)

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquid Propane

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head


© 2011—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420



Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

# Contents


Housing Assembly . . . . . 4
Transmission and Rear Wheel Drive Assembly . . . . . 5
Front Wheel and Height-of-Cut Assembly . . . . . 6
Blade Assembly . . . . . 7
Handle Assembly . . . . . 8
Bag Assembly . . . . . 9
Engine and Electrial Assembly . . . . . 10
Attachments and Accessories . . . . . 11

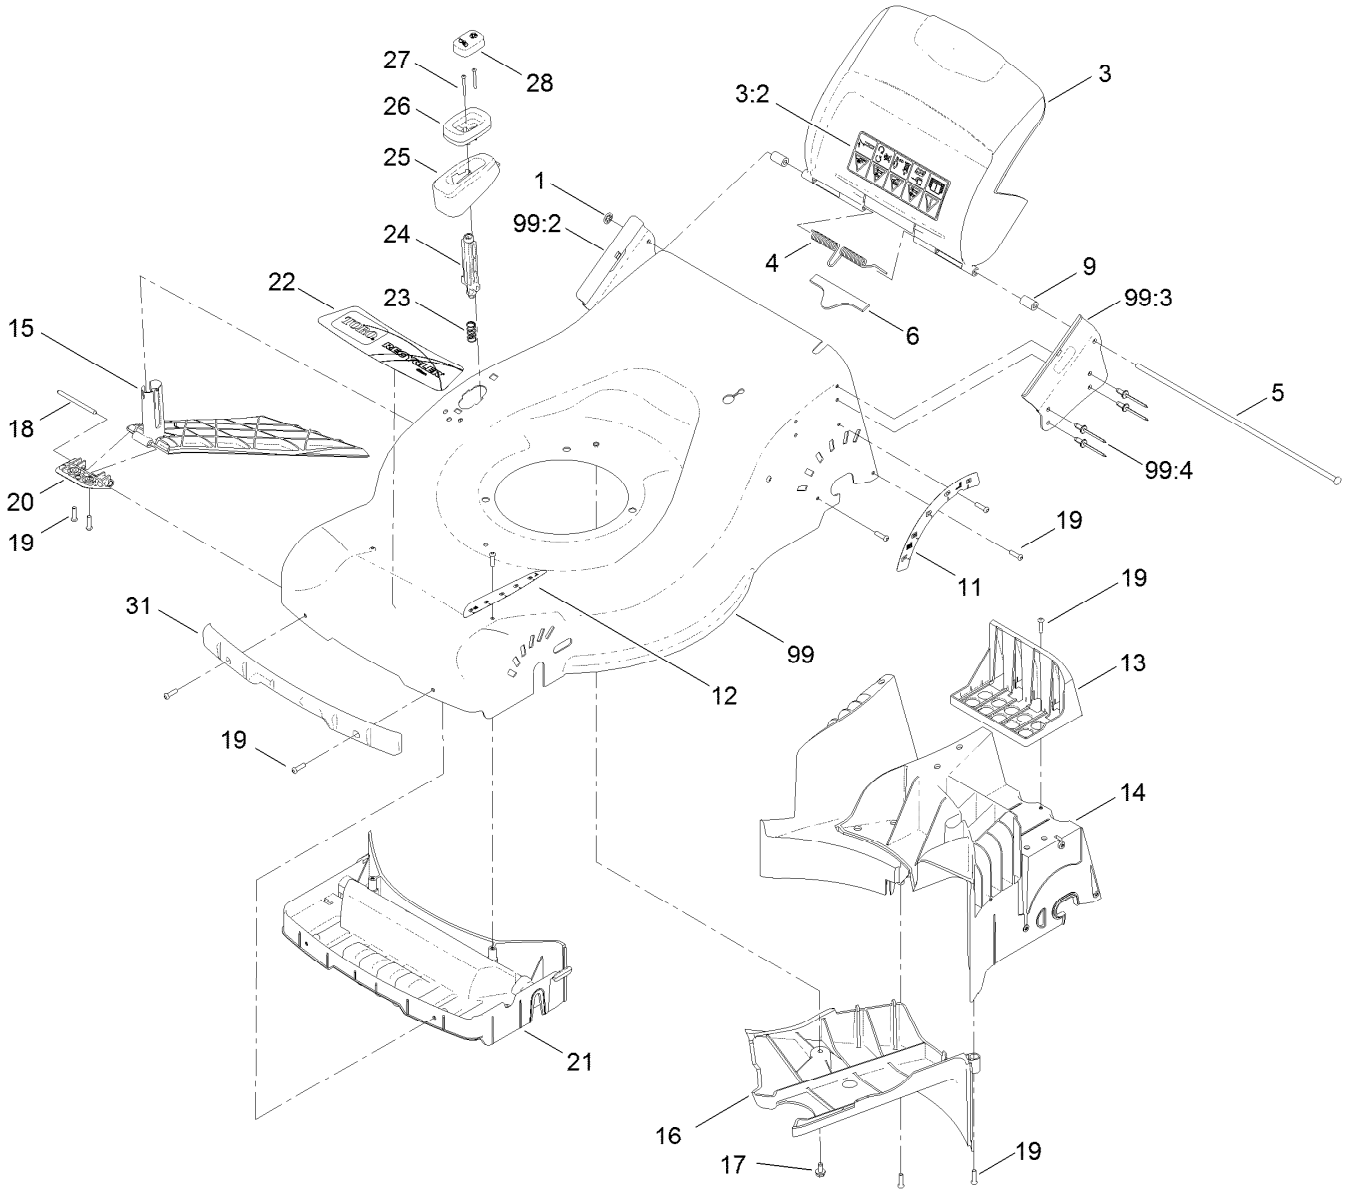


# Housing Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 110-7188 | 1 | Washer-Starlock, Push |
| 3 | 120-3901 | 1 | Rear Door ASM |
| 3:2 | 110-7126 | 1 | Decal-Warning |
| 4 | 110-7107 | 1 | Spring-Torsion |
| 5 | 120-0153 | 1 | Rod-Pivot |
| 6 | 120-3919 | 1 | Seal-Rubber |
| 9 | 120-0173 | 2 | Spacer-Plastic |
| 11 | 120-0193 | 1 | Decal-HOC, Rear |
| 12 | 110-7178 | 1 | Decal |
| 13 | 120-0175 | 1 | Tray-Battery |
| 14 | 120-0157 | 1 | Baffle-Rear |
| 15 | 110-7094 | 1 | Door-Recycle |
| 16 | 110-7109 | 1 | Cover-Belt |
| 17 | 110-7170 | 1 | Screw-HH |
| 18 | 110-7108 | 1 | Pin-Hinge |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 19 | 110-1271 | 16 | Screw-Torx, Pan Head |
| 20 | 110-7095 | 1 | Hinge-Door, Recycle |
| 21 | 110-7066 | 1 | Baffle-Front |
| 22 | 120-0192 | 1 | Decal-Deck |
| 23 | 110-7141 | 1 | Spring-Compression |
| 24 | 110-7129 | 1 | Latch-Recycle |
| 25 | 110-7097 | 1 | Cover-Door, Recycle |
| 26 | 110-7136 | 1 | Housing-Knob |
| 27 | 110-7143 | 2 | Screw-Torx, Pan Head |
| 28 | 119-2254 | 1 | Knob-Recycle |
| 31 | 110-7067 | 1 | Bumper-Front |
| 99 | 120-0199 | 1 | Deck ASM |
| 99:2 | 120-0150 | 1 | Bracket-Handle, Right |
| 99:3 | 120-0151 | 1 | Bracket-Handle, Left |
| 99:4 | 110-7193 | 8 | Rivet-Pop |

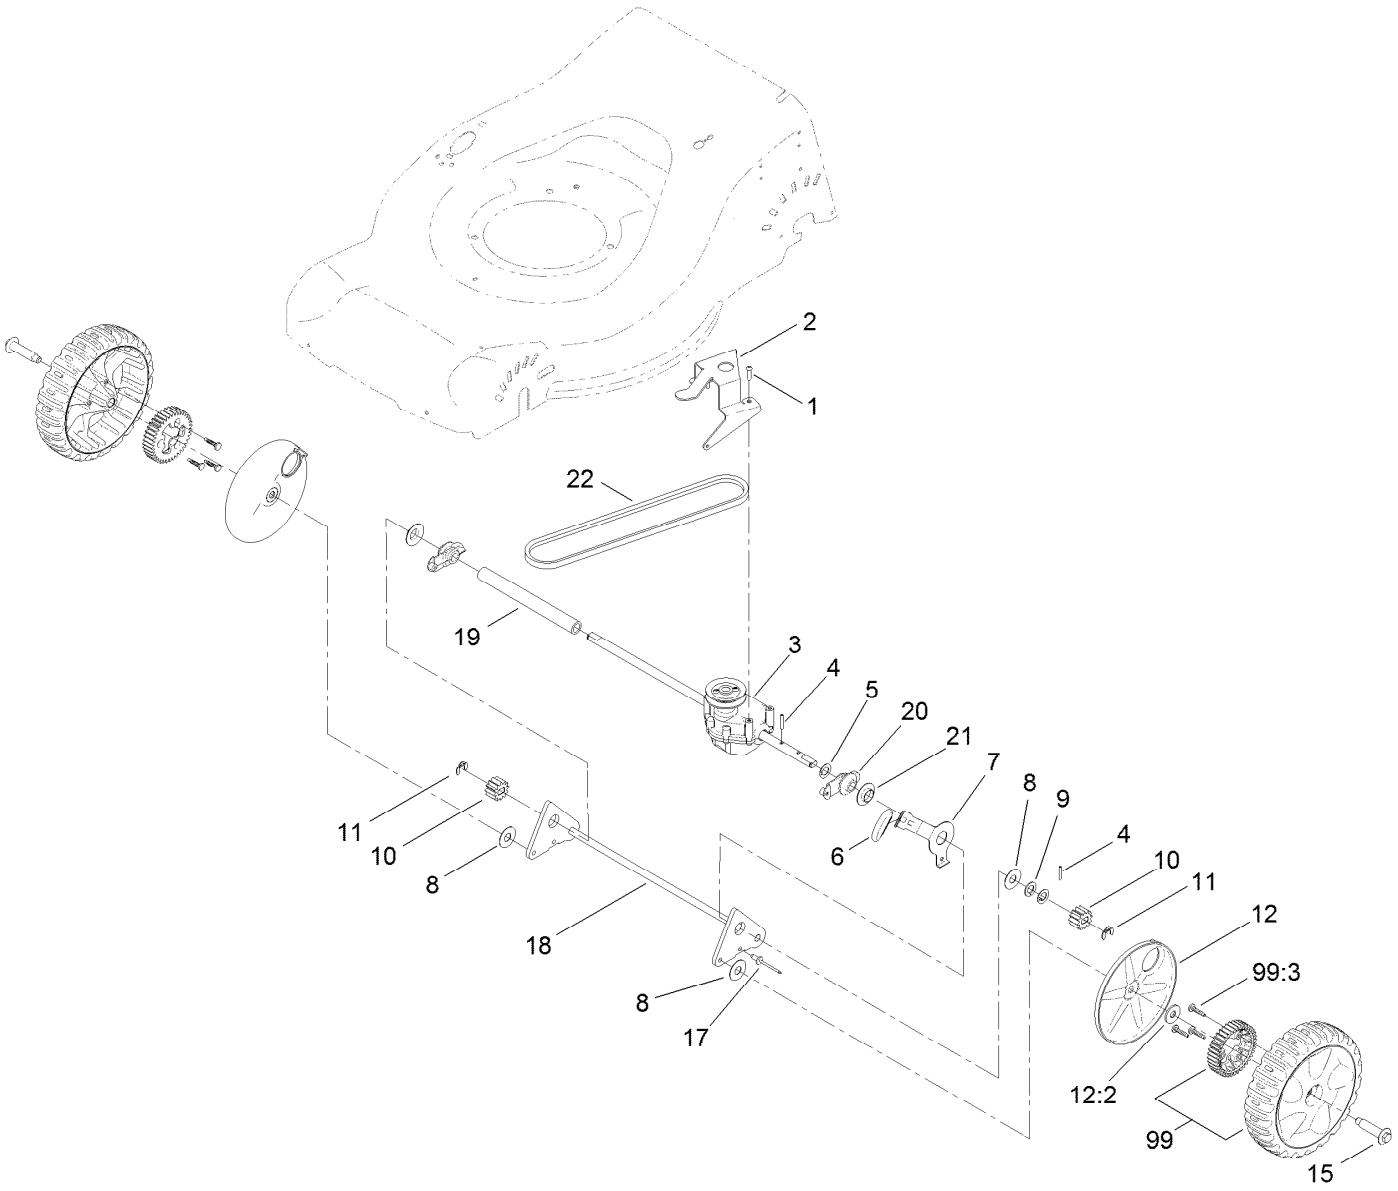


# Transmission and Rear Wheel Drive Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 110-1271 | 3 | Screw-Torx, Pan Head |
| 2 | 110-7158 | 1 | Bracket-Gear Case |
| 3 | 120-0181 | 1 | Transmission |
| 4 | 110-7192 | 2 | Pin-Roll |
| 5 | 112-3911 | 2 | Washer-Thrust, Keyed |
| 6 | 110-7125 | 1 | Knob-HOC |
| 7 | 120-0191 | 1 | Arm-Spring, Rear |
| 8 | 110-7179 | 3 | Washer-Plain |
| 9 | 110-7191 | 1 | Washer-Thrust |
| 10 | 115-4668 | 2 | Gear-Pinion, 12T |
| 11 | 65-2720 | 2 | Ring-Clip, Locking |
| 12 | 110-1792 | 2 | Wheel Cover ASM |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 12:2 | 614426 | 1 | Washer-Stepped |
| 15 | 614650 | 2 | Bolt-Shoulder |
| 17 | 110-7193 | 1 | Rivet-Pop |
| 18 | 120-0178 | 1 | Rear Pivot Bar ASM |
| 19 | 115-3850 | 1 | Spacer |
| 20 | 110-7112 | 2 | Bushing-Camlock |
| 21 | 110-7171 | 2 | Spacer-Flange |
| 22 | 110-9429 | 1 | V-Belt |
| 99 | 119-7068 | 2 | 8 Inch Wheel And Gear ASM |
| 99:3 | 27-6260 | 3 | Screw-Drive |

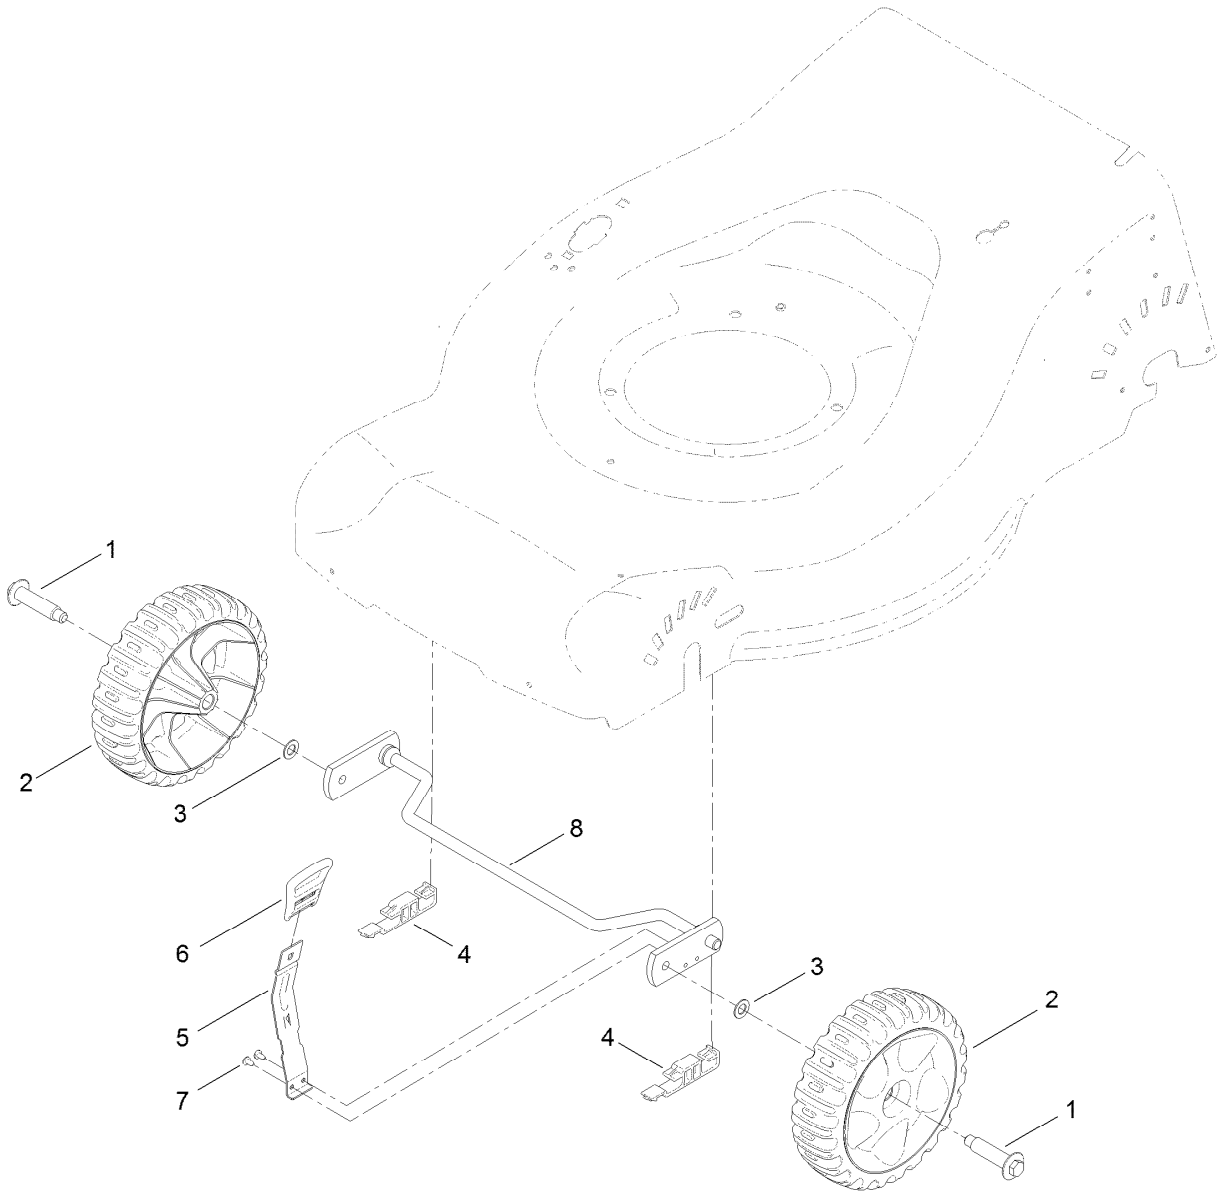



# Front Wheel and Height-of-Cut Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 614650 | 2 | Bolt-Shoulder |
| 2 | 119-3777 | 2 | 7 Inch Wheel And Tire ASM |
| 3 | 40-1940 | 2 | Washer |
| 4 | 110-7068 | 2 | Clamp-Axle, Front |
| 5 | 120-0168 | 1 | Arm-Spring |
| 6 | 110-7125 | 1 | Knob-HOC |
| 7 | 110-7175 | 2 | Screw-Pan Head, TAP |
| 8 | 120-0165 | 1 | Front Pivot Bar ASM |

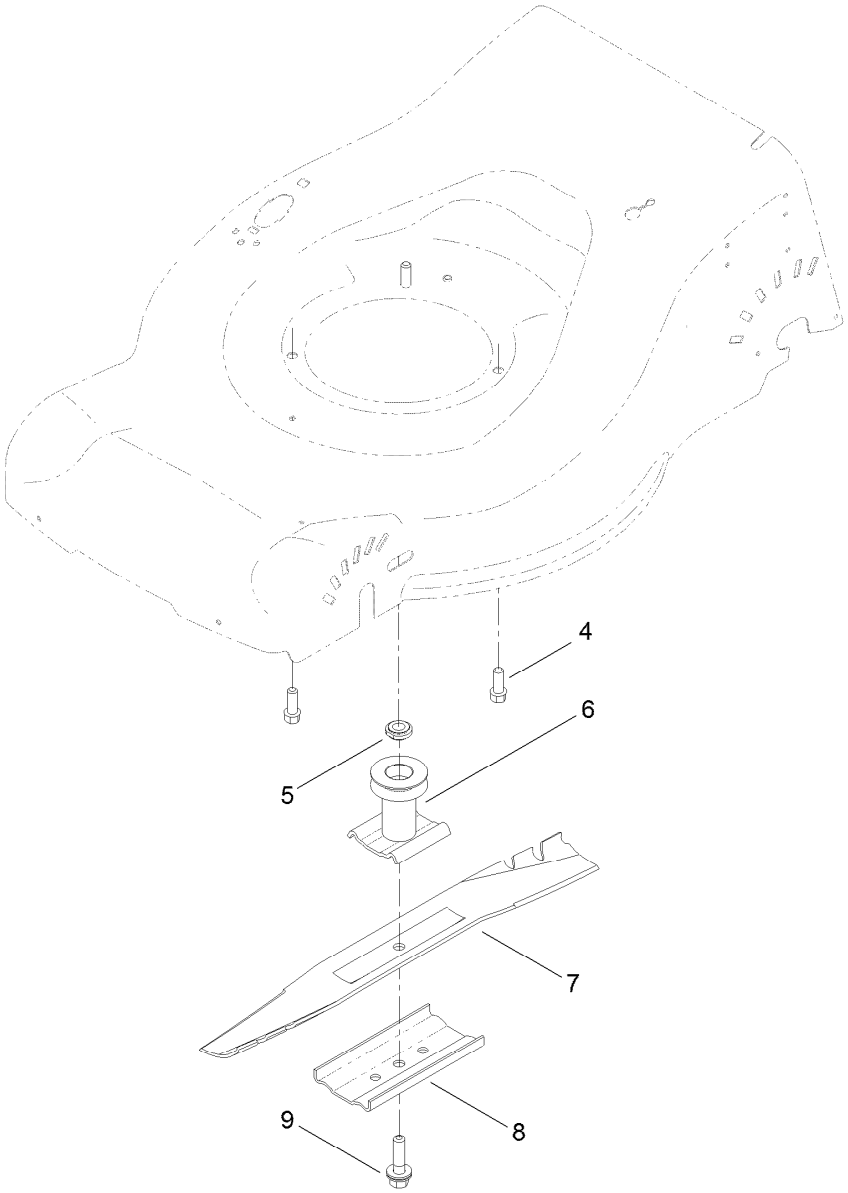


# Blade Assembly


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 4 | 92-1624 | 3 | Screw-HWH |
| 5 | 106-3999 | 1 | Spacer-Driver |
| 6 | 106-3987 | 1 | Blade Driver ASM |
| 7 | 110-7080 | 1 | Blade |
| 8 | 108-3766 | 1 | Support-Blade |
| 9 | 105-8579 | 1 | Bolt-Blade |

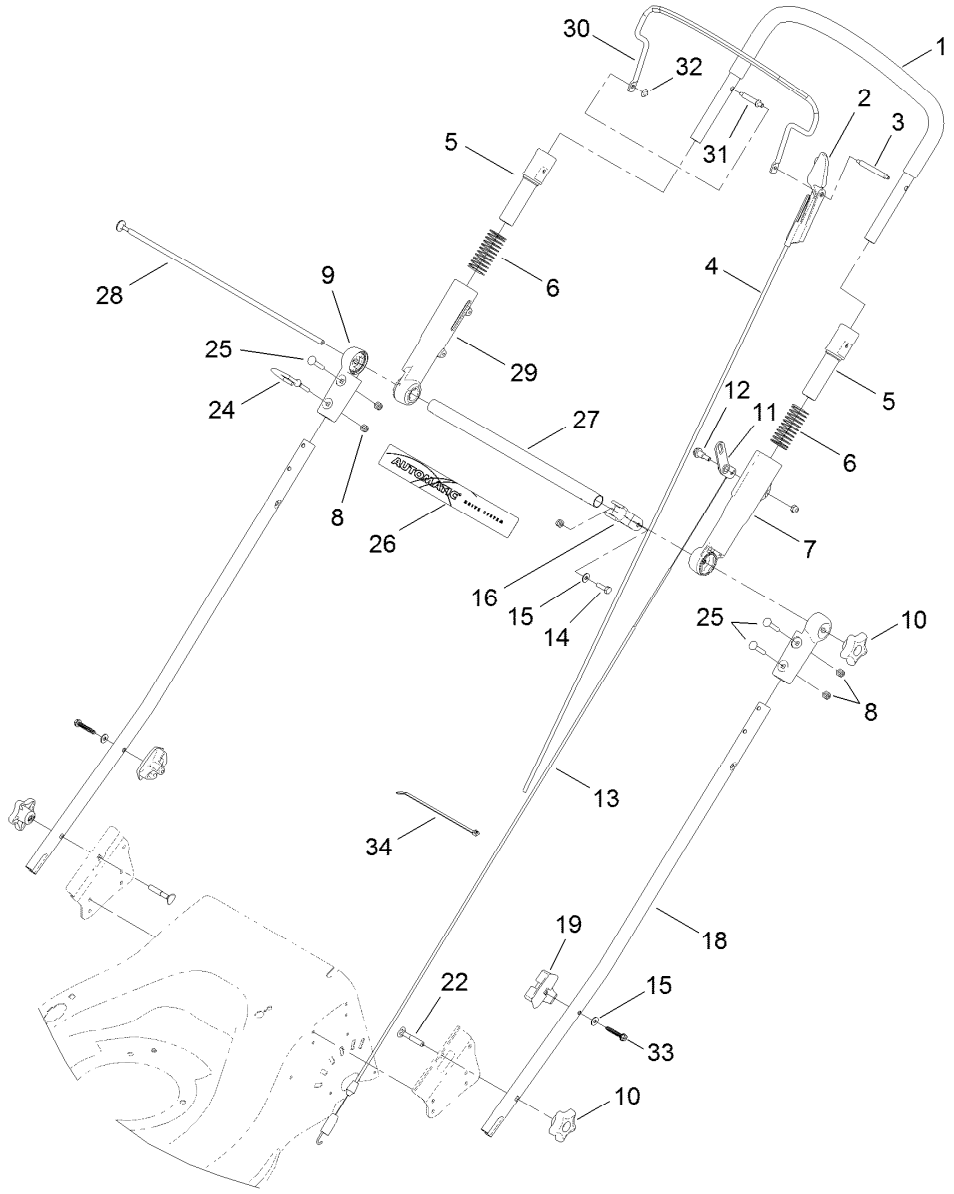


# Handle Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 108-0974 | 1 | Upper Handle ASM |
| 2 | 112-8764 | 1 | Stop-Pivot |
| 3 | 108-1008 | 1 | Pin-Bail, LH |
| 4 | 107-3903 | 1 | Cable-Brake |
| 5 | 112-8754 | 2 | Sleeve-Inner |
| 6 | 107-3869 | 2 | Spring-Compression |
| 7 | 112-1544 | 1 | Sleeve-Outer, LH |
| 8 | 3296-73 | 6 | Nut-Lock, NI |
| 9 | 107-3865 | 2 | Mount-Handle, Lower |
| 10 | 117-5976 | 3 | Knob-Handle, Locking |
| 11 | 107-3893 | 1 | Lever-Traction |
| 12 | 104-0858 | 1 | Bolt-Shoulder |
| 13 | 110-9162 | 1 | Cable-Traction |
| 14 | 321-5 | 1 | Screw-HH |
| 15 | 3256-1 | 3 | Washer-Flat |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 16 | 112-8801 | 1 | Clamp-Cable |
| 18 | 120-0187 | 2 | Tube-Handle |
| 19 | 112-3928 | 2 | Anchor-Bag |
| 22 | 112-8876 | 2 | Screw-Handle |
| 24 | 107-3908 | 1 | Guide-Rope, Upper |
| 25 | 108-0988 | 3 | Screw-CARR |
| 26 | 120-3907 | 1 | Decal-Ads |
| 27 | 107-3867-03 | 1 | Tube-Cross |
| 28 | 107-3871 | 1 | Rod-Threaded |
| 29 | 112-1545 | 1 | Sleeve-Outer, RH |
| 30 | 110-1819-03 | 1 | Bail-Brake |
| 31 | 108-0959 | 1 | Pin-Handle |
| 32 | 108-9378 | 1 | Retainer-Push On |
| 33 | 108-4946 | 2 | Screw-Plastite |
| 34 | 614249 | 1 | Strap-Tie |

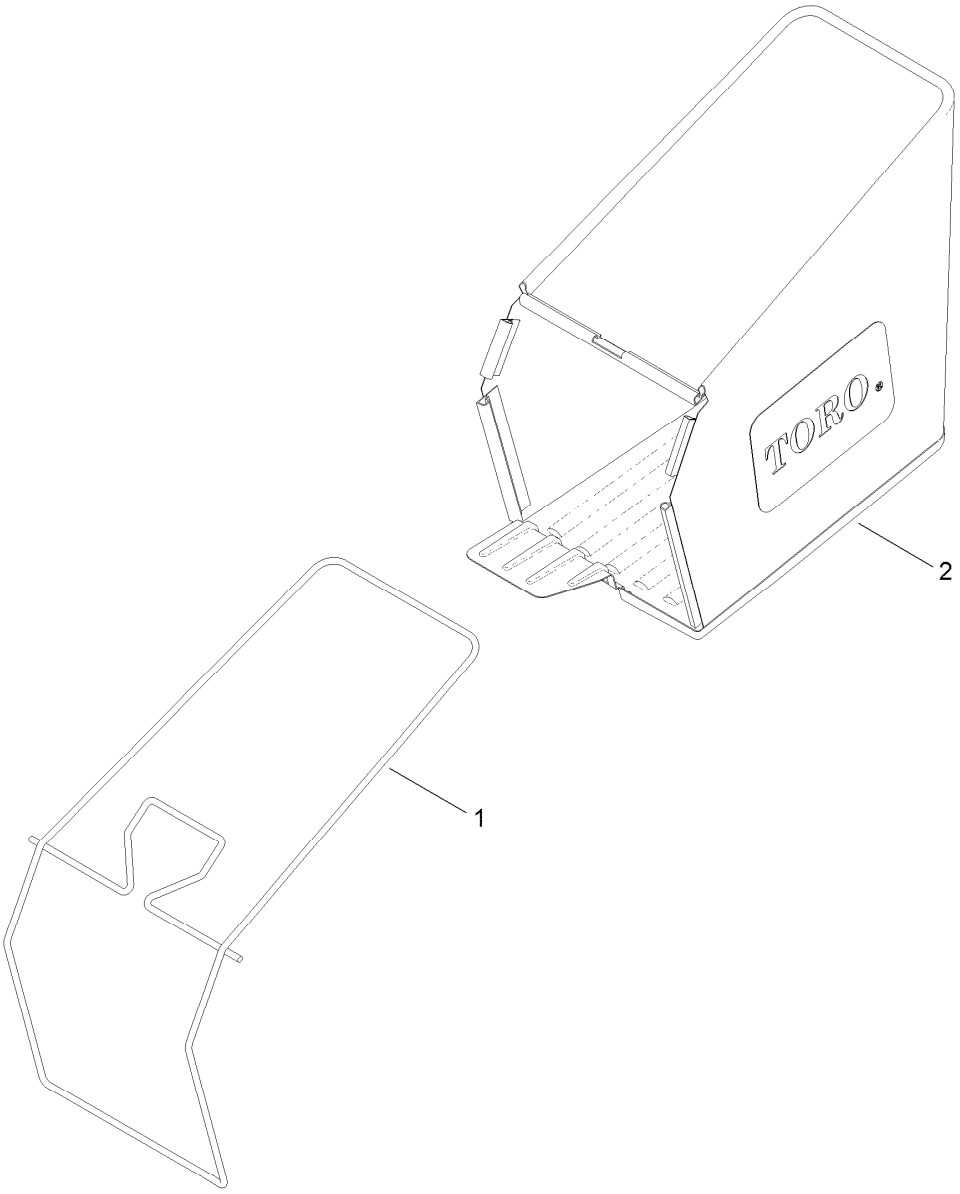


# Bag Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 114-5374 | 1 | Bag Frame ASM |
| 2 | 110-7255 | 1 | Bag ASM |

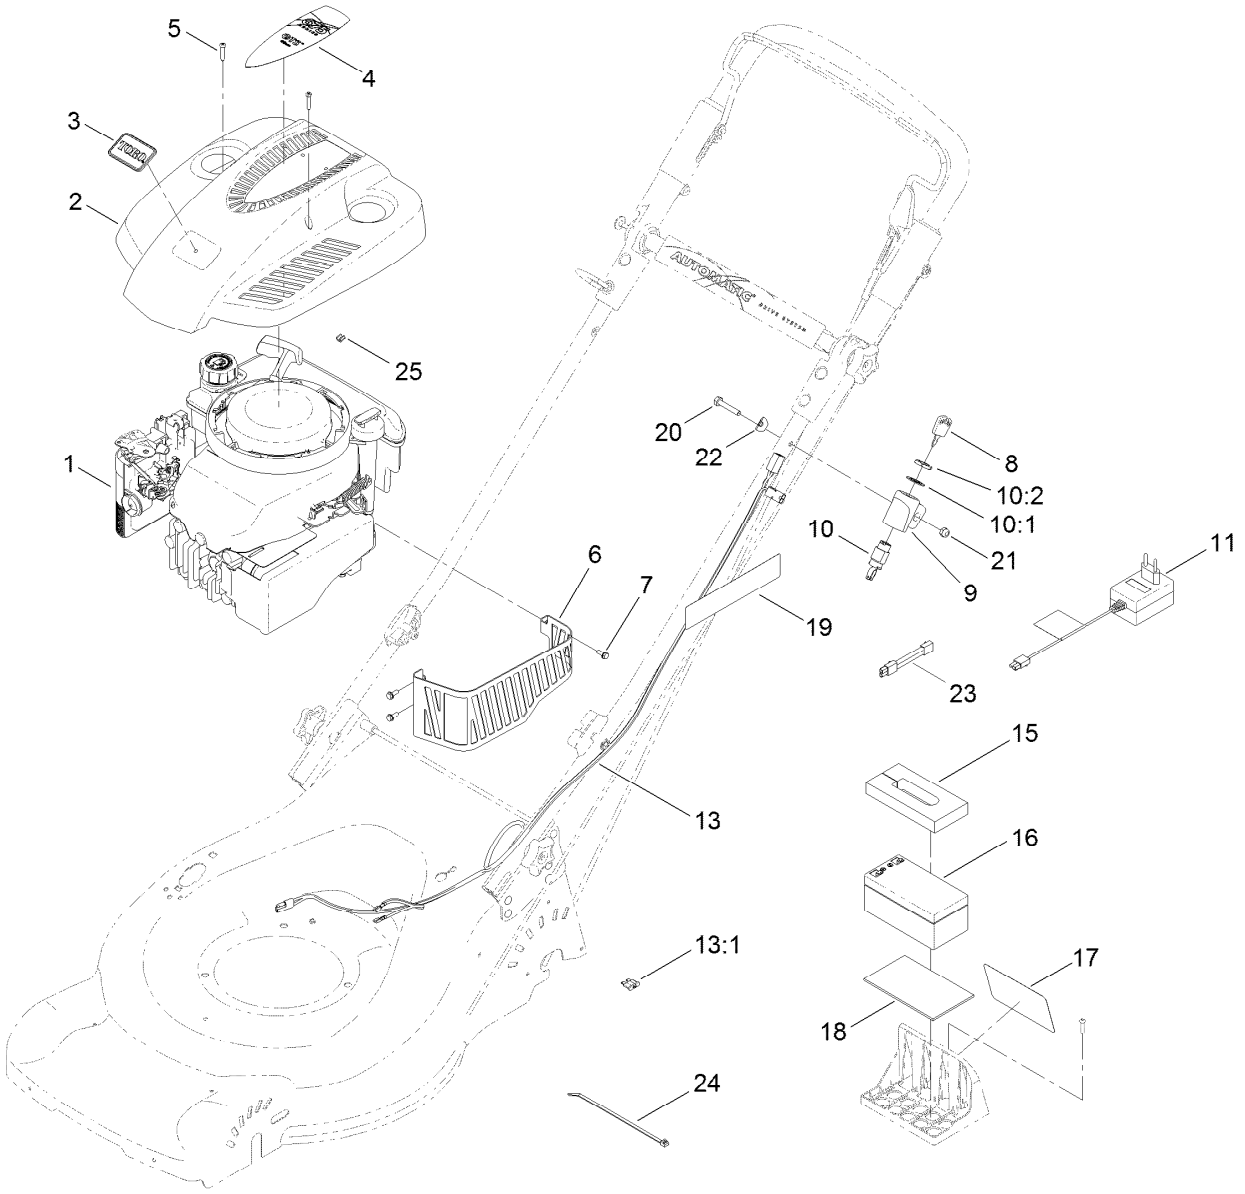


# Engine and Electrial Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Engine-Briggs, 126T05-0328-B1 ● |
| 2 | 110-9156 | 1 | Shroud-Engine |
| 3 | 120-0183 | 1 | Plate-Logo |
| 4 | 120-3905 | 1 | Decal-Engine, 48Cm |
| 5 | 93-0231 | 3 | Screw-PPH |
| 6 | 110-9158 | 1 | Shield-Muffler |
| 7 | 32144-1 | 3 | Screw-Taptite |
| 8 | 700918 | 1 | Key |
| 9 | 108-9760 | 1 | Mount-Switch |
| 10 | 46-5780 | 1 | Starter Switch ASM |
| 10:1 | 3254-5 | 1 | Washer-Tooth, Internal |
| 10:2 | 218-461 | 1 | Nut-HH |
| 11 | 98-2391 | 1 | Charger-European, 12V Dc |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 120-0182 | 1 | Harness-Wire, Wpm |
| 13:1 | 99-6124 | 1 | Fuse-Blade, 40 Amp |
| 15 | 120-0189 | 1 | Foam Block |
| 16 | 106-8397 | 1 | Battery-12 Volt |
| 17 | 110-7059 | 1 | Decal-Fuse |
| 18 | 108-0987 | 1 | Foam-Battery |
| 19 | 104-7953 | 1 | Decal-Harness |
| 20 | 321-51 | 1 | Screw-HH |
| 21 | 3296-73 | 1 | Nut-Lock, NI |
| 22 | 92-8632 | 1 | Washer |
| 23 | 107-3749 | 1 | Adapter-Charger |
| 24 | 614249 | 1 | Strap-Tie |
| 25 | 92-1701 | 1 | Stop-Rope |

● Not serviced separately

# Attachments and Accessories

## For 20951 Recycler 48cm Lawn Mower

| Product Name | Model/Part |
| --- | --- |
| Toro Walk Mower Cover | 490-7462 |




**Count on it.**