Form No. 3368-144 Rev C

TORO®

Count on it.

Parts Catalog

TITAN MX4880 Zero-Turn-Radius Riding Mower

Model No. 74871—Serial No. 311000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

© 2011—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Contents


Main Frame Assembly 4
Wheel and Tire Assembly No. 120-5506 5
Control Panel and Body Styling Pod Assembly 6
Traction Drive Assembly 7
RH Hydro Transmission Assembly No. 119-8893 8
LH Hydro Transmission Assembly No. 119-8892 10
Motion Control Assembly 12
Brake Link Assembly 14
Engine, Muffler and Clutch Assembly 15
Fuel Delivery Assembly 16
Multi Layer Fuel Tank Assembly No. 117-7352 17
Roll-Over Protection System Assembly 18
Electrical Assembly 19
Deck Lift Assembly 20
48 Inch Deck Assembly 21
48 Inch Deck Decal Assembly No. 120-7116 22
48 Inch Deck Belt and Hi-Flo Blade Assembly 23
Seat Assembly 24
Seat Assembly No. 116-0038 25
Attachments and Accessories 26

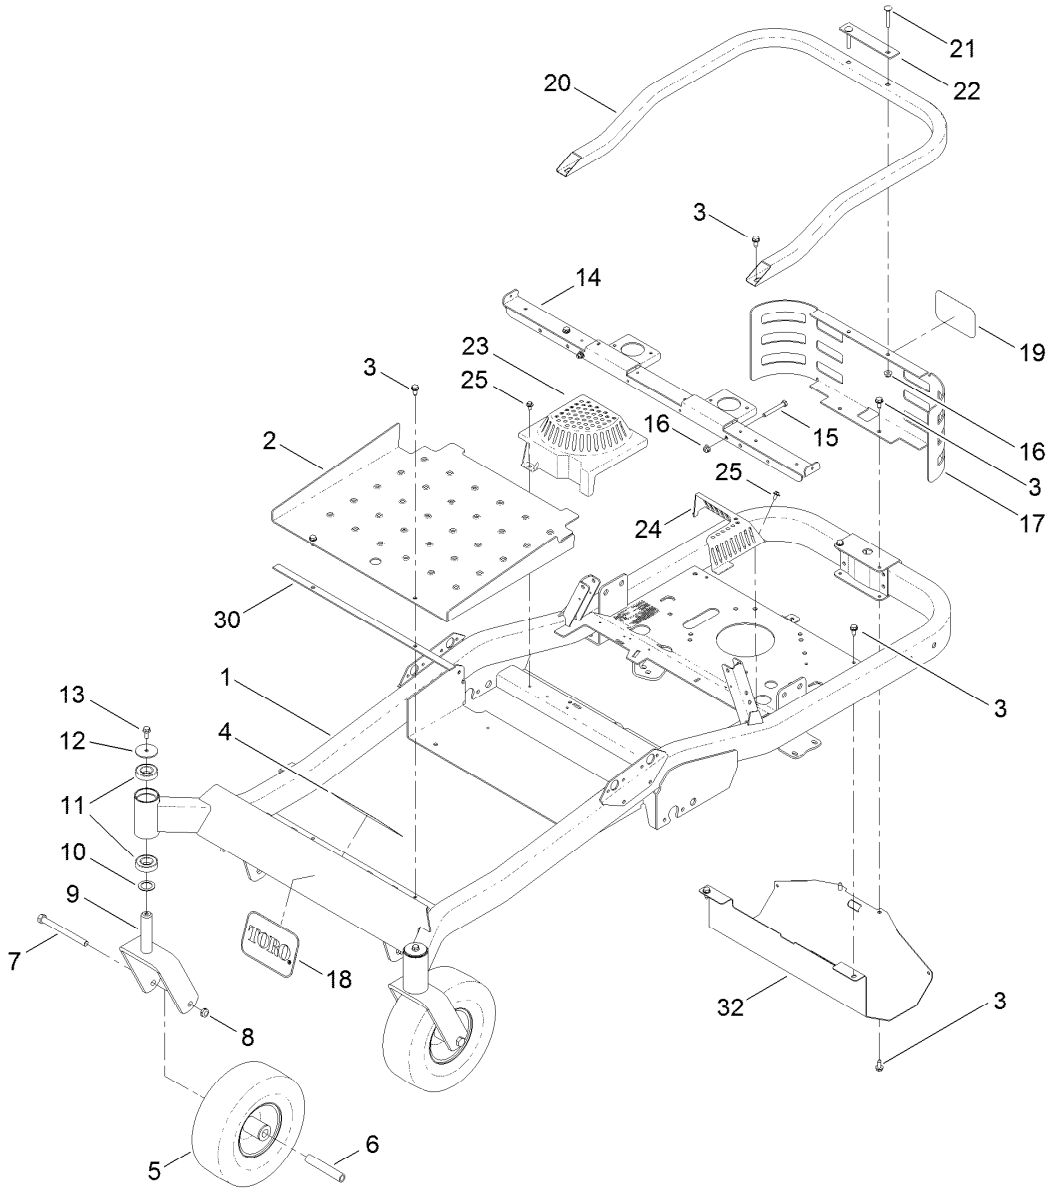

Main Frame Assembly


Ref.	Part Number	Qty.	Description
1	117-7356-01	1	Frame ASM
2	115-2531-05	1	Pan-Floor
3	32144-70	10	Screw-HWHTF
4	120-5466	1	Decal-Safety
5	120-5506	2	Wheel And Tire ASM
6	120-2228	2	Spacer-Spanner
7	325-36	2	Screw-HH
8	3296-45	2	Nut-Lock, NI
9	119-8923-01	2	Caster Fork ASM
10	10-8110	2	Washer-Thrust
11	109-3678	4	Bearing-Ball
12	109-3724	2	Washer
13	3234-47	2	Screw-HHF
14	117-7451-03	1	Seat Support ASM

Ref.	Part Number	Qty.	Description
15	322-12	2	Screw-HH
16	104-8300	4	Nut-Flange, NI
17	120-2248-03	1	Guard-Rear
18	62-5550	1	Decal
19	105-8278	1	Decal
20	115-2565-01	1	Guard-Rear, Tube
21	3230-6	2	Screw-CARR
22	115-5061-01	1	Plate-Spacer
23	117-1241	1	Cover-Fan, RH
24	117-1242	1	Cover-Fan, LH
25	46-8560	2	Screw-HHFTF
30	117-7238	1	Strip-Vibration, Anti
32	120-2247-03	1	Guard-Muffler

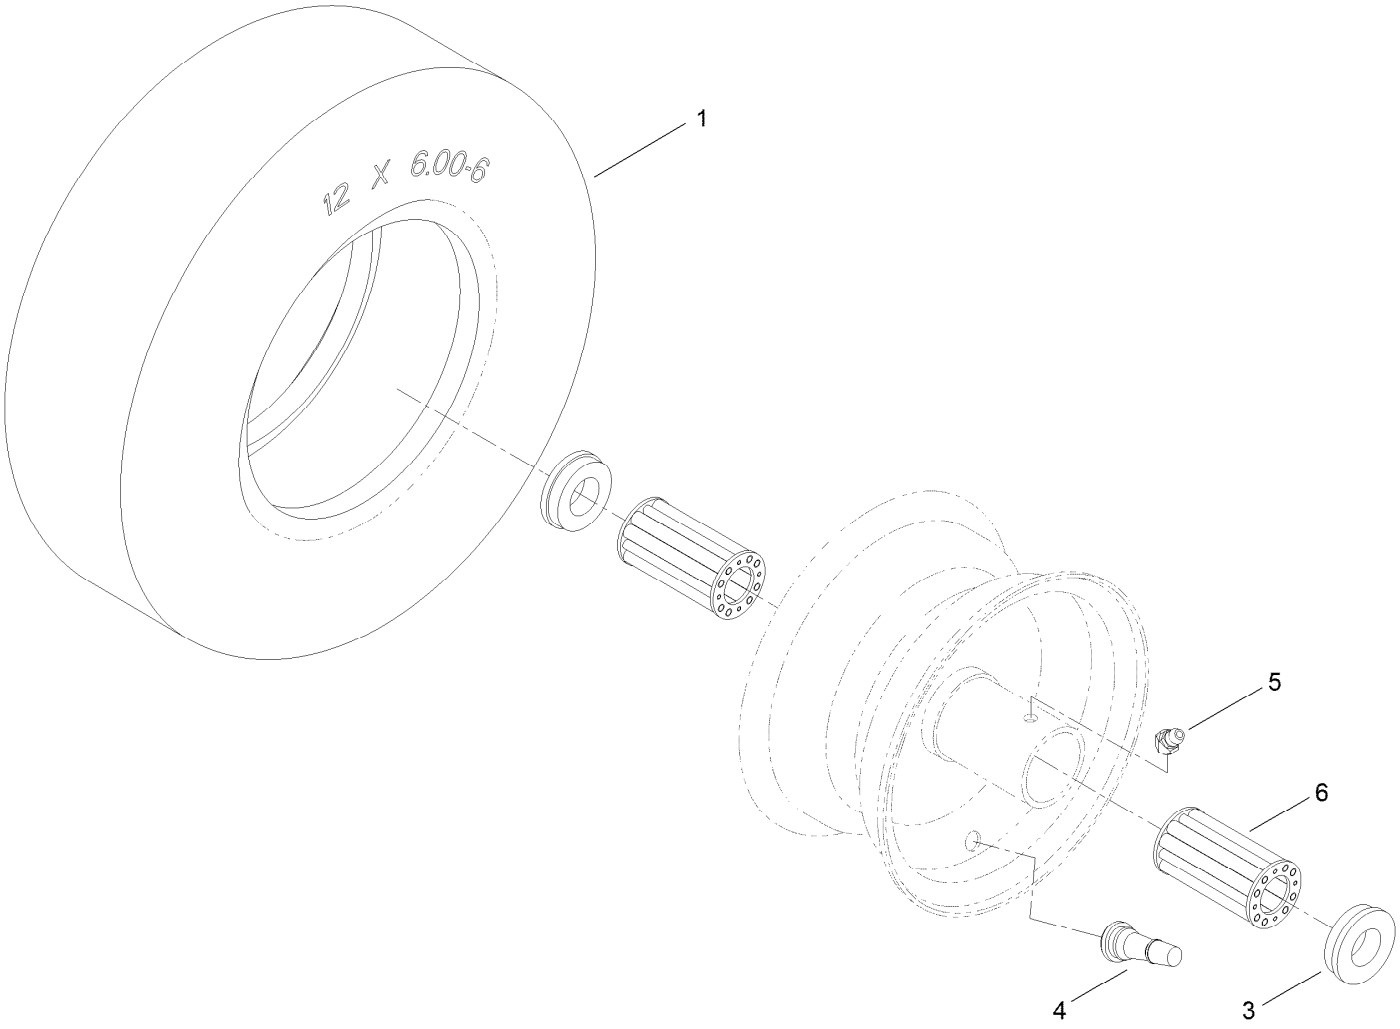


Wheel and Tire Assembly No. 120-5506

Ref.	*Part Number*	*Qty.*	*Description*
1	120-7115	1	Tire
3	120-7124	2	Bushing-Flange
4	5108	1	Valve
5	120-7125	1	Fitting-Zerk
6	83-4740	2	Bearing

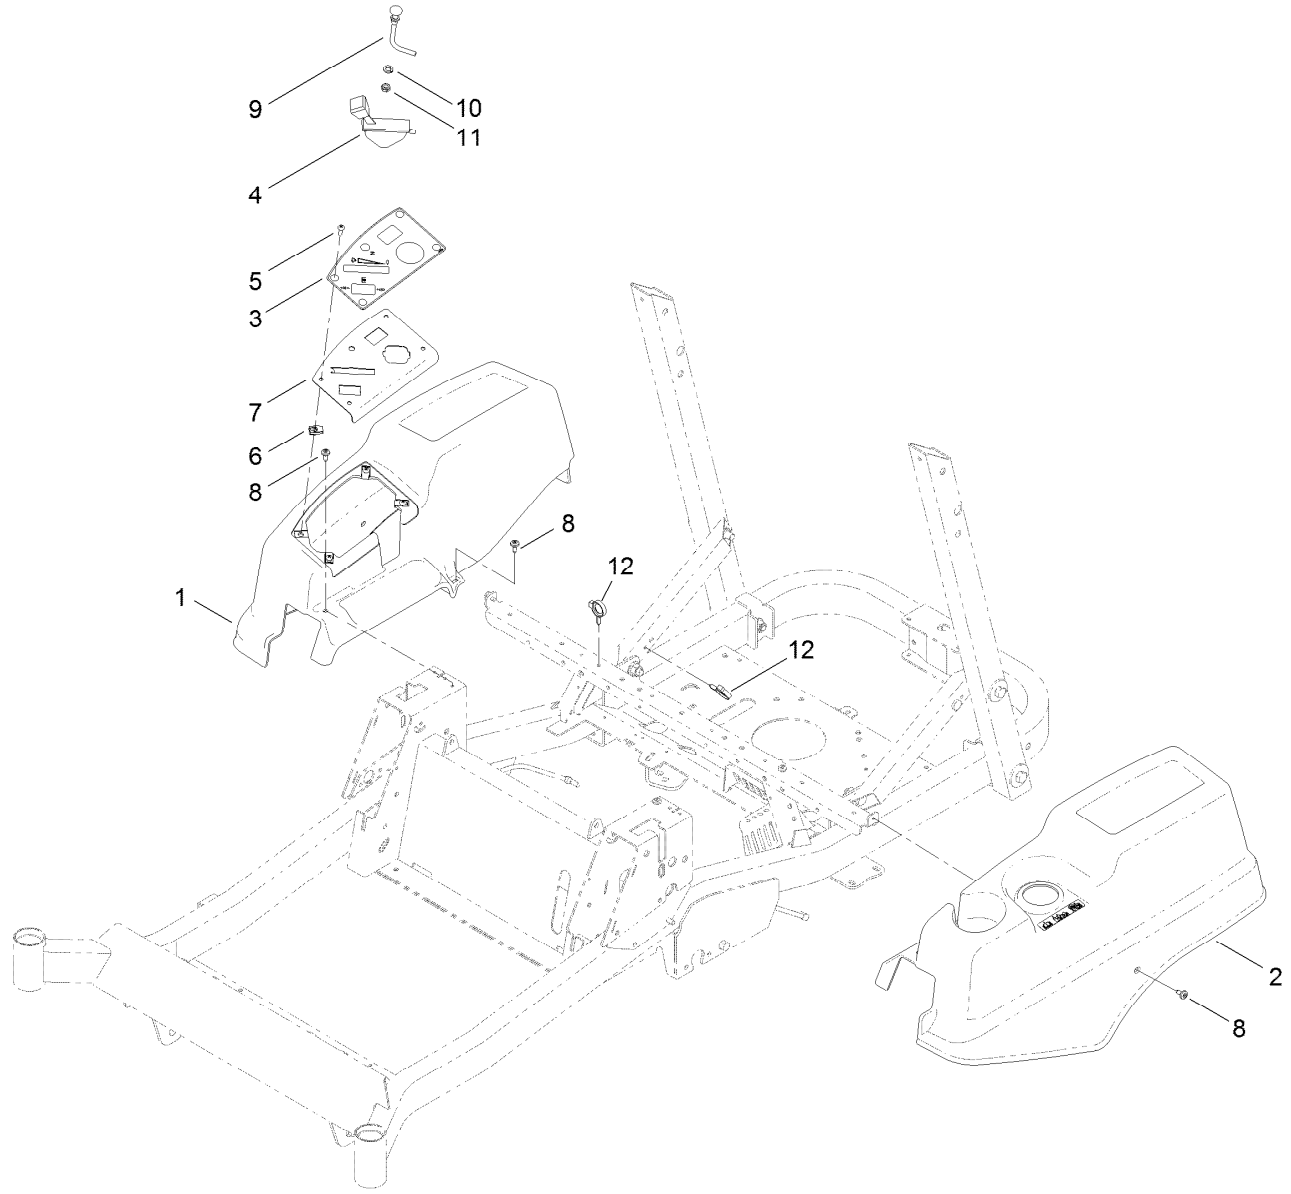

Control Panel and Body Styling Pod Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	120-5488	1	Pod-RH
2	120-5489	1	Pod-LH
3	115-9632	1	Decal-Panel, Control
4	120-2290	1	Cable-Throttle
5	3258-166	4	Screw-PRH
6	107069	4	Clip
7	115-2591-03	1	Panel-Control
8	112-4004	6	Screw-Shoulder
9	120-2291	1	Cable-Choke
10	3253-21	1	Washer-Lock
11	3220-3	1	Nut-HJ
12	105-1853	2	Clamp-Hose

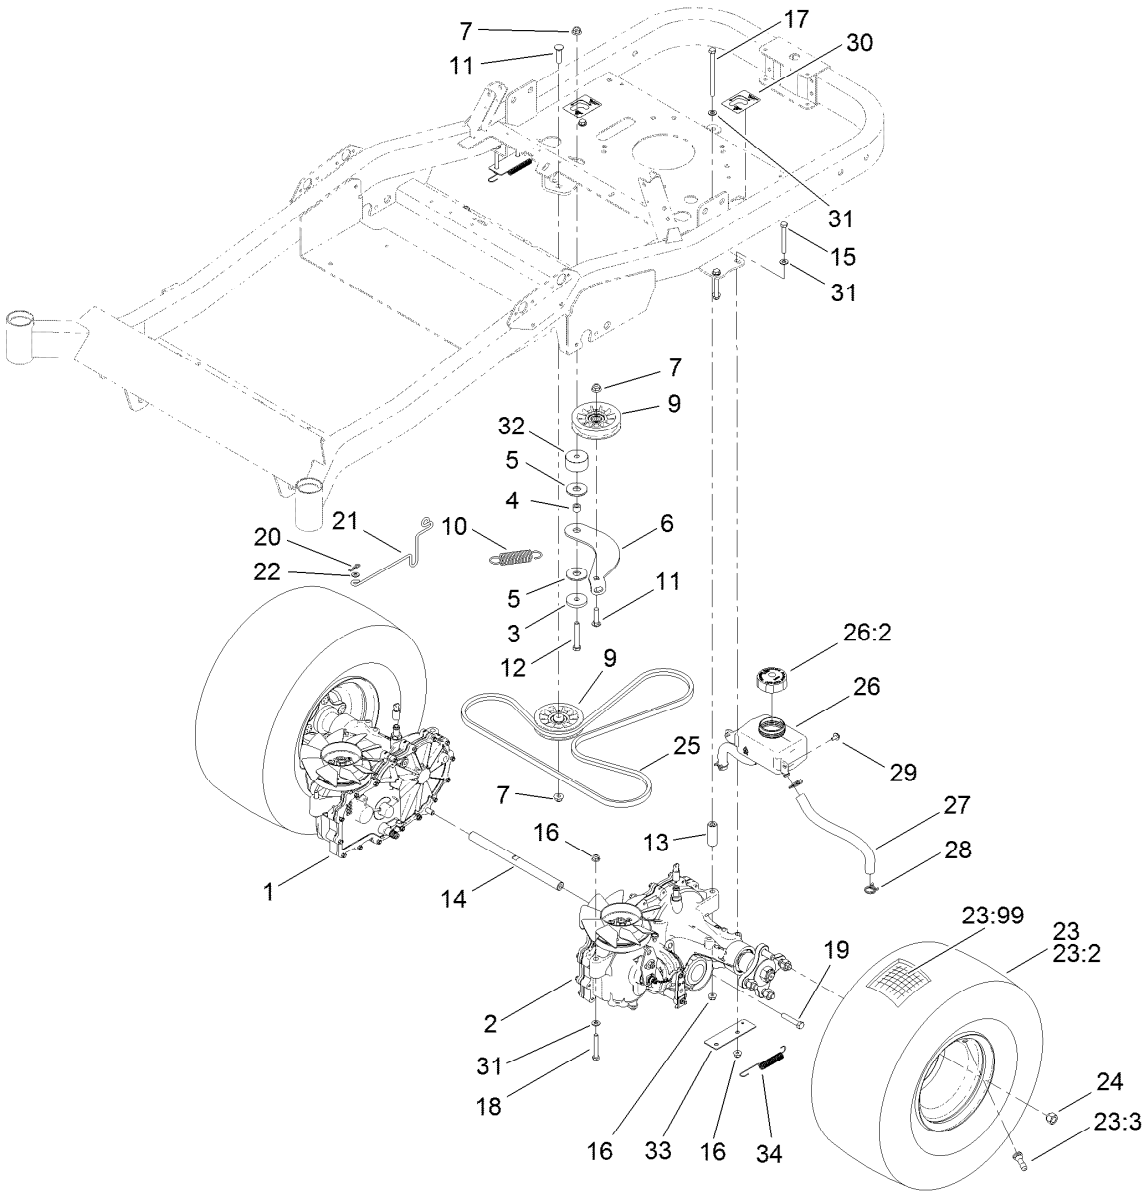


Traction Drive Assembly

Ref.	Part Number	Qty.	Description
1	119-8893	1	Hydro-RH
2	119-8892	1	Hydro-LH
3	110-9981	1	Washer-Plain
4	115-4986	1	Spacer
5	114-0463	2	Washer-Friction, Composite
6	117-5350	1	Arm-Idler
7	104-8301	3	Nut-Flange, NI
9	109-3397	2	Pulley-Idler, Flat
10	1-603402	1	Spring-Extension
11	3231-4	2	Screw-CARR
12	323-12	1	Screw-HH
13	109-3652	2	Spacer-Hydro
14	115-2559	1	Shaft-Cross, Hydro
15	322-13	4	Screw-HH
16	104-8300	8	Nut-Flange, NI
17	322-38	2	Screw-HH
18	322-11	2	Screw-HH
19	323-10	2	Screw-HH
20	1-806003	2	Pin-Cotter, Hair

Ref.	Part Number	Qty.	Description
21	115-4990	2	Rod-Bypass
22	3256-22	2	Washer-Flat
23	120-5482	2	Wheel And Tire ASM
23:2	120-5483	1	Tire-Turfmaster
23:3	232-27	1	Stem-Valve
23:99	105-4070	1	Tube-Inner
24	242-50	8	Nut-Lug
25	115-9613	1	V-Belt
26	115-9618	1	HYD Reservior ASM
26:2	109-3320	1	Cap-Reservoir, HYD
27	115-4969	2	Hose-Overflow
28	117-1193	4	Clamp-Hose
29	46-8560	2	Screw-HHFTF
30	117-1158	2	Decal-Bypass
31	3256-23	8	Washer-Flat
32	117-5351	1	Spacer
33	117-7248-03	2	Plate-Spring
34	110769	2	Spring-Extension

RH Hydro Transmission Assembly No. 119-8893

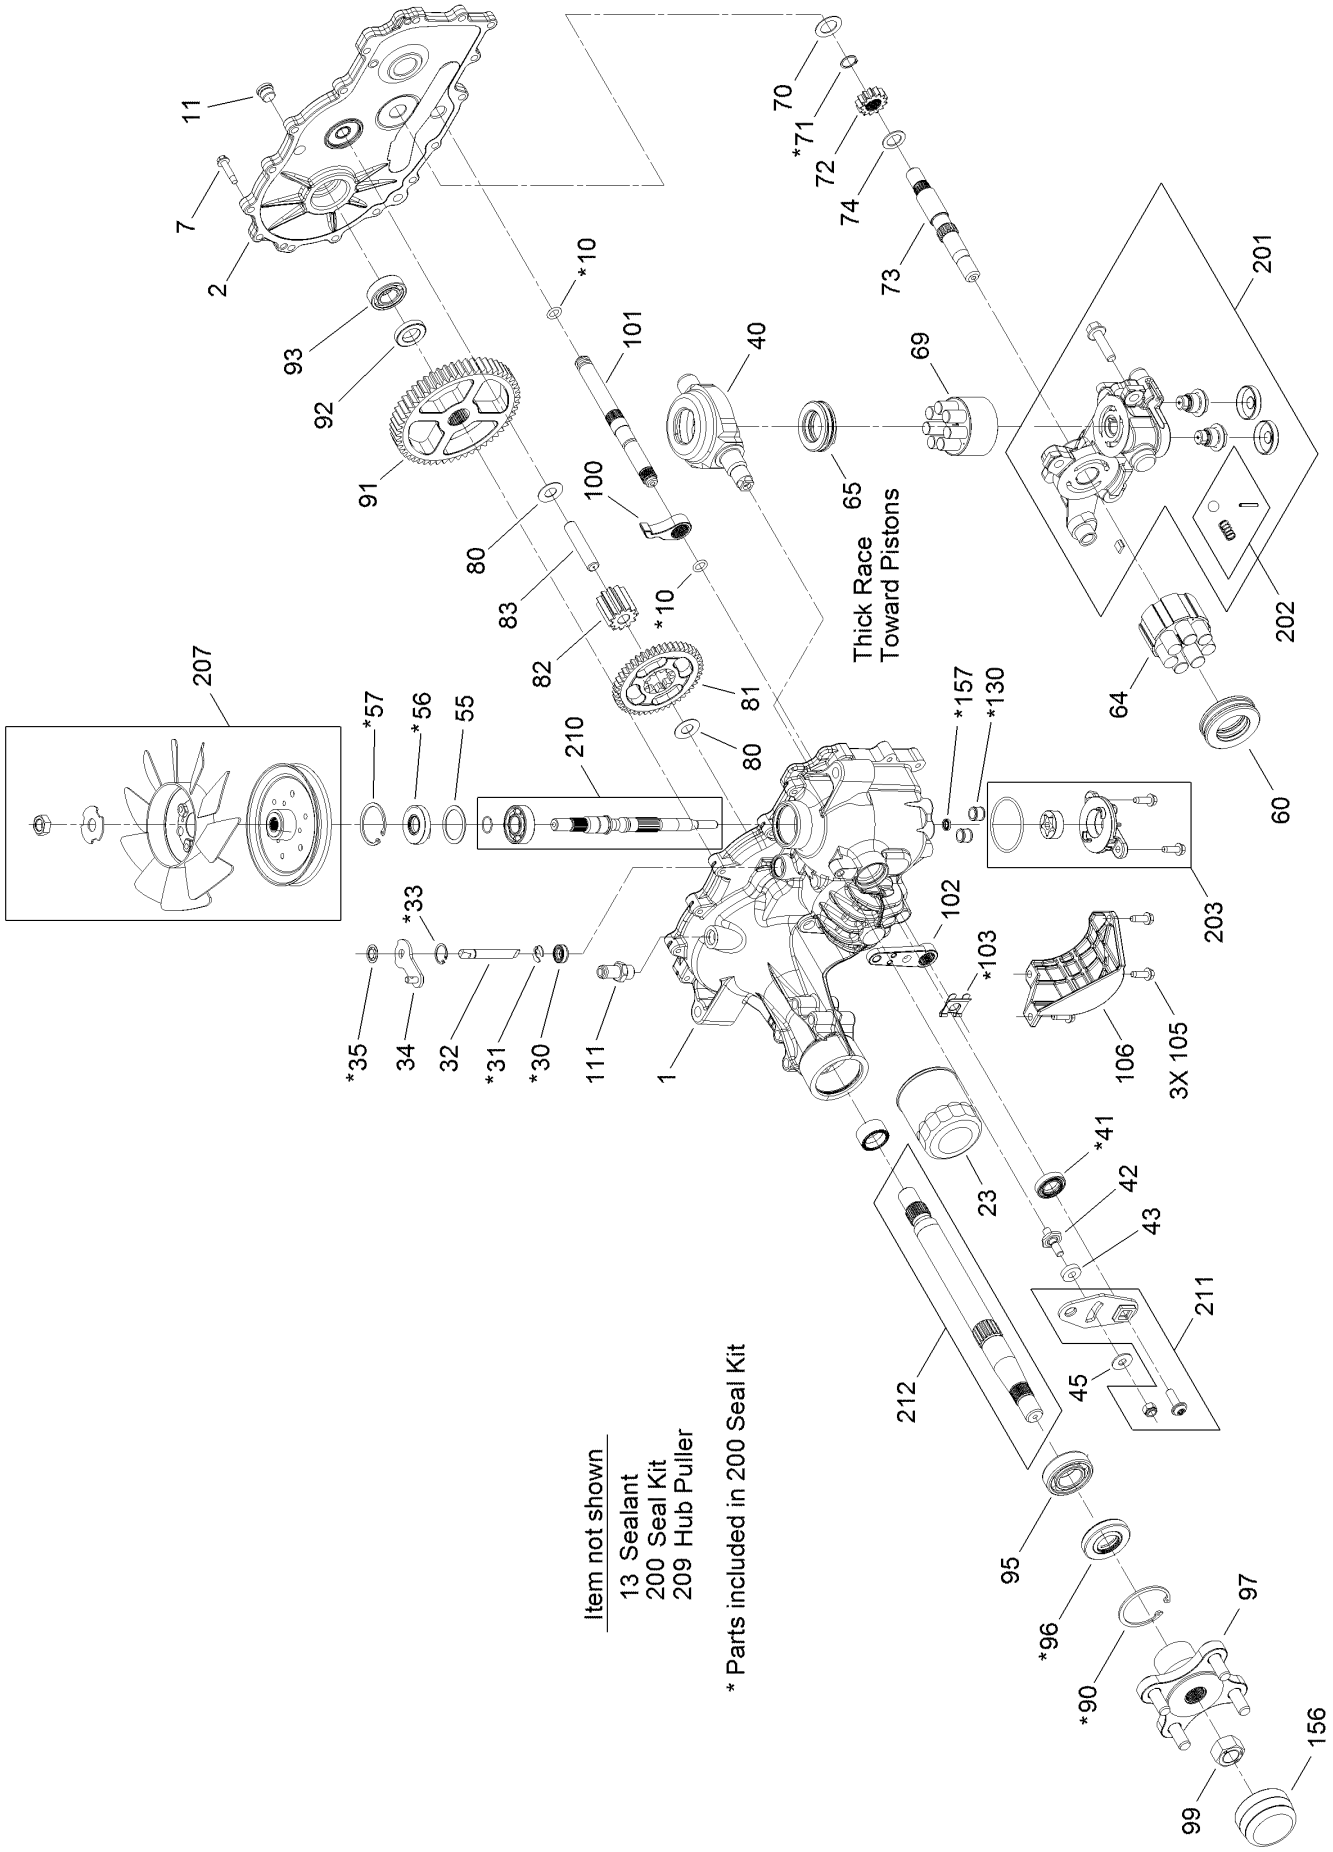

Item not shown

13 Sealant
200 Seal Kit
209 Hub Puller


* Parts included in 200 Seal Kit

RH Hydro Transmission Assembly No. 119-8893 (continued)

Ref.	Part Number	Qty.	Description
1	114-1676	1	Main Housing Kit
2	117-5358	1	Housing Side Kit
7	117-5359	16	Screw-Hfhcs
10	114-1678	2	O-Ring
11	104-2189	1	Plug-Thread, Straight
13	104-2147	1	Sealant ●
23	109-3321	1	Element-Oil Filter, HYD
30	106-8676	1	Seal-Lip
31	106-8677	1	Ring-Retaining, EXT
32	114-1685	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Int
34	107-2490	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, EXT
40	104-5304	1	Swashplate-Trunnion
41	104-5313	1	Seal-Lip
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
45	5-4460	1	Washer-Pivot
55	104-5308	1	Spacer
56	104-5310	1	Seal-Lip
57	104-5309	1	Ring-Retaining
60	109-2865	1	Bearing-Thrust
64	114-1689	1	Motor Cylinder Block Kit
65	94-6922	1	Bearing-Thrust
69	110-8561	1	Pump Block ASM
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	120-7972	1	Gear-13T
73	114-1691	1	Shaft-Motor
74	104-5360	1	Washer-Shaft, Motor
80	94-1933	2	Washer
81	120-7973	1	Gear-46T
82	120-7974	1	Gear-11T
83	104-5329	1	Pin-Jackshaft
90	104-2169	1	Ring-Retaining
91	114-1694	1	Gear-54T
92	120-7975	1	Spacer
93	114-1696	1	Bearing-Ball
95	120-7976	1	Bearing-Ball
96	104-2144	1	Seal
97	109-5939	1	Hub Kit
99	105-1895	1	Nut
100	114-1697	1	Pawl-Brake
101	120-7977	1	Brake Shaft Kit
102	114-1699	1	Handle-Brake
103	103-9764	1	Clip-Retaining
105	104-2120	3	Screw
106	120-7981	1	Guard-Filter, RH
111	109-3278	1	Adapter-Straight
130	114-8455	2	Tube-Connecting
156	115-5057	1	Cover-Nut, Axle
157	120-7978	1	Seal-Lip
200	109-3537	1	Complete Seal Kit ●
201	120-7982	1	RH Charge, Center Section Kit
202	114-8464	1	Charge Relief Kit
203	114-8465	1	Charge Kit
207	109-5938	1	Fan And Pulley Kit
209	114-8467	1	Hub-Puller, 4 Bolt ●
210	117-5361	1	Shaft Input Kit
211	117-5362	1	Arm Control Kit
212	114-8470	1	Axle Shaft Kit

● Not illustrated


LH Hydro Transmission Assembly No. 119-8892

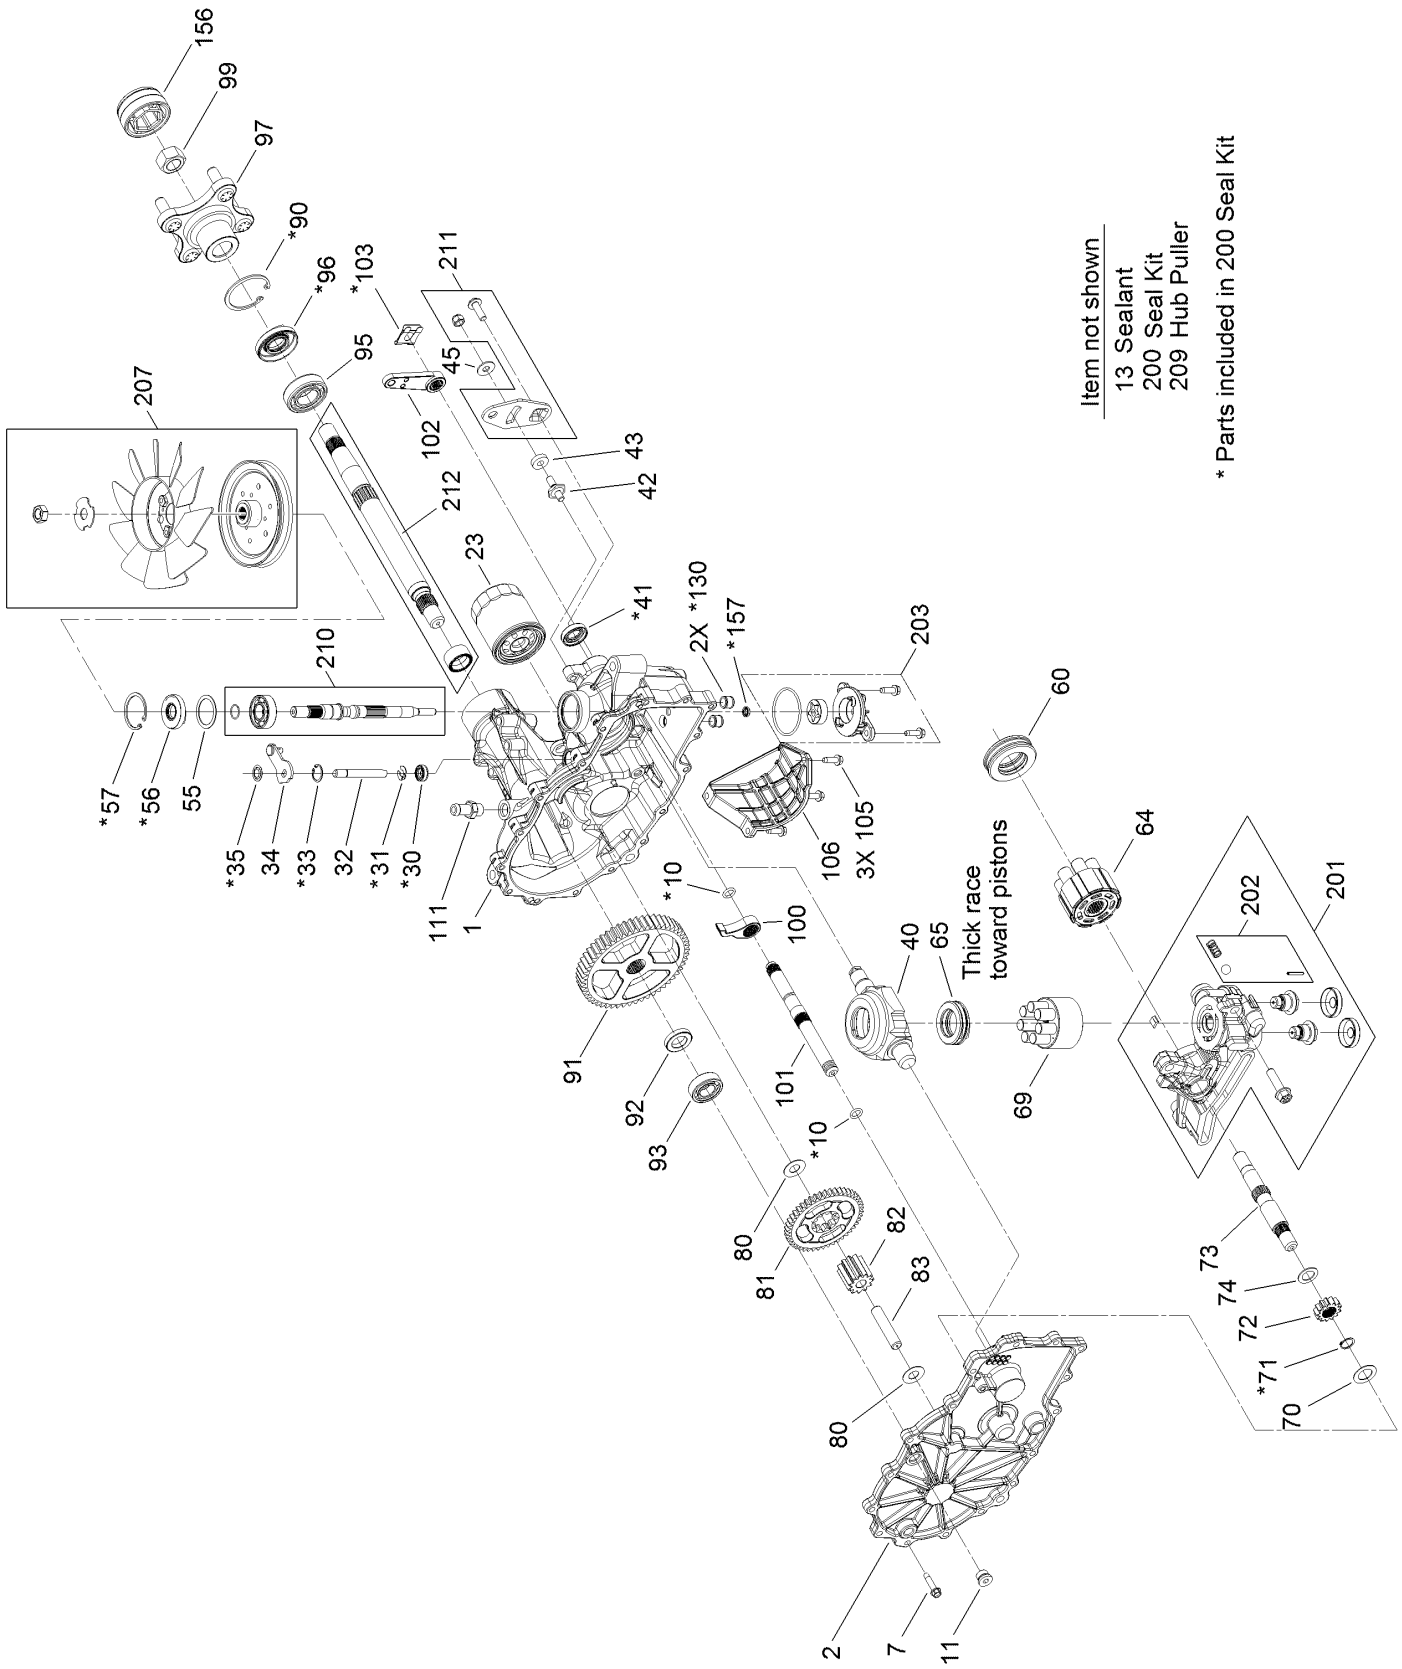

LH Hydro Transmission Assembly No. 119-8892 (continued)


Ref.	Part Number	Qty.	Description
1	114-8471	1	Main Housing Kit
2	114-8472	1	Side Cover Kit
7	117-5359	16	Screw-Hfhcs
10	114-1678	2	O-Ring
11	104-2189	1	Plug-Thread, Straight
13	104-2147	1	Sealant ●
23	109-3321	1	Element-Oil Filter, HYD
30	106-8676	1	Seal-Lip
31	106-8677	1	Ring-Retaining, EXT
32	114-1685	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Int
34	107-2490	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, EXT
40	104-5304	1	Swashplate-Trunnion
41	104-5313	1	Seal-Lip
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
45	5-4460	1	Washer-Pivot
55	104-5308	1	Spacer
56	104-5310	1	Seal-Lip
57	104-5309	1	Ring-Retaining
60	109-2865	1	Bearing-Thrust
64	114-1689	1	Motor Cylinder Block Kit
65	94-6922	1	Bearing-Thrust
69	110-8561	1	Pump Block ASM
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	120-7972	1	Gear-13T
73	114-1691	1	Shaft-Motor
74	104-5360	1	Washer-Shaft, Motor
80	94-1933	2	Washer
81	120-7973	1	Gear-46T
82	120-7974	1	Gear-11T
83	104-5329	1	Pin-Jackshaft
90	104-2169	1	Ring-Retaining
91	114-1694	1	Gear-54T
92	120-7975	1	Spacer
93	114-1696	1	Bearing-Ball
95	120-7976	1	Bearing-Ball
96	104-2144	1	Seal
97	109-5939	1	Hub Kit
99	120-7931	1	Nut
100	114-1697	1	Pawl-Brake
101	120-7977	1	Brake Shaft Kit
102	114-1699	1	Handle-Brake
103	103-9764	1	Clip-Retaining
105	104-2120	3	Screw
106	120-7979	1	Guard-Filter, LH
111	109-3278	1	Adapter-Straight
130	114-8455	2	Tube-Connecting
156	115-5057	1	Cover-Nut, Axle
157	120-7978	1	Seal-Lip
200	109-3537	1	Complete Seal Kit ●
201	120-7980	1	LH Charge Center Section Kit
202	114-8464	1	Charge Relief Kit
203	114-8465	1	Charge Kit
207	109-5938	1	Fan And Pulley Kit
209	114-8467	1	Hub-Puller, 4 Bolt ●
210	117-5361	1	Shaft Input Kit
211	117-5362	1	Arm Control Kit
212	114-8470	1	Axle Shaft Kit

● Not illustrated

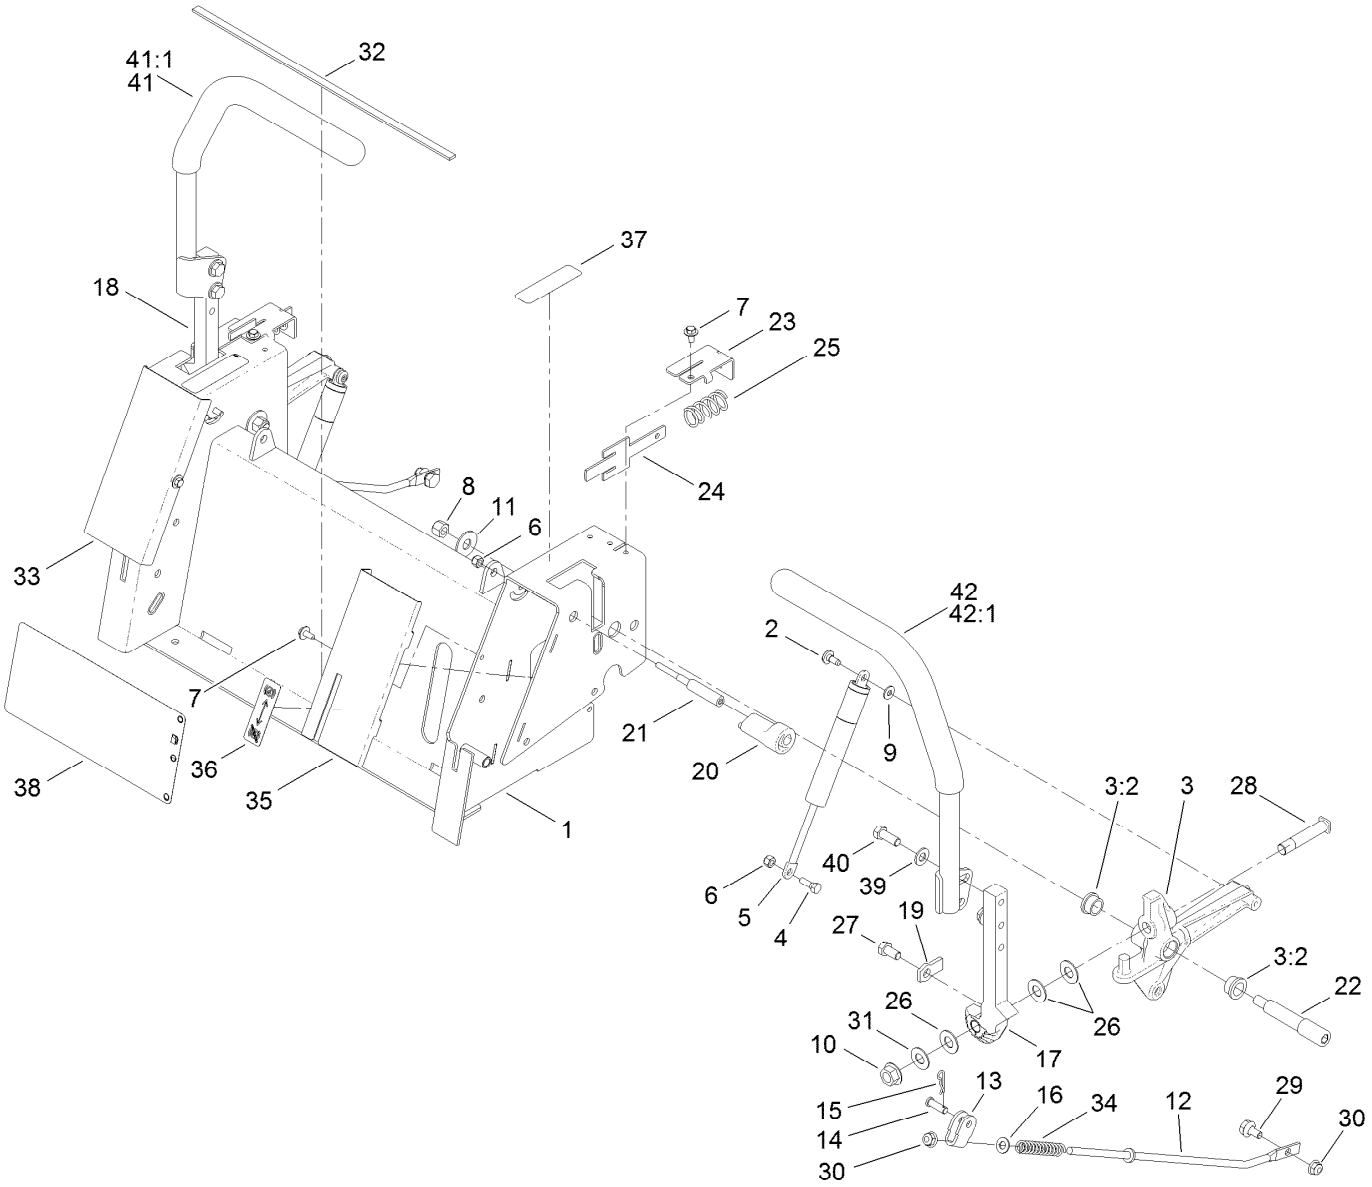

Motion Control Assembly


Ref.	Part Number	Qty.	Description
1	117-7452-03	1	Control Box ASM
2	112-4004	2	Screw-Shoulder
3	110-6828	2	Activator Arm ASM
3:2	105-3455	2	Bushing
4	106-2214	2	Bolt-Shoulder
5	109-2339	2	Damper-Control, Motion
6	3296-42	4	Nut-Lock, NI
7	46-8560	4	Screw-HHFTF
8	3296-48	2	Nut-Lock, NI
9	119-8952	2	Washer
10	32128-23	2	Nut-HF
11	3256-5	2	Washer-Flat
12	117-7422	2	Rod-Control
13	117-7423	2	Bracket-Control
14	1-808280	2	Pin-Clevis
15	1-806003	2	Pin-Cotter, Hair
16	3256-23	2	Washer-Flat
17	110-6783-05	1	Arm-Actuator, LH
18	110-6782-05	1	Arm-Actuator, RH
19	115-5023	2	Tab-Stop
20	110-6873	2	Eccentric
21	110-6874	2	Screw-Eccentric
22	110-6875	2	Bolt-Shoulder
23	110-6751	2	Bracket-Return
24	110-6750	2	Plate-Return
25	110-6752	2	Spring-Compression
26	110-6894	6	Washer-Pivot
27	323-4	2	Screw-HH
28	110-6784	2	Bolt-Shoulder
29	37-8771	2	Bolt-Shoulder
30	104-8300	4	Nut-Flange, NI
31	112-9771	2	Washer-Teflon
32	117-7237	1	Strip-Vibration, Anti
33	117-1255-03	1	Cover-Control, RH
34	1-603807	2	Spring-Return, Neutral
35	115-2561-03	1	Cover-Control, LH
36	115-9625	1	Decal
37	99-8936	2	Decal-Control, Motion
38	120-7112	1	Decal
39	3256-24	4	Washer-Flat
40	323-6	4	Screw-HH
41	120-2207	1	RH Lever/Grip ASM

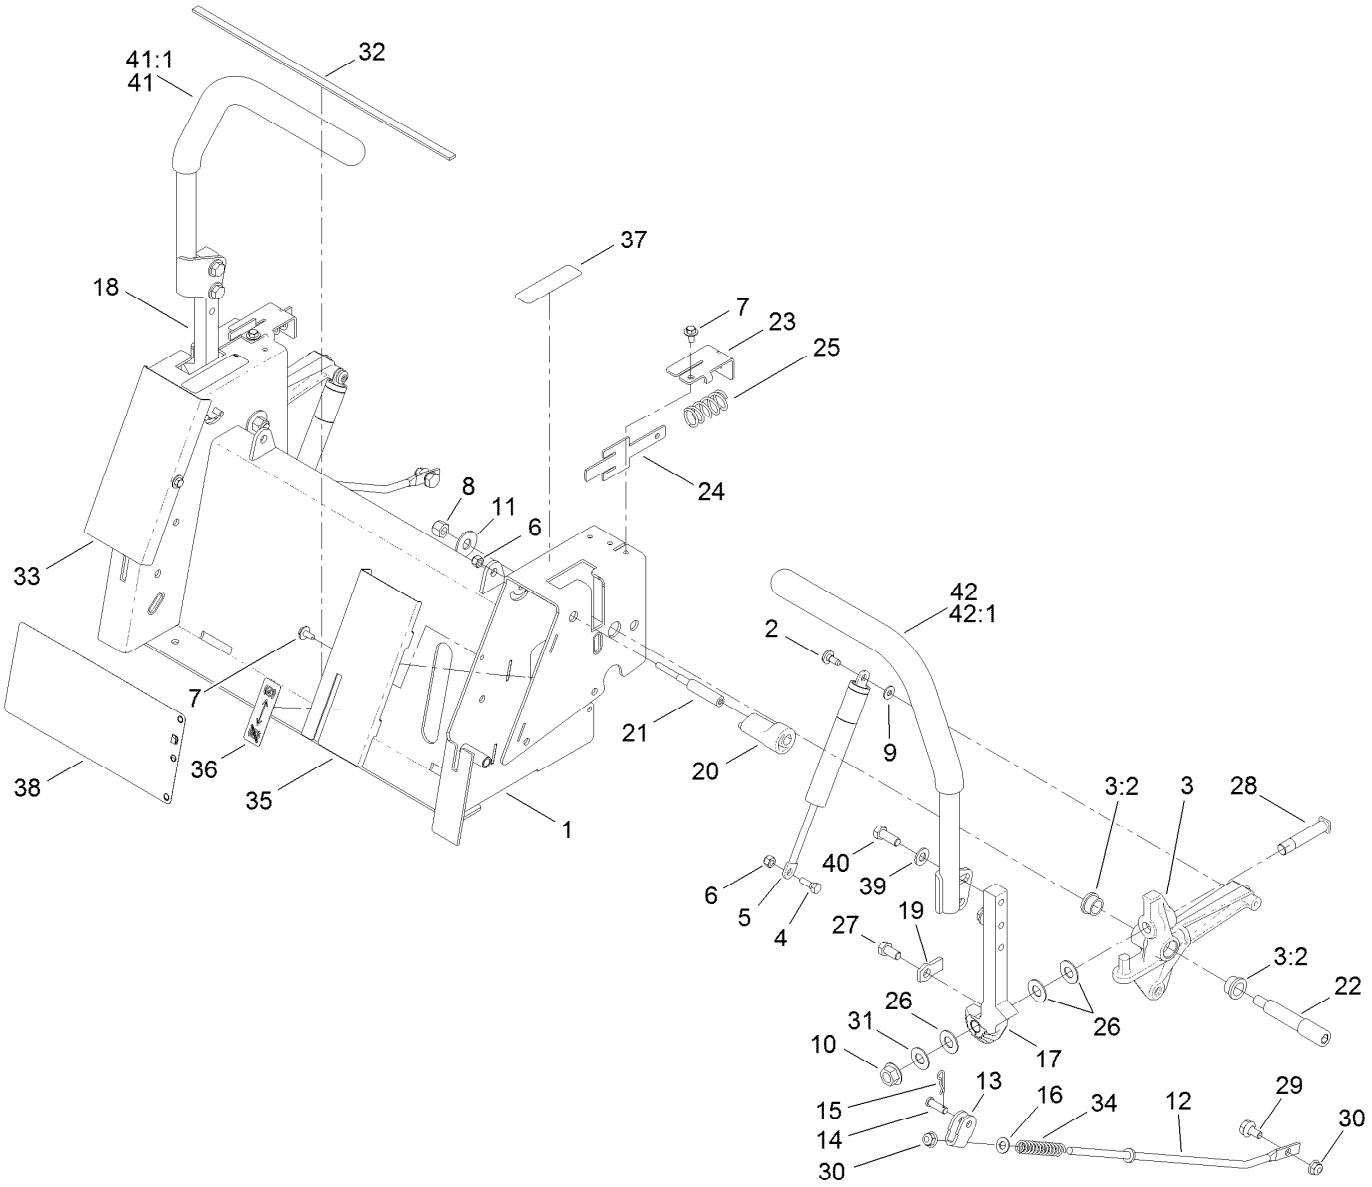

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
41:1	106-9987	1	Grip-Control, Motion


Ref.	Part Number	Qty.	Description
42	120-2208	1	LH Lever/Grip ASM
42:1	106-9987	1	Grip-Control, Motion

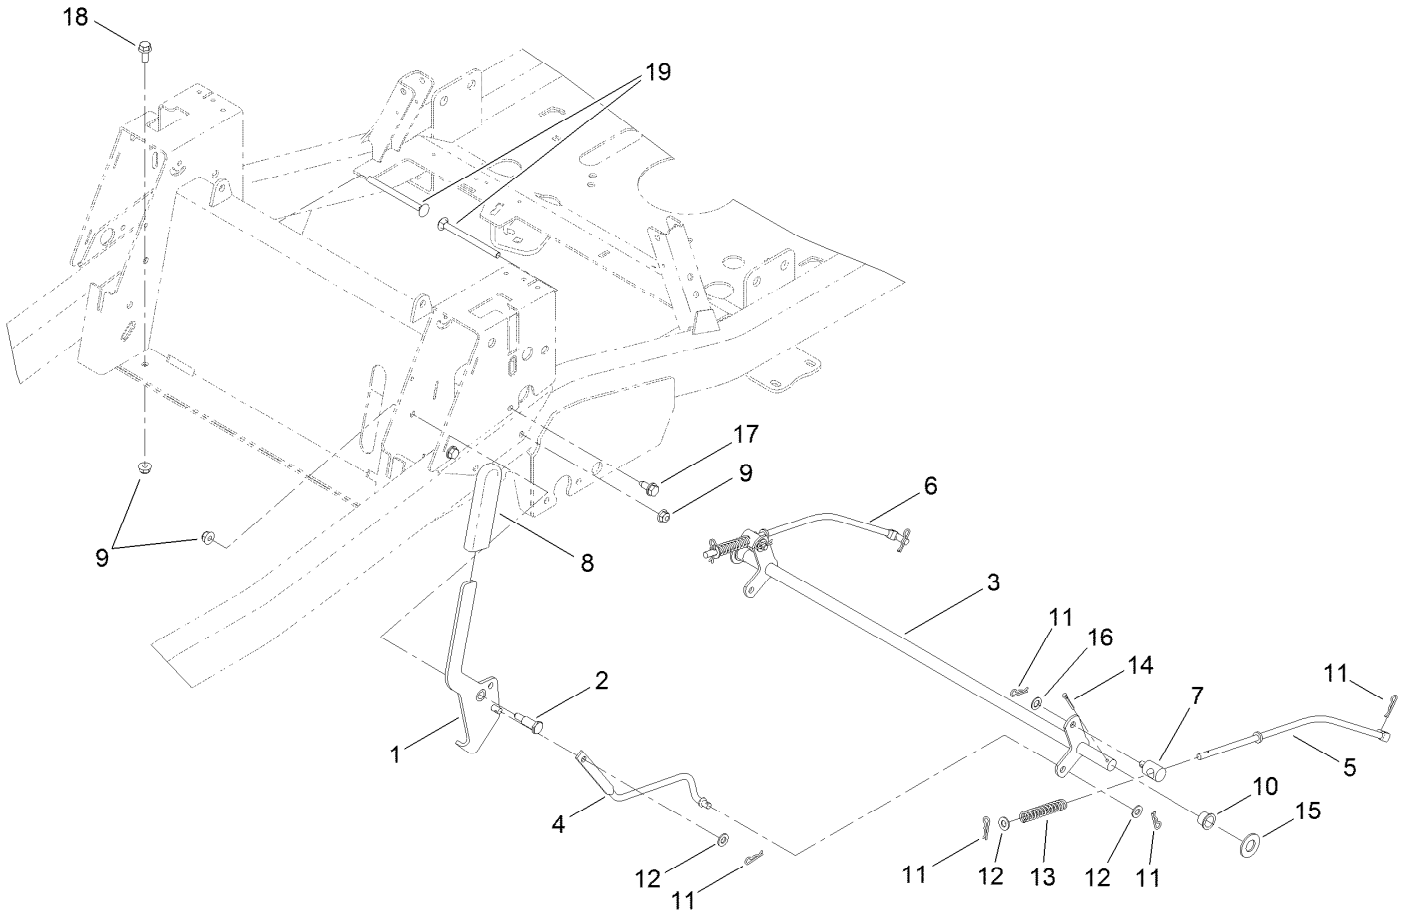

Brake Link Assembly

Ref.	Part Number	Qty.	Description
1	119-3460	1	Handle-Brake
2	63-2650	1	Screw-Shoulder
3	115-5071-03	1	Brake-Bellcrank
4	115-5074	1	Link-Brake
5	117-7322	1	Rod-Brake, LH
6	117-7323	1	Rod-Brake, RH
7	115-9681	2	Fitting-Rod
8	1-633268	1	Grip-Lever
9	104-8300	5	Nut-Flange, NI
10	256-292	2	Bushing-Flange, NI

Ref.	Part Number	Qty.	Description
11	1-806003	8	Pin-Cotter, Hair
12	3256-23	4	Washer-Flat
13	1-603807	2	Spring-Return, Neutral
14	3272-11	2	Pin-Cotter
15	3256-27	2	Washer-Flat
16	40-1940	2	Washer
17	32144-70	4	Screw-HWHTF
18	3234-47	2	Screw-HHF
19	106-9758	2	Screw-CARR

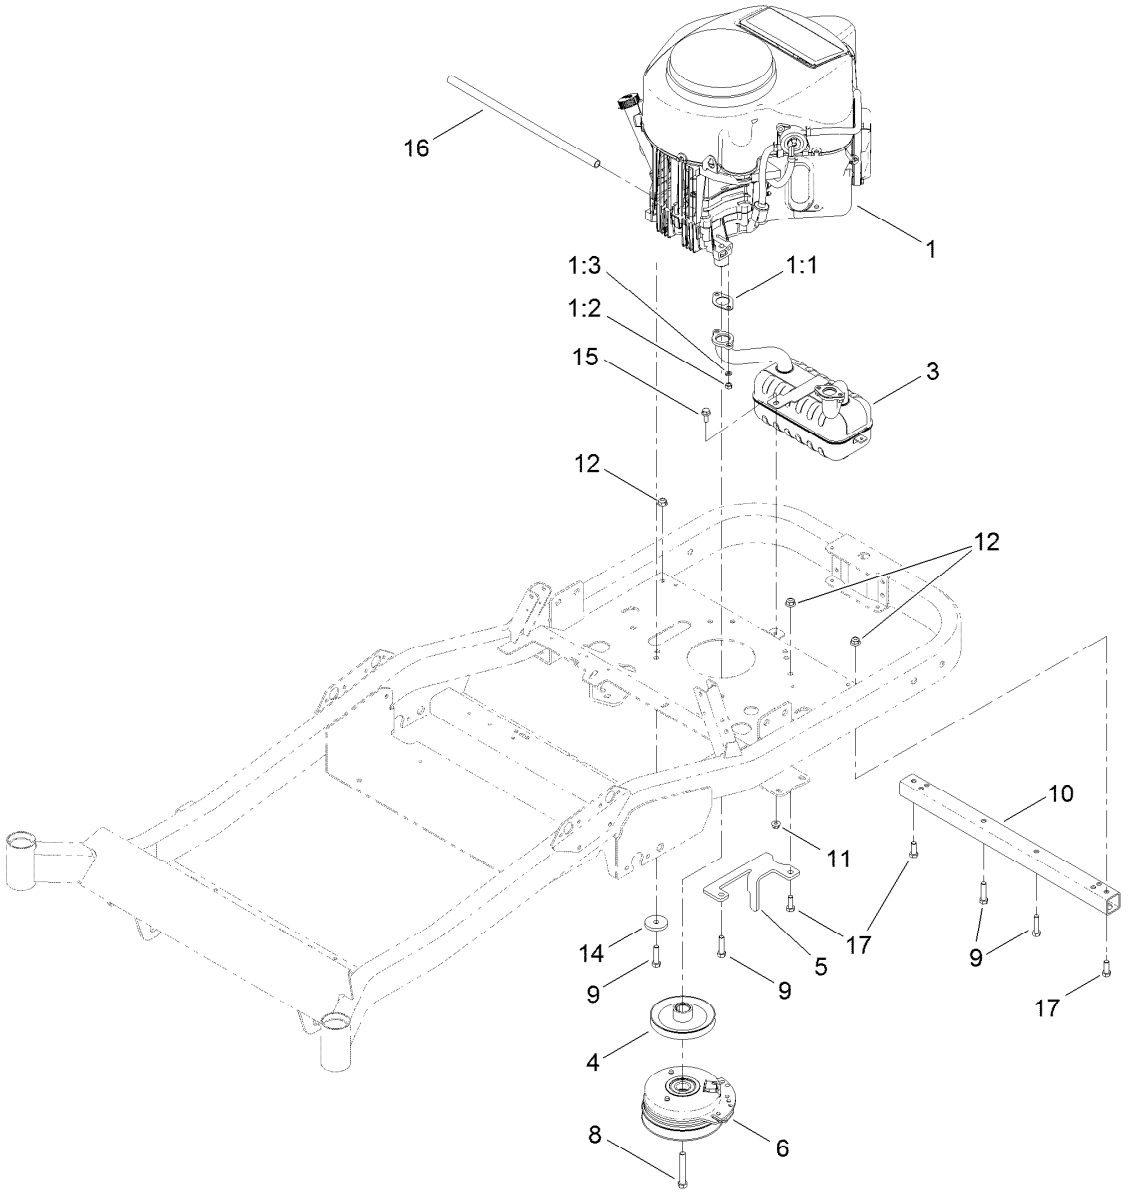


Engine, Muffler and Clutch Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fr651V-Bs10-R ●■
1:1	1-653313	2	Gasket-Exhaust
1:2	114-3549	4	Nut
1:3	114-3550	4	Washer-Lock, Spring
3	117-7465	1	Muffler-Kawasaki Twin
4	115-2568	1	Pulley-Engine
5	117-7344-03	1	Bracket-Stop, PTO
6	119-8941	1	Clutch-PTO
8	3212-13	1	Screw-HH
9	323-50	4	Bolt-HH
10	117-7335-03	1	Tube-Stiffener
11	104-8300	1	Nut-Flange, NI
12	104-8301	3	Nut-Flange, NI
14	110-9981	1	Washer-Plain
15	3234-47	1	Screw-HHF
16	106-7022	1	Tube-Drain, Oil
17	323-6	3	Screw-HH


● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

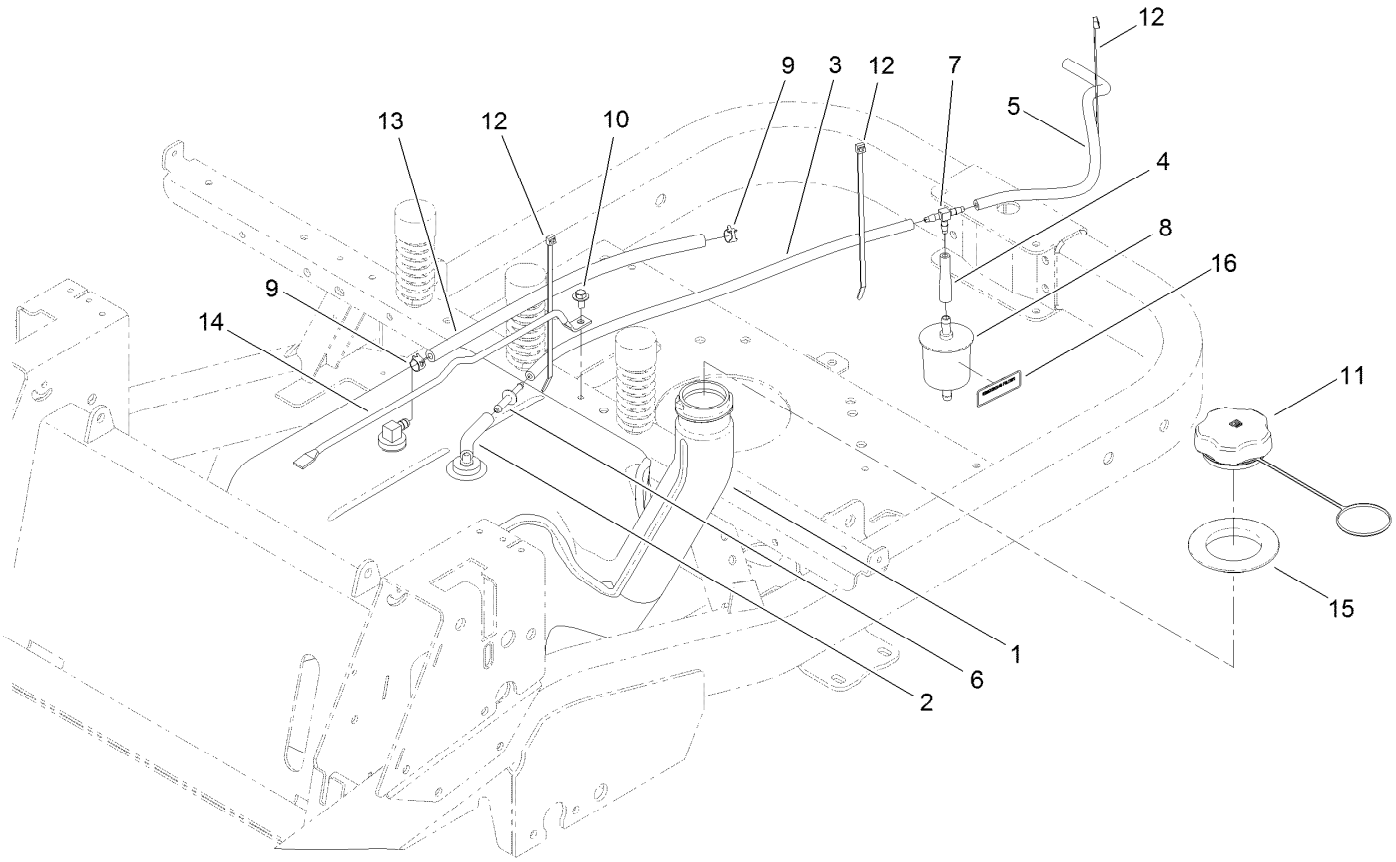


Fuel Delivery Assembly

Ref.	Part Number	Qty.	Description
1	117-7352	1	Multi Layer Fuel Tank ASM
2	114-3765	1	Hose-Fuel
3	119-8150	1	Hose-Fuel
4	120-2272	1	Hose-Fuel, Molded
5	119-8150	1	Hose-Fuel
6	117-5399	1	Adaptor-Orifice
7	120-2234	1	Fitting-Tee
8	120-2235	1	Filter-Air
9	2412-98	2	Clamp
10	46-8560	1	Screw-HHFTF
11	114-0294	1	Cap-Fuel, Racheting
12	614249	3	Strap-Tie
13	107-0589	1	Hose-Fuel
14	115-2620	1	Rod-Tank, Gas
15	117-1298	1	Seal-Tank
16	116-4769	1	Decal-Filter, Emissions

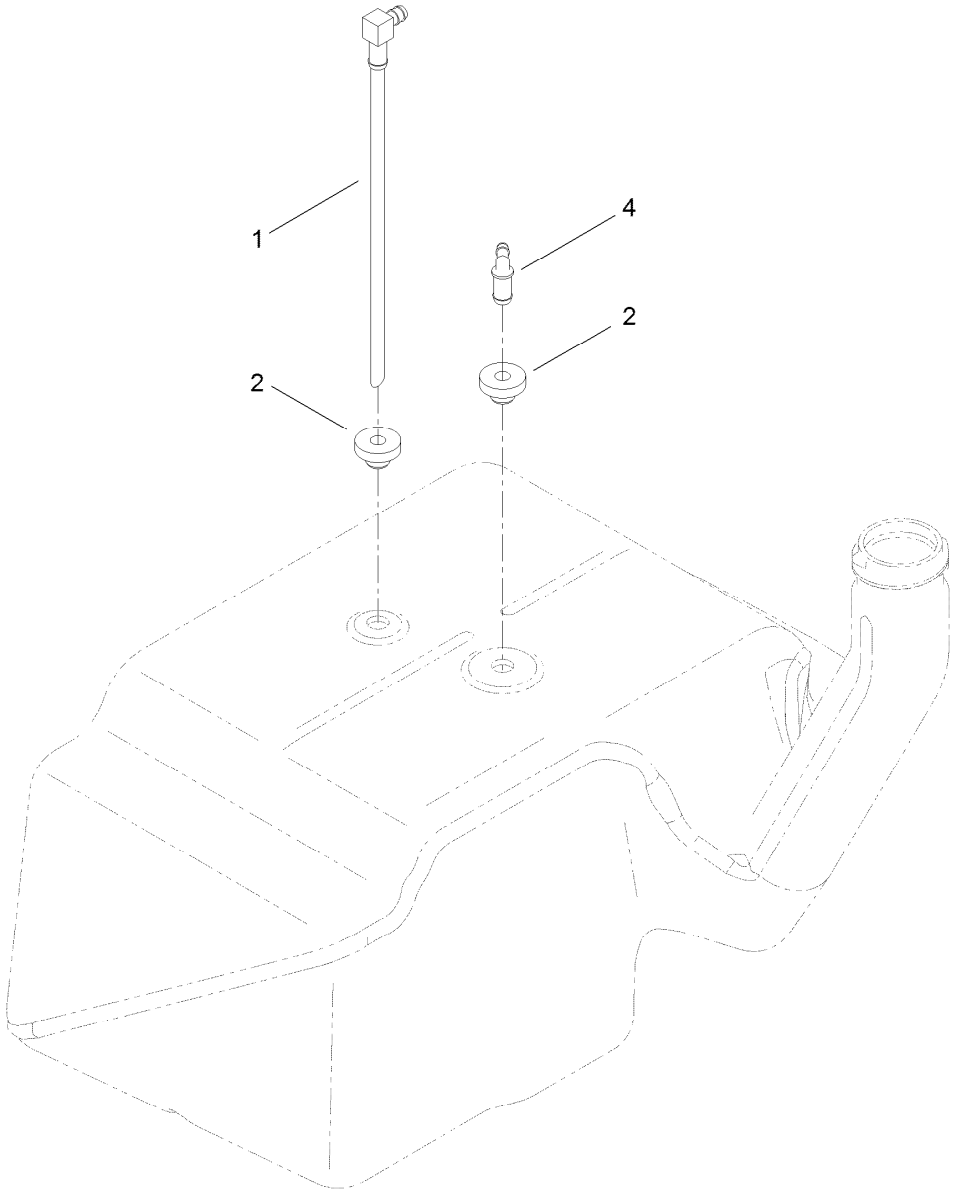

Multi Layer Fuel Tank Assembly No. 117-7352


Ref.	*Part Number*	*Qty.*	*Description*
1	115-2564	1	Tube-Drop
2	46-6560	2	Bushing
4	117-7400	1	Fitting-Plastic

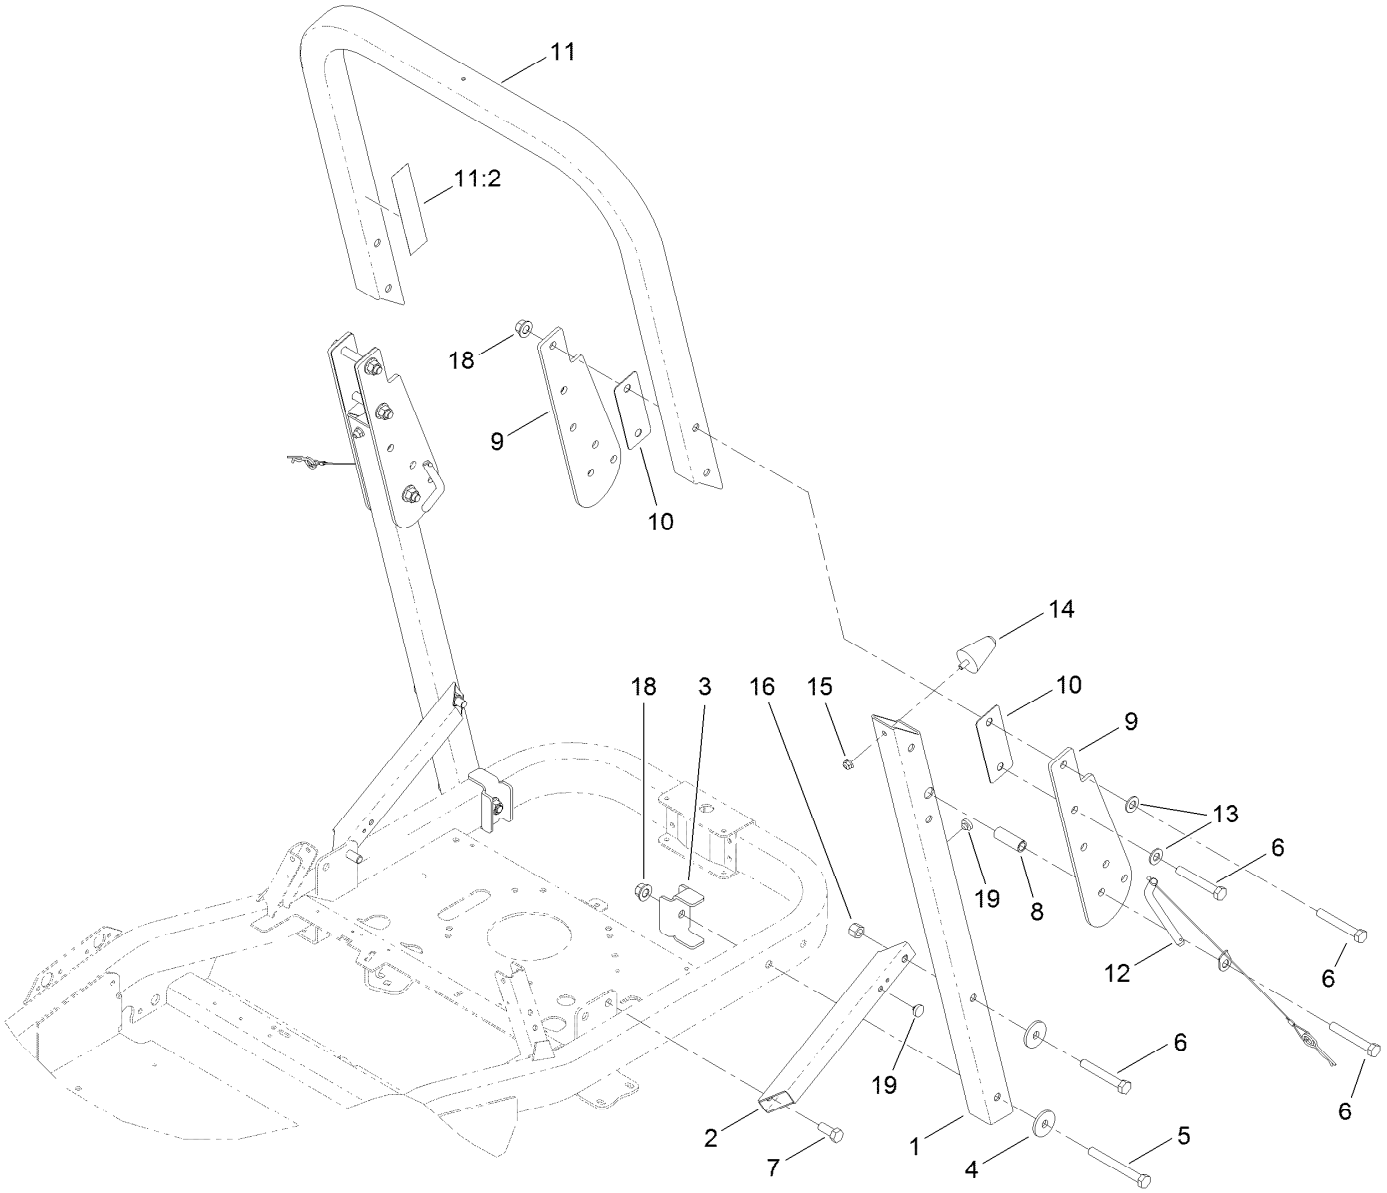

Roll-Over Protection System Assembly

Ref.	Part Number	Qty.	Description
1	119-8906-03	2	Tube-ROPS, Lower
2	115-4962-03	2	Tube-Support, ROPS
3	115-4963-03	2	Bracket-Reinforcing
4	84-1560	4	Washer-Thrust
5	325-18	2	Screw-HH
6	325-14	8	Screw-HH
7	325-5	2	Screw-HH
8	109-6653	2	Spacer
9	119-8911-03	4	Bracket-Pivot, ROPS
10	119-8926-03	4	Spacer-ROPS


Ref.	Part Number	Qty.	Description
11	119-8991	1	Upper ROPS ASM
11:2	107-3069	1	Decal-Warning, Folding ROPS
12	119-8970	2	Pin-ROPS
13	3256-26	4	Washer-Flat
14	114-1925	2	Bumper-Rubber
15	104-8300	2	Nut-Flange, NI
16	119-8969	2	Nut-Hex
18	99-5107	10	Nut-Lock
19	1-513658	4	Bumper

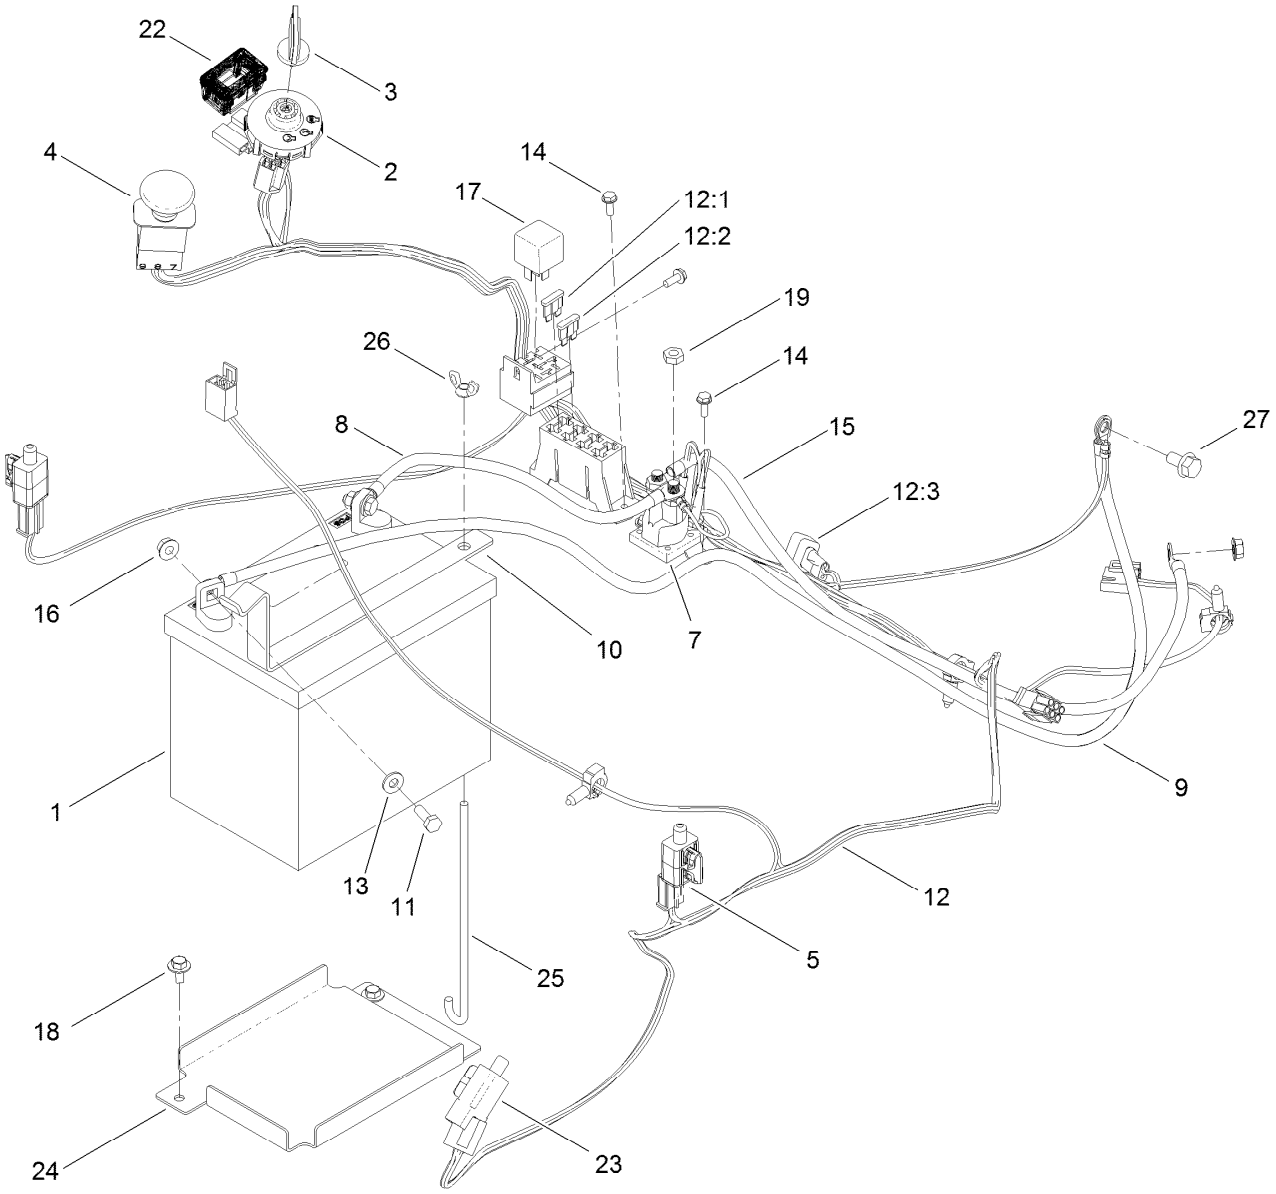

Electrical Assembly


Ref.	Part Number	Qty.	Description
1	104-2493	1	Battery
2	117-2221	1	Switch-Ignition
3	63-8360	1	Key-Ignition
4	93-9998	1	Switch-PTO
5	110-6765	2	Switch-Single Pole No
7	117-1197	1	Solenoid
8	117-5342	1	Cable-Battery, Positive
9	117-7240	1	Cable-Battery, Negative
10	117-7313-01	1	Strap-Battery
11	321-4	2	Screw-HH
12	117-7243	1	Harness-Wire
12:1	109103	1	Fuse-Blade, 30 Amp
12:2	109102	1	Fuse-Blade, 25 Amp
12:3	100-4918	1	Diode

Ref.	Part Number	Qty.	Description
13	3256-22	2	Washer-Flat
14	32144-1	5	Screw-Taptite
15	92-6989	1	Wire-21 Inch
16	32128-33	3	Nut-HF
17	98-7249	1	Relay
18	46-8560	2	Screw-HHFTF
19	3220-2	2	Nut-Jam
22	120-2244	1	Hourmeter
23	99-7408	1	Switch-Reverse
24	117-1283-03	1	Tray-Battery
25	1-633651	1	Bolt-Holddown
26	1-543792	1	Wingnut
27	33104-016	1	Screw-HHF

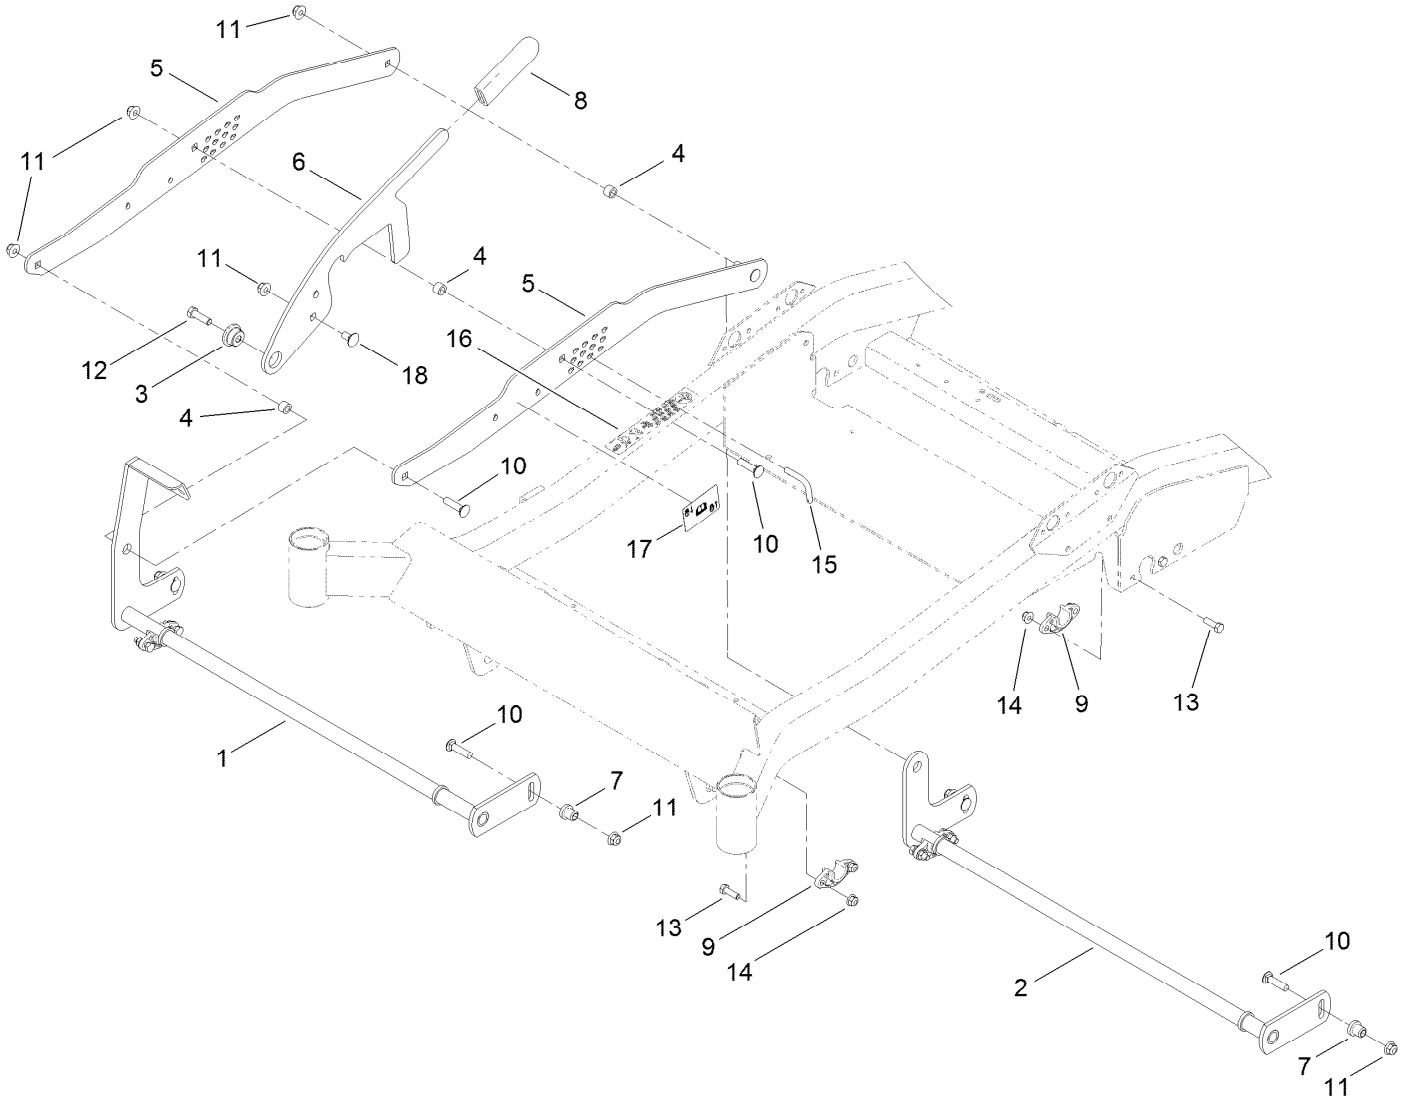

Deck Lift Assembly


Ref.	Part Number	Qty.	Description
1	115-2495-03	1	Pivot-Front
2	115-2498-03	1	Pivot-Rear
3	117-1281	1	Bushing-Mount, HOC
4	115-4986	3	Spacer
5	115-2503-03	2	Plate-Lift, Foot
6	115-2504	1	Plate-Stop, HOC
7	65-5950	4	Bushing-Pulley
8	1-633268	1	Grip-Lever
9	115-5065	4	Bushing-Flange
10	3231-4	7	Screw-CARR
11	104-8301	8	Nut-Flange, NI
12	323-7	1	Screw-HH
13	322-5	8	Screw-HH
14	104-8300	8	Nut-Flange, NI
15	117-1280	1	Pin-Keyed
16	115-9644	1	Decal-HOC
17	117-5344	1	Decal-Lock, Deck
18	3231-1	1	Screw-CARR

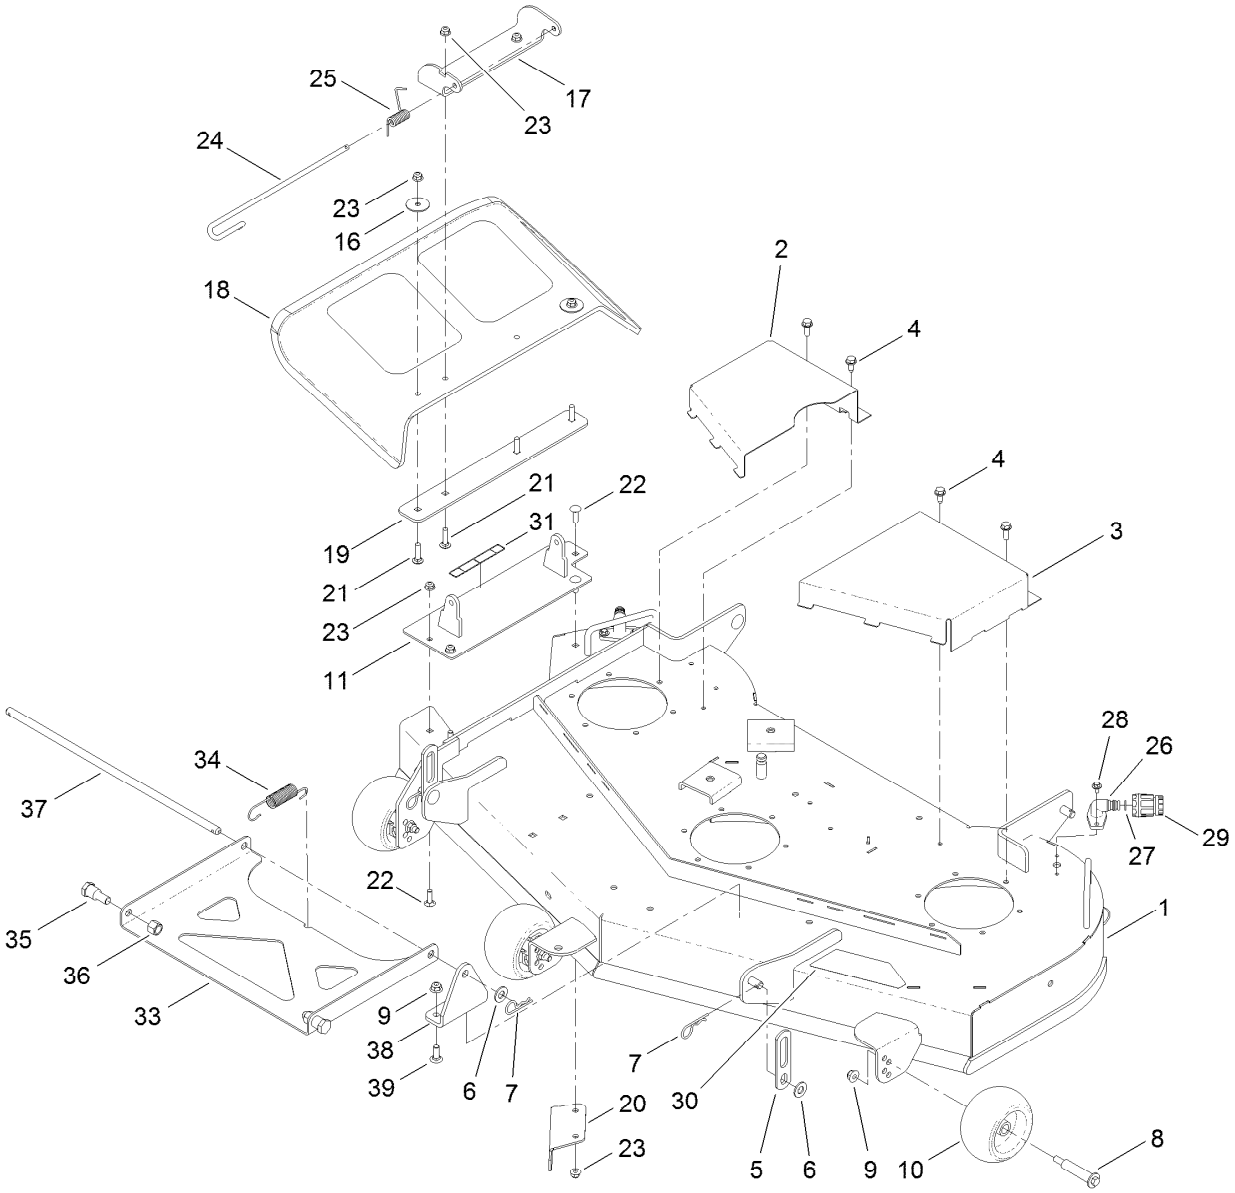

48 Inch Deck Assembly


Ref.	Part Number	Qty.	Description
1	120-7116	1	48 Inch Deck And Decal ASM
2	117-7396-03	1	Cover-Belt, RH
3	117-7397-03	1	Cover-Belt, LH
4	32144-70	2	Screw-HWHTF
5	119-8949	4	Link-Lift
6	3256-26	6	Washer-Flat
7	1-806005	6	Pin-Hair
8	112-3977	3	Bolt-Shoulder
9	104-8301	7	Nut-Flange, NI
10	1-603299	3	Roller-Scalp, Anti
11	117-7367-03	1	Plate ASM
16	3256-68	2	Washer-Flat
17	114-1648-03	1	Bracket-Deflector, Upper
18	117-1270	1	Deflector-Molded
19	115-5048-03	1	Plate-Deflector
20	117-7418-03	1	Baffle-Cutoff
21	3230-3	4	Screw-CARR

Ref.	Part Number	Qty.	Description
22	3230-22	4	Screw-CARR
23	104-8300	8	Nut-Flange, NI
24	109-8854	1	Pin-Chute
25	115-9641	1	Spring-Torsion
26	95-2747	2	Fitting-Washout
27	46-6290	2	O-Ring, Seal
28	46-8560	4	Screw-HHFTF
29	95-3270	1	Connector-Hose
30	119-3382	1	Decal-Deck
31	93-7009	1	Decal-Danger, Deflector
33	115-5027-01	1	Pan-Pivot, Deck
34	115-9652	1	Spring-Extension
35	94-5823	2	Bolt-Shoulder, HH
36	3296-23	2	Nut-Lock, NI
37	115-5030	1	Rod-Deck, Pivot
38	119-8946-01	2	Bracket-Pivot, Front
39	3231-22	4	Screw-CARR

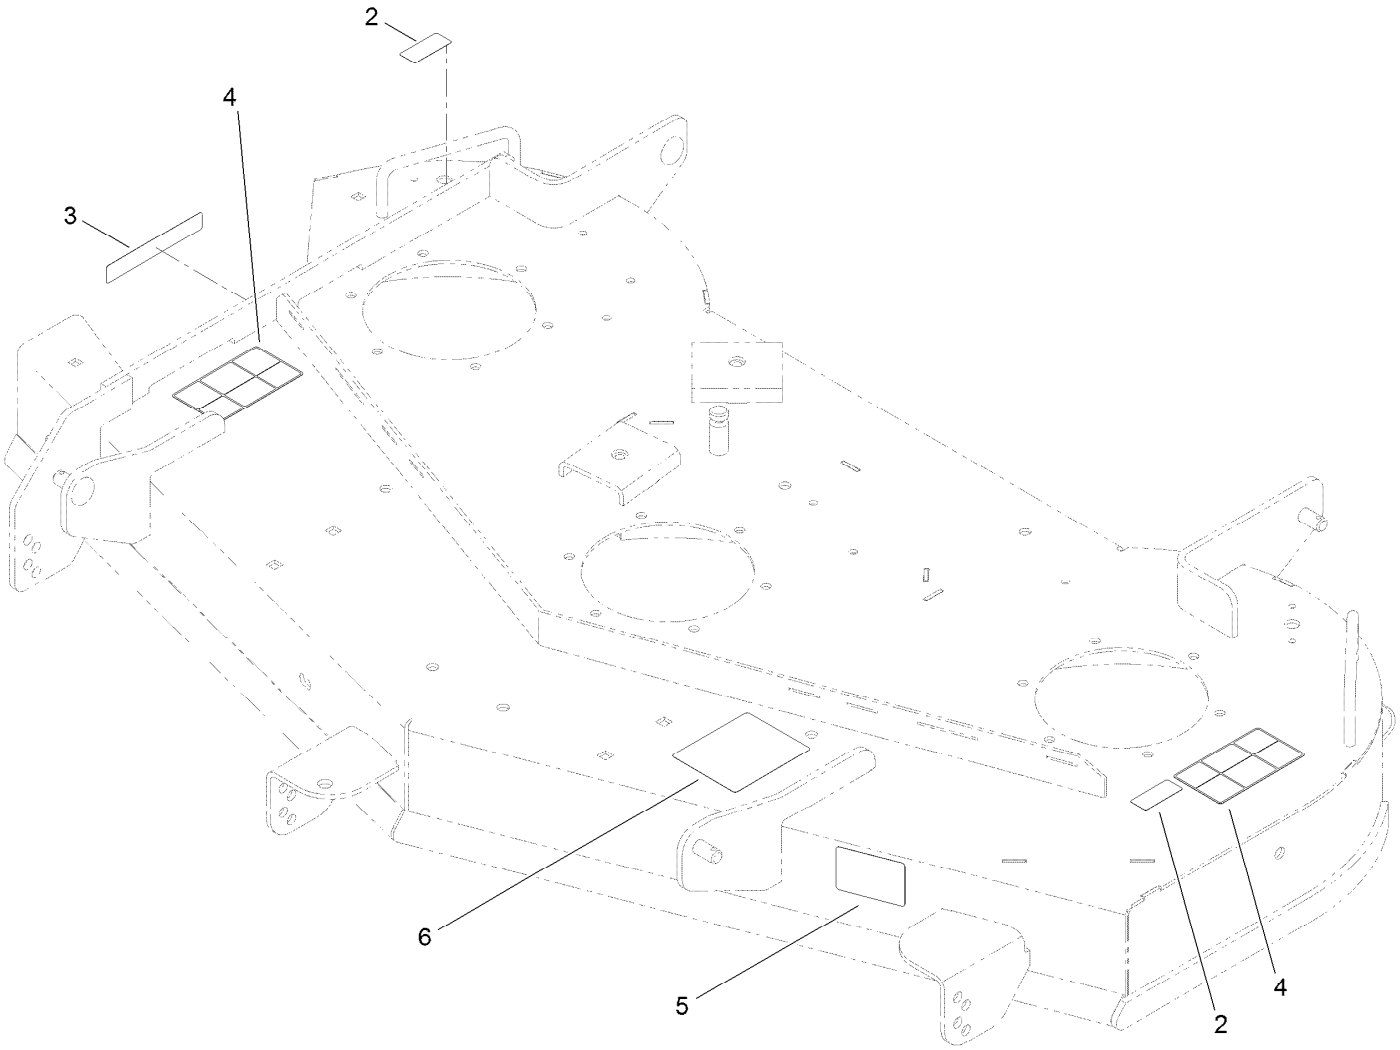

48 Inch Deck Decal Assembly No. 120-7116


Ref.	*Part Number*	*Qty.*	*Description*
2	114-1606	2	Decal-Danger, Pulley
3	93-7009	1	Decal-Danger, Deflector
4	110-6691	2	Decal-Danger
5	112-9840	1	Decal-Scalp, Anti
6	117-1194	1	Decal-Routing, Belt

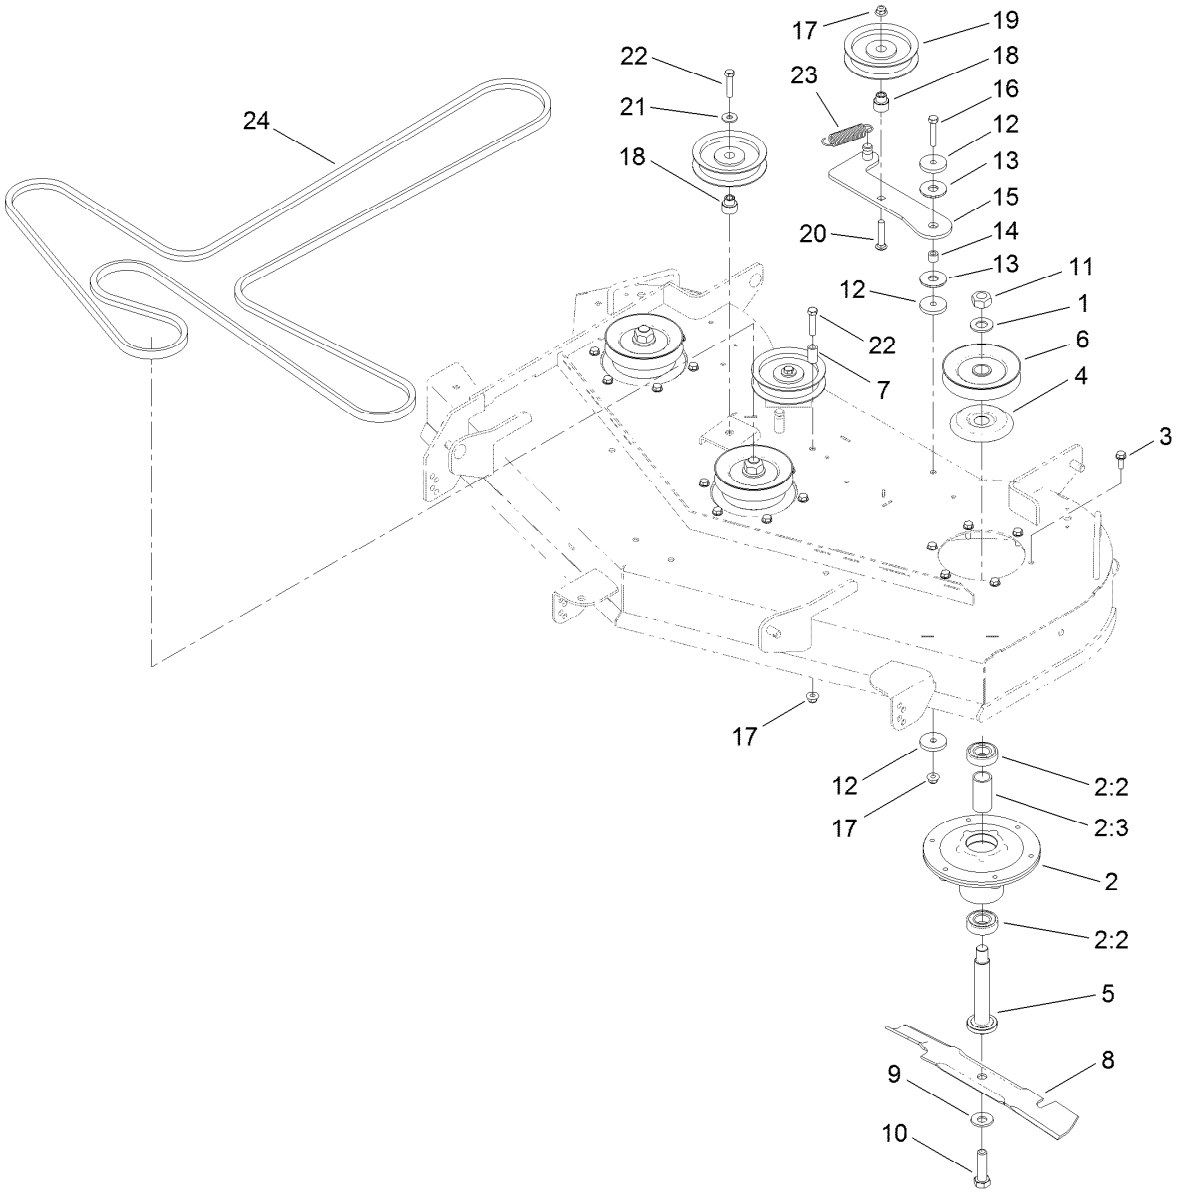

48 Inch Deck Belt and Hi-Flo Blade Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	7-4150	3	Washer
2	120-5477	3	Spindle ASM
2:2	116-0720	2	Bearing-Ball, 25Mm
2:3	115-2641	1	Spacer-Bearing
3	32144-41	18	Screw-Taptite
4	117-7210	3	Shield-Bearing
5	115-2642	3	Shaft-Spindle
6	117-7326	3	Pulley
7	1-603401	1	Spacer-Fender
8	117-7277-03	3	Blade-Hi Flo, 16.50 Inch
9	22-8520	3	Washer-Belleville
10	51-4060	3	Screw-Blade
11	3219-7	3	Nut-Hex

Ref.	*Part Number*	*Qty.*	*Description*
12	110-9981	3	Washer-Plain
13	114-0463	2	Washer-Friction, Composite
14	1-413088	1	Bushing-Lever, Lift
15	115-5054	1	Idler Arm ASM
16	323-10	1	Screw-HH
17	104-8301	3	Nut-Flange, NI
18	115-2577	3	Bushing-Idler
19	116-3626	3	Pulley-Idler
20	3231-6	1	Screw-CARR
21	80-6990	2	Washer-Hardened
22	323-9	3	Screw-HH
23	108-4056	1	Spring-Extension
24	117-7325	1	V-Belt

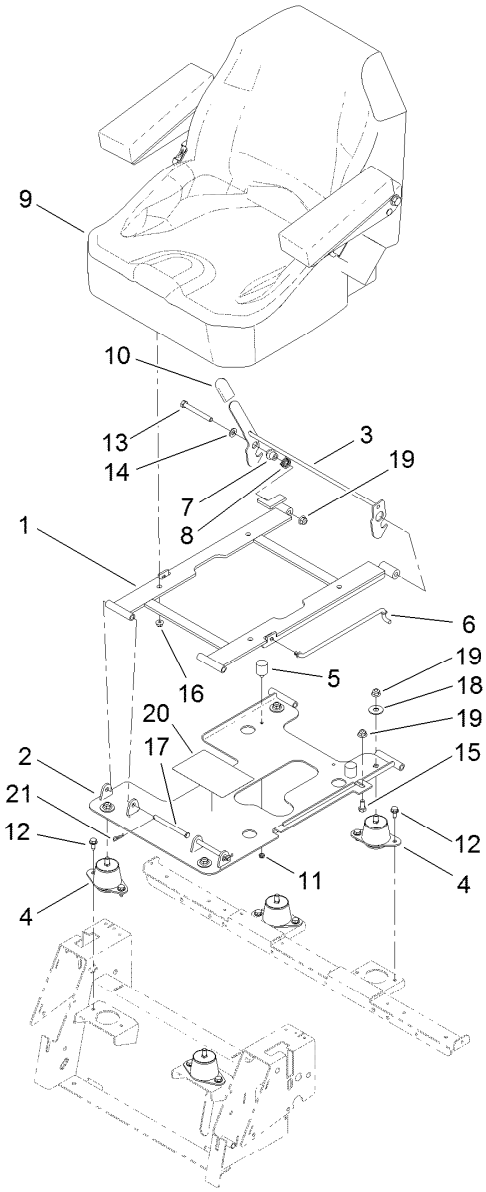

Seat Assembly

Ref.	Part Number	Qty.	Description
1	117-7441-03	1	Seat Pan ASM
2	117-7449-03	1	Seat Base ASM
3	119-8918	1	Latch ASM
4	109-9034	4	Isolator-Seat
5	106-5891	2	Bumper
6	116-0070	1	Rod-Prop
7	107-0075	1	Bushing-Latch, Seat
8	110-5831	1	Spring-Torsion
9	116-0038	1	Seat ASM
10	103-4434	1	Grip-Lever
11	3296-56	2	Nut-Lock, NI
12	32144-70	8	Screw-HWHTF
13	323-20	1	Screw-HH
14	3256-24	1	Washer-Flat
15	323-4	1	Screw-HH
16	104-8300	4	Nut-Flange, NI
17	100-1413	2	Pin-Clevis
18	3256-5	4	Washer-Flat
19	104-8301	6	Nut-Flange, NI
20	115-9630	1	Decal-Maintenance
21	1-806003	2	Pin-Cotter, Hair

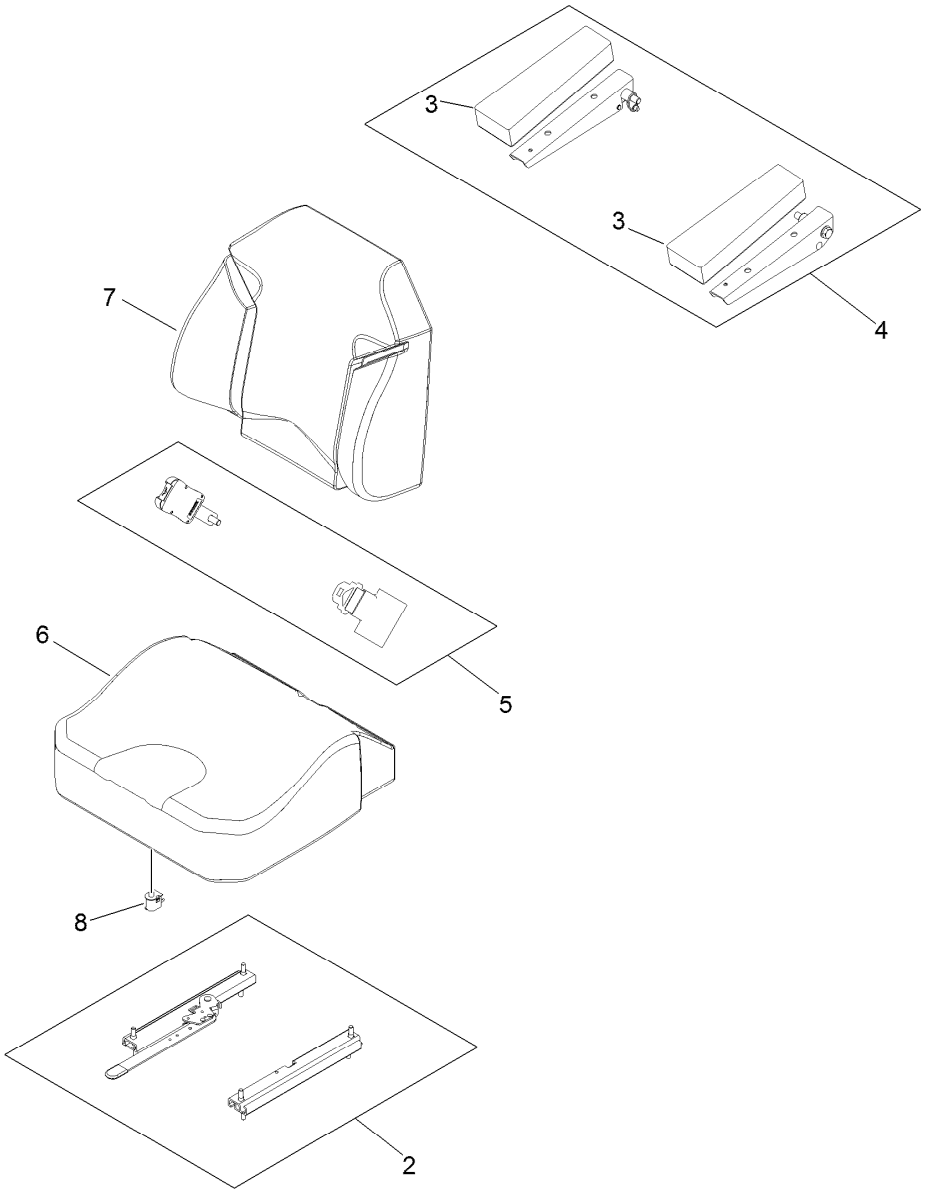

Seat Assembly No. 116-0038

Ref.	*Part Number*	*Qty.*	*Description*
2	109-9801	1	Seat Track Set
3	109-9814	1	Arm Rest Pads Set
4	109-9816	1	Arm Rest Kit
5	109-9805	1	Seat Belt Kit
6	109-9819	1	Cover-Cushion
7	109-9810	1	Cover-Back
8	82-2190	1	Switch-Bail

Attachments and Accessories

For 74871 TITAN MX4880 Zero-Turn-Radius Riding Mower

Product Name	Model/Part
Hitch Kit	117-5315
Step Kit	117-5316
Light Kit	117-5317
48in Recycler Kit	119-3320
48in Striping Kit	119-3380
Leaf Bagging Enhancement Kit	119-3381
48in Bagger Finishing Kit	120-7122
Bagger	79326
10 cu. ft. Poly Dump Cart	79991

Notes:



Count on it.