Form No. 3369-385 Rev A

Registration Plate Kit

Groundsmaster® 3280-D Traction Unit

Model No. 120-7572

Installation Instructions

Safety

⚠ WARNING

CALIFORNIA
Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

Installation

Note: The Groundsmaster 3280-D Traction Unit must be equipped with the Light Kit, Model 30405 to operate the Registration Plate Kit Light.

1. Position the machine on a level surface, stop the engine, remove the ignition key, and engage the parking brake.

   ⚠ CAUTION

   If you leave the key in the ignition switch, someone could accidently start the engine and seriously injure you or other bystanders.

   Remove the key from the ignition switch before you do any maintenance.

2. Centering the registration plate backing bracket on the rear of the hood, use it as a template to locate, mark, and drill (2) 8 mm (5/16 inch) diameter holes through the hood (Figure 1).

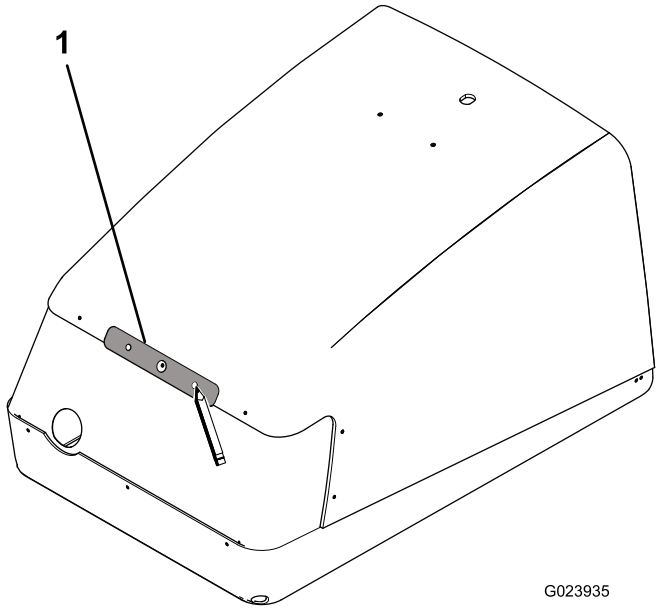


Figure 1

1. Backing bracket

3. Mount the plate light to the registration plate bracket with (2) #10 x 7/8 inch screws and #10 locknuts (Figure 2). Do not over tighten. Make sure that the lens points downward and the wires are inserted through the hole in the plate mount.

© 2013—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

CE

Original Instructions (EN)
Printed in the USA
All Rights Reserved

3369-385 A

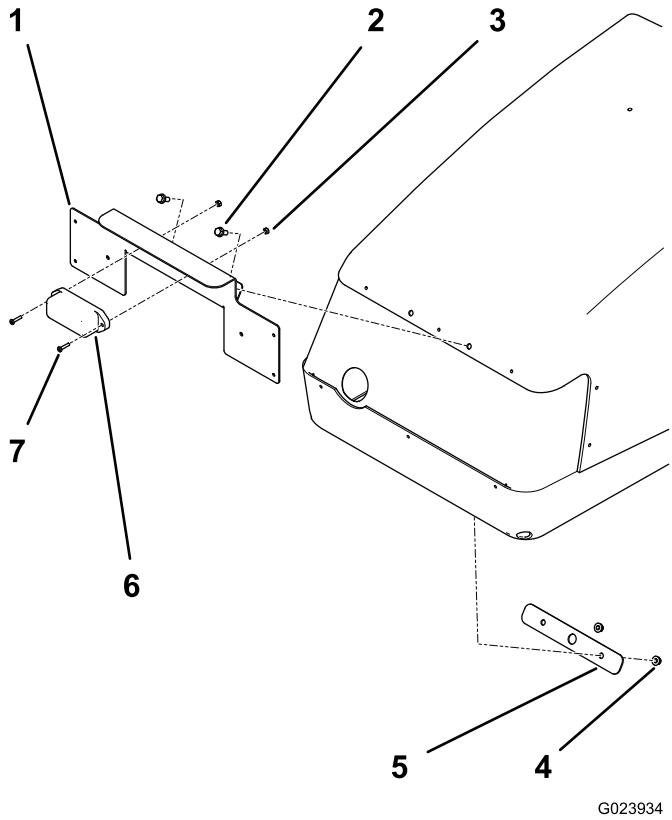


Figure 2

1. Registration plate bracket
2. Flange-head screw, 5/16 x 3/4 inch
3. Nut, #10
4. Flange nut, 5/16 inch
5. Backing bracket
6. Plate light
7. Screw, #10 x 7/8 inch

4. Mount the registration light plate assembly to the rear of the hood with (2) 5/16 x 3/4 inch flange-head screws, 5/16 inch flange nuts, and the backing bracket (Figure 2).
5. Locate the bundle of wire secured to the existing light kit wire harness.
6. Route the harness to the plate light, and plug the bullet connectors into the light.

   Important: Make sure that the wires are clear of all hot, sharp, or moving components.

7. Check the operation of the registration plate light. The plate light should illuminate when the lights are turned ON and the key is in the RUN position.