Form No. 3371-197 Rev A

TORO®

Count on it.

Parts Catalog

Z Master®

With 72in TURBO FORCE® Side Discharge Mower

Model No. 74269—Serial No. 312000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Front Frame Assembly 4
Caster Wheel and Z Stand Assembly 6
Engine Frame, Console and Floor Pan Assembly 7
Seat and Roll-Over Protection System Assembly 8
Deluxe Seat Assembly No. 110-0838 9
Roll-Over Protection System Assembly No. 106-7437 10
Wheel and Brake Assembly 11
Motion Control Assembly 13
RH Motion Control Assembly No. 109-3978 14
LH Motion Control Assembly No. 109-3979 15
Engine Mount Assembly 16
Wheel Pump Drive Assembly 17
Hydraulic Pump Assembly No. 103-2978 18
Hydraulic Pump Assembly No. 103-2979 19
Deck Belt Drive Assembly 20
Cooling Pump Drive Assembly 21
Hydraulic System Assembly 22
Tank and Fuel Line Assembly 24
Front and Rear Engine Cover Assembly 26
Cooling System Assembly 28
Hood Assembly 30
Deck Connection Assembly 31
Deck Assembly 32
Pulley and Bearing Assembly No. 114-0210 34
Deck Decal Assembly No. 117-3859 35
Spindle Assembly No. 119-8500 36
Lever Assembly No. 107-1664 37
Rubber Deflector Assembly No. 108-2792 38
Electrical Assembly 39
Cylinder Assembly 41
Crankshaft Assembly 42
Cylinder Head Assembly 43
Injection Pump Assembly 44
Camshaft Assembly 45
Oil Pan Assembly 46
Gear Cover Assembly 47
Gear Housing Assembly 48
Water Pump Assembly 49
Manifold Assembly 50
Starter Motor and Alternator Assembly 51
Alternator Assembly No. 99-9209 52
Gasket Assembly 53
Attachments and Accessories 54

© 2012—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

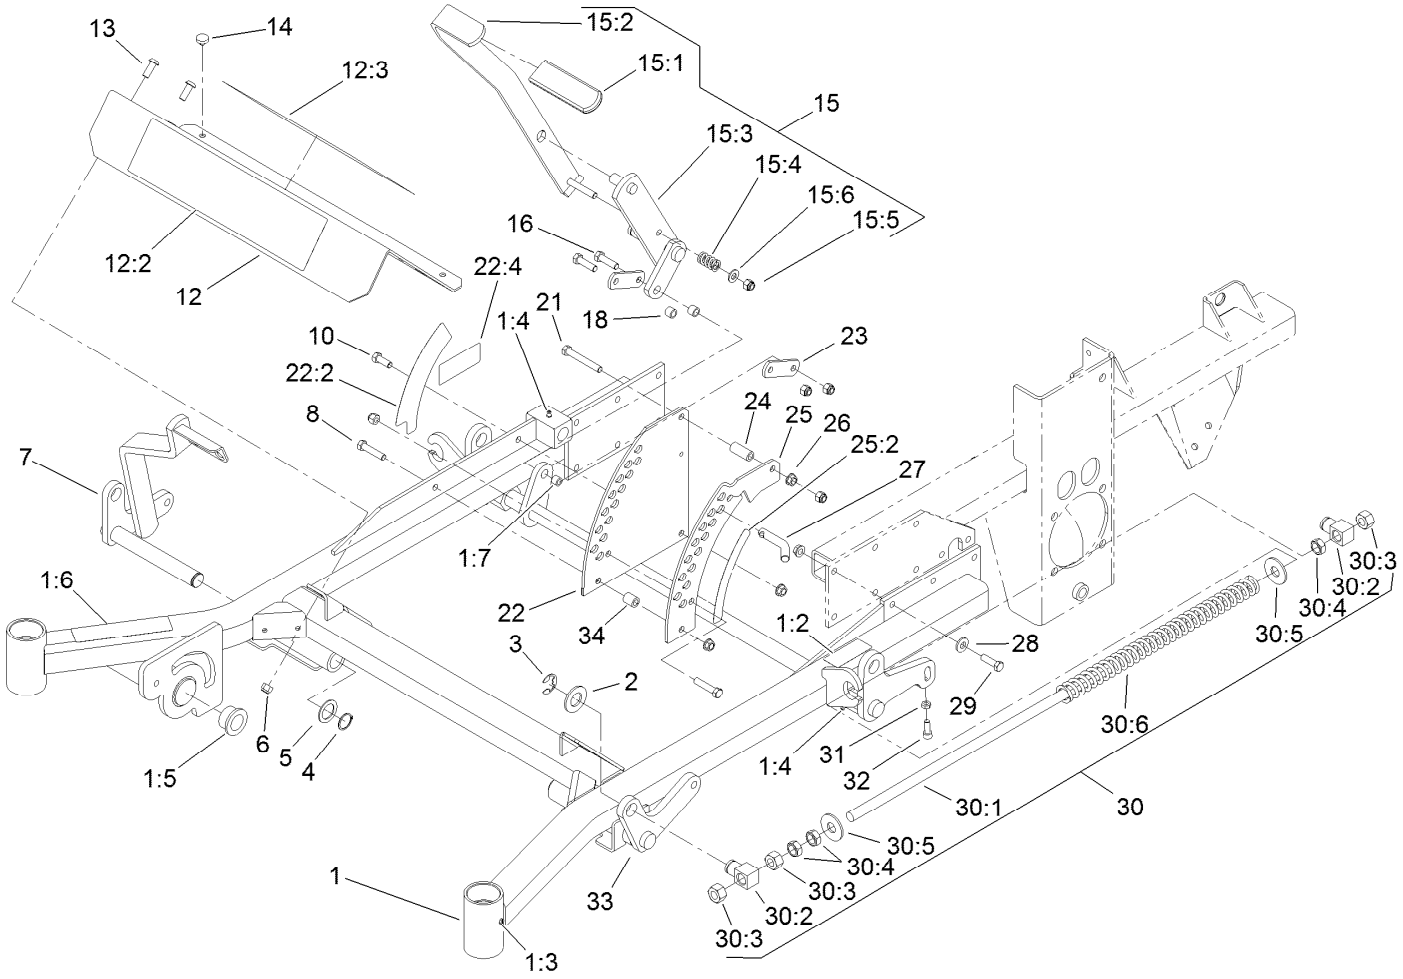


Front Frame Assembly

Ref.	Part Number	Qty.	Description
1	110-8724	1	Frame ASM
1:2	107-1857	1	Decal-Brake, Parking
1:3	1-811010	2	Plug
1:4	302-19	5	Fitting-Grease
1:5	94-1291	2	Bushing
1:6	104-7759	1	Decal-Warning
1:7	103-1918	1	Bushing
2	3256-29	4	Washer-Flat
3	32151-103	5	Ring-Retaining, EXT
4	32151-29	2	Ring-Retaining
5	1-523157	2	Washer-Spacer
6	3296-39	8	Nut-Lock, NI
7	108-7786-01	1	RH Front Deck Lift ASM
8	323-9	2	Screw-HH
10	323-6	1	Screw-HH
12	106-9981	1	Footrest
12:2	121-7558	1	Decal
12:3	107-2112	1	Decal-Warning

Ref.	Part Number	Qty.	Description
13	3274-94	4	Screw-HSBH
14	1-513658	2	Bumper
15	110-5860	1	Deck Lift Handle ASM
15:1	1-633295	1	Grip-Lever, Lift
15:2	103-2083-03	1	Lift Lever ASM
15:3	103-2064-03	1	Arm-Lift, Deck
15:4	1-633325	1	Spring-Compression
15:5	3296-39	1	Nut-Lock, NI
15:6	3256-24	1	Washer-Flat
16	323-29	2	Screw-HH
18	103-1918	2	Bushing
21	323-11	1	Screw-HH
22	117-0366	1	Plate-HOC, Outer
22:2	107-1860	1	Decal-Height, Deck
22:4	117-2718	1	Decal-Arrester, Spark
23	1-633068	2	Arm-Lift, Deck
24	1-633082	1	Bushing-Lever, Lift
25	117-0369	1	Plate-HOC, Inner


● Not serviced separately

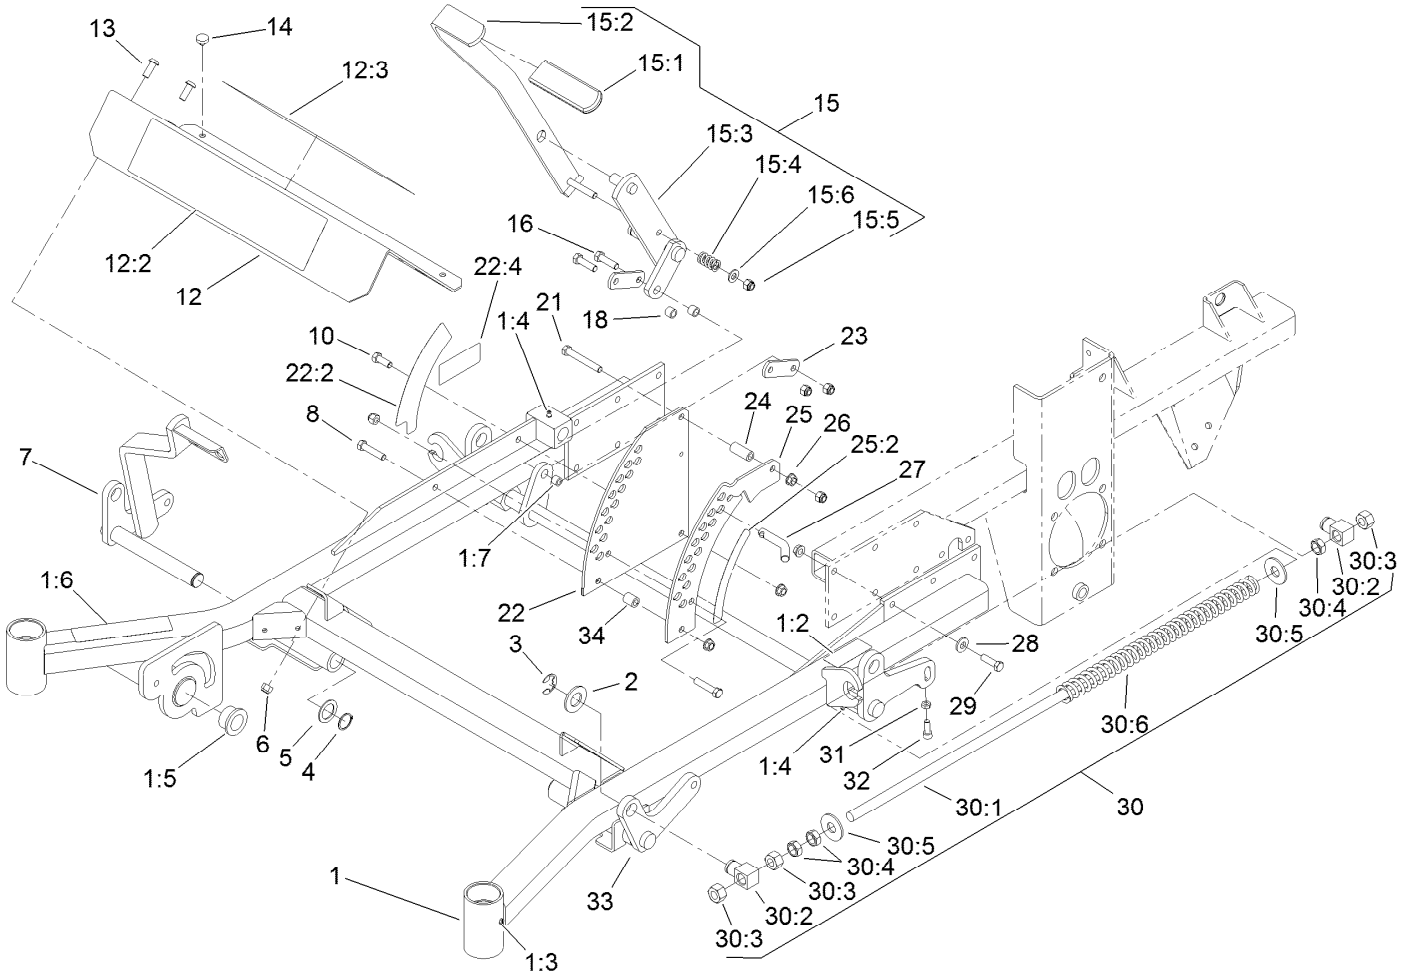

Front Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
25:2	107-1861	1	Decal-Height, Deck
26	3290-357	15	Nut-HHF, Whiz
27	109-8757	1	Pin-HOC
28	98-5975	12	Washer-Belleville
29	323-7	12	Screw-HH
30		2	Front Frame Spring ASM ●
30:1	1-633096	1	Rod-Lift, Deck
30:2	1-633441	2	Swivel-Deck Mount, Rear
30:3	3217-11	3	Nut-Hex
30:4	3218-6	3	Nut-Jam
30:5	3256-7	2	Washer-Flat
30:6	1-643015	1	Spring-Support, Deck
31	3218-2	2	Nut-Jam
32	3274-18	2	Screw-HSH
33	106-8984-01	1	LH Deck Lift ASM
34	1-633080	1	Bushing-Lever, Lift

● Not serviced separately

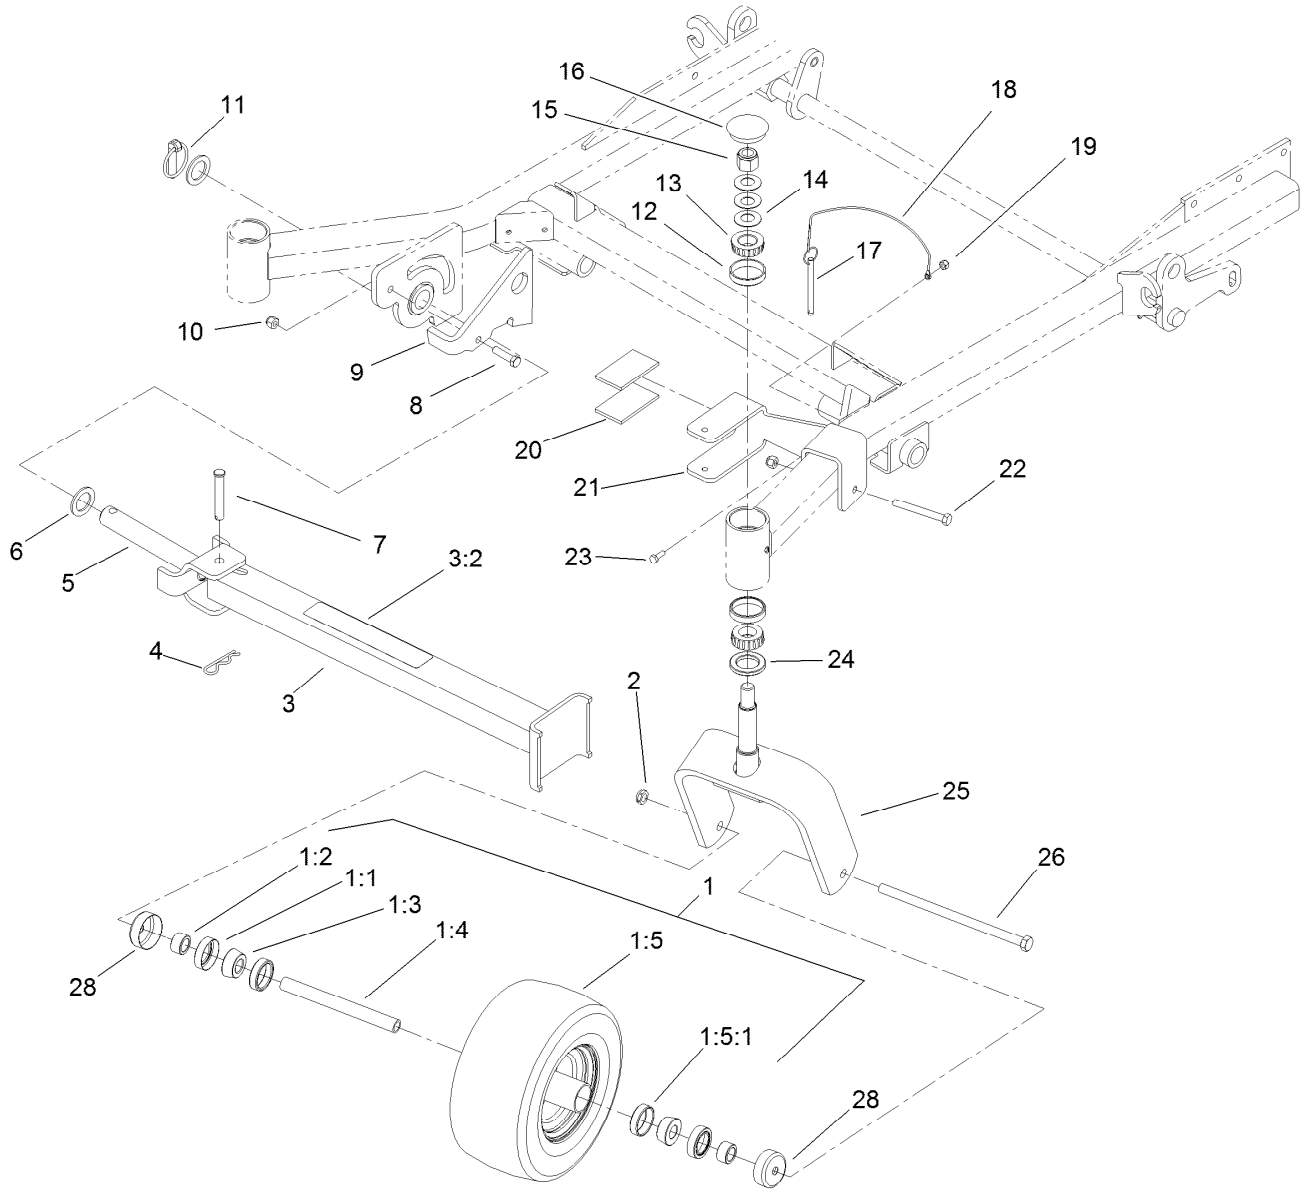


Caster Wheel and Z Stand Assembly

Ref.	Part Number	Qty.	Description
1	109-9125	2	Wheel And Tire ASM
1:1	1-633585	2	Bearing-Cone, Taper
1:2	103-0063	2	Seal-Caster
1:3	103-3051	2	Spacer-Nut ●
1:4	103-5156	1	Axle-Caster
1:5	109-9124	1	Wheel And Tire ASM
1:5:1	1-633584	1	Bearing-Cup
2	3296-23	2	Nut-Lock, NI
3	107-1874	1	Leg ASM
3:2	106-7464	1	Decal-Z Stand
4	3290-355	1	Pin-Hair
5	100-9692-01	1	Pivot Pin ASM
6	3-6781	2	Washer-Thrust
7	283-55	1	Pin-Clevis
8	323-8	1	Screw-HH
9	100-9686-01	1	Bracket-Latch
10	3296-39	2	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
11	283-71	1	Pin-Lynch
12	254-72	4	Bearing-Cup, Tapered
13	254-94	4	Bearing-Cone, Tapered
14	1-633508	6	Washer-Bellville
15	3296-51	2	Nut-Lock, NI
16	103-4882	2	Cap-Grease
17	105-1647	1	Pin-Hitch, Cotterless
18	100-9385	1	Lanyard-Nylon
19	3296-42	1	Nut-Lock, NI
20	100-6547	2	Cushion-Rubber
21	108-4136-01	1	Bracket-Cradle
22	323-20	1	Screw-HH
23	321-4	1	Screw-HH
24	1-543511	2	Seal-Grease
25	103-1474-01	2	Caster-Fork
26	325-39	2	Screw-HH
28	103-2768	2	Guard-Seal


● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

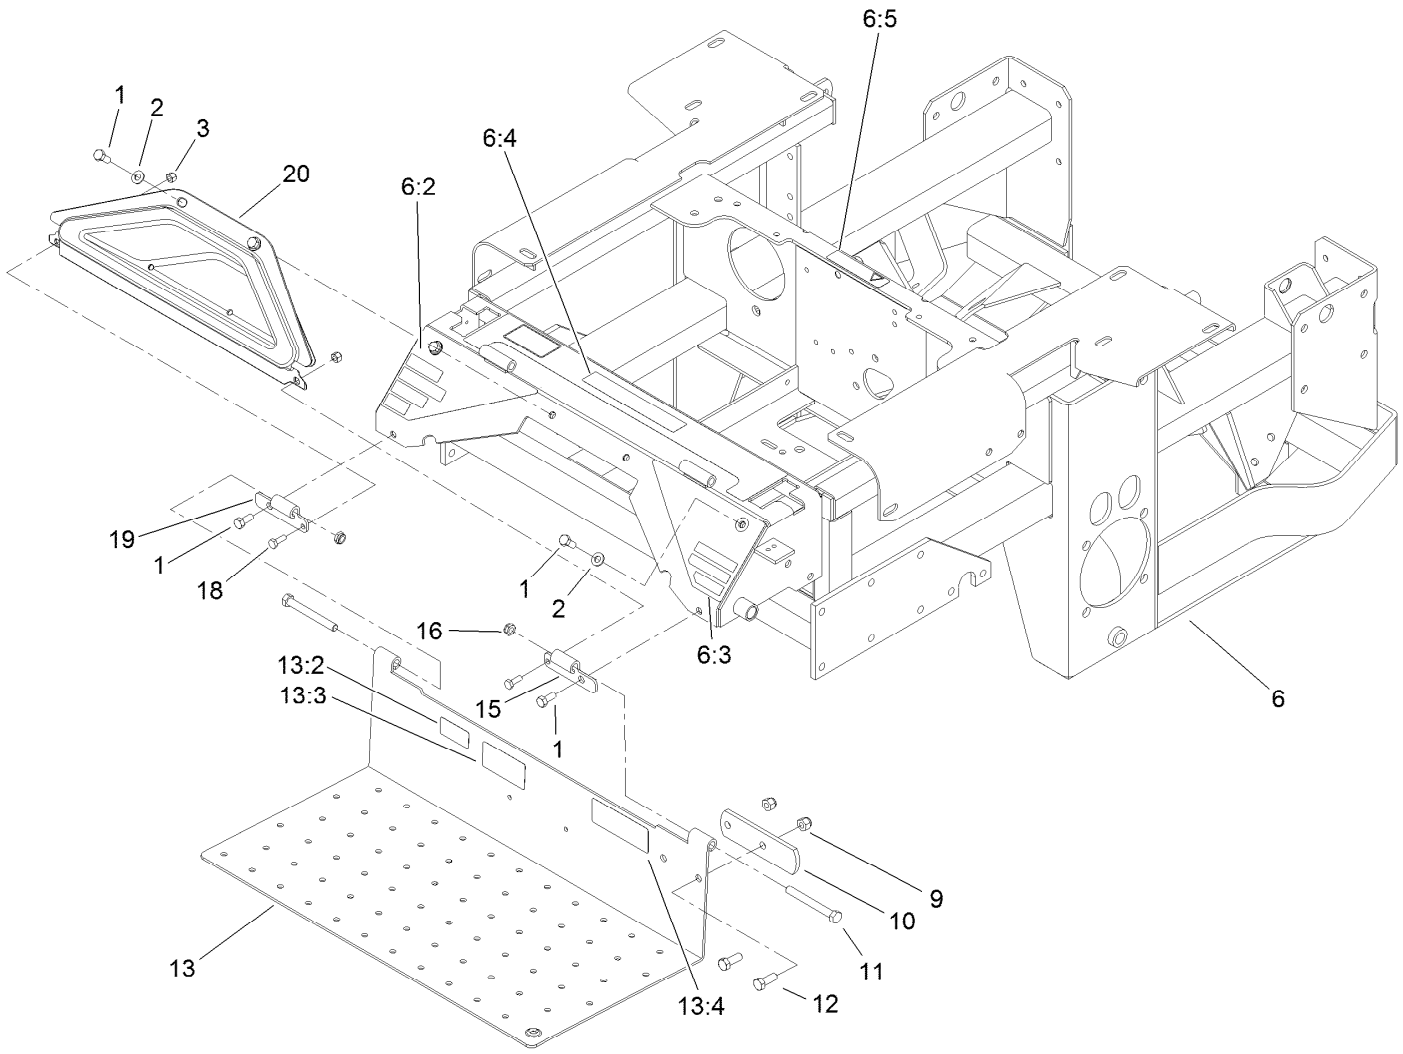

Engine Frame, Console and Floor Pan Assembly


Ref.	Part Number	Qty.	Description
1	322-43	6	Screw-HH
2	3256-70	4	Washer-Flat
3	3296-42	2	Nut-Lock, NI
6	115-3551	1	Engine Frame ASM
6:2	106-9989	1	Decal-Warning
6:3	106-7492	1	Decal-Danger
6:4	107-9866	1	Decal-Console, Top
6:5	98-5954	2	Decal-Cover, Missing
9	3296-39	2	Nut-Lock, NI
10	1-633964-03	1	Stop-Brake, Park
11	323-20	2	Screw-HH

Ref.	Part Number	Qty.	Description
12	323-6	2	Screw-HH
13	115-3852	1	Floor Pan ASM
13:2	98-4387	1	Decal-Protection, Ear
13:3	107-1864	1	Decal-Location, Manual
13:4	121-7559	1	Decal-Diesel, Bio-Ready
15	106-7488-03	1	Hinge-Floorpan, LH
16	3296-59	2	Nut-Lock, NI
18	321-4	2	Screw-HH
19	106-7489-03	1	Hinge-Floorpan, RH
20	106-7498	1	Pocket

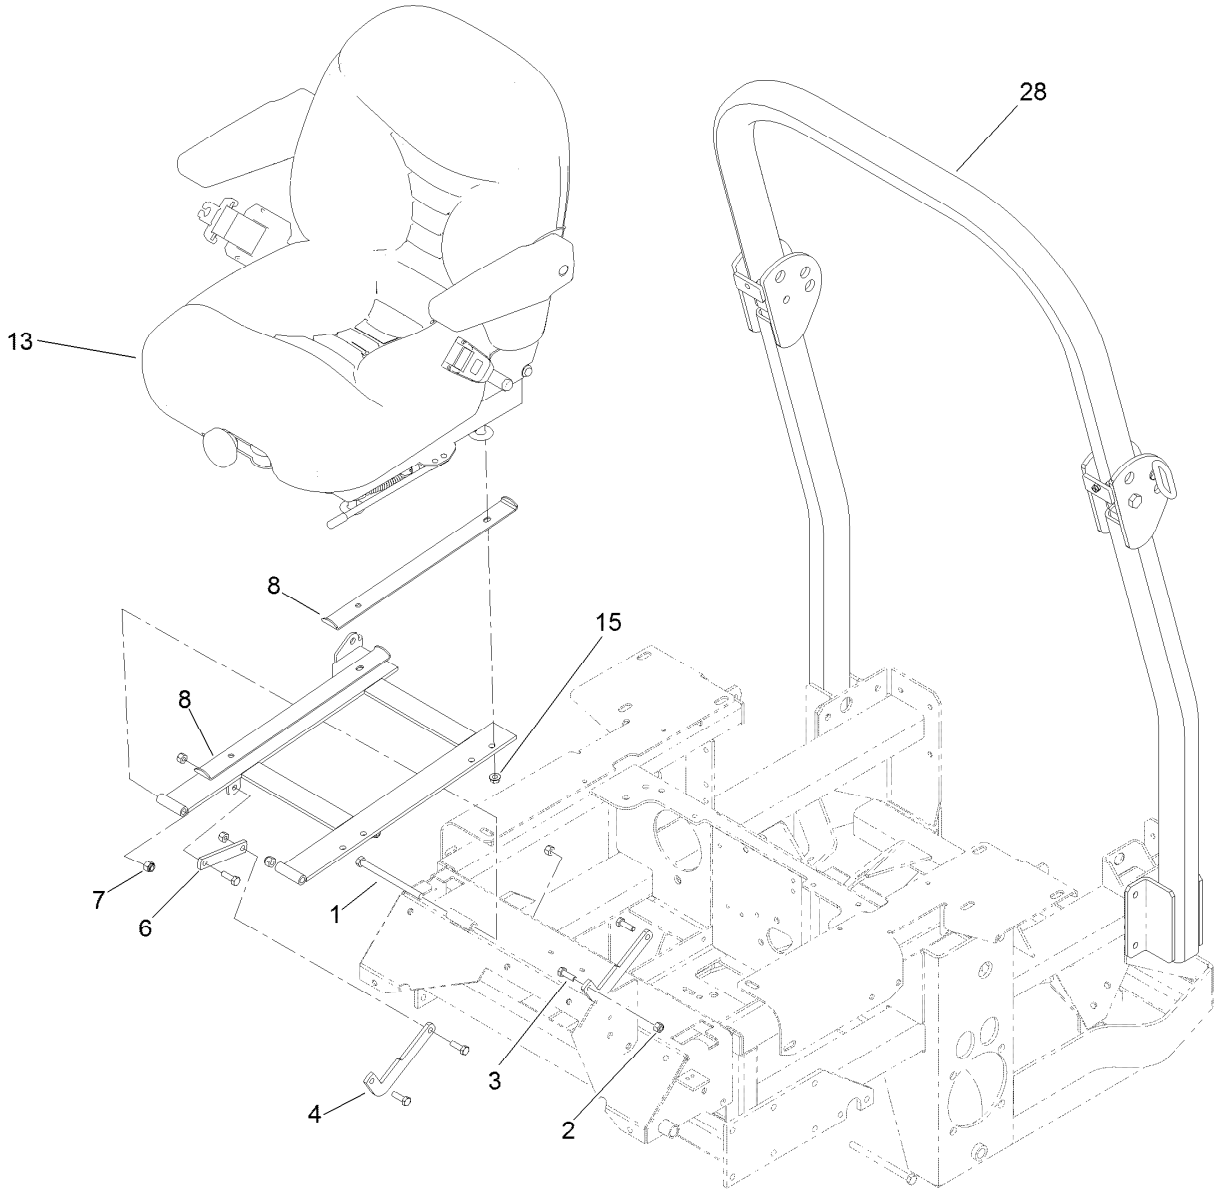


Seat and Roll-Over Protection System Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	323-39	2	Screw-HH
2	3296-29	4	Nut-Lock, NI
3	322-5	5	Screw-HH
4	109-2759	2	Link-Stop, Seat
6	103-5161	2	Link-Stop, Seat
7	3296-39	2	Nut-Lock, NI
8	1-633872-03	2	Stop-Seat
13	110-0838	1	Deluxe Seat ASM
15	32128-20	4	Nut-HF
28	106-7437	1	ROPS ASM

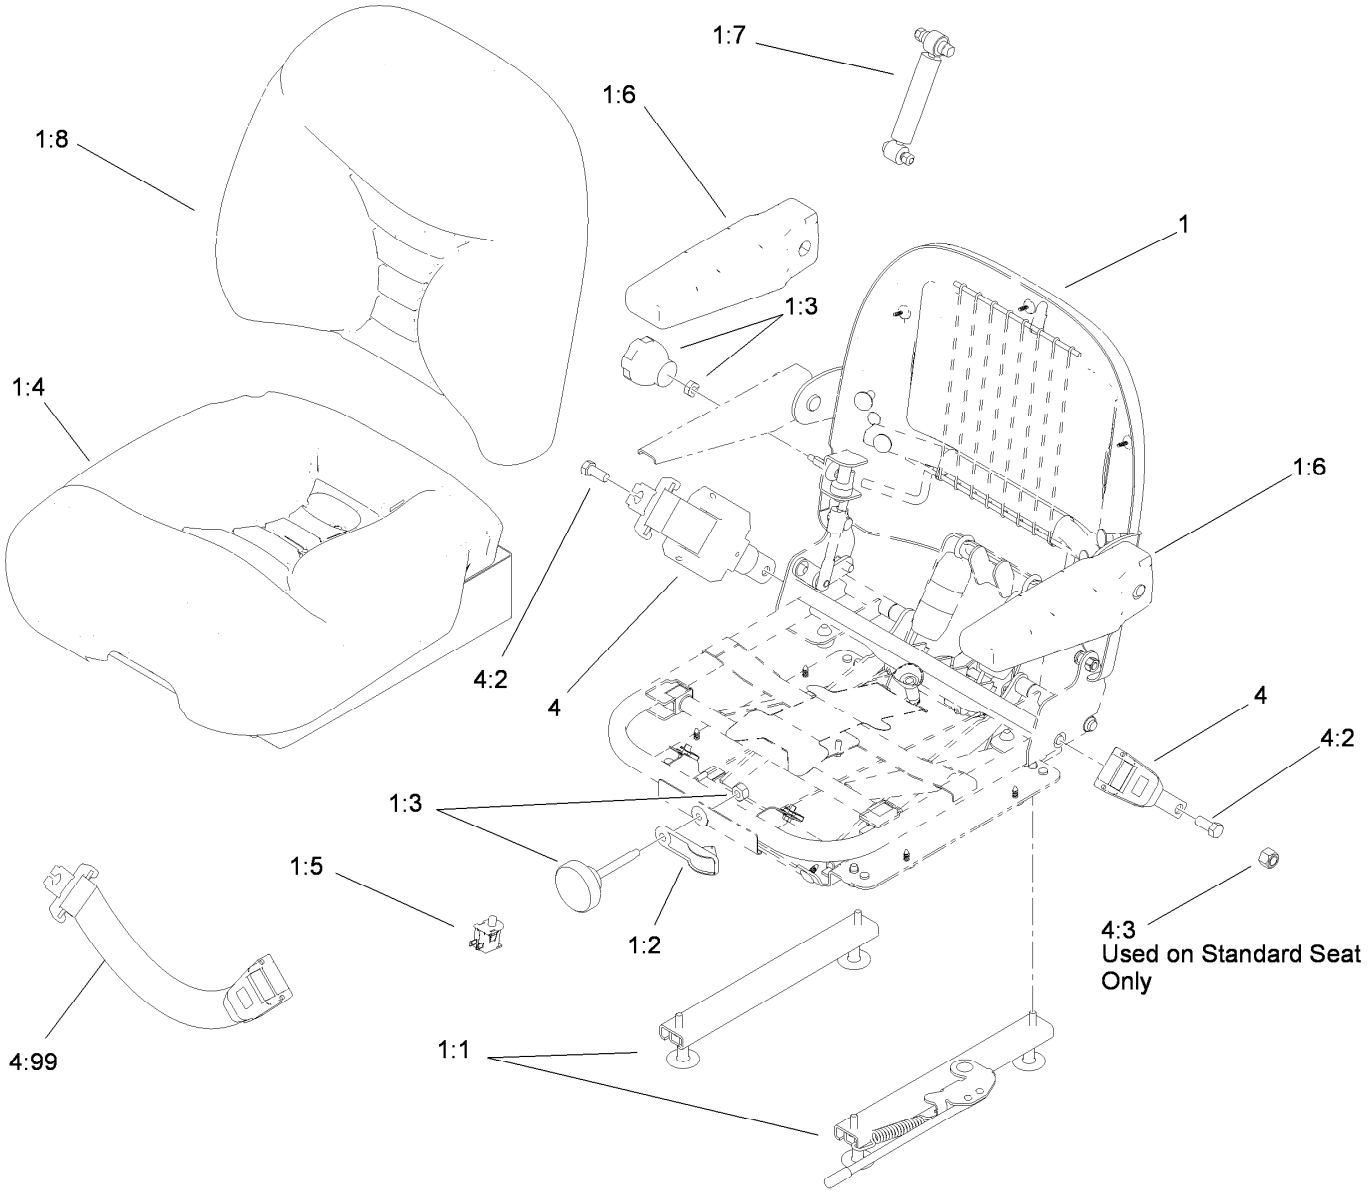

Deluxe Seat Assembly No. 110-0838

Ref.	*Part Number*	*Qty.*	*Description*
1	112-8355	1	Seat-Suspension
1:1	107-1880	1	Seat Track Kit
1:2	107-1885	1	Weight Indicator Kit
1:3	107-1881	1	Knob Kit
1:4	107-1883	1	Bottom Cushion Kit
1:5	82-2190	1	Switch-Bail
1:6	107-1887	1	Armrest Kit
1:7	107-1884	1	Shock Absorber Kit
1:8	112-8356	1	Cushion-Back
4	110-0883	1	Retractable Seatbelt Kit
4:2	3212-4	2	Screw-HH
4:3	3296-7	2	Nut-Lock
4:99	109-6226	1	Seat Belt Extension Kit

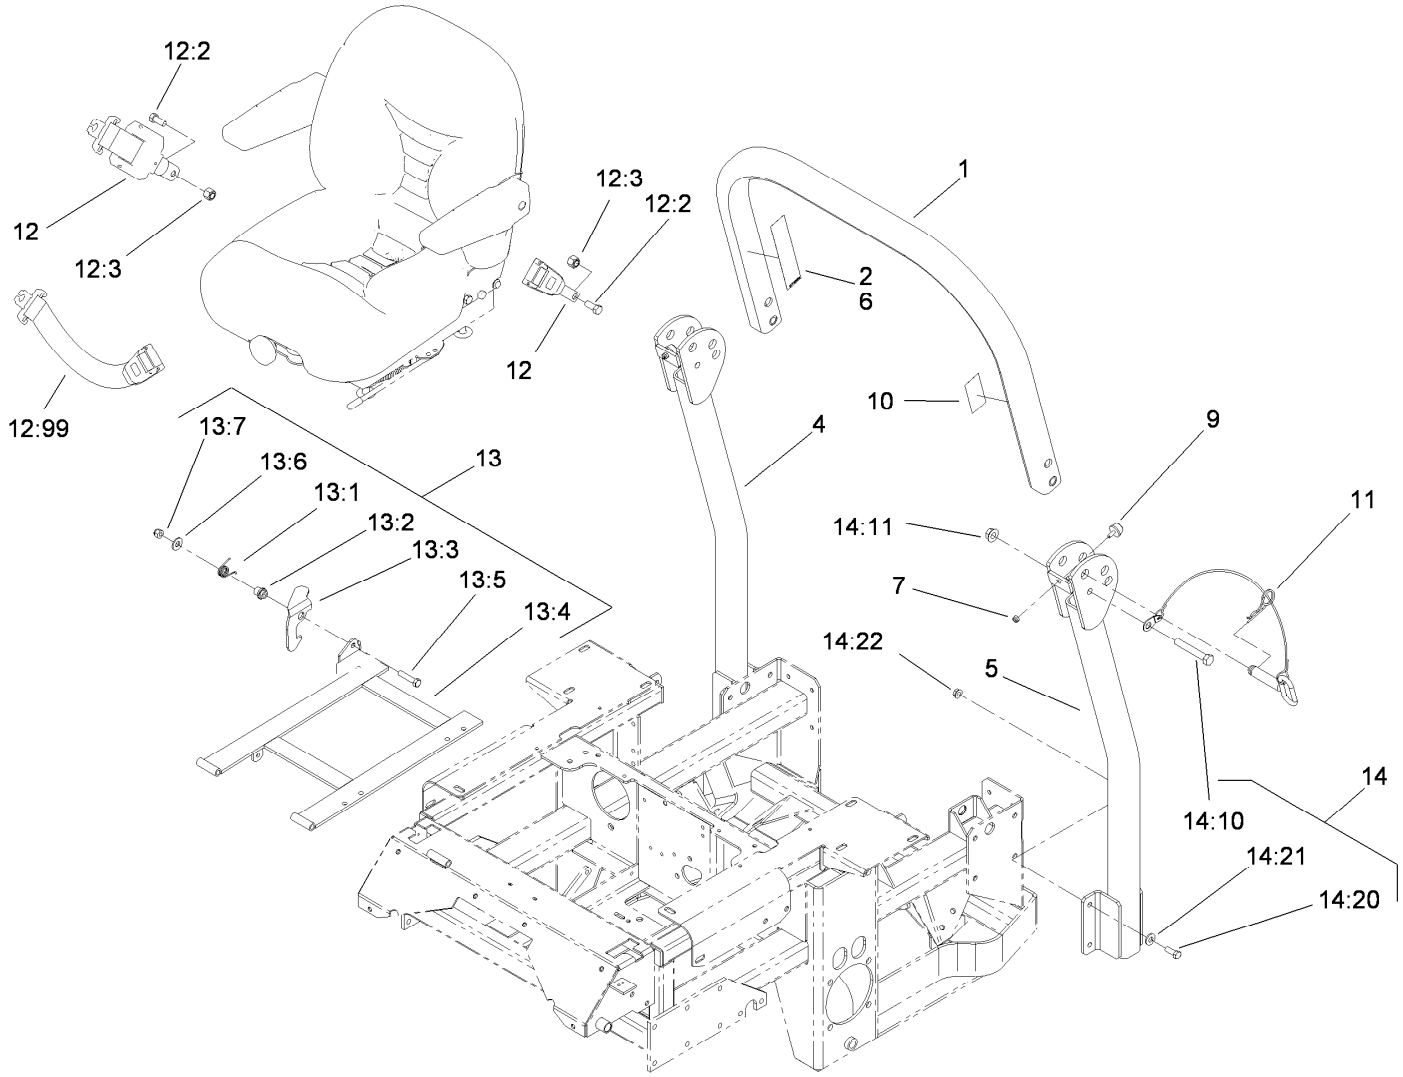


Roll-Over Protection System Assembly No. 106-7437

Ref.	*Part Number*	*Qty.*	*Description*
1		1	Upper Tube ASM ●
2	107-2102	1	Decal-Warning, Folding ROPS
4		1	Tube-Support, RH ●
5		1	Tube-Support, LH ●
6	107-3069	1	Decal-Warning, Folding ROPS
7	3296-73	2	Nut-Lock, NI
9	109-2365	2	Rubber Bumper ASM
10	107-2101	1	Decal-ROPS
11	103-4553	2	ROPS Fold Pin ASM
12	110-0883	1	Retractable Seatbelt Kit
12:2	3212-4	2	Screw-HH
12:3	3296-7	2	Nut-Lock
12:99	109-6226	1	Seat Belt Extension Kit

Ref.	*Part Number*	*Qty.*	*Description*
13	109-1813	1	Seat Frame Single Latch ASM
13:1	103-5520	1	Catch-Latch, Single
13:2	103-5519	1	Spring-Torsion, Latch
13:3	107-0075	1	Bushing-Latch, Seat
13:4	109-9222-03	1	Frame-Seat
13:5	3256-4	1	Washer-Flat
13:6	3296-39	1	Nut-Lock, NI
13:7	323-9	1	Screw-HH
14		1	Bag-Bolt ●
14:10	325-13	2	Screw-HH
14:11	32128-23	2	Nut-HF
14:20	323-8	8	Screw-HH
14:21	98-5975	8	Washer-Belleville
14:22	3290-357	8	Nut-HHF, Whiz


● Not serviced separately

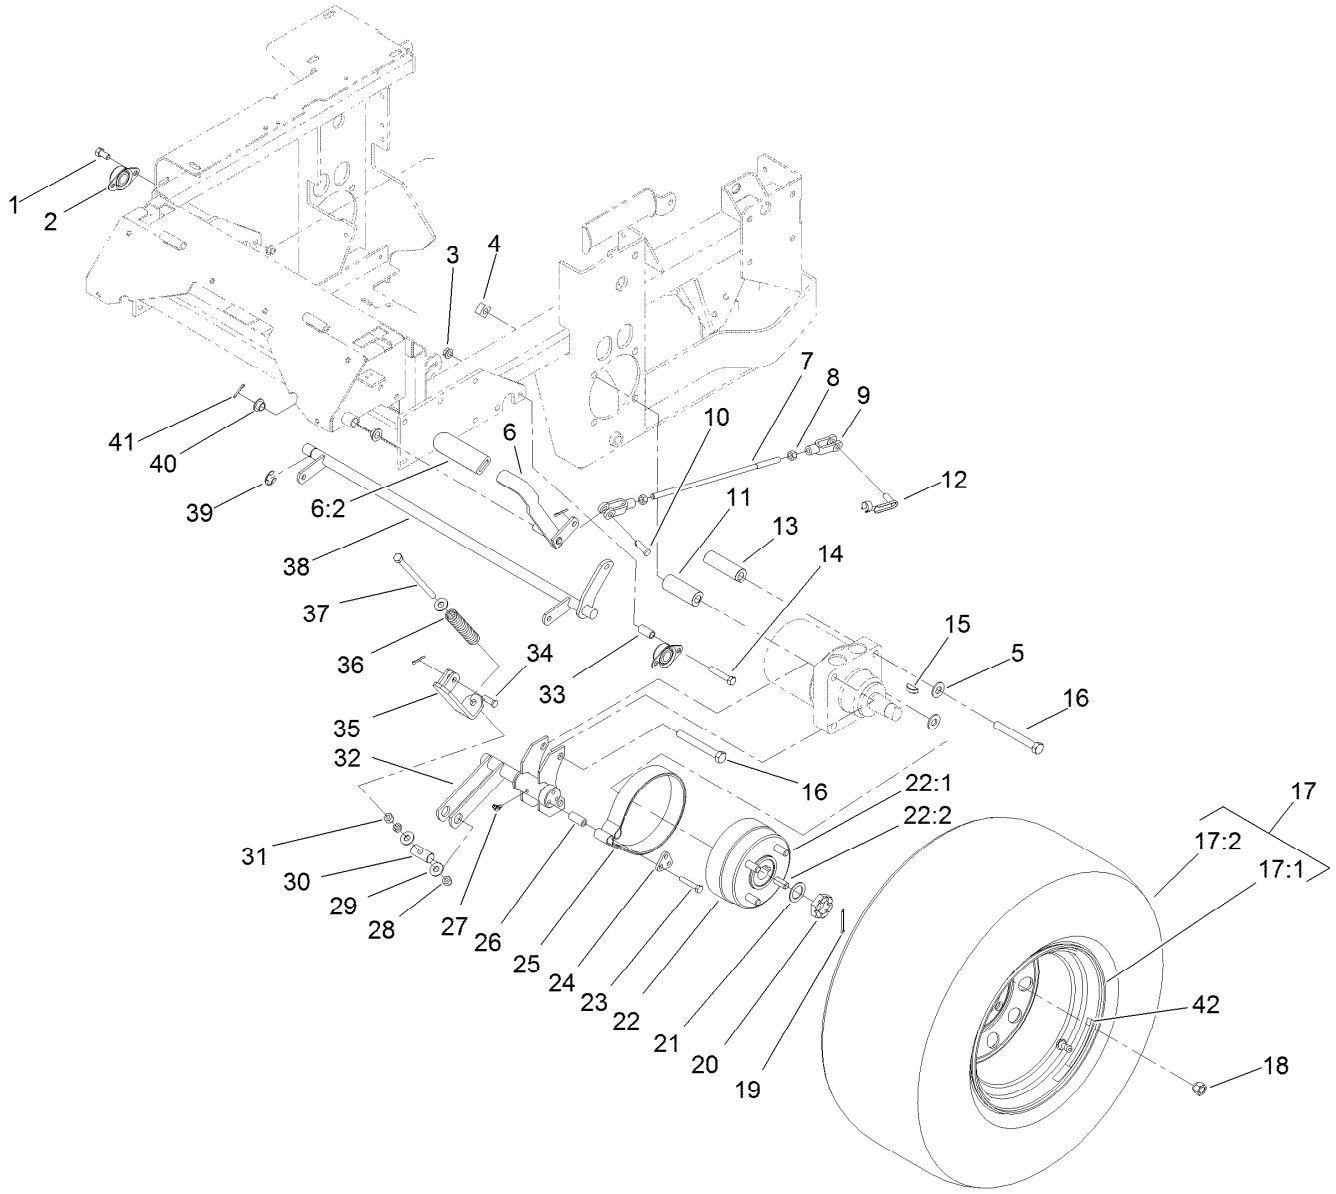

Wheel and Brake Assembly


Ref.	Part Number	Qty.	Description
1	323-4	2	Screw-HH
2	1-633102	2	Bearing-Flange, Side
3	3290-357	4	Nut-HHF, Whiz
4	109-5618	8	Nut-Square, Special
5	87-7270	4	Washer-Thrust
6	103-0197	1	Brake Lever And Grip ASM
6:2	1-633268	1	Grip-Lever
7	103-1708	1	Rod-Brake
8	3219-3	2	Nut-Hex
9	1-633131	2	Yoke-Linkage, Brake
10	1-808285	1	Pin-Clevis
11	109-5011	4	Spacer-Wheel, Short
12	103-2399	1	Pin-Spring, Clevis
13	109-5012	4	Spacer-Wheel, Long
14	323-10	2	Screw-HH
15	3257-42	2	Key-Woodruff
16	325-20	8	Screw-HH
17	109-3157	2	Wheel And Tire ASM
17:1	109-3156	1	Rim ASM
17:2	103-4963	1	Tire
18	242-50	8	Nut-Lug

Ref.	Part Number	Qty.	Description
19	1-806800	2	Pin-Cotter
20	1-809036	2	Nut-HH
21	1-523157	2	Washer-Spacer
22	103-0590	2	Hub And Wheel ASM
22:1	103-0589	1	Wheel Hub ASM
22:2	1-633926	4	Stud-Wheel
23	322-9	6	Screw-HH
24	103-0374	2	Retainer-Band, Brake
25	103-0355	2	Band-Brake
26	103-0384	6	Spacer
27	302-19	2	Fitting-Grease
28	3296-39	4	Nut-Lock, NI
29	3256-4	6	Washer-Flat
30	1-633144	2	Pin-Trunion
31	3218-3	2	Nut-Jam
32	103-0810-03	2	Brake-Wide
33	103-0051	2	Spacer-Retainer, Brake
34	1-808284	2	Pin-Clevis
35	103-1117-03	2	Linkage-Brake, Lower
36	1-633454	2	Spring-Brake
37	323-58	2	Bolt-TAP, HH

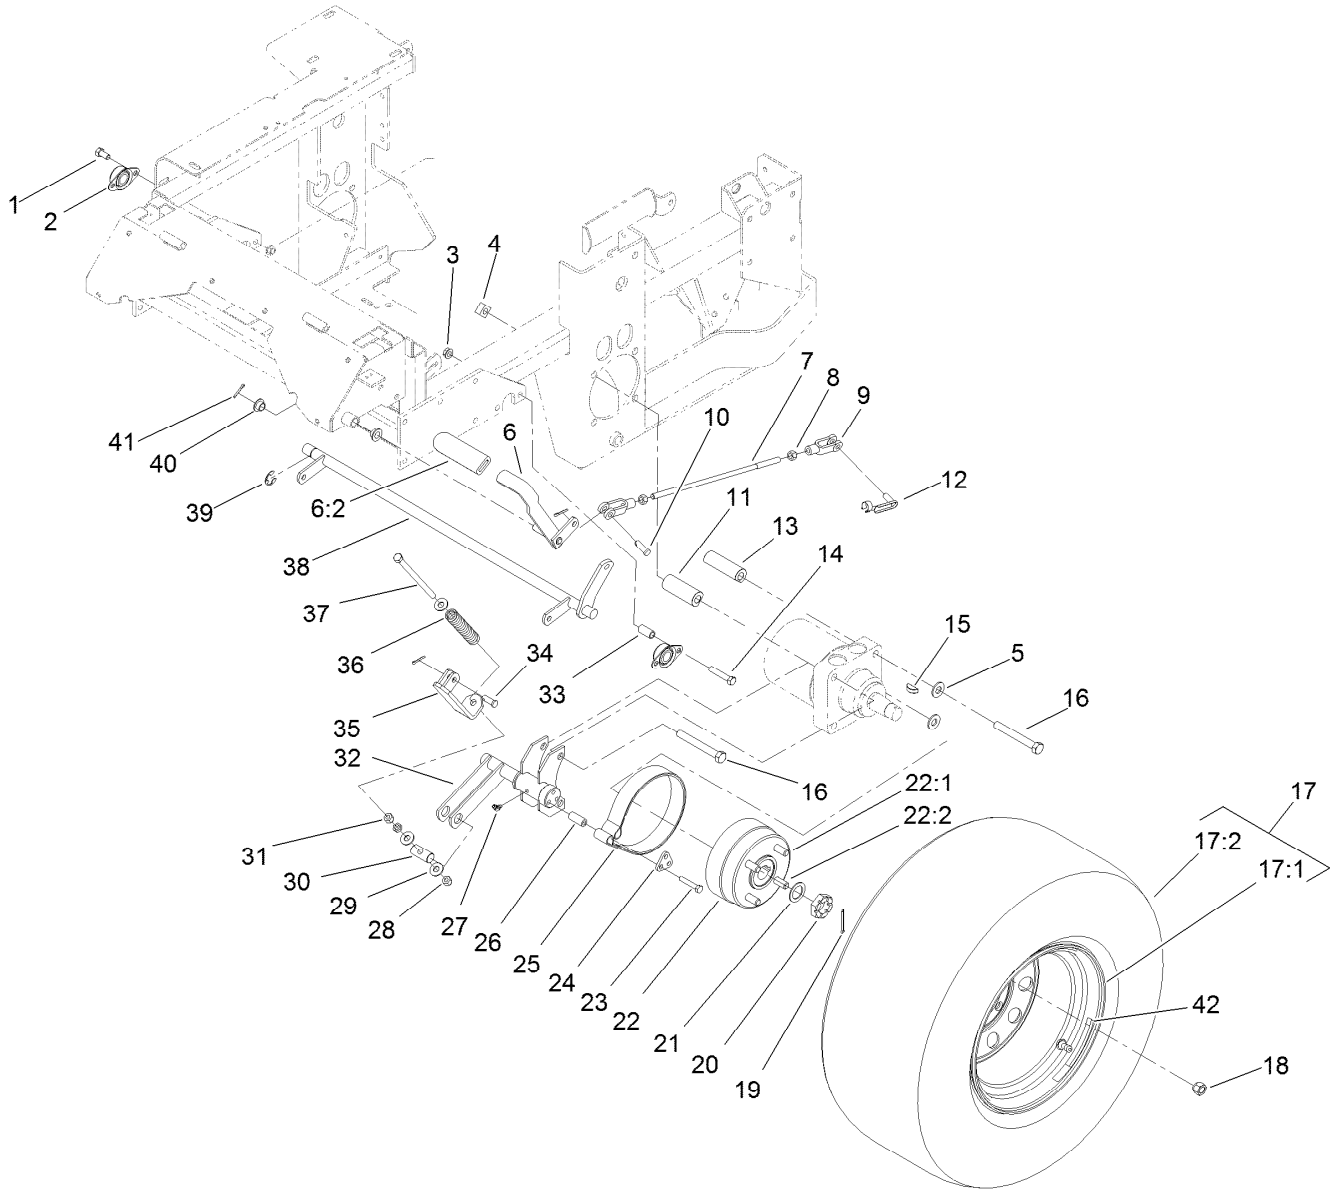

Wheel and Brake Assembly (continued)


Ref.	Part Number	Qty.	Description
38	103-5243-03	1	Shaft-Brake
39	32151-48	1	E-Ring
40	1-513140	2	Bearing-Control
41	3272-10	4	Pin-Cotter
42	109-7949	2	Decal

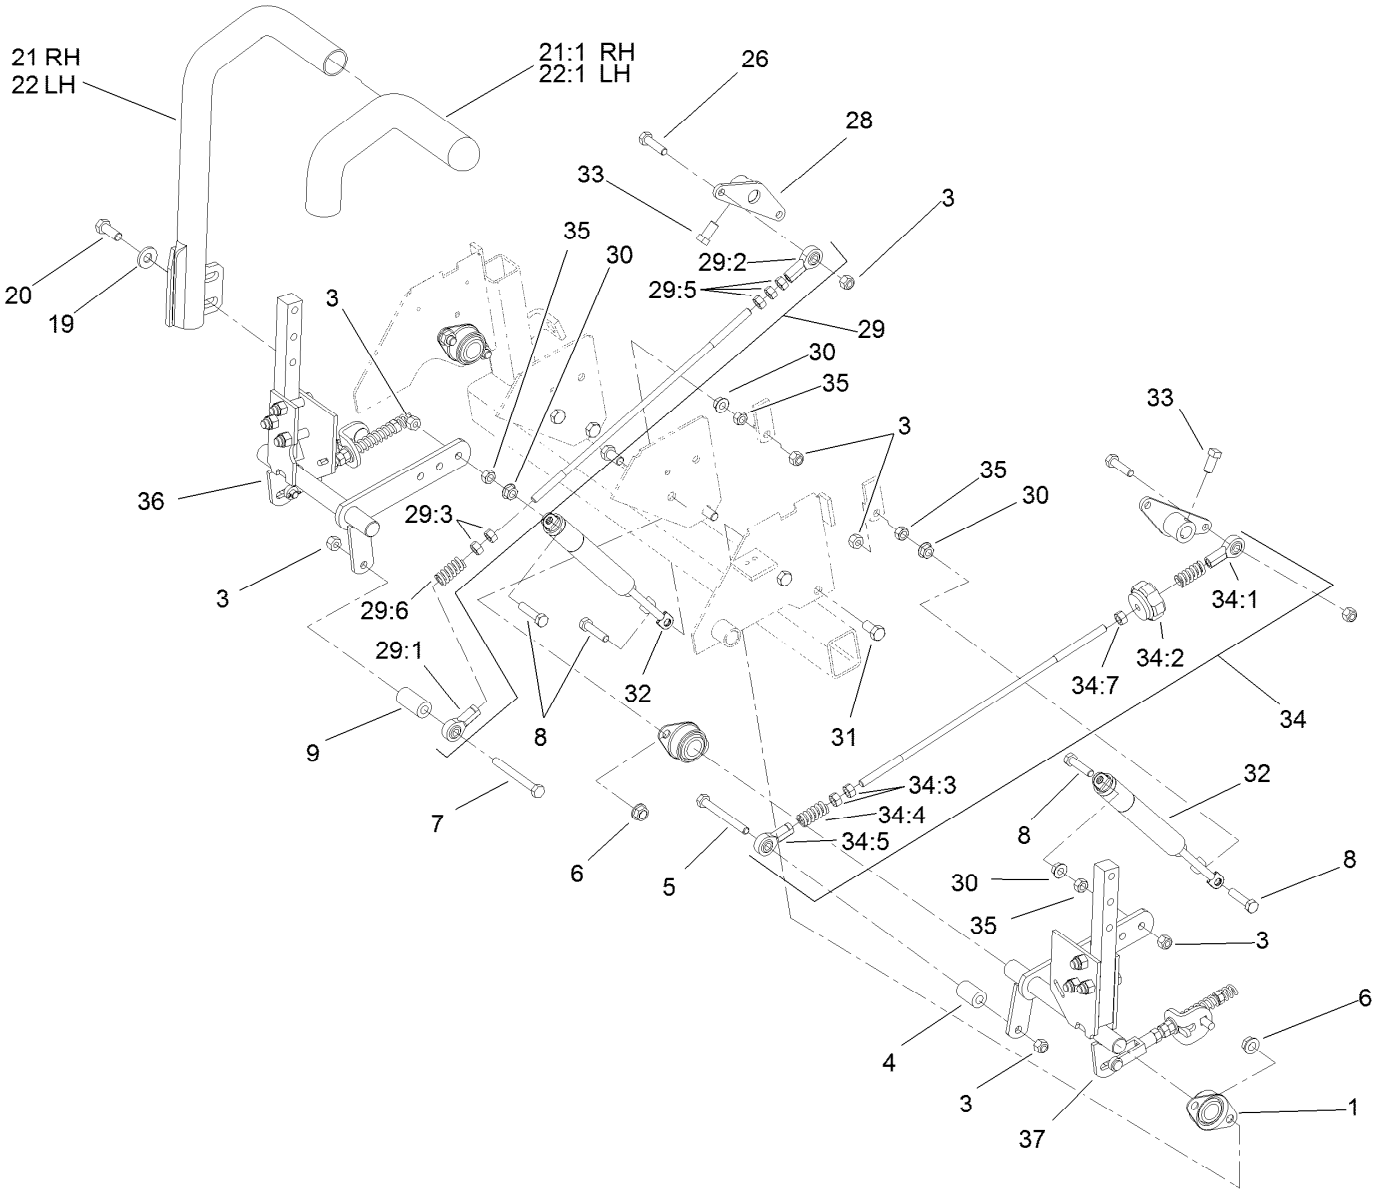

Motion Control Assembly


Ref.	Part Number	Qty.	Description
1	1-633102	4	Bearing-Flange, Side
3	3296-29	8	Nut-Lock, NI
4	103-1361	1	Spacer-Hydro Control, LH
5	322-12	1	Screw-HH
6	3290-357	8	Nut-HHF, Whiz
7	322-14	1	Screw-HH
8	1-403180	4	Screw-HH
9	103-5192	1	Spacer-Control, HYD
19	98-5975	4	Washer-Belleville
20	323-6	4	Screw-HH
21	108-7237	1	RH Lever ASM
21:1	106-9987	1	Grip-Control, Motion
22	108-7238	1	LH Lever ASM
22:1	106-9987	1	Grip-Control, Motion
26	322-6	4	Screw-HH
28	103-0194-03	2	Arm-Control, Hydro
29	103-5190	1	RH HYD Connect Link ASM
29:1	1-543017	1	Balljoint-RH

Ref.	Part Number	Qty.	Description
29:2	1-633152	1	Balljoint-LH
29:3	1-804524	2	Nut
29:5	3219-2	3	Nut-Hex
29:6	1-323245	1	Spring-Compression
30	32128-20	6	Nut-HF
31	323-4	8	Screw-HH
32	109-2339	2	Damper-Control, Motion
33	1-803022	2	Screw-Set
34	103-3062	1	Tracking Rod ASM
34:1	1-543017	1	Balljoint-RH
34:2	103-3060	1	Knob-Tracking
34:3	1-804524	2	Nut
34:4	1-323245	2	Spring-Compression
34:5	1-633152	1	Balljoint-LH
34:7	3219-2	1	Nut-Hex
35	3217-6	4	Nut-Hex
36	109-3978	1	RH Motion Control ASM
37	109-3979	1	LH Motion Control ASM

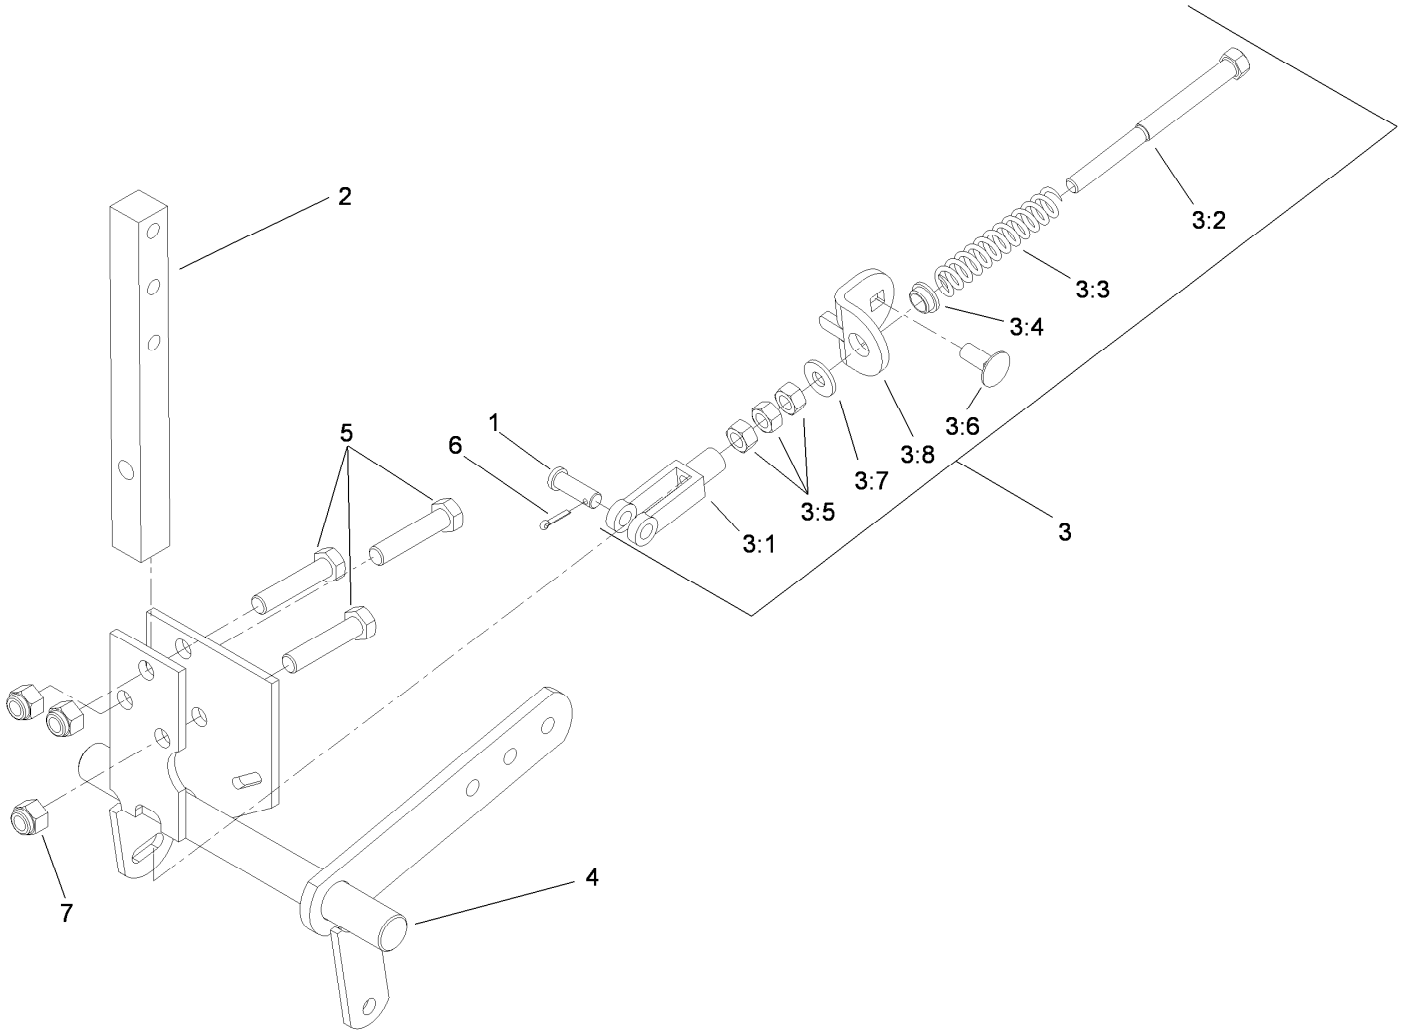


RH Motion Control Assembly No. 109-3978

Ref.	*Part Number*	*Qty.*	*Description*
1	1-808280	1	Pin-Clevis
2	103-0407	1	Arm-Shaft, Control
3	109-3903	1	Neutral Return ASM
3:1	1-303105	1	Yoke-Adjustable
3:2	1-603737	1	Bolt-Return, Neutral
3:3	1-603807	1	Spring-Return, Neutral
3:4	109-3769	1	Bushing-Nylon, Flanged
3:5	3219-2	3	Nut-Hex
3:6	3230-23	1	Screw-CARR
3:7	3256-2	1	Washer-Flat
3:8	109-3908	1	Tab-Adjustment
4	109-3980	1	Control-Motion, RH
5	323-9	3	Screw-HH
6	3272-5	1	Pin-Cotter
7	3296-39	3	Nut-Lock, NI

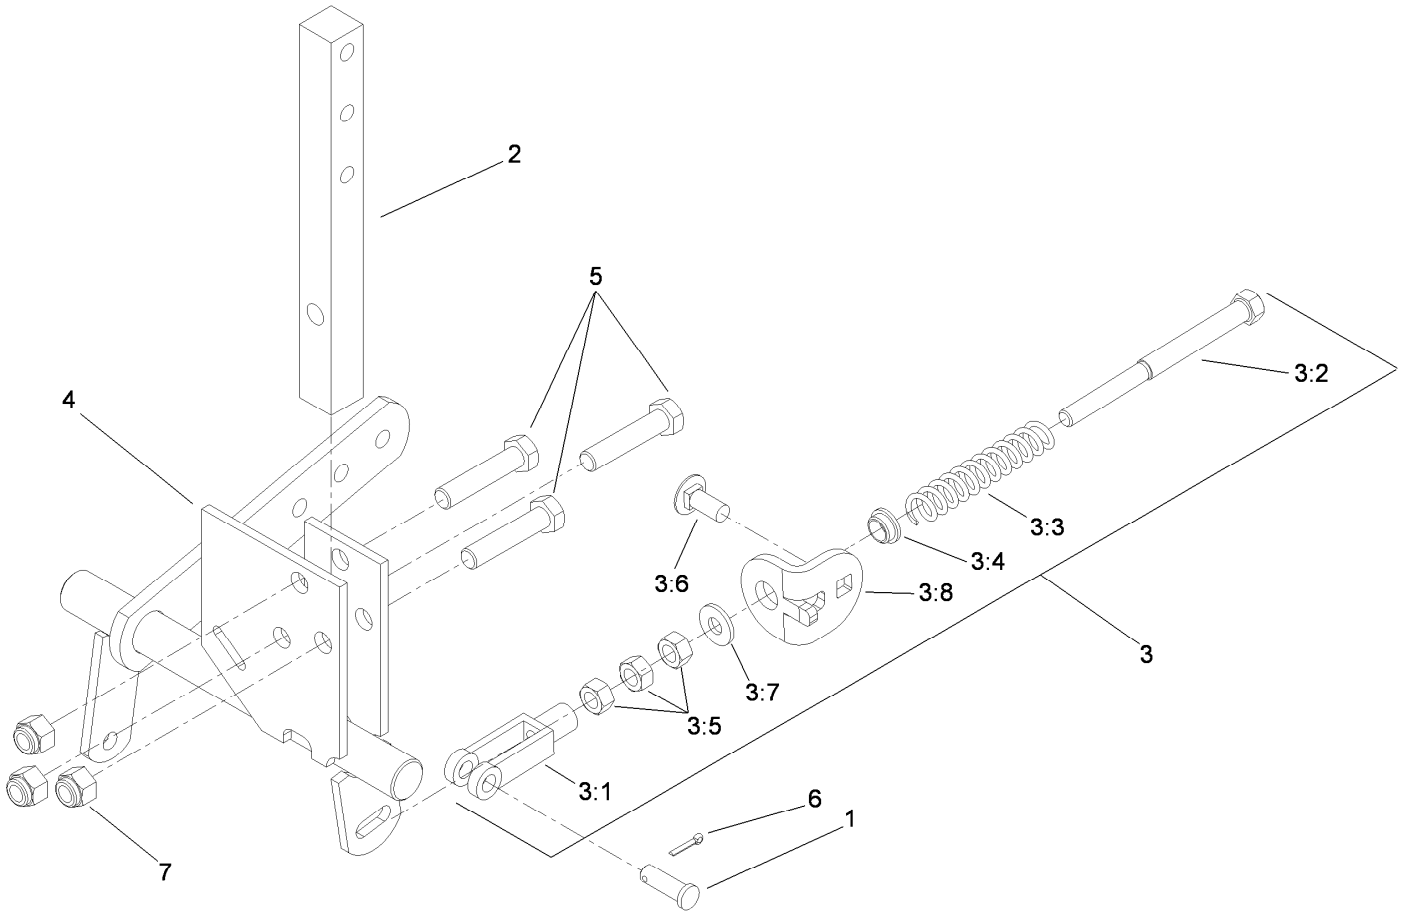

LH Motion Control Assembly No. 109-3979


Ref.	*Part Number*	*Qty.*	*Description*
1	1-808280	1	Pin-Clevis
2	103-0407	1	Arm-Shaft, Control
3	109-3903	1	Neutral Return ASM
3:1	1-303105	1	Yoke-Adjustable
3:2	1-603737	1	Bolt-Return, Neutral
3:3	1-603807	1	Spring-Return, Neutral
3:4	109-3769	1	Bushing-Nylon, Flanged
3:5	3219-2	3	Nut-Hex
3:6	3230-23	1	Screw-CARR
3:7	3256-2	1	Washer-Flat
3:8	109-3908	1	Tab-Adjustment
4	109-3983	1	Control-Motion, LH
5	323-9	3	Screw-HH
6	3272-5	1	Pin-Cotter
7	3296-39	3	Nut-Lock, NI

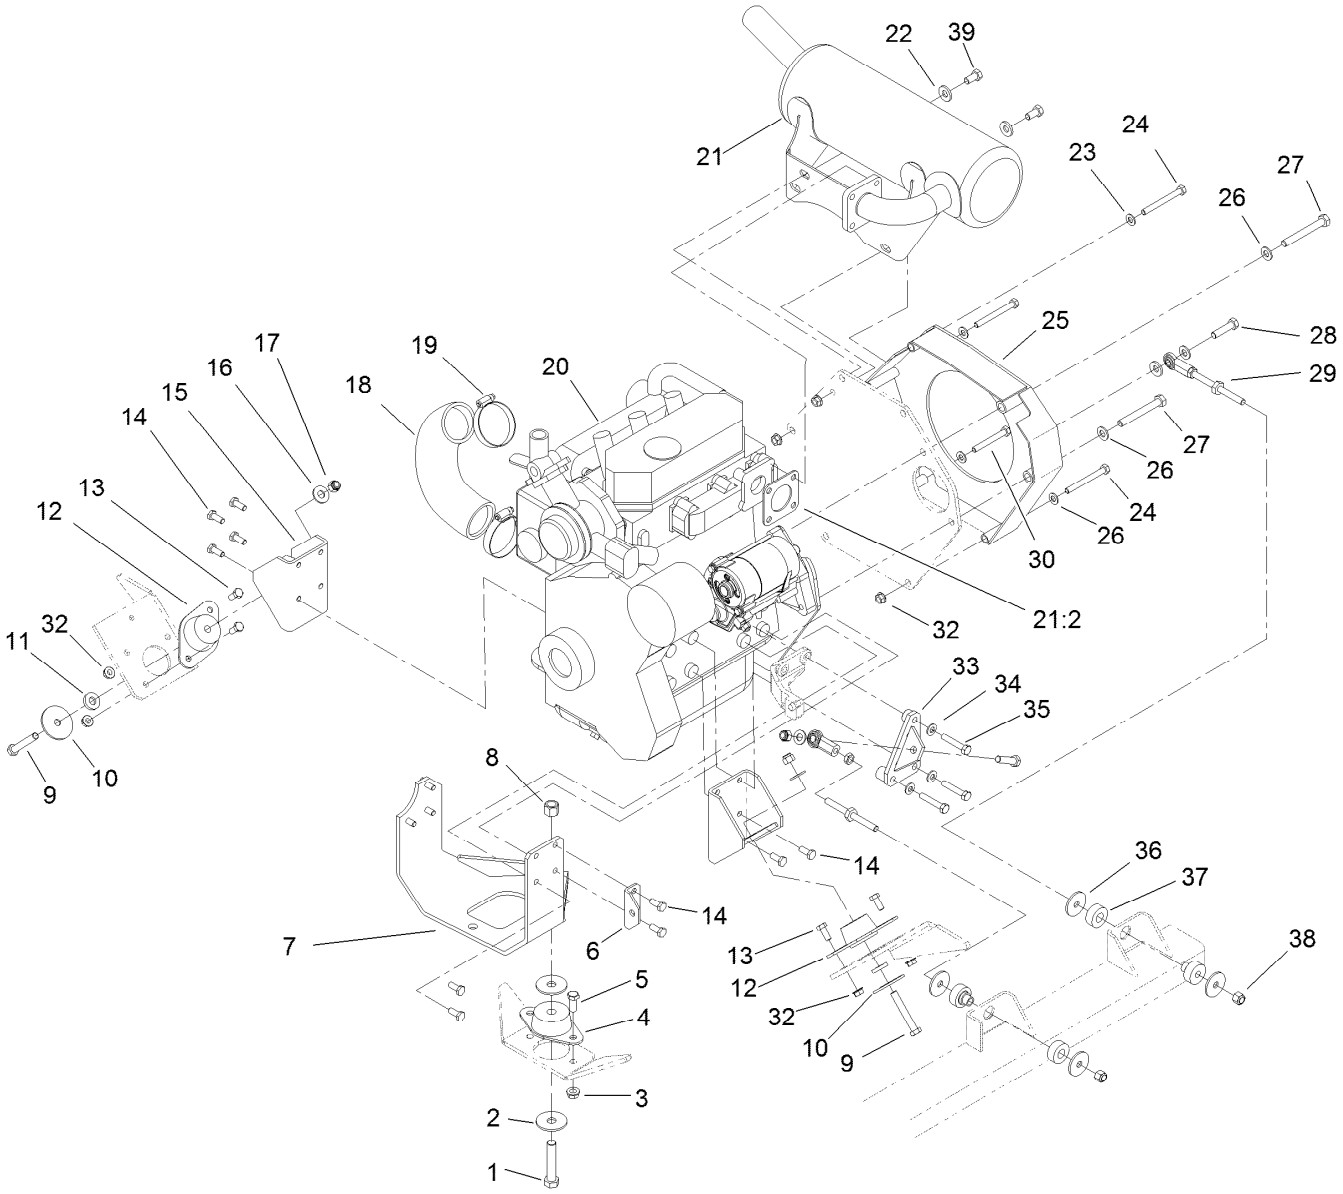

Engine Mount Assembly

Ref.	Part Number	Qty.	Description
1	325-10	1	Screw-HH
2	86-1990	2	Washer
3	3290-357	2	Nut-HHF, Whiz
4	103-1022	1	Isolator-Rear
5	323-5	2	Screw-HH
6	103-3908	1	Bracket-Ground
7	103-0870-03	1	Rear Engine Mount ASM
8	3296-23	1	Nut-Lock, NI
9	323-12	2	Screw-HH
10	83-1040	2	Washer-Flat
11	66-6480	2	Washer
12	103-2613	2	Isolator-Side
13	322-3	4	Screw-HH
14	33114-020	15	Screw-HH
15	103-0839-03	2	LH And RH Engine Mount ASM
16	3256-4	2	Washer-Flat
17	3296-39	3	Nut-Lock, NI
18	103-0921	1	Hose
19	2412-42	2	Clamp-Hose


Ref.	Part Number	Qty.	Description
20	103-0888	1	Engine-Daihatsu
21	103-2592	1	Muffler Kit
21:2	103-1385	1	Gasket-Muffler
22	98-5975	3	Washer-Belleville
23	3256-23	4	Washer-Flat
24	322-14	3	Screw-HH
25	103-3573-03	1	Cover-Flywheel
26	3256-24	4	Washer-Flat
27	56-2150	2	Screw-HH
28	323-8	2	Screw-HH
29	103-3745	2	Ball Joint Link ASM
30	322-12	1	Screw-HH
32	32128-20	7	Nut-HF
33	103-3556-03	1	Bracket-Engine, Front
34	1-303334	3	Washer-Spring
35	33114-045	3	Screw-HH
36	93-6099	4	Washer
37	103-3568	2	Isolator-Link
38	3296-6	2	Nut-Lock
39	63-7790	2	Screw-Cap

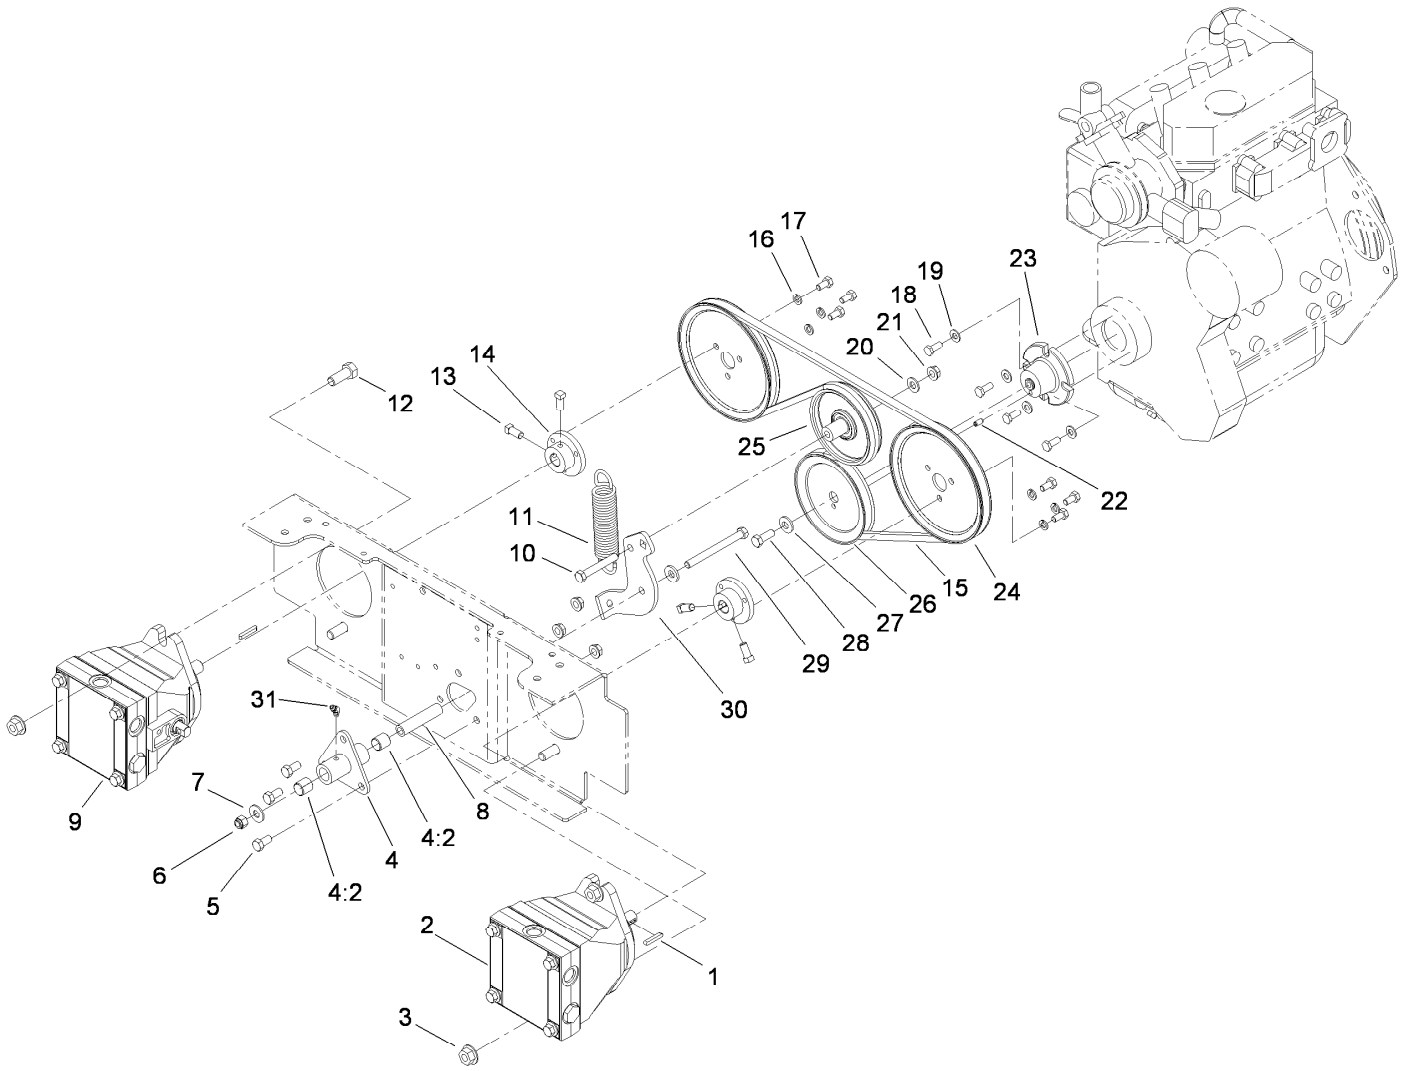

Wheel Pump Drive Assembly


Ref.	Part Number	Qty.	Description
1	103-2739	2	Key
2	103-2978	1	Pump-Hydro, LH
3	32128-49	4	Nut-HHF
4	103-4467	1	Pump Idler ASM
4:2	1-513034	2	Sleeve-Bearing
5	323-4	3	Screw-HH
6	3296-39	1	Nut-Lock, NI
7	3256-4	1	Washer-Flat
8	103-0919	1	Bushing-Tightener, Pivot
9	103-2979	1	Pump-Hydro, RH
10	323-12	1	Screw-HH
11	1-603413	1	Spring-Extension
12	325-5	4	Screw-HH
13	1-803050	4	Screw-Set
14	103-1471	2	Hub-Pump
15	107-7724	1	Belt-V

Ref.	Part Number	Qty.	Description
16	1-805005	6	Washer-Lock
17	322-2	6	Screw-HH
18	33114-020	4	Screw-HH
19	3256-23	4	Washer-Flat
20	3256-24	1	Washer-Flat
21	3290-357	4	Nut-HHF, Whiz
22	103-1459	1	Pin-Roll
23	103-1421	1	Hub-Drive, Pump
24	103-1472	2	Sheave-Pump
25	103-4464	1	Idler-Pump
26	103-5164	1	Sheave-Engine
27	98-5975	2	Washer-Belleville
28	323-6	1	Screw-HH
29	323-16	1	Screw-HH
30	103-4463-03	1	Arm-Tightener, Pump
31	302-11	1	Fitting-Lube, 45 DEG

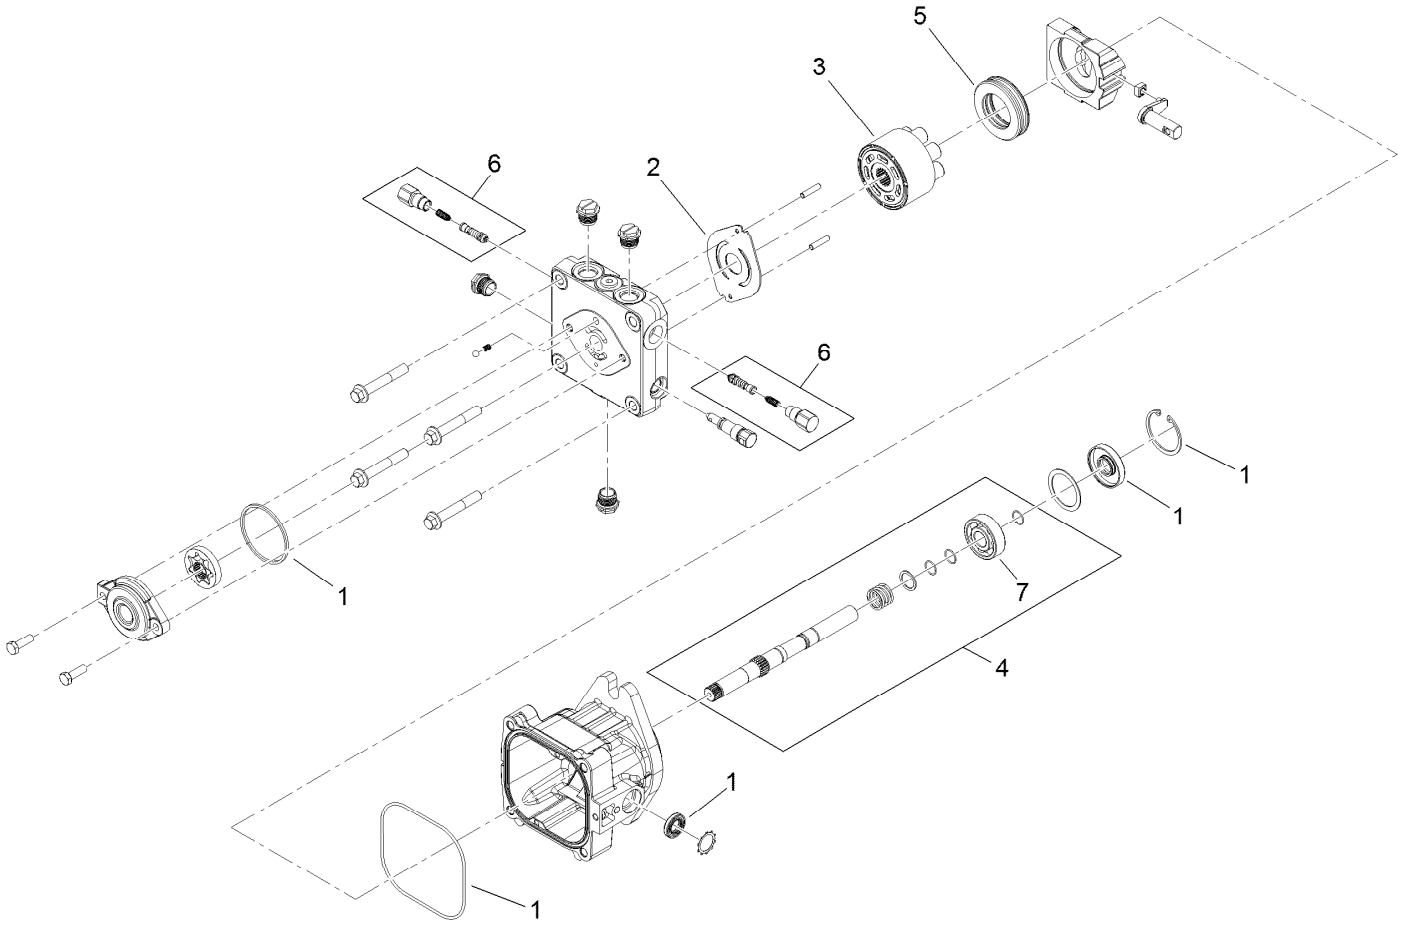


Hydraulic Pump Assembly No. 103-2978

Ref.	*Part Number*	*Qty.*	*Description*
1	100-6110	1	Overhaul Seal Kit
2	100-6112	1	Plate-Valve
3	94-1913	1	Cylinder Block ASM
4	103-2669	1	Input Shaft Kit
5	103-2670	1	Thrust Bearing Kit
6	103-2741	1	Shock Valve Kit
7	103-8439	1	Input Bearing Kit

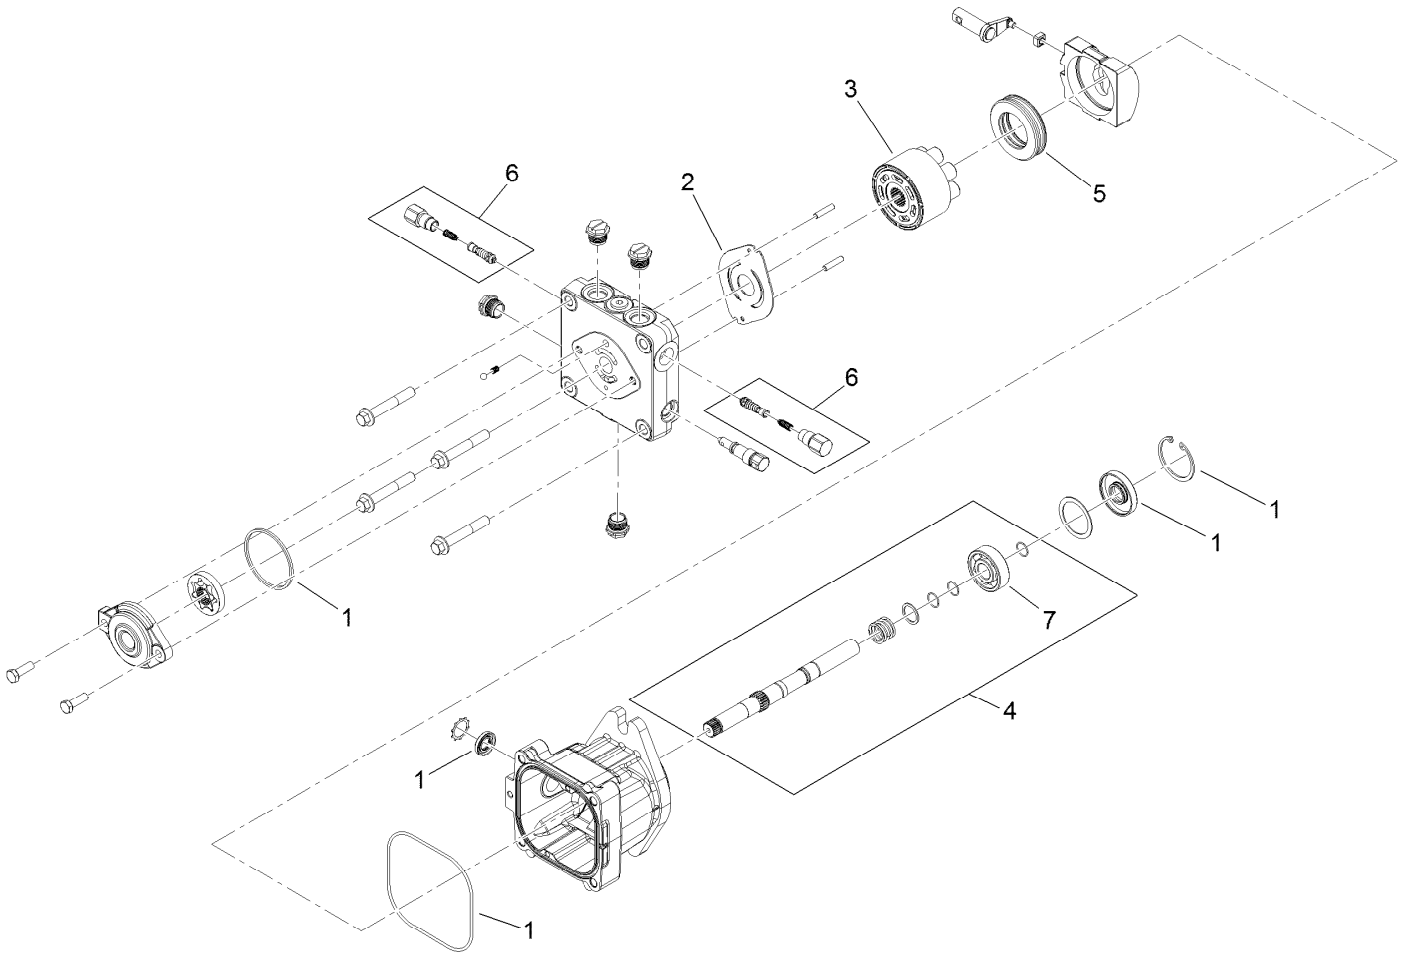

Hydraulic Pump Assembly No. 103-2979


Ref.	*Part Number*	*Qty.*	*Description*
1	100-6110	1	Overhaul Seal Kit
2	100-6112	1	Plate-Valve
3	94-1913	1	Cylinder Block ASM
4	103-2669	1	Input Shaft Kit
5	103-2670	1	Thrust Bearing Kit
6	103-2741	1	Shock Valve Kit
7	103-8439	1	Input Bearing Kit

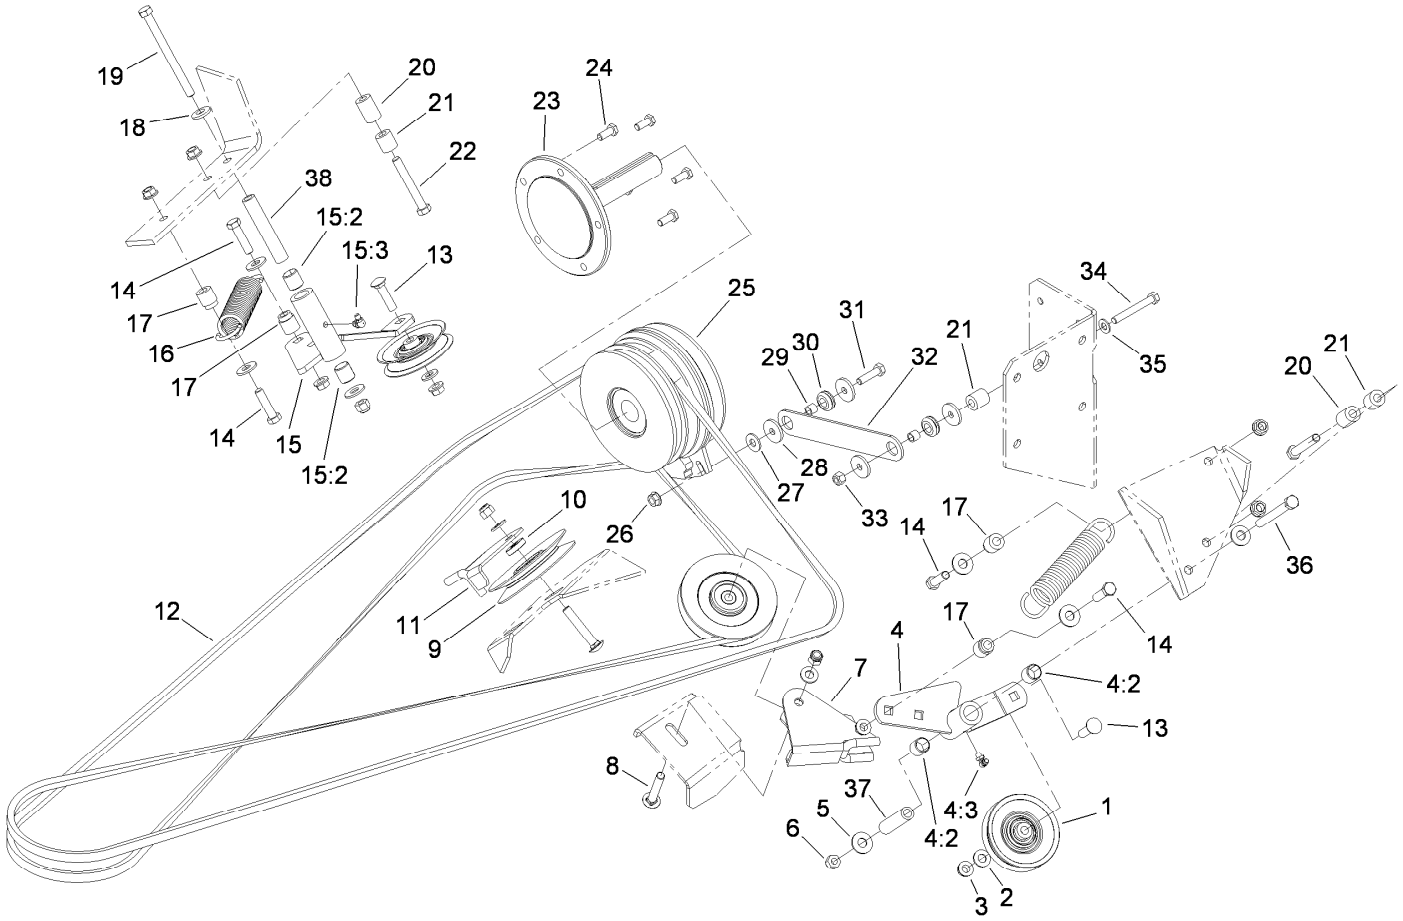

Deck Belt Drive Assembly

Ref.	Part Number	Qty.	Description
1	103-0983	2	Sheave
2	3256-24	4	Washer-Flat
3	3290-357	7	Nut-HHF, Whiz
4	107-9851	1	LH Idler ASM
4:2	1-513034	2	Sleeve-Bearing
4:3	302-40	1	Fitting-Grease
5	3256-4	6	Washer-Flat
6	3296-39	4	Nut-Lock, NI
7	103-4011-03	1	Guard-Belt Sheave, LH
8	3231-40	2	Bolt-CARR
9	103-0984	2	Sheave
10	103-3186	1	Spacer-Bracket, Guide
11	103-4039-03	1	Guard-Belt Sheave, RH
12	107-7738	2	Belt-V
13	3231-4	2	Screw-CARR
14	323-9	4	Screw-HH
15	107-9861	1	RH Idler ASM
15:2	1-513034	2	Sleeve-Bearing
15:3	302-40	1	Fitting-Grease
16	103-1767	2	Spring-Extension
17	103-1503	4	Spacer-Tightener, Belt

Ref.	Part Number	Qty.	Description
18	98-5975	2	Washer-Belleville
19	323-23	1	Screw-HH
20	103-1361	2	Spacer-Hydro Control, LH
21	103-0193	3	Spacer-Strap, Clutch
22	323-13	2	Screw-HH
23	103-0286	1	Shaft-Stub
24	33114-020	5	Screw-HH
25	109-6627	1	Clutch Kit
26	32128-20	1	Nut-HF
27	3256-3	1	Washer-Flat
28	1-613235	4	Washer
29	1-633545	2	Spacer
30	1-633630	2	Grommet
31	322-6	1	Screw-HH
32	103-0192-03	1	Strap-Clutch / Brake
33	3296-29	1	Nut-Lock, NI
34	322-12	1	Screw-HH
35	3256-23	1	Washer-Flat
36	323-16	1	Screw-HH
37	103-0919	1	Bushing-Tightener, Pivot
38	103-0040	1	Bushing-Tightener, Pivot

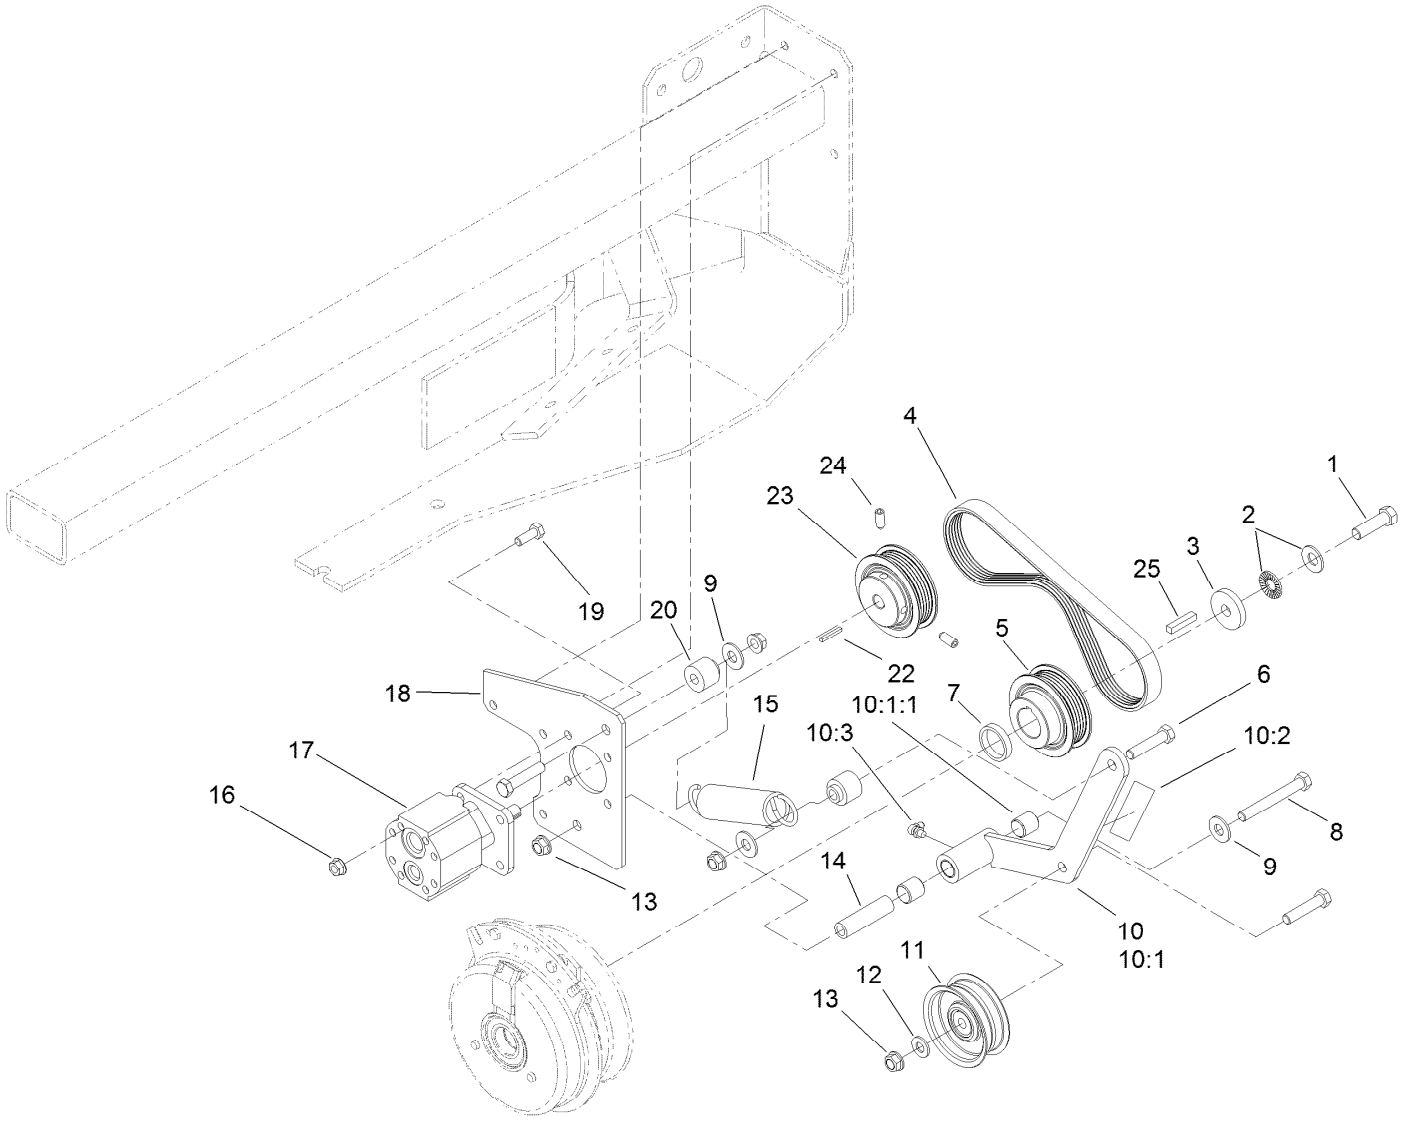


Cooling Pump Drive Assembly

Ref.	Part Number	Qty.	Description
1	3212-6	1	Screw-HH
2	1-603610	2	Washer-Spring
3	1-543610	1	Washer-Clutch
4	107-7739	1	Belt-Poly V
5	103-1339	1	Sheave-5 Rib
6	323-9	3	Screw-HH
7	103-1422	1	Spacer-Pump Drive, Fan
8	323-14	1	Screw-HH
9	3256-4	3	Washer-Flat
10	107-9879	1	Wheel Pump Tension ASM
10:1		1	Tensioner ASM ●
10:1:1	1-513034	2	Sleeve-Bearing
10:2	98-5954	1	Decal-Cover, Missing
10:3	302-40	1	Fitting-Grease

Ref.	Part Number	Qty.	Description
11	1-633167	1	Sheave-Idler
12	3256-24	1	Washer-Flat
13	3290-357	4	Nut-HHF, Whiz
14	1-603384	1	Bushing-Pivot, Idler
15	1-603414	1	Spring-Extension
16	3296-29	4	Nut-Lock, NI
17	103-7431	1	Pump-Fan, Cooling
18	103-1299-03	1	Plate-Mating, Fan Pump
19	322-4	4	Screw-HH
20	103-1575	2	Spacer-Spring, Fan Pump
22	32150-1	1	Key-Square
23	103-1338	1	Sheave-5 Rib
24	3246-6	2	Screw-Set, HSH
25	13-2840	1	Key-Square

● Not serviced separately

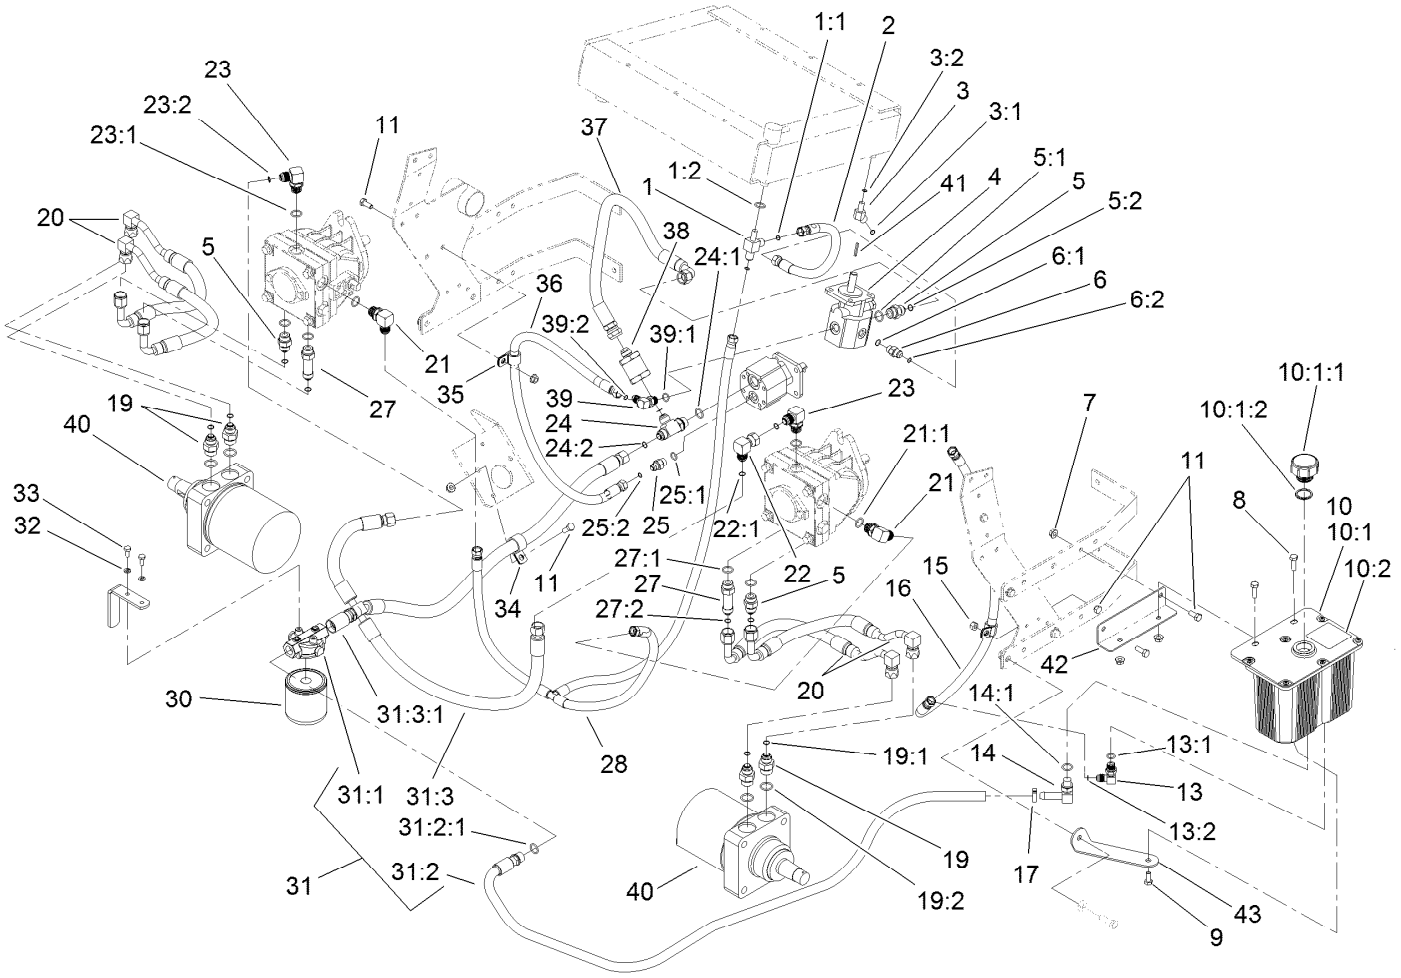


Hydraulic System Assembly

Ref.	Part Number	Qty.	Description
1	108-5998	1	Fitting-HYD, Straight Tee
1:1	237-21	2	O-Ring
1:2	237-42	1	O-Ring
2	103-2173	1	Fan Case Drain Hose ASM
3	108-5999	1	Fitting-HYD, 45 Elbow
3:1	237-21	1	O-Ring
3:2	237-42	1	O-Ring
4	103-7430	1	Motor-Fan, Cooling
5	1-603990	3	Fitting-Straight
5:1	1-603920	1	O-Ring
5:2	1-603992	1	O-Ring
6	103-2157	1	Fitting-Straight
6:1	1-603923	1	O-Ring
6:2	103-1020	1	O-Ring
7	32128-20	7	Nut-HF
8	322-5	4	Screw-HH
9	322-3	2	Screw-HH
10	109-0582	1	Hydraulic Tank ASM

Ref.	Part Number	Qty.	Description
10:1		1	Tank-Hydraulic ●
10:1:1	103-1948	1	Cap-Reservoir, HYD
10:1:2	103-1949	1	Gasket-Cap
10:2	1-523552	1	Decal-Tank, HYD
11	322-4	5	Screw-HH
13	103-2155	1	Fitting-90 DEG
13:1	1-603921	1	O-Ring
13:2	103-1020	1	O-Ring
14	108-5316	1	Fitting-Elbow, 90 DEG
14:1	237-79	1	O-Ring
15	3296-29	1	Nut-Lock, NI
16	103-2174	1	Tank Return Hose ASM
17	103-2104	1	Clamp-Hose
19	1-603991	4	Fitting-Straight
19:1	237-80	1	O-Ring
19:2	1-603992	1	O-Ring
20	103-4679	4	HYD Hose ASM
21	103-1014	2	Fitting-Elbow, 90 DEG

● Not serviced separately

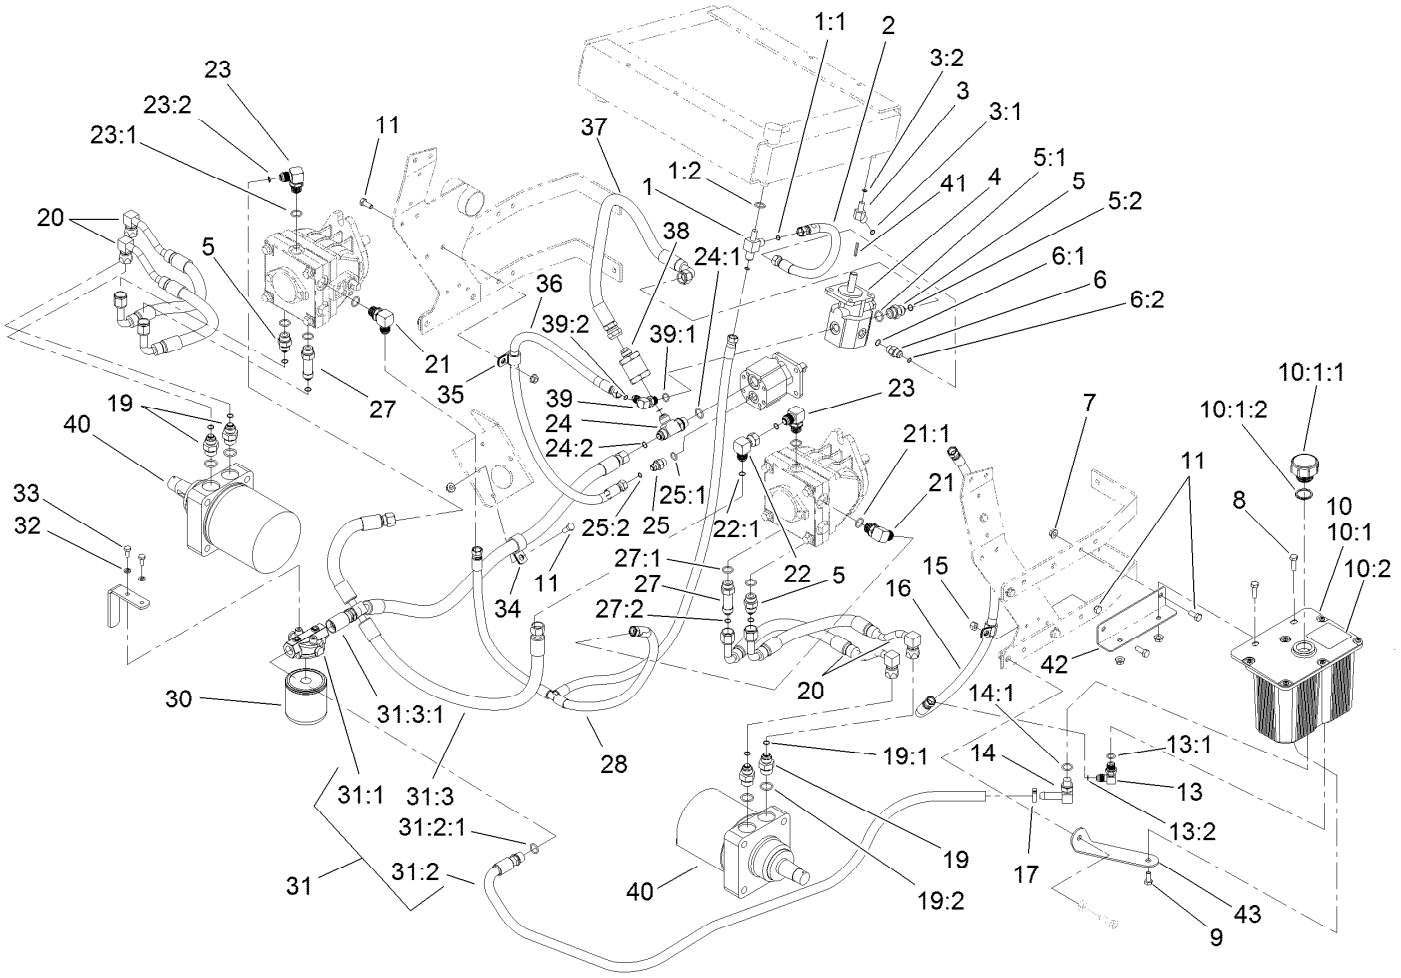


Hydraulic System Assembly (continued)

Ref.	Part Number	Qty.	Description
21:1	1-603920	1	O-Ring
22	103-2315	1	Fitting-90 DEG
22:1	1-603992	1	O-Ring
23	103-2153	2	Fitting-90 DEG
23:1	1-603920	1	O-Ring
23:2	1-603992	1	O-Ring
24	103-2159	1	Fitting-Tee
24:1	1-603920	1	O-Ring
24:2	1-603992	2	O-Ring
25	103-2156	1	Fitting-Straight
25:1	1-603921	1	O-Ring
25:2	103-1020	1	O-Ring
27	103-1940	2	Adapter-HYD, Straight
27:1	237-79	1	O-Ring
27:2	1-603992	1	O-Ring
28	103-2172	1	Case Drain Hose ASM
30	23-9740	1	Filter-Oil,Hydraulic
31	103-5120	1	Charge Hose ASM

Ref.	Part Number	Qty.	Description
31:1	103-2259	1	Head-Filter
31:2	103-5121	1	Filter Inlet Hose ASM
31:2:1	1-603920	1	O-Ring
31:3	103-2269	1	Pump Inlet Hose ASM
31:3:1	1-603920	1	O-Ring
32	1-805004	2	Washer-Lock
33	321-3	2	Screw-HH
34	1-643312	1	Clip-Loom
35	1-633396	2	Clip-Loom
36	103-2148	1	Auxillary Pump Hose ASM
37	1-323241	1	Hose-Pressure, High
38	103-3110	1	Filter-In Line, 50 Micron
39	103-2155	1	Fitting-90 DEG
39:1	1-603921	1	O-Ring
39:2	103-1020	1	O-Ring
40	103-2489	2	Motor-Wheel, HYD
41	32150-1	1	Key-Square
42	112-1768-03	1	Bracket-Tank Mount, Upper
43	112-1778-03	1	Bracket-Tank Mount, Lower

● Not serviced separately

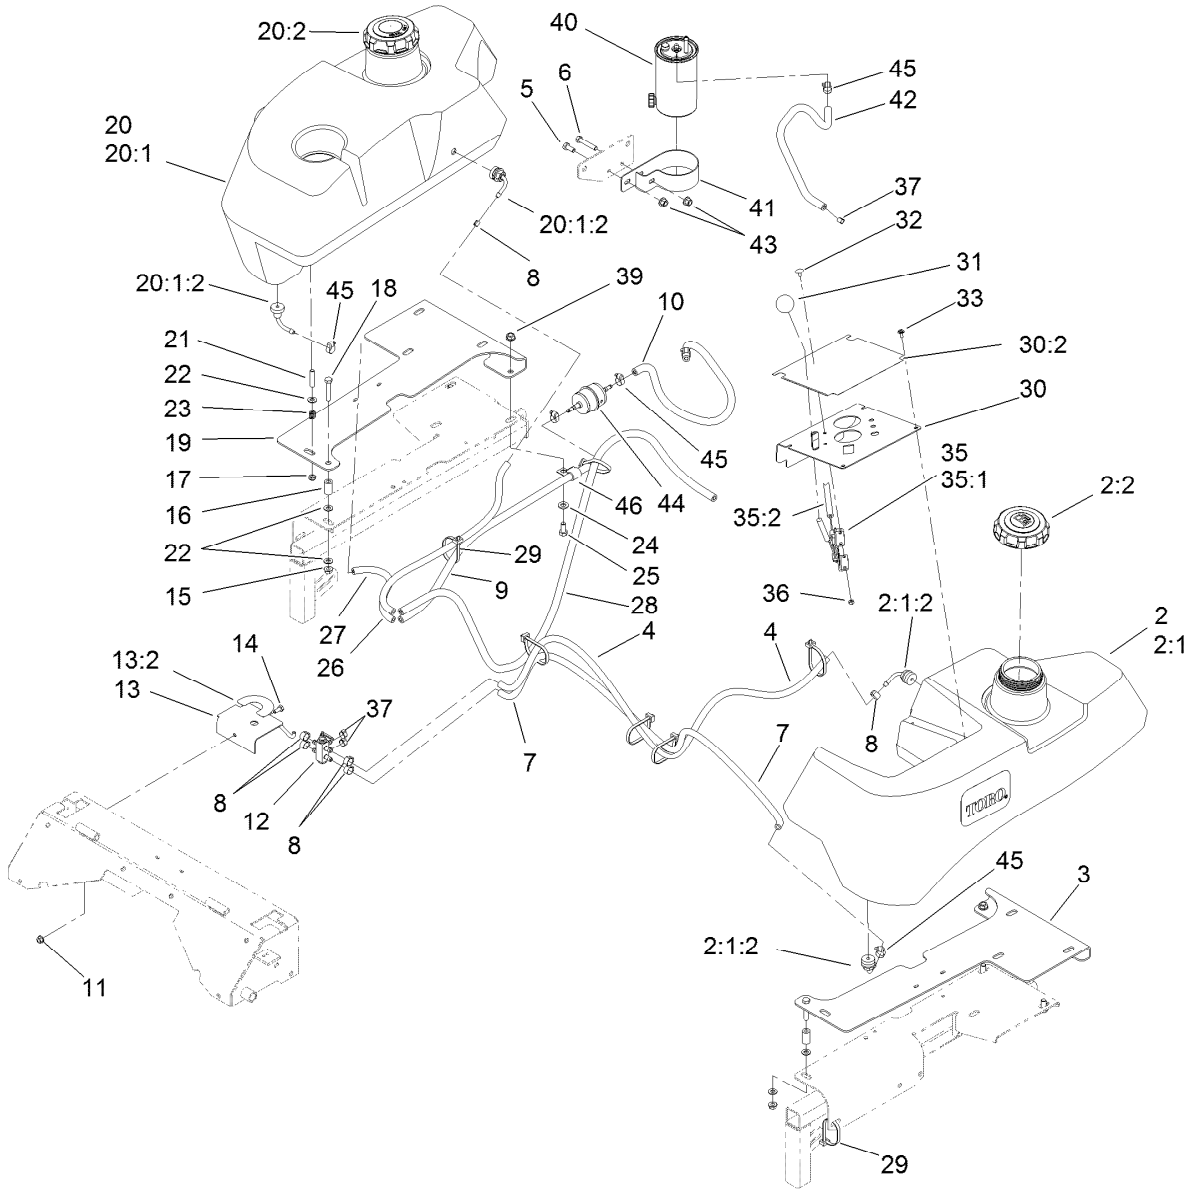


Tank and Fuel Line Assembly

Ref.	Part Number	Qty.	Description
2	115-3556	1	LH Fuel Tank Kit
2:1		1	Tank-Fuel, LH ●
2:1:2	103-2615	2	Fitting-Fuel, Bulkhead
2:2	114-8214	1	Biodiesel Cap ASM
3	107-7672-03	1	Bracket-Fuel Tank, LH
4	109-0273	1	Hose-Fuel
5	322-3	1	Screw-HH
6	322-9	1	Screw-HH
7	109-0289	1	Hose-Fuel
8	1-643293	6	Clamp-Hose, Fuel
9	114-8206	1	Hose-Fuel
10	110-4113	1	Hose-Fuel
11	32128-33	1	Nut-HF
12	1-643234	1	Valve-Fuel, Dual Flow
13	107-9878	1	Bracket-Valve, Fuel
13:2	107-2114	1	Decal-Valve, Fuel
14	321-3	1	Screw-HH
15	3296-47	2	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
16	94-7564	2	Spacer
17	3296-47	6	Nut-Lock, NI
18	322-9	2	Screw-HH
19	107-7671-03	1	Bracket-Fuel Tank, RH
20	115-3555	1	RH Fuel Tank Kit
20:1		1	Tank-Fuel, RH ●
20:1:2	103-2615	2	Fitting-Fuel, Bulkhead
20:2	114-8214	1	Biodiesel Cap ASM
21	1-633023	6	Stud
22	3256-23	10	Washer-Flat
23	1-633349	6	Spring-Tank, Fuel
24	3256-24	4	Washer-Flat
25	323-4	4	Screw-HH
26	110-5701	1	Hose-Fuel
27	109-0294	1	Hose-Fuel
28	110-4100	1	Hose-Fuel
29	1-303335	7	Tie-Plastic
30	117-0918	1	Control Panel ASM

● Not serviced separately

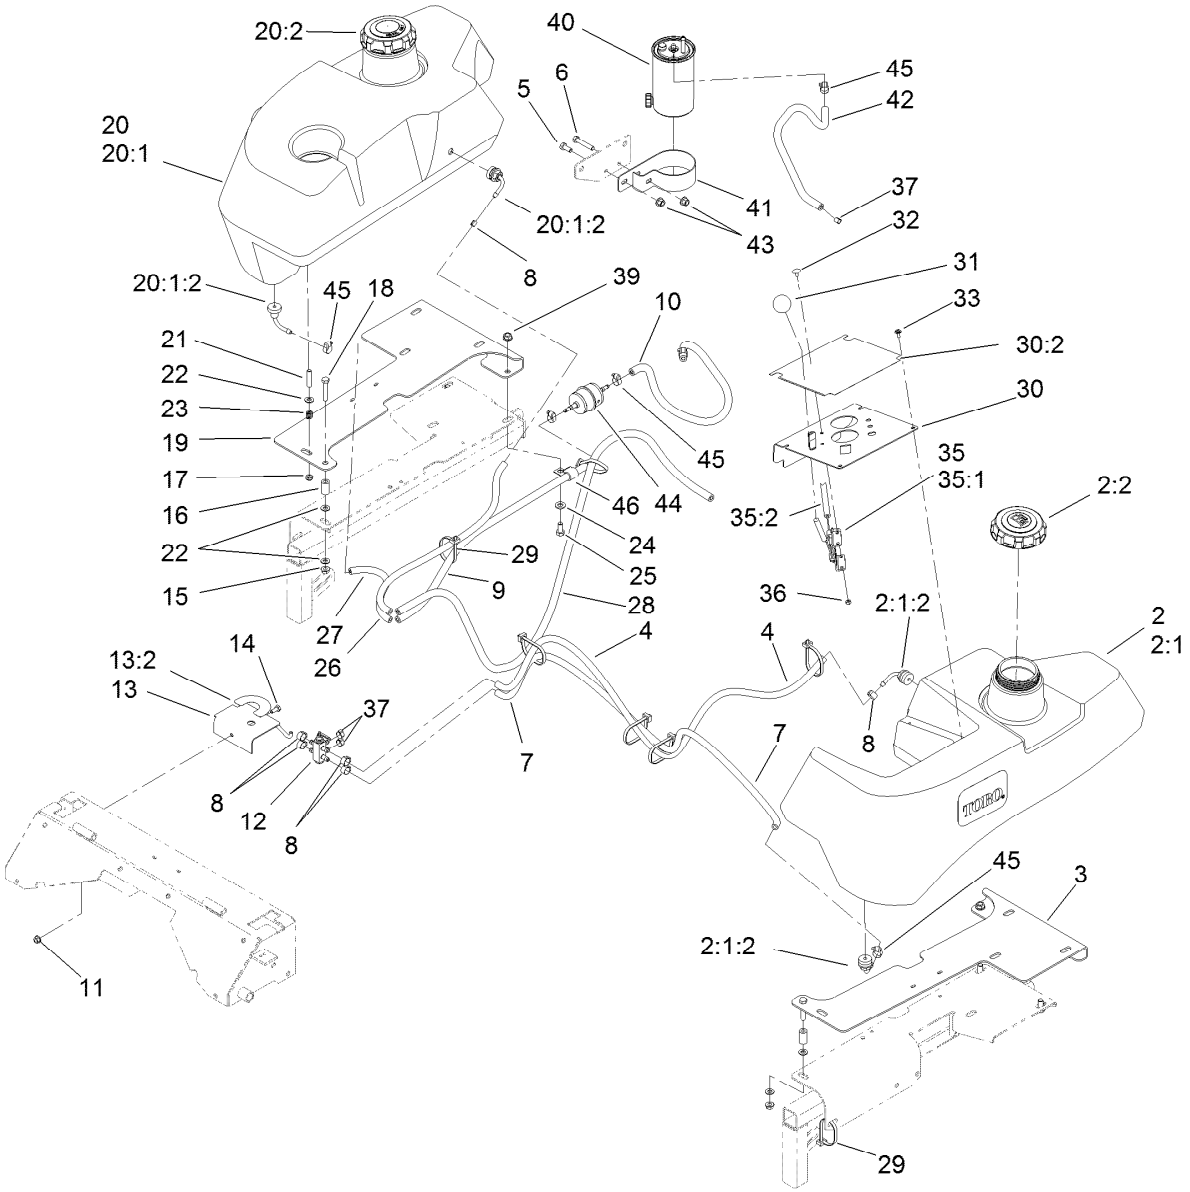


Tank and Fuel Line Assembly (continued)

Ref.	Part Number	Qty.	Description
30:2	121-7563	1	Decal - Panel, Control
31	1-603175	1	Knob-Ball
32	1-807513	2	Bolt-CARR
33	109-2661	4	Screw-PPH
35	110-5729	1	Throttle Control Cable ASM
35:1	112-2334	1	Lever-Throttle
35:2	110-5730	1	Cable-Throttle
36	3296-2	2	Nut-Lock, NI
37	1-643277	3	Clamp-Hose, Fuel

Ref.	Part Number	Qty.	Description
39	3290-357	4	Nut-HHF, Whiz
40	112-9188	1	Element-Filter, Fuel/Water
41	110-8807	1	Bracket-Filter, Fuel
42	114-8207	1	Hose-Fuel
43	3296-58	2	Nut-Lock, NI
44	112-7836	1	Filter-Inline
45	2412-108	7	Clamp-Worm
46	115-3559	1	Clamp-J


● Not serviced separately

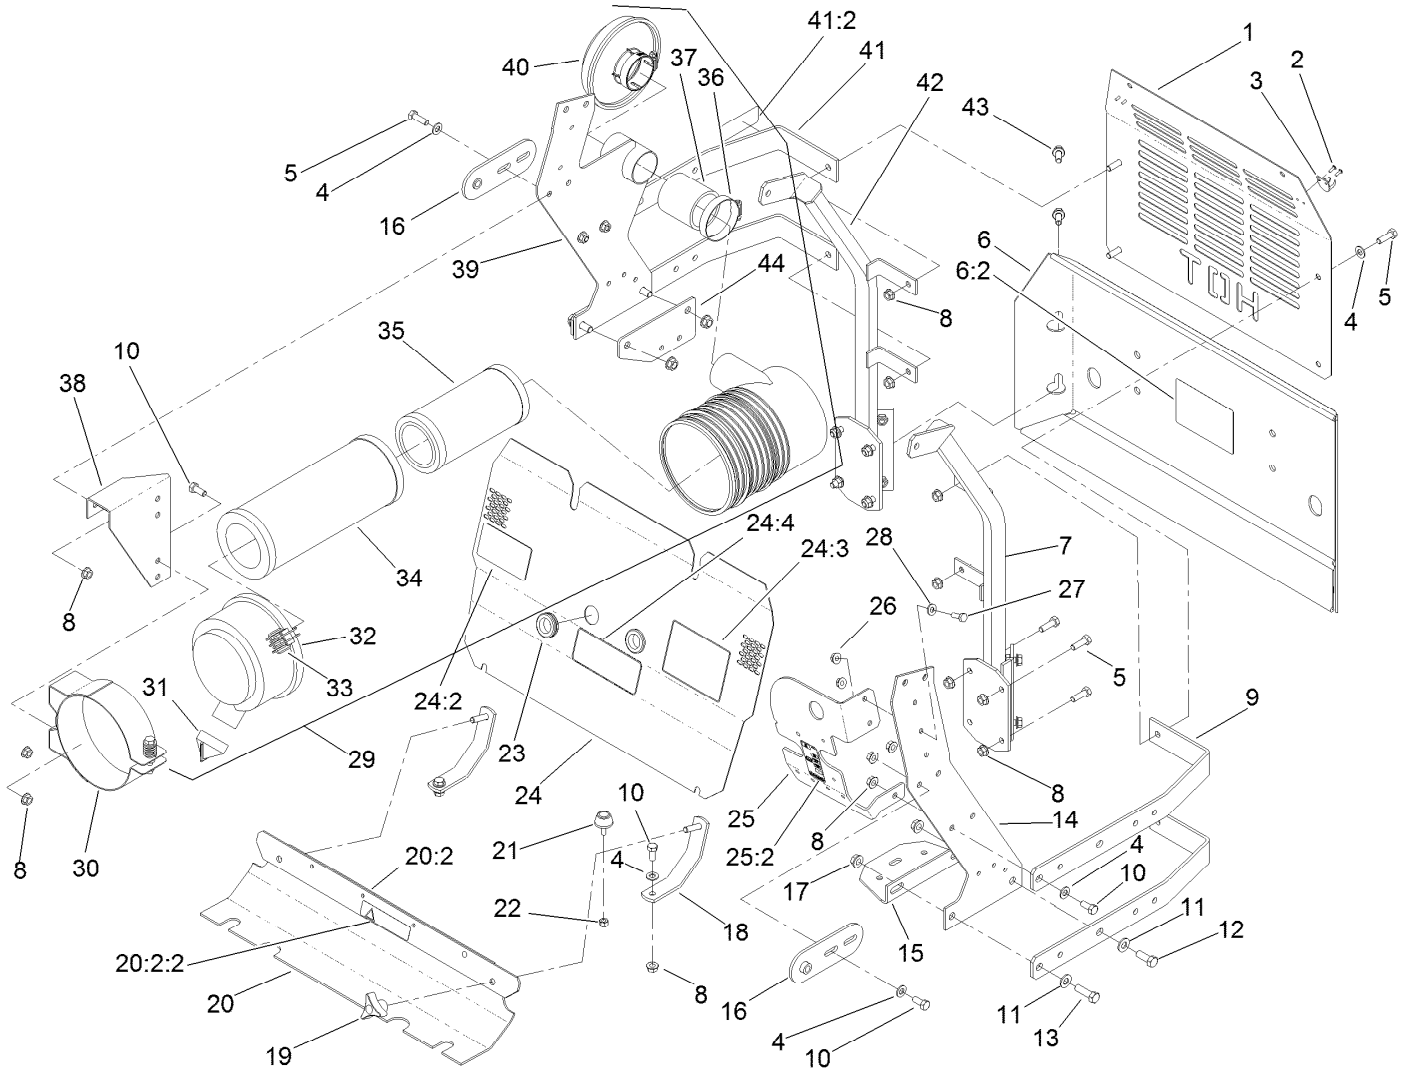

Front and Rear Engine Cover Assembly

Ref.	Part Number	Qty.	Description
1	103-4855-03	1	Guard-Muffler
2	923786	4	Rivet
3	1-643189	2	Keeper-Latch, Rubber
4	3256-23	13	Washer-Flat
5	322-5	14	Screw-HH
6	107-9865	1	Rear Bumper ASM
6:2	107-9864	1	Decal-Belt Routing, Deck Drive
7	103-5157-03	1	Frame-Upper, LH Rear
8	32128-20	23	Nut-HF
9	103-4906-03	3	Bar-Mount Frame, Radiator
10	322-3	9	Screw-HH
11	3256-24	4	Washer-Flat
12	323-6	2	Screw-HH
13	323-7	2	Screw-HH
14	103-5169-03	1	Mount-Side, LH
15	103-2603-03	1	Bracket-Bottle
16	1-632986-03	2	Shackle-Hinge
17	3290-357	4	Nut-HHF, Whiz
18	103-5163-03	2	Mount-Belt Shield, Engine
19	1-323385	2	Knob-3 Prong
20	107-7709	1	Engine Belt Shield ASM
20:2		1	Strip-Shield, Belt ●
20:2:2	98-5954	1	Decal-Cover, Missing
21	109-2365	2	Rubber Bumper ASM
22	3296-42	2	Nut-Lock, NI
23	100-3815	2	Grommet-Rubber
24	107-7707	1	Engine Access Panel ASM
24:2	107-7705	1	Decal-Belt Routing, Pump
24:3	103-3276	1	Decal-Buzzer, Warning
24:4	103-5881	1	Decal-Devices, Rotating
25	117-3862	1	Fuse/Relay Bracket ASM
25:2	117-7818	1	Decal-Fuse
26	32128-33	2	Nut-HF
27	321-4	2	Screw-HH
28	3256-22	2	Washer-Flat

● Not serviced separately

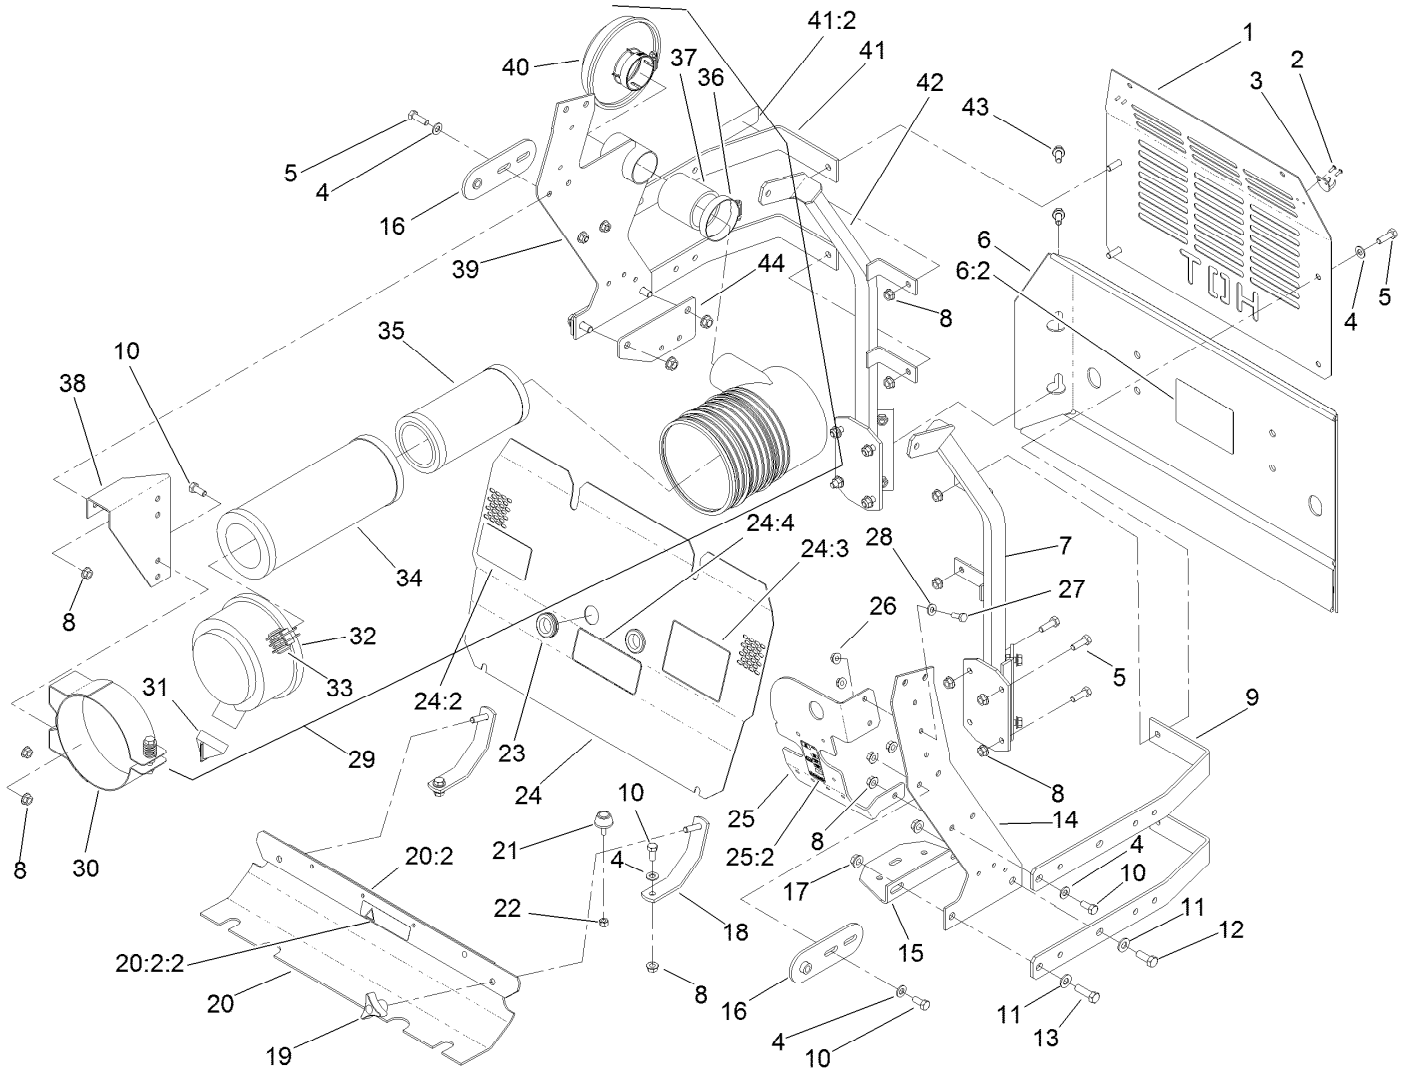


Front and Rear Engine Cover Assembly (continued)

Ref.	Part Number	Qty.	Description
29	103-5178	1	Filter-Air
30	103-1058	1	Bracket-Filter, Air
31	99-3175	1	Valve-Ejector, Dust
32	103-1060	1	Cover-Filter, Air
33	1-643283	2	Latch-Cleaner, Air
34	103-1327	1	Filter-Air
35	103-1326	1	Filter-Air, Safety
36	2412-42	1	Clamp-Hose
37	103-5198	1	Hose-Intake

Ref.	Part Number	Qty.	Description
38	103-0953-03	1	Mount-Cleaner, Air
39	103-5123-03	1	RH Radiator And Ac Support ASM
40	100-2436	1	Hood
41	107-7715	1	Bar-Radiator
41:2	65-2690	1	Decal-Surface, Hot
42	103-5158-03	1	Frame-Upper, RH Rear
43	3234-47	4	Screw-HHF
44	114-8205-03	1	Plate-Fuel Filter Mount


● Not serviced separately

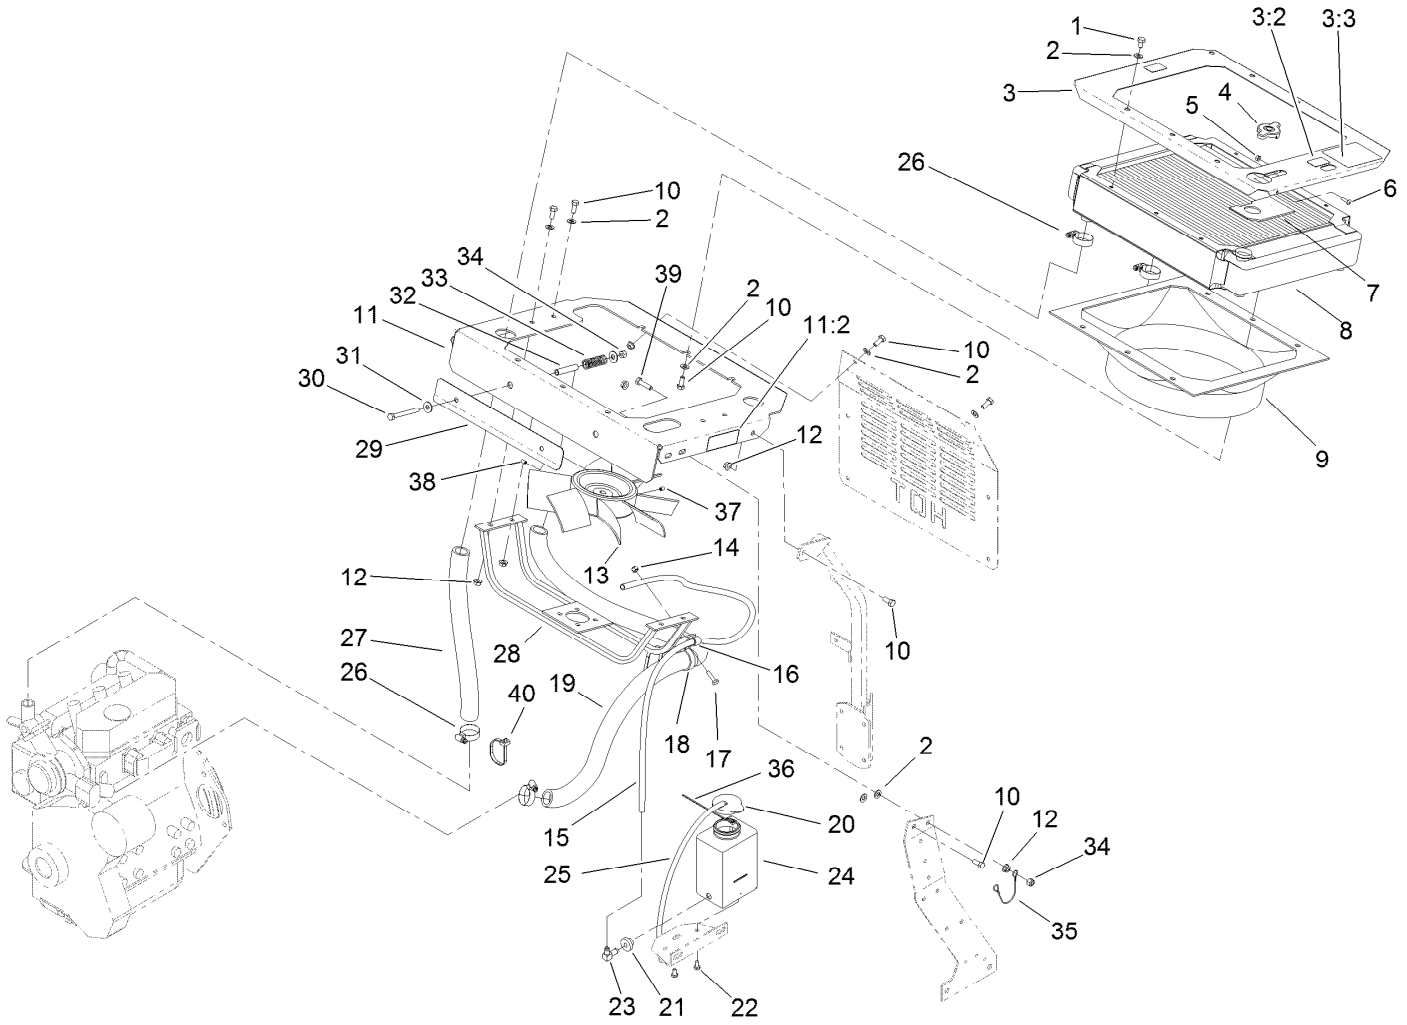

Cooling System Assembly


Ref.	Part Number	Qty.	Description
1	322-1	6	Screw-HH
2	3256-23	22	Washer-Flat
3	107-7658	1	Plate-Trim, Radiator
3:2	65-2690	2	Decal-Surface, Hot
3:3	104-2449	1	Decal-Coolant
4	1-643161	1	Cap-Radiator
5	3296-2	1	Nut-Lock, NI
6	1-803075	1	Screw-Head, Truss
7	103-1352	1	Shield-Fill Neck, Radiator
8	107-9889	1	Radiator
9	103-0898	1	Shroud-Cooling, Engine
10	322-3	16	Screw-HH
11	107-7717	1	Fan Mounting Plate ASM
11:2	1-643253	2	Decal-Fan, Radiator
12	32128-20	10	Nut-HF
13	103-0892	1	Fan
14	3296-42	1	Nut-Lock, NI
15	109-2670	1	Hose
16	1-513762	1	Clip-Loom
17	321-6	1	Screw-HH
18	103-0113	1	Clip-Loom

Ref.	Part Number	Qty.	Description
19	103-0922	1	Hose-Inlet, Engine
20	1-643164	1	Cap-Tank, Overflow
21	1-513645	1	Bushing-Valve, Fuel
22	321-2	2	Screw-HH
23	1-643259	1	Fitting-Elbow
24	1-643163	1	Tank-Overflow
25	109-2669	1	Hose
26	1-633989	4	Clamp-Hose
27	103-2505	1	Hose-Outlet, Engine
28	103-0086-03	1	Mount-Motor, Fan
29	103-4986	1	Bracket-Deflector, Air
30	322-14	2	Screw-HH
31	3256-3	4	Washer-Flat
32	103-5223	2	Spacer
33	1-513296	2	Spring-Indicator, Reverse
34	3296-29	4	Nut-Lock, NI
35	107-9853	2	Lanyard
36	1-303287	3	Tie-Cable
37	3245-44	1	Screw-Set
38	909848	1	Screw-Set

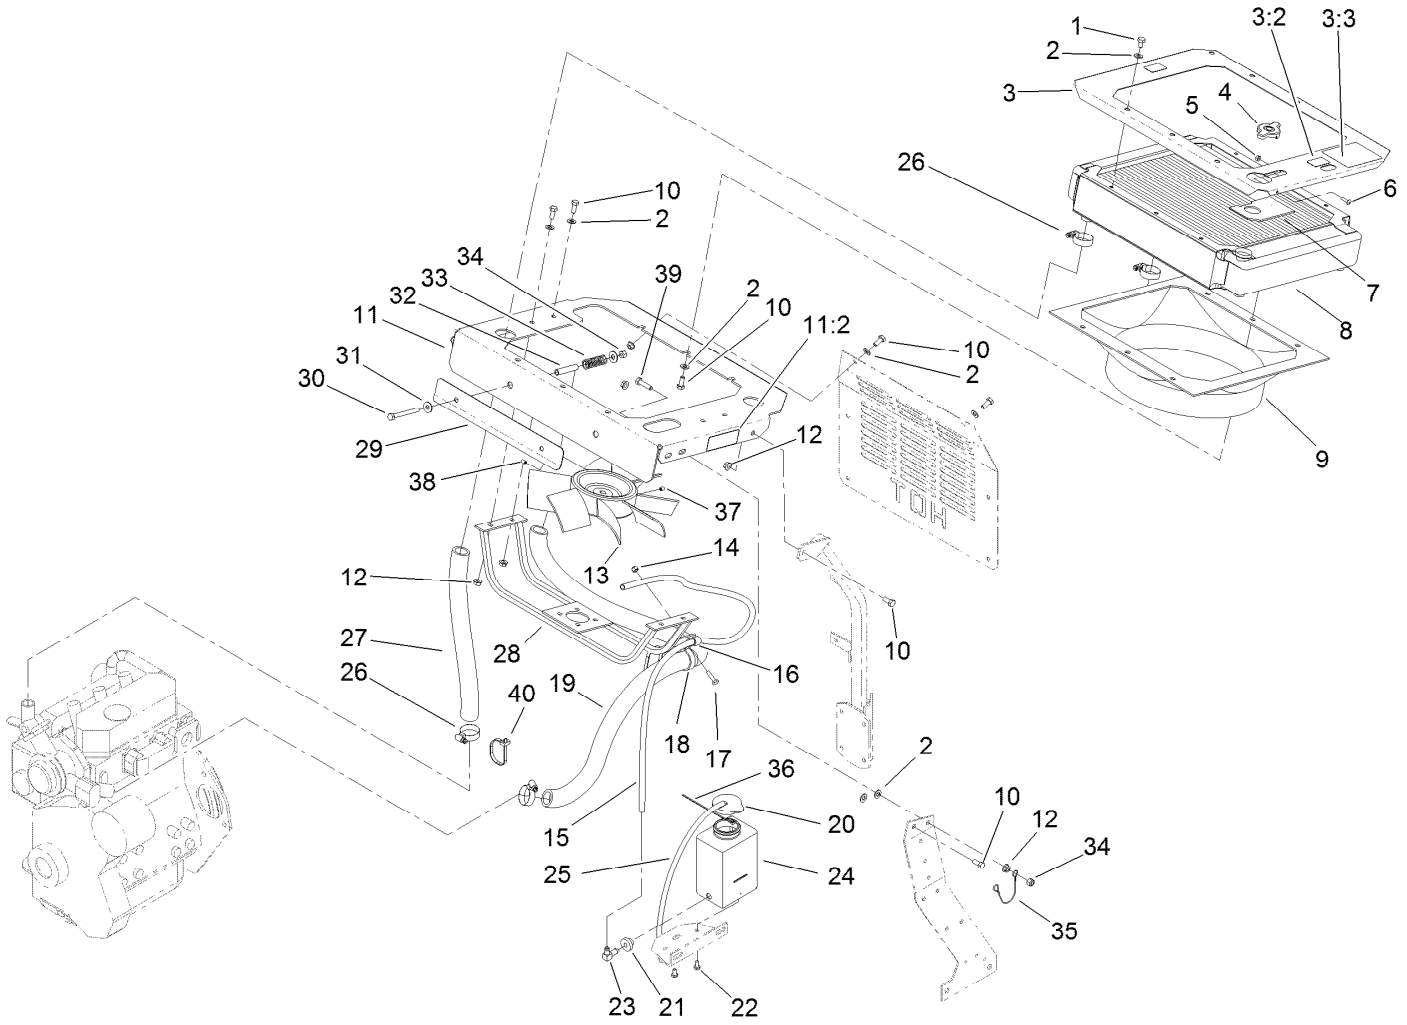

Cooling System Assembly (continued)


Ref.	*Part Number*	*Qty.*	*Description*
39	322-6	2	Screw-HH
40	1-303335	2	Tie-Plastic

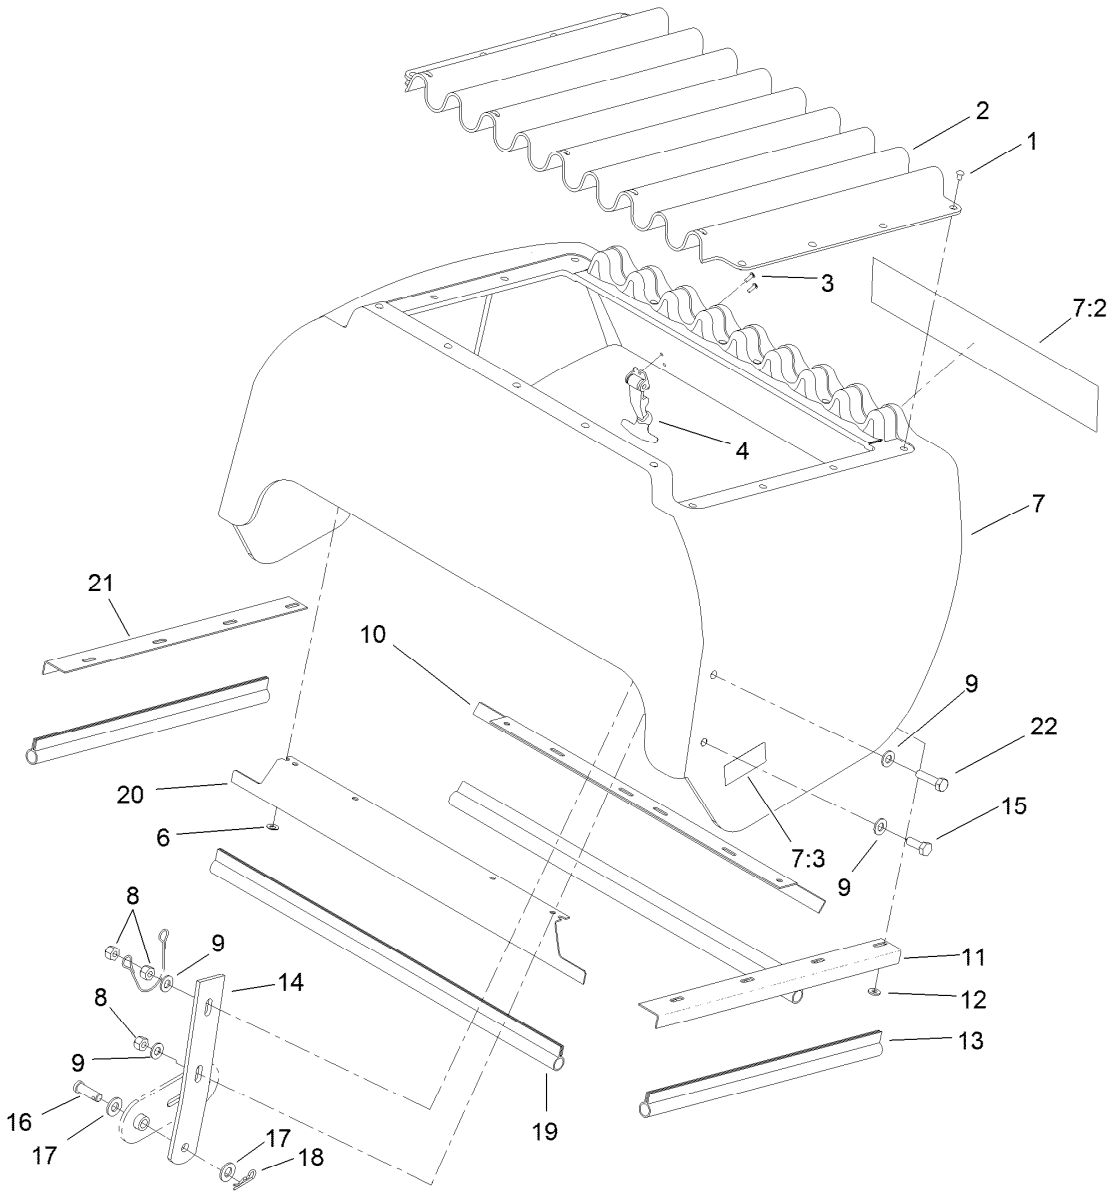

Hood Assembly

Ref.	Part Number	Qty.	Description
1	1-803072	17	Rivet
2	1-633864-03	1	Screen-Radiator
3	923786	4	Rivet
4	1-643188	2	Latch-Rubber
6	1-303435	5	Washer-Spring
7	115-3560	1	Hood ASM
7:2	121-7558	1	Decal
7:3	114-9600	2	Decal-Low Sulfur
8	3296-29	6	Nut-Lock, NI
9	3256-23	8	Washer-Flat
10	1-643108-03	1	Angle-Radiator, Bottom
11	1-643105-03	1	Angle-Radiator, LH

Ref.	Part Number	Qty.	Description
12	3256-14	12	Washer-Flat
13	1-643186	2	Seal-Trim
14	1-633885-03	2	Plate-Hinge, Hood
15	322-4	2	Screw-HH
16	1-808285	2	Pin-Clevis
17	3256-24	4	Washer-Flat
18	1-806003	2	Pin-Cotter, Hair
19	1-643187	2	Seal-Trim
20	1-643107-03	1	Angle-Radiator, Top
21	1-643106-03	1	Angle-Radiator, RH
22	322-6	2	Screw-HH

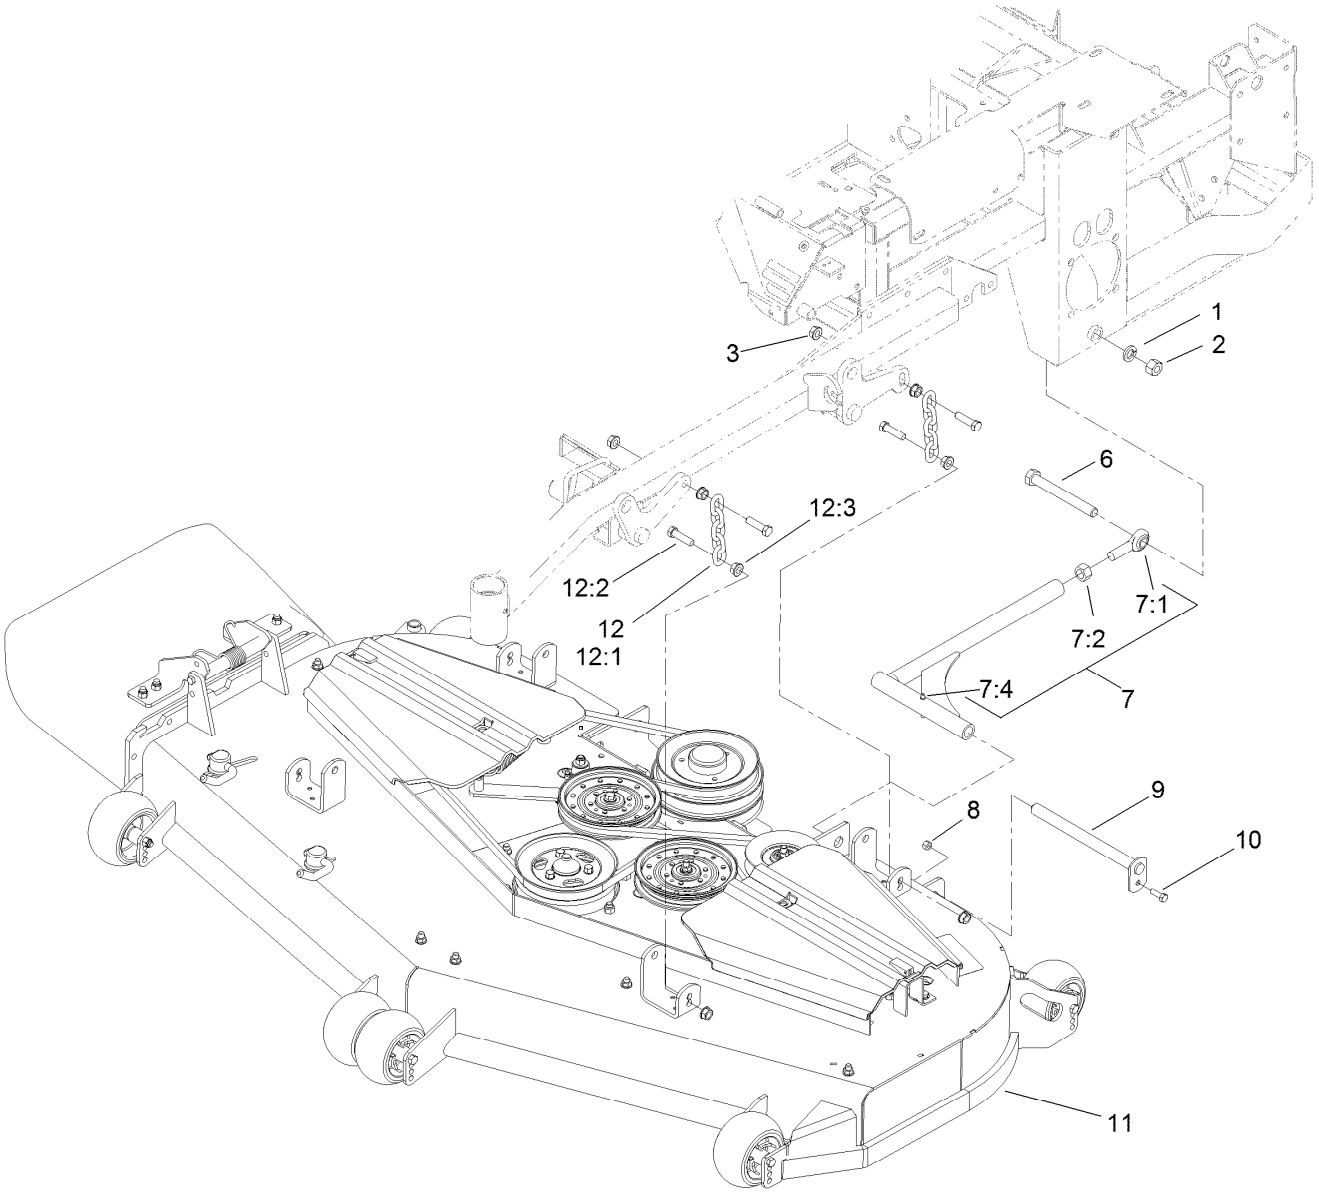


Deck Connection Assembly

Ref.	Part Number	Qty.	Description
1	3253-8	2	Washer-Lock
2	3217-11	2	Nut-Hex
3	32128-37	8	Nut-HF
6	327-28	2	Screw-HH
7	103-1356	2	Strut ASM
7:1	1-633029	1	Balljoint-Spherical
7:2	3219-6	1	Nut-Hex
7:4	109-1380	2	Fitting-Grease

Ref.	Part Number	Qty.	Description
8	3296-29	2	Nut-Lock, NI
9	1-632199-01	2	Pin-Strut
10	322-3	2	Screw-HH
11		1	Deck ASM ●
12	103-9792	4	Deck Chain ASM
12:1	1-633447	1	Chain-Lift, Deck
12:2	103-1898	2	Screw-HH
12:3	32128-37	2	Nut-HF


● Not serviced separately

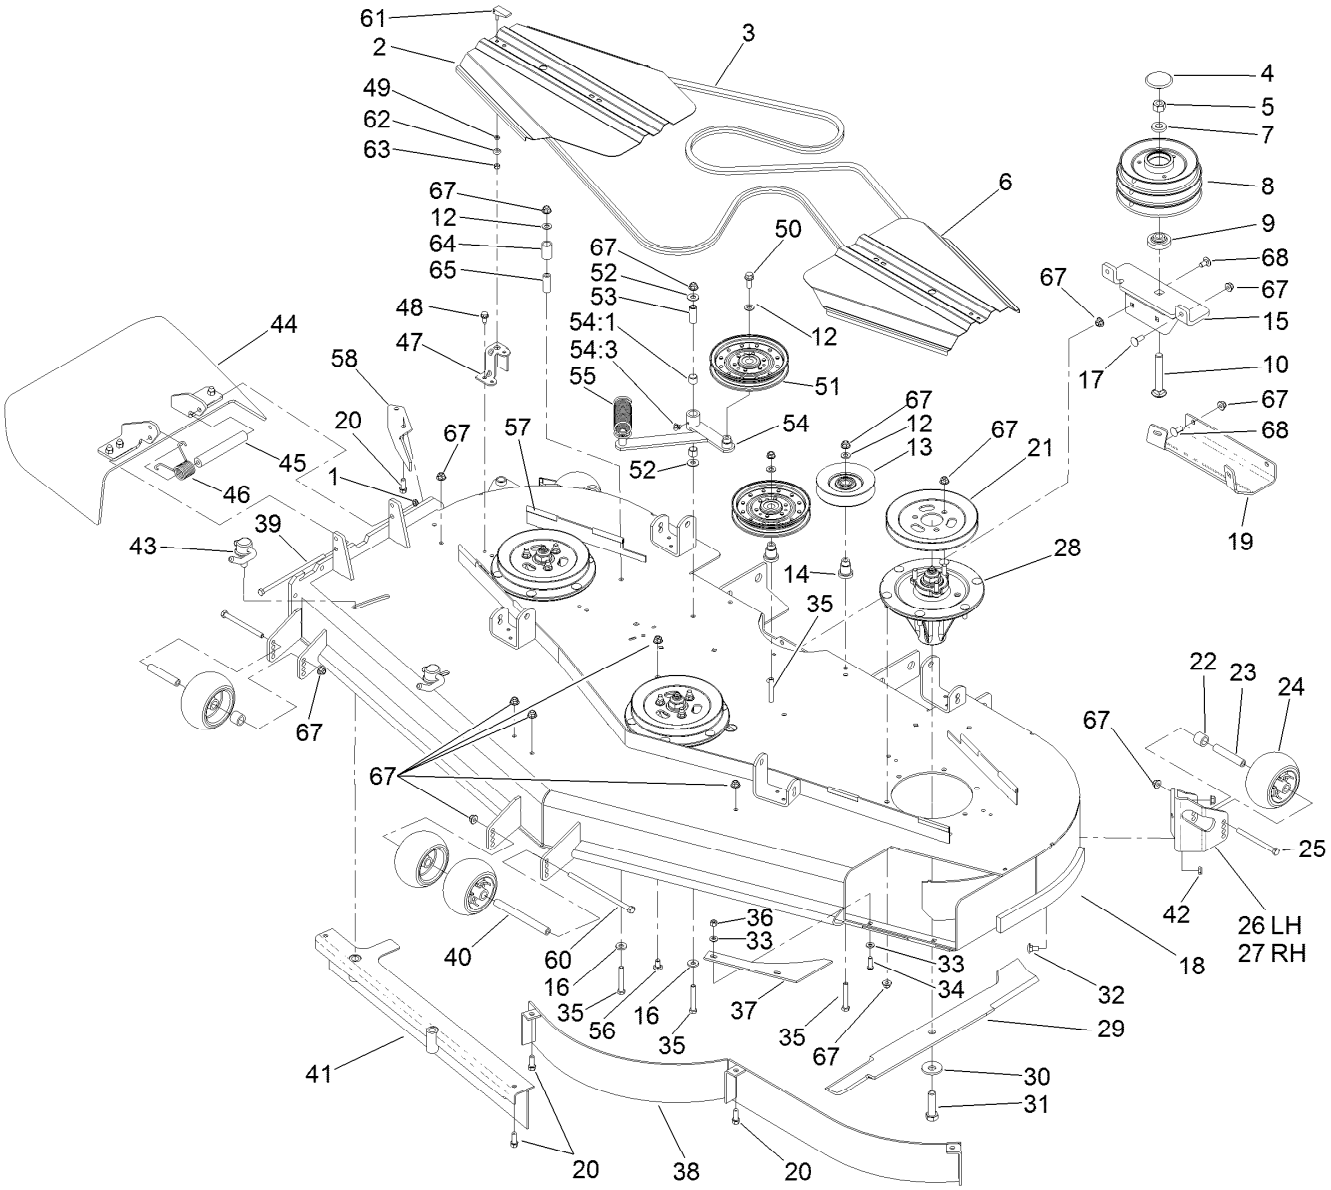

Deck Assembly

Ref.	Part Number	Qty.	Description
1	3296-47	1	Nut-Lock, NI
2	112-8666-03	1	Cover-Belt, LH
3	107-7723	1	Belt-V
4	112-8049	1	Cap-Plastic
5	3217-11	1	Nut-Hex
6	112-8667-03	1	Cover-Belt, RH
7	105-0842	1	Spacer
8	114-0210	1	Pulley And Bearing ASM
9	112-8048	1	Spacer-Flanged
10	112-8046	1	Bolt-Carriage
12	3256-24	4	Washer-Flat
13	1-603805	1	Pulley-Idler
14	106-3214	2	Mount-Pulley
15	110-5893-01	1	Mounting Bracket ASM
16	98-5975	2	Washer-Belleville
17	3231-2	2	Screw-CARR
18	117-3859	1	Deck Decal ASM
19	106-3279-01	1	Plate-Skid
20	92-1624	6	Screw-HWH
21	107-7678	3	Pulley
22	98-7913	4	Tube-Spacer


Ref.	Part Number	Qty.	Description
23	98-7912	4	Tube-Spanner
24	1-603299	6	Roller-Scalp, Anti
25	323-23	4	Screw-HH
26	106-7354-01	1	Mount-Wheel, LH
27	106-7355-01	1	Mount-Wheel, RH
28	119-8500	3	Spindle ASM
29	105-7784-03	3	Blade-Hi Flow, 24.5 Inch
30	103-0865	3	Washer-Blade Bolt, Heavy
31	51-4060	3	Screw-Blade
32	3231-1	6	Screw-CARR
33	1-303334	4	Washer-Spring
34	3274-104	2	Screw-HSBH
35	323-12	4	Screw-HH
36	3296-29	2	Nut-Lock, NI
37	107-3138	1	Plate-Turbo
38	105-7730-01	1	Baffle ASM
39	322-50	1	Screw-HH
40	98-5967	1	Spacer-Wheel
41	105-7669-01	1	Baffle ASM
42	3296-59	6	Nut-Lock, NI
43	107-1664	2	Lever ASM

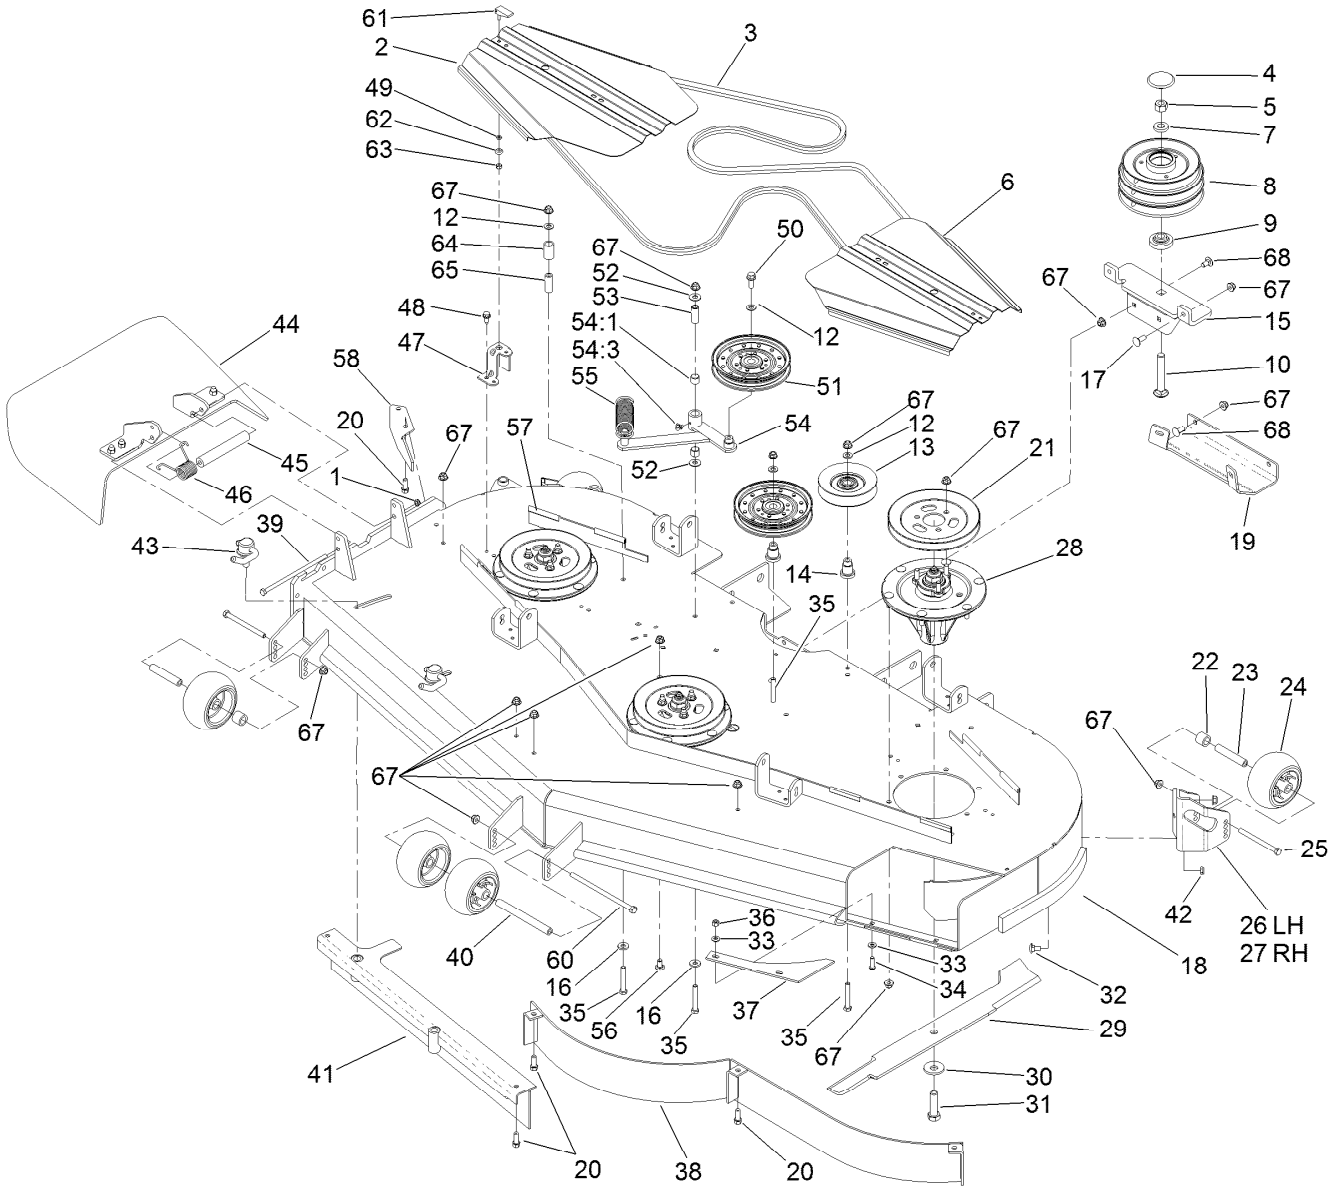

Deck Assembly (continued)


Ref.	Part Number	Qty.	Description
44	108-2792	1	Rubber Deflector ASM
45	105-4622	1	Spacer
46	108-4052	1	Spring-Torsion
47	119-4220-01	4	Bracket-Cover
48	32144-70	4	Screw-HWHTF
49	99-3058	4	Washer
50	3234-11	1	Screw-HHF
51	116-4667	2	Idler-Pulley, Flat
52	3256-4	2	Washer-Flat
53	1-603044	1	Bushing
54	107-9868	1	Idler Arm ASM
54:1	103-4681	2	Sleeve-Bearing
54:3	302-40	1	Fitting-Grease

Ref.	Part Number	Qty.	Description
55	105-6992	1	Spring-Extension
56	3231-21	1	Screw-CARR
57	105-7699	8	Strip-Seal
58	106-3216-01	1	Baffle-Discharge
60	108-5388	1	Screw-HH
61	106-6777	4	Handle-Latch, Swell
62	106-6778	4	Bushing-Latch, Swell
63	1-804254	4	Nut-Lock, HH
64	112-8051	1	Spacer-Rubber
65	80-7710	1	Spacer-Pivot, Idler
67	104-8301	51	Nut-Flange, NI
68	3231-27	6	Screw-CARR

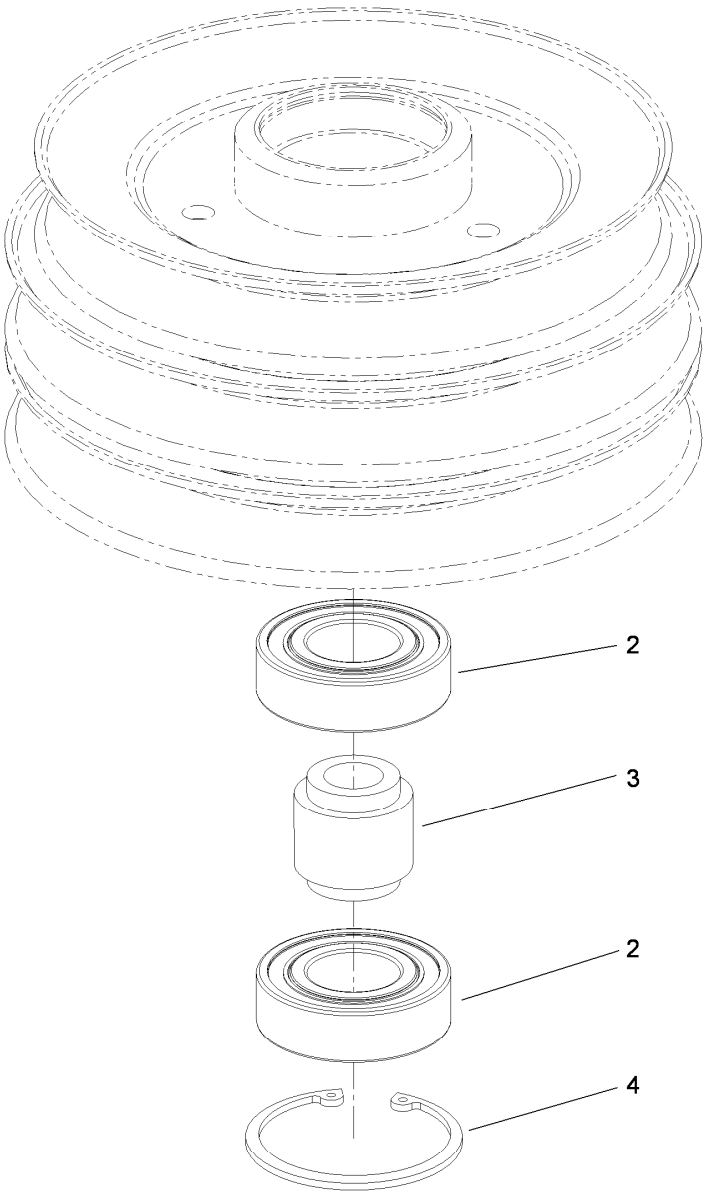


Pulley and Bearing Assembly No. 114-0210

Ref.	*Part Number*	*Qty.*	*Description*
2	116-0720	2	Bearing-Ball
3	112-8047	1	Spacer-Bearing
4	32120-8	1	Ring-Snap

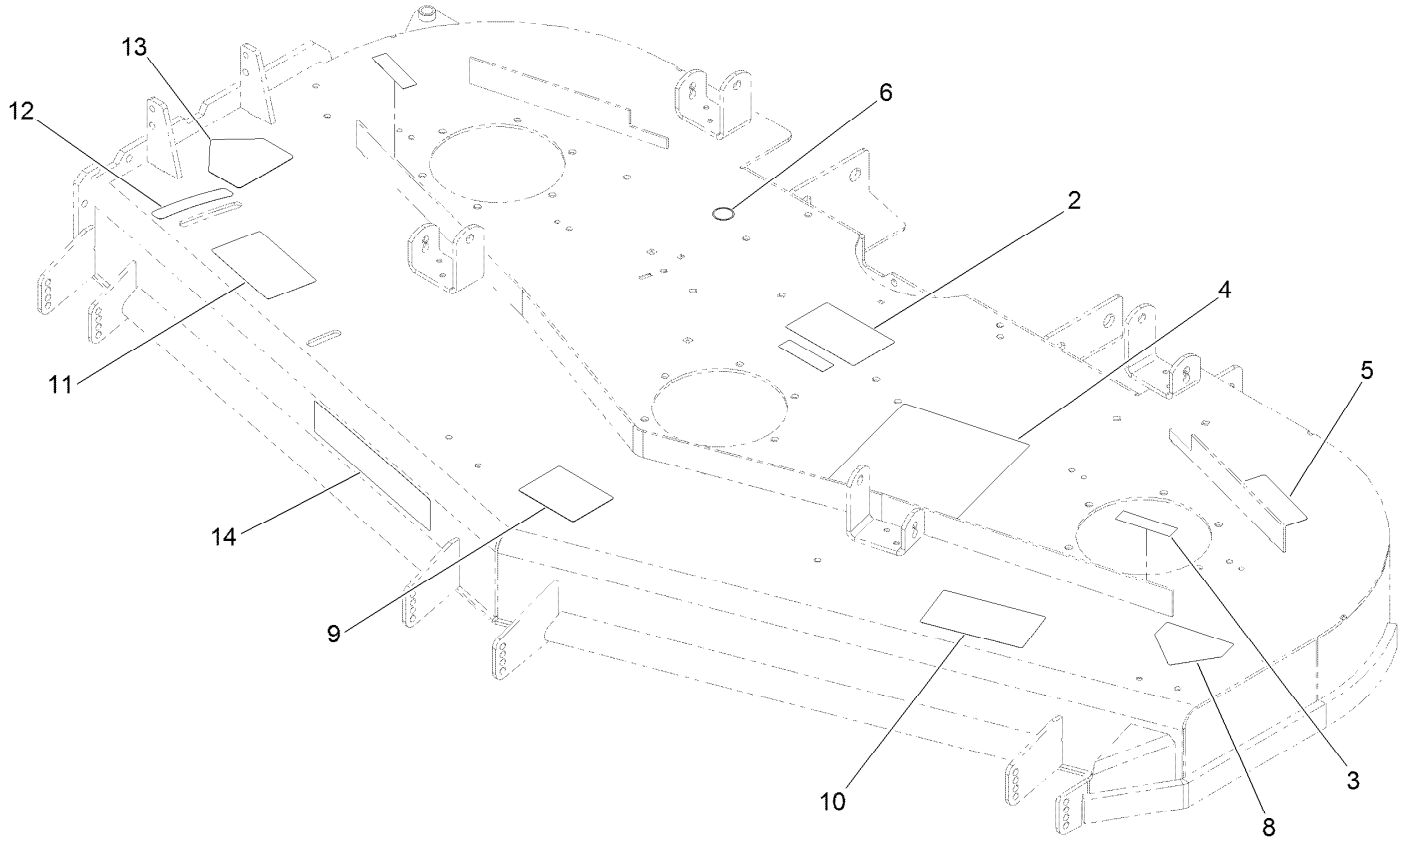

Deck Decal Assembly No. 117-3859


Ref.	*Part Number*	*Qty.*	*Description*
2	107-7673	1	Decal-Routing, Belt
3	98-5954	3	Decal-Cover, Missing
4	107-9863	1	Decal-Check, Service
5	68-8340	1	Decal-Torque
6	58-6520	1	Decal-Grease
8	1-403005	1	Decal-Danger
9	105-7798	1	Decal-Scalp, Anti
10	66-1340	1	Decal-Danger, Thrown Object
11	110-2068	1	Decal-Adjustment, Baffle
12	110-2067	1	Decal-Setting, Baffle
13	54-9220	1	Decal-Danger
14	107-1620	1	Decal

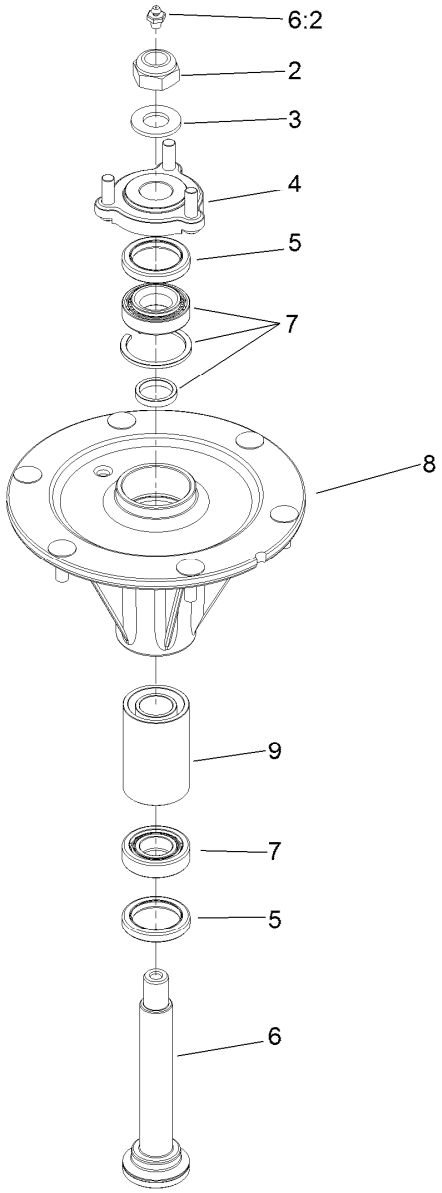

Spindle Assembly No. 119-8500


Ref.	*Part Number*	*Qty.*	*Description*
2	3296-67	1	Nut-Lock, NI
3	92-5836	1	Washer
4	117-6172	1	Spindle Hub ASM
5	253-133	2	Seal-Oil
6	119-8527	1	Spindle Shaft And Zerk ASM
6:2	302-2	1	Fitting-Grease
7	119-8531	1	Trb Set
8		1	Housing-Spindle ●
9	117-6185	1	Spacer Set

● Not serviced separately

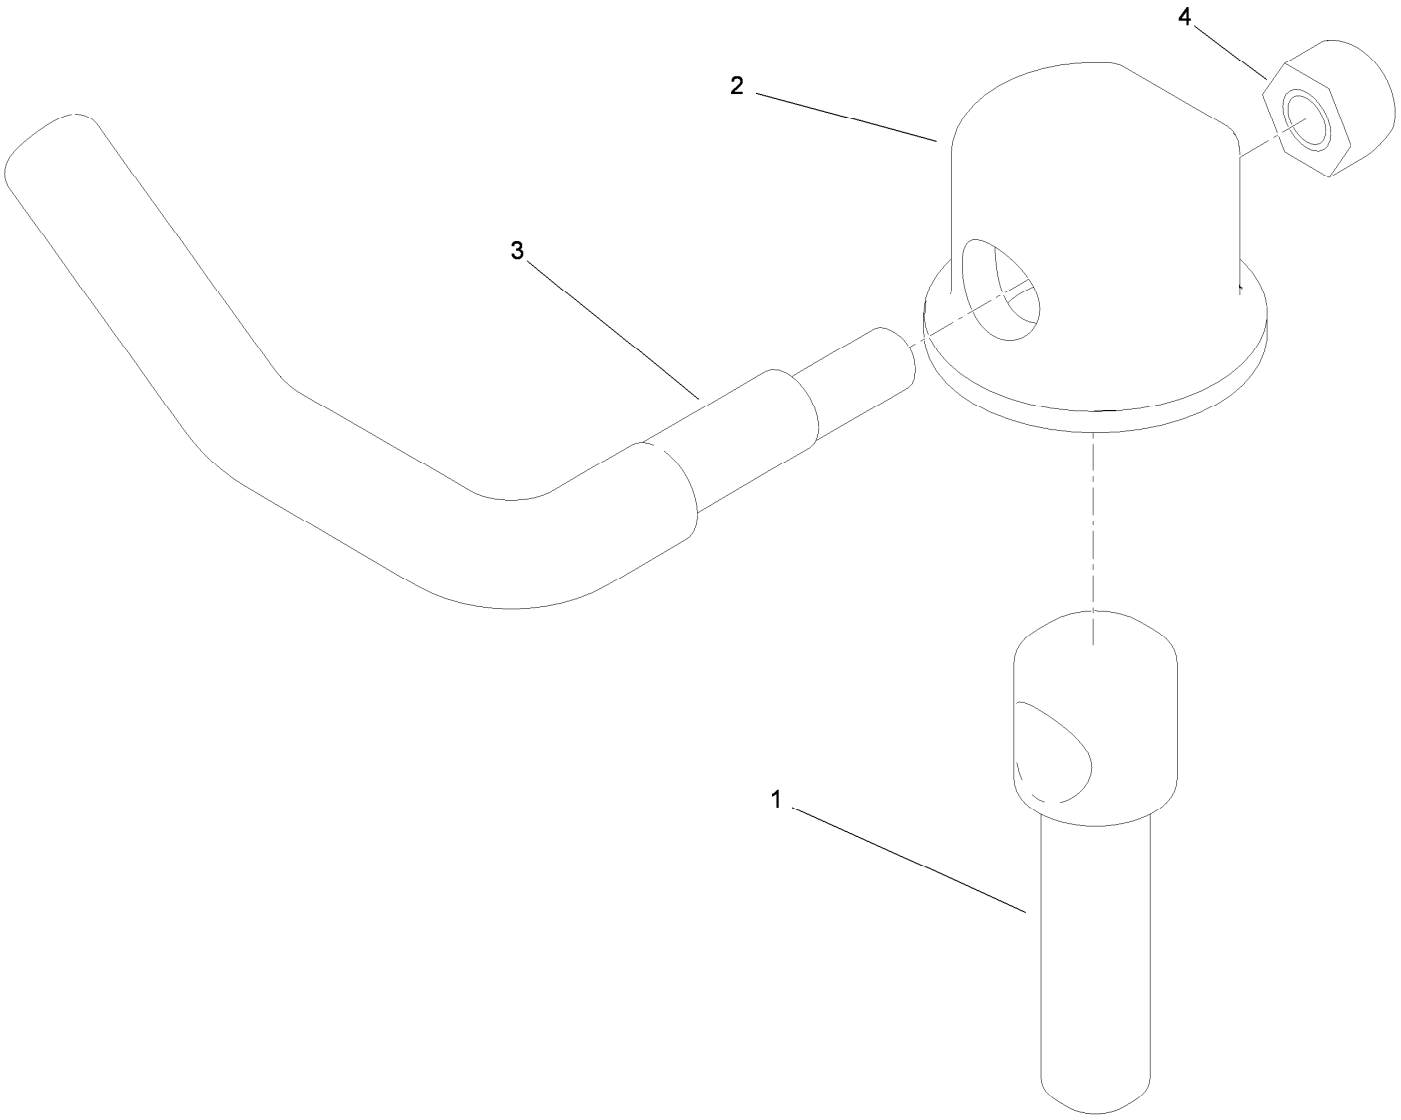


Lever Assembly No. 107-1664

Ref.	*Part Number*	*Qty.*	*Description*
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

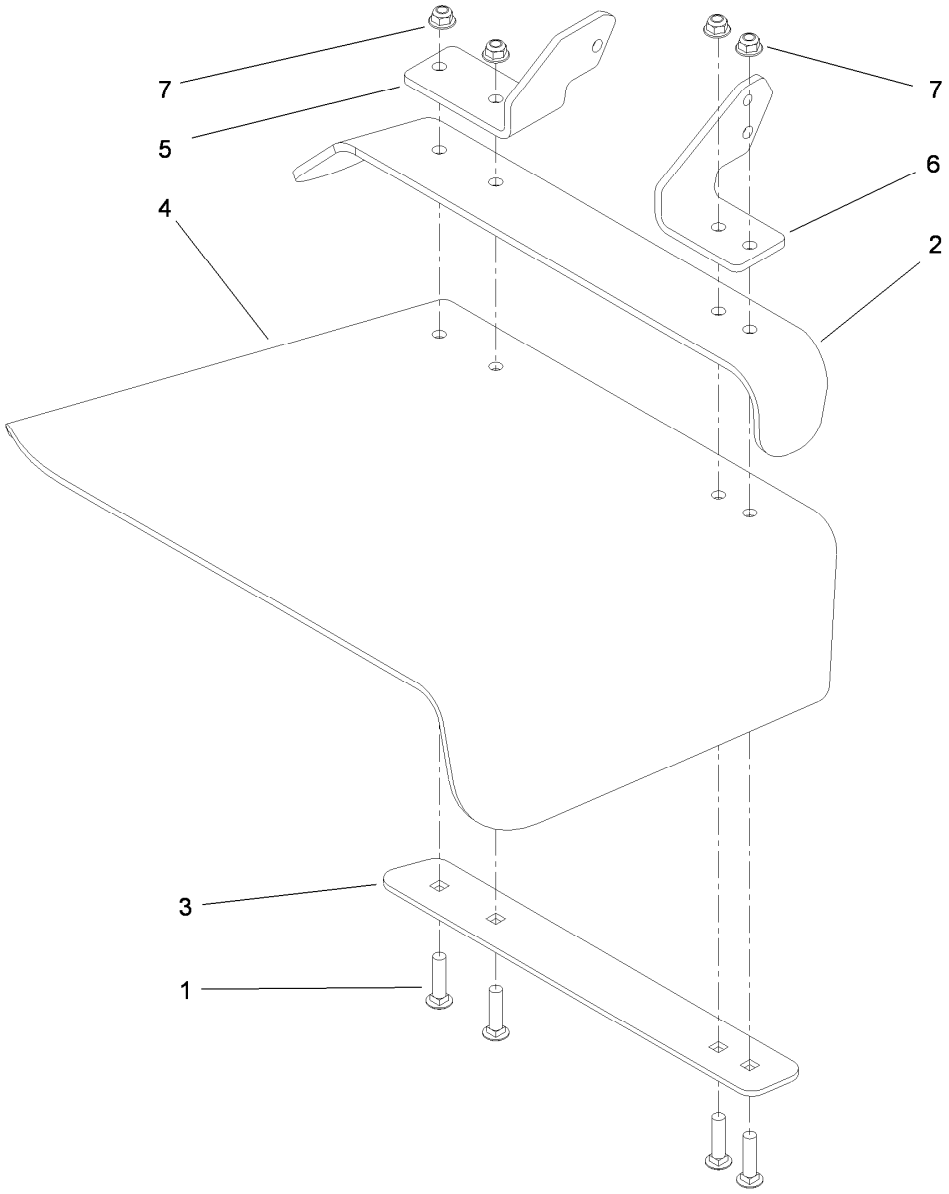

Rubber Deflector Assembly No. 108-2792


Ref.	*Part Number*	*Qty.*	*Description*
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-Flange, NI

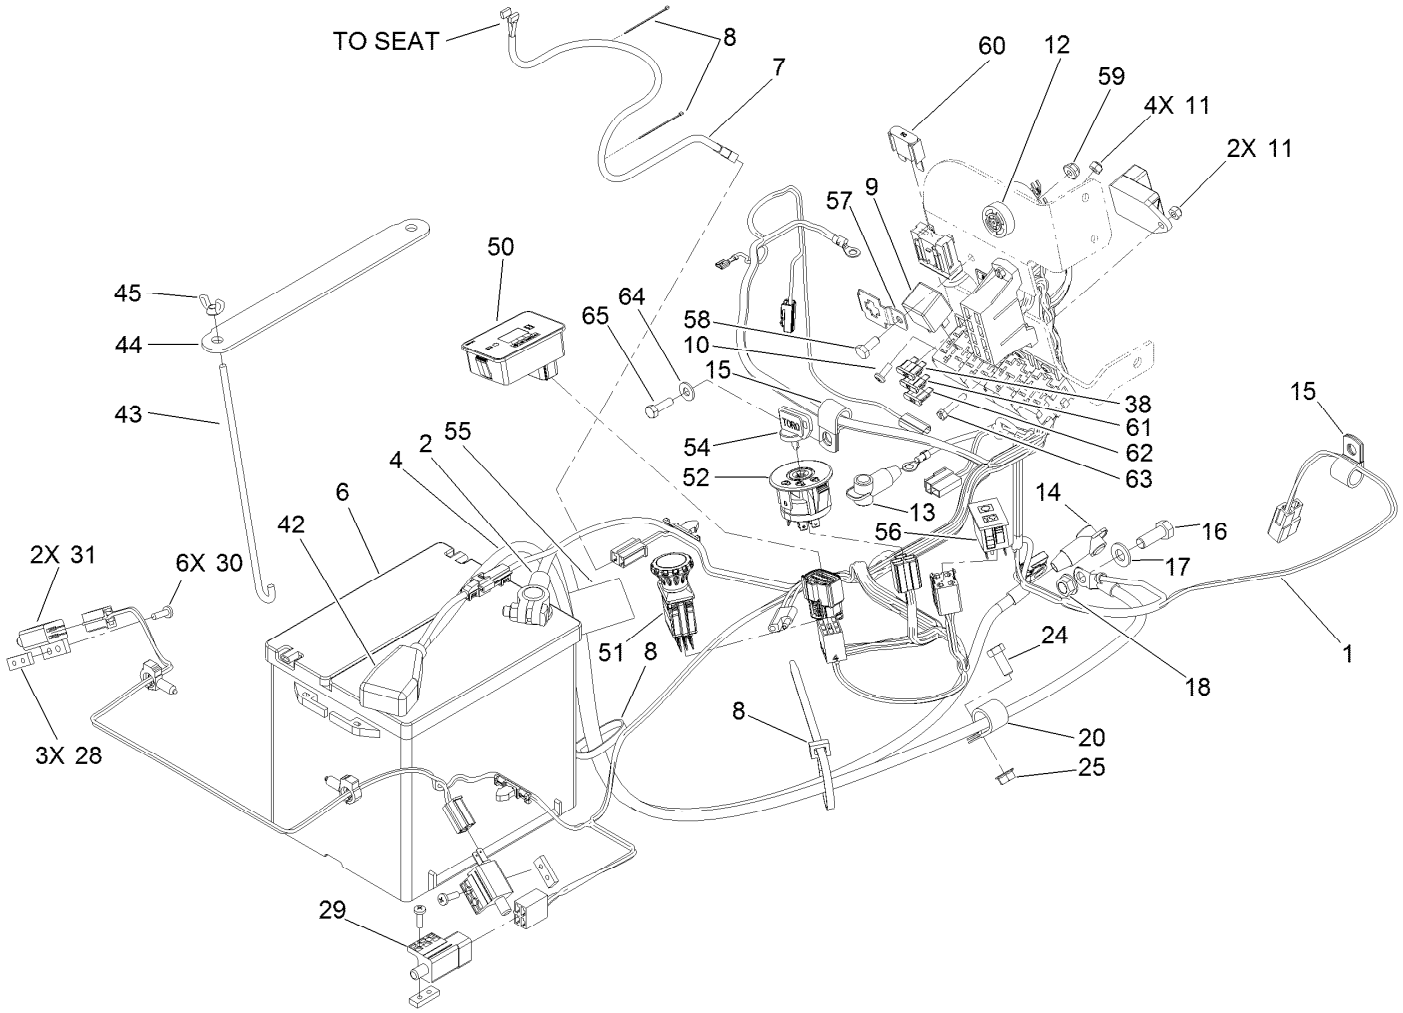

Electrical Assembly


Ref.	Part Number	Qty.	Description
1	117-3817	1	Harness-Electrical
2	117-3851	1	Cable-Battery, Negative
4	103-1160	1	Cable-Starter
6	106-5187	1	Battery
7	103-1227	1	Harness-Wiring, Seat
8	1-303335	4	Tie-Plastic
9	1-643275	4	Relay
10	1-803071	4	Screw
11	3296-2	6	Nut-Lock, NI
12	103-0205	1	Alarm-Tone, Dual
13	1-643178	1	Cap-Insulator, Red
14	103-1420	1	Insulator-Starter
15	1-603727	2	Clip-Loom
16	323-6	1	Screw-HH
17	3256-24	1	Washer-Flat
18	3290-357	1	Nut-HHF, Whiz
20	1-633396	1	Clip-Loom
24	322-3	1	Screw-HH
25	32128-20	1	Nut-HF
28	1-633181	3	Plate-Tapped
29	1-633111	1	Switch

Ref.	Part Number	Qty.	Description
30	3290-500	6	Screw-PPH
31	1-513051	2	Switch-Open, Normally
38	1-816001	1	Fuse-Blade Type, 20 Amp
42	103-1340	1	Insulator-Terminal, Battery
43	103-1312	2	Bolt-Holddown
44	103-1311-03	1	Holddown-Battery
45	1-543792	2	Wingnut
50	117-3884	1	Module ASM
51	116-0124	1	Switch-PTO, 10A
52	117-2221	1	Switch-Ignition
54	63-8360	2	Key-Ignition
55	107-9309	1	Decal-Instructions, Charging
56	100-8071	1	Lamp-Warning
57	114-5502	1	Clip-Fuse
58	321-3	1	Screw-HH
59	104-7201	1	Nut-HF
60	94-8002	1	Fuse-Blade, 50 Amp
61	218-578	1	Fuse-Blade, 10 Amp
62	109103	1	Fuse-Blade, 30 Amp
63	32105-12	2	Screw

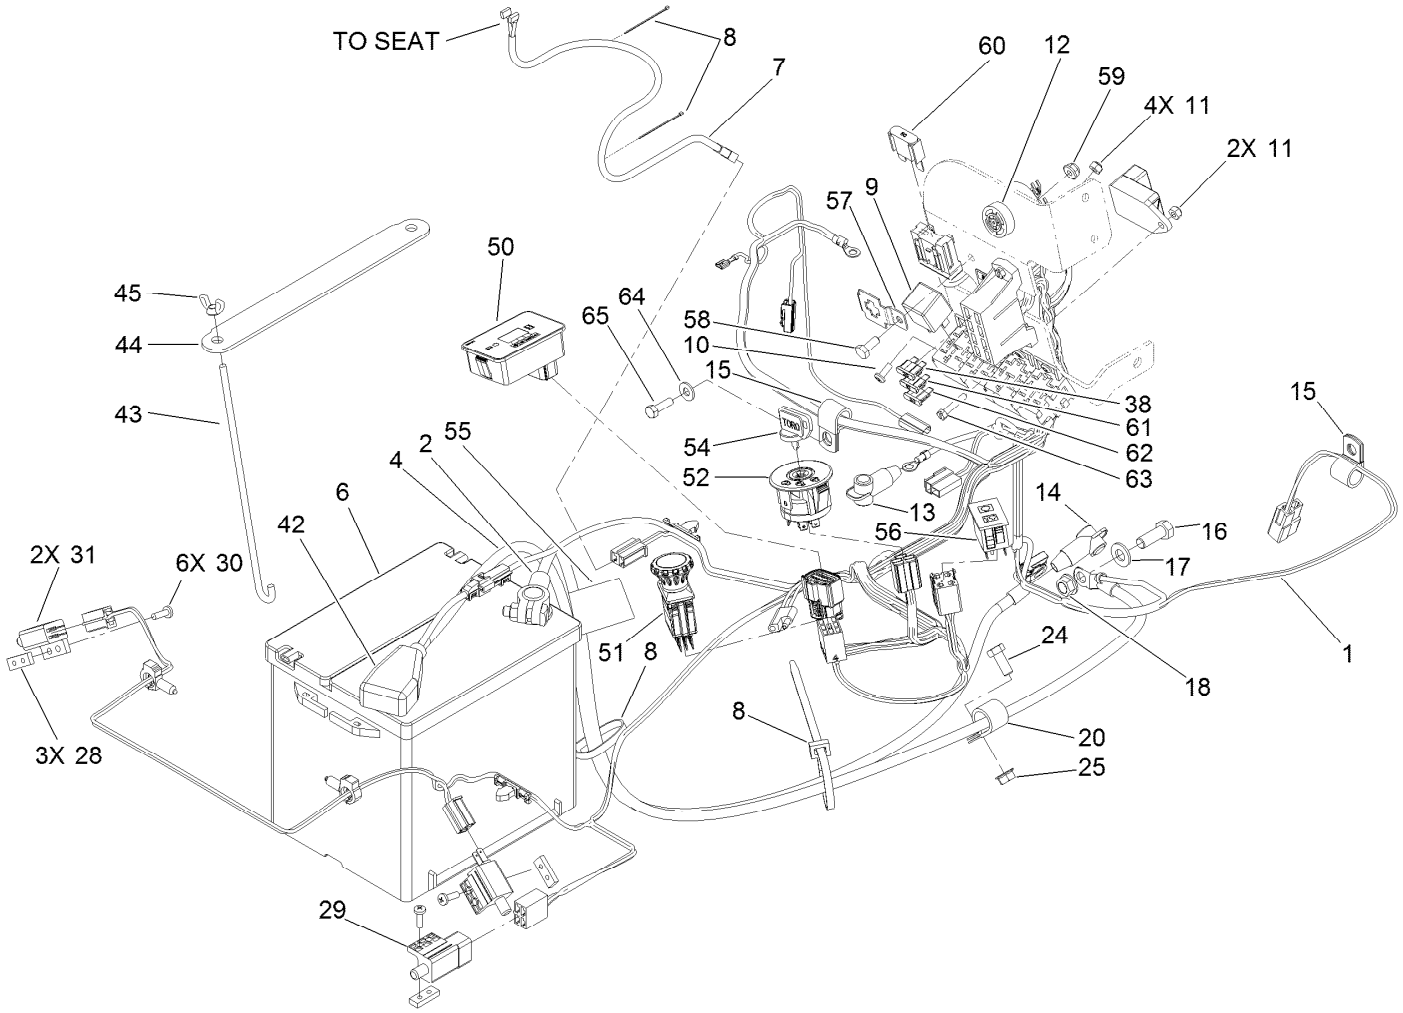

Electrical Assembly (continued)


Ref.	*Part Number*	*Qty.*	*Description*
64	3256-22	1	Washer-Flat
65	33113-020	1	Screw-HH

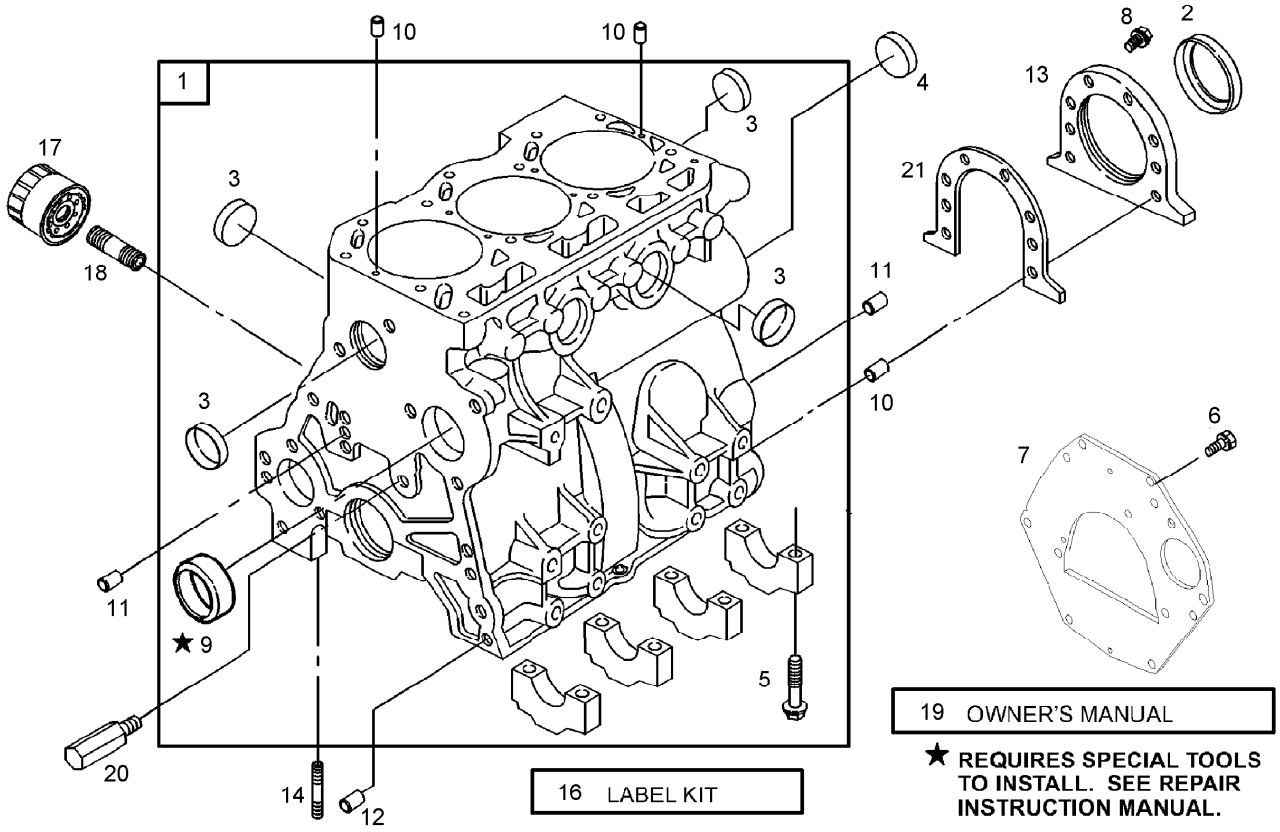

Assemblies include all parts shown in frames.

Cylinder Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	107-9891	1	Cylinder ASM
2	99-9003	1	Seal-Oil
3	99-9008	1	Plug-Welch
4	107-9892	1	Plug-Welch (Cam)
5	99-9006	1	Screw-Hex
6	99-9005	1	Screw-Hex
7	107-9893	1	Plate-End, Rear
8	99-9004	1	Screw-Hex
9	99-9002	1	Bushing
10	99-9012	1	Pin-Locating
11	99-9013	1	Pin-Locating
12	99-9014	1	Pin-Locating
13	99-9022	1	Retainer-Seal
14	99-9007	1	Stud-Metric
16	107-9894	1	Kit-Label
17	99-9017	1	Filter-Oil
18	105-9337	1	Adapter-Filter, Oil
19	103-1384	1	Manual-Engine
20	99-9020	1	Nozzle-Oil
21	99-9021	1	Gasket-Retainer

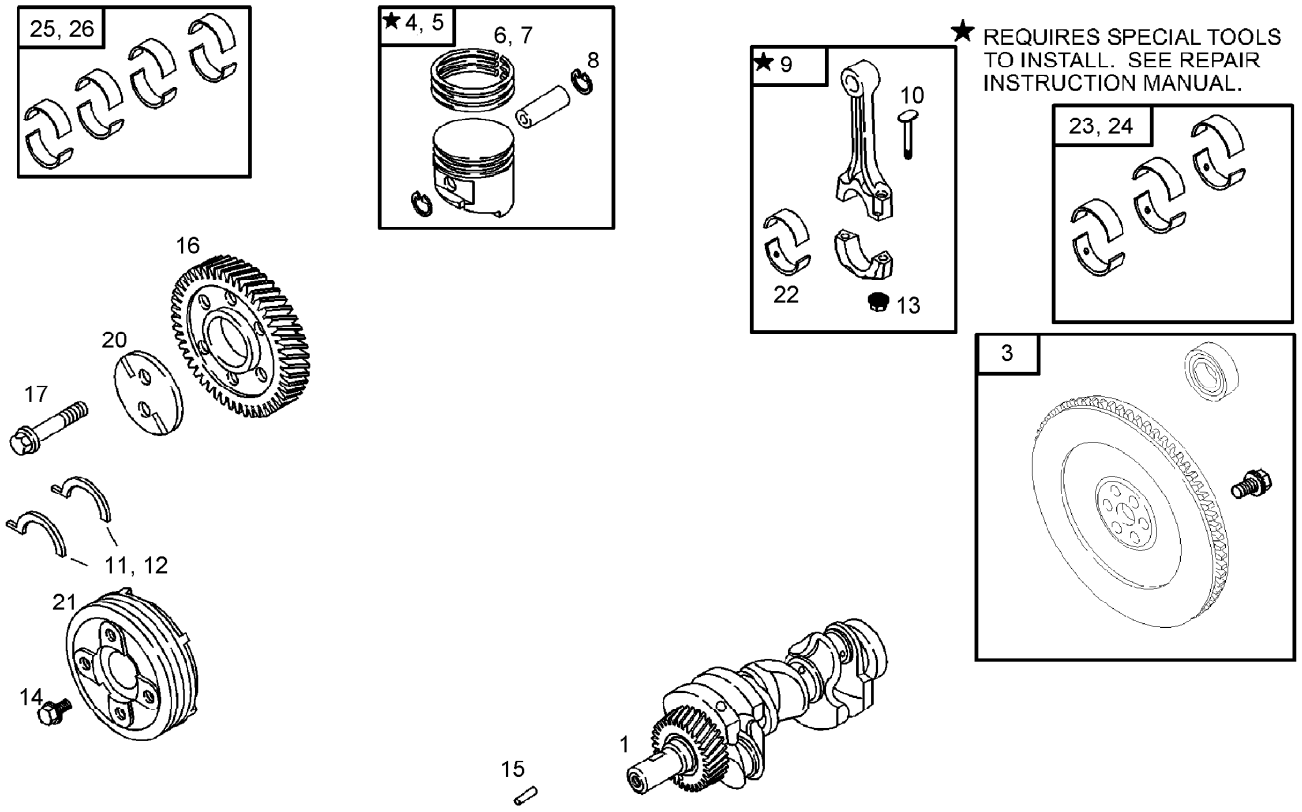

Assemblies include all parts shown in frames.

Crankshaft Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	105-9339	1	Crankshaft
3	99-9024	1	Flywheel
4	107-9895	1	Piston ASM
5	107-9896	1	Piston ASM (Oversize)
6	105-9340	1	Ring Set
7	99-9269	1	Ring Set (.010 Oversized)
8	99-9607	1	Lock-Pin, Piston
9	99-9608	1	Rod-Connecting
10	99-9030	1	Screw
11	99-9035	1	Shim-Endplay
12	99-9036	1	Shim-Endplay (.005 Oversized)
13	99-9034	1	Nut-Hex
14	107-9897	1	Screw-Hex
15	99-9037	1	Pin-Locating
16	99-9609	1	Gear-Drive
17	99-9032	1	Screw-Hex
20	99-9040	1	Plate-Gear, Idler
21	99-9041	1	Pulley-Crankshaft
22	99-9042	1	Bearing-Rod
23	99-9043	1	Rod Bearing Set
24	99-9044	1	Rod Bearing Set (.010 Undersized)
25	99-9045	1	Main Bearing Set (Set Of 8)
26	99-9046	1	Main Bearing Set (.010 Undersized)

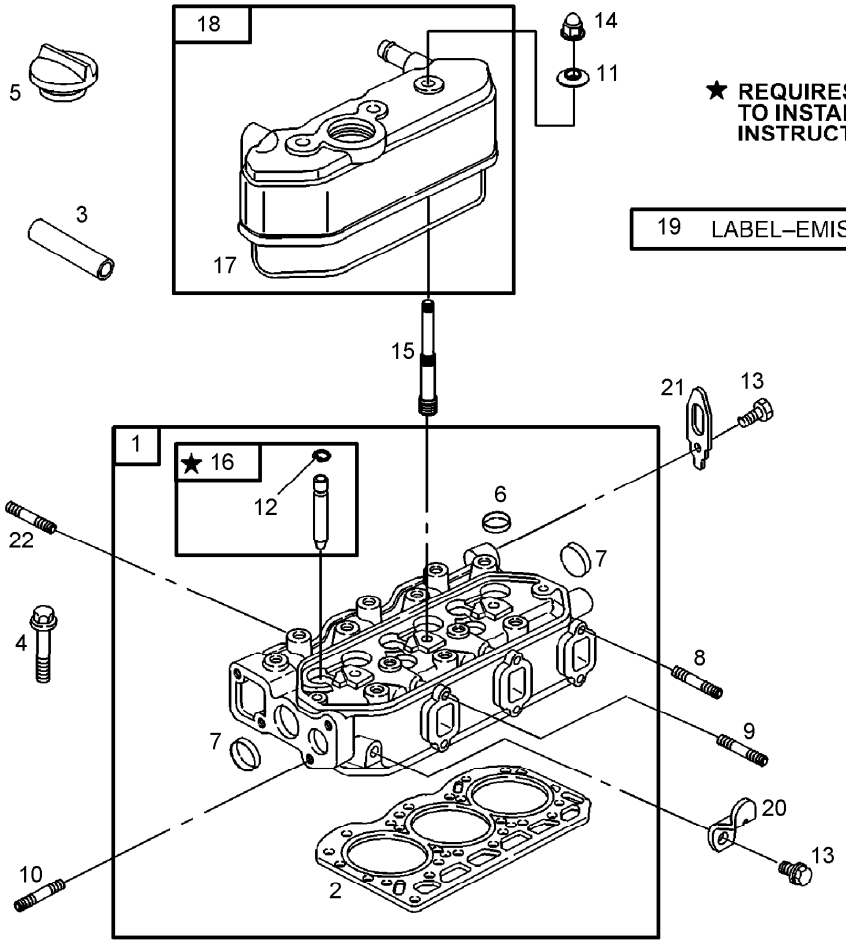


★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

19 LABEL–EMISSION

Assemblies include all parts shown in frames.

Cylinder Head Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	105-9341	1	Head-Cylinder
2	107-9898	1	Gasket-Head, Cylinder
3	105-9342	1	Tube-Breather
4	99-9614	1	Screw-Metric
5	99-9052	1	Cap-Fill, Oil
6	99-9060	1	Plug-Welch
7	99-9008	1	Plug-Welch
8	99-9058	1	Stud-Metric
9	99-9059	1	Stud-Metric
10	99-9057	1	Stud-Metric
11	99-9063	1	Washer-Seal
12	99-9067	1	Retainer
13	99-9054	1	Screw-Hex
14	99-9061	1	Nut-Hex, Metric
15	99-9101	1	Stud-Arm, Rocker
16	99-9070	1	Bushing-Guide
17	99-9073	1	Gasket-Cover, Rocker
18	100-6402	1	Cover-Rocker
19	107-9899	1	Emmision Label Kit
20	99-9076	1	Bracket-Lifting
21	99-9077	1	Bracket-Lifting
22	99-9055	1	Stud-Metric

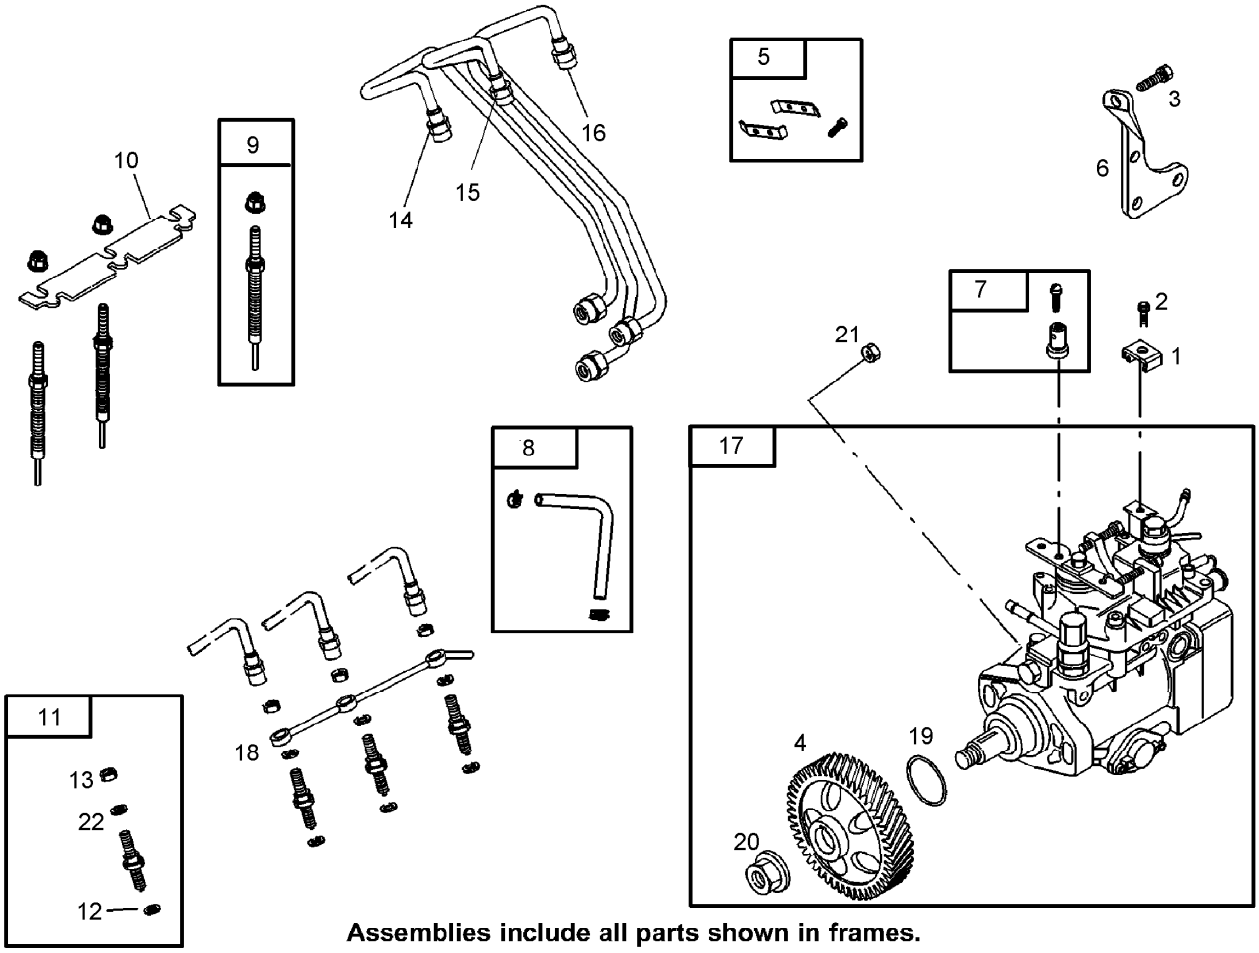

Assemblies include all parts shown in frames.

Injection Pump Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	99-9622	1	Clamp-Casing
2	99-9056	1	Screw-Hex
3	99-9616	1	Screw-Hex
4	99-9689	1	Gear-Drive
5	99-9625	1	Clamp
6	99-9626	1	Bracket-Support
7	99-9628	1	Clamp-Swivel
8	99-9629	1	Hose / Clamp ASM
9	99-9630	1	Plug-Glow
10	99-9631	1	Strap-Plug, Glow
11	99-9632	1	Nozzle-Injector
12	99-9633	1	Seat-Injector
13	105-9345	1	Nut
14	99-9690	1	Pipe-Injector, No. 1
15	99-9634	1	Pipe-Injector, No. 2
16	99-9635	1	Pipe-Injector, No. 3
17	105-9334	1	Pump-Injection
18	99-9637	1	Pipe-Return, Fuel
19	99-9618	1	O-Ring
20	99-9620	1	Nut-Hex, Metric
21	99-9619	1	Nut-Hex, Metric
22	105-9343	1	Seat-Injector

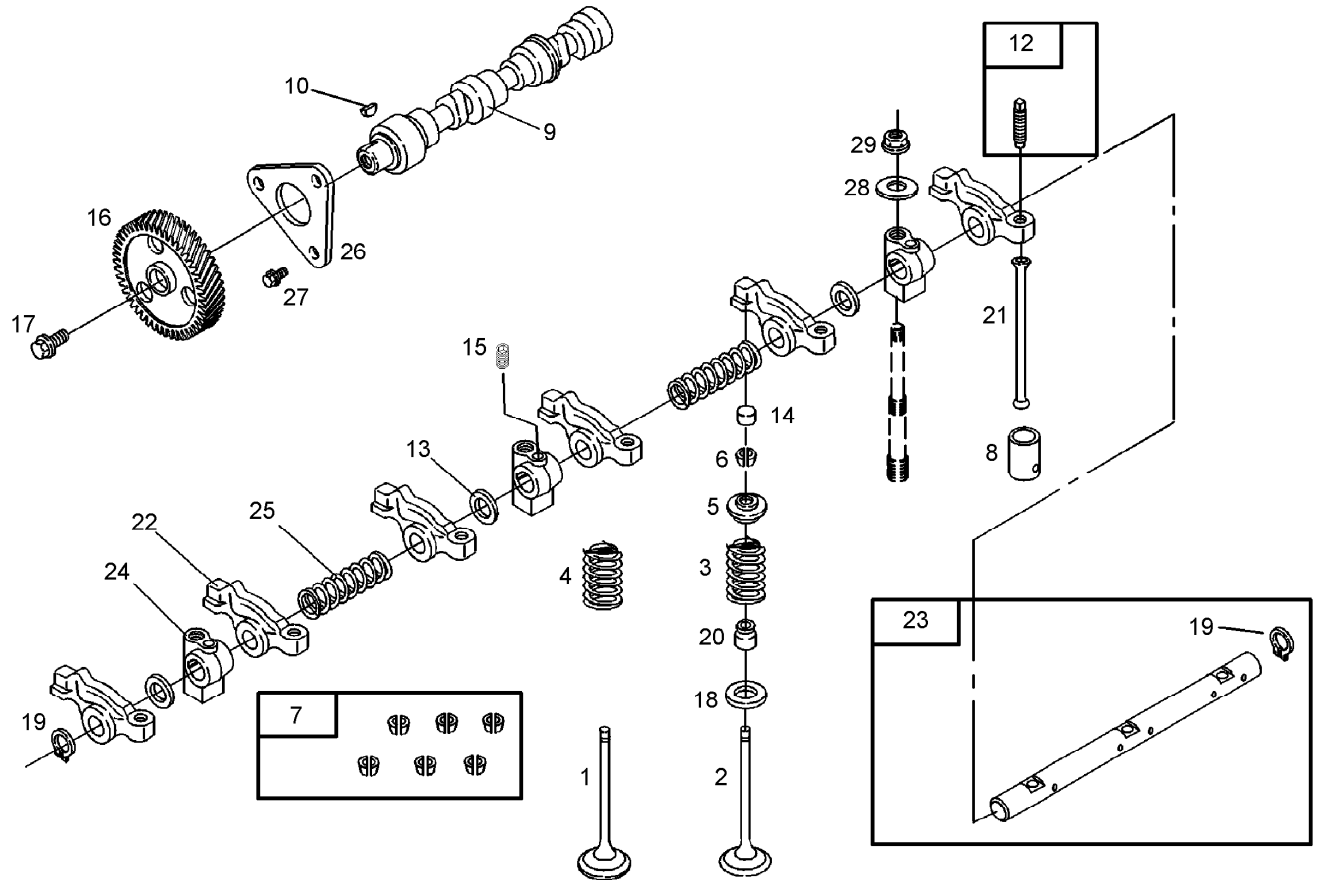

Assemblies include all parts shown in frames.

Camshaft Assembly


Ref.	Part Number	Qty.	Description
1	99-9638	1	Valve-Exhaust
2	99-9639	1	Valve-Intake
3	99-9640	1	Spring-Valve
4	99-9640	1	Spring-Valve
5	99-9084	1	Retainer-Valve
6	99-9086	1	Keeper-Valve (Set)
7	99-9087	1	*obs* Keeper-Valve (Set Of 6)
8	99-9088	1	Tappet-Valve
9	99-9097	1	Shaft-Cam
10	99-9675	1	Key-Timing
12	99-9092	1	Adjuster-Arm, Rocker
13	99-9093	1	Washer-Spacer
14	99-9094	1	Cap-Valve
15	99-9090	1	Screw-Metric
16	99-9641	1	Gear-Cam
17	99-9085	1	Screw-Metric
18	99-9096	1	Seat-Spring, Valve
19	99-9099	1	Retainer
20	99-9643	1	Seal-Valve
21	99-9103	1	Rod-Push
22	99-9104	1	Arm-Rocker
23	99-9106	1	Shaft-Arm, Rocker
24	99-9107	1	Support-Arm, Rocker
25	99-9108	1	Spring-Shaft, Rocker
26	99-9109	1	Retainer-Camshaft
27	99-9083	1	Screw-Hex
28	99-9079	1	Washer-Flat
29	99-9091	1	Nut-Hex, Metric

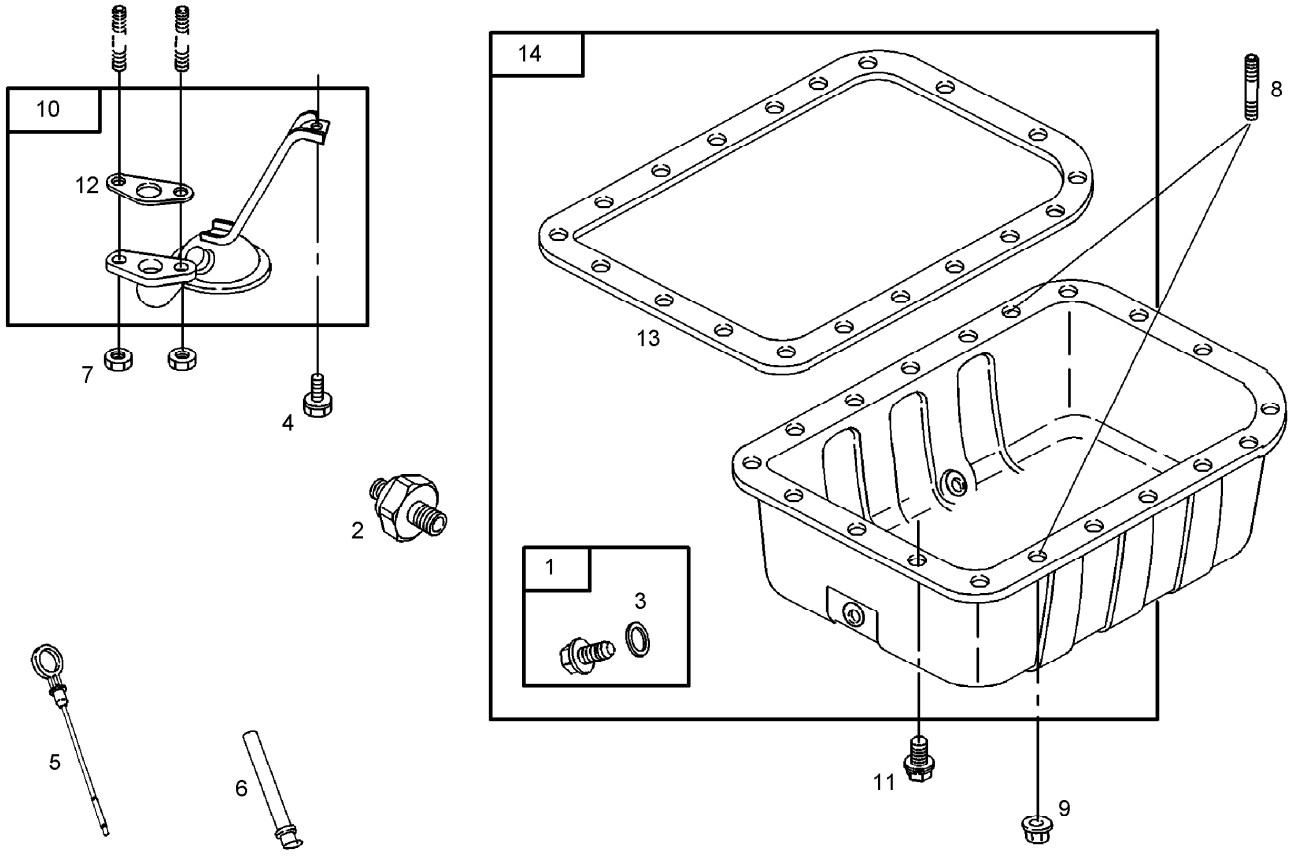

Assemblies include all parts shown in frames.

Oil Pan Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	99-9247	1	Plug-Drain, Oil
2	107-9908	1	Switch-Pressure, Oil
3	99-9249	1	Washer-Seal
4	99-9111	1	Screw-Hex
5	110-2597	1	Dipstick
6	99-9118	1	Tube-Dipstick
7	99-9114	1	Nut-Hex, Metric
8	99-9112	1	Stud-Metric
9	99-9113	1	Nut-Hex, Metric
10	99-9116	1	Screen-Pump, Oil
11	99-9111	1	Screw-Hex
12	99-9120	1	Gasket-Strainer, Oil
13	99-9121	1	Gasket-Pan, Oil
14	99-9241	1	Pan-Oil

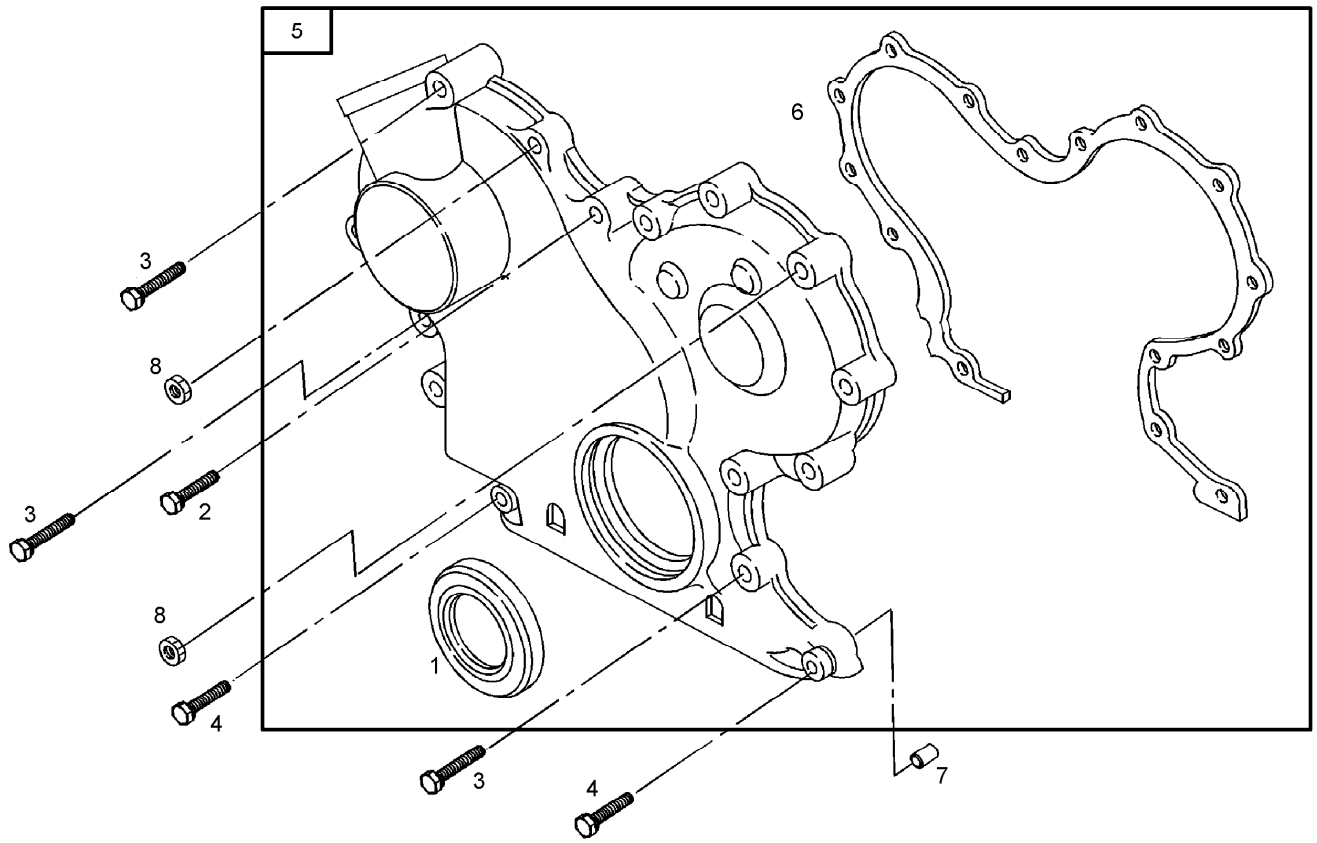

Assemblies include all parts shown in frames.

Gear Cover Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	115-2318	1	Gasket Kit
2	99-9651	1	Screw-Hex
3	99-9128	1	Screw-Hex
4	99-9129	1	Screw-Hex
5	99-9652	1	Gear Cover ASM
6	99-9653	1	Gasket-Cover, Gear
7	99-9014	1	Pin-Locating
8	99-9114	1	Nut-Hex, Metric

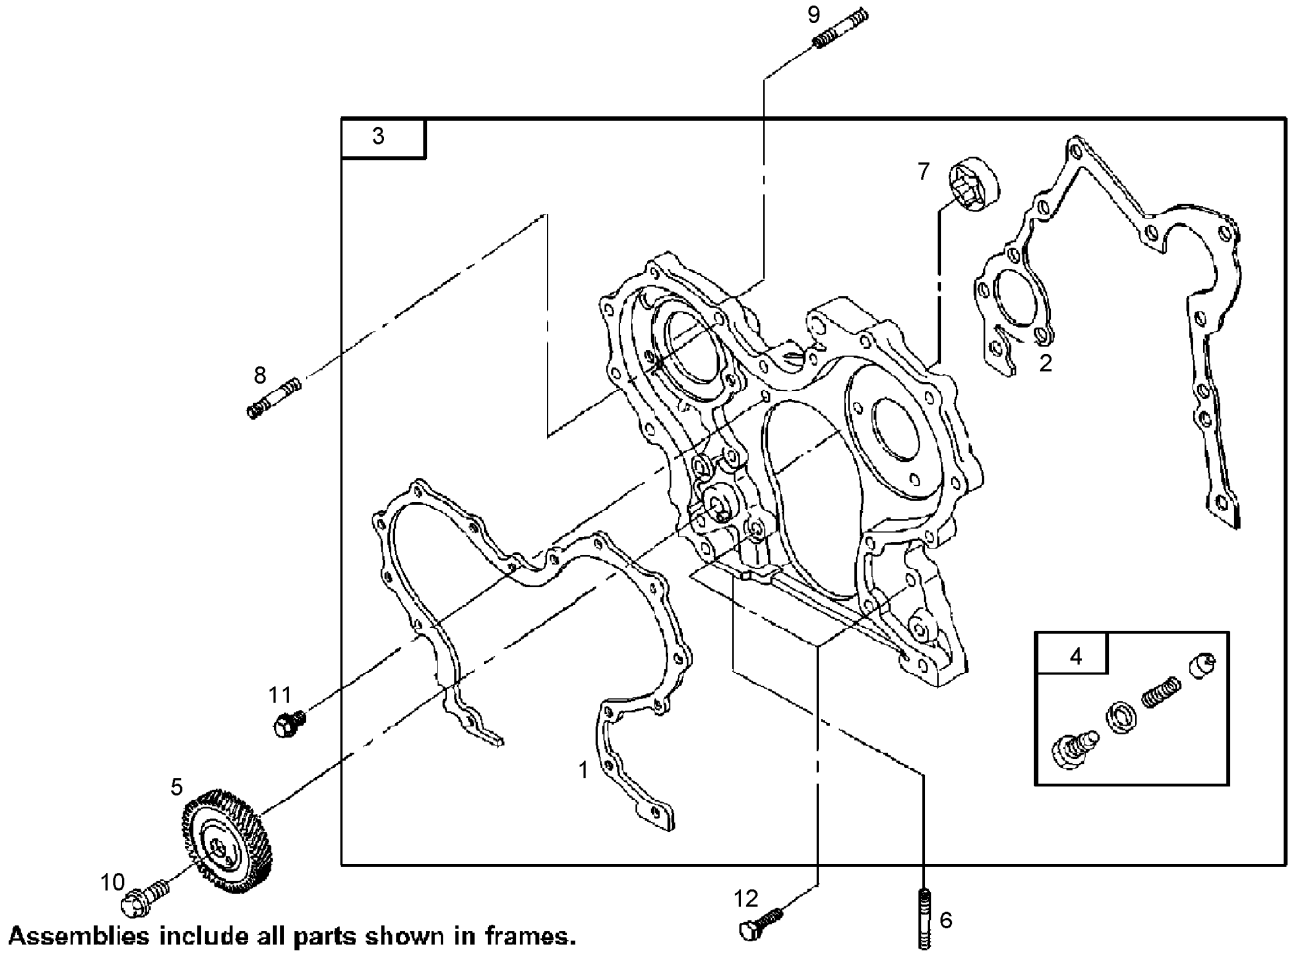


Assemblies include all parts shown in frames.

Gear Housing Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	99-9653	1	Gasket-Cover, Gear
2	99-9136	1	Gasket-Cover, Gear Reduction
3	99-9655	1	Housing-Gear
4	99-9142	1	Valve-Relief, Oil
5	99-9656	1	Gear-Drive
6	99-9007	1	Stud-Metric
7		1	Gerotor ●
8	99-9137	1	Stud-Metric
9	99-9654	1	Stud-Metric
10	99-9135	1	Screw-Hex
11	99-9134	1	Screw-Hex
12	99-9133	1	Screw-Hex


● Not serviced separately

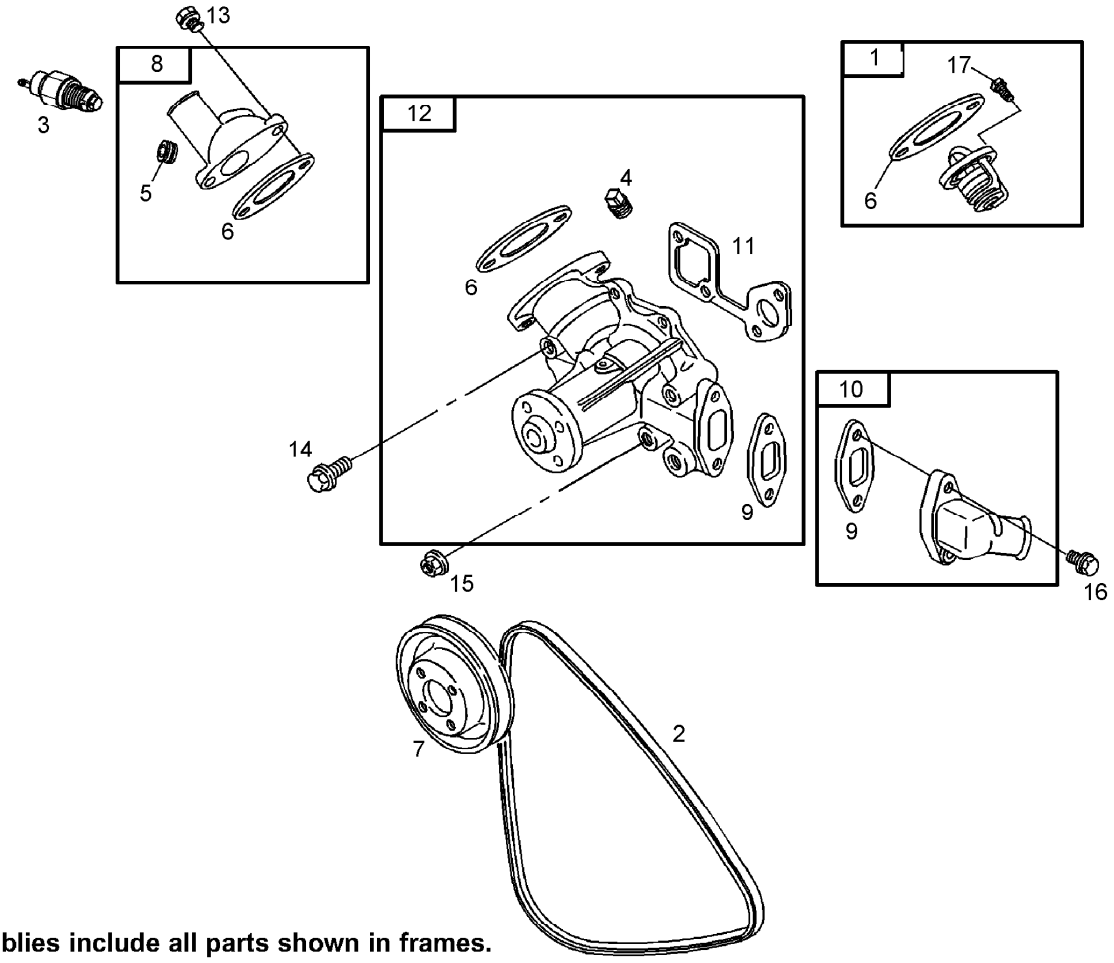

Assemblies include all parts shown in frames.

Water Pump Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	99-9155	1	Thermostat
2	99-9156	1	Belt-V
3	107-9902	1	Switch-Temperature, Water
4	99-9159	1	Plug
5	99-9158	1	Plug
6	99-9163	1	Gasket-Housing, Outlet
7	99-9164	1	Pulley-Pump
8	99-9165	1	Housing-Outlet
9	99-9166	1	Gasket-Housing, Inlet
10	99-9167	1	Housing-Inlet
11	99-9168	1	Gasket-Pump, Water
12	99-9659	1	Pump-Water
13	99-9004	1	Screw-Hex
14	99-9151	1	Screw-Hex
15	99-9153	1	Nut-Hex, Metric
16	99-9004	1	Screw-Hex
17	99-9152	1	Screw-Metric

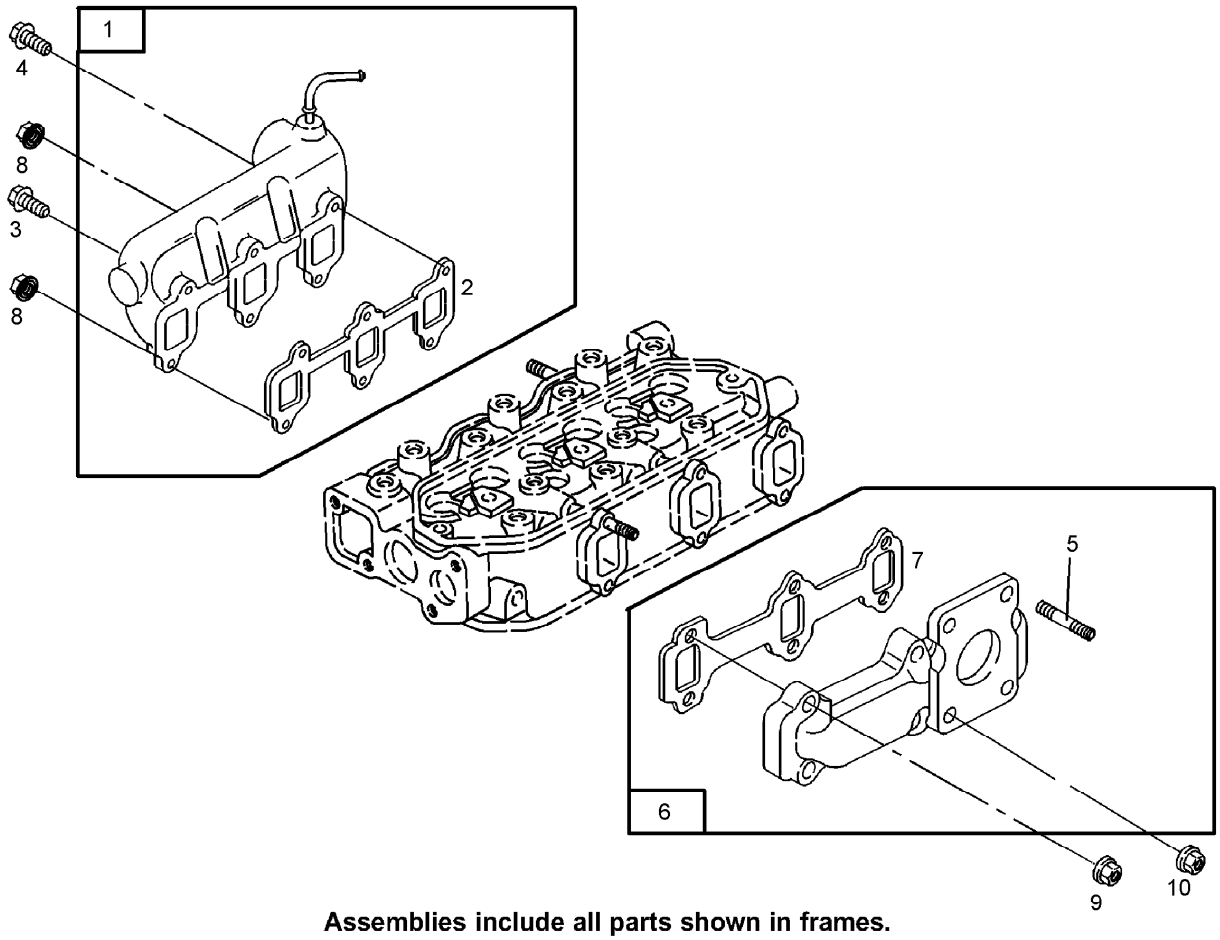

Assemblies include all parts shown in frames.

Manifold Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	99-9661	1	Manifold-Intake
2	99-9662	1	Gasket-Intake
3	99-9004	1	Screw-Hex
4	99-9660	1	Screw-Hex
5	99-9174	1	Stud-Manifold, Exhaust
6	99-9177	1	Manifold-Exhaust
7	106-1855	1	Gasket-Exhaust
8	99-9114	1	Nut-Hex, Metric
9	99-9175	1	Nut-Hex, Metric
10	99-9176	1	Nut-Hex

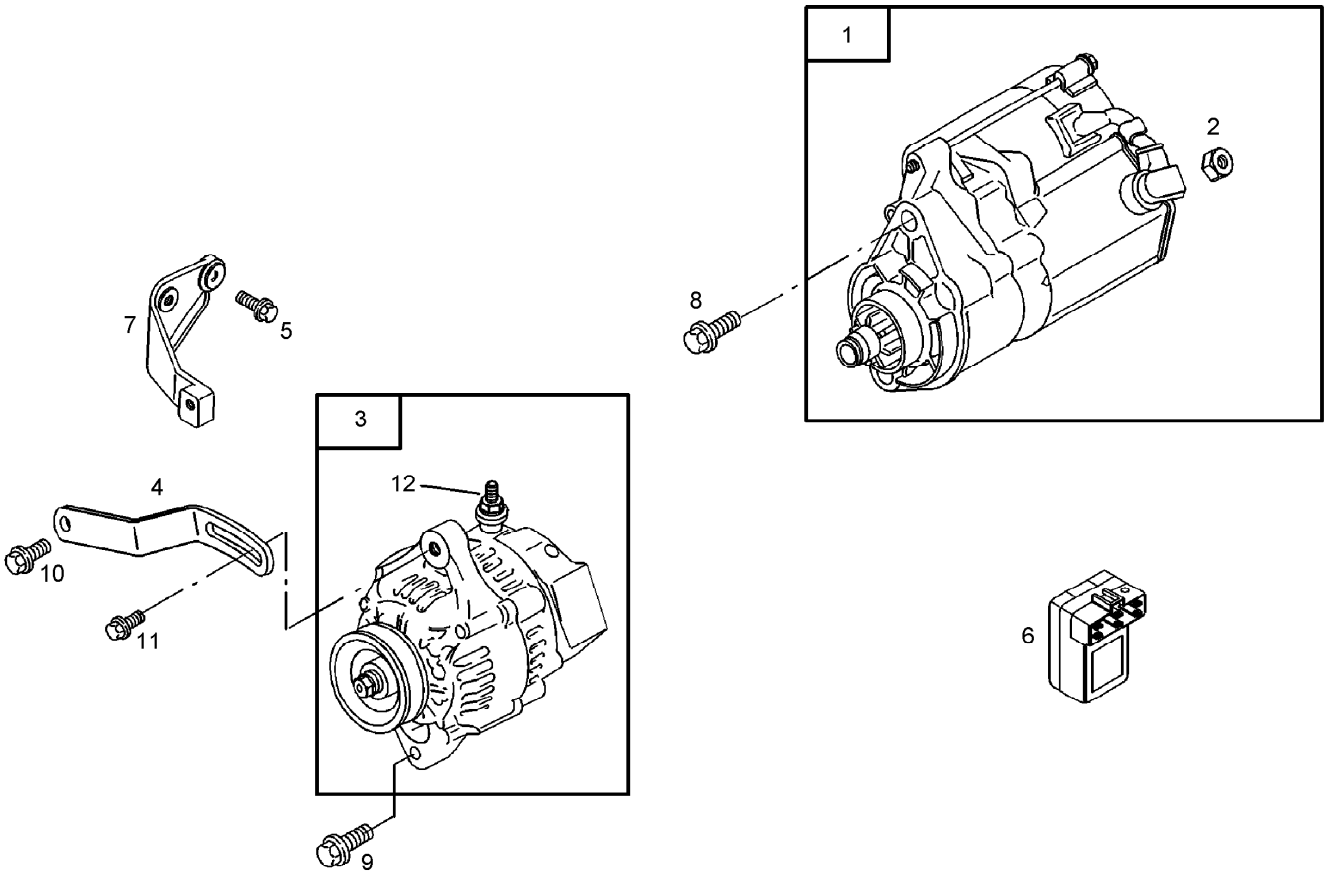

Assemblies include all parts shown in frames.

Starter Motor and Alternator Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	99-9207	1	Motor-Starter
2	99-9206	1	Nut-Hex, Metric
3	99-9209	1	Alternator
4	106-1952	1	Strap-Adjusting
5	99-9203	1	Screw-Hex
6	99-9666	1	Module
7	99-9211	1	Bracket-Support
8	99-9201	1	Screw-Hex
9	99-9205	1	Screw-Hex, Metric
10	99-9202	1	Screw-Hex
11	107-9903	1	Screw-Hex, Metric
12	99-9114	1	Nut-Hex, Metric

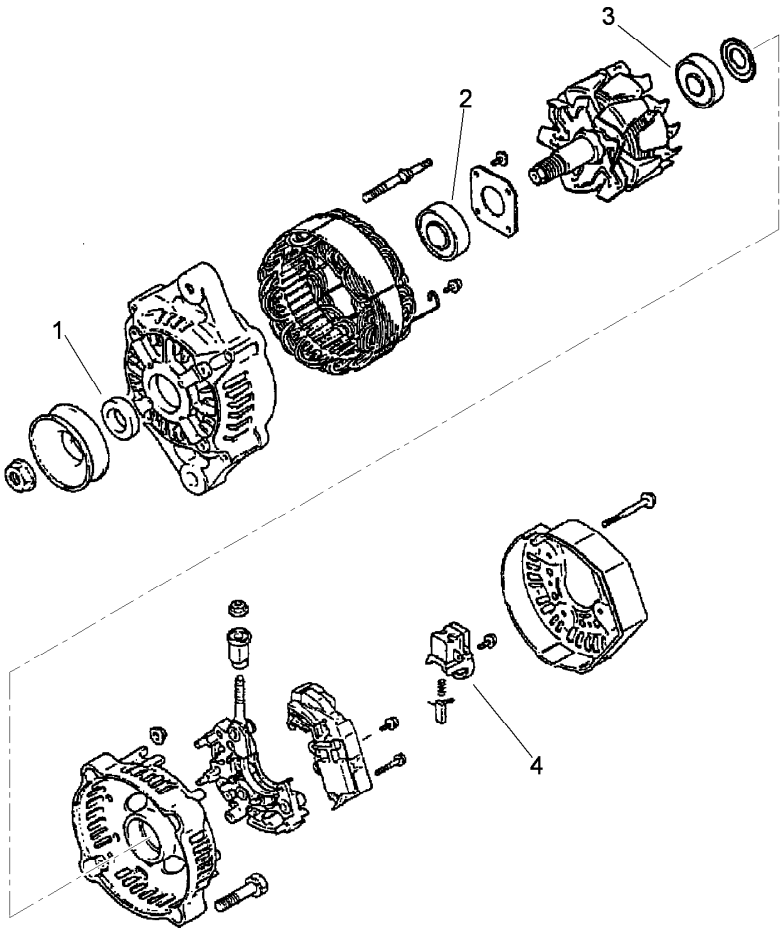


Parts not listed in parts list are not serviced separately

Alternator Assembly No. 99-9209

Ref.	*Part Number*	*Qty.*	*Description*
1	100-5315	1	Collar
2	100-5316	1	Bearing
3	100-5317	1	Bearing
4	100-5318	1	Brush Holder ASM

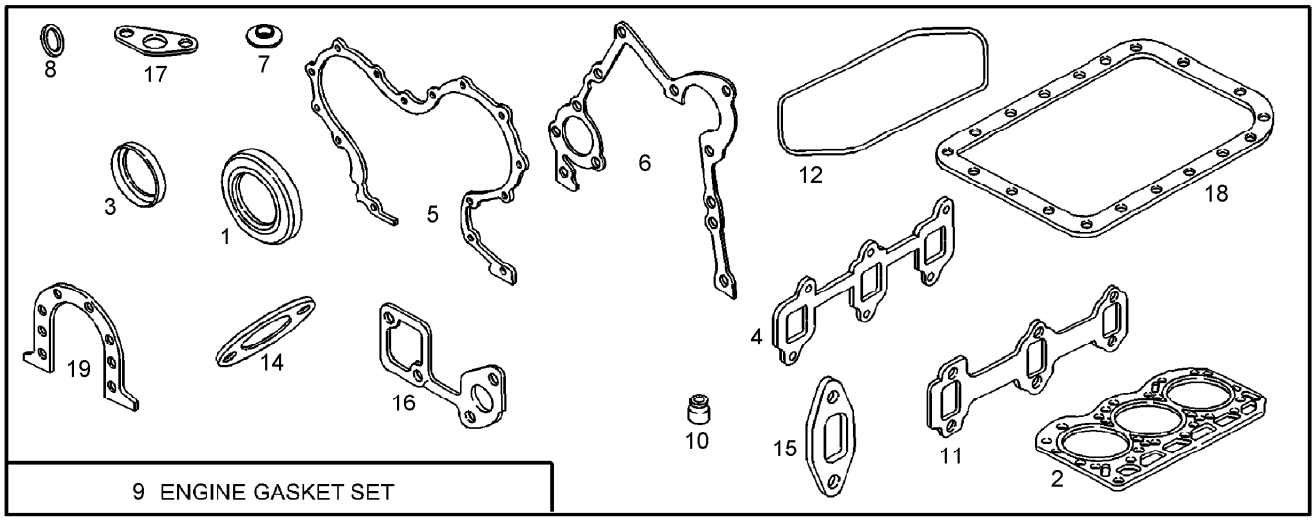

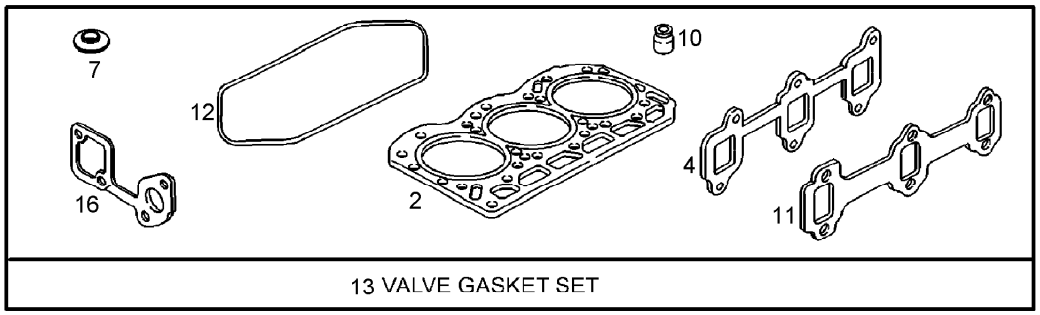

Assemblies include all parts shown in frames.

Gasket Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	99-9003	1	Seal-Oil
2	107-9898	1	Gasket-Head, Cylinder
3	115-2318	1	Gasket Kit
4	99-9662	1	Gasket-Intake
5	99-9653	1	Gasket-Cover, Gear
6	99-9136	1	Gasket-Cover, Gear Reduction
7	99-9063	1	Washer-Seal
8	99-9249	1	Washer-Seal
9	107-9906	1	Gasket Set
10	99-9643	1	Seal-Valve
11	106-1855	1	Gasket-Exhaust
12	99-9073	1	Gasket-Cover, Rocker
13	107-9907	1	Valve Overhaul Kit
14	99-9163	1	Gasket-Housing, Outlet
15	99-9166	1	Gasket-Housing, Inlet
16	99-9168	1	Gasket-Pump, Water
17	99-9120	1	Gasket-Strainer, Oil
18	99-9121	1	Gasket-Pan, Oil
19	99-9021	1	Gasket-Retainer

Attachments and Accessories

For 74269 Z Master With 72in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Recycler Kit	107-1612
Bimini Folding Shade Assembly	115-4510
Light Kit	107-9880
Operator Fan Kit - US Sales Only, 2in ROPS Post	110-1996
Chute Gate Kit	78522
Striping Kit	107-1630
Turbo Baffle Kit	107-1634
Roller Striping Kit	108-2162
Hitch Kit	110-0444
Deck Triple Bag Assembly	78535
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Blower and Drive Kit	78539
DFS E-Z Vac Bagger	78545
Spark Arrester Kit	105-1673
Blade-Hi Flow, 24.5in	105-7784-03
Blade-Mid Flow, 24.5in	105-7711-03
Blade-Lo Flow, 24.5in	105-7712-03
Blade-Atomic, 24.5in	105-7719-03
Blade-Recyler, 24.5in	105-7778-03
6 Pack Blade, 24.5in Hi-Flow	108-1120
6 Pack-Blade, 24.5in Mid-Flow	110-0404
6 Pack-Blade, 24.5in Lo-Flow	110-0410
6 Pack Blade, 24.5in Atomic	108-1126
6 Pack-Blade, 24.5in Recycler	110-0411
Filter Minder Gauge	99-4664

Notes:



Count on it.