
FORM NO. 3318—760

TORO®

MODEL NO. 51926—6900001 & UP

PARTS CATALOG

TRIMMER

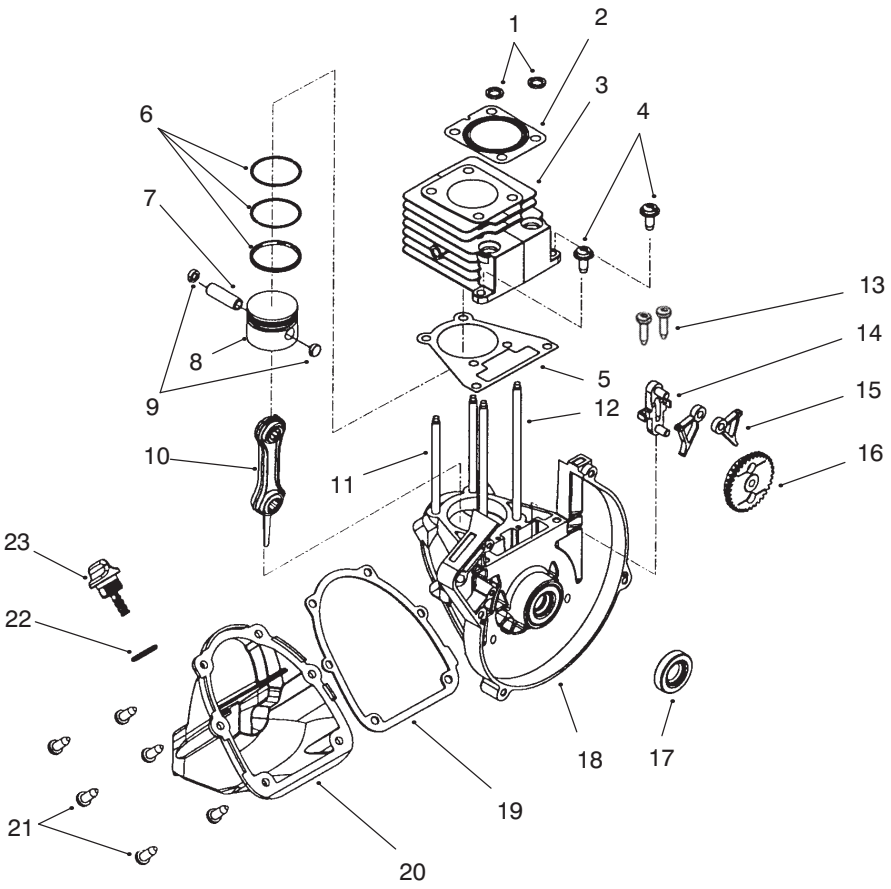

C—2589


CYLINDER & CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	181000	O Ring — Push Rod Tube	2
2	181001	Gasket — Cylinder Head	1
3	181002	Cylinder	1
4	181003	Screw	2
5	181004	Gasket — Cylinder	1
6	181005	Piston Ring Set	1
7	181006	Pin — Wrist	1
8	181007	Piston	1
9	181008	Button — Wrist Pin	2
10	181009	Rod — Connecting	1
11	181010	Cylinder Stud (83.5mm)	2
12	181011	Cylinder Stud (115.5mm)	2
13	181012	Screw — Cam Bracket	2
14	181013	Bracket — Cam	1
15	181014	Follower — Cam	2
16	181015	Cam Gear	2
17	181016	Seal	1
18	181017	Crankcase W/Power Shaft (Incl. Ref. #11,12,&17)	1
19	181018	Gasket — Oil Pan	1
20	181019	Pan — Oil	1
21	181020	Screw	6
22	181021	O Ring	1
23	181537	Plug — Oil Fill (Incl. Ref. #22)	1
*	181023	Piston & Rod Assembly (Incl. Ref. # 6—10)	1
*	181024	Engine Gasket Kit	1
*	181042	Short Block Assembly (All Items Included)	1

* Not Illustrated

©The TORO Company — 1996
All Rights Reserved

TPS

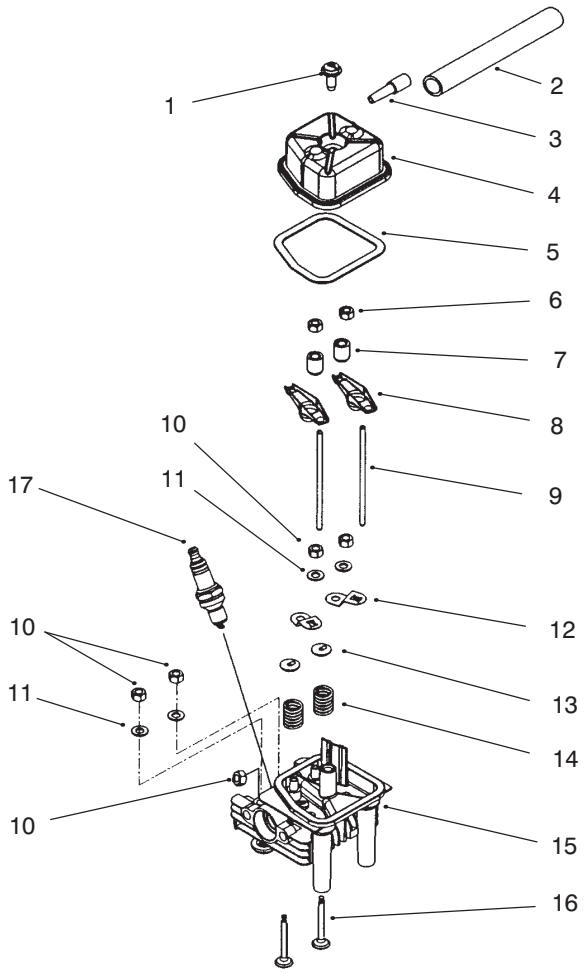


C—2590

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	181025	Screw — Valve Cover	1
2	181026	Hose — Breather	1
3	181027	Breather Assembly	1
4	181028	Cover — Valve	1
5	181029	Gasket — Valve Cover	1
6	181030	Nut — Rocker Adjusting	2
7	181031	Pivot — Rocker Arm	2
8	181032	Arm — Rocker	2
9	181033	Rod — Push	2
10	181034	Nut — Hex	2
11	181035	Washer	2

Ref. No.	Part No.	Description	No. Used
12	181036	Guide — Push Rod	2
13	181037	Retainer — Valve Spring	2
14	181038	Spring — Valve	2
15	181039	Head — Cylinder	1
16	181040	Valve	2
17	180852	Spark Plug	1
*	181041	Cylinder Head Assembly (Incl. Ref. #13—16)	1
*	181042	Short Block Assembly (All Items Included)	1

* Not Illustrated

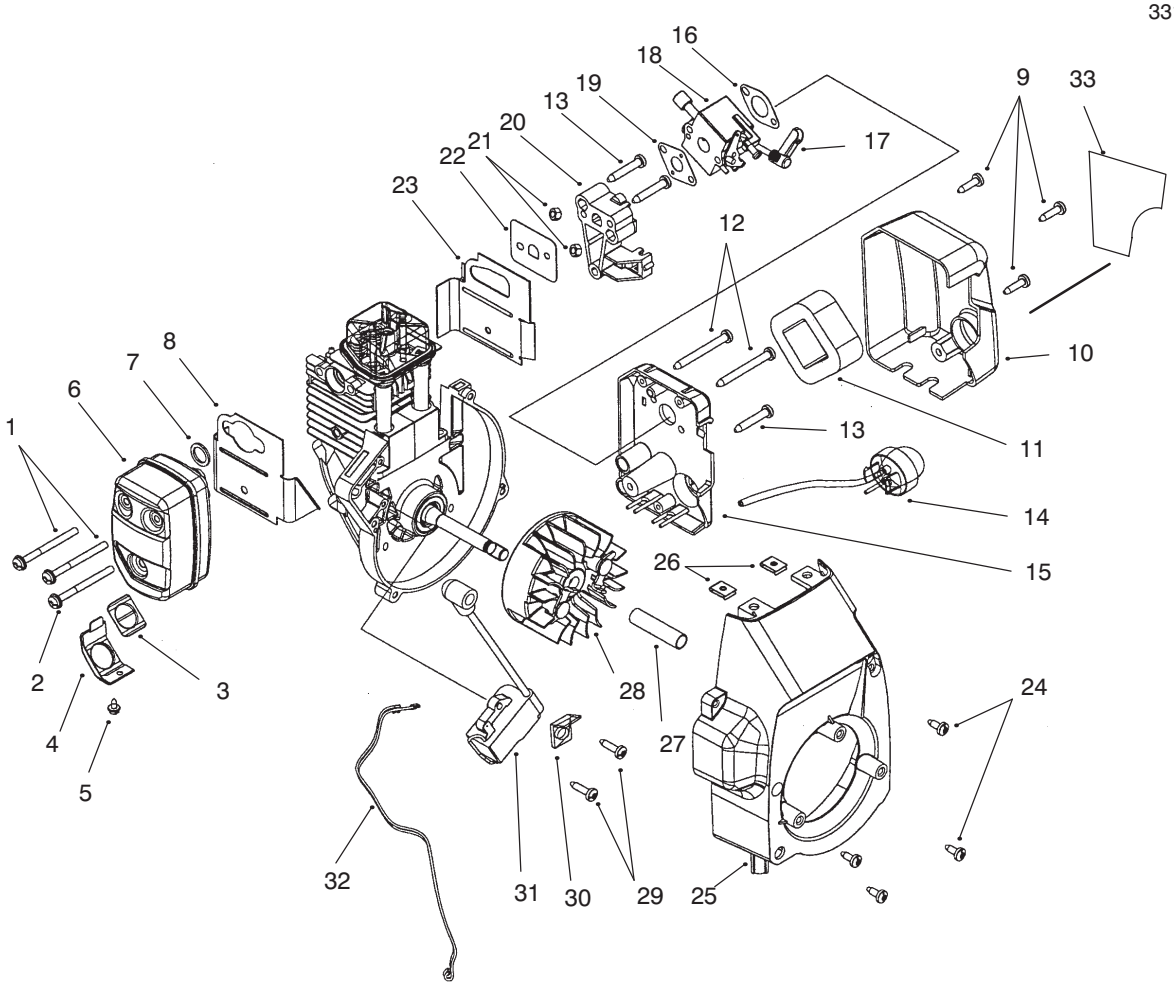


C—2591

CARBURETOR & MUFFLER ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	181043	Screw — Muffler Mounting	2
2	181044	Screw — Muffler Mounting	1
3	180890	Screen — Spark Arrestor	1
4	181045	Cover — Screen	1
5	181046	Screw — Screen Cover	1
6	181047	Muffler (Incl. Ref. #1—5 & 7)	1
7	181048	Gasket — Muffler	1
8	181049	Baffle — Muffler	1
9	181050	Screw — Air Filter Cover	3
10	181051	Cover — Air Filter	1
11	180350	Filter — Air	1
12	181052	Screw — Air Filter Base	2
13	181053	Screw	3
14	181538	Primer & Line Assembly	1
15	181055	Base — Air Filter	1
16	181056	Gasket	1
17	181539	Lever — Choke	2
18	181540	Carburetor W/Choke Lever	1
19	181059	Gasket	1
20	181060	Insulator — Carb. Mount	1

Ref. No.	Part No.	Description	No. Used
21	181034	Nut —Hex	2
22	181061	Gasket — Intake	1
23	181062	Baffle — Intake	1
24	181003	Screw	4
25	181541	Housing — Fan	1
26	181064	Nut — Tinnerman	2
27	181065	Spacer	1
28	180929	Flywheel	1
29	181066	Screw — Module	2
30	611063	Tab — Ground	1
31	181067	Module — Ignition	1
32	181094	Lead — Wire 18”	2
33	9373	Decal — Choke	1
*	610676	Key — Flywheel	1
*	180142	Flywheel Starter Pawl Repair Kit	1
*	181068	O.E.M. Carburetor Repair Kit	1
*	181069	Gasket — Diaphragm Repair Kit	1
*	180986	Carburetor Limiter Cap Set	1

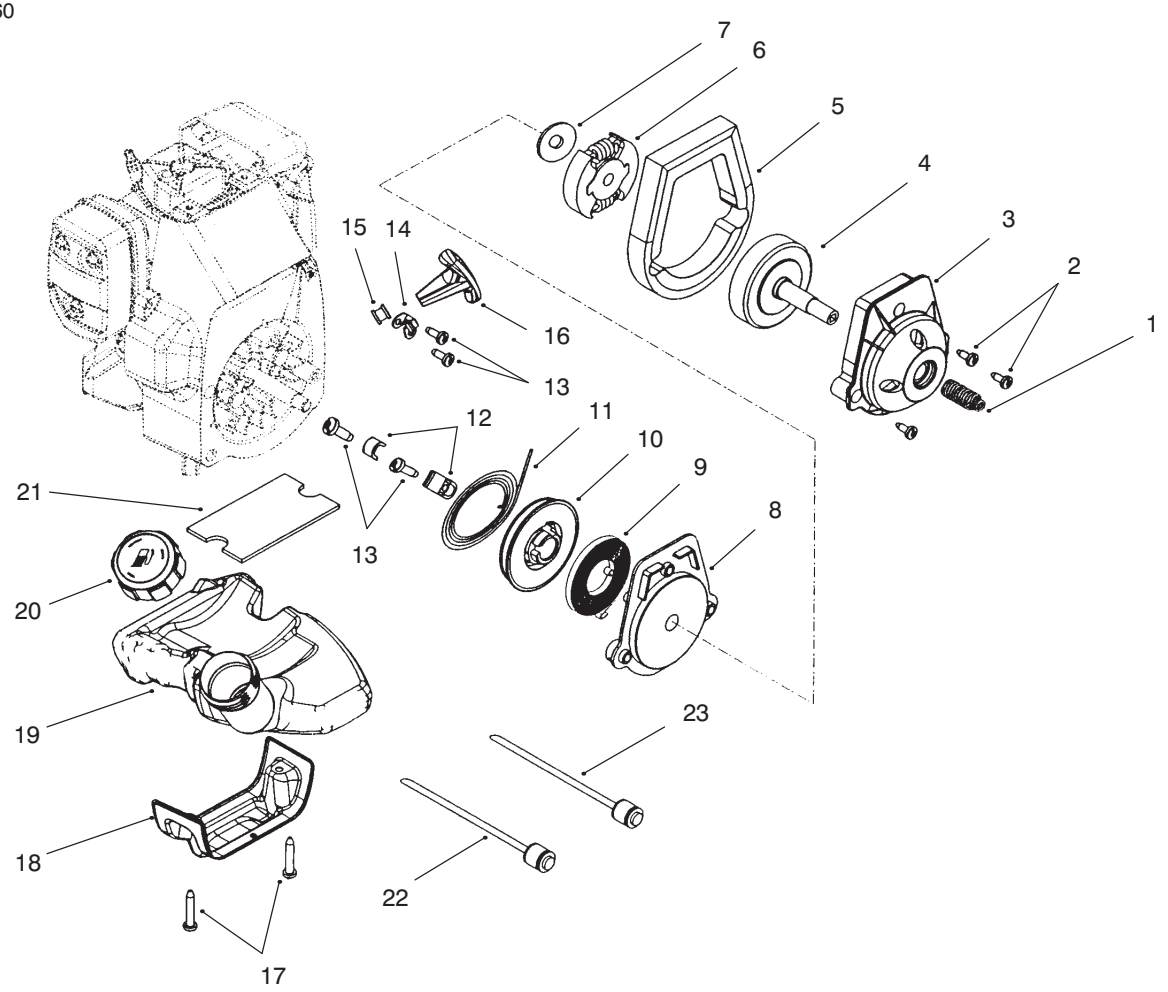


C—2592

CLUTCH, STARTER MODULE & FUEL TANK ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	612468	Spring — Compression	1
2	181070	Screw	3
3	181071	Housing — Clutch	1
4	180232	Drum — Clutch	1
5	181545	Isolator	1
6	181073	Clutch	1
7	181546	Washer — Clutch	1
8	181102	Clutch Housing Assembly W/Drum (Incl. Ref. #3 & 4)	1
9	613102	Spring — Starter	1
10	180535	Pulley — Starter	1
11	613103	Rope — Starter	1
12	181076	Retainer — Starter Pulley	1

Ref. No.	Part No.	Description	No. Used
13	181544	Screw	2
14	181078	Retainer — Rope Guide	1
15	611061	Guide — Rope	1
16	181079	Handle — Starter	1
17	181080	Screw — Fuel Tank Bracket	2
18	181081	Bracket — Fuel Tank	1
19	181542	Tank — Fuel (Incl. Ref. #20, 22 & 23)	1
20	181543	Cap — Fuel	1
21	181084	Pad — Fuel Tank	1
22	181085	Fuel Line Assembly W/Filter	1
23	181086	Line — Fuel Return	1

* Not Illustrated

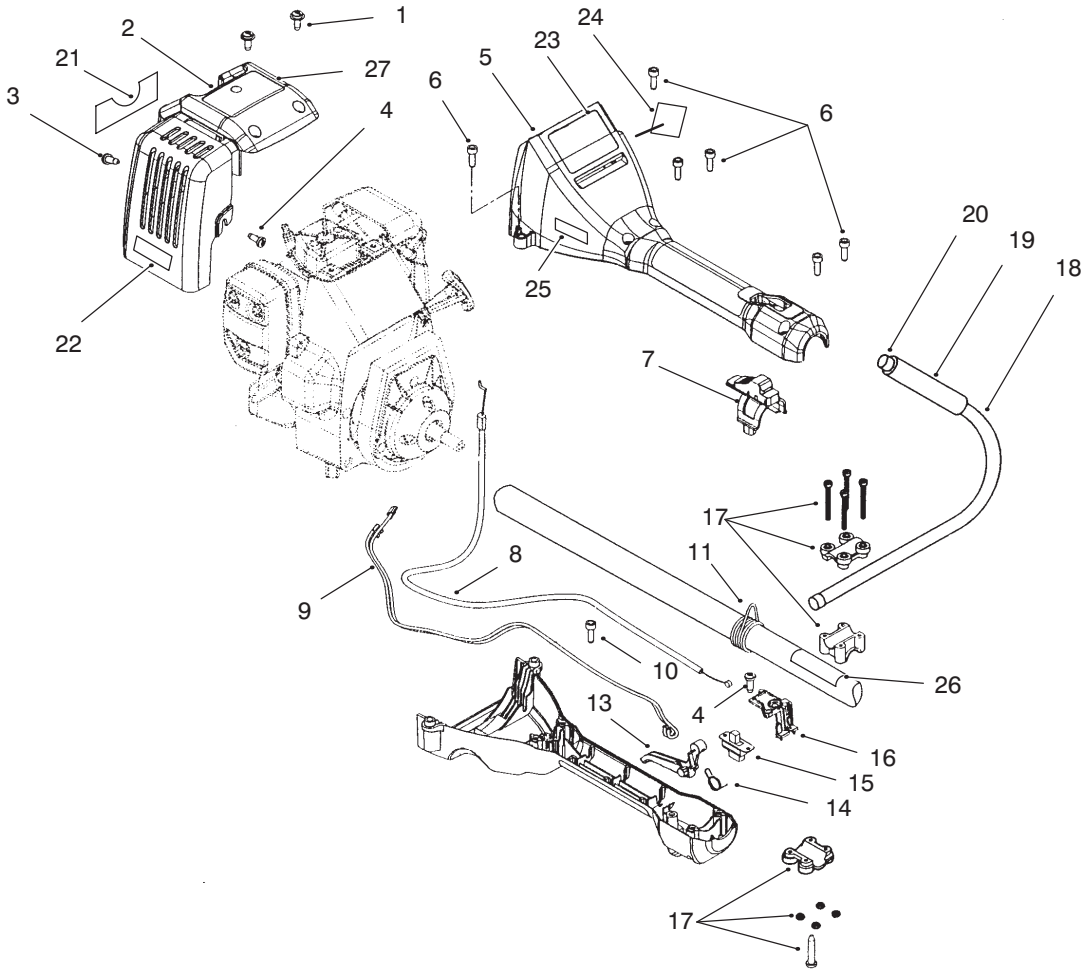


C–2593

HANDLE & UPPER BOOM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	181020	Screw	2
2	181088	Cover – Engine	1
3	181089	Screw	1
4	181104	Screw – Engine Cover	1
5	181090	Handle Assembly	1
6	181070	Screw	6
7	181091	Slide – Switch	1
8	181093	Cable – Throttle	1
9	181094	Lead – Wire 18”	2
10	181095	Screw – Anti–Rotation	1
11	610327	Clip – Shoulder Strap	1
13	181096	Trigger	1
14	610314	Spring	1
15	181097	Switch	1

Ref. No.	Part No.	Description	No. Used
16	181098	Retainer – Switch & Trigger	1
17	683295	Handle Bracket Assembly	1
18	181099	J–Handle Assembly (Incl. Ref. # 19 & 20)	1
19	612831	Grip	1
20	612021	Tube Closure	1
21	9369	Decal – Oil	1
22	92–3332	Decal – Hot Surface	1
23	9355	Decal – Toro	1
24	9356	Decal – Care	1
25	9375	Decal – Gas	1
26	6693	Decal – Safety Symbols	1
27	9370	Decal – Trimmer	1
*	181103	Decal – Kit	1

* Not Illustrated

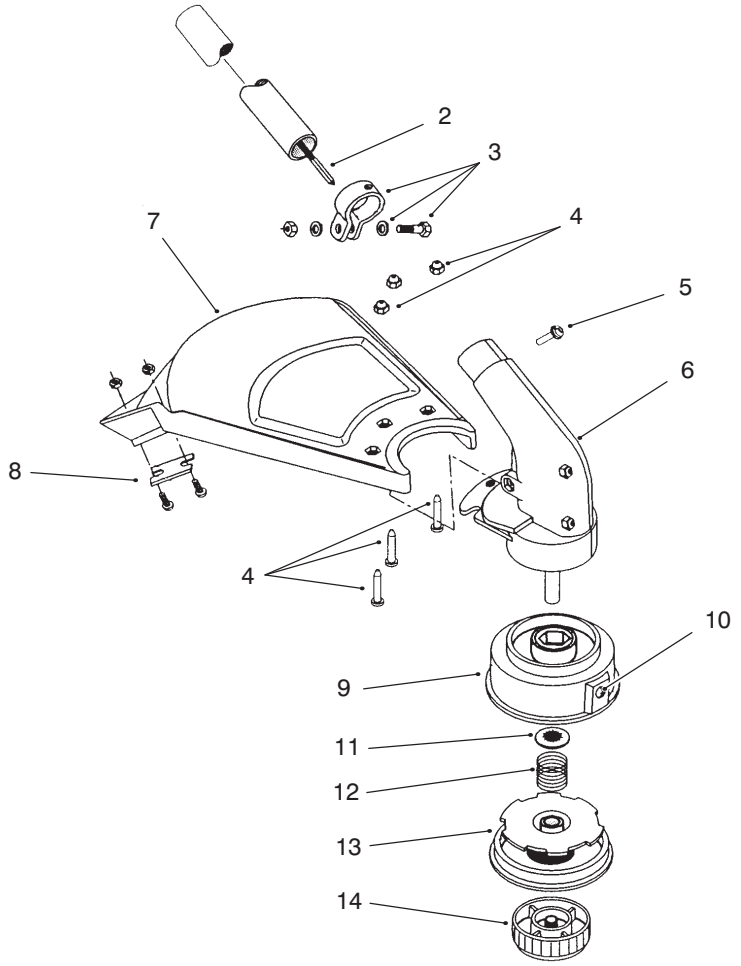

C–2595

LOWER BOOM & CUTTING HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	181548	Drive Shaft Housing Asm.	1
2	181549	Shaft – Flexible Drive	1
3	153597	Clamp Assembly	1
4	180547	Hardware – Guard Mounting	3
5	145569	Screw – Anti–Rotation	1
6	180549	Gearbox	1
7	180548	Guard – Cutting Head (Incl. Ref. #8)	1
8	682061	Blade Assembly	1
9	153619	Spool – Outer W/Eyelet (Incl. Ref. #10)	1
10	145566	Eyelet	1

Ref. No.	Part No.	Description	No. Used
11	610660	Retainer	1
12	610317	Spring	1
13	610318	Reel – Inner	1
14	682069	Bump Head Knob Assembly	1
*	610375	Monoflail Cutting Line	1
*	92–3450	Spool & Line Assembly	1
*	682075	Shoulder Strap Assembly	1
*	92–3297	Oil – Sae 30 100ml Bottle	1
*	181101	Spout – Oil Fill	1
*	180897	Complete Cutting Head (Incl. Ref. # 9,11–14)	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
6693	Decal — Safety Symbols	5	26	1
9355	Decal — Toro	5	23	1
9356	Decal — Care	5	24	1
9369	Decal — Oil	5	21	1
9370	Decal — Trimmer	5	27	1
9373	Decal — Choke	3	33	1
9375	Decal — Gas	5	25	1
145566	Eyelet	6	10	1
145569	Screw — Anti—Rotation	6	5	1
153597	Clamp Assembly	6	3	1
153619	Spool — Outer W/Eyelet	6	9	1
180142	Flywheel Starter Pawl	3	*	1
180232	Drum — Clutch	4	4	1
180350	Filter — Air	3	11	1
180535	Pulley — Starter	4	10	1
180547	Hardware — Guard Mounting	6	4	3
180548	Guard — Cutting Head	6	7	1
180549	Gearbox	6	6	1
180852	Spark Plug	2	17	1
180890	Screen — Spark Arrestor	3	3	1
180897	Complete Cutting Head	6	*	1
180929	Flywheel	3	28	1
180986	Carburetor Limiter Cap Set	3	*	1
181000	O Ring — Push Rod Tube	1	1	2
181001	Gasket — Cylinder Head	1	2	1
181002	Cylinder	1	3	1
181003	Screw	1	4	2
181003	Screw	3	24	4
181004	Gasket — Cylinder	1	5	1
181005	Piston Ring Set	1	6	1
181006	Pin — Wrist	1	7	1
181007	Piston	1	8	1
181008	Button — Wrist Pin	1	9	2
181009	Rod — Connecting	1	10	1
181010	Cylinder Stud (83.5mm)	1	11	2
181011	Cylinder Stud (115.5mm)	1	12	2
181012	Screw — Cam Bracket	1	13	2
181013	Bracket — Cam	1	14	1
181014	Follower — Cam	1	15	2
181015	Cam Gear	1	16	1
181016	Seal	1	17	1
181017	Crankcase W/Power Shaft	1	18	1
181018	Gasket — Oil Pan	1	19	1
181019	Pan — Oil	1	20	1
181020	Screw	5	1	2
181020	Screw	1	21	6
181021	O Ring	1	22	1
181023	Piston & Rod Assembly	1	*	1
181024	Engine Gasket Kit	1	*	1
181025	Screw — Valve Cover	2	1	1
181026	Hose — Breather	2	2	1
181027	Breather Assembly	2	3	1
181028	Cover — Valve	2	4	1
181029	Gasket — Valve Cover	2	5	1
181030	Nut — Rocker Adjusting	2	6	2
181031	Pivot — Rocker Arm	2	7	2
181032	Arm — Rocker	2	8	2
181033	Rod — Push	2	9	2
181034	Nut — Hex	2	10	2
181034	Nut —Hex	3	21	2
181035	Washer	2	11	2
181036	Guide — Push Rod	2	12	2
181037	Retainer — Valve Spring	2	13	2
181038	Spring — Valve	2	14	2
181039	Head — Cylinder	2	15	1
181040	Valve	2	16	2
181041	Cylinder Head Assembly	2	*	1
181042	Short Block Assembly	1	*	1
181042	Short Block Assembly	2	*	1
181043	Screw — Muffler Mounting	3	1	2
181044	Screw — Muffler Mounting	3	2	1
181045	Cover — Screen	3	4	1
181046	Screw — Screen Cover	3	5	1
181047	Muffler	3	6	1
181048	Gasket — Muffler	3	7	1
181049	Baffle — Muffler	3	8	1
181050	Screw — Air Filter Cover	3	9	3
181051	Cover — Air Filter	3	10	1
181052	Screw — Air Filter Base	3	12	2
181053	Screw	3	13	3
181055	Base — Air Filter	3	15	1
181056	Gasket	3	16	1
181059	Gasket	3	19	1
181060	Insulator — Carb. Mount	3	20	1
181061	Gasket — Intake	3	22	1
181062	Baffle — Intake	3	23	1
181064	Nut — Tinnerman	3	26	2
181065	Spacer	3	27	1
181066	Screw — Module	3	29	2
181067	Module — Ignition	3	31	1
181068	O.E.M. Carburetor Repair Kit	3	*	1
181069	Gasket — Diaphragm	3	*	1
181070	Screw	4	2	3
181070	Screw	5	6	6
181071	Housing — Clutch	4	3	1
181073	Clutch	4	6	1
181076	Retainer — Starter Pulley	4	12	1
181078	Retainer — Rope Guide	4	14	1
181079	Handle — Starter	4	16	1
181080	Screw — Fuel Tank Bracket	4	17	2
181081	Bracket — Fuel Tank	4	18	1
181084	Pad — Fuel Tank	4	21	1
181085	Fuel Line Assembly W/Filter	4	22	1
181086	Line — Fuel Return	4	23	1
181088	Cover — Engine	5	2	1
181089	Screw	5	3	1
181090	Handle Assembly	5	5	1
181091	Slide — Switch	5	7	1
181093	Cable — Throttle	5	8	1
181094	Lead — Wire 18	5	9	2
181094	Lead — Wire 18	3	32	2
181095	Screw — Anti—Rotation	5	10	1
181096	Trigger	5	13	1
181097	Switch	5	15	1
181098	Retainer — Switch & Trigger	5	16	1
181099	J—Handle Assembly	5	18	1
181101	Spout — Oil Fill	6	*	1
181102	Clutch Housing Assembly	4	8	1
181103	Decal — Kit	5	*	1
181104	Screw — Engine Cover	5	4	1
181537	Plug — Oil Fill	1	23	1
181538	Primer & Line Assembly	3	14	1
181539	Lever — Choke	3	17	2
181540	Carburetor W/Choke Lever	3	18	1
181541	Housing — Fan	3	25	1
181542	Tank — Fuel	4	19	1
181543	Cap — Fuel	4	20	1
181544	Screw	4	13	2
181545	Isolator	4	5	1
181546	Washer — Clutch	4	7	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
181549	Shaft – Flexible Drive	6	2	1
610314	Spring	5	14	1
610317	Spring	6	12	1
610318	Reel – Inner	6	13	1
610327	Clip – Shoulder Strap	5	11	1
610375	Monoflail Cutting Line	6	*	1
610660	Retainer	6	11	1
610676	Key – Flywheel	3	*	1
611061	Guide – Rope	4	15	1
611063	Tab – Ground	3	30	1
612021	Tube Closure	5	20	1
612468	Spring – Compression	4	1	1
612831	Grip	5	19	1
613102	Spring – Starter	4	9	1
613103	Rope – Starter	4	11	1
682061	Blade Assembly	6	8	1
682069	Bump Head Knob Assembly	6	14	1
682075	Shoulder Strap Assembly	6	*	1
683295	Handle Bracket Assembly	5	17	1
92–3297	Oil – Sae 30 100ml Bottle	6	*	1
92–3332	Decal – Hot Surface	5	22	1
92–3450	Spool & Line Assembly	6	*	1

*Not Illustrated