
FORM NO. 3315–351 Rev. B

TORO®

MODEL NO. 07073–30001 & UP
MODEL NO. 07174–30001 & UP

PARTS CATALOG

66" RAKE–O–VAC® SWEEPER

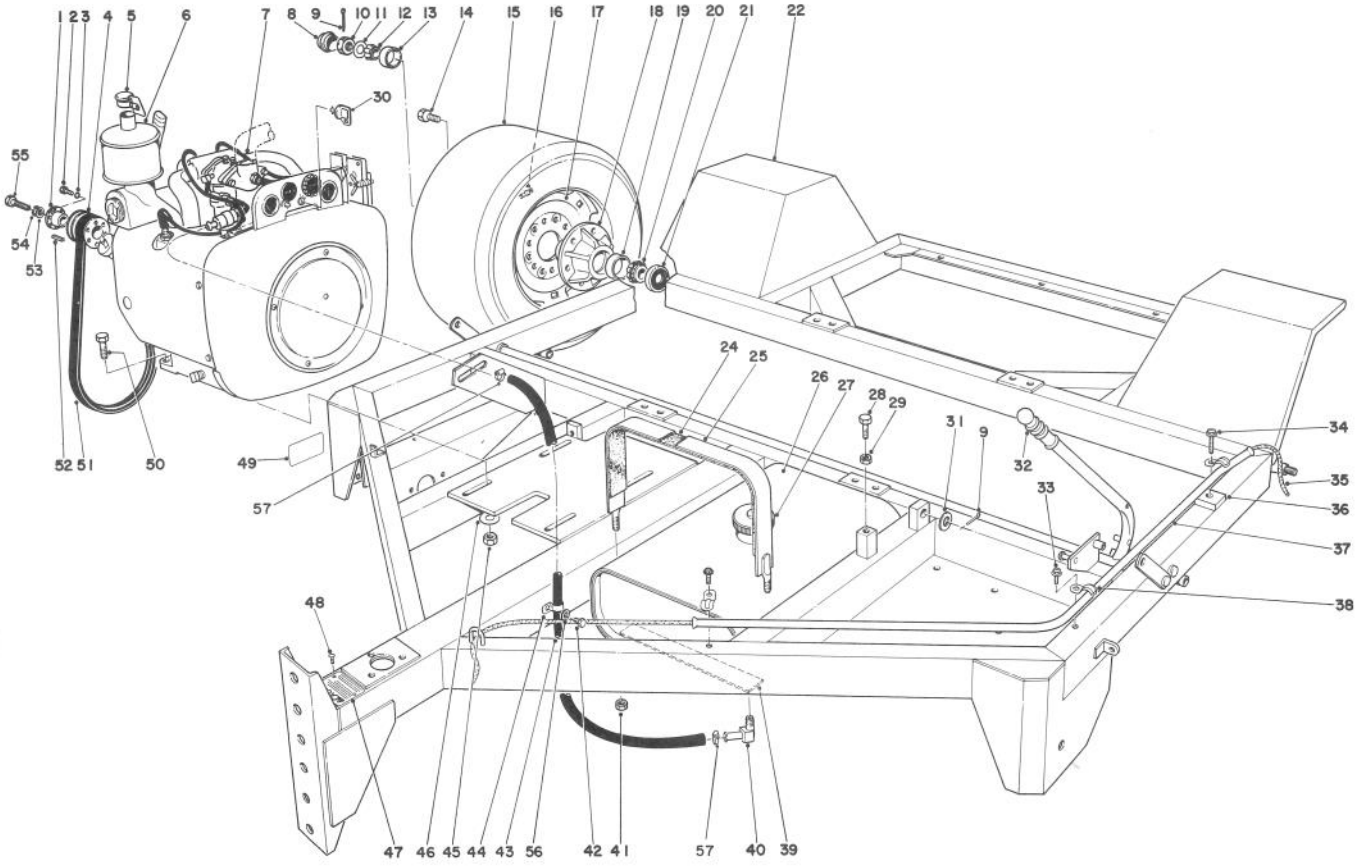


T–0006

ENGINE AND FRAME ASSEMBLY (Model No. 07073)

Ref. No.	Part No.	Description	No. Used
1	13–3330	Bushing (Incl. Ref. #2 & 3)	1
2	321–6	Screw – Cap, Hex. Hd.	3
3	3253–3	Washer – Lock	3
4	13–3320	Pulley	1
5	13–6710	Cap – Weather, Muffler	1
6	13–6720	Muffler	1
7	67–9420	Engine	1
8	242–55	Cap – Hub	2
9	3272–17	Pin – Cotter	3
10	32136–1	Nut – Slotted	2
11	3256–29	Washer – Flat	2
12	254–62	Cone – Bearing	2
13	254–61	Cup – Bearing	2
14	217–103	Bolt – Wheel	12
15	231–118	Tire	2
16	232–24	Stem – Valve	2
17	62–3220	Wheel Assembly	2
18	242–54	Hub (Incl. Ref. #13 & 19)	2
19	254–66	Cup – Bearing	2
20	254–65	Cone – Bearing	2
21	253–127	Seal	2
22	13–5000	Main Frame	1
24	13–3970	Felt Strip	2
25	13–3960	Strap Assy. (Incl. Ref. #24)	2
26	13–3930	Tank – Gas	1
27	222–8	Cap – Gas	1
28	323–8	Screw – Cap, Hex. Hd.	1
29	3218–3	Nut – Jam	1
30	63–8360	Key	2
31	3256–28	Washer – Flat	1
32	235–15	Grip – Handle	1

© The TORO Company – 1993, Rev. 1994
All Rights Reserved

TPS

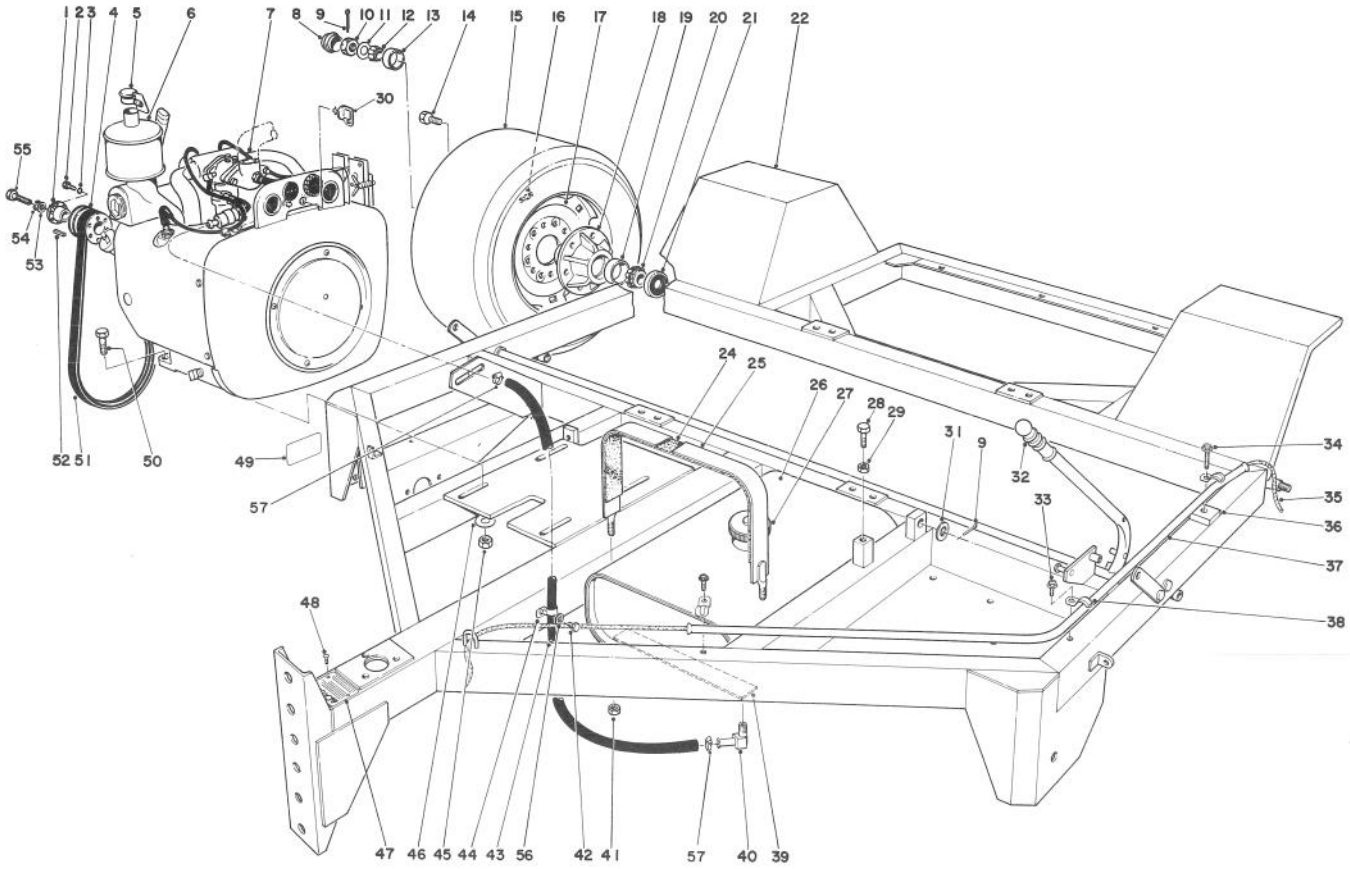


T–0006

ENGINE AND FRAME ASSEMBLY (Model No. 07073) (Continued)

Ref. No.	Part No.	Description	No. Used
33	32104–95	Screw – Self Tapping	2
34	32104–96	Screw – Self Tapping	1
35	20–9580	Rope	1
36	13–6910	Spacer – Guide , Rope	1
37	13–6890	Guide – Rope	1
38	2412–40	Clamp – Conduit	3
39	13–3970	Strip – Felt	2
40	304–75	Fitting – Tube	1
41	32153–3	Nut – Lock	4
42	32104–109	Screw	1
43	63–7721	Hose – Fuel Line	1
44	2412–93	Clamp	1
45	3296–23	Nut – Lock	4

Ref. No.	Part No.	Description	No. Used
46	3256–26	Washer – Flat	4
47	13–7460	Plate – Plate	1
48	3290–55	Rivet – Pop	4
49	67–5360	Decal	1
50	325–7	Screw – Cap, Hex. Hd.	4
51	13–2650	V–Belt	1
52	3–9155	Key – Square	1
53	4–1920	Washer	1
54	3253–21	Washer – Lock	1
55	323–10	Screw – Cap, Hex. Hd.	1
56	3256–22	Washer – Flat	1
57	2412–108	Clamp – Hose	2

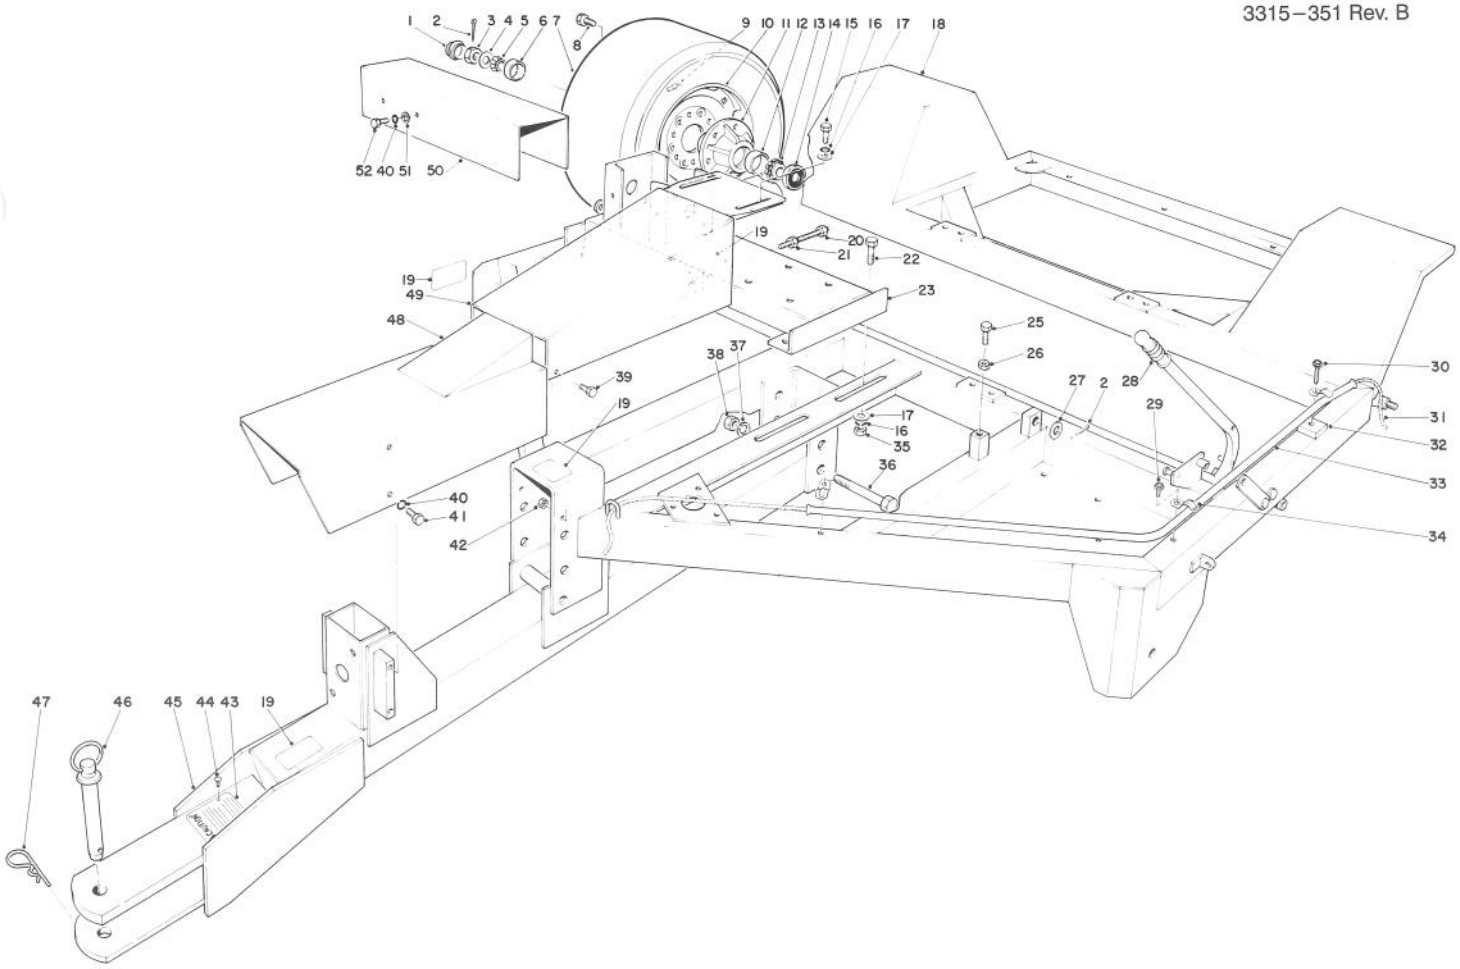


T–0009

FRAME ASSEMBLY (Model No. 07174)


Ref. No.	Part No.	Description	No. Used
1	242–55	Cap – Hub	2
2	3272–17	Pin – Cotter	3
3	32136–1	Nut – Slotted	2
4	3256–29	Washer – Flat	2
5	254–62	Cone – Bearing	2
6	254–61	Cup – Bearing	2
7	231–118	Tire	2
8	217–103	Bolt – Wheel	12
9	232–24	Stem – Valve	2
10	62–3220	Wheel Assembly	2
11	242–54	Wheel – Hub (Incl. Ref. #6 & 12)	2
12	254–66	Cup – Bearing	2
13	254–65	Cone – Bearing	2
14	253–127	Seal	2
15	325–3	Screw – Cap, Hex. Hd.	2
16	3253–7	Washer – Lock	6
17	3256–26	Washer – Flat	6
18	13–6120	Frame	1
19	67–5360	Decal – Caution	4
20	13–6240	Rod – Adjustment	1
21	3218–6	Nut – Jam	1
22	325–5	Screw – Cap, Hex. Hd.	4
23	13–6000	Base – Box, Gear	1
25	323–8	Screw – Cap, Hex. Hd.	1
26	3218–3	Nut – Jam	1
27	3256–28	Washer – Flat	1

Ref. No.	Part No.	Description	No. Used
28	235–15	Grip – Handle	1
29	32104–95	Screw – Self–Tapping	2
30	32104–96	Screw – Self–Tapping	1
31	20–9580	Rope	1
32	13–6910	Spacer – Guide, Rope	1
33	13–6890	Guide – Rope	1
34	2412–40	Clamp – Conduit	3
35	3217–9	Nut – Hex	4
36	328–23	Bolt – Hex. Hd.	2
37	3253–9	Washer – Lock	2
38	3217–12	Nut – Hex	2
39	323–2	Screw – Cap, Hex. Hd.	2
40	3253–21	Washer – Lock	6
41	323–2	Screw – Cap, Hex. Hd.	4
42	32153–2	Nut – Lock	2
43	13–7460	Plate – Caution	1
44	3259–15	Screw – Drive	4
45	13–4310	Tongue	1
46	13–6200	Pin – Hitch (Incl. Ref. #47)	1
47	3290–343	Pin – Hair, Cotter	1
48	13–5870	Shield – Front	1
49	13–5880	Shield – Shaft, Drop	1
50	13–5790	Shield – Shaft	1
51	3256–24	Washer – Flat	4
52	325–5	Screw – Cap, Hex. Hd.	4

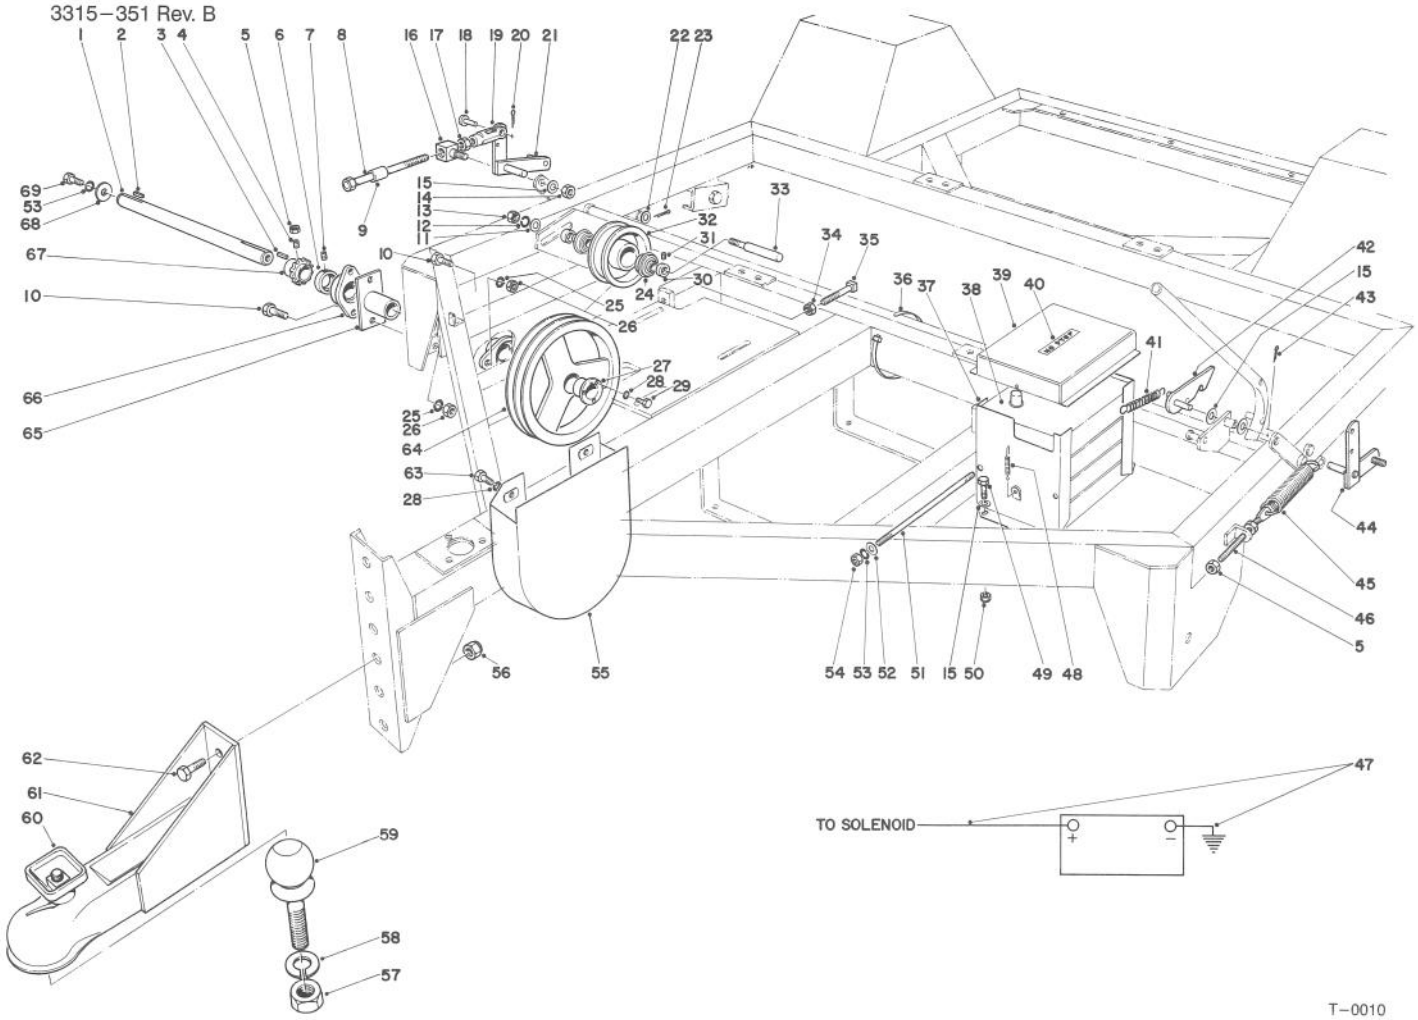

JACKSHAFT & LIFTING MECHANISM (Model No. 07073)

Ref. No.	Part No.	Description	No. Used
1	13–3740	Shaft – Jack	1
2	13–2840	Key – Square	1
3	13–6330	Key – Square	1
4	3247–4	Screw – Set	2
5	3218–3	Nut – Jam	6
6		Collar – Locking	2
7		Screw – Set	2
8	13–6260	Screw – Adjustment	2
9	13–5520	Spacer	2
10	324–7	Screw – Cap, Hex. Hd.	4
11	3256–26	Washer – Flat	1
12	3253–7	Washer – Lock	1
13	3217–9	Nut – Hex	1
14	32153–2	Nut – Lock	2
15	3256–24	Washer – Flat	7
16	13–0100	Block – Pivot	2
17	3219–3	Nut – Hex	2
18	283–2	Pin – Clevis	2
19	282–22	Clevis	2
20	3272–10	Pin – Cotter	2
21	13–5490	Bell Crank – Lift, R.H.	1
22	3256–28	Washer – Flat	2
23	3272–22	Pin – Cotter	2
24	56–6210	Bearing (Incl. Ref. #30 & 31)	2
25	3253–6	Washer – Lock	4
26	3217–8	Nut – Lock	4
27	13–2680	Bushing (Incl. Ref. #28 & 29)	1
28	3253–4	Washer – Lock	5
29	322–7	Screw – Cap, Hex. Hd.	3
30		Collar – Locking	2
31		Screw – Set	2
32	13–0600	Pulley – Idler (Incl. Ref. #24)	1
33	13–0510	Pin – Idler	1
34	3218–5	Nut – Hex.	1
35	3244–21	Screw – Set	1
36	250–5	Strap – Locking	2
37	3–5967	Support – Battery	2
38	55–7290	Battery	1
39	3–3175	Cover – Battery	1
40	61–5950	Decal	1
41	13–0480	Spring	1
42	13–3990	Handle – Trip	1
43	3272–10	Pin – Cotter	1
44	13–5500	Bell Crank – Lift, L.H.	1
45	13–0050	Spring	2
46	13–5530	Rod – Adjustment, Spring	2
47	13–6790	Cable – Battery	2
48	3–8135	Spring	2
49	323–5	Screw – Cap, Hex. Hd.	4

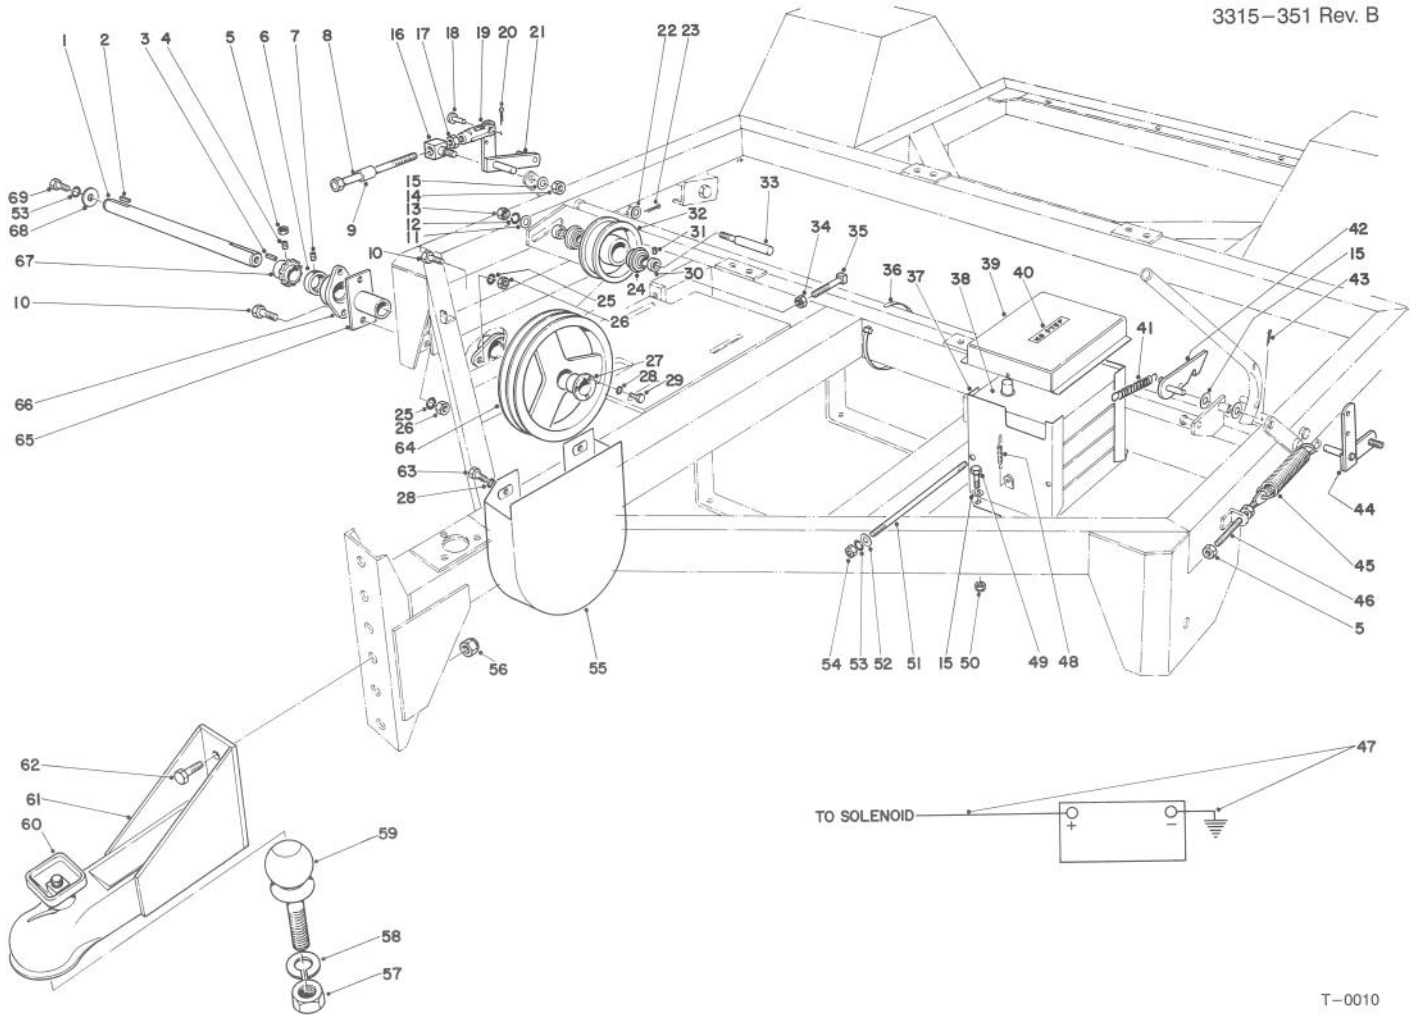


JACKSHAFT & LIFTING MECHANISM (Model No. 07073) (Continued)

Ref. No.	Part No.	Description	No. Used
50	3296–39	Nut – Lock	4
51	5–0678	Rod – Clamp, Battery	2
52	3256–22	Washer – Flat	4
53	3253–3	Washer – Lock	5
54	3217–5	Nut – Hex.	4
55	13–4490	Guard – Sheave	1
56	3296–53	Nut – Lock	2
57	3217–12	Nut – Hex.	1
58	3253–9	Washer – Lock	1
59	49–4260	Ball	1
†60	13–3080	Kit – Coupler, Ball	1

Ref. No.	Part No.	Description	No. Used
61	13–0060	Yoke – Hitch (Incl. Ref. #57 & 58)	1
62	327–6	Screw – Cap, Hex. Hd.	2
63	322–7	Screw – Cap, Hex. Hd.	2
64	13–2670	Sheave	1
65	63–5210	Spindle – Driveside	1
66	56–6230	Bearing (Incl. Ref. #6 & 7)	2
67	13–4340	Sprocket	1
68	13–3710	Washer	1
69	321–4	Screw – Cap, Hex. Hd.	1

†Service Replacement Part

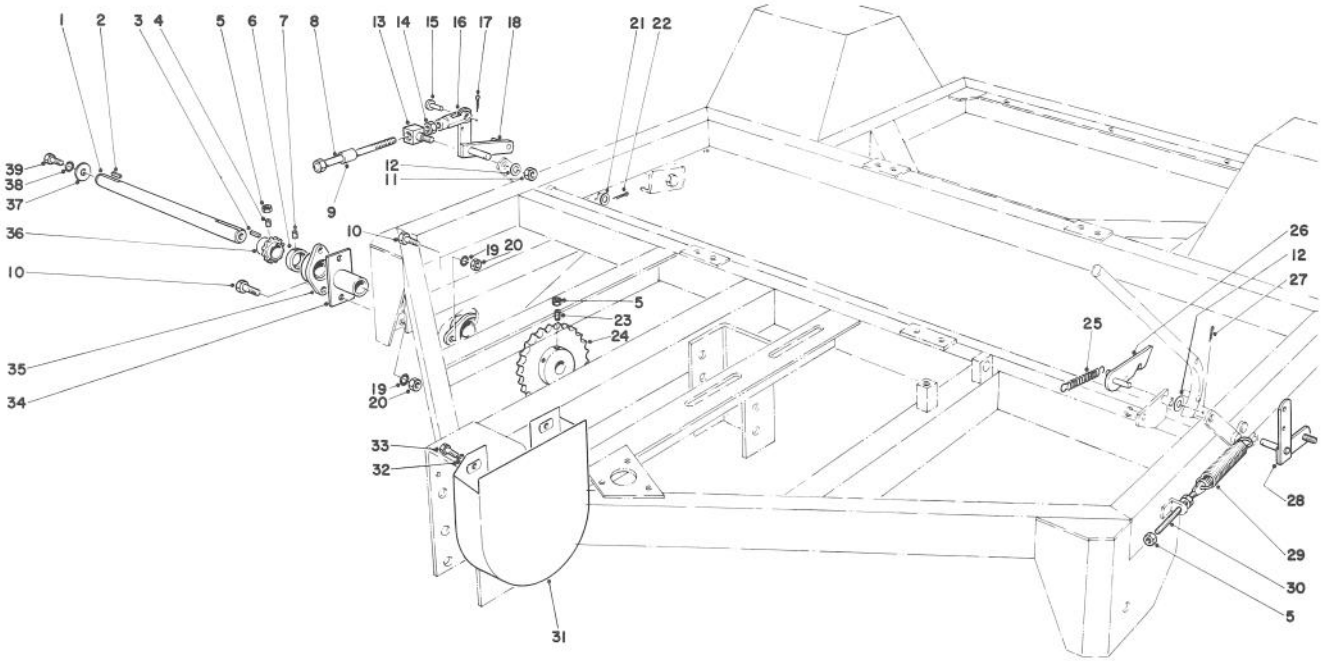


T–0011A

JACKSHAFT & LIFTING MECHANISM (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	13–3740	Shaft – Jack	1
2	13–2840	Key – Square	1
3	5–1718	Key – Square	1
4	3247–4	Screw – Set	2
5	3218–3	Nut – Jam	8
6		Collar – Lock	2
7		Screw – Set	2
8	13–6260	Bolt – Adjustment	2
9	13–5520	Spacer	2
10	324–7	Screw – Cap, Hex. Hd.	4
11	32153–2	Nut	2
12	3256–24	Washer – Flat	2
13	13–0100	Block – Pivot	2
14	3219–3	Nut – Hex.	2
15	283–2	Pin – Clevis	2
16	282–22	Clevis	2
17	3272–10	Pin – Cotter	2
18	13–5490	Bell Crank – Lift, R.H.	1
19	3253–6	Washer – Lock	4
20	3217–8	Nut – Hex.	4

Ref. No.	Part No.	Description	No. Used
21	3256–28	Washer – Flat	2
22	3272–22	Pin – Cotter	2
23	3247–6	Screw – Set	2
24	13–4880	Sprocket	1
25	13–0480	Spring	1
26	13–3990	Handle – Trip	1
27	3272–10	Pin – Cotter	1
28	13–5500	Bell Crank – Lift, L.H.	1
29	13–0050	Spring	2
30	13–5530	Rod – Adjustment, Spring	2
31	13–4490	Guard – Sheave	1
32	3253–4	Washer – Lock	2
33	322–7	Screw – Cap, Hex. Hd.	2
34	63–5210	Spindle – Driveside	1
35	56–6230	Bearing (Incl. Ref. #6 & 7)	2
36	13–4340	Sprocket	1
37	13–3710	Washer – Special	1
38	3253–3	Washer – Lock	1
39	321–4	Screw – Cap, Hex. Hd.	1

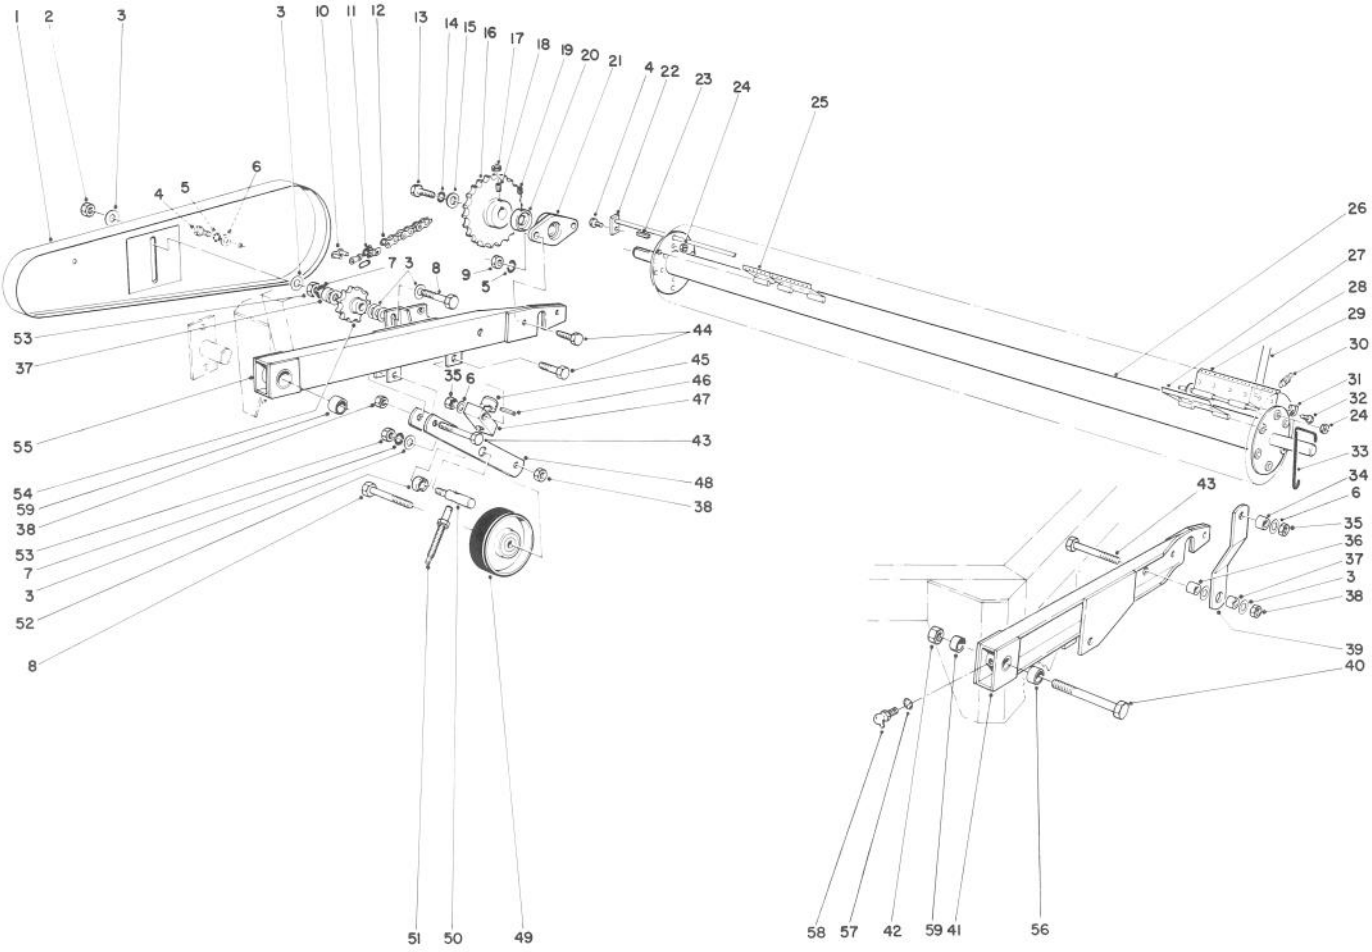


T–0012

GAUGE WHEEL & TRAILING ARM

Ref. No.	Part No.	Description	No. Used
1	13–5620	Guard – Chain	1
2	3296–45	Nut – Lock	1
3	3256–26	Washer – Flat	10
4	323–4	Screw – Cap, Hex. Hd.	7
5	3253–21	Washer – Lock	5
6	3256–24	Washer – Flat	5
7	3253–7	Washer – Lock	3
8	325–14	Screw – Cap, Hex. Hd.	3
9	3217–7	Nut – Hex.	4
10	2710–11	Link – Connecting	1
11	2710–15	Link – Offset	1
12	13–4070	Chain	1
13	321–4	Screw – Cap, Hex. Hd.	1
14	3253–3	Washer – Lock	1
15	13–3710	Washer – Special	1
16	13–4890	Sprocket	1
17	3218–3	Nut – Jam	2
18	3247–6	Screw – Set	2
19		Screw – Set	2
20		Collar – Locking	2
21	56–6230	Bearing (Incl. Ref. #19 & 20)	2
22	13–4960	Shaft – Plate, Finger	6
23	13–2840	Key – Square	1
24	32152–2	Nut – Lock	12
25	13–4930	Plate – Finger	3

Ref. No.	Part No.	Description	No. Used
26	13–5250	Rake – Reel	1
27	13–2451	Plate – Finger	60
28	13–4940	Plate – Finger	3
29	13–6700	Finger – Nylon	276
30	13–3090	Spring	66
31	13–2480	Clamp – Finger	276
32	32140–94	Screw – Cap, Hex. Hd.	276
33	13–5700	Hook – Transport	2
34	13–0560	Spacer	2
35	32153–2	Nut	4
36	13–0360	Spacer	2
37	13–3070	Spacer	3
38	32153–5	Nut	6
39	13–5540	Link – Lift	2
40	328–10	Bolt – Hex. Hd.	1
41	63–5300	Trailing Arm–L.H. (Incl. Ref. #59)	1
42	32153–6	Nut	1
43	325–9	Screw – Cap, Hex. Hd.	4
44	323–9	Screw – Cap, Hex. Hd.	6
45	13–0320	Collar – Lock	2
46	32121–45	Pin – Roll	2
47	13–0330	Block – Pivot	2
48	13–5550	Arm – Gauge Wheel	2
49	13–2870	Wheel – Gauge	2
50	13–5570	Stud – Pivot	2

*Not Illustrated

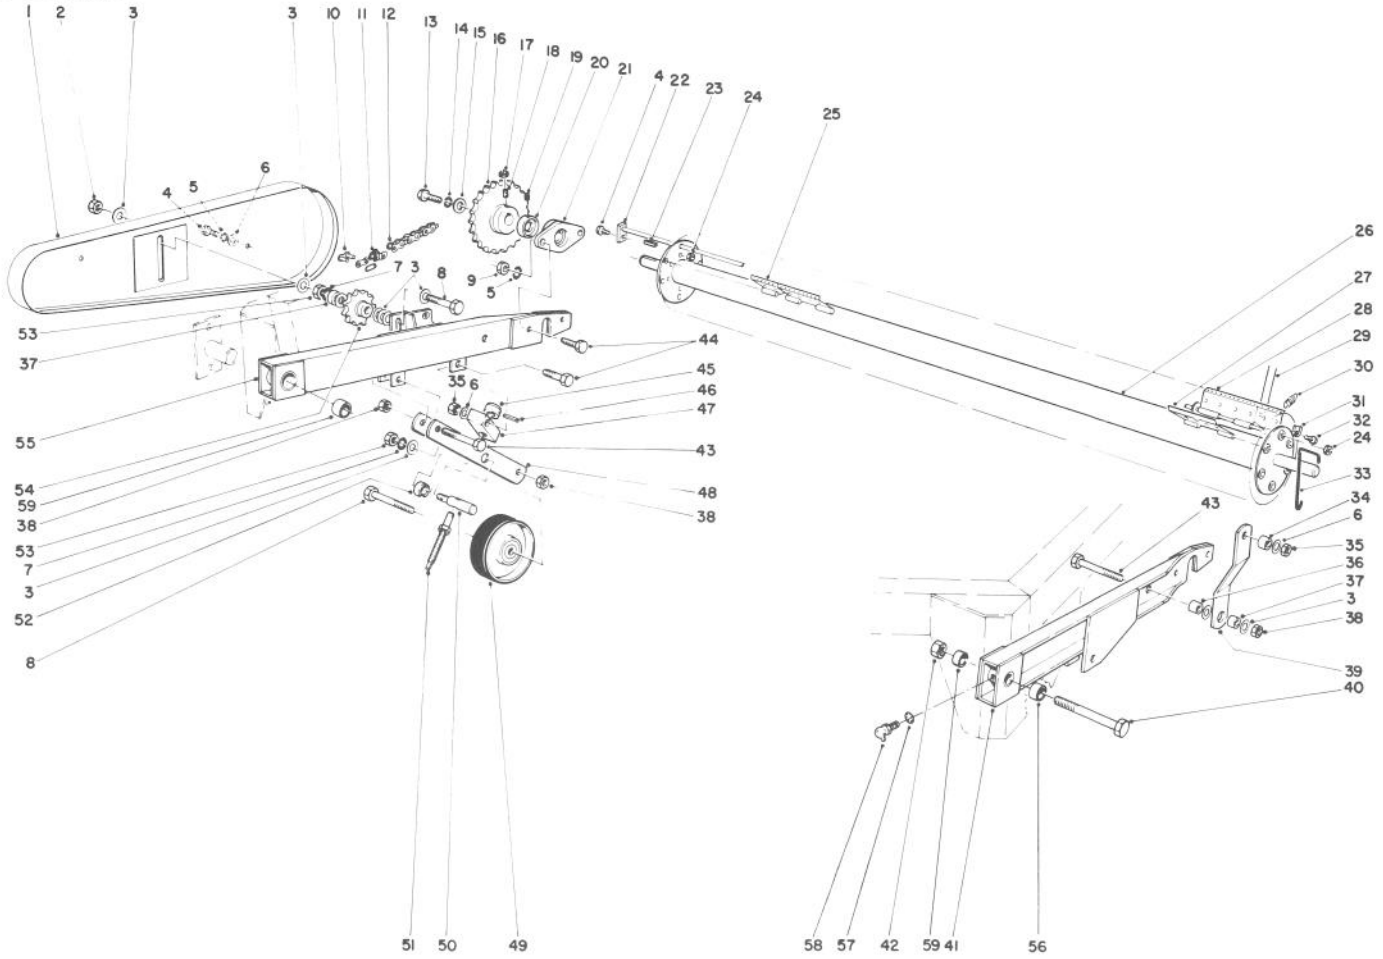


T–0012

GAUGE WHEEL & TRAILING ARM (Continued)

Ref. No.	Part No.	Description	No. Used
51	13–5590	Rod – Adjustment	2
52	13–5670	Spacer – Locking	2
53	3217–9	Nut – Hex.	3
54	13–3020	Sprocket	1
55	63–5200	Trailing Arm–R.H. (Incl. Ref. #59)	1

Ref. No.	Part No.	Description	No. Used
56	63–5250	Spacer	1
57	3254–8	Washer – Lock, Int. Tooth	2
58	302–60	Fitting – Grease	2
59	256–298	Bushing	2
	13–5370	Flex Tip Reel Assembly (Inc. Ref. #13–33)	1

*Not Illustrated

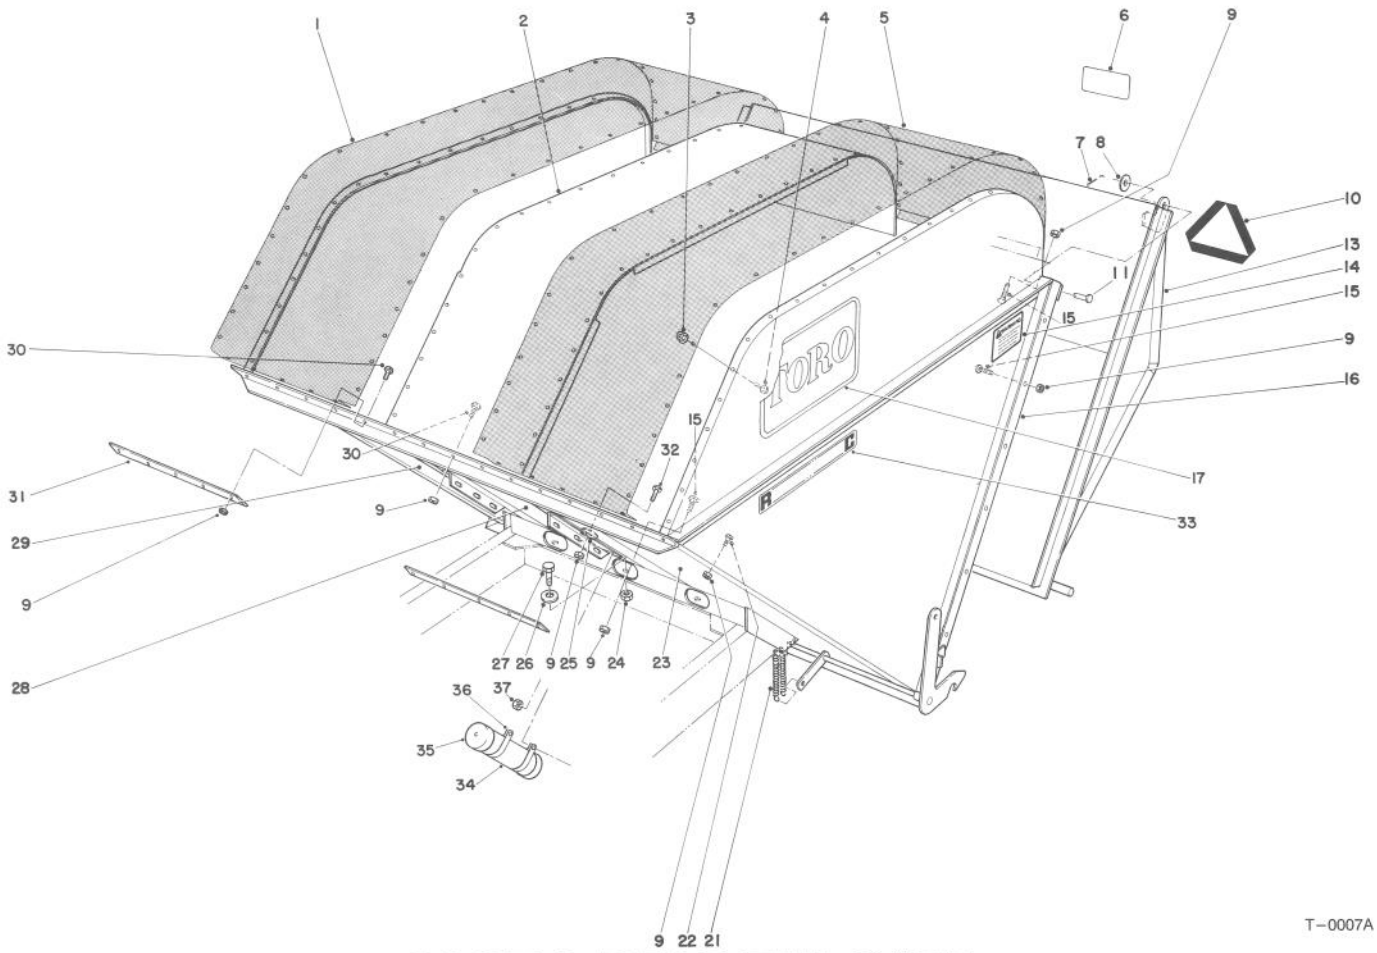


T–0007A

CAGE & REAR TAILGATE

Ref. No.	Part No.	Description	No. Used
1	13–7380	Screen – Top, R.H.	1
2	13–7140	Panel – Top	1
3	32128–17	Nut – Lock, Flange Hd.	104
4	3290–144	Screw – Hex. Flange Hd.	104
5	13–7390	Screen – Top, L.H.	1
6	13–6760	Decal – Caution	1
7	3272–12	Pin – Cotter	3
8	3256–27	Washer – Flat	A/R
9	32128–32	Nut – Lock	103
10	13–2930	Decal – Slow Moving Vehicle	1
11	283–39	Pin – Clevis	3
13	13–7180	Gate	1
14	13–7430	Decal –Warning	1
15	3229–7	Bolt – Carriage	50
16	13–7400	Hinge – Bracket	3
17	67–7920	Decal – Toro	2
21	12–8810	Spring	2
22	32122–42	Screw – Machine	36

Ref. No.	Part No.	Description	No. Used
23	13–7360	Panel – Bottom, L.H.	1
24	3296–23	Nut – Lock	3
25	13–3710	Washer – Flat	2
26	3256–26	Washer – Flat	3
27	325–6	Screw – Cap, Hex. Hd.	3
28	13–7370	Panel – Bottom, (Middle)	1
29	13–7350	Panel – Bottom, (R.H.)	1
30	3250–32	Screw – Cap, Hex. Hd.	15
31	42–9930	Strap – Hopper	2
32	3258–165	Screw – Rd. Hd.	2
33	67–9770	Decal – Hopper	2
34	65–5871	Tube – Manual	1
35	65–5890	Cap – Tube	2
36	2412–102	R–Clamp	2
37	32153–2	Nut – Lock	2
*	92–2409	Cage Assembly (Incl. Ref. #1–33)	1

*Not Illustrated

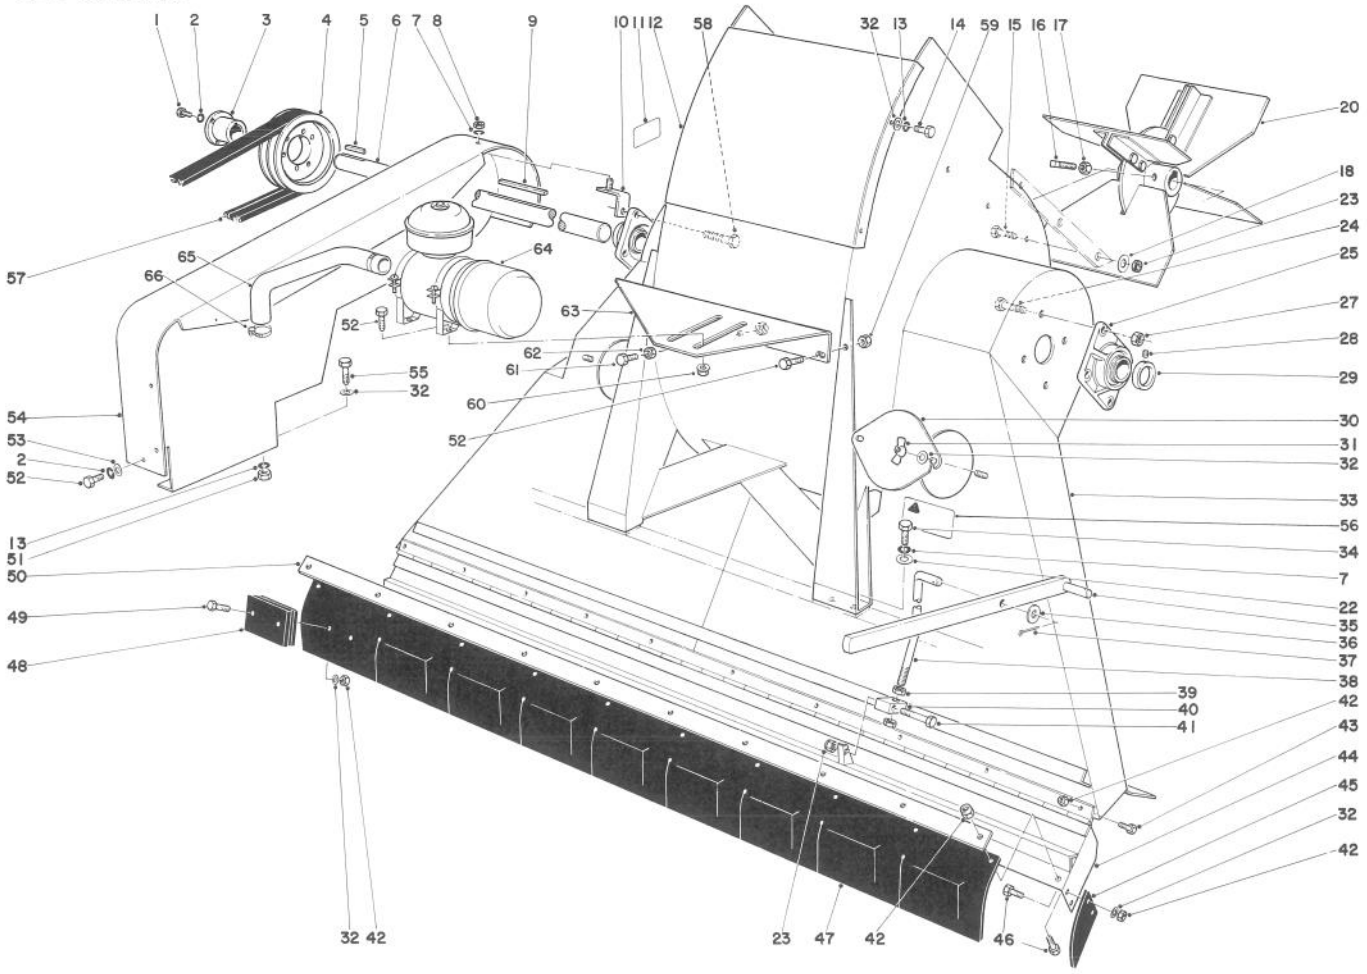


T–0005A

BLOWER & THROAT ASSEMBLY (Model No. 07073)

Ref. No.	Part No.	Description	No. Used
1	322–7	Screw – Cap, Hex. Hd.	3
2	3253–4	Washer – Lock	4
3	13–2970	Bushing (Incl. Ref. #1 & 2)	1
4	13–2800	Pulley	1
5	13–2240	Key – Square	1
6	13–3790	Shaft – Fan	1
7	3253–21	Washer – Lock	9
8	3217–7	Nut – Hex.	1
9	13–2810	Key – Square	1
10	13–3350	Support – Shield	1
11	67–5360	Decal	1
12	13–3850	Plate – Blower Access	1
13	3253–3	Washer – Lock	6
14	321–4	Screw – Cap, Hex. Hd.	4
15	323–7	Screw – Cap, Hex. Hd.	6
16	3244–14	Screw – Set, – Sq. Hd.	4
17	3218–5	Nut – Jam	4
20	13–3420	Fan Assembly	1
22	3256–24	Washer – Flat	14
23	3296–39	Nut – Lock	7
24	325–6	Screw – Cap, Hex. Hd.	7
25	56–6220	Bearing (Incl. Ref. #28 & 29)	2
27	32153–5	Nut – Lock	8
28		Screw – Set	2

Ref. No.	Part No.	Description	No. Used
29		Collar – Locking	2
30	13–1420	Cover – Inspection	2
31	32103–12	Nut – Wing	4
32	3256–22	Washer – Flat	32
33	13–6280	Blower (Incl. Ref. #12–14 & 30–32)	1
34	323–6	Screw – Cap, Hex. Hd.	8
35	13–6390	Handle – Flap	1
36	3256–27	Washer – Flat	1
37	3272–12	Pin – Cotter	1
38	13–6360	Rod – Lift	1
39	3218–6	Nut – Jam	2
40	13–0330	Block – Pivot	1
41	323–9	Screw – Cap, Hex. Hd.	1
42	3296–42	Nut – Lock	42
43	321–3	Screw – Cap, Hex. Hd.	10
44	13–4760	Flap – Lower	1
45	13–3130	Flap – End	2
46	321–5	Screw – Cap, Hex. Hd.	14
47	13–4700	Flap (Incl. Ref. #23, 42, 48–49)	1
48	13–4560	Weight – Flap	18
49	321–8	Screw – Cap, Hex. Hd.	18
50	13–1390	Retainer – Flap	1
51	3217–5	Nut – Hex.	2
52	322–1	Screw – Cap, Hex. Hd.	7

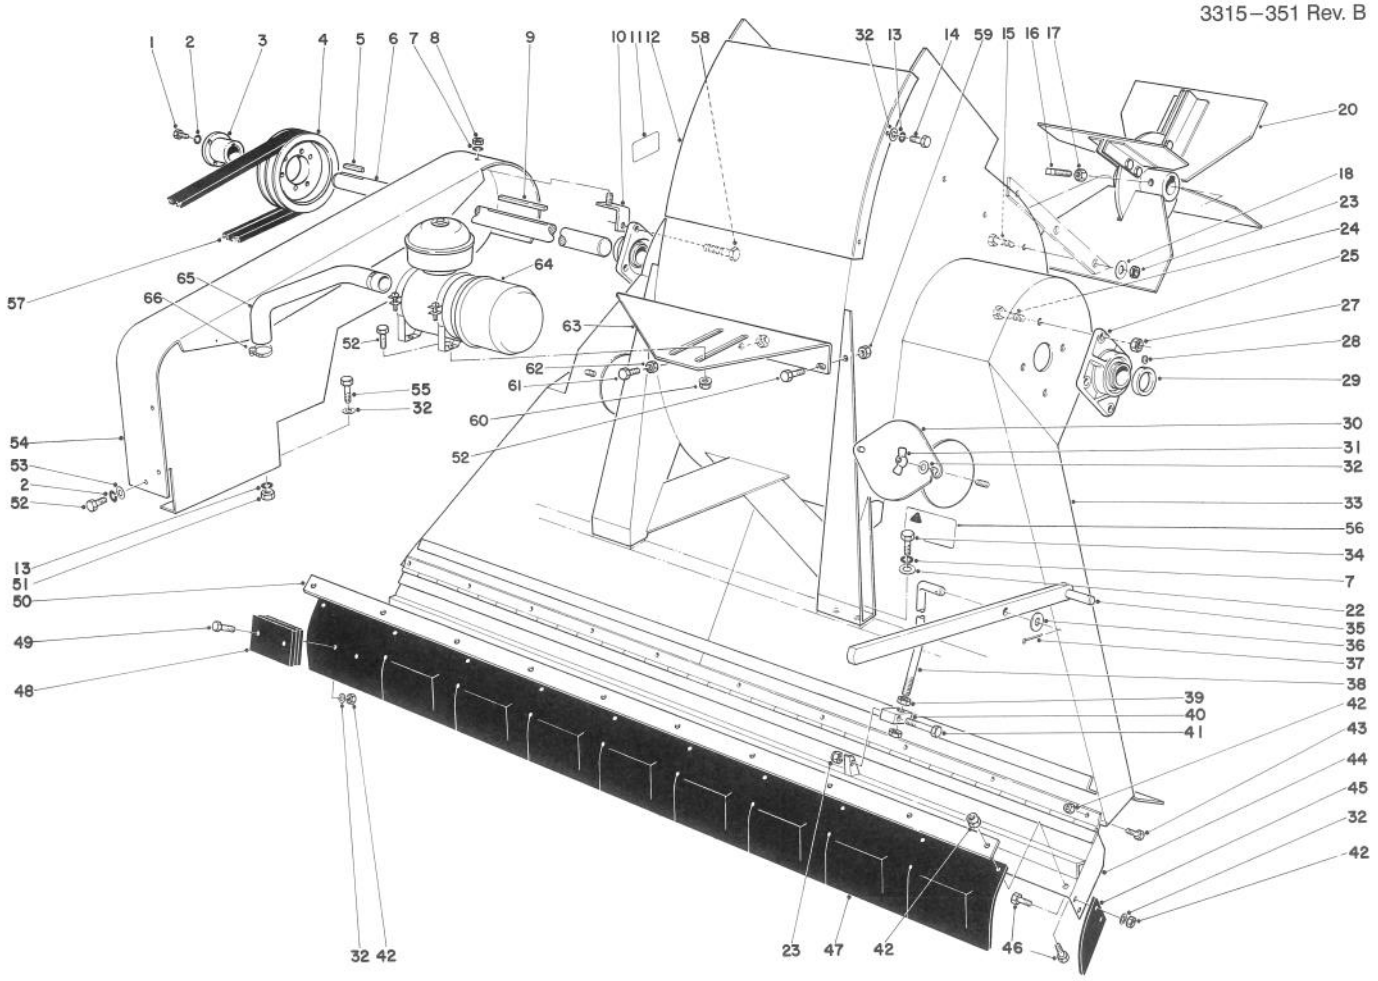


T–0005A

BLOWER & THROAT ASSEMBLY (Model No. 07073) (Continued)

Ref. No.	Part No.	Description	No. Used
53	3256–23	Washer – Flat	1
54	13–4800	Guard – Belt	1
55	321–4	Screw – Cap, Hex. Hd.	2
56	13–6410	Decal	1
57	13–2640	Belt	1
58	325–7	Screw – Cap, Hex. Hd.	1
59	32153–3	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
60	32128–25	Nut – Lock, Flange	4
61	322–5	Screw – Cap, Hex. Hd.	1
62	3218–2	Nut – Jam	2
63	67–9730	Bracket – Air Cleaner	1
64	8–2329	Air Cleaner Assembly	1
65	53–8591	Hose – Air Cleaner	1
66	2412–42	Clamp	2

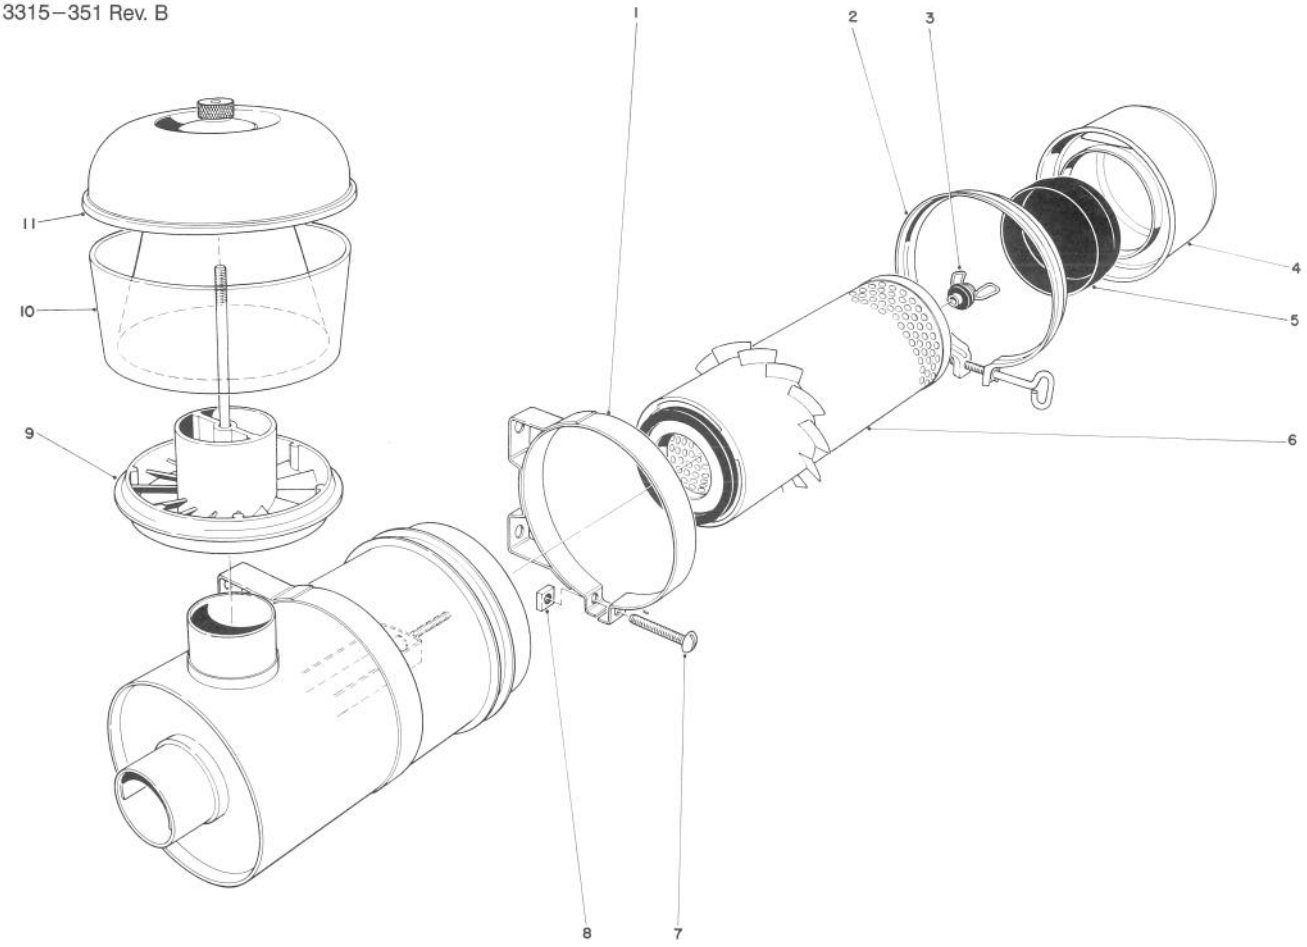


T–0019

AIR CLEANER ASSEMBLY NO. 8–2329

Ref. No.	Part No.	Description	No. Used
1	33–1350	Assembly – Band, Mounting	2
2	33–1340	Assembly – Clamp	1
3	33–1330	Assembly – Nut	1
4	33–1320	Assembly – Cup	1
5	33–1310	Baffle	1
6	33–1300	Assembly – Element	1
7	3258–19	Screw – Machine	2
8	32107–11	Nut – Square	2
9	33–1280	Assembly – Sleeve	1
10	33–1270	Bowl – Clear	1
11	33–1260	Assembly – Cover	1
*	27–7220	Detergent – Cleaning, Air Filter Element (4 lb. box)	A/R

*Not Illustrated

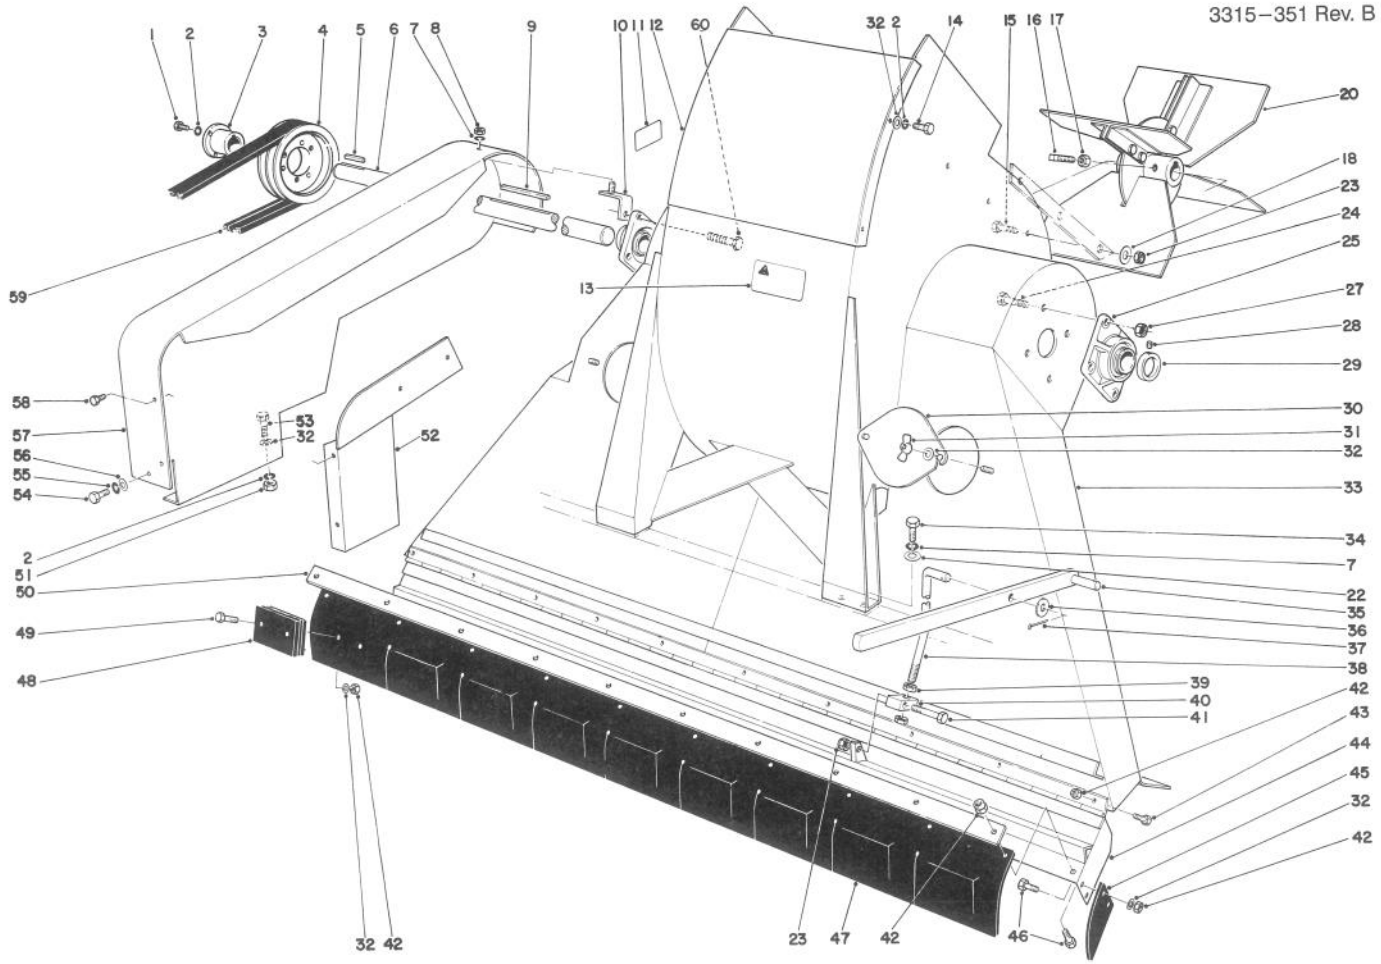


T–0013A

BLOWER & THROAT ASSEMBLY (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	321–13	Screw – Cap, Hex. Hd.	3
2	3253–3	Washer – Lock	9
3	13–6070	Bushing (Incl. Ref. #1 & 2)	1
4	13–6030	Pulley	1
5	13–2240	Key – Square	1
6	13–3790	Shaft – Fan	1
7	3253–21	Washer – Lock	9
8	3217–7	Nut – Hex	1
9	13–2810	Key – Square	1
10	13–3350	Bracket – Mounting	1
11	67–5360	Decal	1
12	13–3850	Plate – Blower Access	1
13	13–6410	Decal	1
14	321–4	Screw – Cap, Hex. Hd.	4
15	323–7	Screw – Cap, Hex. Hd.	6
16	3244–14	Screw – Set, Square Hd.	4
17	3218–5	Nut – Hex.	4
20	13–3420	Assembly – Fan	1
22	3256–24	Washer – Flat	14
23	3296–39	Nut – Lock	7
24	325–6	Screw – Cap, Hex. Hd.	7
25	56–6220	Bearing (Incl. Ref. #28 & 29)	2
27	32153–5	Nut – Lock	8
28		Screw – Set	2
29		Collar – Locking	2

Ref. No.	Part No.	Description	No. Used
30	13–1420	Cover – Inspection	2
31	32103–12	Nut – Wing	4
32	3256–22	Washer – Flat	32
33	13–6280	Blower and Throat (Incl. Ref. #2,12,14, & 30–32)	1
34	323–6	Screw – Cap, Hex. Hd.	8
35	13–6390	Handle – Flap	1
36	3256–27	Washer – Flat	1
37	3272–12	Pin – Cotter	1
38	13–6360	Rod – Lift	1
39	3218–6	Nut – Jam	2
40	13–0330	Block – Pivot	1
41	323–8	Screw – Cap, Hex. Hd.	1
42	3296–42	Nut – Lock	42
43	321–3	Screw – Cap, Hex. Hd.	10
44	13–4760	Flap – Lower	1
45	13–3130	Flap – End	2
46	321–5	Screw – Cap, Hex. Hd.	14
47	13–4700	Flap – Rubber (Incl. Ref. #32, 42, 48 & 49)	1
48	13–4560	Weight – Flap	18
49	321–8	Screw – Cap, Hex. Hd.	18
50	13–1390	Retainer – Flap	1
51	3217–5	Nut – Hex.	2
52	13–6090	Cover – Guard, Side	1
53	321–4	Screw – Cap, Hex. Hd.	2

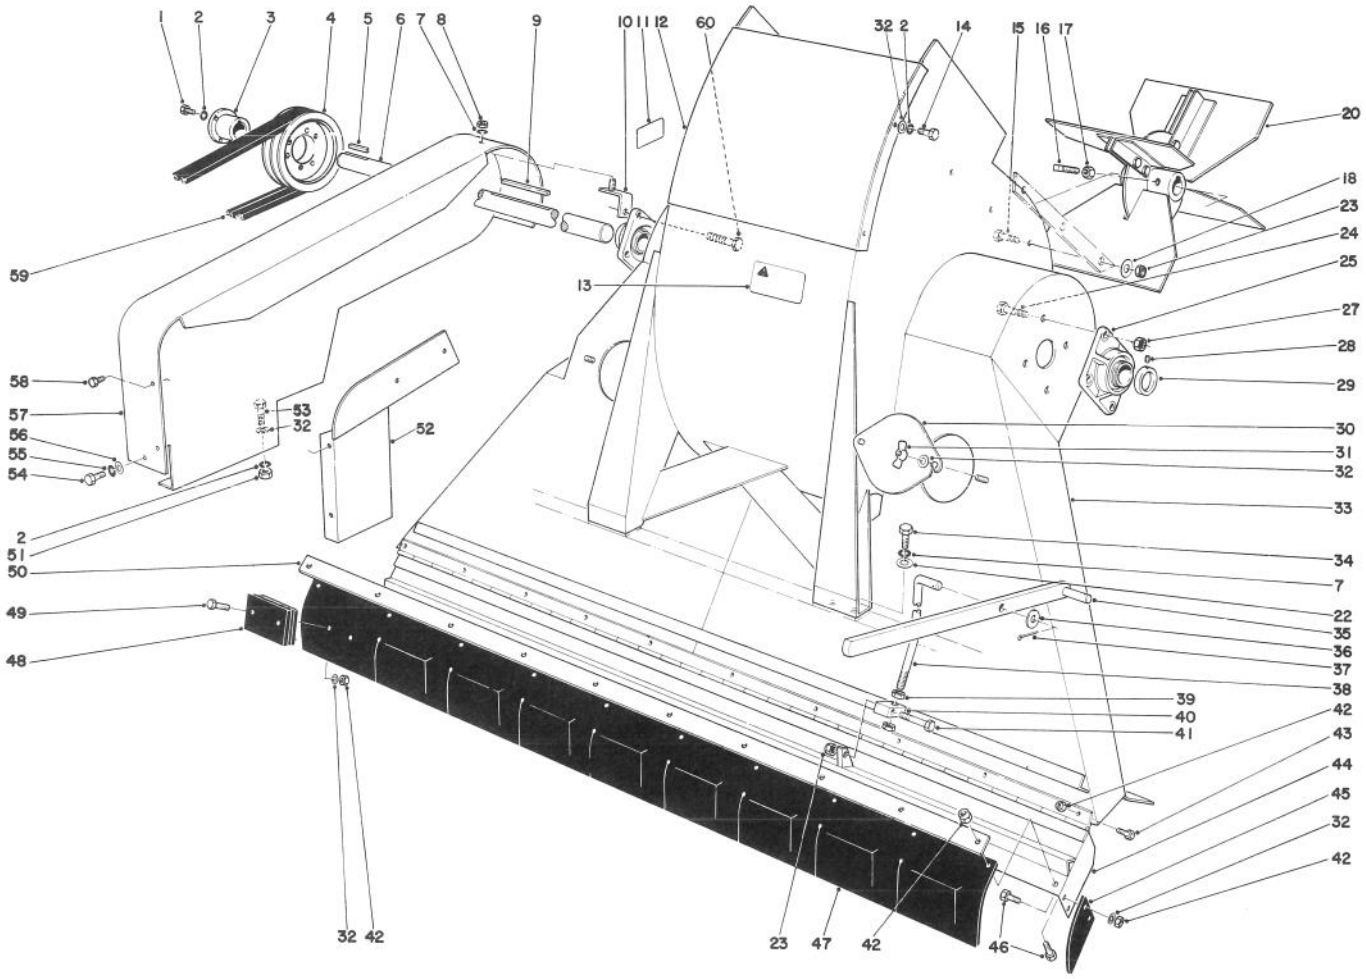


T–0013A

BLOWER & THROAT ASSEMBLY (Model No. 07174) (Continued)

Ref. No.	Part No.	Description	No. Used
54	322–1	Screw – Cap, Hex. Hd.	1
55	3253–4	Washer – Lock	1
56	3256–23	Washer – Flat	1
57	13–4800	Guard – Belt	1

Ref. No.	Part No.	Description	No. Used
58	32104–109	Screw – Cap, Hex. Hd.	4
59	13–2640	Belt	1
60	325–7	Screw – Cap, Hex. Hd.	1

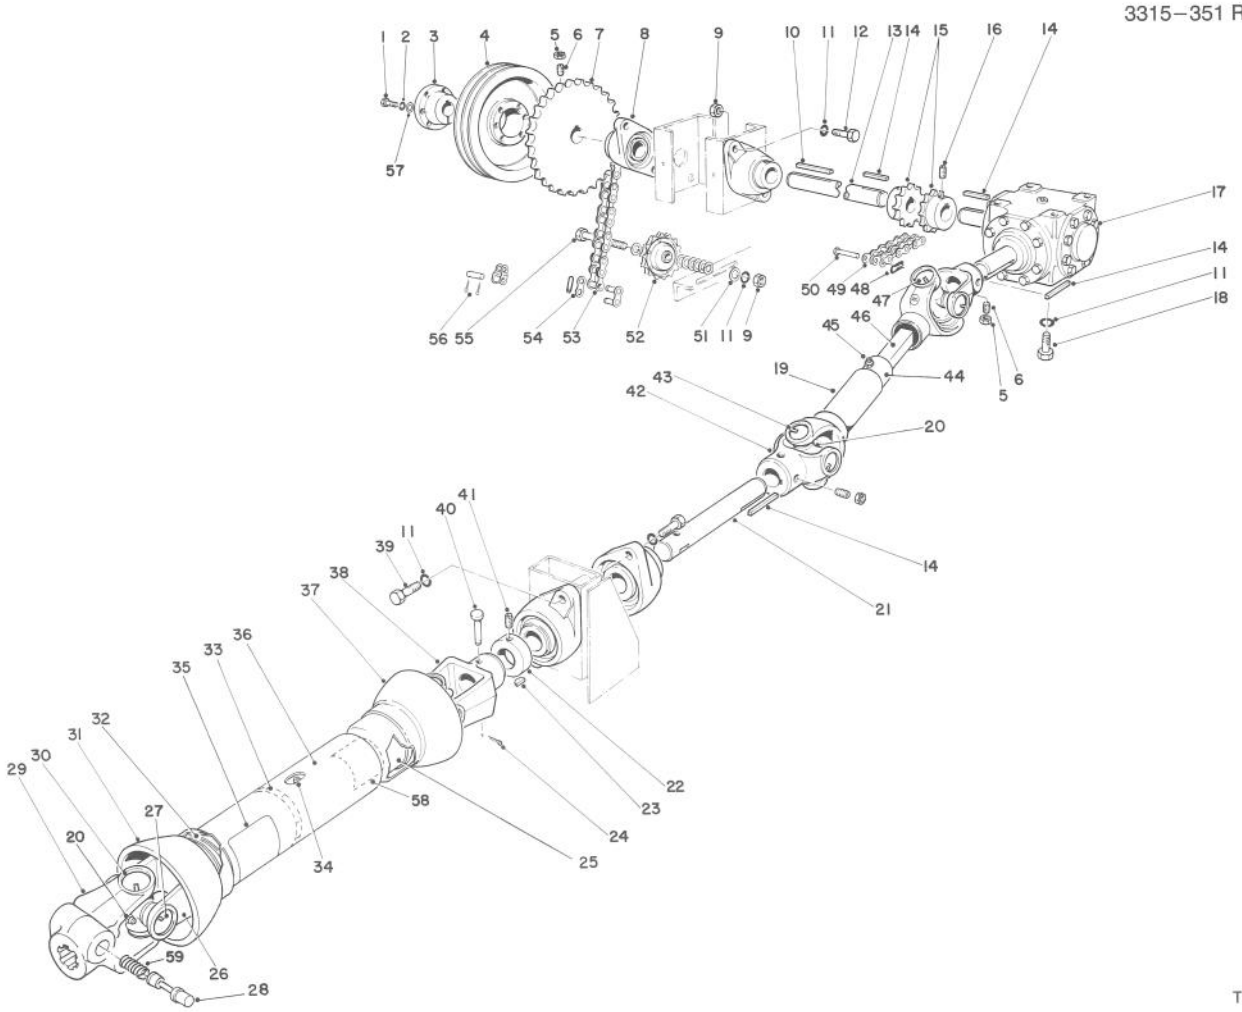


T–0008

DRIVE MECHANISM (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	322–7	Screw – Cap, Hex. Hd.	3
2	3253–4	Washer – Lock	3
3	13–6050	Bushing (Incl. Ref. #1 & 2)	1
4	13–6020	Sheave	1
5	3218–3	Nut – Jam	6
6	3247–6	Screw – Set	6
7	13–6110	Sprocket	1
8	56–6250	Bearing (Incl. Ref. #22 & 41)	4
9	3217–9	Nut – Hex.	5
10	13–3720	Key – Square	1
11	3253–7	Washer – Lock	13
12	325–6	Screw – Cap, Hex. Hd.	4
13	13–5910	Shaft – Drive, Side	1
14	5–0738	Key – Square	4
15	13–6690	Coupling Half	2
16	3247–3	Screw – Set	4
17	70–2350	Gear Box – Complete	1
18	325–4	Screw – Cap, Hex. Hd.	4
19	42–1870	Rear Shaft Assembly (Inc. Ref. #20 & 42–47)	1
20	2115–80	Fitting – Grease	4
21	13–5900	Shaft – Drive, Front	1
22		Collar – Locking, Eccentric	4
23	3257–8	Key – Woodruff	1

Ref. No.	Part No.	Description	No. Used
24	3272–6	Pin – Cotter	1
25	42–2360	Yoke & Tube Assembly (Incl. Ref. #34 & 58)	1
26	42–2370	Yoke and Shaft	1
27	2115–79	Ring – Lock	8
28		Pin – Quick Detach	1
29	42–2310	Yoke – Front (Incl. Ref. #28 & 59)	1
30	2115–88	Bearing & Cross Kit (Incl. Ref. #20 & 27)	2
31	42–2380	Shield – Outer (Incl. Ref. #35)	1
32	92–1580	Bearing Kit, Shield	2
33	42–2340	Centralizer – Guard	1
34	2115–85	Fitting – Grease	1
35	92–1582	Decal – Safety	1
36	42–1860	Front Shaft Assembly (Incl. Ref. #20, 25, 35, 37, 38, 58 & 59)	1
37	42–2350	Shield – Inner	1
38	2115–94	Yoke – Rear	1
39	325–5	Screw – Cap, Hex. Hd.	4
40	283–46	Pin – Clevis	1
41		Screw – Set	8
42	2115–81	Yoke	2
43	2115–76	Kit – Center Parts	2

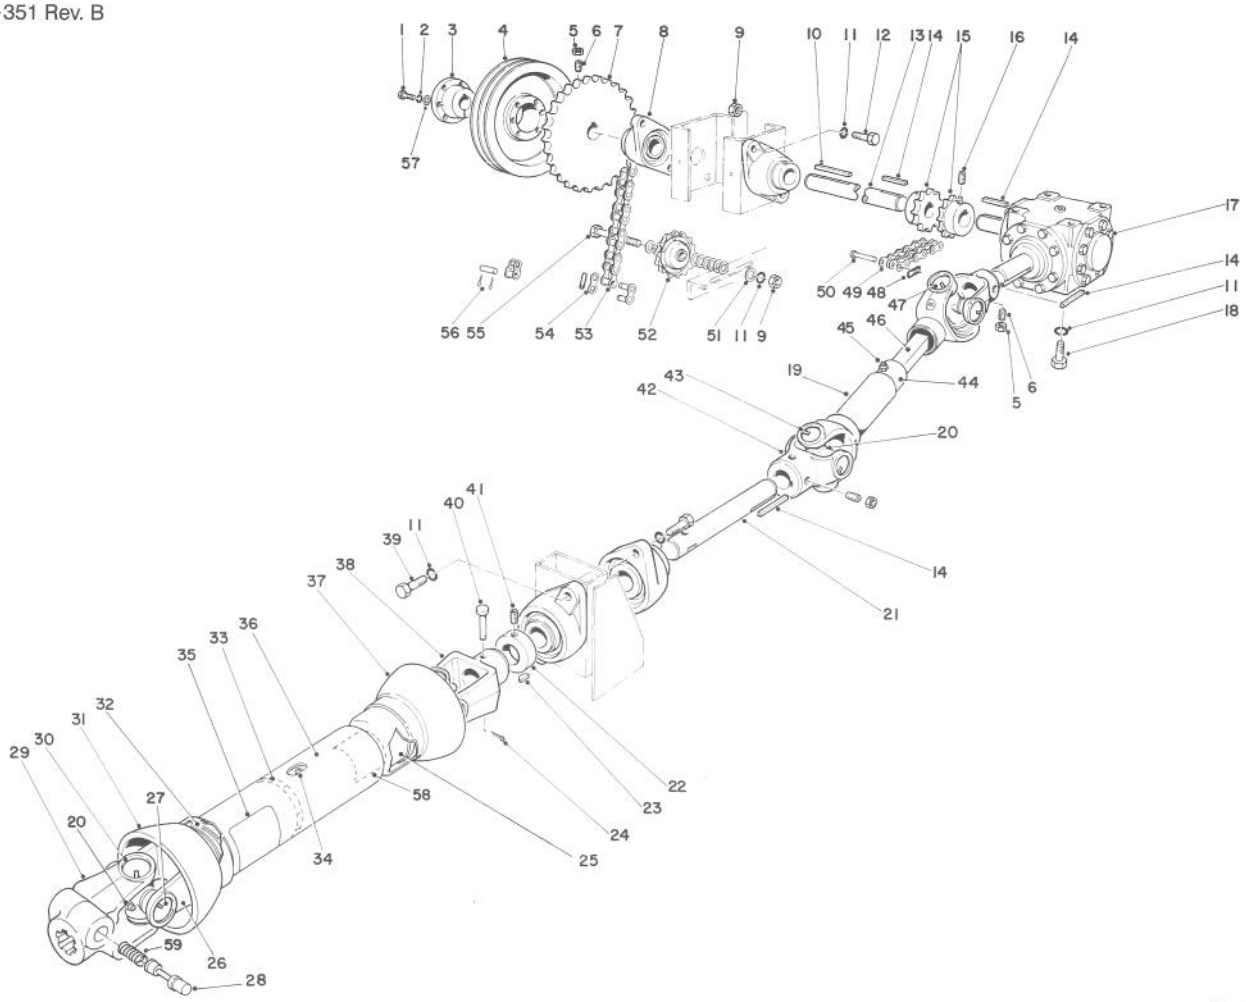


T–0008

DRIVE MECHANISM (Model No. 07174) (Continued)

Ref. No.	Part No.	Description	No. Used
44	42–2290	Yoke and Tube	1
45	302–2	Fitting – Grease	1
46	42–2300	Yoke and Shaft	1
47	2115–78	Ring – Lock	8
48		Clip – Pin, Connector	1
49	13–6680	Chain	1
50	13–6670	Pin – Connector (Incl. Ref.#48)	1
51	3256–26	Washer – Flat	8
52	13–4570	Sprocket – Idler	1

Ref. No.	Part No.	Description	No. Used
53	13–4590	Chain	1
54	2710–30	Link – Connecting	1
55	325–12	Screw – Cap, Hex. Hd.	1
56	2710–29	Link – Offset	1
57	3256–23	Washer – Flat	3
58	92–1581	Decal – Safety	1
59		Spring	1
*	92–1187	Quick Disconnect Kit (Incl. Ref. # 28, & 59)	1

*Not Illustrated

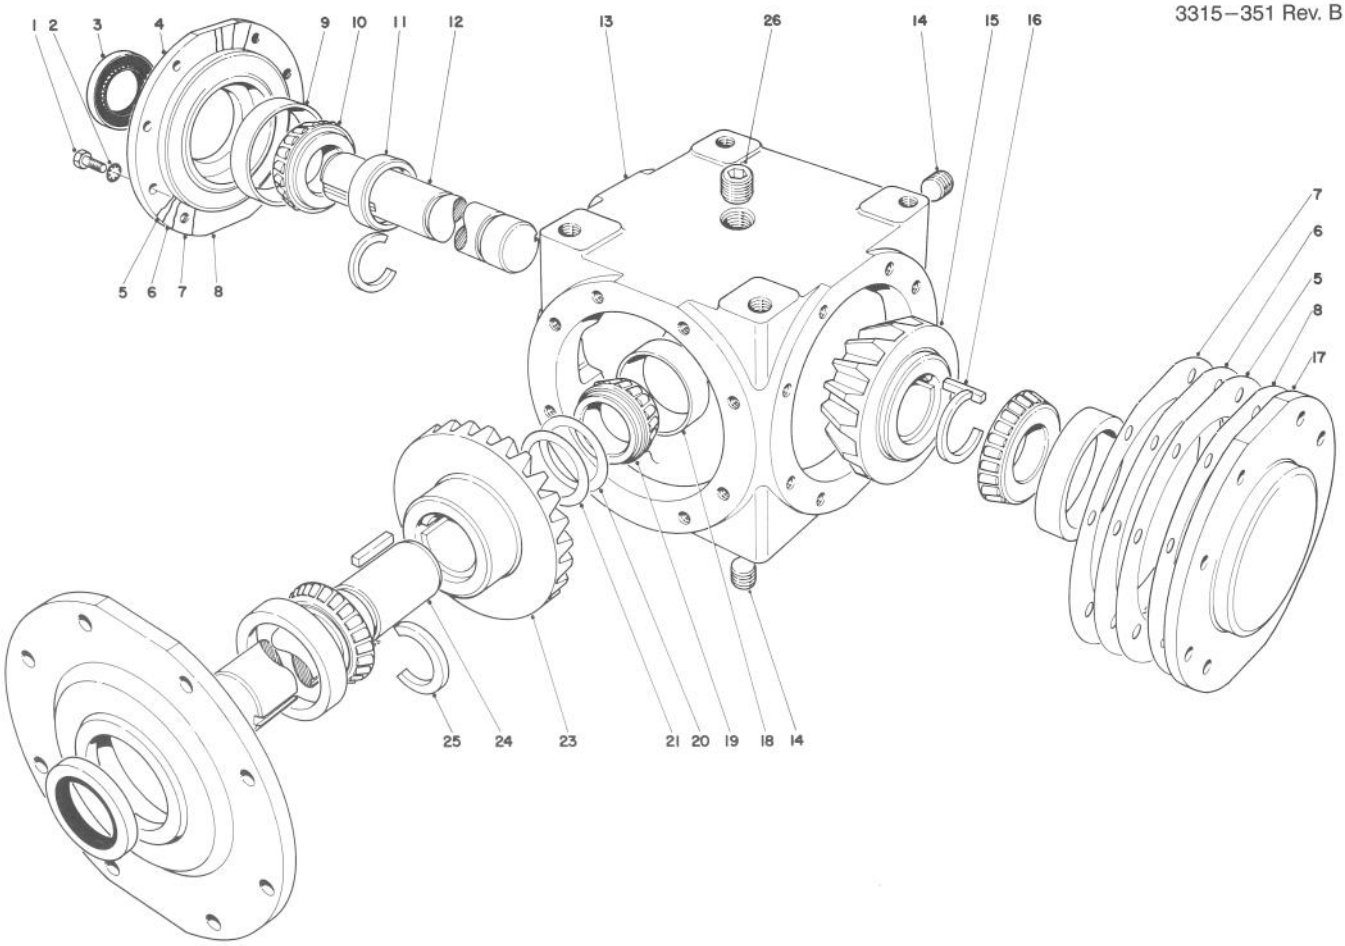


T–0014

GEAR BOX ASSEMBLY (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	322–5	Screw – Cap, Hex. Hd.	24
2	3254–2	Washer – Lock	24
3	13–6520	Seal	2
4	70–2420	Cap	2
5	13–6490	Gasket – .002 Thk.	A/R
6	13–6610	Gasket – .003 Thk.	A/R
7	13–6600	Gasket – .005 Thk.	A/R
8	13–6590	Gasket – .015 Thk.	A/R
9	254–57	Cup – Bearing	3
10	254–58	Cone – Bearing	3
11	70–2440	Collar – Thrust	1
12	70–2430	Shaft	1
13	13–6650	Housing	1

Ref. No.	Part No.	Description	No. Used
14	285–12	Plug – Pipe	2
15	70–2450	Gear – 17 Tooth	1
16	70–2380	Key – Tapered	2
17	70–2360	Cap	1
18	254–61	Cup – Bearing	1
19	254–62	Cone – Bearing	1
20	13–6540	Shim – .010 Thk.	A/R
21	13–6630	Shim – .005 Thk.	A/R
23	70–2370	Gear – 23 Tooth	1
24	70–2390	Shaft	1
25	70–2410	Ring – Retaining	3
26	59–1460	Plug – Vent	1

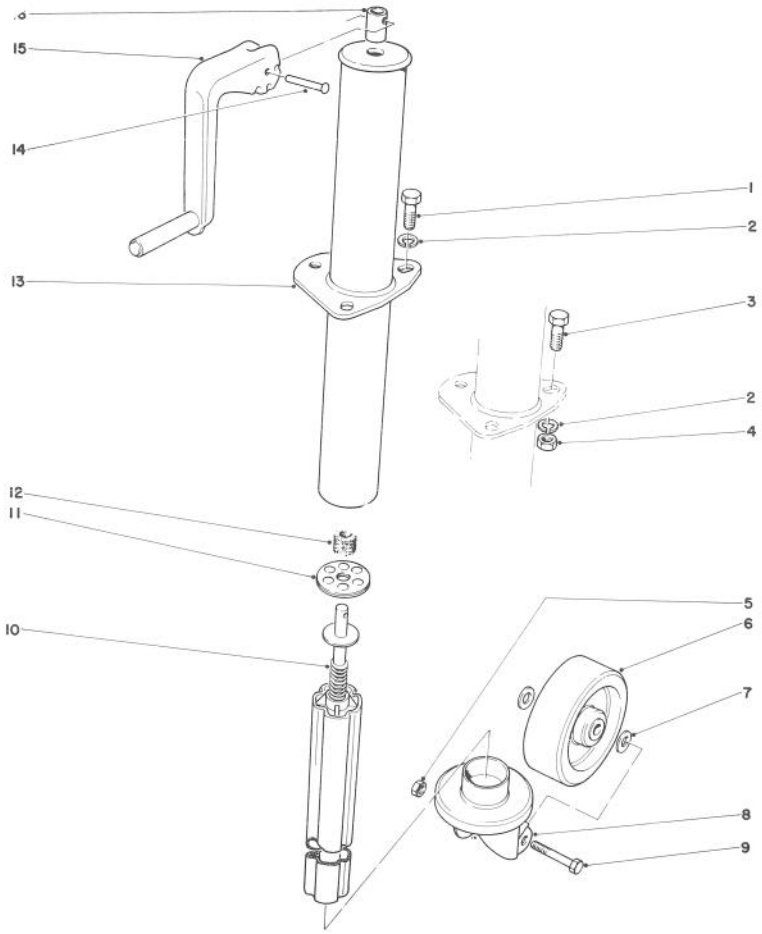


T–0015

JACK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323–4	Screw – Cap, Hex. Hd. (Model 07073 only)	3
2	3253–21	Washer – Lock	3
3	323–5	Screw – Cap, Hex. Hd. (Model 07174 only)	3
4	3217–7	Nut – hex. (Model 07174 only)	3
5	3296–23	Nut – Lock	1
6	13–6440	Wheel	1
7	3256–26	Washer – Flat	2

Ref. No.	Part No.	Description	No. Used
8	13–6450	Bracket – Wheel, Caster	1
9	325–13	Screw – Cap, Hex. Hd.	1
10	13–6750	Ram	1
11	13–3510	Bearing – Thrust	1
12	13–3610	Sleeve – Felt	1
13	13–5680	Assembly – Jack (Incl. Ref. #10–16)	1
14	13–6730	Rivet	1
15	13–6740	Handle	1
16	13–3490	Sleeve	1

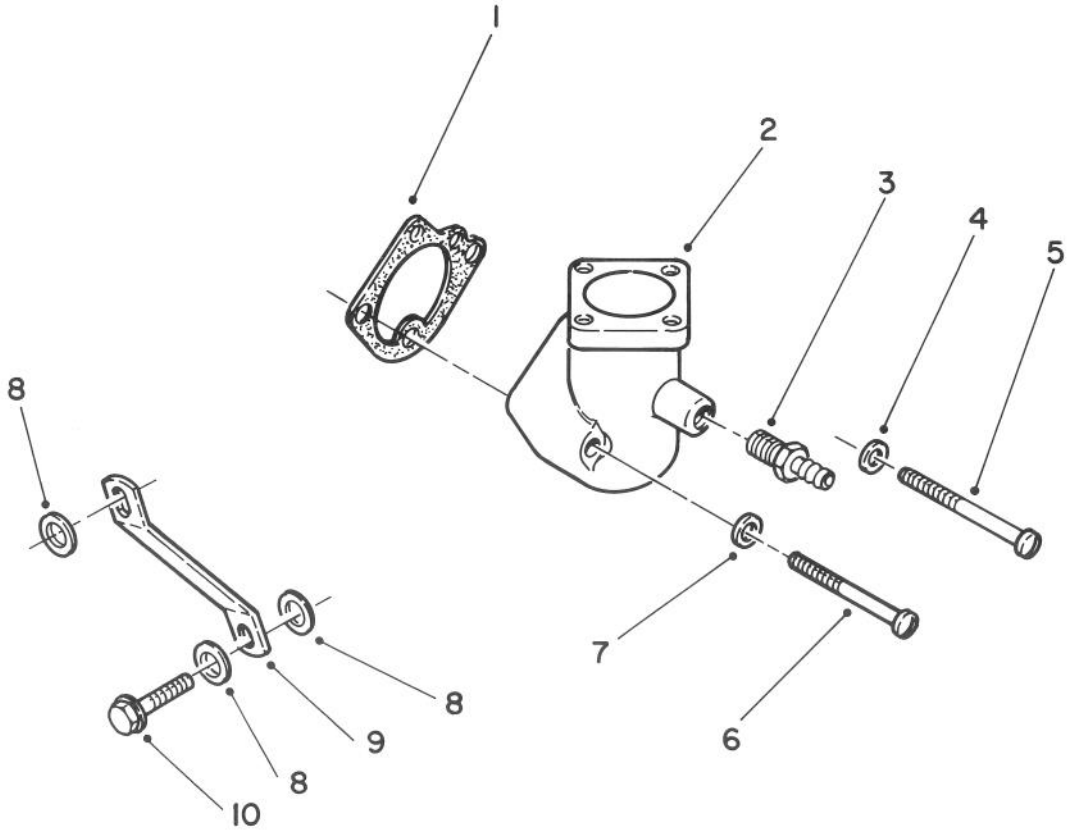


ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
1	25041 06	Gasket – Elbow	1
2	4875402	Kit – Elbow (Incl. Ref. #1 & 3)	1
3	4815504	Connector	1
4	X–22–9	Washer – Lock, Int. Tooth	2
5	X–50–57	Screw – Mach. Rd. Hd.	2

Ref. No.	Part No.	Description	No. Used
6	X–50–37	Screw – Mach. Rd. Hd.	1
7	X–25–79	Washer – Flat	1
8	X–25–53	Washer – Flat	3
9	277116	Brace – Elbow	1
10	X–132–5	Screw – Hex. Flange Hd.	2

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

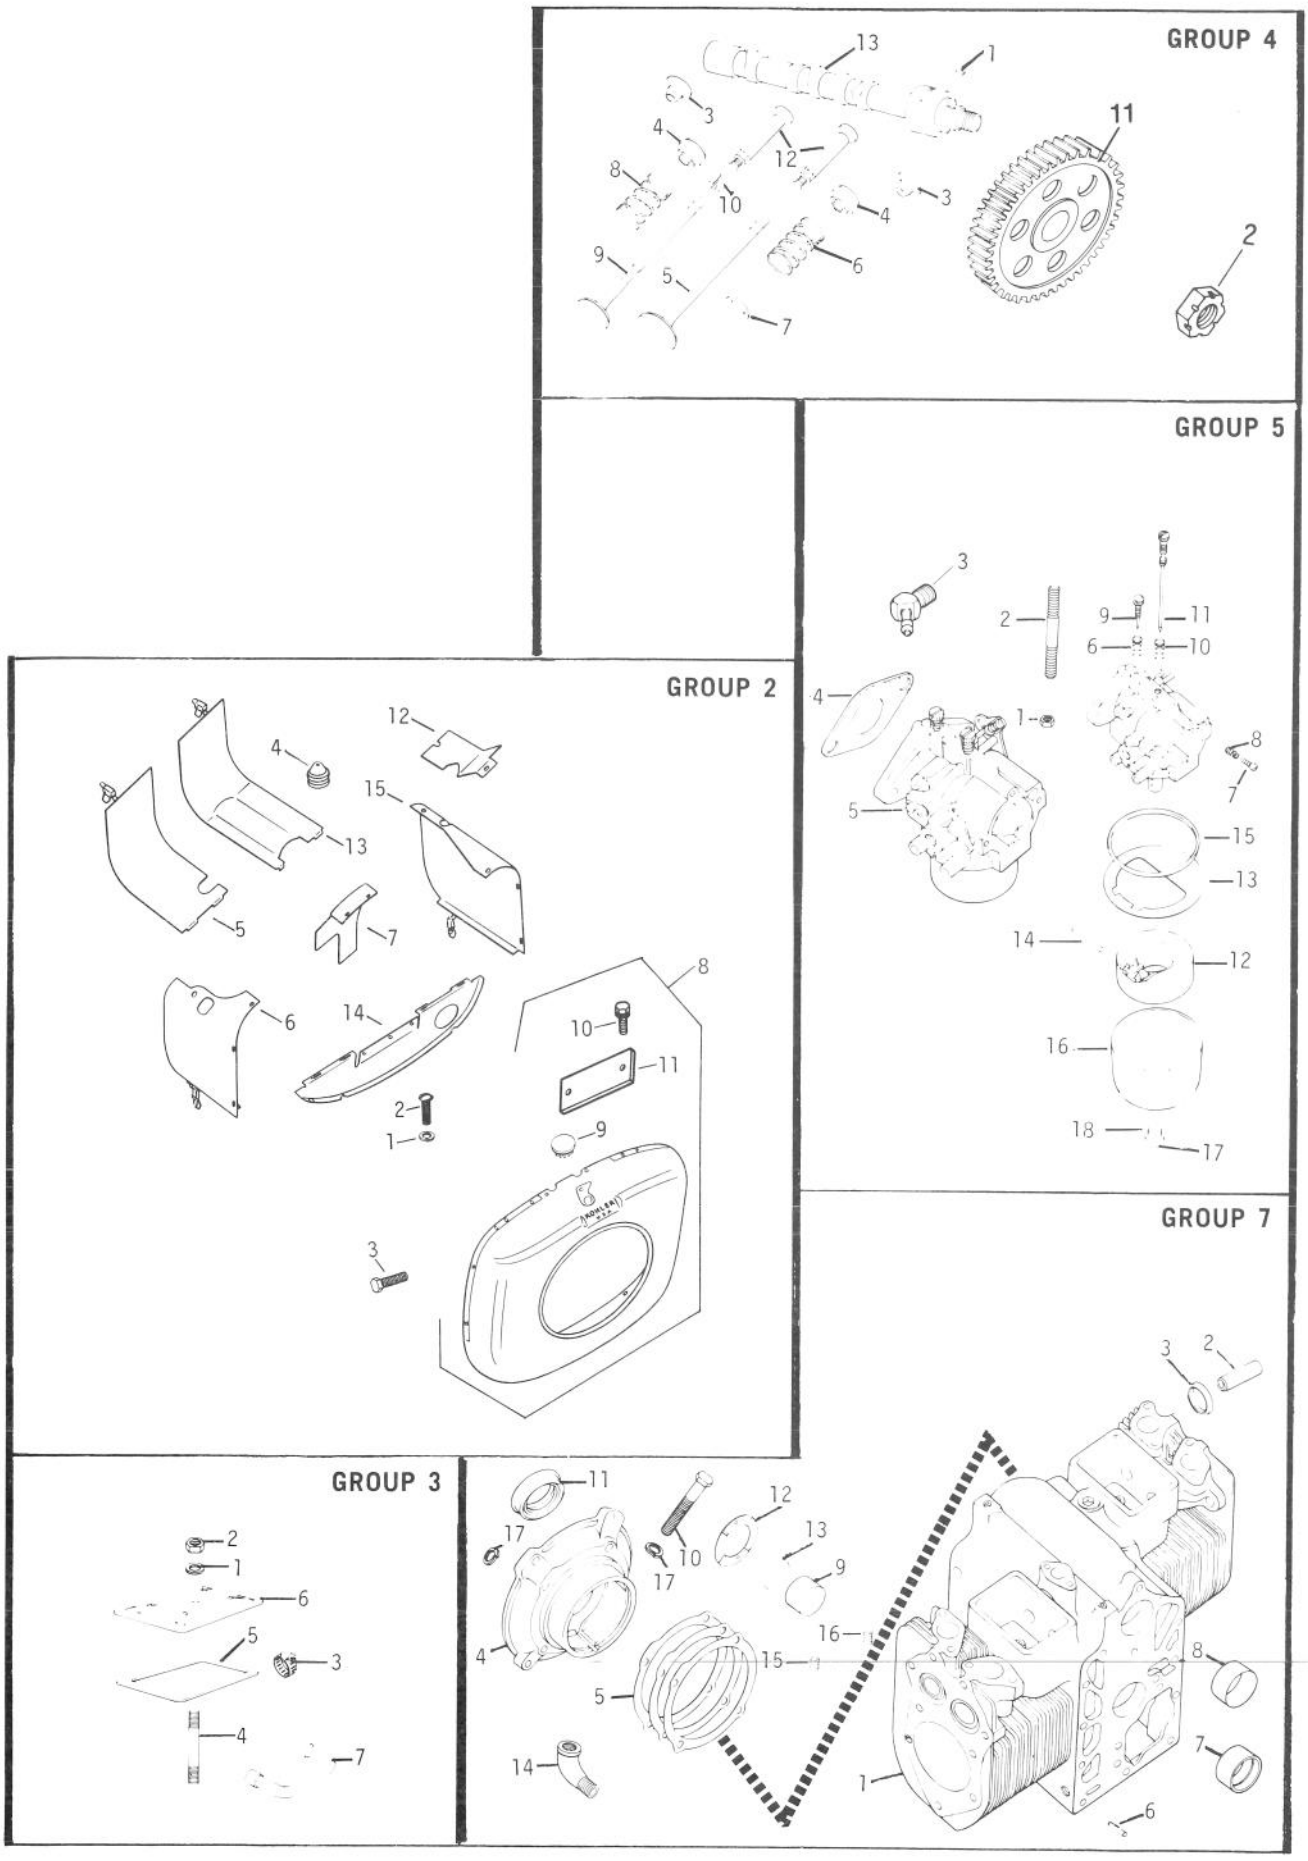


ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
		BAFFLES & SHROUD GROUP 2	
1	X–20–1	Washer – Lock	2
2	X–73–1	Screw – Mach. Rd. Hd.	2
3	X–133–2	Screw – H.C.	8
3	X–132–5	Screw – H.C.	1
4	243035	Grommet	1
5	277048	Baffle – #1 Barrel	1
6	277051	Baffle – #1 Cylinder Head	1
7	277054	Baffle – #1 Upper Cylinder	1
8	4802711	Blower Housing Assembly	1
9	X–301–8	Plug – Button	1
10	X–132–6	Screw – Hex. Hd.	2
11	4109623	Cover – Knock–Out	1
12	4806301	Baffle	1
13	277168	Baffle – #2 Barrel	1
14	277230	Baffle – Housing Support	1
15	4812404	Baffle – #2 Cylinder Head	1
		BREATHER & VENT GROUP 3	
1	X–25–12	Washer – Plain	2
2	X–81–1	Nut – Hex.	2
3	X–426–3	Clamp – Hose	2
4	220368	Stud – Valve Cover	2
5	270034	Gasket – Valve Cover	2
6	270036	Cover – Valve	2
7	277392	Hose – Breather	1
		CAMSHAFT & VALVES GROUP 4	
1	X–43–1	Key – Woodruff	1
2	4810004	Nut – Jam	1
3	230011	Retainer – Valve Spring	2
4	5241301	Rotator – Exhaust Valve	2
5	235008	Valve – Intake	2
6	235010	Spring – Valve	2
7	235011	Retainer – Valve Spring	4
8	235168	Spring – Exhaust Valve	2
9	237672	Valve – Exhaust	2
10	4175510	Kit – Retainer	4
11	4875534	Kit – Camshaft Gear	1
12	D–277031	Tappet	4
13	4801201	Camshaft	1

Ref. No.	Part No.	Description	No. Used
		CARBURETOR GROUP 5	
1	X–82–5	Nut – Hex.	2
2	X–352–10	Stud	2
3	4715512	Connector	1
4	271030	Gasket – Carburetor	1
5	4805306	Carburetor Assembly	1
6	200380	Spring – Idle Speed	1
7	234945	Screw – Idle Fuel Adj.	1
8	200380	Spring – Idle Fuel	1
9	277210	Needle – Idle Adj.	1
10	200383	Spring – Main Fuel	1
11	4810301	Needle – Main Fuel Adj.	1
12	2575703	Kit – Float	1
13	2504102	Gasket – Bowl Baffle	1
14	200376	Pin – Float Hinge	1
15	200375	Gasket – Bowl	1
16	235448	Bowl – Fuel	1
17	4710006	Screw – Bowl Retainer	1
18	200372	Gasket – Bowl Screw	1
19	2575702	Kit – Carburetor Repair	1
		CRANKCASE GROUP 7	
1	4800503	Crankcase Assembly	1
2	235007–S	Guide – Valve	4
3	230265	Insert – Exhaust Valve	2
4	277199	Plate – Rear Closure	1
5	277087	Gasket – Closure Plate	1
5	277103	Gasket – Closure Plate	A/R
5	277115	Gasket – Closure Plate	A/R
6	277134	Pin – Drive Lock	4
7	4803006	Bearing	2
8	4815803	Bushing – Camshaft	1
9	277039	Bushing	1
10	270956	Screw – Cylinder Head	4
11	277065	Seal – Rear Oil	1
12	277121	Washer – Thrust	2
13	160037	Plug – Welch	1
14	4828303	Elbow – Street	1
15	4713901	Plug – Pipe	1
16	X–75–23	Plug – Pipe	4
17	X–22–1	Washer – Lock	4


ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

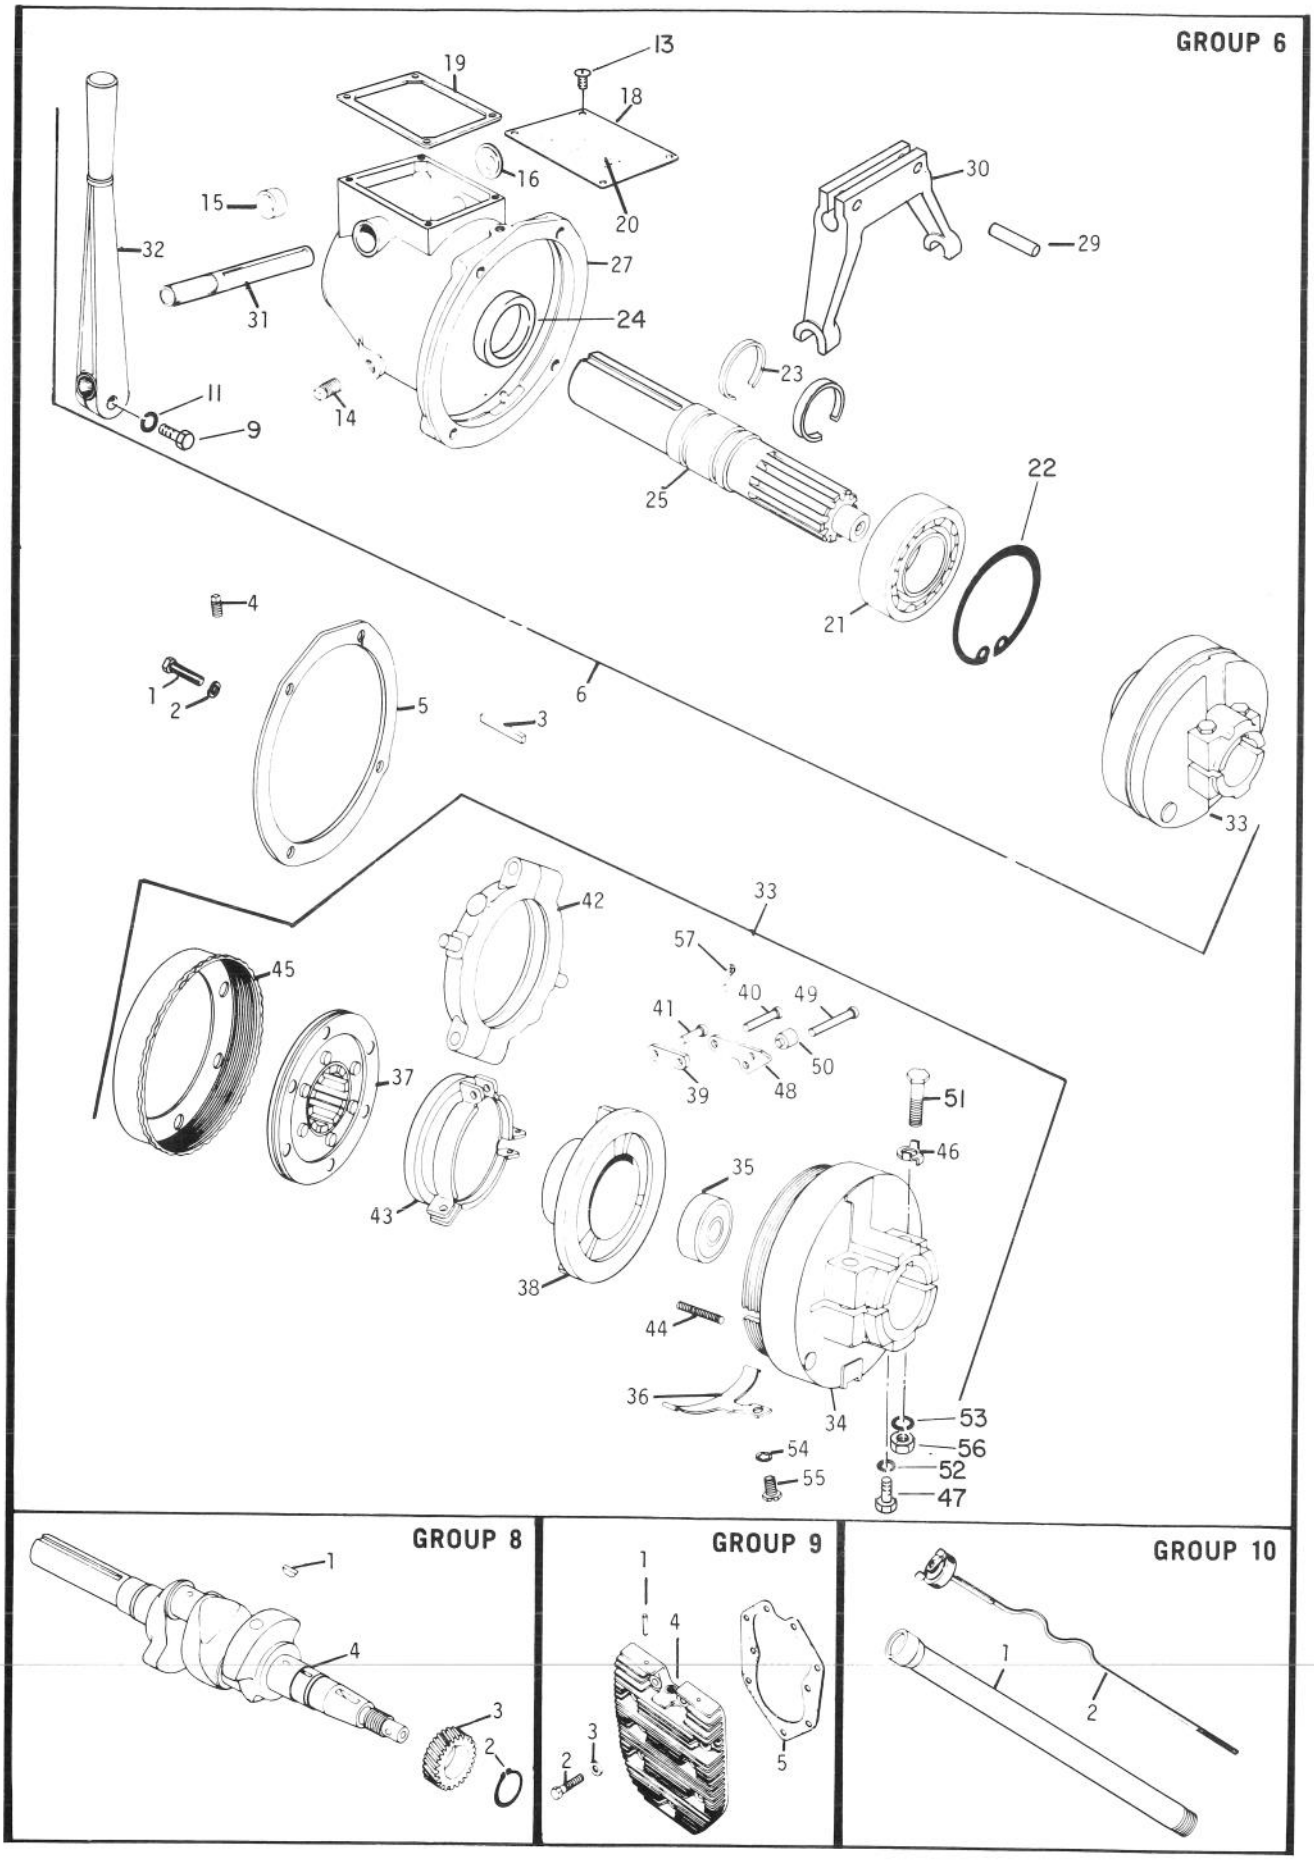

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
		CLUTCH GROUP 6	
1	X–8–20	Screw – H.C.	4
2	X–23–1	Washer – Lock	4
3	X–286–8	Key	1
4	270219	Plug – Vent	1
5	274042	Gasket – Clutch	1
6	4823902	Clutch Assembly	1
9	X–7–2	Screw – H.C.	1
11	X–22–1	Washer – Lock	1
13	X–50–13	Screw – R.H.	4
14	X–75–2	Plug – Pipe	2
15	X–271–19	Seal – Oil	1
16	X–230–20	Plug – Welch	1
18	234032	Cover	1
19	234033	Gasket – Clutch Cover	1
20	234089	Plate – Instruction	1
21	234035	Bearing – Ball	1
22	4814102	Snap Ring	1
23	234037	Ring – Snap	2
24	234038	Seal – Oil	1
25	234039	Shaft – Drive	1
27	4808103	Housing – Power Take Off	1
29	274101	Pin – Roll	2
30	A–234027	Yoke – Clutch	1
31	274117	Shaft – Yoke	1
32	A–234026	Lever – Shifting	1
33	A–234075	Clutch Assembly	1
34	234041	Housing – Clutch	1
35	234042	Bearing	1
36	234043	Lock – Adjusting	1
37	A–234044	Member – Driven	1
38	A–234045	Plate – Pressure	1
39	234050	Link Connecting	6
40	234051	Pin – Link (Long)	3
41	234052	Pin – Link (short)	3
42	A–234053	Bearing – Release	1
43	234054	Sleeve – Release	1
44	234055	Sleeve – Return	3
45	234056	Ring – Adjusting	1
46	234057	Lock – Screw	2
47	234073	Screw – H.C.	1
48	234046	Lever – Pressure Plate	6
49	234047	Pin – Lever	3
50	234048	Roller	3
51	X–7–29	Screw – H.C.	2
52	X–21–1	Washer – Lock	1
53	X–22–1	Washer – Lock	2
54	X–22–11	Washer – I.T.	1
55	X–52–22	Screw – Fil. Hd.	1
56	X–83–4	Nut – Hex	2
57	X–36–4	Pin – Cotter	9
		CRANKSHAFT GROUP 8	
1	X–42–15	Key – Woodruff	1
2	X–269–32	Ring – Retaining	1
3	277009	Gear – Crankshaft	1
4	4801402	Crankshaft	1
		CYLINDER HEAD GROUP 9	
1	4813303	Pin – Roll	2
2	270158	Screw – H.C.	18
3	270889	Washer	18
4	4801502	Head – Cylinder	2
5	4805201	Gasket – Cylinder Head	2
		DIPSTICK GROUP 10	
1	271829	Tube – Dipstick	1
2	277357	Dipstick	1

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

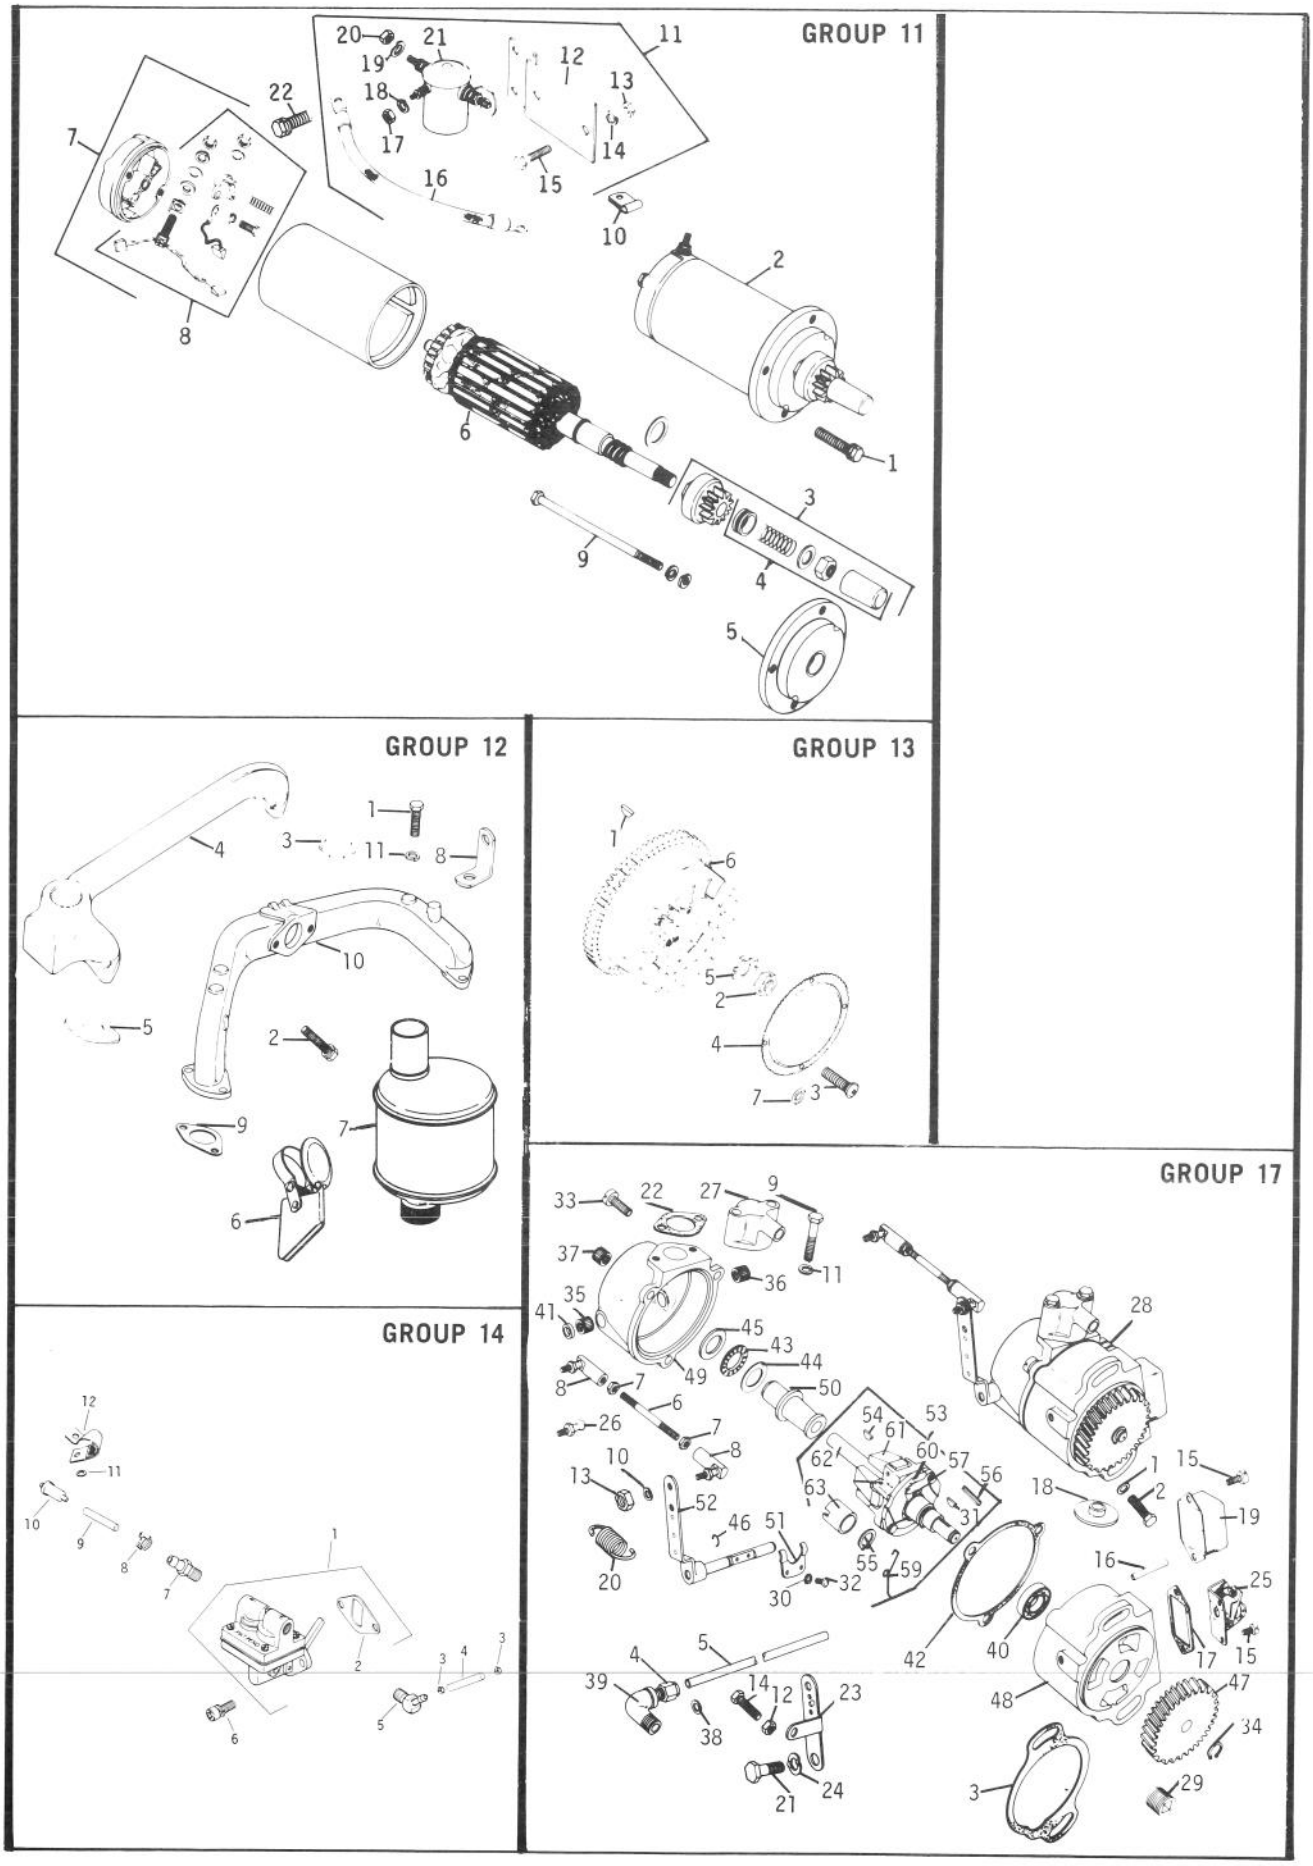


ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
		ELECTRIC START GROUP 11	
1	X–154–1	Screw – H.C.	3
2	4809802	Starter Assembly	1
3	4875502	Kit – Drive	1
4	4875513	Kit – Drive Parts	1
5	4822703	Cap – Drive End	1
6	277605	Armature	1
7	4822704	Cap – Commutator End	1
8	4875515	Kit – Brush	1
9	4821101	Thru Bolt	2
10	270154	Clip – Cable	2
11	4821704	Solenoid Assembly	1
12	4812615	Bracket – Solenoid	1
13	X–81–1	Nut – Hex.	2
14	X–20–1	Washer – Lock	2
15	X–5–13	Screw – H.C.	2
*15	X–25–53	Washer – Plain	2
16	4851812	Lead 6" (Solenoid to Start.)	1
17	X–72–4	Nut – Hex	1
18	X–18–2	Washer – Lock	1
19	X–21–1	Washer – Lock	2
20	X–77–2	Nut – Hex.	2
21	4840403	Solenoid	1
22	X–132–6	Screw – Hex. Hd.	2
		EXHAUST–GROUP 12	
1	X–55–15	Screw – H.C.	4
2	X–154–4	Screw – H.C.	4
3	156153	Nut – Lock	1
4	277013	Manifold – Exhaust	1
5	277091	Gasket – Manifold	2
6	277363	Cap – Muffler	1
7	277364	Muffler	1
8	4744502	Strap – Lifting	2
9	4805202	Gasket – Intake	2
10	4816402	Manifold – Intake	1
11	X–21–1	Washer – Lock	4
		FLYWHEEL–GROUP 13	
1	X–45–3	Key – Woodruff	1
2	X–80–1	Nut – Hex.	1
3	4708608	Screw – T.H.	4
4	277470	Screen – Grass	1
5	277595	Nut – Lock	1
6	4802514	Flywheel	1
7	X–25–52	Washer – Plain	4
		FUEL PUMP–GROUP 14	
1	4855902	Pump – Fuel Assembly	1
2	2504105	Gasket – Fuel Pump	1
3	2523701	Clamp – Hose	2
4	4835307	Hose – Fuel	1
5	47155 12	Fitting – Fuel	1
6	4708608	Screw – T.H.	2
7	X–380–1	Connector – Straight	1
8	X–426–9	Clamp – Hose	2
9	2535302	Hose – Fuel	1
10	4505001	Filter – Fuel	1
11	X–25–68	Washer – Plain 1/4	1
12	2515401	Clamp – Filter	1


Ref. No.	Part No.	Description	No. Used
		GOVERNOR–GROUP 17	
1	X–25–20	Washer – Plain	2
2	X–154–3	Screw – H.C.	2
3	277078	Gasket – Governor Housing	1
4	X–343	Connector	1
5	4835305	Line – Oil	1
6	271151	Rod – Throttle	1
7	X–70–3	Nut – Hex.	2
8	4520803	Joint – Ball	1
9	X–5–26	Screw – H.C.	1
10	X–19–1	Washer – Lock	1
11	X–20–1	Washer – Lock	2
12	X–70–2	Nut – Hex.	1
13	X–70–3	Nut – Hex.	1
14	X–97–4	Screw – H.H.M.	1
15	X131–1	Screw	4
16	X–489–8	Rod – Breaker Push	1
17	5204111	Gasket – Breaker Cover	1
18	220074	Diaphragm	1
19	232535	Cover – Breaker	1
20	271547	Spring Governor	1
21	275691	Screw Shoulder	1
22	277073	Gasket	1
23	277080	Lever – Throttle	1
24	277341	Washer – Tension	1
25	4815003	Breaker	1
26	4819401	Ball	1
27	A–277905	Cover	1
28	4831028	Kit – Governor	1
29	X–75–23	Plug – Pipe	1
30	X–18–1	Washer – Lock	2
31	X–42–2	Key – Woodruff	1
32	X–49–1	Screw – R.H.M.	2
33	X–174–2	Screw – F.H.	3
34	X–269–15	Ring – Retainer	1
35	X–293–3	Bearing – Needle	1
36	X–293–2	Bearing – Needle	1
37	4803002	Bearing – Needle	1
38	237022	Washer	1
39	X–324–7	Elbow	1
40	240202	Bearing – Ball	1
41	275055	Seal – Oil	1
42	277099	Gasket – Governor Cover	1
43	277100	Bearing – Roller Thrust	1
44	277101	Race – Thrust Bearing	1
45	277102	Race – Thrust Bearing	1
46	277104	Ring – Retaining	1
47	4804311	Gear – Governor	1
48	4808102	Housing	1
49	4809605	Cover – Governor	1
50	4875501	Kit – Sleeve	1
51	4847102	Yoke – Governor	1
52	4808703	Lever – Governor	1
53	4842008	Shaft – Governor Assy.	1
54	X–42–8	Key – Woodruff	1
55	X–269–4	Ring – Retaining	1
56	X–280–8	Pin – Roll	1
57	230080	Pin – Flyweight	1
59	4808901	Spring	2
60	277114	Flyweight	2
61	277117	Weight – Governor	4
62	277007	Shaft – Governor	1
63	4814904	Breaker – Cam	1

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366


GROUP 18

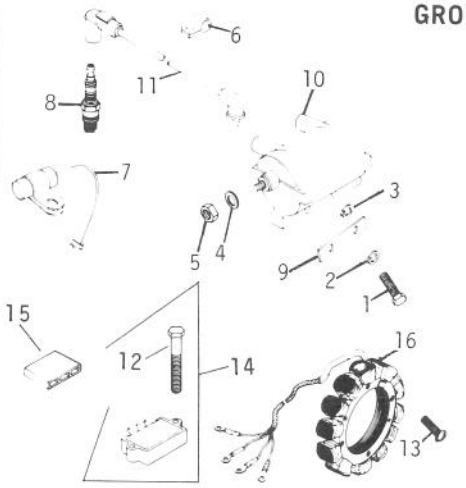


GROUP 19

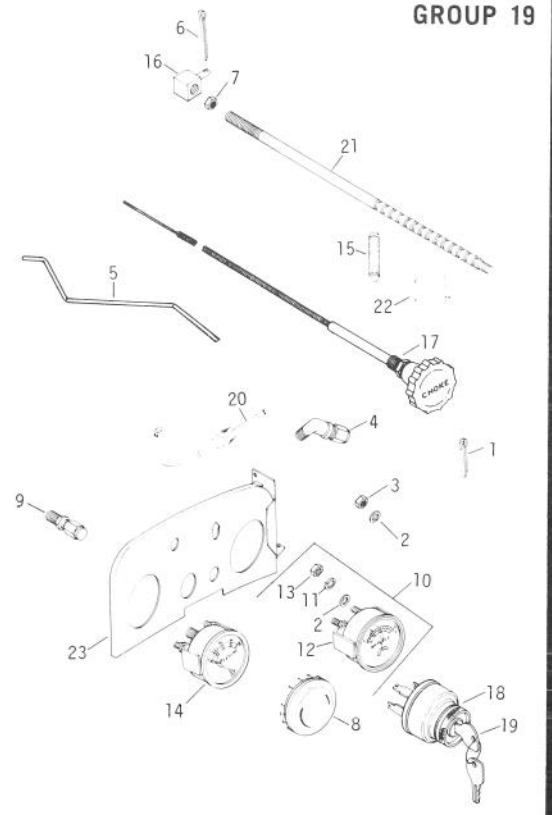


GROUP 21

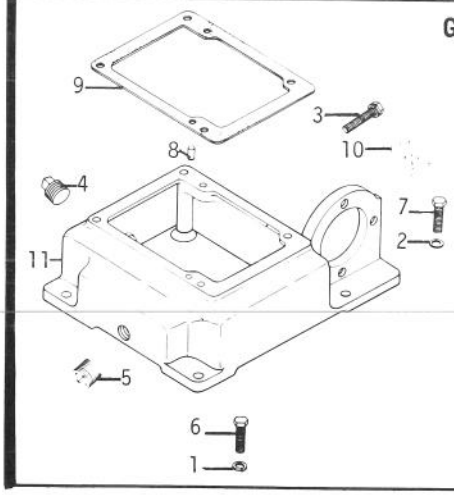


GROUP 22

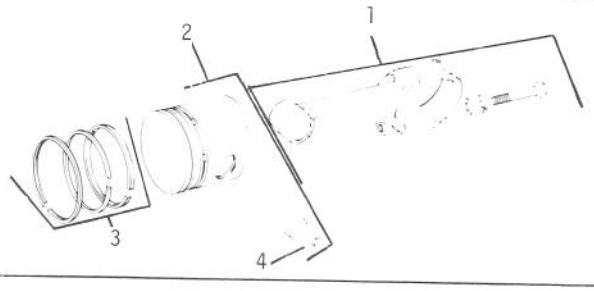


GROUP 25

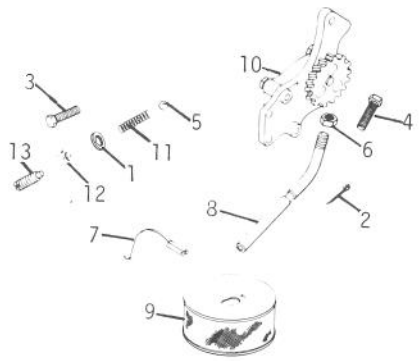

GROUP 26

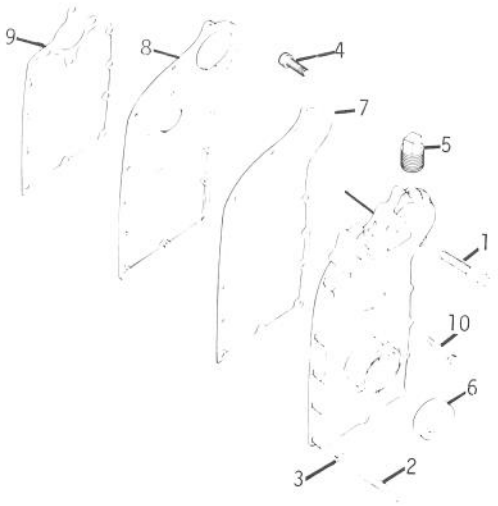

GROUP 29

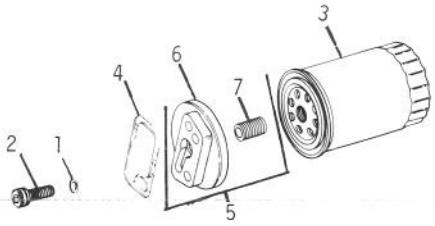

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
		IGNITION–GROUP 18	
1	X–5–26	Screw – H.C.	2
2	X–19–1	Washer – Lock	2
3	X–20–1	Washer – Lock	2
4	X–25–63	Washer – Plain	1
5	X–70–3	Nut – Hex	2
6	210281	Clip – Cable	2
7	230722	Condenser	1
8	235041–5	Plug – Spark	2
9	271694	Plate – Coil Mounting	2
10	277375	Coil	1
11	4834804	Lead – High Tension	2
12	X–132–5	Screw – H.C.	2
13	X–67–51	Screw – R.H.M.	4
14	2575503	Kit Regulator (Incl. Ref. #12)	1
15	236602	Connector	1
16	237878	Stator	1
	4851809	Lead – Switch to solenoid 2 wire – 14 ga. – 33" insulated barrel eyelet and uninsulated push on tab terminals – 14 ga. – 27" – insulated barrel eyelet terminals.	1
		INSTR. PANEL–GROUP 19	
1	X–36–4	Pin – Cotter	1
2	X–25–7	Washer – Plain	6
3	X–70–8	Nut – Hex.	1
4	X–324–7	Elbow 1/8 N.P.T.F.	1
5	277534	Line – Oil Gauge	1
6	X–36–1	Pin – Cotter	1
7	X–82–5	Nut – Hex.	1
8	X–301–8	Button – Plug	1
9	X–721–1	Connector – Female	1
10	4875518	Kit – Ammeter	1
11	X–19–1	Washer – Lock	4
12	4812609	Bracket – Ammeter	1
13	X–70–8	Nut – Hex.	3
14	270231	Gauge – Oil Pressure	1
15	270409	Spring	1
16	270410	Block – Swivel	1
17	277148	Cable – Choke	1
18	4809901	Switch – Key	1
19	4834001	Key	1
20	4832302	Holder – Fuse (Incl. 4130401 Fuse)	1
21	4842003	Shaft – Governor Control	1
22	4815501	Connector	1
23	277173	Panel – Instrument	1
	2551811	Lead – 14 ga. – 18" uninsulated push on tab – insulated barrel eyelet terminals	1
	4751840	Lead – 14 ga. – 14" uninsulated push on tab terminals	1
	4130401	Fuse	1

Ref. No.	Part No.	Description	No. Used
		OIL PAN–GROUP 21	
1	X–22–1	Washer – Lock	4
2	X–25–44	Washer – Plain	1
3	X–67–62	Screw – Tapping	1
4	X–75–6	Plug – Pipe	1
5	X–75–42	Plug – Pipe	1
6	X–129–11	Screw – H.C.	4
7	X–154–6	Screw – H.C.	1
8	230125–5	Shaft – Governor	2
9	277014	Gasket – Oil Pan	1
10	4812608	Bracket – Starter Support	1
11	4875517	Kit – Oil Pan	1
		PISTON & ROD–GROUP 22	
1	4806716	Rod – Conn. Assy. (Std.)	2
	4806717	Rod – Conn. Assy. (.010)	2
2	4887421	Piston w/Ring Set (Std.)	2
	4887422	Piston w/Ring Set (.003)	2
	4887423	Piston w/Ring Set (.010)	2
	4887424	Piston w/Ring Set (.020)	2
	4887425	Piston w/Ring Set (.030)	2
3	4710805	Ring Set (Std. & .003)	2
	4710806	Ring Set (.010)	2
	4710807	Ring Set (.020)	2
	4710808	Ring set (.030)	2
4	4701801	Retainer	4
		OIL PUMP–GROUP 25	
1	X–25–94	Washer – Plain	1
2	X–36–6	Pin – Cotter	1
3	X–154–2	Screw – H.C.	1
4	X–154–5	Screw – H.C.	1
5	X–212–3	Ball – Steel	1
6	X–629–1	Palnut	1
7	270085	Clip – Oil Tube	1
8	277201	Tube – Oil Inlet	1
9	277202	Strainer – Oil	1
10	4839323	Pump – Oil	1
11	4808903	Spring Relief Valve	1
12	X–101–6	Nut – Elastic Stop	1
13	277694	Screw – Socket Set	1
		GEAR COVER–GROUP 26	
1	X–6–11	Screw – H.C.	4
2	X–6–22	Screw – H.C.	7
3	X–21–1	Washer – Lock	14
4	X–55–6	Screw – H.C.	1
5	X–75–2	Plug – Pipe	1
6	5203208	Seal – Front Oil	1
7	277020	Gasket – Gear Cover	1
8	277021	Plate – Gear Cover	1
9	277022	Gasket – Gear Cover Plate	1
10	277086	Screw – H.C.	2
11	277493	Cover – Gear	1
		OIL FILTER–GROUP 29	
1	X–25–44	Washer – Plain	2
2	X–55–9	Screw – H.C.	2
3	277233	Filter – Oil	1
4	48041 03	Gasket	1
5	48 18003	Adapter – Filter Assembly	1
6	4802902	Adapter – Oil Filter	1
7	277234	Nipple	1
	4852233	Short Block	1
	4875533	Gasket Set w/Seals	1
	4800402	Gasket Set w/o Seals	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–3175	Cover – Battery	4	39	1
3–5967	Support – Battery	4	37	2
3–8135	Spring	4	48	2
3–9155	Key – Square	2	52	1
4–1920	Washer	2	53	1
5–0678	Rod – Clamp, Battery	5	51	2
5–0738	Key – Square	15	14	4
5–1718	Key – Square	6	3	1
8–2329	Air Cleaner Assembly	11	64	1
12–8810	Spring	9	21	2
13–0050	Spring	6	29	2
13–0050	Spring	4	45	2
13–0060	Yoke – Hitch	5	61	1
13–0100	Block – Pivot	6	13	2
13–0100	Block – Pivot	4	16	2
13–0320	Collar – Lock	7	45	2
13–0330	Block – Pivot	10	40	1
13–0330	Block – Pivot	7	47	2
13–0330	Block – Pivot	13	40	1
13–0360	Spacer	7	36	2
13–0480	Spring	6	25	1
13–0480	Spring	4	41	1
13–0510	Pin – Idler	4	33	1
13–0560	Spacer	7	34	2
13–0600	Pulley – Idler	4	32	1
13–1390	Retainer – Flap	10	50	1
13–1390	Retainer – Flap	13	50	1
13–1420	Cover – Inspection	10	30	2
13–1420	Cover – Inspection	13	30	2
13–2240	Key – Square	10	5	1
13–2240	Key – Square	13	5	1
13–2451	Plate – Finger	7	27	60
13–2480	Clamp – Finger	7	31	276
13–2640	Belt	11	57	1
13–2640	Belt	14	59	1
13–2650	V–Belt	2	51	1
13–2670	Sheave	5	64	1
13–2680	Bushing	4	27	1
13–2800	Pulley	10	4	1
13–2810	Key – Square	10	9	1
13–2810	Key – Square	13	9	1
13–2840	Key – Square	4	2	1
13–2840	Key – Square	6	2	1
13–2840	Key – Square	7	23	1
13–2870	Wheel – Gauge	7	49	2
13–2930	Decal – Slow Moving Vehicle	9	10	1
13–2970	Bushing	10	3	1
13–3020	Sprocket	8	54	1
13–3070	Spacer	7	37	3
13–3080	Kit – Coupler, Ball	5	60	1
13–3090	Spring	7	30	66
13–3130	Flap – End	10	45	2
13–3130	Flap – End	13	45	2
13–3320	Pulley	1	4	1
13–3330	Bushing	1	1	1
13–3350	Bracket – Mounting	13	10	1
13–3350	Support – Shield	10	10	1
13–3420	Assembly – Fan	13	20	1
13–3420	Fan Assembly	10	20	1
13–3490	Sleeve	18	16	1
13–3510	Bearing – Thrust	18	11	1
13–3610	Sleeve – Felt	18	12	1
13–3710	Washer	5	68	1
13–3710	Washer – Flat	9	25	2
13–3710	Washer – Special	7	15	1
13–3710	Washer – Special	6	37	1
13–3720	Key – Square	15	10	1
13–3740	Shaft – Jack	4	1	1
13–3740	Shaft – Jack	6	1	1
13–3790	Shaft – Fan	13	6	1
13–3790	Shaft – Fan	10	6	1
13–3850	Plate – Blower Access	10	12	1
13–3850	Plate – Blower Access	13	12	1
13–3930	Tank – Gas	1	26	1
13–3960	Strap Assy.	1	25	2
13–3970	Felt Strip	1	24	2
13–3970	Strip – Felt	2	39	2
13–3990	Handle – Trip	6	26	1
13–3990	Handle – Trip	4	42	1
13–4070	Chain	7	12	1
13–4310	Tongue	3	45	1
13–4340	Sprocket	6	36	1
13–4340	Sprocket	5	67	1
13–4490	Guard – Sheave	6	31	1
13–4490	Guard – Sheave	5	55	1
13–4560	Weight – Flap	10	48	18
13–4560	Weight – Flap	13	48	18
13–4570	Sprocket – Idler	16	52	1
13–4590	Chain	16	53	1
13–4700	Flap	10	47	1
13–4700	Flap – Rubber	13	47	1
13–4760	Flap – Lower	10	44	1
13–4760	Flap – Lower	13	44	1
13–4800	Guard – Belt	11	54	1
13–4800	Guard – Belt	14	57	1
13–4880	Sprocket	6	24	1
13–4890	Sprocket	7	16	1
13–4930	Plate – Finger	7	25	3
13–4940	Plate – Finger	7	28	3
13–4960	Shaft – Plate, Finger	7	22	6
13–5000	Main Frame	1	22	1
13–5250	Rake – Reel	7	26	1
13–5370	Flex Tip Reel Assembly	8		1
13–5490	Bell Crank – Lift, R.H.	6	18	1
13–5490	Bell Crank – Lift, R.H.	4	21	1
13–5500	Bell Crank – Lift, L.H.	6	28	1
13–5500	Bell Crank – Lift, L.H.	4	44	1
13–5520	Spacer	4	9	2
13–5520	Spacer	6	9	2
13–5530	Rod – Adjustment, Spring	6	30	2
13–5530	Rod – Adjustment, Spring	4	46	2
13–5540	Link – Lift	7	39	2
13–5550	Arm – Gauge Wheel	7	48	2
13–5570	Stud – Pivot	7	50	2
13–5590	Rod – Adjustment	8	51	2
13–5620	Guard – Chain	7	1	1
13–5670	Spacer – Locking	8	52	2
13–5680	Assembly – Jack	18	13	1
13–5700	Hook – Transport	7	33	2
13–5790	Shield – Shaft	3	50	1
13–5870	Shield – Front	3	48	1
13–5880	Shield – Shaft, Drop	3	49	1
13–5900	Shaft – Drive, Front	15	21	1
13–5910	Shaft – Drive, Side	15	13	1
13–6000	Base – Box, Gear	3	23	1
13–6020	Sheave	15	4	1
13–6030	Pulley	13	4	1
13–6050	Bushing	15	3	1
13–6070	Bushing	13	3	1
13–6090	Cover – Guard, Side	13	52	1
13–6110	Sprocket	15	7	1
13–6120	Frame	3	18	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
13–6200	Pin – Hitch	3	46	1
13–6240	Rod – Adjustment	3	20	1
13–6260	Bolt – Adjustment	6	8	2
13–6260	Screw – Adjustment	4	8	2
13–6280	Blower	10	33	1
13–6280	Blower and Throat	13	33	1
13–6330	Key – Square	4	3	1
13–6360	Rod – Lift	10	38	1
13–6360	Rod – Lift	13	38	1
13–6390	Handle – Flap	10	35	1
13–6390	Handle – Flap	13	35	1
13–6410	Decal	13	13	1
13–6410	Decal	11	56	1
13–6440	Wheel	18	6	1
13–6450	Bracket – Wheel, Caster	18	8	1
13–6490	Gasket – .002 Thk.	17	5	A/R
13–6520	Seal	17	3	2
13–6540	Shim – .010 Thk.	17	20	A/R
13–6590	Gasket – .015 Thk.	17	8	A/R
13–6600	Gasket – .005 Thk.	17	7	A/R
13–6610	Gasket – .003 Thk.	17	6	A/R
13–6630	Shim – .005 Thk.	17	21	A/R
13–6650	Housing	17	13	1
13–6670	Pin – Connector	16	50	1
13–6680	Chain	16	49	1
13–6690	Coupling Half	15	15	2
13–6700	Finger – Nylon	7	29	276
13–6710	Cap – Weather, Muffler	1	5	1
13–6720	Muffler	1	6	1
13–6730	Rivet	18	14	1
13–6740	Handle	18	15	1
13–6750	Ram	18	10	1
13–6760	Decal – Caution	9	6	1
13–6790	Cable – Battery	4	47	2
13–6890	Guide – Rope	2	37	1
13–6890	Guide – Rope	3	33	1
13–6910	Spacer – Guide , Rope	2	36	1
13–6910	Spacer – Guide, Rope	3	32	1
13–7140	Panel – Top	9	2	1
13–7180	Gate	9	13	1
13–7350	Panel – Bottom, (R.H.)	9	29	1
13–7360	Panel – Bottom, L.H.	9	23	1
13–7370	Panel – Bottom, (Middle)	9	28	1
13–7380	Screen – Top, R.H.	9	1	1
13–7390	Screen – Top, L.H.	9	5	1
13–7400	Hinge – Bracket	9	16	3
13–7430	Decal –Warning	9	14	1
13–7460	Plate – Caution	3	43	1
13–7460	Plate – Plate	2	47	1
20–9580	Rope	3	31	1
20–9580	Rope	2	35	1
27–7220	Detergent – Cleaning, Air	12	*	A/R
33–1260	Assembly – Cover	12	11	1
33–1270	Bowl – Clear	12	10	1
33–1280	Assembly – Sleeve	12	9	1
33–1300	Assembly – Element	12	6	1
33–1310	Baffle	12	5	1
33–1320	Assembly – Cup	12	4	1
33–1330	Assembly – Nut	12	3	1
33–1340	Assembly – Clamp	12	2	1
33–1350	Assembly – Band, Mounting	12	1	2
42–1860	Front Shaft Assembly	15	36	1
42–1870	Rear Shaft Assembly	15	19	1
42–2290	Yoke and Tube	16	44	1
42–2300	Yoke and Shaft	16	46	1
42–2310	Yoke – Front	15	29	1
42–2340	Centralizer – Guard	15	33	1
42–2350	Shield – Inner	15	37	1
42–2360	Yoke & Tube Assembly	15	25	1
42–2370	Yoke and Shaft	15	26	1
42–2380	Shield – Outer	15	31	1
42–9930	Strap – Hopper	9	31	2
49–4260	Ball	5	59	1
53–8591	Hose – Air Cleaner	11	65	1
55–7290	Battery	4	38	1
56–6210	Bearing	4	24	2
56–6220	Bearing	10	25	2
56–6220	Bearing	13	25	2
56–6230	Bearing	7	21	2
56–6230	Bearing	6	35	2
56–6230	Bearing	5	66	2
56–6250	Bearing	15	8	4
59–1460	Plug – Vent	17	26	1
61–5950	Decal	4	40	1
62–3220	Wheel Assembly	3	10	2
62–3220	Wheel Assembly	1	17	2
63–5200	Trailing Arm–R.H.	8	55	1
63–5210	Spindle – Driveside	6	34	1
63–5210	Spindle – Driveside	5	65	1
63–5250	Spacer	8	56	1
63–5300	Trailing Arm–L.H.	7	41	1
63–7721	Hose – Fuel Line	2	43	1
63–8360	Key	1	30	2
65–5871	Tube – Manual	9	34	1
65–5890	Cap – Tube	9	35	2
67–5360	Decal	10	11	1
67–5360	Decal	13	11	1
67–5360	Decal	2	49	1
67–5360	Decal – Caution	3	19	4
67–7920	Decal – Toro	9	17	2
67–9420	Engine	1	7	1
67–9730	Bracket – Air Cleaner	11	63	1
67–9770	Decal – Hopper	9	33	2
70–2350	Gear Box – Complete	15	17	1
70–2360	Cap	17	17	1
70–2370	Gear – 23 Tooth	17	23	1
70–2380	Key – Tapered	17	16	2
70–2390	Shaft	17	24	1
70–2410	Ring – Retaining	17	25	3
70–2420	Cap	17	4	2
70–2430	Shaft	17	12	1
70–2440	Collar – Thrust	17	11	1
70–2450	Gear – 17 Tooth	17	15	1
92–1187	Quick Disconnect Kit	16	*	1
92–1580	Bearing Kit	15	32	2
92–1581	Decal – Safety	16	58	1
92–1582	Decal – Safety	15	35	1
92–2409	Cage Assembly	9	*	1
217–103	Bolt – Wheel	3	8	12
217–103	Bolt – Wheel	1	14	12
2115–76	Kit – Center Parts	15	43	2
2115–78	Ring – Lock	16	47	8
2115–79	Ring – Lock	15	27	8
2115–80	Fitting – Grease	15	20	4
2115–81	Yoke	15	42	2
2115–85	Fitting – Grease	15	34	1
2115–88	Bearing & Cross Kit	15	30	2
2115–94	Yoke – Rear	15	38	1
222–8	Cap – Gas	1	27	1
231–118	Tire	3	7	2
231–118	Tire	1	15	2
232–24	Stem – Valve	3	9	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
232–24	Stem – Valve	1	16	2
235–15	Grip – Handle	3	28	1
235–15	Grip – Handle	2	32	1
242–54	Hub	1	18	2
242–54	Wheel – Hub	3	11	2
242–55	Cap – Hub	3	1	2
242–55	Cap – Hub	1	8	2
2412–40	Clamp – Conduit	3	34	3
2412–40	Clamp – Conduit	2	38	3
2412–42	Clamp	11	66	2
2412–93	Clamp	2	44	1
2412–102	R–Clamp	9	36	2
2412–108	Clamp – Hose	2	57	2
250–5	Strap – Locking	4	36	2
253–127	Seal	3	14	2
253–127	Seal	1	21	2
254–57	Cup – Bearing	17	9	3
254–58	Cone – Bearing	17	10	3
254–61	Cup – Bearing	3	6	2
254–61	Cup – Bearing	1	13	2
254–61	Cup – Bearing	17	18	1
254–62	Cone – Bearing	3	5	2
254–62	Cone – Bearing	1	12	2
254–62	Cone – Bearing	17	19	1
254–65	Cone – Bearing	3	13	2
254–65	Cone – Bearing	1	20	2
254–66	Cup – Bearing	3	12	2
254–66	Cup – Bearing	1	19	2
256–298	Bushing	8	59	2
2710–11	Link – Connecting	7	10	1
2710–15	Link – Offset	7	11	1
2710–29	Link – Offset	16	56	1
2710–30	Link – Connecting	16	54	1
282–22	Clevis	6	16	2
282–22	Clevis	4	19	2
283–2	Pin – Clevis	6	15	2
283–2	Pin – Clevis	4	18	2
283–39	Pin – Clevis	9	11	3
283–46	Pin – Clevis	15	40	1
285–12	Plug – Pipe	17	14	2
302–2	Fitting – Grease	16	45	1
302–60	Fitting – Grease	8	58	2
304–75	Fitting – Tube	2	40	1
321–3	Screw – Cap, Hex. Hd.	10	43	10
321–3	Screw – Cap, Hex. Hd.	13	43	10
321–4	Screw – Cap, Hex. Hd.	7	13	1
321–4	Screw – Cap, Hex. Hd.	10	14	4
321–4	Screw – Cap, Hex. Hd.	13	14	4
321–4	Screw – Cap, Hex. Hd.	6	39	1
321–4	Screw – Cap, Hex. Hd.	14	53	2
321–4	Screw – Cap, Hex. Hd.	11	55	2
321–4	Screw – Cap, Hex. Hd.	5	69	1
321–5	Screw – Cap, Hex. Hd.	10	46	14
321–5	Screw – Cap, Hex. Hd.	13	46	14
321–6	Screw – Cap, Hex. Hd.	1	2	3
321–8	Screw – Cap, Hex. Hd.	10	49	18
321–8	Screw – Cap, Hex. Hd.	13	49	18
321–13	Screw – Cap, Hex. Hd.	13	1	3
322–1	Screw – Cap, Hex. Hd.	11	52	7
322–1	Screw – Cap, Hex. Hd.	14	54	1
322–5	Screw – Cap, Hex. Hd.	17	1	24
322–5	Screw – Cap, Hex. Hd.	11	61	1
322–7	Screw – Cap, Hex. Hd.	10	1	3
322–7	Screw – Cap, Hex. Hd.	15	1	3
322–7	Screw – Cap, Hex. Hd.	4	29	3
322–7	Screw – Cap, Hex. Hd.	6	33	2
322–7	Screw – Cap, Hex. Hd.	5	63	2
323–2	Screw – Cap, Hex. Hd.	3	39	2
323–2	Screw – Cap, Hex. Hd.	3	41	4
323–4	Screw – Cap, Hex. Hd.	18	1	3
323–4	Screw – Cap, Hex. Hd.	7	4	7
323–5	Screw – Cap, Hex. Hd.	18	3	3
323–5	Screw – Cap, Hex. Hd.	4	49	4
323–6	Screw – Cap, Hex. Hd.	10	34	8
323–6	Screw – Cap, Hex. Hd.	13	34	8
323–7	Screw – Cap, Hex. Hd.	10	15	6
323–7	Screw – Cap, Hex. Hd.	13	15	6
323–8	Screw – Cap, Hex. Hd.	3	25	1
323–8	Screw – Cap, Hex. Hd.	1	28	1
323–8	Screw – Cap, Hex. Hd.	13	41	1
323–9	Screw – Cap, Hex. Hd.	10	41	1
323–9	Screw – Cap, Hex. Hd.	7	44	6
323–10	Screw – Cap, Hex. Hd.	2	55	1
324–7	Screw – Cap, Hex. Hd.	4	10	4
324–7	Screw – Cap, Hex. Hd.	6	10	4
325–3	Screw – Cap, Hex. Hd.	3	15	2
325–4	Screw – Cap, Hex. Hd.	15	18	4
325–5	Screw – Cap, Hex. Hd.	3	22	4
325–5	Screw – Cap, Hex. Hd.	15	39	4
325–5	Screw – Cap, Hex. Hd.	3	52	4
325–6	Screw – Cap, Hex. Hd.	15	12	4
325–6	Screw – Cap, Hex. Hd.	10	24	7
325–6	Screw – Cap, Hex. Hd.	13	24	7
325–6	Screw – Cap, Hex. Hd.	9	27	3
325–7	Screw – Cap, Hex. Hd.	2	50	4
325–7	Screw – Cap, Hex. Hd.	11	58	1
325–7	Screw – Cap, Hex. Hd.	14	60	1
325–9	Screw – Cap, Hex. Hd.	7	43	4
325–12	Screw – Cap, Hex. Hd.	16	55	1
325–13	Screw – Cap, Hex. Hd.	18	9	1
325–14	Screw – Cap, Hex. Hd.	7	8	3
327–6	Screw – Cap, Hex. Hd.	5	62	2
328–10	Bolt – Hex. Hd.	7	40	1
328–23	Bolt – Hex. Hd.	3	36	2
3217–5	Nut – Hex.	10	51	2
3217–5	Nut – Hex.	13	51	2
3217–5	Nut – Hex.	5	54	4
3217–7	Nut – Hex	13	8	1
3217–7	Nut – Hex.	10	8	1
3217–7	Nut – Hex.	7	9	4
3217–7	Nut – hex.	18	4	3
3217–8	Nut – Hex.	6	20	4
3217–8	Nut – Lock	4	26	4
3217–9	Nut – Hex	4	13	1
3217–9	Nut – Hex	3	35	4
3217–9	Nut – Hex.	15	9	5
3217–9	Nut – Hex.	8	53	3
3217–12	Nut – Hex	3	38	2
3217–12	Nut – Hex.	5	57	1
3218–2	Nut – Jam	11	62	2
3218–3	Nut – Jam	15	5	6
3218–3	Nut – Jam	4	5	6
3218–3	Nut – Jam	6	5	8
3218–3	Nut – Jam	7	17	2
3218–3	Nut – Jam	3	26	1
3218–3	Nut – Jam	1	29	1
3218–5	Nut – Hex.	13	17	4
3218–5	Nut – Hex.	4	34	1
3218–5	Nut – Jam	10	17	4
3218–6	Nut – Jam	3	21	1
3218–6	Nut – Jam	10	39	2
3218–6	Nut – Jam	13	39	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3219–3	Nut – Hex	4	17	2
3219–3	Nut – Hex.	6	14	2
3229–7	Bolt – Carriage	9	15	50
3244–14	Screw – Set, – Sq. Hd.	10	16	4
3244–14	Screw – Set, Square Hd.	13	16	4
3244–21	Screw – Set	4	35	1
3247–3	Screw – Set	15	16	4
3247–4	Screw – Set	4	4	2
3247–4	Screw – Set	6	4	2
3247–6	Screw – Set	15	6	6
3247–6	Screw – Set	7	18	2
3247–6	Screw – Set	6	23	2
3250–32	Screw – Cap, Hex. Hd.	9	30	15
3253–3	Washer – Lock	13	2	9
3253–3	Washer – Lock	1	3	3
3253–3	Washer – Lock	10	13	6
3253–3	Washer – Lock	7	14	1
3253–3	Washer – Lock	6	38	1
3253–3	Washer – Lock	5	53	5
3253–4	Washer – Lock	10	2	4
3253–4	Washer – Lock	15	2	3
3253–4	Washer – Lock	4	28	5
3253–4	Washer – Lock	6	32	2
3253–4	Washer – Lock	14	55	1
3253–6	Washer – Lock	6	19	4
3253–6	Washer – Lock	4	25	4
3253–7	Washer – Lock	7	7	3
3253–7	Washer – Lock	15	11	13
3253–7	Washer – Lock	4	12	1
3253–7	Washer – Lock	3	16	6
3253–9	Washer – Lock	3	37	2
3253–9	Washer – Lock	5	58	1
3253–21	Washer – Lock	18	2	3
3253–21	Washer – Lock	7	5	5
3253–21	Washer – Lock	10	7	9
3253–21	Washer – Lock	13	7	9
3253–21	Washer – Lock	3	40	6
3253–21	Washer – Lock	2	54	1
3254–2	Washer – Lock	17	2	24
3254–8	Washer – Lock, Int. Tooth	8	57	2
3256–22	Washer – Flat	10	32	32
3256–22	Washer – Flat	13	32	32
3256–22	Washer – Flat	5	52	4
3256–22	Washer – Flat	2	56	1
3256–23	Washer – Flat	11	53	1
3256–23	Washer – Flat	14	56	1
3256–23	Washer – Flat	16	57	3
3256–24	Washer – Flat	7	6	5
3256–24	Washer – Flat	6	12	2
3256–24	Washer – Flat	4	15	7
3256–24	Washer – Flat	10	22	14
3256–24	Washer – Flat	13	22	14
3256–24	Washer – Flat	3	51	4
3256–26	Washer – Flat	2	46	4
3256–26	Washer – Flat	7	3	10
3256–26	Washer – Flat	18	7	2
3256–26	Washer – Flat	4	11	1
3256–26	Washer – Flat	3	17	6
3256–26	Washer – Flat	9	26	3
3256–26	Washer – Flat	16	51	8
3256–27	Washer – Flat	9	8	A/R
3256–27	Washer – Flat	10	36	1
3256–27	Washer – Flat	13	36	1
3256–28	Washer – Flat	6	21	2
3256–28	Washer – Flat	4	22	2
3256–28	Washer – Flat	3	27	1
3256–28	Washer – Flat	1	31	1
3256–29	Washer – Flat	3	4	2
3256–29	Washer – Flat	1	11	2
3257–8	Key – Woodruff	15	23	1
3258–19	Screw – Machine	12	7	2
3258–165	Screw – Rd. Hd.	9	32	2
3259–15	Screw – Drive	3	44	4
3272–6	Pin – Cotter	15	24	1
3272–10	Pin – Cotter	6	17	2
3272–10	Pin – Cotter	4	20	2
3272–10	Pin – Cotter	6	27	1
3272–10	Pin – Cotter	4	43	1
3272–12	Pin – Cotter	9	7	3
3272–12	Pin – Cotter	10	37	1
3272–12	Pin – Cotter	13	37	1
3272–17	Pin – Cotter	3	2	3
3272–17	Pin – Cotter	1	9	3
3272–22	Pin – Cotter	6	22	2
3272–22	Pin – Cotter	4	23	2
3290–55	Rivet – Pop	2	48	4
3290–144	Screw – Hex. Flange Hd.	9	4	104
3290–343	Pin – Hair, Cotter	3	47	1
3296–23	Nut – Lock	18	5	1
3296–23	Nut – Lock	9	24	3
3296–23	Nut – Lock	2	45	4
3296–39	Nut – Lock	10	23	7
3296–39	Nut – Lock	13	23	7
3296–39	Nut – Lock	5	50	4
3296–42	Nut – Lock	10	42	42
3296–42	Nut – Lock	13	42	42
3296–45	Nut – Lock	7	2	1
3296–53	Nut – Lock	5	56	2
32103–12	Nut – Wing	10	31	4
32103–12	Nut – Wing	13	31	4
32104–95	Screw – Self Tapping	2	33	2
32104–95	Screw – Self–Tapping	3	29	2
32104–96	Screw – Self Tapping	2	34	1
32104–96	Screw – Self–Tapping	3	30	1
32104–109	Screw	2	42	1
32104–109	Screw – Cap, Hex. Hd.	14	58	4
32107–11	Nut – Square	12	8	2
32121–45	Pin – Roll	7	46	2
32122–42	Screw – Machine	9	22	36
32128–17	Nut – Lock, Flange Hd.	9	3	104
32128–25	Nut – Lock, Flange	11	60	4
32128–32	Nut – Lock	9	9	103
32136–1	Nut – Slotted	3	3	2
32136–1	Nut – Slotted	1	10	2
32140–94	Screw – Cap, Hex. Hd.	7	32	276
32152–2	Nut – Lock	7	24	12
32153–2	Nut	6	11	2
32153–2	Nut	7	35	4
32153–2	Nut – Lock	4	14	2
32153–2	Nut – Lock	9	37	2
32153–2	Nut – Lock	3	42	2
32153–3	Nut – Lock	2	41	4
32153–3	Nut – Lock	11	59	2
32153–5	Nut	7	38	6
32153–5	Nut – Lock	10	27	8
32153–5	Nut – Lock	13	27	8
32153–6	Nut	7	42	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible – minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit – which is not reflected in your manual – see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Rake–O–Vac has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the left side of the frame behind the hitch. In any correspondence concerning the Rake–O–Vac – supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer – supply the following information:
1. Model and serial number of the Rake–O–Vac.
2. Part number – description – and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Engine And Frame Assembly (Model 07073)	1–2
Frame Assembly (Model 07174)	3
Jackshaft And Lifting Mechanism (Model 07073)	4–5
Jackshaft And Lifting Mechanism (Model 07174)	6
Gauge Wheel And Trailing Arm (Model 07073 & 07174)	7–8
Cage And Rear Tailgate (Model 07073 & 07174)	9
Blower And Throat Assembly (Model 07073)	10–11
Air Cleaner Assembly No. 8–2329	12
Blower And Throat Assembly (Model 07174)	13–14
Drive Mechanism (Model 07174)	15–16
Gear Box Assembly (Model 07174)	17
Jack Assembly(Models07073&07174)	18
Engine Kohler Model No. K582CS Type No. 36366	22–30

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.